

Fifteenth Edition

AMERICAN ELECTRICIANS' HANDBOOK



- Detailed analysis of how to perform circuit load calculations to determine wire sizes
- The latest updates on the National Electrical Code®
- Up-to-date information on photovoltaics and induction lighting

Terrell Croft | Wilford I. Summers | Frederic P. Hartwell

AMERICAN ELECTRICIANS' HANDBOOK

ABOUT THE EDITORS

TERRELL CROFT is deceased.

WILFORD I. SUMMERS is an electrical consultant and former Executive Director of the International Association of Electrical Inspectors.

FREDERIC P. HARTWELL is president of Hartwell Electrical Services, Inc., and is a working electrician. He has over 30 years of experience in the field of electrical work, including 10 years as the senior editor and National Electrical Code® expert for *Electrical Construction and Maintenance* magazine. He is the senior member on Code Making Panel Nine of the National Electrical Code® Committee.

AMERICAN ELECTRICIANS' HANDBOOK

Terrell Croft (Deceased)

Wilford I. Summers

Frederic P. Hartwell

Fifteenth Edition



New York Chicago San Francisco Lisbon London Madrid
Mexico City Milan New Delhi San Juan Seoul
Singapore Sydney Toronto

Copyright © 2009, 2002, 1996, 1992, 1987, 1981, 1970, 1961 by The McGraw-Hill Companies, Inc. All rights reserved. Manufactured in the United States of America. Except as permitted under the United States Copyright Act of 1976, no part of this publication may be reproduced or distributed in any form or by any means, or stored in a database or retrieval system, without the prior written permission of the publisher.

0-07-164258-7

The material in this eBook also appears in the print version of this title: 0-07-149462-6.

All trademarks are trademarks of their respective owners. Rather than put a trademark symbol after every occurrence of a trademarked name, we use names in an editorial fashion only, and to the benefit of the trademark owner, with no intention of infringement of the trademark. Where such designations appear in this book, they have been printed with initial caps.

McGraw-Hill eBooks are available at special quantity discounts to use as premiums and sales promotions, or for use in corporate training programs. For more information, please contact George Hoare, Special Sales, at george_hoare@mcgraw-hill.com or (212) 904-4069.

TERMS OF USE

This is a copyrighted work and The McGraw-Hill Companies, Inc. ("McGraw-Hill") and its licensors reserve all rights in and to the work. Use of this work is subject to these terms. Except as permitted under the Copyright Act of 1976 and the right to store and retrieve one copy of the work, you may not decompile, disassemble, reverse engineer, reproduce, modify, create derivative works based upon, transmit, distribute, disseminate, sell, publish or sublicense the work or any part of it without McGraw-Hill's prior consent. You may use the work for your own noncommercial and personal use; any other use of the work is strictly prohibited. Your right to use the work may be terminated if you fail to comply with these terms.

THE WORK IS PROVIDED "AS IS." MCGRAW-HILL AND ITS LICENSORS MAKE NO GUARANTEES OR WARRANTIES AS TO THE ACCURACY, ADEQUACY OR COMPLETENESS OF OR RESULTS TO BE OBTAINED FROM USING THE WORK, INCLUDING ANY INFORMATION THAT CAN BE ACCESSED THROUGH THE WORK VIA HYPERLINK OR OTHERWISE, AND EXPRESSLY DISCLAIM ANY WARRANTY, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. McGraw-Hill and its licensors do not warrant or guarantee that the functions contained in the work will meet your requirements or that its operation will be uninterrupted or error free. Neither McGraw-Hill nor its licensors shall be liable to you or anyone else for any inaccuracy, error or omission, regardless of cause, in the work or for any damages resulting therefrom. McGraw-Hill has no responsibility for the content of any information accessed through the work. Under no circumstances shall McGraw-Hill and/or its licensors be liable for any indirect, incidental, special, punitive, consequential or similar damages that result from the use of or inability to use the work, even if any of them has been advised of the possibility of such damages. This limitation of liability shall apply to any claim or cause whatsoever whether such claim or cause arises in contract, tort or otherwise.

DOI: 10.1036/0071494626



Professional



Want to learn more?

We hope you enjoy this McGraw-Hill eBook! If you'd like more information about this book, its author, or related books and websites, please [click here](#).

CONTENTS

Preface to the Fifteenth Edition ix

Division 1 Fundamentals 1.1

Useful Tables / 1.2
Conversion Factors / 1.10
Graphical Electrical Symbols / 1.13
Principles of Electricity and Magnetism: Units / 1.23
Measuring, Testing, and Instruments / 1.69
Harmonics / 1.96

Division 2 Properties and Splicing of Conductors 2.1

Electrical Conducting Wires and Cables / 2.1
Cable Joints and Terminal Connections / 2.61
Aluminum-Building-Wire Installation Practices / 2.100
Termination and Splice Kits / 2.144

Division 3 Circuits and Circuit Calculations 3.1

Types of Circuits / 3.1
Electrical Systems / 3.8
Circuit Calculations / 3.20
NEC Ampacity Rules for Conductors / 3.64

Division 4 General Electrical Equipment and Batteries 4.1

Introduction / 4.1
Switches / 4.1
Installation of Switches / 4.31
Protective Devices / 4.33
Switchboards and Switchgear / 4.70
Panelboards / 4.80
General Wiring Materials and Devices / 4.88
Power Capacitors / 4.132
Batteries: General / 4.138
Primary Batteries / 4.138
Storage Batteries: General / 4.143
Lead-Acid Storage Batteries / 4.147
Nickel-Iron-Alkaline Batteries / 4.159
Nickel-Cadmium Batteries / 4.170

Installation of Storage Batteries /	4.182
General Construction Materials /	4.185

Division 5 Transformers

5.1

Construction, Types, and Characteristics /	5.1
Connections: Polarity /	5.51
Single-Phase Connections /	5.52
Two-Phase Connections /	5.54
Three-Phase Connections /	5.55
Special Transformer Connections /	5.64
Connections for Three-Phase Transformers /	5.73
Parallel Operation /	5.73
Connections and Applications of Autotransformers /	5.75
Installation, Care, and Operation /	5.79
Provisions for Different Types of Transformers /	5.86
Provisions for Transformer Vaults /	5.88
The Noise Problem /	5.100
Pole and Platform Mounting /	5.102
Saturable-Core Reactor /	5.109

Division 6 Solid-State Devices and Circuits

6.1

Fundamentals of Electronics /	6.1
Discrete Solid-State Components /	6.4
Integrated Circuits /	6.39
Integrated-Circuit Logic Functions /	6.46
Microcomputers /	6.68
Electronic Memories /	6.74
Product Reliability /	6.85

Division 7 Generators and Motors

7.1

Principles, Characteristics, and Management of DC Generators (Dynamos) /	7.1
Principles, Characteristics, and Management of AC Generators (Alternators) /	7.41
Principles, Characteristics, and Management of Electric Motors /	7.55
Direct-Current Motors /	7.62
Alternating-Current Motors /	7.72
Conversion Equipment /	7.117
Troubles of AC Motors and Generators: Their Localization and Correction /	7.120
Care of Motors /	7.128
Control Equipment for Motors /	7.136
Motor Drives and Application /	7.201
Motor Circuits /	7.222
Control Circuits /	7.243
Industrial Control Panels /	7.245
Air-Conditioning and Refrigerating Equipment /	7.250
Engine- and Gas-Turbine Generators /	7.257

Division 8 Outside Distribution

8.1

Pole Lines: General, Construction, and Equipment /	8.1
Pole-Line Construction /	8.32

Pole-Line Guying	/	8.55
Underground Wiring	/	8.67
Grounding of Systems	/	8.84

Division 9 Interior Wiring

9.1

General	/	9.2
Open Wiring on Insulators	/	9.14
Concealed Knob-and-Tube Wiring	/	9.24
Rigid-Metal-Conduit and Intermediate-Metal-Conduit Wiring	/	9.25
Cable Pulling Calculations for Raceways	/	9.58
Interior or Aboveground Wiring with Rigid Nonmetallic Conduit	/	9.67
Flexible-Metal-Conduit Wiring	/	9.73
Liquidtight Flexible-Metal-Conduit Wiring	/	9.76
Metal-Clad-Cable Wiring: Types AC and MC	/	9.77
Surface-Raceway Wiring	/	9.83
Electrical-Metallic-Tubing Wiring	/	9.91
Nonmetallic-Sheathed-Cable Wiring	/	9.94
Mineral-Insulated Metal-Sheathed-Cable Wiring	/	9.100
Medium-Voltage-Cable Wiring	/	9.107
Underground-Feeder and Branch-Circuit-Cable Wiring	/	9.109
Interior Wiring with Service-Entrance Cable	/	9.109
Underfloor-Raceway Wiring	/	9.112
Wireway Wiring	/	9.128
Busway Wiring (NEMA)	/	9.130
Cellular-Metal-Floor-Raceway Wiring	/	9.162
Cellular-Concrete-Floor-Raceway Wiring	/	9.173
Wiring with Multioutlet Assemblies	/	9.181
Cablebus Wiring	/	9.188
Cable Trays	/	9.191
General Requirements for Wiring Installations	/	9.197
Crane Wiring	/	9.245
Wiring for Circuits of Over 600 Volts	/	9.253
Wiring for Circuits of Less Than 50 Volts	/	9.255
Wiring for Hazardous (Classified) Locations	/	9.255
Installation of Appliances	/	9.264
Electric Comfort Conditioning	/	9.266
Wiring for Electric Signs and Outline Lighting	/	9.289
Remote-Control, Signaling, and Power-Limited Circuits	/	9.295
Wiring for Special Occupancies	/	9.300
Design of Interior-Wiring Installations	/	9.301
Wiring for Residential Outdoor Lighting	/	9.308
Wiring for Commercial and Industrial Occupancies	/	9.312
Farm Wiring	/	9.347
Solar Photovoltaic Systems	/	9.357

Division 10 Electric Lighting

10.1

Principles and Units	/	10.1
Electric-Light Sources	/	10.23
Incandescent (Filament) Lamps	/	10.24
Fluorescent Lamps	/	10.38
High-Intensity-Discharge Lamps	/	10.59
Light-Emitting Diodes (LEDs)	/	10.75
Neon Lamps	/	10.75

Ultraviolet-Light Sources	/ 10.82
Infrared Heating Lamps	/ 10.85
Luminaires	/ 10.86
Principles of Lighting-Installation Design	/ 10.106
Tables for Interior Illumination Design	/ 10.124
Interior-Lighting Suggestions	/ 10.144
Heat with Light for Building Spaces	/ 10.148
Street Lighting	/ 10.151
Floodlighting	/ 10.155

Division 11 Optical Fiber

11.1

The Advantages of Fiber Optics	/ 11.1
Applications	/ 11.2
The Nature of Light	/ 11.3
Invisible Light	/ 11.3
Transmitting Light through Fibers	/ 11.4

Division 12 Wiring and Design Tables

12.1

Standard Sizes of Lamps for General Illumination, in Watts	/ 12.3
Demand Factors and Data for Determining Minimum Loads	/ 12.4
Full-Load Currents of Motors	/ 12.10
Capacitor Ratings for Use with Three-Phase 60-Hz Motors	/ 12.13
Ampacities of Conductors	/ 12.14
Ampacity of Flexible Cords and Cables	/ 12.28
Ampacity of Fixture Wires	/ 12.30
Ampacity of Aluminum Cable, Steel-Reinforced	/ 12.31
Ampacity of Parkway Cables Buried Directly in Ground	/ 12.31
Number of Conductors in Conduit and Dimensions	/ 12.32
Switches-Termination Space	/ 12.33
Switch-Gutter and Termination Space	/ 12.34
Enclosed Switch Wiring Space	/ 12.35
Elevation of Unguarded Parts above Working Space	/ 12.36
Ordinary Ratings of Overload Protective Devices, in Amperes	/ 12.37
Nonrenewable Cartridge Fuses	/ 12.39
Ratings and Number of Overload Protective Devices	/ 12.44
Motor Code Letters and Locked-Rotor Kilovolt-Amperes	/ 12.46
Maximum Ratings for Motor Branch-Circuit Protection	/ 12.47
Conversion Table of Single-Phase Locked Rotor Currents	/ 12.47
Conversion Table of Polyphase Design B, C, D, and E Maximum Locked-Rotor Currents	/ 12.48
Horsepower Ratings of Fused Switches	/ 12.49
Minimum Branch-Circuit Sizes for Motors	/ 12.50
Maximum Allowable Voltage Drop	/ 12.51
Graph for Computing Copper-Conductor Sizes according to Voltage Drop	/ 12.53
Data for Computing Voltage Drop	/ 12.54
Metric Practice	/ 12.58

Index follows Division 12

PREFACE TO THE FIFTEENTH EDITION

This marks a large transition, as the editorial responsibility for one of the great classics in the field of electrical publishing changes hands. I am both honored and humbled by the significance of the task. Wilford “Bill” Summers ably maintained the legacy of this unique and extraordinary publication for some 30 years, comprising most of my career as an electrician. To now have the solemn responsibility for this work calls forth all of my skills, both as a working electrician and as an editor and student of the language, as well as a member of the NEC® Committee.

The *American Electricians’ Handbook* has always been my intellectual attic as an electrician. If I really needed some information, no matter how off the beaten path, I have always been able to find the information in this book. This Fifteenth Edition has been entirely and carefully revised and expanded consistent with advances of the art and the latest good practice, and in accord with the latest requirements of the 2008 National Electrical Code®. The returning reader will find approximately 100 pages of entirely new material, including tables, illustrations, and photographs. To make room, some of the verbatim reprints of NEC® tables and sections have been discontinued. This editor believes that any user of this book has ready access to a current copy of the NEC®, but not so the added material.

This edition includes completely new material on net present value calculations, so you can evaluate and sell the benefits of electrical improvements today. It comprehensively covers ampacity calculations that are some of the most challenging for engineers and working electricians alike. It covers autotransformers in detail for the first time, along with industrial control panels with an emphasis on being able to continue to build this equipment in the field. For the first time the book covers all NEC® Chap. 3 wiring methods to at least a minimal degree. It also covers cable pulling calculations step by step, so any electrician can determine whether a pull is feasible and apply the suggested strategies to make it so if this is not the case. It covers high-impedance grounding systems and farm wiring distributions in accordance with the latest NEC® developments. Finally, it covers the most common aspects of the burgeoning field of solar photovoltaic wiring for the first time, along with LED and induction fluorescent lighting sources.

However, to quote from the preface to the Fourteenth Edition, the original purpose of the Handbook has been retained. This book continues to “provide a compilation of data and information on the various types of equipment and conductors presented without advanced mathematics so as to be as useful as possible to the average electrical person. In many cases much of the basic principles stated herein are widely utilized by apprenticeship and electrical inspector training classes.” This editor believes that “what the user

National Fire Protection Association, NFPA, National Electrical Code, NEC, NFPA 70, and NFPA 70E are registered trademarks of the National Fire Protection Association. All NFPA trademarks are the official property of the National Fire Protection Association.

wants is not an encyclopedia of the manufacturer product lines but an orderly and accessible collection of working tool information otherwise scattered throughout other technical literature.”

As with previous editions, this book has been produced with the kind assistance of many individuals, organizations, and associations. A handbook of this nature could not be written without such assistance and suggestions. Some, however, have gone beyond the call of duty and deserve special recognition here. Many thanks to Tim Croushore for his help with fundamentals, to Gil Moniz of NEMA for his timely assistance in Div. 7, to Dave Mercier for his help with the cable pulling calculations, to John Wiles for his review of the solar photovoltaic coverage, and to Paul Rosenberg for his work on optical fiber technology.

FREDERIC P. HARTWELL

DIVISION 1

FUNDAMENTALS

Useful Tables	1.2
Conversion Factors	1.10
Graphical Electrical Symbols	1.13
Principles of Electricity and Magnetism: Units	1.23
Measuring, Testing, and Instruments	1.69
Harmonics	1.96

USEFUL TABLES

1. Natural Trigonometric Functions

Angle (θ or lag angle), deg	Sine (or reactive factor)	Cosine (or power factor)	Tangent	Cotangent	Secant	Cosecant	Angle (θ or lag angle), deg
0	0.00000	1.00000	0.00000	Infinite	1.0000	Infinite	180
1	0.01774	0.99985	0.01745	57.290	1.0001	57.299	179
2	0.03490	0.99939	0.03492	28.636	1.0006	28.654	178
3	0.05234	0.99863	0.05241	19.081	1.0014	19.107	177
4	0.06976	0.99756	0.06993	14.301	1.0024	14.335	176
5	0.08715	0.99619	0.08749	11.430	1.0038	11.474	175
6	0.10453	0.99452	0.10510	9.5144	1.0055	9.5668	174
7	0.12187	0.99255	0.12278	8.1443	1.0075	8.2055	173
8	0.13917	0.99027	0.14054	7.1154	1.0098	7.1853	172
9	0.15643	0.98769	0.15838	6.3137	1.0125	6.3924	171
10	0.17365	0.98481	0.17633	5.6713	1.0154	5.7588	170
11	0.19081	0.98163	0.19438	5.1445	1.0187	5.2408	169
12	0.20791	0.97815	0.21256	4.7046	1.0223	4.8097	168
13	0.22495	0.97437	0.23087	4.3315	1.0263	4.4454	167
14	0.24192	0.97029	0.24933	4.0108	1.0306	4.1336	166
15	0.25882	0.96592	0.26795	3.7320	1.0353	3.8637	165
16	0.27564	0.96126	0.28674	3.4874	1.0403	3.6279	164
17	0.29237	0.95630	0.30573	3.2708	1.0457	3.4203	163
18	0.30902	0.95106	0.32492	3.0777	1.0515	3.2361	162
19	0.32557	0.94552	0.34433	2.9042	1.0576	3.0715	161
20	0.34203	0.93969	0.36397	2.7475	1.0642	2.9238	160
21	0.35837	0.93358	0.38386	2.6051	1.0711	2.7904	159
22	0.37461	0.92718	0.40403	2.4751	1.0785	2.6695	158
23	0.39073	0.92050	0.42447	2.3558	1.0864	2.5593	157
24	0.40674	0.91354	0.44523	2.2460	1.0946	2.4586	156
25	0.42262	0.90631	0.46631	2.1445	1.1034	2.3662	155
26	0.43837	0.89879	0.48773	2.0503	1.1126	2.2812	154
27	0.45399	0.89101	0.50952	1.9626	1.1223	2.2027	153
28	0.46947	0.88295	0.53171	1.8807	1.1326	2.1300	152
29	0.48481	0.87462	0.55431	1.8040	1.1433	2.0627	151
30	0.50000	0.86603	0.57735	1.7320	1.1547	2.0000	150
31	0.51504	0.85717	0.60086	1.6643	1.1666	1.9416	149
32	0.52992	0.84805	0.62487	1.6003	1.1792	1.8871	148
33	0.54464	0.83867	0.64941	1.5399	1.1924	1.8361	147
34	0.55919	0.82904	0.67451	1.4826	1.2062	1.7883	146
35	0.57358	0.81915	0.70021	1.4281	1.2208	1.7434	145
36	0.58778	0.80902	0.72654	1.3764	1.2361	1.7013	144
37	0.60181	0.79863	0.75355	1.3270	1.2521	1.6616	143
38	0.61566	0.78801	0.78128	1.2799	1.2690	1.6243	142
39	0.62932	0.77715	0.80978	1.2349	1.2867	1.5890	141
40	0.64279	0.76604	0.83910	1.1917	1.3054	1.5557	140
41	0.65606	0.75741	0.86929	1.1504	1.3250	1.5242	139
42	0.66913	0.74314	0.90040	1.1106	1.3456	1.4945	138
43	0.68200	0.73135	0.93251	1.0724	1.3673	1.4663	137

Angle (θ or lag angle), deg	Sine (or reactive factor)	Cosine (or power factor)	Tangent	Cotangent	Secant	Cosecant	Angle (θ or lag angle), deg
44	0.69466	0.71934	0.96569	1.0355	1.3902	1.4395	136
45	0.70711	0.70711	1.0000	1.0000	1.4142	1.4142	135
46	0.71934	0.69466	1.0355	0.96569	1.4395	1.3902	134
47	0.73135	0.68200	1.0724	0.93251	1.4663	1.3673	133
48	0.74314	0.66913	1.1106	0.90040	1.4945	1.3456	132
49	0.75471	0.65606	1.1504	0.86929	1.5242	1.3250	131
50	0.76604	0.64279	1.1917	0.83910	1.5557	1.3054	130
51	0.77715	0.62932	1.2349	0.80978	1.5890	1.2867	129
52	0.78801	0.61566	1.2799	0.78128	1.6243	1.2690	128
53	0.79863	0.60181	1.3270	0.75355	1.6616	1.2521	127
54	0.80902	0.58778	1.3764	0.72654	1.7013	1.2361	126
55	0.81915	0.57358	1.4281	0.70021	1.7434	1.2208	125
56	0.82904	0.55919	1.4826	0.67451	1.7883	1.2062	124
57	0.83867	0.54464	1.5399	0.64941	1.8361	1.1922	123
58	0.84805	0.52992	1.6003	0.62487	1.8871	1.1792	122
59	0.85717	0.51504	1.6643	0.60086	1.9416	1.1666	121
60	0.86603	0.50000	1.7230	0.57735	2.0000	1.1547	120
61	0.87462	0.48481	1.8040	0.55431	2.0627	1.1433	119
62	0.88295	0.46947	1.8807	0.53171	2.1300	1.1326	118
63	0.89101	0.45399	1.9626	0.50952	2.2027	1.1223	117
64	0.89879	0.43837	2.0503	0.48773	2.2812	1.1126	116
65	0.90631	0.42262	2.1445	0.46631	2.3662	1.1034	115
66	0.91354	0.40674	2.2460	0.44523	2.4586	1.0946	114
67	0.92050	0.39073	2.3558	0.42447	2.5593	1.0864	113
68	0.92718	0.37461	2.4751	0.40403	2.6695	1.0785	112
69	0.93358	0.35837	2.6051	0.38386	2.7904	1.0711	111
70	0.93969	0.34202	2.7475	0.36397	2.9238	1.0642	110
71	0.94552	0.32557	2.9042	0.34433	3.0715	1.0576	109
72	0.95106	0.30902	3.0777	0.32492	3.2361	1.0515	108
73	0.95630	0.29237	3.2708	0.30573	3.4203	1.0457	107
74	0.96126	0.27564	3.4874	0.28647	3.6279	1.0403	106
75	0.96592	0.25882	3.7320	0.26795	3.8637	1.0353	105
76	0.97029	0.24192	4.0108	0.24933	4.1336	1.0306	104
77	0.97437	0.22495	4.3315	0.23087	4.4454	1.0263	103
78	0.97815	0.20791	4.7046	0.21256	4.8097	1.0223	102
79	0.98163	0.19081	5.1445	0.19438	5.2408	1.0187	101
80	0.98481	0.17365	5.6713	0.17633	5.7588	1.0154	100
81	0.98769	0.15643	6.3137	0.15838	6.3924	1.0125	99
82	0.99027	0.13917	7.1154	0.14054	7.1853	1.0098	98
83	0.99255	0.12187	8.1443	0.12278	8.2055	1.0075	97
84	0.99452	0.10453	9.5144	0.10510	9.5668	1.0055	96
85	0.99619	0.08715	11.430	0.08749	11.474	1.0038	95
86	0.99756	0.06976	14.301	0.06993	14.335	1.0024	94
87	0.99863	0.05234	19.081	0.05241	19.107	1.0014	93
88	0.99939	0.03490	28.634	0.03492	28.654	1.0006	92
89	0.99985	0.01745	57.290	0.01745	57.299	1.0001	91
90	1.00000	0.00000	Infinite	0.00000	Infinite	1.0000	90

2. Fractions of Inch Reduced to Decimal Equivalents

Halves	4ths	8ths	16ths	32ds	64ths	Decimal equivalents	Halves	4ths	8ths	16ths	32ds	Decimal equivalents	64ths
....	1/64	0.015625	33/64	0.515625
....	1/32	0.03125	17/32	0.53125
....	3/64	0.046875	35/64	0.546875
....	1/16	0.0625	9/16	0.5625
....	5/64	0.078125	37/64	0.578125
....	3/32	0.09375	19/32	0.59375
....	7/64	0.109375	39/64	0.609375
....	...	1/8	0.125	5/8	0.625
....	9/64	0.140625	41/64	0.640625
....	5/32	0.15625	21/32	0.65625
....	11/64	0.171875	43/64	0.671875
....	3/16	0.1875	11/16	0.6875
....	13/64	0.203125	45/64	0.703125
....	7/32	0.21875	23/32	0.71875
....	15/64	0.234375	47/64	0.734375
....	1/4	0.25	3/4	0.75
....	17/64	0.265625	49/64	0.765625
....	9/32	0.28125	25/32	0.78125
....	19/64	0.296875	51/64	0.796875
....	5/16	0.3125	13/16	0.8125
....	21/64	0.328125	53/64	0.828125
....	11/32	0.34375	27/32	0.84375
....	23/64	0.359375	55/64	0.859375
....	...	3/8	0.375	7/8	0.875
....	25/64	0.390625	57/64	0.890625
....	13/32	0.40625	29/32	0.90625
....	27/64	0.421875	59/64	0.921875
....	7/16	0.4375	15/16	0.9375
....	29/64	0.453125	61/64	0.953125
....	15/32	0.46875	31/32	0.96875
....	31/64	0.484375	63/64	0.984375
1/2	0.5							

3. Multipliers for Computing Selling Prices Which Will Afford a Given Percentage Profit

Percentage profit desired	To obtain selling price, multiply actual cost (invoice cost + freight) by the following value		Percentage profit desired	To obtain selling price, multiply actual cost (invoice cost + freight) by the following value	
	When percentage profit is based on cost	When percentage profit is based on selling price		When percentage profit is based on cost	When percentage profit is based on selling price
5	1.05	1.053	36	1.36	1.563
6	1.06	1.064	37	1.37	1.588
7	1.07	1.075	38	1.38	1.613
8	1.08	1.087	39	1.39	1.640
9	1.09	1.100	40	1.40	1.667
10	1.10	1.111	41	1.41	1.695
11	1.11	1.124	42	1.42	1.725
12	1.12	1.136	43	1.43	1.754
13	1.13	1.149	45	1.45	1.818
14	1.14	1.163	46	1.46	1.852
15	1.15	1.176	47	1.47	1.887
16	1.16	1.190	48	1.48	1.923
17	1.17	1.204	49	1.49	1.961
18	1.18	1.220	50	1.50	2.000
19	1.19	1.235	52	1.52	2.084
20	1.20	1.250	54	1.54	2.174
21	1.21	1.267	56	1.56	2.272
22	1.22	1.283	58	1.58	2.381
23	1.23	1.299	60	1.60	2.500
24	1.24	1.316	62	1.62	2.631
25	1.25	1.334	64	1.64	2.778
26	1.26	1.352	66	1.66	2.941
27	1.27	1.370	68	1.68	3.126
28	1.28	1.390	70	1.70	3.333
29	1.29	1.409	72	1.72	3.572
30	1.30	1.429	74	1.74	3.847
31	1.31	1.450	76	1.76	4.168
32	1.32	1.471	78	1.78	4.545
33	1.33	1.493	80	1.80	5.000
34	1.34	1.516	90	1.90	10.000
35	1.35	1.539	100	2.00	Infinity

4. Table Showing Percentage Net Profit

Percentage markup above cost	Percentage overhead							
	10%	12%	14%	16%	18%	20%	22%	24%
	Percentage net profit based on selling price for a given percentage overhead based on gross sales							
10	−0.90	−2.90	−4.90	−6.90	−8.90	−10.90	−12.90	−14.90
15	3.05	1.05	−0.95	−2.95	−4.95	−6.95	−8.95	−10.95
20	6.67	4.67	2.67	0.67	−1.33	−3.33	−5.33	−7.33
25	10.00	8.00	6.00	4.00	2.00	0.00	−2.00	−4.00
30	13.08	11.08	9.08	7.08	5.08	3.08	1.08	−0.92
33⅓	15.00	13.00	11.00	9.00	7.00	5.00	3.00	1.00
35	15.93	13.93	11.93	9.93	7.93	5.93	3.93	1.93
40	18.57	16.57	14.57	12.57	10.57	8.57	6.57	4.57
45	21.00	19.00	17.00	15.00	13.00	11.00	9.00	7.00
50	23.33	21.33	19.33	17.33	15.33	13.33	11.33	9.33
55	25.50	23.50	21.50	19.50	17.50	15.50	13.50	11.50
60	27.50	25.50	23.50	21.50	19.50	17.50	15.50	13.50
65	29.40	27.40	25.40	23.40	21.40	19.40	17.40	15.40
70	31.18	29.18	27.18	25.18	23.18	21.18	19.18	17.18
75	32.85	30.85	28.85	26.85	24.85	22.85	20.85	18.85
80	34.45	32.45	30.45	28.45	26.45	24.45	22.45	20.45
85	35.95	33.95	31.95	29.95	27.95	25.95	23.95	21.95
90	37.37	35.37	33.37	31.37	29.37	27.37	25.37	23.37
95	38.72	36.72	34.72	32.72	30.72	28.72	26.72	24.72
100	40.00	38.00	36.00	34.00	32.00	30.00	28.00	26.00

NOTE: Minus (−) values indicate a net loss.

5. Net profits. In figuring the net profit of doing business, Table 6 will be found to be very useful. The table may be used in three ways, as explained below.

To Determine the Percentage of Net Profit on Sales That You Are Making. Locate, at the top of one of the vertical columns, your percentage overhead—your “cost of doing business” in percentage of gross sales. Locate, at the extreme left of one of the horizontal columns, your percentage markup. The value at the intersection of these two columns will be the percentage profit which you are making.

EXAMPLE If your cost of doing business is 18 percent of your gross sales and you mark your goods at 35 percent above cost, your net profit is 7.93 percent of gross sales, obtained by carrying down from the column headed 18 percent and across from the 35 percent markup.

To Determine the Percentage Overhead Cost of Doing Business That Would Yield a Certain Net Profit for a Given Markup Percentage. Locate in the extreme left-hand column the percentage that the selling price is marked above the cost price. Trace horizontally across from this value until the percentage net profit desired is located. At the top of the column in which the desired net profit is located will be found the percentage overhead cost of doing business that will allow this profit to be made.

EXAMPLE If the markup is 45 percent and the profit desired is 15 percent, an overhead cost of doing business of 16 percent can be allowed, obtained by carrying across from the 45 percent markup to the 15 percent profit and finding that this column is headed by 16 percent overhead.

To Determine the Percentage That Should Be Added to the Cost of Goods to Make a Certain Percentage Net Profit on Sales. Select the vertical column which shows the percentage cost of doing business at its top. Trace down the column until the desired percentage profit is found; from this value trace horizontally to the extreme left-hand column, in which will be found the markup percentage—the percentage to be added to the cost to afford the desired profit.

EXAMPLE It is desired to make a 12 percent net profit when the cost of doing business is 20 percent of gross sales. Select the vertical column with 20 percent at its top. Trace down the column to locate the net profit desired of 12 percent. This will be partway between 11.00 and 13.33. Carrying across to the left from these values gives a required markup between 45 and 50, or approximately 47 percent.

For values which do not appear in the table, approximate results can be obtained by estimation from the closest values in the table. If more accurate results are desired for these intermediate values, the following formulas may be used:

$$P = 100 - h - \frac{10,000}{100 + m} \quad (1)$$

or

$$m = \frac{100(P + h)}{100 - (P + h)} \quad (2)$$

or

$$h = 100 - P - \frac{10,000}{100 + m} \quad (3)$$

where m = percentage markup based on cost of goods, h = percentage overhead based on gross sales, and P = percentage net profit based on selling price.

If you sell your goods at the retail list prices set by the manufacturers, you can use the table by converting the trade discount which you receive to an equivalent percentage markup, according to the following table:

Manufacturer's discount	Equivalent percentage markup	Manufacturer's discount	Equivalent percentage markup
10	11	35	54
15	$17\frac{1}{2}$	40	$66\frac{2}{3}$
20	25	45	$81\frac{3}{4}$
25	$33\frac{1}{3}$	50	100
30	43		

Intermediate values may be calculated from the following formula:

$$m = \frac{100Q}{100 - Q} \quad (4)$$

where m = percentage markup based on cost of goods and Q = manufacturer's discount.

6. Accounting for the time value of money. [Adapted with permission from the Jan. 1997 issue of *EC&M Magazine*, © 1997, Penton Business Media. All rights reserved.]

Many proposals purport to save money over the long term, such as energy management initiatives. Are they actually worthwhile to a customer? A good way to decide is to go into the future and bring the future benefits back to today's dollars, and compare that result with the project cost. An important tool for this purpose is *net present value*, because it accounts for the time value of money. To use the tool, you will need to know the project cost, how much money will be saved per year over the project lifetime, and how the customer views his or her financial rate of return.

EXAMPLE

Step 1: Determine the annual cash flow impact of the project

Suppose a group of variable speed drives would cost \$50,000 and generate a utility rebate upon completion of \$5000. The reduction in electrical expense is projected to be \$15,000 per year. Assume the effective rate of taxation is 40 percent and the project could be depreciated (for tax purposes) over five years. Assume no change in the costs of equipment maintenance.

Initial cash outlay:	\$50,000
(less utility rebate)	(5,000)
Net outflow	<u>\$45,000</u>

Annual cash inflow:

Increased sales or revenue	\$0
Reductions in operating expense	15,000
Increases in operating expense	0
Depreciation expense ($50,000 \div 5$)	(10,000)
Pretax savings	5,000
Taxes (40%)	(2,000)
Net Income	3,000
Depreciation	10,000
Annual cash inflow, first five years	<u>\$13,000</u>

Since there will never be an actual check written for depreciation (the calculation is done for tax impact only) and this is a cash flow analysis, the depreciation goes back in at the end. The result matches the common sense result; the net cash flow is the energy savings (\$15,000) reduced by the marginal increase in taxes (\$2000). After the first five years, the picture changes due to the fact that, for tax purposes, the equipment is fully depreciated. This means that the taxes go up by \$4000 (40 percent of \$10,000), reducing the annual positive cash flow to \$9000.

Step 2: Determine the hurdle rate

This is the rate of return that the firm needs to realize on the project in order to have it make sense in terms of their own accounting procedure. It consists of the firm's *weighted average cost of capital* (WACC) plus a factor reflecting the perceived risk of the proposed project. The point of this part of the analysis is to compare the blended rate of return from the proposed project with the rate of return from other sources of funds the firm may have, both in terms of stock sales and bank financing. Suppose the firm has a million dollar capitalization split 70-30 between shareholder equity (18 percent return expected) and long-term debt (for this example assumed to be 7 percent).

Long-term debt	\$300,000	@ 7%	\$21,000
Shareholders' equity	<u>700,000</u>	@ 18%	<u>126,000</u>
Total	<u>\$1,000,000</u>		<u>\$147,000</u>

The WACC is $\$147,000 \div \$1,000,000 = 14.7$ percent. If the risk factor assigned to the project (based on comparable experience and utility rate stability in other locations) were 3.3 percent, then the *hurdle rate*, the required rate of return, would be 14.7 percent + 3.3 percent = 18 percent. Note that this rate will vary from firm to firm and from time to time based on economic conditions.

Step 3: Determine the *net present value* of the project based on the hurdle rate

The final step is to calculate what future cash flows are worth in today's dollars, so a comparison can be made with other projects competing for funding. Year by year, develop a discount rate for that year and multiply it by the expected cash flow. For example, the discount rate for year 3 is 0.6086 (based on an 18 percent return). To see that this comes out correctly, multiply this by 1.18 to get 0.7182 (year 2), and then by 1.18 to get 0.8475 (year 1), and then by 1.18 again to get 1.0000. This result for year 0, which is the present day, shows the calculations are being done correctly. For any future year (t), the discount factor is (where r is the hurdle rate):

$$\text{Discount factor} = \frac{1}{(1 + r)^t} \quad (5)$$

The *net present value* of all cash flows from the time of project origination onward is the sum of all calculations by year, expressed mathematically as follows where C_t is the cash flow for each future year used in the summation:

$$\text{NPV} = \sum_{t=0}^n \frac{C_t}{(1 + r)^t} \quad (6)$$

In this example the tabulated results are as follows:

Year	Cash flow	Discount factor (18%)	Discounted cash flow
0	(\$45,000)	1.0000	(\$45,000)
1	13,000	0.8475	11,018
2	13,000	0.7182	9,337
3	13,000	0.6086	7,912
4	13,000	0.5158	6,705
5	13,000	0.4371	5,682
6	9,000	0.3704	3,334
7	9,000	0.3139	2,825
8	9,000	0.2660	2,394
9	9,000	0.2255	2,030
10	9,000	0.1911	1,720
<i>Net Present Value</i>			\$8,007

These calculations are tedious to do by hand but there are many computer programs and financial calculators that do the job quickly. The fact that this result is positive shows that it compares well with alternative rates of return and should be strongly considered.

7. Other tools also account for the factor of time in financial management.

For example, the *payback time* simply divides project cost by marginal revenue. In the example in Step 3, this would be $\$45,000 \div \$13,000$, or 3.46. Be careful with this tool because it does not take into account ongoing future revenue after the break-even point.

A different project with a shorter payback period, but with a shorter useful life, may turn out to be less profitable. For example, suppose a project, also costing \$45,000, reduced expenses by \$15,000 per year (reducing the payback time from 3.46 years to 3.0 years) but had a useful life of only 4.0 years. The total return would be \$60,000, but the drive project financial return, although less at the end of the fourth year, would exceed \$60,000 during the fifth year and the profitability would continue to increase for the rest of the project life.

Another tool looks at the net present value, and instead of determining the discounted value of future savings, calculates the *internal rate of return* (IRR) for the project. In other words, at what percentage rate of return will the discounted value of all future cash flows just equal the project cost, and therefore make the net present value of the improvements equal zero? In the case of the variable speed drive project in Step. 3, the IRR is just under 24 percent. This is substantially higher than the hurdle rate in that example, but it may be misleading because it assumes reinvestment of all revenues at the same rate of return. Such a rate of return is generally unrealistically high, and the *net present value* metric is preferred, because it uses actual costs.

CONVERSION FACTORS

(Standard Handbook for Electrical Engineers)

8. Length

1 mil = 0.0254 mm = 0.001 in
 1 mm = 39.37 mils = 0.03937 in
 1 cm = 0.3937 in = 0.0328 ft
 1 in = 25.4 mm = 0.083 ft = 0.0278 yd = 2.54 cm
 1 ft = 304.8 mm = 12 in = 0.333 yd = 0.305 m
 1 yd = 91.44 cm = 36 in = 3 ft = 0.914 m
 1 m = 39.37 in = 3.28 ft = 1.094 yd
 1 km = 3281 ft = 1094 yd = 0.6213 mi
 1 mi = 5280 ft = 1760 yd = 1609 m = 1.609 km

9. Surface

1 cmil = 0.7854 mil² = 0.0005067 mm² = 0.0000007854 in²
 1 mil² = 1.273 cmil = 0.000645 mm² = 0.000001 in²
 1 mm² = 1973 cmil = 1550 mil² = 0.00155 in²
 1 cm² = 197,300 cmil = 0.155 in² = 0.00108 ft²
 1 in² = 1,273,240 cmil = 6.451 cm² = 0.0069 ft²
 1 ft² = 929.03 cm² = 144 in² = 0.1111 yd² = 0.0929 m²
 1 yd² = 1296 in² = 9 ft² = 0.8361 m² = 0.000207 acre
 1 m² = 1550 in² = 10.7 ft² = 1195 yd² = 0.000247 acre
 1 acre = 43,560 ft² = 4840 yd² = 4047 m² = 0.4047 ha = 0.004047 km² = 0.001562 mi²
 1 mi² = 27,880,000 ft² = 3,098,000 yd² = 2,590,000 m² = 640 acres = 2.59 km²

10. Volume

1 cmil · ft = 0.0000094248 in³
 1 cm³ = 0.061 in³ = 0.0021 pt (liquid) = 0.0018 pt (dry)

1 in ³	= 16.39 cm ³ = 0.0346 pt (liquid) = 0.0298 pt (dry) = 0.0173 qt (liquid) = 0.0148 qt (dry) = 0.0164 L or dm ³ = 0.0036 gal = 0.0005787 ft ³
1 pt (liquid)	= 473.18 cm ³ = 28.87 in ³
1 pt (dry)	= 550.6 cm ³ = 33.60 in ³
1 qt (liquid)	= 946.36 cm ³ = 57.75 in ³ = 8 gills (liquid) = 2 pt (liquid) = 0.94636 L or dm ³ = 0.25 gal
1 liter (L)	= 1000 cm ³ = 61.025 in ³ = 2.1133 pt (liquid) = 1.8162 pt (dry) = 0.908 qt (dry) = 0.2642 gal (liquid) = 0.03531 ft ³
1 qt (dry)	= 1101 cm ³ = 67.20 in ³ = 2 pt (dry) = 0.03889 ft ³
1 gal	= 3785 cm ³ = 231 in ³ = 32 gills = 8 pt = 4 qt (liquid) = 3.785 L = 0.1337 ft ³ = 0.004951 yd ³
1 ft ³	= 28,317 cm ³ = 1728 in ³ = 59.84 pt (liquid) = 51.43 pt (dry) = 29.92 qt (liquid) = 28.32 L = 25.71 qt (dry) = 7.48 gal = 0.03704 yd ³ = 0.02832 m ³ or stere
1 yd ³	= 46.656 in ³ = 27 ft ³ = 0.7646 m ³ or stere
1 m ³	= 61,023 in ³ = 1001 L = 35.31 ft ³ = 1.308 yd ³

11. Weight

1 mg	= 0.01543 gr = 0.001 g
1 gr	= 64.80 mg = 0.002286 oz (avoirdupois)
1 g	= 15.43 gr = 0.03527 oz (avoirdupois) = 0.002205 lb
1 oz (avoirdupois)	= 437.5 gr = 28.35 g = 16 drams (avoirdupois) = 0.0625 lb
1 lb	= 7000 gr = 453.6 g = 256 drams = 16 oz = 0.4536 kg
1 kg	= 15,432 gr = 35.27 oz = 2.205 lb
1 ton (short)	= 2000 lb = 907.2 kg = 0.8928 ton (long)
1 ton (long)	= 2240 lb = 1.12 tons (short) = 1.016 tons (metric)

12. Energy Torque units should be distinguished from energy units; thus, foot-pound and kilogram-meter for energy, and pound-foot and meter-kilogram for torque (see Sec. 67 for further information on torque).

1 ft · lb	= 13,560,000 ergs = 1.356 J = 0.3239 g · cal = 0.1383 kg · m = 0.001285 Btu = 0.0003766 Wh = 0.0000005051 hp · h
1 kg · m	= 98,060,000 ergs = 9806 J = 7.233 ft · lb = 2.34 g · cal = 0.009296 Btu = 0.002724 Wh = 0.000003704 hp · h (metric)
1 Btu	= 1055 J = 778.1 ft · lb = 252 g · cal = 107.6 kg · m = 0.5555 lb Celsius heat unit = 0.2930 Wh = 0.252 kg · cal = 0.0003984 hp · h (metric) = 0.0003930 hp · h
1 Wh	= 3600 J = 2,655.4 ft · lb = 860 g · cal = 367.1 kg · m = 3.413 Btu = 0.001341 hp · h
1 hp · h	= 2,684,000 J = 1,980,000 ft · lb = 273,700 kg · cm = 745.6 Wh
1 kWh	= 2,655,000 ft · lb = 367,100 kg · m = 1.36 hp · h (metric) = 1.34 hp · h

13. Power

1 g · cm/s	= 0.00009806 W
1 ft · b/min	= 0.02260 W = 0.00003072 hp (metric) = 0.00000303 hp
1 W	= 44.26 ft · lb/min = 6.119 kg · m/min = 0.001341 hp

1 hp = 33,000 ft · lb/min = 745.6 W = 550 ft · lb/s = 76.04 kg · m/s = 1.01387 hp (metric)

1 kW = 44,256.7 ft · lb/min = 101.979 kg · m/s = 1.3597 hp (metric) = 1.341 hp = 1000 W

14. Resistivity

1 Ω/cmil · ft = 0.7854 Ω/mil² · ft = 0.001662 Ω/mm² · m = 0.0000001657 Ω/cm³ = 0.00000006524 Ω/in³

1 Ω/mil² · ft = 1.273 Ω/cmil · ft = 0.002117 Ω/mm² · m = 0.0000002116 Ω/cm³ = 0.00000008335 Ω/in³

1 Ω/m³ = 15,280,000 Ω/cmil · ft = 12,000,000 Ω/mil² · ft = 25,400 Ω/mm³ · m = 2.54 Ω/cm³

15. Current density

1 A/in² = 0.7854 A/cmil = 0.155 A/cm² = 1,273,000 cmil/A = 0.000001 A/mil²

1 A/cm² = 6.45 A/in² = 197,000 cmil/A

1000 cmil/A = 1273 A/in²

1000 mil²/A = 1000 A/in²

16. Celsius and Fahrenheit Thermometer Scales

Deg C	Deg F	Deg C	Deg F	Deg C	Deg F	Deg C	Deg F	Deg C	Deg F
0	32.	21	69.8	41	105.8	61	141.8	81	177.8
1	33.8	22	71.6	42	107.6	62	143.6	82	179.6
2	35.6	23	73.4	43	109.4	63	145.4	83	181.4
3	37.4	24	75.2	44	111.2	64	147.2	84	183.2
4	39.2	25	77.	45	113.	65	149.	85	185.
5	41.	26	78.8	46	114.8	66	150.8	86	186.8
6	42.8	27	80.6	47	116.6	67	152.6	87	188.6
7	44.6	28	82.4	48	118.4	68	154.4	88	190.4
8	46.4	29	84.2	49	120.2	69	156.2	89	192.2
9	48.2	30	86.	50	122.	70	158.	90	194.
10	50.	31	87.8	51	123.8	71	159.8	91	195.8
11	51.8	32	89.6	52	125.6	72	161.6	92	197.6
12	53.6	33	91.4	53	127.4	73	163.4	93	199.4
13	55.4	34	93.2	54	129.2	74	165.2	94	201.2
14	57.2	35	95.	55	131.	75	167.	95	203.
15	59.	36	96.8	56	132.8	76	168.8	96	204.8
16	60.8	37	98.6	57	134.6	77	170.6	97	206.6
17	62.6	38	100.4	58	136.4	78	172.4	98	208.4
18	64.4	39	102.2	59	138.2	79	174.2	99	210.2
19	66.2	40	104.	60	140.	80	176.	100	212.
20	68.								

For values not appearing in the table use the following formulas:

$$^{\circ}\text{C} = \frac{5}{9} \times (^{\circ}\text{F} - 32) \quad (7)$$

$$^{\circ}\text{F} = (\frac{9}{5} \times ^{\circ}\text{C}) + 32 \quad (8)$$

17. Greek Alphabet

(Anaconda Wire and Cable Co.)

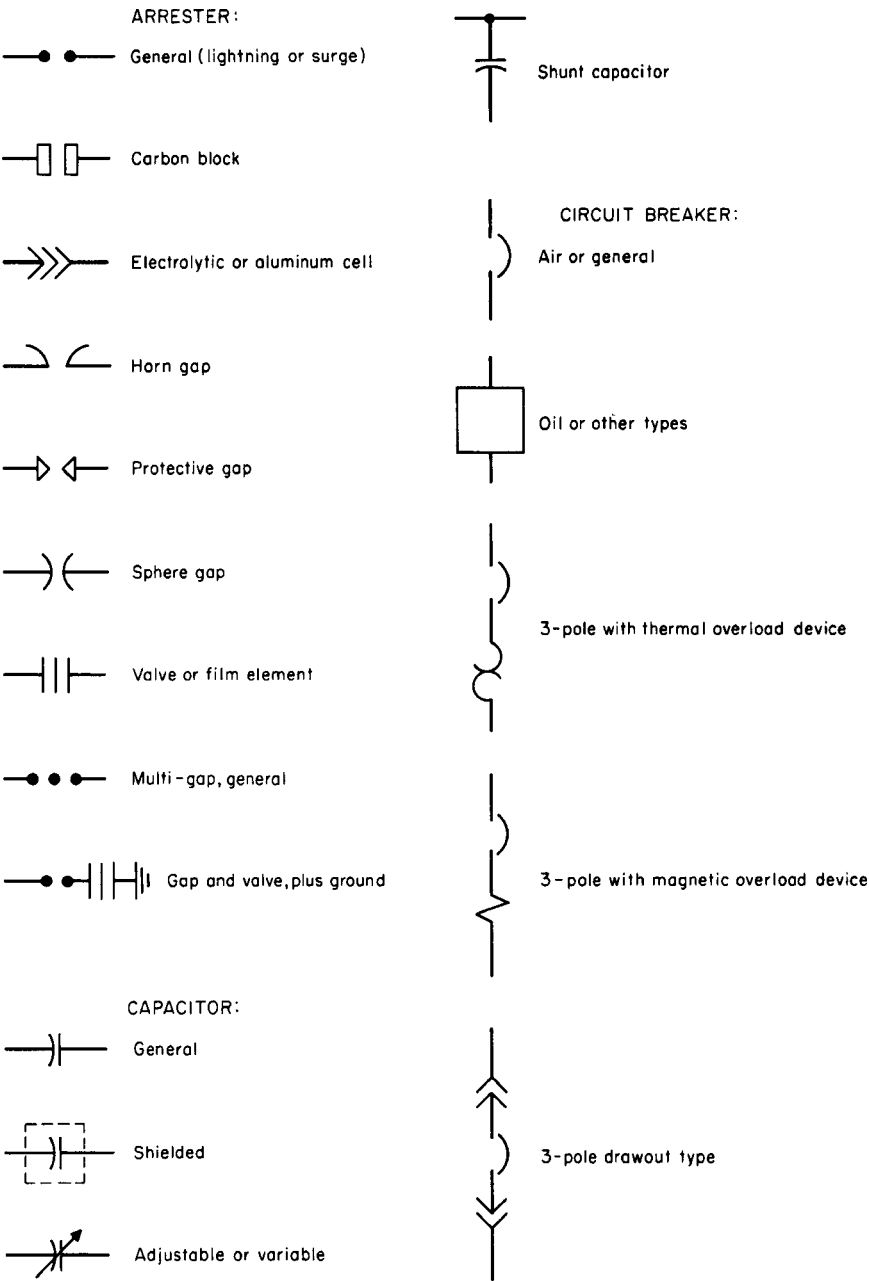
Greek letter	Greek name	English equivalent
A α	Alpha	a
B β	Beta	b
Γ γ	Gamma	g
Δ δ	Delta	d
E ϵ	Epsilon	e
Z ζ	Zeta	z
H η	Eta	é
Θ θ	Theta	th
I ι	Iota	i
K κ	Kappa	k
Λ λ	Lambda	l
M μ	Mu	m
N ν	Nu	n
Ξ ξ	Xi	x
O \omicron	Omicron	ö
Π π	Pi	p
P ρ	Rho	r
Σ σ	Sigma	s
T τ	Tau	t
Y υ	Upsilon	u
Φ ϕ	Phi	ph
X χ	Chi	ch
Ψ ψ	Psi	ps
Ω ω	Omega	ō

GRAPHICAL ELECTRICAL SYMBOLS


18. Standard graphical symbols for electrical diagrams were approved by the American National Standards Institute (ANSI) on October 31, 1975.

The complete list of the standardized symbols is given in the ANSI publication *Graphical Symbols for Electrical and Electronic Diagrams*, No. ANSI/IEEE 315-1975. A selected group of these symbols for use in one-line electrical diagrams is given in Secs. 19 and 20 through the courtesy of Rome Cable Corporation.



19. Graphical Symbols for One-Line Electrical Diagrams
(From American National Standards Institute ANSI/IEEE 315-1975)





Graphical Symbols (Continued)

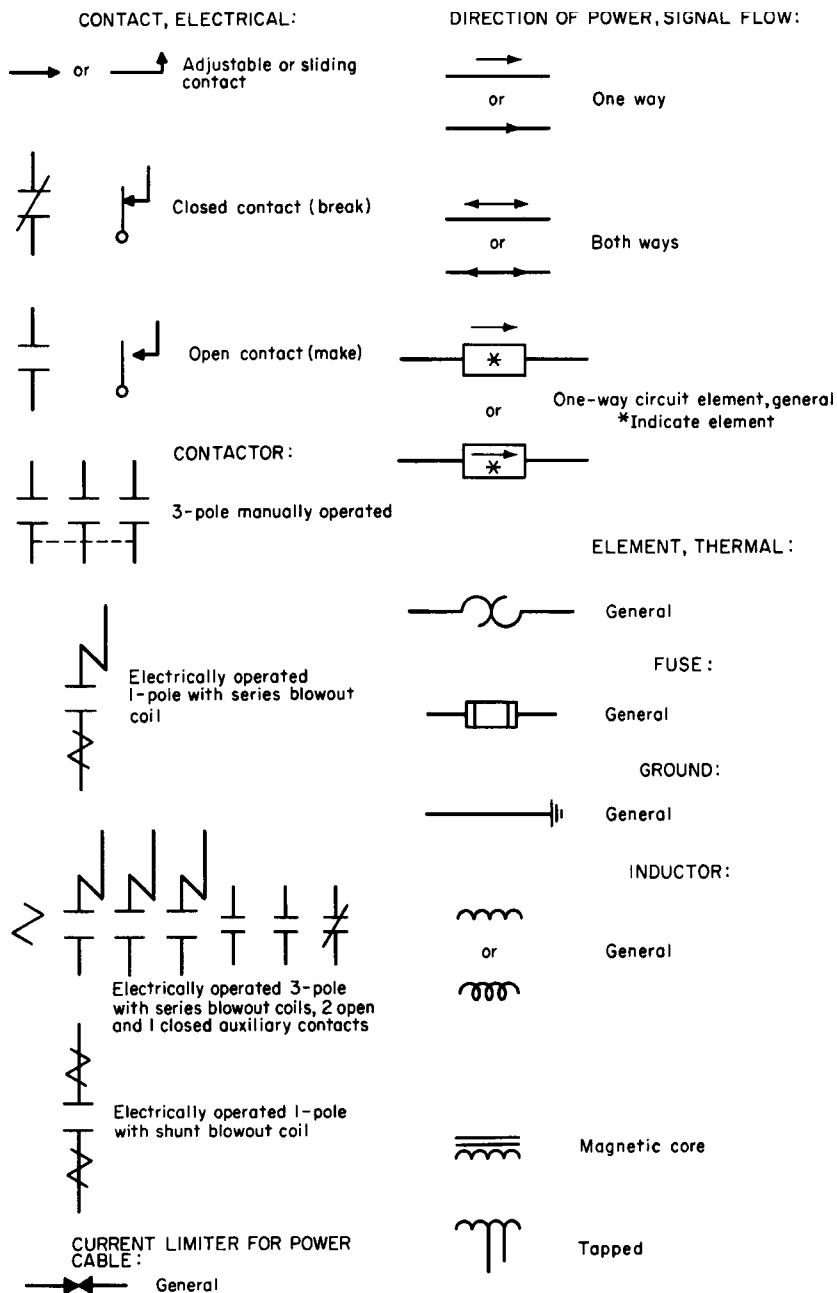


Graphical Symbols (Continued)

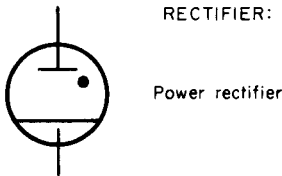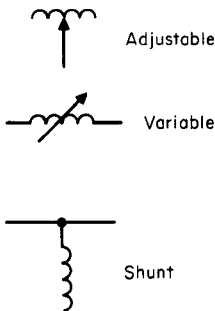





MACHINE, ROTATING:

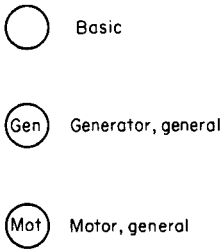


WINDING SYMBOLS:

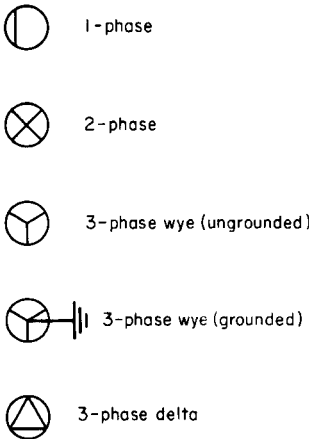

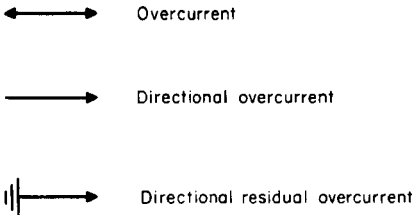

RELAY:




Graphical Symbols (Continued)

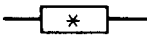
 Overfrequency

 Overtemperature


 Phase balance

RESISTOR:



or
General

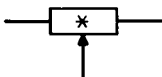



* *Add identification



or
Tapped




or
Adjustable




or
Variable



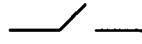
SHIELDING:


 General





Enclosing

SWITCH:

 Single throw, general

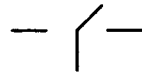
 Double throw, general

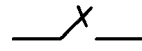 Knife switch, general

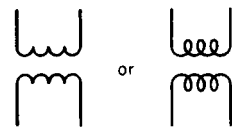
 Switch with horn gap


 Selector, general

TERMINATION:


 Cable termination

TRANSFORMER:


 or
General

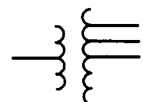 With taps, 1 phase

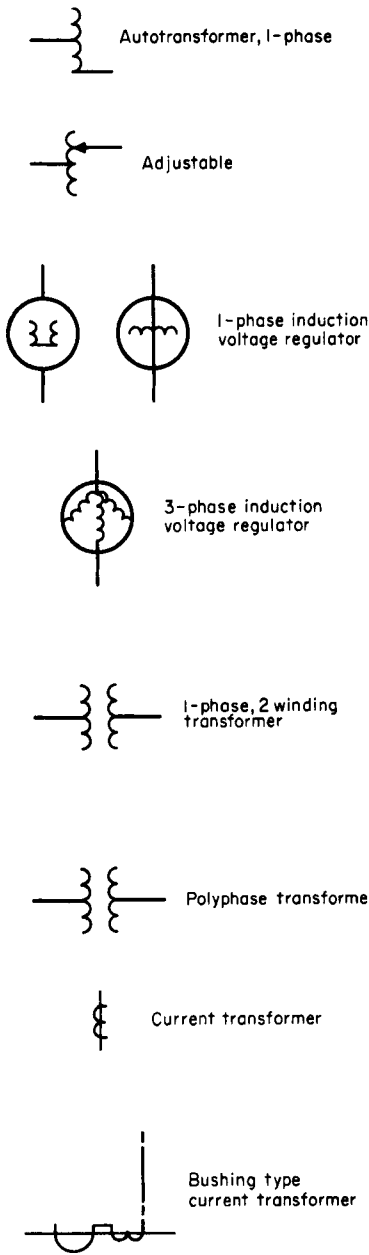
Graphical Symbols (Continued)





WINDING CONNECTION SYMBOLS:

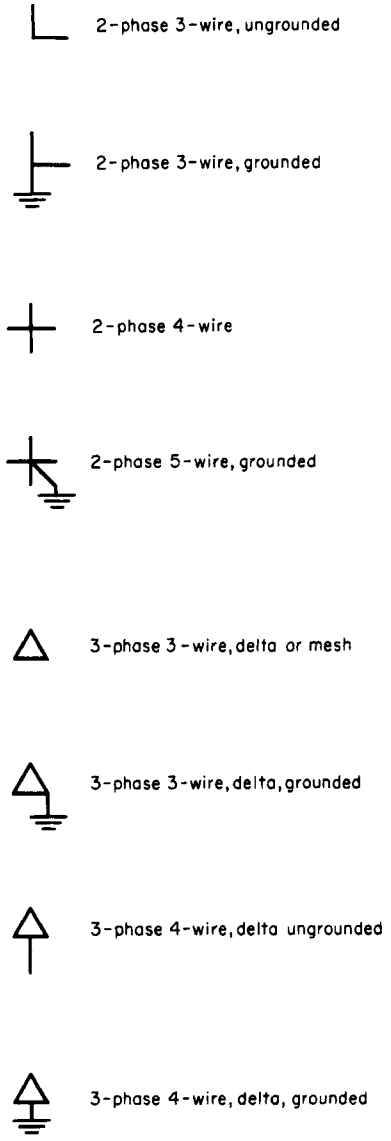



Graphical Symbols (Continued)

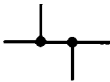 3-phase, open - delta


 Junction of connected paths

 3-phase, wye, or star,
ungrounded


 Crossing of conductors not
connected


 3-phase, wye, grounded
neutral

GROUPING OF LEADS





or

 3-phase 4-wire,
ungrounded



or

 3-phase, scott or T




or


WIRING:

 Electric conductors



 Cable underground or in conduit

 Future conductors

 Spliced conductors or change of type or size

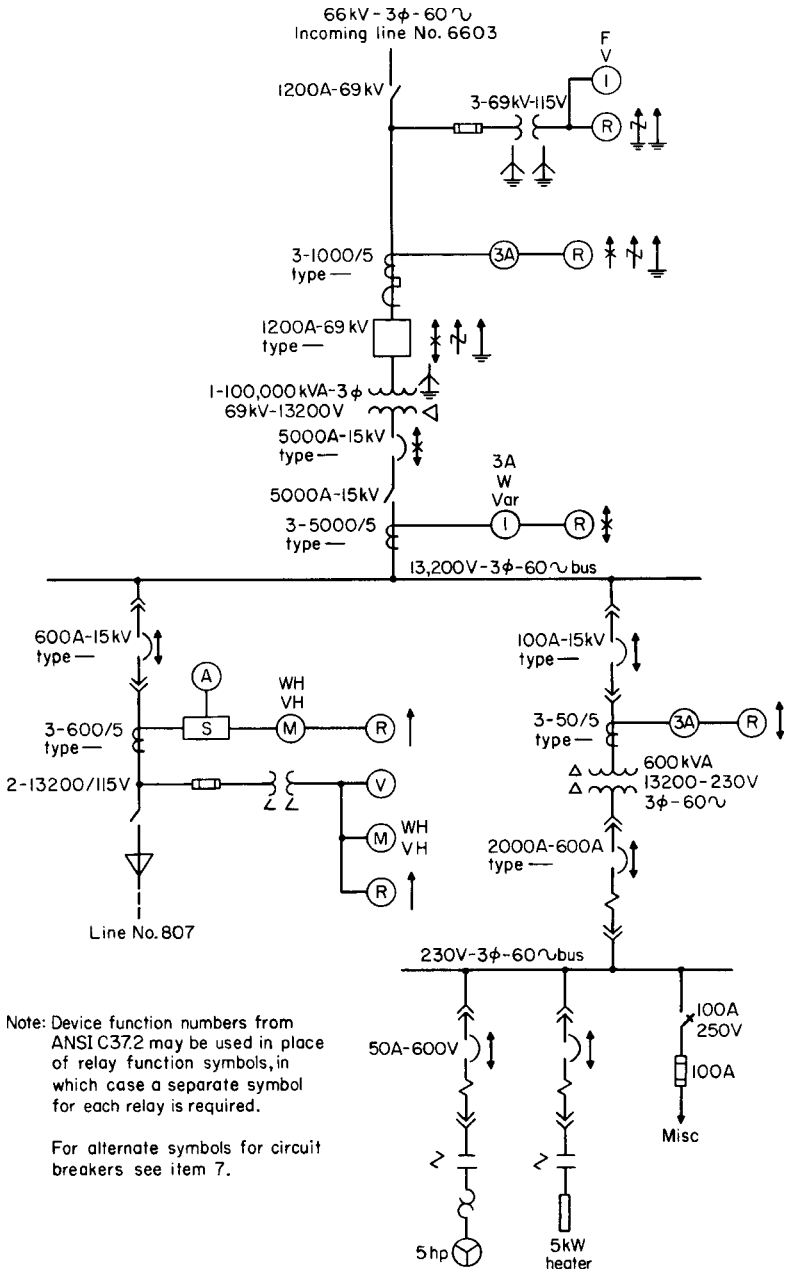


FIGURE 1.1 Typical single-line diagram for power equipment. [American National Standards Institute]

20. Graphical Symbols for Meters or Instruments and Identification Markings for Relays

(From American National Standards Institute ANSI/IEEE 315-1975)



NOTE: The asterisk is not a part of the symbol. Always replace the asterisk by one of the following letter combinations, depending on the function of the meter or instrument, unless some other identification is provided in the circle and explained on the diagram.

A	Ammeter
AH	Ampere-hour meter
CMA	Contact-making (or breaking) ammeter
CMC	Contact-making (or breaking) clock
CMV	Contact-making (or breaking) voltmeter
CRO	Oscilloscope or cathode-ray oscillograph
D	Demand meter
DB	DB (decibel) meter
DBM	DBM (decibels referred to 1 mW) meter
DTR	Demand-totalizing relay
F	Frequency meter
G	Galvanometer
GD	Ground detector
I	Indicating
M	Integrating
μ A or UA	Microammeter
MA	Milliammeter
N	Noise meter
OHM	Ohmmeter
OP	Oil pressure
OSCG	Oscillograph, string
PH	Phase meter
PI	Position indicator
PF	Power-factor meter
RD	Recording demand meter
REC	Recording
RF	Reactive-factor meter
S	Synchroscope
TLM	Telemeter
T	Temperature meter
TT	Total time
VH	Varhour meter
V	Voltmeter
VA	Volt-ammeter
VAR	Varmeter
VI	Volume indicator
VOM	Volt-ohm meter
VU	Standard volume indicator
W	Wattmeter
WH	Watthour meter

ANSI Device function numbers. [Reprinted with permission from the Jan. 1998 issue of EC&M Magazine, © 1998, Penton Business Media. All rights reserved.]

NOTE: If a device has two functions, both are shown. For example, a device 27/59 would be a combined undervoltage and overvoltage relay. See Fig. 1 for an example.

2. Time-delay starting or closing relay
3. Checking or interlock relay
6. Starting circuit breaker
8. Control power-disconnecting device
12. Overspeed device
14. Underspeed device
15. Speed- or frequency-matching device
18. Accelerating or decelerating device
19. Starting-to-running transition contactor
21. Distance relay
23. Temperature-control device
25. Synchronizing or synchronism-check device
27. Undervoltage relay
30. Annunciator relay
32. Directional power relay
36. Polarity device
37. Undercurrent or underpower relay
40. Loss of excitation (field) relay
41. Field circuit breaker
42. Running circuit breaker
43. Manual transfer or selector device
46. Reverse-phase or phase-balance current relay
47. Phase-sequence voltage relay
48. Incomplete-sequence relay
49. Machine or transformer thermal relay
50. Instantaneous overcurrent or rate-of-rise relay
51. AC time overcurrent relay
52. AC circuit breaker
55. Power-factor relay
56. Field-application relay
59. Overvoltage relay
60. Voltage- or current-balance relay
62. Time-delay stopping or opening relay
64. Ground-protective relay
67. AC directional overcurrent relay
68. Blocking relay
69. Permissive control device
72. DC circuit breaker
74. Alarm relay
76. DC overcurrent relay
78. Phase-angle measuring or out-of-step protective relay
79. AC reclosing relay
81. Frequency relay
82. DC reclosing relay
85. Carrier or pilot-wire receiver relay
86. Locking-out relay
87. Differential protective relay

- 91. Voltage directional relay
- 92. Voltage and power directional relay
- 94. Tripping or trip-free relay

PRINCIPLES OF ELECTRICITY AND MAGNETISM: UNITS

21. Magnets and magnetism. Any body which has the ability to attract iron or steel is called a *magnet*. The attractive ability of such a body is called *magnetism*. Certain specimens of iron ore sometimes possess the property when they are taken from the earth. Such natural specimens will attract and hold iron filings and are called *natural magnets* or *lode-stones*. The two ends of a magnetic specimen that have the greatest attraction for the iron filings are called the *poles* of the magnet. If a natural magnet is suspended by a string from its center so that it is free to turn, it will turn until the axis through its poles is lying north and south. The end or pole which is pointing north is called the *north pole* of the magnet, and the other end or pole, which is pointing south, is called the *south pole*.

It is possible by certain means discussed in Sec. 24 to produce artificial magnets, i.e., to magnetize a piece of iron or steel that did not originally in its natural state possess the property of magnetism. Artificial magnets are of two types, temporary and permanent. *Temporary magnets* are those which will hold their magnetism only as long as the magnetizing force is maintained. *Permanent magnets* are those which will hold their magnetism after the magnetizing force has been removed and will continue to be magnets for a long time unless they are demagnetized by some means such as by being jarred or heated.

Any material that can be magnetized or that is attracted by a magnet is called a *magnetic material*.

22. Magnetic field. The region around a magnet has peculiar properties that exist only as long as the magnet is present. A force exerted upon any piece of magnetic material will be placed in the space near to the magnet. This property or condition of the space around a magnet is called a *magnetic field*. If a magnet is covered with a sheet of paper sprinkled with iron filings, the filings will arrange themselves in definite curves extending from pole to pole, as shown in Fig. 1.2. The direction taken by the filings shows the direction of the magnetic field, i.e., the direction of the force exerted upon a magnetic material placed in the region around the magnet. The presence of this property (magnetic field) around a magnet can be demonstrated by means of a compass needle, a small, light magnet suspended so that it can turn freely. If a compass needle is placed in the region around a magnet, it will turn to a definite position, thereby demonstrating that there is a force acting upon a magnetic material placed in the region around a magnet. The magnitude or strength of the magnetic field (the magnitude of the force exerted upon a magnetic material in the space around a magnet) will differ at different points. The field will be strongest at the poles.

The direction of a magnetic field at any point is the direction in which a force is exerted upon the north pole of a compass needle placed at that point in the field. It will be the direction in which the north-pole end of the axis of the compass needle points.

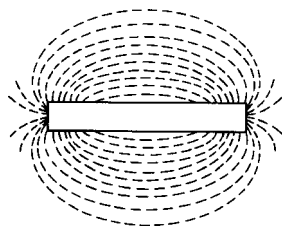


FIGURE 1.2 Arrangement of iron filings around a magnet.

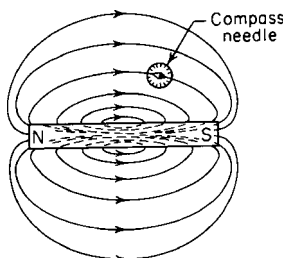


FIGURE 1.3 Lines of magnetic flux around a bar magnet.

23. Magnetic flux. The magnetic field of a magnet may be depicted by curved lines from the north to the south pole as shown in Fig. 1.3. Arrows placed on the lines, which picture the condition in the space, indicate the direction of the force that would be exerted upon the north pole of a compass needle at that point. The density with which the lines are drawn represents the magnitude of the field, i.e., the magnitude of the force that would be exerted upon a magnetic material placed at that point in the field. These lines, which picture the condition in the space around a magnet, are called *lines of magnetic flux* or simply *magnetic flux*.

24. Methods of producing artificial magnets. A magnetic material can be magnetized to a certain degree by stroking it with a permanent magnet or by placing it in the field of another magnet. Either of these means will normally produce only relatively weak magnets. The general method of magnetizing a material or of producing a magnetic field is to pass an electric current through a coil of wire (see Secs. 85 and 86).

25. Matter is anything which has weight and occupies space according to the laws of physics. The atomic theory states that all matter is made of atoms, which usually contain an equal number of positively and negatively charged particles. Thus, a normal atom exhibits no external sign of electrification. Most of the mass of an atom is found in the particles located in the small central portion called the *nucleus*, with much smaller particles, called *electrons*, in motion around the nucleus. By convention, the electrons are assigned a negative charge, the charge on each being equal to but opposite the charge on each of the charged particles in the nucleus, called *protons*. In addition, most atoms also contain particles in their nuclei that are neutral. These particles, called *neutrons*, are each approximately equal in mass to a proton. Atoms cannot be further reduced in size by any chemical process. Although there are very few elements, they can chemically combine into the millions of different compounds that comprise our physical and biological environment.

26. The different kinds of atoms (the atoms of the different elements) differ only in the number and arrangement of the electrons and in the numbers of protons and neutrons which compose them. Each element is characterized by its atomic number, which is defined as the number of protons in the nucleus. The lighter elements have few protons and electrons; the heavier elements, many. A normal atom of any given element always has the same number of electrons and a positive nucleus of the same magnitude. The arrangement of the electrons gives each element its chemical properties, and also determines whether the element is electrically conductive. The neutrons act to stabilize the atomic nucleus, but have no bearing on the basic chemical properties of the element or its conductivity. Only 117 or 118 elements are now known, and of those only 94 occur in nature, some only in very small quantities.

EXAMPLES Most atoms of hydrogen, the lightest element, consist of one electron and a corresponding positive nucleus of one proton. However, some atoms of hydrogen (called *deuterium*) have a nucleus of one proton and one neutron. Oxygen atoms contain eight protons and electrons, and usually eight neutrons, although as in the case of hydrogen other

numbers of neutrons are possible. An atom of the most common form of uranium, one of the heaviest elements, has 92 electrons and a nucleus of 92 protons and 146 neutrons.

27. Thus everything about us, all matter, is composed in significant part of electrically charged particles. The electrons can be, and often are, forced from the atoms. The positive nuclei, except under very special conditions (disruption of the atom), cannot be moved from the atom. Electrical phenomena usually occur when some of the electrons are moved or when the electrical balance which normally obtains within the atoms is disturbed. A single electron is unimaginably small, running about 1.27×10^{-13} in or 5×10^{-11} mm in diameter and 9.1×10^{-28} g. A single atom is very small indeed, and the electron is far smaller yet, weighing less than one eighteen-hundredth of the mass of an atom of hydrogen.

28. Matter is conserved and cannot be created or destroyed (except by thermonuclear reactions, which are not covered in this book). It is evident that there is in the universe a certain definite amount of electrically charged particles. Therefore electric charge, like matter, is conserved and can neither be created nor destroyed. It can, however, be forced to move and thus transmit power or produce electrical phenomena. Electrical energy (not electricity) can be generated (produced from energy of some other form) by forcing electrons to move in certain paths.

29. An electromotive force (emf) is the force or pressure, measured in *volts* (V), which makes electrons move or tends to make them move. Thus, if an emf is impressed across the two ends of a wire, it will force the electrons of the atoms which compose the wire to move from atom to atom, in the direction of the emf, through the wire, if we assume, of course, that a closed conducting path is provided. A lightning flash is merely a movement of electrons between the atoms of the atmosphere caused by an emf or voltage existing between the clouds and the earth.

30. An electric current, measured in *amperes* (A), consists of a movement or flow of electrically charged particles. In a wire, the normal application covered in this book, the only particles that move are the negatively charged electrons; however, in other places the current may involve positively charged ions (atoms lacking one or more electrons and thus with a net positive charge). For example, as a battery discharges both positively charged and negatively charged particles will be in motion (in opposite directions at any given instant) in the electrolyte.

Good conductors tend to be metals because each of the metallic atoms has some loosely bound electrons in its outer electron layers that are comparatively free to move in the presence of emf. This veritable sea of loose electrons is reflective to light and is partially responsible for the shiny appearance of untarnished metals.

31. Electric fields and the nature of electricity. You may be aware that electricity moves along a conductor at essentially the speed of light, which in a vacuum is 186,000 mi/s (300,000 km/s). In conventional conductors the speed is considerably slower, but still unimaginably fast. Thus, forgetting about losses in the wire for a moment, if you connected a load to the end of a wire that went around the earth seven times, and turned the

switch to ON, the load would receive the electric energy only a second or so later. This degree of speed occurs because closing the switch creates an electric field through and around the conductor, and that field is part of the same electromagnetic spectrum as radio, radar, infrared, visible light, ultraviolet, x-rays, and gamma radiation. By contrast, the electrons only move through a conductor at a speed in the neighborhood of 1 mm/s or less. How is this possible?

Picture a large load being elevated by a lever at the rate of 1 mm/s. The lever is like the pool of electrons that are free to move when an emf is applied. Just as the load end of the lever moves at the same instant as the other end when the required force is applied, so also do the electrons at the end of the conductor (and at all points in between) move when the emf is applied. The applied energy is transmitted through the electric and magnetic fields that surround the conductor, and that are guided to the loads by the conductor. Even though individual electrons move slowly, the electromagnetic field associated with their motion (current) transmits energy at the speed of light.

32. Electric currents may be divided into two general classes, direct currents and alternating currents.

33. A direct current is one which always flows in the same direction.

34. An alternating current is one the direction of which is reversed at regular intervals.

35. Direct currents may also be classified into (1) continuous currents, which are steady, nonpulsating direct currents; (2) constant currents, which continue to flow for a considerable time in the same direction and with unvarying intensity; and (3) pulsating currents, which are regularly varying continuous currents.

36. The coulomb (C) is the name given to the unit quantity of electrical charge. It is somewhat analogous to our common unit of quantity of water, the gallon (gal). A coulomb of electricity, so calculations show, is the quantity of charge represented by 6.02×10^{18} electrons (or protons). However, it is *rate of flow*, which is measured in amperes, that is of importance to the electrician rather than the total quantity of electricity that flows. Hence, the unit coulomb is almost never used directly in practical work.

37. Ampere is the name given to the practical unit of rate of flow of electricity; it is analogous to “gallons per minute” or “cubic meters per second” in hydraulics. The ampere represents a rate of flow of 1 C/s. That is, it is equivalent to a flow of 6.02×10^{18} electrons per second. It has been internationally agreed (recommended by the Chicago International Electrical Congress of 1893 and legalized by act of Congress in 1894) that the ampere be defined as “that unvarying current, which, when passed through a solution of nitrate of silver in water in accordance with standard specifications, deposits silver at the rate of one thousand one hundred and eighteen millionths (0.001118) of a gram per second.”

The ampere also is that unvarying current which when passed through two straight parallel conductors of infinite length and negligible cross section, located at a distance of 1 m from

each other in vacuum, will produce a force between the conductors of 2×10^{-7} newton (N) per meter of length. Current international agreements use this second definition as one of seven base quantities (the other six being length, mass, time, thermodynamic temperature, amount of substance, and luminous intensity) from which all other quantities are defined. Therefore, the present international definition of a coulomb is that quantity of electric charge that passes any cross section of a conductor in 1 sec when the current is maintained constant at 1 A.

EXAMPLES The current flowing in an ordinary 40-W incandescent lamp is about $\frac{1}{3}$ A. Series street-lighting lamps require from 6.6 to 20 A. The current in a telegraph wire is approximately 0.04 A.

38. Volt is the unit of emf; i.e., it is the unit whereby the tendency to establish and maintain electric currents may be measured. By international agreement it has been decided that 1 V shall be taken as the potential difference between two points on a conductor carrying a current of 1 A when the power dissipated between the two reference points is 1 W. As a practical matter, 1 V will force a current of 1 A through a resistance of 1 ohm (Ω).

39. Resistance (R or r) is the name given to the opposition which is offered by the internal structure of the different materials of the earth to the movement of electricity through them, i.e., to the maintenance of an electric current in them. This opposition results in the conversion of electrical energy into heat in accordance with the formula $W = I^2R$, where W = watts, I = intensity of current expressed in amperes, and R = ohms (Ω) of resistance. The electrons of some materials, such as the metals, can be moved from atom to atom within the material with relative ease, i.e., by the application of a small emf. All materials offer some opposition to the maintenance of a current through them, and there is no material in which some current cannot be produced, although it may be minute.

40. Conductor is the name given to a material through which it is relatively easy to maintain an electric current.

41. Insulator is the name given to a material through which it is very difficult to produce an electric current. Some examples of good insulating materials are glass, mica, and porcelain.

42. A resistor is an object having resistance; specifically, a resistor is a conductor inserted in a circuit to introduce resistance. A *rheostat* is a resistor so arranged that its effective resistance can be varied.

43. Ohm is the name given to the practical unit of electrical resistance. A resistance of 1 Ω is that opposition which will result in electrical energy being converted into heat at the rate of 1 W/A of effective current. In any circuit the rate at which electrical energy is converted into heat is given by the formula $W = I^2R$ of Sec. 39. The ohm is also used to describe the opposition to the passage of electric current due to impedance and capacitance. See Sec. 51 for more information.

It has been agreed that the international ohm shall be represented by the resistance offered to an unvarying electric current by a column of mercury, at the temperature of 0°C, which has a mass of 14.4521 g, a constant cross section, and a length of 106.3 cm.

44. Impedance (Z or z) is the name given to the total opposition of a circuit or part of a circuit to the passage of an electric current through it, caused by the combined effects of the characteristics of the circuit of resistance, inductance, and capacitance. Impedance is measured in ohms.

45. Self-inductance is the phenomenon whereby an emf is induced in a circuit by a change of current in the circuit itself. This emf is always in such a direction that it opposes the change of current which produces it.

Whenever current passes through a conductor, it tends to set up a magnetic field around the conductor. If the current through the conductor changes, the flux produced by it will change. The change in the flux will produce a voltage in the conductor. This voltage is the voltage of self-induction. Since inductance has an effect only when the current in the conductor is changing, inductance will have no effect on a closed dc circuit but will have an effect on ac circuits in which the current is always changing from instant to instant.

46. Inductance (L) is defined as the property of a circuit that causes a voltage to be induced in the circuit by a change of current in the circuit. The henry (H) is the unit of inductance. A circuit has an inductance of 1 H when if the current is changed at the rate of 1 A/s, 1 V will be induced in the circuit.

47. Inductive reactance (X_L) is the name given to the opposition to the flow of changing current due to inductance. It is measured in ohms as resistance is.

48. Capacitance (C) is the phenomenon whereby a circuit stores electrical energy. Whenever two conducting materials are separated by an insulating material, they have the ability of storing electrical energy. Such an arrangement of materials (two conductors separated by an insulator) is called a *capacitor* or *condenser*. If a source of dc voltage is connected between the two conducting materials of a capacitor, a current will flow for a certain length of time. The current initially will be relatively large but will rapidly diminish to zero. A certain amount of electrical energy will then be stored in the capacitor. If the source of voltage is removed and the conductors of the capacitor are connected to the two ends of a resistor, a current will flow from the capacitor through the resistor for a certain length of time. The current initially will be relatively large but will rapidly diminish to zero. The direction of the current will be opposite to the direction of the current when the capacitor was being charged by the dc source. When the current reaches zero, the capacitor will have dissipated the energy which was stored in it as heat energy in the resistor. The capacitor will then said to be discharged.

The two conducting materials, often called the plates of the capacitor, will be electrically charged when electrical energy is stored in the capacitor. One plate will have an excess of positive electricity and therefore will be positively charged with a certain number of coulombs of excess positive electricity. The other plate will have an excess of negative electricity and therefore will be negatively charged with an equal number of coulombs of excess

negative electricity. When in this state, the capacitor is said to be charged. When a capacitor is charged, a voltage is present between the two conductors, or plates, of the capacitor.

When a capacitor is in a discharged state, no electrical energy is stored in it, and there is no potential difference, no voltage, between its plates. Each plate contains just as much positive as negative electricity, and neither plate has any electric charge.

From the above discussion it is seen that a capacitor has a sustained current only as long as the voltage is changing. A capacitor connected to a dc supply will not have a sustained current. In an ac circuit, the voltage is continually changing from instant to instant. Therefore, when a capacitor is connected to an ac supply, an alternating current continues to flow. The current is first in one direction, charging the capacitor, and then in the opposite direction, discharging the capacitor.

49. Farad (F) The unit of capacitance. It is designated by the symbol F. A circuit or capacitor will have a capacitance of 1 F if when the voltage across it is increased by 1 V, its stored electricity is increased by 1 C. Another definition for a capacitance of 1 F, which results in the same effect, is given below. A circuit or capacitor will have a capacitance of 1 F when if the voltage impressed upon it is changed at the rate of 1 V/s, 1 A of charging current flows.

50. Capacitive reactance (X_c) is the name given to the opposition to the flow of alternating current due to capacitance. It is measured in ohms as resistance and inductive reactance are.

51. Ohm is the unit in which all opposition to the maintenance of an electric current is measured, not just resistance as covered in Sec. 43. A circuit or part of a circuit has an opposition of 1 Ω when an emf of 1 V will produce an effective current of 1 A. In any circuit or part of a circuit, the current is equal to the emf in volts divided by the total opposition in ohms. Thus,

$$I = \frac{E}{Z} \quad E = IZ \quad Z = \frac{E}{I} \quad (9)$$

Although all opposition to electric current is measured in ohms, the two types, resistive opposition and reactive opposition, are quite different. Resistance results in the loss of electrical energy from the circuit. Reactance results in the interchange of energy between electromagnetic fields and the circuit. It does not result in the loss of energy from the circuit. Capacitive reactance results in the interchange of energy between an electric field and a circuit. Current passing through any type of opposition results in the loss of voltage, or voltage drop.

52. Admittance (Y or y) is the name given to the quantity which is the reciprocal of impedance. It expresses the ease with which an emf can produce a current in an electric circuit. It is measured in a unit called the mho or siemens (S). A circuit or part of a circuit has an admittance of 1 mho when an emf of 1 V will produce an effective current of 1 A. In any circuit or part of a circuit the current is equal to the emf in volts multiplied by the total admittance in mhos. Thus,

$$I = EY \quad E = \frac{I}{Y} \quad Y = \frac{I}{E} \quad (10)$$

53. Conductance (G or g) is the component of the admittance which results in loss of power from the circuit in the form of heat. It is measured in mhos. For a dc circuit conductance becomes the reciprocal of the resistance.

54. Susceptance (B or b) is the component of the admittance which results in no loss of power from the circuit. It is measured in mhos. It does not exist for a dc circuit.

55. Conductivity. The relative ease with which an electric current can be passed through a material is called its *percentage conductivity*. The conductivity of pure annealed copper is taken as the base, so that pure annealed copper is said to have 100 percent conductivity. Copper of 100 percent conductivity has a resistance of $10.371 \Omega/\text{mil} \cdot \text{ft}$ at 20°C . The resistance per circular mil-foot of any material can be found by dividing 10.371 by the percentage conductivity of the material.

56. Work is the overcoming of mechanical resistance through a certain distance. Work is measured by the product of the mechanical resistance times the space through which it is overcome. It is measured by the product of the moving force times the distance through which the force acts in overcoming the resistance. Work is therefore measured in foot-pounds ($\text{ft} \cdot \text{lb}$). In the international system, work is measured by joules (J). A joule of work is performed when a newton of force is maintained over a distance of 1 m. It is also the amount of work expended when a watt of power is expended for a duration of 1 s.

EXAMPLE What work is done if a weight of 6 lb is lifted through a distance of 8 ft?

SOLUTION $\text{Work} = \text{ft} \times \text{lb} = 8 \times 6 = 48 \text{ ft} \cdot \text{lb}$

EXAMPLE If 20 gal of water is pumped to a vertical height of 32 ft, what work has been done?

SOLUTION A gallon of water weighs 8 lb. Therefore,

$$\text{Work} = \text{ft} \times \text{lb} = 32 \times (20 \times 8) = 5120 \text{ ft} \cdot \text{lb}$$

EXAMPLE If the piston in a steam engine travels $1\frac{1}{2}$ ft during a certain interval and the total pressure on the piston is 40,000 lb, what work is done during the interval?

SOLUTION $\text{Work} = \text{ft} \times \text{lb} = 1.5 \times 40,000 = 60,000 \text{ ft} \cdot \text{lb}$

57. Energy is capacity for doing work. Any body or medium which is of itself capable of doing work is said to possess energy. A coiled clock spring possesses energy because, in unwinding, it can do work. A moving projectile possesses energy because it can overcome the resistance offered by the air, by armor plate, etc., and thus do work. A charged storage battery possesses energy because it can furnish electrical energy to operate a motor. As in the case of work, energy can be expressed in foot-pounds, or joules in the international system.

58. Power is the time rate of doing work. The faster work is done, the greater the power that will be required to do it. For example, if a 10-hp motor can raise a loaded elevator a certain distance in 2 min, a motor of 20 hp (approximately) will be required to raise it the same distance in 1 min.

59. The horsepower (hp) is the unit of power and is about equal to the power of a strong horse to do work for a short interval. Numerically, 1 hp is $33,000 \text{ ft} \cdot \text{lb}/\text{min} = 550 \text{ ft} \cdot \text{lb}/\text{s} = 1,980,000 \text{ ft} \cdot \text{lb}/\text{h}$. Expressed as a formula,

$$\text{hp} = \frac{L \times W}{33,000 \times t} = \frac{\text{ft} \cdot \text{lb}/\text{min}}{33,000} \quad (11)$$

where hp = horsepower, L = distance in feet through which W is raised or overcome, W = weight in pounds of the thing lifted or the push or pull in pounds of the force overcome, and t = time in minutes required to move or overcome the weight W through the distance L . In the international system, the unit of power is the watt.

EXAMPLE What horsepower is required in raising the load and bucket weighing 200 lb shown in Fig. 1.4 from the bottom to the top of the shaft, a distance of 100 ft, in 2 min?

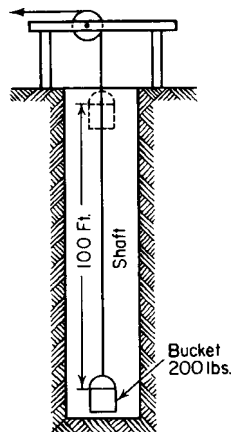


FIGURE 1.4 Bucket in shaft.

SOLUTION Substitute in the formula

$$\text{hp} = \frac{L \times W}{33,000 \times t} = \frac{100 \times 200}{33,000 \times 2} = 0.3 \text{ hp}$$

EXAMPLE What average horsepower is required while moving the box loaded with stone, in Fig. 1.5, from A to B, a distance of 650 ft, in 3 min? A total horizontal pull of 150 is required to move the box.

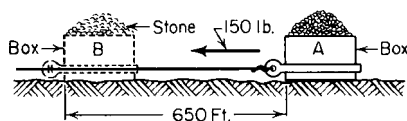


FIGURE 1.5 Moving loaded box.

SOLUTION Substitute in the formula

$$\text{hp} = \frac{L \times W}{33,000 \times t} = \frac{650 \times 150}{33,000 \times 3} = 0.98 \text{ hp}$$

60. Electric power is the rate of doing electrical work. The unit is the watt or the kilowatt. A kilowatt is 1000 W. Work is being done at the rate of 1 W when a constant current of 1 A is maintained through a resistance by an emf of 1 V. It is also the power required to do work at the rate of 1 J/s.

61. Energy of one sort may be transformed into energy of another sort. Heat energy in coal may be transformed (with a certain loss) with a boiler, a steam engine,

and a generator into electrical energy. The energy possessed by a stream of falling water may be transformed with a waterwheel and a generator into electrical energy. There is a definite numerical relation between different sorts of energy. Thus 1 British thermal unit, or Btu (the unit of heat energy), is equivalent to 778 ft · lb. In electrical units energy is expressed in watthours (Wh) or kilowatt hours (kWh).

62. A kilowatthour represents the energy expended if work is done for 1 h at the rate of 1 kW.

63. A horsepower-hour represents the energy expended if work is done for 1 h at the rate of 1 hp. Therefore, 1 hp · h = 60 × 33,000 = 1,980,000 ft · lb.

64. To reduce horsepower to watts and kilowatts and vice versa. Since 1 hp = 746 W,

$$\begin{aligned} \text{hp} &= \frac{W}{746} = W \times 0.00134 \\ W &= \text{hp} \times 746 \end{aligned} \quad (12)$$

$$\begin{aligned} \text{hp} &= \frac{\text{kW}}{0.746} = \text{kW} \times 1.34 \\ \text{kW} &= \text{hp} \times 0.746 \end{aligned} \quad (13)$$

EXAMPLE W = 2460; hp = ?

SOLUTION Substitute in the formula

$$\text{hp} = \frac{W}{746} = 2460 \div 746 = 3.3 \text{ hp}$$

EXAMPLE A motor takes 30 kW. What horsepower is it taking?

SOLUTION Substitute in the formula

$$\text{hp} = \frac{\text{kW}}{0.746} = 30 \div 0.746 = 40.24 \text{ hp}$$

Or instead, using the other formula,

$$\text{hp} = \text{kW} \times 1.34 = 30 \times 1.34 = 40.2 \text{ hp}$$

65. Efficiency is the name given to the ratio of output to input. No machine gives out as much useful energy or power as is put into it. There are some losses in even the most perfectly constructed machines.

$$\text{Efficiency} = \frac{\text{output}}{\text{input}} \quad (14)$$

Although efficiency is basically a decimal quantity and is so used in making calculations, it is usually expressed as a percentage. Percentage efficiency is equal to the decimal

expression of efficiency multiplied by 100. An efficiency of 0.80 expressed as a decimal is an efficiency of 80 percent expressed as a percentage.

Basically efficiency deals with energy. However, when the rate of energy conversion is constant, the values of output and input in terms of power may be used in dealing with efficiency:

$$\text{Input} = \frac{\text{output}}{\text{efficiency}} \quad (15)$$

and

$$\text{Output} = \text{input} \times \text{efficiency} \quad (16)$$

When the formulas are used, output and input must be expressed in the same units and efficiency as a decimal.

66. Output is the useful energy or power delivered by a machine, and input is the energy or power supplied to a machine.

EXAMPLE If 45 kW is supplied to a motor and its output is found to be 54.2 hp, what is its efficiency?

SOLUTION Since 1 hp = 0.746 kW, 54.2 hp = $54.2 \times 0.75 = 40.6$ kW. Then substituting in the formula,

$$\text{Efficiency} = \frac{\text{output}}{\text{input}} = \frac{40.6}{45} = 0.90 = 90 \text{ percent}$$

67. Torque is the measure of the tendency of a body to rotate. It is the measure of a turning or twisting effort and is usually expressed in pound-feet or in pounds-force at a given radius. Torque is expressed as the product of the force tending to produce rotation times the distance from the center of rotation to the point of application of the force. Thus in Fig. 1.6 there is a torque of $50 \times 1 = 50 \text{ lb} \cdot \text{ft}$, tending to turn the windlass owing to the weight attached to the rope. In the motor of Fig. 1.7 the group of conductors under the north pole produces a combined force of 10 lb. The torque produced by this group of conductors

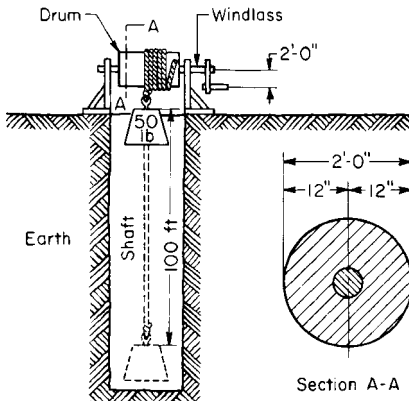


FIGURE 1.6 Example of work and torque.

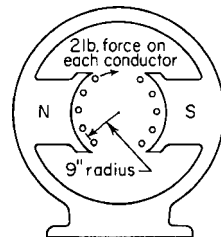


FIGURE 1.7 Torque produced by the force of the conductors of a motor.

will be $10 \times 9/12 = 7.5 \text{ lb} \cdot \text{ft}$. The group of conductors under the south pole will similarly produce $10 \times 9/12 = 7.5 \text{ lb} \cdot \text{ft}$. Both these torques tend to produce rotation in the same direction. Therefore, the total torque produced by the motor will be $7.5 + 7.5 = 15 \text{ lb} \cdot \text{ft}$.

Torque exists even if there is no motion. Thus, in Fig. 1.6 the torque exerted by the weight is $50 \text{ lb} \cdot \text{ft}$ as long as the weight is supported, whether the drum is moving or standing still. In the motor of Fig. 1.7 a torque of $15 \text{ lb} \cdot \text{ft}$ is exerted upon the armature, tending to produce rotation whether the motor is revolving or standing still. If there is no rotation, no work can be done; yet there is a torque tending to produce rotation.

68. Relation between horsepower and torque

$$\text{hp} = \frac{6.28 \times \text{rpm} \times T}{33,000} \quad (17)$$

or

$$T = \frac{33,000 \text{hp}}{6.28 \times \text{rpm}} \quad (18)$$

where T = torque in $\text{lb} \cdot \text{ft}$.

EXAMPLE What is the torque of a 10-hp motor if it delivers a full load at 1150 rpm?

$$T = \frac{33,000 \times 10}{6.28 \times 1150} = 45.7 \text{ lb} \cdot \text{ft}$$

69. Torque and force relations in mechanisms. In any mechanism such as the windlass of Fig. 1.6 or a motor belted or geared to a load, if the losses are neglected so that the efficiency is 100 percent, the power output will be equal to the power input. For such a perfect mechanism, the following relations will hold true:

$$T_1 \times \text{rpm}_1 = T_2 \times \text{rpm}_2 \quad (19)$$

or

$$\frac{T_1}{T_2} = \frac{\text{rpm}_2}{\text{rpm}_1}$$

where T_1 = torque at point 1 in the mechanism, rpm_1 = rpm at point 1 in the mechanism, T_2 = torque at point 2 in the mechanism, and rpm_2 = rpm at point 2 in the mechanism.

In the windlass of Fig. 1.6 the rpm's for all points in the mechanism are the same. Therefore, the torque at any point is equal to the torque at any other point. The torque that must be exerted at the handle of the windlass to raise the weight at a uniform rate of speed would have to be equal to the torque exerted by the weight. (This formula neglects the weight of the rope and the friction.) The force exerted on the handle will be $50/2 = 25 \text{ lb}$.

The motor of Fig. 1.7 is equipped with a pulley on the shaft for driving a belt. The pulley has a diameter of 6 in. The force exerted upon the belt (the tension of the belt) is determined in the following manner. Since the rpm of the pulley is the same as the rpm of the motor armature, the torque produced by the conductors is the same as the torque exerted by the pulley. The force on the belt is therefore $15/0.5 = 30 \text{ lb}$.

70. EMFs may be produced in the following ways:

1. Electromagnetic induction
2. Thermal action
3. Chemical action
4. Changing electric fields
5. Contact between unlike substances
6. Vibration or heating of crystals

71. EMFs may be produced by electromagnetic induction in the following three ways:

1. By moving a conductor across a magnetic field. If the conductor of Fig. 1.8 is moved up or down so as to cut the lines of flux of the magnetic field between the poles of the magnet, an emf will be generated between the two ends of the conductor. This is the method employed for the production of voltage in dc generators (see Sec. 74).
2. By moving a magnetic field across a conductor. If in Fig. 1.8 the conductor is held stationary and the magnet is moved up or down so that the lines of flux of the magnetic field between the poles of the magnet will cut the conductor, an emf will be generated between the two ends of the conductor. This is the method employed for the production of voltage in most ac generators (see Sec. 144).
3. By changing the strength of the magnetic field linked with a conductor. If in Fig. 1.9 an alternating electric current is passed through winding A, it will set up a magnetic field through the iron ring. This magnetic field will be continually changing in strength, owing to the changing magnitude of the current. There will therefore be a continual change in the magnetic flux linked with winding B. This change will generate a voltage between the two ends of winding B. It is this phenomenon that makes possible the operation of transformers (see Div. 5, "Transformers").

Wherever large quantities of electrical energy are required, the necessary emf is produced by one of the means of electromagnetic induction.

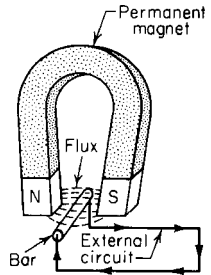


FIGURE 1.8 EMF generated by magnetic flux.

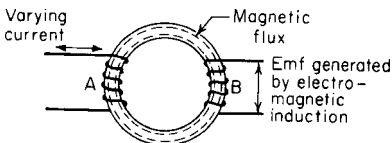
72. A hand rule to determine the direction of an induced emf (see Fig. 1.10). Use the *right hand*. Extend the thumb in the direction of the motion or equivalent motion

FIGURE 1.9 Method of producing an emf by electromagnetic induction.

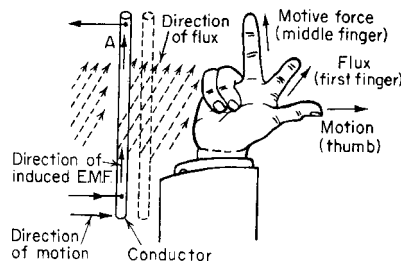


FIGURE 1.10 Application of right-hand rule.

of the conductor and extend the forefinger in the direction of the magnetic flux. Then the middle finger will point in the direction of the induced emf. (Magnetic flux flows from the north pole to the south pole outside a magnet and from south to north inside the magnet.) This rule can be remembered by associating the sounds of the following word groups: thumb-motion, forefinger-force, and middle finger-motive force. The rule is also known as Fleming's rule.

73. AC generator (alternator). A very simple elementary ac generator is shown in Fig. 1.11. As the conductors are revolved through the magnetic field, a voltage will be produced in each conductor. In view of the series circuit formed by the two conductors, the voltages produced by the conductors will act to send current through the circuit in the same direction. The total voltage between the terminals of the machine will be the sum of the voltages produced by the two conductors at that instant. As long as conductor *A* is under the north pole and conductor *B* under the south pole, there will be a terminal voltage which will send current through the external circuit from *C* to *D*. When the conductors are midway between poles, they will not cut any flux and no voltage will be produced. As conductor *A* moves under the south pole and conductor *B* under the north pole, the conductors will again cut flux and voltages will again be produced in the conductors. The direction of these voltages will, however, be just opposite to the direction of the voltages when *A* was under the north pole and *B* under the south pole. The terminal voltage of the machine therefore periodically reverses in direction, and the machine is an ac generator.

74. A dc generator (dynamo) is shown in Fig. 1.12. The production of voltage in the conductors is exactly the same as for the elementary ac generator of Sec. 73. As the conductors revolve, an alternating voltage is produced in them. In order that the terminal voltage can always act upon the external load in the same direction, some device must be inserted between the conductors and the terminals. This device must reverse the connections of the conductors to the external circuit at the instant when the voltage of the conductors is zero and is changing in direction. Such a device is called a *commutator*.

75. The magnitude of the voltage produced by electromagnetic induction depends upon the rate at which the lines of flux are cut by the conductor. Whenever 100 million lines of flux are cut per second, 1 V is produced. The voltage produced is therefore equal to the number of lines of flux cut per second divided by 100 million.

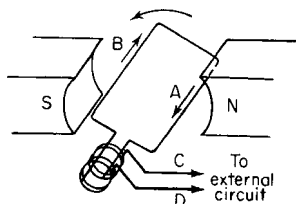


FIGURE 1.11 Elementary ac generator.

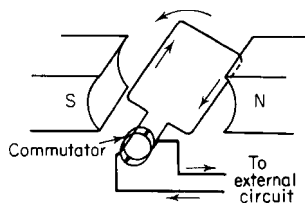


FIGURE 1.12 Elementary dc generator.

76. Thermal action produces emf's in the following ways:

1. *Seebeck effect.* In a closed circuit consisting of two different metals, an emf will be produced if the two junctions between the different metals are kept at different temperatures (see Fig. 1.13). Thermocouples function through this phenomenon. The magnitude of the emf produced will depend upon the material of the metals and the difference in temperature between the hot junction and the cold ends. Since only very small voltages can be produced in this way, the method is not applicable when electrical energy of any quantity is required. However, this method is of great practical value for application in temperature measurements.
2. *Peltier effect.* When current passes through the junction between two different metals, energy conversion takes place between energy in heat form and energy in electrical form. The action is reversible, and the direction of energy conversion depends upon the direction in which the current passes across the junction. This phenomenon is entirely different and distinct from the conversion of electrical energy into heat caused by the passage of a current through the resistance of the junction of the two materials.
3. *Thomson effect.* When the temperature along a metallic conductor varies in magnitude, a very small emf is produced.

77. EMFs produced by chemical action. Certain combinations of chemicals will generate emf's. For instance, if a piece of zinc (Fig. 1.14) and a piece of carbon are immersed in a solution of sal ammoniac, an emf will be produced between the zinc and the carbon. Such a combination is called a *battery*. If the key in Fig. 1.14 is closed, an electric current will flow and the bell will ring. The voltage of dry cells and storage batteries is produced in this way by chemical action.

78. EMFs produced by electric fields. Whenever there is a voltage between two conductors, certain conditions are produced in the space around and between the conductors. This condition in the surrounding space is called an *electric field*. The electromagnetic field surrounding an energized conductor (see Sec. 1-31) will influence a nearby conductor even if there is no direct connection between the two. Discussion and explanation of this

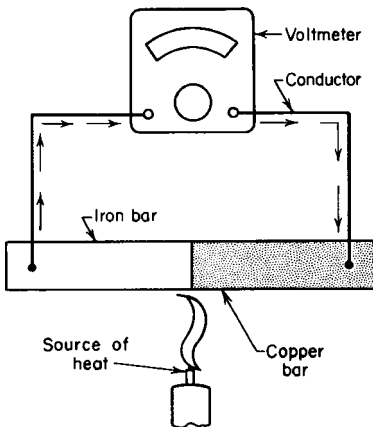


FIGURE 1.13 EMF generated by heat.

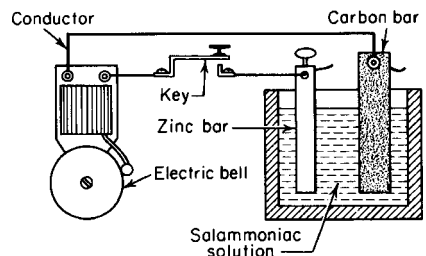


FIGURE 1.14 EMF generated by chemical action.

phenomenon are outside the scope of this book. However, emf's produced by changes in this electric field are of great practical importance, since these changes induce changing voltages in the neighboring conductors. Voltages produced by this means in telephone lines from neighboring electric power lines may cause serious interference with communication over the telephone lines. These induced voltages and currents are also the basis for transformer operation (see Sec. 5-16, etc.).

79. Contact emf. When any two different materials are brought into contact with each other, a very small emf is produced. However, voltages of considerable magnitude may be produced by this phenomenon by the rapid rubbing together of different materials. The rubbing results in rapid change of the contact points between the two materials and thus in an accumulation of the small individual contact emf's into a voltage of considerable magnitude. Practical illustrations of voltages produced by this means are voltages on belts produced by the motion of the belt over the pulleys between automobile bodies and the ground produced by the revolution of the rubber tires over the road. These voltages often are called *frictional voltages*.

80. EMFs produced by crystals. Certain crystals, such as quartz and Rochelle salt crystals, have the property of producing very small emf's between opposite faces of the crystals when subjected to pressure. Some crystals, such as tourmaline, when heated produce a very small emf between opposite faces. Although emf's produced by these means are of very small magnitude, they are of great practical value in microphones and instruments for the measurement of vibrations in machinery.

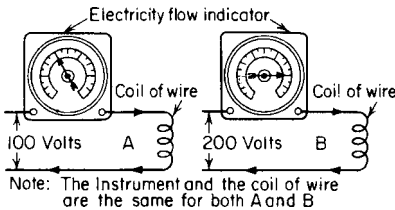


FIGURE 1.15 The effect of increasing voltage.

81. EMF, which is measured in volts, causes electricity to flow. A higher voltage is required to force a given current of electricity through a small wire than through a large one. If the voltage impressed on a circuit is increased, the current will be correspondingly increased (see Fig. 1.15).

82. The distinction between amperes and volts should be clearly understood.

The amperes represent the rate of electricity flow (see Secs. 30 and 37) through a circuit, while the volts represent the tendency causing the flow. There may be a tendency (voltage) and yet no current. If the path of electricity is blocked by an open switch (Fig. 1.16), there will be no current of electricity, though the tendency to produce (voltage) may be high. With a given voltage, a greater current of electricity will flow through a large wire than through a small one.

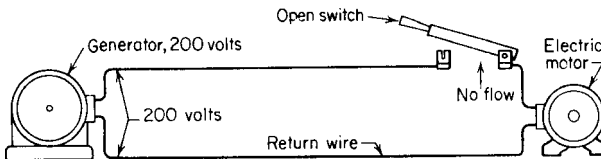


FIGURE 1.16 Electricity flow blocked by an open switch.

83. Direction of electric current. Although in most cases current consists of the actual motion of negative electricity in a certain direction, the conventional direction of a current is the direction in which positive electricity would move to cause the same effects as are produced by the actual motion of electricity. Therefore the direction of current, as it is usually considered, is in the opposite direction to the motion of the electrons.

84. Symbols for indicating the direction of an emf or currents into or out of the end of a conductor are shown in Fig. 1.17.

85. Effects of an electric current. The two principal effects of an electric current are a heating effect and a magnetic effect.

Whenever an electric current passes through a material, there is a heating effect due to the current. This effect is indicated by the increase in temperature of the material. A certain portion of the electrical energy that is put into the circuit is transformed into heat energy owing to the opposition offered to the flow of current by the resistance of the material. This loss of electrical energy (transferred to heat energy) is associated with a drop in voltage. This drop in voltage is produced by the amount of voltage required to force the current through the resistance. The heating effect with its associated drop of voltage and temperature rise of the material always takes place whenever a current is passed through a circuit. These are also known as I^2R (watts) or IR (drop losses).

There is an association between electricity and magnetism because a magnetic field can be produced by an electric current. In fact, whenever an electric current is passed through a conductor, the current tends to set up a magnetic field around the conductor. The presence of this field can be demonstrated by holding a compass near a wire that is carrying a current (Fig. 1.23). The compass needle will be deflected in a definite direction with the direction of current flow.

86. Magnetic effect of electric current. The magnetic lines of flux (magnetic field) produced by a current passing through a straight wire can be determined by passing the wire through a sheet of paper upon which iron filings are sprinkled, as illustrated in Fig. 1.18. The direction of the lines of flux will be in concentric circles around the axis of the conductor. The field will be strongest close to the conductor.

If the current is passed through a coil of wire wound around a piece of iron, as in Fig. 1.19, it will be found that the iron is magnetized in a definite direction. Such a magnet is called an *electromagnet*. This is the method always employed for producing strong magnets or

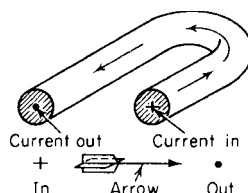


FIGURE 1.17 Symbols indicating direction of current flow.

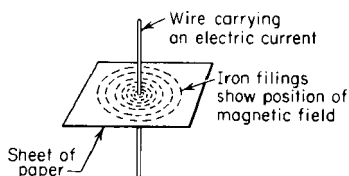


FIGURE 1.18 Magnetic field around a conductor.

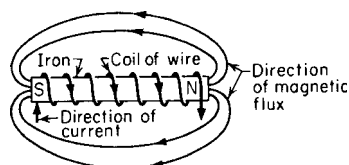


FIGURE 1.19 Elementary electromagnet.

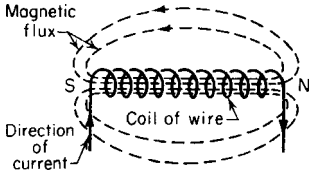


FIGURE 1.20 Magnetic field from current flowing through a coil of wire.

setting up strong magnetic fields. A coil of wire carrying current will act like a magnet and will produce a magnetic north pole at one end and a magnetic south pole at the other (see Fig. 1.20). The direction of the magnetic field produced will be from the north-pole end around through the space outside of the coil to the south-pole end and then back through the interior of the coil to the north-pole end.

87. Hand rule for direction of magnetic field about a straight wire (see Fig. 1.21). If a wire through which electricity is flowing is so grasped with the *right hand* that the thumb points in the direction of electricity flow, the fingers will point in the direction of the magnetic field and vice versa.

88. Hand rule for polarity of a solenoid or electromagnet (see Fig. 1.22). If a solenoid or an electromagnet is so grasped with the *right hand* that the fingers point in the direction of the current, the thumb will point in the direction of the magnetic field through the solenoid, i.e., toward the north pole of the solenoid.

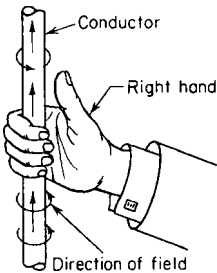


FIGURE 1.21 Hand rule for direction of field.

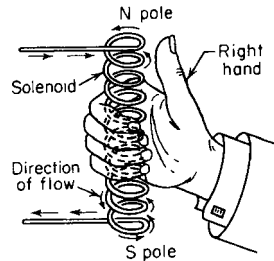


FIGURE 1.22 Hand rule for determining polarity of a solenoid.

89. Rule for determining direction of current flow with a compass (see Fig. 1.23). If a compass is placed under a conductor in which electricity is flowing from south end to north end, the north end of the needle will be deflected to the west. If the compass is placed over the conductor, the north end of the compass will be deflected to the east. If the direction of current flow in the conductor is reversed, the direction of deflection of the needle will be reversed correspondingly.

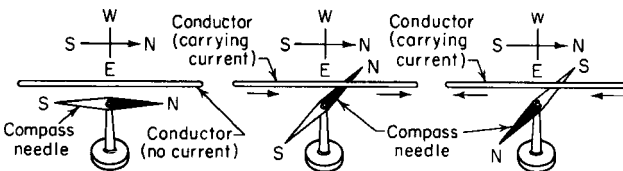


FIGURE 1.23 Performance of a compass needle near a conductor.

90. The resistances of different materials vary greatly. Some, such as the metals, conduct electricity very readily and hence are called *conductors*. Others, such as wood or slate, are, at least when moist, partial conductors. Still others, such as glass, porcelain, and paraffin, are called *insulators* because they are practically nonconducting. No material is a perfect conductor, and no material is a perfect insulator (see Sec. 39).

The resistance of a conductor depends not only upon the material of the conductor but also upon the conductor's dimensions and the distribution of the current throughout the cross section of the conductor. The resistance of a given conductor will have its minimum value when the current is uniformly distributed throughout the cross section of the conductor. Uniform current distribution exists in the conductors of most dc circuits. In the conductors of ac circuits the current is never exactly uniformly distributed. The resistance of a circuit to alternating current is always somewhat greater than it is to direct current (see Sec. 122). The amount by which the ac resistance exceeds the dc value depends upon several factors.

Unless otherwise stated, values of resistance should be taken as the resistance for uniform distribution of the current. They are the values to use for dc circuits.

The resistance of materials also depends upon the temperature of the material.

91. A circular mil is the area of a circle $1/1000$ in diameter. A mil is $1/1000$ of an inch (see Fig. 1.24). The areas of electric conductors are usually measured in circular mils. Since the area of any figure varies as the square of its similar dimensions, the area of any circle can be expressed in circular mils by squaring its diameter expressed in thousandths. Thus, since $3/8 = 375/1000 = 0.375$, the area of a circle $3/8$ in in diameter would be $375 \times 375 = 140,625$ cmil. The area of a circle 0.005 in in diameter would be $5 \times 5 = 25$ cmil.

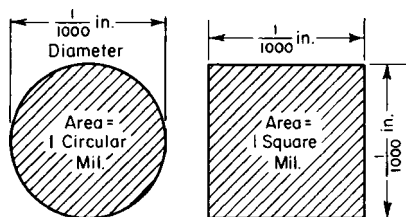


FIGURE 1.24 Circular mil and square mil.

92. A square mil is the area of a square having sides $1/1000$ in long (see Fig. 1.24). Areas of rectangular conductors are sometimes measured in square mils. Areas in square mils are obtained by multiplying the length and breadth of the rectangle expressed in thousandths of an inch. Thus, the area of a rectangle $1/2$ in wide and 2 in long would be $500 \times 2000 = 1$ million mils². In actual area, a circular mil is about $8/10$ as great as a square mil.

93. To reduce square mils or square inches to circular mils, or the reverse apply one of the following formulas.

$$\text{Mils}^2 = \text{cmil} \times 0.7854 \quad (20)$$

$$\text{cmil} = \frac{\text{mils}^2}{0.7854} \quad (21)$$

$$\text{cmil} = \frac{\text{in}^2}{0.0000007854} \quad (22)$$

$$\text{In}^2 = \text{cmil} \times 0.0000007854 \quad (23)$$

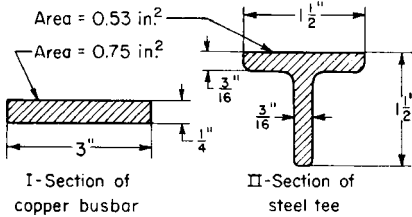


FIGURE 1.25 Conductor sections.

EXAMPLE The sectional area of the busbar in Fig. 1.25, I, in circular mils is

$$\begin{aligned} \text{cmil} &= (\text{in}^2)/0.0000007854 \\ &= (3 \times 1/4) \div 0.0000007854 \\ &= 0.75 \div 0.0000007854 \\ &= 955,000 \text{ cmil} \end{aligned}$$

EXAMPLE The sectional area of the steel *T* shown in Fig. 1.25, II, in circular mils is:

$$\text{cmil} = \text{in} \div 0.0000007854 = 0.53 \div 0.0000007854 = 674,800 \text{ cmil}$$

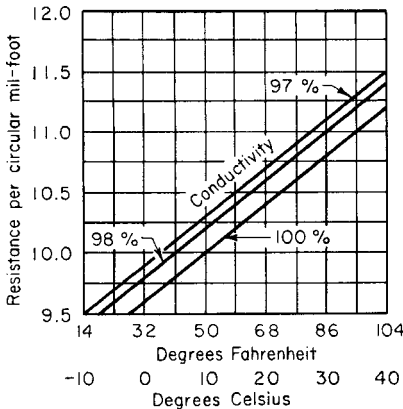


FIGURE 1.26 Curves showing resistance per circular mil-foot of pure copper at various temperatures and conductivities.

94. The circular mil-foot (cmil · ft) is the unit conductor. A wire having a sectional area of 1 cmil and a length of 1 ft is a circular mil-foot of conductor. The resistance of a circular mil-foot of a metal is sometimes called its *specific resistance* or its *resistivity*. The resistance of a circular mil-foot of copper under different conditions is given in Fig. 1.26. Resistances for other metals and alloys are given in Table 97.

95. To compute the resistance of a conductor of any common metal or alloy, use the value given for the resistance of a circular mil-foot of the material in Table 97 in the following formula:

$$R = \frac{p \times l}{\text{cmil}} \quad \text{or} \quad \frac{p \times l}{d^2} \quad (24)$$

where R = resistance of the conductor in ohms; p = resistance of 1 cmil · ft of the material composing the conductor, from Table 97; l = length of conductor in feet; d = diameter in mils; and d^2 = diameter in mils squared or, what is the same thing, the area of the conductor in circular mils.

The other forms of the formula are

$$\begin{aligned} p &= \frac{d^2 \times R}{l} \quad l \\ &= \frac{d^2 \times R}{p} \quad d = \sqrt{\frac{p \times l}{R}} \end{aligned} \quad (25)$$

EXAMPLE If we take from Table 97 the resistance of 1 cmil · ft of copper at 23°C (75°F) as 10.5 Ω, what is the resistance of 500 ft of copper wire 0.021 in in diameter?

SOLUTION Substituting in the formula,

$$R = \frac{pl}{d^2} = \frac{10.5 \times 500}{21 \times 21} = \frac{5250}{441} = 11.9 \, \Omega$$

96. An approximate rule for computing the resistance of round copper wire, in ohms per thousand feet, is to divide 10,500 by the size of the wire in circular mils. This rule should be used only for rough estimating computations.

EXAMPLE Thus, for a 4/0 wire (211,600 cmil), the resistance is approximately $R = 10,500/211,600 = 0.05 \Omega/1000 \text{ ft}$.

97. Approximate Specific Resistances and Temperature Coefficients of Metals and Alloys

(*Electrical Engineer's Handbook*, International Textbook Company)

Metal	p Resistance of 1 cir mil-ft in ohms		a Average temperature coefficient per degree C between 0 and 100°C	a Average temperature coefficient per degree F between 32 and 212°F	Percentage conductivity	Relative resistance
	0°C or 32°F	23.8°C or 75°F				
Silver, pure annealed	8.831	9.674	0.004000	0.002220	108.60	0.925
Copper, pure annealed	9.390	10.351	0.004280	0.002380	102.10	0.980
Copper, annealed	9.590	10.505	0.004020	0.002230	100.00	1.000
Copper, hard-drawn	9.810	10.745	0.004020	0.002230	97.80	1.022
Gold (99.9 percent pure)	13.216	14.404	0.003770	0.002090	72.55	1.378
Aluminum (99.5 percent pure)	15.219	16.758	0.004230	0.002350	63.00	1.587
(Commercial— 97.5 percent pure)	16.031	17.699	0.004350	0.002420	59.80	1.672
Zinc (very pure)	34.595	37.957	0.004060	0.002260	27.72	3.608
Iron (approx. pure)	54.529	62.643	0.006250	0.003470	17.50	5.714
Iron E.B.B. iron wire	58.702	65.190	0.004630	0.002570	16.20	6.173
Platinum (pure)	65.670	71.418	0.003669	0.002038	14.60	6.845
Iron, B.B. iron wire	68.680	76.270	0.004630	0.002570	13.50	7.407
Nickel	74.128	85.138	0.006220	0.003460	12.94	7.726
Tin (pure)	78.489	86.748	0.004400	0.002450	12.22	8.184
Steel (wire)	81.179	90.150	0.004630	0.002570	11.60	8.621
Substance						
Brass	43.310	22.15	4.515
Phosphor bronze	51.005	0.000640	0.000356	18.80	5.319
Aluminum bronze	73.989	0.001000	0.000556	12.96	7.714
German silver (Cu 50, Zn 35, Ni 15)	127.800	0.000400	0.000220	7.50	17.300
Platinoid [Cu, 59, Zn 25.5, Ni 14, W (tungsten) 55]	251.030	0.000310	0.000172	3.82	26.180
Manganin (Cu 84, Ni 4, Mn 12)	280.790	0.000000	3.41	29.330
Constantan (Cu 58, Ni 41, Mn 1)	$\left\{ \begin{array}{l} 300.77 \\ 312.80 \end{array} \right\}$	± 0.000010	0.000005	$\left\{ \begin{array}{l} 3.19 \\ 3.07 \end{array} \right\}$	$\left\{ \begin{array}{l} 31.35 \\ 32.57 \end{array} \right\}$
Gray cast iron	684.000					

98. The resistance of conductors that are not circular in section can be computed by first getting their areas in square inches and then reducing this square-inch value to circular mils as given in Sec. 93. Then proceed with the formula in the preceding paragraph.

99. Change of resistance with change of temperature. The resistance of all pure metals increases as they become hot. The resistance of certain alloys is not affected by the temperature. The resistance of a few materials, carbon for instance, decreases as their temperature increases. The proportion that resistance changes per degree rise in temperature is called the *temperature coefficient of resistance* (see Table 97 for values). Unless otherwise stated, the temperature coefficient is positive; i.e., the resistance increases with increase in temperature. For all pure metals, the coefficient is practically the same and is 0.004 for temperatures in degrees Celsius and 0.0023 in degrees Fahrenheit.

100. To find the resistance of a conductor at any ordinary temperature, use this formula:

$$R_h = R_c + [a \times R_c(T_h - T_c)] \quad \text{or} \quad T_h - T_c = \frac{R_h - R_c}{a \times R_c} \quad (26)$$

where R_h = resistance, in ohms, hot; R_c = resistance, in ohms, cold; T_h = temperature of conductor hot, in degrees; T_c = temperature of conductor cold, in degrees; and a = temperature coefficient of the material of the conductor from Table 97. (This is an approximate method, but it is sufficiently accurate for all ordinary work.)

EXAMPLE The resistance of 1 cmil · ft of annealed copper is $9.59 \, \Omega$ at 32°F . What will be its resistance at 75°F ?

SOLUTION From Table 97 the coefficient is 0.00223. Now substitute

$$\begin{aligned} R_h &= R_c + [a \times R_c(T_h - T_c)] = 9.59 + [0.00223 \times 9.59(75 - 32)] \\ &= 9.59 + [0.00223 \times 9.59 \times 43] = 9.59 + 0.92 = 10.51 \, \Omega, \text{ at } 75^\circ\text{F} \end{aligned}$$

101. The temperature rise in a conductor can be determined with the formula of Sec. 100 by measuring hot and cold resistance. The expression $T_h - T_c$ is the difference between hot and cold temperatures and is therefore the temperature rise or fall.

EXAMPLE The resistance of a set of copper coils measured $20 \, \Omega$ at a room temperature of 20°C . After carrying current for some time the resistance measured $20.78 \, \Omega$. What was the temperature rise in the coil?

SOLUTION The temperature coefficient of copper per degree Celsius from Table 97 is 0.004. Substitute in the formula

$$T_h - T_c = \frac{R_h - R_c}{aR_c} = (20.78 - 20.0) \div (0.004 \times 20) = 0.78 \div 0.08 = 9.75^\circ\text{C}$$

Therefore, the average temperature rise in the coil was $9\frac{3}{4}^\circ\text{C}$.

102. Contact resistance is the resistance at the point of contact of two conductors. When current flows, heat is always developed at such a point. The greater the clamping pressure between the conductors in contact and the greater the area of contact, the less the contact resistance will be. The nature of the surfaces in contact must also be considered. Smooth surfaces have less contact resistance than rough surfaces. Contacts should always be so designed that, for a given current, the area of contact will be large enough to prevent the contact resistance from being so great as to cause excessive heating. Table 104 indicates safe values.

103. Ohm's law. From the preceding sections it is evident that a voltage is required to force a current through a circuit against the resistance caused by the material of the conductor. The relation between current, resistance, and voltage is known as *Ohm's law*. It is merely a restatement, as applied to electric circuits, of the general law which governs all physical phenomena; i.e., the result produced is directly proportional to the effort or cause and inversely proportional to the opposition. For the phenomenon dealing with current passing through resistance, the emf is the cause, the current is the result or effect, and the resistance is the opposition. Thus,

$$I = \frac{E}{R} = \left(\text{amperes} = \frac{\text{volts}}{\text{ohms}} \right) \quad (\text{amperes}) \quad (27)$$

$$R = \frac{E}{I} = \left(\text{ohms} = \frac{\text{volts}}{\text{amperes}} \right) \quad (\text{ohms}) \quad (28)$$

$$E = I \times R = \text{volts} = (\text{amperes} \times \text{ohms}) \quad (\text{ohms}) \quad (28)$$

where I = the effective current in amperes, which flows through the resistance in the circuit or in the portion of the circuit under consideration; R = the resistance in ohms of the circuit or the portion of the circuit under consideration; and E = the effective emf in volts required to force the current through the resistance of the circuit or the portion of the circuit under consideration.

104. Safe Current Densities for Electrical Contacts and for Cross Sections

Kind of contact or cross section	Material	Current density	
		Amp per sq in	Sq mils per amp
Sliding contact (brushes)	Copper brush	150–175	5,700–6,700
	Brass gauze brush	100–125	8,000–10,000
	Carbon brush	30–40	25,000–33,300
Spring contact (switch blades)	Copper on copper	60–80	12,500–16,700
	Composition on copper	50–60	16,700–20,000
	Brass on brass	40–50	20,000–25,000
Screwed contact	Copper to copper	150–200	5,000–6,700
	Composition to copper	125–150	6,700–8,000
	Composition to composition	100–125	8,000–10,000
Clamped contact	Copper to copper	100–125	8,000–10,000
	Composition to copper	75–100	10,000–13,000
	Composition to composition	70–90	11,000–14,000
Fitted contact (taper plugs)	Copper to copper	125–175	5,700–8,000
	Composition to copper	100–125	8,000–10,000
	Composition to composition	75–100	10,000–13,000
Fitted and screwed contact	Copper to copper	200–250	4,000–5,000
	Composition to copper	175–200	5,000–5,700
	Composition to composition	150–175	5,700–6,700
Cross section	Copper wire	1,200–2,000	500–800
	Copper wire cable	1,000–1,600	600–1,000
	Copper rod	800–1,200	800–1,200
	Composition casting	500–700	1,400–2,000
	Brass casting	300–400	2,500–3,300
	Brass rod	575–750	1,300–1,700

105. Application of Ohm's law. Great care must be exercised in the use of Ohm's law. The voltage given by Eq. (27) may or may not be the voltage that must be impressed on the circuit to force the given current through the circuit. When the circuit contains only resistance, the voltage given by Ohm's law is the voltage impressed on the circuit. Ohm's law holds true for all circuits, both direct and alternating, but the voltage obtained by its use is only the voltage required to overcome the resistance of the circuit. Ohm's law cannot be used for a complete motor circuit to determine the resistance of the circuit.

106. Use Ohm's law for:

1. Determination of the voltage required to provide a given current through only a resistance
2. Determination of the current which would be produced by a given voltage impressed upon only a resistance
3. Determination of the voltage drop caused by a current passing through a resistance
4. Calculations of complete dc circuits which do not contain any emf other than the impressed voltage
5. Any circuit or portion of a circuit which consists only of resistance

107. Do not use Ohm's law for:

1. AC circuits in general
2. Complete motor circuits
3. Complete circuits containing any emf other than the impressed voltage

Refer to Secs. 131 and 132 for calculation of ac circuits.

108. Examples of the application of Ohm's law

EXAMPLE What will be the current in the dc circuit of Fig. 1.27?

SOLUTION An entire circuit is shown. It is composed of a dynamo, line wires, and a resistance coil. The emf developed by the dynamo (do not confuse this with the emf impressed by the dynamo on the line) is 120 V. The resistance of the entire circuit is the sum of the resistances of dynamo, line wires, and resistance coil. Substituting in the formula,

$$I = \frac{E}{R} = \frac{120}{1 + 1 + 9 + 1} = \frac{120}{12} = 10 \text{ A}$$

EXAMPLE What current will flow in the circuit of Fig. 1.28?

SOLUTION This again is an entire circuit. Substituting in the formula,

$$I = \frac{E}{R} = \frac{1}{0.5 + 0.5 + 2 + 0.5} = \frac{1}{3.5} = 0.28 \text{ A}$$

Note that the internal resistance of the battery must be considered.

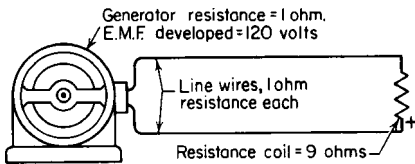


FIGURE 1.27 An entire dynamo circuit.

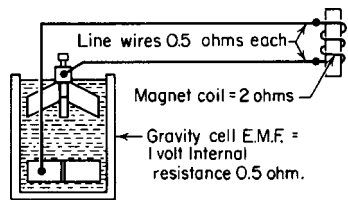


FIGURE 1.28 An entire battery circuit.

EXAMPLE With 10 A flowing, what will be the voltage drop in the line wires in Fig. 1.29?

SOLUTION Each has a resistance of 1.0 Ω ; hence

$$E = I \times R = 10 \times 2 = 20 \text{ V}$$

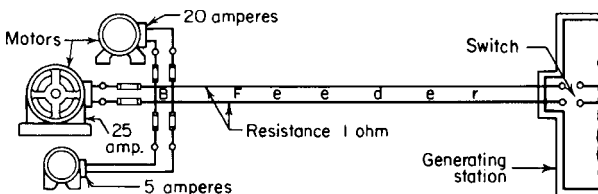


FIGURE 1.29 Feeder to motors.

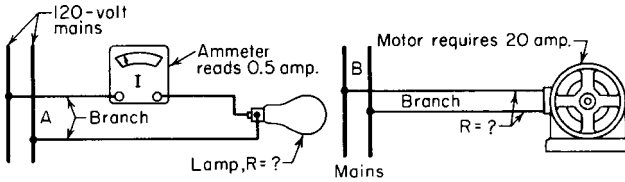


FIGURE 1.30 Portions of circuits.

EXAMPLE What is the resistance of the incandescent lamp of Fig. 1.30A? It is tapped to a 120-V circuit, and the ammeter reads 0.5 A. The branch wires are so short that their resistance can be neglected.

SOLUTION Substitute in the formula,

$$R = \frac{E}{I} = \frac{120}{0.5} = 240 \, \Omega$$

EXAMPLE The dc motor of Fig. 1.30B takes 20 A, and the drop in voltage in the branch wires should not exceed 5 V. What is the greatest resistance that can be permitted in the branch conductors?

SOLUTION Substitute in the formula,

$$R = \frac{E}{I} = \frac{5}{20} = 0.25 \, \Omega$$

This (0.25 Ω) is the resistance of both wires. Each would have a resistance of 0.125 Ω .

EXAMPLE The electric heater of Fig. 1.31 takes 5 A. The resistance of each branch wire is 0.1 Ω . What will be the drop in volts in each branch wire?

SOLUTION Substitute in the formula,

$$E = I \times R = 5 \times 0.1 = 0.5 \, \text{V}$$

In both branch wires or in the branch circuit, the volts lost would be $2 \times 0.5 = 1 \, \text{V}$.

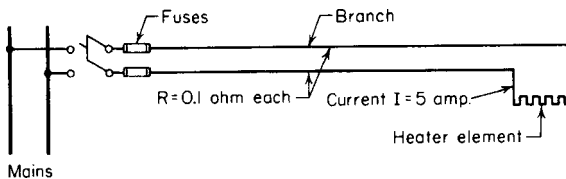


FIGURE 1.31 Portion of a circuit.

EXAMPLE Three dc motors (Fig. 1.29) taking respectively 20, 25, and 5 A (these values are stamped on the nameplates of the motors) are located at the end of a feeder having a resistance of 1.0 Ω on each side. What will be the voltage drop in the feeder?

SOLUTION Substitute in the formula,

$$E = R \times I = (1 + 1) \times (20 + 25 + 5) = 2 \times 50 = 100 \, \text{V}$$

109. DC circuits. A constant-current dc circuit has only one characteristic that affects the value of the current, i.e., the resistance offered by the material of which the circuit is made. Therefore, Ohm's law applies to a complete dc circuit or to any portions of the circuit which do not contain any emf other than the impressed voltage. For a motor circuit, therefore, Ohm's law will apply only to the line-conductor portion of the circuit. Ohm's law will give the voltage required to overcome the resistance of the line conductors, the voltage drop of the circuit. The total impressed voltage will be equal to the sum of the voltage at the motor terminals plus the IR voltage of the line conductors. The voltage impressed on the motor will be equal to the impressed line voltage minus the IR voltage drop in the line-conductors.

110. Power in dc circuits is equal to the product of volts and amperes. Expressing this as a formula,

$$W = I \times E \quad I = \frac{W}{E} \quad E = \frac{W}{I} \quad (30)$$

and also in circuits where all the energy is converted into heat energy,

$$W = I^2 \times R \quad W = \frac{E^2}{R} \quad I = \sqrt{\frac{W}{R}} \quad E = \sqrt{R \times W} \quad (31)$$

$$R = \frac{E^2}{W} \quad R = \frac{W}{I^2} \quad (32)$$

where I = current in amperes, E = voltage or emf in volts, R = resistance in ohms, and W = power in watts.

111. In applying the above equations be careful that the values of current, voltage, and resistance used in any one problem all apply to the same circuit or to the same portion of a circuit.

EXAMPLE How many watts are consumed by the incandescent lamp in Fig. 1.32?

SOLUTION Substitute in the formula,

$$W = I \times E = \frac{1}{2} \times 120 = 60 \text{ W}$$

EXAMPLE How many watts are taken by the motor of Fig. 1.33? How many kilowatts? How much horsepower?




FIGURE 1.32 Incandescent-lamp branch circuit.




FIGURE 1.33 Electric motor.

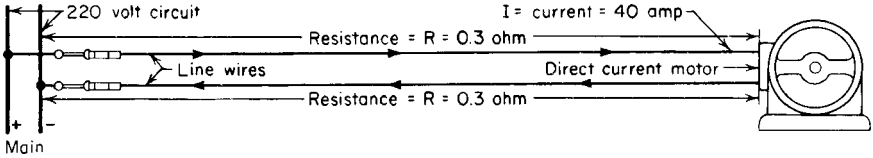


FIGURE 1.34 Feeder.

SOLUTION Substitute in the formula,

$$W = I \times E = 40 \times 220 = 8,800 \text{ W}$$

$$\text{kW} = \frac{W}{1000} = \frac{8,800}{1000} = 8.8 \text{ kW}$$

$$\text{hp} = \frac{W}{746} = \frac{8,800}{746} = 11.8 \text{ hp}$$

EXAMPLE In the feeder of Fig. 1.34, what power will be lost in the line wires to the motor?

SOLUTION Substitute in the formula,

$$W = I^2 \times R = (40 \times 40) \times (0.3 + 0.3) = 1600 \times 0.6 = 960 \text{ W}$$

112. Waveform of alternating currents and voltages. An alternating current or voltage is one which is reversed at regular intervals. The curve formed by plotting the instantaneous values of the voltage or current against time is called the *waveform of the voltage or current*. It is best to have the value of an alternating current or voltage vary with time according to what is known as the sine law. The instantaneous values of an alternating current varying according to this law are shown in Fig. 1.35. A voltage or current which varies in this manner is called a *sinusoidal voltage or current*. Most modern ac generators produce a voltage which is very nearly sinusoidal and is generally so considered. The current in some ac circuits is very nearly sinusoidal and in others may differ considerably from the sine law. In most cases, however, for practical work both alternating voltages and currents can be considered as following the sine law. If it is not satisfactory to do this, the calculations become complicated and discussion is outside the scope of this book.

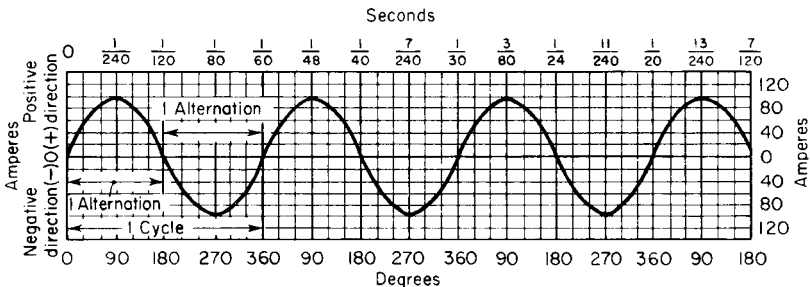


FIGURE 1.35 Graph of a 60-Hz alternating current having a maximum value of 100 A.

113. A cycle is a complete set of values through which an *alternating current* (see Sec. 34 for an explanation of alternating current) repeatedly passes (see Fig. 1.35). The expression “60 hertz (Hz)” means that the current referred to makes 60 complete cycles in a second. It therefore requires $\frac{1}{60}$ s to complete 1 cycle (see Fig. 1.35). With a 25-Hz current, $\frac{1}{25}$ s is required to complete 1 cycle (see Fig. 1.36).

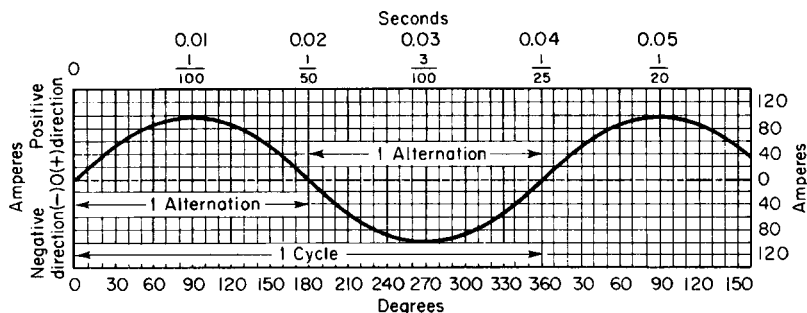


FIGURE 1.36 Curve of a 25-Hz alternating current.

114. The frequency of an alternating current is the number of cycles completed in a second. A frequency of 60 Hz is practically standard for lighting and power installations. Most electric power companies generate, transmit, and distribute their power at this frequency. For railroad electrification, 25 Hz is sometimes employed. If 25 Hz is used for lighting, lamps will flicker. Some of the older stations in the United States still generate at 50 Hz. In Europe 50 Hz has been used for light and power and $16\frac{2}{3}$ Hz for railroads.

115. Electrical degrees. The instantaneous values of an ac voltage can be studied in Fig. 1.37, which shows an elementary four-pole generator and the waveform of voltage for one complete revolution of the conductor. When the conductor is in the position marked A, halfway between adjacent poles, it will not cut any flux and therefore no voltage will be induced in the conductor. As the conductor moves from this position, it will start to cut flux and will do so at a greater and greater rate until the conductor is in the position B. At this point, flux will be cut at the maximum rate, and the voltage produced will be maximum. As the conductor moves from position B to position C, it will cut flux at a decreasing rate, until when position C is reached (halfway between poles), the conductor will not cut flux at all. As the conductor moves on from position C, it will start to cut flux, but the direction of the flux is reversed. The direction of the induced voltage will therefore reverse at the instant when the conductor passes through position C. If we pursue the same reasoning for the rest of the revolution, the voltage produced in the conductor will follow the waveform shown in Fig. 1.37. The arc that the

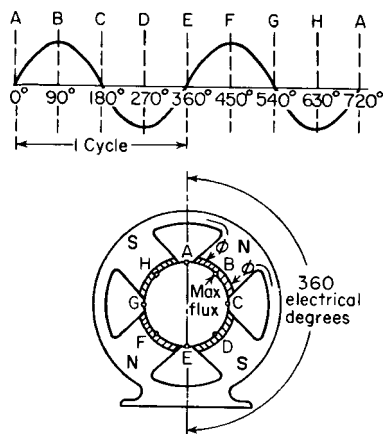


FIGURE 1.37 Elementary ac generator, illustrating electrical degrees and waveform.

conductor must pass through to generate one complete cycle of voltage is called *360 electrical degrees*. In any ac generator there are therefore 360 electrical degrees in the arc between the centerline of one pole and the centerline of the next pole of the same polarity. The number of electrical degrees in one complete revolution for any generator is equal to 360 times the number of pairs of poles for which the machine is wound. One electrical degree is equal to 1 (pair of poles) part of a mechanical degree.

If the elementary generator of Fig. 1.37 produced a 60-Hz voltage, the conductor would have to make 1800 rpm. This would mean that the conductor would make one revolution in $\frac{60}{1800}$ or $\frac{1}{30}$ s. Since the voltage goes through two cycles in one revolution (see Fig. 1.37), it takes $\frac{1}{60}$ s for one cycle. This means that in $\frac{1}{60}$ s the conductor moves from position A to position E.

Refer to Fig. 1.37 and take A position as zero instant of time and as zero electrical degrees. When the conductor has moved from position A to position B, it will have passed through $\frac{360}{4}$ or 90 electrical degrees, and the elapsed time will be $\frac{1}{4} \times \frac{1}{60}$ or $\frac{1}{240}$ s. Electrical degrees and time are therefore proportional. Instead of the instantaneous values of the voltage being plotted against time, they can be plotted against electrical degrees. These two methods of plotting such curves are shown in Figs. 1.35 and 1.36.

116. The word phase, which is used in ac terminology, refers basically to time. When two alternating currents are in phase, they reach their corresponding zero, maximum, and intermediate values at exactly the same instants. Two in-phase ac quantities are shown in Fig. 1.38. If currents or voltages are not in phase, they reach corresponding values at different instants of time, as shown in Fig. 1.39.

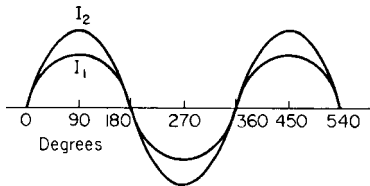


FIGURE 1.38 Two alternating currents in phase.

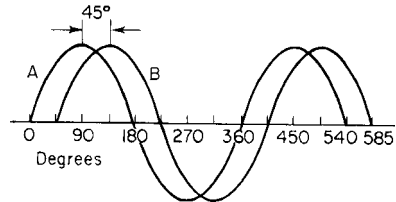


FIGURE 1.39 Two alternating currents out of phase.

Since electrical degrees are proportional to time, it is a standard practice to state the out-of-phase relation of two quantities in electrical degrees. In specifying the phase relation of two quantities, it is necessary to state whether the relationship is leading or lagging. For example, in Fig. 1.39, it is not complete to state that quantity A is 45 degrees out of phase with B. The correct statement is either “A leads B by 45 degrees” or “B lags A by 45 degrees.” The number of degrees that two quantities are out of phase is the number of electrical degrees that must elapse in the time between the occurrence of a certain instantaneous value of one quantity and the occurrence of the corresponding instantaneous value of the other quantity. For example, in Fig. 1.39 quantity B does not reach its maximum positive value until 45 degrees after quantity A has reached its maximum positive value. Quantity B therefore lags quantity A by 45 degrees. The number of electrical degrees that two quantities are out of phase is called the *phase angle*.

117. A three-phase current consists of three different alternating currents out of phase 120 degrees with each other. A two-phase current consists of two different alternating currents out of phase 90 degrees with each other.

118. The maximum value of an alternating current or voltage is the greatest value that it attains. This is an instantaneous value (see Fig. 1.40).

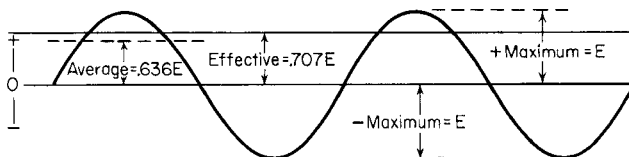


FIGURE 1.40 Alternating emf values.

119. The so-called average value of an alternating current or voltage is the average of the instantaneous values for $1/2$ cycle. Average values are not of much use to practical people.

120. Effective values of alternating current and voltage are the ones ordinarily referred to when we speak of alternating quantities. Alternating voltages and currents are constantly changing in value, within a certain range, from instant to instant even if the load is constant. It is not practicable to deal with or indicate with instruments these constantly changing values. The effective value of an alternating current or voltage is the value of a direct current or voltage that would have the same heating effect. A sinusoidal alternating current which has a maximum value of 14.14 A will have the same heating effect as a 10-A direct current. The effective value of the alternating current is therefore 10 A. Practical people deal almost exclusively with effective values. Alternating-current measuring instruments indicate effective values. The relation between effective and maximum values for sinusoidal quantities is given below and illustrated in Fig. 1.40. Effective value is also referred to as rms (root mean square) value.

$$\text{Effective value} = 0.707 \times \text{maximum value} \quad (33)$$

$$\text{Maximum value} = \frac{\text{effective value}}{0.707} \quad (34)$$

EXAMPLE What is the effective voltage of a circuit that has a maximum voltage of 156?

SOLUTION Substitute in the formula,

$$\text{Effective value} = 0.707 \times \text{maximum value} = 0.707 \times 156 = 110 \text{ V}$$

EXAMPLE If a voltmeter on an ac circuit reads 2200, what is the maximum instantaneous voltage?

SOLUTION Substitute in the formula,

$$\text{Effective value} = \frac{\text{effective value}}{0.707} = \frac{2200}{0.707} = 3110 \text{ V}$$

121. Characteristics of ac circuits. All three of the circuit characteristics, resistance, inductance, and capacitance, may affect the value of the current in an ac circuit.

122. Resistance of ac circuits. As mentioned in Sec. 90, the resistance of a circuit to alternating current may be considerably different from its resistance to direct current. This increase in the resistance may be due to two factors. One factor, which takes place inside the conductors, is called *skin effect* and is discussed in the following sections. The other factor is due to the proximity of magnetic and electrical conducting material to the circuit. The varying magnetic field produced by the alternating current results in electric and magnetic power losses in these neighboring materials. These power losses must be supplied by the power delivered to the electric circuit and therefore result in increasing the effective resistance of the circuit over what it was for direct current. Refer to Sec. 157 for examples of effective resistance to an alternating current.

123. Skin effect. When an alternating current flows through a conductor, there is an inductive action whereby the current in the conductor is forced toward its surface. The current density is greater at the surface than at the center, and under certain conditions practically no current may flow along the axis of the conductor. Although skin effect and self-induction both originate from the same magnetic field, they are not otherwise related. Since skin effect increases voltage drop and energy loss, it amounts to an increase in resistance and is so considered. Nonconducting cores are sometimes placed in the centers of large cables for alternating currents so that all the metal will be effectively used (see Div. 2 for such conductors).

124. Skin effect in conductors of magnetic materials is much greater than in those of nonmagnetic materials owing to the stronger magnetic field that a given current will set up in a magnetic metal.

125. The effect of inductance in an ac circuit is that it produces opposition to the flow of the current and tends to make the current lag behind the voltage in time or phase. If a pure inductive circuit (one with only inductance and no resistance) could be built, the current would lag 90 degrees, or $1/4$ cycle, behind the voltage. In actual circuits containing both resistance and inductance, the current will lag some angle between 0 and 90 degrees behind the voltage. The angle of lag will depend upon relative resistance and inductance.

126. The opposition to alternating current which is produced by inductance is called *inductive reactance* (see Sec. 47). For a sinusoidal current the value of the inductive reactance is

$$X_L = 2\pi fL \quad (35)$$

where X_L = inductive reactance in ohms, f = frequency in hertz, and L = inductance in henrys.

127. The angle of lag of a current in an inductive circuit can be calculated from the following equation:

$$\text{Tangent of angle of lag} = \frac{X_L}{R} \quad (36)$$

where X_L = inductive reactance in ohms and R = ac resistance (not dc resistance). Also see method of Sec. 133.

128. The effect of capacitance in an ac circuit is that it produces opposition to the flow of the current and tends to make the current lead the voltage. For a pure capacitive circuit (one with only capacitance and no resistance) the current will lead the voltage by 90 degrees, or $1/4$ cycle. For a circuit with both resistance and capacitance, the current will lead the voltage by some angle between 0 and 90 degrees, depending upon the relative value of the resistance and the capacitance.

129. The opposition to alternating current which is produced by capacitance is called *capacitive reactance* (see Sec. 50). For a circuit with sinusoidal relations the value of the capacitive reactance is

$$X_c = \frac{1}{2\pi fc} \quad (37)$$

where X_c = capacitive reactance in ohms, f = frequency in hertz, and c = capacity in farads.

130. The angle of lead of a current in a capacitive circuit can be calculated from the following equation:

$$\text{Tangent of angle of lead} = \frac{X_c}{R} \quad (38)$$

where X_c = capacitive reactance in ohms and R = ac resistance (not dc resistance). Also see method of Sec. 133.

131. Impedance is the name given to the total opposition to the flow of alternating current. It is the combined opposition of resistance, inductive reactance, and capacitive reactance. Impedance is measured in ohms and is expressed by the symbol Z . The impedance of a series circuit may be calculated by the following formulas:

For a circuit containing resistance, inductance, and capacitance

$$Z = \sqrt{R^2 + (X_L - X_c)^2} \quad (39)$$

For a circuit containing resistance and inductance

$$Z = \sqrt{R^2 + X_L^2} \quad (40)$$

For a circuit containing resistance and capacitance

$$Z = \sqrt{R^2 + X_c^2} \quad (41)$$

For a circuit containing only resistance

$$Z = R \quad (42)$$

For a circuit containing only inductance

$$Z = X_L \quad (43)$$

For a circuit containing only capacitance

$$Z = X_c \quad (44)$$

where Z = impedance in ohms, X_L = inductive reactance in ohms, and X_c = capacitive reactance in ohms.

132. Relations between voltage, current, and impedance are

$$E = IZ \quad (45)$$

$$I = \frac{E}{Z} \quad (46)$$

$$Z = \frac{E}{I} \quad (47)$$

where E = voltage impressed on circuit in volts, I = current in amperes, and Z = impedance in ohms.

The above equations apply to complete ac circuits or any portions of a circuit which do not contain any emf other than the impressed voltage. For a motor circuit, therefore, they will apply only to the line-conductor portion of the circuit. They will give the voltage required to overcome line impedance, the IZ voltage of the circuit.

It is noticed that Ohm's law (Sec. 105) can be used for a complete ac circuit only when the circuit contains only resistance.

133. The phase angle of a circuit containing only resistance, inductance, and capacitance can be found from the following formula:

$$\text{Cosine of phase angle} = \frac{R}{Z} \quad (48)$$

where Z = impedance in ohms and R = resistance in ohms.

134. Power in ac circuits. The power of an ac circuit is very seldom equal to the direct product of the volts and amperes. To calculate the power of a single-phase ac circuit, the product of the volts and amperes must be multiplied by the power factor (see Sec. 136).

135. Apparent power is the term applied to the product of voltage and current in an ac circuit. It is expressed in voltamperes (VA) or in kilovolt-amperes (kVA) or megavolt-amperes (MVA).

136. Power factor is the ratio of the true power or watts to the apparent power or voltamperes. The power factor is expressed as a decimal or in percentage. Thus power factors of 0.8 and of 80 percent are the same. In giving the power factor of a circuit, state whether it is leading or lagging. The current is always taken with respect to the voltage. A power factor of 0.75 lagging means that the current lags the voltage. The power factor may have a value anywhere between 0 and 1.0 but can never be greater than 1.0.

EXAMPLE In Fig. 1.41, which shows a single-phase circuit, the ammeter I reads 10 A, and the voltmeter E 220 V. The apparent power is the product of volts and amperes, or

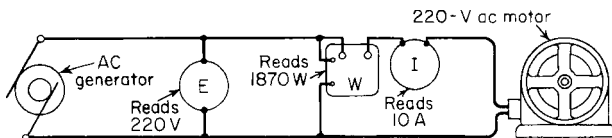


FIGURE 1.41 Example of power factor.

$IE = 10 \times 220 = 2200$ VA. But the wattmeter W reads 1870 W. A wattmeter always indicates real or true power. Therefore, the power factor (for a single-phase circuit) is

$$\text{Power factor} = \frac{\text{true watts}}{\text{apparent power}} = \frac{1870}{2200} = 0.85 \text{ or } 85 \text{ percent}$$

137. The cosine of the angle of lag or lead is equal to the power factor.

Cosines for different angles can be found in trigonometric tables in handbooks (see Sec. 1). The symbol θ , the Greek letter “theta,” is often used to designate the angle of lag or lead; hence power factor is sometimes referred to as $\cos \theta$ (cosine theta). This means the cosine of the angle θ .

138. The power factor in a noninductive circuit,

one containing resistance only, is always 1, or 100 percent; i.e., the product of volts and amperes in such a circuit gives true power.

139. The power factor in a circuit containing inductance or capacitance

may be anything between 0 and 1 (0 and 100 percent), depending on the amount of inductance or capacitance in the circuit.

140. Typical power factors of various kinds of central-station loads are as follows:

Incandescent Lighting. 1.0.

Incandescent Lighting with Small Step-Down Transformers. 0.95 to 0.98.

Incandescent Street-Lighting Series Circuits. 0.6 to 0.8.

Sodium-Vapor Street Lighting, Parallel Circuits. 0.8 to 0.85.

Sodium-Vapor Street Lighting, Series Circuits. 0.5 to 0.7.

Fluorescent Lighting. 0.5 to 0.95, depending on type of auxiliary used.

Mercury-Vapor Lighting. 0.5 to 0.95, depending on type of auxiliary used.

Single-Phase Induction Motors; Squirrel-Cage Rotor. $\frac{1}{20}$ to 1 hp, power factor, 0.55 to 0.75, average 0.68 at rated load; 1 to 10 hp, power factor, 0.75 to 0.86, average 0.82 at rated load.

Polyphase Induction Motors; Squirrel-Cage Rotor. 1 to 10 hp, power factor, 0.75 to 0.91, average 0.85 at rated load; 10 to 50 hp, power factor, 0.85 to 0.92, average 0.89 at rated load.

Polyphase Induction Motors; Phase-Wound Rotors. 5 to 20 hp, power factor, 0.80 to 0.89, average 0.86 at rated load; 20 to 100 hp, power factor, 0.82 to 0.90, average 0.87 at rated load.

Induction-Motor Loads in General. Power factor, 0.60 to 0.85, depending on whether motors are carrying their rated loads.

Rotary Converters, Compound-Wound. Power factor at full load can be adjusted to practically 100 percent. At light loads it will be lagging and at overloads slightly leading.

Rotary Converters, Shunt-Wound. Power factor can be adjusted to any desired value and will be fairly constant at all loads with the same field rheostat adjustment. Rotary converters, however, should not be operated below 0.95 power factor leading or lagging at full load or overload.

Small Heating Apparatus. This load has the same characteristics as an incandescent-lighting load. The power factor of the load unit is practically 1, but the distributing transformers will lower it to some extent.

Arc Furnaces. Power factor, 0.80 to 0.90.

Induction Furnaces. Power factor, 0.60 to 0.70.

Electric-Welding Transformers. Power factor, 0.50 to 0.70.

Synchronous Motors. Adjustment between 0.80 power factor leading to a power factor of 1. (1) Operating power factors above 0.95 will be obtained only when practically all the load consists of synchronous motors or converters which can be operated at practically a power factor of 1. (2) Power factors of 0.90 to 0.95 can be safely predicted only when the load is entirely incandescent lighting or heating or when a large noninductive load, such as synchronous motors or converters, is used with a smaller proportion of inductive motor load. (3) For the average central-station load, consisting of lighting and motor service, a power factor of 0.80 should be assumed. (4) A power factor of 0.70 should be assumed for a plant having a large proportion of induction motors, fluorescent lighting, electric furnaces, or electric-welding load.

141. Kilowatts and kilovolt-amperes (General Electric Company). The term *kilowatt* (kW) indicates the measure of power which is all available for work. Kilovolt-amperes (kVA) indicate the measure of apparent electric power made up of two components, an energy component and a wattless or induction component. Kilowatts indicate real power and kilovolt-amperes apparent power. They are identical only when current and voltage are in phase, i.e., when the power factor is 1. Ammeters and voltmeters indicate total effective current and voltage regardless of the power factor, while a wattmeter indicates the effective product of the instantaneous values of emf and current. A wattmeter, then, indicates real power.

Standard guarantees on ac generators are made on the basis of loads at 80 percent power factor. However, it must not be inferred that a given generator will deliver its rated power output at all power factors. The generator rating in kilowatts will be reduced in proportion to the power factor and probably in a greater ratio if the power factor is very low. The method of rating ac generators by kilovolt-amperes instead of by kilowatts is now in general use.

In discussing an ac load, it is well to state it in terms of kilowatts, power factor, and kilovolt-amperes; thus: 200 kW, 80 percent power factor (250 kVA). This shows that the current in the circuit corresponds to 250 kVA and heats the generator and conductors to that extent but that only 200 kW is available for doing work. An illustration of the distinction between kilowatts and kilovolt-amperes is given in Fig. 1.42.

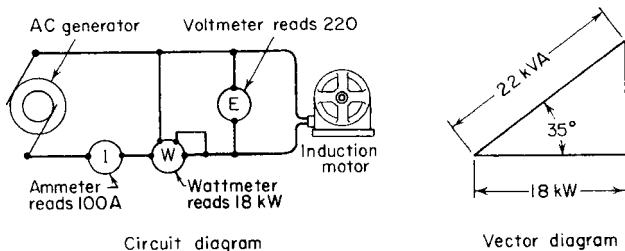


FIGURE 1.42 Distinction between kilowatts and kilovolt-amperes.

142. Effects of low power factor. It is sometimes considered that the wattless component of a current at low power factor is circulated without an increase of mechanical input over that necessary for actual power requirements. This is inaccurate because internal work or losses due to this extra current are produced and must be supplied by the prime mover. Since these extra losses manifest themselves in heat, the capacity of the machine is reduced. Moreover, wattless components of current heat the line conductors, just as do energy components, and cause losses in them. The loss in any conductor (see Sec. 39) is always

$$W = I^2 R \quad (49)$$

where W = the loss in watts, I = the current in amperes in the conductor, and R = the resistance in ohms. It requires much larger equipment and conductors to deliver a certain amount of power at a low power factor than at a power factor close to 1.

143. Correction of low power factor. In industrial plants, excessively low power factor is usually due to underloaded induction motors because the power factor of motors is much less at partial loads than at full load. If motors are underloaded, new motors of smaller capacity should be substituted. Power factor can be corrected (1) by installing synchronous motors which, when overexcited, have the property of neutralizing the wattless or reactive components of currents or (2) by connecting static capacitors across the line.

144. A single-phase alternating emf will be induced in an armature coil (S_1 and F_1 , Fig. 1.43) which has its sides set, in a generator frame, the same distance apart as are a north and a south magnet that are forced to sweep continuously past the coil sides at a uniform speed. The distance between a north and a south pole is always called 180 electrical degrees. The distance between a north pole and the next north pole is called 360 electrical degrees. In any given generator, the circumferential distance is the same between any two adjacent north and south poles.

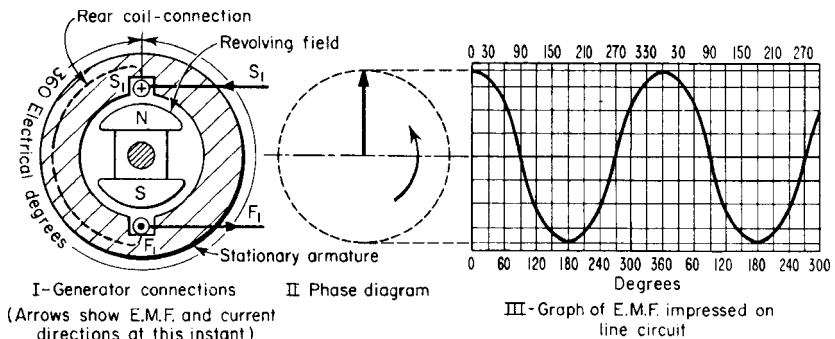


FIGURE 1.43 Elementary two-pole single-phase ac generator.

145. In actual ac single-phase generators there are a number of pairs of north and south poles arranged on a revolving-field structure. A corresponding number of coils, each having its sides set approximately 180 electrical degrees apart, is arranged around the

frame. Then the coils are connected in series so that their emf's will be additive. The combination of their emf's is the voltage which is impressed by the generator on the circuit. Some small revolving-armature ac generators have rotating armatures and stationary fields, but their principle is the same as that of the revolving-field machines.

146. For a single-phase circuit the relations between kilowatts and kilovolt-amperes are

$$\text{Kilovolt-amperes} = \frac{\text{volts} \times \text{amperes}}{1000} \quad \text{or} \quad \text{kVA} = \frac{E \times I}{1000} \quad (50)$$

$$\text{kW} = \text{kVA} \times \text{power factor} \quad \text{kVA} = \frac{\text{kW}}{\text{power factor}} \quad (51)$$

$$\text{Power factor} = \frac{\text{kW}}{\text{kVA}} \quad (52)$$

For an example see Fig. 1.42.

147. For a single-phase circuit, the following equations show the relations between power, current, voltage, and power factor:

$$I = \frac{W}{E \times \text{pf}} \quad E = \frac{W}{I \times \text{pf}} \quad W = E \times I \times \text{pf} \quad \text{pf} = \frac{W}{E \times I} \quad (53)$$

where I = current in amperes, W = power in watts, E = voltage between lines, and pf = power factor.

EXAMPLES Figures 1.43 and 1.44 show applications of the above equations. The product of volts and amperes (EI) is called voltamperes; see above paragraph.




FIGURE 1.44 A power-factor problem.

EXAMPLE In the circuit of Fig. 1.44, what is the actual load in watts? In kilowatts? Current = 40 A, voltage at load = 110, and power factor of load = 95 percent.

SOLUTION Substitute in the formula,

$$W = E \times I \times \text{pf} = 110 \times 40 \times 0.95 = 4180 \text{ W}$$

$$\text{kW} = \frac{W}{1000} = \frac{4180}{1000} = 4.18 \text{ kW}$$

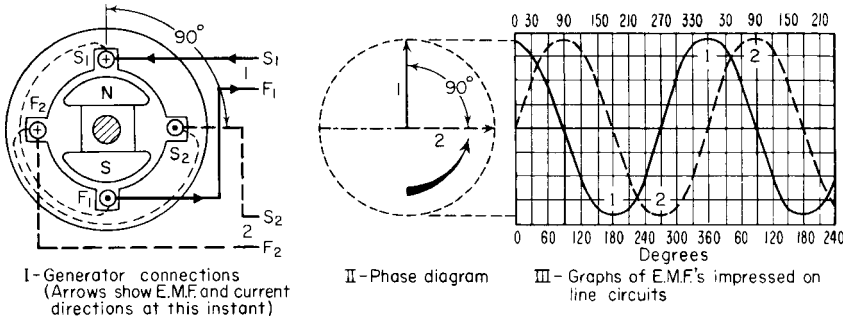


FIGURE 1.45 Two-pole two-phase ac generator illustrating elementary principles.

148. A two-phase current consists of two currents that differ in phase by 90 degrees (see curves of Fig. 1.45). If two sets of coils are arranged on an armature (Fig. 1.45) so that their "starts" S_1 and S_2 are 90 electrical degrees apart, the emf in one set will attain its maximum value 90 degrees later than that in the other. The emf will force two-phase currents through an external circuit. Instead of being on the same armature, each of the sets of coils may be on different armatures which are so mechanically connected together as to preserve the 90-degree phase relation (see Div. 7, "Generators and Motors," for information on practical machines).

149. Coil connections for two-phase windings. Figure 1.46 shows three methods of connecting two-phase generator coils.

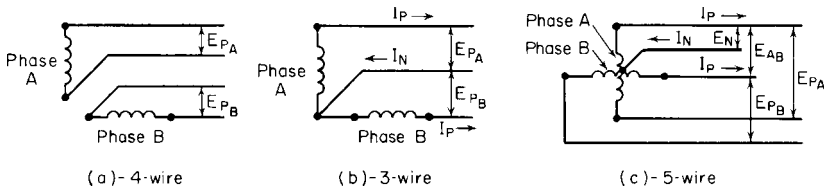


FIGURE 1.46 Connections for two-phase-generator windings.

150. Relations of voltage, current, and power that apply to balanced two-phase circuits

$$I_p = \frac{W}{2E_p \times \text{pf}} \quad E = \frac{W}{2I_p \times \text{pf}} \quad W = 2E_p \times I_p \times \text{pf} \quad \text{pf} = \frac{W}{2E_p \times I_p} \quad (54)$$

$$\text{Kilovolt-amperes} = \frac{2E_p \times I_p}{1000} \quad \text{or} \quad \text{kVA} = \frac{\text{kW}}{\text{pf}} \quad (55)$$

$$kW = kVA \times pf \quad (56)$$

$$pf = \frac{kW}{kVA} \quad (57)$$

where I_p = phase current in amperes as designated in Fig. 1.46, E_p = phase voltage as designated in Fig. 1.46, W = power in watts, and pf = power factor.

151. Application of the two-phase system. Many years ago certain engineers advocated two-phase generators and distributing systems in preference to three-phase. They then believed that unbalanced load on the phases would have less adverse effect on the performance of the two-phase equipment. Experience has proved that the three-phase system is preferable to and more economical than the two-phase for both transmission and distribution. Two-phase equipment now is seldom purchased except for additions to existing two-phase installations. See Sec. 23 of Div. 3 for relative weights of copper for different systems.

152. A three-phase current consists of three alternating currents that differ in phase by 120 degrees, as indicated in Fig. 1.47. If three coils are arranged with their starts, S_1 , S_2 , and S_3 , 120 degrees apart on an armature (Fig. 1.47) and are connected each to an external circuit, a single-phase alternating emf will be impressed by each coil on its own external circuit when the field is rotated at uniform speed. The emf's will differ in phase by 120 degrees and therefore will constitute a three-phase system. The currents in the circuits will be 120 degrees out of phase with each other. Three single-phase generators, if mechanically coupled together so as to maintain a 120-degree phase relation, would produce a three-phase system.

Practical three-phase generators usually have more than two poles and consequently have more coils than are indicated in Fig. 1.47. Most ac generators have revolving fields and stationary armatures.

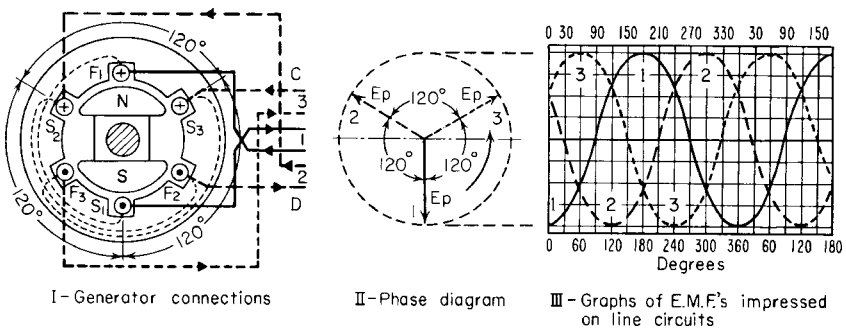


FIGURE 1.47 Two-pole three-phase alternator ensures 120° phase difference between emf's in line wires.

153. Phase connections. Figure 1.48 shows four methods of connecting the phases of a three-phase generator or other apparatus and the external circuits for each. Method I, although it would work, is seldom used for economic reasons given. It shows the elementary

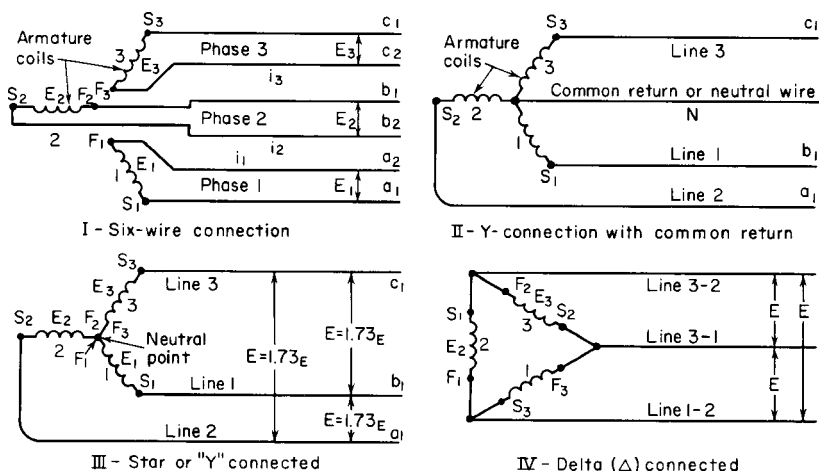


FIGURE 1.48 Connections for three-phase-generator windings.

three-phase circuit and illustrates the principle. Each of the three phases would carry a current differing in phase by 120 degrees from the currents in the other two. One common return, N , as shown at II, can be substituted for the three return wires of I . Now with a balanced load (one loading each of the phases equally) this return wire would carry no current; hence it may be omitted (star or Y connection of III). In IV is shown the delta connection.

154. The voltage and current relations in a star- or Y-connected three-phase circuit are indicated in Fig. 1.49. The armature coils of the generator shown in Fig. 1.49 are 120 electrical degrees apart (Fig. 1.47). These emf's will combine as shown in the phase diagram (Fig. 1.49) to produce the voltage E between line wires. The resultant voltage developed by any two of the coils is then equal to $\sqrt{3}$, or 1.73 times the voltage developed

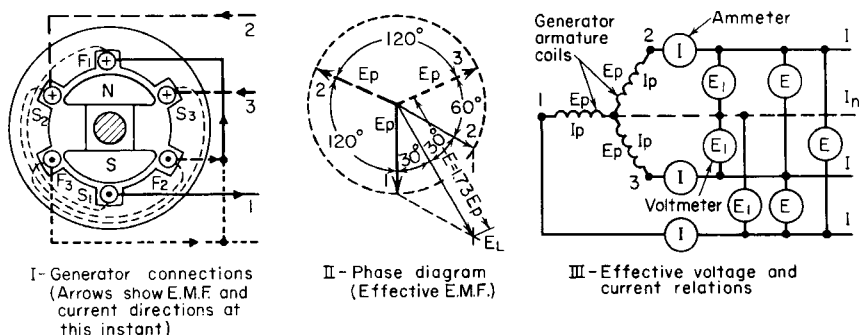


FIGURE 1.49 Star- or Y-connected three-phase generator and diagrams.

in one coil. The following formulas show the relation of voltage and current in the circuit. (All are effective values, and balance is assumed. See Fig. 1.49.)

$$I = I_p \quad (58)$$

$$E = E_p \times \sqrt{3} = E_p \times 1.73 \quad (59)$$

$$E_p = \frac{E}{\sqrt{3}} = \frac{E}{1.73} = E \times 0.577 \quad \text{or approximately } E_p = 0.58E \quad (60)$$

$$I_N = 0 = \sqrt{(I_p1)^2 + (I_p2)^2 + (I_p3)^2 - (I_p1 \cdot I_p2) - (I_p2 \cdot I_p3) - (I_p3 \cdot I_p1)} \quad (61)$$

where I = amperes per phase in the line, I_p = amperes per phase in each coil, E = volts between phase wires on the line, E_p = volts across each group of armature coils connected across each phase, and E_1 = volts between phase wires and neutral. The coils in Fig. 1.49, III, may represent the phase windings of a three-phase generator or transformer, or each coil may represent a transformer or other device, three of which are Y-connected.

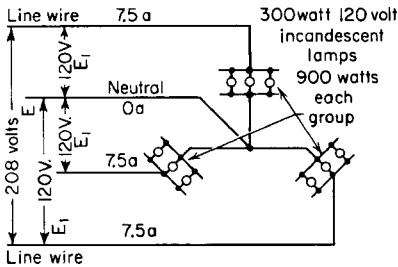


FIGURE 1.50 Incandescent-lamp groups connected in star or Y.

EXAMPLE What will be the voltage across line wires of the three-phase circuit for the 120-V Y-connected lamps in Fig. 1.50?

SOLUTION Substitute in the formula,

$$E = E_p \sqrt{3} = 120 \times 1.73 = 208 \text{ V}$$

155. Relations for a delta(Δ)-connected three-phase circuit

are shown in Fig. 1.51. When armature coils of a generator (see diagram I) are connected as indicated, the volt-

ages generated in them are 120 degrees apart. It would appear that the current might flow around through the coils and not into the external circuit, but it is evident from phase diagram II that the sum of the effective voltages 1 and 3 generated by two of the coils is equal and opposite to that of the third. Hence, instead of tending to force current around internally, the voltages tend to force current out into the line. The following formulas indicate

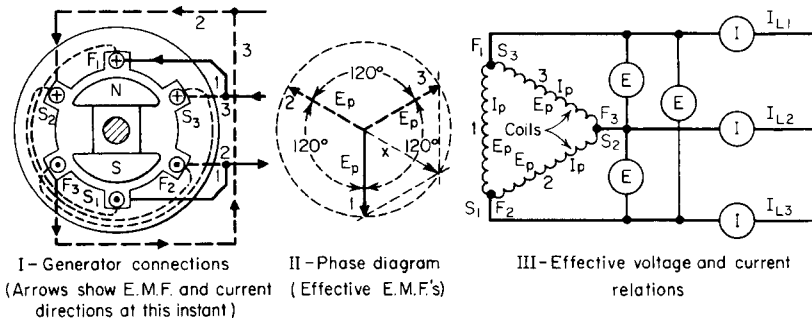


FIGURE 1.51 Delta(Δ)-connected three-phase generator and circuit.

the relations of the voltages and currents. (All are effective values, and circuit is assumed to be balanced. See Fig. 1.51.)

$$I_L = I_p \times \sqrt{3} = I_p \times 1.73 \quad (62)$$

$$I_p = \frac{I_L}{\sqrt{3}} = I_L \times 0.577 \quad \text{or approximately } I_p = I_L \times 0.58 \quad (63)$$

$$E = E_p \quad (64)$$

where the symbols have the same meanings as in Fig. 1.51, III.

NOTE: Each coil (Fig. 1.51) may represent the phase windings of a three-phase transformer or generator, or each coil may represent a transformer or other device, three of which are Δ -connected.

EXAMPLE If each of the coils of the generator in Fig. 1.51 can carry 100 A, what value of current may be drawn from the line wires leading from the machine?

SOLUTION Substitute in the formula,

$$I_L = I_p \times \sqrt{3} = 100 \times 1.73 = 173 \text{ A}$$

156. Relations of voltage, current, and power that apply to any balanced three-wire three-phase circuit either delta- or Y-connected. Refer to Fig. 1.52 for a key to the letters that appear in the following formulas. For a load with a power factor of 1,

$$I = \frac{W}{E \times \sqrt{3}} = \frac{0.577 \times W}{E} \quad \text{or approximately } = \frac{0.58 \times W}{E} \quad (65)$$

$$E = \frac{W}{I \times \sqrt{3}} = \frac{0.577 \times W}{I} \quad \text{or approximately } = \frac{0.58 \times W}{I} \quad (66)$$

$$W = E \times I \times \sqrt{3} = 1.73 \times E \times I \quad (67)$$

For any load

$$\text{pf} = \frac{W}{1.73 \times I \times E} = \frac{0.577 \times W}{I \times E} \quad \text{or approximately } = \frac{0.58 \times W}{I \times E} \quad (68)$$

$$E = \frac{W}{\text{pf} \times 1.73 \times I} = \frac{0.577 \times W}{\text{pf} \times I} \quad \text{or approximately } = \frac{0.58 \times W}{\text{pf} \times E} \quad (69)$$

$$I = \frac{W}{\text{pf} \times 1.73 \times E} = \frac{0.577 \times W}{\text{pf} \times E} \quad \text{or approximately } = \frac{0.58 \times W}{\text{pf} \times E} \quad (70)$$

$$W = 1.73 \times E \times I \times \text{pf} \quad (71)$$

$$\text{VA} = 1.73 \times E \times I \quad (72)$$

where I = line current, in each of the three wires, in amperes; W = the power transmitted by all three wires in watts; E = voltage across lines; and pf = the power factor of the circuit.

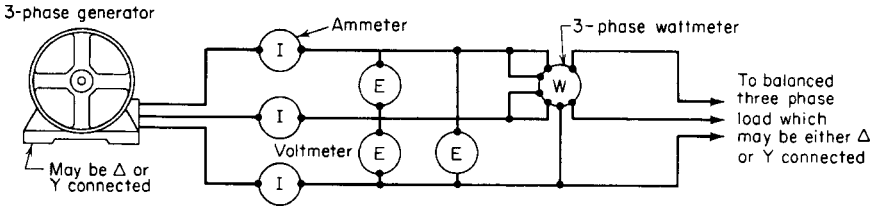


FIGURE 1.52 Relations for any Δ - or Y-connected three-phase circuit.

EXAMPLE What is the power factor in the 220-V circuit to the motor in Fig. 1.53? The three ammeters each indicate 90 A, and the three-phase wattmeter indicates 30 kW (30,000 W).

SOLUTION Substitute in the formula,

$$\begin{aligned} \text{pf} &= \frac{0.577 \times W}{I \times E} = 0.577 \times \frac{30,000}{90 \times 220} = \frac{17,310}{19,800} \\ &= 0.88 = 88 \text{ percent power factor} \end{aligned}$$

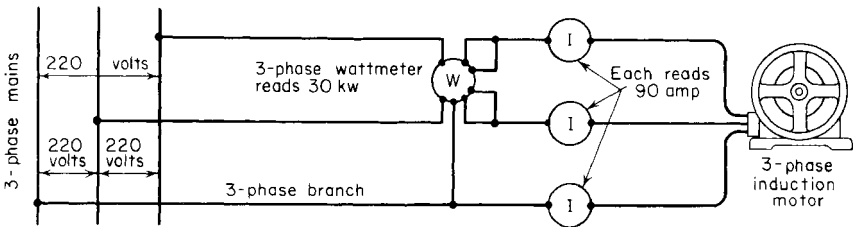


FIGURE 1.53 Motor on a three-phase circuit.

EXAMPLE The power factor on the feeder of Fig. 1.54 is known to be 70 percent. The current in each line is 80 A, and the voltage across each phase is 220. What actual power is being delivered to the panel?

SOLUTION Substitute in the formula,

$$1.73 \times E \times I \times \text{pf} = 1.73 \times 220 \times 80 \times 0.70 = 21,313.6 \text{ W}$$

$$\text{kW} = \frac{W}{1000} = \frac{21,313.6}{1000} = 21.3 \text{ kW}$$

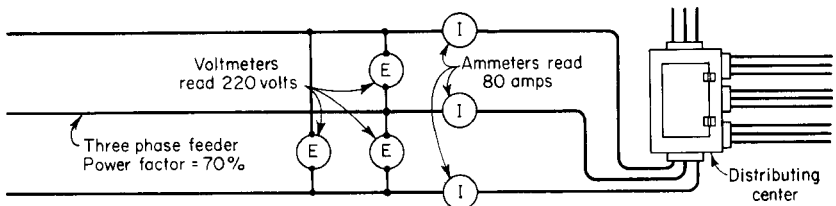


FIGURE 1.54 Load on a three-phase circuit.

EXAMPLES Figure 1.55 shows numerical examples of voltage and current relations in a three-phase circuit. Note that when a group of three devices or coils is connected in delta, as in the motor, each device or coil has line voltage impressed on it and must be designed for that voltage. The current in the line will be 1.73 times the current through the coil. When Y-connected, as on the low-voltage side of the transformers, each of the three coils need only be designed for $1/1.73$, or 0.577 times the line voltage, and the line current will be the same as the current through each coil. Single-phase loads may be supplied either from line to neutral as with the 120-V lamps or from two lines as with the 208-V heater.

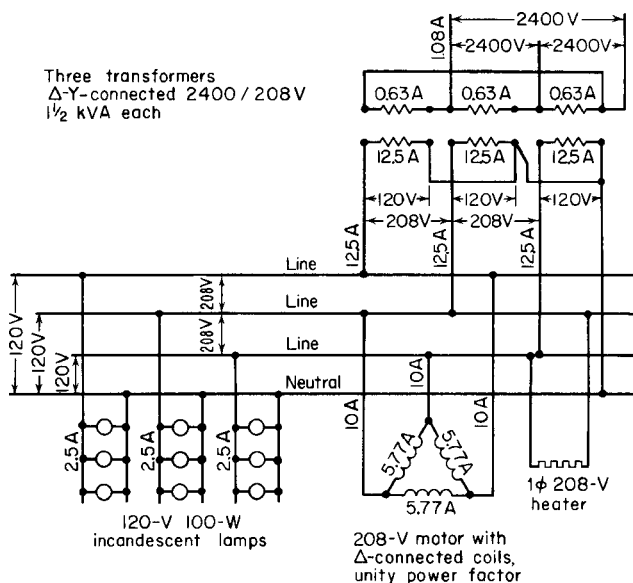


FIGURE 1.55 Examples of current and voltage relations in three-phase circuits.

157. The power loss in any circuit traversed by an alternating or a direct current is

$$W = P \times R \quad \text{or} \quad I = \sqrt{\frac{W}{R}} \quad \text{or} \quad R = \frac{W}{I^2} \quad (73)$$

where W = the power lost in heat in the circuit in watts, I = effective current in amperes in the conductor, and R = resistance of the conductor in ohms. This rule is perfectly general and applies to all dc circuits and all ac circuits of ordinary voltages and frequencies. The watts power loss W reappears as heat power and heats the conductors. Watts loss is commonly called I^2R loss.

EXAMPLE What is the power loss in the incandescent lamp in Fig. 1.56?

SOLUTION Substitute in the formula,

$$W = I^2 \times R = (2.2 \times 2.2)98 = 4.84 \times 98 = 474 \text{ W}$$

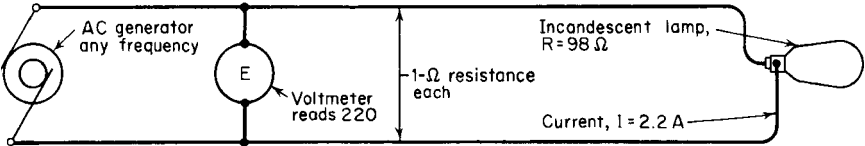


FIGURE 1.56 Resistance in an ac circuit.

EXAMPLE What is the power loss in the inductive winding of Fig. 1.57 with an alternating current of 3 A?

SOLUTION Substitute in the formula,

$$W = I^2 \times R = (3 \times 3)7 = 9 \times 7 = 63 \text{ W}$$

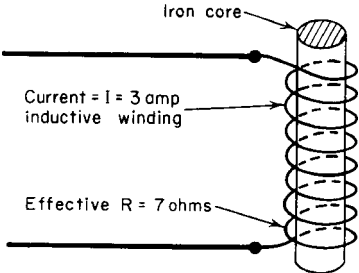


FIGURE 1.57 Effective resistance in an inductive ac circuit.

NOTE: In the circuit of Fig. 1.57 the resistance of the coil to direct current is only 5 Ω. The increase in resistance to alternating current over its dc value is due to the power losses produced in the iron core (refer to Sec. 122).

158. Approximate Sparking Distances, in Air, for Various Mean Effective Voltages between Sharp Needle Points: Sine-Waveform Voltage

(Locke Insulators, Inc.)

Voltage	Distance		Voltage	Distance	
	In	Cm		In	Cm
1,000	0.06	0.152	20,000	1.00	2.54
2,000	0.13	0.33	25,000	1.30	3.3
3,000	0.16	0.41	30,000	1.63	4.1
4,000	0.22	0.56	35,000	2.00	5.1
5,000	0.23	0.57	40,000	2.45	6.2
10,000	0.47	1.19	50,000	3.55	9.0
15,000	0.73	1.84	100,000	9.60	24.4

NOTE: Above 100,000 V, the gap between needle points is approximately 1 in/10,000 V. Using infinitely sharp needle points up to at least 10,000 V, a graph of the voltage and the corresponding sparking distance would probably result in a straight line passing through the origin. (H. W. Fisher, *Trans. Int. Elect. Cong.*, vol. II, 1904, p. 294.)

159. Dielectric strength. When there is an emf between two conductors that are separated by an insulating material, electrical forces are exerted upon the electrons in the atoms of the insulating material. These forces are trying to pull the electrons out of the atoms. If they succeed in pulling the electrons out, the material ceases to be an insulator and becomes a conductor. When this occurs, it would be said that the insulation had broken down. When the voltage between the conductors is small, the forces exerted in the atoms are not great enough to pull the electrons out of the atoms. As the voltage between the conductors is increased, the forces on the electrons are increased. If the voltage continues to be increased, the forces will eventually become great enough to pull the electrons out of the atoms and the insulation will break down. The voltage at which the material ceases to be an insulator is called the *breakdown voltage*. Any insulating material can be broken down and cease to be an insulator if the voltage impressed across it is raised high enough. The breakdown voltage of any material depends upon the thickness, condition of the surface, and homogeneity of the material. The breakdown voltage does not increase directly with the thickness of the material; a piece of material 2 in thick will break down at a voltage less than twice the breakdown voltage of a piece 1 in thick. Any irregularities or sharp points on the surface will lower the breakdown voltage.

It is these considerations that govern the thickness of insulation required on conductors, the spacing of bare conductors, distance between live parts and ground, etc.

MEASURING, TESTING, AND INSTRUMENTS

160. The magneto test set is one of the most valuable testing instruments for practical people because of its simplicity and the fact that it is always ready for service. Figure 1.58 shows the circuit and Fig. 1.59 a perspective view of a testing magneto. The apparatus consists of a small hand-operated ac generator in series with a polarized electric bell. Alternating current will ring bells of this type. If the external circuit connected to the terminals of the magneto is closed and the crank of the generator is turned, current will flow and the bell will ring.

The resistance through which magnetos will ring is determined by their design. An ordinary magneto will ring through possibly 20,000 to 40,000 Ω . Electrostatic-capacity effects must be considered when testing with a magneto. When long circuits, such as telephone lines or circuits that are carried in cable for a considerable distance, are tested, the bell of the magneto may ring, owing to capacitance, apparently indicating a short circuit, whereas

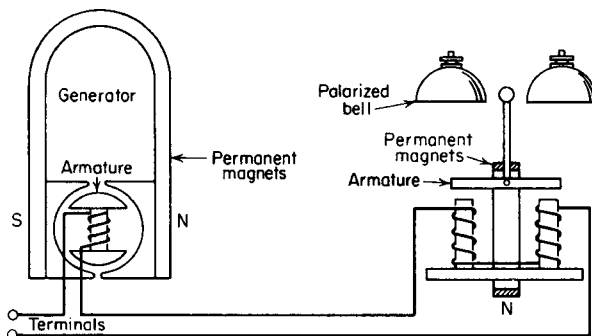


FIGURE 1.58 Circuits of testing magneto.

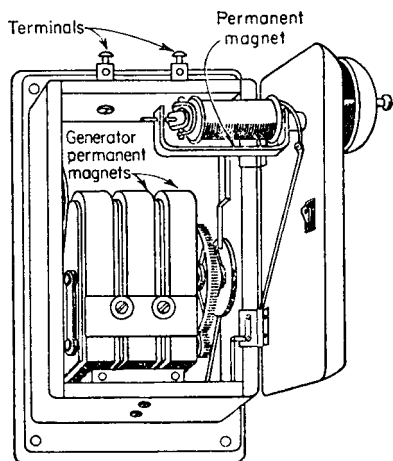


FIGURE 1.59 Assembly of testing magneto.

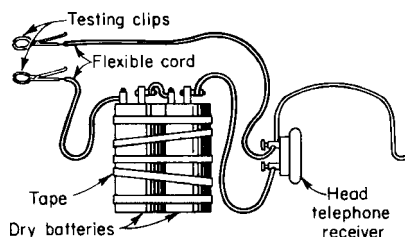


FIGURE 1.60 Head-telephone and dry-battery testing set.

the circuit may be perfectly clear or open. Circuits associated with iron, such as field coils of generators, may have considerable inductance. With highly inductive circuits under test, the magneto may “ring open”; i.e., the bell may not ring at all even if the inductive circuit connected to it is actually closed. In ordinary interior-wiring work the effects of capacitance and inductance are usually negligible, and the true condition of the circuit will be indicated by the performance of the magneto bell.

161. A telephone receiver in combination with one or two dry cells constitutes excellent equipment for certain tests. A head-telephone receiver (Fig. 1.60) is usually preferable to a receiver of the watchcase type, because it is held on the head by a metal strap, allowing the unrestricted use of both hands. Metal testing clips are soldered to flexible testing cords. The telephone receiver is extremely sensitive and will give a weak click even when the current to it passes through an exceedingly high resistance. In use, one clip is gripped on one conductor of the circuit to be tested, and the other clip is tapped against the other conductor. Prolonged connection should be avoided because it will run down the battery. A vigorous click of the receiver indicates a closed circuit, while a weak click or none at all indicates an open circuit. After practice it is possible to determine approximately the resistance of the circuit under test by the intensity of the receiver click. When the battery and receiver test set are connected to a circuit having some electrostatic capacity, the receiver will give a vigorous click when the clips are first touched to the circuit terminals even if the circuit is open. With successive touchings the click will diminish in intensity if the circuit is open but will not diminish appreciably if the circuit is closed.

162. The advantages of the telephone receiver over the magneto for work of certain classes are: (1) The receiver-and-battery outfit costs little. (2) The outfit can be made so compact that it can be carried in a pocket. (3) In making insulation tests with a magneto the circuit may “ring clear”; i.e., the bell will not ring, apparently indicating high

insulation resistance, whereas the circuit may not be clear, but instead the magneto may be out of order or its local circuit may be open. The indication is negative. With the telephone receiver a slight click is produced even when testing through the highest resistances. The absence of a click usually signifies an open in the testing apparatus itself. Thus, the telephone-receiver indication is positive.

163. A telegraph sounder is sometimes used for testing. It is connected in the same way as the telephone receiver of Fig. 1.60 and is adaptable for rough work. When the circuit under test is closed and the flexible-cord clips are touched to the circuit conductors, the sounder clicks. When the circuit is open, there is no click. One feature of the sounder method is that the click is audible at a considerable distance from the instrument.

164. An electric-bell outfit for testing is shown in Fig. 1.61. When the free ends for testing are touched to a closed circuit of not too high resistance, the bell rings. If the circuit is open, the bell will not ring. Flexible cord can be used for the testing conductors of the outfit, and testing clips can be provided as in Fig. 1.60.

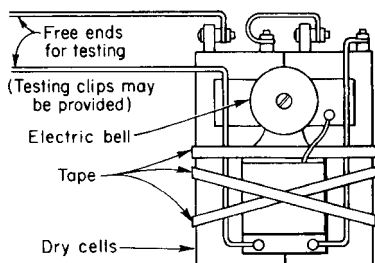


FIGURE 1.61 Electric-bell-testing outfit.

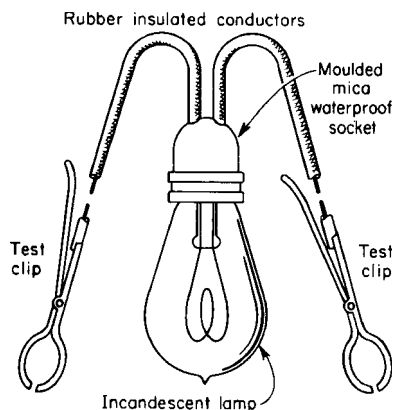


FIGURE 1.62 A practical test-lamp outfit.

165. A test lamp (Fig. 1.62), consisting merely of a weatherproof rubber-insulated socket into which is screwed an incandescent lamp of the highest voltage rating of the circuits involved, is very convenient for rough tests on interior-lighting and motor-wiring systems. Porcelain sockets are undesirable because they are so readily broken. Brass sockets should not be used because they may fall across conductors and thereby cause short circuits. Testing clips may be soldered to the ends of the leads which are molded in the socket. Some uses of the testing lamp are given below, and the lamp is very convenient in testing for defective fuses.

166. A very convenient and inexpensive test outfit consists of a pointer which moves along a scale inside an insulated case (Fig. 1.63). It indicates whether the circuit is alternating- or direct-current by vibrating on alternating current, the frequency of the vibrations showing whether the current is 25 or 60 Hz. It also indicates the range of voltage of

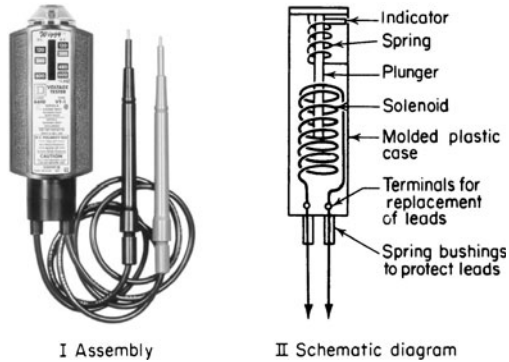


FIGURE 1.63 Voltage tester, 110 to 600 V. [Square D, Schneider Electric]

the circuit up to 550 ac or 600 dc. The sharp points on the ends of the lead wires can be used to pierce insulation for checking insulated leads without destroying the insulation.

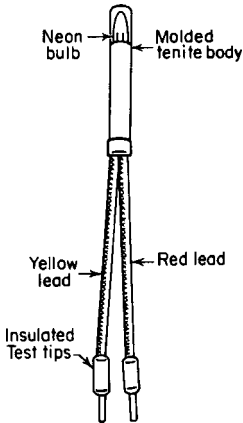


FIGURE 1.64 Neon-glow lamp tester. [Littel-fuse, Inc.]

167. Neon-glow lamp testers provide a very convenient and compact device for determining if a circuit is live, for determining polarity of dc circuits, and for determining if a circuit is alternating- or direct-current. A neon tester for low-voltage work is illustrated in Fig. 1.64. It consists of a very small neon lamp in series with a 200,000- Ω protective resistance enclosed in a molded case. This tester is satisfactory for use on circuits of from 90 V dc or 60 V ac to 500 V ac or dc. With the test tips connected to a circuit, the presence of voltage within the above limits will be indicated by the glowing of the neon lamp. If both electrodes in the bulb glow, the voltage of the circuit is alternating. On direct current, only one electrode, the one connected to the negative side of the circuit, will glow. With experience the voltage of the line can be determined approximately by the intensity of the glow. In testing a circuit, it is best first to touch only one side of the line with one test tip, keeping the other test tip free. A glow with this connection will indicate the presence of high voltage. The tester shown is well constructed for safety. The molded case has a voltage breakdown value of 25,000 V and the leads are insulated for 5000 V and provided with insulated test prods. The testers are also available, as shown in Fig. 1.65, with the glow lamp in one of the tips, making it easier to see the voltage indication while looking at the tip placement. This arrangement also reduces the voltage reaching the leads. This tester is suitable for 80 to 600 V ac or dc.

168. A noncontact voltage tester is shown in Fig. 1.66. It provides both an audible and visual indication of voltage. Since it works by induction it is only rated for use on ac circuits, in this case from 40 to 600 V. It has the advantage that the insulation need not be disturbed or an exposed live part located in order for it to work; holding the tip on an energized conductor will make the tester respond.



FIGURE 1.65 Glow lamp tester in the probe tip. [Ideal Industries, Inc.]



FIGURE 1.66 Noncontact voltage tester. [Ideal Industries, Inc.]

169. Instruments for general-circuit and other industrial testing purposes are shown in Fig. 1.67. They are applicable for measurements on either dc or ac circuits. Only one instrument is required for measurements of voltage, current, and resistance.



FIGURE 1.67A Handheld digital multimeter. [Simpson Electric Co.]



FIGURE 1.67B Volt-ohm-milliammeter. [Simpson Electric Co.]

170. Rules for use of ammeter and voltmeter (William H. Timbie, *Elements of Electricity*). Place the ammeter in series, always using a short-circuiting switch, where possible, as shown in Fig. 1.68, to prevent injury to the instrument. Place the voltmeter in shunt (Fig. 1.68). Put the + side of the instrument on the + side of the line. Figure 1.68 shows the correct use of an ammeter and a voltmeter to measure the current and the voltage supplied to the motor. The short-circuiting switch S must be opened before the ammeter is read. All the current that enters the motor must then flow through the ammeter and be indicated. The ammeter is of very low resistance (about 0.001 or 0.002 Ω) and does not appreciably cut down the flow of current. The voltmeter is of very high resistance (about 15,000 Ω) and does not allow any appreciable current to flow through it. Yet enough goes through the voltmeter to cause it to indicate the voltage across the terminal AB of the motor. Let us suppose the voltage across the motor to be 110; what would happen if an ammeter of 0.002- Ω resistance were by mistake placed across AB ? (Remember that Ohm's law is always in operation.)


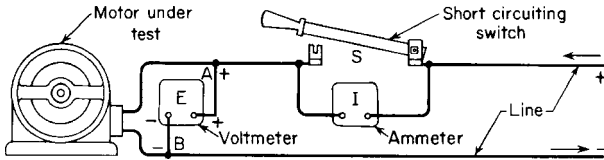


FIGURE 1.68 Ammeter and voltmeter connections.

171. All (except electrostatic) ammeters and voltmeters consume power when in use and introduce some error (William H. Timbie, *Elements of Electricity*). For minimum error (see Fig. 1.69, I) when measuring a low current and a high voltage, the voltmeter should be placed around both the ammeter and the apparatus under test.

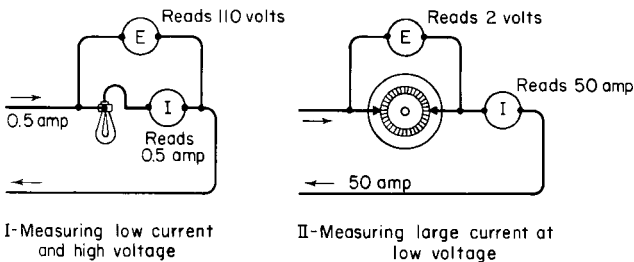When measuring the power consumed by a piece of apparatus through which a large current at low voltage is flowing, the voltmeter should be placed immediately across the piece of apparatus under test and should not include the ammeter (Fig. 1.69, II).



I-Measuring low current and high voltage

II-Measuring large current at low voltage

FIGURE 1.69 Correct methods of connecting instruments.

172. A method of measuring current with a voltmeter is shown in Fig. 1.70. If a resistor of known resistance is connected in series in a circuit and the voltage across the resistor is measured with a voltmeter, the current can be determined by Ohm's law.

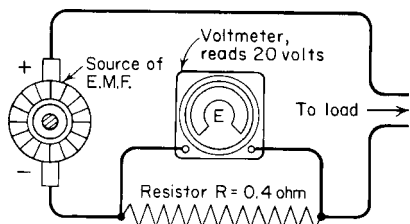


FIGURE 1.70 Current measurement with voltmeter.

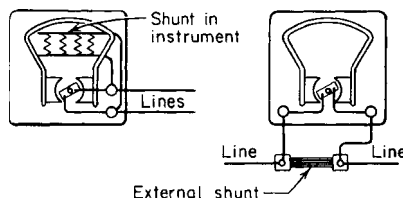


FIGURE 1.71 Millivoltmeters and shunts.

EXAMPLE (Fig. 1.70) If the drop around an $0.4\text{-}\Omega$ resistance in series in a circuit is 20 V , what is the current in the circuit?

SOLUTION Substitute in the Ohm's-law formula,

$$I = \frac{E}{R} = \frac{20}{0.4} = 50\text{ A}$$

173. A millivoltmeter is generally used for making measurements like that of Sec. 172. A millivoltmeter reads in thousandths of volts, so that a resistor of small resistance can be used. Ammeters, particularly those for large currents, are often millivoltmeters calibrated in amperes which are connected around a resistor, in series with the circuit (Fig. 1.71). The resistor sometimes is in the instrument case and sometimes is inserted in the busbars of a switchboard (see Fig. 1.71). Resistors of this type are called *shunts* and when furnished by instrument makers are carefully calibrated.

174. Split-jaw ammeters provide very useful and convenient test instruments. In many instances when it is desired to measure the current flowing in a cable or other conductor, it is inconvenient, even if it is permissible to break the circuit, to insert an ammeter. These instruments instantly measure alternating or direct current without opening or interrupting the circuit. Merely encircle the conductor with the jaws as illustrated in Fig. 1.72. As soon as the jaws close, a clear, accurate reading is instantly registered on the scale.



FIGURE 1.72 Application of a split-jaw ammeter.
[Martindale Electric Co.]

For best results on circuits having harmonic content, as covered in Sec. 220, be sure to look for a meter advertising a “true RMS” capability. These meters compensate for harmonic waveforms and make certain that the instrument reports total amperage correctly.

When dc measurements are made, some meter instructions advise that the jaws should be opened and closed immediately before the reading is taken to reduce the error caused by hysteresis if the current is rising or falling. If the current is steady, the error can be minimized by reversing the tongs and taking the average of the two readings.

175. Resistances can be measured with a voltmeter as indicated in Fig. 1.73. This method is satisfactory for the measurement of resistances whose values range from a few to a few hundred ohms. A resistor of known resistance, a source of direct current, and one voltmeter are required. The same constant current flows through both the known and the unknown resistance. The voltmeter reading E is taken, and then the reading E_x . The voltage drops will be proportional to the resistances or

$$\frac{R}{E} = \frac{R_x}{E_x} \quad \text{or} \quad R_x = \frac{E_x \times R}{E} \quad (74)$$

EXAMPLE Substituting the values from Fig. 1.73 in the formula,

$$R_x = \frac{E_x \times R}{E} = \frac{42 \times 2}{30} = \frac{84}{30} = 2.8 \, \Omega$$

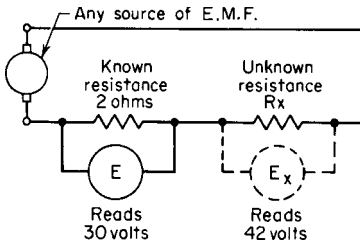


FIGURE 1.73 Resistance measurement.

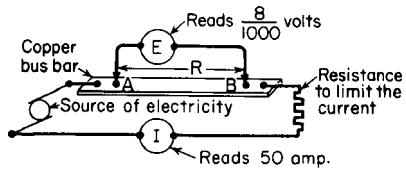


FIGURE 1.74 Measurement of very low resistance.

176. Very small resistances can be measured, as indicated in Fig. 1.74, with an ammeter and a millivoltmeter. This method is generally satisfactory for resistances having a value of less than $1 \, \Omega$ and is convenient for measuring the resistance of busbars, joints between conductors, switch contacts, brush-contact resistance, and other low resistances. As large a current as is feasible should be used. This is another application of Ohm's law.

EXAMPLE What is the resistance of the portion of the busbar between A and B , Fig. 1.74?

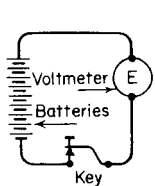
SOLUTION Substitute in Ohm's-law formula,

$$R = \frac{E}{I} = \frac{0.008}{50} = 0.00016 \, \Omega$$

In the application of Ohm's law as given here, the current through the voltmeter is neglected. Since the resistance of the voltmeter is generally large compared with the resistance to be measured, the error caused by neglecting the voltmeter current is generally negligible.

177. Insulation resistance is frequently measured as suggested in Fig. 1.75. A voltmeter of known resistance, preferably of high resistance, and a source of emf (batteries or a generator) are required. First the voltage of the emf source is taken as shown in diagram I or II. The apparatus is then arranged as shown in diagram III to measure the resistance from each side of the circuit to ground. In diagram IV or V are shown the connections for measuring the resistance between conductors. If E = voltage of source, E_1 = reading of the voltmeter when connected in series with insulation resistance to be measured, R_v = resistance in ohms of the voltmeter, and R_x = insulation resistance sought, the following formula is used (see Fig. 1.75):


$$R_x = R_v \left(\frac{E}{E_1} - 1 \right) \quad (75)$$




I - With batteries



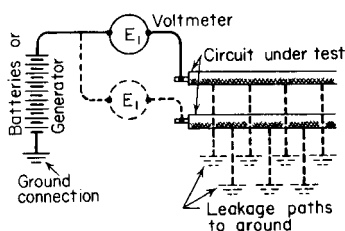
II - With generator.
taking first reading.



III - Reading for resistance
to ground

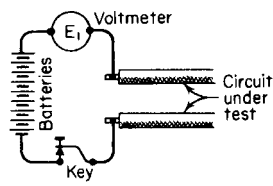

IV



V - Reading for resistance
between conductors

EXAMPLE In a certain test (Fig. 1.76) in which a 110-V generator was used as a source of emf and a voltmeter having a resistance of $15,000 \Omega$ was used to read voltages, the readings indicated in Fig. 1.76 were obtained. What was the insulation resistance to ground of each side of the circuit, and what was the insulation resistance between circuits?

SOLUTION For the resistance of conductor 1 (see Fig. 1.76) substitute in the formula,

$$\begin{aligned} R_x &= R_v \left(\frac{E}{E_1} - 1 \right) = 15,000 \left(\frac{100}{5} - 1 \right) = 15,000(22 - 1) = 15,000 \times 21 \\ &= 315,000 \Omega = \text{insulation resistance of counter 1 to ground} \end{aligned}$$

For the resistance of conductor 2 (see Fig. 1.76, III),

$$\begin{aligned} R_x &= R_v \left(\frac{E}{E_1} - 1 \right) = 15,000 \left(\frac{100}{4} - 1 \right) = 15,000(27.5 - 1) = 15,000 \times 26.5 \\ &= 397,500 \Omega = \text{insulation resistance of counter 2 to ground} \end{aligned}$$

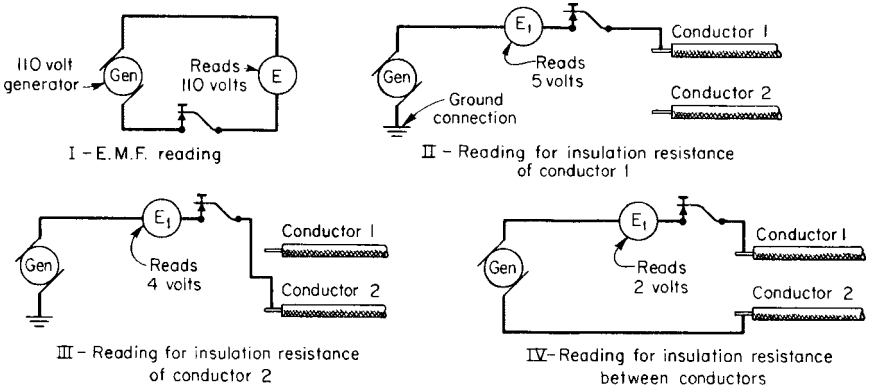


FIGURE 1.76 Example of insulation-resistance measurement.

For the insulation resistance between conductors,

$$R_x = R_v \left(\frac{E}{E_1} - 1 \right) = 15,000 \left(\frac{100}{2} - 1 \right) = 15,000(55 - 1) = 15,000 \times 54$$

$$= 810,000 \, \Omega = \text{insulation resistance between conductors 1 and 2}$$

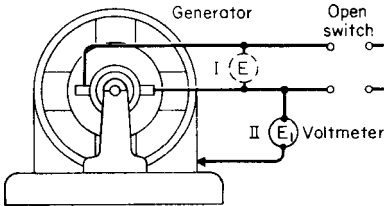


FIGURE 1.77 Measuring insulation resistance of a generator.

178. The insulation resistance of a generator can be determined with a voltmeter of known resistance which is successively connected and read in positions I and II (Fig. 1.77). The formula of Sec. 177 is used. The external circuit connected to the generator should be cut off while the measurements are being taken so that its insulation resistance will not affect the readings.

179. The insulation resistance of motors, generators, electrical apparatus cables, and insulated conductors can be determined by the use of insulation testers utilizing microprocessor technology. See Fig. 1.78. These testers can be used in troubleshooting, preventative maintenance, and quality assurance programs. In preventive maintenance programs the apparatus or conductors are tested periodically and a written history is kept of the results. Trends showing lower resistance readings can detect failures, such as motor winding burnout, and reduction of downtime before failure or breakdown can be an economic bonus.

180. The ohmmeter is an instrument to measure resistance directly. The one illustrated in Fig. 1.79 has laboratory accuracy. It is especially advantageous for work in the field, since its small size allows the meter to be carried in the field. The meter is operated by rechargeable batteries with internal charger, which is mounted inside the meter case.



FIGURE 1.78 Megger microprocessor technology insulation tester. [Biddle Instruments, AVO International]



FIGURE 1.79 Digital low-resistance ohmmeter. [Biddle Instruments, AVO International]

181. A resistance tester (Fig. 1.80) is an instrument frequently used to measure high resistance. It consists of a magneto which is turned by a crank on the side of the case. The scale is calibrated directly in ohms. The resistance to be measured is connected across two terminals. The crank is turned at a moderate speed (about 120 rpm) until the pointer reaches a steady deflection.

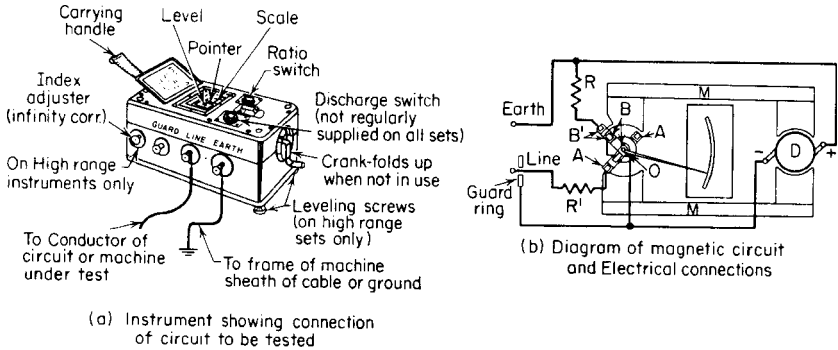


FIGURE 1.80 Megger. [Biddle Instruments]

182. Power, in dc electric circuits or single-phase ac electric circuits with a power factor of 1, can be measured with a voltmeter and an ammeter. For two-wire circuits the power in watts, in accordance with Ohm's law, equals the product of volts times amperes; thus,

$$W = I \times E \quad (76)$$

where W = the power in watts, I = the current in amperes, and E = the emf in volts.

EXAMPLE See Sec. 111 for examples of power problems. Although no instruments are shown in these, the principles are the same as if instruments were used.

EXAMPLE In Fig. 1.81, I, the power taken by the motor is, substituting in the formula,

$$W = I \times E = 40 \times 220 = 8800 \text{ W}$$

or in kilowatts $8800/1000 = 8.8 \text{ kW}$.

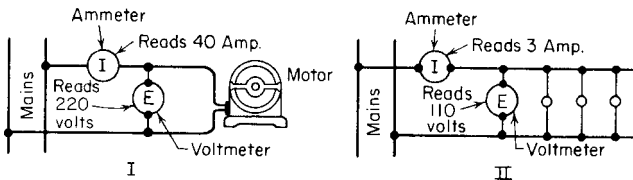


FIGURE 1.81 Power measurements.

EXAMPLE In Fig. 1.81, II, the power taken by the lamps is

$$W = I \times E = 3 \times 100 = 330 \text{ W}$$

or in kilowatts $330/1000 = 0.33 \text{ kW}$.

183. Power in single-phase ac circuits must be measured with a wattmeter unless the power factor is 1. A wattmeter can also be employed for measuring the power of a dc circuit. A wattmeter has two internal coils, namely, a voltage coil and a current coil. The voltage coil is connected across the circuit in which the power is to be measured, and the current coil is connected in series with the circuit. The wattmeter gives a direct indication of the power of the circuit. Two methods of connecting a wattmeter for measuring the power of a dc circuit or of a single-phase ac circuit are shown in Figs. 1.41 and 1.42. In Fig. 1.41 the voltage coil is connected between the generator and the current coil of the wattmeter, while in Fig. 1.42 the voltage coil is connected between the load and the current coil of the wattmeter. The connection of Fig. 1.41 should be used for loads of small current and that of Fig. 1.42 for loads of large current.

184. Power in a two-phase system can be measured with two single-phase wattmeters connected as shown in Fig. 1.82. Each phase is treated as a separate circuit. One wattmeter reads the power of one phase and the other the power of the second phase. The total power is the arithmetical sum of the two wattmeter readings:

$$\text{Total power} = W_1 + W_2 \quad (77)$$

A polyphase wattmeter, connected as shown in Fig. 1.82, III, can be used for the measurement of the power of a two-phase system.

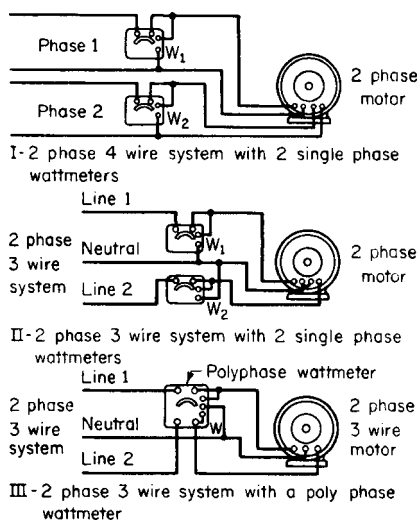


FIGURE 1.82 Measurement of power in two-phase systems.

185. Power in three-phase circuits can be measured with wattmeters by several different methods (see Fig. 1.83). In diagram I a polyphase wattmeter is shown. An instrument of this type automatically adds the portions of power consumed in each phase and indicates their sum. Instruments made by different manufacturers are arranged differently and must be connected accordingly. Directions accompany each instrument. Diagrams II and III show how the power can be measured, in a balanced circuit, with one

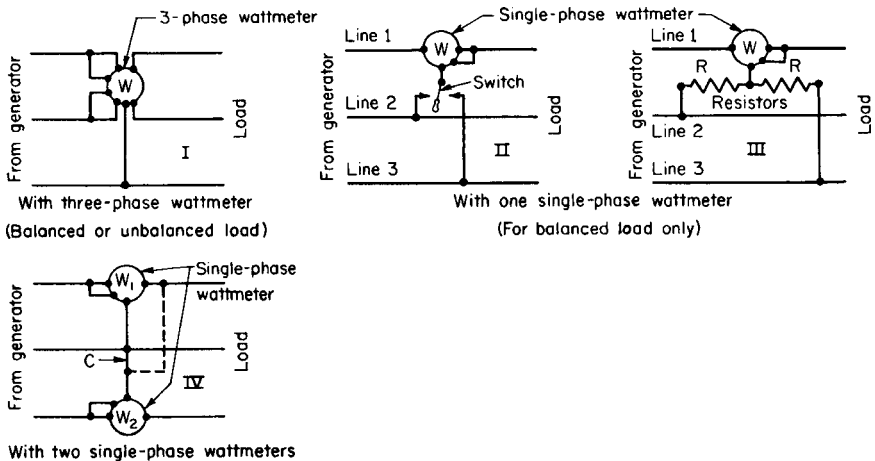



FIGURE 1.83 Three-phase power measurements with wattmeters.

wattmeter. One potential lead is connected to the line in which the wattmeter is inserted, and the other potential lead is connected successively to the other two lines. The total power in diagram II is equal to the sum or difference of the two readings. If resistors are used as indicated in diagram III, the power can be ascertained without shifting leads. The wattmeter reading of diagram III multiplied by 3 will be the true power in a balanced circuit. The resistance of each of the resistors R and R must equal the resistance of the potential or voltage coil of the wattmeter.

With two wattmeters (as in Fig. 1.83, IV) the total power is equal to the sum or difference of the two wattmeter readings. If the power factor is greater than 0.50, the total power is the arithmetical sum of the readings. If it is lower than 0.50, one of the readings is negative, and the power is the arithmetical difference of the two. To ascertain whether one of the wattmeters is reading negative, temporarily transfer the connection of one of the potential wires (for example, c in diagram IV, as shown by the dotted line) from the middle wire to the outside wire. If its wattmeter reverses, one of the instruments, that of the lesser indication, is reading negatively. The nature of the load usually enables one to judge roughly what the power factor is. With incandescent lamps and fully loaded motors the power factor will be high, but with underloaded and lightly loaded motors it is likely to be low. See Sec. 187 for the method of determining the power factor of three-phase circuits with wattmeters.

186. The power factor of a circuit can be determined from readings of volt-meters, ammeters, and wattmeters by use of the formulas of Secs. 146, 147, 150, and 156. The power factor of circuits can also be determined by instruments called *power-factor meters*, which when properly connected in a circuit read the power factor directly.

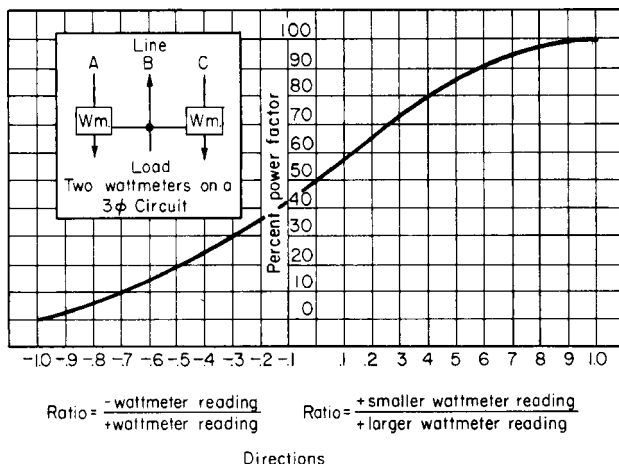187. The method of determining three-phase power factor with wattmeters was well described by C. E. Howell in *Electrical World*. It is necessary to know the power factor to connect watthour meters correctly if the wiring is concealed. An abstract follows.



Case I: - Both readings positive. Divide smaller by larger reading. Find this ratio on right side of center line above. Follow up the ordinate at this point to its intersection with curve. Opposite this on center line find corresponding percent power factor (above 50 percent)

Case II: - One reading negative. Divide negative by positive reading. Find this ratio on left side of center line above. Follow up the ordinate at this point to its intersection with curve. Opposite this on center line find corresponding percent power factor (below 50 percent)

FIGURE 1.84 Power-factor curve.

Figure 1.84 shows the power-factor curve for two single-phase meters on a polyphase circuit. It also gives a diagram of connections and instructions on using the curve. The figure should be self-explanatory. Figure 1.85 gives, first, a method of checking results obtained by employing the curve in Fig. 1.84 and a diagram of the connections for obtaining data for the check. The second part of Fig. 1.85 gives a method of determining correct connections for two single-phase meters or one polyphase meter on a three-phase circuit. If this part of Fig. 1.85 is followed, errors in meter connections on three-phase circuits due to the power factor being near 50 percent should be minimal.

The above instructions may be illustrated as follows. A 100-hp three-phase 440-V induction motor was operating on 30 percent full load or 30 hp (29.8 kW) at 60 percent power factor (determined afterward) when an order came through to place a polyphase watt-hour meter on the installation. Immediately after the meter had been connected the following question was asked: "Should the light element add to or subtract from the heavy element; i.e., is the power factor above or below 50 percent?" As the meter leads were encased in pipe, they could not be traced; therefore the instructions in the second figure pertaining to this point were applied. The connected load of the motor having been thrown off, it was found that one element of the meter gave a negative reading. Sufficient load was then put on to bring the motor to about 80 percent of its full-load rating. Each element of the meter (taken separately) now read positively, but the element on which no load gave a negative reading, on 80 percent load read lower than the heavy element. The meter had been correctly connected when installed. Later both methods given above to determine the power factor of a three-phase circuit were applied, and both gave approximately 60 percent power factor (at 30 percent load).

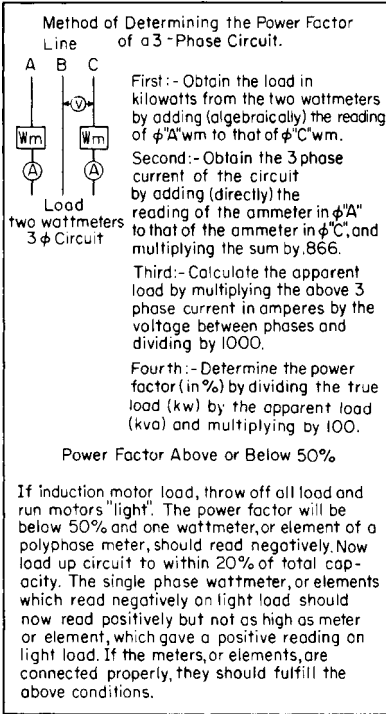



FIGURE 1.85 Chart of instructions for power-factor test.

188. To read correctly the consumption indicated on the dials of a recording watt-hour meter (sometimes, but erroneously, called a recording wattmeter), the directions given below should be followed (*Rules and Regulations* of the Commonwealth Edison Co., Chicago; see Fig. 1.86 for examples).


The pointer on the right-hand dial of a five-dial meter registers $\frac{1}{10}$ kWh or 100 Wh for each division of the dial. A complete revolution of the hand on this dial will move the hand of the second dial one division and register 1 kWh or 1000 Wh. A complete revolution of the hand of the second dial will move the third hand one division and register 10 kWh or 10,000 Wh, and so on.

Accordingly, read the hands from left to right and add two ciphers to the reading of the lowest dial to obtain the reading of the meter in watt-hours. If there are four dials on the meter, the pointer on the right-hand dial registers 1 kWh or 1000 Wh for each division of the dial, and it is necessary to add three ciphers to the reading on the lowest dial to obtain the reading in watt-hours, or the meter reads directly in kilowatthours.

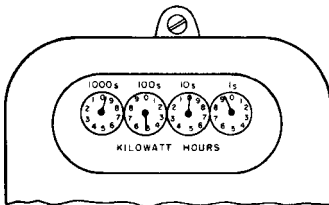
Hands should always be read as indicating the figure which they have last passed, not the one to which they are nearest. Thus, if a hand



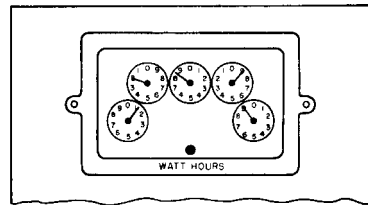
Reading 9499 kilowatt hours
Fort Wayne Type Watt Meter



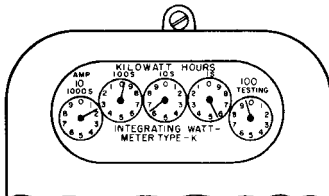Reading 1,88,900 watt hours
Thompson Recording Watt Meter



Reading 1965.9 kilowatt hour
Fort Wayne Type k Watt Meter

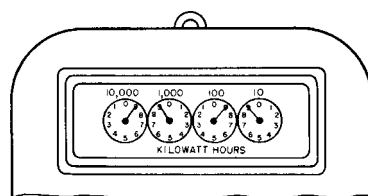

Reading 8889 kilowatt hours
Thompson Recording Watt Meter

FIGURE 1.86 Examples of watthour-meter readings.

is very close to a figure, whether it has passed this figure or not must be determined from the next lower dial. If the hand of the lower dial has just completed a revolution, the hand of the higher dial has passed the figure, but if the hand of the lower dial has not completed a revolution, the hand of the higher dial has not yet reached the figure even though it may appear to have done so.

When one pointer is on 9, special care must be taken that the pointer on the next higher dial is not read too high, as it will appear to have reached the next number but will not have done so until the hand at 9 has come to 0.

The hands on adjacent dials revolve in opposite directions. Therefore, a reading should always be checked after being written down, as it is easy to mistake the direction of the rotation. To determine the consumption for a given time, subtract the reading at the beginning of the period from the reading at the end. Always observe if a constant is marked at the bottom of the dial plate. If so, the difference of the readings must be multiplied by this constant to obtain the consumption.

189. The Wheatstone bridge is an instrument for measuring medium and high resistances. It is not suitable for measuring resistances of less than $1\ \Omega$. An elementary diagram is shown in Fig. 1.87. R_1 , R_2 , and R are adjustable resistances, R_x is the unknown resistance, and G is a delicate galvanometer. A battery supplies emf. It can be shown that if, when both keys are pressed the galvanometer shows no deflection, then

$$\frac{R_1}{R} \quad \text{or} \quad R_x = \left(\frac{R_2}{R_1}\right)R \quad (78)$$

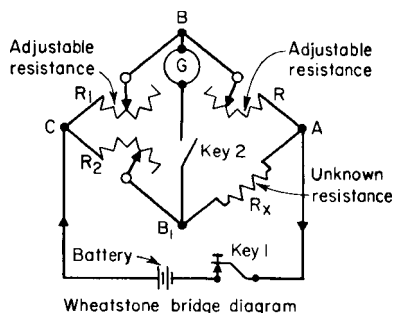


FIGURE 1.87 Elementary diagram of the Wheatstone bridge.

EXAMPLE If $R_2 = 100\ \Omega$, $R_1 = 10\ \Omega$, and $R = 672\ \Omega$, what is the value of the unknown resistance?

SOLUTION Substitute in the formula,

$$R_x = \left(\frac{R_2}{R_1}\right)R = \left(\frac{100}{10}\right)672 = 10 \times 672 = 6720\ \Omega$$

The unknown resistance is $6720\ \Omega$.

In commercial bridges, the adjustable resistances R_2 and R_1 are usually so arranged that the ratio R_2/R_1 will be a fraction like $1/10$ or $1/100$ or a number like 10 or 100 so that R_x can be obtained readily by dividing or multiplying R by an easily handled number. R_1 and R_2 are sometimes called the *ratio arms*, and R is called the *rheostat arm*. For most accurate results the resistances R , R_1 , and R_2 should be as nearly as possible equal to R_x .

190. A diagram of a commercial bridge of the post-office pattern is shown in Fig. 1.88. Its principle is similar to that of Fig. 1.87. Brass plugs are used to vary the resistance in the arms R , R_1 , and R_2 . When a plug is inserted in the opening between two resistance

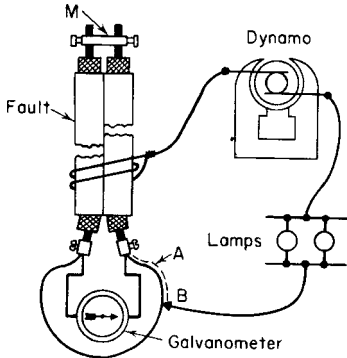


FIGURE 1.89 Locating a fault in a cable.

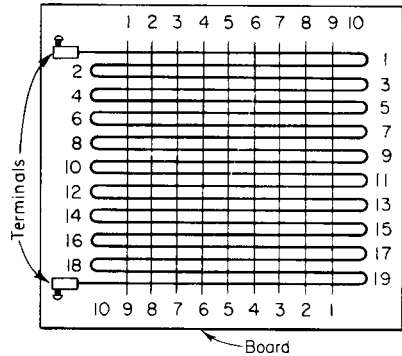


FIGURE 1.90 Homemade wire bridge.

Figure 1.90 shows a simple form of wire bridge which can be used for tests of this kind. The length A can be read directly, and the value of C is 200. A telephone receiver can be used in place of the galvanometer.

193. Testing cable insulation with a telephone receiver and battery

(Standard Underground Cable Co.). An extremely simple way to determine whether the insulation resistance of a given wire is faulty is as follows. A telephone receiver and battery are connected as shown in Fig. 1.91. One side of the battery is attached to the lead sheath of the cable or to ground, and the other side to a telephone receiver. A rubber-insulated wire is attached to the other side of the telephone. To test, press the telephone receiver to the ear and touch the wire L to the conductor E ; a click will always be heard the first time. After keeping both wires in contact for several seconds, break and make the connection once more; if no sound is heard at the instant of reconnection the wire is not faulty. With intervals of time between break and make of 1 s with a battery of 1 V, it can be assumed that no click indicates at least a resistance of 50 megohms. When more battery is used, this number is increased about in proportion to the number of cells. Care must be taken that sounds in the telephone due to induction are not misconstrued for those produced by leaks.

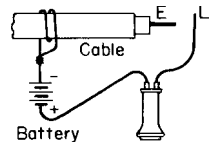


FIGURE 1.91 Test for insulation resistance.

194. Grounds on series lighting circuits frequently reveal their locations automatically.

If there are two good grounds on a circuit, the lamps connected in the line between the grounds will not burn because the grounds will shunt them out. For example, in Fig. 1.92 with a good ground at 1 and 11, lamps 2 to 10 would be shunted out.

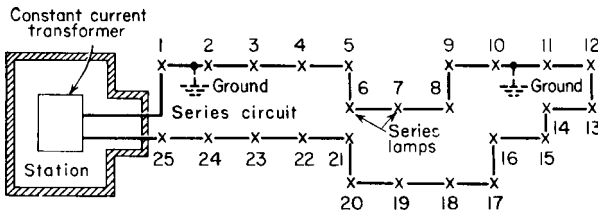


FIGURE 1.92 Effect of two grounds on a series circuit.

Sometimes there may be two grounds on a circuit, but they may not be good enough to shunt out the lamps. (This paragraph and those that follow on testing series circuits are from *Electrical World*.)

The presence of only one ground on a circuit, irrespective of how good it is, will not reveal itself automatically, and the proper operation of the circuit will not be affected by one ground. However, if there is one ground, it constitutes a serious menace to the lives of the station operators and troubleshooters. Furthermore, at any time there may occur another ground that may cause the shunting out of lamps or possibly a fire or destruction of equipment. Hence, it is very desirable to maintain the circuits entirely clear of grounds. It is the practice in all well-maintained stations to test each series circuit for grounds every afternoon. If a ground is discovered, a troubleshooter is sent to locate and clear it before the circuit is thrown into service for the night.

195. The usual method of testing dead series circuits for grounds is to disconnect the circuit from all station apparatus and then to connect one terminal of a magneto test set to the circuit and the other to ground. If the bell rings vigorously when the crank is turned, the circuit is grounded. If it does not, the circuit is clear. If the circuit is very long or in cable for a considerable portion of its length, the bell may ring a little even if the circuit is clear of grounds.

196. The method of locating a ground on a dead series circuit is illustrated in Fig. 1.93. Disconnect all station apparatus and temporarily ground one side of the circuit as at *B* (Fig. 1.93). Proceed out along the line and connect some testing instrument (a magneto test set is most frequently used) in series with the circuit at some point. If when the crank is turned, the magneto bell rings, indicating a closed circuit, the tester is between the station ground and the ground on the circuit. If the magneto rings open, the tester is between the circuit ground and the ungrounded station end of the circuit. If in Fig. 1.93 the test is inserted at lamp 1, 2, or 3, the magneto should ring closed, while if it is inserted at any of the other lamps, it should ring open.

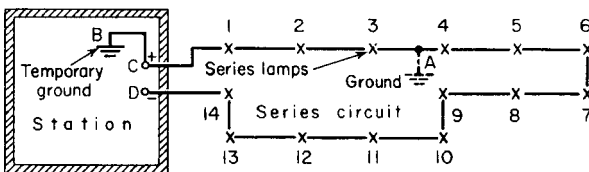


FIGURE 1.93 Locating a ground on a dead series circuit.

197. In locating either a ground or an open on a series circuit, unless the tester has an inkling of the location of the trouble, the tester should proceed first to the middle point of the circuit and there make the first test. This test will indicate on which side of the middle point the trouble is. The tester should then proceed to the middle point of the half of the circuit that shows trouble and there make another test. This will localize the trouble to one-fourth of the circuit. This halving of the sections of the circuit should be continued until the trouble has finally been found.

If there is more than one ground on a series circuit, the trouble is tedious to locate. If the tests made at different points on the circuit are confusing, indicating the existence of several

grounds, the best procedure is to open the circuit into several distinct sections and then test each one as a unit, following the methods described in preceding paragraphs.

198. A ground on a series circuit can sometimes be located with the current from the transformer by placing a temporary ground on the circuit at the station. For example, if in Fig. 1.93 a temporary ground is connected to terminal *B* and the device that supplies the operating current to the circuit is connected to terminals *C* and *D* and normal operating current is thrown out on the circuit, lamps 1, 2, and 3 will not burn, indicating that the ground is between lamps 3 and 4. This method is attended by some fire risk; hence, it should be used with caution.

199. A method of locating a ground on a series circuit with a lamp bank is suggested in Fig. 1.94. A bank of 110-V incandescent lamps, each of the same wattage, is connected in series as indicated, and one end of the bank is permanently grounded. There should be a sufficient number of lamps in the bank so that the sum of the voltages of all of the lamps is at least equal to the voltage impressed on the series circuit by the transformer. For instance, if the voltage impressed on the series circuit is 6600, there should be at least sixty 110-V incandescent lamps in the bank ($6600 \div 110 = 60$).

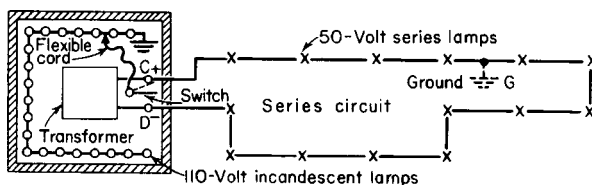


FIGURE 1.94 Locating a ground on a live series circuit with an incandescent-lamp bank.

In locating a ground, the flexible cord which is connected to the center point of the double-throw switch is placed successively on different points on the conductor that connects the incandescent lamps in series, the switch being thrown to one or the other of the circuit terminals *C* or *D*. Move the flexible cord along until the incandescent lamps in the bank, between the point of connection of the cord and the permanent ground, burn at about full brilliancy. When this condition obtains, the voltage impressed across the lamps that are burning fully brilliant is approximately equal to the voltage impressed on the portion of the circuit (to which the switch connects) between the station and the ground. The voltage required across each lamp of the outside circuit being known, the number of lamps between the station and the ground can be readily computed, and the ground is thereby located.

Great care must be exercised in using this method. Practically all series lighting circuits operate at very high voltage. Hence, when the flexible cord is being moved along the lamp bank, the transformer should be entirely disconnected. If it is not, voltage dangerous to life is present.

EXAMPLE Consider Fig. 1.94. There is a ground on the circuit. It is found that two of the incandescent lamps of the bank burn at full brilliancy between the flexible-cord connector and the lamp-bank ground. Since 110-V lamps are used in the bank, the voltage across these two is 220. This means that the voltage on the circuit between points *C* and *G* is about 220. Since the series lamps each require about 50 V, there must be $220 \div 50 = 4.4$, or in round

numbers, 4 series lamps between *C* and the ground *G*. After making a test with the switch point on *C*, it should be thrown over to *D*, and a check test made from the other end of the circuit. The method of figuring is the same in each case.

200. To locate an open on a series circuit, ground one end of the circuit at the station as in Fig. 1.93. Then make tests at different points out on the circuit with the magneto connected between line and ground. As long as the magneto bell indicates a closed circuit, the open is on the line side of the tester. When the magneto indicates an open circuit, the open is toward the station from the tester.

201. The testing out of a concealed wiring system for proper connections is illustrated in Fig. 1.95. It is assumed that the wires are installed and that the locations of their runs are concealed by the plastering. Only the ends of the conductors are visible at the outlets. It is necessary to identify the conductor ends at each outlet. These tests are usually made with an electric-bell outfit (Fig. 1.61) because the sound of the bell will indicate a closed circuit to the wire tester in a distant room. Hence, one person can test out such a system. In testing out, first skin the ends of all of the conductors and see that none is in contact with any other or with the outlet box. Next, select a pair of conductors (*A*, Fig. 1.95), preferably the pair that serves the group, and connect the bell outfit to the ends of the pair as shown. Then proceed to the outlet (*B*, Fig. 1.95) at which the pair of conductors should terminate and successively touch together the ends of all the wires that terminate in that box until a pair is discovered whose ends touched together ring the bell. This identifies one pair. Tag this pair so that it can be readily found again, and repeat the process on some other pair. Continue until all of the conductors have been identified. (These paragraphs on practical electrical tests are from *Electrical Engineering*.)

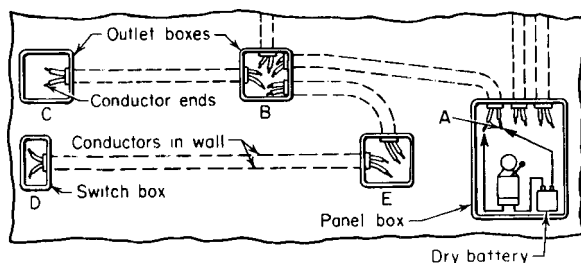


FIGURE 1.95 Testing out wiring for proper connections.

202. The method of testing out the connections for three-way switches is shown in Fig. 1.96. When finally connected, the circuits should be as shown in diagram I. It is assumed that the conductors are in place and concealed within walls or ceilings and that only the ends are visible at the outlets, as in Fig. 1.96, II. First, identify the feed conductors and bend back their ends at the outlet box as at *A*₃. Next, twist together, temporarily, the bared ends of any two of the conductors at each of the switch outlets as at *A*₃ and *C*₃. The conductors having their ends thus twisted together will be the switch conductors. Now, at the lamp outlet or outlets identify the short-circuited switch conductors as directed in a preceding paragraph, and connect these switch conductors together as at *B*₃. Connect the remaining conductor ends at the lamp outlets to the lamps *B*₄, connect one of the feed

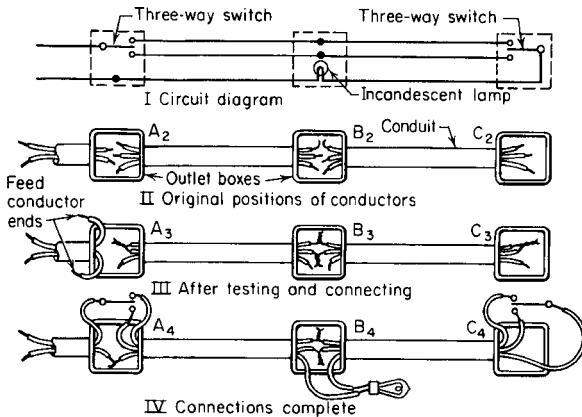


FIGURE 1.96 Testing out three-way-switch connections.

conductors to the center point of the three-way switch A_4 , and connect the other feed conductor to the lamp wire. The switch conductors are connected to the two points of the switch. At C_4 the same procedure is followed.

203. In testing out a new wiring installation for faults, each branch circuit, main, and feeder should be treated individually. It is usually impracticable to test an installation as a unit, as open switches and loose connections in cutouts may render such a test worthless. If a test is made from the cutout on the two conductors of each individual circuit, the above-mentioned possible elements of uncertainty are eliminated. Test each side of each circuit separately unless the lamps are in position.

204. Open circuits in multiple wiring installations are usually readily located. If the lamps are in position and lighting voltage is available, it can be impressed on the circuit. The lamps on the generator side of the open will then burn, while those on the far side will not, which localizes the open. If lighting voltage is not available, all the lamps can be taken out of the sockets, and each of the sides of the circuit can be grounded at the cutout. Then a telephone-and-battery, a bell-and-battery, or a magneto test set can be connected temporarily and successively between one line and ground and between the other line and ground at each outlet on the branch. When the test set indicates an open circuit, the open is between the tester and the ground made at the cutout.

205. The test for short circuits on a multiple system is made by temporarily connecting a test set across the terminals of each branch circuit at the cutout. If there is a short circuit on the lines under test, its presence will be immediately evident by the indication of a closed circuit.

206. The test for continuity of multiple wiring circuits is made by temporarily connecting a test set across the terminals of each branch cutout and successively short-circuiting, one at a time, the sockets of the branch with a screwdriver, a nail, or other metal object. The test

set will then indicate whether the wiring of the circuit is open or closed. If lighting voltage is available and plug cutouts are used, a lamp can be screwed into one socket of the cutout and a plug fuse into the other. Then the tester can proceed from socket to socket and short-circuit each. If the circuit to the socket is continuous, the lamp will light when the socket is short-circuited.

207. The test for grounds on a multiple wiring installation is made by temporarily connecting between line and ground a test set of one of the types previously described. If the test set indicates a closed circuit, the line being tested is grounded.

208. The testing of three-wire circuits to identify the neutral is effected as suggested in Fig. 1.97. If the neutral is grounded, a test lamp can be connected successively between each of the three conductors and ground (Fig. 1.97, I). When the ungrounded side of the lamp is touched to the neutral wire, it will not burn, but when touched to either of the outside wires, it will burn. A method that can be used with either a grounded or an ungrounded neutral is illustrated in Fig. 1.97, II. Connect the two test lamps in series successively between one of the line wires and the other two. When connected across the two outer wires, both lamps will burn at full voltage, but when connected between one of the outer wires and neutral, they will burn at only half voltage.

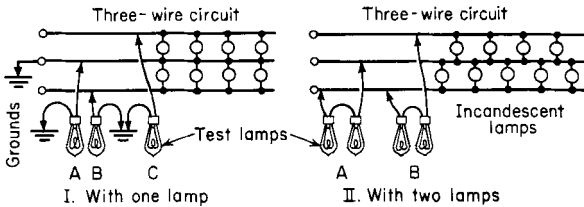


FIGURE 1.97 Locating neutral wire with a test lamp.

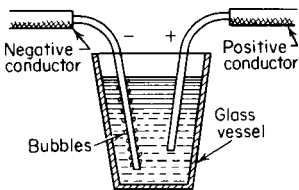


FIGURE 1.98 Determination of polarity with conductor ends in water.

209. To determine the polarity of dc circuits, hold the two conductors in a glass vessel of water as shown in Fig. 1.98. It may be necessary to pour a little common salt or acid into the water to render it conducting (pure water is a poor conductor). Bubbles will form only on the negative conductor, indicating the presence of current and the polarity of the circuit. Be careful not to touch the conductor ends together and cause a short circuit (see also Fig. 1.99 and Sec. 167 on neon testers).

210. The direction of current flow in a dc circuit can be determined with a compass as described in Sec. 89.

211. Ground detectors are desirable on ungrounded systems so that when an accidental ground occurs, it can be remedied before a second ground on another wire causes a short circuit. Control circuits especially should be suitably equipped with ground detectors, as a double ground may cause the closing or tripping of circuits carrying load, with serious consequences.

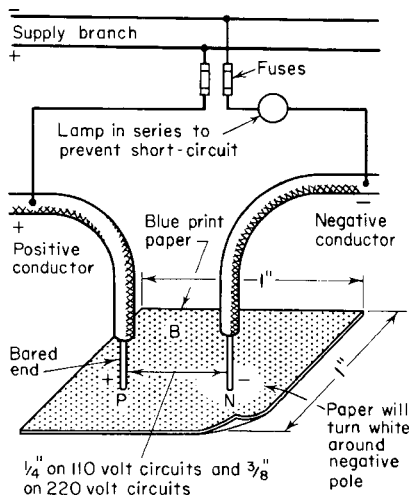


FIGURE 1.99 Blueprint paper used for testing polarity.

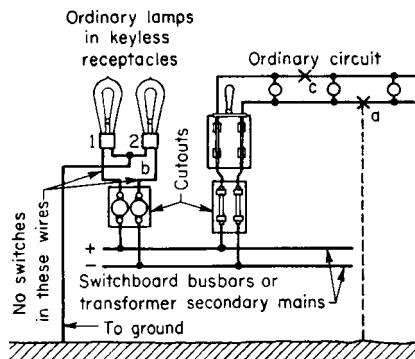


FIGURE 1.100 Two-lamp ground detector.

212. Ground detectors for two-wire dc circuits. Figure 1.100 shows a very good and simple detector for any two-wire low-voltage system. The lamps for the detector should each be of the same wattage and voltage, the voltage being about the same as that of the regular lamps in the plant, and two lamps which, when connected in series, burn with equal brilliancy should be selected. Although somewhat greater sensitiveness can be obtained with low-wattage lamps, such as 25-W lamps, for example, it is believed in general to be better to use lamps of the same wattage as those throughout the plant, because a burned-out or broken detector lamp can then be immediately replaced by a good lamp from the regular stock, thus avoiding the necessity of keeping on hand a few spare special lamps.

The detector lamps, being two in series across the proper voltage for one lamp, burn only dimly. If, however, a ground occurs on any circuit, as at *a*, the current from the positive busbar through lamp 1 divides on reaching *b* instead of all going through lamp 2, as it did when there was no ground. Part now goes down the ground wire and through the ground to *a*, as indicated by the broken line, and thence through the wires to the negative busbar. This reduces the resistance from *b* to the negative busbar, and therefore more current flows through lamp 1 than before, while less current flows through lamp 2. Lamp 1 consequently brightens, and lamp 2 dims. If the ground had occurred at *c* instead of *a*, lamp 2 would have brightened and lamp 1 would have dimmed.

Attention is called to the following points, which are frequently neglected in this form of detector:

1. The lamp receptacles should be keyless, and there should be no switches of any kind in any of the connecting wires, so that the detector will always be in operation. To be of greatest value, the detector must give indications instantly when a ground occurs. The observer should not have to wait until the engineer or electrician remembers to close a switch.
2. The wires should be protected by small fuses where they connect to the busbars. If these fuses are omitted, a short circuit across these wires would either burn up the wires or blow the main generator fuses.

3. The lamps should be placed very close together, within 1 or 2 in of each other if possible. The farther apart they are, the harder it is to detect any slight difference in brilliancy between them.
4. The ground wire should be carefully clamped to a pipe which is thoroughly connected to the ground, or some other equally good ground connection should be provided.

213. On dc control circuits, a telegraph type of relay, which will sound an alarm, is preferable to the lamps, since sufficient current can flow through the lamps as a result of double grounds to operate some relays and cause circuit breakers to operate.

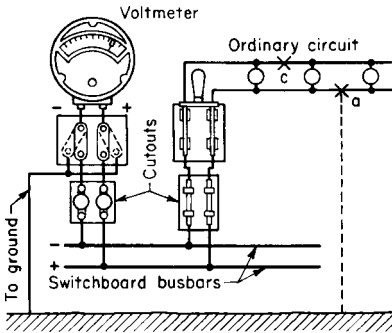


FIGURE 1.101 Voltmeter ground detector.

circuit to *a*, thence through the ground to the ground wire, and through the voltmeter to the negative busbar, causing the voltmeter to read something below 100 unless the ground at *a* were practically a perfect connection. In that case the voltmeter reading would be 100. If the positive side of the system were entirely free from grounds, the voltmeter reading would be 0.

Let us assume that under these conditions the voltmeter reads 50 and that the resistance of the voltmeter itself is 20,000 Ω . Since with no external resistance, when the voltmeter is connected directly to the busbars, it reads 100, while now it reads 50, the total resistance under the new conditions must be 40,000 Ω . The resistance of the ground at *a* is 40,000 – 20,000 = 20,000 Ω .

If the voltmeter had read only 20, the total resistance would have been $100/20 \times 20,000 = 100,000$, and the resistance of the ground 100,000 – 20,000 = 80,000 Ω .

214. An ordinary voltmeter can be used as an intermittent ground detector on dc circuits of any voltage, as shown in Fig. 1.101. The voltmeter ordinarily used to indicate the voltage on the system can, of course, be used for this purpose, the voltmeter switch shown in the cut being arranged to give the different desired connections.

If, for example, the system shown in Fig. 1.101 were of about 100 V, the voltmeter would register 100 when the levers of the switch were on the inside contact points as shown. If, now, the right-hand lever were moved to the outside contact point as shown dotted and there were a ground on the system, as at *a*, current would pass from the positive busbar through the

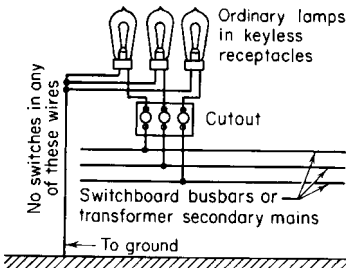


FIGURE 1.102 Three-phase lamp detector.

215. Ground detectors for ordinary low-voltage three-phase ac circuits. A lamp detector connected as in Fig. 1.102 can be used. The indication is the same as that with the lamp detectors described above. Thus, when a ground comes on one wire, the lamp attached to that wire dims and the other two lamps brighten. The NEC® now requires ground detectors on ungrounded ac systems. To meet this market there are now listed, self-contained ground detectors available that are considerably more reliable than incandescent lamps. However, an understanding of how the lamp system works is important because there are untold thousands of such detection systems still in use.

For ordinary two-phase or quarter-phase systems, in which the phases are entirely insulated from each other, the two-lamp detector can be used, with one detector on each phase. There are, however, in this class of wiring several complicated systems, to all of which the lamp-detector principle is applicable, although the exact method of connections differs in each case, so that no general rule can be given.

216. Electrostatic ground detectors are used for high-voltage ungrounded ac systems. This instrument for use on three-phase circuits consists of a semispherical vane flexibly supported (Fig. 1.103). Around the circumference of the vane are three stationary curved plates, each being connected through a capacitor to one of the three phase lines. The operation is due to the electrostatic field created between the plates. The vane is grounded, and a ground on any line removes the charge between the plate connected to that line and the ground. This causes the vane to move toward the other two plates against the action of a spring. Thus, the vane being off center indicates a ground. The capacitors (Fig. 1.103) insulate the instrument from the high voltage of the line. A single-phase electrostatic ground detector is shown in Fig. 1.104.

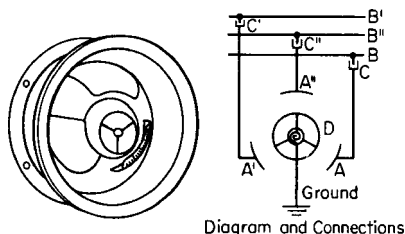


FIGURE 1.103 Three-phase electrostatic ground detector. [Westinghouse Electric Corp.]

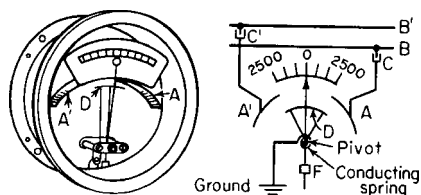


FIGURE 1.104 Single-phase electrostatic ground detector. [Westinghouse Electric Corp.]

217. A triplex voltmeter, which is an instrument containing three voltmeter movements with short scales (Fig. 1.105), can also be used on ac systems. Each voltmeter is connected between one line and ground. With no grounds all voltmeters should read zero, but a ground on one line will cause the other two meters to read. The magnitude of the reading will depend on the resistance of the meter and the resistance of the ground, a good ground being indicated by a full line-voltage reading.

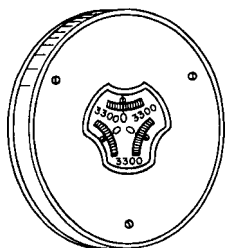


FIGURE 1.105 Electrostatic ground detector (triplex voltmeter type). [General Electric Co.]

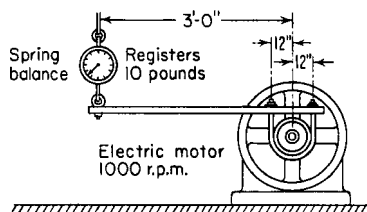


FIGURE 1.106 Horsepower determination with a Prony brake.

EXAMPLE The torque is 10 lb at 3-ft radius, or 30 lb · ft, or 30 lb at 1-ft radius. Since the motor pulley is turning at the rate of 1000 rpm, a point on its circumference travels $2\pi rR = 2 \times 3.14 \times 1 \times 1000 = 6280$ ft/min. At its circumference the pulley is overcoming a resistance of 30 lb. Therefore, it is doing work at the rate of $30 \times 6280 = 188,400$ ft · lb/min. Since, when work is done at the rate of 33,000 ft · lb/min, a horsepower is developed, the motor is delivering $188,400 \div 33,000 = 5.7$ hp. It should be noted that though the torque at the circumference of the motor pulley was considered in the example, it is not necessary to take the torque at that point. The torque may be taken at any point if the radius to that point is used instead of the radius of the pulley. The formula for determining the horsepower output of a motor under test with a Prony brake is

$$\text{hp} = 2 \times \pi TS \div 33,000$$

where $\pi = 3.1416$, T = torque in pound-feet, and S is the speed of the motor in rpm. Substituting the values from the above example in this formula,

$$\text{hp} = 2 \times 3.14 \times 30 \times 1000 \div 33,000 = 5.7 \text{ hp}$$

This is the same result secured by the former and longer method. In metric units, work is expressed in kilogram-meters, so, conversely torque should be expressed in meter-kilograms or in kilograms at a given radius in meters.

219. The testing of motors and generators for faults is treated in Div. 7, "Generators and Motors."

HARMONICS

220. What are harmonics?* (Dave Dini-Underwriters Laboratories) The word *harmonics* was originally used to signify the appealing sounds obtained by touching various points along a vibrating string. When several of these musical vibrations are at frequencies that are integral multiples of a major frequency or tone, a musical chord is produced. Piano or guitar music is a good example of this. By definition, a harmonic is a sinusoidal component of a periodic wave which has a frequency that is an integral multiple of the fundamental frequency. To the electrical engineer, harmonics are voltages and currents which appear on the electrical system at frequencies that are integral multiples of the generated frequency (normally 60 Hz). Examples of 60-Hz harmonics would be 180 Hz (third), 300 Hz (fifth), 420 Hz (seventh), and so on.

When one or more harmonic components are added to the fundamental frequency, a distorted (nonsinusoidal) waveform is produced. Harmonic distortion is usually expressed as a percentage of the fundamental voltage or current, and the square root of the sum of the squares for all nonfundamental harmonics is commonly referred to as the total harmonic distortion (THD). Fig. 1.107 illustrates a nonsinusoidal waveform having 20 percent third harmonic and 15 percent fifth harmonic distortion (25 percent THD).

When analyzing a nonsinusoidal waveform, it is often important to know the magnitude and phase of the harmonic components present. To calculate this mathematically, the periodic waveform can be represented by a series of individual sinusoids added together. This

*This material is reproduced with the permission of Underwriters Laboratories, Inc., © 1995.

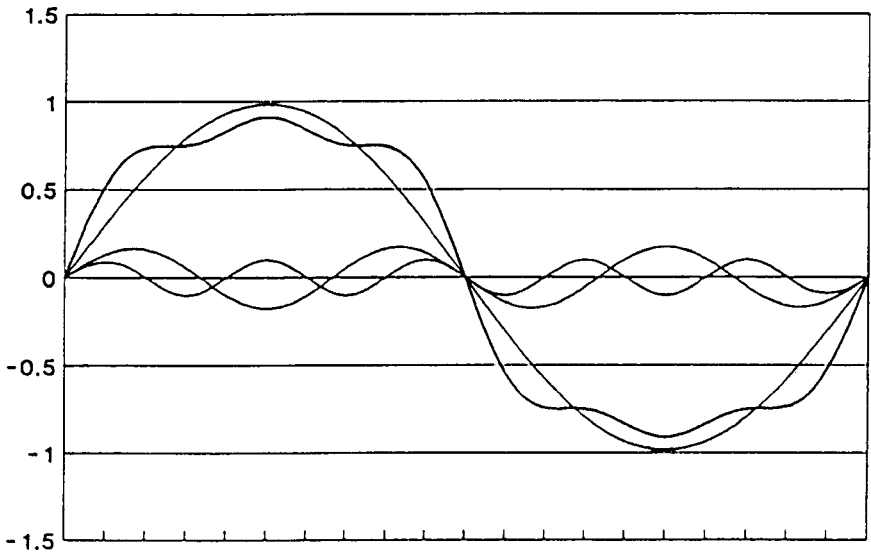


FIGURE 1.107 20 percent third harmonic and 15 percent fifth harmonic distortion (25 percent THD).

mathematical expression is known as a *Fourier series*, and is named after the famous French mathematician, Jean Baptiste Fourier (1768–1830), who first postulated this analytical technique in 1822.

The phase relationship between harmonic components is very important. Figures 1.108 and 1.109 illustrate a third harmonic component 20 percent of the fundamental added both in-phase and 60° out-of-phase with respect to the fundamental frequency. Addition of the in-phase fundamental reduces the peak value of the waveform while the out-of-phase fundamental increases it.

Symmetrical waveforms will contain only odd numbered harmonics (third, fifth, seventh, etc.), while nonsymmetrical waveforms can contain even and odd harmonics. Since most

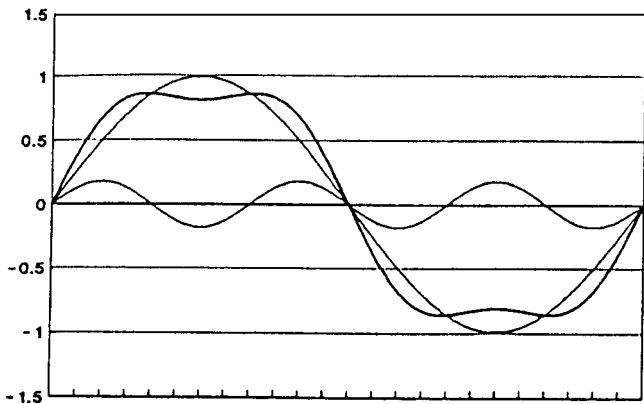


FIGURE 1.108 20 percent third harmonic in-phase with respect to the fundamental frequency.

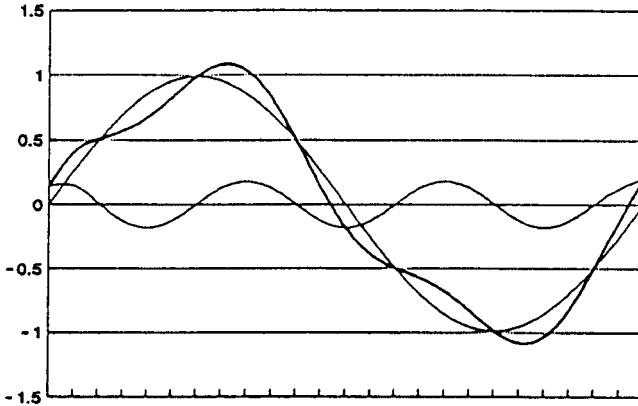


FIGURE 1.109 20 percent third harmonic 80° out-of-phase with respect to the fundamental frequency.

loads are essentially symmetrical, the odd number harmonics will be most noticeable in a waveform analysis. However, some loads, such as half-wave rectifiers, produce nonsymmetrical waveforms which contain both even- and odd-numbered harmonic components.

221. Why worry about harmonics? The problems associated with electric power system harmonics are nothing new. In fact, as early as the 1920s electric utility engineers recognized distorted waveforms on transmission lines. One of their major concerns was mutual inductive coupling between transmission lines and telephone circuits. Communication circuits are more sensitive to harmonic currents than they are to power frequency (60 Hz) signals since harmonic frequencies are closer to the audible frequencies that are most noticeable to the human ear. Today, with shielded cables and twisted pairs used more frequently in communication circuits, this problem with mutual coupling of circuits is less common [2]. With the substantial increase in nonlinear loads resulting from today's new technology electronic equipment, the problems with power system harmonics have returned, and a cure for the problem may not be as simple as twisting wires or shielding cables.

To the safety engineer, the problems associated with harmonics can generally be classified into two categories: (1) those which cause a nuisance or disruption to the normal operation of equipment, and (2) those which can increase the risk of fire or electric shock. Typical nuisance problems include audible noise, vibrations, decrease in motor torque, TV and radio interference, and errors in inductive watt-hour meter readings. Of much greater importance, however, is when harmonic voltages and currents lead to overheating of components and dielectric breakdown of insulation systems.

Harmonic current can cause overheating of conductors and insulating materials as a result of "skin effect." Skin effect describes the increase in ac resistance of a conductor as frequency increases. In a good conductor, the current density is greatest near the surface or skin of the conductor. The depth of current penetration, or "skin depth" as it is often called, is inversely proportional to the frequency of the current. Therefore, the higher the frequency, the less skin depth available in the conductor. Engineers do not worry about skin effect at 60 Hz, since it has been factored into most wire ampacity tables [3]. However, in many nonlinear electronic loads, over half of the rms current can be at a frequency greater than 60 Hz. Harmonic current can cause increased heating due to skin effect in wires,

cables, motors, and transformers. Harmonic current can also cause changes in the opening times for fuses and thermal-magnetic circuit breakers. Harmonic voltages can also have an undesirable effect on equipment. Since the reactance of a capacitor decreases with increasing frequency, line-to-ground and neutral-to-ground capacitors will “leak” more harmonic current to ground than they would at 60 Hz. Nonsinusoidal voltages can also have peak potentials greater than 1.4 times the rms voltage. These higher peak voltages can lead to increased dielectric breakdowns as most electric clearance and creepage distances are based on sinusoidal voltages.

Perhaps the greatest danger from harmonic distortion is with overheating of neutral conductors of 3-phase, 4-wire distribution systems. In a balanced 3-phase wye system with all sinusoidal currents (linear loads), the neutral current will be zero. Even with a maximum unbalance, the neutral current can be no greater than the maximum phase current. However, as will be shown later, certain harmonic currents that are odd multiples of the third harmonic (third, ninth, fifteenth, etc.) add rather than cancel in the neutral conductor. This could theoretically result in the neutral conductor carrying almost twice the rms current of a phase conductor, even in a balanced system.

222. Causes of harmonic distortion. For all practical purposes, it can be assumed that the main source of electric power, namely the utility system generator, is a good source of supply, and at the point of generation a pure sinusoidal waveform exists. Therefore, any distortion that occurs on the electric distribution system must be due to the load elements connected to the system. Of particular concern with harmonic distortion are nonlinear loads, those loads which have load current that is not proportionally related to the system voltage. In general, the major types of nonlinear loads can be divided into three categories: (1) ferromagnetic devices, (2) electronic switching power converters, and (3) arcing devices [2].

Motors and transformers comprise the largest amount of ferromagnetic loads connected to the distribution system. The load characteristics of motors tend to be more linear than transformers since motors have an air gap. Power transformers, on the other hand, typically are the first components to be seen on the distribution system, and can be an important factor when considering waveform distortion. Even partial saturation of the transformer iron core will cause harmonic magnetizing currents which differ significantly from a sinusoidal wave. Loads containing saturated iron cores, such as fluorescent lighting ballasts, will also draw distorted current, usually very high in third and fifth harmonics.

Traditional methods of power conversion are giving way to new technology electronic power converters. This class of equipment includes switch mode power supplies (SMPS), electronic motor speed controllers, uninterruptible power supplies (UPS), lighting dimmers, and electronic ballasts. The common element among these power converters is that they all use electronic switching to turn on and off current at specific phase angles. The effect of this nonlinear loading will draw currents with high harmonic content.

The third class of nonlinear loads is arcing devices which would include electric discharge lighting (i.e., fluorescent, sodium vapor, mercury vapor, etc.), and arc furnaces. Arc furnaces can induce harmonics onto the distribution system through a combination of arc ignition delays and the highly nonlinear arc current characteristics associated with the arc furnace electrodes [4]. Another type of arcing device, the electric discharge lamp, which is used extensively in commercial and industrial lighting, can produce high harmonic current draw, especially at 180 Hz (third harmonic).

Significant amounts of harmonic distortion on the distribution system may not only arise from large, high power nonlinear loads, but also from the compound effects of a large number of smaller loads. This is becoming more evident as the number of nonlinear loads on the distribution system increases. In the office environment, widespread use of SMPS can be

found in desktop computers, laser printers, monitors, copiers, and FAX machines. These high volume nonlinear loads, along with computer UPSs, fluorescent lighting, energy management light dimming, and ventilation system electronic fan speed controllers have all added to a sharp increase in the harmonic distortion of the office power distribution system.

In the factory environment, industrial automation equipment such as programmable controllers, electronic motor speed controllers, robotic controls, and automated machine work stations are becoming more common. These devices all produce an appreciable amount of harmonic current.

223. Effects of harmonic distortion. Harmonic distortion can affect the electrical distribution system and the loads connected to it in various ways. Of particular concern are (1) increased thermal stress due to skin effect heating, (2) increased insulation stress and dielectric breakdown due to voltage harmonics, and (3) nuisance or disruption of normal equipment operation due to nonsinusoidal voltages and currents [5]. Many of these influencing factors can result in increased safety risks from overheating equipment and conductors, line and ground faults, and failures of safety control systems to function properly. The following groups of products have been known to be sensitive to at least some of the effects of harmonic distortion.

Motors. Harmonic voltages and currents will increase the rotor winding and stator winding losses in motors. Since these losses are I^2R losses, increased heating due to skin effect would be expected at the higher harmonic frequencies.

Transformers. Waveform distortion will cause increased heating in all types of transformers. The increased heating is due to an increase in the frequency dependent eddy current and hysteresis core losses. Increased heating could also be expected from skin effect heating in the windings.

Capacitors. Since the impedance of a capacitor is frequency dependent (decreasing reactance with increasing frequency), capacitors are a load element which will be affected by harmonic distortion. The high frequency components found in distorted waveforms can cause additional leakage current in line-to-line and line-to-ground capacitors. Leakage current measurements in appliances operating from a pure 60-Hz voltage may be significantly less than the leakage current found in the same appliance supplied from a power source high in harmonics.

Air Gap Switches. Current interruption devices such as switches, relays, circuit breakers, etc., can be affected by current waveform distortion. The problem is most prevalent when the switch is made to interrupt nonsinusoidal current with a high di/dt value at current zero. This condition can make current interruptions more severe than interrupting sinusoidal current.

Thermal Overcurrent Protection. Thermal overcurrent protective devices, such as fuses and inverse-time circuit breakers, are affected by increased skin effect heating at the higher harmonic current levels. This excess heating can cause shifts in the time-versus-current characteristics of the protective device, usually resulting in nuisance tripping.

Induction Watthour Meters. Power system harmonics can cause errors in electric meter readings. Since induction discs in watthour meters are designed to monitor nondistorted fundamental current, harmonic current from nonlinear loads will cause measurement errors, usually, resulting in the consumer paying more for electricity than if the same rms current being drawn was sinusoidal.

Protective Relays. When protective relays are subjected to system harmonics, relay misoperation is possible, resulting in undesired pick-up values, changes in voltage and current operating characteristics, and false tripping.

Insulated Conductors. Both voltage and current harmonics can have undesirable effects on insulated conductors. Voltage harmonics can have rated peak voltage values greater than 1.4 times the rms voltage value. These higher than expected steady-state peak voltages can lead to insulation degradation and dielectric breakdown. In addition, the increased skin effect heating from current harmonics can also cause insulation degradation, and add to a decrease in cable life.

Neutral Currents. In a 3-phase, 4-wire wye distribution system (i.e., 120/208 V or 277/480 V), loads connected to the individual single phases (120 V or 277 V) will have load currents that return through the common neutral conductor. Since the phase voltages are 120° out of phase, the 60 Hz phase currents will cancel out when they return through the common neutral. If the system is balanced, and all three phase currents are equal, the 60 Hz neutral current will be zero. Figures 1.110, 1.111, and 1.112 illustrate this occurrence through the use of phasor diagrams.

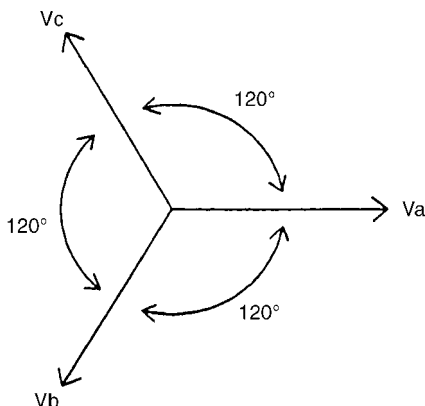


FIGURE 1.110 60-Hz phase voltages.

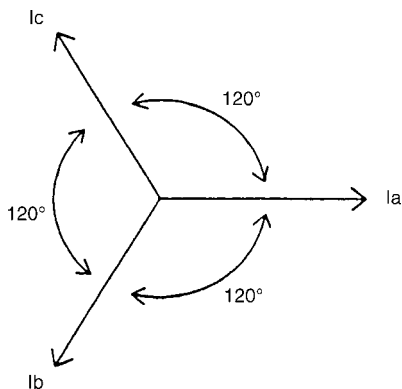


FIGURE 1.111 60-Hz phase currents.

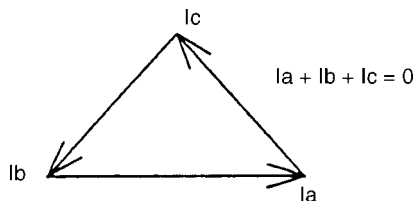


FIGURE 1.112 60-Hz neutral current.

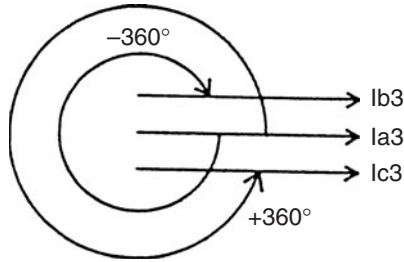


FIGURE 1.113 Third harmonics.

A problem develops when the load current in the 3-phase wye system is nonsinusoidal, and some of the current being drawn by the load is at a frequency other than 60 Hz. For example, Figs. 1.113 and 1.114 show that the third harmonic currents (180 Hz) will be 360° ($120^\circ \times 3$) out of phase, and the fifth harmonic currents (300 Hz) will be 600° ($120^\circ \times 5$) out of phase. The phasor diagram for the fifth harmonic (Fig. 1.114) shows that the fifth harmonic currents will cancel just like the 60-Hz currents. In fact, using the same phasor technique it can be shown that all harmonics that are not multiples of the third harmonic will cancel in the neutral. All harmonics that are multiples of the third (third, sixth, ninth, etc.) will add rather than cancel in the neutral conductor (Fig. 1.113). These multiples of the third harmonic are often referred to as *triplen harmonics*, and they can have a very serious effect on overheating of the neutral conductor.

In a typical 3-phase, 4-wire distribution system, the neutral conductor has no overcurrent protection and is usually of a size not larger than the phase conductors. When all of the load currents are 60 Hz, this presents no problem since at maximum unbalance the neutral conductor will only carry a maximum of rated line current, and in most cases, due to phase balancing, the neutral current will be considerably less. When load currents are high in triplen harmonics, the situation in the neutral conductor is significantly different. Although theoretically the neutral current could approach three times the line current, this situation is rather improbable. However, in office areas with many computer products on the

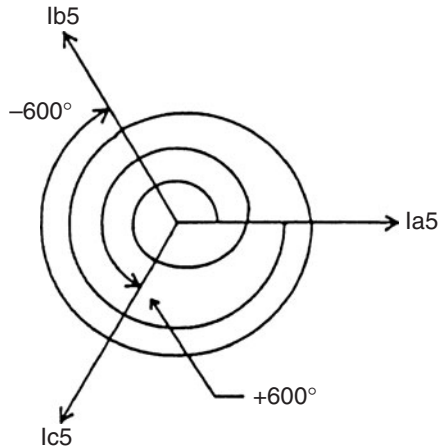


FIGURE 1.114 Fifth harmonic currents.

120/208 V distribution system, or several electronic fluorescent lighting loads connected to the 277/480-V lighting system, neutral current in excess of the branch circuit protection rating is possible. Since there is no overcurrent protection in the neutral conductor, overheating of a nonoversized neutral conductor can occur.

224. Measurement of harmonics. The measurement of nonsinusoidal voltages and currents may require equipment different from the conventional meters used to measure sinusoidal waveforms. Many voltage and current meters respond only to the peak value of a waveform, and indicate a value that is equivalent to the rms value of a pure sine wave. For a sinusoidal waveform, the rms value will be 0.707 times the peak value. Meters of this type are known as *average responding meters* and will only give a true reading if the waveform being measured is sinusoidal. Both analog and digital meters may be average responding instruments. Voltages and currents which are nonsinusoidal, such as those with harmonic frequencies, cannot be accurately measured using an average responding meter. Only a meter that measures “true rms” can be used to correctly measure the rms value of a nonsinusoidal waveform.

When measuring a nonsinusoidal waveform, it is often desirable to also know the magnitude of each frequency present. To accomplish this, a *harmonic analyzer* is necessary. An analog harmonic analyzer is a voltage measurement instrument that uses selective filtering to tune out all frequencies except the one being analyzed (see Fig. 1.115).

With the widespread use of microprocessors, and recent advances in digital data acquisition, the analog analyzers have been superseded by analyzers capable of digital harmonic analysis. The most popular harmonic analyzers today use a Fast Fourier Transform (FFT) technique to breakdown a complex waveform into its individual frequency components.



FIGURE 1.115 An eight-channel analyzer for capturing transients, voltage sags, swells, harmonics, and other power disturbances. Used in conjunction with the PQ Task Card®, the Power Platform® can generate reports and do K-factor computations for transformer selection. [Dranetz Technologies, Inc.]

The FFT is a useful tool for quickly performing a Fourier analysis on a block of sampled data. Harmonic analyzers based on FFT also have the ability to display the phase as well as magnitude of each frequency present. Current transformers and clamp-on ammeters easily adapt to digital harmonic analyzers, making current as well as voltage harmonic measurements a simple procedure.

225. Eliminating harmonics. Eliminating harmonic voltages and currents from the electric distribution system is an important topic, not only from the standpoint of keeping nuisance problems to a minimum, but also in reducing the risk of a potential fire or electric shock. When the voltage on the electric distribution system becomes distorted, all loads become affected, as even a purely resistive load will provide distorted current if the voltage drop across it is distorted. Likewise, if a distorted current is injected across a resistance, the voltage drop across it will be distorted. Therefore, the first step in the management of harmonic distortion problems must be concerned with controlling the flow of harmonic currents, and preventing them from entering the distribution system where they can cause voltage distortion.

Eliminating harmonic distortion is much like eliminating electromagnetic interference (EMI). To control high-frequency interference, special EMI filters are often employed. Since a filter is designed to reduce the amplitude of one or more fixed frequency currents or voltages, a harmonic filter is one means of reducing waveform distortion. The difficulty with designing a harmonic filter versus an EMI filter are twofold. First, since the harmonic frequencies are very close to the power frequency (60 Hz), a very selective filter is required. Second, the power levels of the harmonic frequencies are much greater than the power of typical EMI frequencies.

Frequency selective harmonic filters can be used as either a series filter (Fig. 1.116) or a shunt filter (Fig. 1.117). A series filter uses a high impedance to block the flow of harmonic current from the nonlinear load back to the power source. A shunt filter provides a low impedance path to divert the harmonic current to ground. Although either method of filtering will reduce harmonics, the shunt filter is usually preferred since the series filter must be designed for full line current and insulated for line voltage, whereas the shunt filter does not [6].

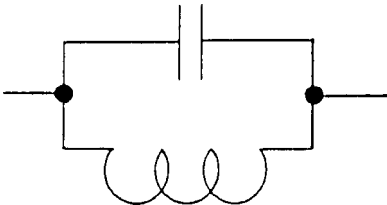


FIGURE 1.116 Series filter.

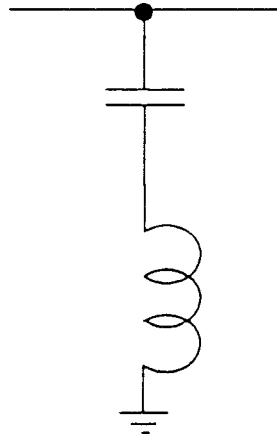


FIGURE 1.117 Shunt filter.

Besides using passive filters for controlling harmonic distortion, a wide variety of active methods have been proposed for improving current waveform distortion. One promising application for active filtering is to incorporate this technology into the design of electronic switching power supplies, a product notorious for producing distorted current (typically greater than 100 percent THD). Although the circuitry to achieve active filtering is quite complex, all of the control functions associated with such a scheme have been incorporated into a single integrated circuit chip, thus making active filtering a practical choice for the electronic switching power supply manufacturer. Although this technology is relatively new and in many cases still being developed, some electronic power supply manufacturers have reported improvements in current distortion levels to as low as 3 percent THD [7]. When considering the vast numbers of desktop computer equipment being used in automated factories and office areas, any improvement in electrical power supply current distortion will have a significant impact on improving the overall quality of the electric distribution system.

Alternate methods of harmonic elimination involving cancellation of harmonic currents have also been proposed. These include magnetic flux compensation and current injection techniques. However, these methods usually have several disadvantages and are in need of much technical advancement before they can become practical.

REFERENCES

- [1] IEEE Working Group on Power Systems Harmonics, "Power system harmonics: An overview," *IEEE Transactions on Power Apparatus and Systems*, vol. PAS-102, no. 8, August 1983.
- [2] Dugan, R., McGranaghan, M., Rzy, I., and Stovall, J., *Electric Power System Harmonics Design Guide*, McGraw-Edison Power Systems, Division of Cooper Industries, 1987.
- [3] Linders, J., "Electric wave distortions: their hidden costs and containment," *IEEE Transactions on Industry Applications*, vol. IA-15, no. 5, September/October 1979, pp. 458–470.
- [4] Arrillaga, J., Bradley, D., and Bodger, P., *Power System Harmonics*, New York, John Wiley and Sons, 1985.
- [5] IEEE Load Characteristics Task Force; Effects of Harmonics Task Force; Working Group on Power Systems Harmonics, "The effects of power system harmonics on power system equipment and loads," *IEEE Transactions on Power Apparatus and Systems*, vol. PAS-104, no. 9, September 1985, pp. 2555–2560.
- [6] Arrillaga, J., "Harmonic elimination," *International Journal of Electrical Education*, vol. 19, 1982, pp. 125–142.
- [7] Dixon, L., "High power factor switching preregulator design optimization," *Unitrode Switching Regulated Power Supply Design Manual*, Unitrode Corp., 1990.
- [8] Freund, A., "Double the neutral and derate the transformer—or else!" *EC&M*, December 1988, pp. 81–86.

This page intentionally left blank

DIVISION 2

PROPERTIES AND SPlicing OF CONDUCTORS

Electrical Conducting Wires and Cables	2.1
Cable Joints and Terminal Connections	2.61
Aluminum-Building-Wire Installation Practices	2.100
Termination and Splice Kits	2.144

ELECTRICAL CONDUCTING WIRES AND CABLES

1. Electrical conducting wires and cables are available in a great variety of types and forms of construction. To cover this one subject completely would require a large volume. The aim of the authors has been, therefore, to include in this division sufficient general information with respect to the materials employed, method of construction, and types available so that the reader can select intelligently the proper cable for a given application. At the end of the section, more detailed tabular information is included for the types of cables that the average worker will use most frequently.

2. Electric Wire and Cable Terminology

Wire. A slender rod or filament of drawn metal. (This definition restricts the term *wire* to what would ordinarily be understood by the term *solid wire*. In the definition the word *slender* is used in the sense that the length is great in comparison with the diameter. If a wire is covered with insulation, it is properly called an *insulated wire*, although the term *wire* refers primarily to the metal; nevertheless, when the context shows that the wire is insulated, the term *wire* will be understood to include the insulation.)

Conductor. A wire or combination of wires not insulated from one another, suitable for carrying a single electric current. (The term *conductor* does not include a combination of conductors insulated from one another, which would be suitable for carrying several different electric currents. Rolled conductors, such as busbars, are, of course, conductors but are not considered under the terminology given here.)

Stranded Conductor. A conductor composed of a group of wires or any combination of groups of wires. (The wires in a stranded conductor are usually twisted or braided together.)

Cable. (1) A stranded conductor (single-conductor cable) or (2) a combination of conductors insulated from one another (multiconductor cable).

The component conductors of the second kind of cable may be either solid or stranded, and this kind may or may not have a common insulating covering. The first kind of cable is a single conductor, while the second kind is a group of several conductors. The term

cable is applied by some manufacturers to a solid wire heavily insulated and lead-covered; this usage arises from the manner of the insulation, but such a conductor is not included under this definition of *cable*. The term *cable* is a general one, and in practice it is usually applied only to the larger sizes. A small cable is called a *stranded wire* or a *cord*, both of which are defined below. Cables may be bare or insulated, and insulated cables may be armored with lead or with steel wires or bands.

Strand. One of the wires or groups of wires of any stranded conductor.

Stranded Wire. A group of small wires used as a single wire. (A wire has been defined as a *slender rod* or filament of drawn metal. If such a filament is subdivided into several smaller filaments or strands and is used as a single wire, it is called *stranded wire*. There is no sharp dividing line of size between a stranded wire and a cable. If used as a wire, for example in winding inductance coils or magnets, it is called a stranded wire and not a cable. If it is substantially insulated, it is called a *cord*, defined below.)

Cord. A small cable, very flexible and substantially insulated to withstand wear. (There is no sharp dividing line in respect to size between a cord and a cable and likewise no sharp dividing line in respect to the character of insulation between a cord and a stranded wire.)

Concentric Strand. A strand composed of a central core surrounded by one or more layers of helically laid wires or groups of wires.

Concentric-Lay Conductor. A conductor composed of a central core surrounded by one or more layers of helically laid wires. (Ordinarily it is known as a concentric-strand conductor. In the most common type, all the wires are of the same size, and the central core is a single wire.)

Concentric-Lay Cable. A multiconductor cable composed of a central core surrounded by one or more layers of helically laid insulated conductors.

Rope-Lay Cable. A cable composed of a central core surrounded by one or more layers of helically laid groups of wires. (This cable differs from a concentric-lay conductor in that the main strands are themselves stranded and all wires are of the same size.)

Multiconductor Cable. A combination of two or more conductors insulated from one another. (Specific cables are called *3-conductor cable*, *19-conductor cable*, etc.)

Multiconductor Concentric Cable. A cable composed of an insulated central conductor with one or more tubular stranded conductors laid over it concentrically and insulated from one another. (This kind of cable usually has two or three conductors.)

N-Conductor Cable. A combination of N conductors insulated from one another. (It is not intended that the name as given here be actually used. One would instead speak of a 3-conductor cable, a 12-conductor cable, etc. In referring to the general case, one may speak of a multiconductor cable, as in the definition for *cable* above.)

N-Conductor Concentric Cable. A cable composed of an insulated central conducting core with tubular stranded conductors laid over it concentrically and separated by layers of insulation. (Usually it is only 2-conductor or 3-conductor. Such conductors are used in carrying alternating currents. The remarks on the expression “ N -conductor” in the preceding definition apply here also.)

Duplex Cable. A cable composed of two insulated single-conductor cables twisted together with or without a common covering.

Twin Cable. A cable composed of two insulated conductors laid parallel and either attached to each other by insulation or bound together with a common covering.

Twin Wire. A cable composed of two small insulated conductors laid parallel and having a common covering.

Twisted Pair. A cable composed of two small insulated conductors twisted together without a common covering.

Triplex Cable. A cable composed of three insulated single-conductor cables twisted together.

Sector Cable. A multiconductor cable in which the cross section of each conductor is approximately the sector of a circle.

Shielded-Type Cable. A cable in which each insulated conductor is enclosed in a conducting envelope so constructed that substantially every point on the surface of the insulation is at ground potential or at some predetermined potential with respect to ground under normal operating conditions.

Shielded-Conductor Cable. A cable in which the insulated conductor or conductors are enclosed in a conducting envelope or envelopes, so constructed that substantially every point on the surface of the insulation is at ground potential or at some predetermined potential with respect to ground.

Composite Conductor. A conductor consisting of two or more strands of different metals, such as aluminum and steel or copper and steel, assembled and operated in parallel.

Round Conductor. Either a solid or a stranded conductor of which the cross section is substantially circular.

Cable Filler. Material used in multiconductor cables to occupy the spaces formed by the assembly of the insulated conductors, thus forming a core of the desired shape.

Cable Sheath. Protective covering applied to cable.

Insulation of a Cable. The part of a cable which is relied upon to insulate the conductor from other conductors or conducting parts or from ground.

Insulation Resistance of an Insulated Conductor. The resistance offered by a conductor's insulation to an impressed direct voltage, tending to produce a leakage of current through it.

Lead-Covered Cable (Lead-Sheathed Cable). A cable provided with a sheath of lead to exclude moisture and afford mechanical protection.

Serving of a Cable. A wrapping applied over the core of a cable before the cable is leaded or over the lead if the cable is armored. Materials commonly used for serving are jute, cotton, and duct tape.

Resistive Conductor. A conductor used primarily because it possesses high electric resistance.

3. Wire sizes. The size of wire is usually expressed according to a wire gage, and the different sizes are referred to by gage numbers. Unfortunately several systems of gages have been originated by different manufacturers for their products. However, it has become standard practice in the United States to employ the American wire gage (AWG), also known as the Brown and Sharpe (B&S), to designate copper and aluminum wire and cable used in the electrical industry. The names, abbreviations, and uses of the most important gages employed for the measurement of wires and sheet-metal plates are given in Table 4. A numerical comparison of these gages is given in Table 85. In most cases the larger the gage number, the smaller the size of the wire.

4. Names, Abbreviations, and Uses of the Principal Wire and Sheet-Metal Gages

Col. no. in Table 85	Names and abbreviations		Ordinarily used for measuring
	Usual	Others	
1	American wire gage (AWG)	Brown and Sharpe (B&S)	Copper, aluminum, copper-clad aluminum, and other nonferrous wires, rods, and plates. Wall thickness of tubes
2	Steel wire gage (SWG)	Roebbling, American Steel and Wire, Washburn & Moen, National, G. W. Prentiss	Iron and steel wire. Wire nails. Brass and iron escutcheon pins
3	Birmingham wire gage (BWG)	Stubs iron wire gage, iron wire gage	Galvanized iron and steel wire. Iron and copper rivets. Thickness of wall of nonferrous seamless tubing
4	Stubs steel wire gage	Drill rod
5	British standard wire gage (SWG)	Imperial standard wire gage, standard wire gage, English legal standard	Legal standard wire gage for Canada and Great Britain; used sometimes by American telephone and telegraph companies for bare copper line wire
6	Steel music wire gage (MWG)	Hammacher, Schlemmer, Felten & Guilleaume	Steel music wire
7	U.S. Standard Gage (USG)	Stainless steel sheets
8	Manufacturers standard gage (MSG)	Legal standard for iron and steel plate. Monel metal. Galvanized sheets
9	American zinc	Sheet zinc
10	Birmingham gage (BG)	Legal standard for iron and steel sheets in Canada and Great Britain

5. How to remember the AWG or B&S wire-gage table (Westinghouse Diary).

A wire that is three sizes larger than another wire has half the resistance, twice the weight, and twice the area. A wire that is 10 sizes larger than another wire has one-tenth the resistance, 10 times the weight, and 10 times the area. Number 10 wire is 0.10 (more precisely 0.102) in (2.6 mm) in diameter; it has an area of 10,000 (more precisely 10,380) cmil (5.26 mm²); it has a resistance of 1 Ω /1000 ft (304.8 m) at 20°C (68°F); and it weighs 32 (more precisely 31.4) lb (14.24 kg)/1000 ft (304.8 m).

The weight of 1000 ft (304.8 m) of No. 5 wire is 100 lb (45.36 kg). The relative values of resistance (for decreasing sizes) and of weight and area (for increasing sizes) for consecutive sizes are 0.50, 0.63, 0.80, 1.00, 1.25, 1.60, 2.00. The relative values of the diameters of *alternate* sizes of wire are 0.50, 0.63, 0.80, 1.00, 1.25, 1.60, 2.00. To find resistance, drop one cipher from the number of circular mils; the result is the number of feet per ohm. To find weight, drop four ciphers from the number of circular mils and multiply by the weight of No. 10 wire.

6. Wire-measuring gages

(Figs. 2.1 and 2.2) are made of steel plate. With the kind shown in Fig. 2.1, the wire being measured is inserted in the slots in the periphery until a slot is found in which the wire just fits. The wire's gage number is indicated opposite the slot. A measuring gage like that of Fig. 2.1 indicates the numbers of one gage or system only. A gage like that of Fig. 2.2 indicates the numbers of four gages but has the disadvantage that, to use it, the end of the wire must be available to be pushed through the slot. The wire is pushed as far toward the small end of the slot as it will go, and its gage number is then indicated opposite the point where the wire stops. The gage of Fig. 2.2 is arranged to indicate gage numbers for the American standard screw gage, English wire gage, and American wire gage, and one scale is divided into 30 seconds of an inch.

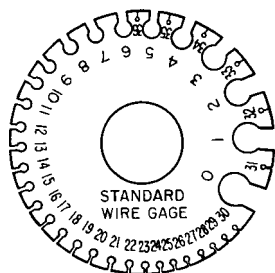


FIGURE 2.1 Standard wire gage (greatly reduced).

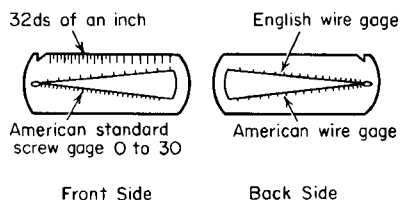


FIGURE 2.2 Angular wire gage (greatly reduced).

7. A micrometer

is frequently used to determine the size of a given wire or cable. It provides an accurate means of measuring the diameter of the wire or cable to thousandths of an inch and of estimating to ten-thousandths. After the diameter has been determined, the corresponding gage size may be ascertained by referring to a wire table. The wire to be measured is placed between the thumbscrew and the anvil (Fig. 2.3), and the screw is turned until the wire is lightly held between the screw and the anvil. The screw has 40 threads to the inch, so that one complete turn of the screw in left-hand direction will open the micrometer $\frac{1}{40}$ in. On the edge of the collar is a circular scale divided into 25 divisions; hence, when the screw is turned through one of these divisions, the micrometer will open $\frac{1}{25} \times \frac{1}{40}$ in = $\frac{1}{1000}$ in. The shaft on which the collar turns is marked into tenths of an inch, and each $\frac{1}{10}$ is subdivided into four parts. Each of these parts must be equal to $\frac{1}{10} \times \frac{1}{4}$ in =

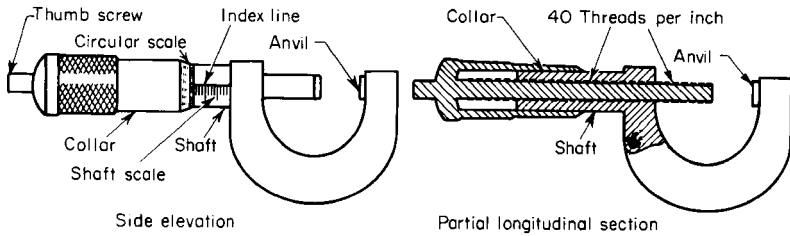


FIGURE 2.3 A micrometer caliper.

$\frac{1}{40}$ in = 0.025 in. Therefore, a complete rotation of the collar or 25 of its divisions will equal one division of the shaft, or 0.025 in.

8. To read a micrometer (see Fig. 2.4 and the paragraph above), note the number on the circular scale nearest the index line. This indicates the number of thousandths. Note the number of small divisions uncovered on the shaft scale. Each one of these small divisions indicates 0.025 in ($\frac{25}{1000}$). Add together the number of thousandths indicated on the circular scale and 0.025 times the number of small divisions wholly uncovered on the shaft scale. The sum will be the distance that the jaws are apart. Examples are shown in Fig. 2.4.

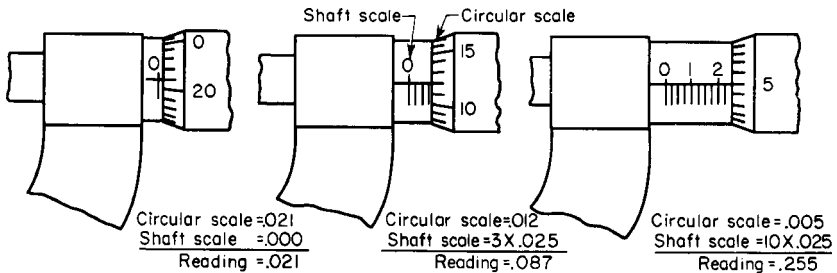


FIGURE 2.4 A micrometer caliper.

9. Classification of wires or cables. Electrical conducting wires and cables may be classified in several different ways, depending upon the particular factor of consideration as follows:

1. According to degree of covering of wire or cable
2. According to material and makeup of electrical conductor
3. According to number of conductors in cable
4. If insulated, according to insulation employed
5. According to protective covering
6. According to service

10. Classification according to degree of covering. Probably the broadest classification of electrical wires and cables is according to the degree of covering employed, as follows:

1. Bare
2. Covered but not insulated
3. Insulated and covered

In many cases *bare* conductors without any covering over the metallic conductors are employed for electrical circuits. The conductors are supported on insulators so spaced, depending upon the voltage of the circuit, that the length of the air space between the conductors will provide sufficient insulation. Bare conductors are employed for most overhead transmission lines. They are also used for certain overhead telephone and telegraph circuits.

There is a definite distinction between the meanings of the words *bare*, *covered*, and *insulated* in electrical-cable terminology:

Bare. Designating a conductor having no covering or electrical insulation whatsoever.

Covered. Designating a conductor encased in material whose thickness or composition is not recognized by the National Electrical Code® (NEC) as electrical insulation.

Insulated. Designating a conductor encased in material whose thickness or composition is recognized by the Code as electrical insulation.

Insulated wires and cables consist of an electrical conductor covered with some form of electrical insulation with or without an outer protective covering. With covered wires the conductor is protected against mechanical injury by some form of covering applied directly over the conductor. This covering, however, does not provide insulation of the wet conductor to any great extent and often even becomes a fair conductor itself when moist. The covering therefore cannot be relied upon to afford consistently any insulation beyond that of the air spacing between the conductors.

Weatherproof wires may be divided into two general classes, those with fibrous coverings and those with homogeneous coverings (Sec. 12).

11. Weatherproof-covered wire with fibrous coverings is available in two types. Both are designated as URC and are manufactured according to specifications recommended by the Utilities Research Commission. The two types are distinguished by at least one manufacturer as O.K.-URC and Peerless URC. The O.K. is the more common type. The wire is covered with two or three weatherproof cotton braids, which are applied directly over the conductor. The braids are saturated with a black asphaltic compound. The outside surface of the outer braid is coated with mica flake to provide a smooth surface free of tackiness. The Peerless type, a better-grade covering, not only is longer-lived but provides some degree of overall electrical insulation to the conductor. The construction consists of a compacted pad of unspun cotton wrapped helically directly around the conductor and filled with asphalt. This pad provides a homogeneous wall of insulation without the usual braid interstices encountered in ordinary weatherproof-covered wire. The asphalt-impregnated pad is covered with a standard outer weatherproof braid. Peerless wire is made in two types, designated as double braid and triple braid. Actually there is only one braid in both types, but the combination of the cotton pad of different thicknesses and the braid gives a covering which is equivalent in thickness to the regular double- or triple-braid O.K. wires. Weatherproof-covered wire is available with the conductor material consisting of copper, solid copperweld, solid bronze, composite copper-copperweld, all aluminum, or steel-reinforced aluminum.

12. Weatherproof-covered wire with homogeneous covering is available in two types, neoprene and polyethylene.

The *neoprene type* has a homogeneous covering which consists of a tough and durable vulcanized neoprene compound. This type has the following advantageous characteristics:

1. Highly weather-resistant.
2. Not brittle under extremely low temperatures. It will not migrate under abnormally high temperatures.
3. Preventing normal moisture ingress to conductor, thus permitting maximum continuity of service under storm conditions.
4. Tough, with excellent resistance to mechanical abuse.
5. Light in weight and smooth-surfaced, with adhesion to the conductor. It can be handled and installed without special precautions.

The *polyethylene type* has a homogeneous, seamless thermoplastic covering which is applied by extrusion. Its more important characteristics may be summarized as follows:

1. Highly resistant to weathering, being both weather- and sun-resistant
2. Physically strong
3. Resistant to abrasion
4. Inherently tight on the conductor
5. Possessing a wide temperature range, -94°F (-70°C) to 176°F (80°C)
6. Light in weight

13. Material and makeup of electrical conductors. The conductor may consist of a single solid wire or a stranded cable made up of several individual bare wires twisted together. Stranded conductors are more flexible than a single solid wire. The flexibility of the cable increases with the number of strands and also depends upon the arrangement of the individual strands in the makeup of the conductor. Solid wires are used for conductors of the smaller sizes and stranded cables for the larger sizes. In the intermediate sizes both solid and stranded conductors are available.

Wires more finely stranded than class C require special provisions at terminations, as covered in Sec. 163. Although finely stranded conductors are readily available, they are commonly designated *welding cable*. Even if rated “600 V” the welding cable designation only means that these wires are listed for use in the secondary circuits of electric welders, as covered in Part IV of Article 630 in the NEC. Unless provided with additional or other markings, they are not listed for use in conventional building wiring. Building wire will have one of the designations in NEC Table 310.13(A) such as RHH or RHW or THW or XHHW, etc.

Electrical conducting cables are made of copper, copper-clad aluminum, aluminum, steel, bronze, or a combination of either copper or aluminum with steel. Because of its high conductivity, copper is the material most commonly employed. Practically all insulated wires and cables employ copper or aluminum conductors. Aluminum or steel wires and cables are frequently found to be more economical for certain classes of aerial construction. All-steel conductors are employed for telephone and telegraph work and certain rural distribution lines with light load densities. Steel-copper conductors are employed for long-span river crossings of power lines and for certain rural distribution lines.

A classification of electrical conductors with respect to standard materials and makeups available is as follows:

- | | |
|--|--|
| <p>A. Copper</p> <ol style="list-style-type: none"> 1. Solid <ol style="list-style-type: none"> a. Round b. Grooved c. Figure eight d. Figure nine e. Square or rectangular 2. Standard concentric stranded <ol style="list-style-type: none"> a. Class AA b. Class A c. Class B d. Class C e. Class D 3. Standard rope stranded <ol style="list-style-type: none"> a. Class G b. Class H 4. Bunched stranded 5. Bunched and rope stranded <ol style="list-style-type: none"> a. Class J b. Class K c. Class L d. Class M e. Class O f. Class P g. Class Q 6. Annular concentric stranded 7. Special stranded | <ol style="list-style-type: none"> 8. Compact stranded <ol style="list-style-type: none"> a. Round b. Sector c. Segmental 9. Hollow-core stranded 10. Tubular segmental (type HH) <p>B. Iron or steel</p> <ol style="list-style-type: none"> 1. Solid 2. Stranded <p>C. Copper-steel</p> <ol style="list-style-type: none"> 1. Copperweld <ol style="list-style-type: none"> a. Solid b. Stranded 2. Copperweld and copper 3. Copper and steel stranded <p>D. Aluminum</p> <ol style="list-style-type: none"> 1. Solid 2. Stranded 3. Compact stranded <p>E. Copper-clad aluminum</p> <ol style="list-style-type: none"> 1. Solid 2. Stranded <p>F. Aluminum and steel (ACSR)</p> <p>G. Bronze</p> |
|--|--|

Refer to Table 86 for illustrations and applications of different makeups. Refer to Table 87 for a guide to applications of conductor materials.

14. Copper wire is made in three grades of hardness, known as hard-drawn, medium-hard-drawn, and soft or annealed. Hard-drawn wire has the greatest tensile strength and the least amount of elongation under stress and is the stiffest and hardest to bend and work. Soft-drawn or annealed wire has the lowest tensile strength and the greatest elongation under stress and is very pliable and easily bent. Medium-hard-drawn wire has characteristics intermediate between those of hard-drawn and soft-drawn wire. The conductivity of copper wires decreases slightly as hardness increases, but there is relatively little difference in the conductivity of the different grades.

Hard-drawn wire is used for long-span transmission lines, trolley contact wires, telephone wires, and other applications for which the highest possible tensile strength is desirable.

Medium-hard-drawn wire is employed for such applications as short-span distribution circuits and trolley feeders, for which slightly lower tensile strength is satisfactory and greater pliability is desired.

Soft-drawn or annealed copper is used for all covered or insulated copper conductors except weatherproof-covered cables. Wires with this covering are available in all the three grades of hardness. Bare or weatherproof-covered soft wire is used only for short spans.

Copper wire used for rubber-insulated cable must be *tinned* by coating with pure tin to protect the copper against chemical action caused by contact with the rubber.

15. Makeup of copper conductors. Copper conductors are manufactured in various forms of makeup as listed in Sec. 13, depending upon their size and application. An understanding of the construction of the different makeups and their applications can be gained from Table 86. The employment of solid or stranded conductors and the choice of the class of stranding depend upon the degree of flexibility desired. For very flexible cables for special applications, special strandings are employed. There is no fixed standard for these special strandings—practice varying with different manufacturers. Data for bare copper conductors of the different standard makeups are given in Tables 88 to 94.

16. Iron or steel electrical conductors. All-steel conductors for power circuits are made from special low-resistance, high-strength steel stock. They are available in both solid and three-strand construction. Each wire is protected by a heavy galvanized coating of zinc. Since all-steel conductors can be applied economically only for light electrical loads, these conductors are manufactured in only three standard sizes. Stranded conductors are used in preference to solid wires for longer-span construction because their inherent damping capacity reduces the amplitude of vibration in strong lateral winds.

Commercial galvanized-iron wire for telephone and telegraph circuits has been made for many years in three types designated as extra best best (EBB), best best (BB), and steel. These designations are somewhat misleading. Adopted many years ago, they refer to the electrical conductivity of the different grades. All three types are made from high-grade materials and meet the same standard of galvanizing.

Extra best best wire has the best conductivity but the lowest tensile strength. Its weight per mile-ohm is from 4700 to 5000 lb. This wire is uniform in quality, pure, tough, and pliable. It is used largely by commercial telegraph companies, in railway telegraph service, for tie wires, and for signal bonding.

Best best wire has a lower value of conductivity but greater tensile strength. Its weight per mile-ohm is from 5600 to 6000 lb. This grade is used very largely by telephone companies.

Steel is a stiff wire of high tensile strength and low conductivity. It is very difficult to work but is used on short lines which must be erected at low cost and for which conductivity is of little importance. Its weight per mile-ohm is 6500 to 7000 lb.

17. Copper-steel conductors. Electrical conductors consisting of a combination of copper and steel are frequently employed for certain types of circuits (see Sec. 13 and Table 87). Three general types of construction are listed in Sec. 13 and are illustrated in Table 86.

Copperweld wire is composed of a steel core with a copper covering thoroughly welded to it by a molten welding process. This process produces a permanent bond between the two metals which prevents any electrogalvanic action and which will withstand hot rolling, cold drawing, forging, bending, twisting, or sudden temperature changes. This wire is made in three grades: 30 percent conductivity, extra-high strength; 30 percent conductivity, high strength; and 40 percent conductivity, high strength. Solid conductors are made in sizes from 12 to 4/0 AWG. Concentric-stranded cables are available in sizes with outside diameters from 0.174 to 0.910 in (0.442 to 23.1 mm.). Weatherproof-covered copperweld solid wire is made in sizes from 12 to 2 AWG. Rubber-insulated twisted-pair cables in sizes 14 and 17 AWG are made for telephone, telegraph, and signal work. Single-conductor rubber-insulated wire may be obtained in any size. Rubber-insulated parallel drop wire is made in one size only, 17 AWG.

Composite cables (*copperweld and copper*) consisting of a combination of certain strands of copper wire with a number of strands of copperweld wire often are economical for aerial circuits requiring more than average tensile strength combined with liberal conductance.

Copper and steel cables consist of a combination of copper and steel wires stranded together. The strands of the different materials are not intended to serve in any dual capacity, and the conductivity of the cable is determined by the sectional area of the copper strands. The size of the cable is designated according to its total sectional area of copper, not according to the total sectional area of the whole cable. For instance, a cable designated as No. 4, consisting of two copper and one steel strands, has a total sectional area of 62,610 cmil (31.7 mm²) and a sectional area of copper of 41,740 cmil (21.1 mm²). The area of the copper, 41,740 cmil, corresponds to the area of a No. 4 wire. The cable is therefore designated as a No. 4 cable, although its total sectional area of copper and steel is between No. 3 and those of No. 2 wire.

These copper and steel cables are available in sizes from No. 2 to No. 12. All sizes except Nos. 10 and 12 consist of two plain hard-drawn copper wires and one extra-galvanized-steel wire. Wire cables of sizes 10 and 12 consist of one galvanized hard-drawn copper wire and two extra-galvanized-steel wires.

18. Copper-clad aluminum. Copper-clad aluminum is the newest conductor material on the market. A copper-clad aluminum conductor is drawn from copper-clad aluminum rod, the copper being bonded metallurgically to an aluminum core. The copper forms a minimum of 10 percent of the cross-sectional area of the solid conductor or of that of each strand of a stranded conductor.

Although copper-clad aluminum contains only 10 percent of copper by volume (26.8 percent by weight), its electrical performance is equivalent to that of pure copper. It is lighter and easier to handle, and the price advantage, which reflects the value of the copper content, can be as much as 25 percent when copper peaks to one of its periodic highs. Detailed studies by Battelle Laboratories have shown that copper-clad aluminum and copper have the same connection reliability.

Because the electrical industry consumes 60 percent of all copper used in the United States, it is critically affected by copper's fluctuating costs and uncertain supply. Until recently, however, aluminum was the only alternative to copper.

Aluminum, in the more than 70 years since its introduction as an electrical conductor, has significantly penetrated such areas as electric power transmission lines, transformer windings, and telephone communications cables. On the other hand, it has received relatively limited acceptance in nonmetallic-sheathed cable and other small-gage building wires. The reason has been a lack of acceptable means of connecting or terminating aluminum conductors of 6 AWG or smaller cross-sectional areas.

Connector manufacturers, the National Electrical Manufacturers Association (NEMA), Underwriters Laboratories (UL), and aluminum companies have devoted much attention to this connection problem. The most significant advance in aluminum termination has been the institution of UL's new requirements and testing procedures for wiring devices for use in branch-circuit-size aluminum conductors. Devices which meet the revised UL requirements are marked CO/ALR and carry that mark on the mounting strap. Only CO/ALR switches and receptacles should be used in aluminum 15- and 20-A branch-circuit wiring.

Copper-clad aluminum is now available to counter the disadvantages of high price and lack of availability of copper and the problems of connection reliability of aluminum. It is a product of a metallurgical material system, i.e., a system in which two or more metals are inseparably bonded in a design that utilizes the benefits of each component metal while minimizing their deficiencies. In copper-clad aluminum conductors, the electrical reliability of copper is combined with the abundant supply, stable price, and light weight of aluminum. Copper-clad aluminum is already being used for building wire, battery cable, magnet wire, and radio-frequency (rf) coaxial cable.

The ampacity (current-carrying capacity) of copper-clad aluminum conductors is the same as that of aluminum conductors. It is required that the wire connectors used with copper-clad aluminum conductors be recognized for use with copper and copper-clad aluminum conductors and be marked CC-CU or CU-AL, except that 12-10 AWG solid copper-clad aluminum conductors may be used with wire-binding screws and in pressure-plate connecting mechanisms that are recognized for use for copper conductors. Copper-clad aluminum conductors are suitable for intermixing with copper and aluminum conductors in terminals for splicing connections only when the wire connectors are specifically recognized for such use. Such intermixed connections are limited to dry locations.

19. Aluminum and aluminum steel-reinforced conductors often are economical for transmission and rural distribution circuits. Commercial hard-drawn aluminum wire has a conductivity at 20°C of 60.97 percent or a resistance of $17.010 \Omega/\text{cmil} \cdot \text{ft}$. Its weight is $0.000000915 (91.5 \times 10^{-8}) \text{ lb}/\text{cmil} \cdot \text{ft}$. An all-aluminum wire for equal conductivity must have a diameter 126 percent and an area 160 percent of that of a copper wire. All-aluminum conductors are available in bare, weatherproof-covered, rubber-insulated, and thermoplastic-insulated constructions. Aluminum steel-reinforced conductors, owing to their high tensile strength, are frequently used for long spans and for high-capacity lines requiring heavy conductors. They consist of a concentric-stranded aluminum cable with a reinforcing steel core. Except in the smaller sizes, the steel core is made up of several steel strands. Aluminum steel-reinforced conductors are available either bare or weatherproof-covered.

20. Number of conductors. Bare or covered (not insulated) cables must, of course, always be single-conductor. Insulated cables are manufactured with one, two, three, or even more conductors per cable. The choice between single- or multiconductor cable is affected by so many factors, which vary with the particular installation, that only general suggestions can be made here. The selection will be influenced by practical field conditions and facilities of installation, cost of cable and enclosure, physical dimensions of the cable and of the available enclosure, electrical load requirements, and voltage and type of power supply system. The use of multiconductor cables usually results in lower cable cost, smaller voltage drop, and more economical utilization of duct space. On the other hand, single-conductor cables are more flexible and are easier to splice and install. For underground transmission and primary distribution applications, single-conductor cable is generally used when the voltage exceeds 35 kV or when the load is 50,000 kVA or more. For all other underground transmission and primary distribution applications, both single-conductor and multiconductor cables are employed. In the past the use of multiconductor cable was most common, but the use of single-conductor cable in this field is rapidly growing. Single-conductor cable is generally preferred for secondary distribution because of the ease in making taps. For interior building wiring, single-conductor cable is most commonly employed in raceway systems.

21. Cable assembly. For the application of electrical conducting wires and cables, it is essential to have a general knowledge of the materials employed in their manufacture and also of the manner of assembling the component parts in the formation of the finished cable. For a bare wire the assembly is, of course, very simple, consisting only of the solid or stranded wire of the conductor. For insulated cables and especially for multiconductor cables, the use of many materials and different forms of assembly is involved. The component parts of the more common insulated cables, in the order in which the parts are employed in the manufacture of the cables, are as follows:

- | | |
|---|--|
| <p>A. Single-conductor cables</p> <ol style="list-style-type: none"> 1. Conductor 2. Insulation 3. Protective covering <p>B. Multiconductor cables</p> <ol style="list-style-type: none"> 1. Without shielding or belting (no insulation around group of conductors) <ol style="list-style-type: none"> <i>a.</i> Conductor <i>b.</i> Conductor insulation <i>c.</i> Conductor covering <i>d.</i> Fillers <i>e.</i> Protective covering | <ol style="list-style-type: none"> 2. Belted type (insulation around group of conductors) <ol style="list-style-type: none"> <i>a.</i> Conductor <i>b.</i> Conductor insulation <i>c.</i> Conductor covering <i>d.</i> Fillers <i>e.</i> Belt insulation <i>f.</i> Protective covering 3. Shielded type <ol style="list-style-type: none"> <i>a.</i> Conductor <i>b.</i> Conductor insulation <i>c.</i> Conductor shield <i>d.</i> Fillers <i>e.</i> Binder tape <i>f.</i> Protective covering |
|---|--|

22. Electrical shielding is often necessary on power cable to confine the dielectric field to the inside of the cable insulation so as to prevent damage from corona or ionization. The shield usually consists of a thin (3-mil, or 0.076-mm) conducting tape of copper or aluminum applied over the insulation of each conductor. The shielding tape sometimes is perforated to reduce power losses due to eddy currents set up in the shield. Sometimes semiconducting tapes consisting of specially treated fibrous tapes or braids are used. These semiconducting tapes are frequently employed for the shielding of aerial cable, since they adhere more closely to the insulation and thus tend to prevent corona.

23. Fillers are used in the manufacture of most multiconductor cables. Their purpose is to fill the spaces between the conductors to produce a solid round structure for the complete cable. The materials commonly employed for these fillers are saturated jute, asbestos-base caulk, rubber, and, in some cases, cotton.

24. Binder tapes are used in the construction of many multiconductor cables to bind conductors, shields, and fillers together in proper form during the addition of the protective covering. The more common types of binder tapes are rubber-filled cloth tape, combinations of cotton cloth and rubber compounds, steel, and bronze.

25. Insulation of electrical conductors. Except for aerial construction, interior exposed wiring on insulators, and special cases of interior-wiring feeder circuits, electrical conductors must be covered with some form of electrical insulation. An ideal insulating material for this purpose should have the following characteristics:

1. Long life
2. Long-time high dielectric strength
3. Resistance to corona and ionization
4. Resistance to high temperature
5. Mechanical flexibility

6. Resistance to moisture
7. Low dielectric loss

It is impossible to find any one material that is best when all these essential characteristics are considered. For instance, impregnated paper has the highest electrical breakdown strength coupled with the longest life of all the materials employed for the insulation of conductors. On the other hand, it is not moisture-resistant, is not so flexible as some other materials, and will not withstand such high temperatures as asbestos. Several different types of insulation are therefore employed. The insulation whose overall characteristics best meet the conditions of service for the particular application should be selected. Tables 76, 99, and 101 classify the different types of insulation with respect to temperature.

26. Rubber insulation. With respect to insulation, *rubber* is the word used to designate insulations consisting of compounds of natural rubber or synthetic rubber, or both, combined with such other ingredients as vulcanizing agents, antioxidants, fillers, softeners, and pigments. These natural-rubber and synthetic rubberlike compounds are used more than any other material for the insulation of electrical conductors. They have the desirable characteristics of moisture resistance, ease of handling and termination, and extreme flexibility. On the other hand, they will not withstand such high temperatures or voltage without deterioration as will some other types of insulation. The different ingredients of each compound are combined by the process of vulcanization into a single homogeneous material.

A large variety of rubber compounds are available, with different characteristics that depend upon the particular service conditions for which they have been developed. It is feasible to include here only those in most common use. For applications which require special characteristics, experts of the cable manufacturers should be consulted for advice on the best available compound.

In general, the physical and electrical properties of a compound increase with the rubber content. However, rubber alone would not provide suitable insulation. The proper choosing and proportioning of the other ingredients are important in obtaining the desired characteristics.

Heat-Resisting Rubber Compounds. These compounds, which will withstand considerably higher temperatures than the Code-grade rubber compound, have been developed. Such compounds meeting Underwriters Laboratories specifications are designated as *Type RHH insulation*.

Moisture-Resistant Rubber Compounds. These compounds are available for installations in which the wire will be subjected to wet conditions. They are called *moisture-resistant* and *submarine compounds*.

Moisture- and Heat-Resistant Compounds. These compounds combine the temperature- and moisture-resistance characteristics of Type RHH and Type RHW insulations. They are recognized by the Underwriters Laboratories designation of *Type RHW*, which is approved for use in wet or dry locations at a maximum conductor temperature of 75°C and RHW-2 for 90°C.

Type SA Wire. It is insulated with a silicone rubber compound. The outer covering of this type of wire must consist of heavy glass that is impregnated with a heat-, flame-, and moisture-resistant compound.

Many wire and cable manufacturers have a rubber compound for use on general power cables which is of a higher quality than required by the Underwriters Laboratories' specifications. These especially high-grade rubber compounds are designated by the individual manufacturer's trade name. Several other nonstandardized compounds, designated by the individual manufacturer's trade name, are available to meet special conditions of service, such as resistance to chemicals, ozone, and corona.

A low-voltage compound called *neoprene*, although not a rubber compound, is recognized by the Underwriters Laboratories as an approved insulation for Type RHW building wire without additional covering over the insulation. It is also widely used in many applications for which its superior mechanical properties are needed, such as self-supporting secondaries for services and service-drop cables, overhead line wires, and motor and appliance lead wires.

27. Thermoplastic insulation. Thermoplastic compounds have been developed for insulations of electrical wires. Those meeting the specifications of the Underwriters Laboratories are designated as *Type TW, THW, THWN, THHN, THHW, TBS, or MTW*. Type TW, THW, or THWN is moisture-resistant and can be used in wet locations. Type THW or THWN is both moisture- and heat-resistant and is approved for use in wet or dry locations at a maximum conductor temperature of 75°C. Type THHW is moisture- and heat-resistant and may be used in wet or dry locations at a maximum conductor temperature of 75°C in wet locations and 90°C in dry locations. Type TBS is thermoplastic insulation with a flame-retardant fibrous outer braid and is acceptable only for switchboard wiring. Type THWN is a moisture- and heat-resistant insulation that is approved for both wet and dry locations at a maximum conductor temperature of 75°C. It has an outer nylon jacket. Just as in the case of Type RHW, this insulation is also available in a form suitable for 90°C in wet locations, and it has the same "-2" suffix. Thus, Type THWN-2 can be used in wet locations and where exposed to high temperatures. Type THHN is similar to Type THWN, except that it is not moisture-resistant and may be used only in dry and damp locations at a maximum conductor temperature of 90°C. Type MTW is moisture-, heat-, and oil-resistant and is restricted to use in machine-tool wiring at a maximum conductor temperature of 60°C in wet locations and 90°C in dry locations.

28. Thermosetting insulation. Four high-quality wires are *Types XHH, XHHW, FEP, and FEPB*. Type XHHW is a moisture- and heat-resistant, cross-linked, thermosetting polyethylene with an insulating rating of 75°C in wet locations and 90°C in dry locations. Here also, Type XHHW-2 is available, which can be used for 90°C exposures in wet locations. Type XHH has a thermoset insulation that is rated at 90°C in dry or damp locations. Type FEP has a heat-resistant, fluorinated ethylene propylene insulation and is suitable for use in dry or damp locations at a maximum conductor temperature of 90°C, and Type FEPB is suitable for dry locations at 200°C for special applications.

29. Mineral insulation. The objective in developing mineral insulation was to provide a wiring material which would be as noncombustible as possible and thus eliminate the hazards of fire resulting from faults or overloads. This insulation consists of highly compressed magnesium oxide and is designated as *Type MI cable*. The outer metallic sheath is copper. A complete description of this cable is given in Sec. 54 of this division and in Div. 9.

30. Paper insulation. Impregnated-paper insulation provides the highest electrical breakdown strength, greatest reliability, and longest life of any of the materials employed for the electrical insulation of conductors. It will safely withstand higher operating temperatures than either rubber or varnished-cambric insulations. On the other hand, it is not moisture-resistant and must always have a covering which will protect the insulation from moisture, such as a lead sheath.

Paper-insulated cables are not so flexible and easy to handle as varnished-cambric or rubber-insulated cables and require greater care and time for the making of splices. They are available in the following types:

1. Solid-type insulation
2. Low-pressure gas-filled
3. Medium-pressure gas-filled
4. Low-pressure oil-filled
5. High-pressure oil-filled (pipe enclosed)
6. High-pressure gas-filled (pipe enclosed)
7. High-pressure gas-filled (self-contained)

The *solid-type insulation* is composed of layers of paper tapes applied helically over the conductor and impregnated with mineral oil (sometimes mixed with resin when so specified). A tightly fitting lead sheath is extruded over the assembled conductors and impregnated insulation. The oil must be heavy enough to prevent bleeding when the cable is cut for splicing and terminations but at the same time must remain semifluid at the lowest operating temperatures. For cables installed as vertical risers, on steep grades, or under high operating temperatures, a heavier oil, designated as a nonmigrating compound, is sometimes employed to prevent the migration of the oil from the high to the low points of the cable. The ordinary solid-type impregnated-paper insulation will give off flammable and explosive gases when exposed to extremely high temperatures. It is a common practice to clear cable failures on low-voltage network cables by leaving the power on and burning the fault clear. To reduce the possibility of damage to raceways and manhole structures from consequent explosions, special nonflammable, nonexplosive compounds are sometimes used to impregnate the paper insulation.

Low-pressure gas-filled cables, operating under nitrogen gas pressure of 10 to 15 lb/in² (68,947.6 to 103,421.4 Pa), are manufactured and impregnated in the same manner as solid-type cable, but prior to leading it is drained in a nitrogen atmosphere at a temperature somewhat above the maximum allowable operating temperature. To give the gas free access to the insulated conductors, longitudinal gas feed channels are placed in the filler interstices of the three-conductor construction and flutes or another type of channel under the sheath of the single-conductor construction. In the three-conductor construction, two of the three gas feed channels are obtained either by omission of filler material from the interstices or by use of an open helical coil made from steel strip. The third channel is a solid-wall metal tube filled with dry nitrogen gas and sealed off at each end before treatment of the cable length. The end of this solid-wall metal channel is opened at each joint location and ensures positive control of the pressure over the entire cable length by furnishing a bypass path for the gas at low points or dips in the cable run where "slugs" of surplus compound may gradually collect in service in the open-wall channels.

Cable operating records indicate that most service failures are attributable to damage to lead sheaths arising from a variety of causes or to leaks in joint wipes, terminals, or other accessories. An important advantage of low-pressure gas-filled cable, in common with low-pressure oil-filled cable, is that service failures from these causes are practically eliminated because a positive internal pressure is maintained continuously within the sheath, the

entrance of moisture is prevented, and operation can continue until it is convenient to make repairs.

Medium-pressure gas-filled cables operate under a nitrogen pressure of about 49 lb/in² (337,843 Pa). They are constructed in a manner similar to the low-pressure gas-filled cables, except that a reinforced lead sheath is employed to permit the use of the increased gas pressure.

In *low-pressure oil-filled cables*, the paper is impregnated with a relatively thin liquid oil which is fluid at all operating temperatures. The cable is so constructed that channels are provided for longitudinal flow of the oil, and oil reservoirs are furnished at suitable points in the cable installation. A positive pressure of moderate magnitude is thus maintained on the oil at all times, which prevents the formation of voids in the insulation due to changing temperature, stretching, or deformation of the lead sheath. When the cable is heated by load, the oil expands and flows lengthwise through the channels of the cable into the joints and out into the reservoirs. When the cable cools and the oil in the cable contracts, oil is forced back through the channels of the cable from the oil reservoirs. Any damage to the lead sheath will allow moisture to enter a solid-type insulated cable. With oil-filled cable, unless the damage is too severe, the positive internal oil pressure will prevent the entrance of moisture, so that although there will be some loss of oil, operation can continue until it is convenient to make repairs.

High-pressure oil-filled cables (pipe enclosed) are insulated and impregnated in the same manner as single-conductor solid-type cables. The necessary number of single-conductor cables are then pulled into a welded steel line pipe which is protected by a high-grade corrosion-protective covering. The enclosing pipe is then filled with oil, which is maintained under constant high pressure. An oil pressure of approximately 200 lb/in² (1,378,951 Pa) prevents the formation of voids in the insulation and is maintained by oil pumps at one or more points on the line.

To provide protection against moisture entrance during shipment, the cable may be shipped with a temporary lead sheath or on a special weathertight reel without a lead covering. In the former case a thin temporary lead sheath is extruded over the skid wires and is stripped from the cable during the pulling operation. When the cable is shipped without a temporary lead sheath, all seams of the weathertight reel are carefully welded. The outer layer of cable is covered by a "blanket" of material having a very low rate of moisture absorption and diffusion. The edges of the blanket are tightly sealed to the inside surface of the reel flange by a moisture-repellent plastic adhesive and sealing compound. Joints between external mechanical protection, such as lags, sheet-metal layers, etc., and the steel rim of the reel flange are sealed in a similar manner. Each reel is also equipped with a pocket containing a desiccant, and prior to shipment the reel interior is flushed carefully with dry nitrogen gas.

High-pressure gas-filled cable (pipe enclosed) is similar to the high-pressure oil-filled type in that the insulated conductors comprising the circuit are installed in a metal pipe but differs from it in that nitrogen gas at a pressure of approximately 200 lb/in² (1,378,951 Pa) is employed as a pressure medium in place of oil.

In the mass-impregnated type, the paper tape is applied to the conductor, and the cable is impregnated in the same manner as the solid type. Shipment is carried out in the same manner as that for high-pressure oil-filled cables, either with a temporary lead sheath or on a weathertight reel without a lead covering.

High-pressure gas-filled (self-contained) cables use a lead sheath reinforced with metallic tapes as the pressure-retaining member in place of the steel pipe. In these cables, the permanent lead sheath and the associated reinforcement and protective coverings are applied to the cable prior to shipment from the factory.

A special grade of untreated paper is sometimes employed for insulating magnet wires. It is applied to the conductor in ribbon form as a helix with approximately one-third to one-half

lap. This procedure provides a low-cost insulation of constant thickness and slightly higher dielectric strength than that provided by cotton yarn, but it is less sturdy.

31. Varnished-cambric insulation has characteristics which in almost every respect are midway between those of rubber and paper. It is more flexible than paper but not so flexible as rubber, except for large insulated cables. It is reasonably moisture-resisting, so that it need not always be covered with a lead sheath, but it cannot be operated without such protective covering if it is continuously immersed or is in continuously moist surroundings. With respect to dielectric strength, allowable temperature, and resistance to ionization and corona, it is better than rubber but not so good as impregnated paper. Varnished cambric is not affected by ordinary oils and greases and will withstand hard service.

The term *varnished cambric* is misleading, since the cotton-fabric base of the insulation is not cambric. The correct designation should be *varnished cloth*, but because of long-established custom the material is designated as varnished-cambric insulation. Varnished-cambric-insulated cable consists of conductors helically wrapped with cotton tape which has been previously filled and coated on both sides with insulating varnish. During the wrapping process, a heavy nonhardening mineral compound is applied between the tapings to act as a lubricant when the cable is bent and also to fill all spaces so as to prevent ionization and possible capillary absorption of moisture.

32. Silicone rubber provides a truly heat-resisting insulation suitable for use at temperatures beyond the limits allowable for other standard forms of cable insulation. However, it is satisfactory only for low-voltage installations (not more than 8000 V), since it cannot be applied to the conductors so as to give high dielectric strength to the cable insulation.

Type SA. Silicone rubber insulated with outer heavy glass.

33. Cotton yarn is often employed for the insulation of magnet wire. The wire is covered with one or more wraps of helically wrapped unbleached cotton yarn. When more than one wrap is employed, each wrap is applied in the reverse direction to that of the next inner wrap. The untreated cotton is neither heat-resisting nor impervious to moisture. It is not fully considered to be an insulation, and coils wound with it should be treated or impregnated with an insulating compound by an approved process. The cotton yarn acts as a mechanical separator, holding the conductors apart and providing a medium for the absorption and retention of the impregnating material. Cotton yarn is also used as a protective covering for enamel-insulated magnet wire.

34. Enamel is widely used as an insulation for magnet wire. It has excellent resistance to moisture, heat, and oil and possesses high dielectric strength. Enamel wire consists of a comparatively thin, even coating of high-grade organic insulating enamel applied directly to the bare wire. It is made in various types as given in Sec. 82.

35. Silk yarn is employed in the same manner as cotton yarn (Sec. 33) for the insulation of magnet wire. Silk coverings have better dielectric characteristics, give a neater appearance, and are mechanically stronger than cotton. Otherwise, all the statements in Sec. 33 respecting cotton-yarn insulations apply to silk.

Cellulose-acetate (artificial silk) tape or yarn is used in many applications for the insulation of magnet wire as a substitute for or in combination with natural silk. Artificial silk

has somewhat better electrical characteristics and gives a more uniform thickness of insulation. Its strength and abrasion resistance are not so good as those of natural silk.

36. Fibrous-glass yarn has been developed for the insulation of conductors. Up to the present time it has been employed only for the insulation of dynamo windings and magnet wire for classes of service requiring operation at high temperatures. The conductors are wound with one or more wraps of alkali-free fibrous-glass yarn.

37. Protective coverings. The insulation of most insulated conductors is protected from wear and deterioration due to surrounding conditions by a covering applied over the insulation. Protective coverings are also used on some noninsulated cables such as the weatherproof wire used for distribution purposes (see Secs. 10 and 11). The materials most commonly used for these protective coverings are listed in Sec. 38. No one covering will fulfill all the protective functions that are required for all classes of installations. Each has its particular advantages and limitations and consequently its proper field of application. In many cases a combination of two or more types of covering is required to provide the necessary protection to the conductor and its insulation.

38. Protective-covering materials and finishes

I. Nonmetallic

A. According to material of covering

1. Fibrous braids

a. Cotton

- (1) Light
- (2) Standard
- (3) Heavy
- (4) Glazed cotton

b. Seine twine or hawser cord

c. Hemp

d. Paper and cotton

e. Jute

f. Asbestos

g. Silk

h. Rayon

i. Fibrous glass

2. Tapes

a. Rubber-filled cloth tape

b. Combination of cotton cloth and rubber compounds

3. Woven covers (loom)

4. Unspun felted cotton

5. Rubber jackets

6. Synthetic jackets

7 Thermoplastic jackets

8. Jute and asphalt

B. According to saturant

1. Asphalt

2. Paint

3. Varnish

C. According to finish

1. Stearin pitch and mica flake

2. Paint

3. Wax

4. Lacquer

5. Varnish

II. Metallic

A. Pure lead sheath

B. Reinforced lead sheath

C. Alloy-lead sheath

D. Flat-band armor

E. Interlocked armor

F. Wire armor

G. Basket-weave armor

39. Fibrous braids are used extensively for protective coverings of cables. These braids are woven over the insulation so as to form a continuous covering without joints. The braid is generally saturated (Sec. 45) with some compound to impart resistance to some class of exposure such as moisture, flame, or acid. The outside braid is given one of the finishes described in Sec. 45 in accordance with the application of the cable.

The most common braid is one woven from *light, standard, or heavy cotton yarn*. Such coverings are designated, respectively, as ICEA Classes A, B, and C. (ICEA are the initials of the Insulated Cable Engineers Association.) The cotton can be furnished in a variety of colors for identification in accordance with an established color code in the industry.

Glazed-cotton braid is composed of light cotton yarn treated with a sizing material before fabrication.

Seine-twine or hawser-cord braid is composed of cable-laid, hard-twisted cotton yarn, braided to form a heavy, durable covering which will withstand more rough usage than a braid made from common cotton yarn.

Hemp braid is woven from strong, durable, long-fibered hemp yarn which will withstand even rougher usage than seine-twine braid.

Paper-and-cotton braid is composed of paper twine interwoven with cotton threads.

Jute braid is woven from yarn composed of twisted jute fibers.

Silk and rayon braids are manufactured in the same manner as glazed-cotton braid from real or artificial silk yarn.

Fibrous-glass braid is woven from fine, flexible glass threads and forms a covering resistant to flame, acids, alkalies, and oils.

40. Fibrous-tape coverings are frequently used as a part of the protective covering of cables. The material of tape coverings is fabricated into a tape before application to the cable, while the yarn in braid coverings is woven into a fabric during application to the cable. In applying tape coverings, the tape is wrapped helically around the cable, generally with a certain amount of overlapping of adjacent turns. The more common types of fibrous tapes employed in cable manufacturing are listed in Sec. 38. Except for duck tape, tape coverings are never used for the outer covering of a cable. They are employed for the covering directly over the insulation of individual conductors and for the inner covering over the assembled conductors of a multiconductor cable. Frequently they are used under the sheath of a lead-sheathed cable. Duck tape made of heavy canvas webbing presaturated with asphalt compound is frequently used over a lead-sheathed cable for protection against corrosion and mechanical injury.

41. Woven covers, commonly called *loom*, are used for applications requiring exceptional abrasion-resisting qualities. These covers are composed of thick, heavy, long-fibered cotton yarn woven on the cable in a circular loom like that used for fire hose. They are not braids. Although braid coverings also are woven, they are not designated as such.

42. Unspun felted cotton is manufactured into a solid felted covering for cables for some special classes of service.

43. Several types of rubber and synthetic jacket coverings are available for the protection of insulated cables. These types of coverings do not seem to be standardized. The different manufacturers have their own special compounds designated by individual trade names. These compounds differ from the rubber compounds used for the insulation of cable in that they have been perfected not for insulating qualities but for resistance to abrasion, moisture, oil, gasoline, acids, earth solutions, alkalies, etc. Of course, no one jacket compound will provide protection against all these exposures, as each has its particular qualifications and limitations.

A nonrubber compound with excellent characteristics for a jacket material is called *neoprene*.

Thermoplastic compounds are becoming more and more popular as jacket materials. Although no one material is perfect in all respects for jacket coverings, thermoplastic compounds possess many of the necessary characteristics for the coverings.

44. Jute and asphalt coverings are commonly used as a cushion between the cable insulation and a metallic armor. Frequently they are also employed as corrosion-resisting coverings over a lead sheath or metallic armor. They consist of asphalt-impregnated jute yarn served helically around the cable or of alternate layers of asphalt-impregnated jute yarn serving and asphalt-weatherproofing compound.

45. Saturants and finishes for fibrous coverings. Fibrous braids used for covering cables are thoroughly saturated, and the outer surface is finished to provide protection against moisture, flame, weathering, oil, etc. The common materials employed for saturating the braids are listed in Sec. 38*B*, and the common materials employed for finishing the outer surface in Sec. 38*C*.

46. A pure lead sheath of uniform thickness tightly applied over an insulated cable by the extrusion process at one time was practically a standard covering for use in underground raceways and other wet locations. If the cable will be exposed to special forms of corrosion, electrolytic action, or mechanical strain, one of the other coverings is used in combination with the lead sheath as a protective covering over the sheath.

47. A reinforced lead sheath is employed for mechanical strength when internal cable hydrostatic pressures exceed 15 lb/in² (103,421.4 Pa). This construction consists of a double lead sheath. Around the inner sheath is wrapped a thin tape of hard-drawn copper, bronze, or other elastic metal, preferably nonmagnetic in character. This tape imparts considerable additional strength and elasticity to the sheath. However, it must be protected against wear and corrosion. For this reason a second lead sheath is applied over the tape. Such a finish is recommended for internal pressures up to 30 lb/in² (206,842.7 Pa). It is commonly used on oil-filled cable near the bottom of severe grades or on solid cable at the base of vertical risers and at the bottom of extreme grades where pressure can accumulate.

48. An alloy-lead sheath is employed when additional mechanical strength and resistance to crystallization of the sheath are required. The most common alloy is one containing 2 percent tin. Sometimes an antimony-lead alloy is used. An alloy sheath is more resistant to gouging and abrasion during or after installation than a pure lead one.

49. Flat-band armor usually consists of two steel tapes applied on the outside of the cable so that the openings between successive turns of the inner tape are covered by the outer tape. Usually these tapes are applied over a jute bedding introduced between them and the lead sheath or cable insulation, and they are frequently finished with an overall layer of asphalted jute as a protection against corrosion. Ordinarily, plain steel tapes are

recommended. If corrosion conditions are apt to be severe, galvanized steel or nonferrous materials should be used.

50. Interlocked armor consists of a single strip of interlocking metal tape so applied over the insulation of the cable that the cable is always protected throughout its length. The interlocking construction prevents adjacent tapes from being squeezed together during installation or in service, with consequent damage to the edges of the tapes, which sometimes occurs with flat-band steel armor; in addition, it eliminates gaps or open spaces, as there is no break in the continuity of the interlocking strip. The armor is so shaped that its physical strength against mechanical injury to the cable is superior to that of flat-band armor. Its rounded surface tends to deflect blows from shovels or picks and also offers an additional buffer effect to blows that tend to pierce the armor, thereby minimizing damage to the lead sheath and insulation over which it is applied.

For rubber- or varnished-cambric-insulated cables used for interior work, the armor is generally applied over a jute bedding which is introduced between the armor and the cable insulation.

For underground installation a lead sheath under the jute bedding of armor is required for paper cables, varnished-cambric cables, or 20 or 25 percent Code-rubber cables.

An overall asphalt-jute finish is sometimes used as additional protection against corrosion, particularly if the cable is to be buried in the earth.

A thermoplastic jacket is often applied over the armor, particularly if corrosive conditions exist, as in chemical plants, paper and steel mills, and similar industrial establishments.

Galvanized steel is the standard material for armor employed in interior building wiring. For other power applications plain steel armor is standard and suitable for most installations, although galvanized armor will give a longer life. Nonmagnetic materials may be furnished for the larger single-conductor cables. Aluminum, copper, or bronze is frequently used when corrosion conditions are apt to be severe.

51. Wire armor consists of a layer of round metal wires wound helically and concentrically about the cable. The standard type employs galvanized-steel wires, but if desired, wire armor constructed of nonferrous materials can be obtained. Wire armor is recommended when extreme tensile strength and greatest mechanical protection are necessary. Galvanized-steel construction is stronger than nonferrous. Usually a layer of asphalt-treated jute is introduced between the armor and the sheath to prevent mechanical damage and to minimize electrolytic action. Galvanized armor can be used when corrosion would damage the iron, and further protection in the form of an overall asphalt-jute finish is not uncommon.

52. Basket-weave armor is used when light weight and compactness are important. It consists of a braid of metal wire woven directly over the cable as an outer covering. Galvanized-steel, bronze, copper, or aluminum wire is used for the braid, depending upon the service for which the cable is intended. This armor finish is used largely for shipboard wiring.

53. General-purpose power cables for underground raceways and interior wiring are available with rubber-, thermoplastic-, varnished-cambric-, paper-, or asbestos-insulated copper or aluminum conductors. The particular type of such an insulation may be any of the types previously listed, depending upon the requirements of the service.

Class B stranding is the adopted standard for copper conductors of these cables, but any of the more flexible standard concentric or rope strandings is available, and Class C stranding is becoming the predominant method of stranding due to greater ease of installation. In addition, varnished-cambric- and paper-insulated copper conductor cables may be obtained with the following construction:

<i>Construction</i>	<i>Available for</i>
Compact round	Single conductor from 1 AWG to 1,000,000 cmil Multiconductor from 1 AWG to 1,000,000 cmil Generally employed only for 1 AWG
Compact sector	Multiconductor 1/0 AWG and larger
Annular concentric	Single conductor, 750,000 to 5,000,000 cmil
Compact segmental	Single conductor, 1,000,000 to 4,000,000 cmil
Hollow-core stranded	Single conductor, oil-filled paper cables, 2/0 AWG to 2,000,000 cmil

General-purpose power cables are normally constructed in single- and three-conductor cables for all the types of insulations mentioned. Rubber-insulated wires are also regularly made in two-conductor construction. Four-conductor cables are not standard construction but can be obtained.

One common type of protective covering consists of a rubber-filled cloth tape and an outer cotton braid treated with moisture-resisting, flame-resistant, or moisture- and flame-resistant compounds. Another common protective covering is a neoprene jacket. If the cable will be subjected to rough usage, the outer braid should be made of seine twine, hawser cord, or hemp. If high flame resistance is required, since asbestos has been discontinued due to environmental concerns, one of the special insulations designed for such exposures must be used. For underground raceway installation and interior wiring in wet locations, suitable types should be used. If protection against corrosion, electrolysis, or damage due to accidental short-circuiting of open-circuited sheaths is required, the lead sheath is protected by an outer covering of duct tape, reinforced rubber, or jute and asphalt. For cable subjected to special exposures such as acids, alkalies, and gasolines, a suitable rubber or synthetic sheath should be employed (see Sec. 43). Thermoplastic- and latex-insulated wires do not require an outer protective covering. Interlocked metal armor is advantageous as the outer covering for many installations, both indoor and outdoor.

The covered (not insulated) wires described in Sec. 10 are included under the classification of general-purpose power cables.

General-purpose power cables with insulation and covering meeting the minimum requirements of the National Electrical Code are frequently called *building wires and cables*. The Code designation letters for these cables according to the type of insulation employed are given in Div. 9. In addition to these type letters, the Code uses the following suffix letters:

1. No suffix letter indicates a single insulated conductor.
2. Suffix letter *D* indicates two insulated conductors laid parallel within an outer non-metallic covering.
3. Suffix letter *M* indicates an assembly of two or more insulated conductors twisted spirally within an outer nonmetallic covering.

54. MI (mineral-insulated) cable was developed to meet the needs for a noncombustible, high-heat-resistant, and water-resistant cable. As described by the National Electrical Code, "MI cable (see Fig. 2.5) is a cable in which one or more electrical conductors are insulated with a highly compressed refractory mineral insulation and enclosed in a liquidtight and gastight metallic tube sheathing." It is available in single-conductor construction in sizes from 16 AWG to 500 kcmil, in two-conductor construction in sizes from 16 to 1 AWG, in three-conductor construction in sizes from 16 AWG to 3 AWG, in four-conductor construction in sizes from 16 AWG

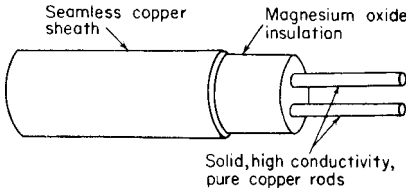


FIGURE 2.5 MI cable construction. [General Cable Co.]

to 6 AWG, and in seven-conductor construction in sizes from 16 AWG to 8 AWG.

The cable is fabricated in the following manner. Magnesium oxide in powder form is molded under great pressure into cylinders approximately 2 in (50.8 mm) in diameter and length, with as many holes through the body of the cylinder as there are conductors in the cable. After molding, the magnesium oxide cylinders are completely dehydrated in electric furnaces. The cylinders are then placed inside a seamless uncoated copper tube whose inside diameter is slightly larger than the diameter of the molded cylinders. Solid uncoated high-conductivity copper rods are then inserted in the holes in the cylinders. After the ends of the filled copper tube have been sealed, the tube goes through a series of drawing and annealing operations. In the drawing process the compressive forces reduce the magnesium oxide cylinders to powder form and produce a dense homogeneous mass of magnesium oxide which transmits the compressive forces to the conductor rods. This drawing produces, in effect, the equivalent of a solid homogeneous rod with all members—copper tube, copper rods, and magnesium oxide—maintaining the same relative position to each other while being proportionately reduced in diameter and cross section and increased in length. (Each component maintains its original proportionate size and relative position throughout the remainder of the process until the desired finished sheath diameter is reached.) The assembly is annealed at intervals during the drawing process to eliminate the effect of work hardening on the metal, and the finished cable is supplied fully annealed.

A departure from the fabrication method just described has been adopted for some constructions. In this method the same starter tube stands vertically while the starter conductors are inserted and jugged into position. Then, dried magnesium oxide powder is introduced into the tube and tamped to the desired density. After completion of this vertical filling operation, a drawing and annealing sequence is employed as with the horizontal, plug-type filled-cable assembly.

55. Nonmetallic-sheathed building cable is employed for the economical wiring of residences, farm buildings, small stores, etc. It consists of two or more conductor, rubber- or thermoplastic-insulated cable. When desired, a bare or insulated copper ground wire is incorporated in the cable assembly. The ground wire is laid in the interstices between the circuit conductors under the outer braid. Non-metallic-sheathed cable is manufactured under several trade names. The overall dimensions will differ somewhat with different manufacturers. Type designations are NM, NMC, and NMS.

56. Armor-clad building cable consists of rubber- or thermoplastic-insulated copper wire protected by flexible galvanized-steel armor. Type AC cable is regularly available

in one-, two-, three-, and four-conductor assemblies in sizes from 14 AWG to 2 AWG and also in size 1 AWG for a single conductor only. Individual conductors are finished in different colors for identification of any conductor in installation. In installing these cables a short fiber bushing (see Div. 9) is inserted between the conductors and the steel armor wherever the cable is cut. They are also commonly called *BX cable*.

Armored ground wire consists of a bare copper conductor with a flexible steel armor covering applied directly over the wire.

57. Metal-clad cable. Type MC cable is a factory assembly of one or more conductors, each individually insulated with or without optical-fiber members and enclosed in a metallic sheath or interlocking tape or in a smooth or corrugated tube. This category includes wire protected by flexible galvanized-steel armor, aluminum sheathed in a liquidtight and gastight, close-fitting, and continuous aluminum sheath, or copper sheathed in a liquidtight and gastight, close-fitting, and continuous copper or bronze sheath. Type MC cable should not be used in or exposed to corrosive conditions or directly buried in earth or concrete unless it is provided with a metallic sheath which is suitable for the conditions and is protected by materials suitable for the conditions. Metal-clad cable shall be installed as required by Article 330 of the National Electrical Code.

58. Cablebus. This is an approved assembly of insulated conductors mounted in a spaced relationship in a ventilated metal-protective supporting structure, including fittings and conductor terminations. Usually assembled at the installation site from components furnished or specified by the manufacturer, cablebus may be used at any voltage or current for which the spaced conductors are rated. Components of this wiring system are described in Div. 9.

59. Class 2 and Class 3 remote-control, signaling, and power-limited circuits. These circuits are the portion of the wiring system between the load side of the overcurrent device or the power-limited supply and the connected equipment. For installation requirements, see Article 725 of the NEC.

60. Service cables. Special multiconductor cables have been developed to meet the requirements for connecting the pole line of the street distribution system with the service-entrance equipment on the consumer's premises. The following terminology derived from their application is used for service cables:

1. *Service-drop cables.* Overhead service conductors between pole and building.
2. *Service-entrance cables.* Service conductors which extend along the exterior and enter buildings to the meter, switch, or service equipment.
3. *Combination service-drop and service-entrance cables.* Service conductors continuing without a break from the pole to the meter, switch, or service equipment.
4. *Underground service-entrance cables.* Service conductors installed in conduit or directly in the earth and entering the building to the meter, switch, or service equipment.

Service cable is made in two different types designated by the Underwriters Laboratories. Service-entrance cable is available in sizes 12 AWG and larger for copper

and 10 AWG and larger for aluminum or copper-clad aluminum, with Types RHW, THWN, or XHHW conductors. The cables are classified as follows:

1. *Type SE.* Cable for aboveground installation.
2. *Type USE.* Cable for underground installation, including burial directly in the earth. Cable in sizes 4/0 AWG and smaller with all conductors insulated is suitable for all underground uses for which Type UF cable is permitted by the National Electrical Code. Type USE service-entrance cable is similar in general construction to general power cables for direct burial in the earth.

Service cables are either rubber- or thermoplastic-insulated. They are available in two-, three-, and four-conductor assemblies.

61. Aerial cables. Bare, weatherproof (weather-resisting) covered, and rubber-insulated tree wire are all used for overhead pole-line power circuits. Bare wire is used for most power transmission circuits. See Sec. 13 and Table 87 for conductor materials employed and their field of application. Weatherproof (heat-resisting) covered wire is the general standard for distribution and low-voltage transmission circuits. Tree wire is used in distribution circuits when heavy tree growth would make the use of weatherproof wire unsuitable. It consists of a rubber-insulated copper wire protected with an abrasion-resisting covering.

The application of multiconductor aerial power cables is continually increasing. For messenger-type construction, general-purpose power cable with an alloy-lead sheath is commonly employed. To minimize the weight of extremely large cables, it is generally advisable to eliminate the lead sheath. For such installations two types of cable construction have proved satisfactory. One type consists of either paper- or varnished-cambric-insulated cable supplied with a rubber hose jacket and an overall band or interlocked armor of either steel or bronze. The other type has utilized rubber- or varnished-cambric-insulated shielded cable and an overall seine twine or hawser braid saturated with a moisture-resisting compound. A layer of rubberized tape or presaturated duck tape is interposed between the overall shielding band and the outer braid. The rubber insulation should be a corona-resisting compound, except for the lower voltages.

Most of the new installations of multiconductor aerial power cables are of the pre-assembled self-supporting type. These cables consist of one or more (usually three) rubber-insulated conductors bound to a suitable messenger cable by a flat metallic strip applied with open-lay helical wrap. In some cables each insulated conductor is covered by a neoprene jacket. In others the insulation of each conductor is covered with a tough abrasion- and corrosion-resistant aluminum-bronze shielding tape. In a third type of construction each insulated conductor is shielded by means of a tinned-copper tape and then covered with a neoprene jacket.

62. Power cables for direct burial in the earth without raceways are available in both metallic and nonmetallic armored types. Cables of different manufacturers are fairly common in general construction but differ in details of assembly and manufacture.

The metallic types consist of a lead-sheathed general-purpose power cable protected with a jute and asphalt covering or a combination covering of a flat or interlocking tape armor together with jute and asphalt. Rubber is generally used for the insulation, but

paper or varnished cambric may be employed if desired. The cables are available in one-, two-, three-, and four-conductor assemblies. These metallic types are commonly called *parkway cables*.

The nonmetallic types consist of rubber-insulated conductors protected with some form of nonmetallic covering that will provide a moisture seal, resistance to corrosion, and sufficient mechanical strength. One type of armor assembly consists of a combination of layers of asbestos-base caulk coatings, asbestos braid filled with asbestos-base caulk, and treated fibrous tape, all enclosed in a presaturated heavy duck tape. The outer surface is finished with pitch and mica flake. A common armor assembly is the jute and asphalt covering described in Sec. 44. Rubber and synthetic jackets are also employed for the protective covering of nonmetallic cables for direct burial in the earth. The jackets are frequently enclosed in a saturated duck tape or sisal braid. All the nonmetallic types mentioned are available in one-, two-, and three-conductor assemblies. Some two-conductor cables are made with one central insulated conductor and one noninsulated conductor concentrically stranded over the insulation of the inner conductor.

Thermoplastic-insulated single-conductor and multiconductor Type UF cables are also available for use up to and including 600 V.

63. Network cables were developed primarily for underground raceway installation for low-voltage secondary network service. They are single-conductor nonmetallic-sheathed cables suitable for circuits operating at not more than 600 V. These cables are insulated with a special rubber compound covered with a neoprene jacket. Braid-covered or lead-sheathed network cables are also available.

64. Series street-lighting cables differ from other power cables in the thickness of the insulation employed on the wires. They are rubber-, varnished-cambric-, or thermoplastic-insulated single-conductor cables, available in shielded or unshielded types. Rubber-insulated cables can be obtained with an outer neoprene jacket or with a lead sheath. Lead-sheathed cables can be obtained with additional coverings of jute or jute and double flat steel-tape armor with jute overall for conditions requiring added protection. Varnished-cambric-insulated cables are always lead-sheathed and may be supplied with any of the additional coverings mentioned above for rubber-insulated leaded cable.

65. Ornamental-pole and bracket cable is a two-conductor, rubber-insulated cable specially designed for great flexibility and small overall diameter. It is used for the interior wiring of ornamental lighting poles fed by underground cable and for the exterior wiring of pole-type bracket or mast-arm street-lighting fixtures. For voltages not exceeding 4000, twin-type cable construction, consisting of two rubber-insulated, single-cotton-braid-covered conductors laid parallel and enclosed in overall tape and weatherproof braid, is employed. For voltages greater than 4000, belted construction is employed. This assembly consists of two rubber-insulated and single-cotton-braid-covered conductors laid parallel and enclosed in a close-fitting belt of insulating compound. The belt insulation is covered with a tape and weatherproof braid. Another assembly for belted cable consists of two thermoplastic-insulated conductors laid parallel and enclosed in a close-fitting belt of plastic which serves as both insulation and a jacket.

66. Borehole or mine-shaft cables are specially designed to withstand the mechanical strains to which long lengths of vertically suspended cable are subjected. Both rubber and varnished cambric are employed for insulation. The rubber-insulated cables are made both with and without a lead sheath, while the varnished-cambric cables are always lead-sheathed. The cable is protected with a steel-tape or steel-wire armor. Steel-tape armor should not be used unless supports can be provided at intervals not exceeding 50 ft (15.24 m). When the cable must be supported entirely from the top, wire armor must be used. The armor should be designed with sufficient strength to support the entire cable weight with a factor of safety of at least 5 and based on a tensile strength of 70,000 psi (482,632, to 482,990 Pa). The wire armor should be served with bands of steel wire to provide a suitable bond. Conductor-supported cables, instead of the above-described armor-supported ones, are sometimes used for this class of service. The rubber-insulated conductors are protected with a strong loom covering and installed in metallic borehole casings or conduit. Medium-hard-drawn copper is used for the conductors, which entirely support the cable through conductor clamps and strain insulators.

Cables similar to the steel-armor borehole cables are employed for the vertical risers of tall buildings. For nonleaded construction a factor of safety of at least 7 should be used in designing the wire armor, while for leaded construction the minimum factor of safety should be 4.

67. Submarine cables for installation under water in rivers, lakes, harbors, etc., are rubber-insulated power cables protected with a wire armor. The more common types of coverings employed are jute and wire armor; jute, wire armor, and jute; lead, jute, and wire armor; and lead, jute, wire armor, and jute. It is best to consider each submarine installation a separate engineering problem and obtain the recommendations of the cable experts of reliable cable manufacturers.

68. Control cables consist of an assembly of several small conductors for carrying the relatively small currents for remote control of motors, circuit breakers, or other power equipment; for relay and metering circuits; for traffic-light control systems; etc. Standard assemblies vary from 1 conductor per cable to 37 conductors per cable. The size of the conductors ranges from 14 AWG to 9 AWG. For most installations a 30 percent rubber compound is used for the insulation of the conductors, although varnished cambric and thermoplastic are also employed. For installations in which the temperature is higher than normal, either a heat-resisting rubber compound or felted asbestos should be employed, the choice depending upon the temperature of the surroundings. Each individual conductor is covered with a color-coded cotton braid for protection of the insulation and identification of circuits. The conductors are assembled with jute fillers and bound together with a rubber-faced or asbestos binder tape.

For rubber-insulated cables the outer covering may be a standard cotton weatherproof braid with a black weatherproof wax finish, a lead sheath, a neoprene jacket, metallic or nonmetallic armor for direct burial in the earth as described for power cable in Sec. 62, or a braid or jute bedding protected by interlocking steel-tape armor. With rubber-jacket construction, the binder tape is eliminated. For thermoplastic-insulated cables the outer covering is a thermoplastic jacket.

69. Traffic-control, fire-alarm, and signal cables are specially designed to meet the conditions encountered in these municipal signal systems. Both rubber-and

thermoplastic-insulated cables are used. For rubber-insulated cables various outer coverings are employed, depending upon the installation conditions. These coverings include heavy cotton braid, a plain lead sheath, a protected lead sheath, and a neoprene jacket. For thermoplastic-insulated cables the outer covering is a thermoplastic or similar jacket.

70. Special cables for electric transportation equipment are manufactured to meet the particular requirements of this class of service with respect to flexibility and resistance to vibration. The conductors are rubber-insulated. The cable covering usually consists of cotton braid or a rubber jacket.

71. Cables for gas-tube sign and oil-burner ignition systems should be of a type approved by the Underwriters Laboratories for this service.

The Underwriters kilovolt designations for cables for this service are GTO-5, GTO-10, and GTO-15. In each case the numeral indicates the cable rating in kilovolts. Approved cables made by different manufacturers differ in details of construction. At one time these cables were rubber-insulated. Today most of them are thermoplastic-insulated with an outer thermoplastic jacket.

72. X-ray cables are designed to meet the special conditions encountered in power supply circuits to high-voltage x-ray tubes and similar equipment. As produced by one manufacturer, they consist of a core made up of two rubber-insulated wires and two uninsulated wires. A semiconducting rubber compound is extruded over these conductors and covered with a layer of rubber insulation. Another semiconducting coating is applied over this insulation, and it, in turn, is covered with a close-covering annealed-copper shielding braid. The outer covering may be either cotton braid or a neoprene jacket.

73. Drive-in-theater cables are designed for direct installation in the earth under outdoor motion-picture-theater lots to serve sound-distribution networks from the projection booth to speaker posts installed adjacent to the designated automobile-parking stations. Two types of cable are available for this service: two-conductor rubber-insulated cable with an outer neoprene jacket and two-conductor cable with a uni-insulation and jacket of thermoplastic compound.

74. Portable power cables are designed for circuits supplying power to portable power equipment such as electric shovels, dredgers, air compressors, and welders. The individual conductors are generally insulated with a thermoset compound. Cables of this type for voltages not exceeding 600 V may be obtained with the following protective coverings: heavy cotton braid, seine-twine braid, loom sheath, thermoset jacket, or jute and wire armor. These coverings are listed in the order of increasing resistance to wear. Only rubber jackets, thermoset jackets, or jute-and-wire-armor coverings are employed for cables for voltages exceeding 600 V. These high-voltage cables may be obtained in the types shown in the accompanying table.

Type	Covering	Ground wires	Shielding	Max. voltage recommended
W	Thermoset jacket	Without	None	2500
G	Thermoset jacket	With	None	5000
SH-A	Rubber jacket	Without	On each conductor	
SH-B	Rubber jacket	Without	Over cabled conductor	
SH-C	Rubber jacket	With	Over cabled conductor	6000
SH-D	Rubber jacket or jute and wire armor	With	On each conductor	...*

*No standard above 6000 V; consult manufacturers.

The conductors of portable power cables are made especially flexible by the use of Class G or H stranding (see Table 93); for special applications requiring even greater flexibility, special stranding may be employed. Single-conductor cables are regularly available in sizes from 8 AWG to 500 kcmil. Two-, three-, four-, five-, and six-conductor cables are standard in sizes from 8 AWG to 4/0 AWG.

75. Fixture wire is used for the wiring of electrical fixtures. There are 31 approved types, which are listed and described in Table 76. Those wires with a single *F* in their designation may be either solid or 7-stranded. Those with *FF* must be made of wire with especially flexible stranding.

76. Fixture Wire*

(Table 402.3, 2008 National Electrical Code)

Trade name	Type letter	Insulation	Thickness of insulation			Outer covering	Maximum operating temperature	Application provisions
			AWG		Mils			
				mm	Thickness of asbestos (mils)			
Heat-resistant rubber-covered fixture wire; flexible stranding	FFH-2	Heat-resistant rubber Cross-linked synthetic polymer	18–16	0.76	30	Nonmetallic	75°C (167°F)	Fixture wiring.
			18–16	0.76	30			
ECTFE; solid or 7-strand	HF	Ethylene chlorotrifluoro-ethylene	18–14	0.38	15	None	150°C (302°F)	Fixture wiring.
ECTFE; flexible stranding	HFF	Ethylene chlorotrifluoro-ethylene	18–14	0.38	15	None	150°C (302°F)	Fixture wiring.
Tape-insulated fixture wire; solid or 7-strand	KF-1	Aromatic polyimide tape	18–10	0.14	5.5	None	200°C (392°F)	Fixture wiring; limited to 300 V
	KF-2	Aromatic polyimide tape	18–10	0.21	8.4	None	200°C (392°F)	Fixture wiring.
Tape-insulated fixture wire; flexible stranding	KFF-1	Aromatic polyimide tape	18–10	0.14	5.5	None	200°C (392°F)	Fixture wiring; limited to 300 V
	KFF-2	Aromatic polyimide tape	18–10	0.21	8.4	None	200°C (392°F)	Fixture wiring.

76. Fixture Wire* (Continued)

(Table 402.3, 2008 National Electrical Code)

Trade name	Type letter	Insulation	Thickness of insulation			Outer covering	Maximum operating temperature	Application provisions
			AWG		Mils			
Perfluoroalkoxy; solid or 7-strand (nickel or nickel-coated copper)	PAF	Perfluoroalkoxy	18–14	0.51	20	None	250°C (482°F)	Fixture wiring. (nickel or nickel-coated copper)
Perfluoroalkoxy; flexible stranding	PAFF	Perfluoroalkoxy	18–14	0.51	20	None	150°C (302°F)	Fixture wiring.
Fluorinated ethylene propylene fixturewire; solid or 7-strand	PF	Fluorinated ethylene propylene	18–14	0.51	20	None	200°C (392°F)	Fixture wiring.
	PGF		18–14	0.36	14	Glass braid		
Fluorinated ethylene propylene fixturewire; flexible stranding	PFF	Fluorinated ethylene propylene	18–14	0.51	20	None	150°C (302°F)	Fixture wiring.
	PGFF		18–14	0.36	14	Glass braid		
Extruded polytetrafluoroethylene; solid or 7-strand (nickel or nickel-coated copper)	PTF	Extruded polytetrafluoroethylene	18–14	0.51	20	None	250°C (482°F)	Fixture wiring. (nickel or nickel-coated copper)
Extruded polytetrafluoroethylene; flexible stranding (No. 26-36 AWG; silver or nickel-coated copper)	PTFF	Extruded polytetrafluoroethylene	18–14	0.51	20	None	150°C (302°F)	Fixture wiring. (silver or nickel-coated copper)
Heat-resistant rubber-covered fixturewire; solid or 7-strand	RFH-1	Heat-resistant rubber	18	0.38	15	Nonmetallic	75°C (167°F)	Fixture wiring; limited to 300 V
	RFH-2	Heat-resistant rubber Cross-linked synthetic polymer	18–16	0.76	30	Nonmetallic	75°C (167°F)	Fixture wiring.

Heat-resistant cross-linked synthetic polymer-insulated fixture wire, solid or stranded	RFHH-2 ^b	Cross-linked synthetic polymer	18–16	0.76	30	None or nonmetallic covering	90°C (194 F)	Fixture wiring. Multiconductor cable.
	RFHH-3 ^b		18–16	1.14	45			
	SF-1	Silicone rubber	18	0.38	15	Nonmetallic	200°C (392°F)	Fixture wiring; limited to 300 V
	SF-2		18–12 10	0.76 1.14	30 45		200°C (392°F)	Fixture wiring.
	SFF-1	Silicone rubber	18	0.38	15	Nonmetallic	150°C (302°F)	Fixture wiring; limited to 300 V
	SFF-2		18–12 10	0.76 1.14	30 45		150°C (302°F)	Fixture wiring.
	TF ^b	Thermoplastic	18–16	0.76	30	None	60°C (140°F)	Fixture wiring.
	TFF ^b		18–16	0.76	30		60°C (140°F)	Fixture wiring.
	TFN ^b	Thermoplastic	18–16	0.38	15	Nylon-jacketed or equivalent	90°C (194°F)	Fixture wiring.

76. Fixture Wire* (Continued)

(Table 402.3, 2008 National Electrical Code)

Trade name	Type letter	Insulation	Thickness of insulation			Outer covering	Maximum operating temperature	Application provisions
			AWG		Mils			
Heat-resistant thermo-plastic-covered fixture wire; flexible stranded	TFFN ^b	Thermoplastic	18–16	0.38	15	Nylon-jacketed or equivalent	90°C (194 F)	Fixture wiring.
Cross-linked polyolefin insulated fixture wire; solid or 7-strand	XF ^b	Cross-linked polyolefin	18–14	0.76	30	None	150°C (302°F)	Fixture wiring; limited to 300 V
			12–10	1.14	45			
Cross-linked polyolefin insulated fixture wire; flexible stranded	XFF ^b	Cross-linked polyolefin	18–14	0.76	30	None	150°C (302°F)	Fixture wiring; limited to 300 V
			12–10	1.14	45			
Modified ETFE; solid or 7-strand	ZF	Modified ethylene tetrafluoroethylene	18–14	0.38	15	None	150°C (302°F)	Fixture wiring.
Flexible stranding	ZFF	Modified ethylene tetrafluoroethylene	18–14	0.38	15	None	150°C (302°F)	Fixture wiring.
High Temp. Modified ETFE—Solid or 7-strand	ZHF	Modified Ethylene Tetrafluoroethylene	18–14	0.38	15	None	200°C (302°F)	Fixture Wiring.

^aReprinted with permission from NFPA 70®-2002, National Electrical Code, © 2001, National Fire Protection Association®, Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA® on the referenced subject, which is represented only by the standard in its entirety.

^bInsulation and outer coverings that meet the requirements of flame-retardant, limited smoke, and are so listed shall be permitted to be marked limited smoke after the Code-type designation.

77. Flexible cord is the name applied to wires used to connect portable appliances, small tools, or machinery to the receptacles of the wiring installation or to wire the portable device itself. Flexible cords also are used to wire pendant fixtures from the outlet box to the fixture. NEC Table 400.4 lists the different types of approved flexible cords with their permitted uses.

78. Radio and TV wires. Special types of wires have been developed to meet the needs of the radio and TV industry. They include antenna, lead-in, coil-lead, hookup, and transmission-line wires and microphone cable.

79. Automotive and aircraft wires and cables are specially designed to meet the requirements of these two classes of service. They include high-tension ignition cables, primary wires for low-voltage service, and starter cables.

80. The telephone industry requires special types of wires and cables. The multi-conductor cables for main distribution circuits are dry-paper-insulated and lead-covered. A lead-antimony sheath is generally employed for aerial and underground installation in conduit or ducts. For direct burial in the earth and for some aerial work, the lead sheath is protected with jute and steel-tape armor. Specially designed steel-wire-armored cables are used for submarine installation. It is a common practice to terminate these paper-insulated cables by splicing to them a short length of textile-insulated lead-covered cable. A common type of this textile-insulated cable employs two layers of silk and one layer of cotton insulation on each conductor, the cable being protected with a pure lead sheath. Rubber-insulated two-conductor cables protected with a weatherproof braid are used for service drops from pole to house. Hard-drawn copper, bronze, and copperweld conductors are used for these cables.

For circuits exposed to severe moisture and requiring from 2 to 12 conductors, rubber-insulated lead-covered cables are frequently used.

For interior wiring of individual telephone circuits, twisted-pair rubber-insulated cotton-braid-covered cables are employed. There is a trend toward the use of thermoplastic-insulated conductors with thermoplastic or similar outer sheaths for interior work and direct burial in earth.

81. Cables for shipboard use should be designed for the special requirements and severe service encountered in installations on board ship. Such cables are generally made in accordance with Institute of Electrical and Electronic Engineers (IEEE) specifications, which are approved by the ICEA.

82. Magnet wire is the name applied to single-conductor insulated wires manufactured for the winding of coils for electrical circuits. Round magnet wire is made of soft annealed solid copper wire in sizes from 46 AWG to 4/0 AWG. Square- and rectangular-cross-section magnet wires are also available. Insulations used for magnet wire include baked films (enamel), cotton, silk, nylon yarn, paper, asbestos, fibrous glass, Dacron-glass, or combinations of these materials. The temperature rating of magnet wires depends upon the insulation employed and is based upon the temperature limits stated in Publication No. 1 of the IEEE (refer to Div. 7, Sec. 130). All magnet wire made by a reliable manufacturer

will meet certain specifications for physical and electrical characteristics that have been standardized by the National Electrical Manufacturers Association.

Enamel Coatings

Conventional Enamel (Generally Referred to Merely as Enamel). A baked-film insulation of an oleoresinous varnish having good moisture resistance and dielectric properties. Used widely in magnet wire coils of all types. 105°C Class A insulation.

Formvar Enamel. A baked-film insulation from a varnish based on vinyl acetal resin. Has excellent resistance to heat, abrasion, and solvents, combined with exceptional flexibility and adherence. 105°C Class A insulation.

Self-Bonding Formvar. A baked-film insulation consisting of Formvar over which is applied a thermoplastic overcoat. When formed into coils and baked or otherwise suitably heat-treated, the turns of wire, because of the thermoplastic overcoat, become bonded together, thus facilitating the fabrication of self-supporting coil assemblies. 105°C Class A insulation.

Nylon Enamel. A baked-film insulation from a varnish based on polyamide resin which solders readily (self-fluxing) unless it is overbaked. Excellent winding qualities. Not so good as Formvar in electrical properties and moisture resistance. 105°C Class A insulation.

Formvar and Nylon Enamel. A baked-film insulation consisting of Formvar over which is applied a coat of nylon enamel. Combines the advantages of good winding properties of the outer nylon enamel coating with the better electrical properties and moisture resistance of the underlying Formvar enamel coating. 105°C Class A insulation.

Enamel G. A baked-film insulation from a varnish based on polyurethane resin. Solders readily (self-fluxing). Good winding and moisture-resistance qualities. Good electrical properties even at high frequencies. Well suited for electronic and communication applications. 120°C, between Class A and Class B insulation.

Enamel Class B. A baked-film insulation from a varnish based on polyester resin such as Isonel or comparable materials. Handling properties comparable to Formvar, except for somewhat poorer heat shock test. Although stable up to 150°C, it is generally used as Class B (130°C) insulation.

Coverings

Cotton. Unbleached fine long-staple cotton yarn applied with proper techniques to provide a firm, even layer winding. Rated as 90°C Class O insulation when used alone. When impregnated or immersed in liquid dielectric, it is rated as 105°C Class A insulation.

Nylon Yarn. High-quality nylon tram supplied as an alternative to silk covering. When used alone, it is rated as 90°C Class O insulation.

Silk. The best grade of tram silk is particularly suitable for low-loss radio-frequency coils in which interturn and interlayer capacitances must be kept to a minimum. When used alone, it is rated as 80°C Class O insulation.

Paper. 100 percent manila-rope stock or equivalent grade in tape thicknesses of 0.85 to 3.0 mils (0.0216 to 0.0762 mm). When used alone, it is rated as 90°C Class O insulation. When impregnated or immersed in liquid dielectric, it is rated as 105°C Class A insulation.

Fibrous Glass. Pure, alkali-free, continuous-filament glass yarn is wrapped, saturated, and bonded to the conductor with high-grade insulating varnishes or compounds so applied as to yield a smooth, uniform, homogeneous insulating covering. When impregnated with conventional varnish, it is rated as 130°C Class B insulation. When treated with silicone varnish, it is rated as 180°C Class H insulation.

Dacron Glass. A combination insulation consisting of glass and Dacron fibers. Much better abrasion resistance, insulation adhesion, and flexibility than all-glass insulation. When impregnated with standard varnish, it is rated as 130°C Class B insulation. Rating when treated with silicone varnish is not yet established.

83. In the selection of the proper type of magnet wire for any application, the following factors should be considered:

1. Utilization of winding space
2. Resistance to abrasion
3. Cost
4. Insulating qualities
5. Appearance
6. Operating temperatures

84. Method of determining the approximate diameter of any cable. When the approximate overall diameter of a wire or cable not listed in conventional tables is desired, it may be determined by means of one of the following formulas. As a rule, results obtained from these formulas will give minimum outside diameters. To allow for manufacturing tolerances, add 50 mils (0.127 mm) to the outside diameters as obtained from the formulas to get approximate maximum diameters.

For single-conductor cables:

$$OD = d + 2T + 2t_c \quad (1)$$

For multiconductor nonshielded or belted cables:

$$OD = K(d + 2T + 2t_c) + 2t_o \quad (2)$$

For multiconductor belted cable:

$$OD = K(d + 2T) + 2t_B + 2t_o \quad (3)$$

For multiconductor shielded cable:

$$OD = K(d + 2T + 0.032) + 0.020 + 2t_o \quad (4)$$

where OD = outside diameter in inches, d = diameter of bare round conductor in inches, T = thickness of conductor insulation in inches, t_c = thickness of covering over insulation of individual conductors in inches, t_B = thickness of belt insulation in inches, t_o = thickness of overall protective covering in inches, and K = value from following table:

<i>Conductor</i>	<i>Value of K</i>
Two-conductor, round	2.00
Two-conductor, flat, maximum diameter	2.00
Two-conductor, flat, minimum diameter	1.00
Three-conductor, round	2.16
Three-conductor, ordinary sector	1.95
Three-conductor, compact sector	1.90
Four-conductor, round	2.41
Four-conductor, ordinary sector	2.20
Four-conductor, compact sector	2.15

For any conductor or cable with a known outside diameter, the outside cross-sectional area may be determined by

$$CSA \text{ (in}^2\text{)} = d^2 \times 0.7854 \quad (5)$$

where d = outside diameter in inches.

85. Comparison of Wire and Sheet-Metal Gage Diameters or Thickness in Inches

Gage no.	(1) Ameri- can wire gage (AWG)*	(2) Steel wire gage	(3) Birming- ham iron wire (Stubs)	(4) Stubs steel wire gage	(5) British standard wire gage	(6) Steel music wire gage	(7) U.S. standard gage	(8) Manufac- turers standard gage	(9) Bir- ming- ham
15/0	1.0000
14/0	0.9583
13/0	0.9167
12/0	0.8750
11/0	0.8333
10/0	0.7917
9/0	0.7500
8/0	0.7083
7/0	0.4900	0.5000	0.5000	0.4783	0.6666
6/0	0.4615	0.4640	0.4687	0.4484	0.6250
5/0	0.4305	0.4320	0.4375	0.4185	0.5883
4/0	0.4600	0.3938	0.454	0.4000	0.4062	0.3886	0.5416
3/0	0.4100	0.3625	0.425	0.3720	0.3750	0.3587	0.5000
2/0	0.3650	0.3310	0.380	0.3480	0.0087	0.3437	0.3288	0.4452
1/0	0.3250	0.3065	0.340	0.3240	0.0039	0.3125	0.2290	0.3964
1	0.2890	0.2830	0.300	0.227	0.3000	0.0098	0.2812	0.2690	0.3532
2	0.2580	0.2625	0.284	0.219	0.2760	0.0106	0.2656	0.2541	0.3147
3	0.2290	0.2437	0.259	0.212	0.2520	0.0114	0.2500	0.2391	0.2804
4	0.2040	0.2253	0.238	0.207	0.2320	0.0122	0.2344	0.2242	0.2500
5	0.1820	0.2070	0.220	0.204	0.2120	0.0138	0.2187	0.2092	0.2225
6	0.1620	0.1920	0.203	0.201	0.1920	0.0157	0.2035	0.1943	0.1981
7	0.1440	0.1770	0.180	0.199	0.1760	0.0177	0.1875	0.1793	0.1764
8	0.1280	0.1620	0.165	0.197	0.1600	0.0197	0.1719	0.1644	0.1570
9	0.1140	0.1483	0.148	0.194	0.1440	0.0216	0.1562	0.1495	0.1398
10	0.1020	0.1350	0.134	0.191	0.1280	0.0236	0.1406	0.1345	0.1250
11	0.0910	0.1205	0.120	0.188	0.1160	0.0260	0.1250	0.1196	0.1113
12	0.0810	0.1055	0.109	0.185	0.1040	0.0283	0.1094	0.1046	0.0991
13	0.0720	0.0915	0.095	0.182	0.0920	0.0305	0.0937	0.0897	0.0882
14	0.0640	0.0800	0.083	0.180	0.0800	0.0323	0.0821	0.0747	0.0785
15	0.0570	0.0720	0.072	0.178	0.0720	0.0342	0.0703	0.0673	0.0699
16	0.0510	0.0625	0.065	0.175	0.0640	0.0362	0.0625	0.0598	0.0625
17	0.0450	0.0540	0.058	0.172	0.0560	0.0382	0.0562	0.0538	0.0556
18	0.0400	0.0475	0.049	0.168	0.0480	0.0400	0.0500	0.0478	0.0495
19	0.0360	0.0410	0.042	0.164	0.0400	0.0420	0.0437	0.0418	0.0440
20	0.0320	0.0348	0.035	0.161	0.0360	0.0440	0.0375	0.0359	0.0392
21	0.0285	0.0317	0.032	0.157	0.0320	0.0460	0.0344	0.0329	0.0349
22	0.0253	0.0286	0.028	0.155	0.0280	0.0480	0.0312	0.0299	0.0312
23	0.0226	0.0258	0.025	0.153	0.0240	0.0510	0.0281	0.0269	0.0278
24	0.0210	0.0230	0.022	0.151	0.0220	0.0550	0.0250	0.0239	0.0247
25	0.0179	0.0204	0.020	0.148	0.0200	0.0590	0.0219	0.0209	0.0220
26	0.0159	0.0181	0.018	0.146	0.0180	0.0630	0.0187	0.0179	0.0196
27	0.0142	0.0173	0.016	0.143	0.0164	0.0670	0.0172	0.0164	0.0175
28	0.0126	0.0162	0.014	0.139	0.0148	0.0710	0.0156	0.0149	0.0156
29	0.0113	0.0150	0.013	0.134	0.0136	0.0740	0.0141	0.0135	0.0139







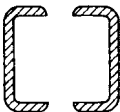
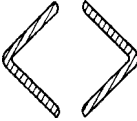
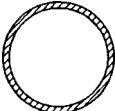

(Continued)

85. Comparison of Wire and Sheet-Metal Gage Diameters or Thickness in Inches (*Continued*)

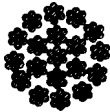

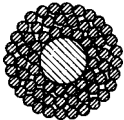





Gage no.	(1) Ameri- can wire gage (AWG)*	(2) Steel wire gage	(3) Birming- ham iron wire (Stubs)	(4) Stubs steel wire gage	(5) British standard wire gage	(6) Steel music wire gage	(7) U.S. standard gage	(8) Manufac- turers standard gage	(9) Bir- ming- ham
30	0.0100	0.0140	0.012	0.127	0.0124	0.0780	0.0125	0.0120	0.0123
31	0.0089	0.0132	0.010	0.120	0.0116	0.0820	0.0109	0.0105	0.0110
32	0.0080	0.0128	0.009	0.115	0.0108	0.0860	0.0101	0.0097	0.0098
33	0.0071	0.0118	0.008	0.112	0.0100	0.0094	0.0090	0.0087
34	0.0063	0.0104	0.007	0.110	0.0092	0.0086	0.0082	0.0077
35	0.0056	0.0095	0.005	0.108	0.0084	0.0078	0.0075	0.0069
36	0.0050	0.0090	0.004	0.106	0.0076	0.0070	0.0067	0.0061
37	0.0045	0.0085	0.103	0.0068	0.0066	0.0064	0.0054
38	0.0040	0.0080	0.101	0.0060	0.0062	0.0060	0.0048
39	0.0035	0.0075	0.099	0.0052	0.0056	0.0043
40	0.0031	0.0070	0.097	0.0048	0.0039
41	0.0066	0.095	0.0044	0.0034
42	0.0062	0.092	0.0040	0.0031
43	0.0060	0.088	0.0036	0.0027
44	0.0058	0.085	0.0032	0.0024
45	0.0055	0.081	0.0028	0.00215
46	0.0052	0.079	0.0024	0.0019
47	0.0050	0.077	0.0020	0.0017
48	0.0048	0.075	0.0016	0.0015
49	0.0046	0.072	0.0012	0.00135
50	0.0044	0.069	0.0010	0.0012
51	0.0011
52	0.00095

*The American wire gage sizes have been rounded off to about the usual limits of commercial accuracy.









86. Makeups of Electrical Conductors

Type	Illustration	Application
Copper		
Solid, round		Bare wire in sizes 4/0 to 45 AWG. Covered, noninsulated in sizes 4/0 to 14 AWG. Insulated in sizes 6 to 14 AWG for power work. Insulated in sizes 1/0 to 46 AWG for magnet wire
Solid, grooved		Trolley contact wire size 350,000 cmil to 1/0 AWG
Solid, figure eight		Trolley contact wire size 350,000 cmil to 1/0 AWG
Solid, figure nine		Trolley contact wire size 400,000 cmil
Solid, Square		Magnetic wire and windings for electrical equipment
Solid, rectangular		Magnet wire, windings for electrical equipment, busbars
Solid, channels		Busbars
Solid, angle		Busbars
Solid, tubes		Busbars
Standard, concentric-stranded		Bare, covered, and insulated in sizes 5 million cmil to 20 AWG





86. Makeups of Electrical Conductors (Continued)

Type	Illustration	Application
Copper		
Standard rope-stranded		Rubber-sheathed cords and cables in sizes 5 million cmil to 8 AWG
Bunched-stranded		Flexible cords and fixture wire in sizes 10 to 22 AWG
Annular concentric-stranded with rope core		Varnished-cambric-insulated and solid-type paper-insulated single-conductor cables in sizes 5 million to 750,000 cmil
Compact-stranded, round		Varnished-cambric-insulated and solid-type paper-insulated cables in sizes 1,000,000 cmil to 1 AWG single-conductor and size 1 AWG for multiconductor
Compact-stranded, sector		Multiconductor paper-insulated cables, both solid and oil-filled types, in sizes 1,000,000 cmil to 1/0 AWG
Compact-stranded, segmental		Varnished-cambric-insulated and solid-type paper-insulated single-conductor cables in sizes 4,000,000 to 1,000,000 cmil
Hollow-core, stranded		Oil-filled paper-insulated single-conductor cables in sizes 2,000,000 cmil to 2/0 AWG
Tubular-segment; Type HH		High-voltage long-distance transmission

86. Makeups of Electrical Conductors (Continued)

Type	Illustration	Application
Iron or steel		
Solid, round		Bare in sizes 4, 6, and 8 AWG for power work. Bare in sizes 4 to 14 AWG for telephone and telegraph work
Three-strand		Bare in sizes 4, 6, and 8 AWG
Copperweld		
Solid, round		Bare in sizes 4/0 to 12 AWG. Weatherproof covered in sizes 2 to 12 AWG. Rubber-insulated: single conductors in sizes 4/0 to 12 AWG and two conductors in sizes 14 and 17 AWG
Concentric-stranded		Bare or rubber-covered single-conductor in diameters from 0.0910 to 0.174 in
Copperweld and copper		
Stranded		Bare in various combinations of strands in cable sizes from 586,800 cmil to 8 AWG. Weatherproof covered in sizes 2 to 8 AWG
Copper and steel		
Three-strand		Bare in sizes 2 to 12 AWG
All-aluminum		
Solid, round		Bare wire in sizes 4/0 to 29 AWG. Covered, noninsulated in sizes 4/0 to 12 AWG. Insulated in sizes 6 to 12 AWG for power work. Insulated in sizes 4 to 26 AWG for magnet wire
Stranded		Bare or weatherproof covered in sizes 1,590,000 cmil to 6 AWG

86. Makeups of Electrical Conductors (Continued)

Type	Illustration	Application
Copper-clad aluminum		
Solid, round		Same as all-aluminum
Concentric-stranded		Same as all-aluminum
Aluminum and steel (ACSR)		
Annular aluminum, stranded with steel core		Bare in sizes 1,590,000 cmil to 4 AWG. Weatherproof, covered in sizes 4/0 to 8 AWG
Bronze		
Solid, round		Bare or weatherproof covered in sizes 4 to 14 AWG

87. Application Guide for Electrical Conductor Materials

Application		Suitable conductor material									
		Copper, soft-drawn	Copper, medium-hard-drawn	Copper, hard-drawn	Copperweld	Copperweld and copper	Copper and steel, stranded	All aluminum and copper-clad aluminum	Aluminum and steel (ACSR)	Steel or iron	Bronze
Bare transmission and distribution wires	Heavy and medium loads	Short and medium spans	✓	✓				✓	✓		
		Long spans		✓		✓			✓		
	Light loads	Short and medium spans	✓	✓				✓	✓		
		Long spans		✓	✓		✓		✓	✓	
Covered noninsulated transmission and distribution wires	Heavy loads	Short and medium spans	✓	✓				✓			
		Long spans		✓					✓		
	Light loads	Short and medium spans	✓	✓				✓			
		Long spans			✓	✓	✓		✓		✓
Insulated cables		✓						✓			
Telephone and telegraph lines; ground wires				✓	✓					✓	
Signal circuits				✓	✓						
Trolley contact wires				✓							✓
Trolley feeders			✓								

88. Solid Bare Copper Conductors

(Anaconda Wire and Cable Co.)

Size, AWG	Wire diam, in	Cross-sectional area		Weight		Hard-drawn wire		Medium hard-drawn wire		Soft or annealed wire	
		Cir mils	Sq in	Per 1000 ft, lb	Per mile, lb	Min breaking strength, lb*	Max resistance per 1000 ft at 20°C, ohms†	Min breaking strength, lb*	Max resistance per 1000 ft at 20°C, ohms†	Max breaking strength, lb*	Max resistance per 1000 ft at 20°C, ohms†
4/0	0.4600	211,600	0.1662	640.5	3,382	8,143	0.05045	6,980	0.05019	5,983	0.04993
3/0	0.4096	167,800	0.1318	507.9	2,682	6,722	0.06361	5,667	0.06329	4,745	0.06296
2/0	0.3648	133,100	0.1045	402.8	2,127	5,519	0.08021	4,599	0.07980	3,763	0.07939
1/0	0.3249	105,500	0.08289	319.5	1,687	4,517	0.1011	3,730	0.1006	2,984	0.1001
1	0.2893	83,690	0.06573	253.5	1,338	3,688	0.1287	3,024	0.1282	2,432	0.1262
2	0.2576	66,370	0.05213	200.9	1,061	3,003	0.1625	2,450	0.1617	1,929	0.1592
3	0.2294	52,630	0.04134	159.3	841.2	2,439	0.2049	1,984	0.2038	1,530	0.2007
4	0.2043	41,740	0.03278	126.4	667.1	1,970	0.2584	1,584	0.2570	1,213	0.2531
5	0.1819	33,100	0.02600	100.2	529.1	1,591	0.3258	1,264	0.3241	961.9	0.3192
6	0.1620	26,250	0.02062	79.46	419.6	1,280	0.4108	1,010	0.4087	762.9	0.4025
7	0.1443	20,820	0.01635	63.02	332.7	1,030	0.5181	806.6	0.5154	605.0	0.5075
8	0.1285	16,510	0.01297	49.97	263.9	826.0	0.6533	643.9	0.6499	479.8	0.6400
9	0.1144	13,090	0.01028	39.63	209.3	661.2	0.8238	514.2	0.8195	380.5	0.8070
10	0.1019	10,380	0.008155	31.43	165.9	529.2	1.039	401.4	1.033	314.0	1.018
11	0.09074	8,234	0.006467	24.92	131.6	422.9	1.310	327.6	1.303	249.0	1.283
12	0.08081	6,530	0.005129	19.77	104.4	337.0	1.652	261.6	1.643	197.5	1.618
13	0.07196	5,178	0.004067	15.68	82.77	268.0	2.083	208.8	2.072	156.6	2.040
14	0.06408	4,107	0.003225	12.43	65.64	213.5	2.626	166.6	2.613	124.2	2.573
15	0.05707	3,257	0.002558	9.858	52.05	169.8	3.312	133.0	3.295	98.48	3.244
16	0.05082	2,583	0.002028	7.818	41.28	135.1	4.176	106.2	4.154	78.10	4.091
17	0.04526	2,048	0.001609	6.200	32.74	107.5	5.266	84.71	5.239	61.93	5.158
18	0.04030	1,624	0.001276	4.917	25.96	85.47	6.640	67.61	6.606	49.12	6.505

88. Solid Bare Copper Conductors (Continued)

(Anaconda Wire and Cable Co.)

Size, AWG	Wire diam, in	Cross-sectional area		Weight		Hard-drawn wire		Medium hard-drawn wire		Soft or annealed wire	
		Cir mils	Sq in	Per 1000 ft, lb	Per mile, lb	Min breaking strength, lb*	Max resistance per 1000 ft at 20°C, ohms†	Min breaking strength, lb*	Max resistance per 1000 ft at 20°C, ohms†	Max breaking strength, lb*	Max resistance per 1000 ft at 20°C, ohms†
19	0.03589	1,288	0.001012	3.899	20.59	67.99	8.373	53.95	8.330	38.95	8.202
20	0.03196	1,022	0.0008023	3.092	16.33	54.08	10.56	43.05	10.50	30.89	10.34
21	0.02846	810.1	0.0006363	2.452	12.95	43.07	13.31	34.36	13.24	24.50	13.04
22	0.02535	642.5	0.0005046	1.945	10.27	34.26	16.79	27.41	16.70	19.43	16.45
23	0.02257	509.5	0.0004001	1.542	8.143	27.25	21.17	21.87	21.06	15.14	20.74
24	0.02010	404.0	0.0003173	1.233	6.458	21.67	26.69	17.45	26.56	12.69	26.15
25	0.01790	320.4	0.0002517	0.9699	5.121	17.26	33.66	13.92	33.49	10.07	32.97
26	0.01594	254.1	0.0001996	0.7692	4.061	13.73	42.44	11.11	42.23	7.983	41.58
27	0.01420	201.5	0.0001583	0.6100	3.221	10.92	53.52	8.863	53.25	6.331	52.43
28	0.01264	159.8	0.0001255	0.4837	2.554	8.698	67.49	7.070	67.14	5.021	66.11
29	0.01126	126.7	0.00009954	0.3836	2.026	6.918	85.10	5.640	84.66	3.981	83.37
30	0.01003	100.5	0.00007894	0.3042	1.606	5.502	107.3	4.499	106.8	3.157	105.1
31	0.008928	79.70	0.00006260	0.2413	1.274	4.376	135.3	3.589	134.6	2.504	132.6
32	0.007950	63.21	0.00004964	0.1913	1.010	3.485	170.6	2.862	169.8	1.986	167.2
33	0.007080	50.13	0.00003937	0.1517	0.8011	2.772	215.2	2.283	214.1	1.575	210.8
34	0.006305	39.75	0.00003122	0.1203	0.6353	2.204	271.3	1.821	269.9	1.249	265.8
35	0.005615	31.52	0.00002476	0.09542	0.5038	1.755	342.1	1.452	340.4	0.9904	335.2
36	0.005000	25.00	0.00001963	0.07567	0.3996	1.396	431.4	1.158	429.2	0.7854	422.6
37	0.004453	19.83	0.00001557	0.06001	0.3169	1.110	544.0	0.9238	541.2	0.6228	532.9
38	0.003965	15.72	0.00001235	0.04759	0.2513	0.8829	686.0	0.7367	682.4	0.4939	672.0
39	0.003531	12.47	0.000009793	0.03774	0.1993	0.7031	865.0	0.5876	860.5	0.3917	847.4
40	0.003145	9.888	0.000007766	0.02993	0.1580	0.5592	1,091	0.4685	1,085	0.3106	1,069
41	0.002800	7.842	0.000006159	0.02374	0.1253	0.4434	1,375	0.3716	1,368	0.2464	1,347

42	0.002494	6.219	0.000004884	0.01882	0.09939	0.3517	1,734	0.2947	1,725	0.1954	1,699
43	0.002221	4.932	0.000003873	0.01493	0.07882	0.2789	2,187	0.2337	2,176	0.1549	2,142
44	0.001978	3.911	0.000003072	0.01184	0.06251	0.2212	2,758	0.1853	2,743	0.1229	2,702
1 mil	0.001000	1.000	0.000000785	0.003027	0.01598	0.05655	10,790	0.04738	10,730	0.03142	10,570

*The breaking strengths are based on ASTM specification requirements, using minimum values for hard- and medium hard-drawn wire, and maximum values for soft wire.

†The resistance values in this table are trade maximums and are higher than the average values for commercial wire.

The following values for the conductivity of copper were used:

ASTM Requirements

	Conductivity, IACS % at 20°C	Resistivity, lb per mile-ohm at 20°C
Hard-drawn, 0.325 in and larger	97.16	900.77
Hard-drawn, 0.324 in and smaller	96.16	910.15
Medium hard-drawn, 0.325 in and larger	97.66	896.15
Medium hard-drawn, 0.324 in and smaller	96.66	905.44
Soft or annealed	98.16	891.58

89. Stranded Bare Copper Conductors
(Anaconda Wire and Cable Co.)

Size				Weight [†]		Hard-drawn, min breaking strength, lb [‡]	Medium hard-drawn, min breaking strength, lb [‡]	Soft-drawn, max breaking strength, lb [‡]
Cir mils	AWG			Per 1000 ft, lb	Per mile, lb			
5,000,000	B	2.581	15,890	83,910	219,500	173,200	145,300
5,000,000	A	2.580	15,890	83,910	216,300	171,800	145,300
4,500,000	B	2.448	14,300	75,520	200,400	156,900	130,800
4,500,000	A	2.448	14,300	75,520	197,200	154,600	130,800
4,000,000	B	2.309	12,590	66,490	178,100	139,500	116,200
4,000,000	A	2.307	12,590	66,490	175,600	138,500	116,200
3,500,000	B	2.159	11,020	58,180	155,900	122,000	101,700
3,500,000	A	2.158	11,020	58,180	153,400	120,200	101,700
3,000,000	B	1.998	9,353	49,390	134,400	104,600	87,180
3,000,000	A	1.998	9,353	49,390	131,700	103,900	87,180
2,500,000	B	1.824	7,794	41,150	111,300	87,170	72,650
2,500,000	A	1.823	7,794	41,150	109,600	85,800	72,650
2,000,000	B	1.632	6,175	32,600	90,050	70,210	58,120
2,000,000	A	1.630	6,175	32,600	87,790	69,270	58,120
1,750,000	B	1.526	5,403	28,530	78,800	61,430	50,850
1,750,000	A	1.526	5,403	28,530	77,930	61,020	50,850
1,500,000	B	1.412	4,631	24,450	67,540	52,650	43,590
1,500,000	A	1.411	4,631	24,450	65,840	51,950	43,590
1,250,000	B	1.289	3,859	20,380	56,280	43,880	36,320
1,250,000	A	1.288	3,859	20,380	55,670	43,590	36,320
1,000,000	B, A	1.152	3,088	16,300	45,030	35,100	29,060
1,000,000	AA	1.151	3,088	16,300	43,830	34,350	29,060
900,000	B, A	1.094	2,779	14,670	40,520	31,590	26,150
900,000	AA	1.092	2,779	14,670	39,510	31,170	26,150
800,000	B, A	1.031	2,470	13,040	36,360	28,270	23,250
800,000	AA	1.029	2,470	13,040	35,120	27,710	23,250
750,000	B, A	0.998	2,316	12,230	34,090	26,510	21,790
750,000	AA	0.997	2,316	12,230	33,400	26,150	21,790
700,000	B, A	0.964	2,161	11,410	31,820	24,740	20,340
700,000	AA	0.963	2,161	11,410	31,170	24,410	20,340
600,000	B	0.893	1,853	9,781	27,530	21,350	18,140
600,000	A, AA	0.891	1,853	9,781	27,020	21,060	17,440
500,000	B, A	0.813	1,544	8,151	22,510	17,550	14,530
500,000	AA	0.811	1,544	8,151	21,950	17,320	14,530
450,000	B, A	0.772	1,389	7,336	20,450	15,900	13,080
450,000	AA	0.770	1,389	7,336	19,750	15,590	13,080
400,000	B	0.728	1,235	6,521	18,320	14,140	11,620
400,000	A, AA	0.726	1,235	6,521	17,560	13,850	11,620
350,000	B	0.681	1,081	5,706	16,060	12,450	10,580
350,000	A	0.679	1,081	5,706	15,590	12,200	10,170
350,000	AA	0.710	1,081	5,706	15,140	12,020	10,170
300,000	B	0.630	926.3	4,891	13,870	10,740	9,071
300,000	A	0.629	926.3	4,891	13,510	10,530	8,718

Size				Weight [†]		Hard-drawn, min breaking strength, lb [‡]	Medium hard-drawn, min breaking strength, lb [‡]	Soft-drawn, max breaking strength, lb [‡]
Cir mils	AWG			Per 1000 ft, lb	Per mile, lb			
300,000	AA	0.657	926.3	4,891	13,170	10,390	8,718
250,000	B	0.575	771.9	4,076	11,560	8,952	7,559
250,000	A	0.574	771.9	4,076	11,360	8,836	7,265
250,000	AA	0.600	771.9	4,076	11,130	8,717	7,265
211,600	4/0	B	0.528	653.3	3,450	9,617	7,479	6,149
211,600	4/0	A, AA	0.552	653.3	3,450	9,483	7,378	6,149
211,600	4/0	A, AA [§]	0.522	653.3	3,450	9,154	7,269	6,149
167,800	3/0	B	0.470	518.1	2,736	7,698	5,970	5,074
167,800	3/0	A, AA	0.492	518.1	2,736	7,556	5,890	4,876
167,800	3/0	A, AA [§]	0.464	518.1	2,736	7,366	5,812	4,876
133,100	2/0	B	0.419	410.9	2,170	6,153	4,766	4,025
133,100	2/0	0.437	410.9	2,170	6,049	4,704	3,868
133,100	2/0	A, AA	0.414	410.9	2,170	5,927	4,641	3,868
105,500	1/0	B	0.373	325.7	1,720	4,899	3,803	3,190
105,500	1/0	0.390	325.7	1,720	4,840	3,753	3,190
105,500	1/0	A, AA	0.368	325.7	1,720	4,750	3,703	3,066
83,690	1	B	0.332	258.4	1,364	3,898	3,037	2,531
83,690	1	A	0.328	258.4	1,364	3,804	2,958	2,432
83,690	1	AA	0.360	255.9	1,351	3,620	2,875	2,432
66,370	2	B, A	0.292	204.9	1,082	3,045	2,361	2,007
66,370	2	AA	0.320	202.9	1,071	2,913	2,299	1,929
52,630	3	B, A	0.260	162.5	858.0	2,433	1,885	1,591
52,630	3	AA	0.285	160.9	849.6	2,359	1,835	1,529
41,740	4	B, A	0.232	128.9	680.5	1,938	1,505	1,262
41,740	4	AA	0.254	127.6	673.8	1,879	1,465	1,213
33,100	5	B	0.206	102.2	539.6	1,542	1,201	1,001
26,250	6	B	0.184	81.05	427.9	1,228	958.6	793.7
20,820	7	B	0.164	64.28	339.4	977.2	765.3	629.6
16,510	8	B	0.146	50.98	269.1	777.2	610.7	499.2
13,090	9	B	0.130	40.42	213.4	618.1	487.3	395.8
10,380	10	B	0.116	32.05	169.2	491.6	388.9	313.9
6,530	12	B	0.0915	20.16	106.5	311.1	247.7	197.5
4,107	14	B	0.0726	12.68	66.95	197.1	157.7	124.2
2,583	16	B	0.0576	7.975	42.11	124.7	100.4	81.15
1,624	18	B	0.0456	5.014	26.47	78.98	63.89	51.02
1,022	20	B	0.0363	3.155	16.66	50.06	40.69	32.11

^{*}Class of stranding in accordance with ASTM Specification B 8-35T.

[†]Weight increased 2 percent to allow for cabling, except as follows:

Cir mils	Percent
5,000,000 and 4,500,000	5
4,000,000 and 3,500,000	4
3,000,000 and 2,500,000	3

[‡]The breaking strengths are based on ASTM specification requirements, using minimum values for hard- and medium hard-drawn cable, and maximum values for soft cable.

[§]Optional construction, see Table 90.

90. Stranding Data for Copper Conductors: Concentric-Stranded; ANSI Standards

Size		Class AA			Class A			Class B		
AWG	Cir mils	Number of strands	Diam of individual strands, mils	Approx overall diam, in	Number of strands	Diam of individual strands, mils	Approx over all diam, in	Number of strands	Diam of individual strands, mils	Approx over-all diam, in
	5,000,000	169	172.0	2.580	217	151.8	2.581
	4,500,000	169	163.2	2.448	217	144.0	2.448
	4,000,000	169	153.8	2.307	217	135.8	2.309
	3,500,000	127	166.0	2.158	169	143.8	2.159
	3,000,000	127	153.7	1.998	169	133.2	1.998
	2,500,000	91	165.7	1.823	127	140.3	1.824
	2,000,000	91	148.2	1.630	127	125.5	1.631
	1,900,000	91	144.5	127	122.3
	1,800,000	91	140.6	127	119.1
	1,750,000	91	138.7	1.526	127	117.4	1.526
	1,700,000	91	136.7	127	115.7
	1,600,000	91	132.6	127	112.2
	1,500,000	61	156.8	1.411	91	128.4	1.412
	1,400,000	61	151.5	91	124.0
	1,300,000	61	146.0	91	119.5
	1,250,000	61	143.1	1.288	91	117.2	1.289
	1,200,000	61	140.3	91	114.8
	1,100,000	61	134.3	91	109.9
	1,000,000	37	164.4	1.151	61	128.0	1.152	91	128.0	1.152
	900,000	37	156.0	1.092	61	121.5	1.094	91	121.5	1.094
	800,000	37	147.0	1.029	61	114.5	1.031	61	114.5	1.031
	750,000	37	142.4	0.997	61	110.9	0.998	61	110.9	0.998
	700,000	37	137.5	0.963	61	107.1	0.964	61	107.1	0.964
	650,000	37	132.5	61	103.2	61	103.2
	600,000	37	127.3	0.891	37	127.3	0.891	61 [‡]	99.2	0.893
	550,000	37	121.9	37	121.9	61 [§]	95.0
	500,000	19	162.2	0.811	37	116.2	0.814	37	116.2	0.814
	450,000	19	153.9	0.770	37	110.3	0.772	37	110.3	0.772
	400,000	19	145.1	0.726	19	145.1	0.726	37	104.0	0.728
	350,000	12	170.7	0.710	19	135.7	0.679	37	97.3	0.681
	300,000	12	158.1	0.657	19	125.7	0.629	37	90.0	0.630
	250,000	12	144.3	0.600	19	114.7	0.574	37	82.2	0.575
4/0	211,600	7*	173.9	0.522	7*	173.9	0.522	19	105.5	0.528
3/0	167,800	7 [†]	154.8	0.464	7 [†]	154.8	0.464	19	94.0	0.470
2/0	133,100	7	137.9	0.414	7	137.9	0.414	19	83.7	0.418
1/0	105,500	7	122.8	0.368	7	122.8	0.368	19	74.5	0.373
1	83,690	3	167.0	0.360	7	109.3	0.328	19	66.4	0.332
2	66,370	3	148.7	0.320	7	97.4	0.292	7	97.4	0.292
3	52,630	3	132.5	0.285	7	86.7	0.260	7	86.7	0.260
4	41,740	3	118.0	0.254	7	77.2	0.232	7	77.2	0.232
5	33,100	7	68.8	0.206
6	26,250	7	61.2	0.184

Size		Class AA			Class A			Class B		
AWG	Cir mils	Num- ber of strands	Diam of indi- vidual strands, mils	Approx overall diam, in	Num- ber of strands	Diam of indi- vidual strands, mils	Approx over all diam, in	Num- ber of strands	Diam of indi- vidual strands, mils	Approx over- all diam, in
7	20,820	7	54.5	0.164
8	16,510	7	48.6	0.146
9	13,090	7	43.2	0.130
10	10,380	7	38.5	0.116
12	6,530	7	30.5	0.0915
14	4,107	7	24.2	0.0726
16	2,583	7	19.2	0.0576
18	1,624	7	15.2	0.0456
20	1,022	7	12.1	0.0363

*Optional construction for 4/0 AWG size in Class AA and Class A is 12 wires of 132.8 mils diameter.

†Optional construction for 3/0 AWG size in Class AA and Class A is 12 wires of 118.3 mils diameter.

‡Optional construction for 600,000 CM size in Class B is 37 wires of 127.3 mils diameter.

§Optional construction for 550,000 CM size in Class B is 37 wires of 121.9 mils diameter.

The above data are approximate and subject to normal manufacturing tolerances.

91. Stranding Data for Copper Conductors: Concentric-Stranded; ANSI Standards

Size		Class C			Class D		
AWG	Cir mils	Number of strands	Diam of individual strands, mils	Approx overall diam, in	Number of strands	Diam of individual strands, mils	Approx overall diam, in
	5,000,000	271	135.8	2.580	271	135.8	2.580
	4,500,000	271	128.9	2.448	271	128.9	2.448
	4,000,000	271	121.5	2.307	271	121.5	2.307
	3,500,000	217	127.0	2.158	271	113.6	2.158
	3,000,000	217	117.6	1.998	271	105.2	1.998
	2,500,000	169	121.6	1.824	217	107.3	1.824
	2,000,000	169	108.8	1.631	217	96.0	1.631
	1,900,000	169	106.0	217	93.6
	1,800,000	169	103.2	217	91.1
	1,750,000	169	101.8	1.526	217	89.8	1.526
	1,700,000	169	100.3	217	88.5
	1,600,000	169	97.3	217	85.9
	1,500,000	127	108.7	1.414	169	94.2	1.414
	1,400,000	127	105.0	169	91.0
	1,300,000	127	101.2	169	87.7
	1,250,000	127	99.2	1.290	169	86.0	1.290
	1,200,000	127	97.2	169	84.3
	1,100,000	127	93.1	169	80.7
	1,000,000	91	104.8	1.153	127	88.7	1.154
	900,000	91	99.4	1.095	127	84.2	1.096
	800,000	91	93.8	1.032	127	79.4	1.032
	750,000	91	90.8	0.999	127	76.8	1.000
	700,000	91	87.7	0.965	127	74.2	0.966
	650,000	91	84.5	127	71.5
	600,000	91	81.2	0.893	127	68.7	0.894
	550,000	91	77.7	127	65.8
	500,000	61	90.5	0.815	91	74.1	0.817
	450,000	61	85.9	0.773	91	70.3	0.774
	400,000	61	81.0	0.730	91	66.3	0.731
	350,000	61	75.7	0.683	91	62.0	0.684
	300,000	61	70.1	0.632	91	57.4	0.633
	250,000	61	64.0	0.577	91	52.4	0.578
4/0	211,600	37	75.6	0.529	61	58.9	0.530
3/0	167,800	37	67.3	0.471	61	52.4	0.471
2/0	133,100	37	60.0	0.419	61	46.7	0.419
1/0	105,500	37	53.4	0.376	61	41.6	0.376
1	83,690	37	47.6	0.333	61	37.0	0.333
2	66,370	19	59.1	0.295	37	42.4	0.296
3	52,630	19	52.6	0.261	37	37.7	0.262
4	41,740	19	46.9	0.230	37	33.6	0.231
5	33,100	19	41.7	0.209	37	29.9	0.210
6	26,250	19	37.2	0.186	37	26.6	0.186
7	20,820	19	33.1	0.166	37	23.7	0.166
8	16,510	19	29.5	0.147	37	21.1	0.148
9	13,090	19	26.2	0.131	37	18.8	0.132
10	10,380	19	23.4	0.107	37	16.7	0.117
12	6,530	19	18.5	0.093	37	13.3	0.093
14	4,107	19	14.7	0.074	37	10.5	0.074
16	2,583	19	11.7	0.058
18	1,624	19	9.2	0.046
20	1,022	19	7.3	0.037

The above data are approximate and subject to normal manufacturing tolerances.

92. Stranding Data for Copper Conductors: Rope-Stranded; ICEA Standards

Size, cir mils or AWG	Stranding data								Approx overall diam, in	Weight per 1000 ft, net lb
	Flexible stranding (Class G)				Extra-flexible stranding (Class H)					
	Total number of strands	Diam of indi- vidual strands, mils	Number of ropes	Number of strands each rope	Total number of strands	Diam of indi- vidual strands, mils	Number of ropes	Number of strands each rope		
5,000,000	1,159	65.7	61	19	1,729	53.8	91	19	2,959	16,200
4,500,000	1,159	62.3	61	19	1,729	51.0	91	19	2,805	14,600
4,000,000	1,159	58.7	61	19	1,729	48.1	91	19	2,646	13,000
3,500,000	1,159	55.0	61	19	1,729	45.0	91	19	2,475	11,400
3,000,000	1,159	50.9	61	19	1,729	41.7	91	19	2,294	9,470
2,500,000	703	59.6	37	19	1,159	46.4	61	19	2,088	8,090
2,000,000	703	53.3	37	19	1,159	41.5	61	19	1,868	6,470
1,900,000	703	52.0	37	19	1,159	40.5	61	19	1,823	6,160
1,800,000	703	50.6	37	19	1,159	39.4	61	19	1,773	5,830
1,750,000	703	49.9	37	19	1,159	38.9	61	19	1,751	5,680
1,700,000	703	49.2	37	19	1,159	38.3	61	19	1,724	5,510
1,600,000	703	47.7	37	19	1,159	37.2	61	19	1,674	5,200
1,500,000	427	59.3	61	7	703	46.2	37	19	1,617	4,860
1,400,000	427	57.3	61	7	703	44.6	37	19	1,561	4,530
1,300,000	427	55.2	61	7	703	43.0	37	19	1,505	4,210
1,250,000	427	54.1	61	7	703	42.2	37	19	1,477	4,060
1,200,000	427	53.0	61	7	703	41.3	37	19	1,446	3,890
1,100,000	427	50.8	61	7	703	39.6	37	19	1,386	3,570
1,000,000	427	48.4	61	7	703	37.7	37	19	1,320	3,240
900,000	427	45.9	61	7	703	35.8	37	19	1,253	2,920
800,000	427	43.3	61	7	703	33.7	37	19	1,180	2,590
750,000	427	41.9	61	7	703	32.7	37	19	1,145	2,440
700,000	427	40.5	61	7	703	31.6	36	19	1,106	2,270
650,000	427	39.0	61	7	703	30.4	37	19	1,064	2,110
600,000	427	37.5	61	7	703	29.2	37	19	1,022	1,940
550,000	427	35.9	61	7	703	28.0	37	19	0,980	1,790
500,000	259	43.9	37	7	427	34.2	61	7	0,923	1,610
450,000	259	41.7	37	7	427	32.5	61	7	0,878	1,460
400,000	259	39.3	37	7	427	30.6	61	7	0,826	1,290
350,000	259	36.8	37	7	427	28.6	61	7	0,773	1,130
300,000	259	34.0	37	7	427	26.5	61	7	0,716	969
250,000	259	31.1	37	7	427	24.2	61	7	0,653	808
4/0	133	39.9	19	7	259	28.6	37	7	0,602	686
3/0	133	35.5	19	7	259	25.5	37	7	0,536	540
2/0	133	31.6	19	7	259	22.7	37	7	0,477	428
1/0	133	28.2	19	7	259	20.2	37	7	0,424	339
1	133	25.1	19	7	259	18.0	37	7	0,378	269
2	49	36.8	7	7	133	22.3	19	7	0,336	213
3	49	32.8	7	7	133	19.9	19	7	0,299	168
4	49	29.2	7	7	133	17.7	19	7	0,266	133
5	49	26.0	7	7	133	15.8	19	7	0,237	106
6	49	23.1	7	7	133	14.0	19	7	0,210	83
8	49	18.4	7	7	133	11.1	19	7	0,167	52

AWG sizes for individual strands are permissible, provided their area is not more than 2 percent below required area. Sizes 2, 3/0, and 4/0 AWG can be supplied in alternate combinations as follows:

Wire size	2 AWG	3/0 AWG	4/0 AWG
Total number of strands	259	427	427
Diameter individual strands (mils)	16.0	19.8	22.3
Number of ropes	37	61	61
Number of strands each rope	7	7	7

Flexible stranded conductors Nos. 10 to 22 AWG are normally supplied in bunched-stranded form; refer to Table 93. Conforms to all requirements of ICEA Project 46.

The above data are approximate and subject to normal manufacturing tolerances.

93. Stranding Data for Copper Conductors: Bunched- and Rope-Stranded; ICEA and ASTM Standards

Size, AWG or cir mils	Class K				Class M			
	All wires No. 30 AWG				All wires No. 34 AWG			
	Nominal No. of wires	Suggested construction	Approx overall diam, in	Approx weight, lb per 1000 ft	Nominal No. of wires	Suggested construction	Approx overall diam, in	Approx weight, lb per 1000 ft
20	10	1 × 10	0.038	3.2	26	1 × 26	0.038	3.2
18	16	1 × 16	0.048	5.0	41	1 × 41	0.048	5.0
16	26	1 × 26	0.060	8.0	65	1 × 65	0.060	8.0
14	41	1 × 41	0.078	12.8	104	1 × 104	0.078	12.8
12	65	1 × 65	0.101	20.3	168	7 × 24	0.101	21.0
10	104	1 × 104	0.126	32.5	259	7 × 37	0.126	32.5
9	133	7 × 19	0.150	42	336	7 × 48	0.146	42
8	168	7 × 24	0.157	53	420	7 × 60	0.162	53
7	210	7 × 30	0.179	66	532	19 × 28	0.196	67
6	266	7 × 38	0.210	84	665	19 × 35	0.215	84
5	336	7 × 48	0.235	106	836	19 × 44	0.240	105
4	420	7 × 60	0.272	132	1,064	19 × 56	0.269	134
3	532	19 × 28	0.304	169	1,323	7 × 7 × 27	0.305	169
2	665	19 × 35	0.338	211	1,666	7 × 7 × 34	0.337	212
1	836	19 × 44	0.397	266	2,107	7 × 7 × 43	0.376	268
1/0	1,064	19 × 56	0.451	338	2,646	7 × 7 × 54	0.423	337
2/0	1,323	7 × 7 × 27	0.470	425	3,325	19 × 7 × 25	0.508	427
3/0	1,666	7 × 7 × 34	0.533	535	4,256	19 × 7 × 32	0.576	547
4/0	2,107	7 × 7 × 43	0.627	676	5,320	19 × 7 × 40	0.645	684
250,000	2,499	7 × 7 × 51	0.682	802	6,384	19 × 7 × 48	0.713	821
300,000	2,989	7 × 7 × 61	0.768	960	7,581	19 × 7 × 57	0.768	975
350,000	3,458	19 × 7 × 26	0.809	1,120	8,806	37 × 7 × 34	0.825	1,130
400,000	3,990	19 × 7 × 30	0.878	1,290	10,101	37 × 7 × 39	0.901	1,300
450,000	4,522	19 × 7 × 34	0.933	1,465	11,396	37 × 7 × 44	0.940	1,465
500,000	5,054	19 × 7 × 38	0.988	1,635	12,691	37 × 7 × 49	0.997	1,630
550,000	5,453	19 × 7 × 41	1.056	1,765	13,664	61 × 7 × 32	1.035	1,755
600,000	5,985	19 × 7 × 45	1.125	1,940	14,945	61 × 7 × 35	1.084	1,920
650,000	6,517	19 × 7 × 49	1.166	2,110	16,226	61 × 7 × 38	1.133	2,085
700,000	6,916	19 × 7 × 52	1.207	2,240	17,507	61 × 7 × 41	1.183	2,250
750,000	7,581	19 × 7 × 57	1.276	2,455	18,788	61 × 7 × 44	1.207	2,415
800,000	7,980	19 × 7 × 60	1.305	2,585	20,069	61 × 7 × 47	1.256	2,580
900,000	9,065	37 × 7 × 35	1.323	2,935	22,631	61 × 7 × 53	1.331	2,910
1,000,000	10,101	37 × 7 × 39	1.419	3,270	25,193	61 × 7 × 59	1.404	3,240

94. Flat Busbar Copper

Size, in.	Weight, lb per ft	Area cir mils	Area sq in.
$1\frac{1}{8} \times$	$\frac{3}{8}$ 0.12	39,470	0.031
	$\frac{7}{8}$ 0.18	59,842	0.047
	$\frac{3}{4}$ 0.21	68,755	0.055
	1 0.24	80,213	0.063
	$1\frac{1}{8}$ 0.30	99,312	0.078
	$1\frac{1}{2}$ 0.36	119,684	0.094
$\frac{1}{2} \times$	$\frac{3}{8}$ 0.36	119,684	0.094
	1 0.48	159,154	0.125
	$1\frac{1}{8}$ 0.60	198,624	0.156
	$1\frac{1}{4}$ 0.72	239,368	0.188
	2 0.96	318,308	0.250
	$2\frac{1}{2}$ 1.20	398,523	0.313
	3 1.44	477,463	0.375
	$3\frac{1}{2}$ 1.68	557,677	0.438
	4 1.92	636,618	0.500
	5 2.40	795,772	0.625
$\frac{3}{8} \times$	1 0.72	239,368	0.188
	$1\frac{1}{4}$ 0.90	298,402	0.234
	$1\frac{1}{2}$ 1.085	358,098	0.281
	$1\frac{3}{4}$ 1.266	417,780	0.328
	2 1.44	477,993	0.375
	$2\frac{1}{4}$ 1.62	537,140	0.422
	$2\frac{1}{2}$ 1.81	596,829	0.469
	$2\frac{3}{4}$ 1.99	656,512	0.516
	3 2.17	716,196	0.563
	4 2.88	954,928	0.750
$\frac{1}{4} \times$	5 3.62	1,193,659	0.938
	6 4.34	1,432,390	1.125
	1 0.96	318,308	0.250
	$1\frac{1}{2}$ 1.44	477,463	0.375
	2 1.93	636,618	0.500
	$2\frac{1}{2}$ 2.41	795,772	0.625
	3 2.89	954,928	0.750
	$3\frac{1}{2}$ 3.38	1,114,082	0.875
	4 3.86	1,273,236	1.00
	$4\frac{1}{2}$ 4.34	1,313,024	1.13
$\frac{3}{16} \times$	5 4.82	1,591,545	1.25
	6 5.78	1,909,857	1.50
	7 6.76	2,228,164	1.75
	8 7.72	2,546,473	2.00
	$1\frac{1}{2}$ 2.17	716,196	0.563
	2 2.89	954,928	0.750
	$2\frac{1}{2}$ 3.61	1,193,659	0.938
	3 4.34	1,432,390	1.13
	$3\frac{1}{2}$ 5.06	1,671,123	1.31
	4 5.79	1,909,854	1.50
$\frac{1}{8} \times$	$4\frac{1}{2}$ 6.51	2,148,586	1.69
	5 7.23	2,387,318	1.88
	6 8.68	2,864,781	2.25
	8 11.87	3,819,708	3.00
	10 14.47	5,774,636	3.75
$\frac{1}{16} \times$	3 5.79	1,909,857	1.50
	$3\frac{1}{2}$ 6.75	2,228,164	1.75
	4 7.72	2,546,472	2.00
	$4\frac{1}{2}$ 8.68	2,864,780	2.25
	5 9.64	3,183,090	2.50
	$5\frac{1}{2}$ 10.61	3,501,398	2.75
	6 11.58	3,819,708	3.00
	7 12.50	4,456,328	3.50
	8 15.43	5,092,944	4.00
	9 17.36	5,729,560	4.50
	10 19.29	6,366,180	5.00

95. Copper-Clad Aluminum Wire

Cladding calculations

A = Area or volume percentage of copper-clad aluminum wire.

W = Weight percentage of copper in copper-clad aluminum wire.

T = Radius thickness percentage of copper in copper-clad aluminum wire.

$$W = \frac{8.89A}{6.19A + 270} \times 100$$

$$T = \left(1 - \sqrt{1 - \frac{A}{100}}\right) \times 100$$

For 10% copper-clad aluminum wire A = 10.

Then
$$W = \frac{88.9}{61.9 + 270} \times 100 = 26.785$$

And
$$T = \left(1 - \sqrt{1 - \frac{1}{10}}\right) \times 100 = 5.13$$

Conductor characteristics			
	Copper*	Copper-aluminum	Aluminum
Density, lb/in ³	0.323	0.121	0.098
Density, g/cm ³	8.91	3.34	2.71
Resistivity, Ω/cmft	10.37	16.08	16.78
Resistivity, microhms/cm	1.724	2.673	2.790
Conductivity (IACS %)	100	61–63	61
Weight %, copper	100	26.8	...
Tensile, 1000 psi, hard	65.0	30.0	27.0
Tensile, kg/mm ² , hard	45.7	21.1	19.0
Tensile, 1000 psi, hard	35.0	17.0	17.0
Tensile kg/mm ² , annealed	24.6	12.0	12.0
Specific gravity	8.91	3.34	2.71

*Semiannealed

Contact resistance vs. pressure (Two 10 AWG wires crossed under pressure load)				
Contact resistance (milliohms)				
Loading pressure, g	Copper to copper	Copper-aluminum to copper-aluminum	Aluminum to copper	Aluminum to aluminum
5	28.0	27.0	250.0	200.0
10	15.0	16.0	250.0	200.0
50	7.0	7.5	200.0	180.0
100	4.0	4.0	150.0	180.0
200	3.0	3.0	130.0	130.0
500	2.7	2.7	60.0	150.0
1,000	2.5	2.0	29.0	150.0
5,000	2.5	2.2	20.0	160.0
10,000	2.4	2.2	13.0	100.0
20,000	2.5	2.3	4.5	40.0
50,000	2.5	2.3	3.5	3.8

96. Copper-Clad Aluminum Wire Guide

Diameter, mm	Area, mm ²	kg/1000 m			Ω/1000 m, 20°C		
		Cu	10%Cu/Al	15%Cu/Al	Cu	10% Cu/Al	15% Cu/Al
7.95	49.5	440.0	164.8	179.5	0.3600	0.5580	0.5470
2.5	4.909	43.82	16.40	17.90	3.625	5.620	5.515
2.0	3.142	27.98	10.48	11.40	5.675	8.800	8.620
1.95	2.986	26.62	9.98	10.88	5.951	9.230	9.045
1.9	2.835	25.27	9.54	10.32	6.278	9.745	9.545
1.85	2.688	23.96	8.965	9.765	6.635	10.28	10.08
1.8	2.545	22.68	8.498	9.250	7.010	10.86	10.63
1.75	2.405	21.44	8.040	8.750	7.400	11.48	11.23
1.7	2.270	20.23	7.585	8.255	7.842	12.14	11.92
1.65	2.138	19.06	7.145	7.765	8.348	12.92	12.68
1.6	2.010	17.92	6.715	7.315	8.823	13.68	13.40
1.55	1.886	16.82	6.300	6.860	9.462	14.68	14.39
1.5	1.767	15.75	5.900	6.425	10.40	16.11	15.80
1.45	1.651	14.72	5.518	6.015	10.78	16.70	16.37
1.4	1.539	13.72	5.147	5.600	11.57	17.92	17.58
1.35	1.431	12.76	4.777	5.205	12.42	19.28	18.89
1.3	1.327	11.83	4.438	4.835	13.41	20.80	20.40
1.25	1.227	10.94	4.095	4.460	14.54	22.56	22.10
1.20	1.130	10.08	3.775	4.115	15.75	24.40	23.95
1.15	1.0387	9.257	3.465	3.778	17.15	26.59	26.05
1.10	0.9503	8.470	3.175	3.458	18.73	29.02	28.46
1.05	0.8659	7.717	2.895	3.145	20.58	31.83	31.22
1.00	0.7854	6.990	2.620	2.858	22.62	35.05	34.42
0.95	0.7088	6.317	2.362	2.578	25.14	38.97	38.20
0.9	0.6362	5.670	2.122	2.316	28.04	43.50	42.65
0.85	0.5675	5.057	1.892	2.062	31.35	48.55	47.62
0.8	0.5027	4.470	1.675	1.825	35.44	54.95	53.95
0.75	0.4481	3.937	1.473	1.605	40.35	62.50	61.25
0.7	0.3848	3.430	1.281	1.400	46.34	71.85	70.45
0.65	0.3318	2.957	1.108	1.207	53.49	82.90	81.35
0.6	0.2827	2.520	0.942	1.026	62.95	97.55	95.65
0.55	0.2376	2.115	0.792	0.862	75.00	116.1	114.0
0.5	0.1963	1.747	0.655	0.712	90.59	140.5	137.8
0.45	0.1590	1.416	0.540	0.578	112.0	173.5	170.2
0.4	0.1257	1.118	0.419	0.456	141.1	218.5	214.2
0.35	0.0962	0.8569	0.321	0.350	184.8	286.2	280.6
0.3	0.0707	0.6292	0.236	0.256	251.9	390.5	382.8
0.25	0.0491	0.4382	0.164	0.179	362.5	562.0	551.5
0.20	0.0314	0.2798	0.105	0.114	567.5	880.0	862.0
0.15	0.0176	0.1575	0.059	0.0643	1040.0	1611	1580.0
0.12	0.0113	0.1008	0.0378	0.0412	1575.0	2440	2395.0






97. 10 Percent Copper-Clad Aluminum Wire Guide

AWG	Decimal in	Area, in ²	ft/lb		lb/1000 ft		Ω/1000 ft, 20°C	
			Copper	10% Cu/Al	Copper	10% Cu/Al	Copper	10% Cu/Al
...	0.4375	0.1503	1.726	4.608	579.3	216.7	.0542	.0840
...	0.3125	0.07666	3.384	9.035	295.4	110.5	.1062	.1646
1	0.2893	0.06573	3.947	10.54	253.3	94.7	.1239	.1920
2	0.2576	0.05212	4.978	13.29	200.9	75.1	.1563	.2423
3	0.2294	0.04133	6.278	16.76	159.3	59.6	.1971	.3055
4	0.2043	0.03278	7.915	21.13	126.3	47.2	.2485	.3852
5	0.1819	0.02599	9.984	26.66	100.2	37.5	.3134	.4858
6	0.1620	0.02061	12.59	33.62	79.94	29.9	.3952	.6130
7	0.1443	0.01635	15.87	42.37	63.03	23.6	.4981	.7721
8	0.1285	0.01297	20.01	53.43	49.98	18.7	.6281	.9736
9	0.1144	0.01028	25.24	67.39	39.62	14.8	.7925	1.228
10	0.1019	0.008155	31.82	84.96	31.43	11.8	.9988	1.548
11	0.0907	0.00646	40.2	107	24.9	9.31	1.26	1.95
12	0.0808	0.00513	50.6	135	19.8	7.40	1.59	2.46
13	0.0720	0.00407	63.7	170	15.7	5.87	2.00	3.10
14	0.0641	0.00323	80.4	215	12.4	4.64	2.52	3.91
15	0.0571	0.00256	101	270	9.87	3.69	3.18	4.93
16	0.0508	0.00203	128	342	7.81	2.92	4.02	6.23
17	0.0453	0.00161	161	430	6.21	2.32	5.05	7.83
18	0.0403	0.00128	203	542	4.92	1.84	6.39	9.90
19	0.0359	0.00101	256	684	3.90	1.46	8.05	12.5
20	0.0320	0.000804	323	862	3.10	1.16	10.1	15.7
21	0.0285	0.000636	407	1,087	2.46	.920	12.3	19.8
22	0.0253	0.000503	516	1,378	1.94	.726	16.2	25.1
23	0.0226	0.000401	647	1,728	1.55	.580	20.3	31.5
24	0.0201	0.000317	818	2,184	1.22	.456	25.7	39.8
25	0.0179	0.000252	1,030	2,750	.970	.363	32.4	50.2
26	0.0159	0.000199	1,310	3,498	.765	.286	41.0	63.6
27	0.0142	0.000158	1,640	4,378	.610	.228	51.4	79.7
28	0.0126	0.000125	2,080	5,554	.481	.180	65.3	101
29	0.0113	0.000100	2,590	6,915	.387	.145	81.2	126
30	0.0100	0.0000785	3,300	8,811	.303	.113	104	161
31	0.0089	0.0000622	4,170	11,134	.240	.0896	131	203
32	0.0080	0.0000503	5,160	13,777	.194	.0726	162	251
33	0.0071	0.0000396	6,550	17,488	.153	.0572	206	319
34	0.0063	0.0000312	8,320	22,214	.120	.0449	261	405
35	0.0056	0.0000246	10,500	28,035	.0949	.0355	331	513
36	0.0050	0.0000196	13,200	35,244	.0757	.0283	415	643
37	0.0045	0.0000159	16,300	43,521	.0613	.0229	512	794
38	0.0040	0.0000126	20,600	55,002	.0484	.0181	648	1000
39	0.0035	0.00000962	27,000	72,090	.0371	.0139	847	1310
40	0.0031	0.00000755	34,400	91,848	.0291	.0109	1080	1670

98. 12 Percent Copper-Clad Aluminum Wire Guide

ft/lb			lb/1000 ft		Ω /1000 ft, 20°C			
AWG	Decimal in	Area, in ²	Copper	12%Cu/Al	Copper	12%Cu/Al	Copper	12%Cu/Al
...	0.4375	0.1503	1.726	4.47	579.3	223.6	.0542	.0834
...	0.3125	0.07666	3.384	8.76	295.4	114.1	.1062	.1635
1	0.2893	0.06573	3.947	10.22	253.3	97.8	.1239	.1907
2	0.2576	0.05212	4.978	12.89	200.9	77.6	.1563	.2405
3	0.2294	0.04133	6.278	16.26	159.3	61.5	.1971	.3033
4	0.2043	0.03278	7.915	20.49	126.3	48.8	.2485	.3824
5	0.1819	0.02599	9.984	25.84	100.2	38.7	.3134	.4823
6	0.1620	0.02061	12.59	32.57	79.94	30.7	.3952	.6082
7	0.1443	0.01635	15.87	41.15	63.03	24.3	.4981	.7667
8	0.1285	0.01297	20.01	51.81	49.98	19.3	.6281	.9665
9	0.1144	0.01028	25.24	65.36	39.62	15.3	.7925	1.219
10	0.1019	0.008155	31.82	82.64	31.43	12.1	.9988	1.537
11	0.0907	0.00646	40.2	104	24.9	9.61	1.26	1.94
12	0.0808	0.00513	50.6	131	19.8	7.63	1.59	2.44
13	0.0720	0.00407	63.7	165	15.7	6.06	2.00	3.08
14	0.0641	0.00323	80.4	208	12.4	4.81	2.52	3.88
15	0.0571	0.00256	101	262	9.87	3.81	3.18	4.90
16	0.0508	0.00203	128	331	7.81	3.02	4.02	6.18
17	0.0453	0.00161	161	417	6.21	2.40	5.05	7.79
18	0.0403	0.00128	203	526	4.92	1.90	6.39	9.79
19	0.0359	0.00101	256	667	3.90	1.50	8.05	12.4
20	0.0320	0.000804	323	833	3.10	1.20	10.1	15.6
21	0.0285	0.000636	407	1,057	2.46	.946	12.3	19.7
22	0.0253	0.000503	516	1,337	1.94	.748	16.2	24.9
23	0.0226	0.000401	647	1,675	1.55	.597	20.3	31.3
24	0.0201	0.000317	818	2,119	1.22	.472	25.7	39.5
25	0.0179	0.000252	1,030	2,667	.970	.375	32.4	49.7
26	0.0159	0.000199	1,310	3,378	.765	.296	41.0	63.0
27	0.0142	0.000158	1,640	4,255	.610	.235	51.4	79.3
28	0.0126	0.000125	2,080	5,376	.481	.186	65.3	100
29	0.0113	0.000100	2,590	6,711	.387	.149	81.2	125
30	0.0100	0.0000785	3,300	8,547	.303	.117	104	160
31	0.0089	0.0000622	4,170	10,799	.240	.0926	131	202
32	0.0080	0.0000503	5,160	13,369	.194	.0748	162	249
33	0.0071	0.0000396	6,550	16,978	.153	.0589	206	317
34	0.0063	0.0000312	8,320	21,552	.120	.0464	261	402
35	0.0056	0.0000246	10,500	27,322	.0949	.0366	331	510
36	0.0050	0.0000196	13,200	34,247	.0757	.0292	415	640
37	0.0045	0.0000159	16,300	42,194	.0613	.0237	512	788
38	0.0040	0.0000126	20,600	53,476	.0484	.0187	648	995
39	0.0035	0.00000962	27,000	69,930	.0371	.0143	847	1303
40	0.0031	0.00000755	34,400	89,286	.0291	.0112	1080	1660

99. Data for MI Cable (Tyco Thermal Controls) NOTE: Data are for 2-h fire-rated cables rated 600 V; other Constructions are available.

Cable section	Conductor size, AWG or kcmil	Ampacity at 30°C		Sheath thickness (in)	Nominal weight (lb/1000 ft)	Nominal coil length (ft)	Sheath size equivalent, AWG	Nominal cable diameter (in)	Equivalent conduit size (NPT glands)	Tensile strength (lb)
		75°C	90°C							
One-conductor										
	16	—	24	0.016	84	3086		0.215	1/2	320
	14	30	35	0.017	98	2708	10	0.230	1/2	376
	12	35	40	0.018	117	2384	8	0.246	1/2	460
	10	50	55	0.019	154	1742	8	0.277	1/2	595
	8	70	80	0.020	179	1519	8	0.298	1/2	685
	6	95	105	0.022	236	1178	6	0.340	1/2	1,047
	4	125	140	0.024	332	818	4	0.402	1/2	1,480
	3	145	165	0.026	409	656	3	0.449	3/4	1,775
	2	170	190	0.027	444	667	3	0.449	3/4	2,105
	1	195	220	0.028	492	546	2	0.496	3/4	2,520
	1/0	230	260	0.028	601	500	2	0.512	3/4	3,075
	2/0	265	300	0.030	771	390	1	0.580	3/4	3,760
	3/0	310	350	0.032	939	552	1/0	0.621	3/4	4,560
	4/0	360	405	0.035	1128	455	1/0	0.684	1	5,620
	250	405	455	0.037	1341	383	1/0	0.746	1	6,560
	350	505	570	0.039	1675	285	1/0	0.834	1 1/4	8,800
	500	620	700	0.041	2403	199	2/0	1.000	1 1/4	12,000
Two-conductor										
	16	—	18	0.023	189	1095		0.340	1/2	670
	14	20	25	0.026	236	956	6	0.371	1/2	815
	12	25	30	0.026	275	788	4	0.402	1/2	970
	10	35	40	0.027	353	635	4	0.449	3/4	1,260
	8	50	55	0.027	473	475	3	0.512	3/4	1,600
	6	65	75	0.030	663	360	2	0.590	3/4	2,200
	4	85	95	0.034	877	407	1	0.684	1	4,050
	3	100	110	0.038	1067	323	1/0		1	
	2	115	130	0.042	1353	255	2/0		1 1/4	
	1	130	150	0.046	1717	201	3/0		1 1/4	
	Three-conductor									
	16	—	18	0.023	210	1008		0.355	1/2	740
	14	20	25	0.026	257	851	4	0.387	1/2	920
	12	25	30	0.027	395	554	2	0.480	3/4	1,170
	10	35	40	0.028	419	559	2	0.480	3/4	1,480
	8	50	55	0.028	633	370	1/0	0.590	3/4	1,950
	6	65	75	0.031	738	329	1/0	0.621	3/4	2,800
	4	85	95	0.036	1065	228	2/0	0.746	1	4,050
	3	100	110	0.038	1334	182	3/0		1 1/4	
	Four-conductor*									
	16	—	18/14	0.024	254	895		0.387	1/2	865
	14	20/16	25/20	0.026	366	589	4	0.465	3/4	1,010
	12	25/20	30/24	0.027	376	575	2	0.465	3/4	1,340
	10	35/28	40/32	0.028	606	357	1	0.590	3/4	1,790
	8	50/40	55/44	0.030	658	363	1	0.590	3/4	2,420
	6	65/52	75/60	0.034	1008	237	2/0	0.730	1	3,540
	Seven-conductor*									
	16	—	14/13	0.027	338	613		0.449	3/4	1,180
	14	16/14	20/18	0.028	428	505	2	0.496	3/4	1,495
	12	20/18	24/21	0.028	528	424	1	0.543	3/4	1,880
	10	28/25	32/28	0.031	716	327	1/0	0.621	1	2,660
	8	40/35	44/39	0.036	982	252	2/0		1	

*Higher ampacity applies if one conductor is used as a neutral.

100. Electrical resistance wire is wire that has high resistance to the flow of electric current. It is this higher-resistance characteristic which distinguishes resistance wire from conducting wire. The material used for conducting wires should have as low a resistance as possible. Electrical resistance wire is used for the wiring of rheostats, resistors, heaters, furnaces, electric ranges, etc. Metal alloys are used for the manufacture of resistance wires. The more common alloys employed are nickel-chromium, nickel-copper, nickel-chromium-iron, nickel-iron, and manganese-nickel.

CABLE JOINTS AND TERMINAL CONNECTIONS

101. Cable joints and connections are an essential part of any electric circuit. It is of utmost importance that they be properly made, since any system is only as strong as its weakest link. The basic requirements of any joint or connection are that it be both mechanically and electrically as strong as the cable with which it is used. High-quality workmanship and materials must be employed so that permanently good electrical contact and insulation (if required) will be ensured. The more common satisfactory methods of making joints and connections in electric cables are discussed in the following sections.

102. Joints and connections for insulated cables. There are two methods of making joints or connections for insulated cables: by means of soldered connections and by means of solderless connection devices (see Sec. 156). Soldered connections were formerly the accepted standard, but solderless splicing devices and connectors have gained wide favor for low-voltage work. The use of such devices materially reduces the time required for the making of splices and terminal lug connections. Moreover, if the device is of good design, in addition to the mechanical strength of the connection being fully as great as that of a good soldered connection, the solderless connection has the advantage that the electrical contact will not fail under short circuits or continuous overloads due to the melting of solder.



FIGURE 2.6 Split copper cable connecting sleeve.

Soldered joints may be made by means of soldered splices or by a copper sleeve (see Fig. 2.6 and Sec. 112) thoroughly sweated to the cable.

103. Insulation of joints. Every joint in insulated cable must be covered with insulation equivalent in insulating properties to that on the cable itself. Soldered joints in rubber-insulated cables are insulated with rubber tape. The rubber employed is a self-vulcanizing tape often referred to as *splicing gum*. Tapes made from different types of rubber compound are available. One type is made from normal-aging compound and may be used for cables insulated with NEC, intermediate, ASTM 30 percent Class AO, or performance-rubber compounds. A better grade of tape having better aging, heat-resisting, and moisture-resisting properties was developed for Performite-compound-insulated cables. It may be used for high-grade joints in any type of rubber-insulated cables. For insulating joints in cables insulated with an oil-base compound (corona- and ozone-resisting), a corona-resisting tape made from an oil-base compound should be used.

Soldered joints in thermoplastic-insulated wires and cables should be insulated with pressure-sensitive thermoplastic-adhesive tape.

Soldered joints in varnished-cambric- and paper-insulated cables are insulated with varnished-cambric tape.

to be removed from each cable end is approximately $1\frac{1}{2}$ in (38.1 mm) less than one-half the total length of the lead sleeve indicated.

Cut halfway through the lead sheath all around at the location determined, and cut the sheath lengthwise to the end. Remove this section of sheath by grasping with pliers and tearing off. This will leave the remaining sheath ends slightly belled.

For belted cable, remove belt, insulation, and fillers to within 1 in (25.4 mm) of the end of the lead sheath.

For single-conductor shielded cable, remove shielding to within approximately $\frac{1}{4}$ in (6.35 mm) of the end of the lead sheath. For multiconductor cable, remove binder tape and fillers to the end of the lead sheath; remove the shielding tape as far as possible into the crotch.

If the cable is neoprene-jacketed, remove the jacket, underlying tapes, and shielding, if any. Use care not to damage the factory insulation on the cable.

107. Removing insulation from rubber- or thermoplastic-insulated cables.

Completely remove the insulation for a distance sufficient for making the joint. Cover the bared conductor with a few turns of friction tape so that the conductor will not be nicked. Pencil down the conductor insulation for a distance of $\frac{1}{2}$ in (12.7 mm; see Figs. 2.7 and 2.9). This penciling should be smooth and even and can be done best with a sharp knife, care being taken not to injure the conductor. All the exposed conductor insulation should then be made smooth with fine emery cloth to provide a good surface for the application of the splicing gum. Wrap the tapered ends of the insulation tightly with dry cotton tape, and tie the tape in place. The tape protects the insulation from scorching while the connector is being soldered to the conductors.

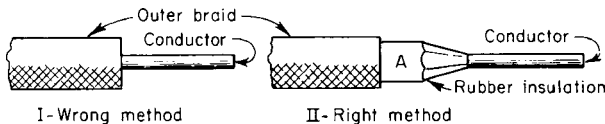


FIGURE 2.9 Methods of "skinning" wire.

108. Removing insulation from paper- or varnished-cambric-insulated cable (General Electric Co.).

The cable insulation should be removed in steps as indicated in Fig. 2.10. For paper-insulated cable, the steps should be made by tearing the paper tapes. A convenient method is to hold a loop of fine steel wire (about 0.015 in, or 0.381 mm, in diameter) in place around the insulation at each step in turn, beginning with the step farthest from the end of the cable, and tear the tapes at the wire. A weight of about $1\frac{1}{2}$ lb (0.68 kg) attached to each end of the wire will hold the loop in place while tearing the tape.

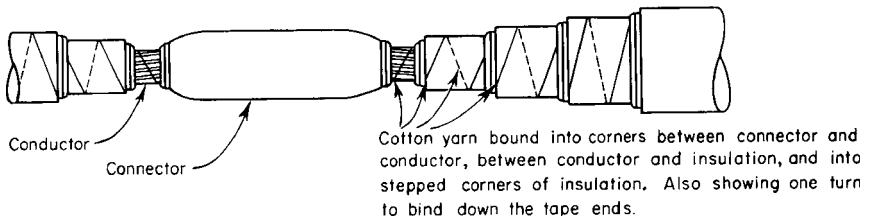


FIGURE 2.10 Method of stepping and binding insulation.

For varnished-cambric-insulated cable, the steps should be made by cutting the cloth tapes, exercising care to avoid cutting through tapes that will remain on the conductor.

It is recommended that in each case the first step adjacent to the conductor be about $\frac{1}{32}$ in (0.79 mm) in height by $\frac{1}{2}$ in (12.7 mm) in length and that the remaining steps be of equal height and spaced about $\frac{3}{4}$ in (19.1 mm) apart. The number of steps in any case will be the same as that shown in the illustration, but the height of the steps will vary with the thickness of the insulation on the conductor.

The number of tapes to be removed for any given step must be determined by counting the total number of tape layers and measuring the thickness of each. Total insulation usually comprises either paper tapes varying in thickness from 0.004 to 0.008 in (1 to 2 mm) or varnished-cambric tapes about 0.012 in (3 mm) in thickness.

Cotton yarn should be bound into the stepped corners of the insulation and into the corners between insulation and conductor parts (Fig. 2.10). The following procedure should be observed. Wash the exposed surfaces of stepped insulation and all metal conductor parts with high-quality Transil oil at a temperature of about 110°C to remove all impurities. Dip the roll of cotton yarn in clean Transil oil at a temperature of 110°C to remove possible moisture. Then wind the yarn in all the stepped corners of the insulation, the corners between the conductor and the insulation, and the corners between the conductor and the connector. In passing from one step of insulation to the next, bind the tape ends down with a turn of yarn. Excessive yarn should be avoided; that is, one turn in the lower steps and two in the higher steps should be sufficient.

109. Cleaning wire ends. Bare wire ends should be scraped bright with the back of a knife blade or rubbed clean with sandpaper or emery cloth to ensure that the solder will adhere readily.

110. Split Copper Sleeves for Standard Concentric Round Stranded Conductors. See Fig. 2.11.

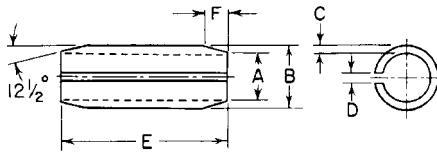


FIGURE 2.11 Split copper sleeve. [Rome Cable Corp.]

(Dimensions in inches)

Conductor size, AWG or kcmil	Inside diam <i>A</i>	Outside diam <i>B</i>	Wall thickness <i>C</i>	Slot width <i>D</i>	Overall length <i>E</i>	Length bevel <i>F</i>
8	0.151	0.201	0.025	0.030	1.5	
7	0.169	0.225	0.028	0.030	1.5	
6	0.189	0.251	0.031	0.030	1.5	
5	0.211	0.281	0.035	0.030	1.5	
4	0.237	0.315	0.039	0.030	2.0	
3	0.265	0.353	0.044	0.030	2.0	
2	0.297	0.395	0.049	0.030	2.0	
1	0.337	0.449	0.056	0.070	2.0	0.077
1/0	0.378	0.504	0.063	0.070	0.109	
2/0	0.423	0.565	0.071	0.070	0.145	
3/0	0.475	0.635	0.080	0.070	0.185	
4/0	0.533	0.713	0.090	0.070	0.231	
250	0.581	0.778	0.098	0.120	2.5	0.267
300	0.635	0.849	0.107	0.120	2.5	0.307
350	0.690	0.920	0.115	0.120	2.5	0.343
400	0.740	0.986	0.123	0.120	3.0	0.379
450	0.784	1.046	0.131	0.120	3.0	0.415
500	0.826	1.102	0.138	0.120	3.0	0.447
550	0.868	1.154	0.143	0.175	3.0	0.470
600	0.906	1.206	0.150	0.175	3.5	0.501
650	0.948	1.260	0.156	0.175	3.5	0.528
700	0.983	1.307	0.162	0.175	3.5	0.556
750	1.018	1.356	0.169	0.175	3.5	0.587
800	1.052	1.400	0.174	0.175	4.0	0.610
850	1.083	1.441	0.179	0.220	4.0	0.632
900	1.115	1.483	0.184	0.220	4.0	0.655
950	1.145	1.525	0.190	0.220	4.0	0.682
1000	1.175	1.565	0.195	0.220	4.5	0.704
1250	1.320	1.754	0.217	0.220	4.5	0.804
1500	1.440	1.912	0.236	0.280	5.0	0.889
1750	1.560	2.074	0.257	0.280	5.5	0.984
2000	1.664	2.214	0.275	0.280	6.0	1.065
2500	1.855	2.455	0.300	0.280	6.5	1.178
3000	2.033	2.683	0.325	0.300	7.5	1.178

111. A soldering flux removes or prevents the formation of an oxide during soldering so that the solder will flow readily and unite firmly the members to be joined. For copper wires the following solution of zinc chloride, which is recommended by Underwriters Laboratories, is good: saturated solution of zinc chloride, 5 parts; alcohol, 4 parts; glycerin, 1 part. Solutions made with acids should be avoided, as more or less corrosion usually occurs in joints made with them. Commercial soldering pastes and sticks give good satisfaction in cleaning joints to be soldered.

112. Insulation of joints in rubber-insulated cable. Remove the cotton tape that was wrapped around the tapered ends of the insulation. Clean the rubber insulation with a cloth dampened with high-test gasoline and allow it to dry. The surface over which the splicing tape is to be applied should then be covered with rubber cement, and the solvent allowed to evaporate until it is quite tacky. The rubber splicing tape should then be placed over the joint. Each layer should be applied smoothly and under tension so that there will be no air spaces between the layers. In putting on the first layer, start near the middle of the joint instead of at the end. The diameter of the completed insulated joint should be greater than the overall diameter of the original cable, including the insulation. When a standard split copper connector is used, the thickness of applied insulation over the maximum diameter of the connector should be at least 50 percent greater than the thickness of the insulation on the original cable as indicated in Fig. 2.7. Most splicing tapes are self-vulcanizing, and therefore it is not necessary to vulcanize the joint later.

113. Insulation of joints in varnished-cambric- or paper-insulated cables.

Varnished-cambric tape of various widths is used for insulating these joints. A $\frac{1}{2}$ -in (12.7-mm) tape is used in the spaces between the cable insulation and the connector end; $\frac{3}{4}$ -in (19.1-mm) tape is used to continue the insulating to the original level of the cable insulation. A 1-in (25.4-mm) tape is used to complete the insulation of the joint or, in the case of joints for three-conductor belted-type cables, the overall of the crotch; 1-in tape is also used either for spacing reinforced conductors or for binding together reinforced conductors in the case of joints for 5-kV belted-type cables.

Before applying the tape, flush all exposed surfaces of the insulation and intervening conductor parts with high-quality Transil oil at 110°C to remove all impurities. Also, during the application of the tape, all surfaces on which the tape is applied and each layer of tape during wrapping should be flushed with a heavy oil compound applied at a temperature of about 20°C with a brush that has been cleaned in high-quality Transil oil at a temperature of approximately 110°C. Tape of $\frac{1}{2}$ - or $\frac{3}{4}$ -in (12.7- or 19.1-mm) width should be applied by drawing it tightly in half-lap wrappings; 1-in (25.4-mm) tape should be applied in butt wrappings.

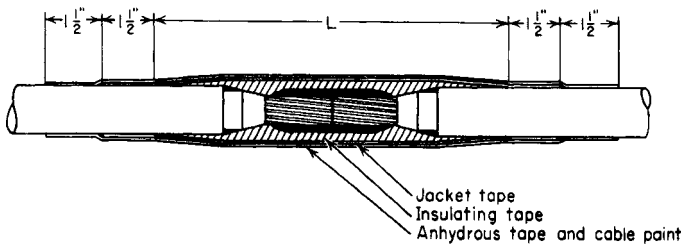
The applied tape insulation should be built up until the thickness of insulation over the maximum diameter of the connector or splice is 50 percent greater than the thickness of the insulation on the original conductor (see Fig. 2.8).

114. Applying lead sleeve to lead-sheathed cable (Rome Cable Corp.). The lead sleeve is slid in place, and the ends are beaten down with a wood tool to fit snugly the lead sheath of the cable. Scrape the wiping surfaces clean and apply stearin flux. Apply paper pasters to limit the length of the wipes. Make the wiped joints by pouring molten solder on the joint. As the solder cools and becomes plastic, work the solder by wiping with a cloth.

Cut and raise V notches in the lead sleeve for filling and venting. Fill the lead sleeve with insulating compound, heated to the recommended temperature and poured into the sleeve through a funnel. The joint is completed by binding the V-notch flaps back in place and sealing them with 50-50 solder.

115. Cable joints. The following instructions in Secs. 118 to 121 for the splicing of cables are reproduced here through the courtesy of the Rome Cable Corp.

116. **Straight splice for single-conductor unshielded cables** (Fig. 2.12)



Conductor size AWG or kcmil	Length of L, in		
	600 V	3000 V	5000 V
8-4/0	6.5	7.5	8.5
250-500	7.5	8.5	9.5
600-1000	8.5	9.5	10.5

FIGURE 2.12 Straight splice for single-conductor shielded cable. [Rome Cable Corp.]

A. Rubber-Insulated Neoprene-Jacketed Cable

1. Form the two cables to be joined into their final position, allowing the ends to overlap. Mark the centerline of the joint on both cables, and cut off at this point so that the cables butt squarely together.
2. Strip the factory-applied jacket, insulation, and underlying tape, if any, from both cables for a distance equal to one-half the length of connector plus $\frac{1}{4}$ in (6.35 mm).
3. Apply compression or solder-type split tinned connector.
4. Pencil the jacketed insulation for a distance of 4 times the overall thickness of jacket and insulation. Apply special cement to the connector, exposed portions of the conductor, the pencils, and the adjacent jacket, allowing the cement to become tacky before proceeding with the joint.
5. Insulate with ozone-resistant rubber splicing tape applied one-half lap to a thickness over the connector of $1\frac{1}{2}$ times the factory-applied insulation and tapering off over the jacket to a point of $\frac{1}{2}L$ from the center.
6. Cover the hand-applied insulation and adjacent jacket for a distance of $1\frac{1}{2}$ in (38.1 mm) with special cement, allowing it to become tacky. Apply neoprene tape over the entire joint to the same thickness as the factory-applied jacket and extending $1\frac{1}{2}$ in beyond the end of the insulating tape.
7. Serve the entire joint with anhydrous tape, extending this serving $1\frac{1}{2}$ in beyond the end of the hand-applied jacket tape.
8. Paint the entire joint with cable paint.

B. Rubber-Insulated Thermoplastic-Jacketed Cable

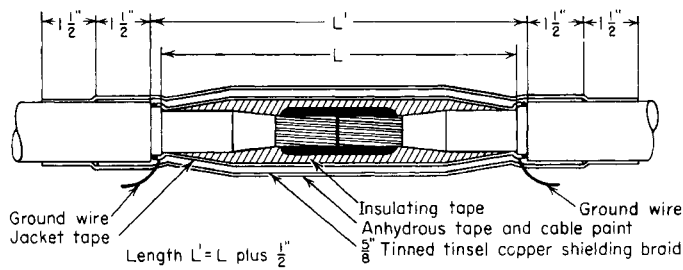
Follow the procedure given in A, substituting the following for step 6:

6. Apply pressure-sensitive thermoplastic tape over the entire joint to the same thickness as the factory-applied jacket and extending $1\frac{1}{2}$ in (38.1 mm) beyond the end of the insulating tape.

C. Thermoplastic-Insulated Thermoplastic-Jacketed Cable

- 1-2. Follow steps 1 and 2 as in A.

- 3. Clean the conductors, and apply a compression-type connector with hydraulic press and dies.
- 4. Pencil the jacketed insulation for a distance of 6 times the overall thickness of jacket and insulation.
- 5. Insulate with polyethylene-base splicing tape applied one-half lap to a thickness over the connector of 2 times the factory-applied insulation and tapering off over the jacket to a point $\frac{1}{2} L$ from the center.
- 6. Apply pressure-sensitive thermoplastic tape over the entire joint to the same thickness as the factory-applied jacket and extending $1\frac{1}{2}$ in (38.1 mm) beyond the jacket end.
- 7. Complete as in steps 7 and 8 of A.



Length of L , in					
5000 V		7500 V		15,000 V	
Conductor size AWG or kcmil	Grounded neutral or underground neutral	Grounded neutral	Under-grounded neutral	Grounded neutral	Under-grounded neutral
8-4/0	8.5	10.0	11.0	13.5	15.5
250-500	9.5	11.0	12.0	14.5	16.5
600-1000	10.5	12.0	13.0	15.5	17.5

FIGURE 2.13 Straight splice for single-conductor shielded cable. [Rome Cable Corp.]

117. **Straight splice for single-conductor shielded cables** (Fig. 2.13)

A. *Rubber-Insulated Neoprene-Jacketed Cable*

- 1. Form the two cables to be joined into their final position, allowing the ends to overlap. Mark the centerline of the joint on both cables, and cut off at this point so that the cables butt squarely together.
- 2. Remove the jacket and underlying tapes, if any, down to the factory-applied shielding from both cables for a distance equal to $\frac{1}{2} L$. Remove the factory-applied shielding and underlying tape, if any, to within $\frac{1}{4}$ in (6.35 mm) of the end of the jacket or for a distance of $\frac{1}{2} L$.
- 3. Strip the factory-applied insulation and underlying tape, if any, from both cables for a distance equal to one-half the length of connector plus $\frac{1}{4}$ in.
- 4. Apply compression or solder-type split tinned connector.
- 5. Pencil the factory-applied insulation for a distance equal to 4 times its thickness.

Apply special cement to the connector, exposed portions of conductor, the pencils, and the adjacent insulation, allowing the cement to become tacky before proceeding with the joint.

6. Insulate with ozone-resistant rubber splicing tape applied one-half lap to a thickness over the connector of $1\frac{1}{2}$ times the factory-applied insulation on the cable and tapering off over the cable insulation up to the end of the factory-applied shielding.
7. Cover the hand-applied insulating tape with $\frac{5}{8}$ -in ($15\frac{7}{8}$ -mm) tinned tinsel copper shielding braid, applied butt edge on the cylindrical portion and one-half lap on the tapered portions. Solder to the factory-applied shielding at both ends, and also apply a light line of solder along the tapered portions to prevent slippage. Use care to do this soldering quickly so as not to damage the shielding braid or insulation. Attach securely and solder the ground wires to the factory-applied shielding at each end of the joint.
8. Cover the shielding braid and the adjacent jacket for a distance of $1\frac{1}{2}$ in (38.1 mm) with special cement, allowing it to become tacky. Apply neoprene tape over the entire joint to the same thickness as the factory-applied jacket and extending $1\frac{1}{2}$ in beyond the jacket end.
9. Serve the entire joint with anhydrous tape, extending this serving $1\frac{1}{2}$ in beyond the end of the hand-applied jacket tape.
10. Paint the entire joint with cable paint.
11. Connect the cable shielding tape ground wires to ground.

B. Rubber-Insulated Thermoplastic-Jacketed Cable

Follow procedure given in A, substituting the following for step 8:

8. Apply pressure-sensitive thermoplastic tape over the entire joint to the same thickness as the factory-applied jacket and extending $1\frac{1}{2}$ in (38.1 mm) beyond the jacket end.

C. Thermoplastic-Insulated Thermoplastic-Jacketed Cable

- 1–3. Follow steps 1, 2, and 3 as in A.
4. Clean the conductors and apply a compression-type connector with hydraulic press and dies.
5. Pencil the factory-applied insulation for a distance equal to 6 times its thickness.
6. Insulate with polyethylene-base splicing tape applied one-half lap to a thickness over the connector of 2 times the factory-applied insulation and tapering off over the cable insulation up to the end of the factory-applied shielding.
7. Cover the hand-applied insulating tape with $\frac{5}{8}$ -in ($15\frac{7}{8}$ -mm) tinned tinsel copper shielding braid applied as in step 7 of A.
8. Apply pressure-sensitive thermoplastic tape over the entire joint to the same thickness as the factory-applied jacket and extending $1\frac{1}{2}$ in (38.1 mm) beyond the jacket end.
9. Complete as in steps 9, 10, and 11 of A.

118. Straight splice for three-conductor unshielded cable (Fig. 2.14)

A. Rubber-Insulated Neoprene-Jacketed Cable

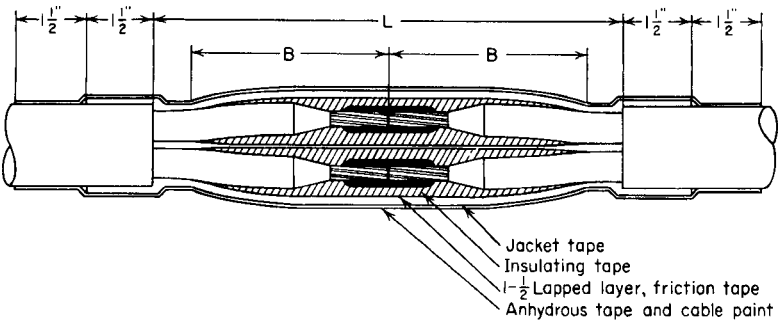
1. Form the two cables to be joined into their final position, allowing the ends to overlap. Mark the centerline of the joint on both cables and cut off at this point so that the cables butt squarely together.
2. Remove the jacket and underlying tape, if any, from both cables for a distance equal to $\frac{1}{2} L$. Remove the fillers and cut at the ends of the jacket. Bind the conductors of each cable tightly together with a piece of dry cotton tape applied at the end of the

jacket. The tape prevents breaking the jacket when spreading the conductors. Spread the conductors radically, and form them into their final position, taking care not to spread them any more than is necessary for insulating. Strip the factory-applied insulation and underlying tape, if any, on each conductor for a distance equal to one-half the length of the connector plus 1/4 in (6.35 mm).

- 3. Apply compression or solder-type split tinned connector.
- 4. Pencil the factory-applied insulation on each conductor for a distance equal to 4 times the thickness of the factory-applied insulation. Cover the connectors, the exposed portions of the conductors, the pencils, and the adjacent insulation with special cement, allowing it to become tacky before proceeding with the joint.
- 5. Insulate with ozone-resistant rubber splicing tape applied one-half lap to a thickness over the connector of 1 1/2 times the factory-applied insulation on each conductor, tapering off over the insulated conductor to a point *B* from the center.
- 6. Apply a one-half-lapped layer of friction tape over each insulated conductor, extending it as far as possible into the crotches. Squeeze the conductors together by hand, and bind them in place with a serving of friction tape.
- 7. Cover the entire joint and adjacent jacket for a distance of 1 1/2 in (38.1 mm) with special cement, allowing it to become tacky. Apply neoprene tape over the entire joint to the same thickness as the factory-applied jacket and extending 1 1/2 in beyond the jacket end.
- 8. Serve the entire joint with anhydrous tape, extending this serving 1 1/2 in beyond the end of the hand-applied jacket tape.
- 9. Paint the entire joint with cable paint.

B. Rubber-Insulated Thermoplastic-Jacketed Cable

Follow the procedure given in A, substituting the following for step 7.



Conductor size AWG or kcmil	Length of <i>L</i> and <i>B</i> , in					
	600 V		3000 V		5000 V	
	<i>L</i>	<i>B</i>	<i>L</i>	<i>B</i>	<i>L</i>	<i>B</i>
8–1	8.0	3.25	9.0	3.50	10.0	4.00
1/0–4/0	9.5	3.75	10.5	4.00	11.5	4.50
250–500	12.0	4.75	13.0	5.00	14.0	5.50
600–1000	15.0	6.00	16.0	6.25	17.0	6.75

FIGURE 2.14 Straight splice for three-conductor unshielded cable. [Rome Cable Corp.]

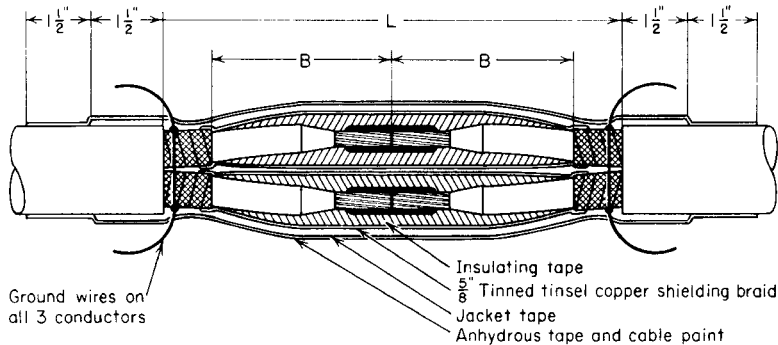
7. Apply pressure-sensitive thermoplastic tape over the entire joint to the same thickness as the factory-applied jacket and extending 1½ in (38.1 mm) beyond the jacket end.

C. Thermoplastic-Insulated Thermoplastic-Jacketed Cable

- 1–2. Follow steps 1 and 2 as in A.
3. Clean the conductors, and apply a compression-type connector with hydraulic press and dies.
4. Pencil the factory-applied insulation on each conductor for a distance equal to 6 times its thickness.
5. Insulate with polyethylene-base splicing tape applied one-half lap to a thickness over the connector of 2 times the factory-applied insulation over each conductor, tapering off over the insulated conductor to a point B from the center.
6. Apply a one-half-lapped layer of friction tape over each insulated conductor, extending it as far as possible into the crotches. Squeeze the conductors together by hand, and bind them in place with a serving of friction tape.
7. Apply pressure-sensitive thermoplastic tape over the entire joint to the same thickness as the factory-applied jacket and extending 1½ in (38.1 mm) beyond its end.
8. Complete as in steps 8 and 9 of A.

119. Straight splice for three-conductor shielded cable (Fig. 2.15)

A. Rubber-Insulated Neoprene-Jacketed Cable



		Length of L and B, in									
		5000 V		7500 V grounded neutral		7500 V underground neutral		15,000 V grounded neutral		15,000 V underground neutral	
Conductor size											
AWG or kcmil		L	B	L	B	L	B	L	B	L	B
8–1		10.5	4.25	11.5	5.00	12.5	5.50	15.0	6.75	17.5	7.75
1/0–4/0		12.0	4.50	13.0	5.25	14.0	5.75	16.0	7.00	18.5	8.00
250–500		14.0	4.75	15.0	5.50	16.0	6.00	18.0	7.25	20.5	8.25
600–1000		17.0	5.75	18.0	6.50	19.0	7.00	21.0	8.25	23.5	9.25

FIGURE 2.15 Straight splice for three-conductor shielded cable. [Rome Cable Corp.]

1. Form the two cables to be joined into their final position, allowing the ends to overlap. Mark the centerline on both cables, and cut off at this point so that the cables butt squarely together.
2. Remove the jacket and underlying tape, if any, from both cables for a distance equal to $\frac{1}{2} L$. Remove the fillers and cut at the ends of the jacket. Bind the conductors of each cable tightly together with a piece of dry cotton tape applied at the end of the jacket. This is to prevent breaking the jacket when spreading the conductors. Spread the conductors radially, and form them into their final position, taking care not to spread them any more than is necessary for insulating. Secure the shielding on each conductor at a point about $\frac{1}{4}$ in (6.35 mm) greater than B from the center of the joint, and strip the shielding and underlying tape, if any, from the point to the end. Strip the factory-applied insulation and underlying tape, if any, on each conductor for a distance equal to one-half the length of the connector plus $\frac{1}{4}$ in.
3. Apply compression or solder-type split tinned connector.
4. Pencil the factory-applied insulation on each conductor for a distance equal to 4 times the thickness of the factory-applied insulation. Cover the connectors, the exposed portion of the conductors, the pencils, and the adjacent insulation with special cement, allowing it to become tacky before proceeding with the joint.
5. Insulate with ozone-resistant rubber splicing tape applied one-half lap to a thickness over the connector of $1\frac{1}{2}$ times the factory-applied insulation on each conductor, tapering off over the insulated conductor to a point B from the center.
6. Cover the hand-applied insulating tape with $\frac{5}{8}$ -in (15 $\frac{7}{8}$ -mm) tinned tinsel copper shielding braid, applied butt edge on the cylindrical portion and one-half lap on the tapered portions. Solder to the factory-applied shielding at both ends, and also apply a light line of solder along the tapered portions to prevent slippage. Use care to do this soldering quickly so as not to damage the shielding braid or insulation. Attach securely and solder ground wires to the factory-applied shielding on all three conductors at both ends of the joint. Squeeze the conductors together by hand, and bind them in place with a serving of friction tape.
7. Cover the entire joint and adjacent jacket for a distance of $1\frac{1}{2}$ in (38.1 mm) with special cement, allowing it to become tacky. Apply neoprene tape over the entire joint to the same thickness as the factory-applied jacket and extending $1\frac{1}{2}$ in beyond the jacket end.
8. Serve the entire joint with anhydrous tape, extending this serving $1\frac{1}{2}$ in beyond the end of the hand-applied jacket tape.
9. Paint the entire joint with cable paint.
10. Connect the cable shielding tape ground wire to ground.

B. Rubber-Insulated Thermoplastic-Jacketed Cable

Follow the procedure given in A above, substituting the following for step 7.

7. Apply pressure-sensitive thermoplastic tape over the entire joint to the same thickness as the factory-applied jacket and extending $1\frac{1}{2}$ in (38.1 mm) beyond the jacket end.

C. Thermoplastic-Insulated Thermoplastic-Jacketed Cable

- 1–2. Follow steps 1 and 2 as in A.
3. Clean the conductors and apply a compression-type connector with hydraulic press and dies.
4. Pencil the factory-applied insulation on each conductor for a distance equal to 6 times its thickness.
5. Insulate with polyethylene-base splicing tape applied one-half lap to a thickness over the connector of 2 times the factory-applied insulation over each conductor, tapering off over the insulated conductor to a point B from the center.

6. Cover the hand-applied insulating tape with $5/8$ -in ($157/8$ -mm) tinned tinsel copper shielding braid applied as in step 6 of A.
7. Apply pressure-sensitive thermoplastic tape over the entire joint to the same thickness as the factory-applied jacket and extending $1\frac{1}{2}$ in (38.1 mm) beyond the jacket end.
8. Complete as in steps 8, 9, and 10 of A.

120. Terminating power cables. The following instructions in Secs. 122 to 130 for terminating power cables are reproduced here through the courtesy of the Rome Cable Corp.

General Instructions. This discussion covers outdoor and indoor terminations for single- and three-conductor unshielded and shielded, rubber- or thermoplastic-insulated cables with neoprene or thermoplastic jackets.

Although outdoor terminations are included for 7500 and 15,000 V, grounded and ungrounded neutral, porcelain potheads are recommended for permanent installations.

In general, cables fall into three classifications: unshielded, leaded, and shielded. Unshielded cables are terminated simply by applying the conductor terminal lug and forming a watertight seal, providing sufficient flashover distance to the nearest ground.

When a leaded or shielded cable is to be terminated, the grounded sheath or shielding must be removed from the cable end to provide sufficient flashover distance. Also, the electric field at the end of the grounded shield is concentrated owing to the divergence of the flux lines toward the thin edge of the shielding and must be relieved, since the high potential gradients may lead to eventual cable failure in this area.

This concentration of electrical stress is relieved by adding a *stress-relief cone* to the exposed insulation surface of the cable, which consists of a double cone of additional insulation with the metallic shielding extended to the middle of the double cone.

Stress-relief cones are recommended for all shielded cables and for 12-kV and higher single-conductor lead-covered cables. (Belling out the lead sheath is usually sufficient for lower-voltage lead-covered cables.)

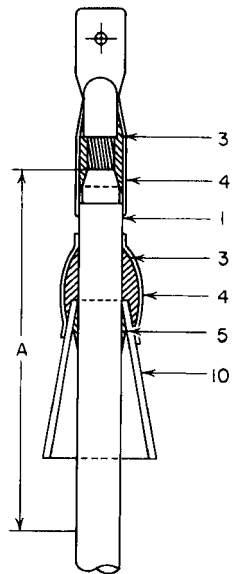
On rubber-insulated cables, ozone-resistant rubber splicing tape is used as the cone insulation and tinned copper tinsel braid for the cone shielding. On thermoplastic-insulated cables, a polyethylene-base splicing tape is used.

In building the cone, start at the unshielded end and wrap the insulating tape down to the edge of the cable shielding. Continue wrapping back and forth to build up the double cone of proper dimensions. Starting at the middle of the cone, apply the copper tinsel braid to the lower half, making sure that the upper edge is smooth and even. The braid is then tucked under and soldered to the lead sheath or wrapped over and soldered to the cable shielding.

121. Outdoor termination for single-conductor unshielded cable (Fig. 2.16)

Rubber- or Thermoplastic-Insulated Neoprene- or Thermoplastic-Jacketed Cable

1. Remove the jacket, factory-applied insulation, and underlying tape, if any, for a distance from the end of the cable equal to the depth of the hole in the lug plus $1/2$ in (12.7 mm) for cable sizes up to 4/0 AWG and 1 in (25.4 mm) for larger cables.
2. Apply a shoulder of friction tape to support the rubber rain shield, when required. This support should be so located that when the rain shield is seated on the support, the bottom will be about 3 in (76.2 mm) from any grounded surface and the distance *A* as given in the tables. Put the rain shield in place, and apply ozone-resistant rubber splicing tape to form a watertight seal.



A - Minimum length to grounded surface
1 - Jacket
3 - Insulating tape
4 - Anhydrous tape - cable paint
5 - Friction tape
10 - Rain shield

Conductor size, AWG or kcmil	Length of A, in		
	600 V	3000 V	5000 V
8-1000	5	7	10

FIGURE 2.16 Outdoor termination for single-conductor unshielded cable. [Rome Cable Corp.]

- 3. Apply a compression or solder-type lug on the conductor. A compression-type lug must be used on thermoplastic-insulated cables. Pencil the factory-applied insulation and jacket for a distance equal to 4 times the overall thickness of insulation and jacket. Apply ozone-resistant rubber splicing tape to form a watertight seal.
- 4. Apply two one-half-lapped layers of anhydrous tape over the tape seals at the lug and upper end of the rain shield. Paint the anhydrous tape with cable paint.


122. Indoor termination for single-conductor unshielded cable. Follow the procedure given in Sec. 123, eliminating the rain shield and using the accompanying table for dimension A, which would be the minimum length to grounded surface.

Conductor size, AWG or kcmil	Length of A, in		
	600 V	3000 V	5000 V
8–1000	3	5	8

123. Outdoor termination for single-conductor shielded cable (Fig. 2.17)

A. Rubber-Insulated Neoprene- or Thermoplastic-Jacketed Cable

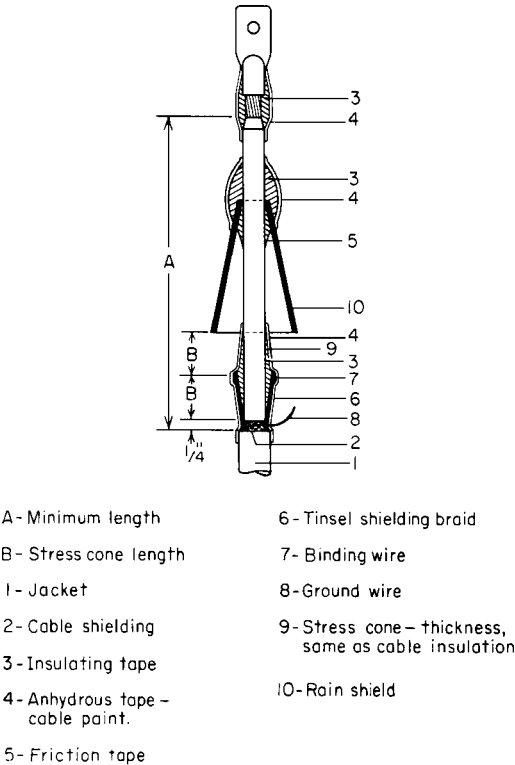1. Remove the jacket, factory-applied shielding, insulation, and underlying tapes, if any, for a distance from the end of the cable equal to the depth of the hole in the lug plus 1/2 in (12.7 mm) for cable sizes up to 4/0 AWG and 1 in (25.4 mm) for larger cables.



Conductor size, AWG or kcmil	Length of A, and B, in					
	5000 V		7500 V		15,000 V	
	A	B	A	B	A	B
8–1000	14	2	17	2.5	24	3.5

FIGURE 2.17 Outdoor termination for single-conductor shielded cable. [Rome Cable Corp.]

- 2. Remove all outer coverings down to the factory-applied shielding for a distance *A* from the end of the factory-applied insulation. Remove the factory-applied shielding and underlying tape to within $\frac{1}{4}$ in (6.35 mm) of the jacket.
- 3. The factory-applied shielding must be terminated in a stress cone. Form a stress cone of the proper dimensions, using ozone-resistant rubber splicing tape. Shield the stress cone with $\frac{5}{8}$ -in (15 $\frac{7}{8}$ -mm) tinned tinsel copper shielding braid, terminating the shielding at the point of maximum diameter with a binder of fine copper wire. Solder the braid to the end of the factory-applied shielding and attach the ground wire. Complete the stress cone with a serving of two one-half-lapped layers of anhydrous tape extending up over the end of the jacket.
- 4. Seal the rain shield and complete the termination as in steps 2, 3, and 4 of Sec. 123.

B. Thermoplastic-Insulated Thermoplastic-Jacketed Cable

Handle in the same way as A except to apply a compression-type lug with hydraulic press and dies. If unpigmented polyethylene-insulated cable is being terminated, it should be covered with two layers of black pressure-sensitive thermoplastic tape applied one-half lap for the distance *A* prior to application of stress cone and rain shield after removal of shielding tapes.


124. Indoor termination for single-conductor shielded cable. Follow the procedure given in Sec. 125, eliminating the rain shield and using the accompanying table for dimensions *A* and *B*.

		Length of <i>A</i> and <i>B</i> , in					
		5000 V		7500 V		15,000 V	
Conductor size, AWG or kcmil		<i>A</i>	<i>B</i>	<i>A</i>	<i>B</i>	<i>A</i>	<i>B</i>
		8–1000	10	2	13	2.5	20

125. Outdoor termination for three-conductor unshielded cable (Fig. 2.18)

A. Rubber-Insulated Neoprene- or Thermoplastic-Jacketed Cable

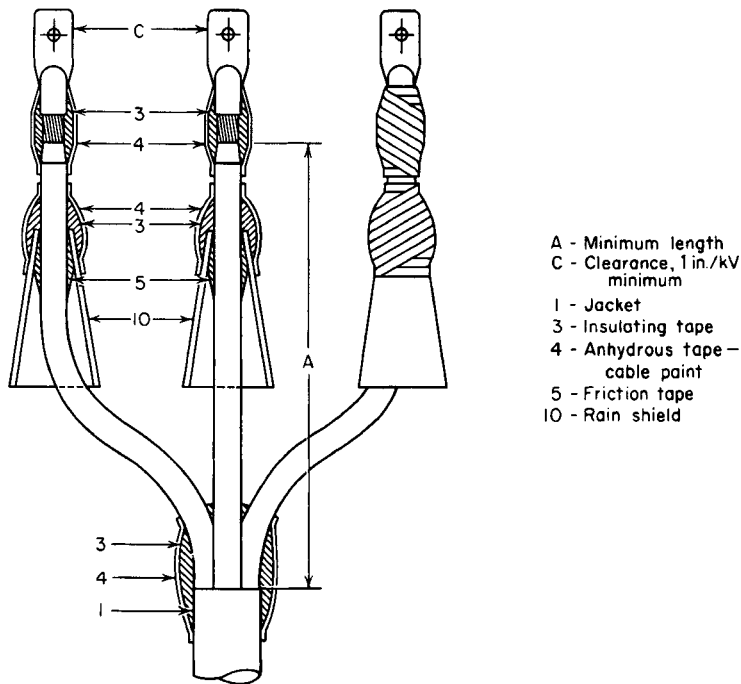- 1. Remove the jacket and underlying tape, if any, for the distance *A* as measured from the center conductor of the termination. (NOTE: Allowance must be made for forming the outer conductors into position.) Remove the fillers and cut at the end of the jacket. Bind the conductors tightly together with a piece of dry cotton tape applied at the end of the jacket before the conductors are spread apart. Spread the conductors radially, and form them into their final position, taking care not to spread them any more than is necessary to permit applying the rain shields and allowing sufficient clearance (1 in, or 25.4 mm/kV) between lugs. Bare the end of each conductor for a length equal to the depth of the hole in the lug plus $\frac{1}{2}$ in (12.7 mm) for cable sizes up to 4/0 AWG and 1 in for larger cables.
- 2. Terminate each conductor as described in steps 2, 3, and 4 of Sec. 123.
- 3. Form a watertight seal with ozone-resistant rubber splicing tape at the end of the jacket. Apply two one-half-lapped layers of anhydrous tape over the tape seal, and paint with cable paint.



Conductor size, AWG or kcmil	Length of A, in		
	600 V	3000 V	5000 V
8-1000	8	10	13

FIGURE 2.18 Outdoor termination for three-conductor unshielded cable. [Rome Cable Corp.]

B. Thermoplastic-Insulated Thermoplastic-Jacketed Cable

Handle in the same way as A except to apply a compression-type lug with hydraulic press and dies. If unpigmented polyethylene-insulated cable is being terminated, it should be covered with two layers of black pressure-sensitive thermoplastic tape applied one-half lap for the distance A prior to application of stress cone and rain shield.


126. Indoor termination for three-conductor unshielded cable. Follow the procedure given in Sec. 127, eliminating the rain shield and using the accompanying table for dimension A.

Conductor size, AWG or kcmil	Length of A, in		
	600 V	3000 V	5000 V
8-1000	8	10	12

127. Outdoor termination for three-conductor shielded cable (Fig. 2.19)

A. Rubber-Insulated Neoprene- or Thermoplastic-Jacketed Cable

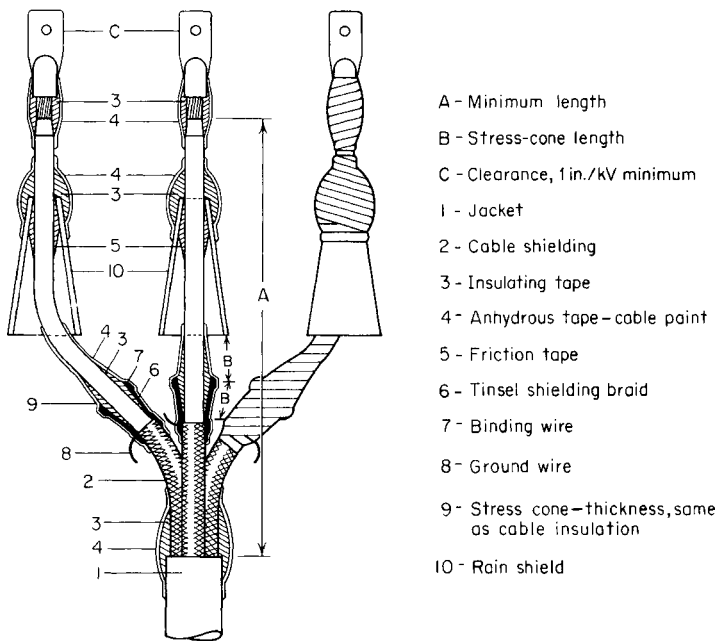- 1. Remove the jacket and underlying tape, if any, for the distance A as measured for the center conductor of the termination. (NOTE: Allowance must be made for forming the outer conductors into position.) Remove the fillers and cut at the end of the jacket. Bind the conductors tightly together with a piece of dry cotton tape applied at the end of the jacket before the conductors are spread apart. Spread the conductors radially, and form them into their final position, taking care not to spread them any more than is necessary to permit applying the rain shields and allowing sufficient clearance (1 in, or 25.4 mm/kV) between lugs. Bare the end of each conductor for a length equal to the depth of the hole in the lug plus 1/2 in (12.7 mm) for cable sizes up to 4/0 AWG and 1 in for larger cables.
- 2. Terminate each conductor as described in steps 2, 3, and 4 of Sec. 125. (NOTE: Remove shielding and underlying tapes to within 6 in, or 152.4 mm, of the jacket.)



Conductor size, AWG or kcmil	Length of A and B, in			
	5000 V		7500 V	
	A	B	A	B
8-1000	20	2	22	2.5

FIGURE 2.19 Outdoor termination for three-conductor shielded cable. [Rome Cable Corp.]

- 3. Form a watertight seal with ozone-resistant rubber splicing tape at the end of the jacket. Apply two one-half-lapped layers of anhydrous tape over the tape seal and paint with cable paint.

B. Thermoplastic-Insulated Thermoplastic-Jacketed Cable

Handle in the same way as A except to apply a compression-type lug with hydraulic press and dies. If unpigmented polyethylene-insulated cable is being terminated, it should be covered with two layers of black pressure-sensitive thermoplastic tape applied one-half lap for the distance A prior to application of stress cone and rain shield.

128. Indoor termination for three-conductor shielded cable. Follow the procedure given in Sec. 129, eliminating the rain shield and using the accompanying table for dimensions A and B.

Conductor size, AWG or kcmil	Length of A and B, in			
	5000 V		7500 V	
	A	B	A	B
8-1000	16	2	19	2.5

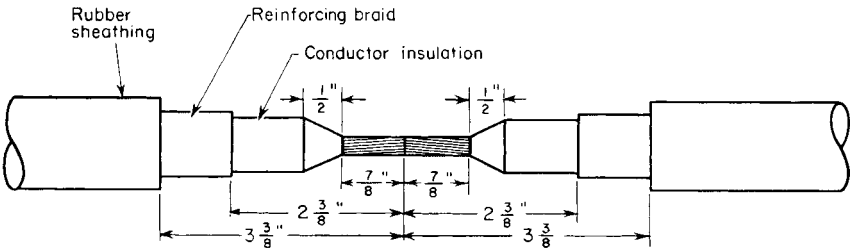
129. Arc proofing. For increased reliability, it may be required or desired to arc proof underground systems if primary cables or a combination of primary and secondary cables are contained in a manhole. If a primary cable fails even though fast cutoff devices are used, fire protection will prevent damage to the adjacent cables. Former procedures that relied on thick layers of asbestos materials are no longer used. Newer techniques use thinner wraps that produce a thermally-insulating char when exposed to flame, thereby safely preventing a nearby arc from damaging the protected conductors underneath. Generally, any cable within 18 in is considered capable of compromising another cable during a high-energy arcing failure, although this is only a rule of thumb. The process works well as long as the response time of the circuit protective devices has been coordinated with the degree of protection provided by the arc proofing.

For small cables (up to about 1 1/2 in or 38 mm) in diameter use 1 1/2-in arc proofing tape; for larger cables use 3-in (76 mm) tape. The tape will not self-adhere but when pulled tight it will conform to the shape it is covering without wrinkles. To start the wrap make a complete turn or two and secure it with at least two complete turns, one directly on top of the other, of an adhesive glass cloth tape. Then wrap helically, overlapping each turn with a half-wrap on the next turn. As rolls of tape run out, secure the ends with glass tape as at the beginning, and start the next roll so the end of the previous roll is overlapped by at least 6 in (152 mm). For best results, start at one end of the manhole and go to the other. Typical test results indicate that a half-wrap covering will resist the effects of a nearby sustained arc for about 75 cycles; if that is not enough a second layer can be applied with about double the withstand time.


130. Portable-cable joints. The following instructions in Secs. 133 to 145 for making joints in all-rubber portable cables have been reproduced here through the courtesy of the General Electric Co.

131. A typical single-conductor portable-cable joint is shown in Fig. 2.20. The following directions for making this kind of joint refer to that figure.


1. Bring the cables in position for splicing, with their ends overlapping a little, and cut the cable ends off squarely.
2. Remove $3\frac{3}{8}$ in (85.725 mm) of rubber sheathing from the end of each cable. Remove the reinforcing braid for a distance of $2\frac{3}{8}$ in (60.325 mm), and remove the conductor insulation for a distance of $\frac{7}{8}$ in (22.225 mm).



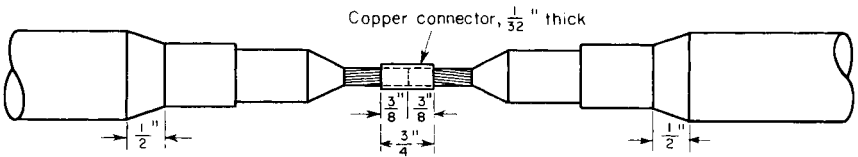(a) - Rubber sheathing, reinforcing braid, and conductor insulation removed, and conductor insulation penciled



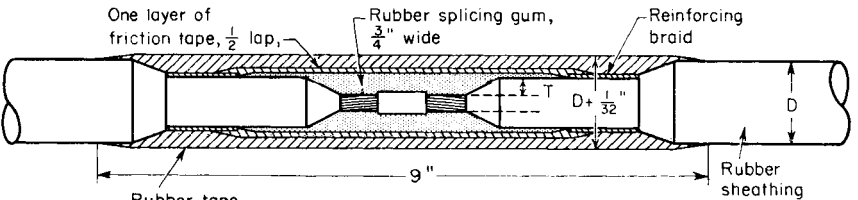(b) - Copper connector assembled and rubber sheathing penciled



(c) - Splice completed with splicing gum, friction tape, and rubber tape applied. The joint should now be vulcanized

Conductor size, AWG	Thickness of insulation, T , in	Overall diam of cable, D , in	Conductor size AWG	Thickness of insulation, T , in	Overall diam of cable, D , in
8	$\frac{3}{64}$	0.44	3	$\frac{4}{64}$	0.64
6	$\frac{4}{64}$	0.50	2	$\frac{4}{64}$	0.67
5	$\frac{4}{64}$	0.53	1	$\frac{5}{64}$	0.73
4	$\frac{4}{64}$	0.58	0	$\frac{5}{64}$	0.82

FIGURE 2.20 Single-conductor soldered joint in an all-rubber portable cable. [General Cable Co.]

3. Pencil down the conductor insulation for a distance of $\frac{1}{2}$ in (12.7 mm). This penciling should be smooth and even and can be done best with a sharp knife, taking care not to injure the conductor. All the exposed conductor insulation should then be made smooth with fine emery cloth to provide a good surface for the later application of the splicing gum.
4. Wrap the tapered ends of the insulation tightly with dry cotton tape and tie the tape in place. The tape protects the insulation from scorching while the connector is being soldered to the conductors.
5. Assemble the connector in place over the conductor joint. The connector should be made of soft-drawn copper strap, $\frac{3}{4}$ in (19.05 mm) wide and $\frac{1}{32}$ in (0.79 mm) thick and long enough to wrap around the conductor without overlapping. Apply a coating of nonacid soldering flux over the surface of the conductor and then slide the connector over the conductor; let the connector slot come at the top, and place it so that the two conductors butt at the center of the connector. Pinch the connector with pliers so that it closes into maximum contact with the conductor. Solder the conductor fast to the connector by pouring hot solder over the joint until it is thoroughly heated and the solder runs freely through the slot and into the strands of the cable. Solder that collects on the bottom of the connector should be brought to the top to fill the slot. Before the solder sets, wipe the connector smooth and clean with a piece of cloth. After cooling, any sharp projections should be smoothed off with a file and fine emery cloth.
6. Remove the cotton tape that was wrapped around the tapered ends of the insulation. Clean the rubber insulation with a cloth dampened with high-test gasoline, and allow it to dry. Then apply a coating of rubber cement over the entire surface on which the splicing gum is to be applied, and allow the solvent to evaporate before applying any tape.
7. Apply the splicing gum and build it up over the rubber insulation to a diameter of about $\frac{1}{16}$ in (1.58 mm) larger than the rubber insulation on the cable, as shown in Fig. 2.20.
8. Apply one layer of friction tape half-lapped over the splicing gum and over the ends of the reinforcing braid, as shown in Fig. 2.20.
9. Pencil the rubber sheathing as shown, and clean the tapered surface and the outside surface of the cable for a distance of at least $\frac{3}{4}$ in (19.05 mm) at each end with fine emery cloth and high-test gasoline; allow to dry.
10. Cover the entire surface of the joint with a coating of rubber cement. Be sure to cover all the surface over which the final wrapping is to be applied.
11. After the solvent has evaporated, apply the rubber tape in half-lapping; build it up to a diameter of about $\frac{1}{16}$ in (1.58 mm) greater than the diameter of the cable, and let it extend over the surface of the rubber sheathing as indicated in Fig. 2.20, so that the overall length of the joint will be 9 in (228.6 mm).
12. The joint should now be vulcanized in a suitable mold. The inside diameter of the mold should be about the same as the diameter of the cable. If a steam vulcanizer is used, a steam pressure of about 30 lb (206,843 Pa) should be applied for 15 to 30 min, depending on the size of the mold and the joint that is being vulcanized.
13. To complete the process, cover the joint with black wax and wipe it smooth.

132. Typical examples of multiconductor portable-cable joints are shown in Figs. 2.21 and 2.22. In each case, sufficient rubber sheathing and fillers are removed from

is given in the data accompanying the illustrations. The distance between the individual splices is approximately 3 in (76.2 mm).

In splicing Type G cable, exercise care to avoid damaging the ground wires. These wires should be bent out of the way until the individual conductors have been insulated.

In splicing Type SH, Class A cable, each of the single conductors must be completely shielded; i.e., the copper-mesh shielding must be carried across the joint and soldered, as shown in Fig. 2.22. The cable-shielding braid is removed $\frac{1}{2}$ in (12.7 mm) farther than the rubber-filled tape on each end of each conductor. The remaining braid is then opened and turned back $\frac{1}{2}$ in, care being taken not to loosen the braid farther than this point; such loosening is prevented by applying and soldering at this point three or four turns of tightly drawn 0.0126-in (0.32-mm) tinned-copper wire. The $\frac{3}{4}$ by 0.015-in (19.05 by 0.381-mm) flat copper braid is then applied half-lapped over the unshielded portion of the insulation. The $\frac{1}{2}$ in of cable-shielding braid, which was just turned back, is drawn over the $\frac{3}{4}$ -in-wide shielding braid, and the two shields are bound together by continuing the tightly drawn butt wraps of 0.0126-in tinned-copper wire for a total distance of $\frac{7}{8}$ in (22.225 mm). The wire should then be soldered to the braid, using a nonacid soldering flux; this is necessary because there must be a positive electric contact across the joint. In applying the shield, be sure that no gaps or openings are left, since an opening in the shielding of one conductor might lead to corona.

Bring the single conductors together with approximately the same twist as the rest of the cable.

In the case of Type G cable, the ground wires should now be cut to their proper length. They should be connected in the same manner as the cable conductors, and all sharp projections removed. The bare wire must be wrapped with friction tape, half-lapped. The ground wire should then be placed in the interstices.

In joining the shields of Type SH, Classes C and D cable, follow in general the same instructions as given for Type SH, Class A, and in joining the ground wires follow the instructions for Type G cable.

Returning to the instructions for all types, fill the interstices and make the cable its proper shape by means of a suitable filler. The type of filler used depends on the makeup of the cable being spliced. If rubber filler is used in the cable, rubber filler should be used in the joint. If jute fillers are used in the cable, jute fillers should be used in the joint.

Rubber filler is applied by placing a coating of rubber cement over the entire surface of the individual conductors and filler space and, when the solvent has evaporated, by laying strips of splicing tape longitudinally in the interstices until these are filled completely.

When jute fillers are used, the individual conductors, the jute fillers, and the ground wires, if any, should be covered completely with one layer of half-lapped friction tape. The surface of the friction tape should then be wrapped with reinforcing cord. Apply the cord in tightly drawn wraps spaced $\frac{1}{2}$ in (12.7 mm) apart, having a pitch of approximately 2 in (50.8 mm). The joint should be wrapped first with the pitch in one direction and then with the pitch in the opposite direction, thereby obtaining the equivalent of a reinforcing braid. Tie the cord firmly at both ends.

The rubber sheathing should then be tapered and cleaned as described for single-conductor cable. All the surface that is to be covered with splicing gum should first be covered with a coating of rubber cement. When the solvent has evaporated, wrap the surface with splicing tape to the diameter shown in the illustrations.

The joint is now ready to be vulcanized. The same vulcanizing process is used for both shielded and nonshielded cables. Preheat the vulcanizer before inserting the joint, and vulcanize according to instructions furnished with the particular vulcanizing equipment. If a steam vulcanizer is used, a steam pressure of about 30 lb (206,843 Pa) should be applied for 30 to 60 min, depending on the size of the mold and the joint that is being vulcanized. It is sometimes necessary to apply a dressing of thin paper to the mold to prevent sticking of the rubber. After vulcanizing, the joint should be covered with black wax and wiped smooth (see the instructions for vulcanizing).

If the voltage is 2500 or above, a feeder cable that contains provision for a ground connection should be used. The power-line end must be grounded to a suitable permanent ground, and the end at the apparatus must be grounded securely through a bolted connection to the apparatus frame.

Included in this instruction is one method for making the conductor splice. Other methods can be used successfully. Most operating companies have their own ideas as to how these joints should be made. One suggestion is added: the copper splice should be made as smooth as possible and as close to the original diameter as practical.

133. Nonsoldered joints (for types of cable used in mines). These instructions apply to types of all-rubber portable cable which are widely used in coal and other mines on such equipment as gathering-reel locomotives, cutters, loaders, and drills. The types covered are single-conductor, two-conductor flat (with the conductors side by side), and two-conductor concentric (with an inner and outer conductor).

This method of jointing eliminates solder, and although it is thus particularly applicable to work in a mine where the explosive hazard is high, it can, of course, be used for any job (600 V and below) for which the omission of solder seems to be justified or desirable. This type of connector is useful for emergency repairs because it is simply and easily installed.

134. Nonsoldered joint for single-conductor portable cable (refer to Fig. 2.24)

1. Remove the outer jacket and insulation for a distance of approximately 5 in (127 mm) from each cable end.
2. Overlap the two conductor ends, as shown in the drawing, and install two Newberry clamps at the ends of the conductors.
3. Taper the insulation on each side of the joint, leaving $\frac{1}{2}$ in (12.7 mm) of bare conductor between the end of the taper and the edge of the connector.
4. Remove the outer jacket and reinforcing braid to the final dimensions.
5. Thoroughly clean the surface to which splicing gum is to be applied and cover with a coating of rubber cement. Allow the solvent to evaporate.
6. Apply splicing gum to the dimensions as shown in Fig. 2.24.
7. Cover the splicing gum with one layer of friction tape, half-lapped and finally wrapped with reinforcing cord.
8. Taper the ends of the outer rubber jacket and clean the entire surface of the joint.
9. Apply a coating of rubber cement over the entire joint. When the solvent has evaporated, apply the outer jacket with wrappings of splicing gum.
10. Vulcanize the joint.

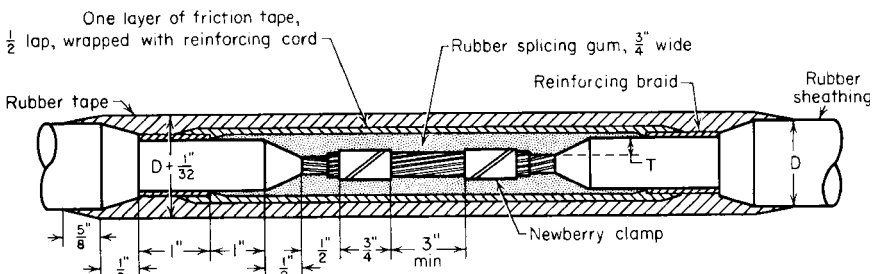


FIGURE 2.24 Nonsoldered single-conductor cable joint. [General Electric Co.]

Dimensions, In Inches, of Multiconductor Cable Joints

See Figs. 2.21, 2.22, and 2.23

Types W and G, 600 V, two-, three-, and four-conductor										
Conductor size, AWG	T	Two-conductor			Three-conductor			Four-conductor		
		D	L	M	D	L	M	D	L	M
8	$\frac{3}{4}$	0.75	18	$\frac{1}{2}$	$\left\{ \begin{array}{l} 0.78 \\ 0.95 \\ 1.12 \\ 1.19 \\ 1.31 \\ 1.50 \\ 1.62 \end{array} \right\}$	21	$\frac{1}{2}$	$\left\{ \begin{array}{l} 0.84 \\ 1.03 \\ 1.27 \\ 1.36 \\ 1.42 \\ 1.62 \\ 1.84 \end{array} \right\}$	24	$\frac{1}{2}$
6	$\frac{3}{4}$	0.91								
4	$\frac{3}{4}$	1.06								
3	$\frac{3}{4}$	1.12								
2	$\frac{3}{4}$	1.19								
1	$\frac{3}{4}$	1.41								
0	$\frac{3}{4}$	1.55								
Type G, 5000 V, three-conductor										
Conductor size, AWG	5000 volts									
	T	D	L	M						
8	$\frac{10}{64}$	$\left\{ \begin{array}{l} 1.66 \\ 1.80 \\ 1.86 \\ 1.94 \\ 2.03 \\ 2.14 \end{array} \right\}$	24	1						
6										
4										
3										
2										
1										
0										
Type SH, 5000 V, three-conductor										
Conductor size, AWG	5000 volts									
	T	D	L	M						
8	$\frac{13}{64}$	$\left\{ \begin{array}{l} 2.00 \\ 2.20 \\ 2.24 \\ 2.33 \\ 2.44 \\ 2.53 \end{array} \right\}$	26	1						
6										
4										
3										
2										
1										
0										
Two-conductor, flat, 600 V										
Conductor size, AWG	Two-conductor									
	T	D	L	M						
8	$\frac{3}{4}$	$\left\{ \begin{array}{l} 0.60 \times 0.81 \\ 0.75 \times 0.98 \\ 0.84 \times 1.09 \\ 0.88 \times 1.16 \\ 0.88 \times 1.29 \\ 1.13 \times 1.43 \end{array} \right\}$	18	$\frac{1}{2}$						
6	$\frac{3}{4}$									
4	$\frac{3}{4}$									
3	$\frac{3}{4}$									
2	$\frac{3}{4}$									
1	$\frac{3}{4}$									

135. Nonsoldered joint for two-conductor (flat) portable cable (refer to Fig. 2.25)

1. Remove the outer jacket to the dimensions shown in the drawing, making an allowance for an approximately 5-in (127-mm) overlap of the conductors.
2. When the cable is supplied with jute fillers, the fillers should be laid back over the cable and reassembled later.
3. Remove sufficient insulation from each of the four cable ends to allow installation of the connectors.
4. The conductors are then connected by overlapping the two ends as shown in the drawing, and a Newberry clamp is installed at each of the conductor ends. This clamp has been used very successfully around mines for a number of years.
5. Remove the outer tape or braid to the dimensions shown.
6. Taper the conductor insulation on each side of the connectors as shown in the drawings.
7. Thoroughly clean the surface over which splicing gum is applied, and apply a coating of rubber cement. After the solvent has evaporated, wrap splicing gum to a diameter slightly greater than that on the original cable.
8. Cover each insulated conductor with a layer of friction tape half-lapped.
9. If the original cable is supplied with jute or rope fillers, they should be replaced in the interstices of the joint. If rubber fillers were used in the original cable, they should be replaced by rubber fillers (see standard instructions for splicing portable cables in Sec. 134).
10. After the fillers have been applied, cover the insulated conductors and fillers with a layer of friction tape half-lapped and wrap with reinforcing cord (see the instructions for the splicing of standard portable cables).
11. Taper the ends of the overall jacket, thoroughly clean the entire surface which is to be covered by rubber tape, and apply a coat of rubber cement.
12. After the solvent has evaporated, apply the outer jacket with wrappings of rubber tape to the dimensions that are shown on the drawing.
13. Vulcanize the joint.

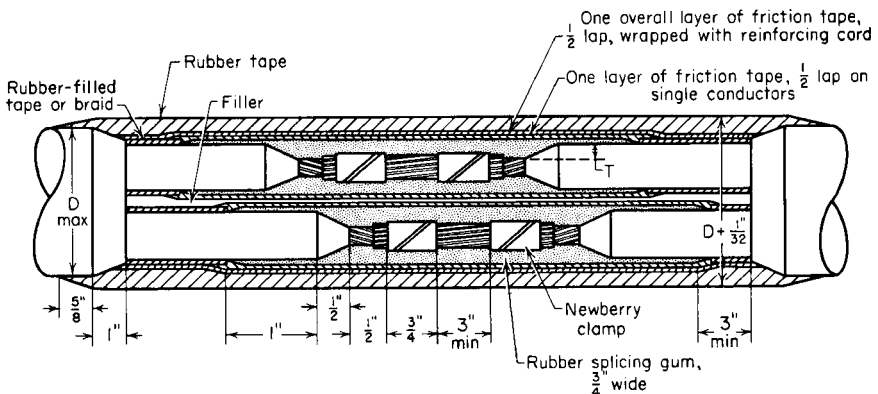


FIGURE 2.25 Nonsoldered two-conductor (flat) cable joint. [General Electric Co.]

136. Vulcanizers are easy to operate and can be used very successfully by people with little experience. These instructions should enable anyone to operate the average steam vulcanizer without trouble. Steam vulcanizers are generally shipped without water in the jacket. The user should make sure that the water is placed in the unit to the proper level before the vulcanizer is employed.

Most units are equipped with a relief or safety valve. This valve is set to “pop” at a given pressure. It can be adjusted by removing the top and tightening the screw to increase pressure or loosening the screw to lower the pressure. The pressure control can be set to open at from 30 to 65 lb (206,843 to 448,159 Pa) pressure and to close at from 25 to 60 lb (172,369 to 413,685 Pa). This control can generally be adjusted by tightening or loosening the control-spring tension in the same way as the relief valve is adjusted.

The heaters should always be covered with water to prevent their burning out. If no steam is escaping anywhere, a filling of water should last a considerable time even when used daily. The water should normally be checked about once a week. The vulcanizer should be placed in a practically level position while the current is connected; otherwise the water may drain away from the immersion heaters.

Most steam vulcanizers are operated with electric-heating units, but any form of heat can be used, provided it can be carefully controlled so that a constant heat is applied to the joint to be vulcanized. Gas furnaces and blowtorches have been successfully used.

137. General instructions for operation of vulcanizers. Three factors are essential for the successful vulcanizing of rubber-jacketed cables: time, temperature, and cleanliness.

138. The time required to vulcanize rubber is approximately 20 min; however, not every vulcanizing job can be done in this time. First, the mass of rubber, cable, and copper conductors must be brought up to temperature before the cure begins.

The outer rubber that comes in direct contact with the mold begins to cure before the inner mass, but the work must be left in the vulcanizer long enough to cure all the rubber. Therefore, the time will vary considerably, depending on the volume to be heated and the temperature of the work before it is put into the vulcanizer. For instance, in winter a cable brought into a shop or repaired outdoors will require more time than if vulcanized in the hot summer. Also, a large cable will require more time than a small one. With these factors in mind, it is readily seen that a definite time schedule cannot be set forth.

In most cases the time will be between 30 and 45 min, although there are conditions that require 1 h or even more and others that require only 20 min.

The exact length of time for curing is not known. In the first place, there is no positive schedule to follow. After a few jobs have been done, the time can be estimated. It is best to leave the first few jobs in slightly longer than might seem necessary to be sure of a full cure. Then reduce the time as you gain experience. An approximate schedule for a novice is as follows:

<i>Cable Size, In</i>	<i>Time, Min</i>
$\frac{3}{4}$ and smaller	20
$\frac{3}{4}$ – $1\frac{1}{4}$	25
$1\frac{1}{4}$ – $1\frac{3}{4}$	30
$1\frac{3}{4}$ – $2\frac{1}{4}$	35
$2\frac{1}{4}$ –3	40
3– $3\frac{1}{2}$	50

This schedule is an estimate for complete splices. When only small patches are made, the time will be somewhat less, as the small volume of new rubber and the adjacent old rubber are quickly brought up to temperature and may be cured before the mass of cable has been fully heated.

Care must be taken not to undercure a joint because undercured rubber deforms easily and therefore makes a poor joint from the standpoint of abrasion. A simple method of determining an undercure is to cut in two a piece of the surplus fin; if the fin will stick together where it was cut, the joint was undercured. Because the fin is thin, it will always cure first. Therefore, the fin might be overcured, but the joint itself might still be undercured. This does not necessarily mean an unsatisfactory job but is mentioned simply as an aid to the operator.

139. Temperature for vulcanizing. The controls on vulcanizers are set to open at from 30 to 65 lb (206,843 to 448,159 Pa) steam pressure and close at from 25 to 60 lb (172,769 to 413,685 Pa). This range under ordinary conditions provides a sufficiently accurate temperature for curing the rubber.

About the only condition that might require any change would be subzero weather during which the vulcanizer itself is exposed. In such cases the radiation is so severe that it may be necessary to increase the pressure by adjusting the control. Since cables are usually repaired indoors, however, extremely cold weather is seldom a factor.

140. Cleanliness in vulcanizing. The important reason for vulcanizing electric-cable splices is to make them watertight and give them added strength. Obviously, it is necessary for the applied rubber to mold into a solid mass and to stick to the old cable jacket.

One of the chief aids in obtaining these results is keeping the work clean. Oil or grease is known to be detrimental to rubber, and dust or dirt on the surface of the rubber being applied is likely to prevent its molding together. When new rubber is applied to the old cable jacket, it must be absolutely clean to obtain adhesion.

141. How to patch a jacket. The amount of work to be done depends on the extent of the injury. For instance, in many cases a small cut can be patched simply, whereas a severe injury may require the removal of the portion of jacket that is injured and replacing this portion with new rubber. In any case, thoroughly inspect the conductor insulation at the injury to be sure it is not also injured. If it is, the jacket should be removed for a sufficient length to repair the conductor insulation properly. It may be necessary to make a complete splice.

To vulcanize new rubber to old rubber, it is necessary to roughen the old rubber and scrape or grind off any old scale or coating at the place where the new rubber is expected to stick. The old rubber should also be prepared for 1 in (25.4 mm) around the injured spot.

When the jacket must be removed, it will be found easier to clean and roughen the cable for about 2 in (50.8 mm) each way beyond the portion to be removed before cutting it out.

Two kinds of rubber are used in the repair of electric cables: jacket rubber and insulating rubber. Insulating rubber is used only for conductor insulation. Jacket rubber is used for all outside work.

When new rubber is applied to the old, proceed as follows:

1. Clean and roughen old rubber as described previously.
2. With naphtha or benzol, thoroughly clean the areas where the rubber is to be applied and allow them to dry.

3. Brush rubber cement over the surfaces to which the new rubber is expected to stick, as well as an inch or so beyond. Allow the solvent to evaporate.
4. Apply new rubber, which is supplied in tape form. If the rubber is wrapped tightly and evenly, all air is excluded, and the new rubber need not be built up much larger than the mold. Only a little experience is necessary to demonstrate how much rubber to apply.
5. The repair is now ready to vulcanize. Naturally a suitable mold must be on hand. Molds are made in several types and sizes to fit the particular joint in question.

The proper mold should be hot when ready to use. Swab or brush sparingly an application of mold dressing in the mold before putting in the job.

Shut the mold to within $\frac{1}{16}$ in (4.23 mm) of being closed, depending on the size of the cable, and allow to set for about 5 min to permit the rubber to soften; then close the mold. When this procedure is followed, there is a better chance of filling out low places due to unevenness in wrapping. Furthermore, when a complete splice is made, there may be a distortion of core assembly if full pressure is applied before the rubber is allowed to soften.

6. After curing, remove from the mold, cut off surplus fins, apply wax, and the job is finished. The joint should be allowed to cool somewhat before it is removed from the mold.

142. Temporary vulcanizing equipment. Frequently it is necessary to vulcanize a cable joint in the field, and no equipment is available. To cope with this condition, temporary vulcanizing equipment can be constructed.

An open-top vat of suitable size should be obtained. This vat should be large enough to allow the entire joint to be submerged in heated liquid in the vat when the spliced cable is placed directly over the vat, allowing the cable joint to dip into the vat.

Paraffin is generally used in the vat for the vulcanizing medium, but any wax with a high enough boiling point could be used. In no case should oil be used.

After the joint has been constructed in the usual manner, it should be placed in a suitable mold. There are a number of different molds that can be easily constructed.

1. Split a piece of pipe which has approximately the same inside diameter as the completed splice. The two pieces of pipe should be held tightly on the joint by wrappings of wire or metal tape or by standard U clamps.
2. In a metal block, drill a hole of approximately the same diameter as the splice. Split the block in half, and place it over the joint. The two halves of the block should be held tightly together by bolts or acceptable clamps.

If possible, the molds should be heated up to about 275°F (135°C) before they are placed over the joint. The inside of the molds should be coated with an approved mold dressing to obtain the best and most workmanlike finished splice.

143. The procedure to follow in vulcanizing a joint with the equipment of Sec. 142 is as follows:

1. Make up the joint in the usual manner.
2. Preheat the molds if possible up to 275°F (135°C), coat them with a mold dressing, and clamp them over the joint.
3. In the meantime, the paraffin in the vat should be heated and held to from 275 to 300°F (149°C) by satisfactory heating equipment. Blowtorches or gas furnaces can be used for

this purpose, as can any available heating equipment which will hold these temperatures satisfactorily.

4. Place the joint in the heated paraffin, bearing in mind that the entire joint and mold are submerged in the liquid.
5. Hold the joint in this medium for a period of time depending on the size of joint involved and the thickness of rubber to be vulcanized, keeping the temperature of the paraffin as nearly constant as possible. The approximate time required to vulcanize the joint is listed in the steam-vulcanizer instructions. The exact time for curing a splice can best be obtained by experience with the particular equipment used.
6. When the splice has been cured, it should be removed from the vat and allowed to cool for some time before removing the mold.

It is natural that perfect results cannot be obtained with this temporary equipment, but a number of splices have been vulcanized by this method, and all have operated satisfactorily when properly made.

The mold dressing generally used is a saturated solution of soap chips.

144. Terminal connections of conductors should be made by means of solder lugs or solderless connectors, except that 10 AWG or smaller conductors may be connected to binding posts by clamps or screws, provided the terminal plates of the binding parts have upturned lugs. The upturned plates are necessary so that the wires will not be forced out of place as the screw or nut is tightened.

145. The correct method of "making up" a lead wire around a binding post is shown in Fig. 2.26. First, an eye, of such internal diameter that it will slip over the post, is bent with pliers in the bared-and-cleaned end of the lead wire, as illustrated at I. Then the eye is dropped down over the post (III) in such a position that rotation of the bolt or nut in tightening will tend to wrap the eye and around the post rather than to unwrap it. That is, the eye should wrap around the post in a right-handed direction, in the same direction as that in which the nut rotates while being turned on. If the eye is laid on left-handed as at II, it will unwrap and open while the nut is being turned tightly down on it.

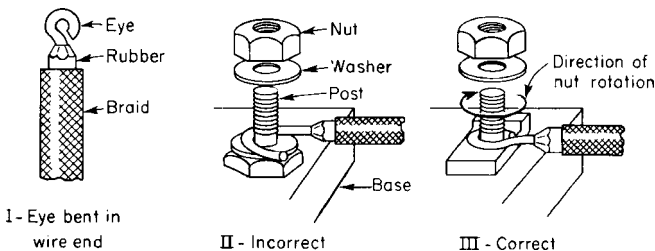


FIGURE 2.26 How a wire should be "made up" on a binding post.

146. Soldering wires in terminal lugs. If many lugs are to be soldered, a convenient and timesaving method of making the connections is to melt a pot of solder over a plumber's furnace, heat the lug in the solder, pour the solder in the hole in the

lug, and then plunge the bared end of the conductor into it, as shown in Fig. 2.27. The insides of the holes of many commercial lugs are “tinned” so that the solder adheres to them readily. The bared end of the conductor should also first be tinned. This may be done as follows. The end of the wire is carefully scraped with a knife or with a piece of fine sandpaper (sandpaper is best because it cannot nick the wire) and then smeared with soldering flux and thrust into the solder pot. If a soldering stick is used, the wire must be heated in the solder before the stick compound will melt and adhere. It requires only a short time to tin the wire end in the pot.

NOTE: Immediately after the tinned end is pushed into the hold in the lug, the lug should be soured with a piece of wet waste to cool it rapidly. Scrape or file off any shreds or globules of solder that adhere to the exposed surfaces of the lug and brighten it with fine sandpaper if necessary.

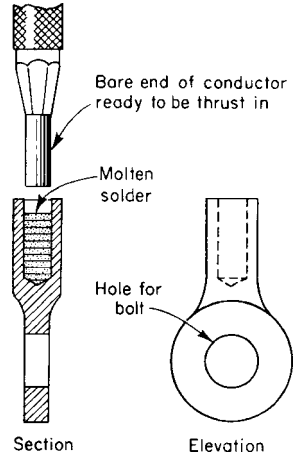


FIGURE 2.27 Soldering wire to lug.

147. In skinning a wire end which is to be soldered into a lug, the insulation

should be cut back just far enough so that it will abut against the shoulder of the lug, as suggested in Fig. 2.28, I. The appearance is very unsightly and indicates careless work if there is a gap between the shoulder and the insulation, as at II. If because of some mishap a connection has the appearance of II, a partial correction can be made by filling the gap with servings of tape, as shown at III. Tape of standard $\frac{3}{4}$ -in (19.1-mm) width should be torn into strips about $\frac{1}{4}$ in (6.35 mm) wide before applying.

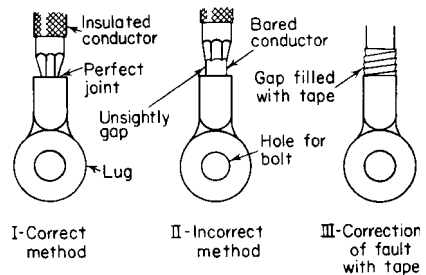


FIGURE 2.28 Finished connections.

148. Only enough molten solder should be poured into the hole in the lug to fill it almost to the brim when the conductor is in position. If too much is poured in, it will be squeezed out by the wire and will flow over the lug. It must then be removed at a sacrifice of time.

149. To ensure proper adhesion between wire, solder, and lug, the temperature of all three must be above the melting point of solder when they are brought together in soldering. If this condition is not fulfilled, only a good friction fit of all three parts will result. Such a friction fit does not afford a good electrical connection. To secure maximum mechanical strength and electrical conductivity, it is essential that the solder be maintained at the melting point until it has thoroughly permeated the interstices of the conductor.

150. The wire terminal and lug should be held in the molten solder until they acquire the temperature of the solder. To prevent adhesion of solder to the outside of the lug, a light oil or possibly soft soap should be applied to its outer surfaces.

Be careful to see that no oil is permitted to reach the inside of the lug. When holding the bared ends of heavy conductors in the solder pot, it is advisable to wrap the insulation with a rag previously wrung out in cold water to prevent, insofar as possible, the melting of the insulating compound and the consequent smearing of the terminal. Such smearing will not impair the effectiveness of a properly made joint, though it will detract from the appearance of the finished job.

151. Another method of soldering wires in lugs is to heat the lug with a blowtorch flame. When the lug is sufficiently hot, wire solder is fed into the hole. The solder melts and the bared conductor end is then thrust into it, as described above. However, the use of a blowtorch in this way should be avoided if possible, as it blackens the exposed surfaces of the lug. Cleaning with fine sandpaper is then necessary, and it requires considerable time.

152. Some suggestions for handling liquid-fueled blowtorches. Only the very best grade of gasoline should be used, and it must be clean and be kept in a clean can; otherwise the burner will become clogged. Never try to fill a torch from a big can. A pint or quart receptacle should be used for this purpose. If this is done, the torch can be held in one hand and filled with the other without danger of overfilling or spilling. The torch should be a little more than two-thirds full, so that there will be room for sufficient air to prevent the necessity of frequent repumping to maintain the pressure. See that the filler plug is closed tight to prevent the escape of air from tank. The fiber washer under the plug must be replaced when worn out. Common washing soap rubbed into thread and joints will stop leaks. The pump should be in good working order; a few drops of lubricating oil well rubbed in will soften the pump washer. Do not turn the needle valve too tight, as there is danger of enlarging the orifice of the burner. See that the burner is sufficiently heated when starting. One filling of the drip cup is generally sufficient if the flame is shielded from draft while heating the burner; if it is not, fill the cup again and light the gasoline as before. A long or yellow flame or raw gasoline shooting from the burner shows that the burner is not hot enough to properly generate gas. When a gasoline torch is used, as much as 90 percent of its heat may be dissipated without doing any work whatever. In performing most blowtorch operations, a great part of this heat may be readily saved by making a shield of sheet iron or asbestos to direct the heat to the object to be heated.

153. Wire connectors. The selection of proper wire connectors for various sizes, combinations, and types of conductors is an extremely important factor in a sound electrical installation.

Wire connectors are generally classified as either thermal or pressure types. Thermal connectors include those in which heat is applied to form soldered, brazed, or welded joints and terminals. Soldered joints and lugs for copper conductors have been used for many years and, except for service-wire and ground connections, are still permitted. However, soldering is rarely used in modern installations because of the greater dependability and installation ease of present-day solderless pressure connectors. And although it is possible to solder aluminum conductors, this is not recommended unless the installer is fully familiar with the special techniques involved. On the other hand, welded aluminum connections in circular-mil sizes are very satisfactory and provide the best possible joint for aluminum conductors. At the same time, this process is generally restricted to the types of installations in which the cost of the necessary equipment and skilled labor can be justified.

There is wide use of grounding grids or busing on large construction jobs, and grounding connections must be permanent in the interests of safety. For joining bare copper conductors together or to reinforcing rods, ground rods, or steel surfaces, a mold-type welding process is highly recommended (exothermic welding). This process makes use of a mold and starting and mixing powder. After conductors, sleeves, and/or lugs have been placed in the mold, a flint gun is used to ignite the starting powder. This forms a liquid copper, which fuses conductors into a solid mass and welds a permanent electrical connection. Offered by several manufacturers, the mold-type welding process can be performed easily without special training.

154. Solderless connectors. A solderless pressure connector is a device which establishes the connection between two or more conductors or between one or more conductors and a terminal by means of mechanical pressure and without the use of solder. This broad definition covers most solderless connectors and terminal lugs.

155. Twist-on pigtail connectors. The common twist-on pigtail connector (see Fig. 2.29) consists of an insulated cap made of plastic, Bakelite, porcelain, or nylon and an internal threaded core with or without a metallic coil spring. Such connectors require no hand tools and are simply twisted onto appropriate combinations of bared conductors. Connector types consisting of metallic spring coils (copper-coated or steel) are listed by Underwriters Laboratories as pressure cable connectors, which means that they can be used for connecting branch-circuit conductors 14 AWG and larger according to listed sizes and combinations. Sometimes these connectors can also be used as fixture-splicing connectors, in which case they will be dual-listed by Underwriters Laboratories.

Connectors without metallic coil springs are regarded as fixture-type splicing connectors for joining fixture wires or branch-circuit wires to fixture wires in a combination of sizes from 18 AWG to 10 AWG within the listed capacities of the connector. They are not acceptable for general use in branch-circuit wiring.

Most twist-on connectors are designed for copper-to-copper wire connections. UL has recently listed a twist-on connector suitable for aluminum to copper marked AL/CU that is very useful for retrofit applications. The connector (illustrated in Fig. 2.57) is filled with a special aluminum oxide cutting compound to prevent corrosion. The crimp-type connector (Copalum by AMP) is another UL-listed connector for splicing small copper-to-aluminum conductors, but it must be applied using special tooling provided by its manufacturer.

With twist-on-type connectors, solid conductors are inserted parallel into the connector. Then the connector is twisted to form a locking action on the conductors and provide a dependable connection. Stranded wires in smaller sizes are twisted together before the

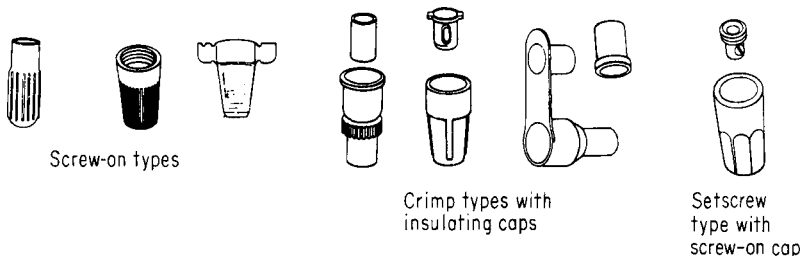


FIGURE 2.29 Typical solderless pigtail connectors. [*Electrical Construction and Maintenance*]

connector is installed. And in all cases, proper-size connectors should be selected to accommodate the size and combination of conductors involved in each splice.

Maximum voltage ratings for twist-on connectors are 600 V (1000 V inside a fixture or sign), although some types cannot be used on circuits of more than 300 V. Also, temperature ratings will vary according to the type of insulating cap. Data for voltage and temperature ratings of the various connectors can be obtained from individual manufacturers' catalogs.

156. Bolted-type pressure connectors include those for making pigtail, straight, T, or terminal connections. Such connectors depend on the applied force of bolts or screws to produce the clamping and contact pressures between conductors and the connector. Figure 2.30 shows typical examples.

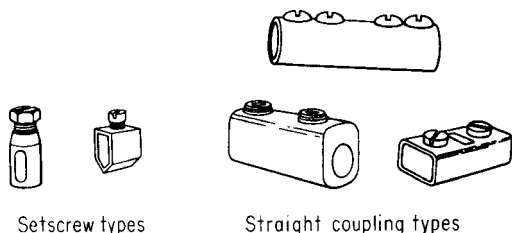


FIGURE 2.30 Typical coupling-type solderless pressure connectors. [*Electrical Construction and Maintenance*]

For making pigtail connections in wire combinations up to 10 AWG, setscrew connectors with separate insulated caps, which thread onto the connectors after securing the wires, are readily available. These connectors are used in branch-circuit wiring, fixture hanging, and equipment hookups. The only tool required is a screwdriver, and the connectors can be reused. As such, they are especially recommended in installations where wiring connections will be changed frequently. They are also useful for applications that may require circuit testing while energized, since by removing the insulating cap the connection will be completely accessible while remaining intact. Various setscrew connectors with thread-on insulated caps are suitable as pressure wire connectors or fixture-splicing connectors according to individual manufacturers' listings (see Fig. 2.29).

Other types of bolted connectors are available for practically any desired wire combinations, sizes, or arrangements. Such connectors are constructed of copper, bronze, or alloys of similar metals for use with copper conductors. Connectors for joining aluminum wires together are constructed of aluminum, tin-plated silicon bronze, or tin-plated copper-alloy materials.

If copper or copper-clad aluminum conductors will be connected to aluminum conductors, select connectors which are designed for this purpose and which provide bimetal or tinned spacers in other than dry locations. Bimetal or tinned spacers permit separation of aluminum and copper conductors, thus preventing the possibility of galvanic corrosion. Careful compliance with manufacturers' recommendations as to cleaning aluminum conductors, applying connector aids, and properly positioning the aluminum and copper conductors will provide a satisfactory joint.

157. Run and tap connectors. Many forms of bolted connectors, such as those shown in Fig. 2.31, are designed for making branch connections from main conductors. In such instances, minimum and maximum wire sizes are listed for both main and branch (tap)

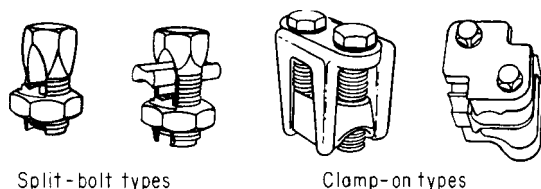


FIGURE 2.31 Typical run and tap solderless pressure connectors.
[*Electrical Construction and Maintenance*]

ranges. Such ranges in wire sizes are listed for each connector and for satisfactory connections should be carefully observed. Split-bolt, clamp-type, gutter-tap, and parallel cable-tap connectors are a few of the common types used for splicing branch conductors to main conductors. Except for the parallel cable-tap type, these connectors must be taped after the wires have been connected. Some parallel cable-tap connectors feature a two-piece molded-plastic cover that fits over the connector and covers uninsulated parts. This eliminates the time required for taping, and makes it possible to remove the connector quickly if this ability is a factor to be considered.

158. Bolted-type lugs. Wires are fastened to bolted-type lugs by one or more bolts, depending on design and ampere ratings. Two- to four-barrel lugs are used to terminate multiple conductors.

159. Terminal and power distribution blocks. If numerous connections are necessary, as in complex control circuitry, consideration should be given to the use of terminal blocks and terminal-block kits made available by a number of manufacturers. Such assemblies contain bolted-type terminal blocks. The terminal blocks can be obtained in fully assembled or individual blocks, and the terminals are available for a wide range of wire sizes. With these units connections can be made quickly, and all terminals can be readily identified, thus simplifying troubleshooting or later changes in circuitry.

Larger terminal blocks, called *power distribution blocks* in the NEC, are often positioned in wireways and similar enclosures to provide for feeder taps to equipment fed from those enclosures. The enclosure must be large enough so that the block and the terminating conductors, at any cross section, do not exceed more than 75 percent of the cross-sectional area of the enclosure. In addition, the distribution block must be so positioned that when the cables are terminated, the minimum bending space as required in NEC 312.6(B) is provided. Finally, the distribution block must be equipped with a cover so that uninsulated live parts are not exposed within the wireway, whether or not the wireway cover is in place.

160. Compression-type connectors and lugs include those in which hand, pneumatic, or hydraulic tools indent or crimp tubelike sleeves which hold one or more conductors. The crimping action changes the size and shape of the connector; and a properly crimped joint deforms the conductor strands enough to provide good electrical conductivity and mechanical strength. With the smaller sizes of solid wires, some indenter splice caps require that the wires be twisted together before being placed in the cap and crimped, whereas others are intended to be inserted parallel. The distinction will vary with the type of indentations, and the manufacturer's recommendations on the correct method of making the splice should be followed. See Figs. 2.29 and 2.34.




FIGURE 2.32
Solderless connectors of the pressure-washer type.
[Electrical Division of H. K. Porter Company, Inc.]

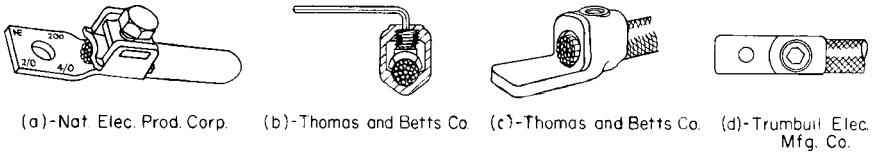


FIGURE 2.33 Solderless lugs of pressure-washer type.

One of the disadvantages of indenter or crimp connectors is that special tools are required to make the joint. However, their use can be justified by the assurance of a dependable joint and low cost of connectors.

161. Connector designations and markings. Connectors are designed for copper, copper-clad aluminum, or aluminum conductors, or for all of them. Connectors with no markings are generally suitable for copper conductors only. If a connector bears the marking AL, it is designed solely for the connection of aluminum conductors. Connectors marked AL-CU or CU-AL are for use with either copper, copper-clad aluminum, or aluminum conductors; however, a copper wire and an aluminum wire must never be in direct physical contact unless the connector has additional markings. Connectors rated for copper and aluminum wires in direct contact will say “(intermixed-dry locations)” and are limited to dry locations.

Straight coupling connectors marked AL-CU are ideal if aluminum conductors are run to equipment with terminals designed for copper conductors. In such cases, a short piece of copper wire extends from the equipment terminals to one side of the straight coupling connector, and the aluminum conductor is connected to the opposite side. On the other hand, terminals in many new meter sockets, switches, and panelboards are designed for connection to either copper, copper-clad aluminum, or aluminum wires. If this is the case, a statement to that effect will appear on the inside of the enclosure, and no markings will be found on the terminals.

Wire connectors as shown in Figs. 2.30 through 2.33 have limitations with respect to their application on stranded wire. Unless provided with specific markings (such as “SOL” or “STR”), wire connectors for 30 through 10 AWG sizes can be used for both stranded and solid conductors, and wire connectors rated for 8 AWG and larger wires are for stranded conductors only. Connectors used for aluminum stranded conductors can be used for Class B



FIGURE 2.34 Typical compression connectors, crimp or indenter types. [*Electrical Construction and Maintenance*]

concentric, compressed, and unidirectional lay compact stranding. Connectors used for stranded copper terminations are suitable for Class B concentric and compressed conductors, and also Class C concentric conductors. Connectors used for compact-stranded copper are marked for that purpose either on the connector or on the smallest unit carton in which the connectors are sold.

Connectors suitable for more finely stranded conductors, such as Class H or Class M stranding, are marked with the additional stranding class designation and also the number of strands. Most listed connectors for fine-stranded conductors are in the form of crimp-on lugs, as in Fig. 2.34, that force the strand ends together into a homogeneous mass of metal.

162. Splice kits for circuits over 600 V. For electrical connections in circuits rated above 600 V, proper insulation is as important as providing the actual continuity of the current path. Splices and terminals must be made carefully in full conformity with instructions of connector manufacturers.

Several manufacturers feature splicing kits for making high-voltage splices. These kits vary according to the circuit voltage and type of cable (interlocked armor, neoprene-jacketed with or without shielding, or lead-covered) for the particular conductor insulations.

A common high-voltage connecting device is the pothead, which is used to connect cables to equipment or to other circuits. A pothead is a sealed terminal which provides connection to the conductor in the cable, furnishes moisture proofing for the conductor's insulation, and seals in cable-impregnating oil. Stress cones are also available in kit forms.

163. Splices in covered aerial conductors are made in the same manner as splices in bare aerial conductors of the same material. The splice may be covered simply with friction tape as shown in Fig. 2.35, but it is preferable to apply rubber tape covered with two layers of friction tape as shown in Fig. 2.36.




FIGURE 2.35 Western Union splice insulated with tape.




FIGURE 2.36 Splice in covered conductor.

164. Splices in steel or copper-and-steel stranded cables are generally made with seamless solderless splicing sleeves. Steel sleeves are used for all-steel wires, and either copper or steel sleeves for the combination cables.

165. Splices in copperweld or copperweld-and-copper cables are made with seamless solderless splicing sleeves. Two sleeves should be used for making each splice in extra-high-strength cable.

166. Splices in all-aluminum cable or in aluminum cable, steel-reinforced, are made by means of twisted solderless oval sleeves or solderless compression sleeves. The former joints are made with oval single-tube sleeves of seamless aluminum. For all-aluminum cables, one sleeve is sufficient for each joint. For aluminum cable, steel-reinforced, two sleeves should be used for each joint, except for Nos. 8 and 7 cables, for which one sleeve is sufficient. Two twisting wrenches (Fig. 2.37) are employed for twisting the sleeve and cable into the finished joint. The wrenches should be rotated in a clockwise direction when facing the mouth of the sleeve. Before making the joint, be sure that the inside of the sleeves and the ends of the cable are perfectly clean and free from dirt and grease. The following methods of making the joints are recommended by the Aluminum Co. of America.




FIGURE 2.37 Twisting wrench for applying aluminum twisting sleeves. [Aluminum Co. of America]

1. For aluminum cable, steel-reinforced (ACSR), sizes 4/0 to 1/0, give each sleeve $4\frac{1}{2}$ complete twists distributed as shown in Fig. 2.38. This requires setting one wrench at the inner end of each sleeve and setting the other wrench 3 times progressing toward the outer end of each sleeve. Make these in the order shown in the illustration. At the ends

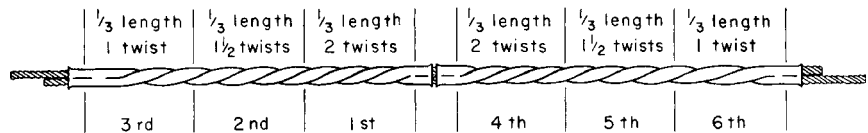


FIGURE 2.38 Joint for ACSR cable sizes 4/0 to 1/0. [Aluminum Co. of America]

of the joint the wrench should not be less than $\frac{1}{4}$ in (6.35 mm) from the end of the sleeve.

2. For aluminum cable, steel-reinforced (ACSR), sizes 1 to 6, give each sleeve four complete uniform twists, as shown in Fig. 2.39. This requires one setting of the twisting wrenches at the ends of each sleeve. The wrenches should not be less than $\frac{1}{4}$ in (6.35 mm) from the end of the sleeve.
3. For twisting joints, consisting of a single sleeve, as used on all-aluminum cables and sizes 7 and 8 ACSR, give the middle third as many complete twists as it will stand (from 2 to $3\frac{1}{2}$, depending upon the size of cable and length of sleeve). Then give each end third length one complete twist.




FIGURE 2.39 Joint for ACSR cable sizes 1 to 6. [Aluminum Co. of America]

167. Compression joints on all-aluminum cable are made by compressing a seamless aluminum sleeve (Fig. 2.40) over the butted ends of the two cable lengths. A portable hydraulic compressor and dies are required for making these joints. The following method of making a joint is recommended by the Aluminum Co. of America.

1. Impregnate the cable ends thoroughly with red-lead paint (red lead and linseed oil) by dipping them in a bucket of paint a little deeper than one-half the length of the joint.
2. Slip the cable ends into the joint, taking care that they meet exactly at the middle.
3. Compress the joint, starting at the center and working toward the ends, allowing dies always to overlap the previous position.

For old or blackened cable, each strand should be scraped or sandpapered clean. The bore of the joint is large enough to insert the end of the cable easily after the strands have been opened up, cleaned, and rearranged.

In making a repair joint between a piece of new cable and a piece of old cable, the most convenient method is first to run the end of the old cable clear through the joint, then to open up and clean the end of each strand for a distance equal to one-half the length of the joint. Replace the strands, impregnate with red-lead paint, and pull the cable back until the end is exactly in the middle of the joint. Then insert the new cable at the outer end of the joint after first removing grease from the strands and impregnating with red-lead paint.




FIGURE 2.40 Seamless aluminum sleeve for compression joint in all-aluminum cables. [Aluminum Co. of America]

168. Compression joints for most aluminum cable, steel-reinforced, consist, as illustrated in Fig. 2.41, of a steel compression sleeve (item 1) on the steel core and an aluminum compression sleeve (item 2) on the complete cable. The overall compression sleeve is fitted with two holes through which a heavy red-lead filler is injected. The holes are sealed with aluminum plugs (item 3). The following method of making a joint is recommended by the Aluminum Co. of America.

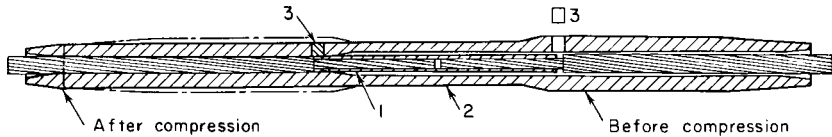


FIGURE 2.41 Compression joint for ACSR cable. [Aluminum Co. of America]

1. Before applying the joint, see that its bore and the ends of cable to be jointed are free from grease and dirt, i.e., thoroughly clean.
2. Slip the aluminum compression joint over one cable end and back out of the way along the cable.
3. Using a hacksaw, cut off the aluminum strands, exposing the steel core for a distance of a little more than half the length of the steel compression joint. Use care not to nick the steel core with the saw. Before doing this, serve the cable with wire just back of the cut.
4. Insert the steel core into the steel compression joint, bringing the ends exactly to the center.
5. Compress the steel compression joint, beginning at the center and working out toward the ends, allowing dies always to overlap the previous position.
6. Remove serving from the cable and slip the aluminum compression joint up over the steel compression joint. Center the aluminum joint by sighting the ends of the steel joint through the filler holes in the aluminum joint.
7. Using a caulking gun ($1/4$ -in. or 6.35-mm, round nozzle, maximum), inject heavy red lead (approximately 93 percent red lead, 7 percent linseed oil by weight) through both holes provided in the aluminum joint until the space between the aluminum joint and the steel joint is completely filled. This can be observed through the filling holes.
8. Insert the aluminum plugs in the filler holes and hammer them firmly in place. They will be completely locked during compression.
9. Compress the aluminum compression joint, starting at the center and working toward the ends, allowing dies always to overlap the previous position.

Some types of aluminum cable, steel-reinforced, have such a large percentage of steel that the steel compression sleeve of the above joint has a larger diameter than the complete cable. This necessitates the use of the joint shown in Fig. 2.42. One end of the overall aluminum sleeve is counterbored so that it can be slipped over the steel sleeve. The space between the counterbore and the cable is filled with a third aluminum sleeve (item 4). The procedure in making such a joint is in general the same as previously described. It is self-evident, however, that the aluminum joint (item 2) must be slipped over the cable with that end which has the smaller bore first and also that the sleeve (item 3) must be slipped on the other end of the cable—both before the steel joint (item 1) is applied. After the steel joint is applied and before the aluminum joint is slipped into place, the sleeve is slipped along until it is flush with the ends of the aluminum strands. Otherwise the procedure is the same as previously described for making compression joints in aluminum cable, steel-reinforced.

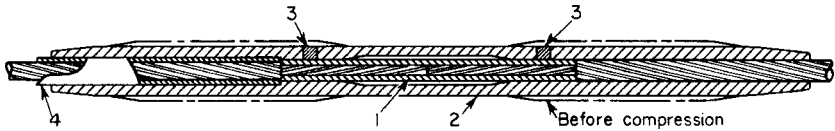


FIGURE 2.42 Compression joint for ACSR cable with large steel core. [Aluminum Co. of America]

ALUMINUM-BUILDING-WIRE INSTALLATION PRACTICES

169. Aluminum building wire (The Aluminum Association, Inc.)

A. Basic Installation Techniques

1. *Stripping insulation.* Never ring a conductor when stripping insulation. One way to avoid ringing is to pencil or whittle the insulation (Fig. 2.43). Another method is to skin the insulation back from the cut end of the conductor and then cut outward (Fig. 2.44). For the smaller sizes of wire the insulation may be removed quickly and easily by means of a wire stripper (Fig. 2.45). Be sure to match the size of notch on the stripper to the size of the wire.
2. *Splicing.* To splice two lengths of aluminum conductor use an aluminum compression-type splicing connector (Fig. 2.46). Manufacturers supply connectors filled with joint compound to seal the splice against moisture and other contaminants.

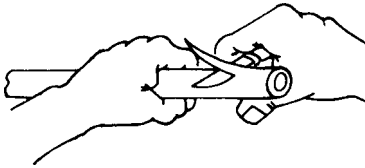


FIGURE 2.43 Never ring a cable: ringing may lead to a break. Remove insulation as you would sharpen a pencil.


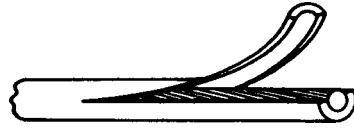


FIGURE 2.44 Another safe method of removing insulation from conductors is to peel the insulation back and then cut outward.

Compression Connectors

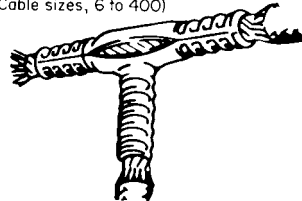Tees
(Cable sizes, 6 to 400)



Splicer
(All conductor sizes)

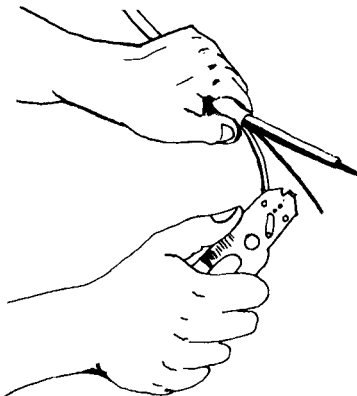


FIGURE 2.45 Use a wire stripper for removing insulation from smaller wire sizes. Match stripper notch to the wire size.

FIGURE 2.46 Splice aluminum wires with a plated aluminum compression-type splicing connector. The compound in the connector seals the joint against moisture.

First, strip the insulation from the end of each conductor by one of the methods described. Strip back far enough so that the conductor will go fully into the connector, but also make sure that the insulation fits closely to the connector.

Next, insert the stripped end of the conductor into the connection as far as it will go. Then apply the crimping tool designed for the type of connector you are using and crimp fully in accordance with the manufacturer's instructions (Fig. 2.47). Be sure to select the correct crimping tool die for the size of conductor being spliced.

Finally, wipe off any excess joint compound and apply insulating tape according to the usual procedure (Fig. 2.48 and accompanying tables).

3. Pulling conductors in conduit or electrical metallic tubing. The following procedures are applicable to conduit of all types including aluminum. (a) Run a "fish" line through the conduit, either by attaching the line to a piston-type device propelled through the conduit by compressed air or by pushing a round flexible speedometer-type steel wire through the conduit. Polyethylene fish tapes may be used for shorter runs of up to about 100 ft (30.5 m). (b) Attach a


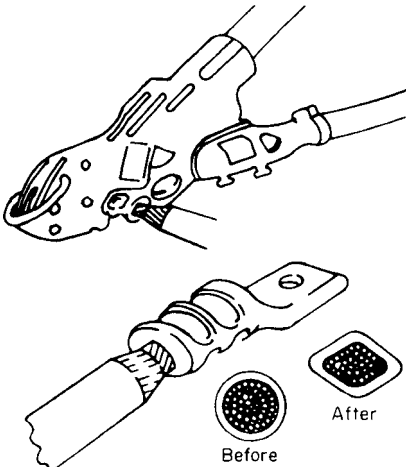


FIGURE 2.47 The crimping tool and its die must be correct for the conductor size being terminated to make a satisfactory joint. Apply enough pressure to distort all strands fully and make required number of crimps.

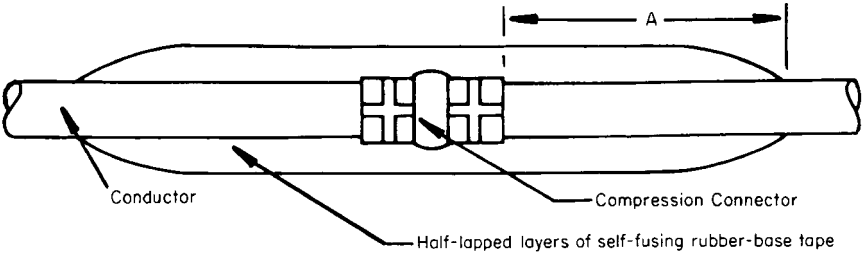

CROSS-LINKED POLYETHYLENE CABLES

Insulation thickness, in	A, in	Minimum no. of tape (half-lapped layers)
.055	2½	2
.065	2¾	2
.075	2¾	3
.085	3	3
.095	3	4
.105	3¾	4
.110	3¾	4

RUBBER-BUTYL-NEOPRENE CABLES

Insulation thickness, in	Jacket thickness, in	A, in	Minimum no. of tape (half-lapped layers)
4/64	.030	3¼	4
5/64	.045	3¾	5
4/64	.065	4	5

FIGURE 2.48 Apply insulating tape according to the usual procedure, making sure to protect the joint from physical damage.



FIGURE 2.49 Use an insulated basket grip to attach a pull line to the conductors. A bare steel grip should not be used because it will score the inside of the conduit.




FIGURE 2.50 When a rope pull must be used, skin the cable ends and stagger them after locking with tape. This procedure will hold the tie to a minimum cross section.

cleanout brush to the fish line, and behind it attach the pull line; then pull both through the conduit by means of the fish line. (c) Attach the pull line to the conductor or conductors. A basket grip over the insulation may be used provided it is of a type that will not score the conduit during the pull (Fig. 2.49). A bare steel basket grip should not be used. (d) If conductors are pulled with a rope, stagger the conductor ends and anchor in position with tape to provide maximum flexibility around bends (Fig. 2.50).

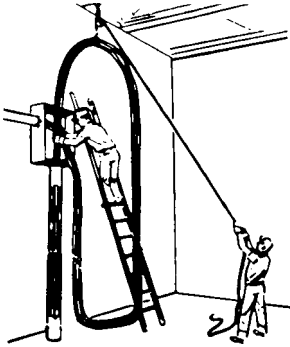


FIGURE 2.51 Plan pulls so that the cable moves downward. This will speed the work and reduce the strain on the cables and pull line.

(e) Try to feed conductors into the conduit end closest to the first bend to reduce pulling tension. (f) Use pulling equipment with adequate power available to make a steady pull on the cables without jerking. (g) Use a pulling compound compatible with the conductor insulation as the conductors are fed into the conduit to reduce the coefficient of friction and the required pulling tension. (h) For single conductors on reels, stagger reels one behind another while feeding in conduit in order to maintain equal pulling tensions and prevent conductors from crossing over and jamming in the conduit. (i) Whenever possible, pull conductors downward to allow gravity to assist in pulling with reduced tension (Fig. 2.51). (j) Arrange pulls for large conductors so that maximum pulling tension

on conductors does not exceed $0.006 \times N \times \text{cmil}$, where N = the number of conductors pulled and cmil = the circular-mil area for each conductor. (k) When conductor ends are prepared for pulling, be sure not to nick the stranded aluminum conductor during insulation removal. Damaged strands can reduce the pulling tension capabilities of the conductor. To avoid this, pencil the insulation for removal, as described above; do not ring-cut the insulation. (l) Adhere to all NEC requirements.

4. **Pulling conductors in trays.** If aluminum cable is to be pulled in trays or cable racks, take the following precautions, plus those applicable to conduit. (a) If pulling attachments are used on the conductors, cover them with rubberlike or plastic tapes to prevent scoring of the trays and installation sheaves during a conductor pull (Fig. 2.52). (b) Use lightweight (aluminum) large-radius sheaves around bends and smaller sheaves on the straight sections of cable-support trays to facilitate cable installations and to reduce required pulling tensions. (c) Maintain minimum bending radii on all cable turns, bends, and drops (see Table 171F). (d) If cables are anchored on trays, be sure that straps or other cable-anchoring devices do not cut into the insulation. (e) Conductors in the same circuit should be grouped together, but whenever possible maintain spacing between conductors in different circuits to obtain optimum current-carrying capacity and prevent hot spots. (f) Be sure that tray supports are capable of handling the maximum weight of conductors and planned conductor additions.



FIGURE 2.52 When bare steel basket grips and similar pull-line-to-cable devices must be used, cover them with plastic tape or rubberlike shields.

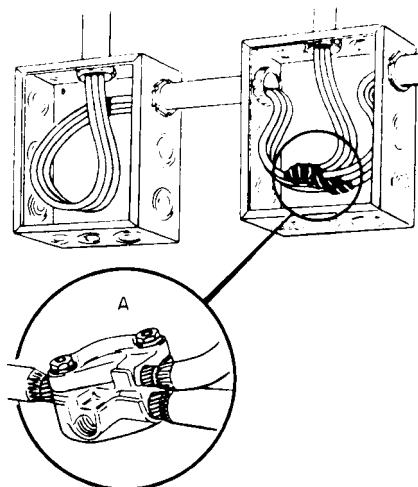


FIGURE 2.53 Use proper connectors and sufficient insulation, and leave enough slack for possible wiring changes and cable movement. The connector allows a tap without cutting the feeder (A).

If permanent bends are made at terminations in aluminum building wires, the following are the minimum recommended bending radii (see Table 171F) based on the overall diameter (OD) of insulated conductor (inches):

1.000 and less	$4 \times \text{OD}$
1.001 to 2.000	$5 \times \text{OD}$
2.001 and over	$6 \times \text{OD}$

It is recommended that such bends be made before the terminal is applied to minimize electrical-contact distortion.

5. Junction boxes. Junction boxes are used when abrupt changes in direction of conduit runs are made, to provide for expansion and contraction of the conductors upon heating and cooling, and when tap connections are to be made (Fig. 2.53). Tap connectors are described in Subsec. B.

6. Joint compound. Connections in larger-size aluminum conductors are made with the aid of joint compound, as indicated above under splicing instructions. The compound is applied to the bare conductor after it has been wire-brushed. A coating of joint compound remains on the surface of the conductor, preventing the oxide from re-forming when it is broken in the installation operation. Manufacturers usually supply compression connectors already filled with joint compound to seal the connection from moisture and other contaminants. The compound must be added to connections made with mechanical connectors.

If current density is not high, successful long-lived connections may be made in aluminum conductors in sizes used in branch circuits and in residential wiring without joint compound, although it is a preferred practice to use the compound on all connections.

The user is cautioned that two classes of joint compounds are available and that each has its own applications. The type used with connections contains small metallic particles that help penetrate the aluminum oxide. The second type of compound does not contain these particles and should be used only for flat-surface, lug-to-lug, and lug-to-bus connections.

B. Connectors. Only all-aluminum pressure-type connectors marked AL-CU to indicate that they have been tested and are listed by Underwriters Laboratories for aluminum copper, or aluminum-to-copper connections interchangeably should be used. The connectors are usually plated to avoid the formation of oxide and to resist corrosion. Copper-clad aluminum conductors in feeder sizes also require the use of UL-listed AL-CU or CC-CU connectors.

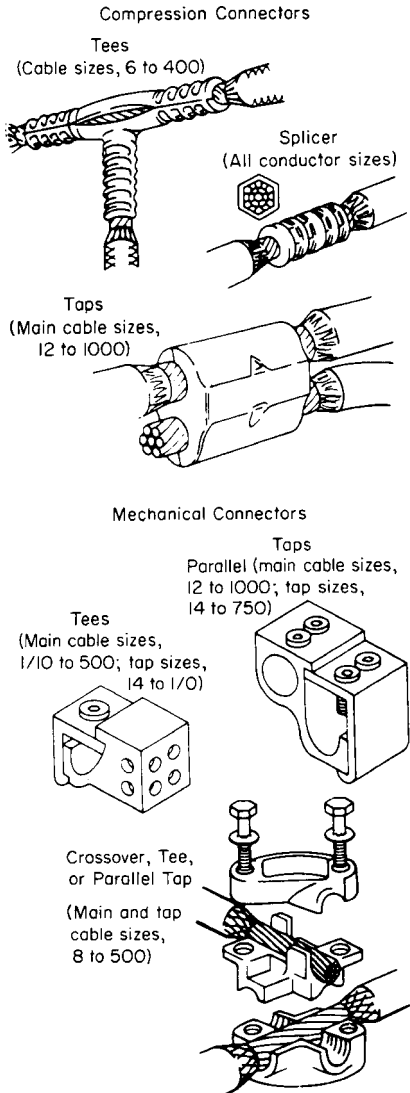


FIGURE 2.54 Connectors have been designed and manufactured for every conceivable contingency. Make sure the connector is Underwriters Laboratories-listed for aluminum.

Pressure connectors are of two basic types, a mechanical screw type and a compression type applied with a tool and die. Both are designed to apply sufficient pressure to shatter the brittle aluminum oxide from the strand surfaces and provide low-resistance metal-to-metal contact. Both basic types work reliably with aluminum, although many contractors prefer compression connectors because they are less susceptible to installation error.

Connectors for every conceivable need are available. Some typical connectors are shown in Fig. 2.54. Whichever type you use, follow the manufacturer's instructions carefully.

There are available copper-bodied connectors that carry the AL-CU designation and are tin-plated and resemble aluminum. They should not be used with aluminum conductors larger than 6 AWG. If in doubt, file the edge of the connector to see if copper shows through.

In making connections, first strip the insulation as instructed in Subsec. A1. Then apply joint compound if it is not already contained in the connector. If the connector is a mechanical screw type, apply the manufacturer's recommended torque (Fig. 2.55). If it is a compression type, crimp it as recommended by the manufacturer (Fig. 2.56). Be sure to select the correct size of die and close the tool completely for full compression. Wipe off any excess compound. Then tape the joint as instructed in Subsec. A2, or apply the insulating enclosure that comes with some types of connectors. There is now a twist-on aluminum to copper wire connector listed by UL as conforming to UL 486C that is suitable for retrofit installations. A specially formulated compound inside the connector cuts aluminum oxide and prevents corrosion. See Fig. 2.57.

Connections in branch circuits may be made with approved pigtail connectors of the crimp-on type (Fig. 2.70). No joint compound is required on such connections if load


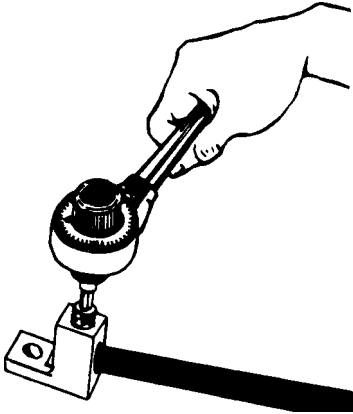


FIGURE 2.55 Proper torque is important: overtightening may sever the wires or break the fitting; undertightening will lead to overheating and failure.

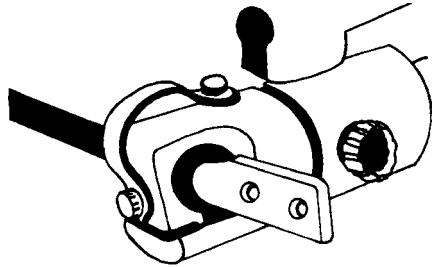

Mechanical Terminals

FIGURE 2.56 The crimping tool must be fully closed. Failure to close the tool will lead to an unsatisfactory and weak joint.




FIGURE 2.57 On the left a twist-on wire connector suitable for underground on direct burial. On the right is a UL-listed twist-on connector suitable for aluminum to copper retrofit applications. [Ideal Industries Inc.]

currents are low because of a limitation to small wire size (10 AWG maximum), although its use is preferred because it generally improves performance.

C. Terminations. Plated aluminum-bodied terminal lugs are used to connect aluminum conductors to transformers, switches, busbars, motors, and other equipment. Like connectors, they are of two basic types, a mechanical screw type and a compression type applied with tool and die. Some typical terminal lugs are shown in Fig. 2.58. They are applied to the conductor in the same manner as described above under “Connectors.”

Insist that all equipment be furnished with all-aluminum terminals that carry the UL AL-CU label. Terminals that are copper-bodied and tin-plated should not be used with aluminum conductors larger than 6 AWG.

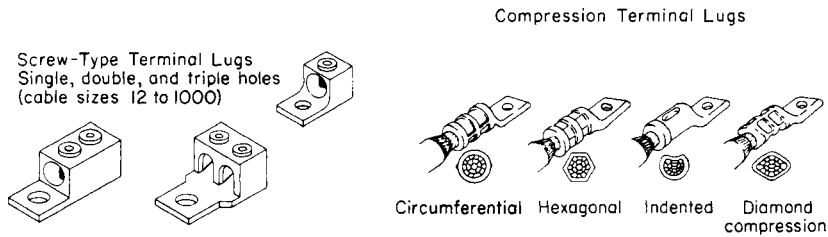


FIGURE 2.58 Typical plated aluminum terminal lugs come in a variety of styles and are applied in the same manner as standard connectors.

When all components (bus, studs, lugs) are aluminum, only aluminum bolts should be used to make the connections. The following procedures should be used. (a) Aluminum bolts should be anodized-alloy 2024-T4 and conform to ANSI B18.2.1 specifications and ASTM B211 or B221 chemical and mechanical property limits. (b) Nuts should be aluminum-alloy 6061-T6 or 6262-T9 and conform to ANSI B18.2.2. (c) Washers should be flat aluminum-alloy aluminum-clad 2024-T4, Type A plain, standard wide series, conforming to ANSI B27.2. SAE or narrow-series washers should not be used. (d) Hardware should be assembled as shown in Fig. 2.59. (e) All hardware should be lubricated with a suitable joint compound before tightening. (f) Bolts should be tightened to the manufacturer's recommended torque. In the absence of such recommendations, torque values listed in NEMA CC-1 should be used. See Table C-1.

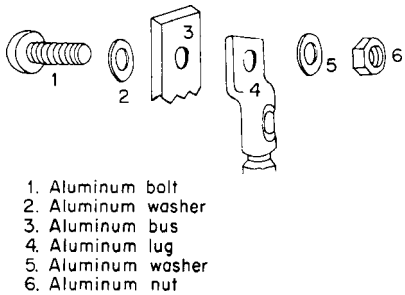


FIGURE 2.59 When all components are aluminum, aluminum hardware should be used and installed as shown.

TABLE C-1

Diameter of bolt, in	Nominal torque	
	ft/lb	in/lb
3/8 (L)	19	228
1/2 (L)	40	480
5/8 (L)	55	660

NOTE L = lubricated.

TABLE C-2

Belleville			
Bolt size, in	Diameter, in	Thickness, in	Nominal load, lb, to flatten
1/4	11/16	0.050	800
5/16	13/16	0.060	1000
3/8	15/16	0.070	1400
5/8	1 3/16	0.085	2700
1/2	1 1/2	0.100	4000

NOTE Material is hardened steel; finish, cadmium plate.

If you are adding to an existing installation containing copper bus or studs or if it is impossible to obtain the required equipment with aluminum terminations, use a steel bolt with a Belleville spring washer to allow for the differing rates of thermal expansion of the materials. The following procedures should be used. (a) The steel bolt should be plated or galvanized, medium-carbon-steel-heat-treated, quenched, and tempered equal to ASTM A325 or SAE Grade 5. (b) Nuts should be heavy semifinished hexagon, conforming to ANSI B18.2.2, the thread to be unified coarse series (UNC), Class 2B. (c) Flat washers should be steel, Type A plain standard wide series, conforming to ANSI B27.2. SAE or narrow-series washers should not be used. (d) Belleville conical spring washers come in sizes for use with bolts ranging in sizes indicated in Table C-2. (e) Hardware should be assembled as shown in Fig. 2.60. (f) All hardware should be lubricated with a suitable joint compound before tightening. (g) Bolts should be tightened sufficiently to flatten the spring washer and be left in that position.

With equipment having terminals that will accommodate only copper conductors, a “gutter” splice may be used to connect the aluminum conductor. The aluminum conductor is spliced to a short length of copper conductor, and the copper-conductor stub is then connected to the equipment terminal (Fig. 2.61). An AL-CU compression-type connector is used to make the splice.

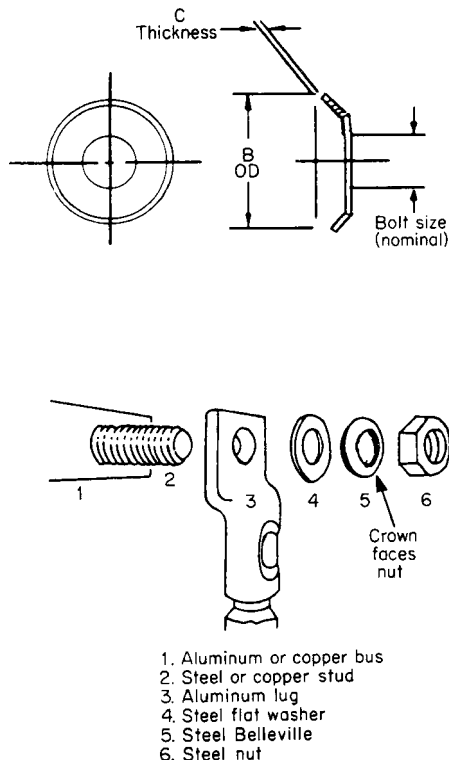


FIGURE 2.60 A Belleville spring washer is used to make an aluminum-to-copper or steel joint. Note that the crown of the washer should be under the nut.

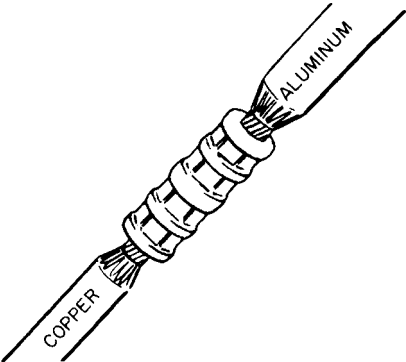


FIGURE 2.61 A gutter splice is used when the terminal lugs are not removable and are approved for copper-cable connection only.

Wiring devices on branch circuits having ratings not exceeding 35 A usually are furnished with binding-screw terminals.

The installation of aluminum nonmetallic sheathed cable (Type NM) for branch circuits in buildings is the same as for residential wiring, which is covered in Subsec. 171E.

Figures 2.62 to 2.68 show typical connections of aluminum conductors to equipment terminals.

D. Service Entrances

1. *Industrial.* With the aluminum service-drop cable in general use today, the connection of the service cable to aluminum service-entrance conductors requires only simple splices made as described in Subsec. A2, “Splicing.” Connection of aluminum service-entrance conductors is made in the same manner when copper service-drop cable is still in use. In that case be sure to use compatible aluminum-bodied connectors.

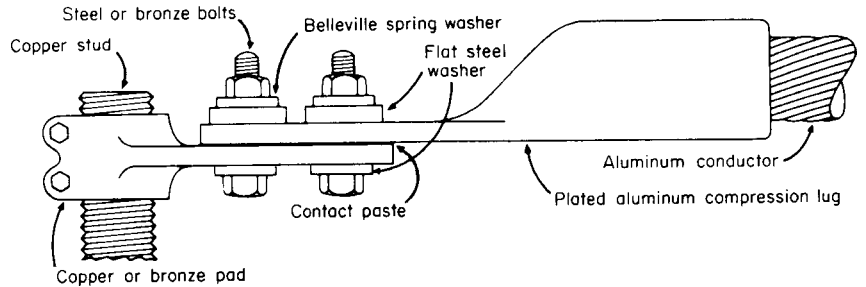


FIGURE 2.62 Method of connecting large aluminum conductors to equipment studs or terminal pads made of copper. If the bolts are made of aluminum, it is not necessary to provide the Belleville-spring washer.

TABLE C-3 Bolt Loading

Bolt size, in	Current capacity, A
$\frac{3}{8}$	225
$\frac{1}{2}$	300
$\frac{5}{8}$	375
$\frac{3}{4}$	450

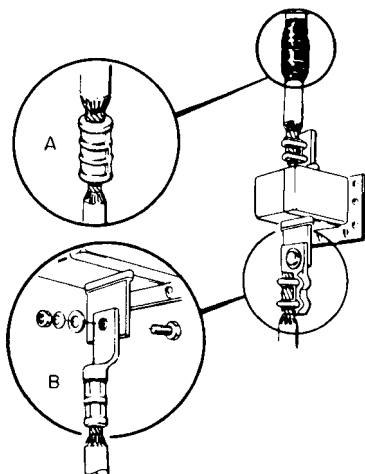


FIGURE 2.63 Where possible, current transformer terminals should be replaced with a compression type (B). If they cannot be removed, a section of copper cable should be spliced to aluminum (A).

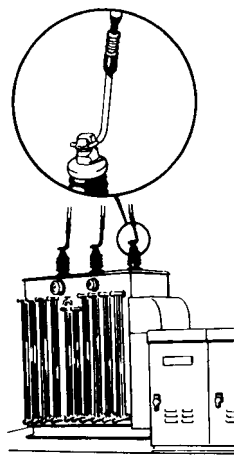


FIGURE 2.64 Copper power transformer terminals require a short copper stub spliced to aluminum cable.

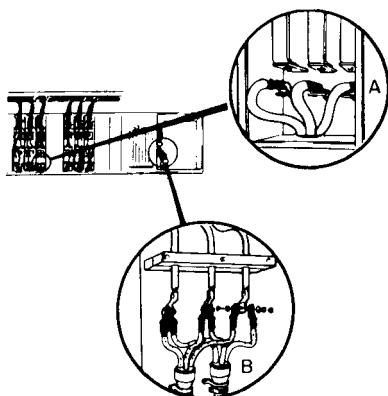


FIGURE 2.65 When connecting aluminum conductors to a unit substation with copper bus, use compression-type aluminum lugs attached with a Belleville washer (A). Copper primary leads on the transformer are connected to aluminum feeders in aluminum connectors and bolted back to back with Belleville washers (B).

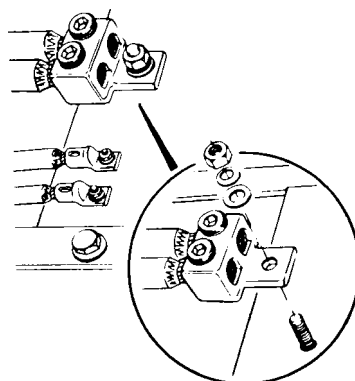


FIGURE 2.66 Copper lug connections on switchgear are replaced with equivalent aluminum connectors by using double-barrel lugs. A Belleville washer is used with copper or steel studs.

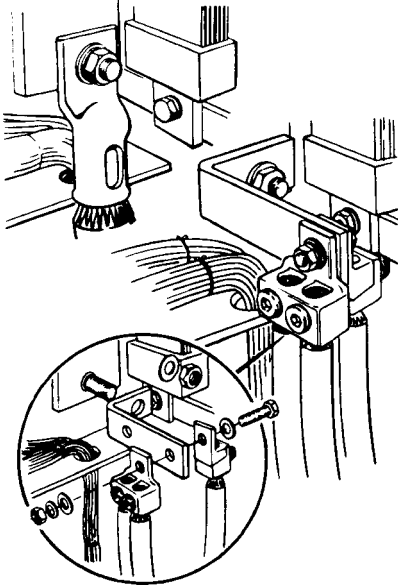


FIGURE 2.67 Copper terminations on switch connections may be replaced with aluminum by using smaller multiple aluminum conductors to reduce the voltage drop and increase the current-carrying capacity.

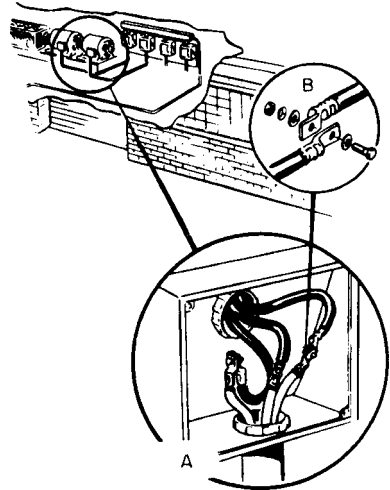


FIGURE 2.68 Three methods of making motor connections are shown in (A). All terminals are preferably aluminum. If the bolt is steel or copper, a Belleville washer is necessary (B).

Underground service cable also is largely aluminum today. This is true of both small- and medium-size services at secondary voltages as well as of large installations with transformers or unit substations supplied at primary voltages. A typical medium-size service entrance is shown in Fig. 2.69.

2. Residential. The connection to service-drop cable in residential services is made in the same manner as in small industrial or commercial service entrances. Type SE aluminum cable is used for this purpose and is connected to the utility service drop with splicing connectors, as described in Subsec. A2.

The size of service-entrance cable to be used depends on the load to be served. The 2008 NEC requires at least 100-A service for all single-family residences, which requires as a minimum 2 AWG aluminum SE cable. The NEC requires that service-entrance cable be not smaller than 6 AWG, except in certain light-load installations. In any event, the size of service-entrance cable should be chosen in accordance with NEC requirements and the installation made in the manner required by local codes. In most areas local code bodies have adopted the NEC for electrical installations.

Meter boxes and service panels are generally available with aluminum ALCU terminals, and aluminum service-entrance cable may be connected directly to these.

With equipment having terminals suitable only for copper cable, a gutter splice may be used to connect the aluminum cable, as described in Subsec. 171C, "Terminations."

E. Circuit-Size Wiring. Because of reports of field failures originating at receptacle outlets wired with aluminum and a subsequent investigation indicating the apparent cause of many to be insufficient tightening of binding screws at the time of installation, UL revised

the requirements for solid aluminum conductors in November 1971. UL also instituted new requirements and new testing procedures for wiring devices for use with circuit-size aluminum conductors.

One of the basic requirements for both wire and devices is a critical heating test of 500 four-h cycles with high overload currents. The new tests were designed to simulate field conditions with marginal workmanship. A 20-A device is tested on cyclic loads of 53 A, with binding screws tightened to a low torque of only 6 lb · in. Solid aluminum 12 AWG conductors are tested at 40 A (267 percent of rated load), with binding screws tightened to 6 lb · in.

Solid aluminum-alloy conductors must meet these requirements before receiving UL listing as "insulated aluminum wire." Devices which pass the revised UL requirements are rated CO/ALR and carry that marking on the mounting strap. Field reports confirm the reliability of the new, more flexible alloy wire and the CO/ALR switches and receptacles. Only these products should be used in aluminum 15- and 20-A branch-circuit wiring.

Pigtailing Method. Pigtailing, either field- or factory-wires, as illustrated in Fig. 2.70, is recognized by the NEC.

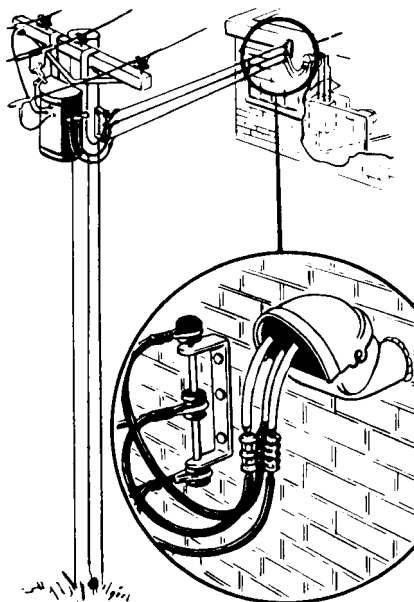


FIGURE 2.69 Most service-drop cables are now aluminum; they may be quickly field-spliced to aluminum service-entrance cable with a variety of compression connectors. A drip loop should be provided. If either the service-drop cable or the service-entrance cable is copper, the aluminum should always be higher than the copper.



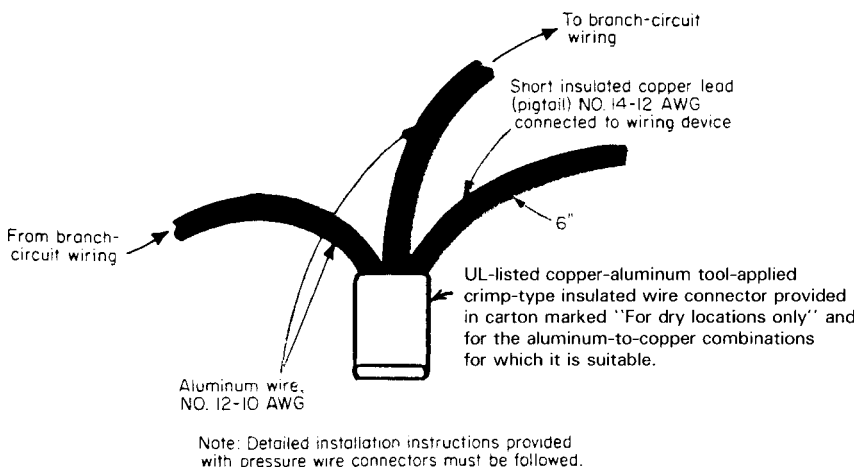



FIGURE 2.70 Pigtailing copper-to-aluminum conductors.

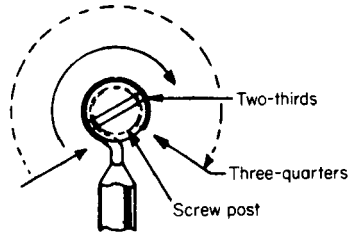

Step A: Strip and wrap wire

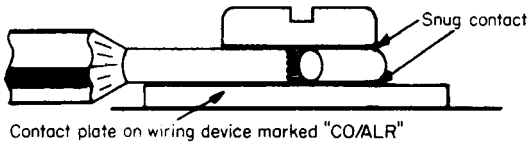

Step B: Tighten screw to full contact

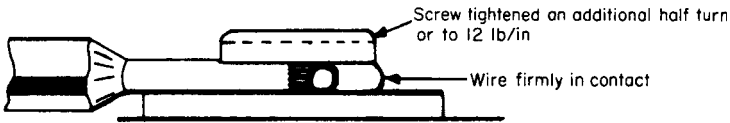

Step C: Complete connection

FIGURE 2.71 Correct method of terminating aluminum wire at wire-binding screw terminals of receptacles and snap switches. [Underwriters Laboratories Inc.]

The correct method of terminating aluminum wire at a binding screw (Fig. 2.71) is as follows. (a) Wrap the freshly stripped end of the wire two-thirds to three-fourths of the distance around the wire-binding screw post as shown in Fig. 2.71A. The loop is made so that the rotation of the screw in tightening will tend to wrap the wire around the post rather than to unwrap it. (b) Tighten the screw until the wire is snugly in contact with the underside of the screw head and with the contact plate on the wiring device as shown in Fig. 2-71B. (c) Tighten the screw an additional half turn, thereby providing a firm connection. If a torque screwdriver is used, tighten to 12 lb · in (see Fig. 2.71C). (d) Position the wires behind the wiring device so as to decrease the likelihood of the terminal screws' loosening when the device is positioned into the outlet box.

Figure 2.72 illustrates incorrect methods for connection that should not be used. In the following types of devices the terminals should not be connected directly to aluminum conductors but may be used with UL-labeled copper or copper-clad conductors: receptacles and snap switches marked "AL-CU"; receptacles and snap switches having no conductor marking; receptacles and snap switches having back-wired terminals or screwless terminals of the push-in type.

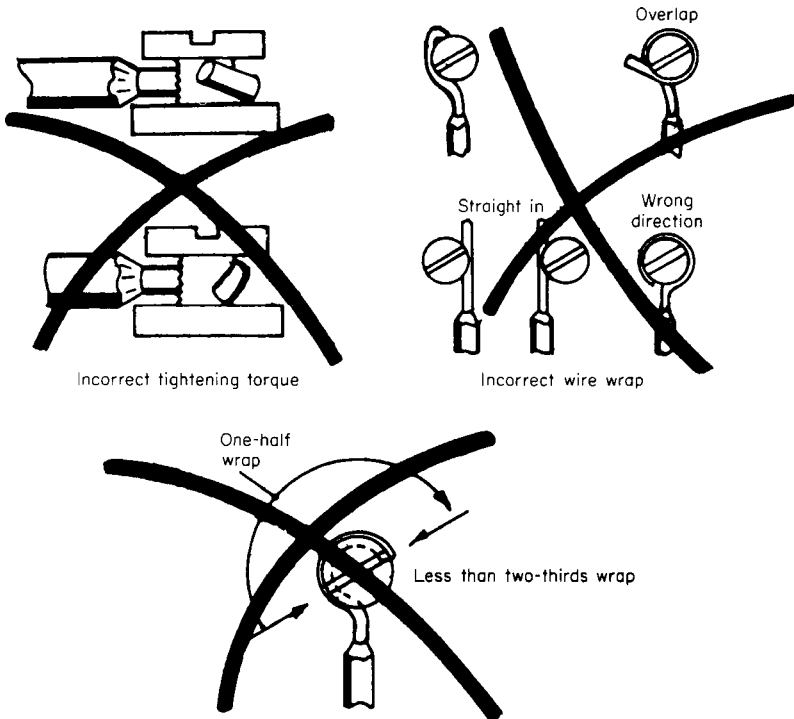


FIGURE 2.72 Incorrect methods of terminating aluminum wire at wire-binding screw terminals of receptacles and snap switches. [Underwriters Laboratories Inc.]

The new CO/ALR marking applies only to 15- and 20-A wiring devices such as receptacles and switches. All other devices such as circuit breakers, fusible protection, and oven or dryer receptacles continue to be marked AL-CU when approved for use with aluminum.

You may be called upon to inspect homes wired with aluminum between 1965 and 1972 to determine whether or not the installation is functioning satisfactorily. If examination discloses overheating or loose connections, it is advisable to replace the older receptacles with new devices carrying the CO/ALR marking. The UL-listed crimp-on compression tool (Copalum by AMP) may be used. See Fig. 2.70.

169F. Bending Radii for Cable Not in Conduit or on Sheaves or While under Tension

Power cables without metallic shielding or armor

The minimum recommended bending radii as multiples of the overall cable diameter given in the following tabulation are for both single and multiconductor cable with or without lead sheath and without metallic shielding or armor.

Thickness of conductor insulation, 64ths in	Minimum bending radius as multiple of cable diameter; overall diameter of cable, in		
	1.00 and less	1.01 to 2.00	2.00 and over
10 and less	4	5	6
11 to 20	5	6	7
21 and over		7	8

Power cables with metallic shielding or armor

- a. *Interlocked armored cables.* The minimum recommended bending radius for all interlocked armored cables is in accordance with table but not less than 7 times the overall diameter of the cable, except as noted in (c) for shielded cable.
- b. *Flat-tape- and wire-armored cables.* The minimum recommended bending radius for all flat-tape-armored and all wire-armored cables is 12 times the overall diameter of the cable.
- c. *Shielded cables.* For all cables having metallic shielding tapes the minimum recommended bending radius is 12 times the overall diameter of the completed cable.
- d. *Wire-shielded cables.* Wire-shielded cables should have the same bending radius as power cables without metallic shielding tape.

NOTE Reprinted in whole or in part from ICEA S-66-524, NEMA WC-7.

TERMINATION AND SPLICE KITS

170. All-tape and tape-cast termination and splices (3M Company). The 3M system for splicing and terminating consists in part of a series of engineered drawings for splicing and terminating power cables. These data sheets contain data for splicing and terminating solid dielectric shielded power cable, as shown in Fig. 2.73. The designs include all-tape and tape-cast (tape-resin) in-line and T splices for 5- to 25-kV cable, all-resin in-line and T splices for 5- to 8-kV cable, and all-tape terminations for 5- to 25-kV cable, copper or aluminum conductors from 8 AWG to 2500 kcmil. Each engineered drawing includes comprehensive, step-by-step installation instructions and complete bills of materials and dimensions.

The application of these data sheets is for splicing and terminating 5- to 25-kV (up to 8-kV for all-resin splices) metallic and wire shielded-type power cables from 8 AWG to 2500 kcmil copper or aluminum conductors on the following solid cables: polyethylene (high- and low-density), cross-linked polyethylene (XLP), ethylene propylene rubber (EPR), and butyl rubber.

Splices and terminations for shielded cable operating from 5000 to 25,000 V (to 8000 V for all-resin splices) shall be made by using tape and/or materials in accordance with drawings engineered by the manufacturer of the splice material. The terminations, as constructed according to these designs, shall meet all the design dielectric requirements of the IEEE 48-1990 standard for potheads. The splices, as constructed according



FIGURE 2.73 Shielded cable. [3M Co.]

to these designs, shall meet the requirements of the IEEE standard for power-cable joints. All splices and terminations constructed according to these designs must be able to be hipotted (submitted to a high-voltage test) according to ICEA standards S-66-524 and S-19-81.

Splices and terminations for metallic shielded-type cables, operating from 5000 to 25,000 V (to 8000 V for all-resin splices), shall be made by using materials in accordance with drawings engineered by the manufacturer of the splice material, such as the 2047 splice and termination drawing series available from the 3M Company. In-line splices shall be made according to engineering drawing 2047-A-1, 2047-K-4, or 2047-X-1; T splices shall be made according to engineering drawing 2047-C-2, 2047-M-2, or 2047-Y-1; and standard terminations shall be made according to engineering drawing 2047-B-2. In areas where space is limited, terminations shall be made according to engineering drawing 2047-B-16.

The tape and tape-cast 3M systems for splicing and terminating designs can be used on cables with a rated operating temperature of 90°C and an emergency overload rating of 130°C.

All termination designs meet the design dielectric requirements of the IEEE 48-1990 standard for potheads. All splice designs meet the requirements of the IEEE standard for power-cable joints. All splices and termination made according to these designs may be dc-hipotted according to ICEA standards S-66-524 and S-19-81.

171. In-line splicing kits for 15-kV and 25-kV URD cable (3M Company: see Fig. 2.74). These are specifically engineered for direct-burial URD applications. Quick-Splice accommodates a wide variety of cable types, both 15-kV and 25-kV, for use with nominal 175- to 280-mil (4.45- to 7.11-mm) polyethylene and cross-linked polyethylene (XLP) or ethylene propylene rubber (EPR), insulated concentric neutral (URD) cable, aluminum or copper, stranded or solid conductor. Its application range is as follows: 15 kV, from 2 AWG to 750 kcmil; 25 kV, from 2 AWG to 500 kcmil.

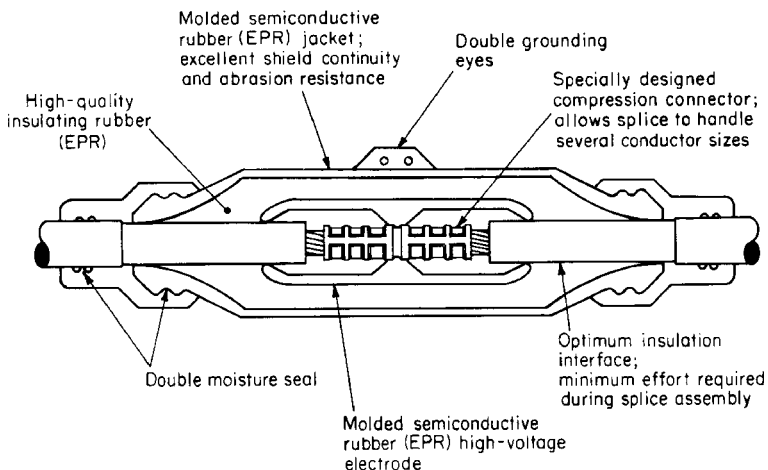


FIGURE 2.74 3M "Quick-Splice" in-line URD splice kit. [3M Co.]

Installation

1. Prepare cables as you would any splice. Apply one half-lapped layer of vinyl tape over the semiconductive jacket of the cables.
2. Apply silicone grease over cable insulation and vinyl tape. Then slide splice end caps onto each cable until they are butted against the concentric neutral wires. Slide the splice body onto the cable.
3. Crimp the connector over the conductors. Use conventional crimping tools; no special tools or techniques are required.
4. Slide the splice body into its final position over the connector. Leave a small area of insulation exposed at both ends of the splice body. Remove the applied vinyl tape.
5. Slide end caps onto the splice body. Return concentric neutral wires to the edge of the splice body and connect to the ground eyes.

172. Resin splicing kits (3M Company). A full line of splicing kits utilizing a resin sealing compound in a voltage range of 600, 1000, and 5 kV is available.

- A. Multimold Splicing Kit** (see Fig. 2.75) Odd-size and odd-shaped splices can be difficult to insulate, especially when they must be moistureproof for underground applications. Versatile multimold splicing kits are designed to handle almost any type of splice configuration up to 1000 V either aboveground or buried. Each kit contains a wraparound mold body of porous webbing on a thin, tough polyester film to ensure the proper thickness of resin around the connection, sealing putty strips on the mold body to form a resin-tight envelope for the resin, and Scotchcast brand electrical insulating resin

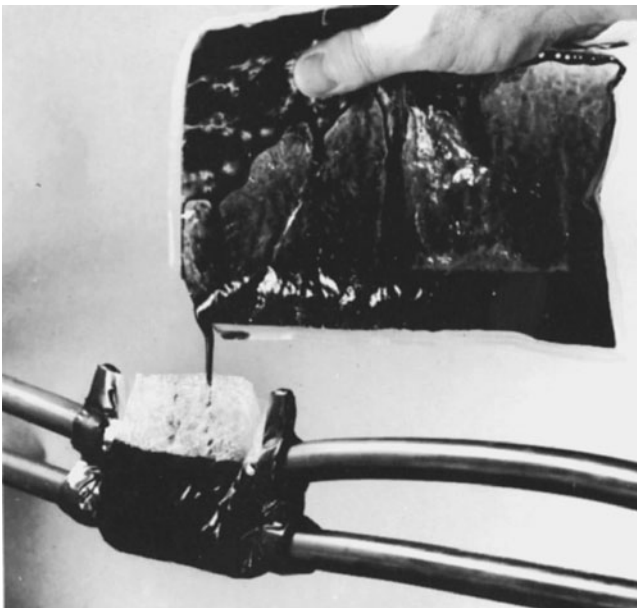


FIGURE 2.75 Multimold splice kit. [3M Co.]

4 AWG, packed in a Unipak brand container to ensure convenience and proper mixing ratios.

Use multimold splicing kits for any odd-shaped and odd-size splices, as in secondary distribution, plant grounds, parking-lot and airport-runway lighting, electrical sprinkling systems, sheath repair, remodeling wiring, sealing anodes, leads, and cathodic protection. The kits are for use on cables operating at 1000 V and under.

B. Y and In-Line Splicing Kit (see Fig. 2.76) Each kit is packaged to simplify the job and contains all the materials necessary to make a splice. The contents include two-piece snap-together mold bodies, tape for sealing ends, two funnels, and insulating and sealing compound Scotchcast brand 4 AWG resin in a Unipak container. These field-splicing kits conform in strength and electrical properties to the cable. To use them, snap the transparent mold bodies over the prepared cable, mix the resin in the Unipak container, and pour. When the resin cures, in about 30 min, a moisture-tight seal and a perfect electrically insulated splice are complete. Scotchcast splicing kits can be used for overhead, underground, or direct-burial applications.

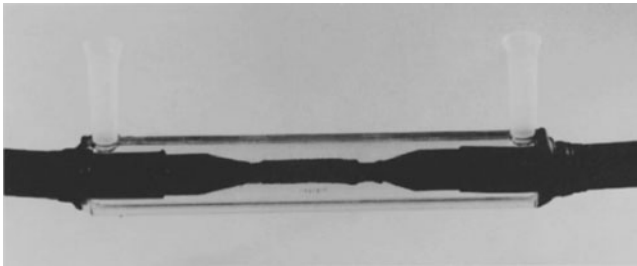



FIGURE 2.76 Y and in-line splice kit. [3M Co.]

173. Porcelain termination kits (3M Company; see Fig. 2.77). It is possible to make a custom pothead in the field with a Scotchcast porcelain termination kit. Such a kit will terminate 2 AWG to 750 kcmil shielded or concentric neutral cable from 5 to 25 kV (see Fig. 2.77 and accompanying tables).

High-quality wet-process porcelain insulators assure maximum reliability for a non-tracking surface. They are sky-blue to blend against the horizon.

3M has designed a sealed metal topcap which not only assures a permanent seal but also eliminates the necessity for special internal or external connectors on copper conductors. A pressure contact is made on the conductor by a pad which is driven against the conductor by a setscrew. Load-cycling tests prove that this pressure contact will prevent overheating of the pothead. The entire contact is sealed when the poured elastomeric compound has hardened and the metal sealing plug is installed. The aerial wire connection is made in the same manner and has a quick disconnect feature. Special termination lugs are necessary for aluminum conductors.

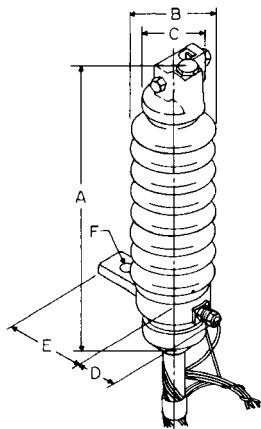To accommodate a wide range of cable sizes and handle shielded and concentric neutral cables, an elastomeric insulation is molded around the cable on the job. The elastomeric compound cures to a solid void-free elastomer in minutes; no outside heat is required.



For use on concentric neutral (URD) and synthetic insulated shielded cable. The terminations meet the design dielectric requirements of the IEEE No. 48 standard for potheads.

PORCELAIN TERMINATION KITS

Dimensions	5903, in	5904, in	5905, in	5906, in	5912, in	5913, in
A	12 ¹ / ₄	14 ¹ / ₄	12 ³ / ₄	14 ³ / ₄	12 ³ / ₄	14 ³ / ₄
B	3 ⁵ / ₈	3 ⁵ / ₈	4 ¹ / ₂	4 ¹ / ₂	4 ¹ / ₂	4 ¹ / ₂
C	2 ³ / ₈	2 ³ / ₈	3 ¹ / ₈	3 ¹ / ₈	3 ¹ / ₈	3 ¹ / ₈
D	2 ³ / ₈	2 ³ / ₈	2 ⁵ / ₈	2 ⁵ / ₈	2 ⁵ / ₈	2 ⁵ / ₈
E	3 ⁵ / ₈	3 ⁵ / ₈	4	4	4	4
F	0.530 minimum	0.530 minimum	0.530 minimum	0.530 minimum	0.530 minimum	0.530 minimum
Dry arcing distance	6 ¹ / ₄	8 ³ / ₈	6 ¹ / ₄	8 ³ / ₈	6 ¹ / ₄	8 ³ / ₈
Leakage distance	11 ¹ / ₂	15 ¹ / ₂	13 ¹ / ₂	17 ¹ / ₂	13 ¹ / ₂	17 ¹ / ₂
<i>Ratings</i>						
5903	15 kV	110 bil*				
5904	25 kV	150 bil				
5905	15 kV	110 bil				
5906	25 kV	150 bil				
5912	15 kV	110 bil				
5913	25 kV	150 bil				

*Basic impulse insulation level.

FIGURE 2.77 Porcelain termination kit. [3M Co.]

The termination kits are provided with a single-tongue mounting which is made of a conductive chromate-coated casting and is an integral part of the termination. The ring can be attached to a standard crossarm bracket.

Special termination lugs which adapt the kits for use on cables with aluminum conductors have been designed. Conventional crimping tools are used.

174. Molded-rubber termination kits for 2 AWG to 500 kcmil (3M Company). Each 3M Quick-Term MT-series kit will handle a wide range of cable and conductor sizes. The kits are lightweight and are available in skirted or tubular silicone rubber insulators. They permit free-hanging applications or standard mounting with optional cable support.

The skirted insulators are designed to protect termination on 15-kV concentric neutral cable in contaminated environments (see Fig. 2.78, I). The tubular insulators are for indoor use, pad mounts, switchgear, or mildly contaminated environments (see Fig. 2.78, II).

3M stress cones are designed to slide easily over cable insulation. A fold-back base permits visual alignment and sealing. Skirted and tubular insulators come prestretched over a collapsible core. They position quickly, then shrink tightly in place when the core is unwound.

Installation

1. Lubricate the prepared cable and the bore of the stress cone with the silicone grease provided. The specially formulated rubbers slide easily over the cable insulation, and live action ensures a tight interface fit during load cycling.

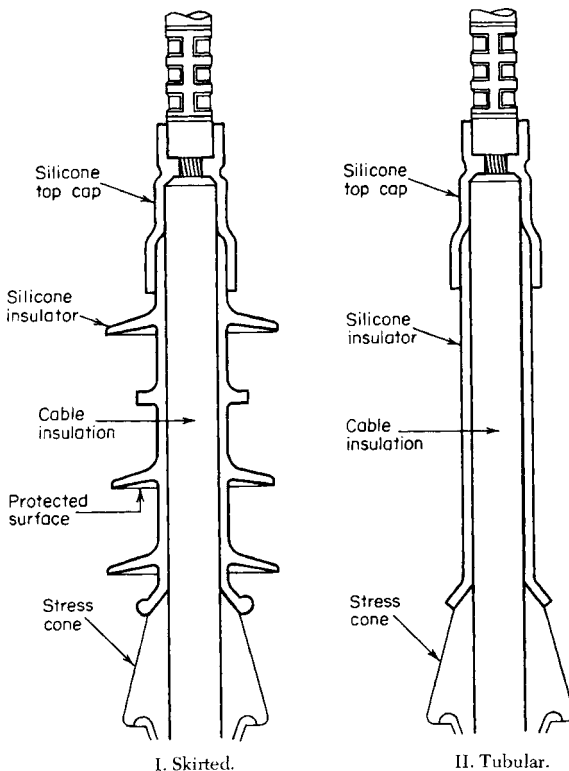


FIGURE 2.78 Molded-rubber termination kits. [3M Co.]

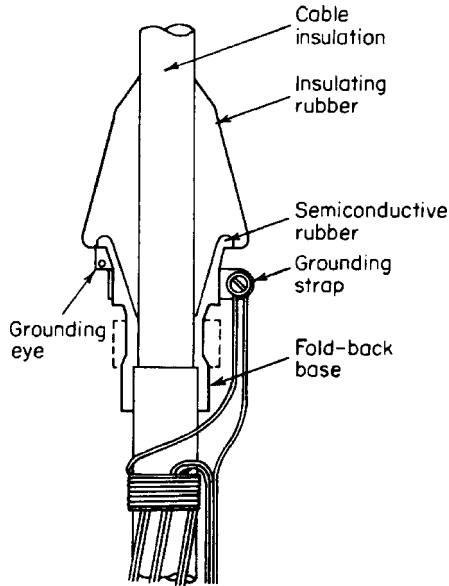


FIGURE 2.79 Stress cone for rubber termination kit.
[3M Co.]

2. The base of the stress cone comes rolled back to help assure proper alignment with cable-shield cutoffs, thus providing a close, void-free fit between the cable shield and the base of the stress cone even if the cable jacket is not cut off squarely. See Fig. 2.79.
3. The base of the stress cone unrolls down over the cable shield to form a tight-fitting, weatherproof seal-and-jacket continuity even if the cable is in a bent position. The ground wire is fastened as the last step in the installation of the stress cone.

DIVISION 3

CIRCUITS AND CIRCUIT CALCULATIONS

Types of Circuits	3.1
Electrical Systems	3.8
Circuit Calculations	3.20
NEC Ampacity Rules for Conductors	3.64

TYPES OF CIRCUITS

1. A series circuit is one in which all components are connected in tandem as in Figs. 3.1 and 3.2. The current at every point of a series circuit is the same. Series circuits find their most important commercial application in some airport runway lighting and in series street lighting, although this is falling out of favor. They are seldom if ever used in the United States for the transmission of power.

2. Multiple, parallel, or shunt circuits are those in which the components are so arranged that the current divides between them (Figs. 3.3 and 3.4). Commercially, the distinction between multiple and series circuits is that in series lighting circuits the current is maintained constant and the generated emf varies with the load, whereas in multiple circuits the current through the generator varies with the load and the generator emf is maintained practically constant.

3. Adding receivers in parallel on multiple circuits is really equivalent to increasing the cross section of the imaginary conductor formed by all the receivers in parallel between the + and the - sides of the circuit.

4. The distribution of current in a multiple circuit is shown in Fig. 3.5. Motors, heating devices, or other equipment requiring electricity for their operation could be substituted for the incandescent lamps if the proper current values were substituted for those shown. Note that the current in the main conductors decreases toward the end of the run and that the current supplied by the source, the generator, is equal to the sum of the currents required by all the components. The voltage at the end of the run is less than that at the generator.

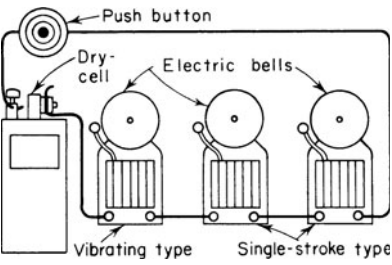


FIGURE 3.1 Series electric-bell circuit.

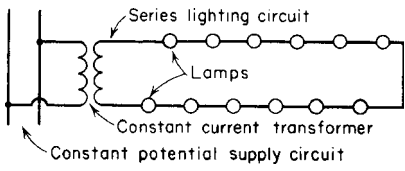


FIGURE 3.2 Series street-lighting circuit.

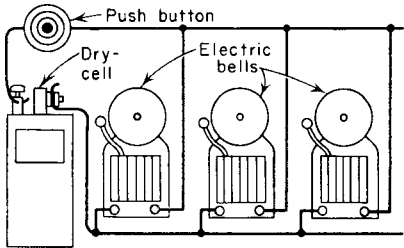


FIGURE 3.3 Electric bells in parallel.

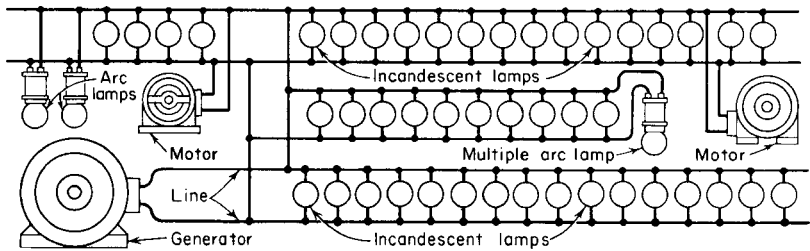


FIGURE 3.4 A multiple circuit for light and power.

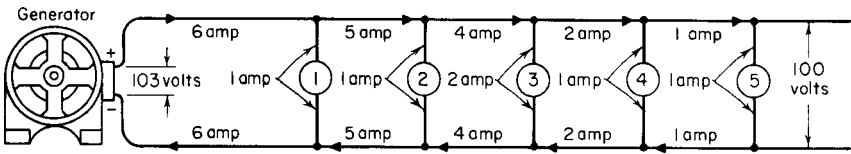


FIGURE 3.5 Multiple-circuit currents.

5. A multiple-series or parallel-series circuit consists of a number of minor circuits in series with each other and with several of these series circuits then connected in parallel, as shown in Figs. 3.6 and 3.7. Incandescent lamps and motors used in railway work are sometimes arranged in this way. For example, on a railway car operating from a 600-V

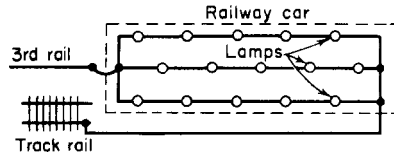


FIGURE 3.6 Multiple-series circuit supplying lamps on railway cars.

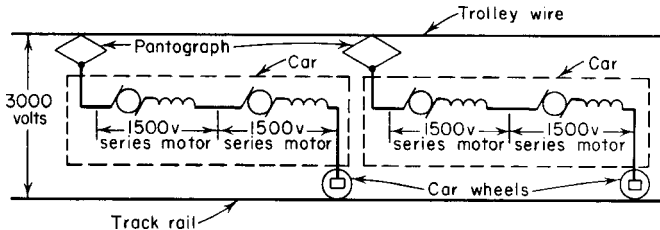


FIGURE 3.7 Multiple-series circuit supplying motors on railway cars.

third rail, the 120-V lamps are connected five in series (see Fig. 3.6). The motors on railway cars which operate from a 3000-V dc overhead trolley wire are usually connected two in series so that the voltage per motor will be only 1500 V (see Fig. 3.7).

6. A series-multiple or series-parallel circuit is one in which first a number of minor circuits are connected in parallel and then several of the parallel-connected minor circuits are connected in series across a source of emf as in Fig. 3.8. This method of connection is seldom used. (There appears to be a difference of opinion as to what constitutes a series-multiple and what a multiple-series circuit. The definitions of Secs. 5 and 6 are in accordance with the practice of the General Electric and Westinghouse Electric companies.)

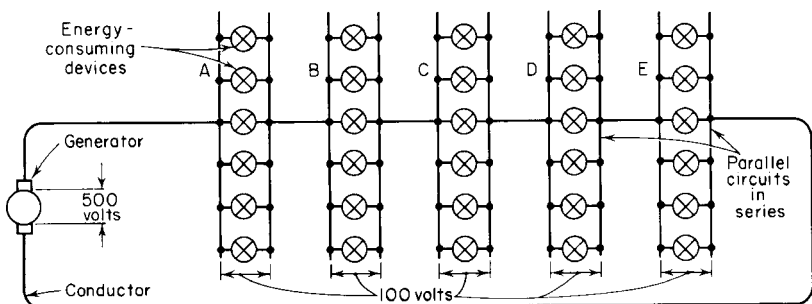


FIGURE 3.8 A series-parallel or series-multiple circuit.

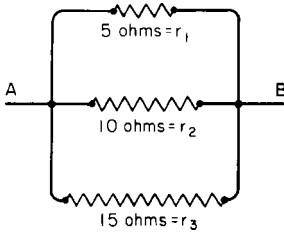


FIGURE 3.9 A divided circuit.

7. A divided circuit (Fig. 3.9) is really one form of multiple or parallel circuit. The distinction between the two sorts appears to be that, as ordinarily used, the term *divided* refers to an isolated group of a few conductors in parallel rather than to a group of a large number of conductors in parallel.

8. The joint resistance of a number of conductors in parallel can be computed with the following formula. There should be as many terms in the denominator of the formula as there are conductors in parallel.

$$R = \frac{1}{\frac{1}{r_1} + \frac{1}{r_2} + \frac{1}{r_3} + \frac{1}{r_4}, \text{ etc.}}$$

EXAMPLE What is the joint resistance of the conductors in the divided circuit shown in Fig. 3.9? In other words, what is the resistance from A to B?

SOLUTION Substitute in the formula

$$\begin{aligned} R &= \frac{1}{\frac{1}{r_1} + \frac{1}{r_2} + \frac{1}{r_3}} = \frac{1}{\frac{1}{5} + \frac{1}{10} + \frac{1}{15}} = \frac{1}{\frac{6}{30} + \frac{3}{30} + \frac{2}{30}} \\ &= \frac{1}{\frac{11}{30}} = 1 \times \frac{30}{11} = 2.73 \, \Omega \end{aligned}$$

9. Multiple circuits are employed for the distribution of electrical energy for all lighting and power work with the exception of street lighting, for which series circuits are still used in some locations.

10. The complete electric system from the generating plant to the particular piece of equipment utilizing the electrical energy for heating, lighting, power, etc., may be divided into three main parts. These are the transmission system, the distribution system, and the interior wiring in the building where the energy is utilized. Two simple complete electric systems illustrating the component parts are shown in Figs. 3.10 and 3.11. All wires of a circuit are represented for simplicity by a single line. Voltages commonly used for the different parts of the system are indicated in the figures. In the system shown in Fig. 3.10 the electricity is generated as alternating current at 2300 V. At the generating station it is stepped up to 44,000 V and transmitted at this voltage over the transmission system to the substation. In the substation the energy is converted by means of a rotary converter to direct current. From the substation the energy is distributed over two distribution systems to the different buildings. One of these distribution systems is two-wire 230-V direct current for the motor load, and the other is three-wire 115- to 230-V direct current supplying the energy for lighting. As noted in Sec. 24, this system is almost unheard of today. In the system of Fig. 3.11 the energy is generated, transmitted, and distributed as alternating current throughout. This system is far more common.

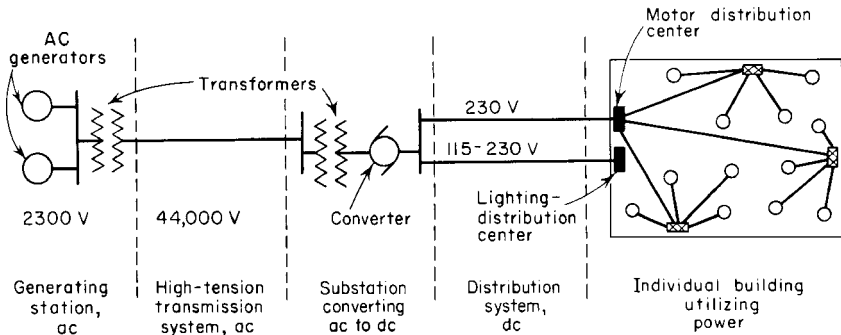


FIGURE 3.10 Simple complete electric system, generating and transmitting alternating current, distributing direct current.

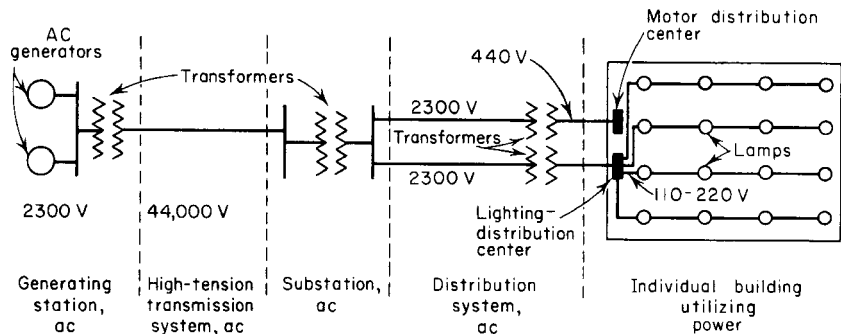


FIGURE 3.11 Simple complete electric system, generating, transmitting, and distributing alternating current.

11. A feeder or feeder circuit (Figs. 3.12 and 3.13) is a set of conductors in a distributing system extending from the original source of energy in the installation to a distributing center and having no other circuits connected to it between the source and the center. The source may be a generating station or a substation or, in the case of building or house wiring, a connection to the service conductors from the street (see Figs. 3.12 and 3.13).

12. A subfeeder is an extension, fed through a cutout, of a feeder or of another subfeeder from one distributing center to another and having no other circuit connected to it between the two distributing centers. Although commonly used as trade slang by electricians, note that the NEC has dropped all use of the word because all subfeeders also meet the NEC definition of feeders.

13. A main (Figs. 3.12 and 3.13) is any supply circuit to which other energy-consuming circuits (submains, branches, or services) are connected through automatic

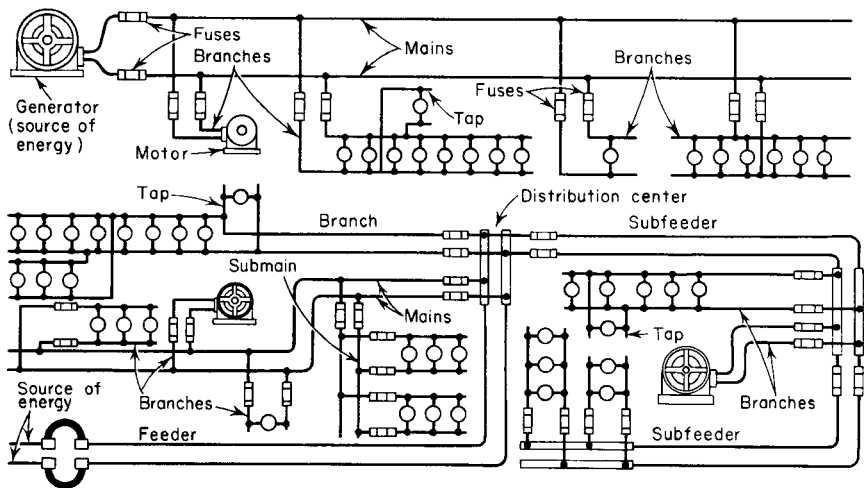


FIGURE 3.12 Diagram illustrating circuit nomenclature.

cutouts (fuses or circuit breakers) at different points along its length, which is of the same size of wire for its entire length, and which has no cutouts in series with it for its entire length. If a main is supplied by a feeder, the main is frequently of smaller wire than the feeder which serves it. An energy-utilizing device is never connected directly to a main, a cutout always being interposed between the device and the main.

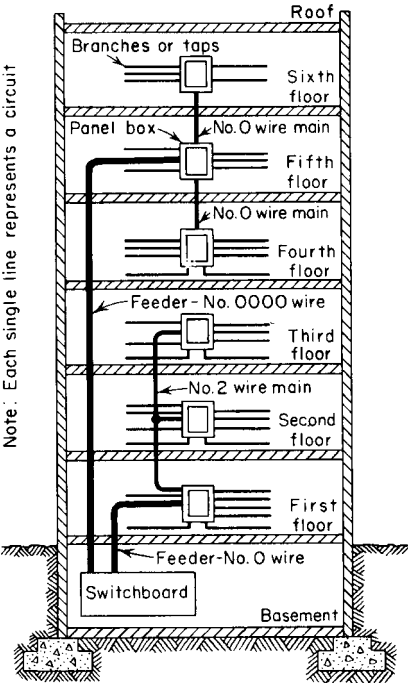


FIGURE 3.13 Examples of feeders, mains, and branches.

If one building or structure is fed from another, as in campus-style distributions at factory or institutional facilities (or even a detached garage at a residence) that remote building or structure will usually have a local disconnecting means on site. In general the NEC intends that such buildings be capable of disconnection in an emergency without needing to enter a different building. These main disconnects are usually referred to as “building disconnects.” They are never “service disconnects” unless they actually qualify as service equipment as covered in Sec. 18.

14. A submain (Fig. 3.12) is a subsidiary main, fed through a cutout from a main or from another submain, to which branch circuits or services are connected through cutouts. A submain is usually of smaller wire than the main or other submain which serves it. Here again, like subfeeders, all submains are mains under current NEC usage.

15. A branch or branch circuit (Fig. 3.12) is a set of conductors feeding, through an overcurrent device (from a distribution center, main, or submain) to which one or more energy-consuming devices are connected directly, i.e., without the interposition of additional overcurrent devices. The only overcurrent device associated with a branch is the one through which the branch is fed at the main, submain, or distribution center.

16. A tap or tap circuit (Fig. 3.12) is a circuit which serves a single energy-utilizing device and is connected directly to a branch without the interposition of a cutout.

17. A distributing or distribution center in an electrical-energy distribution system is the location at which a feeder, subfeeder, or main connects to a number of subordinate circuits which it serves. The switches and automatic overcurrent devices for the control and protection of the subcircuits are usually grouped at the distributing center. In interior-wiring parlance, a distributing center is often an arrangement or group of fittings by which two or more minor circuits are connected at a common location to another larger circuit. A panel-board with circuit breakers or a group of fuses is a distribution center (see Fig. 3.12).

18. A service is the conductors and equipment for delivering energy from the serving utility to the wiring system of the premises served. Only a utility supply creates a service; if the local supply system is from some on-site power production facility, then the NEC defines the supply as a “separately derived system.” Just as in the case of one building fed from another, the local distribution will originate at a “building disconnect” and not at service equipment.

A service cable is the service conductors made up in the form of cable.

Service conductors are the conductors from the service point or other source of power to the service disconnecting means.

A service drop is the overhead service conductors from the last pole or other aerial support to and including the splices, if any, connecting to the service-entrance conductors at the building or other structure.

A service lateral is that portion of underground service conductors between the street main, including any risers at a pole or other structure or from transformers, and the first point of connection to the service-entrance conductors in a terminal box meter or other enclosure with adequate space, inside or outside the building wall. Where there is no terminal box or meter or other enclosure, the point of connection shall be considered to be the point of entrance of the service conductors into the building.

Service-entrance conductors (overhead system) are the service conductors between the terminals of the service equipment and a point usually outside the building, clear of building walls, where joined by a tap or splice to the service drop.

Service-entrance conductors (underground system) are the service conductors between the terminals of the service equipment and the point of connection to the service lateral.

Where service equipment is located outside the building walls, there may be no service-entrance conductors or they may be entirely outside the building.

Service equipment is the necessary equipment, usually consisting of a circuit breaker or switch and fuses and their accessories, connectors to the load end of service conductors to a building or other structure or an otherwise-defined area that is intended to constitute the main control and means of cutoff of the supply.

ELECTRICAL SYSTEMS

19. Electrical systems. Several systems can be used for distributing electrical energy over the various arrangements of circuits previously described. They are as follows:

1. Direct-current two-wire (Fig. 3.14)
2. Direct-current three-wire (Fig. 3.15 or 3.16)
3. Single-phase two-wire (Fig. 3.14)
4. Single-phase three-wire (Fig. 3.15)
5. Two-phase four-wire (Fig. 3.17)
6. Two-phase three-wire (Fig. 3.18)
7. Two-phase five-wire (Fig. 3.19)
8. Three-phase three-wire (delta connection) (Fig. 3.20)
9. Three-phase four-wire (wye connection) (Fig. 3.21)
10. Three-phase four-wire (from a delta connection) (Fig. 3.26)

It is generally not good practice to supply lamps and motors from the same circuit (unless the motors are of small, fractional-horsepower size) for the following reasons.

1. When the motors are started, the large starting current causes a voltage drop on the feeder, which will make the lights grow dim or blink.
2. Overloads and short circuits are more common on motor circuits and should not be the cause of putting the lights out.
3. Lamps for satisfactory service must operate within closer voltage limits than motors, and therefore the circuits must be designed for less voltage drop than is allowable on motor circuits.
4. Frequently it is more economical to operate motors on a higher voltage than that of the lighting circuit.

In installations in which busway wiring is employed, it is often very satisfactory to have a common motor and lighting bus for the feeders and mains. If these systems are properly planned with generous allowance in the size of the buses, they will overcome the above criticisms of the common system and provide a very economical installation.

In the illustrations of the various systems, motors and lamps are shown connected to the same circuits simply to indicate the manner in which the different loads would be connected to that type of circuit. The reader is cautioned against forming the impression that they should

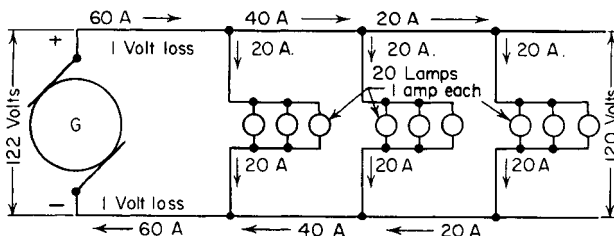


FIGURE 3.14 Two-wire system (direct-current or single-phase).

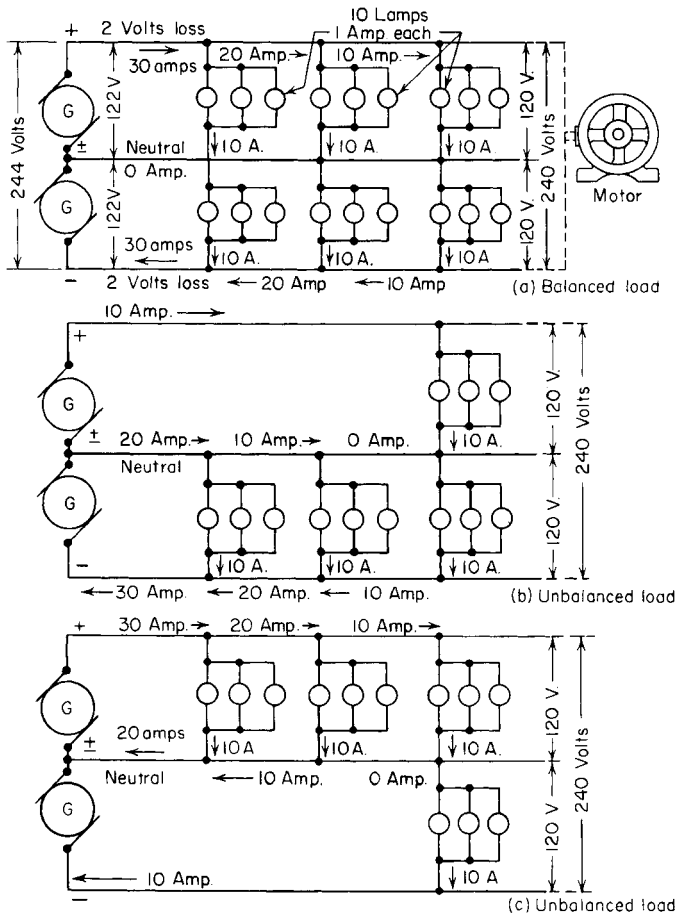


FIGURE 3.15 Three-wire system (direct-current or single-phase).

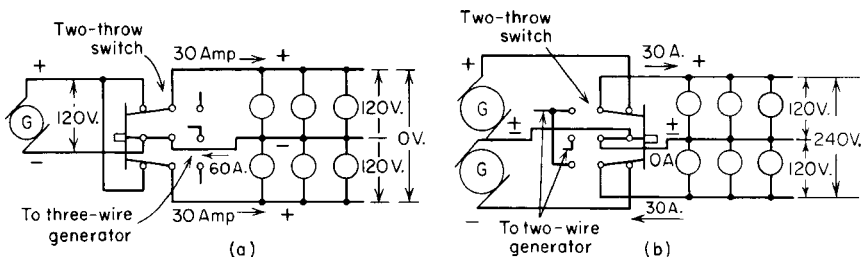


FIGURE 3.16 Three-wire convertible system (direct-current or single-phase): (a) connections when operating three-wire; (b) connections when operating two-wire. In the case of arc lamps and Cooper-Hewitt lamps, it is important that they all be connected on the side of the circuit which does not reverse polarity when operating two-wire.

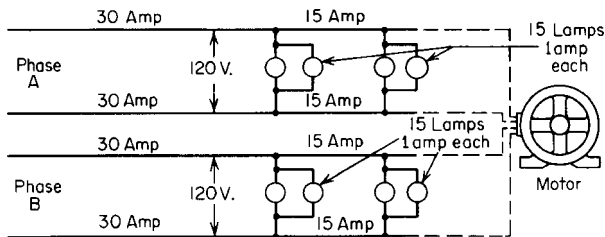


FIGURE 3.17 Two-phase four-wire system.

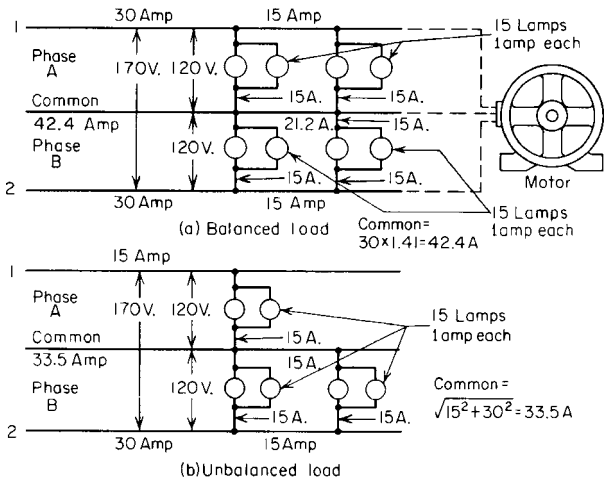


FIGURE 3.18 Two-phase three-wire system.

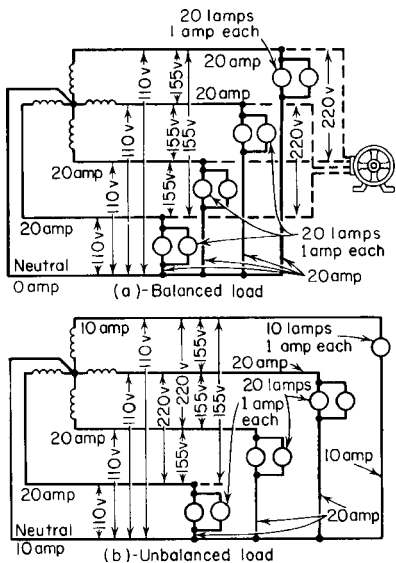


FIGURE 3.19 Two-phase five-wire system.

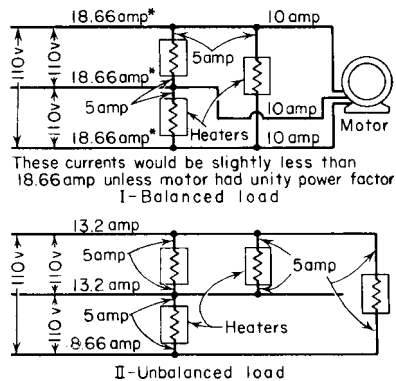


FIGURE 3.20 Three-phase three-wire system.

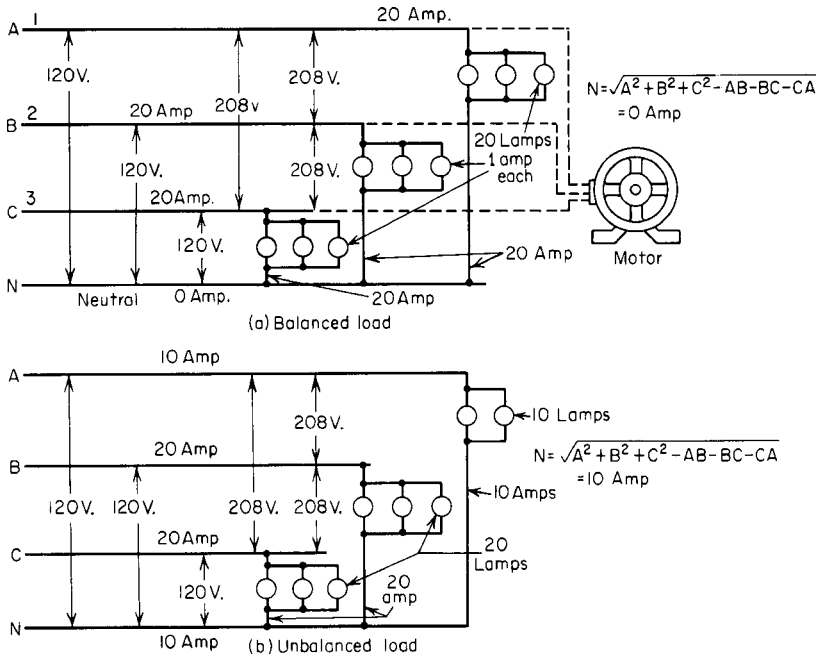


FIGURE 3.21 Three-phase four-wire wye system.

be connected to the same circuit except in special cases. In considering any one of the illustrations, if one were dealing with a motor circuit, the lamps should be eliminated from the figure, or if one were dealing with a lighting circuit, the motors should be eliminated.

20. The three-wire dc or single-phase ac system is used because it saves copper (see Figs. 3.15 and 3.22). Incandescent lamps for 110 to 120 V are more economical

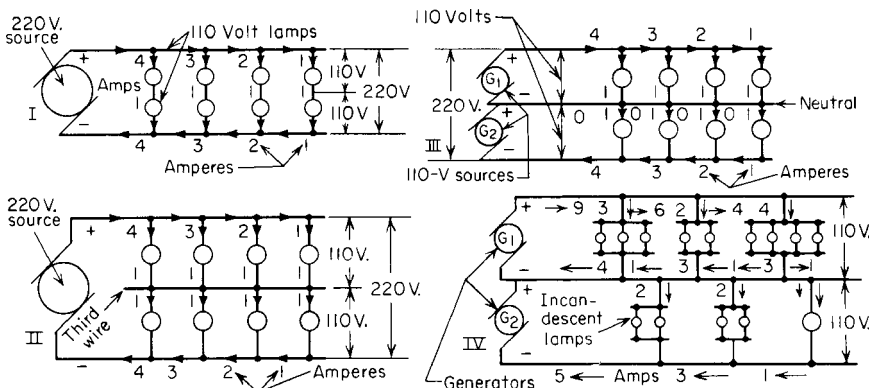


FIGURE 3.22 Elements of the three-wire system.

than those for higher or lower voltages. A system of any consequence operating at 110 V would require very large conductors to maintain the line drop within reasonable limits. With the three-wire system, a low voltage, say 110, is impressed on the receivers while one twice as great, say 220, is used for distribution. Since the weight of conductors for a given power loss varies inversely as the square of the voltage, it is evident that a considerable saving is possible with the three-wire system. In the United States the three-wire system is of most importance as applied to 110/220-V lighting systems.

21. The principle of the three-wire dc or single-phase ac system is illustrated in Fig. 3.22. Incandescent lamps for 110 V could be connected two in series across 220 V as shown at I, and although each lamp would operate at 110 V, the energy to the group would be transmitted at 220 V and the outside conductor could, with equal loss, be one-fourth the size that would be necessary if the energy were transmitted at 110 V. This arrangement (Fig. 3.22, I), although it would operate, is not commercially feasible because each lamp of each pair of lamps in series must be of the same size, and if one lamp goes out, its partner is also extinguished. These disadvantages might be partially corrected by running a third wire, as at Fig. 3.22, II. Then one lamp might be turned off and the others would burn, and a single lamp might be added to either side of the system between the third wire and either of the outside wires. But unless the total resistance of all the lamps connected to one side was practically equal to that of all the lamps connected to the other side, the voltage across one side would be higher than that across the other. On the high side the lamps would burn bright and on the low side dim. Obviously, it is not feasible in practice to arrange or balance the sides so that they will have the same resistance. Hence practicable three-wire systems must use some other method whereby the electricity will be transmitted at, say, 220 V and the pressure across the lamps will be, say, 110 V.

22. Commercial three-wire dc or single-phase ac systems (Fig. 3.22, III and IV) consist of two outer conductors, having (for lighting installations) a pressure of 220 V impressed across them and a neutral wire so connected to sources of voltage that the pressure between it and either of the outside wires is 110 V. In Fig. 3.22, III, generators are the sources of voltage. The neutral wire joins at the point where the generators are connected together. When the system is perfectly balanced, the neutral wire carries no current and the system is in effect a 220-V system. Perfect balance seldom obtains in practice. When the balance is not perfect, the neutral wire conveys a current equal to the difference between the current taken by one side and that taken by the other side. Note from Fig. 3.22, IV, that the current in different parts of the neutral wire may be different and that it is not necessarily in the same direction in all parts of the neutral wire. Each incandescent lamp in Fig. 3.22, IV, is assumed to take 1 A, and the small figures indicate the currents in different parts of the circuit.

23. Comparisons of systems. The relative weights of copper required for the different systems are given in Fig. 3.23. The weight of the copper required for the conductors of a two-wire dc circuit is assumed for convenience to be 100 percent. The values given in the column headed "Relative weights of copper in percentage based on voltage drop" are true for direct current, if we assume for all systems equal voltages on the lamps or other receivers, equal amounts of power transmitted, equal voltage drops, and balanced loads. For ac circuits the values are true for circuits in which the effect of inductance is negligible. For ac circuits in which the effect of inductance is not negligible, the amount



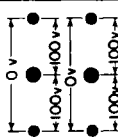
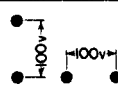
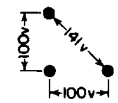

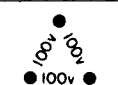
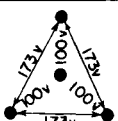
System	Con- nec- tions	Voltage relations	Relative weights of copper in percentage based on voltage drop	Relative weights of copper in percentage based on carrying capacity
Two-wire, d-c or single-phase	Fig. 14		100	100
Three-wire, d-c or single-phase	Fig. 15		With neutral same size as outside conductors 37.5	With neutral same size as outside conductors 75
			With neutral 0.70 the size of the outside conductors 34	With neutral 0.70 the size of the outside conductors 67.5
Three-wire, convertible, d-c or single-phase	Fig. 16		Neutral double size of outside conductors 100	Neutral double size of outside conductors 100
Two-phase, four-wire	Fig. 17		100	100
Two-phase, three-wire	Fig. 18		Common 1.41 times as large as out- side conductors 73	Common 1.41 times as large as out- side conductors 85
Two-phase, five-wire	Fig. 19		With common 1.41 times as large as outside conductors 34	With common 1.41 times as large as outside conductors 67
			With common same size as outside conductors 31.3	With common same size as outside conductors 62.5
Three-phase, three-wire delta	Fig. 20		75	87
Three-phase, four-wire wye	Fig. 21		With neutral same size as outside conductors 33.3	With neutral same size as outside conductors 67
			With neutral 0.70 as large as out- side conductors 31	With neutral 0.70 as large as out- side conductors 62

FIGURE 3.23 Copper economics of different electric systems.

of copper to produce the same voltage drop would be somewhat larger than the values shown in the table. The values given in the last column are based on the assumption that the carrying capacity of a wire is directly proportional to its cross-sectional area. Since the larger the wire, the smaller the allowable carrying capacity per unit of cross-sectional area, the percentages for systems of more than two wires would be somewhat less than shown. The actual saving in dollars gained by one of the systems that employs more than two wires will not be so great as that indicated in the table, owing to the fact that the total cost for a single large wire is less than for two small wires containing the same total amount of copper.

24. Application of alternating current and of direct current. AC systems have become almost universally standard in the United States for the transmission, distribution, and utilization of electrical energy. This is true because of the flexibility of ac systems in economically stepping up or down the voltage without the use of rotating equipment. Some vestiges of old Edison dc systems still exist both for city distribution and in old office buildings served by isolated plants.

When special characteristics of the load, such as electroplating or adjustable-speed motors, make the utilization of direct current either necessary or advisable, the alternating current can be converted to direct current by means of motor-generator sets, rectifiers, or, in special cases, converters.

25. Standard DC Voltages and Their Applications

Voltages		Application
Generators and energy-delivering apparatus	Motors and energy-utilization apparatus	
125 ^a	115	Used for multiple-circuit lighting. Usually obtained from a 115/230-V three-wire system
125 ^a –250 ^a 575–600 ^a	$\left\{ \begin{array}{l} 100^a\text{--}220 \\ 115^a\text{--}230^a \\ 550^a \end{array} \right\}$	Direct-current motors
600 ^a	Urban and interurban electric railways
1,200 1,500 } }	Interurban railways
3,000	Trunk-line railways

^aElectric Power Club standard voltage ratings.

26. Standard AC Voltages and Their Applications

Voltage		Application
Generators and energy-delivering apparatus	Motors and energy-utilization apparatus	
120/208	110 110 single-phase motors 110–120 lamps and appliances	Single-phase, used for small motors, lighting, and appliances, usually obtained from a 120/240 V, three-wire, single-phase system or a three-phase, four-wire system
240 480 600	220 440 550	Usually three-phase three-wire, used for distribution for power for polyphase motors up to possibly 50 to 60 hp sizes. 220 V used occasionally for lamps and heaters. 265/460 V, four-wire, three-phase system is often used (265 V for fluorescent lamps and 460 V for supplying motors)
2,400	2,200	Single-phase for primary distribution in residential districts; three-phase, three-wire for polyphase motors greater than about 60 or 100 hp, feeders for large industrial plants
2,400/4,160	2,300/4,000	For three-phase four-wire distribution in moderately heavily loaded districts
6,900 11,500 13,800 18,000	6,600 11,000 13,200	Highest voltages for which generators or motors can, ordinarily, be effectively designed. Distribution systems for large cities; for power transmission over distances of a few miles. For high-voltage distribution feeders in industrial plants and large office buildings
23,000 34,500 46,000 69,000 115,000 138,000 230,000	The voltages higher than 13,200 are used for transmission only and not for generation or utilization.	For power transmission overhead and underground, for distances up to about 125 miles, selection being roughly on the basis of 1,000 V per mile of transmission distance
154,000 220,000 275,000	345,000 500,000 765,000	For long-distance power transmission over aerial lines

NOTE These voltages have been standardized by various standards making bodies, including the American National Standards Institute, the National Electrical Manufacturers Association, and the Institute of Electrical and Electronic Engineers.

27. Selection of a frequency. Two frequencies now are standard in the United States: 25 and 60 Hz. A frequency of 50 Hz has been used considerably in Europe and in some installations in the United States. All other things being equal, 25 Hz would seem at first sight preferable because there is less inductive effect with it than with a higher frequency. It therefore follows that the inherent voltage regulation of a 25-Hz system is better than that of a 60-Hz system and also that the 25-Hz system is a trifle more efficient. For transmission distances of less than a few miles neither of these factors is of much consequence one way or the other. Alternating current at 25 Hz is not particularly well adapted for electric lighting because of a flickering due to the filament cooling down every half cycle while the current is at a low value is very noticeable and causes eyestrain. At 60 Hz the time of low current values is so short that no flickering is noticeable.

Many years ago 25 Hz was considered necessary for the satisfactory operation of rotary converters, so most dc electric traction systems have used a 25-Hz transmission system. All dc railroad electrifications have also used 25 Hz because of the higher power factor and better commutation of the 25-Hz series motors. Again, it is not economically feasible to build large slow-speed motors for main drives in steel mills and cement plants at 60 Hz, so these types of plants have often adopted 25 Hz. Transformers and most other apparatus, except the motors indicated, are cheaper for 60 Hz, and delivery time is shorter.

Since 60 Hz is best for most installations, it has become practically the standard frequency in the United States, and probably more than 95 percent of the equipment sold is for 60 Hz. Most of the 50-Hz installations have been or are being changed over to 60 Hz.

Higher frequencies than the standard 60-Hz distribution frequency are sometimes used for special applications, such as the operation of high-speed motors and fluorescent lamps (refer to Divs. 7 and 10). These higher application frequencies are obtained from the 60-Hz supply by means of conversion equipment.

28. Effect of increased voltage and decreased voltage on generators, lines, transformers, meters, lamps, and motors. Sometimes it is necessary or desirable to adopt, for some existing installation, a voltage either higher or lower than that which has been in use. The table below indicates the general effects of such a change. The voltage impressed on incandescent lamps should be between 110 and 120. In new installations it is well to adopt a high lamp voltage, say, about 120. The operating voltage of an old installation may be gradually increased sometimes as much as 10 V without adverse results (*Electrical World*).

Effect of Increased Voltage on Generators	Effect of Decreased Voltage on Generators
Increase in excitation. Will the exciter voltage be sufficient to produce the required excitation at full load or at partial load of low power factor?	Decrease in excitation. Is the resistance of the field rheostat sufficient to maintain the lower voltage at no load?
Will the fields overheat at the increased excitation required?	Decrease in core loss.
Increase in core loss. Will the iron overheat?	Increase in armature copper loss for the same kilovolt-ampere output.
Decrease in armature copper loss for same kilovolt-ampere output.	Will this be offset by the reduction in field and core losses?
Will this offset the additional field and core loss?	

Lines	Lines
Increase in transmission radius for the same kVA output.	Decrease in transmission radius for the same kVA output.
Transformers	Transformers
For the same kVA output, increase in core losses, decrease in copper losses, somewhat lower all-day efficiency.	For the same kVA output, decrease in core losses, increase in copper losses, somewhat higher all-day efficiency.
Meters	Meters
Effect negligible.	Effect negligible.
Lamps	Lamps
No effect after the new voltage lamps are installed.	No effect after the new voltage lamps are installed.
Motors	Motors
Reduced slip.	Increased slip.
Increased torque.	Decreased torque.
Increased efficiency.	Decreased efficiency.
Decreased power factor of induction motors.	Increased power factor of induction motors.

29. Common distribution systems (electrical systems design). Basically distribution systems are classified according to the voltage level used to carry the power either directly to the branch circuits or to load-center transformers or substations at which feeders to branch circuits originate. The following are the most common types of distribution systems based on voltage.

1. 120/240-V three-wire single-phase combination light and power distribution to lighting and appliance branch-circuit panelboards and to power panels (Fig. 3.24). This type of system is restricted to applications in which the total load is small and is primarily lighting. Stores, small schools, and other small commercial occupancies use this system. In most cases of small commercial buildings, the use of 208Y/120-V three-phase distribution offers greater economy because of the higher operating efficiency of three-phase circuits. In cases in which 120/240-V distribution is used as the basic distribution, the service to the premises is made at that voltage. Of course, 120/240-V distribution is frequently an effective and economical system for lighting-subfeeder distribution in electrical systems which use a higher-voltage basic distribution system with load-center step-down to utilization voltages for local and incidental lighting and receptacle circuits.


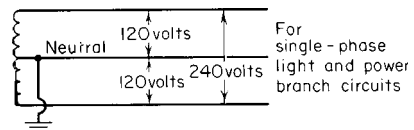



FIGURE 3.24 Single-phase three-wire distribution system.

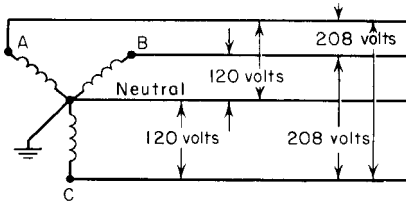2. 208Y/120-V three-phase four-wire distribution (Fig. 3.25a) is the most common type of system used in commercial buildings, in some institutional occupancies, and in some industrial shops with limited electrical loads. This system offers substantial economy over the 120/240-V system in the amount of copper conductor required to carry a given amount of power to a load. It is a combination light- and power-distribution system, providing 120 V phase-to-neutral for lighting and single-phase loads and 208 V phase-to-phase for single- or three-phase motor or other power loads. This distribution system is used as the basic distribution in occupancies in which the service to the building is



For three-phase power circuits and single-phase light and power branch circuit

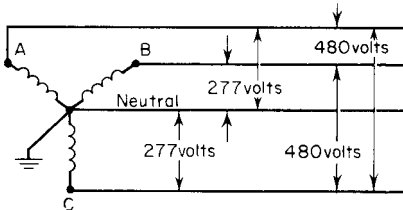
(a) - Three-phase, 4-wire wye (or star) with grounded neutral rated 120/208 volts



For three-phase power circuits and lighting circuits using 227 volts ballasts.

120 volt lighting and receptacle loads are fed from this system through single-phase transformers rated 480/120-240 volts or three phase transformers rated 480Y/120-208 volts

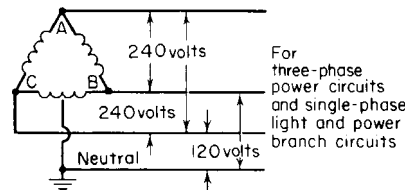(b) - Three phase, 4-wire wye (or star) with grounded neutral rated 480Y/277 or 460Y/265, depending upon voltage spread under local conditions



For three-phase power circuits and single-phase light and power branch circuits

FIGURE 3.26 Three-phase delta distribution system.

FIGURE 3.25 Three-phase Y distribution systems.

of the same voltage. It is also the most common subdistribution system for lighting and receptacle circuits in occupancies using higher-voltage distribution to load centers.

3. 240-V three-phase three-wire distribution (Fig. 3.26 without the neutral connection) is a common system for power loads in commercial and industrial buildings. In such cases, service to the premises is made at 240 V, three-phase. Feeders carry the power to panelboards or wireways supplying branch circuits for motor loads. Lighting loads are usually handled by a separate single-phase service to the building. This system offers economic application when the power load is large compared with the lighting load. In some 240-V three-phase three-wire systems (Fig. 3.26 as drawn), a grounded center tap on one of the phases is used as a neutral to provide 120 V for lighting and receptacle circuits. Note that the voltage between the neutral and point "A" in the drawing is not 120 V as it is between the neutral and points "B" and "C". It is 208 V and 120 V loads must never be connected to the "A" phase. The NEC requires that the "A" phase conductor in this case (known in the trade as the high or stinger leg) be distinctively marked with orange color. Any switchboard or panelboard that contains this system must also be marked with the voltage to ground that applies to this phase leg.
4. 480-V three-phase three-wire distribution is commonly used in commercial and industrial buildings with substantial motor loads. Service to the building can be made at this

voltage, and the 480-V feeders carried to motor loads and to step down transformers for lighting and receptacle circuits. In many cases, 480-V feeders will be derived from load-center substations within the building and carried to motor loads or power panels. Although less common, 600-V three-phase three-wire distributions are still in common use in industrial occupancies for similar purposes.

5. 480Y/277-V three-phase four-wire distribution (Fig. 3.25*b*) has become an important system for use in commercial buildings and industrial buildings. In office and other commercial buildings, the 480-V three-phase four-wire feeders are carried to each floor, where 480 V, three-phase, is tapped to a power panel or to motors; general area fluorescent lighting using 277-V ballasts is connected between each phase leg and the neutral; and 208Y/120-V three-phase four-wire circuits are derived from step-down transformers for local lighting, appliance, and receptacle circuits. Application of this system offers an economic advantage over a 208Y/120-V system when less than about half of the load devices require 120- or 208-V power. When the 480Y system can be used, it will cost less than the 208Y/120-V system owing to copper savings through the use of smaller sizes of conductors and the lower cost of system elements because of lower current capacities. If the required amount of 120- or 208-V power is more than half of the total load in a building, the cost of the step-down transformers to supply these circuits will offset the savings in the 480-V circuiting. The 480Y system is more advantageous in high-rise or other large-area buildings than in small buildings.
6. 2400-V three-phase distribution is an industrial-type system used to feed heavy motor loads directly and motor and lighting loads through load-center substations and lighting transformers.
7. 4160/2400-V three-phase four-wire distribution with a grounded neutral is a more common industrial system than the above 2400-V, delta-connected system. This system is widely used to supply load-center substations in which the voltage is stepped down to 480 to feed motors and lighting transformers for 120/240- and/or 208Y/120-V circuits. It can also be used in distribution to substations stepping down the voltage directly to 208Y/120.
8. 4800-V three-phase distribution is a delta-connected industrial system for feeding 480-V substations supplying motors and lighting transformers.
9. 7200-V three-phase distribution is another industrial system used with substations for stepping down voltage to lower levels for power and lighting.
10. 13.2Y/7.2-kV (or 13.8-kV) three-phase four-wire distribution is a modern, widely used distribution system for large industrial plants. Power at this voltage is delivered to substations which step down the voltage to 480 for motor loads and which supply 480/120/240- or 480/208Y/120-V transformers for lighting. Or 480Y/277-V substations can be used to supply motor loads and 277-V fluorescent or mercury-vapor lighting for office and industrial areas. Lighting transformers are then used to supply 120-V circuits for lighting and convenience receptacles.

The voltage values given for these distribution systems are, of course, subject to the usual variation or spreads due to distance of transmission and distribution, local conditions of utility supply, and settings of transformer taps. In addition to the distribution voltages given, other systems may operate at 6.6, 8.3, 11, and 12 kV. Of the high-voltage (over 600 V) distribution systems, 4160 and 13,200 V are the most common and represent good design selection and economy of application for most cases. In many areas, delta-connected supplies have been changed to four-wire Y systems with consequent increase in power-handling capacity as a result of increased phase-to-phase voltage. The trend today is toward the use of the 13-kV systems instead of other high-voltage distribution systems for large

industrial plants. To a limited extent, high-voltage distribution finds application in large commercial buildings. The most recent trend in distribution in office and other multifloor commercial buildings is toward distribution at 480Y/277 V, three-phase four-wire, with grounded neutral.

CIRCUIT CALCULATIONS

30. Five factors should be considered in determining the size of wire for the distribution of electricity. A wire should be of such size that (*a*) the current will not heat it to a temperature that would ruin the insulation or cause a fire, (*b*) it will have sufficient mechanical strength so that it will not be broken under the ordinary strains to which it is reasonable to assume that it will be subjected, (*c*) it will not be so large as to exceed the limitations required for its economical installation, (*d*) it will carry the electricity to the point at which it will be used without an excessive drop or loss of voltage, (*e*) the cost of energy lost—the I^2R loss—due to the voltage overcoming the resistance will not be excessive (refer to Sec. 82). A conductor may satisfy any one of the five conditions and not satisfy the four others.

31. Safe current-carrying capacity should always be considered in designing circuits. When current passes through a conductor, some of the electrical energy is converted into heat energy, the amount of energy thus converted being equal to I^2R (see Div. 1). This heat energy raises the temperature of the conductor and its insulation and covering above that of the surrounding medium and is dissipated into the atmosphere through thermal conduction of the metal of the conductor, conductor insulation and covering, and surrounding materials (such as conduit, ducts, earth, etc.) and through convection of the surrounding air over these materials. It is not good practice to operate bare conductors at a temperature in excess of from 70 to 80°C, since trouble is apt to occur at joints and connections when they are operated at higher temperatures. A curve for determining current capacities of bare copper conductors is given in Sec. 15 of Div. 12. For covered and insulated cables the maximum allowable temperature of the conductor is limited by the maximum temperature that will not be harmful to the insulating and covering materials (refer to Div. 2 for maximum safe temperatures for different types of insulation). The allowable safe current-carrying capacity of an insulated conductor will therefore depend upon the type of conductor insulation and covering, the conditions of installation (whether in conduit, exposed to air, or buried in earth, and the number of conductors grouped in close proximity to each other), and the temperature of the surrounding atmosphere or earth (ambient temperature). A curve for determining the carrying capacity of weatherproof copper conductors when installed outside buildings is given in Sec. 16 of Div. 12. Curves for aluminum cable, steel-reinforced, are given in Sec. 26 of Div. 12, and a table for parkway cables buried directly in the ground is given in Sec. 27 of Div. 12. It would require more space than is available in this book to include the necessary tables for allowable carrying capacities of cables installed in underground raceway systems. Complete tables can be obtained from the various cable manufacturers or from the Insulated Cable Engineers Association (ICEA).

The maximum allowable safe current-carrying capacities of wires for interior wiring are specified by the National Electrical Code (see Tables 17 to 23 of Div. 12). The maximum current that a wire will have to carry should never exceed the allowable safe carrying capacity for the size of wire, type of insulation employed on the wire, and method of installation as given in these tables except in the case of motor circuits. Motors draw a current at the

instant of starting that is much greater than the normal full-load running current. Owing to the fact that this large starting current lasts for only a short time, the Code does not require that the carrying capacity of the wires for motor circuits be as great as the starting current. For branch circuits supplying continuous-duty motors the size of the wire must be sufficient to carry at least 125 percent of the full-load rated current of the motor. The wires of branch circuits supplying motors in classes of service having short-time, periodic or varying duty must have carrying capacities as large as the average load currents required by the motors. In the majority of cases, the average load currents required by motors of this class will not exceed the percentages of the full-load rated currents given in Table 12 of Div. 12. The wires between the slip rings of wound-rotor induction motors and the secondary controller must have a carrying capacity of at least 125 percent of the full-load secondary current of the motor. The wires between the secondary controller and the resistors must have a carrying capacity that is not less than the percentages of the full-load secondary currents given in Table 13 of Div. 12. The size of wire for motor feeders or mains must be sufficient to carry at least the maximum-demand running current of the motors supplied by the circuit. The method of computing the maximum-demand running current is given in Sec. 54.

The ampacities which are listed in Tables 18 to 23 of Div. 12 are based upon ambient air temperatures of 30°C except the high-temperature conductors in Tables 21 and 22 of Div. 12 are based on 40°C ambient air temperature. If the ambient air will have a temperature greater than this, the ampacities listed in the table should be multiplied by the proper correction factor as given in Tables 18, 19, 21, and 22 of Div. 12.

32. Mechanical strength of wires. Wires should be of sufficient size so that their mechanical strength will be great enough to withstand the strains of installation and of the service to which they will be subjected. For general overhead distribution mains, no wire of soft-drawn copper smaller than 6 AWG should be used. If medium- or hard-drawn copper is used, no wire smaller than 8 AWG should be employed. For overhead outside wiring on private premises, no wire smaller than 10 AWG should be used for spans up to 50 ft and no wire smaller than 8 AWG for longer spans. Service drops from an overhead distribution main to the service-entrance conductors must not be smaller than 10 AWG if of soft-drawn copper or smaller than 12 AWG if of medium- or hard-drawn copper. The service-entrance conductors to a building shall generally not be smaller than 8 AWG copper or 6 AWG aluminum or copper-clad aluminum:

1. For installations to supply only limited loads of a single branch circuit, such as small polyphase power, controlled water heaters, and the like, they shall not be smaller than the conductors of the branch circuit. The disconnecting means must be rated not less than 15 amperes.
2. For installations consisting of not more than two two-wire branch circuits, the service disconnecting means shall have a rating of not less than 30 amperes.
3. One-family residences must have not less than a 3-wire 100-ampere service.
4. For other installations the service disconnect must be no smaller than 60 amperes.

In the interior wiring of buildings no wire smaller than 14 AWG can be used except for the following special cases:

1. For fixture wiring, 16 AWG up to 100 ft and 18 AWG up to 50 ft for fixture wire can be used.
2. Flexible cord as small as 18 AWG can be used where supplied as part of a specific listed appliance or luminaire. In addition, flexible cord as small as 16 AWG can be used for extension cords, or as small as 18 AWG if listed for this purpose. These cords (18 AWG)

usually have fuses incorporated into their plugs. Also, tinsel cords or cords having equivalent characteristics of smaller size may be approved for use with specific appliances.

3. Smaller wire (down to 18 AWG) can be used for stationary motors, rated 1 hp or less, for the conductors between a motor and a separate terminal enclosure. The wire must meet the minimum ampacity requirements for motor circuit generally and the separate terminal enclosure must meet the requirements in NEC 430.245(B).
4. For elevator, dumbwaiter, and escalator wiring, except for conductors which form an integral part of control equipment, the minimum allowable size of conductors is as follows:
 - a. *Traveling cables.*
 - (1) For lighting circuits, 14 AWG copper, except that 20 AWG copper or larger conductors may be used in parallel provided the carrying capacity is equivalent to at least that of 14 AWG copper
 - (2) For other circuits, 20 AWG copper
 - b. *Other wiring.* 24 AWG copper. Smaller size listed conductors are permitted.
4. For industrial machinery wiring governed by NFPA 79, *Electrical Standard for Industrial Machinery*, the following exceptions are allowed:
 - a. Conductors to moving parts: copper conductors for control purposes to continuously moving parts may be 16 AWG if all such conductors are insulated for the maximum voltage of any conductor in the cable or tubing.
 - b. Conductors to electronic programmable control I/O; and static control: copper conductors to electronic and precision devices may be 22 AWG, except that if pulled into raceways they shall not be smaller than 24 AWG, except 30 AWG may be used in jacketed multiconductor cables.
5. For remote-control limited-power and signaling circuits, 18 and 16 AWG conductors may be used provided they are installed in a raceway or a listed and cable approved enclosure or in listed flexible cords (Class 1 circuits). The National Electrical Code gives detailed rules for these cases.

33. There are certain limitations in the size of wires that it is feasible to employ to satisfy construction and installation requirements. For convenience in installation, it is seldom advisable to use larger than trade size 3 (metric designator 78) conduit. When all the wires of a circuit are run in the same conduit, this limits the size of the conductors to 500,000 cmil (336 mm²), although a larger fill is possible for certain combinations of conductor insulation and raceway materials. It is seldom wise or convenient to install conductors of larger size than 1,000,000 cmil (673 mm²). A trade size 2½ (metric designator 63) conduit is about as large as can usually be installed between floors and ceilings. In such cases, therefore, the size of wire is limited to 300,000 cmil (201 mm²) if four wires are placed in the same conduit. For open wiring, wires larger than 1,000,000 cmil are cumbersome to handle.

34. Percentage line drop, or voltage loss, can be figured as either a percentage of the voltage required at the receiver or as a percentage of the voltage impressed by the generator or other energy source on the line. For instance, in Fig. 3.27, the voltage impressed on the receivers (lamps and motor) is 220. The line loss is 11 V; hence the pressure impressed on the line is $220 + 11 = 231$ V. The voltage loss as a percentage of the voltage at the receiver is $11/220 = 0.05 = 5$ percent. The voltage loss as a percentage of the voltage impressed on the line is $11/231 = 0.048 = 4.8$ percent. In practical work the percentage loss or drop is usually taken as a percentage of the voltage required at the receivers, because this is the most convenient and direct method. In this book the term *percentage drop* refers to a percentage of the voltage required at the receivers unless otherwise noted.

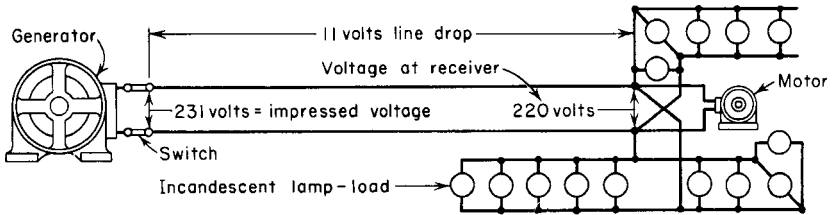


FIGURE 3.27 Percentage line drop.

35. Allowable voltage drops. The conductors of an interior-wiring system should be of sufficient size so that the voltage drop from the point of service entrance to the equipment utilizing the energy, such as lamps or motors, is not excessive. If the voltage drop is too great, the operating conditions will not be satisfactory, owing to one or more of the following causes:

1. Shortened life of lamps caused by overvoltage under light-load conditions
2. Unsatisfactory illumination under maximum-load conditions
3. Unsatisfactory motor speed, torque, or temperature

No definite standards have been adopted for the maximum allowable voltage drop in most instances. There is a good reason for this. In most cases voltage drop is an inefficiency or inconvenience, but it does not rise to the level of a safety hazard. For example, a motor run at 10% voltage drop, but with appropriate running overload protection, will have a greatly reduced life span, but not create a shock, fire, or electrocution hazard. The National Electrical Code does note however, in a nonmandatory explanatory note, that if the voltage drop from the point of service entrance to the final outlet does not exceed 5%, there will be "reasonable efficiency of operation." The note also explains that not more than 3% voltage drop should occur in the feeder system ahead of the branch-circuit supply points, which leaves the other 2% for the branch circuit.

There are some instances, however, where voltage drop does directly bear on safety and the NEC contains rules accordingly. For example, if the conductors to a fire pump are not sized to prevent the voltage drop while starting (that is, while under locked-rotor conditions) from exceeding 15%, measured at the controller terminals, the control contactor for the motor may chatter and not reliably hold in, resulting in a failure to start with disastrous consequences.

Values of voltage drop that will be in accordance with good practice for different systems are given in Table 48 of Div. 12.

36. Allowance for growth in planning circuits. In installing the wiring for electric power and lighting installations, the demands that may be placed upon the system in the future should be carefully considered. It requires a relatively small additional expense, when installing a system, to put in wires somewhat larger than are required by the present lighting equipment. On the other hand, if the wires installed are of just sufficient size to accommodate the present load and it is necessary to increase the load at some future date, the cost of removing the old installation and installing a new one is considerable.

Standards of illumination have been continually increasing, and it is reasonable to assume from the trend of practice that the general level of illuminating intensities employed will be still further increased. Both employees and employers are appreciating more and more the benefits to be gained from high intensities of illumination. On the other hand, steady advances have been and continue to be made in the area of energy efficiency, driven by energy costs and recent environmental concerns. To a large degree these efforts have blunted the former steady increases in demand for electricity. Former editions of this book have run demand calculations on these pages based on the current code minimum requirements, along with a second set of calculations described as “future load” based on the maximum load that could be connected under conditions of continuous loading. In order to maintain continuity with prior editions, this edition will make the same calculations, but describe the results as “maximum allowable loads” instead.

It would certainly be good practice to limit the initial loading of branch lighting circuits to 50 percent of their maximum allowable load, but that much reserve capacity may be impossible to sell in today’s economic environment. In the end, it is the owner’s decision, because the NEC does not mandate design flexibility. Over 70 years ago the NEC stated in its opening section, and continues to say today, that “This Code contains provisions that are considered necessary for safety. Compliance therewith and proper maintenance results in an installation that is essentially free from hazard but not necessarily efficient, convenient, or adequate for good service or future expansion of electrical use.” Just as with voltage drop, the designer and owner have to make the difficult decisions around how much additional capacity beyond code minimums to incorporate into their facilities.

The layout and equipment in industrial and commercial buildings are continually being changed. These changes frequently involve increased load requirements. Therefore, no definite rules can be laid down for the proper allowance that should be made for growth, since conditions vary so widely for different installations. Each installation requires careful study with respect to probable future load requirements. The actual connected loads on the circuit should be increased by a sufficient amount so that the size of circuit will be ample to accommodate whatever loads it is estimated may be connected to the circuit in the future. For good general practice, here again it is recommended that the allowance for growth be at least 50 percent of the initial load, and here again the owner may well be unable to afford what that would entail.

37. Calculation of load in amperes on two-wire branch lighting and appliance circuits. The actual load in amperes on a two-wire branch lighting circuit is equal to the sum of the watt ratings of the individual loads connected to the circuit divided by the voltage of the circuit. Each heavy-duty lampholder outlet for lighting other than general illumination should be figured at 600 VA. Each plug receptacle outlet connected to the circuit should be figured at at least 180 VA per outlet. If the load to be connected to a plug outlet is known to be more than 180 VA, its load should be considered as the actual known wattage that it will supply.

For show-window lighting a load of not less than 200 VA for each linear foot of show window, measured horizontally along its base, may be allowed in lieu of the 180 VA per outlet. If fixed multioutlet assemblies are supplied by the circuit, each 5 ft (1.52 m) or fraction thereof of each separate and continuous length of the assembly should be considered as a load of 180 VA, except in locations in which a number of appliances are likely to be used simultaneously. In that case each 1 ft (305 mm) or fraction thereof should be considered as a load of 180 VA. In computing the load of lighting units that employ ballasts, transformers, or autotransformers, such as fluorescent-lighting units, the load must be based on the volt-ampere load or current of the complete unit and not simply the wattage of the lamp. For incandescent-lighting units the volt-ampere loads will be the same as the rated watts of the lamps. For branch lighting circuits it is sufficiently accurate to assume that the total

volt-ampere load is equal to the direct numerical summation of the individual volt-ampere loads. This is also true for the summation of lighting loads in terms of amperes.

The future load on branch lighting and appliance circuits in commercial and industrial installations is taken as 80 percent of the rating of the branch circuit because the lighting loads in these occupancies almost always operate for continuous periods (defined in the NEC as 3 hours or more. As covered in this division beginning with Sec. 89, most electrical devices cannot be safely operated above 80% of their ratings for continuous periods.

The standard sizes of lamps are given in Table 1 of Div. 12 and more complete data in Div. 10.

EXAMPLE A two-wire, 120-V, 20-A branch lighting circuit supplies five 200-W incandescent lamps. Determine the actual connected and probable future load.

SOLUTION Present connected load = $\frac{5 \times 200}{120} = 8.3 \text{ A}$

Maximum allowable load = $0.80 \times 20 = 16 \text{ A}$

EXAMPLE A two-wire, 120-V, 20-A branch lighting circuit supplies four 150-W and three 200-W incandescent lamps. Determine the actual connected and probable future load.

SOLUTION Present connected load = $\frac{(4 \times 150) + (3 \times 200)}{120} = 10 \text{ A}$

Maximum allowable load = $0.80 \times 20 = 16 \text{ A}$

38. Calculation of load in amperes on three-wire branch lighting and appliance circuits. The actual and future loads in amperes on either side of a three-wire branch lighting circuit can be computed in the same manner as for two-wire circuits in Sec. 37, the voltage between the neutral and either outside wire and the loads connected between the neutral and the one outside wire under consideration being used.


EXAMPLE A three-wire, 120/240-V, 15-A branch lighting circuit supplies the loads in the following diagram. Determine the actual connected and probable future loads.

SOLUTION Present connected load 1 to $N = \frac{4 \times 200}{120} = 6.7 \text{ A}$

Present connected load 2 to $N = \frac{5 \times 150}{120} = 6.3 \text{ A}$

Maximum allowable load 1 to $N = 0.80 \times 15 = 12 \text{ A}$

Maximum allowable load 2 to $N = 0.80 \times 15 = 12 \text{ A}$



39. Calculation of load in amperes on branch electric-range circuits. For electric ranges and other cooking appliances of $1\frac{3}{4}$ -kW rating or less, the load on the branch circuit is equal to the ratings of the appliances. For ranges or cooking appliances of

ratings greater than $1\frac{3}{4}$ kW the watt load on the branch can be computed in accordance with Table 2 of Div. 12.

For two-wire branches, the load in amperes is equal to the watt load, as determined above, divided by the voltage of the circuit. For three-wire branches, the load in amperes on each outside wire of the circuit is equal to the watt load, as determined above, divided by the voltage between outside wires. The load in amperes on the neutral wire can be taken as 70 percent of the load on an outside wire.

40. Calculation of lighting and appliance load on two-wire dc or single-phase distribution panels. The actual connected load is equal to the sum of the actual connected loads of all the branch circuits fed from the panel. Each appliance circuit in the panel should be figured at at least 10 A for a circuit rated 15 A and at least 15 A for a circuit rated 20 A. The future load on the panel is figured in the same manner as the actual load, the future loads of the branch circuits being used instead of the actual loads and each appliance or spare circuit being figured at at least 15 A. If an appliance circuit is of a type allowing more than 15 A, the circuit should be figured at its maximum allowable amperage as given in Div. 9.

EXAMPLE Determine the actual connected and maximum allowable future loads on a two-wire 120-V lighting panel supplying the following circuits:

Circuit number and rating	Present load, amp	Maximum allowable load, amp
1–15 amp lighting	10	12
2–15 amp lighting	7	12
3–20 amp lighting	9	16
4–15 amp appliance	10	15
5–15 amp lighting	8	12
6–20 amp appliance	15	20
7–15 amp spare		15
8–15 amp spare		15
	59	117

Present connected load on panel = 59 A

SOLUTION Maximum allowable load = 117 A

41. Calculation of lighting and appliance load on three-wire dc or single-phase distribution panels. The actual connected load on each side of the panel is computed in the same manner as for two-wire panels in Sec. 40, using the voltage between the neutral and one outside wire and making separate calculations for each line wire. If the circuits have been well laid out, there should not be much difference between the loads on the two sides of the panel.

EXAMPLE A three-wire 120/240-V lighting panel supplies the following circuits. All branch circuits are two-wire, 120 V. Determine the actual connected and the probable future loads. All circuits are rated 15 A.

Branch circuits between wire 1 and neutral			Branch circuits between wire 2 and neutral		
Circuit	Present load, amp	Maximum allowable load, amp	Circuit	Present load, amp	Maximum allowable load, amp
1	7	12	1	8	12
2	8	12	2	7	12
3	8	12	3	8	12
4	7	12	4 (receptacle)	10	15
5 (plug)	10	15	5 (spare)		15
6 (spare)		15	6 (spare)		15
	40	78		33	81

SOLUTION The present connected load would be taken as 40 A. The maximum allowable load would be taken as 81 A.

42. Calculation of lighting and appliance load on two-phase three-wire distribution panels. The loads for the two-line wires are computed as in Sec. 41. The actual and future loads on the common wire of the panel are taken as equal to 1.41 times the actual and future loads, respectively, of the more heavily loaded side of the panel.

EXAMPLE A three-wire two-phase 120-V lighting panel supplies the same circuits on the two sides of the panel as given in the example under the three-wire single-phase panel. Determine the actual connected and probable future loads.

SOLUTION The actual connected load on each outside wire of the panel would be taken as 40 A.

The maximum allowable load on each outside wire of the panel would be taken as 81 A.

The actual connected load on the neutral would be $1.41 \times 40 = 56.4$ A.

The future load on the neutral would be $1.41 \times 81 = 114.2$ A.

43. Calculation of lighting and appliance load on four-wire three-phase distribution panels. The actual connected load on any one bus except the neutral bus is computed as in Sec. 41. The load on each of the four buses usually is taken as being equal to that of the most heavily loaded outside bus. Note that this is only true for the neutral bus in the unusual case (true in this example) where the entire load is connected from one of the lines to the neutral. Line-to-line load, such as 240 V electric heating appliances, does not impact the loading on the neutral bus.

44. Fundamentals of load calculations on mains and feeders. In some cases the carrying capacity of feeders or mains need not be so great as the total ampere load of all the equipment supplied by the circuit. This is due to the fact that all the apparatus may not be operating at the same time or, if operating, may not all be taking full-load current from the line at the same time. A demand factor is employed to determine the maximum current that it is estimated the circuit will ever be required to carry. A demand factor is the ratio between the maximum current that the circuit will ever have to carry and the total load connected to the

circuit. The maximum-demand current of a circuit, therefore, is equal to the total connected load times the proper demand factor (see Table 4, Div. 12, for lighting demand factors; Table 6, Div. 12, for maximum-demand factors for motor circuits; Table 2, Div. 12, for demand factors for household electric ranges, wall-mounted ovens, counter-mounted cooking units, and other household cooking appliances; and Table 3, Div. 12, for demand factors for household electric clothes dryers). If four or more fastened in place appliances, other than electric ranges, clothes dryers, air-conditioning equipment, or space-heating equipment, are connected to the same feeder or main in a one-family, two-family, or multifamily dwelling, a demand factor of 75 percent may be applied to the nameplate-rating load. The computed load of a feeder supplying fixed electrical space-heating equipment shall be the total connected load on all branch circuits, except that if reduced loading of the conductors results from units operating on duty cycle, intermittently, or from all units not operating at one time, the authority enforcing the Code may grant permission for feeder conductors to be of a capacity less than 100 percent, provided the conductors are of sufficient capacity for this load.

45. Calculation of load on two-wire dc or single-phase ac lighting and appliance feeders or mains. The ampere or watt load is equal to the sum of the maximum-demand lighting and portable-appliance load, the maximum-demand fixed-appliance load, and the maximum-demand electric range load. The present or future maximum-demand lighting and portable-appliance load is equal to the sum of the actual or future lighting and portable-appliance loads fed from the circuit times the proper demand factor as determined from Table 4, Div. 12. The maximum-demand fixed-appliance load is figured in accordance with Sec. 44. The maximum-demand electric-range load is figured in accordance with Table 2, Div. 12.

In one-family dwellings, in individual apartments of multifamily dwellings having provisions for cooking by tenants, and in each hotel suite having cooking facilities or a serving pantry, a feeder load of not less than 1500 VA for each two-wire 20-A branch circuit (and there must be at least two such circuits) shall be included for small appliances (portable appliances supplied from receptacles of 15- to 20-A rating) in pantry and breakfast room, dining room, kitchen, and laundry. This is a National Electrical Code requirement.

EXAMPLE An apartment in a multifamily dwelling has a total floor area of 700 ft². It is not equipped with an electric range. Determine the maximum-demand present load for a two-wire 120-V feeder supplying the apartment.

SOLUTION

General lighting load from Table 4, Div. 12 = $700 \times 3 = 2100$ VA

Small-appliance load, two circuits, each at 1500 W = 3000 VA

Total computed load = 5100 VA

Application of demand factor:

3000 VA at 100% = 3000 VA

2100 VA at 35% = 735 VA

Maximum-demand load = 3735 VA

Maximum-demand current = $\frac{3735}{120} = 31.1$ A

46. Calculation of load on three-wire dc or single-phase ac lighting and appliance feeders or mains. The load on either outside wire is equal to the sum of the maximum-demand lighting and portable-appliance load, the maximum-demand fixed-appliance load, the maximum-demand electric-range load, and the maximum-demand household electric-clothes-dryer load fed from that wire. The present or future maximum-demand lighting and portable-appliance load is equal to the sum of the actual or future lighting and portable-appliance loads of all the panels fed from that wire times the proper demand factor as determined from Table 4, Div. 12. The maximum-demand fixed-appliance load is equal to the sum of all the fixed-appliance load fed from that wire times the proper demand factor as given in Sec. 44. The maximum-demand current for the electric-range load is equal to the maximum-demand watt range load as determined in accordance with Table 2, Div. 12, divided by the voltage between outside wires of the circuit. Refer to Sec. 45 for required allowance for small appliances in dwelling occupancies. The maximum-demand current for the household electric-clothes-dryer load is equal to the maximum-demand watt clothes-dryer load as determined in accordance with Table 3, Div. 12, divided by the voltage between outside wires of the circuit. In adding branch-circuit loads for space heating and air cooling in dwelling occupancies, the smaller of the two loads may be omitted from the total if it is unlikely that both of the loads will be served simultaneously. The air-cooling (air-conditioning) load is a motor load. Therefore for the calculation of load on circuits of this character refer to Secs. 53, 54, and 55.

The load on the neutral wire is the maximum unbalance of the load on the two sides of the system. The maximum unbalanced load is the sum of the maximum-demand lighting and portable-appliance load, the maximum-demand fixed-appliance load, and the maximum-demand electric-range load for the more heavily loaded side of the circuit. The maximum-demand household electric-range load is considered as 70 percent of the electric-range load on the outside conductors as determined from Table 2 of Div. 12. The same percentage allowance applies to clothes dryers. If the maximum unbalanced load for the neutral as determined from the above procedure is more than 200 A, then a further demand factor of 70 percent can be applied to that portion of the unbalanced load in excess of 200 A. There shall be no reduction of the neutral capacity for that portion of the load which consists of electric discharge lighting or other nonlinear loads (refer to Div. 1, Sec. 222, etc.).

The National Electrical Code allows the following optional method of calculation of load for a one-family residence or apartment unit. For each dwelling unit served by a 120/240-V or 208Y/120-V, three-wire, 100-A or larger service when the total load is supplied by one feeder or one set of service-entrance conductors, the following percentages may be used in lieu of the method of determining feeder (and service) loads detailed previously in this section.

Optional Calculation for Dwelling-Unit Load in Kilovolt-Amperes (220.82, NEC). Add the result in "A" to the result in "B" below:

- A.** 100 Percent of the first 10 kVA of all other load and 40 percent of the remainder of all other load described in this part:
 1. 3 VA per ft² for general lighting and general purpose receptacles.
 2. 1500 VA for each two-wire 20-A small-appliance branch circuit and each laundry circuit.
 3. The nameplate ratings of all appliances fastened in place, permanently connected, or located to be on a specific circuit; plus the ratings of all ranges, wall-mounted ovens, and counter-mounted cooking units; plus the ratings of any clothes dryers not connected to a laundry circuit covered in (1); plus the nameplate ratings of any water heaters.

B. Largest of the following six selections:

- 1. 100 percent of the nameplate rating(s) of the air conditioning and cooling.
- 2. 100 percent of the nameplate rating(s) of the heat pump when the heat pump is used without any supplemental electric heating.
- 3. 100 percent of the nameplate rating(s) of the heat pump compressor and 65 percent of the supplemental electric heating for central electric space-heating systems. If the heat pump compressor is prevented from operating at the same time as the supplemental heat, it does not need to be added to the supplementary heat for the total central space load.
- 4. 65 percent of the nameplate rating(s) of electric space heating if less than four separately controlled units.
- 5. 40 percent of the nameplate rating(s) of electric space heating of four or more separately controlled units.
- 6. 100 percent of the nameplate rating(s) of electric thermal storage and other heating systems where the usual load is expected to be continuous at the full nameplate value. Systems qualifying under this selection shall not be figured under any other selection in this group.

The following example is given in the National Electrical Code for explanation of the optional method of load calculation for a one-family dwelling.

EXAMPLE The dwelling has a floor area of 1500 ft² exclusive of unfinished cellar not adaptable for future use, unfinished attic, and open porches. It has a 12-kW range, a 2.5-kW water heater, a 1.2-kW dishwasher, 9 kW of separately controlled electric space heating installed in five rooms, a 5-kW clothes dryer, and a 6-A, 230-V room air-conditioning unit.

SOLUTION The air conditioner is $6 \times 230 \div 1.38$ kVA. This is less than the connected load of 9 kVA of space heating; therefore the air-conditioner load need not be included in the service calculation.

1500 ft ² at 3 VA	4.5 kVA
Two 20-A appliance outlet circuits at 1500 VA each	3.0 kVA
Laundry circuit	1.5 kVA
Range (at nameplate rating)	12.0 kVA
Water heater	2.5 kVA
Dishwasher	1.2 kVA
Clothes dryer	5.0 kVA
	<hr/> 29.7 kVA

$$\text{First 10 kVA at 100\%} = 10.00 \text{ kVA}$$

$$\text{Remainder at 40\% } (19.7 \text{ kVA} \times 0.4) = 7.88 \text{ kVA}$$

$$\text{Total general load under part "A" above} = 17,880 \text{ VA}$$

$$9 \text{ kVA of heat at 40\% } (9000 \text{ VA} \times 0.4) = 3,600 \text{ VA (Part "B")}$$

$$\text{Calculated load for service size} = 21,480 \text{ VA (Parts A+B)}$$

$$21,480 \text{ VA} \div 240 \text{ V} = 89.5 \text{ A}$$

Therefore this dwelling may be served by a 100-A service.

The neutral load is calculated under the general rules instead of this optional procedure. This load is based on the line-to-neutral loading represented in the load profile, as follows:

1500 ft ² at 3 VA	4.5 kVA
Two 20-A appliance outlet circuits at 1500 VA each	3.0 kVA
Laundry circuit	1.5 kVA
Subtotal	9.0 kVA
3 kVA at 100% (Table 5, Div. 12)	3.0 kVA
9 kVA – 3 kVA = 6 kVA at 35% (Table 5, Div. 12)	2.1 kVA
Subtotal	5.1 kVA
Range (8 kVA from Table 2, Div. 12 at 70% per Sec. 46)	5.6 kVA
Clothes dryer (5 kVA at 70% per Sec. 46)	3.5 kVA
Dishwasher	1.2 kVA
	5.0 kVA
Total	15.4 kVA

The minimum size for the neutral of this service is $15,400 \text{ VA} \div 240 \text{ V} = 64.2 \text{ A}$

47. Calculation of load on four-wire two-phase lighting and appliance feeders or mains. The ampere loads on either phase can be computed as in Sec. 45, each phase being considered a separate single-phase circuit.

48. Calculation of load on three-wire two-phase lighting and appliance feeders or mains. For the two-line wires proceed as in Sec. 46.

The load on the neutral wire will be 1.41 times the load for the neutral as determined in accordance with the procedure of Sec. 46. If the load on the neutral as determined in this manner is more than 200 A, no further demand factor can be applied to that portion of the load for this type of system.

EXAMPLE Determine the present and future loads for a three-wire two-phase feeder in an industrial building of 9000 ft² supplying the following loads:

Panels connected between wire 1 and common wire			Panels connected between wire 2 and common wire		
Panel	Present load, amp	Max. allowable	Panel	Present load, amp	Max. allowable
A	50.8	65.2	A	47.8	61.3
B	43.7	55.6	B	52.7	67.9
C	41.4	54.7	C	36.8	45.9
	135.9	175.5		137.3	175.1

SOLUTION From Table 4, Div. 12, the demand factor is 1.0.

Present load on wire 1 = $135.9 \times 1.0 = 135.9 \text{ A}$.

Maximum allowable load on wire 1 = $175.5 \times 1.0 = 175.5 \text{ A}$.

Present load on wire 2 = $137.3 \times 1.0 = 137.3 \text{ A}$.

Maximum allowable on wire 2 = $175.1 \times 1.0 = 175.1 \text{ A}$.

Present load on common wire = $137.3 \times 1.41 = 193.6 \text{ A}$.

Maximum allowable load on common wire $175.5 \times 1.41 = 248 \text{ A}$.

49. Calculation of load on five-wire two-phase lighting and appliance feeders or mains. For the four line wires proceed as for the line wires in Sec. 46.

The following example shows how to compute the maximum demand for the four-line conductors and the common neutral of a typical five-wire two-phase system:

EXAMPLE The actual connected loads on the four outside wires of a five-wire two-phase lighting feeder are 100.5, 97.8, 95.4, and 100.0 A. The feeder is supplying the load in a factory building. Determine the present load for the neutral wire.

SOLUTION From Table 4, Div. 12, the demand factor is 1.0. The load on the neutral = $(100.5 \times 1.0)1.41 = 142$ A.

50. Calculation of load on four-wire three-phase lighting and appliance feeders or mains. The ampere load on any outside wire is computed as in Sec. 46, except for the calculation of the maximum-demand current for the electric-range load. The maximum-demand current for the range load should be determined from the following formula:

$$\text{Maximum-demand range current} = \frac{\begin{array}{l} \text{watt load as determined from Table 2,} \\ \text{Div. 12, for twice the number of range} \\ \text{connected between any two outside wires} \end{array}}{2 \times \text{voltage between an outside wire and neutral}} \quad (1)$$

For the ampere load of the neutral wire, proceed as for the neutral in Sec. 46.

EXAMPLE Thirty ranges rated at 12 kW each are supplied by a three-phase four-wire 120/208-V feeder, 10 ranges on each phase. Determine the maximum-demand current for each outside wire.

SOLUTION As there are 20 ranges connected to each ungrounded conductor, the load should be calculated on the basis of 20 ranges (or in case of unbalance, twice the maximum number between any two-phase wires), since diversity applies only to the number of ranges connected to adjacent phases and not to the total.

The current in any one conductor will reflect the contribution of load from each of the adjacent phase connections. Since the 20 connected ranges have a table demand of 35 kVA, each adjacent phase is contributing 17.5 kVA of load to the conductor. When adjacent phases contribute load, the combination is never the sum of each, because the phase connections reach their load maximums at different points in time. Instead, for equal loading, it is the load from one-phase connection (in this case 17.5 kVA) multiplied by $\sqrt{3}$. To determine current, divide VA by line-to-line voltage. In the case of three-phase four-wire wye-connected systems, the line-to-line voltage is the line-to-neutral voltage multiplied by $\sqrt{3}$. Therefore, the line current is simply one-half the total watt load of two adjacent phases divided by the line-to-neutral voltage, because the $\sqrt{3}$ terms in both numerator and denominator cancel. Therefore, the current in the feeder conductor would be

$$17,500 \div 120 = 146 \text{ A}$$

51. Determining size of distribution panel buses. The required ampere capacity of the buses in distribution panels can be calculated in the same manner as given in the preceding sections for the calculation of the ampere loads on feeders and mains.

52. Minimum allowable load to use for any lighting feeder or main. The National Electrical Code specifies definite rules for computing the minimum loads for a given area. Feeders or mains must be of sufficient size to carry safely at least the amperes required by these rules regardless of the actual connected load. The areas employed in applying the rules should be gross floor areas as determined from the outside dimensions of the building and the number of floors. Floor areas of open porches, garages in connection with dwelling occupancies, and unfinished and unused spaces in dwellings, unless adaptable for future use, need not be included.

The minimum allowable watt load for the feeder or main supplying power to any area for lighting and appliances must be equal to the sum of the minimum allowable general-lighting load, the portable-appliance load, the fixed-appliance load (other than ranges), fixed electrical space-heating equipment load, and the electric-range load. The minimum allowable general-lighting load is equal to the area times the minimum allowable watts per square foot for that type of area times the proper demand factor. The minimum allowable watts per square foot and the allowable demand factors for different types of areas are given in Table 5 of Div. 12. The portable-appliance load requirements are given in Sec. 5 of Div. 12. If in normal operation the load on the installation will continue for 3 hours or more, as in store lighting, the minimum allowable load, as determined above, must be increased by 25 percent. The fixed-appliance load is equal to the summation of the watt rating of the actual fixed appliances installed in the area if the number of such appliances is four or less. For electric ranges, and other cooking appliances of $1\frac{3}{4}$ -kW rating or less, a load equal to the summation of the watt ratings of the ranges or appliances installed must be included. For electric ranges and other cooking appliances rated more than $1\frac{3}{4}$ kW, the minimum allowable load can be computed for Table 2 of Div. 12. If a number of ranges are supplied by a three-phase four-wire feeder, the minimum allowable watt load should be computed from the following formula:

$$\text{Minimum allowable range watt load} = 3 \times \frac{\text{watt load as determined from Table 2, of Div. 12, for twice the number of ranges connected between any two outside wires}}{2} \quad (2)$$

The minimum allowable load for motor circuits is identical with the values obtained from the instructions of Secs. 53 and 54.

The minimum allowable load for circuits supplying both motors and other loads is equal to the motor load plus the minimum allowable load of other types. After the minimum allowable voltampere load has been determined, the corresponding ampere load can be determined from the following formulas and instructions, depending upon the type of electric system employed:

$$I = \frac{\text{minimum allowable voltamperes}}{KE} \quad (3)$$

where $K = 1$ for two-wire dc or two-wire single-phase ac

$= 1.73$ for three-wire three-phase ac

$= 2$ for three-wire dc, three-wire single-phase ac, three-wire two-phase ac, or four-wire two-phase ac

- = 3 for four-wire three-phase wye-connected ac
- = 4 for five-wire two-phase ac
- E = voltage between outside wire and neutral if the system has a neutral; otherwise the voltage between any two line wires
- I = current in any line wire except the neutral

For neutral for three-wire dc, three-wire single-phase ac, or four-wire three-phase, follow instructions given in Sec. 46.

For neutral for three-wire or five-wire two-phase, follow instructions given in Secs. 48 and 49.

EXAMPLE Determine the minimum allowable loading of a feeder supplying a multifamily dwelling having an area of 30,800 ft² with 44 apartments. There is no electric-range load and laundry facilities are owner provided.

SOLUTION From Sec. 5, Div. 12, 3.0 VA must be allowed for each square foot plus 3000 VA for appliances for each apartment. The demand factor from Table 5A of Div. 12 is 1.0 for the first 3000 VA, 0.35 for the next 117,000 VA, and 0.25 for all load in excess of 120,000 VA.

$$\text{Lighting load} = 3 \times 30,800 = 92,400$$

$$\text{Appliance load} = 44 \times 3000 = 132,000$$

$$\text{Total load based on area} = 224,400 \text{ VA}$$

Minimum allowable voltampere load

$$\begin{aligned} &= 3000 + (117,000 \times 0.35) + (224,400 - 120,000)0.25 \\ &= 70,050 \text{ VA} \end{aligned}$$

For a two-wire 120-V single-phase or dc system:

$$I = \frac{70,050}{120} = 584 \text{ A}$$

For a three-wire 120/240-V single-phase or dc system:

$$I(\text{outside wires}) = \frac{70,050}{2 \times 120} = 292 \text{ A}$$

$$I(\text{neutral}) = 200 + (92 \times 0.70) = 264.4 \text{ A}$$

For a four-wire 115-V two-phase system:

$$I = \frac{70,050}{2 \times 115} = 304.6 \text{ A}$$

For a three-wire 115-V two-phase system:

$$I(\text{outside wires}) = \frac{70,050}{2 \times 115} = 304.6 \text{ A}$$

$$1.41 \times 304.6 = 429.5 \text{ A}$$

$$(\text{common wire}) = 429.5 \text{ A}$$

For a five-wire 115/230-V two-phase system:

$$I(\text{outside wire}) = \frac{70,050}{4 \times 115} = 152.3 \text{ A}$$

$$I(\text{neutral}) = 1.41 \times 152.3 = 214.7 \text{ A}$$

For a four-wire 208Y/120-V three-phase system:

$$I(\text{outside wires}) = \frac{70,050}{3 \times 120} = 194.6 \text{ A}$$

$$I(\text{neutral}) = I(\text{outside wire}) = 121 \text{ A}$$

EXAMPLE Determine the minimum allowable loading for a three-wire 120/240-V feeder supplying an apartment house having a total floor area of 32,000 ft² with 40 apartments. One-half of the apartments are equipped with electric ranges of 10 kW each and laundry facilities are owner provided.

SOLUTION From Sec. 5, Div. 12, 3 VA must be allowed for each square foot plus 3000 VA for appliances for each apartment. The demand factor for the lighting and appliance load from Table 5A of Div. 12 is 1.0 for the first 3000 VA, 0.35 for the next 117,000 VA, and 0.25 for all load in excess of 120,000 VA. From Table 2 of Div. 12, the maximum demand for the range load is 35 kW.

Lighting load = $3 \times 32,000$	= 69,000
Appliance load = 40×3000	= 120,000
Total lighting and appliance load	= 216,000 VA
Minimum allowable lighting and appliance load 3000	
+ $(117,000 \times 0.35) + (216,000 - 120,000)0.25$	= 67,950 VA
Range load	= 35,000 VA
Total minimum allowable voltampere load	= 102,950 VA

$$I(\text{outside wires}) = \frac{102,950}{2 \times 120} = 429 \text{ A}$$

Neutral feeder:

Lighting and small-appliance load = 67,950 VA	
Range load, 35,000 W at 70% = 24,500 VA	
Computed load (neutral) = 92,450 VA	
92,450 ÷ 240 = 385 A	

Further demand factor:

200 A at 100% = 200 A	
185 A at 70% = 130 A	
Maximum-demand neutral wire = 330 A	

EXAMPLE Determine the minimum allowable general-lighting load for a feeder supplying an office building having an area of 100,000 ft².

SOLUTION From Table 4, Div. 12, $3\frac{1}{2}$ VA plus 1 VA for receptacle loads must be allowed per square foot. From Table 5A, Div. 12, the demand factor is 1.0.

Voltampere load based on area = $100,000 \times 4.5 = 450,000$ VA

For a four-wire 120/208-V three-phase system:

$$I(\text{outside wires}) = \frac{450,000}{3 \times 120} = 1250 \text{ A}$$

$$I = 200 + (1250 - 200)0.70$$

$$= 935 \text{ A}$$

53. Calculation of load on motor branch circuits. For continuous-duty motors the load on the branch circuit feeding a single motor is taken as 125 percent of the full-load rated current of the motor. The load on a branch circuit supplying a motor in a class of service having short-time duty depends upon the character of the loading. In the majority of cases the load need not be greater than the percentages of the full-load rated currents given in Table 12 of Div. 12. The average full-load rated currents of the different types and sizes of motors are given in Tables 7 to 10 of Div. 12.

The load on conductors connecting the secondary of a wound-rotor, polyphase induction motor to its controller is taken as 125 percent of the full-load secondary current of the motor for continuous-duty motors and not less than the percentages given in Table 12 of Div. 12 of the full-load secondary current for short-time-duty motors. The loads on the conductors connecting the controller with the secondary resistors must be taken at not less than the proper percentage, as given in Table 13 of Div. 12, of the full-load secondary current. The value of the full-load secondary current, if not marked on the nameplate of the motor, should be obtained from the manufacturer of the motor, since its value will depend upon the design of the motor. For preliminary studies the secondary current may be taken to be equal to the motor full-load line current for values of full-load current up to about 20 A. For larger motors the secondary current is usually less than the full-load line current. For a motor with a full-load line current of about 50 to 70 A, the secondary current is about two-thirds of that value; for a full-load line current of about 80 to 120 A, the secondary current is about one-half of that value; for a full-load line current of about 150 to 250 A, the secondary current is about one-third the full-load line value.

It is important to recognize that most motor circuits divide the responsibility for protecting motor-circuit conductors against failure. If the motor is overloaded for a sustained period, protective devices must take the motor off the line before the conductors, the motor windings, or both fail to the point of creating a fire hazard. To this end, the NEC requires running overload protection, either built into the drive mechanism, or in thermal protective devices within the motor, or in separate overload relays. Running overload protection is usually set at 125 percent of the rated motor full-load current. Conductors and motor windings can carry overloads for some time before failing in this way, and for this reason properly arranged running overload protection does not open the circuit unless the overload is sustained for a period running from tens of seconds to many minutes, depending on the degree of overload. In fact motors under some duty cycles, such as elevator motors (intermittent duty) that could only operate continuously in a building of infinite height, do not even require running overload protection. Because overload protection will operate correctly at any point in the motor circuit, it need not be installed at the point where the circuit originates.

On the other hand, a short circuit or a ground fault in a motor circuit must be cleared as close to instantaneously as possible, certainly within a few cycles and preferably within a

fraction of a cycle. Most overload protective devices will not respond in this way. Further, since such a failure could occur at any point on a motor circuit, the protective device must normally be installed where the circuit originates, although there are some limited allowances for taps. Motor circuits use fuses or circuit breakers, or other devices based on similar principles of operation, to achieve this protection, but they are not sized to the conductor in the same way as on other circuits. For all these reasons the NEC very carefully avoids describing these protective devices as “overcurrent protection.” Overcurrent protection is protection against all forms of conductor and component overheating, whether by sustained overload or by short circuits and ground faults, and these devices are not that. They are, by NEC description and point of fact, “short-circuit and ground-fault protective devices.”

54. Calculation of load on motor feeders and mains. Two values of load should be computed for motor feeders or mains: one the maximum-demand starting current and the other the maximum-demand running current. The maximum-demand running current can be used in determining the size of wire required to carry the current safely. Although this meets the requirements of the NEC, many authorities consider it better practice to use the maximum-demand starting current in determining the size of wire according to carrying capacity. This builds in some leeway to accommodate sustained overloads on several motors simultaneously. The maximum-demand running current is used for computing the voltage drop of the circuit. The maximum-demand starting current is effectively employed in determining the proper size of short-circuit and ground-fault protective devices for the circuit, because the short-circuit and ground-fault protective device must be able to hold in when the largest motor is trying to start, which is a locked-rotor condition until rotation begins. Values of the average starting currents of motors are given in Tables 42 and 43 of Div. 12.

The National Electrical Manufacturers Association (NEMA) adopted in 1940 a standard of identifying code letters that must be marked by manufacturers on motor nameplates to indicate the motor kilovolt-ampere input with locked rotor. These code letters with their classification are given in Table 42 of Div. 12. In determining the starting current to employ for circuit calculations, use values from Table 43 of Div. 12.

In many installations in which the number of motors exceeds five, all the motors will not be running at full load at the same time. It is general practice, therefore, on such feeders or mains to use a maximum-demand factor so that the estimated maximum-demand current is less than the sum of the full-load rated currents of all the motors fed from the circuit. Values of maximum-demand factors that have been found satisfactory for ordinary installation are given in Table 6 of Div. 12. It should be remembered, in applying these demand factors, that they are average values satisfactory for ordinary installations. Before they are used, a careful study of the operating conditions of the plant should be made to determine whether the conditions of instantaneous loading of the motors will come within the average conditions or whether there are special requirements that will submit the feeders to a greater loading than will be taken care of by these factors.

The NEC provision that allows the application of demand factors operates by “special permission,” which is the written permission from the authority enforcing the code. Some authorities recommend that no demand factor be used in determining the size of circuit to install so that the additional current capacity, thus allowed in the circuit, will give some spare capacity for growth. On the other hand, one of the major and repeated areas of discussion by the code making panel responsible for load calculations involves the repeated and well documented oversizing of industrial feeders in this area. Electric utilities know how much power they provide to their customers, and it too often does not compare well with load calculations run without appropriate demand factors. The express allowance for the judicious use of demand factors in the NEC for these loads is something that well

deserves careful consideration. The factors given in Table 6 of Div. 12 are an excellent place to start. Refer to Sec. 36 for further discussion on allowance for growth.

The following formulas give the methods of computing the maximum-demand starting and running currents for motor feeders and mains:

$$\left(\begin{array}{c} \text{Starting} \\ \text{current} \end{array} \right) = \left(\begin{array}{c} \text{starting current} \\ \text{of largest motor} \end{array} \right) + \left(\begin{array}{c} \text{demand} \\ \text{factor} \end{array} \right) \left(\begin{array}{c} \text{sum of full-load rated currents} \\ \text{of all the motors except largest} \end{array} \right) \quad (4)$$

$$\left(\begin{array}{c} \text{Running} \\ \text{current} \end{array} \right) = \left(\begin{array}{c} 1.25 \times \text{full-load current} \\ \text{of largest motor} \end{array} \right) + \left(\begin{array}{c} \text{demand} \\ \text{factor} \end{array} \right) \left(\begin{array}{c} \text{sum of full-load rated currents} \\ \text{of all the motors except largest} \end{array} \right) \quad (5)$$

If a number of motors of equal horsepower rating are the largest in the group supplied by the circuit, one of these motors should be taken as the largest motor for the calculation of the load on the circuit.

If two or more motors must be started at the same time, it will generally be necessary to increase the load on the circuit above the values obtained from Eqs. (4) and (5).

EXAMPLE Determine the load on a 230-V feeder supplying two 10-hp and two 15-hp motors. All the motors are the three-phase, squirrel-cage induction, normal-starting-current type started at reduced voltage.

SOLUTION From Table 10 of Div. 12, the full-load current of a 10-hp 230-V squirrel-cage induction three-phase motor is 28 A and the full-load current of a 15-hp motor is 42 A. The starting current of a 15-hp squirrel-cage induction motor started at reduced voltage from Table 43 of Div. 12 is 250 percent of the full-load current with an inverse time branch circuit breaker. There has been no credit given for reduced-voltage starting effective with the 1996 NEC.

$$\begin{aligned} \text{Maximum-demand starting current} &= (2.50 \times 42) + 42 + (2 \times 28) \\ &= 84 + 42 + 56 \\ &= 203 \text{ A} \end{aligned}$$

$$\begin{aligned} \text{Maximum-demand running current} &= (1.25 \times 42) + 42 + (2 \times 28) \\ &= 150.5 \text{ A} \end{aligned}$$

EXAMPLE Determine the load on a 480-V feeder supplying three 5-hp motors, two 10-hp motors, and three 15-hp motors. All the motors are of the squirrel-cage type, three-phase.

SOLUTION From Table 10 of Div. 12 the full-load current of a 5-hp three-phase squirrel-cage motor is 7.6 A; of a 10-hp motor, 14 A; and of a 15-hp motor, 21 A. From Table 6 of Div. 12 the maximum-demand factor is 0.75. Permission has been obtained for the use of this factor.

$$\begin{aligned} \text{Maximum-demand starting current} &= (2.5 \times 21) + 0.75[(3 \times 7.6) + (2 \times 14) + (2 \times 21)] \\ &= 52.5 + 0.75(22.8 + 28 + 42) \\ &= 122 \text{ A} \end{aligned}$$

$$\begin{aligned}\text{Maximum-demand running current} &= (1.25 \times 21) + 0.75[(3 \times 7.6) + (2 \times 14) + (2 + 21)] \\ &= 26.25 + 0.75(22.8 + 28 + 42) \\ &= 96 \text{ A}\end{aligned}$$

EXAMPLE Determine the load on a 240-V dc feeder supplying three 3-hp motors, five 5-hp motors, and one 20-hp motor.

SOLUTION From Table 7 of Div. 12 the full-load current of a 3-hp 240-V dc motor is 12.2 A; of a 5-hp motor, 20 A; of a 20-hp motor, 72 A. The starting current of a dc motor from Table 43 of Div. 12 is 150 percent of its full-load current. From Table 6 of Div. 12 the maximum demand factor for nine motors is 0.75. Permission has been obtained for the use of this factor.

$$\begin{aligned}\text{Maximum-demand starting current} &= (1.50 \times 72) + 0.75[(3 \times 12.2) + (5 \times 20)] \\ &= 108 + 0.75(36.4 + 100) \\ &= 108 + 102 = 210 \text{ A}\end{aligned}$$

$$\begin{aligned}\text{Maximum-demand running current} &= (1.25 \times 72) + 0.75[(3 \times 12.2) + (5 \times 20)] \\ &= 90 + 0.75(36.4 + 100) \\ &= 90 + (0.75 \times 136.4) \\ &= 90 + 102 = 192 \text{ A}\end{aligned}$$

55. Load on combined motor and lighting circuits. If both motors and lamps are fed from the same circuit, proceed as follows in determining the total load of the circuit:

1. Determine the lighting and appliance load.
2. Determine the motor load.
3. Total load is equal to the sum of the lighting and motor loads.

56. General considerations in computing voltage drop. As covered in Sec. 35, voltage drop in a circuit is usually a design issue and not a matter of code enforcement. The calculations that follow are conservative, and biased toward aggressive designs that will minimize voltage drop. The reader is cautioned to consider the design objectives of the owner, which may not be as aggressive, and modify the parameters in these calculations accordingly. For example use of the maximum allowable load for lighting circuits is probably excessive in many instances. When calculations are made for the voltage drop in a circuit, the analysis that follows uses the maximum allowable current (Sec. 36) for lighting and appliance circuits, the maximum running current with allowance for growth (Secs. 36 and 54) for motor feeders or mains, and the full-load current for motor branch circuits.

The resistance employed in the calculations should be the value corresponding to the operating temperature of the conductors. The following rules with respect to the values of

operating temperature to employ in voltage-drop calculations represent good practice for wires that are loaded between 50 and 100 percent of their allowable carrying capacity. Note that the values in NEC Tables 8 and 9 now use 75°C as the starting point for dc resistance tabulations to account for conductor operating temperatures

1. Use 50 to 60°C for wires insulated with Code or moisture-resistant rubber compounds, synthetic rubberlike compounds, or thermoplastic compounds: Type TW wire.
2. Use 70°C for wires insulated with heat-resistant rubber compounds, varnished cambric, paper, thermoplastic, slow-burning compounds, or weatherproof compounds: Types RHW, THW, THWN, and MI.
3. Use 90°C for all wires not included in Pars. 1 and 2. For wires loaded less than 50 percent of their allowable carrying capacity the temperature should be reduced from 15 to 20°C below the above values. The resistance of copper wire varies somewhat with the method of drawing the wire. As a general rule the voltage drop of a circuit will depend upon several variables, the value of which cannot possibly be determined accurately. It is not practical, therefore, to spend too much time in accurately determining the value of the resistance of the wires. An average value of 98 percent conductivity for copper wires is generally satisfactory. Copper of 98 percent conductivity has a resistivity of approximately 10.6 $\Omega/\text{cmil} \cdot \text{ft}$ at 20°C, 11.2 Ω at 30°C, 11.6 at 40°C, 11.8 at 50°C, 12.3 at 60°C, and 12.7 at 70°C. Tables of resistance of wires are given in Div. 12.

The length of the circuit should be taken as the distance along the circuit from the supply end to the load center. If a load is distributed along the circuit, the total current does not flow the complete length of the circuit. Therefore, if the actual length of the circuit were used in computing the voltage drop, the drop determined would be greater than the drop that would actually occur. The load center of a circuit is that point in the circuit where, if the load were concentrated at that point, the drop would be the same as the voltage drop to the farthest load in the actual circuit.

57. The load center of a circuit can be determined in the following manner. Multiply each load by its distance from the supply end of the circuit. Add these products for all the loads fed from the circuit and divide this sum by the sum of the individual loads. The result thus obtained is the distance from the supply end of the circuit to the load center. It is this length that should be employed in computing the voltage drop of the circuit (see solution of example in Fig. 3.28).

The load center of a group of receivers symmetrically arranged (Fig. 3.29) and all of the same output will be in the middle of the group. Always take the distance along the circuit as L , Fig. 3.29.

58. Calculation of voltage drop in dc two-wire circuits by means of formula.

The voltage drop can be calculated by means of either Eq. (6) or Eq. (7), and the size of wire to produce a given voltage drop can be calculated by Eq. (8).

$$VD = 2R \times L \times I \quad (6)$$

where VD = drop in volts in the circuit, R = resistance of wire in ohms per foot (values of resistance for copper or aluminum conductors can be obtained from Table 57 of Div. 12), I = current in amperes, and L = length one way of circuit in feet, or

$$VD = \frac{2K \times L \times I}{\text{cmil}} \quad (7)$$

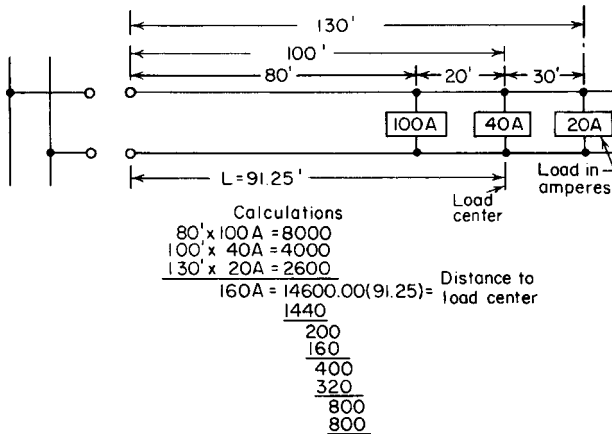


FIGURE 3.28 Method of computing location of load center.

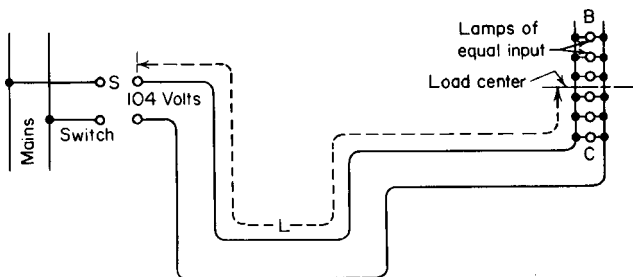


FIGURE 3.29 Location of load center.

where VD = drop in volts in the circuit; K = resistivity of material of conductor in ohms per circular mil-foot (values of K for copper conductors can be obtained from Sec. 56; sufficient accuracy will be obtained for most cases by using the following more approximate values: 12 for circuits loaded between 50 and 100 percent of their allowable carrying capacity and 11 for circuits loaded at less than 50 percent of their allowable carrying capacity); I = current in amperes; L = length one way of circuit in feet; and cmil = area of conductor in circular mils. $K = 18$ for aluminum conductors.

$$\text{cmil} = \frac{2K \times I \times L}{VD} \quad (8)$$

59. Determination of voltage drop in dc two-wire circuits by means of chart.

A graph for computing the voltage drop in circuits (Sec. 49 of Div. 12) was originally proposed by R. W. Stovel and N. A. Carle in *The Electric Journal* for June 1908. It is based on a resistivity of $10.7 \Omega/\text{cmil} \cdot \text{ft}$ of copper wire. The chart will therefore give satisfactory results for circuits loaded at less than 50 percent of their allowable carrying capacity. For most circuits which are loaded to between 50 and 100 percent of their allowable carrying

capacity, the voltage drop obtained from the chart should be increased by 10 percent. The length of the circuit that should be employed in using the chart is the distance from the supply end to the load center. The voltage drop as read from the chart is the total drop in both wires. To determine the voltage drop of a circuit from the chart, proceed as follows:

1. Start on the lower left-hand scale with the current for the circuit.
2. Follow this point vertically upward to the diagonal line for the size of wire of the circuit.
3. From this intersection proceed horizontally to the right to the diagonal line representing the length of the circuit one way.
4. At this intersection drop vertically to the voltage-drop scale.
5. The reading on the voltage-drop scale will be the drops in both wires of the circuit for lightly loaded circuits as discussed above.
6. For normally loaded circuits the voltage drop will be equal to 1.1 times the value read from the chart.

EXAMPLE What will be the voltage drop of the motor feeder for the last problem of Sec. 54 if the length of circuit is 150 ft and a 4/0 AWG Type RH wire is employed?

SOLUTION The maximum-demand running current of 195 A should be used in determining voltage drop. From Table 57 of Div. 12 a 4/0 AWG wire has 211,600 cmil and from Table 18 of Div. 12 has a carrying capacity of 230 A.

Using the formula,

$$VD \times \frac{24 \times I \times L}{\text{cmil}} = \frac{24 \times 195 \times 150}{211,600} = 3.32 \text{ V drop}$$

Using the chart, start at the bottom of the chart on the left-hand side at 195 A and follow this point vertically upward until it intersects the diagonal line marked No. 0000. From this intersection proceed horizontally to the right until the diagonal line marked 150 is reached. At this intersection drop vertically downward to the voltage-drop scale, and read 3.0 V. Since the wire is loaded to more than 50 percent of its capacity, the voltage drop equals $3.0 \times 1.1 = 3.3 \text{ V}$.

60. Determination of voltage drop in dc three-wire circuits. Either the formulas of Sec. 58 or the chart of Sec. 49, Div. 12, can be used for determining the voltage drop of dc three-wire circuits. In either case the current used should be that of the more heavily loaded outside wire and the size of conductor that of the outside conductors. The drop thus obtained from either the formula or the chart will be the drop between the outside wires. What is desired is the drop across each receiver or the drop between an outside wire and the neutral wire. The approximate voltage drop to each receiver will be one-half of the value determined from either the formula or the chart. This value will be correct for a balanced load. When the load is unbalanced, the current in the neutral wire will cause an additional voltage drop which will not have the same effect on the two sides of the circuit. Since in a well-laid-out system the load will be nearly balanced, the method given is satisfactory for most cases.

EXAMPLE Determine the voltage drop on a three-wire lighting feeder 100 ft long. The actual load on one side is 147 A, and on the other side 158 A. The future load on one side is 170 A, and on the other side 175 A. A 4/0 AWG Type TW wire is used for the outside copper conductors.

SOLUTION The future load on the more heavily loaded side should be used in determining voltage drop. A 4/0 AWG Type TW wire from Table 57, Div. 12, has 211,600 cmil, and from Table 18, Div. 12, a carrying capacity of 195 A.

Using the formula,

$$VD \times \frac{24 \times I \times L}{\text{cmil}} = \frac{24 \times 175 \times 100}{211,600} = 1.98 \text{ V}$$

Using the chart, start at the bottom of the chart on the left-hand side at 175 A and follow this point vertically upward until it intersects the diagonal line marked No. 0000. From this intersection follow horizontally to the right until the diagonal line marked 100 is reached. At this intersection drop vertically downward to the voltage-drop scale, and read 1.8 V drop. The voltage drop will be equal to $1.8 \times 1.1 = 1.98$.

The drop across each receiver is one-half of the drop determined by the formula or chart. The drop across each receiver is, therefore, 0.99 V determined from either formula or chart.

61. The voltage drop in ac circuits is affected by several factors that have no effect in dc circuits. These factors are (1) power factor of the load, (2) inductance of the circuit, (3) capacity of the circuit, and (4) increased resistance of the circuit to alternating current.

As discussed in Div. 1, when alternating current flows in a circuit, the resistance is increased owing to skin effect. This increase in resistance for most circuits is so small that it need not be considered. Unless the size of the conductor is greater than 750,000 cmil (380 mm²) for 25-Hz circuits or 300,000 cmil (152 mm²) for 60-Hz circuits, skin effect can be neglected and the resistance of the wire taken in the same way as for direct current.

As discussed in Div. 1, the phenomenon of inductance causes a voltage which opposes the flow of current in the circuit to be induced in an ac circuit. Inductance therefore offers opposition to the flow of alternating current in a circuit. This opposition is called the inductive reactance of the circuit and is represented by the symbol X_L . The value of the inductive reactance of a circuit depends upon the size of the wire, the distance between the wires of the circuit, the frequency of the current flowing in the circuit, the material of the conductor, and the presence of any magnetic material in proximity to the circuit. The voltage drop due to inductance produced in a circuit is equal to the current times the inductive reactance. For small-size conductors the effect of inductance is so small that it can be neglected (see Table 50 of Div. 12).

The two conductors of any circuit with the insulation between them produce a capacitor. They therefore introduce capacitance into the circuit. The effect of capacitance in an ac circuit is to offer opposition to the flow of current. This opposition is called capacitive reactance and is denoted by the symbol X_c . The voltage drop in a circuit due to capacitance is equal to the current times the capacitive reactance. The effect of capacitance upon the voltage drop of the circuit is so small except for high-voltage long-distance transmission lines that it is neglected.

The total voltage drop in an ac circuit due to the resistance and reactance is affected by the power factor of the load connected to the circuit.

62. Summary of factors that must be considered in calculating drop for ac circuits. Skin effect can usually be neglected unless the size of wires is greater than 300,000 cmil (152 mm²) for 60-Hz circuits or 750,000 cmil (380 mm²) for 25-Hz circuits.

The effect of capacitance can be neglected except for long-distance transmission lines. The effect of inductance can be neglected unless the size of wire exceeds the values given in Table 50 of Div. 12.

63. Line or circuit reactance can be reduced in three ways. One way is to diminish the distance between wires. The extent to which this can be carried is limited, in the case of a pole line, to the least distance at which the wires are safe from swinging together in the middle of a span. In inside wiring (knob or tube work), it is limited by the spacings required by the National Electrical Code. In conduit work, nothing can be done about reducing the distance between wires. Another way of reducing the reactance is to increase the size of the conductors, but it is not possible to secure much reduction by this method unless the size is increased by an excessive amount. The third way of reducing reactance is to divide the load into a greater number of circuits. Voltage drop in lines due to inductive reactance is best diminished (Mershon) by subdividing the copper or by bringing the conductors closer together. It is little affected by changing the size of the conductors.

64. Determining power factors of feeders or mains. Although the values of power factors obtained by the following method are approximate, they are accurate enough for most circuit calculations. To determine the power factor of a circuit supplying several motors proceed as follows:

- 1. Multiply the horsepower of each motor by its power factor at 75 percent of rated load.
- 2. Add these products for all the motors fed from the line.
- 3. The approximate power factor of the circuit will equal the sum obtained in Par. 2 divided by the total horsepower connected to the circuit.

Approximate power factors of different types of loads are given in Table 52 of Div. 12.

EXAMPLE Determine the power factor for a feeder supplying two 5-hp motors, five 10-hp motors, and one 50-hp motor.

SOLUTION

Hp of motor × power factor = product of hp and pf (From Table 52, Div. 12)				
5	×	0.83	=	4.15
5	×	0.83	=	4.15
10	×	0.86	=	8.6
10	×	0.86	=	8.6
10	×	0.86	=	8.6
10	×	0.86	=	8.6
10	×	0.86	=	8.6
50	×	0.89	=	44.5
110 total connected hp				95.8

Approximate power factor of circuit = $\frac{\text{sum of products of hp and pf}}{\text{total connected hp}}$

$= \frac{95.8}{110} = 87.1$

65. Calculation of voltage drop in two-wire single-phase circuits when effect of inductance can be neglected. These circuits can be calculated in the same way as dc circuits, by means of either the formulas of Sec. 59 or the chart of Sec. 49 of Div. 12.

66. Calculation of voltage drop in three-wire single-phase circuits when effect of inductance can be neglected. Circuits of this type can be calculated in exactly the same manner as three-wire dc circuits (see Sec. 60).

67. Calculation of voltage drop in four-wire two-phase circuits when effect of inductance can be neglected. A four-wire two-phase circuit can be considered as two separate single-phase circuits, and the voltage drop computed in the same manner as given for two-wire dc circuits in either Sec. 58 or Sec. 59.

68. Calculation of voltage drop in three-wire two-phase circuits when effect of inductance can be neglected. The voltage drop in the common wire of three-wire two-phase systems somewhat unbalances the voltages of the two phases, and therefore the voltage drop of the two phases is not the same. An exact method of the calculation of the voltage drop of these circuits is too complicated for the scope of this book. The following method will give the approximate voltage drop on the phase having the greater voltage drop. It is accurate enough for most interior-wiring calculations. Proceed as follows:

1. Determine the voltage drop in one outside wire. It will be equal to one-half of the voltage drop determined by means of either the formulas of Sec. 58 or the chart of Sec. 49 in Div. 12.
2. Determine the voltage drop in the common wire. It will be equal to one-half of the voltage drop determined by means of either the formulas of Sec. 58 or the chart of Sec. 49 in Div. 12, the size of wire and current for the common wire being used.
3. The total voltage drop is taken as equal to the drop in one outside wire plus 0.8 times the voltage drop in the common wire.

EXAMPLE Determine the voltage drop of a three-wire two-phase 60-Hz lighting feeder which is 200 ft long and installed in conduit. The current in each outside wire is 130 A. A 2/0 AWG wire is used for the outside wires, and a 4/0 AWG for the common wire. All wires are Type TW.

SOLUTION Since the largest wire used is 4/0 AWG from Table 50 of Div. 12, the effect of inductance can be neglected. From Table 57 of Div. 12 a 2/0 AWG wire has 133,100 cmil, and a 4/0 AWG wire 211,600 cmil. From Table 18 of Div. 12 all wires are loaded to more than 50 percent of their carrying capacity.

$$\text{Drop in two outside wires} = \frac{24 \times I \times L}{\text{cmil}} = \frac{24 \times 130 \times 200}{133,100} = 4.7 \text{ V}$$

$$\text{Drop in one outside wire} = \frac{4.7}{2} = 2.35 \text{ V}$$

$$\text{Current in common wire} = 1.41 \times 130 = 183.5 \text{ A}$$

$$\text{Drop in common wire} = \frac{24 \times I \times L}{2 \times \text{cmil}} = \frac{24 \times 183.5 \times 200}{2 \times 211,600} = 2.08 \text{ V}$$

$$\text{Total voltage drop} = 2.35 + (0.8 \times 2.08) = 2.35 + 1.66$$

$$= 4.01 \text{ V drop}$$

69. Calculation of voltage drop in five-wire two-phase circuits when effect of inductance can be neglected. In a well-laid-out system the load will be very nearly balanced under normal load conditions. Therefore, there will be practically no current in the neutral wire. For lighting loads supplied by this system the lamps are connected between the neutral wire and the respective outside wires. The drop to any lamp, therefore, is equal to the drop in one outside wire. The drop in one outside wire will be equal to one-half of the drop determined by either the formulas of Sec. 58 or the chart of Sec. 49 of Div. 12. The drop to motors fed by this system will be equal to the drop in two outside wires and, therefore, to the drop determined by either the formulas or the chart.

70. Calculation of voltage drop in three-wire three-phase circuits when effect of inductance can be neglected. The voltage drop in these circuits will be equal to 0.866 times the voltage drop of a two-wire dc circuit carrying the same current as the three-phase circuit. This drop may be determined from either the formulas of Sec. 58 or the chart of Sec. 49 of Div. 12.

EXAMPLE Determine the voltage drop of a three-wire three-phase 60-Hz motor feeder which is 150 ft long. Three 2 AWG Type TW wires are installed in conduit. The current is 85 A.

SOLUTION Since the size of wire is 2 AWG from Table 50 of Div. 12, the effect of inductance can be neglected. From Table 57 of Div. 12 a 2 AWG wire has 66,360 cmil, and from Table 18 of Div. 12 a carrying capacity of 95 A.

$$\begin{aligned} \text{Drop in a two dc circuit carrying 85 A over a 2 AWG wire} &= \frac{24 \times I \times L}{\text{cmil}} \\ &= \frac{24 \times 85 \times 150}{66,360} \\ &= 4.61 \text{ V} \end{aligned}$$

$$\begin{aligned} \text{Therefore} \quad \text{Drop of the three-phase system} &= 0.866 \times 4.61 \\ &= 4.0 \text{ V} \end{aligned}$$

71. Calculation of voltage drop in four-wire three-phase circuits when effect of inductance can be neglected. In a well-laid-out system the load will be very nearly balanced under normal load conditions. Therefore, there will be practically no current in the neutral wire. For lighting loads supplied by this system the lamps are connected between the neutral wire and the respective outside wires. The drop to any lamp, therefore,

is equal to the drop in one outside wire. The drop in one outside wire will be equal to one-half of the drop determined by either the formulas of Sec. 58 or the chart of Sec. 49 of Div. 12. The drop to motors fed by this system is the drop between any two outside wires. This drop is equal to 0.866 times the voltage drop of a two-wire dc system carrying the same current as the three-phase system. (Use either the formulas of Sec. 58 or the chart of Sec. 49 of Div. 12 for determining the dc drop.)

72. Calculation of circuits when effect of inductance cannot be neglected.

Two methods are given in the following paragraphs for calculating the voltage drop of circuits when the effect of inductance is so great that it cannot be neglected (see Table 50 of Div. 12 for rules indicating when inductance must be considered). In one of these methods the voltage drop in the actual ac circuit is calculated by multiplying the drop of a dc circuit by a factor called the drop factor. This drop factor is the ratio between the actual drop and the drop that would occur if there were no inductance. The drop factor is affected by the size of wire, spacing of the wires of the circuit, the frequency of the current, and the power factor of the load. Values of drop factors for various conditions in which concentric stranded copper conductors are used are given in Table 55 of Div. 12.

The other method given for computing the voltage drop of circuits when the effect of inductance cannot be neglected makes use of a diagram called the Mershon diagram (Fig. 3.30).

Under ordinary conditions of use both of these methods will give results of about the same degree of accuracy. If the Mershon diagram is used carefully, it will give the more accurate results of the two. But since in the calculation of most circuits several factors are based on assumption, the greater accuracy of the Mershon diagram is of questionable value. The drop-factor method is certainly accurate enough for the calculation of all interior-wiring circuits, and the authors believe that it is the more easily applied method of the two. For circuits employing

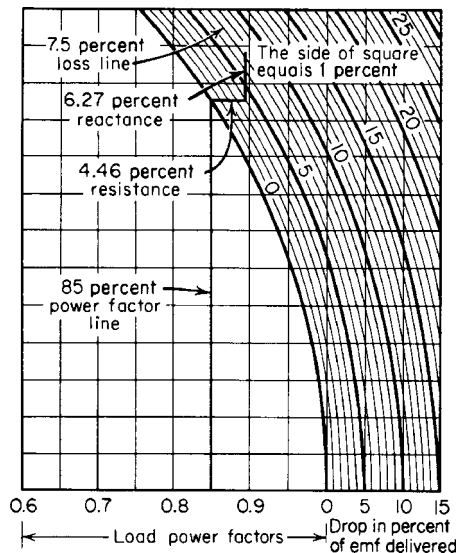


FIGURE 3.30 Illustrating the application of the Mershon diagram for computing a single-phase circuit. The side of each small square equals 1 percent; percentage resistance is measured horizontally and percentage reactance vertically.

some type of conductor material or construction other than standard copper, the Mershon diagram must be used, since no data are given for drop factors for conductors of other types.

73. Drop-factor method of calculating voltage drop when effect of inductance cannot be neglected. Proceed as follows:

1. Determine from either Sec. 58 or Sec. 59 the voltage drop of a two-wire dc system carrying the same current and using the same size of wire.
2. Determine the ratio of reactance to resistance for the size of wire, spacing of wires, and frequency of the circuit considered (see Table 53 or 54 of Div. 12).
3. Determine the power factor of the circuit (see Sec. 64 and Table 52 of Div. 12).
4. Determine the drop factor for the circuit corresponding to the determined ratio of reactance to resistance and the power factor of the circuit from Table 55 of Div. 12.
5. The voltage drop of the circuit then is determined as follows, depending upon the electric system:

For two-wire single-phase systems:

$$\text{Voltage drop} = \text{drop factor} \times \text{dc voltage drop} \quad (9)$$

For three-wire single-phase systems:

$$\text{Voltage drop between outside wires} = \text{drop factor} \times \text{dc voltage drop} \quad (10)$$

$$\text{Voltage drop between outside wire and neutral (lamps)} = 1/2 (\text{drop factor} \times \text{dc voltage drop}) \quad (11)$$

For four-wire two-phase systems, each phase is considered as a separate two-wire single-phase system:

$$\text{Voltage drop} = \text{drop factor} \times \text{dc voltage drop} \quad (12)$$

For three-wire system tapped from four-wire three-phase system:

$$\text{Voltage drop} = 0.75 (\text{drop factor} \times \text{dc voltage drop}) \quad (13)$$

For three-wire two-phase systems, two dc drops must first be determined: one for a two-wire dc circuit carrying the same current and with the same size of wire as the outside conductors of the two-phase system, and the other for a two-wire dc circuit carrying the same current and with the same size of wire as the common wire of the two-phase system. Then

$$\begin{aligned} \text{Voltage drop of two-phase three-wire system} = & \frac{\text{drop factor} \times \text{dc voltage drop for current and size of outside wire}}{2} \\ & + \left(0.8 \times \frac{\text{drop factor} \times \text{dc voltage drop for current and size of outside wire}}{2} \right) \quad (14) \end{aligned}$$

For five-wire two-phase systems:

$$\text{Voltage drop for lamps} = \frac{\text{drop factor} \times \text{dc voltage drop}}{2} \quad (15)$$

$$\text{Voltage drop for motors} = \text{drop factor} \times \text{dc voltage drop} \quad (16)$$

For three-wire three-phase systems:

$$\text{Voltage drop} = 0.866 \times \text{drop factor} \times \text{dc voltage drop} \quad (17)$$

For four-wire three-phase systems:

$$\text{Voltage drop for lamps} = \frac{\text{drop factor} \times \text{dc voltage drop}}{2} \quad (18)$$

$$\text{Voltage drop for motors} = 0.866 \times \text{drop factor} \times \text{dc voltage drop} \quad (19)$$

EXAMPLE Determine the voltage drop of a two-wire single-phase 60-Hz motor circuit carrying a current of 250 A for a distance of 150 ft. A 300,000-cmil Type RH wire is used, installed in conduit. The power factor of the circuit is 80 percent.

SOLUTION From Table 50 of Div. 12, since the size of wire is 300,000 cmil, the effect of inductance cannot be neglected. The carrying capacity from Table 18 of Div. 12 is 285 A.

The drop of a two-wire dc circuit carrying 250 A over a 300,000-cmil wire for 150 ft is

$$\frac{24 \times I \times L}{\text{cmil}} = \frac{24 \times 250 \times 150}{300,000} = 3.0 \text{ V}$$

From Table 53 of Div. 12 the ratio of reactance to resistance for a 300,000-cmil wire installed in conduit on a 60-Hz system is 1.01.

From Table 55 of Div. 12 the drop factor for a ratio of reactance to resistance of 1.01 and a power factor of 80 percent is 1.40.

Voltage drop of the actual circuit = drop factor \times dc drop = $1.40 \times 3.0 = 4.2 \text{ V}$.

EXAMPLE Determine the voltage drop of the above circuit if it were a three-wire single-phase one.

SOLUTION The voltage drop between outside wires would be equal to the drop factor times the drop of a two-wire dc system carrying the same current = $1.40 \times 3.0 = 4.2 \text{ V}$.

Voltage drop across lamps if connected to the circuit would be the drop between an outside wire and the neutral = $\frac{1.40 \times 3.0}{2} = 2.1 \text{ V}$.

EXAMPLE Determine the voltage drop of the above circuit if it were three-wire tapped from a four-wire three-phase system.

SOLUTION Voltage drop across lamps = $0.75 \times 1.4 \times 3.0 = 3.15 \text{ V}$.

EXAMPLE Determine the voltage drop of the preceding circuit if it were a four-wire two-phase system.

SOLUTION Voltage drop = drop factor \times dc drop
 $= 1.40 \times 3.0 = 4.2 \text{ V}$

EXAMPLE Determine the voltage drop of the preceding circuit if it were a three-wire two-phase one. The 250 A is the current in the outside wires.

SOLUTION The current in the common wire = $1.41 \times 250 = 352 \text{ A}$. Use a 500,000-cmil wire for the common.

The voltage drop for a two-wire dc system carrying 250 A over a 300,000-cmil wire for

$$150 \text{ ft} = \frac{24 \times I \times L}{300,000} = \frac{24 \times 250 \times 150}{300,000} = 3.0 \text{ V}$$

The voltage drop for a two-wire dc circuit carrying 352 A for 150 ft over a

$$500,000\text{-cmil wire} = \frac{24 \times I \times L}{500,000} = \frac{24 \times 352 \times 150}{500,000} = 2.54 \text{ V}$$

From preceding problems the drop factor for the outside conductors is 1.40.

From Table 53 of Div. 12 the ratio of reactance to resistance for a 500,000-cmil wire installed in conduit on a 60-Hz system is 1.75.

From Table 55 of Div. 12 the drop factor for a ratio of reactance to resistance of 1.75 and a power factor of 80 percent is 1.88.

$$\begin{aligned} \text{Voltage drop of actual circuit} &= \frac{\text{drop factor} \times \text{dc voltage drop for current and size of wire of outside wires}}{2} + 0.8 \times \frac{\text{drop factor} \times \text{dc voltage drop for current and size of wire of common wire}}{2} \\ &= \frac{1.40 \times 3.0}{2} + \frac{0.8 \times 1.88 \times 2.54}{2} = 2.1 + 1.91 \\ &= 4.01 \text{ V} \end{aligned}$$

EXAMPLE Determine the voltage drop of the preceding circuit if it were a five-wire two-phase system.

SOLUTION Voltage drop for motors = drop factor \times dc voltage drop
 $= 1.40 \times 3.0 = 4.2 \text{ V}$

If any lamps were connected to the circuit, the voltage drop across each lamp

$$\begin{aligned} &= \frac{\text{drop factor} \times \text{dc voltage drop}}{2} \\ &= \frac{1.40 \times 3.0}{2} = 2.1 \text{ V} \end{aligned}$$

EXAMPLE Determine the voltage drop of the preceding circuit if it were a three-wire three-phase system.

SOLUTION

$$\begin{aligned}\text{Voltage drop} &= 0.866 \times \text{drop factor} \times \text{dc voltage drop} \\ &= 0.866 \times 1.40 \times 3.0 = 3.64 \text{ V}\end{aligned}$$

EXAMPLE Determine the voltage drop of the preceding circuit if it were a four-wire three-phase system.

SOLUTION

$$\begin{aligned}\text{Voltage drop for motors} &= 0.866 \times \text{drop factor} \times \text{dc voltage drop} \\ &= 0.866 \times 1.40 \times 3.0 = 3.64 \text{ V}\end{aligned}$$

If any lamps were connected to the circuit, the voltage drop across each lamp

$$\begin{aligned}&= \frac{\text{drop factor} \times \text{dc voltage drop}}{2} \\ &= \frac{1.40 \times 3.0}{2} = 2.1 \text{ V}\end{aligned}$$

74. Calculation of voltage drop of two-wire single-phase circuits by Mershon diagram when effect of inductance cannot be neglected. Proceed as follows:

1. Determine the ac resistance of the total length of wire. This will be equal to the resistance per foot of wire of the size and material employed multiplied by 2 times the length of circuit one way in feet. Care should be exercised in taking values of resistance from the tables to observe in what units the resistance is given. Some values are given in $\Omega/1000$ ft, and others in Ω/mi . For copper conductors use Table 57 of Div. 12. The ac resistance will be equal to the dc resistance at the working temperature of the wire times the skin-effect correction factor.
2. Determine the resistance volts drop. This drop will be equal to the resistance of the total length of wire as has been determined in step 1 and multiplied by the current.
3. Determine the inductive reactance of the total length of wire. This will be equal to the reactance per foot of wire for the size, material, and spacing of wires multiplied by 2 times the length of circuit one way in feet. Care should be exercised in taking values of reactance from the tables to observe in what units the reactance is given. Some values are given in $\Omega/1000$ ft, and others in Ω/mi .
4. Determine the reactance volts drop. This drop will be equal to the reactance of the total length of wire as has been determined in step 3 and multiplied by the current.
5. Find what percentage the resistance volts drop is of the voltage delivered at the end of the line.
6. Find what percentage the reactance volts drop is of the voltage delivered at the end of the line.

7. Determine the power factor of the circuit (see Sec. 64 of this division and Table 52 of Div. 12).
8. On the Mershon diagram (Fig. 3.30) start at the point where the vertical line corresponding to the power factor of the circuit intersects the smallest circle.
9. From this point lay off horizontally to the right the percentage of resistance volts drop. From the point thus obtained lay off vertically upward the percentage of reactance volts drop.
10. The circle upon which the last point obtained falls will give the voltage drop in percentage of the voltage at the end of the line.

75. Calculations of voltage drop by Mershon diagram for any circuit when effect of inductance cannot be neglected. First determine, as outlined in Sec. 74, the voltage drop for a two-wire single-phase circuit of the same size of wire carrying the same current as the actual circuit. Then proceed as follows for the particular system involved.

Three-wire single-phase:

$$\text{Voltage drop between outside wires} = \text{drop as read from diagram} \quad (20)$$

$$\text{Voltage drop between outside wire and neutral (lamps)} = \frac{\text{drop as read from diagram}}{2} \quad (21)$$

Three-wire tapped from three-phase four-wire:

$$\begin{aligned} \text{Voltage drop between outside wire and neutral (lamps)} \\ = 0.75(\text{drop as read from diagram}) \end{aligned} \quad (22)$$

Four-wire two-phase systems: Each phase is considered as a separate two-wire single-phase system.

Three-wire two-phase systems: Determine two drops from the diagram, one for a circuit with the size of wire and current of outside wires of a two-phase system, and the other for a circuit with size of wire and current of common wire.

Then

$$\text{Voltage drop} = \frac{\text{drop for circuit with size of wire and current of outside wires}}{2} + 0.08 \times \frac{\text{drop for circuit with size of wire and current of common wire}}{2} \quad (23)$$

Five-wire two-phase systems:

$$\text{Voltage drop for lamps} = \frac{\text{drop from diagram}}{2} \quad (24)$$

$$\text{Voltage drop for motors} = \text{drop as read from diagram} \quad (25)$$

Three-wire three-phase systems:

$$\text{Voltage drop} = 0.866 \times \text{drop as read from diagram} \quad (26)$$

Four-wire three-phase systems:

$$\text{Voltage drop for lamps} = \frac{\text{drop from diagram}}{2} \quad (27)$$

$$\text{Voltage drop for motor} = 0.866 \times \text{drop as read from diagram} \quad (28)$$

EXAMPLE Determine the voltage drop for the circuit of the example in Sec. 74 for the different systems.

SOLUTION By referring to the problem in Sec. 74, the voltage drop of the circuit for a two-wire single-phase system is 8.25 V.

For a three-wire single-phase system:

$$\begin{aligned} \text{Voltage drop for motors} &= \text{drop as read from diagram} \\ &= 8.25 \text{ V} \\ \text{Voltage drop for lamps} &= \frac{\text{drop as read from diagram}}{2} = \frac{8.25}{2} = 4.13 \end{aligned}$$

For a four-wire two-phase system:

$$\text{Voltage drop} = \text{drop as read from diagram} = 8.25 \text{ V}$$

For a three-wire two-phase system:

Use must be made of the Mershon diagram to determine another voltage drop. The drop obtained in Sec. 74 is for a two-wire single-phase circuit carrying the same current as the outside wires of the three-wire two-phase circuit and with the same size of wire as the outside wires. Another voltage drop for a two-wire single-phase circuit carrying the same current as the common wire of the three-wire two-phase circuit and with the size of wire of the common must be determined.

$$\text{Current in common wire} = 1.41 \times 200 = 282 \text{ A}$$

Assume that a 400,000-cmil wire is used for common wire (as large a size would not be required by carrying capacity).

If the Mershon diagram is applied, a two-wire single-phase circuit of 85 percent pf carrying 282 A over 400,000-cmil wires spaced 6 in apart will give a 7.3 percent volts

$$\text{drop, or } \frac{7.3 \times 110}{100} = 8.03 \text{ V.}$$

$$\begin{aligned} \text{Voltage drop for three-wire two-phase circuit} &= \frac{8.25}{2} + \left(0.8 \times \frac{8.03}{2} \right) \\ &= 4.13 + 3.21 \\ &= 7.34 \end{aligned}$$

For a five-wire two-phase system:

$$\text{Voltage drop for lamps} = \frac{\text{drop from diagram}}{2} = \frac{8.25}{2} = 4.13$$

$$\begin{aligned}\text{Voltage drop for motors} &= \text{drop as read from diagram} \\ &= 8.25 \text{ V}\end{aligned}$$

For a three-wire three-phase system:

$$\begin{aligned}\text{Voltage drop} &= 0.866 \times \text{drop as read from diagram} \\ &= 0.866 \times 8.25 = 7.15 \text{ V}\end{aligned}$$

For a four-wire three-phase system:

$$\begin{aligned}\text{Voltage drop for lamps} &= \frac{\text{drop from diagram}}{2} = \frac{8.25}{2} \\ &= 4.13 \text{ V}\end{aligned}$$

$$\begin{aligned}\text{Voltage drop for motors} &= 0.866 \times \text{drop as read from diagram} \\ &= 0.866 \times 8.25 = 7.15 \text{ V}\end{aligned}$$

76. How to proceed in determining the proper size of wire for a circuit

1. Determine the ampere load on the circuit.

For branch lighting and appliance circuits refer to Secs. 36 to 38. For two-wire dc or single-phase ac lighting and appliance mains or feeders refer to Secs. 40, 44, and 45.

For three-wire dc or single-phase ac lighting and appliance mains or feeders refer to Secs. 41, 44, and 46.

For four-wire two-phase lighting and appliance mains or feeders refer to Secs. 44 and 47.

For three-wire two-phase lighting and appliance mains or feeders refer to Secs. 42, 44, and 48.

For five-wire two-phase lighting and appliance mains or feeders refer to Secs. 44 and 49.

For four-wire three-phase lighting and appliance mains or feeders refer to Secs. 43, 44, and 50.

For circuits supplying electric ranges refer to Secs. 39 and 45.

For branch motor circuits refer to Sec. 53.

For motor feeders or mains refer to Sec. 54.

2. For branch lighting or appliance circuits refer to Div. 9 and determine if outlets and equipment supplied by circuits meet the National Electrical Code requirements.

3. For lighting feeders or mains determine the minimum allowable load (refer to Sec. 52).

4. Select from Secs. 17 to 23 of Div. 12 the size of wire that will carry safely the current with the type of insulation employed on the wires (see also Secs. 30 and 31).

For 15-A branch lighting circuits, although 14 AWG wire will safely carry the current, it is best not to use smaller than 12 AWG wire. If the length of the branch lighting circuit to the load center is over 75 ft, wire at least as large as 10 AWG should be used.

A branch circuit supplying an electric range with a rating of $8\frac{3}{4}$ kW or more must not be smaller than 8 AWG except for the neutral conductor, which must not be smaller than 10 AWG.

For lighting feeders or mains use the estimated maximum allowable load current unless for some reason it is less than the minimum allowable load, in which case the minimum allowable load must be used.

For continuous-duty branch motor circuits use 125 percent of the full-load rated current of the motor.

For branch motor circuits supplying short-time-duty motors, use the proper percentage of the rated current as given in Table 12 of Div. 12.

For motor feeders or mains use the maximum-demand running current with allowance for growth.

For the determination of the required carrying capacity of the neutral wire refer as follows:

For three-wire dc or single-phase systems refer to Sec. 46.

For three-wire two-phase systems refer to Sec. 48.

For five-wire two-phase systems refer to Sec. 49.

For four-wire three-phase systems refer to Sec. 46.

The neutral conductor of a three-wire circuit supplying a household electric range, a wall-mounted oven, or a counter-mounted cooking unit with a maximum demand of $8\frac{3}{4}$ kW or more is allowed to have a carrying capacity of only 70 percent of the outside wires provided that the neutral is not smaller than 10 AWG.

5. Determine whether the size of wire required according to carrying capacity is sufficient for mechanical strength (refer to Sec. 32).

Be sure that the size of wire required according to carrying capacity is not too large for satisfactory installation (refer to Sec. 33).

6. Find the distance to the load center of the circuit (refer to Sec. 57).

7. Decide what voltage drop is allowable in the circuit (refer to Sec. 35, and Table 48 of Div. 12).

8. Determine what the voltage drop in the circuit will be in using the size of wire required according to carrying capacity.

If the circuit is an ac one, before calculating the voltage drop, determine from Sec. 62 and Table 50 of Div. 12 whether or not the effects of inductance and skin effect can be neglected.

For branch lighting circuits use the maximum allowable load current unless the maximum allowable load for the type of branch circuit as given in Div. 9 is less than this value. In that case, use the maximum allowable load.

For lighting feeders or mains use the maximum allowable load current unless it is smaller than the minimum allowable load, in which case the minimum allowable load must be used.

For branch motor circuits use the full-load current of the motor. For motor feeders or mains use the maximum-demand running current with proper allowance for growth.

For the length of the circuit use the distance from the source of supply to the load center, measured along the circuit.

For methods of calculating voltage drop refer to the following sections:

Direct-current two-wire

Sec. 58 or 59

Direct-current three-wire

Sec. 60

Alternating-current when inductance can be neglected:

Single-phase two-wire	Sec. 65
Single-phase three-wire	Sec. 66
Two-phase four-wire	Sec. 67
Two-phase three-wire	Sec. 68
Two-phase five-wire	Sec. 69
Three-phase three-wire	Sec. 70
Three-phase four-wire	Sec. 71
Alternating-current when the effect of inductance cannot be neglected	Sec. 73
	Or
	Secs. 74 and 75

9. If the voltage drop determined in step 8 is greater than the allowable amount, take the next larger conductor and determine the voltage drop it will give. Proceed in this way until the conductors are large enough to keep the voltage drop within the required amount. For ac circuits, this would sometimes require too great an increase in the size of the conductors. In such cases it is best to replan the system so as to divide the load among a greater number of circuits. For systems employing a common or neutral wire, when the size of wire must be increased to keep the voltage drop within the allowable amount, it is best to increase the size of the neutral in the same proportion as the outside wires are increased.

EXAMPLE Determine the proper size of wire to use for a two-wire single-phase 15-A 60-Hz 115-V branch lighting circuit supplying six 150-W lamps. The length of the circuit to the load center is 50 ft. The wires are to be installed in conduit and have rubber insulation.

SOLUTION

$$\text{Actual connected load} = \frac{6 \times 150}{115} = 7.8 \text{ A}$$

$$\text{Maximum allowable load (sec. 37)} = 0.80 \times 15 = 12 \text{ A}$$

The maximum allowable load of 12 A will be used in selecting the size of wire according to both carrying capacity and voltage drop.

From item 4 of this section at least a 14 AWG wire is required by the Code, but it is best to use not smaller than 12 AWG wire.

From Table 48 of Div. 12 a voltage drop of 2.3 V would be allowable.

Determine the voltage drop (Sec. 58 or 59) for a 12 AWG wire carrying 12 A 50 ft.

$$\text{Voltage drop with 12 AWG wire} = \frac{24 \times 12 \times 50}{6530} = 2.21 \text{ V}$$

Since this drop is less than the allowable amount, two 12 AWG wires should be used.

EXAMPLE A two-wire 15-A single-phase 60-Hz 115-V branch lighting circuit supplies seven 150-W lamps. The length of the circuit to the load center is 100 ft. The wires are to be installed in conduit and to be rubber-insulated. Determine the proper size of wire to use.

SOLUTION

$$\text{Actual connected load} = \frac{7 \times 150}{115} = 9.13 \text{ A}$$

$$\text{Maximum allowable load} = 0.80 \times 15 = 12 \text{ A}$$

The maximum allowable load of 12 A will be used in selecting the size of wire according to both carrying capacity and voltage drop.

From item 4 of this section at least a 14 AWG wire is required, but it will be best to use not smaller than 10 AWG wire when the circuit is over 100 ft long.

From Table 48 of Div. 12 a voltage drop of 2.3 V would be allowable.

From Table 50 of Div. 12 the effect of inductance can be neglected for a lighting circuit using 10 AWG wire on a 60-Hz system.

$$\text{Voltage drop with 10 AWG wire} = \frac{24 \times 12 \times 100}{10,380} = 2.77 \text{ V}$$

Since this voltage drop is greater than the allowable amount, take the next larger size of wire, 8 AWG, and check for voltage drop.

$$\text{Voltage drop with 8 AWG wire} = \frac{24 \times 12 \times 100}{16,510} = 1.74 \text{ V}$$

Since this voltage drop is less than the allowable amount, two 8 AWG wires should be used. As noted in Sec. 3 to 56, use of the maximum allowable load current to begin this calculation may not be acceptable to the owner. Should that be so, use of the actual connected load gives a different result that is within the recommended allowances:

$$\text{Voltage drop with 10 AWG wire} = \frac{24 \times 9.13 \times 100}{10,380} = 2.11 \text{ V}$$

EXAMPLE Determine the proper size of service lateral for the three-wire 115/230-V ac main of the example under Sec. 46. The length of the circuit is 125 ft. The wires are to be thermoplastic-covered, Type TW, and installed in conduit. The installation has only a main and branch circuits, no feeder.

SOLUTION From Sec. 46, the current in the outside main wires is 89.5 A and the current in the neutral is 64.2 A. From Table 48 of Div. 12 a voltage drop of 2.3 V is allowable on the feeder conductors that supply the lighting load. The smallest conductors allowable for this service using TW wire, per Table 18 of Div. 12, is 2 AWG for the outside wires and 4 AWG for the neutral. The calculations must be done separately, using the loads developed in Sec. 46.

$$\text{Voltage drop one way on an outside wire} = \frac{12 \times 89.5 \times 125}{66,360} = 2.0 \text{ V}$$

$$\text{Voltage drop one way on the neutral wire} = \frac{12 \times 64.2 \times 125}{41,740} = 1.9 \text{ V}$$

The total voltage drop of almost 4 V exceeds the recommended 2.3 V

$$\text{Voltage drop, outside wire raised to 1/0 AWG} = \frac{12 \times 89.5 \times 125}{105,600} = 1.3 \text{ V}$$

$$\text{Voltage drop, neutral wire raised to 1/0 AWG} = \frac{12 \times 64.2 \times 125}{105,600} = 0.9 \text{ V}$$

Now the total voltage drop of 2.2 V is within the recommended 2.3 V

EXAMPLE Determine the proper size of wire to use for a branch motor circuit supplying a 10-hp 460-V three-phase squirrel-cage induction motor on continuous duty. The motor is of the normal-starting-current, normal-torque type started with reduced voltage. It is a 60-Hz system. The length of the circuit is 50 ft. The wires are to be thermoplastic-covered. Type TW, installed in conduit.

SOLUTION From Table 10 of Div. 12 the full-load current = 14 A.

125 percent of the full-load current = $14 \times 1.25 = 17.5 \text{ A}$

From Table 18 of Div. 12 a 12 AWG wire is required to carry $14 \times 1.25 = 17.5 \text{ A}$.

From Table 48 of Div. 12, 4.4 V drop is allowable.

From Table 50 of Div. 12 the effect of inductance can be neglected for a 60-Hz motor circuit using 12 AWG wire.

The voltage drop on a two-wire dc circuit carrying 14 A (full-load current) over a 12 AWG

$$\text{wire for 50 ft} = \frac{24 \times 14 \times 50}{6,530} = 2.58 \text{ V.}$$

$$\text{Voltage drop of actual circuit} = 0.866 \times 2.58 = 2.24 \text{ V}$$

Since this drop is less than the allowable amount, three 12 AWG wires should be used.

EXAMPLE Determine the proper size of wire to use for a branch motor circuit supplying a series-wound dc motor on a 30-min rating varying duty. The motor is a 15-hp 230-V machine. The length of the circuit is 100 ft. The wires are Type RHW and installed in conduit.

SOLUTION From Table 7 of Div. 12 the full-load current is 55 A.

Since this is a short-time-duty service, by referring to Table 12 of Div. 12, use 150 percent of the full-load current in determining size of wire according to carrying capacity.

From Table 18 of Div. 12 a 4 AWG wire is required to carry $(1.50 \times 55) = 83 \text{ A}$ when Type RHW wire is used.

From Table 48 of Div. 12, 4.4 V drop is allowable.

In determining voltage drop, use full-load current.

$$\text{Voltage drop} = \frac{24 \times 55 \times 100}{41,740} = 3.16$$

Since this drop is less than the allowable amount, two 4 AWG wires would be used.

EXAMPLE Determine the proper size of wire to use for a three-wire, three-phase 460-V, 60-Hz feeder supplying five 10-hp motors, six 15-hp motors, and two 50-hp motors. All the motors are of the normal-torque, normal-starting-current, squirrel-cage type, started with reduced voltage. It is a 60-Hz circuit, 200 ft long. The wires are installed open with a regular flat spacing of 6 in. Type RHH insulation is employed on the wires. Permission to use a demand factor of 0.6 has been obtained from the officials enforcing the Code.

SOLUTION From Table 10 of Div. 12 the full-load current of a 10-hp motor of this type is 14 A; of a 15-hp motor, 21 A; and of a 50-hp motor, 65 A.

By using the formula of Sec. 54,

$$\text{Starting current of 50-hp motor (Sec. 43 of Div. 12)} = 2.0 \times 65 = 130 \text{ A}$$

Maximum-demand starting current of feeder

$$\begin{aligned} &= [(5 \times 14) + (6 \times 21) + (1 \times 65)] \times 0.6 + 130 \\ &= (261 \times 0.6) + 130 = 286 \text{ A} \end{aligned}$$

Maximum-demand running current of feeder

$$\begin{aligned} &= [(5 \times 14) + (6 \times 21) + (1 \times 65)]0.6 + (65 \times 1.25) \\ &= (261 \times 0.6) + 81 = 238 \text{ A} \end{aligned}$$

From Table 19 of Div. 12 a 1/0 AWG wire is required to carry 238 A (maximum-demand running current) if Type RHH (90°C) insulation is employed.

From Sec. 48 of Div. 12, 17.6 V drop is allowable.

Effective spacing of wires (Sec. 51, Div. 12) = $1.26 \times 6 = 7.56$

From Sec. 50 of Div. 12 the effect of inductance cannot be neglected.

Determine the voltage drop according to the method given in Sec. 73, using the maximum-demand running current.

Voltage drop of a two-wire dc circuit carrying 238 A 200 ft over 1/0 AWG wire = $(24 \times 238 \times 200)/105,560 = 10.8 \text{ V}$.

Ratio of reactance to resistance for 1/0 AWG wires spaced 8 in apart on a 60-Hz circuit (Table 53 of Div. 12) = 0.9.

Power factor of circuit (Sec. 64 and Table 52, Div. 12):

$$\begin{aligned} 5 \times 10 \times 0.86 &= 43.0 \\ 6 \times 15 \times 0.86 &= 77.4 \\ 2 \times 50 \times 0.89 &= 89.0 \\ &\hline &209.4 \end{aligned}$$

$$\text{pf} = \frac{209.4}{240} = 87.5$$

Drop factor of circuit from Table 55 of Div. 12 for a ratio of reactance to resistance of 0.9 and a power factor of 0.875 = 1.34.

Voltage drop of circuit = $0.866 \times 1.34 \times 10.8 = 12.3 \text{ V}$.

Since this drop is less than the allowable amount, use three 1/0 AWG wires.

77. In determining circuit lengths from drawings or blueprints a long piece of tough paper divided into the same measure as the drawing (see Fig. 3.31) can be effectively




FIGURE 3.31 Paper scale for measuring circuit lengths.

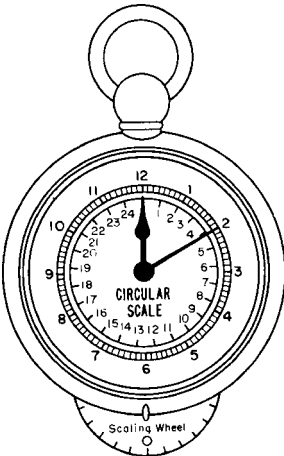


FIGURE 3.32 A rotometer.

used in scaling distances. Always allow for rises or drops for wall outlets. The rotometer (Fig. 3.32) is a convenient tool for scaling distances. The little wheel is run over the course of the circuit. The pointer indicates feet directly for drawings of certain scales. For other scales the dial reading must be multiplied by a constant to obtain actual lengths.

78. Indicating loads on diagrams. In computing the ampere loads on circuits, if drawings are available, it is good practice to note the amperes of the loads on the drawings alongside the circuits. It is good practice to indicate both the present and the estimated future loads, one colored pencil being used for the present load and another colored pencil for the future loads.

79. Use of tables in circuit calculations. If tables that will give the values of loads, voltage drops, etc., are laid out when circuit calculations are made, much time

can be saved in checking the size of circuits or in making changes in the system. A typical table is given in Sec. 80.

80. Branch Lighting Circuits

Panel	Branch circuit	Present load, amp	Max. allowable load, amp	Size wire according to carrying capacity	Length, ft	Volts drop	Size wire to use	Remarks
A	1	10.0	12	14 AWG	50	3.50	10 AWG	No. 10 used to keep drop to 1.39
.....	2	7.8	12	14 AWG	25	1.75	14 AWG	To keep voltage drop down
.....	3	9.1	12	14 AWG	30	2.10	12 AWG	
.....	4	8.0	12	14 AWG	20	1.40	14 AWG	
B	etc.		48					

81. The question of energy loss in a circuit should not be slighted in circuit calculations. It is well known that in overcoming resistance electrical energy is wasted, and as it costs money to develop or buy electrical energy, it is evident that in any commercial system such waste must be kept to a minimum. This can be done by decreasing the resistance of the conductors or, what amounts to the same thing, by increasing the size of the conductors. In as much as this is also an expensive matter, care must be exercised

that the additional sum added to the expenditure in copper (and conduit if used) is not so excessive as to more than counterbalance the cost of the energy continually saved.

82. Conductor economy in interior-wiring installations should always be considered a matter subordinate to the National Electrical Code and recommended voltage-drop requirements. Obviously, any conductor selected for a specific installation must fulfill the requirements of mechanical strength, ample carrying capacity, and recommended voltage drop. Frequently one of these three considerations will definitely determine the size of the conductor; however, a calculation may show that the resistance or I^2R (power) loss is excessive. Then it may be desirable to use a larger size of conductor than would otherwise be necessary.

83. Annual charges may be considered, in connection with the economical selection of a conductor size, as being made up of two items, *resistance-loss charges* and *investment charges*. Resistance-loss charges depend upon the resistance, the current, and the unit cost of energy and can be decreased by an increase of conductor size. This, however, calls for a greater investment with corresponding larger investment charges. A conductor should, for maximum economy, be selected of such a size that the total annual charge will be a minimum. In Fig. 3.33 the effect of a variation of conductor size on resistance-loss charge, investment charge, and total annual charge is shown graphically for wires not installed in race-ways. The interest charges on the conductor increase directly with its cross-sectional area (curve A, Fig. 3.33). If the wires were installed in conduit, the cost of the conduit and fittings should be added to the conductor cost. The resistance-loss charges decrease inversely as the cross-sectional area of the conductor (curve B, Fig. 3.33). The total annual charge (curve C, Fig. 3.33), the sum of curves A and B, is at its minimum value directly over the point where curves A and B intersect. That is, the conductor size which will have the least total annual cost is the one for which the annual interest charge equals the annual resistance-loss charge. This proposition was demonstrated by Lord Kelvin.

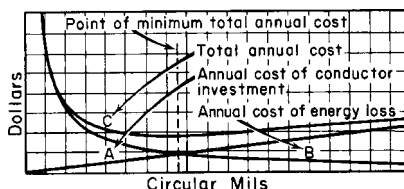


FIGURE 3.33 Graph illustrating Kelvin's law.

84. Kelvin's law was deduced in 1881 by Sir William Thomson (Lord Kelvin). The original law was modified into the following more exact form by Gisbert Kapp: "The most economical area of conductor is that for which the annual cost of energy wasted is equal to the interest on that portion of the capital outlay which can be considered proportional to the weight of copper used." On the basis of the above law it can be shown that

$$\text{cmil} = 55,867 \times I \times \sqrt{\frac{C_e}{C_c \times A}} \quad (29)$$

where cmil = area, in circular mils, of the most economical conductor; I = the mean annual current; C_e = cost of energy per kilowatthour, in dollars; C_c = cost of copper, in dollars, per pound installed; and A = annual charge, in percentage, of the cost of the conductor. This can ordinarily be assumed to be about 10 percent.

¹For derivation see *The Electrical Engineer's Pocketbook* (International Textbook Company). See also A. V. Abbot, *Transmission of Electrical Energy*; Louis Bell, *Electric Power Transmission*; Alfred E. Still, *Overhead Electric Power Transmission*.

Note that the length of the circuit is not a factor in the equation. The above equation is best adapted to the solution of cases in which the conductors are not insulated. The method of the following paragraph should always be used to check it.

85. Method of determining economical conductor size. This method involves the preparation of a table, as shown below, showing energy cost and interest cost of an arbitrarily chosen length of conductor for a number of sizes of conductor. The cost per unit length of conductors (preferably 1000 ft, or 305 m) can be obtained from the manufacturers' wire lists. For conduit installations the corresponding cost of conduit and fittings should be added to the cost of conductors. The cost of energy lost can be computed from the equations of Sec. 86 or from Sec. 87. By use of a comparative table, as given below, costs are effectively shown and a decision can be speedily reached. This method can be used as a check upon the Kelvin's-law equation. In the table the least total annual cost is \$15.69. Hence a 4/0 conductor is, for this case, the one of maximum economy.

Size of rubber-covered conductor	3/0 AWG wire	4/0 AWG wire wire	250,000-cir-mil wire	300,000-cir-mil
Cost of 400 ft of conductor	\$100.00	\$120.00	\$160.00	\$200.00
Annual charges on above cost at 10 percent	\$ 10.00	\$ 12.00	\$ 16.00	\$ 20.00
Cost of energy lost in conductor at 2 cts per kwh	\$ 5.94	\$ 3.69	\$ 2.64	\$ 2.27
Total annual cost of conductor	\$ 15.94	\$ 15.69	\$ 18.64	\$ 22.27

86. Cost of energy lost. If we take $12\ \Omega$ as the resistance of a circular mil-foot of commercial copper wire at 50°C , the power loss in any conductor can be found thus:

$$P = \frac{12 \times I^2 \times L}{\text{cmil}} \tag{30}$$

where p = power lost in the conductor in watts, I = the mean annual current in amperes in the conductor, L = length of the conductor in feet, and cmil = area of the conductor in circular mils.

The cost of energy lost can be computed from the following formula:

$$\text{Cost of energy per year in dollars} = \frac{N \times P \times 8760 \times R}{1000 \times 100} \tag{31}$$

where N = number of conductors; P = power loss in one conductor; and R = cost of electric energy in cents per kilowatthour. In the formula, the 8760 is the number of hours in a year, the 1000 is the factor to change watts to kilowatts, and the 100 changes cents to dollars.

87. Cost of Energy Lost for 500 H of Operation with Cost of Electrical Energy at 2 Cents per Kilowatthour

Wire size, AWG	Length of run, ft	Load, amp													
		6	10	15	20	25	30	35	40	50	60	70	80	90	100
14	50	\$0.10	\$0.26	\$0.60											
	100	0.19	0.52	1.20											
	200	0.38	1.04	2.40											
	300	0.57	1.06	3.60											
12	50	0.06	0.16	0.36	\$0.64										
	100	0.12	0.32	0.72	1.28										
	200	0.24	0.64	1.44	2.56										
	300	0.36	0.96	2.16	3.84										
10	50	0.04	0.10	0.22	0.40	\$0.62	\$0.90								
	100	0.08	0.20	0.45	0.80	1.24	1.80								
	200	0.16	0.40	0.90	1.60	2.48	3.60								
	300	0.24	0.60	1.35	2.40	3.72	5.40								
8	50	0.03	0.06	0.15	0.25	0.40	0.60	\$0.77	\$1.06						
	100	0.05	0.12	0.30	0.50	0.80	1.20	1.54	2.12						
	200	0.09	0.24	0.60	1.00	1.60	2.40	3.08	4.24						
	300	0.14	0.36	0.90	1.50	2.40	3.60	4.62	6.36						
6	50	0.02	0.04	0.09	0.16	0.25	0.36	0.49	0.64	\$1.00	\$1.44				
	100	0.03	0.08	0.18	0.32	0.50	0.72	0.98	1.28	2.00	2.88				
	200	0.06	0.16	0.36	0.64	1.00	1.44	1.76	2.56	4.00	5.76				
	300	0.09	0.24	0.54	0.96	1.50	2.16	2.64	3.84	6.00	8.64				
4	50	0.01	0.03	0.06	0.08	0.15	0.22	0.32	0.40	0.62	0.90	\$1.22	\$1.60		
	100	0.02	0.05	0.12	0.16	0.30	0.44	0.64	0.80	1.24	1.80	2.44	3.20		
	200	0.04	0.10	0.24	0.32	0.60	1.28	1.28	1.60	2.48	3.60	4.88	6.40		
	300	0.05	0.15	0.36	0.48	0.90	1.92	1.92	2.40	3.72	5.40	7.32	9.60		
2	50	...	0.02	0.04	0.06	0.10	0.13	0.18	0.24	0.40	0.60	0.77	1.00	\$1.26	\$1.60
	100	0.01	0.03	0.07	0.12	0.20	0.25	0.36	0.48	0.80	1.20	1.54	2.00	2.52	3.20
	200	0.02	0.06	0.14	0.24	0.40	0.50	0.72	0.56	1.60	2.40	3.08	4.00	5.04	6.40
	300	0.04	0.10	0.21	0.36	0.60	0.75	1.08	1.44	2.40	3.60	4.62	6.00	7.56	9.60

$$\text{Cost of energy lost per year in dollars} = \frac{H \times R \times K}{500 \times 2} \quad (32)$$

where H = hours of operation of circuit per year; R = cost of electrical energy in cents per kilowatthour; K = dollars as obtained from table for size of wire, current, and length of run.

The table and formula can be used for dc or single-phase ac circuits. If the load on a three-wire dc or single-phase ac circuit is nearly balanced, the formula will give satisfactory results if the current is taken as the current in the more heavily loaded wire.

88. Factors for determining the mean annual current. To ascertain the mean annual current for substitution in the Kelvin's-law equation (29) or in Eq. (30) of Sec. 86 multiply the maximum current by the ratio applying to the conditions under consideration, which is given in the column headed "Factor" in the following table. The table is calculated on the basis $24 \text{ h} \times 365 \text{ days} = 8670 \text{ h}$ per year.

EXAMPLE If a maximum current of 1000 A (I) flows three-fourths of the time, or 6570 h per year, and a current of 750 A ($\frac{3}{4}I$) flows one-fourth of the time, or 2190 h per year, the factor 0.944 would be used. That is, $0.944 \times 1000 \text{ A} = 944 \text{ A} = \text{mean annual current for substitution in Kelvin's-law equation.}$

	Proportion of maximum current I carried				Factor
	$\frac{1}{4}I$	$\frac{1}{2}I$	$\frac{3}{4}I$	I	
Proportion of time current is carried	0	0	0	1	1.000
	0	0	$\frac{1}{4}$	$\frac{3}{4}$	0.944
	0	$\frac{1}{4}$	0	$\frac{3}{4}$	0.901
	0	0	$\frac{1}{2}$	$\frac{1}{2}$	0.844
	0	0	0	$\frac{3}{4}$	0.866
	$\frac{1}{4}$	0	0	$\frac{3}{4}$	0.875
	0	$\frac{1}{4}$	$\frac{1}{4}$	$\frac{1}{2}$	0.838
	0	0	$\frac{3}{4}$	$\frac{1}{4}$	0.820
	$\frac{1}{4}$	0	$\frac{1}{4}$	$\frac{1}{2}$	0.810
	0	$\frac{1}{2}$	0	$\frac{1}{2}$	0.790
	0	$\frac{1}{4}$	$\frac{1}{2}$	$\frac{1}{4}$	0.771
	$\frac{1}{4}$	$\frac{1}{4}$	0	$\frac{1}{2}$	0.760
	$\frac{1}{4}$	0	$\frac{1}{2}$	$\frac{1}{4}$	0.744
	$\frac{1}{2}$	0	0	$\frac{1}{2}$	0.729
	0	$\frac{1}{2}$	$\frac{1}{4}$	$\frac{1}{4}$	0.718
	0	0	0	$\frac{1}{2}$	0.707
	$\frac{1}{4}$	$\frac{1}{4}$	$\frac{1}{4}$	$\frac{1}{4}$	0.685
	0	$\frac{3}{4}$	0	$\frac{1}{4}$	0.661
	$\frac{1}{2}$	0	$\frac{1}{4}$	$\frac{1}{4}$	0.650
	$\frac{1}{4}$	$\frac{1}{2}$	0	$\frac{1}{4}$	0.611
	$\frac{1}{2}$	$\frac{1}{4}$	0	$\frac{1}{4}$	0.586
	$\frac{3}{4}$	0	0	$\frac{1}{4}$	0.545
	0	0	0	$\frac{1}{4}$	0.500

NEC AMPACITY RULES FOR CONDUCTORS

89. NEC rules for the ends of a wire differ from those for the middle. (Adapted from *Practical Electrical Wiring*, 20th edition, © Park Publishing, 2008, all rights reserved). The key to applying these rules, and the new NEC Example D3(a) in Annex D on this topic is to remember that the end of a wire is different from its middle. Special rules apply to calculating wire sizes based on how the terminations are expected to function. Entirely different rules aim at assuring that wires, over their length, don't over-heat under prevailing loading and conditions of use. These two sets of rules have nothing to do with each other—they are based on entirely different thermodynamic considerations. Some of the calculations use, purely by coincidence, identical multiplying factors. Sometimes it is the termination requirements that produce the largest wire, and sometimes it is the requirements to prevent conductor overheating. You can't tell until you complete all the calculations and then make a comparison. Until you are accustomed to doing these calculations, do them on separate pieces of paper.

90. Current is always related to heat. Every conductor has some resistance and as you increase the current, you increase the amount of heat, all other things being equal. In fact, as is covered in Sec. 110 of Div. 1 and elsewhere, you increase the heat by the square of the current. The ampacity tables in the NEC reflect heating in another way. As the reproduction of NEC Table 310.16 (see Table 18 in Div. 12) shows, the tables tell you how much current you can safely (meaning without overheating the insulation) *and continuously* draw through a conductor under the prevailing conditions—which is essentially the definition of ampacity in NEC Article 100: *The current in amperes that a conductor can carry continuously under the conditions of use without exceeding its temperature rating.*

91. Ampacity tables show how conductors respond to heat. The ampacity tables (such as Table 18 in Div. 1) do much more than what is described in the previous paragraph. *They show, by implication, a current value below which a wire will run at or below a certain temperature limit.* Remember, conductor heating comes from current flowing through metal arranged in a specified geometry (generally, a long flexible cylinder of specified diameter and metallic content). In other words, for the purposes of thinking about how hot a wire is going to be running, you can ignore the different insulation styles. As a learning tool, let's make this into a "rule" and then see how the NEC makes use of it:

A conductor, regardless of its insulation type, runs at or below the temperature limit indicated in an ampacity column when, after adjustment for the conditions of use, it is carrying equal or less current than the ampacity limit in that column.

For example, a 90°C THHN 10 AWG conductor has an ampacity of 40 amps. Our "rule" tells us that when 10 AWG copper conductors carry 40 amps under normal-use conditions, they will reach a worst-case, steady-state temperature of 90°C just below the insulation. Meanwhile, the ampacity definition tells us that no matter how long this temperature continues, it won't damage the wire. That's not true of the device, however. If a wire on a wiring device gets too hot for too long, it could lead to loss of temper of the metal parts inside, cause instability of nonmetallic parts, and result in unreliable performance of over-current devices due to calibration shift.

92. Termination rules protect devices. Because of the risk to devices from overheating, manufacturers set temperature limits for the conductors you put on their terminals. Consider that a metal-to-metal connection that is sound in the electrical sense probably conducts heat as efficiently as it conducts current. If you terminate a 90°C conductor on a circuit breaker, and the conductor reaches 90°C (almost the boiling point of water), the inside of the breaker won't be much below that temperature. Expecting that breaker to perform reliably with even a 75°C heat source bolted to it is expecting a lot.

Testing laboratories take into account the vulnerability of devices to overheating, and there have been listing restrictions for many, many years to prevent use of wires that would cause device overheating. These restrictions now appear in the NEC. Smaller devices (generally 100 amp and lower, or with termination provisions for 1 AWG or smaller wire) historically weren't assumed to operate with wires rated over 60°C such as TW. Higher-rated equipment assumed 75°C conductors but generally no higher for 600-volt equipment and below. This is still true today for the larger equipment. (Note that medium-voltage equipment, over 600 volts, has larger internal spacings and the usual allowance is for 90°C, but that equipment will not be further considered at this point.) Today, smaller equipment increasingly has a "60/75°C" rating, which means it will function properly even where the conductors are sized based on the 75°C column of Table 18, Div. 1.

Figure 3.34 shows a "60/75°C" marking on a 20-amp circuit breaker, which means it can be used with 75°C conductors, or with 90°C conductors used under the 75°C ampacity

you make a connection to one of these busbars (as distinct from a busbar within a panel), or from one wire to another, you only have to be concerned about the temperature rating of the compression connectors or other splicing means involved. Watch for a mark such as “AL9CU” on the lug. This one means you can use it on either aluminum or copper conductors, at up to 90°C, but only where the lug is “separately installed” (NEC text).

Lug temperature markings usually mean less than they appear to mean. Many contactors, panelboards, etc., have termination lugs marked to indicate a 90°C acceptance. Ignore those markings because the lugs aren’t “separately installed.” Apply the normal termination rules for this kind of equipment. What’s happening here is that the equipment manufacturer is buying lugs from another manufacturer who doesn’t want to run two production lines for the same product. The lug you field install on a busbar, and use safely at 90°C, also works when furnished by your contactor’s OEM. But on a contactor you don’t want the lug running that hot. The lug won’t be damaged at 90°C, but the equipment it is bolted to won’t work properly.

94. Protecting devices under continuous loads. The NEC defines a continuous load as one that continues for 3 hours or longer. Most residential loads aren’t continuous, but many commercial and industrial loads are. Consider, for example, the banks of fluorescent lighting in a store. Not many stores always stay open less than 3 hours at a time. Although continuous loading doesn’t affect the ampacity of a wire (defined, as we’ve seen, as a continuous current-carrying capacity), it has a major impact on electrical devices. Just as a device will be affected mechanically by a heat source bolted to it, it also is affected mechanically when current near its load rating passes through it continuously. To prevent unremitting thermal stress on a device from affecting its operating characteristics, the NEC restricts the connected load to not more than 80% of the circuit rating. The reciprocal of 80% is 125%, and you’ll see the restriction stated both ways. Restricting the continuous portion of a load to 80% of the device rating means the same thing as saying the device has to be rated 125% of the continuous portion of the load. If you have both continuous and noncontinuous load on the same circuit, take the continuous portion at 125%, and then add the noncontinuous portion. The result must not exceed the circuit rating.

EXAMPLE Suppose, for example, a load consists of 51 amps of noncontinuous load and 68 amps of continuous load (119 amps total). Calculate the minimum capacity we need to allow for our connected equipment as follows:

Step 1: $51 \text{ A} \times 1.00 = 51 \text{ A}$

Step 2: $68 \text{ A} \times 1.25 = 85 \text{ A}$

Step 3: Minimum = 136 A

Note that this is also the profile used in Example D3(a) of Annex D of the NEC. This discussion has been arranged to track this NEC coverage.

A device such as a circuit breaker that will carry this load profile must be rated no less than 136 amps, even though only 119 amps actually passes through the device. In the case of overcurrent protective devices, the next higher standard size would be 150 amps. In general, for overcurrent protective devices not over 800 amps, the NEC allows you to round upward to the next higher standard overcurrent device size. In this case, suppose a standard wire size had an ampacity of 140 amps (there doesn’t happen to be one, but this is only for discussion). The NEC normally allows a 150-amp fuse or circuit breaker to protect such a conductor.

Having gone this far, it’s easy to make two mistakes at this point. First, although you can round up in terms of the overcurrent device rating, you can’t round up in terms of

conductor loading, not even 1 ampere. Number 1 AWG conductors in the 75°C column can carry 130 amps. If your actual load runs at 131 amps, you have to use a larger wire. Second, when continuous loads are a factor, you have to build in additional headroom on the conductor sizes to ensure that the connected devices perform properly. This last point continually results in confusion because it may seem to contradict what was said about conductor ampacity tending to be the factor that determines minimum wire size.

In our work we handle conductors, and we worry about conductors getting overheated. Device manufacturers don't worry about conductors in this sense; they worry about their devices getting overheated and not performing properly. Continuous loads pose real challenges in terms of heat dissipation from the inside of mechanical equipment. Remember that when you bolt a conductor to a device, the two become one in the mechanical as well as the electrical sense. Device manufacturers rely on those conductors as a heat sink, particularly under continuous loading. The NEC allows for this by requiring conductors carrying continuous loads to be oversized according to the same formula that applies to the device, namely, an additional 25% of the continuous portion of the load.

EXAMPLE Our 10 AWG THHN conductor, for example, will carry 40 amps for a month at a time without damage to itself. But under those conditions the conductor would represent a continuous 90°C heat source. Now watch what happens when we (1) size the conductor *for termination purposes* at 125% of the continuous portion of the load, and (2) use the 75°C column for the analysis. This calculation assumes the termination is rated for 75°C instead of the default value of 60°C:

Step 1: $1.25 \times 40 \text{ A} = 50 \text{ A}$

Step 2: Table 310.16 at 75°C = 8 AWG

We go from a 10 AWG conductor to an 8 AWG conductor (6 AWG if the equipment doesn't have the allowance for 75°C terminations). Now that is just one customary wire size, but look at it from the device manufacturer's perspective. Number 10 AWG carrying 40 amps continuously is a continuous 90°C heating load. What about the 8 AWG? Use the ampacity table in reverse, according to our "rule." Forty amps happens to be the ampacity of an 8 AWG, 60°C conductor. Therefore, any 8 AWG wire (THHN or otherwise) won't exceed 60°C when its load doesn't exceed 40 amps. By going up just one wire size, the termination temperature dropped from 90°C to 60°C. The NEC allows manufacturers to count on this headroom.

To recap, if you have a 40-amp continuous load, the circuit breaker must be sized at least at 125% of this value, or 50 amps. In addition, the conductor must be sized to carry this same value of current *based on the 75°C ampacity column (or 60°C if not evaluated for 75°C)*. The manufacturer and testing laboratory count on a relatively cool conductor to function as a heat sink for heat generated within the device under these continuous operating conditions.

In the feeder example, including the 125% on the continuous portion of the load brings us to a 136-amp conductor, and the next larger one in the 75°C column is a 1/0. Remember to use the 75°C column here because the 150-amp device exceeds the 100-amp threshold (below which the rating is assumed to be 60°C). Remember, only 119 amps (68 amps + 51 amps) of current actually flows through these devices. The extra 17 amps (the difference between 119 amps and 136 amps) is phantom load. You include it only so your final conductor selection is certain to run cool enough to allow it to operate in accordance with the assumptions made in the various device product standards.

There are devices manufactured and listed to carry 100% of their rating continuously, and the NEC recognizes their use in exceptions. Typically these applications involve very large

circuit breaker frame sizes in the 600-amp range (although the trip units can be smaller). Additional restrictions accompany these products, such as on the number that can be used in a single enclosure and on the minimum temperature rating requirements for conductors connected to them. Learn how to install conventional devices first, and then apply these 100%-rated devices if you run across them, making sure to apply all installation restrictions covered in the directions that come with this equipment. The warning about wires having two ends applies here with special urgency; be aware that one of these devices at one end of a circuit doesn't imply anything about the suitability of equipment at the other end.

95. Grounded conductors have a special allowance. The 2008 NEC includes exceptions for both feeder and branch-circuit grounded conductors that allow them to be excluded from the upsizing requirement for continuously loaded wiring, provided they do not terminate on an overcurrent device. This is appropriate for feeder conductors that run from busbar to busbar and have no relevance as a heat sink for a connected device. This is more questionable for a branch circuit where a grounded conductor originating on a busbar arrives at a receptacle or other comparable device. The device manufacturer may not have assumed that the grounded conductor could be smaller than the ungrounded conductors, particularly in two-wire or three-phase corner-grounded applications where it will carry identical current as the ungrounded conductors and terminate in the same manner. Although the branch-circuit exception is in print [at 210.19(A)(1) Exception No. 2] the safest course for now is to ignore this exception on branch circuits and only apply it to feeder conductors [see 215.2(A)(1) Exception No. 2] that run between busbars.

96. The middle of a wire—preventing conductors from overheating. None of the preceding discussion has anything to do with preventing a conductor from overheating. That's right. All we've done is to be sure the device works as the manufacturer and the test lab anticipate in terms of the terminations. Now we have to be sure the conductor doesn't overheat. Again, ampacity is by definition a continuous capability. *The heating characteristics of a device at the end of the run don't have any bearing on what happens in the bowels of a raceway or cable assembly.*

To reiterate, you have to compartmentalize your thinking at this point. We just covered the end of the wire; now we'll get to the middle of the wire. Remember being asked to do these on separate pieces of paper? Lock the first one up, and forget everything you just calculated. It has absolutely no bearing on what comes next. Only after you've made the next series of calculations should you retrieve the first sheet of paper. And only then should you go back and see which result represents the worst case and therefore governs your conductor choice.

If you have trouble making this distinction, and many do, apply an imaginary pull box at each end of the run (Fig. 3-36). Actually, with the cost of copper near historic highs, the imaginary pull boxes are becoming real. One large contractor, faced with installing a 300 ft triple run of Type MC cable for a 1200-A feeder, installed three sets of 500 kcmil cable made up with 90°C THHN (ampacity = 1290 A) between pull boxes at each end. From each pull box he extended 600 kcmil conductors into the device terminations (75°C ampacity = 1260 A). The savings in copper more than paid for the labor and materials expense of providing the pull boxes.

To begin this part of the analysis, review the ampacity definition. Conductor ampacity is its current-carrying capacity *under the conditions of use*. For NEC purposes, two field conditions affect ampacity, and they are mutual heating and ambient temperature. Either or both may apply to any electrical installation. Both of these factors reduce ampacities from the table numbers.

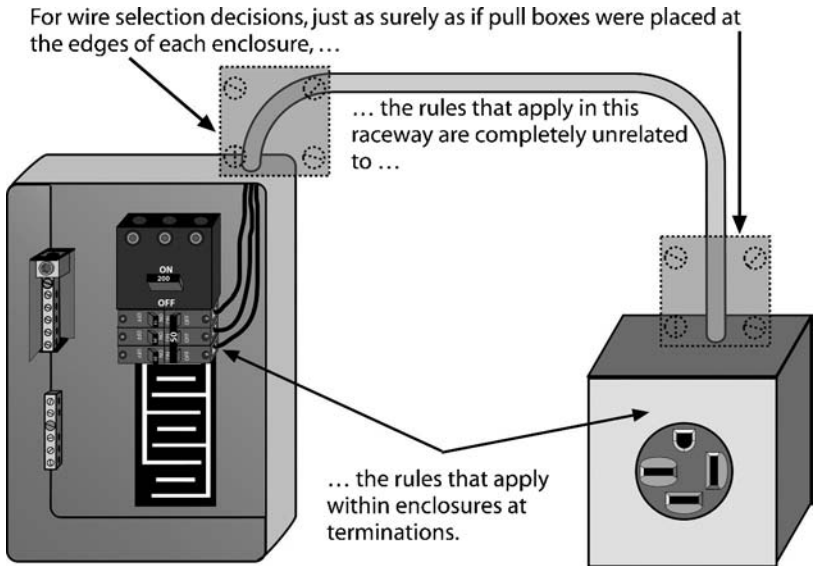


FIGURE 3.36 These imaginary pull boxes at each end of the run illustrate how to separate raceway/cable heating calculations from termination calculations.

97. Mutual conductor heating. A conductor under load dissipates its heat through its surface into the surrounding air; if something slows or prevents the rate of heat dissipation, the temperature of the wire increases, possibly to the point of damage. The more current-carrying conductors there are in the same raceway or cable assembly, the lower the efficiency with which they can dissipate their heat. To cover this mutual heating effect, the NEC imposes derating penalties on table ampacity values. Penalties increase with the number of current-carrying conductors in a raceway or cable assembly. NEC Table 310.15(B)(2)(a) (reproduced in Sec. 17 of Div. 12) limits the permissible load by giving derating factors that apply to table ampacities. For example, if the number of wires exceeds three but is fewer than seven, the ampacity is only 80% of the table value; if the number exceeds six but is fewer than 11, 70%; more than ten but fewer than 21, 50%, and so on. However, if the raceway is not over 24 in. long (classified as a nipple), the NEC assumes heat will escape from the ends of the raceway and the enclosed conductors need not have their ampacity derated.

Count only current-carrying conductors for derating calculations. Grounding conductors as covered in Sec. 340 of Div. 9 are never counted. A neutral wire that carries only the unbalanced current of a circuit (such as the neutral wire of a three-wire single-phase circuit, or of a four-wire three-phase circuit) is not counted for derating purposes in some cases. But remember: Grounded wires are not always neutrals. (Grounded wires are covered in Sec. 345 of Div. 9 and elsewhere; suffice it to say for now that in most modern systems one conductor is deliberately connected to ground, and neutrals are almost always grounded.) The grounded (“white”) wire of a three-wire corner-grounded delta power circuit is a phase conductor carrying the same current as the two ungrounded phase conductors and is *not* a neutral. It must be counted for derating purposes.

98. How (and when) to count neutrals. Although neutral conductors are counted for derating purposes only if they are actually current carrying, it is increasingly common

in commercial distribution systems derived from three-phase, four-wire, wye-connected transformers to find very heavily loaded neutrals. If the circuit supplies mostly electric-discharge lighting (fluorescent, mercury, and similar types discussed in Div. 10), you must always count the neutral. In such circuits, the neutral carries a “third harmonic” or 180-Hz current produced by such luminaires. The explanation of why such luminaires produce such a 180-Hz current is beyond the scope of this book, although it is partially covered at the end of Div. 1. But be aware that the neutrals of such circuits or feeders must be counted because those harmonic currents add together in the neutral instead of canceling out, and therefore require derating.

In addition, harmonic currents from other nonlinear loads often add instead of canceling in three-phase, four-wire, wye-connected neutrals as well. In fact, there are conditions where such loads cause the neutral to carry *more load* than the ungrounded conductors. There are now Type MC cable assemblies manufactured with oversized neutral conductors to address this problem. Finally, any time you run just two of the three-phase conductors of a three-phase, four-wire system together with the system neutral, that neutral always carries approximately the same load as the ungrounded conductors and must always be counted. This arrangement is very common on large apartment buildings where the feeder to each apartment consists of two-phase wires along with a neutral, but the overall service is three-phase, four-wire.

99. How (and when) to count control wires. Many types of control wires, such as motor control wires and similar wires that carry only intermittent or insignificant amounts of current need not be counted, provided the continuous control current does not exceed 10% of the conductor ampacity. For example, a motor starter with a 120-volt coil might require 100 VA to operate, or less than 1 amp. Since that is an intermittent load, and in any event it is less than 10% of the ampacity of 14 AWG, you could use 14 AWG wires for this control circuit and run them in the same raceway as the power wires without counting them for derating purposes. Since derating applies to every current-carrying wire in the conduit, for a typical three-wire control circuit this special allowance has a major impact on the ampacity of those power wires. For a normal three-phase motor circuit running in the same conduit, it allows the power wires to be counted at 100% of their table value instead of 80%.

100. Conductor ampacity derating. Now that you know how to count the number of current-carrying wires in a conduit, it's time to learn how to apply NEC rules to the result. Using the NEC directly means going from the ampacity table to the derating factor (by which you multiply), and comparing the result to the load. That's great for the inspector who checks your work, but it doesn't help you pick the right conductor in the first place. You want to go the other way: Knowing the load, you want to select the proper conductor. Consider the first example in Sec. 94, using a feeder with 51 amps of noncontinuous load and 68 amps of continuous load.

Suppose you have two of those feeders supplying identical load profiles and run in the same conduit. That would be (as previously noted we are counting the neutrals) eight current-carrying conductors in the raceway. *For this part of the analysis, ignore continuous loading and termination problems.* Remember, you should be using a fresh sheet of paper for this calculation.

Start with 119 amps of actual load (51 amps + 68 amps), and *divide* (you're going the other direction, so you use the opposite of multiplication) by 0.7 [the factor in NEC Table 310.15(B)(2)(a) and Sec. 17 of Div. 12], to get 170 amps in this case. In other words, any conductor with a table ampacity that equals or exceeds 170 amps will mathematically be

guaranteed to carry the 119-amp load safely. A 1/0 AWG THHN conductor, with an ampacity of 170 amps, will carry this load safely under the conditions of use, and it might appear to work. Whether it represents your final choice depends on the outcome of the analysis explained in the later topic on choosing a conductor.

101. Ambient temperature problems. High ambient temperatures hinder the dissipation of conductor heat just as in the case of mutual heating. To prevent overheating, the NEC provides ambient temperature derating factors at the bottom of the ampacity tables. Suppose, for example, circuit conductors go through a 35°C ambient. Their ampacity goes down (for 90°C conductors) to 96% of the base number in the ampacity table. Here again, start with 119 amps, and *divide* by the 0.96 to get 124 amps. Any 90°C conductor with an ampacity equal to or higher than 124 amps would carry this load safely. What happens if you have *both* a high ambient temperature *and* mutual heating? Divide twice, once by each factor. In this case:

$$119 \div 0.7 \div 0.96 = 177 \text{ A}$$

A 2/0 AWG THHN conductor (ampacity = 195 amps) would carry this load without damaging itself. Again, this would be true whether or not the load was continuous, and whether or not the devices were allowed for use with 90°C terminations. Don't cheat; the termination calculations are still supposed to be locked up in another drawer.

102. When diminished ampacity applies to only a small part of the run. You will run into installations where most of a circuit conforms to NEC Table 310.16 but a small portion requires very significant derating. For example as illustrated in Fig. 3.37, your circuit may be 207 ft long, with 200 ft in normal environments and 7 ft of it passing through a corner of a boiler room with a very high ambient temperature. The NEC generally observes the weak-link-in-the-chain principle and requires the lowest ampacity anywhere over a run to be the allowed ampacity. However, for very short runs where the remainder of the circuit can function as a heat sink, the NEC allows the higher ampacity to be used.

Specifically, any time ampacity changes over a run, determine all points of transition. On one side of each point the ampacity will be higher than on the other side. Now measure

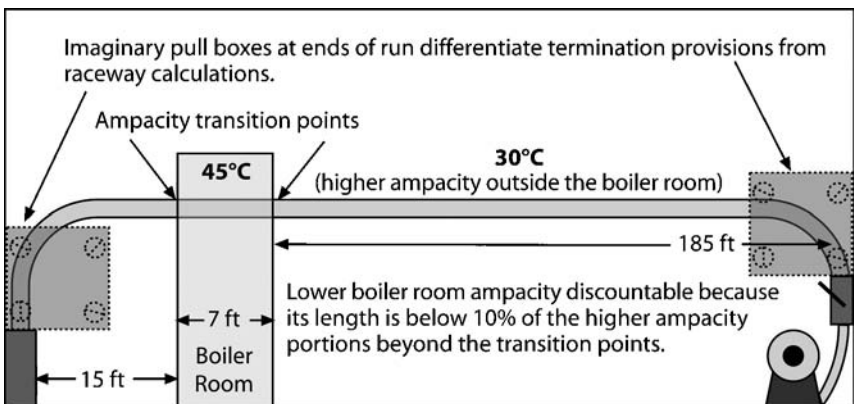


FIGURE 3.37 There is a limited exception to the weak link in the chain principle.

the length of the wire having the higher ampacity (in this example, the portions *not* in the boiler room) and the length having the lower ampacity (in this example, *in* the boiler room). Compare the two lengths. NEC 310.15(A)(2) Exception allows you to use the higher ampacity value beyond the transition point for a length equal to 10 ft or 10% of the circuit length having the higher ampacity, whichever is less.

In this case of the 200-ft run beyond the 7 ft in the boiler room, 10% of the circuit length having the higher ampacity would be 20 ft, but you can't apply the rule to anything over 10 ft. Since 7 ft is less than or equal to 10 ft (and less than the 10% limit of 20 ft), the exception applies and you can ignore the ambient temperature in the boiler room in determining the allowable ampacity of the wires passing through it. In the words of the exception, the "higher ampacity" (which applies to the run outside the boiler room) can be used beyond the transition point (the boiler room wall) for "a distance equal to 10 ft or 10% of the length figured at the higher ampacity, whichever is less."

103. Choosing a conductor. Now you can unlock the drawer and pull out the termination calculations. Put both sheets of paper in front of you, and design for the worst case by installing the largest conductor that results from those two independent calculations. The termination calculation (Sec. 94) came out needing conductors sized, under the 75°C column, no less than 136 amps even though the actual load was only 119 amps. You could use 1/0, either THHN or THW.

Suppose you put two feeders (eight conductors) in a conduit, as in Sec. 100. The termination calculation comes out 1/0, and as we've seen, the raceway derating calculation also comes out 1/0 AWG THHN. Here, the termination rules happen to agree with the raceway analysis. If the same raceway also goes through the area with high ambient temperature, however, you will need 2/0 THHN. Now the raceway conditions are limiting and you size accordingly. Section 100 shows the calculations under both conditions. Finally, suppose for a moment that the neutrals do not carry heavy harmonic loading and therefore need not be counted, and suppose the ambient temperature does not exceed 30°C. With only six current-carrying conductors, the derating factor drops to 0.8, so the required ampacity becomes $119\text{A}/0.8 = 149\text{ A}$, seemingly allowing 1 AWG THHN (90°C) conductors. Now the termination rules (mandating a 75°C temperature evaluation) would be the worst case and would govern the conductor selection process.

Remember, the terminations and the conductor ampacity are two entirely separate issues. Just because you need to use the 75°C column for the terminations doesn't mean you start in that column to determine the overall conductor ampacity. Go ahead and make full use of the 90°C temperature limits on THHN, and its resulting ampacity, to solve derating problems.

Don't get confused by the fact that the derating factor for continuous loads (0.8) is the same as the one for four to six conductors in a raceway (0.8). This is only a coincidence. One applies to devices and terminal heating at the end of a conductor, and the other applies over the interior of the raceway. They never apply at the same point in a circuit because the technical basis for each is entirely different. The middle is never the end, so never apply the rules for one to the other. The calculations in this discussion illustrate this through different instances of similar connected loading. In one case the termination requirements force an increase in conductor size. In another case the termination requirements agree with the results of the ampacity calculations; and in yet another case the ampacity calculation forces you to use a larger conductor than what the termination rules would predict.

104. The conductor must always be protected. Don't lose sight of the fact that the overcurrent device must always protect the conductor. For 800-amp and smaller circuits, NEC 240.4(B) allows the next higher standard size overcurrent device to protect conductors.

Above that point, NEC 240.4(C) requires the conductor ampacity to be no less than the rating of the overcurrent device. As a final check, be sure the size of the overcurrent device selected to accommodate continuous loads protects the conductors in accordance with these rules; if it doesn't you will need to increase the conductor size accordingly. Refer to the discussion of noncontinuous loads, in Sec. 106 for an example of where, even after doing both the termination and the ampacity calculations, this consideration forces you to change the result.

105. Small conductors. Small conductors (14, 12, and 10 AWG) present an additional wrinkle. The NEC imposes special limitations on overcurrent protection beyond the values in the ampacity tables for these small wires. Generally, the overcurrent protective device for 14 AWG wire can't exceed 15 amps; for 12 AWG wire, 20 amps; for 10 AWG wire, 30 amps. The higher ampacities of these conductors remain what the table says they are, however, and there are cases, notably including motor circuits, where this restriction doesn't apply. In general, perform all ampacity calculations as described previously, based on the ampacity table limits. But at the very end, make sure your overcurrent device doesn't exceed these specific ampere limits unless you fall into one of the exceptions specifically tabulated in NEC 240.4(G).

106. Noncontinuous loads. Suppose none of the load is continuous on our 150-amp feeder in Sec. 94, and suppose the character of the load on the neutrals does not require them to be classified as current-carrying conductors. Looking at the two feeders in Sec. 100, suppose the ambient temperature doesn't exceed 30°C. The termination need not include any phantom load allowance, but it still needs to assume 75°C termination restrictions. A 1 AWG conductor will carry the actual 119-amp load without exceeding 75°C, and therefore would seem to be usable until you consider the mutual effects of multiple conductors in the common raceway. Suppose you went to a 1 AWG THHN conductor, ampacity 150. Will it carry the 119-amp load safely? Yes, because $150 \text{ A} \times 0.8$ (the derating factor for six conductors) = 120 A. Will it overheat the breaker terminations? No, because 1 AWG copper is 1 AWG copper no matter what insulation style it has around it, and it won't rise to 75°C until it carries 130 amps. But its final derated ampacity within the conduit is 120 amps. The next higher standard-sized overcurrent device is 125 amps. The 150-amp breaker does not protect this wire under these conditions of use, and has to be reduced to 125 amps, or else you need to increase the wire size to 1/0 AWG.

107. Neutral sizing. As noted previously this example provided the basis for what is now Example D3(a) in NEC Annex D. The NEC example also calculates neutral sizing, based on a worst-case-scenario continuous neutral load of 42A. The D3(a) example notes that this wire runs busbar to busbar and does not require upsizing by 25% (see "Grounded conductors have a special allowance" in Sec. 95), leading to a preliminary size of 8 AWG under the 75°C column. However, this size would be inadequate to clear a line-to-neutral short circuit because 8 AWG is smaller than the minimum equipment grounding conductor that could be installed on a 150-A feeder as covered in NEC 250.122 and in Table 339 in Div. 9. Therefore, the minimum size becomes 6 AWG, as required in NEC 215.2(A)(1) (second paragraph).

There is another issue to be addressed at this point, and it will require interpretation on the part of the authority having jurisdiction until the NEC is clarified. NEC 250.122(B) requires that if ungrounded conductors are increased in size, a proportional increase must

be made in the size of the equipment grounding conductor. The size of the ungrounded conductors determined in this part of Div. 3 (in some cases as large as 2/0 AWG copper) are the smallest size allowed by the NEC under the specified conditions. No increase for voltage drop or other design consideration has been made. On the other hand, such sizes are larger than the sizes specified in NEC Table 310.16 and Table 18 in Div. 12. The historical context for the rule addressed instances where increases to lower voltage drop implied a similar benefit for a long equipment grounding conductor. The substantiation for the change pointed to instances where designers would ignore the rule by simply stating that the increase was for design reasons unrelated to voltage drop. None of this has anything to do with an increase to meet minimum NEC requirements, even on a feeder that is only 10 ft long. NEC Example D3(a) does not make this increase, but the issue is likely to be reviewed in a forthcoming edition of the NEC.

In the event that the rule is applied literally and to any increases beyond NEC Table 310.16 for whatever reason, then perform the following calculation, where “CSA” means “cross-sectional area” and “EGC” means “equipment grounding conductor”:

$$\begin{aligned} \text{New EGC CSA} &= \frac{\text{ungrounded conductor CSA} \times \text{base EGC CSA}}{\text{CSA of base ungrounded conductors from table}} & (33) \\ \text{New EGC CSA} &= \frac{(2/0 \text{ AWG} = 133,100 \text{ cmil}) \times (6 \text{ AWG} = 26,240 \text{ cmil})}{(1 \text{ AWG} = 83,690 \text{ cmil})} \\ &= (41,740 \text{ cmil} = 4 \text{ AWG}) \end{aligned}$$

The conductor cross-sectional areas are from Chapter 9, Table 8 of the NEC, which is included in Div. 12 as Table 57. The minimum equipment grounding conductor under this interpretation, and therefore the minimum neutral conductor per NEC 215.2(A)(1) second paragraph, would be 4 AWG.

108. Wires in parallel. Instead of using a very large wire, NEC 310.4 permits two or more smaller wires to be connected in parallel for use as a single wire. There are seven conditions, all of which must be met. All the wires that are to be paralleled to form the equivalent of one larger wire must (1) be 1/0 AWG or larger; (2) be of the same material (all copper, all aluminum, all copper-clad aluminum, etc.); (3) have precisely the same length; (4) have the same cross-sectional area in circular mils; (5) have the same type of insulation; (6) be terminated in the same manner (same type of lug or terminal on all); and (7) be arranged so the same number of conductors run in each paralleled raceway or cable, each of which must have the same electrical characteristics.

109. Keep the wires to be paralleled as equal as possible. The seven conditions noted in the previous paragraph must be met as exactly as possible. A very slight difference in length, for example, produces a slight difference in resistance and therefore impedance. Even slight differences in impedance can cause very significant inequalities in the way current divides between the conductors in the parallel circuit. Any inequality in current division is a potential hazard because paralleled runs don’t, by definition, have individual overcurrent protection on each conductor. Consider a 500-amp parallel make-up with two legs sized for 250 amps each. If one of the legs carries 300 amps and the other 200 amps, the overloaded leg will burn up without any immediate response from the overcurrent device.

It is a wise practice to cut all paralleled conductors of any given phase at the same time, prior to installation, when they can be laid out and cut to exactly the same length. (Note that

Phase A wires can be longer than Phase B, etc., as long as all wires comprising any given phase have the same characteristics.) Consider leaving them long enough to loop at terminations if the enclosure is large enough. Then, after pulling them into the conduits, each loop can be adjusted in size easily to take up any additional length resulting from the geometry of the paralleled run and the position of the terminals relative to the conduit entry point. If you must cut a conductor, measure the amount that you cut and then trim the others to the same length.

As an example of a practical application of paralleled circuiting, consider a task of providing a three-wire circuit carrying 490 amps. According to NEC Table 310.16 (75°C column), you will need 800-kcmil wire. In place of each 800-kcmil wire, you can use two smaller wires each having half the required ampacity, or 245 amps. According to NEC Table 310.16, two 250-kcmil wires each with an ampacity of 255 would appear to be suitable.

But if you plan to run all six wires through one conduit, 250-kcmil wire is not suitable because you will have six wires in one conduit, and therefore must derate the wire's normal ampacity of 255 to 80%. The ampacity of the 250-kcmil wire then becomes 80% of 255, or 204. Use 350-kcmil wire with an ampacity of 80% of 310, or 248.

110. Use parallel raceways as well as wires. Instead of running all wires through one conduit as described in the previous paragraph, use two separate conduits with three wires in each (or instead of two conduits you may use three or even more conduits provided all the requirements outlined are met); then derating is not required and 250-kcmil wire is suitable. But note that the conduits or other raceways through which the wires run must have the same physical characteristics; all might be steel rigid conduit, or all might be EMT. It would not be permissible to use one steel and one aluminum conduit.

When running paralleled wires through a raceway, special care must be used to meet the requirements of NEC 300.20. One wire of each phase must be run through each conduit. See Fig. 3.38 which shows six wires in two conduits. Wires *A* and *a* are paralleled with each other, but they must not run together in the same conduit. Likewise wires *B* and *b* are paralleled, and again must not run in the same conduit. The same applies to *C* and *c*. If you ran, for example, *a*, *b*, and *B* in one conduit, and *c*, *A*, and *C* in the other, each conduit would contain wires of only two of the three phases. In that case considerable induced and eddy currents would be set up in the conduits themselves, resulting in excessive heating and power losses.

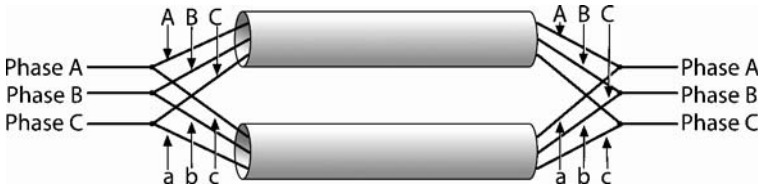


FIGURE 3.38 Where paralleled wires are run through conduit, each conduit must contain one wire from each phase. The installation shown does not include a neutral.

There is one common exception to the rule about running one of each of the phase conductors in each raceway. These are referred to as “isolated phase installations” in NEC 300.5(I) Exception 2. If you’re using nonmetallic raceways in an underground application, you can run all the *A* phase conductors in one conduit, all the *B* phase conductors in another, and so on. You have to be sure that when you enter the switchboard or other enclosure that you meet NEC 300.20, such as by providing a nonmetallic window through which all the conduits enter, preventing inductive reactance. Often these large installations enter a pit in

a concrete floor below the switchboard, for example, and having all of one phase together simplifies landing the conductors on their terminations. It also facilitates making all the conductors the same length.

The neutral wire of a feeder or circuit might often be smaller than the hot wires. If that is the case in your installation, the neutral also must be paralleled even if its ampacity is less than that of the hot wires, just so that their combined ampacity is equal to that which would be required if the neutral were not paralleled. But the 1/0 threshold still applies, and the paralleled neutrals cannot be reduced below that size. This is shown in Fig. 3.39 except that the neutral has been added, labeled *N* and *n*. If the wires are installed in a nonmetallic raceway, the raceway cannot serve as the equipment grounding conductor, and in that case an equipment grounding conductor must usually be installed in each raceway.

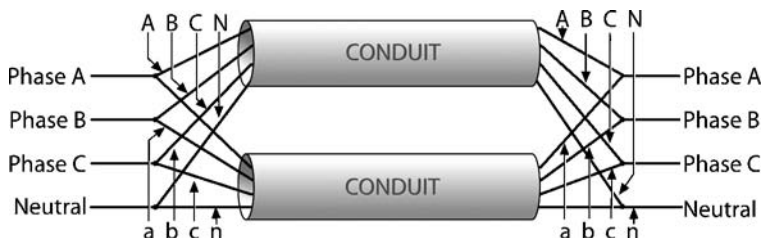


FIGURE 3.39 Same as Fig. 3.38 except a neutral has been added.

Conductors in parallel are quite common where using one wire would require a very large wire. The smaller wires have much higher ampacity per thousand circular mils than the larger one. Thus much less copper by weight is used when two smaller wires are paralleled to replace one larger one. The total installation cost is reduced. However, when you use two smaller wires in place of one larger wire, the combined circular-mil area of the two smaller wires will be less than that of one larger wire. That will result in a somewhat greater voltage drop than you would have using one wire of the larger size. If the circuit is long, you might have to increase the size of the paralleled wires to offset the difference in voltage drop.

111. Special rules for sizing grounding conductors in parallel make-ups. If you use separate grounding conductors for any reason, as in the case of rigid nonmetallic conduit, refer to the size of the overcurrent protective device and choose an equipment grounding conductor no smaller than required by NEC Table 250.122. Run this full-size grounding wire in each conduit. The NEC imposes this requirement because there are cases when a single such equipment grounding conductor will be called upon to return fault current contributed by all of the paralleled conductors of the faulted phase due to backfeed into a fault through the downstream connections. Note, however, that the 1/0 AWG threshold that normally applies to paralleled conductors does not apply to equipment grounding conductors. For example, if you run two nonmetallic conduits with 3/0 AWG THWN (200 amp) conductors in each for a 400-amp feeder, the equipment grounding conductor in each run must be at least 3 AWG (NEC Table 250.122). This is larger than the 6 AWG required for 200-amp circuits, but smaller than the 1/0 AWG minimum that applies to other paralleled wiring.

This rule also applies to cabled wiring methods run in parallel. Type MC cable is very commonly used in large feeders. Suppose you need to run a 600-amp feeder, and you decide to run two parallel 350-kcmil cables (75°C ampacity = 310 A each). Be sure you inspect the grounding conductor in the cable. The manufacturer probably assumed that his

350-kcmil cable would be used on a 300-amp circuit, and NEC Table 250.122 lists a 4 AWG equipment ground as adequate in such cases. Number 4 AWG is far below the 1 AWG required for 600-amp circuits. Each 350-kcmil cable run must include the 1 AWG grounding conductor. The proper cable is available, but usually only on special order.

112. Ampacities for large numbers of conductors in a common raceway.

[Adapted with permission from the *Engineers's Edition, Illustrated Changes in the 1999 National Electrical Code*, © 1998, Penton Business Media. All rights reserved.] The current edition of the NEC generally makes it prohibitive to install more than nine conductors in a raceway due to the prohibitive derating factors for mutual conductor heating (See Sec. 97) that take effect at that point. For example, just ten current-carrying conductors invoke a 50% derating factor, and the derating penalties get worse from there. However, there is an alternative, namely, Annex B, Sec. B.310.11. Access to Annex B is through engineering supervision, but if that is achievable, the old ampacity derating factors are revivable.

This table is almost the same table as the one the industry used under the old Note 8 for about 30 years, from the late 1950s to the late 1980s. Originally, this table was based on an assumption that when ten or more conductors were in a raceway, half of them were control circuits energized in the 1 to 2 A range. If all the conductors were, however, energized and supplying power loads, then the allowable currents had to be further decreased. To that effect, the 1987 NEC added a cautionary asterisk note stating that table factors were based on 50% diversity. Eventually the table was exiled to Annex B where it resides today, and Table 310.15(B)(2)(a) (in the main body of the Code) reflects the worst possible case of zero diversity on any of the wires. As a practical matter, that is not a realistic assumption.

The table differs from the one in Article 310 in its three break points over the nine-conductor fill level. Specifically, the next cut point is 10 to 24 conductors and the derating factor is 70%, followed by 25 to 42 conductors taken at 60%, and 43 to 85 conductors taken at 50%. These three levels are qualified by a note that indicates that they assume a "load diversity" of 50%. The purpose of this analysis is to make that statement usable so the table itself can be used easily.

113. Verification of table validity. The table comes with a fine print note that includes a formula that underlies the table and that can be used to deal with more complicated "real-world" diversity questions, such as all the conductors being energized, but carrying varying loads.

$$A_2 = \sqrt{\frac{0.5N}{E}} \times (A_1) \text{ or } A_1, \text{ or } A_1, \text{ whichever is less} \quad (34)$$

where

A_1 = ampacity from Table 310.16, etc., multiplied by the appropriate factor from Table B.310.11

N = total number of conductors used to obtain the multiplying factor from Table B. 310.11

E = desired number of conductors in the raceway or cable

A_2 = ampacity limit for the current-carrying conductors in the raceway or cable

For example, if twenty 12 AWG THHN conductors are involved having an ampacity (from Table 310-16) of 30 A, a diversity of 50% could mean only 10 are carrying current

at a particular time. From Table B.310.11, the derating factor (under engineering supervision) to be applied is 70%.

$$\text{Allowable ampacity} = 30 \text{ A times } 0.70 = 21 \text{ A}$$

Figuring the heating effect of the 10 conductors fully loaded to 21 A produces the following:

$I^2R = 10 \text{ times } 21^2 \text{ times } R = 4410 \text{ R}$ (R being the resistance per unit length of 12 AWG copper, which will be taken as a constant for these calculations).

Expressed in English, the formula says that the desired ampacity (A_2) is the square root of one half the ratio of the total number of current carrying conductors (N) to the number of energized conductors (E), all times the “old-fashioned” ampacity as calculated from Appendix B.310.11 (A_1).

Therefore, working from this formula, first calculate the “old-fashioned” ampacity (Table 310.16 ampacity times B.310.11 factor). In this case, that would be 30 A times 0.7 = 21 A. This is the number that goes into the formula as “ A_1 ”.

Then, the final ampacity is:

$$A_2 = \sqrt{[0.5N \div E]} \text{ times } A_1$$

$$A_2 = \sqrt{[0.5 \text{ times } (20 \div 20)]} \text{ times } 21 \text{ A}$$

$$= 0.71 \text{ times } 21 \text{ A} \approx 15 \text{ A}$$

The ratio between the developed ampacity here (15 A) and the Table 310.16 ampacity (30 A) is 50%; which is identical to that shown in Table 310.15(b)(2)(a) for a similar conductor fill, and the heating effect is:

$$I^2R = 20 \times 15^2 \times R = 4500 \text{ R}$$

The close agreement between the two results (4410 R vs. 4500 R) validates this approach and holds on other numbers of conductors in a raceway. This is no accident, since both Sec. 310.15(b)(2)(a) and the formula are based on the same laws of physics. The principle can be broadened to allow a qualified engineer to develop corrected ampacities under many other load conditions and numbers of conductors in a raceway or cable, as covered in the next section.

114. Applying the formula to general cases. The table footnote actually refers to a “load diversity” of 50%. This is not a defined term in the Code, and can refer to other circuit configurations than half fully on/half off. The overall approach is to first figure the limiting amount of heat $W = N(I^2R)$ that the conductors in the raceway to be evaluated will generate assuming a 50% diversity and using the adjustment factor in Table B.310.11. This sets the limit on the amount of heat that is allowable. If there are different size conductors involved, then begin with the 50% that will give the largest I^2R heating when loaded as allowed in the table.

The next step is to work backward and calculate the ampacity of the conductors under the actual conditions. If all the conductors are the same size, plug the amount of heat just calculated (“W”) into the rearranged formula $I = \sqrt{W \div NR}$; this gives the equivalent allowable heating with “N” conductors equally loaded. Calculations involving combinations of conductor sizes are more complicated but the principle is the same. Remember to factor in the resistances as ratios (based on Chapter 9 Table 8, or from Table 57 in Div. 12) to the conductor resistance used in the initial determination of allowable heating. This way the resistance per unit length (“R”) is a constant and need not be actually calculated. Figure 3.40

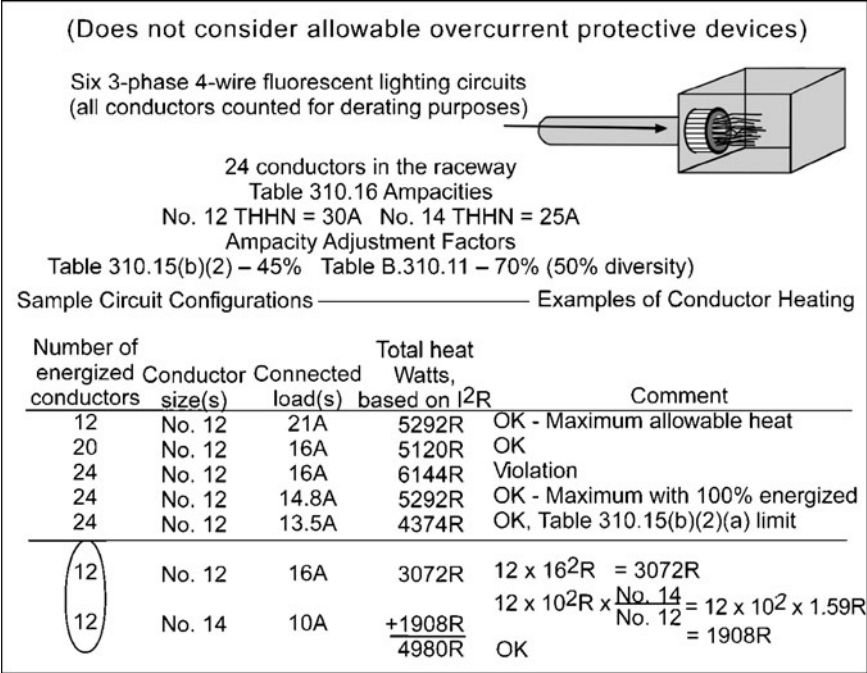


FIGURE 3.40 Examples of multiple-conductor heating. The bottom example (below the line) shows mixed size conductors in a common raceway.

shows a worked-out example of 12 and 14 AWG conductors mixed in the same raceway, along with other loading vs. heating examples of interest.

As shown in Fig. 3.40, many different combinations of numbers of conductors energized versus reduced loads can amount to “a load diversity of 50%.” As currents fall away from their theoretical maximums, the heating falls by the square of those decreases. This is the reason that under actual loading conditions there was very little documentation of any problems with the traditional approach. The example also shows how a possible design load at zero diversity (all 24 wires carrying 16 A each) could overheat the conductors. This is why Table 310.15(b)(2)(a) was changed a few cycles back.

DIVISION 4

GENERAL ELECTRICAL EQUIPMENT AND BATTERIES

Introduction	4.1
Switches	4.1
Installation of Switches	4.31
Protective Devices	4.33
Switchboards and Switchgear	4.70
Panelboards	4.80
General Wiring Materials and Devices	4.88
Power Capacitors	4.132
Batteries: General	4.138
Primary Batteries	4.138
Storage Batteries: General	4.143
Lead-Acid Storage Batteries	4.147
Nickel-Iron-Alkaline Batteries	4.159
Nickel-Cadmium Batteries	4.170
Installation of Storage Batteries	4.182
General Construction Materials	4.185

INTRODUCTION

1. Introduction. In this division the miscellaneous equipment, materials, and devices which are employed for electrical installations are discussed. Certain items which are used for specific types of installations have not been included in this division; an explanation of these devices or materials will be found in Div. 8, “Outside Distribution,” or in Div. 9, “Interior Wiring.” Since there is so much material to cover for generators, motors, and transformers, a separate division (Div. 7) has been devoted to generators and motors and another (Div. 5) to transformers.

The aim in the preparation of Div. 4 has been to present the different types of equipment, materials, and devices which are available, with sufficient explanation of their characteristics, installation, and maintenance so that proper equipment can be intelligently selected, installed, and maintained in good condition for satisfactory service. Much useful information that is not ordinarily readily available at short notice has been included.

SWITCHES

2. A switch is a device for making, breaking, or changing connections in an electric circuit under the conditions of load for which it is rated. It is not designed for interruption of a circuit under short-circuit conditions. Refer to Sec. 59 for a discussion of the difference between circuit breakers and switches.

3. Switches may be classified in several different ways:

- I.** According to number of poles
 - A.** Single-pole
 - B.** Two- or double-pole
 - C.** Three- or triple-pole
 - 1.** Standard
 - 2.** Solid-neutral
 - D.** Four-pole: standard
 - E.** Four-pole: solid-neutral
 - F.** Five-pole: standard
 - G.** Five-pole: solid-neutral
- II.** According to number of closed positions
 - A.** Single-throw
 - B.** Double-throw
- III.** According to type of contact
 - A.** Knife-blade
 - B.** Butt-contact
 - 1.** Single-line
 - 2.** Multiple-line
 - 3.** Surface
 - C.** Mercury
- IV.** According to number of breaks
 - A.** Single-break
 - B.** Double-break
- V.** According to method of insulation
 - A.** Air-break
 - B.** Oil-immersed
- VI.** According to method of operation
 - A.** Operating force
 - 1.** Manual
 - 2.** Magnetic
 - 3.** Motor or solenoid
 - B.** Mechanism
 - 1.** Lever
 - 2.** Dial
 - 3.** Drum
 - 4.** Snap
 - a.** Tumbler
 - b.** Rotary
 - c.** Pushbutton
- VII.** According to speed of operation
 - A.** Quick-break
 - B.** Quick-make
 - C.** Slow-break
- VIII.** According to enclosure
 - A.** Open
 - B.** Enclosed
 - 1.** General-purpose
 - 2.** Driptight
 - 3.** Weather-resisting
 - 4.** Watertight
 - 5.** Dusttight
 - 6.** Submersible
 - 7.** Hazardous locations
 - 8.** Bureau of Mines
- IX.** According to protection provided to circuits or apparatus
- X.** According to type of service
 - A.** Power switches
 - 1.** General-purpose
 - a.** Open
 - b.** Safety
 - 2.** Disconnecting
 - 3.** Motor-circuit
 - 4.** Motor-starting
 - 5.** Field switches
 - 6.** Service-entrance
 - 7.** Bolted-pressure contact
 - B.** Wiring switches
 - 1.** According to method of installation
 - a.** Flush-mounting
 - (1)** Standard
 - (2)** Interchangeable
 - (3)** Combination
 - b.** Surface
 - c.** Pendant
 - d.** Through-cord
 - e.** Door
 - f.** Canopy
 - g.** Appliance
 - h.** Special exposures
 - 2.** According to function
 - a.** General-purpose
 - (1)** Single-pole
 - (2)** Double-pole
 - b.** Three-way
 - c.** Four-way
 - d.** Three- or four-pole
 - e.** Multiple-circuit or electrolier
 - f.** Momentary-contact
 - g.** Heater
 - h.** Dimmer
 - C.** Control switches
 - D.** Instrument switches
 - E.** Miscellaneous types

4. A pole of a switch is that part of a switch which is used to make or break a connection and which is electrically insulated from other contact-making or -breaking parts. A single-pole switch will make or break connections in only one conductor or leg of a circuit; a two-pole switch, in two legs, etc. Schematic diagrams illustrating the meaning of the number of poles are shown in Fig. 4.1.



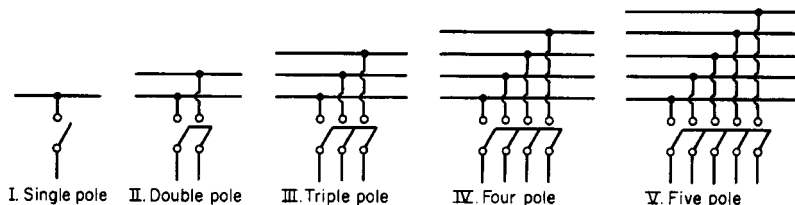


FIGURE 4.1 Meaning of poles.

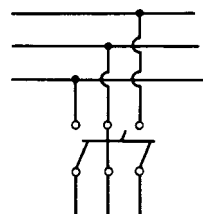For some installations in systems having a grounded neutral wire, it is always desirable to break the neutral connection as the circuit passes through a switch. In these cases, a regular switch with a number of poles one less than the number of conductors of the circuit can be used. The neutral conductor is then carried directly to a neutral bar in the switch. Another installation can be made by the use of a *solid-neutral switch* (Fig. 4.2). The number of switch blades or contacts for a solid-neutral switch is one less than the number of conductors of



I Schematic diagram of three-pole solid-neutral switch

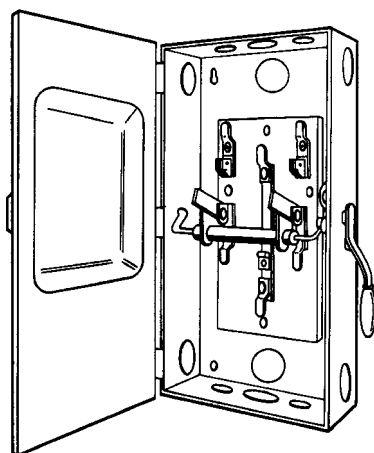

II Three pole, unfused switch

FIGURE 4.2 Solid-neutral switch and connections.

the circuit, but a neutral strap is located between two of the switch blades or contacts to carry the neutral leg solidly through the switch without breaking the circuit of the neutral conductor. A switch designated as a three-pole solid-neutral switch will accommodate a three-conductor circuit and provides two switched poles and one solid-neutral strap. A solid-neutral switch is shown in Fig. 4.2, II. Figure 4.15 shows a three-pole switching-neutral fused switch which satisfies National Electrical Code requirements.

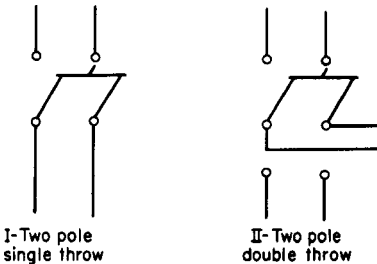


FIGURE 4.3 Single- and double-throw switches.

5. A single-throw switch (Fig. 4.3, I) will make a closed circuit only when the switch is thrown in one position. A *double-throw switch* (Fig. 4.3, II) will make a closed circuit when thrown in either of two positions. Special *multiple-throw switches* can be made to meet the requirements of conditions which require that a switch make a closed circuit when thrown in more than two positions. Examples of multiple-throw switches are the dial and drum switches employed for control and instrument work.

6. Switch contacts. In the construction of switches, different methods are employed for making contact between the movable and stationary parts of the poles. *Knife-blade switches* consist of some form of movable copper blade which makes contact by being forced between forked contact jaws, as illustrated in Fig. 4.4.

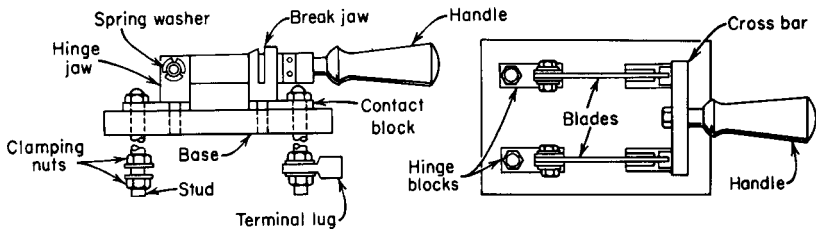


FIGURE 4.4 Knife-blade switch parts.

The construction of the contact members of *butt-contact switches* varies widely with different manufacturers. In all cases, however, the contact is formed by pressing the movable member against the stationary contact. (The two contacts are butted together when closed.) The two members are so constructed that there will be a stiff spring action between them to ensure a good contact when in the closed position. The contact formed between the two members may be of the *single-line*, *multiple-line*, or *surface* type. Single-line contact is obtained by making the surface of the contacting members curved so that, when closed, the members are in contact only along a single line instead of over the entire surface. With multiple-line contacts the two members are not in contact over their entire surfaces, contact being made along several lines. The multiple lines of contact are obtained by making the movable member of laminated (brush) or cylindrical construction. In butt-contact switches of the surface type, the contact members, when in the closed position, are butted together so that they are in contact over as much of the surface

as possible. The disadvantage of the surface type of contact is that it is very difficult to obtain a good contact over the entire surface. Typical butt-contact constructions are illustrated in Fig. 4.5.

One of the essential functions of any switch is to maintain a good low-resistance contact in the closed position. If the contact is poor, there will be considerable resistance at this point. The high contact resistance will result in overheating of the switch and possible

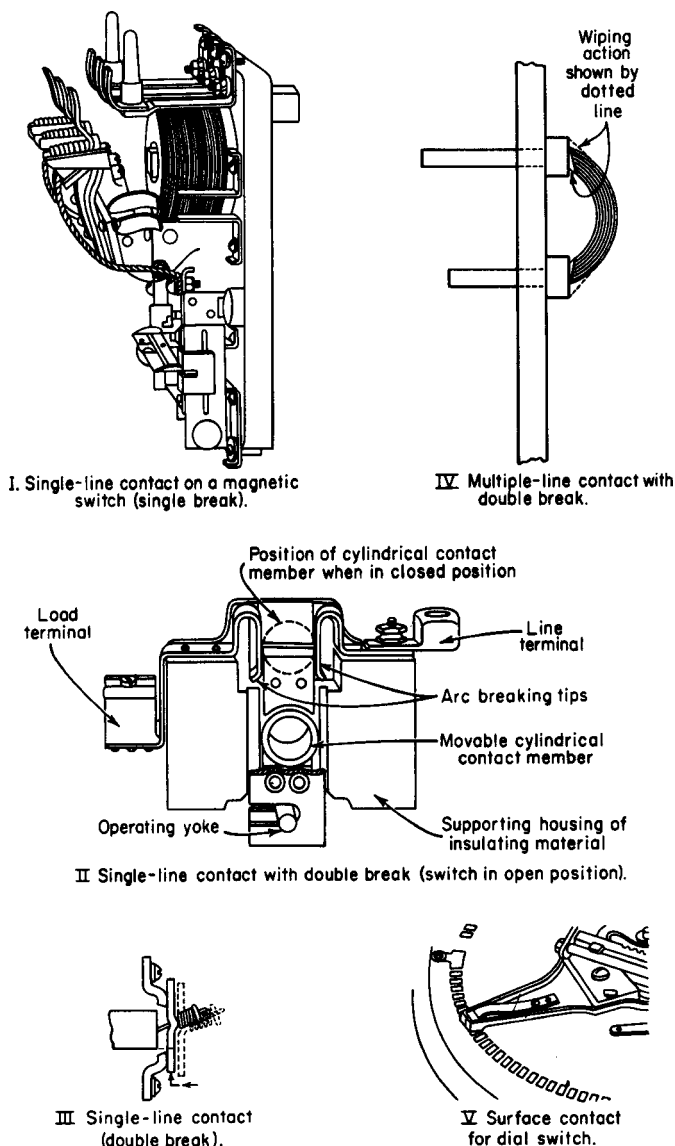


FIGURE 4.5 Butt-contact constructions.

opening of the circuit due to the functioning of circuit-overload protective devices. Switches are generally constructed so that the contacts will be closed under pressure with a sliding or rolling action to maintain clean, low-resistance contacts. The contact surfaces are frequently silver-plated to prevent oxidation and reduce contact resistance.

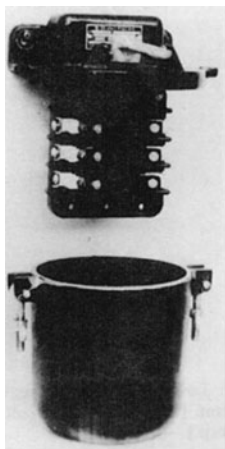
7. Mercury contact switches are sometimes used for low-capacity circuits in control wiring. They consist of a glass tube containing mercury and two stationary contact members located in opposite ends of the tube. The tube is mounted in a supporting case so that the position of its axis can be changed by an operating handle. When the handle is in the off position, the axis of the tube is tilted so that the mercury is at one end of the tube and makes contact with only one of the stationary contacts. When the handle is thrown to the closed position, it rotates the tube, causing the mercury to move in the tube in a manner that closes the circuit from the stationary contact at one end of the tube through the mercury to the stationary contact at the other end of the tube. Amid current environmental concerns concerning the long-term effects of mercury being released in landfills at the end of the useful lives of this equipment, the use of mercury has become largely obsolete. For example, vials of mercury were standard in thermostats for generations, and they have been almost entirely superseded by electronic types that do not rely on this metal.

8. Both knife-blade and butt-contact switches are made in single- and double-break types. A single-break switch, in opening, breaks each pole of the circuit at only one point. A double-break switch, in opening, breaks each pole of the circuit at two points. Breaking the circuit in two places doubles the quenching effect of the switch in suppressing the arc. This reduction in the arcing at the contacts prolongs the life of the contacts by reducing the formation of destructive beads and pitted areas.


9. Insulation of switches. The great majority of switches are designed to interrupt the circuit in the surrounding air. The live parts must be spaced far enough apart so that the air space between them will have sufficient insulating ability for the voltage which exists between the adjacent parts. Oil switches (Fig. 4.6) have their contact parts immersed in oil so that the circuit is interrupted under oil.

10. Switches can be operated by hand (Fig. 4.7), by electromagnets (Fig. 4.8), by motors (Fig. 4.8), or by means of solenoids (Fig. 4.8). Most power switches are operated by means of simple lever action (Fig. 4.4) or by means of a lever attached to the switch through a toggle mechanism. Dial switches consist of a movable contact mounted on a rotatable arm and of several fixed contacts arranged in circular form. As the arm is rotated, the movable contact makes connection with the successive fixed contacts, one at a time. This type of switch is used for instrument, control, storage-battery end-cell, and transformer tap-changing switches. Drum switches consist of a set of contact segments mounted on a central movable drum and a set of stationary contact fingers (Fig. 4.9). Drum switches are employed for motor-starting, control, and instrument switches.

Magnetic switches consist of switch contacts operated by means of an electromagnet. They are used extensively as the switching element for motor controllers. They also find application in general wiring work when it is desired to control a circuit at some point remote from the switch. See Secs. 36 and 37.



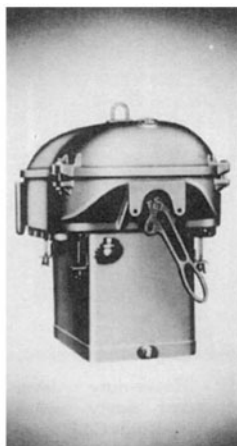I. Small-capacity three-pole double-throw switch.
[General Electric Co.]



II. Medium-voltage industrial type.
[Westinghouse Electric Corp.]




III. High-voltage industrial type.
[General Electric Co.]

FIGURE 4.6 Oil switches.


Snap switches are small-capacity switches in which the circuit is made or broken with a quick motion independent of the speed of operation of the switch by the operator. Figures 4.10 and 4.11 show some antique versions of these devices. The tumbler or toggle switch (Fig. 4.12) typically relies on the action of the operator to make the contact through actuation of the toggle with the spring retaining the contacts in the closed position. When the operator moves the toggle to the open position the spring-and-cam mechanism moves the contact arm to the open position. Some toggle switches employ the opposite sequence.



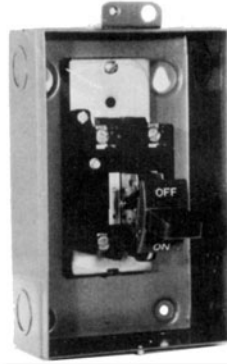I. Heavy-duty lever-operated safety switch with interlocked Crouse Hinds Arcrite receptacle.
[Square D, Schneider Electric]



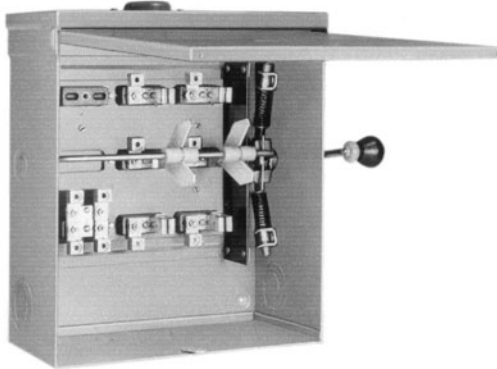
II. Lever and toggle mechanism.
[Westinghouse Electric Corp.]




III. Double throw safety switch.
[Square D, Schneider Electric]

FIGURE 4.7 Operating mechanisms for manual switches.

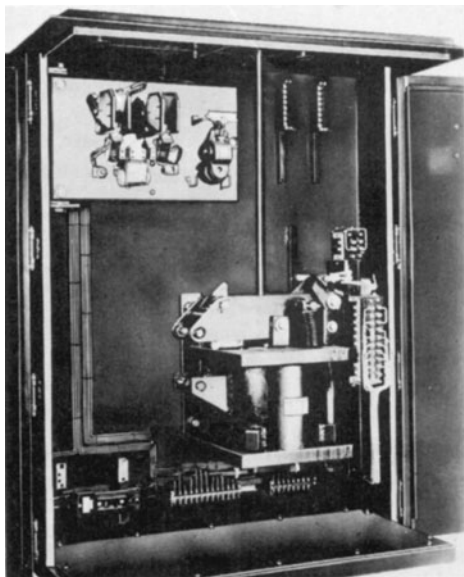11. Speed of operation of switches. With an ordinary manual switch the speed of closing or opening a switch depends upon the operator. If current conditions are such that an arc may be drawn, attachments which make it impossible to open the switch slowly and thus draw a dangerous arc should be provided. Many switches are provided with quick-make as well as quick-break features. A quick-break attachment for an open knife switch is shown in Fig. 4.13. When the switch is opened, the auxiliary blade is held in the switch jaws by friction until the main blade has been withdrawn. Withdrawal of the main blade increases the spring tension so that it suddenly jerks the auxiliary blade out of the jaws and quickly breaks the circuit. In switches of the enclosed safety type, the operating handle is frequently connected through linkages and a spring so that after the handle has been moved a certain distance, the spring quickly completes the closing or opening action, giving the switch quick-break or -make features.



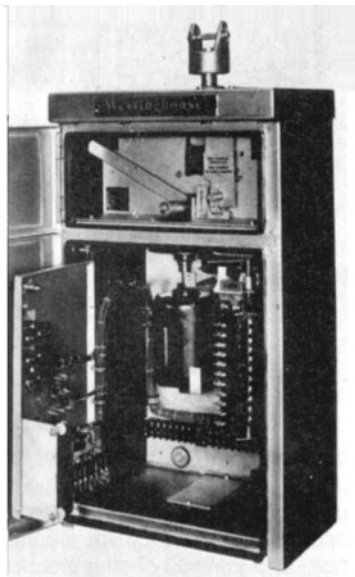I. Solenoid-operating mechanism. [Westinghouse Electric Corp.]



II. Motor-operating mechanism. [Westinghouse Electric Corp.]

FIGURE 4.8 Electrically operated switches.

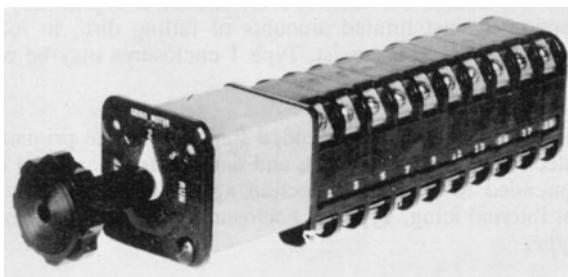


FIGURE 4.9 Drum-type control switch. [General Electric Co.]

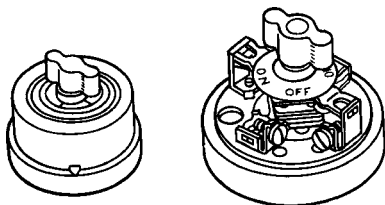


FIGURE 4.10 Rotary snap switch: surface-mounting type.

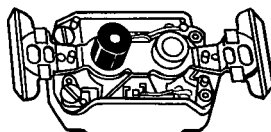


FIGURE 4.11 Pushbutton switch: flush-mounting type, old style.



I. 20A, ac toggle switch II. 15A, ac toggle switch
FIGURE 4.12 Toggle switch: flush-mounting ac type. [Pass & Seymour, Inc.]

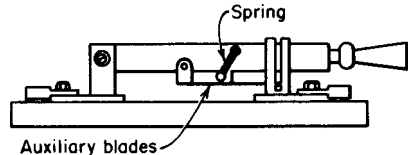


FIGURE 4.13 A quick-break switch.

12. Enclosure of switches. Switches may be classified as open or enclosed, depending upon whether their current-carrying parts are exposed or enclosed in a protecting box or casing. All switches should be of the enclosed type (externally operated) unless they are mounted on switchboards or panelboards. Even in these cases it is generally better practice to use switchboards and panelboards of the dead-front-construction type. In no case should open switches be employed where they may be operated by unqualified persons.

Switches can be obtained with enclosures to meet the requirements of different classes of exposures. The standard (National Electrical Manufacturers Association) types of non-ventilated switch enclosures are as follows:

Type 1. Type 1 enclosures are intended for indoor use primarily to provide a degree of protection against limited amounts of falling dirt, in locations where unusual service conditions do not exist. Type 1 enclosures may be of the nonventilated or the ventilated type.

Type 3R. Type 3R enclosures are intended for outdoor use primarily to provide a degree of protection against rain, sleet, and damage from external ice formation. They are not intended to provide protection against conditions such as internal condensation, or internal icing. Type 3R enclosures may be of the nonventilated or the ventilated type.

Type 4. Type 4 enclosures are intended for indoor or outdoor use primarily to provide a degree of protection against windblown dust and rain, splashing water, and hose directed water; and to be undamaged by the formation of ice on the enclosure. They are not intended to provide protection against conditions such as internal condensation or internal icing.

Type 7. Type 7 enclosures are intended for use indoors in locations classified as Class I, Group A, B, C, or D, as defined in the National Electrical Code. The letters A, B, C, and D indicate the gas or vapor atmospheres in the hazardous location. The enclosures are marked with the appropriate class and group(s) for which they have been qualified. These enclosures are capable of withstanding the pressures resulting from an internal explosion of the specified gases and containing such an explosion sufficiently that an explosive gas-air mixture existing in the atmosphere surrounding the enclosure will not be ignited. Enclosed heat-generating devices do not cause external surfaces to reach temperatures capable of igniting explosive gas-air mixtures in the surrounding atmosphere.

Type 9. Type 9 enclosures are intended for indoor use in locations classified as Class II, Groups E, F, or G, as defined in the National Electrical Code. The letters E, F, and G indicate the dust atmospheres in the hazardous location. The enclosures are marked with the appropriate class and group(s) for which they have been qualified. These enclosures are capable of preventing the entrance of dust. Enclosed heat-generating devices do not cause external surfaces to reach temperatures capable of igniting or discoloring dusts on the enclosure or igniting dust-air mixtures in the surrounding atmosphere.

For complete listings of NEMA enclosures, see Secs. 7-253 and 7-253A.

13. Overcurrent protection for circuits or apparatus is frequently incorporated with a switch. For the protection of circuits the protective device incorporated with the switch consists of fuses. For the protection of equipment the protective device may be any one of the types listed in Sec. 46 (I, II, IV, and V). Standard fused switches are equipped with fuse clips for accommodating Class H cartridge fuses or, in some cases, Type S screw-base plug fuses if the switch rating is 30 A.

Fused switches used on systems with a grounded neutral may have one less pole than the number of conductors of the circuit, or a solid-neutral or switching-neutral switch may be employed. In the first case, the neutral leg is not carried through the switch, but the neutral conductor is simply carried through the switch box in the space around the switch. A solid-neutral switch (Fig. 4.14) has one less blade or contact than the number of conductors of the circuit, with a neutral strap located in the space between two of the switch blades or contacts to carry the neutral leg solidly through the switch without breaking the circuit of the neutral conductor. No fuse is located in the neutral leg. A switching-neutral switch (Fig. 4.15) has a blade or contact for each conductor of the circuit. The blade or contact for the neutral conductor is connected by a copper strap to its terminal without any fuse clips. Such a switch opens the neutral conductor leg and all other circuit conductors when the switch is opened and satisfies NEC rules.

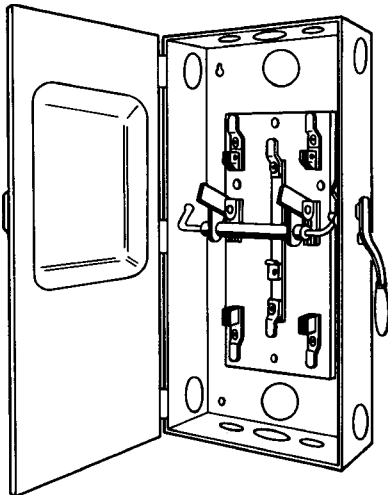


FIGURE 4.14 Three-pole solid-neutral fused switch.

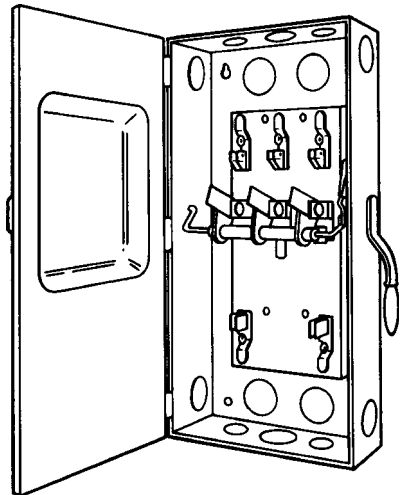


FIGURE 4.15 Three-pole switching-neutral fused switch.

14. General-purpose or general-use power switches are intended for use in general-distribution and branch circuits. They are rated in amperes and are capable of interrupting their rated current at their rated voltage. These switches may be of the open or enclosed externally operated type. The enclosed switches are generally referred to as safety switches.

General-purpose or general-use switches are NEMA-designated as Type HD, ND, or LD switches, depending upon the severity of service for which they are designed. *Type HD* (heavy-duty) switches, the most ruggedly constructed of the three types, are designed for the heaviest-duty service with respect to both frequency of operation and current capacity for handling heavy overloads. *Type ND* (normal-duty) switches are of lighter construction than Type HD and are designed for service conditions in which frequent operation is not required and overload conditions are not severe. *Type LD* (light-duty) switches are of light construction and are designed primarily for entrance service and general-purpose use when the load is light and operation very infrequent.

15. Open switches are constructed with their current-carrying parts exposed. Most open switches are of the plain lever knife-blade type. Knife-blade switches in very heavy current-carrying capacities are hard to operate owing to the large rubbing-contact surfaces required. For this reason open switches of very large capacity are usually of the brush-butt-contact type (Fig. 4.5, IV).

Most open lever-type knife-blade switches are of the single-break type; they are made in a variety of forms. They can be obtained in single-, double-, triple-, and four-pole types, for either front or rear connection (see Figs. 4.16 and 4.17). They may be of the fused or unfused type and either single- or double-throw.

Open switches are used principally for mounting on live-front switchboards.

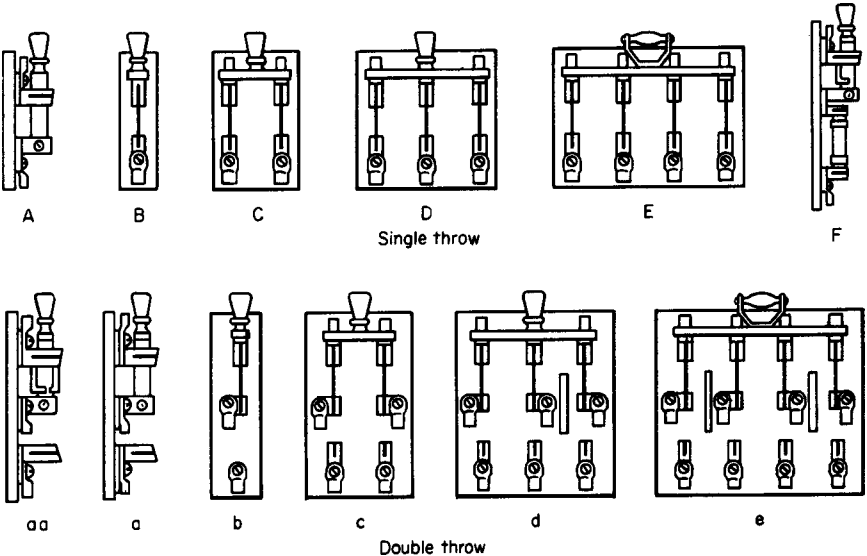


FIGURE 4.16 Front-connected knife-blade switches. [*Electric System Handbook*]

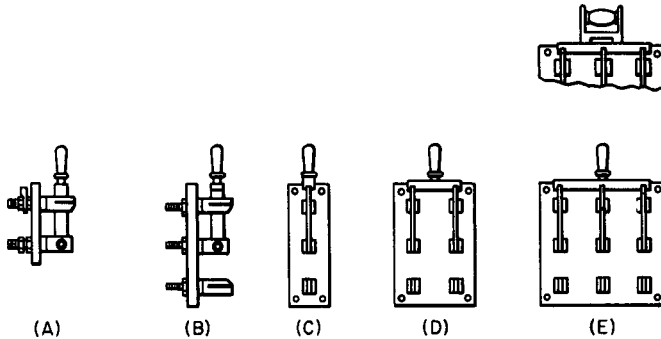


FIGURE 4.17 Rear-connected knife-blade switches. [*Electric System Handbook*]

16. The names of knife-switch parts are given in Fig. 4.4. The contact between the break jaws and the blade should be carefully inspected, as it is at this point that knife switches are most apt to give trouble by overheating. The contact between the hinge jaws and the blade seldom limits the capacity of a switch, because it is under pressure from the hinge bolt and the spring washers. The capacity of a switch is determined by its temperature rise.

About 1000 A/in^2 (645 mm^2) of copper section and 50 to 75 A/in^2 of sliding-contact surface are usually allowed in designing switches.

A switch that will carry, possibly, 1000 A with a 20°C temperature rise will carry possibly 2000 A with about a 60°C rise. The radiation of heat from the switch increases more rapidly than does the rise in temperature, and as the heat generated varies as the square of the current, it is evident that the temperature rise will be somewhat less than proportional to the square of the current.

With a given current, a switch will break about double the voltage with alternating current that it will with direct current. This is due to the fact that an alternating current decreases to a zero value during each cycle. Never assume that the ac voltage rating of a switch (or a circuit breaker or any other device called upon to open a circuit under load) is the same as its dc voltage rating; in fact, many ac-rated switches have no dc ratings and therefore cannot be installed on dc systems.

The voltage drop from contact block to hinge block of a good switch should not exceed about 12 mV with full-load current.

17. Safety switches consist of a switch mounted inside a sheet-metal or cast-iron box and operated from outside the box by a handle connected to the switch mechanism. Various types are available with contacts of either the single- or the double-break type employing either knife-blade or butt-contact construction. The operating handle may be located on the side of the switch box, in the center of the front cover, or in the front side of the box (see Fig. 4.18).

Certain safety switches are so arranged that their doors cannot be opened when the switch is closed. Others possess this feature and the additional one that absolutely no live metal parts are exposed when the switch and door are open.

Safety switches are made in two-, three-, four-, and five-pole assemblies either fused or unfused and in single- or double-throw types. The three-, four-, and five-pole switches may be of the standard, solid-neutral, or switching-neutral type. Safety switches are made in HD, ND, and LD types of construction. They can be obtained with or without a quick-break



I. Handle located in middle.
[General Electric Co.]



I. Handle located on side.
[Crouse-Hinds Co.]



III. Handle located on
front side. [Eaton Corp.,
Cutler-Hammer Products]

FIGURE 4.18 Safety switches showing different types of operating-handle arrangement.

mechanism. Many switches are constructed to give quick-make action in closing the switch as well as quick-break action in opening. Typical constructions for Class HD knife-blade safety switches are shown in Figs. 4.19 and 4.20. Butt-contact design (Fig. 4.21) generally results in a more compact construction with smaller overall dimensions. A very compact type of rotary knife-blade switch (Fig. 4.22) is made, however, in 30- to 100-A sizes.

18. To make a contact between switch blade and jaws, considerable skill is required. After a switch has been assembled, the jaws are first bent into correct position either by hand or by driving a block of wood against the distorted portion with a hammer. Then they are ground in with Vaseline and fine (FF) pumice. Often the fit of a switch is reasonably good at the start, and merely working the blade in and out of the jaws by hand will grind them in. Before the grinding process is started, the portion of the blade that wipes the jaws should be daubed with the Vaseline-and-pumice compound. The abrasive not only grinds in the fit but wears off the lacquer, which if it remained, might cause a bad contact. The surplus compound should be removed with a rag.

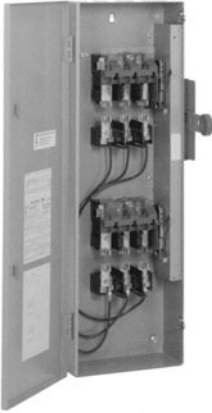


FIGURE 4.19 Fusible safety switch. [Eaton Corp., Cutler-Hammer Products]



FIGURE 4.20 Nonfusible double-throw safety switch. [Eaton Corp., Cutler-Hammer Products]



FIGURE 4.21 Side-operated heavy-duty rain-tight safety switch. [Crouse-Hinds Co.]



FIGURE 4.22 600-V visible-blade safety switch. [Square D, Schneider Electric]

19. A test for good blade contact can be made by trying to insert a “feeler,” a leaf of very thin steel, mica, or paper, between the jaws and the blade at the corners and sides. About 0.001 to 0.004 in (0.0254 to 0.1016 mm) is about the right thickness for a feeler. An excellent feeler can be made by hammering down to a knife edge the edges of a strip of very thin metal possibly 4 in (101.6 mm) long and $\frac{3}{4}$ in (19.05 mm) wide. If the feeler slips in at any point, it is evident that the fit is poor at that point and the contact bad. Proper forming of the jaw will correct the difficulty. In some cases switches have been made to carry, without excessive temperature rise, currents 50 percent greater than their normal ratings merely by carefully fitting their jaws to their blades.

20. The standard sizes of general-purpose power switches are listed in NEMA Standards.

21. High-capacity switches. There are three basic types of fused high-capacity, load-break switches in ratings from 800 to 6000 A (ac). These switches are shown in Fig. 4.23.

1. Bolted-pressure-contact switches contain a pressure mechanism which firmly bolts the blades to the contacts when the switch handle is moved to the closed position. Auxiliary springs maintain an initial pressure during opening and closing of the blades to prevent arcing and pitting of the main contacts. Class L fuses are bolted to fuse terminals.
2. Circuit-breaker-type switches are actually circuit breakers with the overload trips removed, and bolt-on Class L current-limiting fuses are used as the overcurrent protection.
3. Fused circuit breakers include all the mechanical features of conventional large-capacity circuit breakers and, in addition, have replaceable Class L fuses which function to increase the fault-current-interrupting ability. They are intended to be used in the same manner as other circuit breakers and are mounted in enclosures with hinged doors or covers over the accessible fuses. They are rated at 600 V or less.

Fused circuit breakers are classified in two categories, Classes 1 and 2.

- a. Class 1 fused circuit breakers meet all the performance requirements of large branch-circuit and service circuit breakers. The Class L fuses function only to extend the fault-current-interrupting rating beyond the short-circuit test requirement applicable.
- b. Class 2 fused circuit breakers use fuses so coordinately that they function at currents below those specified in short-circuit test requirements. Except for this feature of short-circuit operation, Class 2 fused circuit breakers meet all requirements applicable to large branch-circuit and service circuit breakers and, in addition, are required to clear circuits up to and including 25 times their ampere rating, and circuits of 1000 A or less regardless of ampere rating, without causing the operation of any fuses which are part of the device. Class 2 devices are limited to constructions which are designed to accommodate and coordinate with Class L fuses.

All the high-capacity switches described in Sec. 21 use Class L current-limiting fuses with interrupting-current (IC) ratings of 100,000 or 200,000 A rms, and they are designed for ac circuits. Typical switch ratings are 240, 480, 500, and 600 V. Since the NEC prohibits the use of fuses in parallel (unless factory-assembled and approved for the purpose), one of


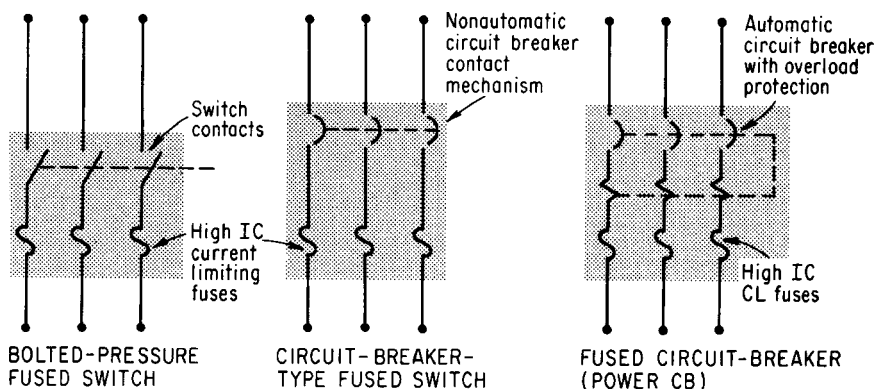


FIGURE 4.23 High-capacity switches (800 to 6000 A).

these switch types will be required if fuse ratings larger than 600 A are needed for a given service or circuit.

All these high-capacity switches incorporate a manual means of disconnection. In addition, shunt-trip coils can be provided to permit electrical operation of switches. With an electrically operated switch ground-fault interrupters can be added to open the main circuit in the event of line-to-ground faults. Such devices are described in Sec. 73 and shown in Fig. 4.101.

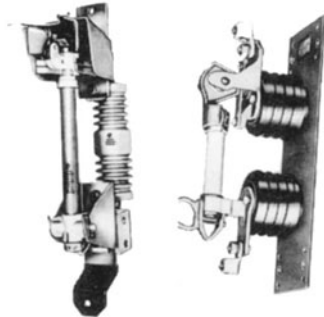22. Isolating switches are intended simply to isolate circuits from their source of power. They are not intended to be used to interrupt the current of the circuit and are to be operated only when the circuit has been opened by some other means. The principal application of these switches is to isolate equipment or parts of an electric circuit for inspection or repair. They are commonly used on circuits rated at more than 600 V. The switches are made in a great variety of open knife-blade types to meet different requirements of both indoor and outdoor service. Since they are generally located out of arm's reach, they are provided with an eye on the free end of the blade for operation with a hook rod. Typical switches of this type are shown in Fig. 4.24. Enclosed safety industrial disconnecting switches are shown in Figs. 4.25 and 4.26.



I. Fused type.
[Westinghouse Electric
Corp.]

II. Fused type. [General
Electric Co.]

FIGURE 4.24 Open-type knife-blade disconnecting switches.

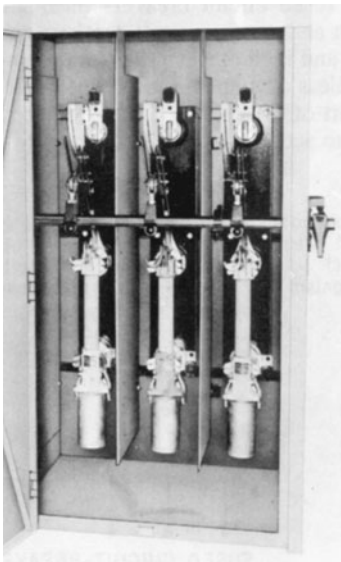


FIGURE 4.25 Safety enclosed fusible disconnecting switch. [General Electric Co.]

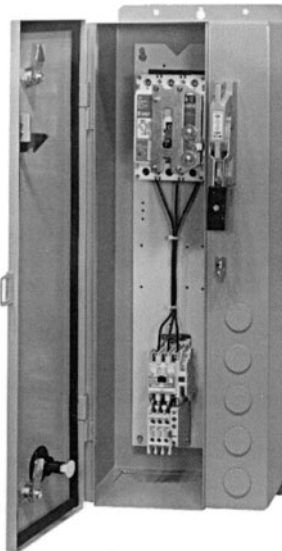


FIGURE 4.26 Manual-magnetic safety disconnecting switch with motor-circuit switch and control transformer. [Eaton Corp., Cutler-Hammer Products]

23. Motor-circuit switches are used to interrupt current in motor circuits. They are rated in horsepower and must be capable of interrupting at their rated voltage the maximum operating overload current of a motor of the same horsepower as the switch rating. The maximum operating overload current is taken as 6 times the rated full-load motor current for ac motors and 4 times the rated full-load motor current for dc motors. Motor-circuit switches are of the same construction as the general-purpose safety switches discussed in Sec. 17. See Table 46, Div. 12, for horsepower ratings of fused switches. The switches are rated in amperes for general use and are given a horsepower rating for motor-circuit application.

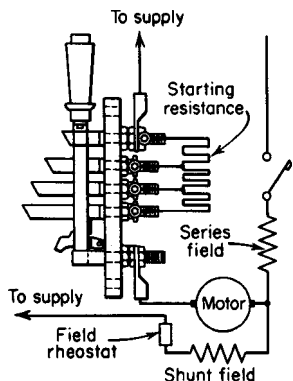


FIGURE 4.27 Multiple-contact open knife-blade switch for motor starting.
[*Electric System Handbook*]

24. Motor-starting switches are employed to start motors which may be started directly across the line. Standard motor-circuit switches may be used for this purpose, but it is generally better practice to employ a switch designed specifically for starting duty. These switches are made in manual and magnetic types. They generally are provided with some form of motor-overload protective device. For a discussion of motor-starting switches, refer to across-the-line starting equipment in Div. 7. When the control of a dc motor is mounted on a switchboard, a multiple-contact open knife switch (Fig. 4.27) is frequently employed to cut out the starting resistance. These switches may be provided with a ratchet device on the hand lever so that they cannot be moved too rapidly from step to step.

25. Field switches are used to interrupt the field current of generators and synchronous motors. These switches (Fig. 4.28) are provided with an auxiliary contact, an extra blade attached to one of the main blades, and auxiliary quick-break blades attached to each main blade. In operating the switch to disconnect the field from its source, the auxiliary quick-break blades do not break contact with their jaws until after the short auxiliary blade has made contact with the extra jaws. Thus the field circuit is shorted through the discharge resistance before the circuit is disconnected from its source. Since the field circuit is highly inductive, if the circuit were suddenly broken, a high induced voltage which might puncture the insulation of the field coils would be produced. The field switch of Fig. 4.28 is for mounting on the front of the switchboard or panel. A preferable arrangement is to employ a switch mounted on the rear of the board, as shown in Fig. 4.29. There are electrically operated field switches which allow the field switch to be mounted near its machine while its operation is controlled from the switchboard.

26. Service or entrance switches. The service equipment of a building consists of the necessary circuit breaker or switch and fuses and their accessories, which are located near the point of entrance of the supply conductors. It constitutes the main control and means of cutoff for the supply to that building from the facilities of the serving utility. In large industrial plants comprising several buildings, the service equipment for each building will generally consist simply of a fused safety switch or an industrial circuit breaker. It is important to remember that by NEC definition, only a utility interface is controlled by service equipment. For campus-style distribution in industrial and institutional settings, this

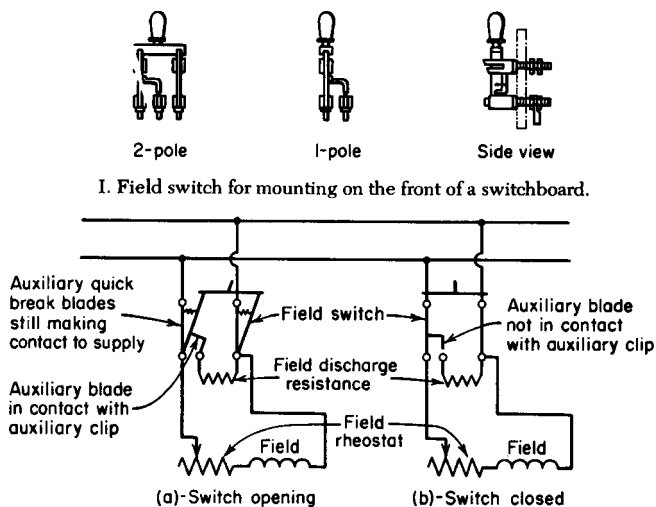


FIGURE 4.28 Field switch.

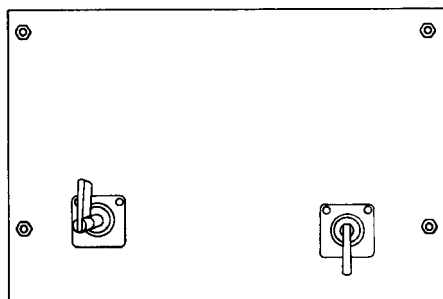
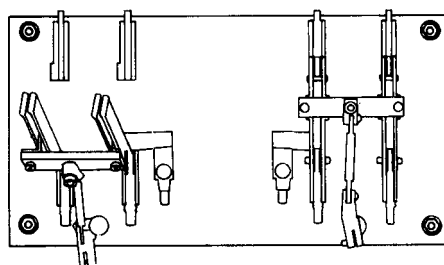


FIGURE 4.29 Field switch for mounting on the rear of a switchboard with front-operating handle.

frequently means a single service point, often at an elevated voltage, with each building equipped with its own building disconnect. Such disconnects must not be labeled as service disconnects. For single buildings supplied directly from a utility company's lines, the service equipment must include a switch, fuses, and a meter or a circuit breaker and a meter. The meter is furnished by the utility, but the rest of the equipment must generally be supplied by the consumer. Service or entrance switches are specifically designed to meet these entrance conditions so that the meter and fused switch can be mounted in a convenient, neat, and compact manner. One end of many switch boxes is provided with knockouts or hubs for conduit connection (Fig. 4.32). This allows the box to be connected by conduit to a separate meter trough either for a single meter or for several meters, as shown in Fig. 4.30. Combination units consisting of the switching member and a meter socket (Fig. 4.33) are available in different types of design.

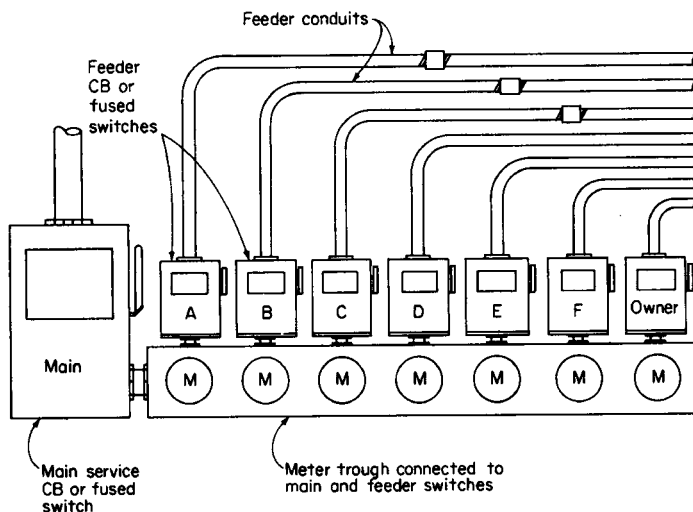


FIGURE 4.30 Installation of service switches connected with conduit to a separate meter trough.

27. Service or entrance switches are made in a great variety of types to meet the desired sequence between meter, switch, and fuses (refer to Div. 9) and the other requirements of individual utility companies. It has been impossible to introduce any standardization into the types of service switch owing to the divergence of opinion among utility representatives. Some of these switches simply include the entrance switching device (Figs. 4.30, 4.31, and 4.32) and overload protection for the service. Others have in addition a switching device and overload protection for an electric-range circuit. Still others, which combine the service-entrance equipment with overload protection for branch circuits, frequently are called load and service centers (Figs. 4.34 and 4.35). There are available types which include test links mounted on the main switch base so that the utility company can test the meters without disconnecting the load and interrupting the customer's service. In some types the main fuses are accessible to the customer, while in others they may be sealed by the utility company so that they are not accessible to the customer.

Today many meter enclosures frequently include a bypass mechanism so the meter can be removed without a service interruption. It is very important to recognize that such bypass switches must never be used to either make or break a load, but only to maintain



FIGURE 4.31 Fuse-puller type of service switch. [Crouse-Hinds Co.]

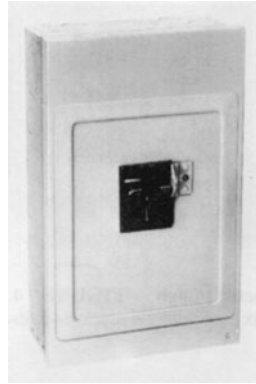


FIGURE 4.32 Circuit-breaker type of service switch. [Crouse-Hinds Co.]

continuity. Set the bypass, remove the meter, replace the meter, and open the bypass in that order. In addition, many utilities are requiring meter disconnect switches ahead of their meters so their personnel can safely remove voltage from the metering enclosure. Although load-break rated, these switches differ from service disconnects because they are not intended as the normal means of disconnecting power. They are only intended for use by utility personnel.

Service switches may be divided broadly into three types, depending upon the type of main switching device: fuse-puller switches (Fig. 4.31), circuit breakers (Figs. 4.32, 4.33, 4.34, and 4.35), and the standard type of safety switch (Fig. 4.30). When the main switching device is a circuit breaker, the equipment generally is of the load-center type, each branch being provided with a circuit breaker. This type has the advantage that it

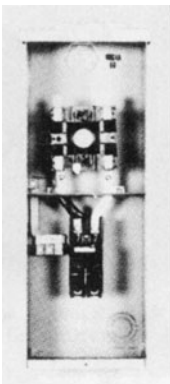


FIGURE 4.33 Raintight combination meter socket circuit-breaker type of service switch. [Crouse-Hinds Co.]



FIGURE 4.34 Homeline load center. [Square D, Schneider Electric]

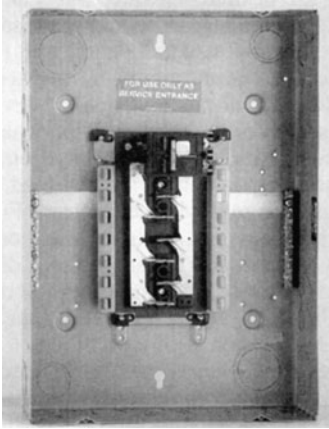


FIGURE 4.35 Combination circuit-breaker-type service switch and load center with a split neutral bus. [Crouse-Hinds Co.]



FIGURE 4.36 Raintight socket meter trough for a single meter. [Square D, Schneider Electric]

furnishes a means of switching as well as overload protection for each branch. The other types of load center provide only overload protection for the branches with no means of switching.



FIGURE 4.37 Multiple meter-socket meter stack. [Square D, Schneider Electric]

28. Service-entrance equipment utilizes the detachable socket type of meter. The meter is provided with prongs that fit into clips or jaws provided in a meter-mounting trough. Some of these troughs are wired on the job, and others are factory-wired by the manufacturer. They are made in indoor and outdoor weatherproof types. Examples of troughs and installations of this type are shown in Figs. 4.33, 4.36, and 4.37.

29. Service switches are available in raintight enclosures so that the service-entrance equipment can be located on the outside of the building. Typical equipment is shown in Fig. 4.33.

30. Wiring switches, as designated in this book, include all the relatively small switches that are employed in interior-wiring installations for the control of branch circuits and individual lamps or appliances. Except for mercury switches, the switching mechanism consists of a snap action operated by one of the methods given in Sec. 10. Wiring switches are made in many types to meet the requirements for different conditions of mounting.

The *ac* snap switches are the type of switches installed in virtually all of today's new construction and renovations. These switches are quiet in operation and have a long life because of their silver-alloy butt contacts. Unlike *ac*, *dc* switches, the *ac* snap switch can be used up to its full ampere rating for incandescent-lamp and fluorescent-lamp loads and any

other resistive or inductive loads except motors. Motor loads are limited to 80 percent of the ac switch rating.

Although the ac snap switch is limited to ac circuits, it is obvious that such switches can be used on most installations because ac supplies represent more than 98 percent of the systems in the United States. Ratings of ac snap switches are 15, 20, or 30 A at 120 or 120/277 V. These switches are widely used for local control of 277-V fluorescent luminaires, which are supplied by 480Y/277-V branch circuits. A version of these switches with a unique mounting hole dimension of 3.475 in. is rated for 600 Y/347-V branch circuits. The yoke mounting dimensions ensure that they will not be used on conventional plaster rings or in conventional boxes because the spacings would be inappropriate for the elevated voltage.

Ac snap switches are available in a wide variety of shapes and styles to blend with modern decor. The switches are available in single-pole, double-pole, three-way, four-way, and momentary-contact types. In addition, lighted (to indicate an off position) or pilot-light (to indicate an on position) operating handles are available in these switches. Terminals are either screw-type or pressure-locking push-in types. Only the screw terminals are suitable for the connection of aluminum conductors. See Sec. 3 of Div. 9 for definitions of various types of snap switches.

The *flush* ac, dc switch (Figs. 4.38 and 4.39) consists of a switch mechanism mounted in a composition molded case, the complete unit being designed to be mounted inside a switch box, outlet box, or conduit fitting so that the operating handle or button is the only portion of the switch which extends beyond the cover of the box or conduit fitting. The contacts may be of the knife-blade or the mercury type (Sec. 7). Those with knife blades are available with toggle (tumbler), pushbutton, or locking types of operating mechanisms. Mercury switches are almost completely silent in operation, making practically no noise on the make or break. They are used in installations where the click of a switch might prove disturbing, as in hospitals and nurseries, and they are rated as ac snap switches as well as ac, dc types. As previously noted, however, these switches are seldom available due to environmental concerns. Locking switches do not have a protruding operating handle but are operated by a key inserted in a slot in the face of the switch mounting.

Flush-mounted switches may be classified into subtypes depending upon the physical size and mounting of the switch. The *standard line* of switches (Figs. 4.38 and 4.39) is made with more generous proportions and is the more rugged of the two types. It should be used for heavy-duty installations and in locations where frequent operating is required. The overall dimensions range from 1 to 2 in (25.4 to 50.8 mm) in depth, $1\frac{1}{16}$ to 2 in (36.5 to 50.8 mm) in width, and $2\frac{3}{8}$ to $3\frac{3}{16}$ in (60.3 to 80.9 mm) in length. Most of these switches are supplied with two sets of supporting screw holes, spaced from center to center $3\frac{9}{32}$ and $2\frac{3}{8}$ in (83.3 and 60.3 mm), respectively. They are made in sizes up to 30 A capacity.

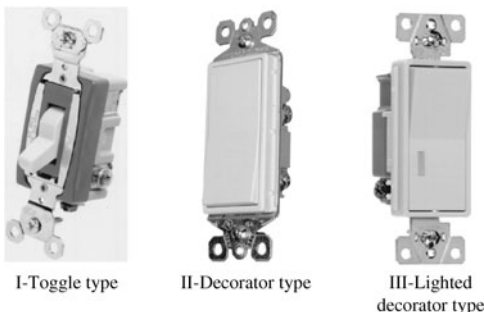


FIGURE 4.38 Standard line of flush snap switches. [Pass & Seymour, Inc.]



FIGURE 4.39 Locking type ac switch. [Pass & Seymour, Inc.]

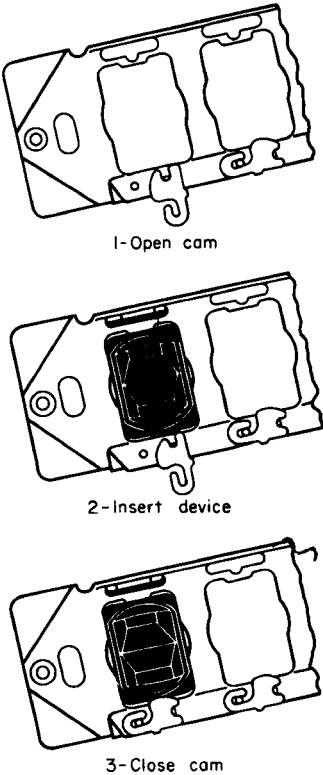


FIGURE 4.40 Method of assembling units and strap.

Switches of standard-line dimensions are made in regular tumbler, pushbutton, locking, and mercury types.

The modern *dimmer snap switch* is an electronic device which provides full-range dimming of incandescent lamps from off to full brightness. These devices are rated from 600 to 1000 W and are wired in the same manner as the standard single-pole switches. Similar devices are available for use with special rapid-start ballasts for the dimming of fluorescent lamps.

The *interchangeable line* of switches (Figs. 4.40 and 4.41) is constructed in a much more compact manner with less generous proportions. As many as three of these switches can be installed in the space required for a single standard-line switch. The largest size of switch made in this line is 20 A. Three switches or a combination of three units of switches, receptacles, and pilot lights can be assembled on a single supporting strap yoke and mounted in a single-gang outlet box or switch box (see Figs. 4.40 and 4.41).

Surface switches (Figs. 4.42 and 4.43) are designed for mounting on the surface of a wall, ceiling, or box so that all or practically all of the switch body extends beyond the surface upon which it is mounted. The contacts are of the knife-blade type operated by tumbler or rotary action. A line of outlet fittings for surface mounting is available for use with exposed nonmetallic-sheathed-cable wiring (refer to Sec. 203, Div. 9).

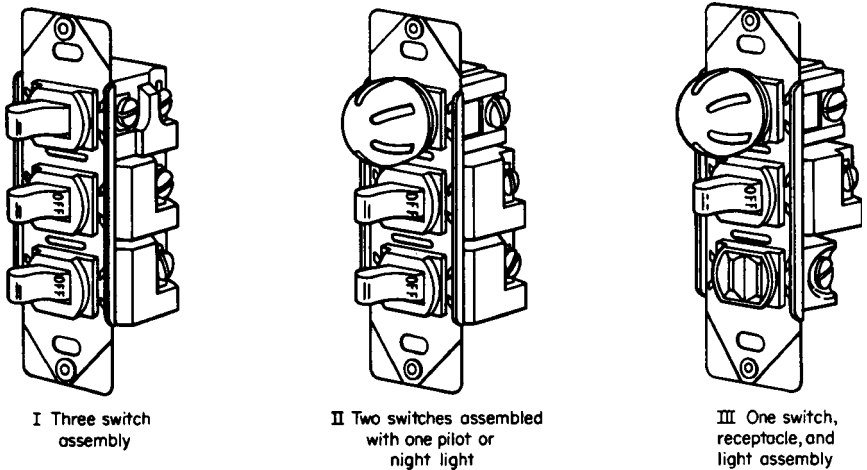
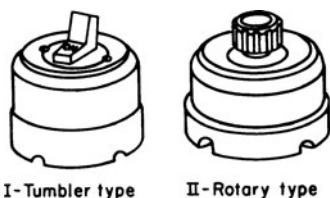
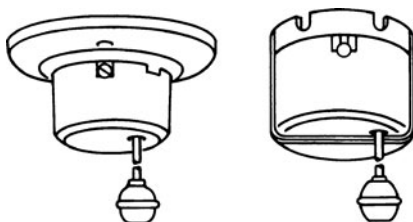
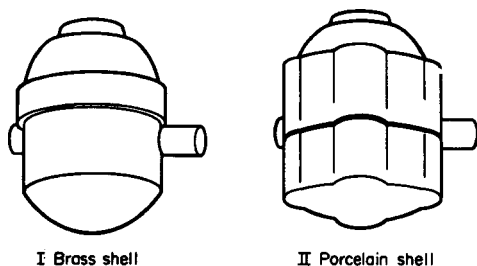
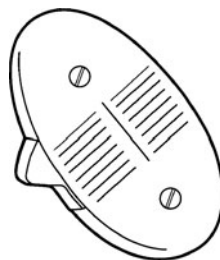


FIGURE 4.41 Typical assemblies of interchangeable wiring devices.

**FIGURE 4.42** Surface-wiring switches.**FIGURE 4.43** Ceiling types of pull rotary switches.

Pendant switches (Fig. 4.44) are used for the control of lamps or other devices which are mounted overhead out of reach from persons standing on the floor. These switches are supported at the end of a pendant two-conductor cord.

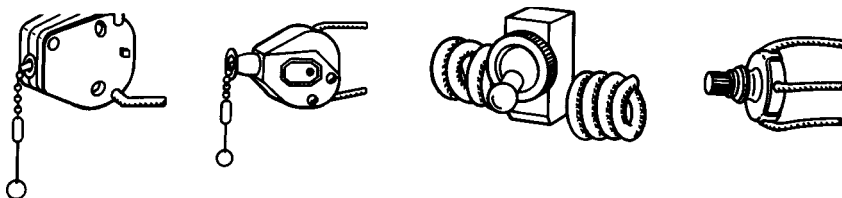
Through-cord switches (Fig. 4.45) are designed to be inserted in a portable cord for control of the cord circuit.

**FIGURE 4.44** Pendant switches.**FIGURE 4.45** Through-cord switch. [Pass & Seymour, Inc.]

Door switches (Fig. 4.46) are designed to control circuits through the opening and closing of doors. They are mounted in boxes located in the doorjamb. Two types are available, one constructed so that the switch is closed when the door is open and the other so that the switch is closed when the door is closed.

Canopy switches (Fig. 4.47) are small, compact switches for mounting in the canopies of lighting fixtures for the control of the lamps directly at the fixture. They can be obtained in pull-chain or toggle-switch types.

Appliance switches are made in a variety of types for mounting in the appliance enclosure.

**FIGURE 4.46** Door switch. [Pass & Seymour, Inc.]**FIGURE 4.47** Types of canopy switches.

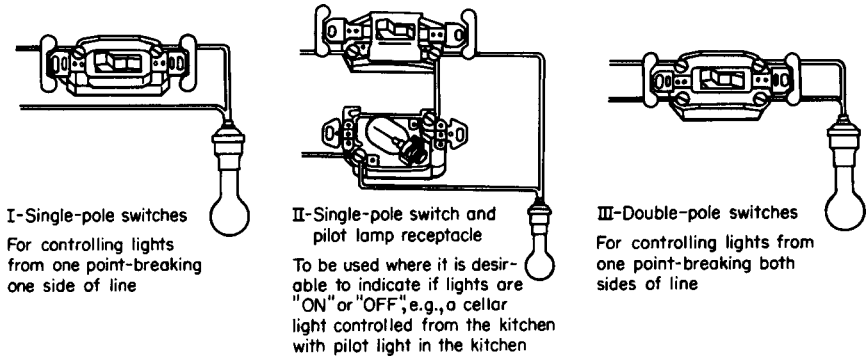


FIGURE 4.48 Connections and functions of single- and double-pole switches.

Rotary surface switches mounted in special enclosures to meet the conditions of special exposures, such as weather, water, or explosive atmospheres, can be obtained.

31. Wiring switches are available in different types to perform different functions in the wiring system. The regular switches designated simply as *single-pole* or *double-pole* are for the general-purpose use of opening and closing circuits for the control of lamps or other devices from a single point. The single-pole switches (Fig. 4.48, I and II) break the circuit of only one side of the line, while the double-pole switch (Fig. 4.48, III) breaks the circuit of both sides.

Three-way switches are used if it is desired to control lights from two different points, such as a hall light to be controlled from the lower hall and the upper hall. The lights can be turned on or off from either position. Three-way switches when properly connected (see Sec. 32) break the circuit of only one side of the line; they do not isolate the circuit from the supply. The method of controlling a lamp from two positions with two three-way switches is shown in Fig. 4.49.

Four-way switches in conjunction with two three-way switches are used if it is desired to control lights from three or more different points. Two three-way switches are required with as many four-way switches connected between them as there are points of control in excess of two. Thus to control lights from four different points requires two three-way switches with two four-way switches connected between them. The method of control from

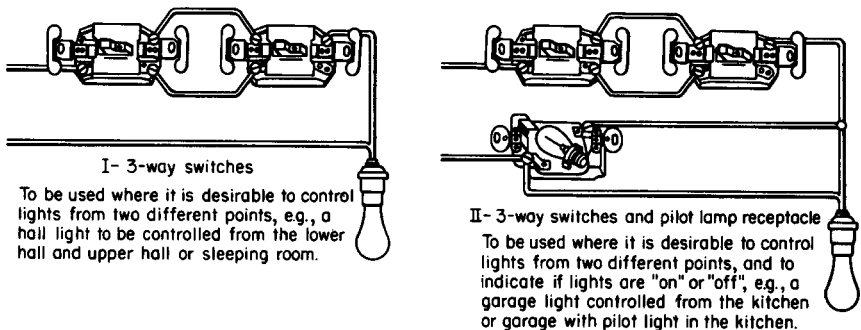


FIGURE 4.49 Connections and functions of three-way switches.

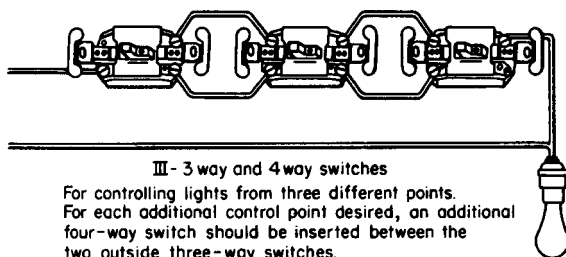


FIGURE 4.50 Connections and functions of three-way and four-way switches.

three different locations is shown in Fig. 4.50. Four-way switches when properly connected break the circuit of only one side of the line.

Momentary-contact switches are used if it is desired to close or open a circuit for only a short length of time. The switch is provided with a spring so that it will return to its original position as soon as the handle or button is released. These switches are available in standard-line tumbler and pushbutton types of flush switches and in pushbutton surface types.

Pilot handle switches are often used instead of providing a separate pilot light; the lit handle serving as the pilot light without the bother of mounting an additional piece of equipment. These switches have an additional terminal to make a connection to the grounded circuit conductor. *Lighted handle* switches have a handle that is lit when the switch is off, so the switch can be found in the dark.

32. Caution should be exercised in connecting three-way and four-way switches, since it is possible to connect these switches with both sides of the circuit connected to each switch. This is an improper connection which should never be used. The switch is not designed for this purpose and in case of failure of the switch mechanism a short circuit may result. The acceptable methods of connection are shown in Fig. 4.57. Refer to Sec. 40 for additional information on connection of these switches.

33. The rating of snap switches for general wiring installation must be in accordance with the requirements of the National Electrical Code. For this purpose the Code classifies loads into three types: (1) noninductive loads other than tungsten-filament lamps, (2) tungsten-filament lamps, and (3) inductive loads.

Snap switches shall be used within their ratings. AC general-use snap switches are suitable only for use on alternating-current circuits to control resistive and inductive loads, including electric discharge lamps, not exceeding the ampere rating of the switch at the voltage involved; tungsten-filament lamp loads not exceeding the ampere rating of the switch at 120 V; and motor loads not exceeding 80 percent of the ampere rating of the switch at its rated voltage.

AC-DC general-use snap switches are suitable for use on either ac or dc circuits to control resistive loads not exceeding the ampere rating of the switch at the voltage applied and inductive loads not exceeding 50 percent of the ampere rating of the switch at the applied voltage. Switches rated in horsepower are suitable to control motor loads within their rating at the voltage applied.

The common types of inductive loads encountered in general wiring installations are fluorescent lamps and mercury-vapor or other HID lamps. Switches used on signs and outline lighting must conform to the Code requirements given in Article 600 of the Code.

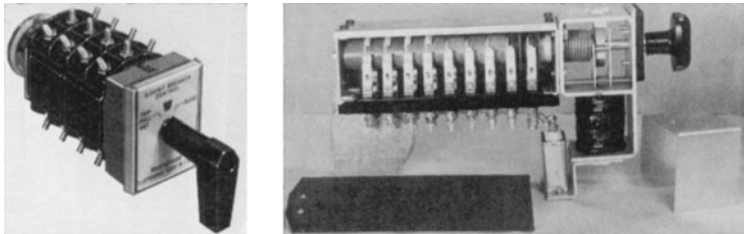


FIGURE 4.51 Rotary type of control switch. [Westinghouse Electric Corp.]

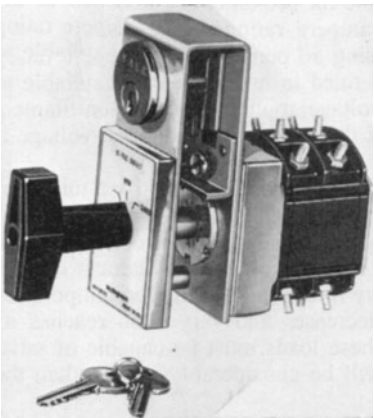


FIGURE 4.52 Bypass contact control switch. [Westinghouse Electric Corp.]

One plug is used for each set of common receptacles so that it is impossible to make cross connections. Examples of plug-and-receptacle equipment are shown in Figs. 4.54 and 4.55.

34. Control switches are used for controlling from a switchboard the operation of electrically operated equipment such as switches, circuit breakers, rheostats, and prime-mover governors. They are generally of the drum or rotary type. Two representative control switches are shown in Figs. 4.51 and 4.52. Pilot lamps are generally used in connection with control switches to indicate to the operator the position of the controlled equipment.

35. Instrument switches are employed to change the connections of meters from one circuit to another. The most common type is of rotary construction, as shown in Fig. 4.53. The plug-and-receptacle type of switch is also employed to connect a common voltmeter, ammeter, or synchroscope to various circuits.

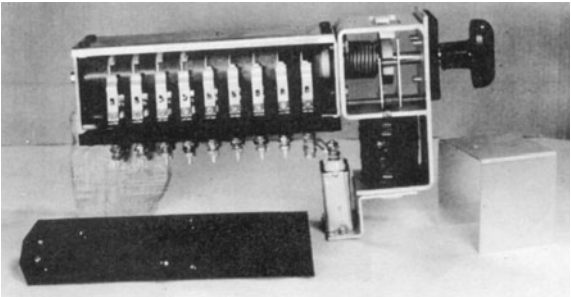


FIGURE 4.53 Rotary type of instrument switch with cover removed. [Westinghouse Electric Corp.]

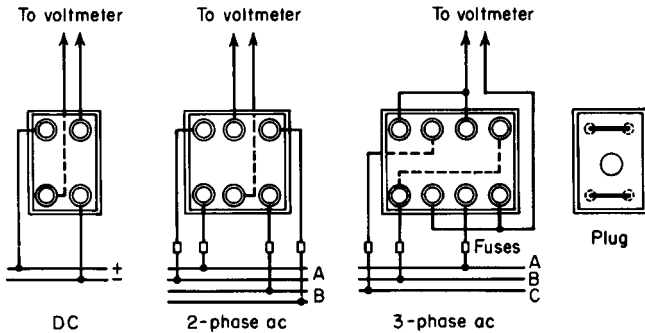


FIGURE 4.54 Voltmeter receptacles and plug. [*Electric System Handbook*]

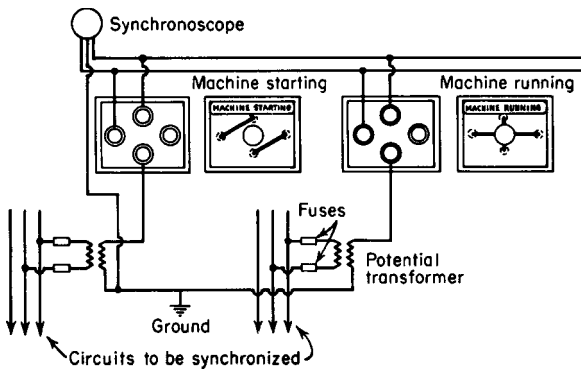


FIGURE 4.55 Synchronizing plugs and receptacles. [*Electric System Handbook*]

36. Low-voltage relay control systems are widely used in installations which require multiple-switch control of outlets. To a large degree such systems replace conventional three-way and four-way switch control, particularly when a large number of multiple-switch locations are required in a given installation. Figure 4.56 shows three basic types of low-voltage relay switching systems. The system shown in Figure 4.56, 1, operates on a 24-V system, and the switching relay, located at the controlled outlet, contains an on-off latching-type double coil wired to one or more single-pole, double-throw, momentary-contact switches. Pressing to the on position of any switch operates the on coil and closes the single-pole contact which completes the circuit to the connected load. After the on button is released, the current does not flow through the coil, but the single-pole line contacts remain in the closed position because they are mechanically latched. Pressing to the off position of any of the paralleled switches energizes the off coil in the relay, and the single-pole line contacts are opened, disconnecting the load; the contacts remain mechanically latched in the open position until the on switch position is operated again.

In Fig. 4.56, 2, a two-wire latching relay is operated at 12 or 24 V by one or more single-pole, single-throw, momentary-contact switches (placed in parallel). Thus, every time that a momentary-contact switch is actuated, the relay either closes or opens the circuit and latches in either position like a pull-chain type of fixture.

The system shown in Fig. 4.56, 3, uses a compact transformer relay in a single unit and is located at each controlled outlet. This unit operates on a thermal principle and trips the

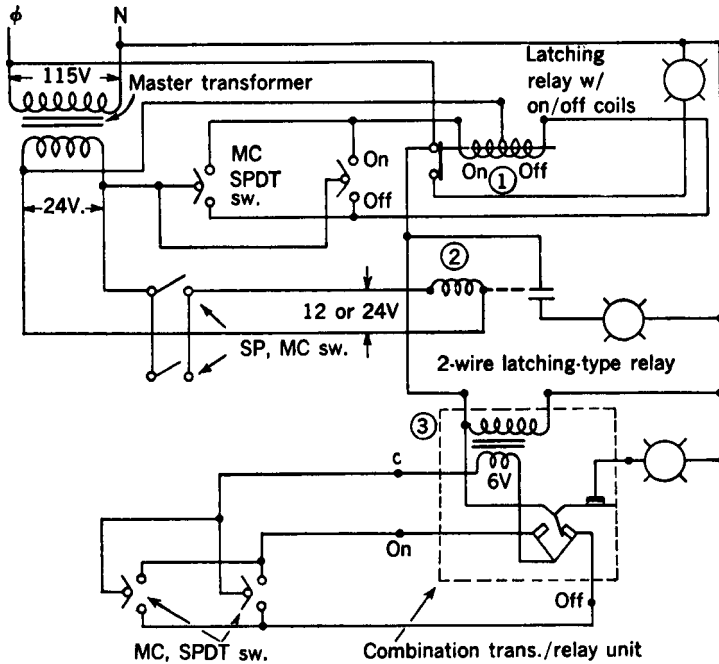


FIGURE 4.56 Three types of low-voltage relay switching systems.

single-pole 115-V contacts into the on or off position according to the operation of the single-pole, double-throw, momentary-contact switches. Although this transformer-relay system is no longer manufactured, it is described so that the reader will understand the principle of operation because numerous systems of this type are still in existence.

The system in Fig. 4.56, 1, is the most popular low-voltage relay system and is available from several manufacturers. This system lends itself to a *master* and *submaster* control so that many circuits can be operated at once through a motorized master unit. Special relays and switches are available to provide pilot-light indication at switches to show when the controlled load is in the on position. In most cases the relay is located at the outlet to which the controlled load is connected.

The system in Fig. 4.56, 2, is available from only one manufacturer. Generally, the relays are in a large, centrally located junction box or panel, and the 115-V circuits extend from this central point to each controlled outlet. This system can also be converted to a master system, and pilot-light indicators are available.

Full details, diagrams, and suggested layouts are available from manufacturers of these systems in the form of wiring handbooks. Switch ratings are 10 to 15 A at 120 or 277 V.

37. Magnetic switches in ratings up to several hundred amperes are available in either magnetically held or mechanically held types. Voltage ratings are 600 V or less.

A magnetically operated switch is an on-off switch in which the opening and closing operations are effected by energizing an electromagnetic mechanism. Such switches or contactors are used to provide automatic and/or remote switching of feeders, branch circuits, and individual loads.

The basic switch is operated by energizing its coil to close the contacts, and it is held in the closed position by maintaining current through the coil.

A variation of the magnetically held contactor is the mechanically held contactor, in which the operating coil is momentarily energized to close the contacts and momentarily energized to open the contacts. Because of the definite switch action with mechanically maintained open and closed positions, such as magnetic contactor is commonly distinguished from the magnetically held type by calling it a *remote switch*, a mechanical switch which can be operated by means of a control circuit to a remote switch.

A remote switch permits the operation of the contact assembly from one or more distant control stations. In such applications the switch is placed in the circuit which it is to control. This may be in the middle of a split-bus panelboard, where the switch controls one section of bus. It may be adjacent to a panel, where the switch controls a branch circuit or feeder from the panel. Or it may be placed on a column, where it switches lighting circuits for a given area. Then, in each case, control conductors are run in cable or conduit from the switch enclosure to one or more control points at which pilot devices provide for operation of the remote switch.

The pilot devices may be pushbuttons, toggle switches, or an automatic device, such as a time switch.

A basic contactor application for a full panel control might involve locating the contactor at widely spaced lighting panelboards supplying outdoor lighting, with all the control circuits being brought to pilot switches at a common point of control. For the control of individual circuits supplying lighting loads, contactors may be located near the panelboard or near the load.

38. Miscellaneous types of switches are available for special applications. Knife-blade switches of reduced dimensions are available for low-voltage circuits such as telephone, signaling, and battery circuits.

INSTALLATION OF SWITCHES

39. A switch or a circuit breaker must not be installed so that it will disconnect a grounded conductor of a circuit unless the switching mechanism simultaneously disconnects all wires of the circuit, or is so arranged that the grounded conductor cannot be disconnected until the ungrounded conductor or conductors have first been disconnected.

40. Three-way and four-way switches are in reality single-pole switches and therefore must be installed so that all switching is done only in the ungrounded conductor. When the wiring for these switches is enclosed in a metal enclosure, the wiring must be so installed that at every point the same enclosure includes wires of both polarities. Standard and special methods of wiring such switches are illustrated in Figs. 4.57 and 4.58. Refer to Secs. 31 and 32 for additional information on three- and four-way switches.

41. Position of mounting. Single-throw knife switches shall be mounted so that gravity will tend to open and not to close them, or when approved for the use in the inverted position, they shall be provided with a locking device that will ensure that the blades remain

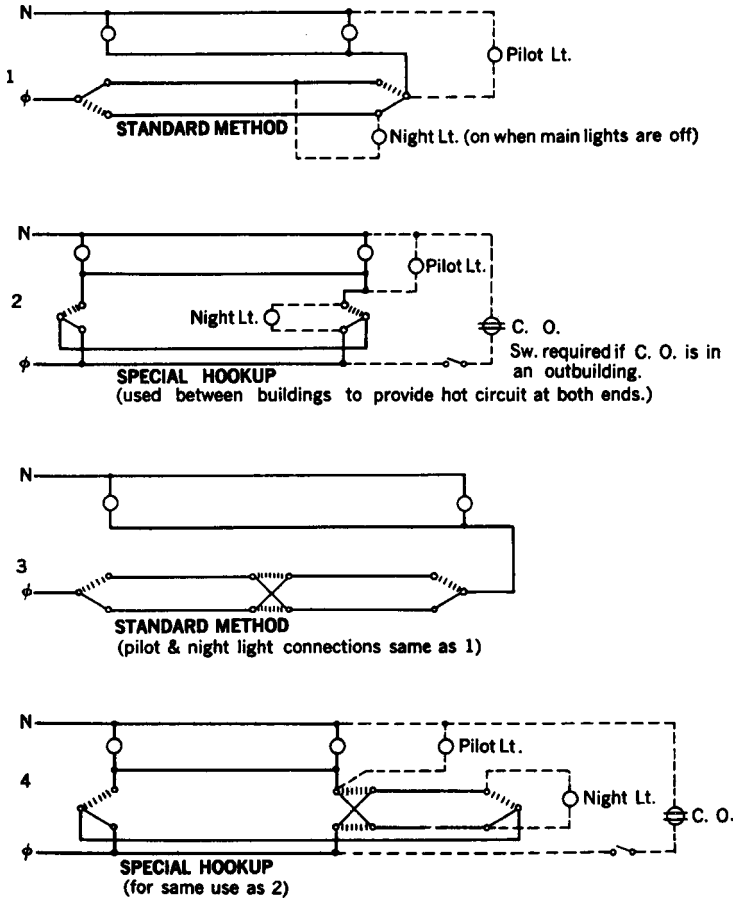


FIGURE 4.57 Standard and special hookups with three- and four-way switches and connections of night (neon) lights and pilot lights.

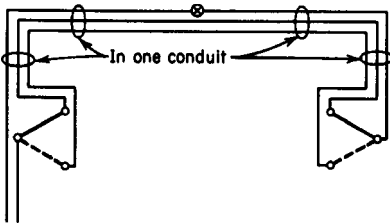


FIGURE 4.58 How wires of opposite polarity must be enclosed in the same conduit in the wiring of three-way switches.

in the open position when so set (Figs. 4.59 and 4.60). Double-throw switches can be mounted so that the throw is either vertical or horizontal. If mounted with the throw vertical, a switch must be provided with a locking device which will hold the blades in the open position when so set.

42. In connecting knife switches in a circuit, the switch should be wired so that the blades will be dead when the switch is open (Figs. 4.61 and 4.62).

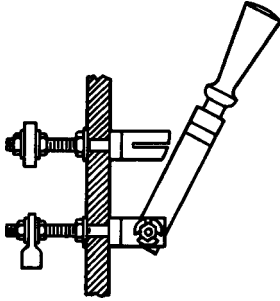


FIGURE 4.59 Single-throw switch mounted vertically so that gravity will not tend to close it.

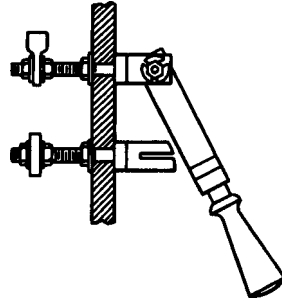


FIGURE 4.60 Wrong method of mounting a single-throw switch. In this position gravity tends to close the switch.

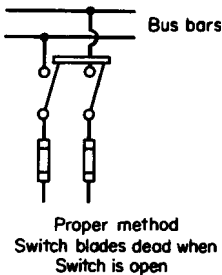


FIGURE 4.61 Approved method of connecting a knife switch.

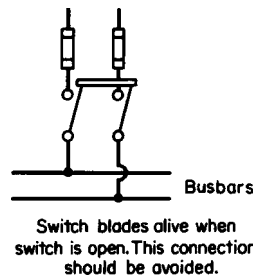


FIGURE 4.62 Unapproved method of connecting a knife switch.

A fused switch should always be wired so that the fuses will be dead when the switch is open.

PROTECTIVE DEVICES

43. Various forms of protective devices are employed to protect electrical circuits and equipment from injury under abnormal conditions. These devices may be classified as follows according to the type of protection which they provide:

1. Overload protection
2. Underload protection
3. Undervoltage protection
4. Overvoltage protection
5. Reverse-current or power protection
6. Reverse phase rotation
7. Lightning and surge protection
8. Ground-fault protection

44. Relays and releases. Protection for the various types of abnormal conditions is in many cases provided by relays or release devices which actuate the opening of circuit breakers or switches. If protection is afforded by a simple release device, the abnormal condition causes the functioning of the release device, which acts directly upon a holding catch of the switch or breaker mechanism. With relay protection the abnormal condition causes the functioning of the relay, which opens or closes an auxiliary electric circuit, which in turn trips the switch or breaker mechanism.

Release devices may be of thermal or magnetic types. Thermal releases can be employed only for overload protection. Their operation depends upon the deflection of a bimetallic element as it is heated by the current of the circuit. Magnetic releases consist of a solenoid acting upon an iron plunger or armature. For current protection the coil of the solenoid is connected in series with the circuit, while for voltage protection the coil is connected across the circuit which is to be protected.

Relays may be of thermal, magnetic, or induction types. The principles of operation of the thermal and magnetic types are the same as those for releases of the same type. Induction relays operate upon the same general principle as induction motors and therefore are applicable only to ac systems.

45. Time characteristics. Relays and release devices may be classified according to the time that will elapse between the occurrence of the abnormal condition and the opening of the circuit. There are three general types: the instantaneous or high-speed, the definite-time, and the inverse-time. In the instantaneous type, time delay is purposely omitted from its action so that the circuit is opened almost instantaneously upon the occurrence of the abnormal condition for which the release or relay is set. A definite-time relay or release is purposely so designed that there is a definite-time delay in its action. The abnormal condition must exist for a definite time before the device will function to open the circuit. The length of time of the disturbance required to cause the device to function is independent of the magnitude of the disturbance. An inverse-time relay or release is purposely so designed that there is a time delay in its action. The length of time of the disturbance required to cause the device to function is dependent upon the magnitude of the disturbance. The greater the magnitude of the disturbance, the quicker will the device function to open the circuit. All thermal relays and releases, owing to the principle of their construction, provide inverse-time protection.

46. Overcurrent protective devices are used to protect wires, wire fittings and devices, and apparatus against excessive currents. The several types of overcurrent protective devices may be divided into the following groups:

<i>Means of Protection</i>	<i>For Protection of</i>
I. Fuses	
A. Low-voltage fuses	
1. Ordinary Edison-base plug fuses	Replacement in existing installations in which there is no evidence of tampering or overfusing for branch incandescent-lighting and heating-appliance circuits
2. Dual-element plug fuses	Any type of branch circuit and small motors; standard screw-base (Edison) fuses have same limitations as above.
a. Standard screw-base type	
b. Type S	

3. Ordinary one-time cartridge fuses	Mains or feeders in which faults occur very infrequently
4. Renewable cartridge fuses, time-delay or standard	Mains or feeders in which faults occur frequently; limited to existing installations in which there is no evidence of tampering or overfusing.
5. Dual-element cartridge fuses	Most mains or feeders, motor or appliance branch circuits, and over-load on motors
6. Silver-sand fuses	
<i>a.</i> High-interrupting type	Mains and feeders in which high interrupting capacity is necessary
<i>b.</i> Current-limiting type	Mains and feeders in which magnitude of fault current must be limited
<i>B.</i> High-voltage fuses	Motors
II. Thermal cutouts	
III. Circuit breakers actuated by	
<i>A.</i> Thermal overcurrent release device	Circuits
<i>B.</i> Thermal relay	Circuits
<i>C.</i> Magnetic release device	Circuits and apparatus
<i>D.</i> Magnetic relay	Circuits and apparatus
<i>E.</i> Combined thermal and magnetic release	Circuits and apparatus
<i>F.</i> Induction relays	Circuits and apparatus
IV. Manual switches actuated by thermal releases	Motors
V. Magnetic switches actuated by	
<i>A.</i> Thermal relays	Motors
<i>B.</i> Magnetic relays	Motors
VI. Ground-fault interrupters	
<i>A.</i> Ground-fault circuit interrupters (GFCI)	Persons
<i>B.</i> Ground-fault protection of equipment (GFPE)	Circuits and apparatus
VII. Arc-fault protection (AFCI)	Circuits and apparatus

With fuses and thermal cutouts, in case of overcurrent the circuit is opened inside the device itself. These two overcurrent protective devices must be capable, therefore, of interrupting the line current and of extinguishing the arc thus formed. Relays or overload release devices themselves do not interrupt the line current of the circuit which they are protecting. An overload release device, when operated by a current greater than that for which it is set, trips the holding catch of the switch mechanism and thus allows the switch mechanism to open. The current is interrupted by the switch mechanism and not by the overload release device. An overload relay, instead of acting directly upon the holding catch of the switch mechanism, opens an auxiliary circuit. This auxiliary circuit may be the operating coil of a magnetic switch or the shunt-trip coil of a circuit breaker. As with the overload release devices, the relay does not interrupt the main-line current itself. The main circuit is opened by the contacts of the switch mechanism.

47. Fuses and circuit breakers are used for the overcurrent protection of both circuits and apparatus. Thermal cutouts, thermal overload release devices, and thermal relays

are used for the protection of motors against overloads. They should not be used for the protection of circuits unless they are specifically designed and approved for that purpose. Thermal overload protective devices have admirable characteristics for the protection of motors against overloads, but they should not be relied upon for protection against short circuits unless they are specifically designed and approved for that purpose. Unless they are so designed, in the case of a short circuit there is danger of the excessive current destroying the thermal element before it has actuated the switch mechanism, with the consequent failure of opening the circuit. Circuit breakers actuated by thermal overload release devices and designs for protection against short circuits have been developed and are widely used for the protection of circuits of small and medium current-carrying capacity. When thermal overload protective devices are employed to protect motors, fuses of the proper rating or circuit breakers with the proper setting should always be located at some point back in the line ahead of the thermal protective device.

48. Short-circuit calculations. When considering the use of circuit breakers and fuses, the amount of short-circuit current available at the *line terminals* of such devices must be known so that an overcurrent device with the proper interrupting-capacity (IC) rating can be selected.

Ordinary plug fuses and Class H cartridge fuses, in general, are tested for short circuits not exceeding 10,000 A. Most common-type small-frame-size molded-case circuit breakers have IC ratings of 5000 A, although the present trend is toward ratings of 10,000 A. Larger breakers have IC ratings of 10,000, 15,000, 25,000 and up to 200,000 A, according to types and voltage ratings. The IC ratings for high-interrupting-capacity and/or current-limiting fuses are shown in Fig. 4.65.

Under normal conditions a circuit draws current according to the load impedance and the applied voltage. When a solid short circuit occurs, there will be an abnormally high flow of fault current until the overcurrent device opens. If the short-circuit current is higher than the interrupting rating of the affected overcurrent device, the device may be completely destroyed. In addition, its destruction may cause considerable damage to other equipment.

There is no easy method of calculating available short circuits at various points of a given installation because numerous factors and terms must be clearly understood before such calculations can be made accurately. To explain these factors would require a complete book.

A conservative rule-of-thumb formula which can be used to determine the short-circuit current at the load terminals of a supply transformer would be $I_{sc} = 100\%/ \%Z_t \times I_s$, where I_{sc} = maximum secondary short-circuit current based on transformer impedance and assuming a primary source of *infinite capacity*, $\%Z_t$ = transformer impedance, and I_s = full-load secondary current.

EXAMPLE Assume a 75-kVA transformer with a 5 percent impedance and a 120/240-V secondary. The full-load secondary current $I_s = 75,000/240 = 312$ A; then $I_{sc} = 100\%/5\% \times 312 = 6240$ A. Thus, the maximum short-circuit current is 20 times the full-load secondary current for this transformer. If the transformer impedance were $2\frac{1}{2}$ percent, the short-circuit would be 40 times the full-load secondary current, or 12,480 A. Thus, the transformer impedance is a major factor in determining the maximum secondary short-circuit current. Equally important is the available primary current, which is almost always less than what would be considered an “infinite” capacity. For a given transformer, the lower the available primary current, the lower the secondary short-circuit current, which identifies the previously described formula as quite conservative.

Another major point is that the maximum secondary short-circuit current determined by the previous formula is applicable directly at the secondary terminals of the transformer.

The short-circuit current will be reduced at all downstream points according to the line impedance of the secondary supply conductors. As a result, a fairly long run of conductors from a pole transformer to the service switch would appreciably reduce the maximum short-circuit current available at this point from that shown in the previous example.

It should also be emphasized that certain equipment, such as motors or capacitors, in operation at the time a fault occurs will *add* current to the fault and *increase* the short-circuit current.

49. Low-voltage enclosed fuses (600-V or less) may be classified as follows:

- A. Type of enclosure and contact construction
 1. Plug
 2. Cartridge
 - a. Ferrule contact: Class CC, G, H, J, K, R, or T (60 A or less)
 - b. Knife-blade: Class H, J, K, L, R, or T (601 to 6000 A)
- B. Renewability
 1. One-time
 2. Renewable
- C. Time overload present for fuse to blow
 1. General purpose type; very little time delay
 2. Time delay

The basic features of the different types of enclosures and contact construction are shown in Figs. 4.63 and 4.64. Plug fuses are made in sizes up to and including 30 A. Class CC, G, H, J, K, and R cartridge fuses with ferrule contacts are made in sizes up to and including 60 A. Class H, J, K, R, and T cartridge fuses with knife-blade contacts are made in sizes from 70 up to and including 600 A. Above 600 A, Class L current-limiting fuses are available in ratings up to 6000 A.

One-time fuses cannot be reused after they have operated from the occurrence of a fault. Renewable fuses are designed so that the fusible element can be replaced, after it has operated, by a new element. Thus the fuse cases can be used over and over, and the fuse expense is thereby reduced in service in which the operation of fuses is frequent and short-circuit currents are less than 10,000 A. However, these fuses are now limited by the NEC to existing installations where there is no evidence of misuse through tampering or overfusing.

There is a certain lapse of time for all fuses between the occurrence of an overload and the opening of the circuit by melting of the fusible element. For the ordinary type (the original one-time fuse) this time lapse is very short. The ordinary plug fuse, for example, opens the circuit in approximately 3 s at 200 percent load. The time lapse required for a fuse to open can be controlled through proper design. According to the standards of National Electrical Manufacturers Association (NEMA) and Underwriters Laboratories, certain fuses with an opening time greater than 12 s at 200 percent load are characterized as a time-delay (time-lag) fuse. Such fuses are marked with the letter D, time-delay or dual-element. Other classes require 8 to 10 s at 500 percent.




FIGURE 4.63 Class H and K standard fuses and holders.

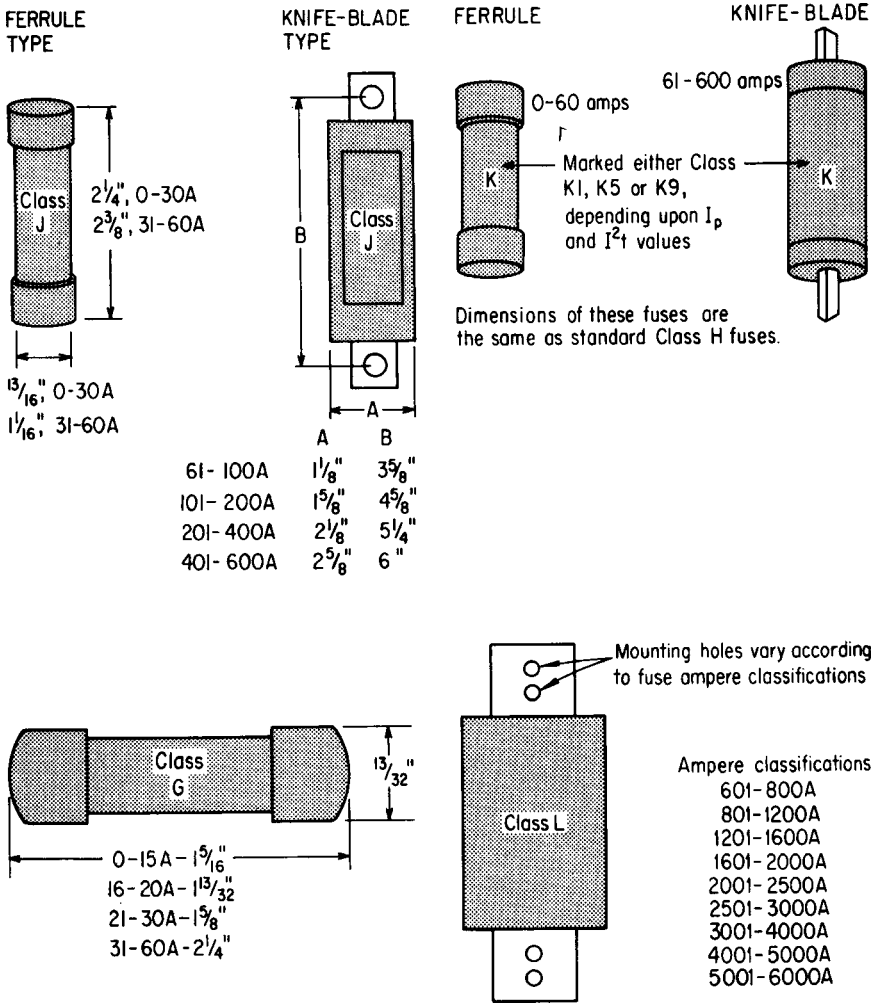


FIGURE 4.64 Ampere classifications of Class CC, G, H, K, J, L, and T high-interrupting-capacity or current-limiting cartridge fuses.

Low-voltage fuses rated 600 A or less are of standard ratings and dimensions as established by the National Electrical Code, NEMA and the Underwriters Laboratories. The standard dimensions for Class H cartridge fuses are given in Sec. 50. The dimensions for fuses rated above 600 A are covered by UL 248-10, high-interrupting-capacity fuses, current-limiting type (Type L), and UL 248-15, Class T fuses.

Fuses are made in several types as listed previously. Certain types are definitely limited in their application, some can be used for nearly any application, and others are designed for special applications for which their characteristics are required so that proper protection may be realized and system coordination maintained.

50. Underwriters Laboratories standards on fuses require that all fuses meet the following requirements:


1. The standard on fuses requires that the fuses be of certain dimensions within specified tolerances and meet the following tests:
2. They must withstand heavy short circuits. Failure to do this would result in a very great fire hazard, as such failure would mean that the fuse would explode or belch fire.
3. They must operate at a reasonably low temperature. Failure to do this would make a hazard of the fuse.
4. They must carry rated current. Failure to do this would result in premature burnout, causing unnecessary expense and annoyance. All fuses are required to carry a 100 percent indefinitely when tested in the open. When fuses are installed in enclosures, as is usually the case, they carry less current. Hence the 100 percent requirement makes sure that they carry rated current in actual practice.
5. They must operate promptly at an overload. Failure to do this would result in repair bills amounting to many times the cost of the fuse. The requirements are that fuses operate at a 35 percent overload when tested in the open so that they will blow at a 25 percent overload when installed in an enclosure, as they usually are. The interruption time permitted on 0- to 60-A fuses is 1 h and on larger fuses 2 h.

Voltage	Rated capacity, A	A	B	C	D	E	G
		Length over terminals, in	Distance between contact clips, in	Width of contact clips, in	Diameter of ferrules or thickness of terminal blades, in	Minimum length of ferrules or of terminal blades outside of tube, in	Width of terminal blades, in
0-250	0-30	2	1	$\frac{1}{2}$	$\frac{9}{16}$	$\frac{1}{2}$	
	31-60	3	$1\frac{3}{4}$	$\frac{5}{8}$	$\frac{3}{16}$	$\frac{5}{8}$	
	61-100	$5\frac{7}{8}$	4	$\frac{7}{8}$	$\frac{1}{8}$	1	$\frac{3}{4}$
	101-200	$7\frac{1}{8}$	$4\frac{1}{2}$	$1\frac{1}{4}$	$\frac{3}{16}$	$1\frac{3}{8}$	$1\frac{1}{8}$
	201-400	$8\frac{5}{8}$	5	$1\frac{3}{4}$	$\frac{1}{4}$	$1\frac{7}{8}$	$1\frac{5}{8}$
251-600	401-600	$10\frac{3}{8}$	6	$2\frac{1}{8}$	$\frac{1}{4}$	$2\frac{1}{4}$	2
	0-30	5	4	$\frac{1}{2}$	$\frac{13}{16}$	$\frac{1}{2}$	
	31-60	$5\frac{1}{2}$	$4\frac{1}{4}$	$\frac{5}{8}$	$1\frac{1}{16}$	$\frac{5}{8}$	
	61-100	$7\frac{7}{8}$	6	$\frac{7}{8}$	$\frac{1}{8}$	1	$\frac{3}{4}$
	101-200	$9\frac{5}{8}$	7	$1\frac{1}{4}$	$\frac{3}{16}$	$1\frac{3}{8}$	$1\frac{1}{8}$
	201-400	$11\frac{5}{8}$	8	$1\frac{3}{4}$	$\frac{1}{4}$	$1\frac{7}{8}$	$1\frac{5}{8}$
	401-600	$13\frac{5}{8}$	9	$2\frac{1}{8}$	$\frac{1}{4}$	$2\frac{1}{4}$	2

51. Cartridge-fuse types. Cartridge fuses come in a wide range of types, sizes, and ratings. Various classes are designated by NEMA standards and Underwriters Laboratories (UL) standards. In broad terms, these fuses are classified as one-time, renewable, dual-element, current-limiting, or high-interrupting-capacity.

Present NEMA and UL standards indicate that standard (so-called National Electrical Code type) cartridge fuses of one-time or renewable types are designated as Class H. Such fuses are generally classified at an interrupting-capacity rating of 10,000 A. Refer to Sec. 50 for dimensions of 250- or 600-V fuseholders.


Ferrule type 0-60 A



Ampere classification

0 - 30
31 - 60

Knife-blade type 61-600 A



Ampere classification



61 - 100
101 - 200
201 - 400
401 - 600

1. Interrupting rating 200,000 A rms symmetrical.
2. 250 or 600 V ac.
3. Current-limiting.
4. Dimensions are the same as standard Class H fuses.
5. Fuseholders with a Class R rejection feature will not accept Class H fuses.


Class T fuses: ferrule type



0-60 A, 300 V
0-30 A, 600 V



31-60 A, 600 V



Ampere classification
300 V 600 V

61 - 100	61 - 100
101 - 200	101 - 200
201 - 400	201 - 400
401 - 600	401 - 600
601 - 800	601 - 800
801 - 1200	

1. Interrupting rating 200,000 A rms symmetrical.
2. 300 or 600 V ac.
3. Current-limiting.
4. Class T fuseholders will not receive fuses of any other type.
5. For 300 V use fuse clip or bolted-in mounting for knife-blade type, and bolted-in mounting for 600 V knife-blade type.
6. 300-V fuses may be used on 277/480-V systems where the voltage of the supply does not exceed 300. The same is true for Class G (300-V) fuses.

FIGURE 4.65 Class R and T current-limiting fuses.

Cartridge-fuse classifications, based on existing UL requirements at IC ratings above 10,000 rms symmetrical amperes, are Class J, L, R, T, G, CC, or K. These fuses are high-interrupting-capacity and current-limiting types. They are shown in Figs. 4.64 and 4.65. The term *high-interrupting-capacity fuse* indicates a fuse interrupting rating at some value above 10,000 to 300,000 rms symmetrical amperes, depending upon the particular fuse. A *current-limiting fuse* is a fuse which safely interrupts all available currents within its interrupting rating and limits the peak let-through current I_p and the total amperes squared-seconds I^2t to a specified degree. UL states that *current-limiting* indicates that a fuse, when tested on a circuit capable of delivering a specific short-circuit current (rms symmetrical amperes) at rated voltage, will start to melt within 90 electrical degrees and will clear the circuit within 180 electrical degrees ($1/2$ cycle). Current-limiting fuses are available with even faster clearing times.

1. Class J and L Fuses. Both the Class J and the Class L fuses are current-limiting, high-interrupting-capacity types. The interrupting rating is 200,000 rms symmetrical amperes, or even 300,000 rms amperes for some models, and it is marked on the label of each Class J or L fuse.

Class J fuse dimensions are different from those for standard Class H cartridge fuses of the same voltage rating and ampere classification. As such, they require special fuseholders

that will not accept non-current-limiting fuses. This arrangement complies with the last sentence of Sec. 240.60(B) of the National Electrical Code, which reads: "Fuseholders for current-limiting fuses shall not permit insertion of fuses which are not current limiting."

Class J fuses of 60 A or less are ferrule type, and from 61 to 600 A they have slots in the fuse blades to permit bolted or knife-blade connections to fuseholders.

Class L fuses are divided into several different amperage classifications; and fuse-blade mounting holes, the number of which varies according to fuse sizes, permit bolted connection to fuseholders.

UL standards list specific dimensions for Class J fuses and recommend specific dimensions for Class L fuses. Both Class J and Class L fuses, covered in these UL rules, closely parallel the existing NEMA standard (FU-1), "Low-Voltage Cartridge Fuses," which includes construction and test recommendations for Class J and Class L fuses.

2. Class G Fuses. Any 480-V cartridge fuse intended to be used on circuits exceeding 10,000 rms symmetrical amperes has been given a designation by UL as Class G. These 480-V or 600-V cartridge fuses successfully passed UL-supervised tests at 100,000 rms symmetrical amperes. Figure 4.64 shows the dimension of these fuses.

3. Class K Fuses. These fuses have interrupting ratings from 50,000 to 200,000 rms symmetrical amperes at various peak let-through currents I_p and maximum let-through energy conditions I^2t . Initially these fuses were divided into three groups, K1, K5, and K9. These groups indicate the degree of I^2t and I_p values. Class K1 fuses provide more current limitation than do K5 or K9 fuses. UL can verify proposed available current ratings of switches or motor starters, based on the use of a specific K-type fuse (K1, K5, etc.). K9 fuses have virtually disappeared from the marketplace.

4. Class R Fuses. These fuses are cartridge-type with a high interrupting capacity and are current-limiting with a built-in rejection feature that prohibits the installations of standard Class H fuses in Class R fuseholders. Class R fuses may be inserted in fuseholders of the standard Class H design. The fuses have passed the UL tests at 200,000 rms symmetrical amperes and have a current-limiting range for the individual case sizes. Class R fuses are divided into two subclasses according to the peak let-through current and total amperes-squared-seconds characteristics. These subclasses are identified by the designations RK1 and RK5 and are physically interchangeable. Figure 4.65 shows these fuses.

5. Class T Fuses. These fuses are cartridge-type with a high interrupting capacity and are current-limiting. The fuses are intended for use with fuseholders which will properly receive Class T fuses but will not receive fuses of any other type. The fuses have passed UL tests of 200,000 rms symmetrical amperes with peak let-through currents and total amperes-squared-seconds characteristics specified for the individual case sizes. Fig. 4.65 shows these fuses. There are two voltage classes, 300 and 600.

All presently UL-listed Class K fuses have the same dimensions as conventional Class H 250-V or 600-V, 0- to 600-A fuses (Fig. 4.63). Because of this interchangeable feature, Class K fuses are not labeled "current-limiting" even though the I_p and I^2t values of K1 fuses compare closely with those for Class J fuses.

52. The ordinary one-time cartridge fuse

(Fig. 4.66) is the oldest type of cartridge fuse in common use today. It consists of a tube of vulcanized fiber, paper, or some similar material within which the fuse element is mounted.



FIGURE 4.66 Ordinary one-time fuse. [Cooper Bussman, Inc.]

The fuse terminals are connected to contact pieces at the ends of the tube. An insulating porous powder resembling chalk surrounds the fuse and fills or nearly fills the tube. When the fuse operates, the powdered material quenches the arc. The ordinary type of cartridge fuse is available in ratings from 1 up to and including 600 A and for use on circuits with maximum voltages of 250 or 600 V, respectively. These fuses have very little time delay, and their use therefore is limited to short-circuit protection on circuits in which faults occur infrequently. They are known as Class H fuses and have an interrupting-capacity rating of 10,000 A in UL listings.




FIGURE 4.67 Ferrule-contact time-lag renewable cartridge fuse. [Cooper Bussman, Inc.]

used on circuits that could subject the fuse to more than 10,000 amperes of available fault current. They are available in ratings from 2 up to and including 600 A and for use on circuits with maximum voltages of 250 or 600 V, respectively. Most renewable cartridge fuses are of the time-delay type. The time delay is accomplished through special link construction that combines parts with a heavy cross-sectional area with parts having a very reduced cross-sectional area. As an example, consider the superlag fuse shown in Fig. 4.69. In this fuse, heavy lag plates are attached to the center of the link. The principal blowing parts of the fuse are near the terminals. The heavy lag plates keep the center of the link relatively cool. An extra reduced section is provided in the center of these plates so that they do not increase the current-carrying capacity of the link too much. As a result, the lag plates serve only to help the terminals conduct away and temporarily store some of the heat generated in the weak spots so that it takes a longer time to get the weak spots heated sufficiently to blow. Thus a time lag far in excess of that of other types of fuses is obtained.



FIGURE 4.68 Knife-blade-contact time-delay renewable cartridge fuse. [Reliance Fuse Division of Reliance Electric Corp.]



FIGURE 4.69 Cutaway view of time-lag fuse of the renewable type. [Superlag fuse of the Cooper Bussman, Inc.]

On light overloads the center weak spot of the superlag link will sometimes burn out. This happens because the rise in temperature of the entire strip is so gradual that the heavy metal terminals of the fuse can conduct the heat away from the end weak spots fast enough to keep them relatively cool. Whether the two end weak spots or the center weak spot of the bus superlag fuse blows first, the superior time lag obtained through the use of the lag plates is not affected.

When a short circuit occurs, the two end weak spots melt instantaneously, and because of the well-known fact that two arcs in series cannot maintain themselves as long as a single arc on the same voltage, much less metal is vaporized.

The thick lag plates also serve to reduce the amount of metal vaporized. First, their cooling effect at ordinary overloads makes it possible to reduce the amount of metal in the weak spots. Second, the thick lag plates in the center of the link serve to keep cooler the entire

mass of metal in the center, and therefore the arc that follows the short circuit cannot so readily melt this center section. As a consequence, less metal is vaporized on short-circuits than with any other type of fuse.

The time-delay renewable fuse is used to take advantage of lower replacement costs for the protection of mains and feeders in which faults occur frequently.

54. Dual-element Class R cartridge fuses combine a thermal element for protection against overloads up to approximately 800 percent of their rating and a fuse link element for protection against heavier overloads and short circuits. They are available in ratings of 1/10 up to and including 600 A and for use on circuits with maximum voltages of 250 or 600 V, respectively.

A typical dual-element fuse is shown in Fig. 4.70. It consists of two copper links *A* and *C* located in the two end sections of the container and a heavy copper center strap *B*. The center strap *B* is held in position by a soldered connection to a spring. The soldered connection acts as the thermal element, while the copper links in the end sections provide the short-circuit element.

Moderate overloads will not melt the short-circuit element but will open the circuit through the action of the thermal element. The center strap *B* is heated by the light overloads. When *B* is heated up to the melting point of the solder, the spring is released and the thermal-cutout portion opens. The heat coil and center strap are quite heavy, so that it takes considerable time to raise the temperature of the strap sufficiently to melt the solder. This feature together with the time required to melt the solder gives the fuse its time-lag characteristics. On heavy overloads the fuse operates immediately, before the thermal-cutout portion has time to function.

Dual-element fuses provide highly desirable protection for most circuits, including mains, feeders, and lighting and appliance branch circuits, as well as motor branch circuits and the overload protection of the motor itself. Their long time lag prevents useless shut-downs caused by ordinary fuses or breakers opening on motor-starting currents or other harmless overloads. They will hold even if all motors on a circuit start at one time; yet they protect against short circuits with all the speed of an ordinary fuse.

Dual-element fuses have a lower resistance than any ordinary fuses. Hence switches and panelboards will operate at a much cooler temperature with dual-element fuses than with ordinary fuses. This prevents damage and the needless operation of fuses so often caused by excessive heating.

Dual-element fuses also give a new kind of protection to switches and panelboards: thermal protection. The thermal cutout in a dual-element fuse will open whenever its temperature reaches approximately 280° (138°C). Thus if poor contact heat develops from any cause, the dual-element fuse cuts off the current before damaging temperatures can be reached.

On motor installations dual-element fuses are particularly advantageous. On normal installations, because of their long time lag, a fuse of a size of about 110 to 125 percent of ampere rating can be installed in a disconnect switch or branch-circuit panel. When so used, dual-element fuses give motor-running protection as safe and dependable as that furnished by the most expensive devices made.

Double protection can be given to motors already protected by other devices simply by replacing the fuses used for short-circuit protection with dual-element fuses of motor-running-protection size. Then if such other devices fail for any reason, the dual-element fuses will open to protect the motor against any dangerous overload or single-phasing condition.




FIGURE 4.70 Nonrenewable dual-element cartridge fuse. [Fusetron of the Cooper Bussman, Inc.]

On new installations, dual-element fuses permit use of proper-size switches and panels instead of oversize ones. With ordinary fuses, switches and panels must be oversized because fuses much larger than the operating load must be used to hold the starting current. But dual-element fuses hold starting currents; therefore proper-size switches and panels to fit the load can be installed. Their use often solves the problem of finding space for the switch or panel and generally saves money as well.

On present installations, by replacing oversize fuses with dual-element fuses switches or panels can be loaded near their capacity. A larger motor or additional motors can often be installed without the trouble of changing the switch or panel.

Refer to Table 46, Div. 12, for increased horsepower ratings of fused switches when time-delay fuses are used as the branch-circuit protection for motors.

55. Small-dimension fuses are available for the protection of instruments and other special apparatus. Fuses for instrument protection generally are enclosed in clear glass containing tubes.

56. Fuse accessories which are advantageous in the use of fuses for special applications are available.

Clip-clamps (Fig. 4.71) which will ensure good contact between the fuse terminals of cartridge fuses and the fuse clips are available.

Fuse reducers (Fig. 4.72) make it possible to use cartridge fuses of a smaller size than that for which the fuse clips are intended. They are available for the following reductions:

For 250-volt Fuses, Amp

60-30
100-30
100-60
200-60
200-100
400-200
600-400

For 600-volt Fuses, Amp

60-30
100-30
100-60
200-60
200-100
400-200
600-400

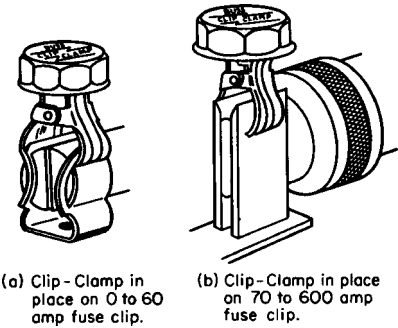


FIGURE 4.71 Clip-clamps for cartridge fuses. [Cooper Bussman, Inc.]

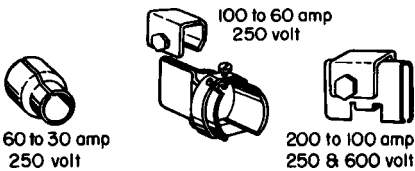


FIGURE 4.72 Fuse reducers. [Cooper Bussman, Inc.]

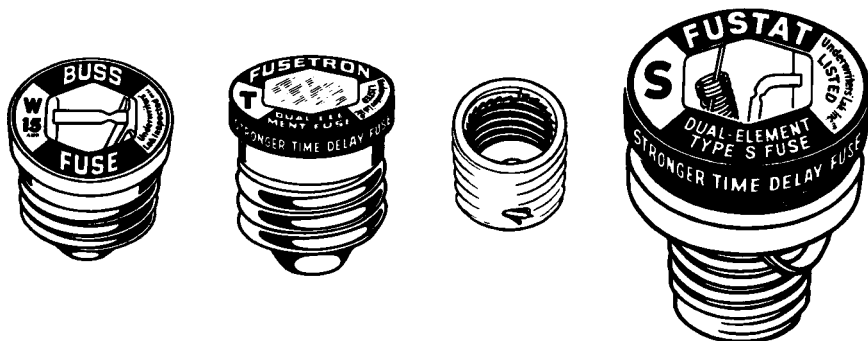


FIGURE 4.73 Types of plug fuses. [Cooper Bussman, Inc.]

57. Plug fuses are available in three types (refer to Fig. 4.73): (a) the general purpose type, (b) the time-delay type with standard Edison screw base, and (c) the Type S (tamper-resisting) type. All plug fuses are of the one-time type. The standard sizes are 15, 20, 25, and 30 A. Sizes of 1, 2, 3, 5, 6, 8, and 10 A are also regularly available. Fuses of 15-A capacity or less are provided with a hexagonal window, and those of greater capacity with a round window. Plug fuses should be used only in circuits not exceeding 125 V or in circuits of a system having a grounded neutral and no conductor at more than 150 V to ground. Plug fuses installed in residences should be of the time-delay type on circuits of 20 A or less.

The general purpose *plug fuse* (Fig. 4.74) consists of a wire or strip of fusible alloy mounted in a porcelain, glass or thermoplastic container. The container is fitted with a screw base corresponding to the standard medium lamp-base dimensions and threads. The top of the container is transparent to make the fuse link visible. Since the ordinary plug fuse has very little time delay (it opens in approximately 3 s at 200 percent load), it is subject to opening on harmless transient overloads. This practically limits the satisfactory use of the ordinary plug fuse to incandescent-lighting or heating-appliance circuits.

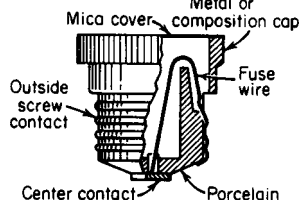


FIGURE 4.74 Edison-base type of plug fuse.

Plug fuses of the time-delay type are available in both the Edison-base type (Fig. 4.75) and the Type S (tamper-resisting type; Fig. 4.76). Edison-base plug fuses are approved only as a replacement item in existing installations in which there has been no evidence of over-fusing or tampering.



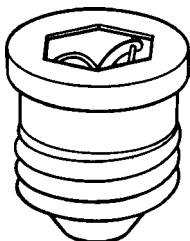


FIGURE 4.75 Time-lag fuse with Edison screw base. [Buss Fusetron of the Cooper Bussman, Inc.]

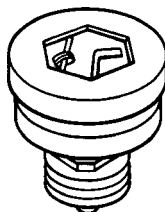

I- Fuse

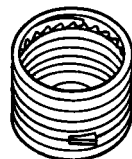

II- Adapter

FIGURE 4.76 Time-lag fuse with tamper-proof Type S screw base. [Buss Fustat of the Cooper Bussman, Inc.]

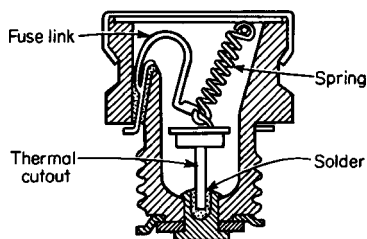


FIGURE 4.77 Construction of a time-lag fuse of the screw-base type. [Cooper Bussman, Inc.]

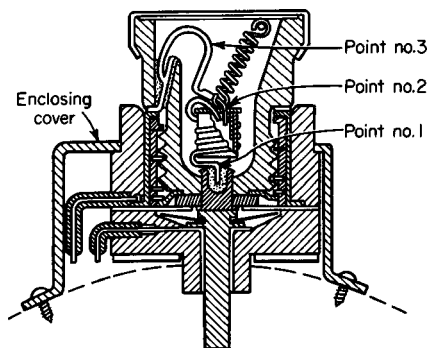


FIGURE 4.78 Time-lag fuse for protection of small motors. [Cooper Bussman, Inc.]

A *dual-element, time-delay type* of standard screw-base plug fuse is shown in Figs. 4.77 and 4.78. This fuse consists of a fuse link to which a thermal cutout is added. The internal construction of the screw-base type is shown in Fig. 4.77. An overload causes the thermal cutout to heat up, and if the overload is continued long enough, the solder in the thermal cutout softens to permit the spring to pull out the end of the fuse link, thus opening the circuit. Because it takes some time to melt solder even with a high overload current, the thermal cutout does open quickly, and the fuse link is heavy enough so that it will not open quickly on motor-starting currents.

Hence the time-lag fuse will not open on motor-starting currents that last only a short while. When a short circuit or an overload of approximately 800 percent occurs, the fuse link opens in exactly the same manner as an ordinary fuse.

A time-lag fuse designed especially for the protection of small motors is shown in Fig. 4.78. It is intended to be mounted directly on the motor. When the receptacle is properly installed, the heat from the motor windings is conducted to the thermal cutout in the time-lag fuse at point 1. Should the windings reach a prohibitive temperature with just a normal amount of current flowing, the time-lag fuse will open at point 1, and the motor will be shut down. The opening of the time-lag fuse under these conditions is primarily due to the heat of the motor windings rather than to the current flowing through the fuse. Thus the motor is automatically protected against an excessive rise of the ambient temperature or failure of air circulation or any other condition causing excessive heating of the motor without a corresponding rise in the flow of current. If, on the other hand, the flow of current is so high that the insulation in the motor will be injured or destroyed before the mass of the motor is heated sufficiently to operate the time-lag fuse, as mentioned above, the thermal cutout is heated by the excessive flow of current through the heat coil and opens at point 2. The flow of current is stopped no matter how cold the exterior of the motor may be. If the motor does not properly come up to speed owing to low voltage, a tight belt, dry bearings, or any other cause, the time-lag fuse will open at point 1 or 2. If the motor should be stalled, the excessive flow of current would cause the time-lag fuse to open at point 2. If a short or ground should occur, the excessive current would cause the fuse to open in the fuse link, point 3. However, this method generally has been replaced with thermal devices similar to those described in Sec. 67.

The *tamper-resisting type of plug fuse* (Fig. 4.76) is known as the Type S fuse. It is identical with the standard screw-base type of time-delay plug fuse except for the construction of the base. The Type S fuse has a different-size base which is screwed into an adapter. The

complete assembly is then screwed into a regular Edison-base fuseholder. Adapters are made in sizes from 1 to 30 A. The 15-A adapter will take fuses of any size from 7 to 15 A. The 20-A adapter will take only a 20-A fuse, and the 30-A adapter will accommodate a 20-, 25-, or 30-A fuse. Type S fuses make safe protection remain safe, since (1) once the correct adapter has been installed, an oversize fuse cannot be inserted, and (2) bridging and tampering are practically impossible. They give the best fuse protection for ordinary lighting, appliance, and small motor branch circuits, and they are required when plug fuses are to be used as overcurrent protection in new installation.

58. High-voltage fuses. Fuses for circuits having a voltage greater than 600 are specially constructed so that they will be safe for the interruption of current under such voltages. Two types for protection of power circuits are shown in Figs. 4.79 and 4.80. The fuse of Fig. 4.79 is of the oil-fuse-cutout type. The fuse link shown at II has a section of fusible alloy at the bottom. The entire link except the top laminated-metal terminals is enclosed in flat tubing of insulating material. The link is mounted in a casing and immersed in oil. The fuse of Fig. 4.80 consists of a tube lined with boric acid, which provides a source of deionization for extinguishing the arc. A high-voltage fuse for protecting a potential transformer is shown in Fig. 4.81.


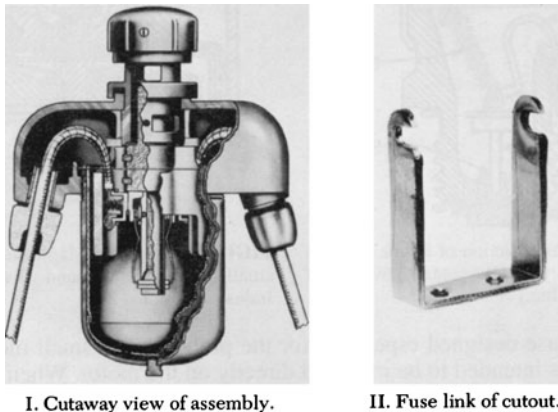


FIGURE 4.79 D&W oil fuse cutout. [General Electric Co.]


59. Circuit breakers are of the two basic types, air circuit breakers (frequently called switchgear) and molded- (insulated-) case breakers. They are switching devices designed to open a circuit automatically at a predetermined overcurrent without damage to themselves when applied within their ratings. Circuit breakers can be closed and opened manually or electrically. Additionally, they have inherent short-circuit ratings to distinguish them from switches, which have limited current-interruption ability.

A circuit-breaker assembly essentially includes (1) an operating mechanism, (2) a contact-and-arc extinguisher system, and (3) an intelligence or current-detection scheme.

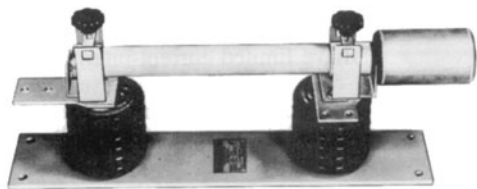A. Overload Response. Early switchgear circuit breakers utilized air dashpots, but modern designs use solid-state circuitry and current transformers. To provide a trip response for overload current, molded-case circuit breakers employ (1) bimetals, (2) hydraulic dashpots, or (3) electronic circuits. State-of-the-art circuit breakers use current transformers and



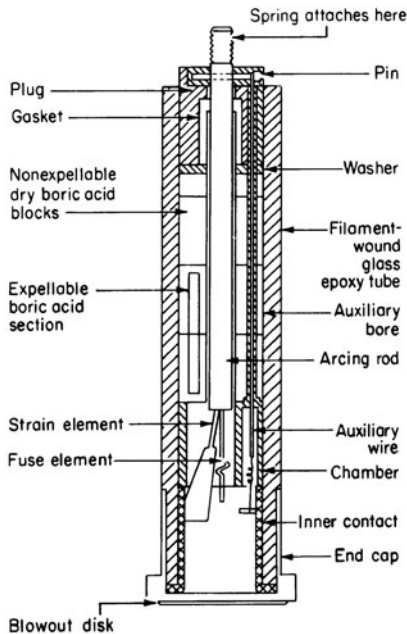I. RBA expulsion-type fuse and disconnect mounting.



II. Cross-section view of RBA expulsion-type power-fuse refill showing construction details.

FIGURE 4.80 High-voltage power fuse of the boric acid type. [Westinghouse Electric Corp.]


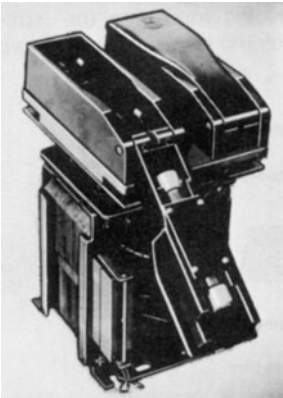


FIGURE 4.81 High-voltage fuse mounted on potential transformer. [Westinghouse Electric Corp.]

solid-state circuitry to provide inverse-time delay to overloads. Conventional molded-case breakers use bimetals or a cylindrical dashpot having a dynamic core which moves within a fluid.

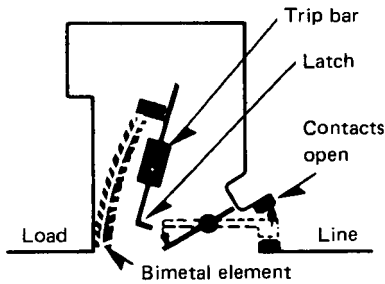1. Bimetal designs include two bonded metallic strips having dissimilar thermal-expansion rates. Heat generated by the current causes the bimetal to bend against a trip bar, which unlatches the spring mechanism and opens the contacts as shown in Fig. 4.82. The time-current curve (or inverse-time delay) of a typical 100-A molded-case breaker is also shown in Fig. 4.82; it illustrates the rapid decrease of trip time with increasing overload.
2. Dashpots provide inverse delay to overloads by means of a movable slug inside a hermetically sealed tube (Fig. 4.83). A bias spring positions the slug (core) away from the pole face until an overload through the coil attracts the core upward, which enhances the magnetic field, pulling the armature down to unlatch the breaker. The core does not



Bimetal heats and bends to open contacts on overload

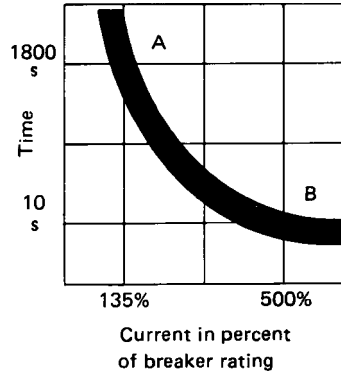


FIGURE 4.82 Principle of thermal trip action. [Westinghouse Electric Corp.]

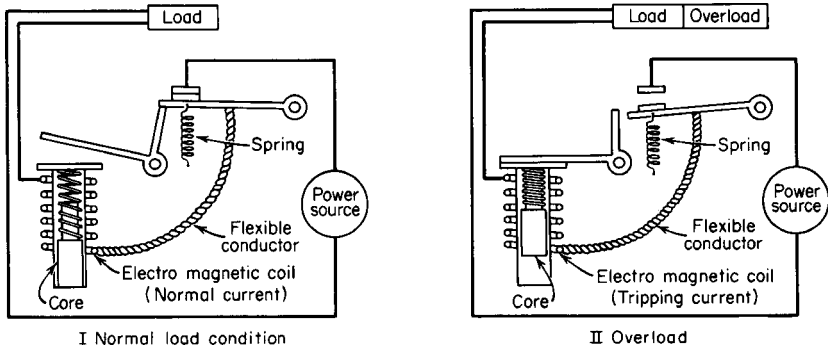


FIGURE 4.83 Principle of magnetic breaker.

move until minor overloads overcome the bias-spring force. The speed of the core motion varies with increasing current, but tripping due to short-circuit current occurs instantaneously owing solely to the magnetomotive force of the coil.

B. Magnetic (Instantaneous) Trip Action. Electromagnets in series with the load current effect tripping without delay, typically within 1 cycle for molded-case breakers (Fig. 4.84, I). Fault current passing through the breaker causes the electromagnet to effect unlatching and open the contacts. The breaker trips at a predetermined pickup point A in Fig. 4.84, III.

C. Thermal-magnetic Breakers. Combine the thermal and instantaneous features described above and employ both bimetals and electromagnets to provide a trip curve (Fig. 4.84, III). Conventional 150-A and smaller frames have fixed instantaneous trip levels (Fig. 4.84, I), but larger frames have adjustable trip levels to suit user requirements. Figure 4.84, III depicts this adjustment feature, which is usually from 3 to 10 times the nominal trip unit rating.

The National Electrical Code (NEC) defines thermal-magnetic designs as inverse-time, and they satisfy the large majority of circuit-breaker applications. They are sensitive to temperature changes to protect cable and equipment, allow longer overloads under low-temperature conditions, and trip instantly during short circuits.

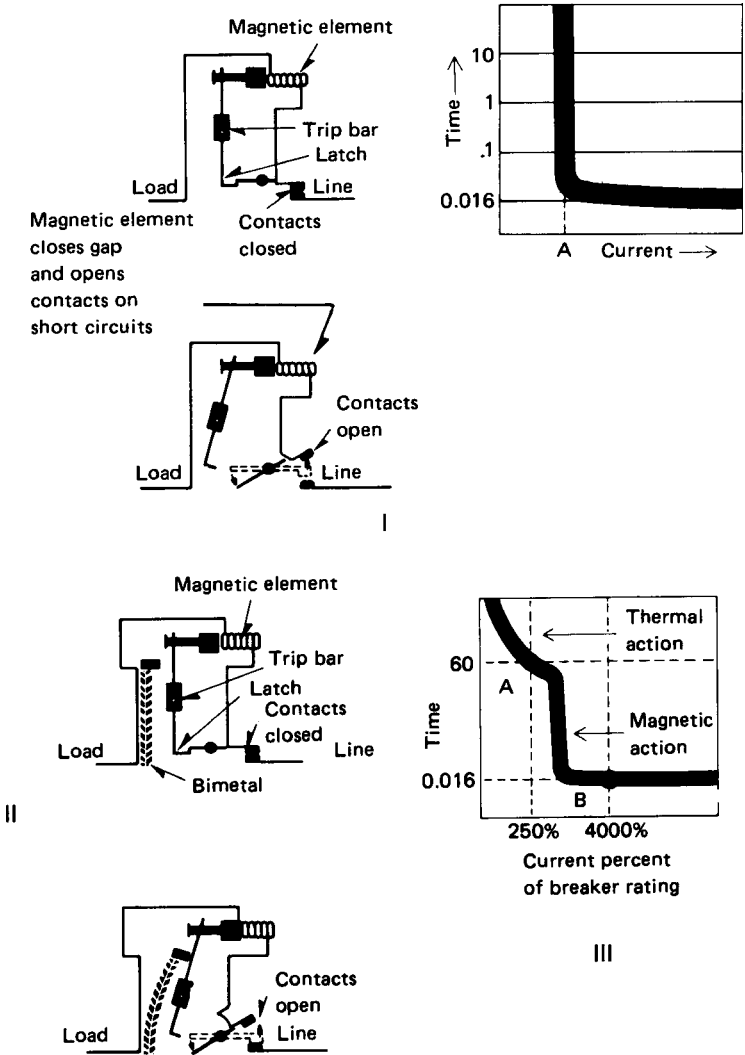


FIGURE 4.84 Magnetic and thermal-magnetic breakers. I. Magnetic (instantaneous) trip action. II. Thermal-magnetic action. III. Typical time-current curve for a 100-A thermal-magnetic breaker. [Westinghouse Electric Corp.]

D. Temperature Consideration (Ambient Compensation). The thermal elements of molded-case breakers can be modified to compensate for ambient-temperature variations and minimize the need to uprate them in lower temperatures and derate them for high ambi-ents. An additional bimetal is used in the thermal element to coordinate with the primary bimetal and counteract the effects of varying ambient temperature (Fig. 4.85). This provides a more constant current rating and reduces nuisance tripping for installations having a circuit breaker at a location and ambient temperature different from those of the circuit conductor.

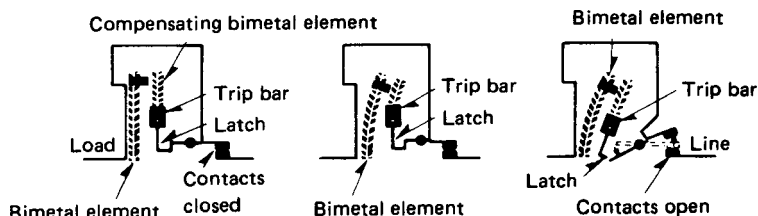


FIGURE 4.85 Ambient-compensating breaker. [Westinghouse Electric Corp.]

60. Current-limiting fused circuit breakers. There are available both switch-gear and molded-case circuit breakers which combine special current-limiting fuses to provide compact devices having high fault interruption, typically 200 kA at 600 V ac. Their prime advantage lies in avoiding useless melting of fuses due to over-loads and moderate short circuits by utilizing the breakers for opening and having the fuses operate only during major faults. Additionally, these designs have inter-locks to prevent single-phase operation. Refer to Fig. 4.86, I and II, for a typical molded-case design and a schematic of the trip action.

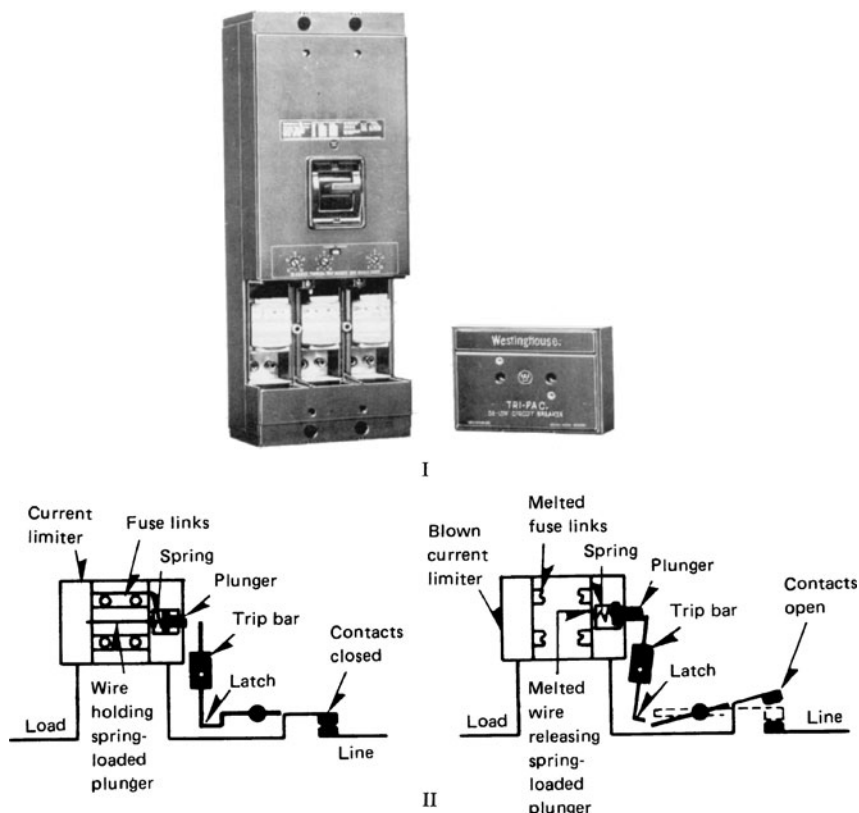


FIGURE 4.86 High-interrupting-capacity breakers. I. High-interrupting-capacity breaker by use of current-limiting devices. II. Current-limiter action. [Westinghouse Electric Corp.]

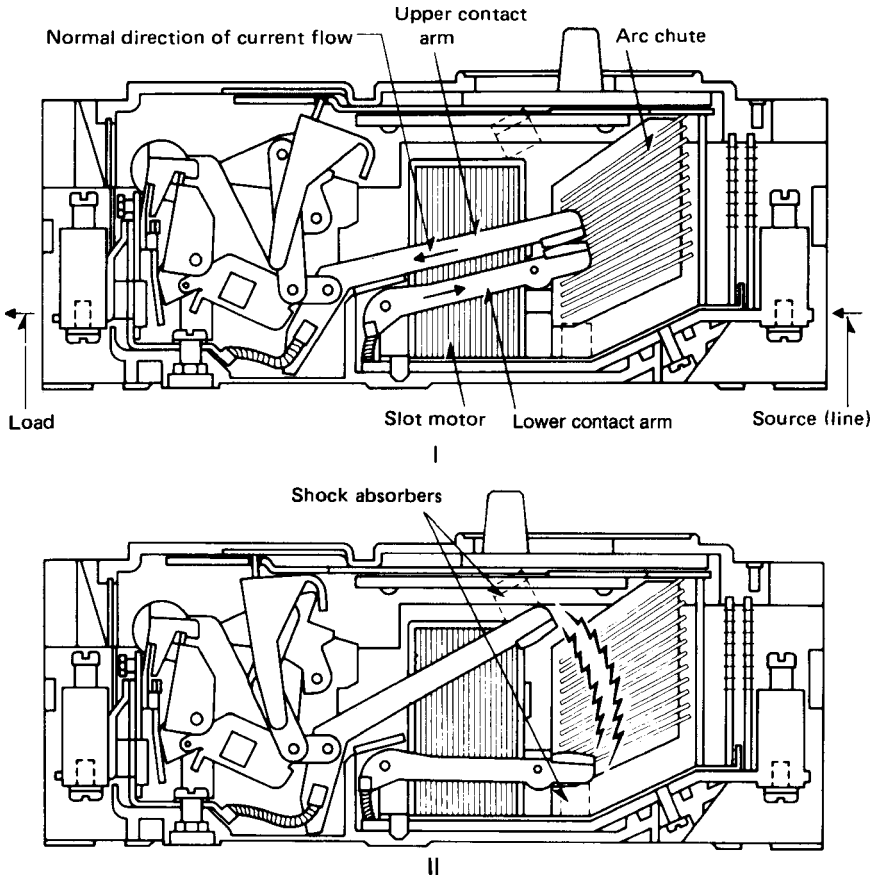


FIGURE 4.87 Contact action during fault interruption. I. Contact closed: on position. II. Contacts open: position during high-level fault interruption. [Westinghouse Electric Corp.]

61. Current-limiting circuit breakers. Molded-case circuit breakers are also available with special contact designs to provide current limiting without fuses. They are listed by Underwriters Laboratories and represent state-of-the-art construction. They effect rapid arc extinction, minimize potential circuit problems, and protect conventional downstream devices. Figure 4.87 illustrates one pole of a typical design.

62. Class CTL devices. Certain types of plug-in molded-case breakers are designed to satisfy Sec. 408.54 of the National Electrical Code, which requires that the number of circuit devices (fuses or breakers) not exceed the number of circuits for which a panelboard is designed. Consequently, the circuit breakers have unique dimensions and mounting configurations to comply with the maximum number of poles for which the panelboard is designed.

The circuit limiting (Class CTL) requirement first entered the NEC in its 1965 edition. In order to provide replacements for breakers already in use in panels that were installed

previous to this time, UL continues to list the old designs, but they must be prominently marked to indicate that they are not CTL rated and are for replacement purposes only in non-CTL assemblies. Figure 4.88 shows two tandem breakers (two breakers designed to fit in one normal circuit position) from the same manufacturer. One is CTL-rated for current panels, and has a rejection feature that only allows its use where the manufacturer intends it to be applied. The other has no rejection feature, being thereby capable of occupying any position or any number of positions within a panel, easily defeating the intent of the limitation. They should never be used except on very old panels and only to the extent absolutely necessary.



FIGURE 4.88 A 20-amp Class CTL tandem (left) and a non Class CTL tandem (right) circuit breaker shown for comparison. The CTL breaker set has a restricted-height bus connection slot (compare the dimension markings) that will only mount where a bus stab has been slotted by the panelboard manufacturer.

63. Electronic circuit breakers. State-of-the-art designs of both molded-case and switchgear types of circuit breakers have replaced conventional thermal-magnetic and dashpot trips with current transformers, flux-transfer shunt trips, and solid-state circuitry which are an integral part of the breaker construction (Fig. 4.89). The result is increased accuracy, reliability, and repeatability that were never available with previous breakers. Typically, electronic-circuit-breaker designs have the same physical dimensions and nominal ratings as the conventional breakers they supersede (Fig. 4.90).

The electronic-type units use current transformers to reduce the current to the correct ratio for input to the printed-circuit board (Fig. 4.91). Dual transformation provides an efficient intelligence circuit with low power requirements. Under prolonged overloads or short-circuit conditions, the circuit board generates an output to a low-power flux-transfer device which trips the circuit breaker.

Solid-state circuitry allows users to fashion the trip curve to their exact needs, in that *both* current magnitude *and* time are adjustable with the turn of a dial. Furthermore, latest designs have inherent equipment ground-fault protection, enabling users to dial both pickup and trip time on overloads, short circuits, and ground-fault currents.

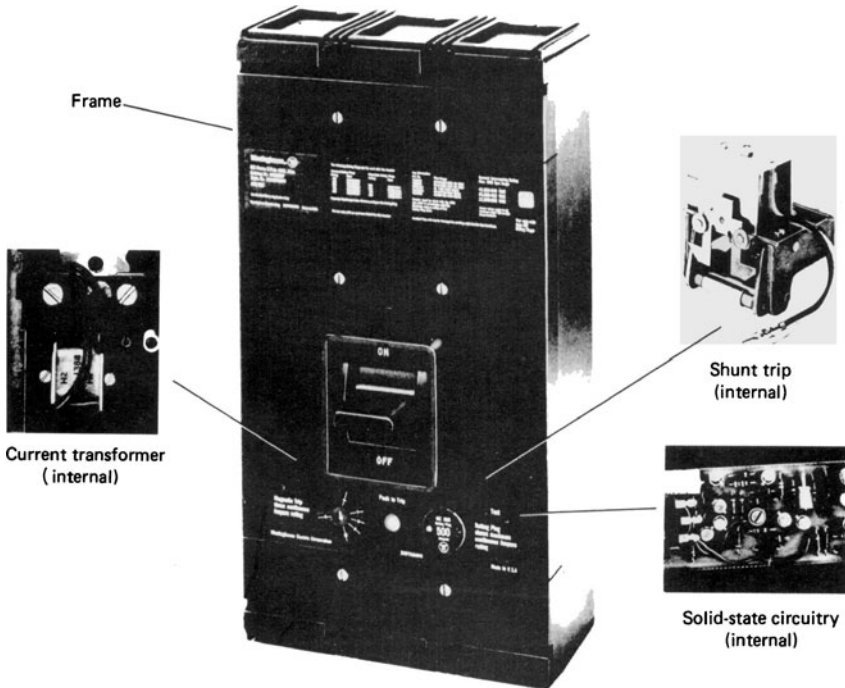


FIGURE 4.89 Solid-state circuit breaker. [Westinghouse Electric Corp.]

64. Manual or magnetic switches provided with thermal or magnetic overload relays are commonly used for the overload protection of motors. These switches are discussed in Div. 7.

65. Motor burnouts usually are caused by currents which exceed the motor current rating. In the thermal overload relay, excessive current is translated into a temperature increase. The elevated temperature actuates the relay to trip the motor from the line.


A heater element in the relay is connected in series with the motor. Tripping is usually accomplished by the relay opening the motor-control circuit. The trip point (expressed in amperes) is determined by the heater rating.

Heaters of various current ratings are interchangeable within the specific product lines of any given manufacturer. All heaters, also called current elements, perform the same function; they interpret an increase in motor current as a temperature increase in the overload relay.

66. Types of thermal overload relays. The two main types of thermal overload relays in use today are the bimetallic and the eutectic-alloy types. Bimetallic types (see Fig. 4.92) operate much in the manner of a common bimetallic-element thermostat. Current passing through the heater heats the bimetallic strip, causing it to deflect. In deflecting, the



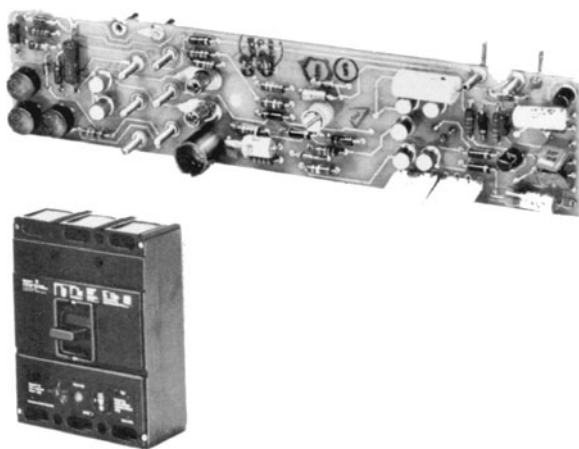FIGURE 4.90 Solid-state Sentron Series Sensitrip[®] circuit breaker. [Siemens Energy & Automation, Inc.]



LC

FIGURE 4.91 Printed circuit board used in Seltronic. [Westing-house Electric Corp.]

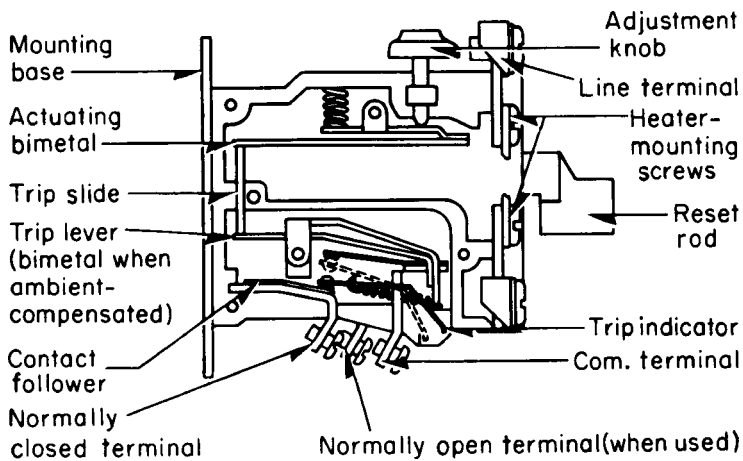


FIGURE 4.92 Bimetallic overload relay. [Westinghouse Electric Corp.]

strip opens a normally closed contact which is wired into the motor's control circuit. Operation of a bimetallic-type overload relay is illustrated in Fig. 4.93.

Eutectic-alloy relays are commonly called solder-pot overload relays. Operation of a solder-pot relay is illustrated in Fig. 4.94. In such a relay, the contacts are kept closed by a spring-loaded pawl engaging a ratchet. When the motor current is below the value of the heater rating, the ratchet shaft is secured by a pool of hardened solder (eutectic-alloy). As the current rises to a value determined by the heater rating, the solder melts, permitting the ratchet to slip and disengage the pawl.

Both types of thermal overload relays have specific advantages. The bimetallic type is considered more versatile than the solder-pot variety. For applications requiring automatic reset, ambient compensation, and adjustment between incremental heater ratings, the bimetallic type must be used. On the other hand, the solder-pot type performs better

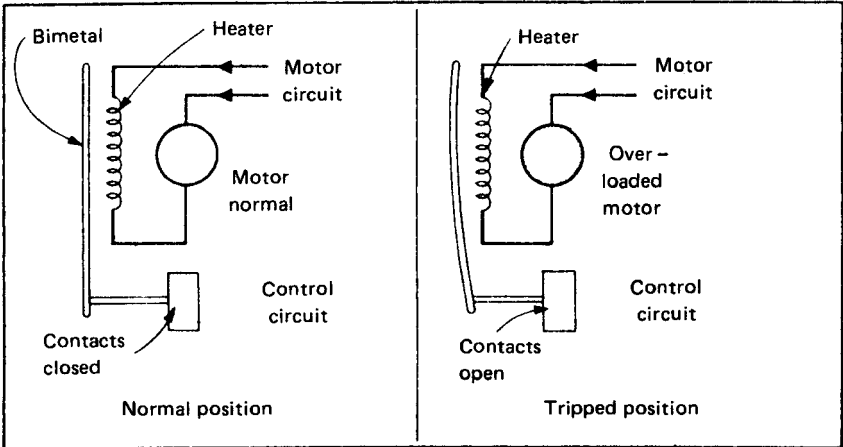


FIGURE 4.93 Operation of bimetallic overload relay. [Westinghouse Electric Corp.]


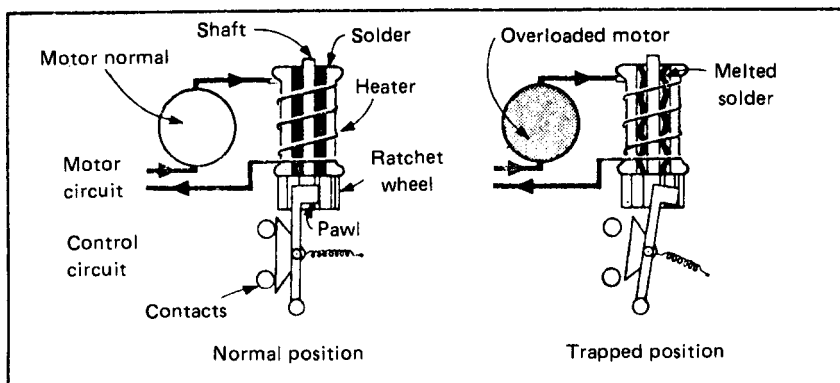


FIGURE 4.94 Operation of a eutectic alloy (solder pot) overload relay.


when abnormal physical shock and vibration are encountered and when higher control-circuit ratings are required. Both are available in single-pole and three-pole configurations (Fig. 4.95).

In most applications, however, the critical factor is not the choice of solder-pot versus bimetallic overload relay. The essential consideration is proper selection of the heater element. Base the selection on the full-load current of the specific motor being protected, as marked on its nameplate. The relay will be designed to take into account the difference between that number and the point where the NEC requires a sustained overload to be stopped (typically 125% of rated full-load current). Never make this calculation first and then specify the heater element. Doing so will oversize the relay (typically resulting in a 125% of 125% or 156% result) and effectively void the intended protection.

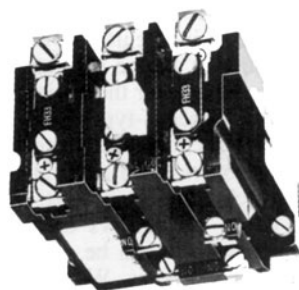All thermal overload relays have a class designation that specifies the maximum number of seconds in which an overload relay will trip when carrying a current equal to 600 percent of the heater-element rating. Present industry standards recognize Class 10, 20, and 30 overload relays. They require that Class 10 and 30 relays be marked with their class designation. Class 20 overload relays need not be marked.



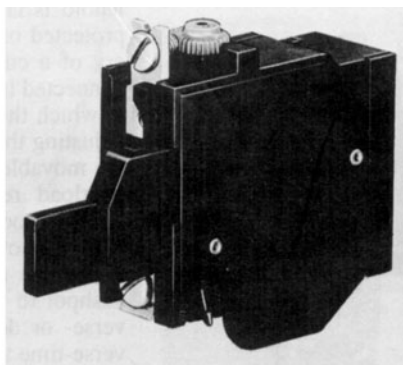I. Block type.



II. Single pole.

FIGURE 4.95 Thermal overload relays. [Westinghouse Electric Corp.]

Class 10 overload relays should be used for hermetic refrigerant motor-compressors, submersible pumps, and similar applications in which the motor can only tolerate stalled (locked) rotor conditions for less than 10 s. Class 30 overload relays may be required for motors driving high-inertia loads, such as ball mills, reciprocating pumps, loaded conveyors, etc. Most motors will be properly protected by a Class 20 overload relay selected in accordance with the control manufacturer's instructions.

67. A thermal protector is another form of heat-sensitive element that is authorized for running overcurrent protection. One or more thermal protectors are included in the motor windings at the time that the motor is manufactured. They respond to the temperature at their location by opening a circuit. Thermal protectors may open the power circuit within the motor itself or may open a control circuit which deenergizes a motor controller, thus removing power from the motor. Thermal protectors are rated in motor horsepower and operate in response to currents that are high multiples of a nominal motor full-load current (140 to 170 percent).

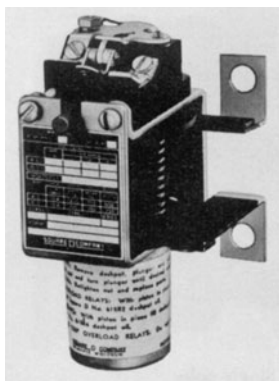



FIGURE 4.96 Magnetic inverse-time overload relay. [Square D, Schneider Electric]

68. Magnetic relays and magnetic overload release devices consist of a solenoid acting upon an iron plunger or armature (Fig. 4.96). The coil of the solenoid is connected in series with the circuit to be protected or frequently in ac circuits to the secondary of a current transformer which has its primary connected in series with the main circuit. The current at which the relay will function can be regulated by adjusting the height of the plunger or the position of the movable armature. Instantaneous-type relays and overload release devices function instantaneously upon the occurrence of an overload of any value of current above that for which the device is set.

By the attachment of an air bellows or an oil dash-pot to the plunger the device can be given inverse- or definite-time characteristics. With the inverse-time type, the time that an overload must exist before the device functions is inversely proportional to the severity of the overload. A slight overload must continue for a considerable time before the device will function, while a heavy overload will cause the device to function almost instantaneously. With the definite-time type, the device does not function until the overload has persisted for a certain definite length of time, depending upon the setting of the device. The elapsed time between the occurrence of the overload and the functioning of the device does not depend upon the severity of the overload. The essential difference between a magnetic relay and a magnetic overload release device is the same as for thermal relays and thermal overload release devices. The overload release device acts directly upon the catch of the switch mechanism, while a relay acts upon an auxiliary circuit, which in turn trips the switch mechanism.

Magnetic relays are used in conjunction with circuit breakers and magnetic switches for overload protection. Magnetic overload release devices are employed in conjunction with circuit breakers only.

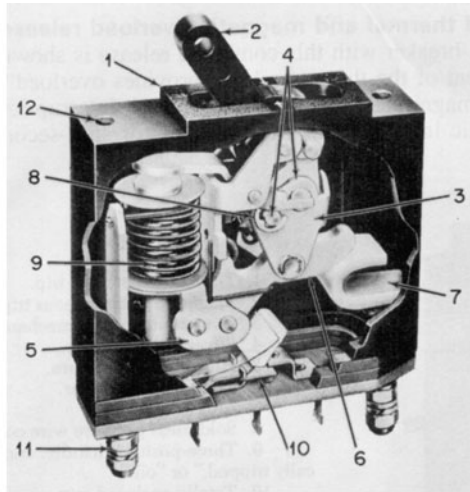An inverse-time magnetic overload relay, which is used with magnetic contactors in motor controllers, is shown in Fig. 4.96.



1. Moldarta case.
2. Handle indication. Operational positions of the handle are clearly marked "on" and "off." After a fault clearance, service is restarted by turning handle back to on position.
3. Trip-free toggle mechanism.
4. Free bearing surfaces. These are of dissimilar metals to prevent sticking and bearing wear.
5. Corrosion resistance. All nonhardened ferrous parts are cadmium-plated with a chromate dip which provides maximum resistance to corrosion.
6. Self-cleaning contact. Moving on a sliding pivot point, the contact arm causes a wiping motion of the contacts whenever they are opened or closed. This action assures low contact resistance and long contact life.
7. High-speed arc blowout. When the circuit is broken, a coil-formed stationary contact creates a magnetic field, forcing the arc into the arcing chamber. Arcing takes place on special surfaces, not on contact surfaces used for normal contact.
8. Accurate protection.
9. Hydraulic-magnetic trip unit.
10. Auxiliary switch. A single-pole double-throw auxiliary switch is available as an optional feature when required. Contacts are mechanically actuated by a toggle mechanism but are electrically isolated from the breaker circuit. Auxiliary switches are rated 5 A, 125 V; 1 A, 50 V dc, noninductive.
11. Rear-connected terminals.
12. Threaded inserts. To ensure simplicity of mounting threaded brass inserts are provided to prevent stripping during installation.

FIGURE 4.97 Hydraulic-magnetic circuit breaker. [Westinghouse Electric Corp.]

A modified type of magnetic overload release, called a hydraulic-magnetic release, is used on some circuit breakers. A breaker equipped with this type of release is shown in Fig. 4.97. The hydraulic-magnetic tripping element of this circuit breaker is simply a solenoid coil wound around a hermetically sealed nonmagnetic cylinder containing a spring-loaded movable iron core and a silicone fluid. When a current up to and including the rated current is passing through the coil, the iron core stays at the end of the cylinder opposite the tripping armature, as shown in Fig. 4.98, I.

When the iron core reaches the opposite end of the cylinder, the magnetic field has increased in intensity to a point to attract the armature. In turn, the armature releases the tripping mechanism, and the circuit breaker opens the circuit (see Fig. 4.98, III). On short circuits, the magnetic flux produced in the coil alone is strong enough to attract the armature regardless of core position, and the circuit interruption is instantaneous.

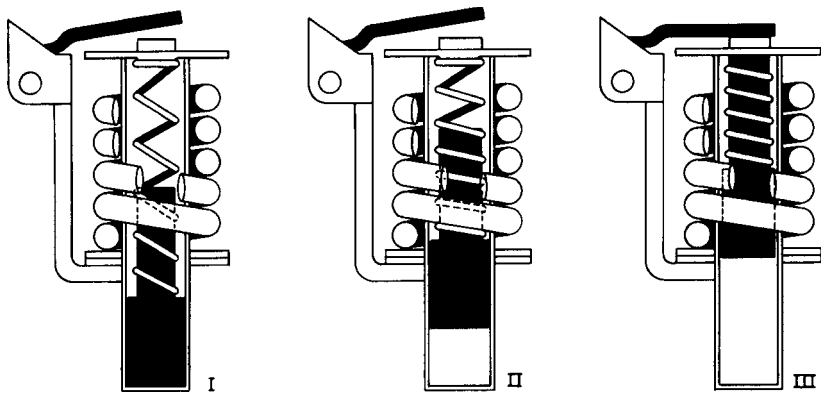


FIGURE 4.98 Hydraulic-magnetic overload release. [Westinghouse Electric Corp.]



FIGURE 4.99 Combined thermal and magnetic-trip molded-case circuit breaker rated 100 A, 480 V ac, 250 V dc. [Square D, Schneider Electric]

69. A combined thermal and magnetic overload release is used on some circuit breakers. A breaker with this combined release is shown in Fig. 4.99. The inverse-time element of the thermal release provides overload protection for overloads of ordinary magnitude without causing circuit interruption on harmless overloads. The magnetic instantaneous trip provides for split-second tripping on short circuit.

70. Induction-type overload relays are seldom used for ordinary interior-wiring work. They are widely used by central-station companies for the protection of circuits and apparatus. A detailed discussion of these relays is outside the scope of this book. Induction relays operate upon the general principle of induction motors and therefore are applicable only to ac systems. They can be obtained with instantaneous-, inverse-, or definite-time characteristics.

71. Comparison of the time characteristics of overcurrent protective devices. Typical time-current characteristics of the different overcurrent protective devices are illustrated in Fig. 4.100. The curve shown for thermal and magnetic devices is typical. All such devices will have a characteristic of the form shown, although different devices, depending upon design, will vary from that shown in the time of opening the circuit for the various overloads. Time-lag fuses have characteristics similar to those shown for the thermal and magnetic devices. The curve labeled “fuse” is for the ordinary type of fuse, not for time-lag ones. It will be noticed that fuses of the regular type have a considerable time-delay characteristic. They will not blow immediately on an overcurrent unless the overcurrent is approximately 200 percent or greater than the rating of the fuse. Fuses will carry indefinitely a current of 80 percent of their rating. The inverse-time overload protective devices of the thermal, magnetic, and time-lag fuse type have a greater time-delay

characteristic than regular fuses and will therefore allow much greater overloads for a short period without interrupting the circuit. These inverse-time characteristics make these overload protective devices ideal for the overload protection of motors. They will allow the heavy starting current to pass but will protect the motor against sustained overloads that would be harmful to it. They will also permit the motor to operate with intermittent peak overloads of short duration. If ordinary fuses are used for the overload protection of induction motors, the fuses must be shorted during the starting period, for a fuse of proper rating to protect the motor would not allow the starting current to pass.

Although ordinary fuses will permit a motor to operate with moderate intermittent peak overloads, they are not nearly so flexible in this respect as the thermal and magnetic protective devices. Devices with inverse-time characteristics are also advantageous for protection of circuits, since they will prevent interruption of the circuit due to short overloads, which, although of high magnitude, would be harmless to the circuit.

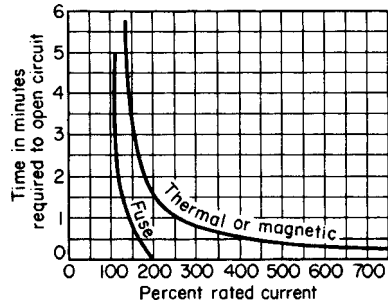


FIGURE 4.100 Time-current characteristics of overcurrent protective devices.

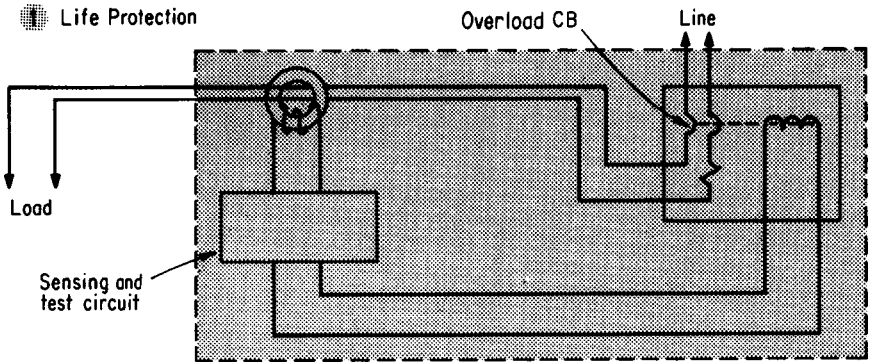
72. Protection other than overload protection can be provided by means of release devices or relays employed in connection with circuit breakers or magnetic switches.

Undervoltage protection may be provided by relays or releases actuating hand-operated circuit breakers or by magnetic switches. With magnetic switches, under-voltage protection is generally provided through the operating coil of the switch. When the voltage drops below a certain value, the current of the operating coil is so reduced that it will no longer hold the switch in the closed position.

Underload, overvoltage, or reverse-current, power, or phase-rotation protection can be provided by means of relays employed in connection with circuit breakers or magnetic switches.

73. Ground-fault interrupters. There are two basic types of ground-fault interrupters. They are intended for two very different types of protection. The first, termed a ground-fault circuit interrupter (GFCI) is designed for personnel protection. These devices detect a very low level (milliampere range) line-to-ground fault. Upon detecting these low level ground-faults, the GFCI opens the circuit before a person can suffer serious and possibly fatal effects of the electric shock. The second type of device is called ground-fault protection for equipment (GFPE). Other types of overcurrent protection do not provide reliable protection from line-to-ground faults because of widely varying ground-path impedances, including the arc itself in arcing ground faults. As a result, conventional overcurrent devices may see the arcing ground fault only as a load current. And the continuation of the arcing ground fault will eventually cause a fire or damage equipment. The GFPE device detects these types of arcing ground faults and clears the circuit before damage to the equipment or building.

The basic principle of a ground-fault interrupter is to sense current leakage to ground and then cause an interrupting device to trip open the faulted circuit. Ground-fault circuit-interrupters (GFCIs) are described in (Fig. 4.101.1). The GFCI is designed for life protection, which means that it must cause the circuit to open at very low magnitudes of current



Interrupter senses unbalance in circuit when hot wire becomes grounded. Then a semiconductor differential CB causes circuit to open. Unit opens in less than 25/1000 s when a leakage of 5 mA or more occurs.

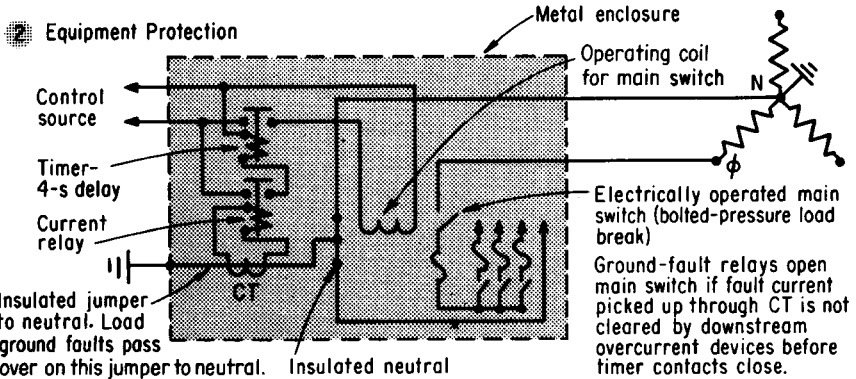


FIGURE 4.101 Two classifications of ground-fault circuit interrupters.

(4 to 6 mA). The heart of such an interrupter is a toroidal coil through which all circuit conductors pass. The interrupter senses any unbalance in the circuit, notably including leakage to ground on one of the circuit conductors as occurs when a person becomes a line-to-ground conductor. The resulting current returning over an equipment grounding conductor is routed so as to not pass through the sensor. Thus, if someone is getting a 5 mA shock from an appliance drawing 10 A, the toroid will see 10 A in one line, 9.995 A in the second line, with the other 0.005 A bypassing the toroid. After this unbalance is detected, a differential transformer and solid-state circuitry supply a current to the coil operating the interrupting mechanism and the circuit is opened within milliseconds (as fast as 25/1000 s) after the ground-fault occurs.

The tripping speed is based on an inverse time principle, and must not be more than $(20/I)^{1.43}$ seconds where I is the current in milliamperes. This is an exponential function, but for a simple point of reference consider a 20 mA ground fault. Since 1 raised to any power is 1, a 20 mA ground fault must trip the device in not more than one second. Note that the typical self-testing circuit injects about 7 milliamps of unbalanced current through the toroid, and most GFCI devices still trip much faster than one second when tested. This type of ground-fault interrupter is widely used in 120- and 240-V electrical circuits supplying swimming-pool equipment and receptacles in kitchens, bathrooms, basements, in crawl spaces, outdoors,

and on construction sites and in any other applications for which protection from line-to-ground shock hazards are deemed necessary. GFCI protection is available in 50 and 60A for the protection of spas, hot tubs or other larger loads requiring GFCI (people) protection.

GFCIs are available in the form of receptacles, circuit breakers, or as plug-in devices as shown in Fig. 4.102. Note that cord-and-plug type GFCIs (Photo II) also incorporate open neutral protection. If the grounded conductor is open for any reason, the device will not pass current. This prevents the device from failing closed. If the frame of an appliance were hot, and the grounded conductor open due to a field failure, the appliance would otherwise stay energized because the GFCI would not have the 120 V it needs to function.

GFCIs do not require an equipment grounding conductor to function properly; if someone is receiving a shock there will be an unbalanced current through the device that will be detected. However, GFCI testers rely on equipment grounding return path to simulate a current imbalance. Therefore if a GFCI protected outlet on a branch circuit with no equipment grounding conductor is checked with a tester, it will erroneously indicate that the GFCI is nonfunctional. The only way to test a GFCI protected circuit with no equipment grounding conductor is by using the test button on the GFCI device. Note that under the most recent revisions to the GFCI product standard, a GFCI device that fails to operate properly when its test button is pushed immediately trips open and cannot be returned to service.



FIGURE 4.102 I. 15A GFCI receptacle. [Pass & Seymour]



FIGURE 4.102 II. In-line GFCI. [Pass & Seymour]

The second type of ground-fault interrupter is designed for *equipment protection*. Figure 4.101, 2, shows the basic function of this system. With this type of interrupter an electrically operated main or feeder switch or circuit breaker is operated through current and time-delay relays, which are energized when a current transformer detects a ground fault flowing through a main (at the service location) or a system (at a separately derived system source location) bonding jumper. These conductors run from the metal enclosure to the insulated circuit neutral conductor, and constitute the bonding mechanism between the equipment grounding conductors of the system and the grounded circuit conductors of the system. These current relays are adjustable so that the value of ground-fault current

flowing in the circuit can be selected for a given installation before the switch or circuit breaker will trip open. Usually such interrupter devices are set at specific current ratings to allow downstream overcurrent devices to open when grounds occur on the load side of them. Thus, the main switch or circuit breaker opens only when downstream overcurrent devices fail to open under ground-fault conditions.

A zero-sequence ground-fault protection system consists is the other method of providing GFPE, and typically consists of five basic units: (A) ground relay, (B) power unit, (C) zero-sequence-coupling transformer, and (D) a main circuit breaker or bolted-pressure contact switch with a 120-V shunt-trip device mounted in the same enclosure. It functions as follows.

All incoming (three-phase and neutral) conductors pass through the window of the zero-sequence-coupling transformer. The secondary of this transformer is connected to the ground relay. The power unit provides dc control voltage to the sensing element of the relay and the main breaker shunt trip for tripping from a 120-V ac source.

Under normal conditions, the load current flowing in the cables creates a magnetic flux in the zero-sequence-coupling transformer that characteristically balances exactly, thereby canceling the flux. No signal is produced. When insulation fails or leakage current reaches a predetermined level anywhere on the downstream side of the zero-sequence-coupling transformer, a signal is produced to the trigger element. This, in effect, closes the circuit to the shunt trip instantly, thereby tripping the main circuit breaker and isolating the fault. Although these systems operate in the range of hundreds or even thousands of amperes, they differ only in scale and not kind from the toroid in a GFCI that will trip at 0.005 amperes.

The generic term for a sensing device that operates in this way is a *residual current device*. A third style in this category is used for equipment protection on some branch circuits. For example, most electric heat tracing on pipelines and vessels, including frost protection on water lines, requires GFPE because the long, resistive heating components of these systems often fail with low-level arcing to grounded surfaces. If not properly protected, such arcing faults can continue for long periods and start fires because the total current is often well below the tripping point of a conventional overcurrent device. Accordingly the NEC requires GFPE on these circuits. GFPE circuit breakers have been developed for this purpose. They look like GFCI circuit breakers, but they trip at about 30 mA and do not provide shock protection, only equipment protection.

Section 230.95 of the 2008 NEC requires ground-fault protection on services, and Sec. 215.10 requires similar protection for feeders. It should be evident that in large installations in which the incoming service is high-voltage, for example, 13,800 V, and the distribution system consists of several step-down transformers to perhaps 480 V or less, the need for ground-fault protection on all these individual main 480-V feeder circuits is just as important as if the main service to the facility were 480 V. Ground-fault protection must be applied as follows:

1. On grounded Y circuits
2. 150 V to ground or higher
3. Up to 600 V phase to phase
4. Maximum setting, 1200 A or lower
5. Services or feeders rated 1000 A or higher

For feeders, GFPE can be omitted if there is upstream GFPE that is not on the other side of a transformer. For both services and feeders, GFPE can be omitted in the context of continuous industrial process work where a nonorderly shutdown would create a greater hazard. Explanatory notes in Sec. 230.95 advise that to obtain coordination for faults on feeders and branches it is usually desirable and sometimes necessary that ground-fault protection be included on the feeders as well as on the main service. With multiple levels of

protection an outage is limited to a protected feeder instead of the entire building. For health care facilities, NEC Sec. 517.17 requires multiple levels of protection due to the catastrophic consequences of a GFPE trip taking out an entire hospital.

Though not stated in Sec. 230.95, ground-fault protection is very useful on circuits of 240/120 V and 208 Y/120 V and all grounded delta circuits. Uncleared ground faults can be equally damaging on these applications, which are not covered at present in the NEC. It is true, however, that the lower instantaneous maximum voltage to ground (170 V) on these systems poses less of a restrike hazard than on a 480 Y/277 V system. These systems have a much higher instantaneous maximum voltage to ground of 392 V ($277 \text{ V} \times \sqrt{2}$). At this voltage, arcing faults tend to constantly restrike after each current zero, resulting in far greater damage. That is why the NEC mandates the protection at the higher voltages.

Ground-Fault System. Modern ground-fault-protection (GFP) systems operate on the principle of *zero-sequence detection* or *core balance*, as it is more commonly known. This basic approach has been made practical by the advent of solid-state relays, with their inherent low burden characteristics. A GFP system consists of a special-design CT, or ground sensor, and a solid-state relay. The Y-connected 3- to 4-W transformer source is solidly grounded, and three single-phase loads are connected to it. The ground sensors are available with small or large window configurations, designed to enclose all phase and neutral bus or cable conductors but not the ground conductor (see Fig. 4.103 III).



FIGURE 4.103 Family of ground fault sensors and relays. [Square D, Schneider Electric]

The sensors will respond only to ground-fault currents. Balanced or unbalanced load currents and two-phase or three-phase short circuits not involving a ground return will have no effect on the sensor.

Application of a ground-fault system is simple and direct. One sensor and one relay are used with any type of circuit. The sensor is selected by physical size; the relay, by sensitivity range and speed of operation. A minimum pickup setting on the relay offers maximum system protection but at a possible sacrifice in selectivity, depending on the downstream-equipment characteristics. The application does not require a special insulated enclosure or similar complexities. It should be noted that the system neutral must never be grounded on the load side of the ground sensor, that is, at downstream panelboards. Doing so violates numerous NEC rules and provides a parallel return path for fault current over the supply neutral. When the returning fault current over this path reaches the GFPE sensor window, it is detected as normal neutral current, effectively desensitizing the GFPE protection.

Operational Tests. Section 230.95(C) of the NEC requires a performance test when a ground-fault protection system is first installed. It is not necessary to schedule periodic maintenance and testing of the system. However, if tests are desired to confirm the proper functioning of the system, one of the following procedures can be used. With draw-out relays, tests can be accomplished by a simple push-to-test-button operation (see Fig. 4.104).



FIGURE 4.104 Push-to-test ground-fault relay.
[Square D, Schneider Electric]

- 1. Mounted in switchgear.
 - a. After deenergizing the main, set the ground-fault relay to minimum amperes.
 - b. Loop a test coil of approximately No. 14 wire through the sensor window. Special multiturn test cables are available (see Fig. 4.105).
 - c. Apply enough test amperes so that the ampere turns exceed the relay ampere setting. The relay will trip the breaker. Immediately return the test current to zero.
- 2. Bench tests (without circuit breaker).
 - a. Set the ground-fault relay to minimum amperes.
 - b. Connect the relay and sensor as shown in Fig. 4.106 (typical).
 - c. Apply enough test amperes so that the ampere turns exceed the relay ampere setting. The auxiliary relay will pick up when ground-fault relay operates. Immediately return the test current to zero.

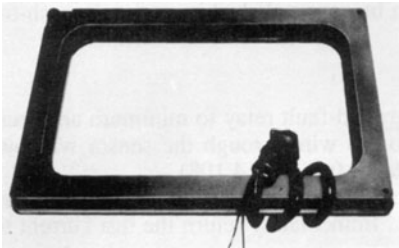


FIGURE 4.105 Special multiturn cable.

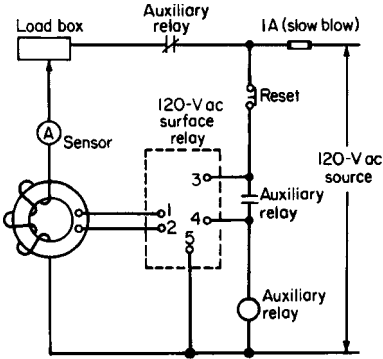


FIGURE 4.106 Bench test.

Precaution. The relay output circuit will be damaged unless a normally open auxiliary switch opens the trip circuit after the trip operation.

74. Lightning protection. High voltages may be electrostatically induced in outdoor electric lines during lightning storms. These voltages produce traveling surges of high voltage which travel along the lines and into electrical equipment, whether it is located outdoors or inside buildings. The high induced voltages would puncture the insulation of equipment and be dangerous to life. Lightning arresters are used to limit these voltages to a safe value and provide a path to ground for the dissipation of the energy of the surge. To provide this protection satisfactorily, lightning arresters must fulfill the following functions:

1. They must not allow the passage of current to ground as long as the voltage is normal.
2. When the voltage rises to a definite amount above normal, they must provide a path to ground for dissipation of the surge energy without further rise in voltage of the circuit.
3. As soon as the voltage has been reduced below the setting of the arrester, the arrester must stop the flow of current to ground and reseal itself so as to insulate the conductor from ground.
4. Arresters must not be injured by the discharge and must be capable of automatically repeating their action as frequently as is required.

Lightning arresters should be provided on all overhead systems. For the small consumer who purchases power from a public utility, this protection may be supplied by the utility on its distribution circuits. For a large consumer it may be advantageous to install lightning arresters between the public-utility lines and the consumer's substation. All communication circuits entering a building must be provided with a protector which will give protection against abnormal voltage to ground caused not only by lightning but by accidental contact between communication circuits and power circuits. This protection is usually provided by the communication company which is supplying the service. All signal circuits which are run outdoors for any part of their length or which are installed so that there is any possibility of accidental contact between the signal circuit and power conductors must be provided with a protector.

The National Electrical Code requires radio equipment to be protected against lightning as follows. In receiving stations, each conductor of a lead-in from an outdoor antenna shall be provided with a listed antenna discharge unit, except that where the lead-in conductors are enclosed in a continuous metallic shield, the lightning arrester may be installed to protect the shield or may be omitted if the shield is permanently and effectively grounded. Lightning (surge) arresters shall be located outside the building or inside the building between the point of entrance of the lead-in and the radio set or transformers and as near as practicable to the entrance of the conductors into the building. Antenna discharge units shall not be located near combustible material or in a hazardous location.

Grounding conductors shall be not smaller than No. 10 copper or No. 8 aluminum or No. 17 copper-clad steel or bronze.

75. Surge (lightning) arresters are made in many different forms. A discussion of the construction, application, and installation of the various types is outside the scope of this book. Typical types for power work are illustrated in Fig. 4.107, and types for signal and communication work in Fig. 4.108. Effective with the 2008 NEC, the term "surge


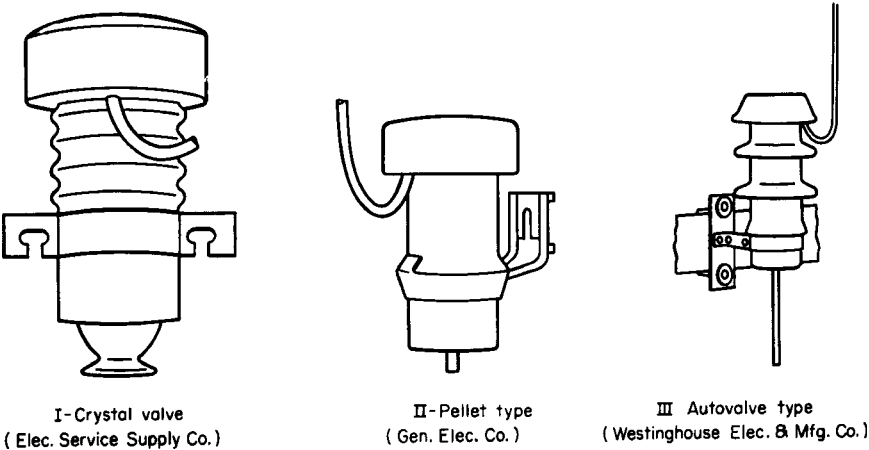


FIGURE 4.107 Surge arresters of the power type.

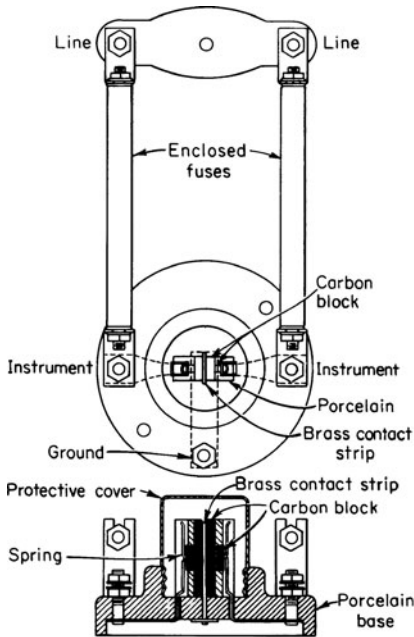

I. Standard telephone-line protector.



II. Arrester for signal circuits.
[General Electric Co.]

FIGURE 4.108 Surge arresters of the low-voltage type.

arrester” only applies to equipment installed on wiring systems running over 1000 V. Surge protection for 600 V and lower systems is to be provided by “surge protective devices”, covered in Sec. 76.

Surge arresters can be installed indoors or outdoors. They must not be accessible to unqualified persons unless listed for accessible areas.

An arrester must not be located in a hazardous location (see Div. 9). When surge arresters are used, an arrester should be installed for each ungrounded circuit wire. The National Electrical Code requires that the connections between an arrester and a line wire or bus, and between the arrester and ground shall be of copper wire or cable or the equivalent. Except for secondary services these connections shall not be smaller than No. 6. The connections shall be made as short and as straight as practicable, avoiding as far as possible all bends and runs, especially sharp bends.

Proper grounding of lightning arresters is of utmost importance. Refer to Div. 9 for discussion of grounding rules and practice.

76. Surge protective equipment at utilization voltages (600 V and below) is provided by surge protective devices [formerly known as transient voltage surge suppressors (TVSS)], is used in connection with lightning (surge) arresters and in large power systems to limit the value of short-circuit current. These devices are also installed to protect sensitive equipment from voltage surges that originate on site or that get past the incoming service line protection. Surge protective devices can be built in the form of branch circuit breakers by the use of metal oxide varistors (Fig. 4.109).

The NEC recognizes three types of surge protective devices. Type 1 devices correspond to surge arresters and are suitable for installation on the line side of the service equipment. Type 2 devices can be installed at any point on the load side of a service disconnect. They are also permitted on the load side of the first overcurrent device in a building or other structure supplied by a feeder. When special arrangements are made for overcurrent protection, these devices can also go on the line side of the service. Type 3 devices, the least robust, are permitted only on the load side of branch circuit protective devices and with the further restriction that they are at least 30 ft, measured along the conductors, from the service or local feeder disconnect for the building.

Some surge-protective equipment consists of coils of wire connected in series with the circuit for the purpose of introducing inductance. Coils used with surge arresters are called choke coils. The inductance of the coils tends to shunt the high-frequency lightning surge away from the apparatus and through the arrester to ground. Those used for limiting short-circuit currents are called reactors and are usually wound on an iron core to increase reactance.



FIGURE 4.109 15 or 20 A circuit breaker with built-in surge protection. [Siemens Energy & Automation, Inc.]

77. Arc-fault circuit interrupters (AFCIs) are the newest type of circuit protection. AFCIs are intended to mitigate the effects of arcing faults that pose a risk of fire ignition when the arcing persists. Arcing is defined as a luminous discharge of electricity across an insulating medium. Arcing can occur between line and neutral or line and ground in which case it is a parallel arc. Arcing can also occur when a single line conductor is severed with a load still connected, which is called a series arc. Arcing at current levels below the instantaneous trip level of conventional over-current devices is frequently sufficient to ignite nearby combustible material, and some decomposition products of electrical insulation are also combustible. Arc-fault circuit interrupters incorporate residual current protective functions (See Sec. 73) along with additional electronics that assess the duration and energy release rates of likely arcing events.

Arc fault circuit interrupters are now required (2008 NEC) to protect all circuits that supply outlets (receptacle and lighting) in dwelling unit family rooms, dining rooms, living rooms, parlors, libraries, dens, bedrooms, sunrooms, recreation rooms, closets, hallways, or similar rooms or areas. Most receptacle outlets in bathrooms, basements, kitchens, garages, and outdoors require GFCI protection. The result is that virtually every outlet in a dwelling unit must now have some form of residual current detection, and in most areas a failure in the branch-circuit wiring itself will also be detected and opened. Although it would be theoretically possible to omit protection of a lighting circuit that only served a kitchen or bathroom or both, as a practical matter essentially all general-purpose lighting and receptacle outlets throughout the entire dwelling must be protected on installations governed by the 2008 NEC and thereafter.

What devices are available?

There are two broad classifications of arcing failures that can be addressed by AFCI technology, namely, a line-to-line or line-to-ground failure that can occur in parallel with a connected load or even with no energized load in operation, or a failure between two severed ends of the same conductor, or at a poor connection point for such a conductor, either one in series with a connected load. The first AFCI devices in wide usage, configured as an additional tripping provision in certain circuit breakers (and designated as “Branch/Feeder AFCIs” by UL), addressed the more common parallel events only, and the NEC permitted the use of this more limited protection until January 1, 2008. Meanwhile, the only design that addressed the series failure was configured as part of a duplex receptacle akin to a GFCI receptacle. These are designated by UL as an “Outlet/Branch Circuit AFCI”, and if located as the first outlet on a branch circuit, provide series protection for the entire branch circuit and parallel protection for all downstream portions of the circuit.

The “outlet/branch-circuit” devices have not, as of this writing been commercially manufactured although prototypes exist and at least one manufacturer has a listing. The reason for this is the restrictive nature of the NEC conditions for which such a device is permitted to qualify as the required AFCI protection for a branch circuit. Under the 2005 NEC the device had to be located not over 6 ft from the point of branch circuit origination with the distance to be measured along the conductors, and metallic wiring methods employed between the two locations. Under the 2008 NEC, the distance can be any length, but the wiring methods must be steel, either as a cable assembly (e.g. steel Type AC, but not the usual Type MC with aluminum armoring) or as one of three specified steel tubular raceways (IMC, RMC, or EMT) but not, technically, wireways or other wiring methods even if made of steel. It remains to be seen whether this will be a sufficient concession to bring these devices to market.

Effective January 1, 2008 under the 2005 NEC, and also as incorporated into the 2008 NEC, AFCI protective devices must combine the best protective features of both parallel and series protective devices. These devices are what the NEC refers to as “combination-type”;

they are marked accordingly and Fig. 4.110 shows an example. *This designation has nothing to do with a device that provides both AFCI and GFCI protection*, although the technology is mutually compatible and devices that provide both shock protection and arc-fault mitigation are available from some manufacturers.

Not all manufacturers are currently making two-pole AFCI circuit breakers, although that will probably change with time. This is important because, just as in the case of GFCI protection, a two-pole device is required to be used with a multiwire branch circuit. Some, but not all manufacturers make AFCIs in bolt-on configurations for commercial and multifamily residential applications. Of course, the bolt-on configuration can be used anywhere but it is more prevalent in the larger quasi-commercial applications. Until the supply chain becomes completely up to speed on current applications, this will be an issue, particularly on retrofits. Note that at least one manufacturer of two-pole AFCIs also makes classified AFCI circuit breakers that are rated for a number of competitors' panels, so that could be another way out for now. Note that such classification ratings are limited to some extent, particularly for applications involving available fault currents over 10 kA

What arcing failures need to be addressed?

On ac circuits electrical arcs tend to self extinguish on the first current zero, and on 120 V circuits the peak voltage of 170 V ($120\text{ V} \times \sqrt{2} = 170\text{ V}$) normally will not restrike an arc. However, there are exceptions that make sustained arcing on 120 V circuits possible, and the results, if uncleared, can easily result in fire. One method of arc restrike involves the breakdown of insulation surrounding a damaged copper wire. As the metal separates (or short-circuits from a conductive penetration) while energized, the initial arc will go out quickly, like a snap switch opening. However, the heat from that initial arc will decompose some of the surrounding insulation, and can cause the separating metal surfaces to become contaminated with carbon and other decomposition compounds capable of thermionic emission, similar to the electrodes in a fluorescent lamp. If the wire is flexed so the contact is renewed and re-broken, the juncture between the cut or broken conductor ends may eventually accumulate enough contaminants so the arc can restrike at voltages below 170 V, particularly given the very short distances separating the conductor ends. If this occurs from line-to-line, or line-to-ground, the normal power available in a circuit can easily produce a release of energy that will cause a fire.

Another related problem involves the deposition of enough carbon in char, together with certain decomposition products of typical insulation, to produce a small, semi-conductive path that produces tracking that will pass enough current at the prevailing voltage to result in red hot conditions at the point of damage. Loose connections at terminals can overheat due to intermittent contact as well (the "glowing contact" phenomenon). These types of series failure will not trip a parallel-responding AFCI device unless the damage happens to progress to the point of line-to-line or line-to-ground failures. In addition, some decomposition products of insulation are combustible and capable of ignition and if this happens the energy released can easily ignite adjacent combustible materials.

How are AFCI devices tested?

Arc fault protective devices that meet the current provisions of the NEC, i.e. combination-type AFCIs, are engineered to address all of these conditions. They do not



FIGURE 4.110 Arcing-fault circuit interrupter. [Square D, Schneider Electric].

guarantee perfect protection, but they are far better than providing no such protection, as will be seen from the tests they must pass under UL 1699. High-current testing (relatively speaking, and resulting from likely parallel events) begins with a “*point contact arc test*” where a knife edge makes solid contact with one conductor and just touches another, arranged with enough impedance so the resulting short circuit is below the instantaneous pick-up point for a conventional circuit breaker, and the resulting intermittent arcs may not actuate the long-time pick-up either. The initial fault current is 75 A, because even in the worst-case residential application, there will be at least that much fault current available in a cord. Additional tests are run at higher fault currents. The device must open anytime there are more than 8 half-cycles of arcing in a half-second (60 half-cycle) period, and a surgical cotton fire indicator at the fault location must not ignite.

To address the problem of line-to-line arc restrike due to the effects of degraded insulation, the device must pass a “*carbonized path arc interruption test*.” A test specimen is cut all the way through to the metal, wrapped with tape, and then conditioned line-to-line with a high-voltage low-current transformer until there is enough carbon to make the juncture capable of striking and restriking an arc at 120 V nominal. The sample is then tested with 75 A and 100A of available fault current and the device must also clear if there are more than 8 half-cycles of arcing in a half-second interval.

The next test is the “*carbonized path arc ignition test*.” This is a series test. The ungrounded conductor only in Type NM-B cable is severed with the other conductors left in place without damage. The cut is wrapped in tape and then surgical cotton, and conditioned with a similar transformer to make the juncture semi-conductive. The device must open the circuit without causing ignition at representative test currents of 5 A, 10 A, rated branch-circuit current, and 150% of rated current. Note that outlet/branch circuit GFCIs must also pass this test for series arcing even when it occurs on the line side of the device; this is possible because of the series connection involved.

The next test is also a series test. The “*carbonized path arc clearing time test*” uses the same test currents, but parallel cord (SPT-2) with no equipment grounding conductor. The cord is cut across with a knife to expose the conductors, but not sever any strands, and then conditioned by exposure to sufficient high voltage and current to thermally degrade the insulation and carbonize the path between conductors. Specifically, in this test the conductivity across the carbonized path must be such that a series-connected 100W lamp will start to glow, or draw 0.3 A. After wrapping the damaged cable in a double layer of electrical tape and a double layer of fiberglass tape, as in the other cases, a current-limiting variable resistor is put in series so the low-current arcing will continue, and the device must open according to published criteria. For example, a 20 A AFCI circuit breaker must trip on a 5 A fault within 1 sec (120 arcing half-cycles) and on a fault of 150% of the breaker rating (30 A in this case) within 0.11 sec (13 arcing half-cycles).

What about nuisance tripping?

This part of the testing is to be as certain as possible that AFCI devices do not trip on harmless arcing that occurs routinely in electrical systems. For example, series motors such as those in vacuum cleaners produce constant arcing at the brush contacts on the rotating armature. Under the “*unwanted tripping tests*” AFCI devices must not trip on loads in this category, whether high or low current in nature. AFCIs must also not trip under the influence of environmental electronic noise, and must demonstrate immunity to electrostatic discharge, radiated electromagnetic fields, electrical transients, voltage surges and dips, and induced disturbances from RF (radio frequency) fields conducted to the devices. This list can be updated as the state of the art progresses. For example, effective February 10, 2008, UL 1699 requires that AFCIs must not nuisance trip on paddle fans and their associated controls, or on air purifiers with UV lighting.

The opposite of a nuisance trip, and more dangerous, is a trip that didn't happen because its effects were masked by a load on the circuit. To this end, UL performs "*operation inhibition tests*" that run the low-current AFCI tests described previously with a series motor operating as part of the load circuit. This gives the current signature a strong inductive component that is significantly different from the basic test and the AFCI must still perform as intended.

What about GFPE?

All circuit-breaker configured AFCI protective devices now on the market use low-level GFPE to comply with the carbonized path arc ignition test. As the arc progresses it very quickly generates leakage current to the equipment grounding conductor. Just as in the case of GFCI protection, low-level GFPE devices use a toroid to detect line-to-line current imbalances, but in these cases the trip is typically set for about 30 mA. Experience and testing history has shown that even the lowest-level arc fault evaluated as part of the test will produce leakages of that amount of current in applications where an equipment grounding conductor is present and the result is a trip before the designated cotton sample can be ignited. Although the scope of the UL 1699 AFCI standard pointedly declares that "these devices are not intended to detect glowing connections" there is a fair amount of experience to the effect that a glowing connection (usually from arcing under a binding screw due to a loose connection) will also generate enough leakage current to trip an AFCI before a fire starts. However, keep in mind that it is possible to meet the testing criteria by developing some other approach because the standard does not mandate this method of compliance. The GFPE approach has an additional advantage in that the technology has been around for a very long time, and nuisance trips on these devices are exceedingly rare. For example, it is almost impossible to confuse the imbalance sensed by a toroid with distorted current waveforms produced by switch-mode power supplies in computers or electronic fluorescent lamp ballasts.

SWITCHBOARDS AND SWITCHGEAR

78. A switchboard is defined in the National Electrical Code as a large single panel, frame, or assembly of panels on which are mounted, on the face or back or both switches, overcurrent and other protective devices, buses, and, usually, instruments. Switchboards are generally accessible from the rear as well as from the front and are not intended to be installed in cabinets.

79. The types of switchboards, classified by basic features of construction, are as follows:

1. Live-front vertical panels
2. Dead-front boards
3. Safety enclosed boards (metal-clad)

Live-front switchboards (Fig. 4.111) have the current-carrying parts of switching equipment mounted on the exposed face or front of the panels. They are not as a rule employed in new boards when the voltage exceeds 600 V.

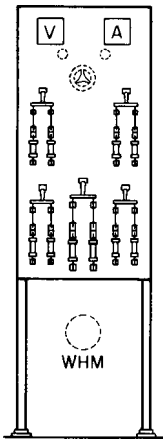


FIGURE 4.111 Live-front switchboard panel.

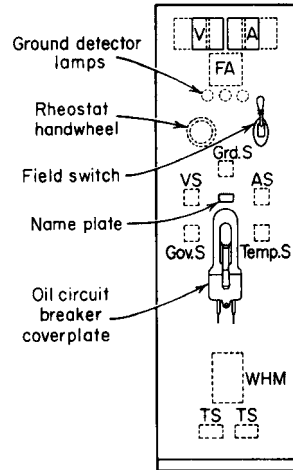


FIGURE 4.112 Dead-front switchboard panel.

Large-capacity equipment with resultant increases in weight makes enclosed metal-clad switchboards more desirable from a structural and safety point of view. If high short-circuit currents are available, it is much safer to confine short circuits to metal-clad equipment for the protection of personnel and buildings.

On existing live-front switchboards, obsolete equipment and panels can be replaced with more modern components. In drilling new holes in slate or marble a standard steel twist drill may be used if the heel of the drill is ground off, thus providing the drill with a sharper angle. Slate panels are drilled dry, whereas marble panels must be drilled with the use of water. It is best, however, to use modern masonry drills when drilling such panels.

Avoid excessive pressure when drilling through panels. Abandoned holes can be filled with cement or plaster.

Dead-front switchboards (Fig. 4.112) are the more modern type and are employed for systems of all voltages. With this type no live parts are mounted on the front of the board.

Safety enclosed boards are used for most new installations. Common terms used to designate equipment of this type are *metal-enclosed switchgear* and *metal-clad switchgear*. Most safety enclosed boards are of the unit or sectional type. They consist of a combination of the desired number and type of standardized unit sections. Each section is a standard factory-assembled combination of a formed steel panel and apparatus mounted on a steel framework.

Safety enclosed switchgear of the truck or draw-out type (Figs. 4.113 and 4.114) consists of a steel enclosure mounted on an angle-iron framework. All apparatus which requires attention or inspection is mounted on a truck or draw-out structure. The equipment for each circuit is mounted on either a separate truck, which can easily be rolled out from the rest of the structure, or a metal structure supported on guides so that it can easily be slid in and out from the enclosure (Fig. 4.114).

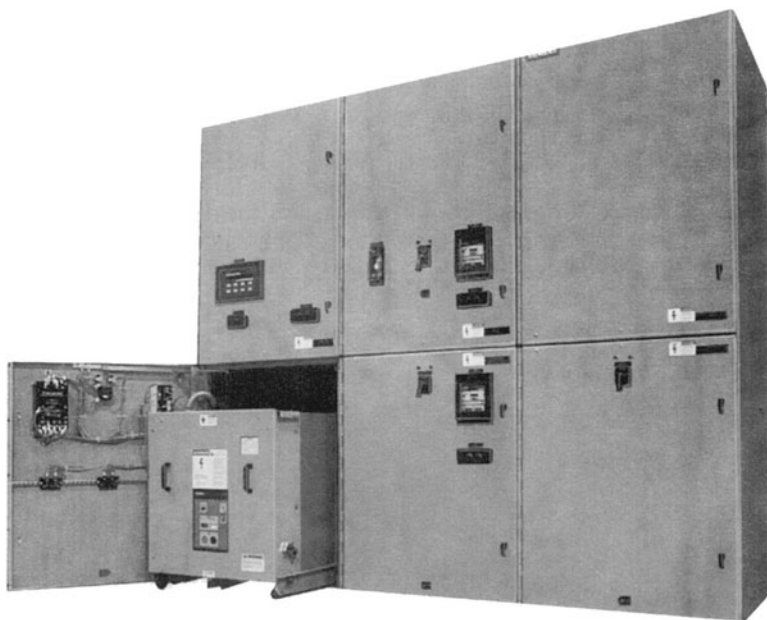


FIGURE 4.113 Draw-out type of safety enclosed vacuum circuit-breaker switchgear assembly. [Siemens Energy & Automation, Inc.]



FIGURE 4.114 Draw-out type of vacuum circuit-breaker. [Siemens Energy & Automation, Inc.]

80. Safety enclosed switchgear may be classified with respect to purpose of application as follows:

1. General medium- or high-voltage switchgear
2. Primary unit substations
3. Rectifier unit substations
4. Secondary unit substations or power centers
5. General low-voltage switchgear
6. Low-voltage distribution switchboards
7. Motor-control-center switchboards

Medium-voltage switchgear (Fig. 4.115) provides for the required control and metering equipment for generators, transformer supply circuits, feeders, large motors, etc., for systems with voltage up to 15,000 V. A large variety of standardized units is available.

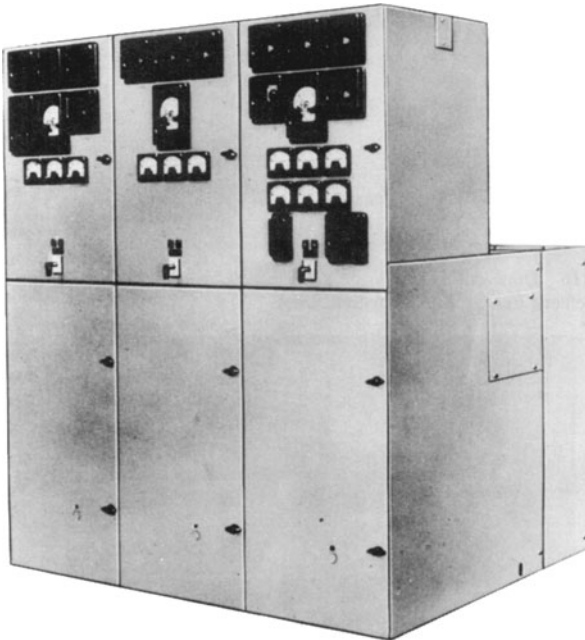


FIGURE 4.115 Medium-voltage metal-enclosed switchgear. [Westinghouse Electric Corp.]

Primary unit substations of the metal-clad type (Figs. 4.116 and 4.117) consist of one or more transformers mechanically and electrically connected to and coordinated with one or more feeder or motor-control sections. A variety of combinations is available in both outdoor and indoor construction.

Rectifier unit substations provide the transforming, rectifying, switching, metering, and control equipment necessary for the conversion of three-phase ac power at any of the conventional voltages to direct current.

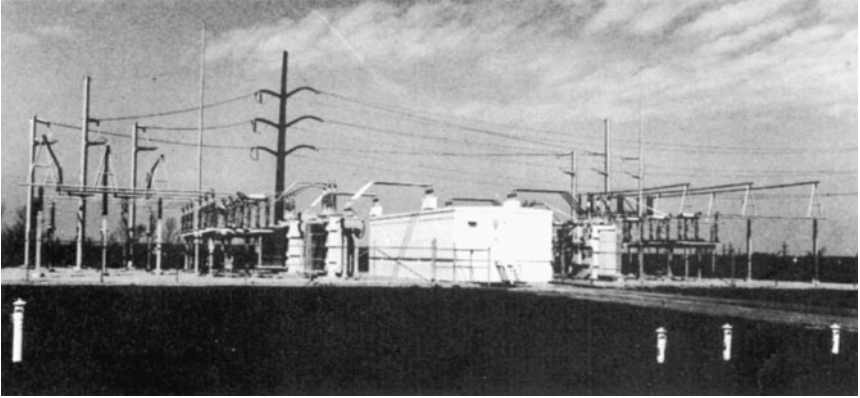


FIGURE 4.116 Installed power-distributing center for a brewery in the northeastern United States.

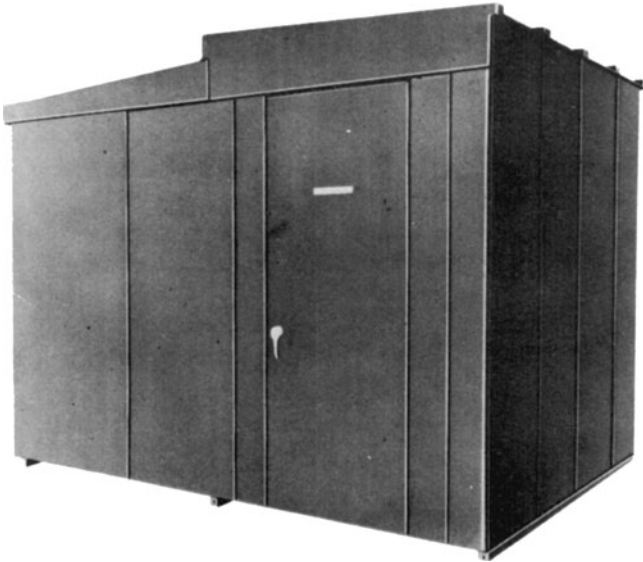


FIGURE 4.117 Outdoor metal-enclosed switchgear. [Westinghouse Electric Corp.]

Secondary unit substations (Fig. 4.118) permit the distribution of power in industrial plants or other large buildings at the higher, more economical voltages and the transformation of the power to the desired utilization voltage at points near the load. They usually consist of three basic types of components: high-voltage (incoming) section, transformer section, and low-voltage (outgoing) sections.

General low-voltage switchgear (Figs. 4.119 and 4.120) provides for the required control and metering equipment for generators, incoming circuits from transformers, feeders, large motors, etc., for systems with voltage not greater than 600 V. A large variety of standardized units is available.

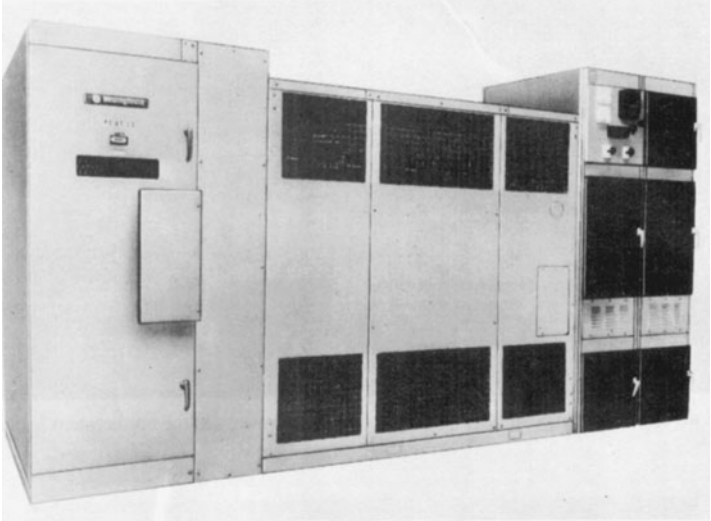


FIGURE 4.118 Secondary unit power center. [Westinghouse Electric Corp.]

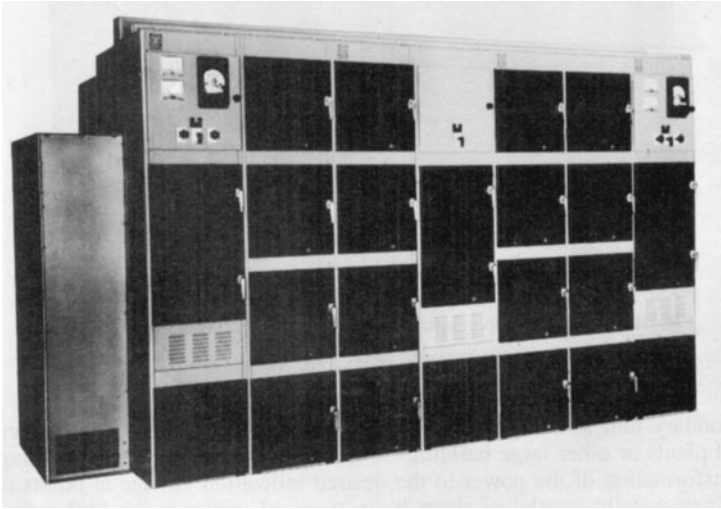


FIGURE 4.119 General-purpose low-voltage switchgear assembly. [Westinghouse Electric Corp.]

Low-voltage distribution switchboards may be of the so-called building type or of the multipurpose type. The building type is specifically designed for the control of low-voltage distribution circuits (600 V and below) in offices, hospitals, and commercial types of buildings. A circuit-breaker type is shown in Fig. 4.121 and a fusible-switch type in Fig. 4.122. Multipurpose distribution switchboards are for general use in commercial or industrial



FIGURE 4.120 Typical low-voltage distribution switchgear assembly. [Siemens Energy & Automation, Inc.]

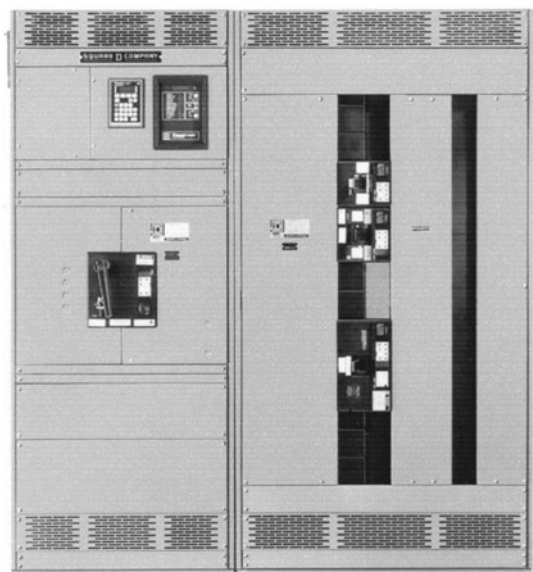


FIGURE 4.121 Power-style distribution switchboard. [Square D, Schneider Electric]



FIGURE 4.122 Power-control-center switchboard. [General Electric Co.]

applications. Typical assemblies are shown in Fig. 4.123, which also indicates the major features of a well-designed modern switchboard.

In general, low-voltage distribution switchboards fall into three distinct NEMA classifications encompassing specific structural features, equipment arrangement, and electrical characteristics, which are noted as follows. Common to all classes are total metal enclosure (except bottom), top or bottom gutter, and vertical sections electrically connected.

Class I. Maximum current limited to 2000 A; group-mounted branches; wall-supported; front accessibility only for line and load connections; flush back.

Class II. No maximum current requirement; group-mounted branches; branches front-accessible only; main bus rear-accessible; self-supported.

Class III. No maximum current requirement; individually mounted branches; branches and mains rear-accessible; self-supported.

Motor-control centers (Fig. 4.124) provide a compact centralized location for full-voltage motor-control equipment. Each compartment contains a magnetic starter with a circuit breaker or a fused switch.

81. Materials employed for the panels of switchboards are slate, marble, ebony-asbestos, and steel. At one time slate was the material principally used for switchboard panels, but it has been almost entirely replaced by ebony-asbestos for live-front boards and by steel for dead-front and safety enclosed ones. Marble is used on live-front



FIGURE 4.123 A modern switchboard with a main disconnect switch and feeder circuit breakers. [Square D, Schneider Electric]



FIGURE 4.124 Motor starter panelboard. [Square D, Schneider Electric]

boards sometimes for its higher insulation qualities over slate but more often for its better appearance.

The supporting frame for panels may be of angle iron or pipe.

82. Location of switchboards. Switchboards of the safety enclosed type may be placed in any nonhazardous location without restriction. Switchboards with exposed live parts must be located in permanently dry locations and only where they will be under competent supervision and accessible only to qualified persons. The rear of a switchboard may be made accessible only to qualified persons by a metal grillwork enclosure, entrance to which is by means of a locked door. Switchboards should be located so as to reduce to a minimum the probability of communicating fire to adjacent easily ignitable material. A clearance of at least 900 mm (3 ft) must be left between the top of a board and a nonfire-proof ceiling unless an adequate fireproof shield is provided between the board and the ceiling or the switchboard is totally enclosed. Refer to Sec. 110.26 of the National Electrical Code for required clearances around switchboards and control centers operating at 600 V and below, and 110.32 to 110.34 for medium voltages.

83. Spacings required by the National Electrical Code. Except at switches and circuit breakers, at least the distance between bare metal parts, busbars, etc., shown in the accompanying table shall be maintained. It should be noted that these distances are the minimum allowable, and it is recommended that greater distances be adopted wherever conditions permit.

	Opposite polarity when mounted on the same surface,		Opposite polarity when held free in air,		Live parts to ground,	
	mm	(in.)	mm	(in.)	mm	(in.) ^a
Not over 125 V	19.1	$\frac{3}{4}$	12.7	$\frac{1}{2}$	12.7	$\frac{1}{2}$
Not over 250 V	31.8	$1\frac{1}{4}$	19.1	$\frac{3}{4}$	12.7	$\frac{1}{2}$
Not over 600 V	50.8	2	25.4	1	25.4	1

^a For spacing between live parts and doors of cabinets, see Sec. 312.11(A) of the NEC.

At switches, enclosed fuses, etc., parts of the same polarity may be placed as close together as convenience in handling will allow unless close proximity causes excessive heating.

84. Busbar Spacings, Minimum Distance between Parts of Opposite Polarity and Minimum Distance between Live Parts and Ground for Different Voltages
(Electrical Engineer's Equipment Co.)

Voltage	Distance between centers of buses, in		Minimum distance between opposite live parts, in		Minimum distance between live parts and ground, in	
	A	B	A	B	A	B
250	$1\frac{1}{2}$	$2\frac{1}{2}$	1	2	$\frac{3}{4}$	$1\frac{1}{2}$
600	2	3	$1\frac{1}{2}$	$2\frac{1}{2}$	1	2
1,100	4	5	$2\frac{1}{2}$	$3\frac{1}{2}$	$1\frac{1}{2}$	$2\frac{1}{2}$
2,300	5	$6\frac{1}{2}$	$2\frac{3}{4}$	4	2	$2\frac{3}{4}$
4,000	6	$7\frac{1}{2}$	3	$4\frac{1}{2}$	$2\frac{1}{4}$	3
6,600	7	8	$3\frac{1}{2}$	$4\frac{1}{2}$	$2\frac{1}{2}$	3
7,500	8	9	4	$4\frac{1}{2}$	$2\frac{3}{4}$	$3\frac{1}{4}$
9,000	9	10	$4\frac{1}{4}$	$4\frac{1}{2}$	3	$3\frac{1}{2}$
11,000	9	11	$4\frac{1}{2}$	$4\frac{3}{4}$	$3\frac{1}{4}$	$3\frac{3}{4}$
13,200	9	12	$4\frac{3}{4}$	5	$3\frac{1}{2}$	$4\frac{1}{4}$
15,000	9	14	5	$5\frac{1}{2}$	$3\frac{3}{4}$	$4\frac{1}{2}$
16,500	10	14	$5\frac{1}{2}$	6	$4\frac{1}{2}$	5
18,000	11	14	6	7	5	6
22,000	12	15	$7\frac{1}{2}$	9	6	7
26,000	14	16	10	12	8	9
35,000	18	22	12	15	10	12
45,000	22	27	16	18	$13\frac{1}{2}$	15
56,000	28	31	$17\frac{1}{2}$	19	16	$17\frac{1}{2}$
66,000	34	38	22	24	$18\frac{1}{2}$	23
75,000	36	42	26	30	25	$27\frac{1}{2}$
90,000	46	54	32	35	27	29
104,000	54	60	$34\frac{1}{2}$	39	$28\frac{1}{2}$	32
110,000	60	72	38	41	33	36
122,000	66	78	42	47	$35\frac{1}{2}$	39
134,000	74	84	$48\frac{1}{2}$	56	39	41
148,000	82	96	59	67	45	50
160,000	88	104	70	84	53	62

NOTE: The distances given in the A columns are based on a safety factor of 3.5 between live parts of opposite polarity and safety factor of 3 between live parts and ground. B column shows good practice for the larger plants. Tubular buses should be used on all buses above 22,000 V. Bus support porcelains should have a wet test of 2 times the voltage used.

PANELBOARDS

85. A panelboard as defined by the National Electrical Code is a single panel or a group of panel units designed for assembly in the form of a single panel; including buses, automatic overcurrent devices, and equipped with or without switches for the control of light, heat, or power circuits, designed to be placed in a cabinet or cutout box placed in or against a wall or partition and accessible only from the front. Panelboards provide a compact and convenient method of grouping circuit switching and protective devices at some common point.

Panelboards may be of either the flush or the surface type (Fig. 4.125). The flush type is used with concealed-wiring installations and has the advantage of not taking up space in the room by extending beyond the surface of the wall. Surface-type boxes are used for installations employing exposed wiring. The boxes are generally constructed of sheet steel, which must be not less than 0.053 in. (1.35 mm) in thickness. The steel must be galvanized or be covered with some other protective coating to prevent corrosion.

Gutters are provided around the panelboards in cabinets to allow sufficient space for wiring (Figs. 4.125 and 4.126). The Code requires that all cabinets which contain connections to more than eight conductors be provided with back or side wiring spaces. These wiring spaces must be defined within the panelboard or other devices in the cabinet by partitions or posts or other permanent methods so that, in combination with the back, sides, and front cover they will be separate closed compartments, unless all wires are led from the cabinet at points directly opposite their terminal connections to the panelboard. The minimum width of gutters required if conductors are deflected upon entering or leaving cabinets is given in Div. 12, Table 33. If the wires enter or leave the enclosure through the wall opposite the terminal, then the increased spacings in Div. 12, Table 34 apply. See Div. 9, Sec. 350 for additional rules and potential exceptions to the increased spacings frequently required in these cases.

A panelboard consists of a set of copper or plated-aluminum busbars, called mains, from which provision is made for tapping off several circuits through overcurrent protective devices and/or switching mechanisms. The provisions for taps generally are built up from unit sections assembled to form the complete board. This plan allows the manufacturers to build a few standard types of unit sections which can be assembled in a great variety of combinations to meet the varying requirements of different installations. This results in economy of manufacture and in the greatest flexibility of possible combinations to meet all requirements. Old-fashioned fusible panelboard construction is illustrated in Fig. 4.126, although the same principles apply to more modern work, and many of the older units are still in use. This figure shows several types of unit sections in the same panelboard to illustrate the flexibility of assembly. Similar panelboards are designed for plug-in or bolt-on circuit breakers or fuse assemblies.

All panelboards have ampere ratings, and such ratings are shown on the name-plate of each panelboard along with the voltage rating. The panelboard ampere rating is the ampacity of the busbars to which the branch overcurrent units are connected.

Main circuit breakers, fused pullouts, or fused switches can be provided in a panelboard. A panelboard without integral main overcurrent protection is called *mains only*,



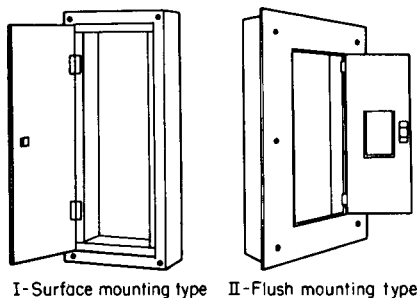


FIGURE 4.125 Panel boxes.

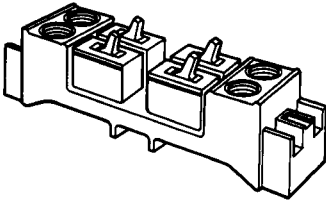1. Galvanized sheet-steel box
2. Panel adjusting screws
3. Galvanized channel irons
4. Removable frame barrier separating wiring gutter from panelboard, simplifying panel adjustments
5. Molded Bakelite end section covering main lugs or neutral bar
6. "Plug fuse only" unit section
7. Branch-circuit terminal screws
8. Single-fusing snap-switch, plug-fuse type of unit section
9. Molded Bakelite section plates
10. Double-fusing, two-pole snap-switch, plug-fuse type of unit section
11. Index numbers for identification of circuits
12. Single-fusing snap-switch, cartridge-fuse type of unit section
13. Wiring gutter
14. Double-fusing, two-pole snap-switch, cartridge-fuse type of unit section
15. Snap switches *entirely* removable from front, each enclosed with an individual Bakelite cover
16. Standard knockout arrangement, usually satisfactory for most installations



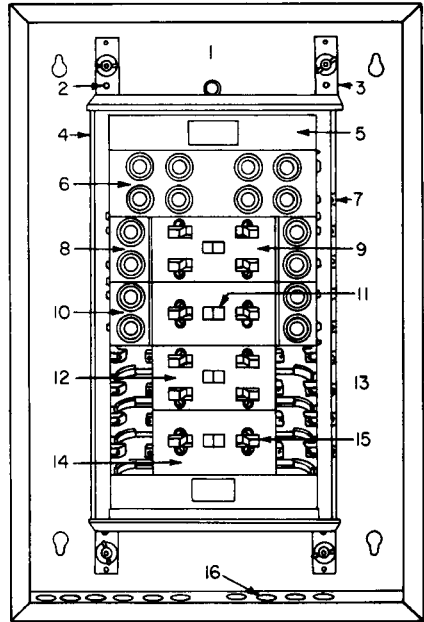I. Unit section of tumbler switches and fuse-plug holders.



II. Panelboard assembly, illustrating flexibility of construction.

FIGURE 4.126 Typical panelboard construction. [General Electric Co.]

which means that the panel has only main lugs. Such panelboards are shown in Figs. 4.127 and 4.128.

If a panelboard supplies wiring installed by nonmetallic methods or any other system which will include equipment grounding conductors in a raceway or cable, a grounding terminal bar must be installed to terminate all such grounding wires. The grounding terminal bar must be bonded to the cabinet. It can be bonded to the *neutral* bar of a panelboard only if the panel is used as service equipment.

To provide a high degree of selectivity and flexibility most panelboards today are designed for insert-type fusible or circuit-breaker assemblies. These assemblies are plugged into or bolted onto "receiver" panel interior busbars. With such an arrangement the installer or designer can select the proper size of overcurrent devices for circuits or feeders. Overcurrent-device assemblies are available in single-, two-, and three-pole units.

In selecting a panelboard for any installation it is good design to provide enough space so that additional overcurrent devices may be inserted at a later date.

It is also wise to use surface-mounted panelboards in areas where surface-type wiring is acceptable. This will enable new raceways or cables to be added with less difficulty.



FIGURE 4.127 Circuit-breaker type of lighting panelboard without main breaker. [Square D, Schneider Electric]



FIGURE 4.128 A 480Y/277-V circuit-breaker lighting panelboard without an integral main breaker. [Square D, Schneider Electric]

If installations require concealed wiring, spare conduits should be stubbed to accessible areas, such as above the lift-out ceiling-panel construction in common use today. In such areas the NEC includes an allowance for running multiple nonmetallic cable assemblies through a vertical riser. This facilitates the use of Type NM cables for light commercial construction; a surface panel can go on the wall at a convenient point with a single large riser conduit stub poked through the suspended ceiling to receive the cables. There are numerous limitations to be observed, but the result may make this approach worthwhile. Specifically, the installation must meet the following conditions:

- a. The cables must have entirely nonmetallic sheaths.
- b. The raceway must enter the top of the cabinet.
- c. The raceway must be nonflexible, such as EMT.
- d. The raceway must be no shorter than 18 in., nor longer than 10 ft.
- e. Every cable entering the raceway end must be secured not over 12 in. from the entry point to the raceway.
- f. The raceway must extend directly above the cabinet.
- g. The raceway must not penetrate a structural ceiling.
- h. The raceway must be equipped with fittings on both ends to protect the cables from abrasion.
- i. The outer raceway end must be sealed or plugged by an approved means to prevent debris from falling into the cabinet. Duct seal is often used for this purpose.
- j. The cables that run to the enclosure must have their sheaths intact through the entire raceway section.
- k. The raceway must be supported in accordance with the rules that apply to the wiring method employed.

- l. The cable-fill limitations must be observed. This means the cables cannot occupy more than 40% of the raceway internal cross-section, and for elliptical cables, the cable cross-section is taken as the area of a circle whose diameter equals the major axis of the ellipse.
- m. The mutual conductor heating rules, as covered in Div. 3 Sec. 97, must be applied. This is perhaps the most problematic constraint, however, if the raceway riser does not exceed 24 in. in length, those rules can be ignored because the raceway now qualifies as a nipple.

Every panelboard should include a circuit legend with a neatly typed and accurate description of the circuits supplied by each overcurrent device. Circuit identification is a National Electrical Code requirement and is extremely useful when troubleshooting, repairs, or additional wiring is required. The 2008 NEC includes very specific rules on this point. The prevalence of modern word processing software (and even circuit directory software) makes compliance with these rules far simpler than previously. All circuit directories must meet the following requirements:

- a. Every circuit must have a directory entry, which must be legible.
- b. Every directory entry must describe a “clear, evident, specific purpose or use.”
- c. Every directory entry must include a sufficient degree of detail to distinguish it from all others. This could include outlet faceplate markings correlated with unique directory entries, such as “receptacle outlets in Room A identified as “Ckt ###”, etc.
- d. No directory entry can use a description that depends on transient conditions of occupancy. For example, terminology such as “Ed’s bedroom” or “Annie’s Hair Salon” must be rejected in favor of handing (left or right), or points of the compass, or the use of a map with room numbers, specific receptacle locations, etc.
- e. Spare overcurrent devices must be identified as such on the circuit directory.
- f. Circuit directories must be posted on the face or inside of the panel door (panelboards) and at each switch on a switchboard.

Many panelboards and attached overcurrent devices contain terminals which are suitable for both copper and aluminum wire terminations. In such cases an AL-CU marking will appear in the panelboard and/or on the overcurrent assemblies. If there is no marking as to what type of conductor material may be attached to terminals, it can be assumed that only copper conductors are suitable. In such cases aluminum wire can still be used by splicing a short length of copper wire to the aluminum connector with a suitable connector, especially in the case of branch-circuit connections.

86. Individual protection for panelboards. For some seventy years, the NEC maintained special rules for a classification of panelboards described as *lighting and appliance branch-circuit panelboards*, however, effective with the 2008 NEC, this classification has been abolished. For example, these panelboards required individual protection in accordance with their busbar ratings, whereas power panels did not require individual protection; now all panelboards require individual protection, but the former NEC limit on the numbers of circuit positions (42) has been deleted. The distinctions were a response to a fire in a New York hotel in the 1930s involving large numbers of rubber-insulated wires in a panel, and no longer had technical validity with today’s wire insulation and panel construction methods. Take care, however, to continue to observe any restrictions the manufacturer places on the intended number of circuit connections, as covered in Sec. 62. These limits continue to be enforceable.

There are exceptions to the individual protection rule, as follows:

1. An existing panelboard with up to six circuit breakers may continue to be used without individual protection provided it is used as service equipment for an individual dwelling unit. Figure 4.131 is an example of one of these old “split-bus” panels.
2. A panelboard with up to six circuit breakers may be installed without individual protection provided it is used as service equipment. In this case, with more than two main breakers installed in a new panelboard, the use of a second bus structure within the panelboard as shown in Fig. 4.131 is now expressly prohibited. In other words, for a new installation the top half of Fig. 4.131 would be permitted, but the second, lower bus structure would be located remotely in a separate main-lug panelboard. This type of arrangement is common in many parts of the country, with an outdoor service panel breaking out major loads and an indoor subpanel supplying the various lighting, small appliance, and receptacle circuits. A panelboard with two main breakers is covered in the next topic.
3. A panelboard with two main breakers, as shown in Fig. 4.129, is still permitted provided it qualifies under the old 42-circuit limitation on numbers of circuits for lighting and appliance branch-circuit panelboards. The combined main breaker ratings must not exceed the panel rating.

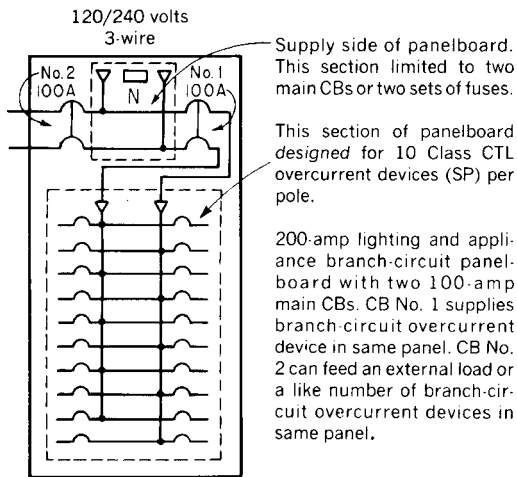


FIGURE 4.129 Typical arrangements of a split-bus lighting panelboard which has two main circuit breakers and Class CTL branch breakers.

Other National Electrical Code provisions which apply to *all* types of panelboards are:

1. Panelboards equipped with snap switches rated 30 A or less, as shown in Fig. 4.126, shall have overcurrent protection not in excess of 200 A. Circuit breakers are not considered snap switches.
2. Panelboards having switches on the load side of any type of fuse shall not be installed except for use as service equipment. In Fig. 4.126 the snap switch is on the line side of the plug fuses and satisfies this Code rule.
3. The individual protection required for panelboards must be located on the load side of any transformer unless the transformer is either a simple two-winding type or a delta-delta

type. For example, a 120/240 V three-wire secondary with a neutral connection, or a 208 Y/120 V four-wire secondary with a neutral connection would not qualify under the exception, and a panelboard connected to the secondary of such a transformer must have its protective device on the secondary side of the transformers. On the other hand, the primary side protection would be acceptable on two-winding or delta-delta connections if it protected the panelboard after considering the transformer winding ratio.

4. Back-fed-type circuit breakers used to supply a panelboard, such as when a main breaker is field added to a main-lug only panelboard to establish individual protection for that panel, must be bolted in place or secured with an additional fastener such that a mere pull

will not release the device from its connection to the busbars. These are available as panelboard accessories from all manufacturers.

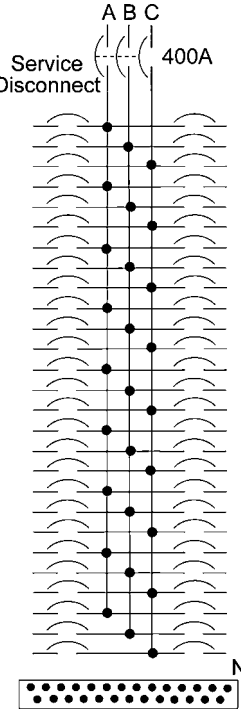


FIGURE 4.130 A 54-circuit panelboard with a main breaker used as a service disconnect. Effective with the 2008 NEC, the former 42-circuit limitation has been discontinued. Panelboards of this size have been available for many years in foreign jurisdictions.

5. Three-phase four-wire delta distributions, as shown in Fig. 4.135, should be separated as shown in that drawing. “Delta breakers” in a single-phase panel are not allowed. At one time, “delta breakers” were used to combine both the three-phase and the single-phase loads from a delta distribution into a single-phase panel with only two phase buses for the line-to-neutral loads. The delta breaker took three circuit positions, but only two of those connections contacted the panel busbars. The third pole position consisted of two terminals, one for the third supply phase and one for the load connection to that phase. These breakers were likely to backfeed voltage from their load connections into the panelboard buswork even when the panel main was off, because the main did not interrupt the third phase.

87. Service-equipment panelboards. Panelboards with a single main overcurrent device used as the service disconnect are extremely common (as in Fig. 4.130 but usually with fewer breaker positions). Panelboards with up to six breakers used as service equipment are covered in the preceding topic, particularly under the second topic covering exceptions to the individual protection rule. Since almost all service equipment installations and modifications are subject to inspection, it is not as necessary to provide individual protection for these panelboards. Downstream panels, however, are very likely to be added to without careful loading calculations and the individual protection requirement applies in these cases.

88. Feeder distribution panels generally contain circuit overcurrent devices rated at more than 30 A to protect *subfeeders* that extend to smaller branch-circuit panelboards. This nomenclature is not recognized in the NEC.

89. Power-distribution panels are similar to the feeder-distribution type. This nomenclature has been discontinued by the NEC effective with the 2008 edition; refer to Sec. 86 for an analysis of panelboard requirements that now apply to all panelboards alike.

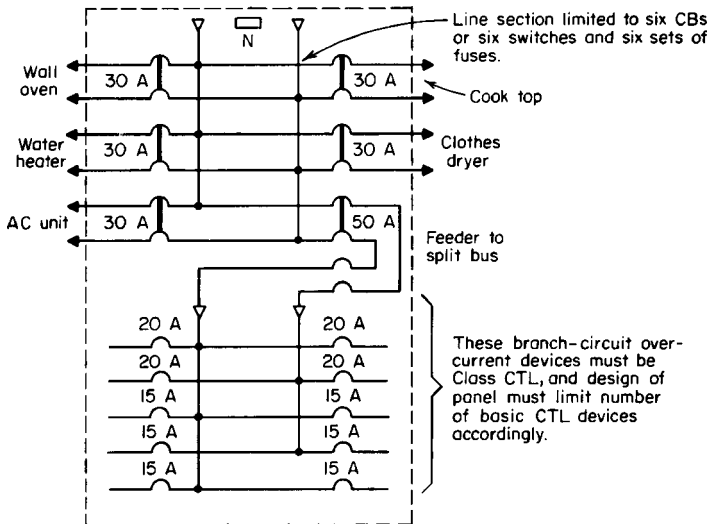


FIGURE 4.131 Suitable arrangement for an existing 200-A lighting panelboard used as service equipment for an individual residential occupancy.

Panelboards formerly described in this way typically have busbars rated up to 1200 A at 600 V or less and contain control and overcurrent devices sized to match connected motor or other power circuit loads. Generally, the devices are three-phase (see Figs. 4.132, 4.133, and 4.134). The discussion in this part of the book now applies to all panelboards.

Figure 4.133 shows a fusible panelboard. It is equipped with Class R (rejection) fuse clips that reject the use of noncurrent-limiting fuses, accepting only those such as illustrated in Fig. 4.70.



FIGURE 4.132 Circuit-breaker type of power-distribution panelboard. [Square D, Schneider Electric]



FIGURE 4.133 Power panelboard with fused-switch units. [Square D, Schneider Electric]

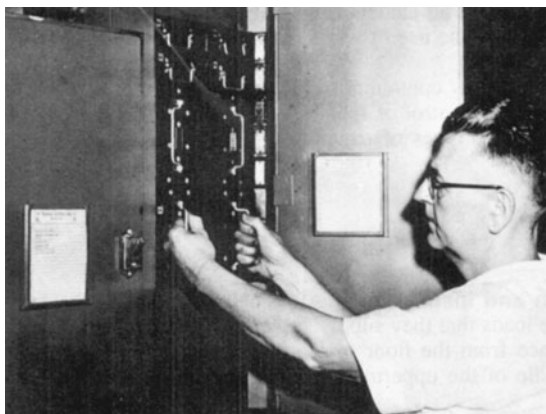


FIGURE 4.134 Converti-fuse power panelboard; fuse-puller switching units.

Special panelboards containing relays and contactors can be obtained and installed when remote control of specific equipment is specified. A thorough knowledge of all available types of panelboards facilitates selection and installation of the proper unit.

90. Location and installation. All panelboards should be located as near as possible to the loads that they supply and control. Mounting heights should be such that the distance from the floor or working level to the center of the grip of the operating handle of the uppermost overcurrent device is not more than 2.0 m (6 ft 7 in.).

Panels to be installed in wet or damp locations, in dust-laden areas, outdoors, or in any hazardous area must be of the type approved for use in such locations.

If qualified persons only are to have access to panelboards, install panel trims with locking-type catches on the doors.

There are several precautions that can simplify panelboard installation, improve workmanship, and produce a neater job. Among them are:

1. Coordinate panelboard cabinet installation with the raceway system, and maintain proper alignment.
2. Align floor-slab conduit stub-ups with openings in the bottom of the cabinets. Maintain alignment during a concrete pour by using interlocking conduit spacer caps or a wood or metal template. This is exceptionally important when the cabinet is to be surface-mounted.
3. Cabinet knockouts should be properly sized and spaced to match feeder and branch-circuit raceway layouts. Most often the standard prestamped single and/or multiple-concentric cabinet knockouts are used. On some installations, however, it is best to order blank enclosures and cut the required knockouts at the jobsite.
4. If cabinets are to be installed flush in a wall, provide temporary anchoring facilities to position the cabinet securely until the wall is constructed. Enclosures supported only by conduit attachments often are knocked out of alignment.
5. Surface-mounted panelboard enclosures should be securely fastened to the wall or other structural surface. In the case of large, heavy panelboards, the addition of supplementary pedestals or “legs” (structural-steel or pipe sections with floor flanges) will increase rigidity and help distribute the weight.

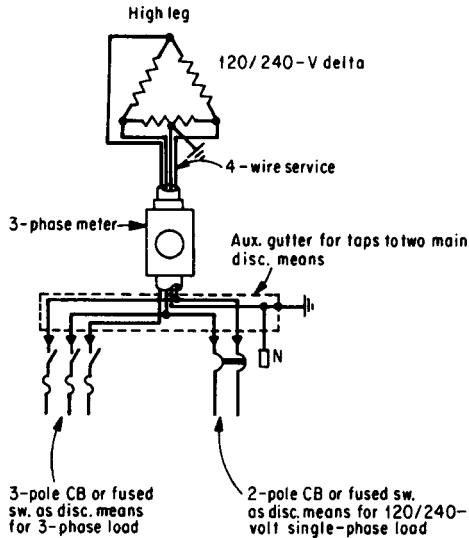


FIGURE 4.135 An effective way of separating single- and three-phase loads of four-wire delta supplies.

6. If a number of panelboard enclosures are to be mounted side by side, the addition of a suitably sized auxiliary gutter, wiring trough, or pull box in between, above, or below the grouped cabinets will facilitate cable pulling and circuit installation. A typical installation is shown in Fig. 4.135. In many cases, it will eliminate the need for oversize cabinets to accommodate the required conductors. Section 312.8 of the National Electrical Code definitely prohibits the use of enclosures for switches and overcurrent devices (and this includes panelboard cabinets) as a feedthrough or splicing gutter for conductors unless the enclosure has been designed to provide adequate space for this.

GENERAL WIRING MATERIALS AND DEVICES

91. Insulators of various types are employed for interior-wiring work when the conductors are not installed in raceways. The more common types may be classified as knobs, cleats, tubes, crane insulators, and rack insulators. The accompanying sections and illustrations give data on many standard types. Insulators for outdoor and underground installations are discussed in Div. 8.

Split knobs are shown in Figs. 4.136 and 4.137. Those of Fig. 4.136 are factory-assembled with a supporting nail or screw. Various standard types of solid-knob insulators are shown in Fig. 4.138. Standard types of rack

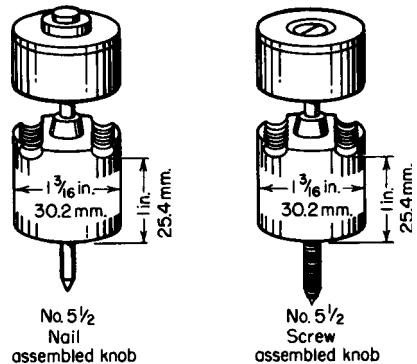


FIGURE 4.136 Assembled wiring knobs for No. 12 to No. 14 wire.

Diameters	Tube size (see Sec. 96)															
	$\frac{3}{16}$	$\frac{1}{4}$	$\frac{5}{16}$	$\frac{3}{8}$	$\frac{1}{2}$	$\frac{5}{8}$	1	1 $\frac{1}{4}$	1 $\frac{1}{2}$	1 $\frac{3}{4}$	2	2 $\frac{1}{2}$	3	3 $\frac{1}{2}$	4	4 $\frac{1}{2}$
Outside diameter, in	$\frac{3}{16}$	$\frac{1}{4}$	$\frac{5}{16}$	$\frac{3}{8}$	$\frac{1}{2}$	$\frac{5}{8}$	1	1 $\frac{1}{4}$	1 $\frac{1}{2}$	1 $\frac{3}{4}$	2	2 $\frac{1}{2}$	3	3 $\frac{1}{2}$	4	4 $\frac{1}{2}$
Outside diameter, mm	14.3	17.5	20.6	23.8	30.2	36.5	46.1	55.6	65.1	74.6	84.1	93.7	108	114	108	114
Inside diameter, in	$\frac{3}{16}$	$\frac{1}{4}$	$\frac{5}{16}$	$\frac{3}{8}$	$\frac{1}{2}$	$\frac{5}{8}$	1	1 $\frac{1}{4}$	1 $\frac{1}{2}$	1 $\frac{3}{4}$	2	2 $\frac{1}{2}$	3	3 $\frac{1}{2}$	4	4 $\frac{1}{2}$
Inside diameter, mm	7.9	9.5	12.7	15.9	19.1	25.4	31.7	38.1	44.5	50.8	57.1	63.5	69.8	76.2	76.2	76.2

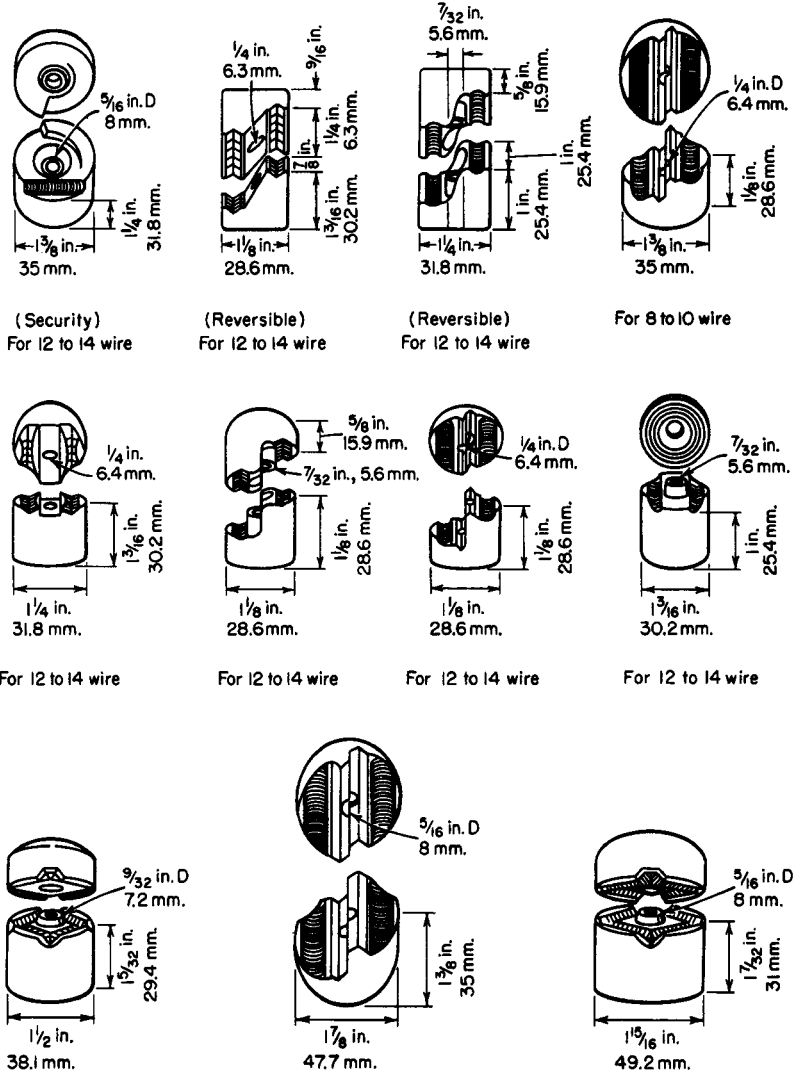


FIGURE 4.137 Split knobs.

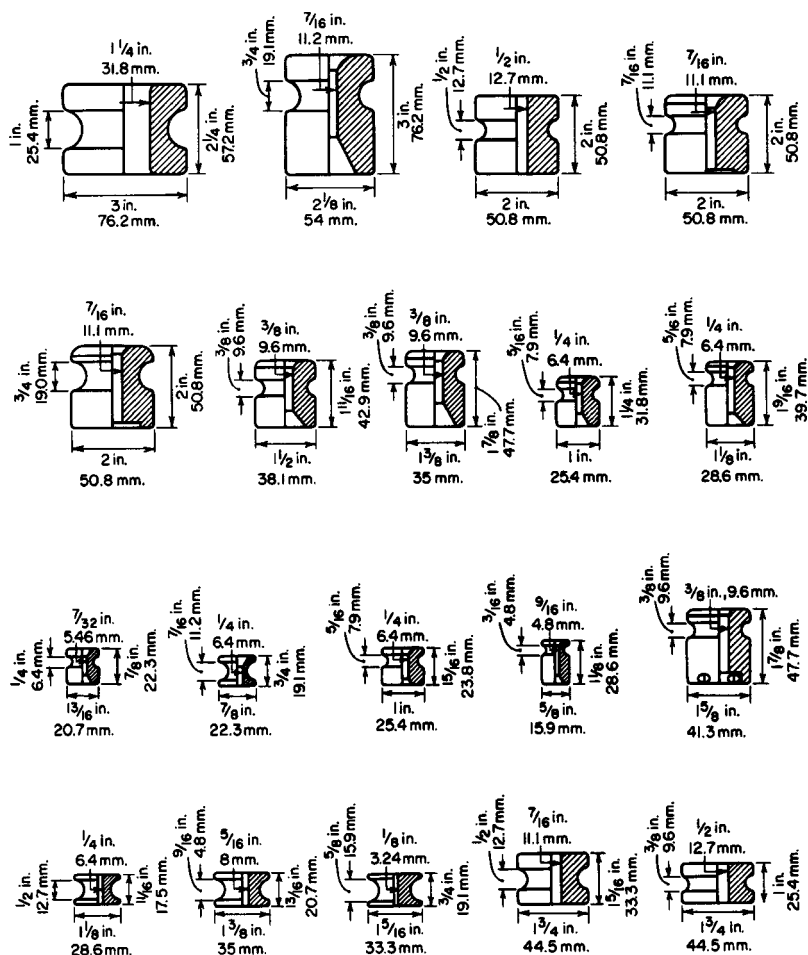


FIGURE 4.138 Standard types of solid-knob insulators.

insulators are shown in Fig. 4.139. Standard wire cleats are shown in Figs. 4.140 and 4.141. Crane insulators are shown in Fig. 4.142. All these insulators are made of porcelain.

92. Wire Table for Single-Wire Cleats^a

(Knox Porcelain Corp.)

AWG or cmil Size of Wire Received	Catalog Numbers
14-8	1
6-5	1 ¹ / ₂ -2
1/0-2/0	2 ¹ / ₂
2/0-4/0	3
4/0-300 MCM	3 ¹ / ₂
300-500 MCM	4

^aSee Fig. 4.141

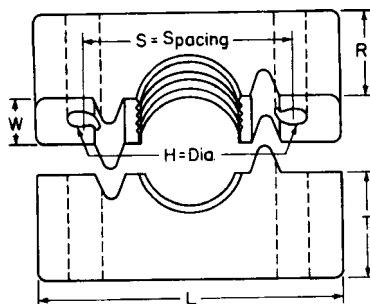


FIGURE 4.141 Single-wire cleats (see Sec. 92).

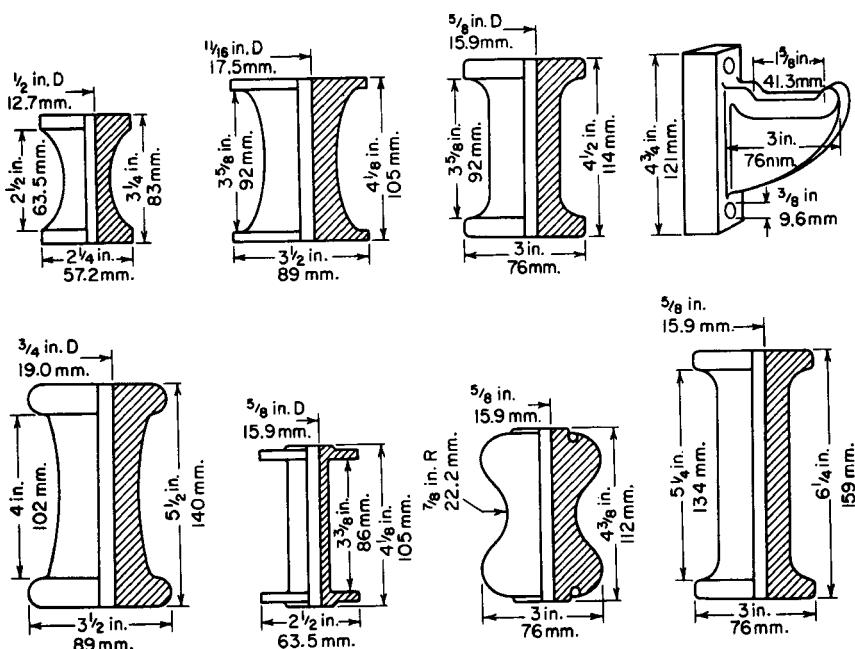


FIGURE 4.142 Crane insulators.

93. Use of screws or nails with split knobs. Nails hold better than screws in certain woods. The breaking of knobs at the time of putting them up with screws is not the only source of trouble, for the binding tension applied often acts to crack the knob a considerable time after it has been put in place. It is an objectionable practice of many wire installers in putting up knobs with screws to drive the screws in nearly all the way with a hammer, giving them only a couple of turns with a screwdriver to tighten them. The principal argument in favor of the use of nails is the resulting great saving of the installers' time as compared with the time required for putting in screws. The insulating value of the two constructions is practically the same.



FIGURE 4.143 Insulated cable rack. [Westinghouse Electric Corp.]

three, and four cables and can be supplied with insulator openings of inside diameters ranging from $\frac{3}{16}$ to 3 in (4.8 to 76.2 mm). The diameters vary by $\frac{1}{16}$ in (1.6 mm) from $\frac{3}{16}$ - to $\frac{5}{8}$ -in (4.8- to 15.9-mm) sizes and by $\frac{1}{8}$ in (3.2 mm) from $\frac{5}{8}$ - to 3-in (3.2- to 76.2-mm) sizes.

95. Universal insulator supports (Fig. 4.144) are malleable-iron clamps fitted with cup-pointed, core-hardened steel setscrews for securing porcelain and glass insulators to exposed steel framework.

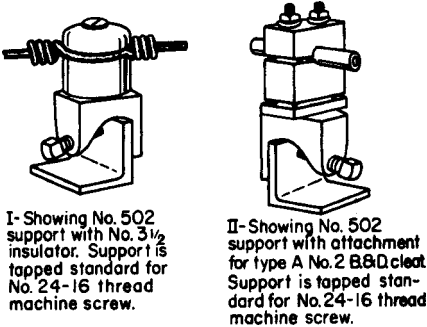


FIGURE 4.144 Universal insulator supports. [Steel City Division of Midland-Ross Corp.]

96. Porcelain tubes are made in three types: standard solid tube, split tube, and floor tube. The standard lengths, as indicated by the L dimension in Fig. 4.145, are $\frac{1}{2}$, 1, $1\frac{1}{2}$, 2, $2\frac{1}{2}$, 3, 4, 5, 6, 8, 10, 12, 14, 16, 18, 20, 22, and 24 in (12.7, 25.4, 38.1, 50.8, 63.5, 76.2, 101.6, 127.0, 152.4, 203.2, 254.0, 304.8, 355.6, 406.4, 457.2, 508.0, 558.8, and 609.6 mm). The diameters are given in Sec. 97.

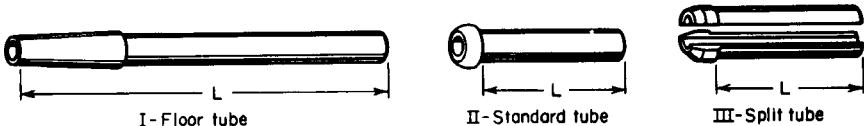


FIGURE 4.145 Porcelain insulating tubes.

97. Tube Diameters

Diameters	Tube size (see Sec. 96)													
	5/16	3/8	1/2	5/8	3/4	1	1 1/4	1 1/2	1 3/4	2	2 1/4	2 1/2	2 3/4	3
Outside diameter, in	9/16	11/16	13/16	15/16	13/16	17/16	13/16	23/16	29/16	215/16	35/16	311/16	41/4	41/2
Outside diameter, mm	14.3	17.5	20.6	23.8	30.2	36.5	46.1	55.6	65.1	74.6	84.1	93.7	108	114
Inside diameter, in	5/16	3/8	1/2	5/8	3/4	1	1 1/4	1 1/2	1 3/4	2	2 1/4	2 1/2	2 3/4	3
Inside diameter, mm	7.9	9.5	12.7	15.9	19.1	25.4	31.7	38.1	44.5	50.8	57.1	63.5	69.8	76.2

98. Receptacles and caps or plugs are wiring devices for the purpose of providing a convenient means of attaching cord-and-plug-connected appliances or equipment. See Figs. 4.146 and 4.147. Such devices are available in a wide variety of voltage (600 V or less) and ampere ratings (10 to 400 A). The two broad classifications are grounding and non-grounded types.

The National Electrical Code requires all 15- and 20-A receptacles to be grounding types, and nongrounding-type receptacles can be used only for replacement purposes. Because millions of nongrounding-type receptacles were installed before the Code rule which required grounding types, it was obvious that nongrounding types would have to continue to be manufactured for replacement purposes. Also, because many existing receptacle outlets are not grounded, the Code states that grounding-type receptacles shall not replace nongrounding-type receptacles unless the receptacle outlets are properly grounded. The reason for this rule is to prevent a false sense of security that would exist if a grounding-type receptacle were attached to an existing outlet with no ground connection


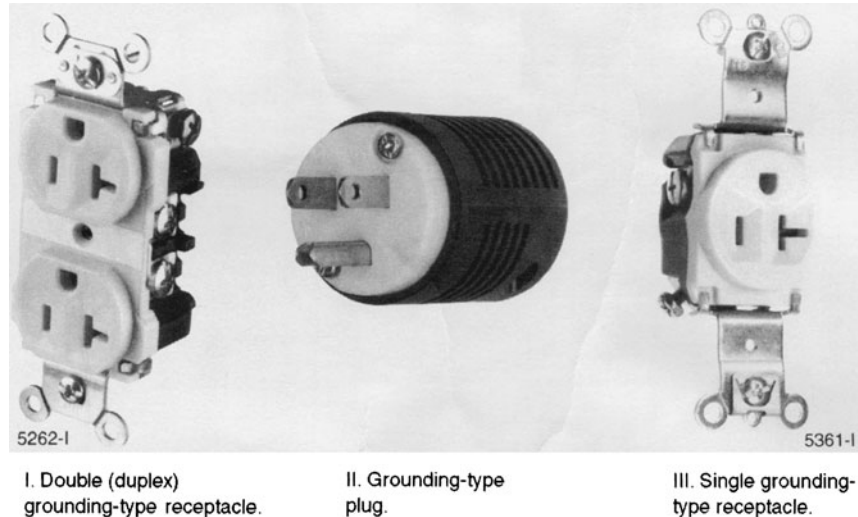


FIGURE 4.146 Grounding-type receptacles and plugs, 125 V, 15 A. [Pass & Seymour, Inc.]

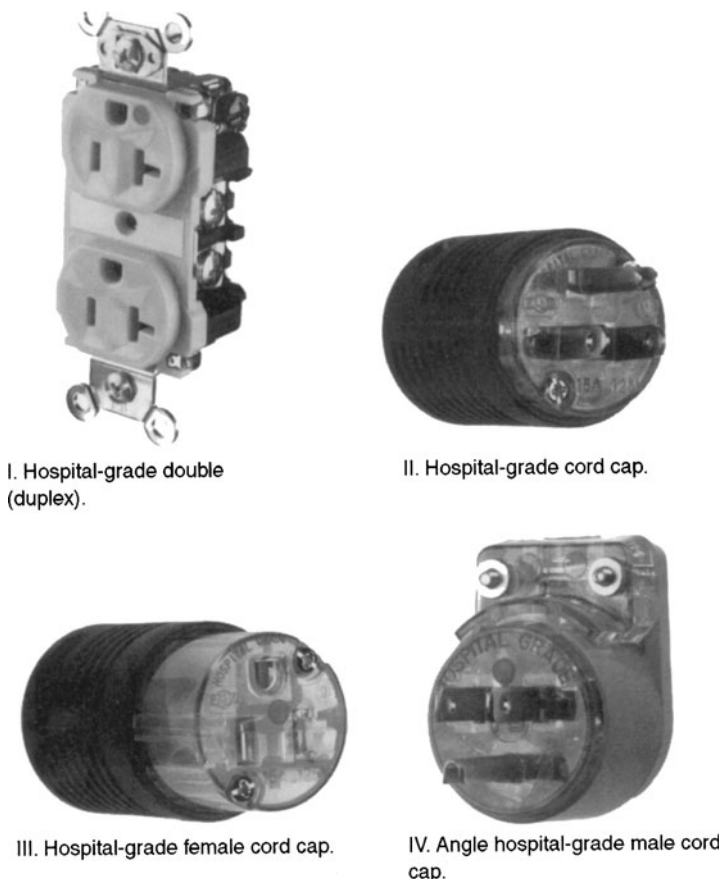

I. Hospital-grade double (duplex).

II. Hospital-grade cord cap.

III. Hospital-grade female cord cap.

IV. Angle hospital-grade male cord cap.

FIGURE 4.147 Hospital-grade grounding-type receptacles and plugs. [Pass & Seymour, Inc.]

to the grounding terminal of the receptacle. Ground-fault circuit-interrupter (GFCI) receptacles may be used to replace nongrounding receptacles without the necessity of providing grounding conductors and these receptacles shall be marked “No Equipment Ground.” Existing nongrounding-type receptacles shall be permitted to be replaced with grounding-type receptacles where supplied through a GFCI receptacle, and the receptacles shall be marked “GFCI Protected” and “No Equipment Ground.”

Another significant development concerning receptacles is a National Electrical Code rule which states: “*Grounding-type* receptacles shall be installed only on circuits of *voltage class and current* for which they are rated.” Figures 4.148 and 4.149 list the various receptacles and caps for general-purpose nonlocking and locking types.

The nonlocking-type plug-and-receptacle configurations shown in Fig. 4.148 include both grounding and nongrounding types. Current ratings are 15 to 60 A, and voltage ratings range from 125 to 600 V and two-pole, two-wire to four-pole, five-wire.

		15 AMPERE		20 AMPERE		30 AMPERE		50 AMPERE		60 AMPERE	
		RECEPTACLE	PLUG	RECEPTACLE	PLUG	RECEPTACLE	PLUG	RECEPTACLE	PLUG	RECEPTACLE	PLUG
2-POLE 2-WIRE	1	125 V	1-15R	1-15P		1-20P		1-30P			
	2	250 V		2-15P	2-20R	2-20P	2-30R	2-30P			
	3	277 V				(RESERVED FOR FUTURE CONFIGURATIONS)					
	4	600 V				(RESERVED FOR FUTURE CONFIGURATIONS)					
2-POLE 3-WIRE GROUNDING	5	125 V	3-15R	3-15P	3-20R	3-20P	3-30R	3-30P	3-50R	3-50P	
	6	250 V	6-15R	6-15P	6-20R	6-20P	6-30R	6-30P	6-50R	6-60P	
	7	277 V AC	7-15R	7-15P	7-20R	7-20P	7-30R	7-30P	7-50R	7-50P	
	8	247 V AC	24-15R	24-15P	24-20R	24-20P	24-30R	24-30P	24-50R	24-50P	
	9	480 V AC				(RESERVED FOR FUTURE CONFIGURATIONS)					
	10	600 V AC				(RESERVED FOR FUTURE CONFIGURATIONS)					
	11	125/250 V			10-20R	10-20P	10-30R	10-30P	10-50R	10-60P	
	12	3 ϕ 250 V	11-15R	11-15P	11-20R	11-20P	11-30R	11-30P	11-50R	11-60P	
	13	3 ϕ 480 V				(RESERVED FOR FUTURE CONFIGURATIONS)					
	14	3 ϕ 600 V				(RESERVED FOR FUTURE CONFIGURATIONS)					
3-POLE 4-WIRE GROUNDING	15	125/250 V	14-15R	14-15P	14-20R	14-20P	14-30R	14-30P	14-50R	14-60P	14-60P
	16	250 V	15-15R	15-15P	15-20R	15-20P	15-30R	15-30P	15-50R	15-60R	15-60P
	17	3 ϕ 480 V				(RESERVED FOR FUTURE CONFIGURATIONS)					
	18	3 ϕ 600 V				(RESERVED FOR FUTURE CONFIGURATIONS)					
	19	208/120 V	18-15R	18-15P	18-20R	18-20P	18-30R	18-30P	18-50R	18-60R	18-60P
4-POLE 4-WIRE	20	480Y/277 V				(RESERVED FOR FUTURE CONFIGURATIONS)					
	21	3 ϕ 600Y/347 V				(RESERVED FOR FUTURE CONFIGURATIONS)					
	22	208Y/120 V				(RESERVED FOR FUTURE CONFIGURATIONS)					
	23	3 ϕ 480Y/277 V				(RESERVED FOR FUTURE CONFIGURATIONS)					
4-POLE 3-WIRE GROUNDING	24	208Y/120 V				(RESERVED FOR FUTURE CONFIGURATIONS)					
	25	3 ϕ 480Y/277 V				(RESERVED FOR FUTURE CONFIGURATIONS)					

FIGURE 4.148 National Electrical Manufacturers Association configurations for general-purpose nonlocking plugs and receptacles. [This figure is reproduced by permission from NEMA WD 6-1988, "General-Purpose Wiring Devices."]







































































































































			15 AMPERE		20 AMPERE		30 AMPERE		50 AMPERE		60 AMPERE	
			RECEPTACLE	PLUG	RECEPTACLE	PLUG	RECEPTACLE	PLUG	RECEPTACLE	PLUG	RECEPTACLE	PLUG
3-POLE 2-WIRE	125 V	L1										
	250 V	L2										
	277 V AC	L3	F	U	T	U	R	E				
	600 V	L4	F	U	T	U	R	E				
3-POLE 3-WIRE GROUNDING	125 V	L5										
	250 V	L6										
	277 V AC	L7										
	347 V AC	L24										
	480 V AC	L8										
	600 V AC	L9										
3-POLE 3-WIRE	125/250 V	L10										
	3φ 250 V	L11										
	3φ 480 V	L12										
	3φ 600 V	L13										
3-POLE 4-WIRE GROUNDING	125/250 V	L14										
	3φ 250 V	L15										
	3φ 480 V	L16										
	3φ 600 V	L17										
4-POLE 3-WIRE	3φ 208Y/120 V	L18										
	3φ 480Y/277 V	L19										
	3φ 600Y/347 V	L20										
4-POLE 3-WIRE GROUNDING	3φ 208Y/120 V	L21										
	3φ 480Y/277 V	L22										
	3φ 600Y/347 V	L23										

FIGURE 4.149 National Electrical Manufacturers Association configurations for locking-type plugs and receptacles. [This figure is reproduced by permission from NEMA WD 6-1988, "Specific-Purpose Wiring Devices."]

Figure 4.149 shows the receptacle-and-plug configurations for locking types, in ratings of 15, 20, and 30 A at 125 to 600 V, two-pole, two-wire to four-pole, five-wire.

Figures 4.148 and 4.149 are the configurations adopted by ANSI and NEMA; these configurations satisfy the National Electrical Code rule which calls for specific voltage and current ratings for all grounding-type receptacles. Also, these configurations are designed so that lower-voltage-rated receptacle caps cannot be inserted into receptacles supplied at higher voltages. This plan also achieves a high degree of standardization so that manufacturers of cord-and-plug-equipped apparatus can provide standard plug caps for such equipment and be reasonably assured that installers will provide a matching receptacle for a given current and voltage class.

Another significant advantage of the NEMA configurations is the wide selection of receptacles to allow different configurations on the same installation if several different voltages, classes of current (ac or dc), or different frequencies are used. In such cases, maintenance personnel usually install plug caps to match specific receptacle configurations.

99. Construction features of receptacles. In many smaller ratings, such as 15 A, 125 V, receptacles are available with single-wipe or double-wipe contacts to receive plug caps. The single-wipe contact is in contact on only one side of the blade of an inserted plug cap. The other side of the plug-cap blade is wedged against a non-current-carrying part of the receptacle. With double-wipe contacts *both sides* of a plug-cap blade are in contact with the receiving part of the receptacle when inserted, and this ensures better contact. Better-grade receptacles have double-wipe contacts, and they should be used whenever possible to avoid early failures or loose connections when plug caps are inserted frequently.

In general, smaller receptacles (15 or 20 A) use binding screws, recessed pressure-locking terminals, or a combination of both as a means of connecting supply wires. With binding screws, supply wires are skinned and wrapped around the screw in a *clockwise* direction. Since the screw is tightened in a clockwise position, this ensures a secure connection. Never fasten a wire around a binding screw in a counterclockwise direction because a poor connection will result when the binding screw is tightened.

The pressure-locking terminals are recessed inside the receptacles. The supply wires are simply skinned about $\frac{1}{2}$ in. (12.7 mm) and are then pushed through a hole (usually in the rear of the receptacle) into the pressure-locking contact. As the wire is inserted, the spring-held contact separates, and when the wire is pushed all the way in, it is firmly gripped. These devices are now limited to 14 AWG conductors; 12 AWG wiring, such as for kitchen receptacles, must be backwired on binding screws.

Some receptacles contain binding screws and pressure-locking terminals so that an installer can select either method of connection. It should be noted that the only type of terminal suitable for the termination of aluminum wire at a receptacle (15- or 20-A) is the binding-screw type marked CO/ALR. The highest quality receptacles have rear connections, but instead of a push-in connection, the receptacles have an internal binding clamp that compresses the inserted conductor as the side binding screw is tightened. These connections are particularly helpful and reliable when the branch-circuit wiring consists of stranded wire, particularly the Class C concentric stranding (19-strand as covered in Div. 2, Sec. 91) that is very common today. The clamp arrangement makes it almost impossible for a strand to escape the terminal and create a short circuit or ground fault at some future time.

Receptacles 30 A or larger generally have *setscrew* terminals, and in such cases the terminals will be marked. AL-CU if suitable for the connection of aluminum conductors. If there is no such marking, it can be assumed that only copper wire connections are permitted.

A class of receptacles has been developed for hospital use. These devices are subjected to more severe damage tests than conventional receptacles. They are identified by the

marking “hospital grade” and by a green dot on the face of the receptacle. These receptacles are for use in nonhazardous locations in health care facilities. The see-through construction of the plugs permits visual inspection of the connections. A special form of hospital grade receptacle is the *tamper-resistant* type, which has been mandatory in pediatric wards of hospitals since the 1981 NEC. These receptacles incorporate an internal shutter mechanism that prevents access to the energized receptacle contacts unless both straight-blade slots are engaged simultaneously.

These *tamper-resistant* receptacles are now (effective with the 2008 NEC) mandatory for new construction for all dwelling unit receptacles installed to comply with the receptacle placement requirements for dwelling units generally. This is virtually every 15- and 20-A 125-V receptacle installed at a dwelling. To meet this greatly broadened requirement, receptacle manufacturers now have residential-grade product lines available.

Receptacles installed in damp or wet locations may deteriorate both due to moisture and the resulting corrosion, and also due to ultraviolet light exposure to the receptacle face if the exposure is outdoors. *Weather-resistant* receptacles are designed to meet this problem, and they are now mandatory for all 15- and 20-A, 125- and 250-V configurations installed in either damp or wet locations. For a dwelling unit, an outdoor receptacle would therefore need to be rated both *weather resistant* (usually marked “WR”) and *tamper resistant*.

Figure 4.150 depicts a method of isolating the equipment-grounding conductor from the yoke of the receptacle. Electronic equipment frequently picks up radio-frequency interference and transient signals through the conventionally grounded system. The complicated circuitry of medical and communication systems is particularly susceptible to transient signals of a very low magnitude. The NEC permits the grounding terminals of receptacles to be isolated from the yoke so that a conductor may be run directly to the grounding-electrode connection in the service equipment. Receptacles with an isolated ground shall be appropriately

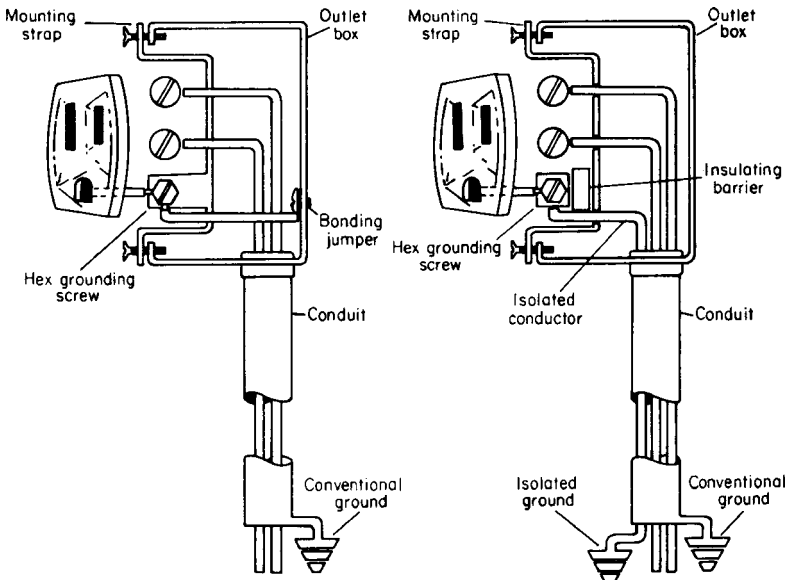


FIGURE 4.150 A standard receptacle and an isolating receptacle with the grounding conductor isolated from the yoke of the receptacle. [Pass & Seymour, Inc.]

identified using an orange triangle on the face. Although such receptacles most commonly have an entirely orange face, the only requirement is the triangle, and these receptacles are available with the orange triangle applied to a variety of receptacle colors.

A GFCI switch to feed receptacles and other loads is shown in Fig. 4.151. This device is very useful when GFCI protection must be arranged at a location where a receptacle outlet is not permitted or desired. Ground-fault circuit interrupters for receptacles are required on construction sites; in bathrooms, grade level portions of unfinished accessory buildings used for storage or work areas and garages, crawl spaces, unfinished basements, and outdoor receptacles of dwellings; and within 6 ft of wet bar sinks and receptacles to serve kitchen countertop surfaces. GFCI protection for 125-V, single-phase, 15- and 20-receptacles are required for bathrooms and rooftops of buildings other than dwelling units. Trip units are set at 5 mA and will clear as fast as 25/1000 s. These GFCI receptacles are equipped with a reset button if the unit should trip and a test button that should be used monthly to ensure proper operation of the GFCI. The receptacles may be obtained with a feed-through feature to protect other downstream receptacles. Should a leakage current of 5 mA occur from either phase conductor to ground, the shunt trip will energize and disconnect the receptacle from the circuit. However, line-to-line leakage will not affect the GFCI receptacle trip unit.

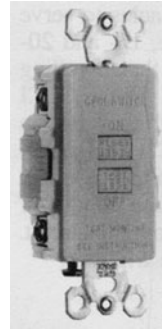


FIGURE 4.151 Class A ground-fault circuit interrupter to feed receptacles or a swimming pool. [Pass & Seymour, Inc.]

100. Split-bus receptacles. In the 125-V, 15- or 20-A sizes, parallel-blade-type duplex receptacles are available with break-off jumpers or links so that one or both sides of the receptacles can be separated to avoid feed-through connections. With such receptacles it is common practice to break the connection on only one side of the receptacle that contains the screw connections for the ungrounded circuit conductors. With this connection separated, each half of the duplex receptacle can be connected to a different circuit or switch, or one-half of the receptacle can be controlled by a switch while the other half remains energized at 120 V continuously.

The break-off link on the other side is broken only when two separate circuits are required, particularly when these circuits are *not* three-wire, 120/240 V. Some receptacles with pressure-locking terminals have break-off features also. Be aware, however, that the NEC now requires that a means to simultaneously disconnect all ungrounded conductors arriving at a common yoke must be provided at the panelboard. This could be a multipole circuit breaker or a multipole switch installed adjacent to a fusible panelboard. This common disconnect rule applies to any combination of devices on a single yoke, including a snap switch on the same yoke as a receptacle, and other combinations including field-arranged interchangeable devices covered below.

101. Interchangeable line. Receptacles for use in the interchangeable line are available in 15- and 20-A two-pole, two-wire and two-pole, three-wire. One such type rated at 15-A 125-V two-pole, two-wire is shown in Fig. 4.41, along with other interchangeable devices. For new installations such a receptacle would have to be a two-pole, three-wire, grounding type.

102. Special four-pole, five-wire receptacles. Harvey Hubbell, Inc., has developed a line of five-wire receptacles and caps, rated at 30 A, 250 V ac, dc, or 600 V ac, which retain the advantages of locking-type receptacles. These receptacles are available in eight noninterchangeable center-pin and slot configurations as illustrated in Fig. 4.152. This permits a user to designate one configuration for one voltage, amperage, and/or frequency; a different configuration for a different voltage, amperage, and/or frequency; and so on. Such a system prevents the connection of equipment into the wrong source of power.

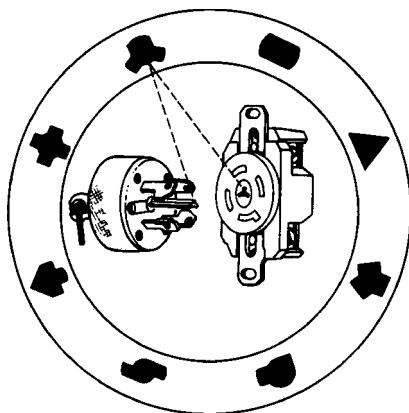


FIGURE 4.152 Noninterchangeable center-pin and slot configurations permit the use of eight differently rated circuits. [Harvey Hubbell, Inc.]

103. Heavy-duty industrial receptacles. Figure 4.153 shows a typical heavy-duty industrial receptacle and a corresponding plug which are available in “pin and sleeve” configurations in ratings up to 400 A at 600 V ac. The devices shown in Fig. 4.153 are five-pole, four-wire and are rated at 60 A, 250 V dc, 600 V ac. The receptacle contains a spring door which closes the plug opening when the plug is removed. Such covers are recommended in many industrial applications to prevent the entry of water, dirt, or dust.



FIGURE 4.153 Heavy-duty industrial receptacle and mating plug. [Crouse Hinds Co.]

104. Range and clothes-dryer receptacles. Figure 4.154 shows three-pole four-wire flush- and surface-mounted range receptacles rated at 250 V ac, 50 A. The three-wire receptacles are only permitted for existing branch-circuit installations. All new installations require a four-wire configuration so that an equipment grounding conductor will be used to ground the frames of ranges and dryers. This crowfoot configuration was commonly used for connecting cord-and-plug-equipped 115/230-V household electric ranges in which the neutral conductor is used to ground the frame of the range. A similar receptacle, rated 30 A, is used for the connection of cord-and-plug-equipped electric clothes dryers of 5.5 kW or less at 115/230 or 120/208 V. The major difference is that the neutral pole is an L shape.



FIGURE 4.154 50-A range outlets. [Pass & Seymour, Inc.]

105. Special receptacle housings are available for receptacles installed outdoors, in hazardous locations, or for other applications in which receptacles must be protected from weather elements, contaminants, or hazardous concentrations of flammable gases, liquids, or dust.

106. A box must be installed at each outlet, switch, or junction point for all wiring installations except for exposed wiring on insulators or cable. An outlet is any point in a wiring system where current is taken for supplying fixtures, lamps, heaters, or any other current-consuming equipment. The boxes must be constructed of metal except for open wiring on insulators, concealed knob-and-tube work, or other nonmetallic wiring methods. In these installations boxes made of insulating material can be used (see Div. 9). Boxes used in interior-wiring work may be classified as outlet, utility, sectional switch, and floor boxes. Utility boxes are designed principally for exposed wiring. Conduit fittings (see Div. 9) are used at the outlets for many exposed-conduit wiring installations. Sectionalized device boxes are used in concealed wiring if they are not embedded in masonry structure. Floor boxes are used for making outlets in floors from conduit wiring systems. Boxes are made of No. 10 to No. 14 gage sheet steel. The surfaces are galvanized. Galvanized boxes will resist corrosion and preserve the electrical conductivity of the raceway system. The different types of boxes are illustrated in Sec. 113 with the dimensions in which they are most commonly available.

107. Box accessories consist of support brackets or ears, studs, cable clamps, and covers. Many boxes are equipped with some form of mounting bracket or with mounting ears. Some of the available types of supporting brackets are shown in Table 111. Standard

mounting ears for the support of device boxes are shown in Table 117 along with other methods of supporting sectional device boxes. Many boxes are provided with fixture studs for the support of a fixture which receives its electrical supply through the outlet box. Boxes are often equipped with clamps for attaching armored cable or nonmetallic-sheathed cable to the box. Different types of clamps are shown in Table 112.

108. Covers for outlet boxes are made in a variety of types. Some of the types available are shown in Table 114.

109. Outlet boxes are made in round, square, octagonal, and oblong shapes. Round boxes should never be used when a conduit must enter the box through the side, as it is difficult to make a good connection with a locknut or bushing on a rounded surface.

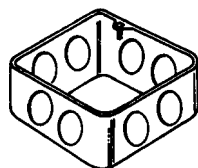
The *round* and *octagonal* boxes are used for ceiling outlets in all types of concealed wiring installed in buildings of all types of construction. The octagonal boxes are also used for wall-bracket lighting outlets. Both round and octagonal boxes are made with various combinations of knockouts in sides and bottom and with built-up clamps for armored cable or nonmetallic-sheathed cable. They can be obtained with built-in $\frac{3}{8}$ - or $\frac{1}{2}$ -in fixture studs or with holes for mounting a separate fixture stud. Various types of covers are available for these boxes as shown in Sec. 114. Some are of the flat type, while others have the central portion of the cover raised so that additional interior space is made available in the box. Octagonal boxes constructed especially for concrete work have the bottom or back plate, as it is called, detachable from the sides. The back plate and sides are provided with conduit knockouts. The back plate may be provided with $\frac{3}{8}$ - or $\frac{1}{2}$ -in built-in fixture studs or with holes for mounting a separate fixture stud.

Square and *oblong* boxes are used principally for sidewall outlets in conduit wiring when these are embedded in masonry or installed in brick or tile walls. Sometimes they also are used with conduit wiring in other types of building construction. The square boxes are used sometimes for ceiling outlets. The oblong boxes, which frequently are called gang boxes, are used if more internal space is required than is provided by the square boxes. The term *gang* refers to the number of standard-line wiring devices which the box will accommodate. A three-gang box will accommodate three standard wiring devices mounted side by side. They are made with various combinations of knockouts in sides and bottom. The square boxes may be provided with $\frac{3}{8}$ - or $\frac{1}{2}$ -in built-in fixture studs or with holes for mounting separate fixture studs. Various types of covers are available for the square boxes shown in Sec. 114. Covers are available with openings and supporting lugs for the accommodation of flush wiring devices. The opening is then covered with a standard flush plate. The portion of the box cover around the central opening is raised so that the box is set back a slight amount in the wall and the cover brings the surface of the wiring device flush with the wall surface. The box and the box cover are plastered over a sufficient amount so that the remaining openings will be completely covered with the flush plate. Covers are available with the central portion raised by different amounts to accommodate different thicknesses of plaster. The covers for the oblong boxes are always of the type just described. When the square boxes are used in exposed wiring, a flush plate would not give a neat appearance, and an outlet-box cover which covers the entire opening of the box therefore is used. Openings in the cover accommodate switch handles or receptacles.


110. Utility boxes are designed for use in exposed-conduit wiring installations to produce a neat-appearing job. They are provided with knockouts in bottom and sides. Data on covers are given in Sec. 114.

110A. Sectional device boxes are employed in concealed-wiring installations which are not embedded in masonry. They are constructed with removable sides so that any number of boxes can be ganged side by side to provide compactly for several wiring devices at one location. No covers are required, since the boxes are designed to accommodate the standard flush wiring devices with standard flush plates. They are made in types with conduit knockouts and with clamps for armored cable, nonmetallic-sheathed cable, and loom. Most boxes are 3-in long and 2-in wide.

110B. Extension rings (Fig. 4.155) are available for octagonal and square boxes to increase the depth of the boxes. The standard depths in which they are available for the different boxes are given in Sec. 113.










I - For square box

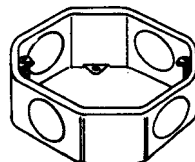

II-For octagonal box





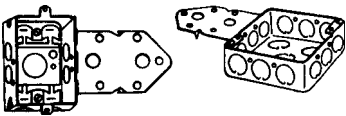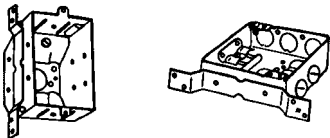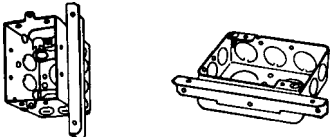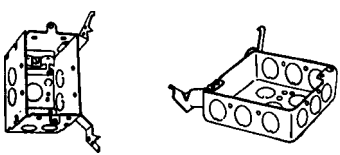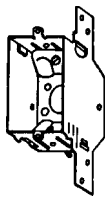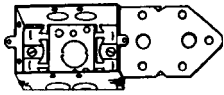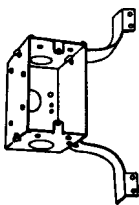



FIGURE 4.155 Outlet-box extension rings.

111. Bracket Identification^a

Bracket designation		Description and application
B		For mounting on the face of stud. Can be offset from studding to clear door frame or snugged up against studding as desired
F		A sturdy, simple flat bracket for easy side mounting. Exceptionally rigid and easy to install. Hugs close to studding
A		Angle bracket snugs against both face and side of studding. When nails are driven both ways, it becomes the strongest mounting available. Stands up under the strain of marking box openings in dry wall
O		Side-mount bracket mounts on face and side of studding. Locating lugs engage face of studding for normal plaster thickness. Lugs are easily removed so box can be mounted on side of studding in various positions to accommodate all wall thicknesses
D		The D bracket is an integral part of the box, affording great strength and rigidity. These boxes are extremely versatile—easily adapted for 3/8, 1/2 and 5/8-in. wall thickness. Wall thickness is marked on box
E		Face-mounting bracket on end of device box for horizontal mounting of switches or receptacles
T		Exceptionally strong twin mounting bracket for oversize 4- by 2-in. device boxes. Can be nailed from front or side or both. Box stands out from stud for door frame clearance

^a Courtesy of General Electric Co.





112. Clamp Identification^a

Clamp designation		For use with	Description and application
C		BX armored cable	For outlet and bar hanger boxes. Two-way entrance design permits cable to enter through side or back of box. Well suited for ceiling work
K		Nonmetallic and BX armored cable	For outlet boxes and device boxes. Provides visual inspection of antishort bushings. Holds bushings tightly against armor stop
D		Nonmetallic cable	For outlet boxes and device boxes. Two-way entrance design permits cable to enter through side or back of box. Compresses when tightened; grips cables firmly
L		Nonmetallic cable	For outlet boxes and device boxes. Compresses when tightened; grips cable firmly. Particularly adaptable for side-entry installations
No. 9		Nonmetallic cable or loom	For ceiling pan installations
No. 10		Nonmetallic cable	For ceiling pan installations. Tapped for outside clamp screw. Compresses when tightened; grips cable firmly
No. 12		BX armored cable	For shallow pans. Tapped hole for outside clamp screw
BD		Nonmetallic cable	For beveled-corner device boxes. Holds cable with even pressure

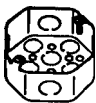

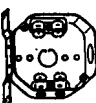



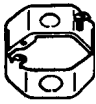
^a Courtesy of General Electric Co.

113. Data on Wiring Boxes


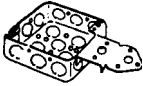

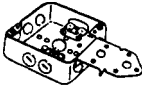

(Courtesy of General Electric Co.)

 Sketch 1	Sketch No.	Depth, in.	Accessories			Knockouts			
						Sides		Bottom	
			Stud	Ears	Clamps	Conduit	Cable 2 1/32 in.	Conduit	Cable 2 1/32 in.
 Sketch 1	1	1 1/2 1 1/2	Four 1/2"	...	One 1/2"	
			Four 3/4"	...	One 1/2"	
3 1/4-in. Extension Rings									
 Sketch 2	2	1 1/2 1 1/2	Four 1/2"			
			Four 3/4"			
3 1/2-in. Octagon Boxes									
 Sketch 3	3	1 1/2	2-C	Two 1/2"	4	One 1/2"	4
		1 1/2	2-L	Two 1/2"	4	One 1/2"	4
		1 1/2	...	Yes	2-L	Two 1/2"	4	One 1/2"	4



113. Data on Wiring Boxes (Continued)



	Sketch No.	Depth, in.	Accessories				Knockouts			
			Brkt.	Stud	Ears	Clamps	Sides		Bottom	
							Conduit	Cable ²¹ / ₃₂ in.	Conduit	Cable ²¹ / ₃₂ in.
 Sketch 4	4	1 1/2 1 1/2 1 1/2	Four 1/2" Four 3/4" Two 1/2" Two 3/4"	Five 1/2" Three 1/2" Two 3/4" Three 1/2" Two 3/4"	
 Sketch 5	5	1 1/2 1 1/2 1 1/2 1 1/2 Yes Yes	2-C 2-C 2-C 2-L	Two 1/2" Two 1/2" Two 1/2" Two 1/2"	4 4 4 4	One 1/2" One 1/2" One 1/2"	4 4 4 4
 Sketch 6	6	1 1/2 1 1/2 1 1/2	F	No Yes Yes	No ... Yes	2-L 2-D 2-D	Two 1/2" Two 1/2" Two 1/2"	4 4 4	One 1/2"	4 4 4
 Sketch 7	8	1 1/2 1 1/2 2 1/8 2 1/8 Yes	2-K 2-K	Two 1/2" Two 1/2" Four 1/2" Four 3/4"	4 4	One 1/2" Five 1/2" Three 1/2" Two 3/4"	4 4
 Sketch 8		2 1/8 2 1/8	Four 1" Two 1/2" Two 3/4"	Three 1/2" Two 3/4" Three 1/2" Two 3/4"	
4-in. Octagon Extension Rings										
 Sketch 9	9	1 1/2 1 1/2 1 1/2	Four 1/2" Four 3/4" Two 1/2" Two 3/4"			
 Sketch 10	10	2 1/8 2 1/8 2 1/8 2 1/8	Four 1/2" Four 3/4" Four 1" Two 1/2" Two 3/4"			



113. Data on Wiring Boxes

	Sketch No.	Depth, in.	Clamps	Brkt.	Knockouts			
					Sides		Bottom	
					Conduit	Cable 2 ¹ / ₃₂ in.	Conduit	Cable 2 ¹ / ₃₂ in.
 Sketch 11	11	1 ¹ / ₄	Twelve 1 ¹ / ₂ "	...	Five 1 ¹ / ₂ "	
		1 ¹ / ₄	...	B	Twelve 1 ¹ / ₂ "	...	Five 1 ¹ / ₂ "	
		1 ¹ / ₂	Twelve 1 ¹ / ₂ "	...	Five 1 ¹ / ₂ "	
		1 ¹ / ₂	Eight 3 ³ / ₄ "	...	Three 1 ¹ / ₂ " Two 3 ³ / ₄ "	
		1 ¹ / ₂	Eight 1 ¹ / ₂ " Four 3 ³ / ₄ "	...	Three 1 ¹ / ₂ " Two 3 ³ / ₄ "	
 Sketch 12	12	1 ¹ / ₂	...	B	Twelve 1 ¹ / ₂ "	...	Five 1 ¹ / ₂ "	
		1 ¹ / ₂	...	B	Six 3 ³ / ₄ "	...	Three 1 ¹ / ₂ " Two 3 ³ / ₄ "	
		1 ¹ / ₂	...	B	Six 1 ¹ / ₂ " Three 3 ³ / ₄ "	...	Three 1 ¹ / ₂ " Two 3 ³ / ₄ "	
		1 ¹ / ₂	...	A	Nine 1 ¹ / ₂ "	...	Five 1 ¹ / ₂ "	
		1 ¹ / ₂	...	F	Nine 1 ¹ / ₂ "	...	Five 1 ¹ / ₂ "	
 Sketch 13		1 ¹ / ₂	...	O	Nine 1 ¹ / ₂ "	...	Five 1 ¹ / ₂ "	
		1 ¹ / ₂	...	O	Six 3 ³ / ₄ "	...	Three 1 ¹ / ₂ " Two 3 ³ / ₄ "	
		1 ¹ / ₂	Twelve 1 ¹ / ₂ "			
		1 ¹ / ₂	2-C	...	Six 1 ¹ / ₂ "	4	One 1 ¹ / ₂ "	4
		1 ¹ / ₂	2-C	B	Six 1 ¹ / ₂ "	4	One 1 ¹ / ₂ "	4
 Sketch 14		1 ¹ / ₂	2-C	F	Three 1 ¹ / ₂ "	4	One 1 ¹ / ₂ "	4
		1 ¹ / ₂	2-C	O	Three 1 ¹ / ₂ "	4	One 1 ¹ / ₂ "	4
		1 ¹ / ₂	2-L	...	Six 1 ¹ / ₂ "	4	One 1 ¹ / ₂ "	4
		1 ¹ / ₂	2-L	B	Six 1 ¹ / ₂ "	4	One 1 ¹ / ₂ "	4
		1 ¹ / ₂	2-D	...	Six 1 ¹ / ₂ "	4	One 1 ¹ / ₂ "	4
 Sketch 15		1 ¹ / ₂	2-D	A	Three 1 ¹ / ₂ "	4	One 1 ¹ / ₂ "	4
		1 ¹ / ₂	2-D	B	Six 1 ¹ / ₂ "	4	One 1 ¹ / ₂ "	4
		1 ¹ / ₂	2-D	F	Three 1 ¹ / ₂ "	4	One 1 ¹ / ₂ "	4
		1 ¹ / ₂	2-K	...	Six 1 ¹ / ₂ "	4	One 1 ¹ / ₂ "	4
		1 ¹ / ₂	2-K	B	Six 1 ¹ / ₂ "	4	One 1 ¹ / ₂ "	4
	14	1 ¹ / ₂	2-K	B	Six 1 ¹ / ₂ "	4	One 1 ¹ / ₂ "	4
		2 ¹ / ₈	Twelve 1 ¹ / ₂ "	...	Five 1 ¹ / ₂ "	
		2 ¹ / ₈	Eight 3 ³ / ₄ "	...	Three 1 ¹ / ₂ " Two 3 ³ / ₄ "	
		2 ¹ / ₈	Eight 1"	...	Three 1 ¹ / ₂ " Two 3 ³ / ₄ "	
		2 ¹ / ₈	Four 1 ¹ / ₄ "	...	Three 1 ¹ / ₂ " Two 3 ³ / ₄ "	
	15	2 ¹ / ₈	Eight 3 ³ / ₄ " Four 3 ³ / ₄ "	...	Three 1 ¹ / ₂ " Two 3 ³ / ₄ "	





113. Data on Wiring Boxes (Continued)

	Sketch No.	Depth, in.	Clamps	Brkt.	Knockouts			
					Sides		Bottom	
					Conduit	Cable ²¹ / ₃₂ in.	Conduit	Cable ²¹ / ₃₂ in.
4-in. Square Extension Rings								
 Sketch 16	16	1 1/2	Twelve 1/2"			
		1 1/2	Eight 3/4"			
		1 1/2	Eight 1/2"			
 Sketch 17	17	2 1/8	Four 3/4"			
		2 1/8	Twelve 1/2"			
		2 1/8	Eight 3/4"			
		2 1/8	Eight 1"			
		2 1/8	Four 1 1/4"			
		2 1/8	Eight 1/2"			
					Four 3/4"			


	Sketch No.	Depth, in.	Knockouts			
			Sides	Bottom		
 Sketch 18	18	1 1/2	Twelve 1/2"		Three 1/2", two 3/4"	
		1 1/2	Eight 3/4"		Three 1/2", two 3/4"	
		1 1/2	Eight 1/2", four 3/4"		Three 1/2", two 3/4"	
 Sketch 19	19	2 1/8	Twelve 1/2"		Three 1/2", two 3/4"	
		2 1/8	Eight 3/4"		Three 1/2", two 3/4"	
		2 1/8	Eight 1"		Three 1/2", two 3/4"	
		2 1/8	Four 1 1/4"		Three 1/2", two 3/4"	
		2 1/8	Eight 1/2", four 3/4"		Three 1/2", two 3/4"	

4 ¹¹ / ₁₆ -in. Square Extension Rings						
 Sketch 20	20	1 1/2	Twelve 1/2"			
		1 1/2	Eight 3/4"			
		1 1/2	Eight 1/2", four 3/4"			
 Sketch 21	21	2 1/8	Twelve 1/2"			
		2 1/8	Eight 3/4"			
		2 1/8	Eight 1"			
		2 1/8	Four 1 1/4"			
		2 1/8	Eight 1/2", four 1/4"			

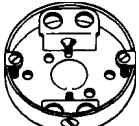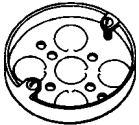
113. Data on Wiring Boxes

3 1/2-in. Round—1/2-in. Deep						
	Sketch No.	Accessories			Knockouts	
		Studs	Ears	Clamps	Conduit	Loam or Cable 2 1/32 in.
 Sketch 22	22	No	Yes	Two No. 9	Three 1/2"	4
3 1/2-in. Round—3/4-in. Deep						
 Sketch 23	23	Yes	Yes	Two No. 10	4
		No	Yes	Two No. 10	One 1 1/2"	4
		Yes	Yes	Two No. 12	4
 Sketch 24	24	No	Yes	Two No. 12	One 1/2"	4
4-in. Round—1/2-in. Deep						
 Sketch 25	25	No	Yes	No	Five 1/2"	1

113. Data on Wiring Boxes (Continued)



Sketch 26

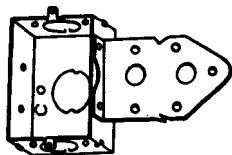


Sketch 27



Sketch 28



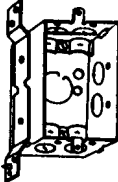
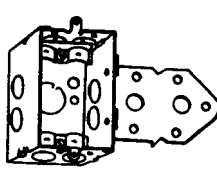

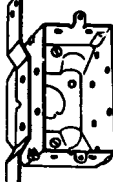

Sketch 29



Sketch 30

Sketch No.	Depth, in.	Accessories			Knockouts					
					Each end		Each side		Bottom	
		Brkt.	Clamps	Ears	Conduit	Cable $2\frac{1}{32}$ in.	Conduit	Cable $2\frac{1}{32}$ in.	Conduit	Cable $2\frac{1}{32}$ in.
26	1½	No	No	Yes	One ½"	One ½"	
	1½	F	No	No	One ½"	One ½"	
27	1½	B	No	No	One ½"	One ½"	
	1½	No	1-L	Yes	One ½"	Corner K.O.'s for N-M cable 1 end				
28	1½	No	2-L	Yes	Corner K.O.'s for N-M cable				
29	1½	F	2-L	No	Corner K.O.'s for N-M cable				
	1½	B	2-L	No	Corner K.O.'s for N-M cable				
	2	No	No	No	One ½"	Two ½"	One ½"	
	2	No	No	Yes	One ½"	Two ½"	One ½"	
	2	F	No	No	One ½"	Two ½"	One ½"	
	2	A	No	No	One ½"	Two ½"	One ½"	
							in 1 side			
30	2	B	No	No	One ½"	Two ½"	One ½"	
	2	No	2-K	Yes	2	2	One ½"	
	2	No	2-L	Yes	2	2	One ½"	

113. Data on Wiring Boxes





				
Sketch 31	Sketch 32	Sketch 33	Sketch 34	Sketch 35

Sketch No.	Depth, in.	Accessories			Knockouts					
					Each end		Each side		Bottom	
		Brkt.	Clamps	Ears	Conduit	Cable ²¹ / ₃₂ in.	Conduit	Cable ²¹ / ₃₂ in.	Conduit	Cable ²¹ / ₃₂ in.
31	2	F	2-K	No	2	2 in 1 side	One 1/2"	
	2	F	2-L	No	2	2 in 1 side	One 1/2"	
	2	A	2-K	No	2	2 in 1 side	One 1/2"	
	2	A	2-L	No	2	2 in 1 side	One 1/2"	
32	2	B	2-K	No	2	2	One 1/2"	
	2	B	2-L	No	2	2	One 1/2"	
	2 1/4	No	2-BD	Yes	Ea. bevel corner 2	One 1/2"	
	2 1/4 ^a	No	No	No	Ea. bevel corner 2	One 1/2"	
	2 1/4	No	No	Yes	Ea. bevel corner 2	One 1/2"	
	2 1/4 ^a	No	2-BD	No	Ea. bevel corner 2	One 1/2"	
33	2 1/4	No	2-BD	Yes (single screw)	Ea. bevel corner 2	One 1/2"	
	2 1/4	D	No	No	Ea. bevel corner 2	One 1/2"	
34	2 1/4	F	2-BD	No	Ea. bevel corner 2	One 1/2"	
35	2 1/4	D	2-BD	No	Ea. bevel corner 2	One 1/2"	
	2 1/4	A	2-BD	No	Ea. bevel corner 2	One 1/2"	

^a Leveling bumps and straight through nail holes.

113. Data on Wiring Boxes (Continued)

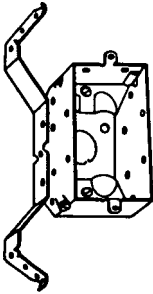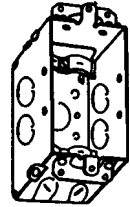3-in. Long by 2-in. Wide Devices Boxes (Continued)


**Sketch 36****Sketch 37****Sketch 38****Sketch 39**

Sketch No.	Depth, in.	Accessories			Knockouts					
					Each end		Each side		Bottom	
		Brkt.	Clamps	Ears	Conduit	Cable $2\frac{1}{32}$ in.	Conduit	Cable $2\frac{1}{32}$ in.	Conduit	Cable $2\frac{1}{32}$ in.
36	$2\frac{1}{4}$	O	2-BD	No	Ea. bevel corner 2	One $\frac{1}{2}$ "	
	$2\frac{1}{4}$	B	2-BD	No	Ea. bevel corner 2	One $\frac{1}{2}$ "	
37	$2\frac{1}{4}$	E	2-BD	No	Ea. bevel corner 2	One $\frac{1}{2}$ "	
	$2\frac{1}{2}$	No	No	No	One $\frac{1}{2}$ "	Two $\frac{1}{2}$ "	One $\frac{1}{2}$ "	
	$2\frac{1}{2}$	No	No	Yes	One $\frac{1}{2}$ "	Two $\frac{1}{2}$ "	One $\frac{1}{2}$ "	
	$2\frac{1}{2}$	F	No	No	One $\frac{1}{2}$ "	Two $\frac{1}{2}$ " in 1 side	One $\frac{1}{2}$ "	
	$2\frac{1}{2}$	A	No	No	One $\frac{1}{2}$ "	Two $\frac{1}{2}$ " in 1 side	One $\frac{1}{2}$ "	
	$2\frac{1}{2}$	B	No	No	One $\frac{1}{2}$ "	Two $\frac{1}{2}$ "	One $\frac{1}{2}$ "	
	$2\frac{1}{2}$	O	No	No	One $\frac{1}{2}$ "	Two $\frac{1}{2}$ " in 1 side	One $\frac{1}{2}$ "	
	$2\frac{1}{2}$	E	No	No	One $\frac{1}{2}$ "	Two $\frac{1}{2}$ "	One $\frac{1}{2}$ "	
38	$2\frac{1}{2}$	SP970	No	Yes	One $\frac{1}{2}$ "	Two $\frac{1}{2}$ "			
	$2\frac{1}{2}^a$	No	2-K	No	2	2	One $\frac{1}{2}$ "	
	$2\frac{1}{2}^a$	No	2-L	No	2	2	One $\frac{1}{2}$ "	
	$2\frac{1}{2}$	No	2-K	Yes	2	2	One $\frac{1}{2}$ "	
39	$2\frac{1}{2}$	No	2-L	Yes	2	2	One $\frac{1}{2}$ "	
	$2\frac{1}{2}$	F	2-K	No	2	2 in 1 side	One $\frac{1}{2}$ "	
	$2\frac{1}{2}$	F	2-L	No	2	2 in 1 side	One $\frac{1}{2}$ "	


^a Leveling bumps and straight through nail holes.

113. Data on Wiring Boxes

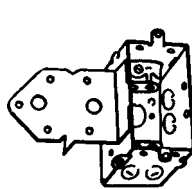3-in. Long by 2-in. Wide Devices Boxes (Continued)




Sketch 40

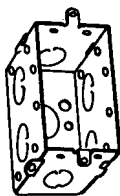

Sketch 41



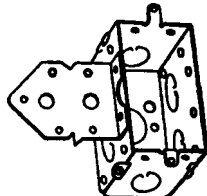Sketch 42




Sketch 43

Sketch No.	Depth, in.	Accessories			Knockouts					
					Each end		Each side		Bottom	
		Brkt.	Clamps	Ears	Conduit	Cable ²¹ / ₃₂ in.	Conduit	Cable ²¹ / ₃₂ in.	Conduit	Cable ²¹ / ₃₂ in.
40	2 ¹ / ₂	A	2-K	No	2	2 in 1 side	One ¹ / ₂ "	
	2 ¹ / ₂	A	2-L	No	2	2 in 1 side	One ¹ / ₂ "	
	2 ¹ / ₂	B	2-K	No	2	2	One ¹ / ₂ "	
	2 ¹ / ₂	B	2-L	No	2	2	One ¹ / ₂ "	
	2 ¹ / ₂	O	2-K	No	2	2 in 1 side	One ¹ / ₂ "	
	2 ¹ / ₂	O	2-L	No	2	2 in 1 side	One ¹ / ₂ "	
	2 ¹ / ₂	E	2-K	No	2	2	One ¹ / ₂ "	
	2 ¹ / ₂	E	2-L	No	2	2	One ¹ / ₂ "	
	2 ¹ / ₂ ^a	No	2-D	No	2	2	One ¹ / ₂ "	4
	2 ¹ / ₂	No	2-D	Yes	2	2	One ¹ / ₂ "	4
	2 ¹ / ₂	O	2-D	No	2	2 in 1 side	One ¹ / ₂ "	4
41	2 ³ / ₄	No	No	No	One ¹ / ₂ "	Two ¹ / ₂ "	One ¹ / ₂ "	
	2 ³ / ₄	No	No	No	One ³ / ₄ "	Two ¹ / ₂ "	One ¹ / ₂ "	
42	2 ³ / ₄	No	No	Yes	One ¹ / ₂ "	Two ¹ / ₂ "	One ¹ / ₂ "	
	2 ³ / ₄	No	No	Yes	One ³ / ₄ "	Two ¹ / ₂ "	One ¹ / ₂ "	
	2 ³ / ₄	A	No	No	One ³ / ₄ "	Two ¹ / ₂ " in 1 side	One ¹ / ₂ "	
43	2 ³ / ₄	B	No	No	One ¹ / ₂ "	Two ¹ / ₂ "	One ¹ / ₂ "	
	2 ³ / ₄	O	No	No	One ³ / ₄ "	Two ¹ / ₂ " in 1 side	One ¹ / ₂ "	


^a Leveling bumps and straight through nail holes.

113. Data on Wiring Boxes (Continued)

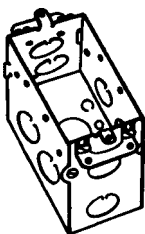
3-in. Long by 2-in. Wide Devices Boxes (Continued)



Sketch 44

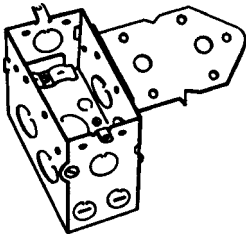


Sketch 45

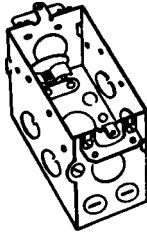


Sketch 46

Sketch No.	Depth, in.	Accessories			Knockouts					
					Each end		Each side		Bottom	
		Brkt.	Clamps	Ears	Conduit	Cable ²¹ / ₃₂ in.	Conduit	Cable ²¹ / ₃₂ in.	Conduit	Cable ²¹ / ₃₂ in.
44	3 1/2	No	No	Yes	Two 1/2"	Two 1/2"	One 1/2"	
	3 1/2	No	No	Yes	One 3/4"	Two 1/2"	One 1/2"	
	3 1/2	B	2-K	No	One 1/2"	2	Two 1/2"	One 1/2"	
45	3 1/2	B	2-L	No	One 1/2"	2	Two 1/2"	One 1/2"	
46	3 1/2	No	2-K	Yes	One 1/2"	2	Two 1/2"	One 1/2"	
	3 1/2	No	2-L	Yes	One 1/2"	2	Two 1/2"	One 1/2"	


4-in Long by 2-in Wide Device Boxes




Sketch 47

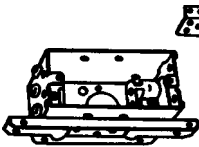


Sketch 48

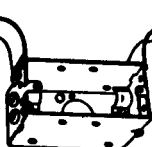

Sketch 49

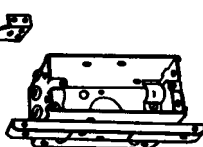

Sketch 50

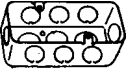
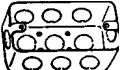
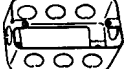
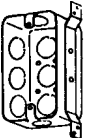
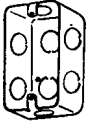

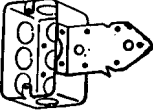


Sketch 51


47	2 1/8	No	No	No	One 1/2"	One 1/2"	
	2 1/8	T	No	No	One 1/2"	One 1/2"	
	2 1/8	No	2-L	No	2	One 1/2"	
48	2 1/8	A	2-K	No	2	One 1/2"	
49	2 1/8	T	2-L	No	2	One 1/2"	
50	2 1/8	A	2-L	No	2	One 1/2"	
51	1 1/2"	No	No	No	One 1/2"	One 1/2"	

^a Straight through nail holes.

113. Data on Wiring Boxes

Utility Boxes 3 ³ / ₄ by 1 ¹ / ₂ by 1 ¹ / ₂ in.					
 Sketch 52	Sketch No.	Bracket	Knockouts		
			Each end	Each side	Bottom
	52	None	One 1 ¹ / ₂ "	Three 1 ¹ / ₂ "	Three 1 ¹ / ₂ "
4 by 2 ¹ / ₈ by 1 ¹ / ₂ in.					
 Sketch 53	53	None	One 1 ¹ / ₂ "	Three 1 ¹ / ₂ "	Three 1 ¹ / ₂ "
		B	One 1 ¹ / ₂ "	Three 1 ¹ / ₂ " one side	Three 1 ¹ / ₂ "
 Sketch 54	54	None	One 1 ¹ / ₂ "	Three 1 ¹ / ₂ "	
4 by 2 ¹ / ₈ by 1 ⁷ / ₈ in.					
 Sketch 55	55	None	One 1 ¹ / ₂ "	Three 1 ¹ / ₂ "	Three 1 ¹ / ₂ "
		A	One 1 ¹ / ₂ "	Three 1 ¹ / ₂ " one side	Three 1 ¹ / ₂ "
		F	One 1 ¹ / ₂ "	Three 1 ¹ / ₂ " one side	Three 1 ¹ / ₂ "
 Sketch 56	56	None	One 3 ³ / ₄ "	Two 3 ³ / ₄ "	Two 3 ³ / ₄ "
4 by 2 ¹ / ₈ by 1 ¹ / ₂ in.					
 Sketch 57	57	None	One 1 ¹ / ₂ "	Three 1 ¹ / ₂ "	Three 1 ¹ / ₂ "
		A	One 1 ¹ / ₂ "	Three 1 ¹ / ₂ " one side	Three 1 ¹ / ₂ "
		B	One 1 ¹ / ₂ "	Three 1 ¹ / ₂ " one side	Three 1 ¹ / ₂ "
 Sketch 58	58	F	One 1 ¹ / ₂ "	Three 1 ¹ / ₂ " one side	Three 1 ¹ / ₂ "
		None	One 3 ³ / ₄ "	Two 3 ³ / ₄ "	Two 3 ³ / ₄ "
		B	One 3 ³ / ₄ "	Two 3 ³ / ₄ " one side	Two 3 ³ / ₄ "
		O	One 3 ³ / ₄ "	Two 3 ³ / ₄ " one side	Two 3 ³ / ₄ "



113. Data on Wiring Boxes (Continued)





Knockouts						No. of gangs	Length outside, in.
Sides		Ends		Bottoms			
1/2 in.	3/4 in.	1/2 in.	3/4 in.	1/2 in.	3/4 in.		
8	...	4	...	3	2	2	6 ¹³ / ₁₆
	8	...	4	3	2	2	6 ¹³ / ₁₆
4	4	2	2	3	2	2	6 ¹³ / ₁₆
10	...	4	...	6	4	3	8 ⁵ / ₈
	10	...	4	6	4	3	8 ⁵ / ₈
6	4	2	2	6	4	3	8 ⁵ / ₈
12	...	4	...	6	4	4	10 ¹ / ₂
	12	...	4	6	4	4	10 ¹ / ₂
6	6	2	2	6	4	4	10 ¹ / ₂
14	...	4	...	6	4	5	12 ¹ / ₄
	14	...	4	6	4	5	12 ¹ / ₄
8	6	2	2	6	4	5	12 ¹ / ₄
16	...	4	...	6	4	6	14 ¹ / ₁₆
	16	...	4	6	4	6	14 ¹ / ₁₆
8	8	2	2	6	4	6	14 ¹ / ₁₆
18	...	4	...	6	4	7	15 ¹⁵ / ₁₆
	18	...	4	6	4	7	15 ¹⁵ / ₁₆
10	8	2	2	6	4	7	15 ¹⁵ / ₁₆
20	...	4	...	6	4	8	17 ⁵ / ₈
	20	...	4	6	4	8	17 ⁵ / ₈
10	10	2	2	6	4	8	17 ⁵ / ₈
22	...	4	...	6	4	9	19 ¹ / ₂
	22	...	4	6	4	9	19 ¹ / ₂
12	10	2	2	6	4	9	19 ¹ / ₂

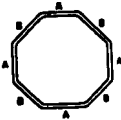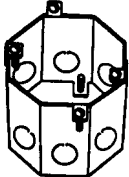3-gang box will take both 3 and 4 gang covers. 4-gang box will take both 4 and 5 gang covers. 5-gang box will take both 5 and 6 gang covers. 6-gang box will take both 6 and 7 gang covers. 7-gang box will take both 7 and 8 gang covers. 8-gang box will take both 8 and 9 gang covers. 9 gang box will take both 9 and 10 gang covers.


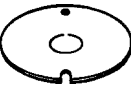



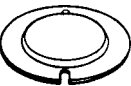



















Concrete Boxes

	Depth, in.	Knockouts	
		A, in.	B, in.
	2	1/2	3/4
	2 1/2	1/2	3/4
	3	1/2	3/4
	3	3/4	1
	3 1/2	1/2	3/4
	3 1/2	3/4	1
	4	1/2	3/4
	4	3/4	1
	5	1/2	3/4
	6	1/2	3/4







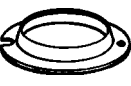


















Concrete Box Plates


Three 1/2" K.O., two 5/4" K.C., no stud

Three 1/2" K.O., two 3/4" K.O., 3/2" stud


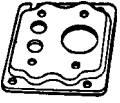












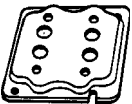

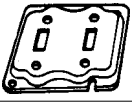

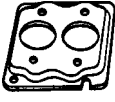

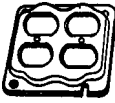

114. Box Covers

Illustration	Description	Illustration	Description
For 3 1/4-in. Round and Octagonal Boxes			
	Raised, closed; 3/8 in. deep		Flat with 1/2-in. knockout in center
	Flat, closed		Flat with slots for surface devices
	Raised with 1 21/32-in. keyed opening for Federal sign receptacle. 5/8 in. deep		Raised, closed; 5/8 in. deep
	Flat with 1 9/16-in. opening and screw holes on 1 3/4-in. centers for Benjamin sign receptacle		Raised with 1/2-in. knockout in center, 5/8 in. deep
	Flat with 1/2-in. knockout in center		Raised with 3/8-in. eyelet; 5/8 in. deep
	Raised with 1/2-in. knockout in center; 3/8-in. deep		Raised with 1 1/2-in. grooved opening; 5/8 in. deep
	Raised with 1 1/2-in. opening for sign receptacles notched for protruding lug on porcelain; 3/8 in. deep		Raised with plain 1 1/2-in. opening; 5/8 in. deep
	Raised with 1 1/2-in. diameter opening and bent tongue to fit notches in new standard sign receptacles; 3/8 in. deep	For 4-in. Round and Octagonal Boxes	
	Raised with 27/64-in. metal eyelet for drop cord; 3/8 in. deep		Raised, closed, 5/8 in. deep
	Flat, with slots for surface devices; opening 1 15/16 in., screw centers 15/16 in. to 1 13/16 in.		Flat, closed
	Cover with pigtail receptacle		Flat with 1/2-in. knockout in center
	Cover with terminal receptacle		Raised with 1/2-in. knockout in center; 5/8 in. deep
For 3 1/2-in. Round and Octagonal Boxes			
	Flat, closed		Raised with 2 3/4-in. opening; 5/8 in. deep












114. Box Covers (Continued)

Illustration	Description	Illustration	Description
	Raised $\frac{5}{8}$ in. high, for one flush device; also suitable for bracket outlet		Raised with $1\frac{1}{2}$ -in. opening for sign receptacles, notched for protruding lug on porcelain; $\frac{5}{8}$ in. deep
	Raised $\frac{5}{8}$ in. high with $1\frac{1}{2}$ in. diameter opening for sign receptacles notched for protruding lug on porcelain		Raised with $1\frac{1}{2}$ -in. opening and bent tongue to fit notches in new standard sign receptacle; $\frac{5}{8}$ in. deep
	Raised $\frac{5}{8}$ -in., with $1\frac{1}{2}$ -in. diameter opening and bent tongue to fit notches in new standard sign receptacles		Raised with $\frac{27}{64}$ -in. metal eyelet for drop cord; $\frac{5}{8}$ in. deep
	Raised $\frac{5}{8}$ in., with $\frac{27}{64}$ -in. metal eyelet for drop cord		Raised with $2\frac{3}{4}$ -in. opening, $\frac{5}{8}$ in. deep; lugs tapped 8-32 on $2\frac{3}{4}$ -in. centers
	Raised $\frac{5}{8}$ in., $2\frac{3}{4}$ in. opening, $1\frac{1}{16}$ in. deep lugs tapped 8-32 on $2\frac{3}{4}$ -in. centers		Flat with slots for surface devices, opening $1\frac{15}{16}$ in., screw centers $\frac{15}{16}$ and $1\frac{13}{16}$ in.
	Flat with slots for surface devices; opening $1\frac{15}{16}$ in., screw centers $\frac{15}{16}$ to $1\frac{13}{16}$ in.; two $\frac{7}{8}$ -in. \times 6-32 screws	For 4-in. Square Boxes to Accommodate Flush Wiring Devices with Flush Plate Covers	
	Cover with pigtail receptacle		Raised $\frac{1}{4}$ in. for one-gang plate
	Cover with terminal receptacle		Raised $\frac{1}{4}$ in. for two-gang plate
For 4-in. Square Boxes			Raised $\frac{1}{2}$ in. for one-gang plate
	Raised, closed, $\frac{5}{8}$ in. deep		Raised $\frac{1}{2}$ in. for two-gang plate
	Flat closed cover		Raised $\frac{3}{4}$ in. for one-gang plate
	Flat with $\frac{1}{2}$ -in. knockout in center		Raised $\frac{3}{4}$ in. for two-gang plate
	Raised $\frac{5}{8}$ in. deep with $\frac{1}{2}$ -in. knockout in center		Raised 1 in. for one-gang plate
	Raised with $2\frac{3}{4}$ -in. opening; $\frac{5}{8}$ in. deep		

114. Box Covers

Illustration	Description	Illustration	Description
	Raised 1 in. for two-gang plate		Raised 1/2 in.; for one pushbutton switch and one single flush receptacle
	Raised 1 1/4 in. for one-gang plate		Raised 1/2 in.; for one square-handle toggle switch and one single flush receptacle
	Raised 1 1/4 in. for two-gang plate		Raised 1/2 in.; for one pushbutton switch and one duplex receptacle
For 4-in. Square Boxes for Accommodating Flush Wiring Devices in Exposed Wiring			Raised 1/2 in.; for one square-handle toggle switch and one duplex receptacle
	Raised 1/2 in.; for one pushbutton switch	For 4 11/16-in. Square Boxes	
	Raised 1/2 in.; for one square-handle toggle switch		Raised, closed; 5/8 in. deep
	Raised 1/2 in.; for one single flush receptacle		Flat, closed
	Raised 1/2 in.; for one duplex receptacle		Flat with 1/2-in. knockout in center
	Raised 1/2 in.; for two pushbutton switches		Raised with 1/2-in. knockout in center; 5/8 in. deep
	Raised 1/2 in.; for two square-handle toggle switches		Raised with 2 3/4-in. opening; 5/8 in. deep
	Raised 1/2 in.; for two single flush receptacles		Raised with 27/64-in. metal eyelet for drop cord; 5/8 in. deep
	Raised 1/2 in.; for two duplex receptacles		Raised with 2 3/4-in. opening, 5/8-in. deep; lugs tapped 8-32 on 2 3/4-in. centers

114. Box Covers (Continued)

Illustration	Description	Illustration	Description
For 4 ¹¹ / ₁₆ -in. Square Boxes for Accommodating Flush Wiring Devices and Flush Plate Covers		For Utility Boxes	
	Raised ³ / ₄ in. for one-gang plate		Blank
	Raised 1 in. for one-gang plate		For single push-button switch
	Raised 1 ¹ / ₄ in. for one-gang plate		For standard duplex receptacle
	Raised ³ / ₄ in. for two-gang plate		For standard square-handle toggle switch
For Oblong Gang Boxes for Accommodating Flush Wiring Devices and Flush Plate Covers			For single T-slot and Edison-base receptacle
	Available for two-, three-, four-, five-, six-, seven-, eight-, and nine-gang flush plates		Cover with knockouts for interchangeable devices

115. Nonmetallic boxes. The material used in the construction of nonmetallic boxes is porcelain, polyvinyl chloride (PVC), fiberglass, or Bakelite. Except for surface-type wiring with nonmetallic-sheathed cable, porcelain boxes are not used because they are easily broken.

Polyvinyl chloride boxes are widely used with rigid nonmetallic conduits, and the boxes are shaped similarly to the more common metal types. Refer to Div. 9 for uses of these boxes with nonmetallic conduits.

Some of the boxes shown in Fig. 4.156 have no cable clamps. When so configured one more wire is permitted in the box in determining the maximum number according to Sec. 314.16(A) of the National Electrical Code. Without cable clamps nonmetallic-sheathed cables must be supported within 8 in. of nonmetallic boxes, and this allowance only applies to single-gang boxes; for all others the cable must be secured to the box. Another important advantage is that no grounding connection is required to the box as with metallic boxes. When nonmetallic cables, which contain grounding wires, enter nonmetallic boxes, they are spliced together with an approved solderless pigtail connector. If a grounding-type

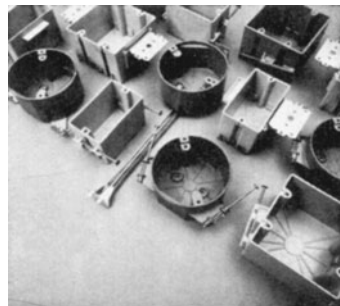


FIGURE 4.156 Plastic boxes for use with nonmetallic-sheathed cable.

receptacle is attached to a non-metallic box, the pigtail connection should include a short lead for connection to the grounding terminal on the receptacle.

If a metallic switch plate is to be attached to a flush switch, switches are available with a grounding terminal. Then the grounding conductor of the supply cable is connected to this terminal, and the metal frame of the switch is grounded. This, in turn, will ground the attached metal switch plate.

116. Flush plates are covers which are used with flush wiring devices in concealed-wiring installations to produce a neat covering of the outlet. They are supported by screws turning into tapped holes in mounting ears or straps on sectional boxes or on covers for square or oblong boxes as described in Sec. 114. Holes in the plates accommodate the handles of flush switches or plugs for flush receptacles. The plates are made in single-, two-, and three-gang sizes with various types and combinations of openings to meet almost any combination of flush wiring devices. Flush plates made of Bakelite, brass, enameled metal, or stainless steel can be obtained. The standard finish for brass plates is brush brass. Plates can be obtained with almost any special finish to meet the requirements of any interior. Some of these special finishes are listed below:

FLUSH PLATE FINISHES

Aluminum (spray)	Bronze, polished	Gilt, rich
Black lacquer	Statuary (light)	Gunmetal
Bower-Barff lacquer	Brown lacquer	Ivory enamel Nickel,
	(imitation Bakelite)	dull
Brass, sand blast, antique	Cadmium, brushed	Polished
Sand blast, brush	Polished	Silver, butler's (brushed)
Flemish	Chromium, dull	Oxidized
Lemon	Polished	Polished
Oxidized	Copper, antique	Satin
Polished	Brush	Verd-antique lacquer
Bronze, antique	Mottled	White enamel
Brush	Oxidized	Various colors
Japanese (dark)	Polished	Wood grain

Flush plates are made for the standard and interchangeable lines of wiring devices. Typical plates are shown in Figs. 4.157 and 4.158. Some manufacturers offer engraved plates to identify standard or special equipment. Some manufacturers maintain standard ordering procedures that allow them to routinely punch any combination of device configurations as required in metal faceplates to meet special installation circumstances. This option is not available, however, with nonmetallic faceplates because special molds have to be constructed for each configuration.

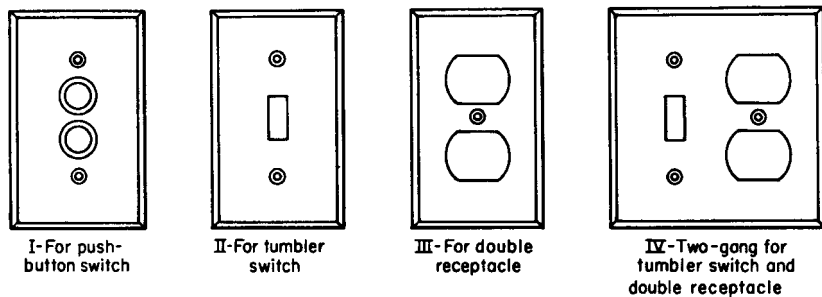


FIGURE 4.157 Flush plates for standard-line wiring devices.

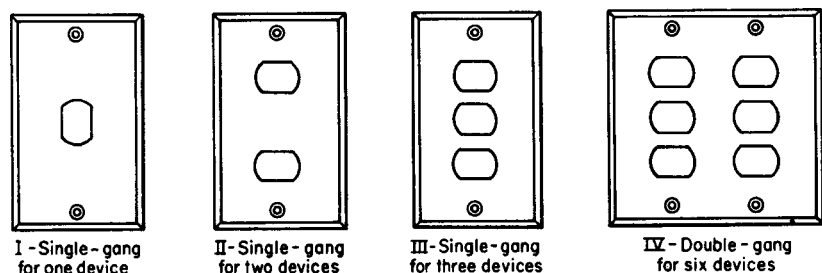
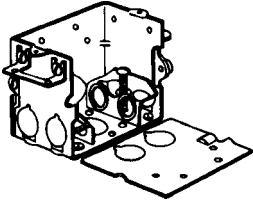
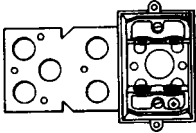
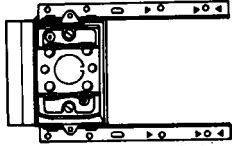
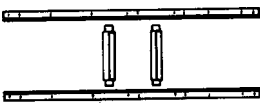
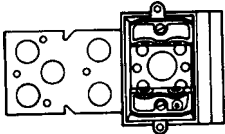
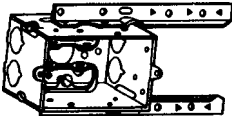
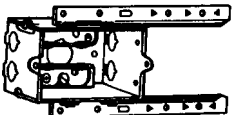
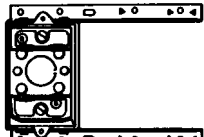


FIGURE 4.158 Flush plates for interchangeable-line wiring devices.

117. Types of Mounting Features for Sectional Boxes


Name	Illustration	Description
Standard mounting ears		Box equipped with two ears, one secured to each end of box with two 8-32 large fillister-head screws. Ears adjustable and reversible. Set of extra holes (not tapped) in each side for changing position of ears to sides if desired (8-32 tap required)
Rectangular mounting bracket without lath support		For plaster or wallboard jobs, with holes for gripping plaster and with aligning-cleat prongs and four nail holes. Bracket is perfectly flat so it does not interfere with wallboard. Bracket is welded to box
Extended mounting ears	 <p>Ears on ends for vertical mounting in plaster with lath support.</p>	For mounting in plaster or baseboard. Each ear fastened to box with two 8-32 fillister-head screws. Can be located on sides or ends. Tapped mounting holes supplied regularly only on ends. Aligning cleat prongs and adequate nail holes for rigid fastening
Box supports and lath holders		For mounting in plaster walls. Supports available in lengths of 16 ¹ / ₂ , 18 ¹ / ₂ , 20 ¹ / ₂ , 22 ¹ / ₂ , 24 ¹ / ₂ , and 26 ¹ / ₂ in.
Rectangular mounting bracket with lath support		Same as item 2 with lath supports welded to box for wood-lath or wall-board jobs. Back lip of support projects beyond front lip providing adequate support behind wall board and still retaining channel for supporting end of wood lath front and back
Extended mounting ears	 <p>Ears on sides for horizontal mounting in baseboards.</p>  <p>Ears on sides for horizontal mounting in plaster.</p>  <p>Ears on ends for vertical mounting in plaster without lath support.</p>	For mounting in plaster or baseboard. Each ear fastened to box with two 8-32 fillister-head screws. Can be located on sides or ends. Tapped mounting holes supplied regularly only on ends. Aligning cleat prongs and adequate nail holes for rigid fastening

118. Depth of outlet boxes. The National Electrical Code specifies that outlet boxes intended to enclose flush devices must have an internal depth of at least $1\frac{5}{16}$ in (23.8 mm). No box may have a depth of less than $\frac{1}{2}$ -in (12.7 mm). Boxes enclosing large equipment must be capable of accommodating the rearward projection of any such equipment. Outlet boxes with conduits entering the side should be $2\frac{1}{8}$ in (54 mm) deep for installation in lath and plaster. Boxes $1\frac{1}{2}$ in (38.1 mm) deep will generally be satisfactory for brickwork. Shallow boxes of $\frac{1}{2}$ - or $\frac{3}{4}$ -in (12.7- or 19.1-mm) depth are sometimes used on terracotta ceilings with the box set on the surface of the tile and embedded in the plaster. The conduits are brought into the back of the box.

119. Metal straps for supporting outlet boxes can be obtained in various types with or without attached fixture studs. Several representative types are described below.




For shallow boxes in new work or for holding boxes to concrete forms. With boxes of a depth of $\frac{1}{2}$ in (12.7 mm), in which the bar is nailed to joists or studding, the edge of the box will be flush with ordinary plaster. It will fit any box having a $\frac{1}{2}$ -in knockout. It is made in 18- and 24-in (457- and 609-mm) lengths.



For boxes $1\frac{1}{2}$ in (38.1 mm) deep without switch covers or plaster rings; offset brings the box edge flush with the plaster. It will fit any box having a $\frac{1}{2}$ -in (12.7-mm) knockout. The length of the bar is $19\frac{1}{2}$ in (749 mm). Offset is $1\frac{1}{16}$ in (27 mm) deep.



For boxes $1\frac{1}{2}$ in (38.1 mm) deep with switch covers or plaster rings; offset brings covers $\frac{5}{8}$ in (15.9 mm) high, flush with plaster. It will fit any box having a $\frac{1}{2}$ -in (12.7-mm) knockout. The length of the bar is $19\frac{1}{2}$ in (749 mm). Offset is $1\frac{11}{16}$ in (43 mm) deep.



For mounting shallow boxes or plates in buildings already plastered. Make a small hole about $1\frac{1}{2}$ in (38.1 mm) in diameter; push bar all the way into the hole, long end first as shown in cut; hold stud in one hand and pull wire with the other until the bar is centered across the hole. It will fit any box having a $\frac{1}{2}$ -in (12.7-mm) knockout. The length of the bar is 12 in (305 mm).



For boxes $1\frac{1}{2}$ in (38.1 mm) deep with covers and integral studs or without studs. Offset has slots for stove bolts to hold the box and is the right depth to bring $\frac{5}{8}$ -in (15.9-mm) covers flush with the plaster. The length of the bar is 21 in (533 mm). Offset is $1\frac{11}{16}$ in (43 mm) deep.

120. Wallboard hanger (General Electric Co.). Instructions for supporting a switch box with a special wallboard hanger are given below and illustrated in Fig. 4.159.

For installing switch boxes in old work where plaster, wallboard, plasterboard, or similar construction is present:

1. Cut hole the exact size of the switch box.
2. Assemble the switch box and hanger. Only partially tighten the bolt.
3. Push assembly into the wall hole until the sides of the hanger spring free on the inside wall.
4. Tighten by screwing the bolt on the inside of the box.

Inside and outside pressure against the wall give the box a rigid installation.

121. Floor boxes (Fig. 4.160) are made in adjustable and nonadjustable types to provide outlets from concealed conduits embedded in floors. The adjustable ones allow the top to be adjusted in height and angle to suit the floor conditions. They may be obtained in single- and multiple-outlet units.

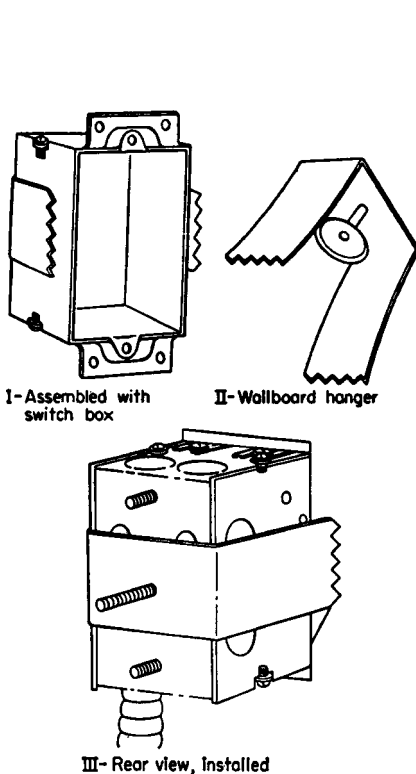


FIGURE 4.159 Wallboard switch hanger. [General Electric Co.]

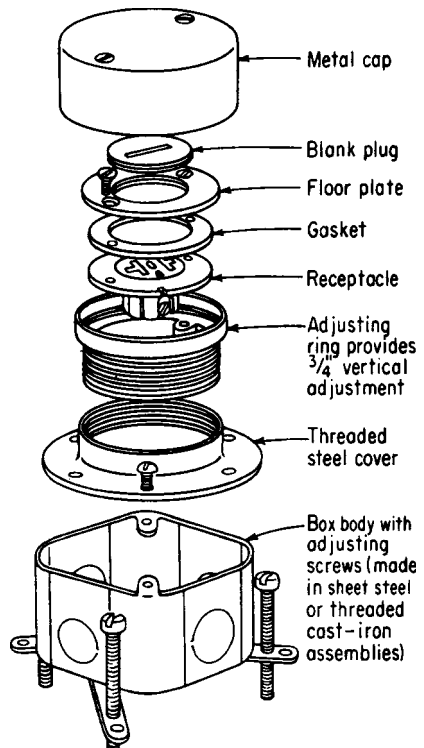


FIGURE 4.160 Adjustable floor box with flush grounding-type receptacle. [Steel City Division of Midland-Ross Corp.]

122. Door boxes (Fig. 4.161) are for the installation of door switches in the jamb of the door. They are made in different types to accommodate the different types of door switches.

123. Pull boxes are described in Div. 9.

124. Lampholders consist of an assembly for supporting lamps, comprising the lamp socket, protective and insulating covering, and means for attachment to some form of support. The term *socket* is sometimes incorrectly used in place of lampholder. Each lampholder must have a lamp socket, but the socket is only the part of the lampholder which engages with the base or terminal of the lamp. Lampholders are made in a great variety of types to fulfill the requirements of all classes of installations and types of lamp bases.

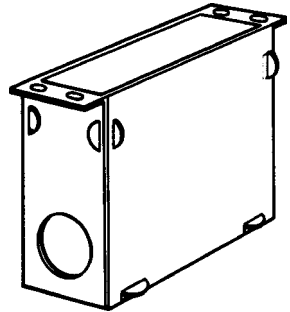


FIGURE 4.161 Type of door box.

125. Brass-shell-type interchangeable lampholders are the old standard type for incandescent lamps. They consist of two fundamental parts, a body (Fig. 4.162, III) and a cap (Fig. 4.162, I) or base (Fig. 4.162, II). The two parts are held together by means of a fluted catch which allows them to be easily separated or assembled. Any cap or base can be used with any body. The body consists of a socket mounted on a porcelain or composition support and encased in an outside brass shell.

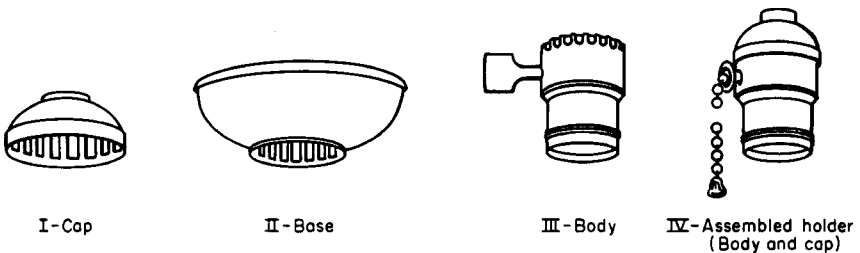


FIGURE 4.162 Fluted-catch interchangeable lampholders. [General Electric Co.]

The socket is insulated from the shell by means of a fiber casing. When the porcelain or composition portion of the body simply forms a support and assembly for the socket and electric-circuit connecting screws, it is known as a keyless body. If the body contains a small switch for turning the lamp on or off, it may be of the key, pull-chain, or push type (Fig. 4.163). Caps are made with standard inside pipe thread for connection to $1/8$ -, $1/4$ -, $3/8$ -, or $1/2$ -in pipe or with $3/8$ -in male thread. Caps are also constructed with porcelain- or composition-bushed holes or with cord-lamp grip for pendant support on a drop cord. The cord holes are 0.406 in (10.31 mm) in diameter, and the cord grips will accommodate cords from 0.375 to 0.5000 in (from 9.525 to 12.7 mm) in diameter. Bases are available for mounting directly on outlet boxes and for exposed wiring of either the cleat-mounting or the concealed-base type.

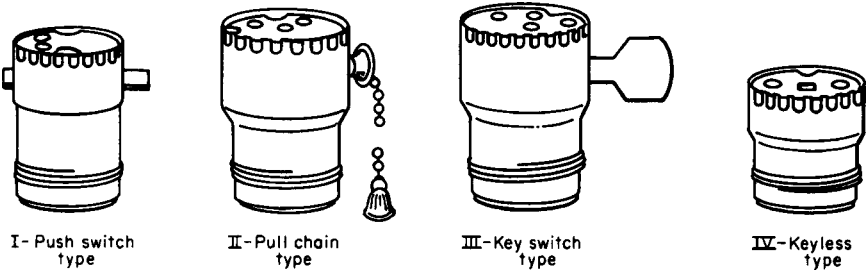


FIGURE 4.163 Fluted-catch lampholder bodies.

126. Threaded-catch interchangeable lampholders for incandescent lamps (Fig. 4.164) are a new development. They consist of a body fastened by means of a threaded ring to a cap or base. The bodies, caps, and bases may have outer brass shells or may be made of composition. The same types of bodies, caps, and bases are made as for the fluted-catch ones of Sec. 125. The line is interchangeable in that any cap or base will fit any body.

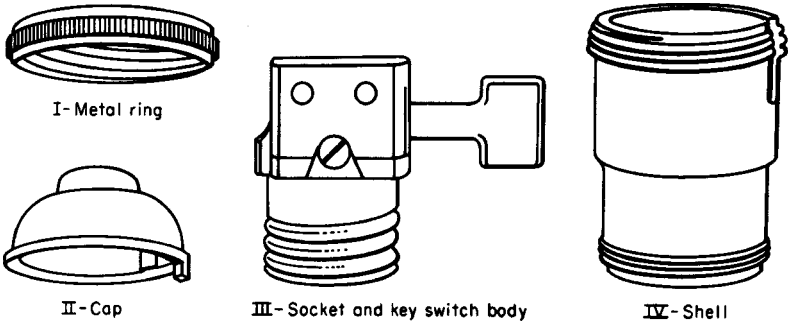


FIGURE 4.164 Threaded-catch interchangeable lampholders. The threaded metal ring (I), knurled to provide a grip, holds the cap and shell together. The cap (II) cannot pull loose from the shell, and no amount of vibration will loosen the threaded ring when it is properly assembled. A lug in the cap fits in the shell slot, preventing rotation between cap and shell. After the cap has been fitted to the shell, the flange on the threaded ring fits over the flange on the cap, and the ring is securely threaded to the shell.


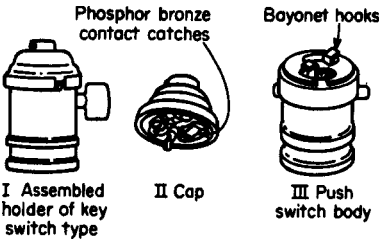


FIGURE 4.165 Porcelain snap-catch interchangeable lampholders.

127. The porcelain snap-catch interchangeable line of lampholders for incandescent lamps (Fig. 4.165) is used in installations subjected to moisture, acid fumes, or other corroding influences. The bodies are fitted with two bayonet hooks, which engage two flexible phosphor-bronze contacts in the cap or base. The two parts are thus securely locked together when assembled but permit easy disassembly without affecting the wiring. The bayonet hooks and bronze contact catches provide the electrical connection between cap and body as well as supplying the means of mechanically supporting the body from the cap. The same general types of caps, bases, and bodies are included in this line as for the

fluted-catch line. A porcelain line for the same type of applications is made with the cap and body fastened together by means of two screws.

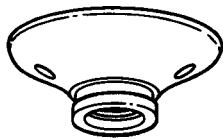
128. Noninterchangeable lampholders are made in a great variety of types to meet the requirements for lampholders for show-window, showcase, cove, trough, or reflector lighting; candelabra or intermediate-base lamps; Lumiline or fluorescent lamps; mounting on outlet boxes; mounting in fixture canopies; lamp outlets in exposed wiring on insulators; and sign lighting, etc. Most of these holders are made of porcelain, but plastic materials are used to a limited extent. A few of the more common types are shown in Fig. 4.166.




I A plastic body lampholder for outlet box mounting. Porcelain holders of same type more commonly used.



II Screw ring porcelain lampholder for mounting in fixture canopies



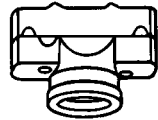III Porcelain lampholder for surface mounting



IV Porcelain lampholder for surface mounting in cleat wiring installation

FIGURE 4.166 Types of interchangeable lampholders.

129. Holders are available for surface mounting for use primarily in installations wired with nonmetallic-sheathed cable (Figs. 4.167 and 4.168). For dry locations these holders have cases of all-plastic construction. Holders for excessively moist or dusty locations have porcelain bases and plastic tops. Both types are made in keyless and pull-chain constructions.




FIGURE 4.167 All-plastic lampholders for use with nonmetallic-sheathed cable.



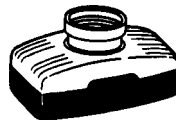


FIGURE 4.168 Porcelain-base lampholders for use with nonmetallic-sheathed cable.

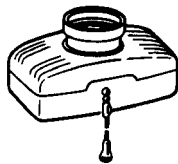


130. Weatherproof lampholders (Fig. 4.169) with one-piece porcelain, composition, or rubber cases are made with sealed-in leads for wet locations.



I-Bakelite type



II Porcelain type



III-Rubber type

131. Shade holders. Many lampholders have the body supplied with threads or grooves for engaging shade holders. Shade holders are made with openings of $2\frac{1}{4}$, $3\frac{1}{4}$, and 4 in

FIGURE 4.169 Weatherproof lampholders. [General Electric Co.]

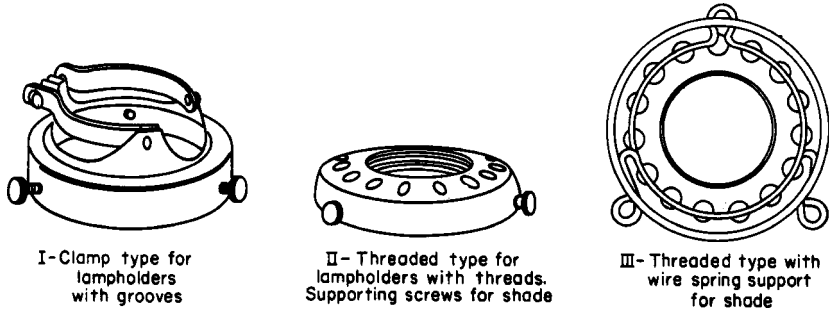


FIGURE 4.170 Shade holders.

(57.15, 82.55, and 101.6 mm) diameter for accommodating shades. Shades may be held to the shade holder with a wire spring or by means of screws (Fig. 4.170).

132. Insulating socket bushings must be used where a cord enters a socket to protect it against abrasion and grounding against the shell. The most popular bushings are of hard rubber or of a compound resembling it. Patented bushings which automatically grip the cord by a wedging action can be purchased.

Most lampholders of the pendant type are fitted with an approved bushing constructed as an integral part of the lampholder cap.

133. Rosettes are devices for supporting and connecting to the circuit the cord and sockets of flexible drop cords. They are made in different types for open wiring and for attaching to outlet boxes or moldings. Rosettes similar to the one shown in Fig. 4.171 are used for open-wiring work, and ones similar to that of Fig. 4.172 for attachment to outlet boxes. The drop cord passes through the hole in the center and is attached to connections inside the body of the rosette. The connections should be relieved of any strain by making a knot in the wires just inside the rosette body. Fused rosettes were at one time employed, but they are no longer allowed by the National Electrical Code rules.

An all-plastic rosette for use with nonmetallic-sheathed cable is shown in Fig. 4.173.



FIGURE 4.171 Cleat-base rosette for open wiring.



FIGURE 4.172 Rosette for attachment to outlet box.

134. Lampholders for fluorescent lamps are available in various types to meet all the usual conditions of installation. Combination lampholders and starter sockets also are available. Typical constructions are shown in Fig. 4.174.



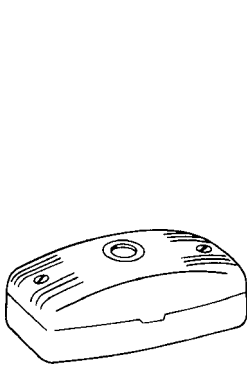


FIGURE 4.173 All-plastic rosette for use with nonmetallic-sheathed cable.

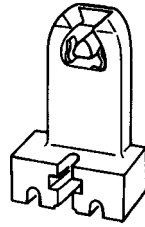

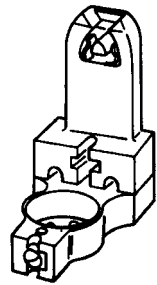(a) Lampholder



(b) Combination lampholder and starter socket.


FIGURE 4.174 Lampholders for fluorescent lamps. [Harvey Hubbell, Inc.]

POWER CAPACITORS

135. Power capacitors are capacitors with relatively large values of capacitance which are used on power-distribution systems or in industrial plants for improving the power factor. Since many power companies include low-power-factor penalties, kilovolt-ampere demand rates, or power-factor bonuses in their rate schedules, it is often economical for industrial consumers to install capacitors for power-factor improvement. These capacitors are connected across the line and neutralize the effect of lagging power-factor loads, thus reducing the current for a given kilowatt load. The amount of reactive kilovolt-amperes of capacitors required to raise the power factor to any given value can easily be determined from the chart of Fig. 4.175.

The best point to connect capacitors to the circuit depends upon cost considerations. Relatively small capacitor units, *A* in Fig. 4.176, can be connected at the individual loads, or the total capacitor kilovolt-amperes can be grouped at one point and connected to the main bus. Both of these methods are shown schematically in Fig. 4.176. Greater power-factor corrective effect for a given total capacitor kilovolt-amperes will result with the capacitors located directly at each individual load, since the current is thereby reduced all the way from the load to the source. The first cost of an installation of individual capacitors will be greater, however, than that for one unit of the same total kilovolt-amperes located at a central point. The greater saving in operating expense due to individual capacitors must be weighed against their increased first cost.

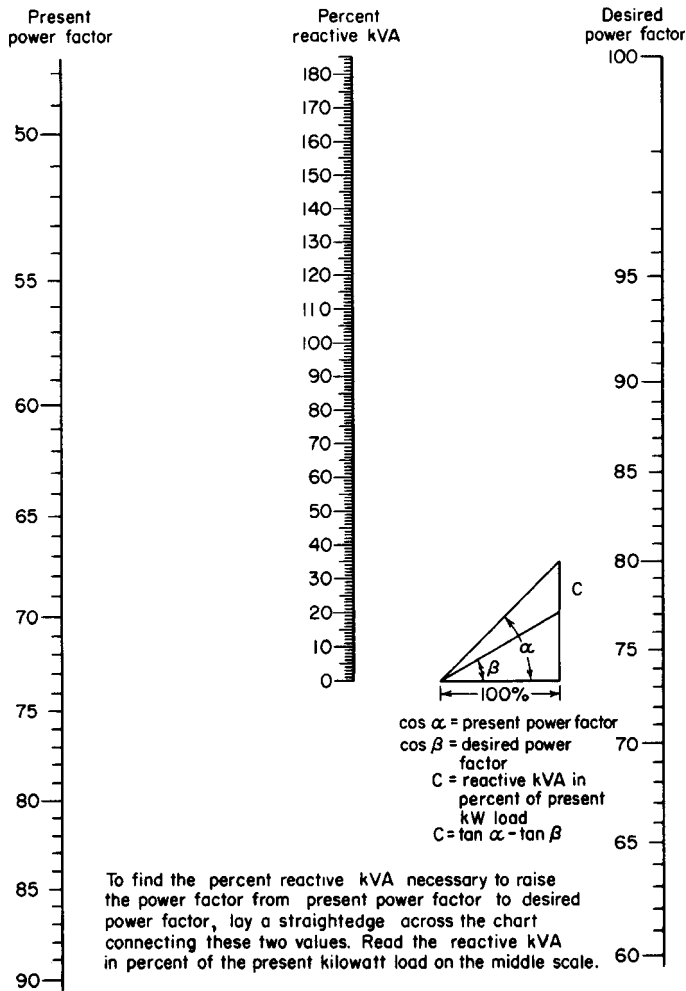136. A complete capacitor bank is made up of the necessary standard units to give the desired kilovolt-amperes, connected in parallel with each other. Each unit consists of one or more cells enclosed in a hermetically sealed steel box (Fig. 4.177). The cells are aluminum-foil, paper- or film-insulated capacitors impregnated with insulating fluid. Standard units can be obtained with the cells internally connected for single-, two-, or three-phase operation. The units may be of enclosed- or rack-type construction. The enclosed construction is made primarily for individual motor applications (Fig. 4.181). It consists of a dusttight steel conduit box (Fig. 4.178) mounted on top of the hermetically sealed



© 1921. Westinghouse Electric & Mfg. Co.

FIGURE 4.175 Chart for use in determining the percentage of reactive kilovolt-amperes required to raise the power factor to a desired value.

capacitor. The conduit box contains the terminals, discharge resistor, and fuses if desired (see Fig. 4.182). Rack-type banks consist of the required number of hermetically sealed capacitors with exposed terminals, supported on a steel rack. The complete structure may be provided with enclosing screens, dusttight steel enclosing cases, or a steel enclosing cabinet for outdoor installation. Each capacitor unit of the bank is individually fused, and the entire bank is provided with discharge resistors or coils inside the enclosure (see Fig. 4.183). Typical assemblies for wall, ceiling, and floor mounting are shown in Figs. 4.179 and 4.180.

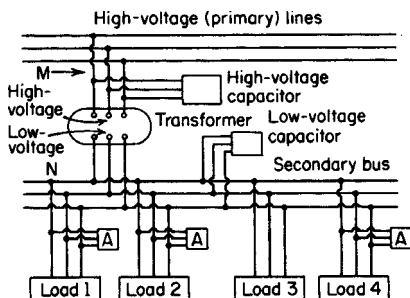


FIGURE 4.176 Location of capacitors in electric system. [General Electric Co.]



FIGURE 4.177 Three-phase capacitor unit enclosed in a hermetically sealed steel box. [Westinghouse Electric Corp.]

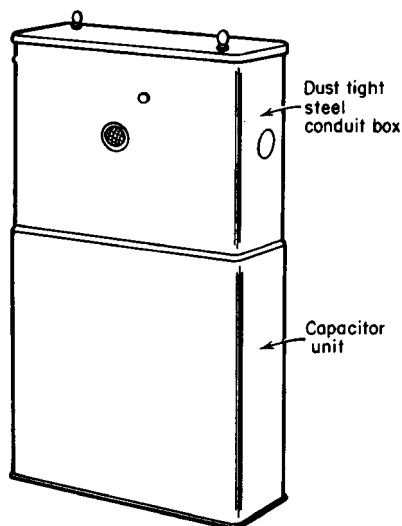


FIGURE 4.178 Enclosed capacitor unit.

137. Drainage of stored charge. When capacitors are disconnected from the supply, they are generally in a charged state. Considerable energy is stored in a capacitor under this condition, and there is a voltage present between its terminals. If the capacitor were left in this charged state, a person servicing the equipment might receive a dangerous shock or the equipment might be damaged by an accidental short circuit. Therefore, all capacitors



FIGURE 4.179 Low voltage fixed capacitors shown on the left and automatic capacitor bank shown on the right. [Square D, Schneider Electric.]

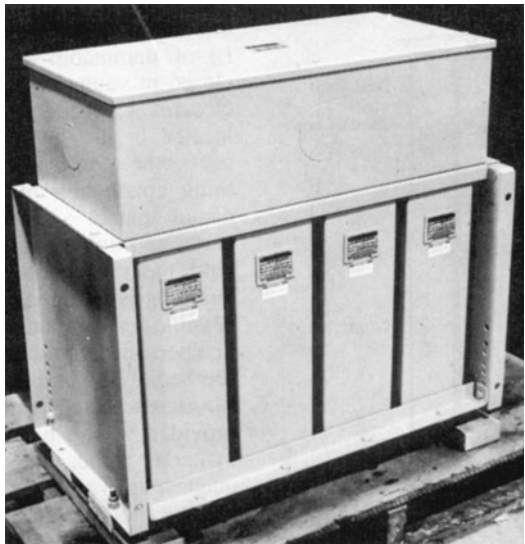


FIGURE 4.180 Typical small rack capacitor bank for wall or ceiling mounting. [Western Electric Corp.]

must be provided with a means of draining the stored charge (see Figs. 4.182 and 4.183). The National Electrical Code requires that the drainage equipment shall be so designed that it will discharge the capacitor to 50 V or less within 1 min after the capacitor has been disconnected from the source of supply in capacitors rated 600 V or less and in 5 min in capacitors rated more than 600 V. The discharge equipment may consist of resistors or inductive coils which are permanently connected to the terminals of the capacitor bank. If the discharge circuit is not permanently connected to the terminals of the capacitor bank, automatic means must be provided for connecting the capacitor to the discharge circuit on the removal of the supply voltage. When the capacitors are connected directly to other equipment

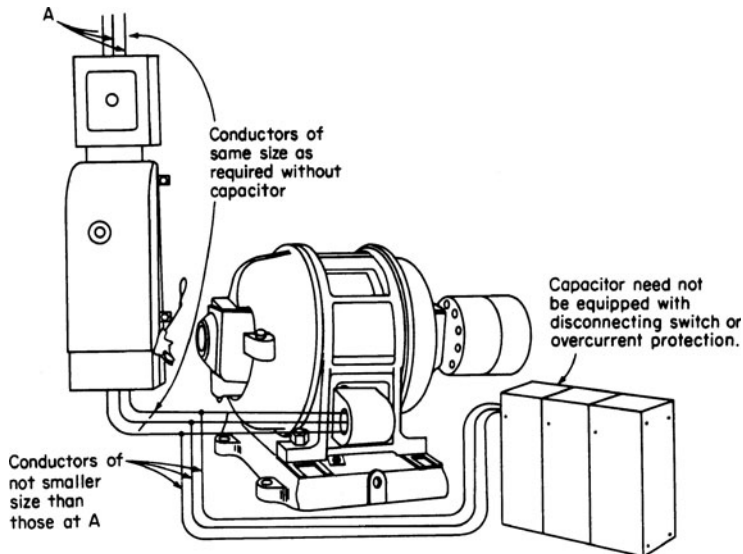


FIGURE 4.181 Schematic diagram of connections when an enclosed capacitor is installed at motor terminals. [General Electric Co.]

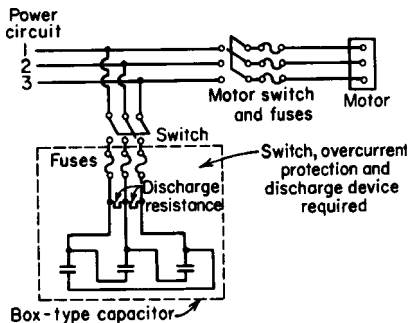


FIGURE 4.182 Connection diagram of enclosed capacitor unit, with fuses, installed on the line side of a motor switch.

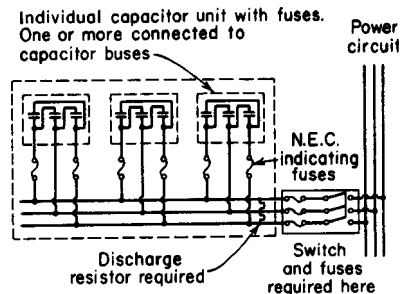


FIGURE 4.183 Connection diagram of rack-type three-phase 230-, 460-, or 575-V capacitor installed on power circuit.

without a switch or overcurrent device being interposed, a means shall be provided to reduce residual voltage to 50 V or less within 5 min of disconnection (Fig. 4.181).

138. The National Electrical Code rules for size of conductors, overcurrent protection, and disconnecting means are given below:

- CAPACITOR RATING** The maximum capacitor ratings that are permitted for use with NEMA-type three-phase 60-Hz Classification B motors are presented in Table 11 of Div. 12.
- CAPACITOR CIRCUITS** Capacitor circuits shall conform to the following:

a. Conductor ratings. The current-carrying capacity of capacitor circuit conductors shall be not less than 135 percent of the rated current of the capacitor. The current-carrying capacity of conductors which connect a capacitor to the terminals of a motor or to motor-circuit conductors shall be not less than one-third of the carrying capacity of the motor-circuit conductors but not less than 135 percent of the rated current of the capacitor.

b. Overcurrent protection

(1) An overcurrent device shall be provided in each ungrounded conductor for each capacitor bank.

Exception: A separate overcurrent device is not required on the load side of a motor overload protective device.

(2) The rating or setting of the overcurrent device shall be as low as practicable.

c. Disconnecting means

(1) A disconnecting means shall be provided in each ungrounded conductor for each capacitor bank.

Exception: A separate disconnecting means is not required for a capacitor connected on the load side of a motor controller.

(2) The disconnecting device shall open all ungrounded conductors simultaneously.

(3) The disconnecting device may be used for disconnecting the capacitor from the line as a regular operating procedure.

(4) The rating of the disconnecting device shall be not less than 135 percent of the rated current of the capacitor.

3. RATING OR SETTING OF THE MOTOR OVERCURRENT DEVICE If a motor installation includes a capacitor connected on the load side of the motor-overload device, the rating or setting of the motor-overload device shall be based on the improved power factor of the motor circuit. The effect of the capacitor shall be disregarded in determining the motor circuit conductor rating.

4. GROUNDING Capacitor cases shall be connected to an equipment grounding conductor.

5. ENCLOSING AND GUARDING Capacitors containing more than 11 L (3 gal) of flammable liquid shall be enclosed in vaults or outdoor fenced enclosures. Capacitors shall be enclosed, located, or guarded so that persons cannot come into accidental contact or bring conducting materials into accidental contact with exposed energized parts, terminals, or buses associated with them except that no additional guarding is required for enclosures accessible only to authorized and qualified persons. For isolation by elevation, see Sec. 37 of Div. 12.

6. IDENTIFICATION Each capacitor shall be provided with a nameplate giving the maker's name, rated voltage, frequency, kilovar or amperes, number of phases, and, if filled with a flammable liquid, the volume of liquid in gallons.

139. Capacitors which are constructed with a liquid which will not burn can be placed at any convenient location provided that they are not exposed to mechanical injury. If exposed to combustible dust or flyings or if located in the vicinity of easily ignitable material, they must be enclosed in dusttight metal enclosures. Capacitors constructed with a flammable liquid must be installed in vaults unless each container does not contain more than 11 L (3 gal) of liquid. Vaults, when required, should be constructed to meet the same requirements as for transformers (see Div. 5).

BATTERIES: GENERAL

140. An electric battery is a device for producing an emf by chemical means. When such a source of emf is connected to a closed electric circuit, chemical energy is transformed into electrical energy. An emf will be produced by chemical means whenever two dissimilar solid conductors are immersed in a conducting liquid. The solid conductors are called electrodes, and the conducting liquid is called the electrolyte. Such a combination of chemical resulting in the production of an emf is called a voltaic cell. A battery may consist of a single cell or a combination of cells. The voltage of a cell depends upon the material of the electrodes and the electrolyte and is independent of the dimensions of the cell. The current and power capacity of a cell are, however, directly dependent upon the dimensions of the cell and the weight of active material in the electrodes. Although there are an infinite number of different combinations of electrodes and electrolytes which will produce a voltaic cell, there are only a limited number of combinations which are practicable.

141. Classifications of batteries. For practical purposes, batteries may be classified as primary and secondary. A *primary battery* is used only for discharge (conversion of chemical energy into electrical energy). As such a battery is discharged, the material of one of the electrodes goes into solution in the electrolyte. The electrode is thus consumed, and the character of the electrolyte is altered so that with primary batteries it is necessary to renew from time to time both the electrode which goes into solution and the electrolyte. A *secondary battery* is alternately discharged and charged. As a battery discharges, the electrodes and electrolyte undergo chemical changes. After a secondary battery has been discharged, the electrodes and electrolyte can be restored to their original charged condition by passing a current through the battery in the reverse direction from that of discharge. In charging a battery, electrical energy is transformed into chemical energy. *Secondary batteries* are generally called *storage batteries*.

142. The internal resistance of batteries is the resistance offered to the flow of current inside the battery due to its electrodes and electrolyte. Owing to this internal resistance, the voltage at the terminals of a battery is less when it is discharging than when it is on open circuit. The internal resistance of a battery will change with the condition of discharge. As the battery discharges, the internal resistance increases, so that the terminal voltage decreases as the battery discharges. The terminal voltage of a battery is thus dependent upon the rate of discharge and the length of discharge. The voltage of a battery will decrease rather slowly as the battery discharges until nearly all the active material of the electrode has gone into solution. The battery is then discharged, and the voltage will drop rapidly to a very low value with any further attempt to discharge.

PRIMARY BATTERIES

143. The standard Daniell cell is a primary cell that has an emf which is practically 1 V when delivering a constant current. There are many forms of Daniell cell, each of which is particularly adapted to certain services, but all have very nearly the same emf ($1.07 \pm V$). The emf is not changed appreciably by the degree of concentration of the solutions, by the temperature, by the resistance, or by the purity of the zinc or copper, etc. In short, it makes a very good rough-and-ready standard.

A very good model is that used by the British Post Office. The jar is made with two compartments, one containing a porous cup immersed in water, in which are placed a copper plate and crystals of copper sulfate, the other containing a zinc plate and a 50 percent saturated solution of zinc sulfate. The zinc plate is fastened so as to be just clear of the solution, and a pencil of zinc is placed in the bottom. When in use, the porous cup is placed in the second compartment, thus raising the level of the zinc solution so as to immerse the zinc. Under working conditions the emf is about 1.07 V; when new, it is about 1.079 V.

144. The gravity-type primary cell, which is used in telegraph work, is suitable for closed-circuit work but should not be used for applications in which it is apt to stand for a long time on open circuit.

145. In setting up the gravity cell, place the copper electrode (–) in the bottom of the jar and pour in about 3 lb (1.36 kg) of copper sulfate crystals. Next place the zinc electrode (+) and fill with water to cover the zinc; to the water add a tablespoonful of sulfuric acid. Cover the electrolyte with a layer of pure mineral oil, which should be free from naphtha or acid and have a flash point about 400°F (204°C). If the oil is not used, the creeping can be stopped by dipping the edge of the jar in hot paraffin. When the cell is thus set up, it should be short-circuited for a day or two to form zinc sulfate which will protect the zinc electrode; this preliminary run also reduces the internal resistance. The temperature of the cells should be kept above 70°F (21°C), since the resistance increases rapidly with a decrease in temperature.

The internal resistance of the gravity cell is ordinarily from 2 to 3 Ω . A blue color in the bottom of the cell denotes a good condition, but a brown color shows that the zinc is deteriorating. When renewing the copper sulfate, it is best to empty the cell and set it up with a completely new electrolyte. The blue line, which marks the boundary between the copper sulfate and the zinc sulfate, should stand about halfway between the electrodes. If it comes too close to the zinc, some of the copper sulfate can be siphoned out, or the cell can be short-circuited so as to produce more zinc sulfate. If the blue line goes too low, some water and crystals of copper sulfate should be added.

146. The Fuller cell is well adapted to telephone work or any intermittent work. It can stand on open circuit for several months at a time without any appreciable deterioration.

147. The Fuller cell is set up as follows: Mix the electrolyte by adding 6 oz (0.17 kg) of potassium bichromate and 17 oz (0.48 kg) of sulfuric acid to 56 oz (1.59 kg) of soft water; pour this mixture into a suitable glass jar. Into a suitable porous cup put 1 teaspoonful of mercury and two teaspoonfuls of salt; place the cup and a zinc electrode in the glass jar, and fill to within 2 in (50.8 mm) of the top with soft water. Put on the cover, insert a carbon electrode, and the cell is ready for use.

The color of the solution is orange when in working order. The resistance varies from 0.5 to 4 Ω , depending upon the condition and dimensions of the porous cup and upon the concentration of the solution.

148. The Lalande cell, frequently called the caustic soda cell, is suitable for either open- or closed-circuit work. The mechanical construction of this cell is especially good.

The positive pole is a plate of compressed oxide of copper, the surfaces of which are reduced to metallic copper to improve the conductivity. This form of plate also acts as a depolarizer. The negative pole is of pure zinc amalgamated throughout by adding mercury when the casting is made. The electrolyte is a solution of caustic soda. The top of the solution is covered with a heavy mineral oil to prevent the solution from evaporating.

The emf of all types and sizes of caustic soda cells initially is approximately 0.90 V per cell. The voltage on closed circuit will depend upon the rate of discharge and the size of cell. The larger sizes, having lower internal resistance, will, of course, have a higher voltage for a given rate of discharge than the smaller cells under similar conditions. For ordinary purposes, however, it is safe to figure a mean effective voltage of approximately 0.67 V per cell at normal temperature.

149. Primary batteries are manufactured by the Primary Battery Division of Thomas A. Edison Industries in three types: the renewable carbon type, the nonrenewable Carbonaire battery, and the renewable copper oxide type.

These batteries are an ideal power supply for many low-voltage dc services for which the utmost freedom from power interruptions is extremely important. Their inherent operating advantages make them particularly desirable for the following applications in which batteries are used for direct operation or as an emergency standby power supply:

1. Navigation aids (river, channel, pier, and obstruction lights)
2. Alarm systems (municipal, police, and fire-alarm installations; fire and burglar alarms in factories, schools, office buildings, banks, public institutions, and private properties)
3. Annunciator systems
4. Electric fences
5. Elevator signals
6. Farm radios
7. Laboratory services and apparatus (industrial, school, and scientific)
8. Mine signal and communication systems
9. Railway signal and communication service
10. Telegraph service (local sounder and main-line circuits)
11. Telephone service (operation of transmitters on magneto switchboards, intercommunicating systems, interrupters or pole changers)
12. Time-clock systems (program, self-winding, etc., in schools, factories, and public buildings)

These primary batteries offer the following advantages:

1. Unlike storage cells, they provide a self-contained power supply requiring no charging. They can be applied anywhere, whether or not commercial power is accessible, and are therefore ideal for operating isolated installations.
2. They consistently deliver rated ampere-hour capacity at satisfactory operating voltage in continuous or intermittent service.
3. They require little attention or maintenance other than occasional inspection from the time they are placed in service until they are exhausted.

- 4. They eliminate the cost of providing and maintaining battery-charging facilities.
- 5. They are easy to install without experienced help. Transporting batteries to and from a charging station is unnecessary.
- 6. In the renewable-type cells, there are accurate visual indicator panels which warn of approaching and complete exhaustion of rated capacity. This feature makes it possible to see and make sure that ample battery capacity is always available—a decided advantage in preventing service failures due to exhausted batteries.

150. The Edison Carbonaire battery is a nonrenewable primary battery of the air-depolarized, add-water type, sealed in a single molded hard-rubber case. The battery is shipped dry and is made ready for use merely by adding a small quantity of water.

The add-water construction has a distinct advantage in that the battery is kept inert and free from internal deterioration during storage.

During its service life, the Carbonaire requires no maintenance other than infrequent inspections of the solution height and the addition of a small amount of water if the solution has fallen below the recommended operating level.

There are no visual indications of exhaustion in the Carbonaire, and its service life must be calculated on the basis of the known current consumption of the connected apparatus.

Carbonaire batteries (Fig. 4.184A) are manufactured in four types: the 2-S-J-1, the 3-S-J-1, the Crystallaire, Type F, and the Type Y. The Carbonaire batteries shown in Fig. 4.184B have largely replaced the hard-rubber-case types shown in Fig. 4.184A.

The technical details and nominal service ratings for the Carbonaire batteries in Fig. 4.184A are given in the accompanying table. They may be applied to many services for which a large ampere-hour reserve of dependable low-voltage current is needed and for which their simplicity of handling, setting up, and maintenance may be used to good advantage.

Characteristics	2-S-J-1	2-M-J-1	3-S-J-1	Y
Over-all dimensions, in.				
Length	85/16	85/16	12	8 1/4
Width	7 3/8	7 3/8	7 3/8	8 1/4
Height	9 1/2	9 1/2	9 1/2	13 1/2
Shipping weight, lb	24	24	35	33 1/2
Service weight, lb	29 1/4	29 1/4	45	40 1/2
Nominal capacity, amp-hrs	1000	2000	1000	2500
Nominal voltage	2.4–2.5	1.2–1.25	3.6–3.75	1.2–1.25
Nominal current, amp	0.25	0.50	0.25	1.00

When the battery is filled, it will get warm and then cool off, which causes the solution to rise a little and then to recede. This is normal, and no more water need be added on this account.



I. Type 2-S-J-1 Carbonaire battery.



II. Type 3-S-J-1 Carbonaire battery.



III. Type Y.

FIGURE 4.184A Edison Carbonaire batteries. [McGraw-Edison Co., Power Systems Division]

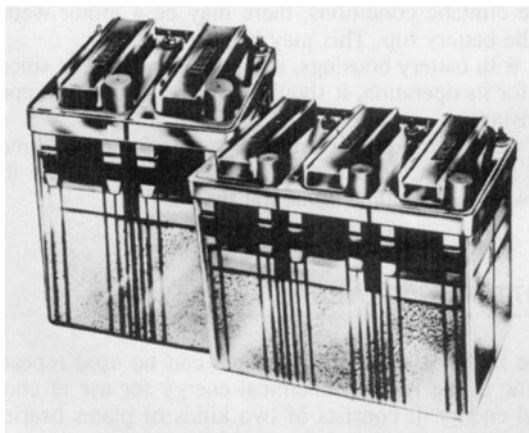


FIGURE 4.184B Edison Types ST-22 and ST-33 renewable Carbonaire primary batteries. [McGraw-Edison Co., Power Systems Division]

There is no advantage in maintaining the solution level at any exact point during the battery life except that if it falls below 2 in (50.8 mm) from the top of the filler, the level should be brought up to 1½ in (38.1 mm) by adding water. The top of the battery, especially the central carbons, should be kept clean and dry.

If the battery is used outdoors, it should be protected in a well-ventilated housing. Where temperatures are extreme, the housing should be partially sunk in the ground but constructed of material not permeable to dampness. Ventilation provides air for the battery to breathe and dissipates dampness.

Under adverse climatic conditions, there may be a minor wetness, or salt formation, around the battery top. This may be wiped off.

In connection with battery housings, it should be noted that since the Carbonaire requires oxygen for its operation, it should never be installed in completely airtight or watertight housings.

The batteries may be stored for any reasonable length of time, and they will remain inert and free from internal deterioration. This is due to the fact that they are shipped dry with the openings sealed at the factory.

STORAGE BATTERIES: GENERAL

151. A storage battery is a device which can be used repeatedly for storing energy at one time in the form of chemical energy for use at another time in the form of electrical energy. It consists of two kinds of plates bearing the necessary electrochemically active materials immersed in a proper solution. The solution is called the electrolyte. Charging a battery consists of connecting the two terminals to a dc supply of proper polarity for a sufficient length of time. Electrical energy is delivered by the dc supply to the battery, in which it produces certain chemical reactions so that the energy is converted into chemical energy. If a charged battery has its two terminals connected through a closed external electric circuit, the active materials of the plate will react chemically with the electrolyte, producing a flow of current in the circuit. This conversion of chemical energy into electrical energy is called discharging the battery. Charging is the process of putting energy into the battery (delivering energy to the battery), while discharging is the process of taking energy from the battery (battery delivering energy to external electric circuit).

152. Storage cell is the name given to the fundamental unit of any storage battery. It consists of one positive plate or a group of positive plates electrically connected together, one negative plate or a group of negative plates electrically connected together, separators, electrolyte, and a suitable container. A storage battery may consist of a single cell or a group of cells electrically interconnected.

153. Types of storage batteries. Storage batteries may be classified in two ways as follows:

1. According to fundamental type of service for which they are suitable
 - a. Stationary
 - b. Portable
2. According to fundamental materials of construction
 - a. Lead-acid
 - b. Nickel-iron-alkaline
 - c. Nickel-cadmium

Stationary batteries are those designed for service in a permanent location.

Portable batteries are those designed for service requiring the transportation of the batteries during service.

154. Storage-battery terminology. Most of the following definitions of terms are taken from the standards of the Institute of Electrical and Electronic Engineers.

Active materials. Materials of plates reacting chemically to produce electrical energy during the discharge. The active materials of storage cells are restored to their original composition, in the charged condition, by oxidation or reduction processes produced by the charging current.

Grid. A metallic framework for conducting the electric current and supporting the active material.¹

Positive plate. The grid and active material from which the current flows to the external circuit when the battery is discharging.

Negative plate. The grid and active material to which the current flows from the external circuit when the battery is discharging.

Electrolyte. An aqueous solution of sulfuric acid used in lead cells and of certain hydroxides used in nickel-iron-alkaline cells.

Separator. A device for preventing metallic contact between the plates of opposite polarity within the cell.

Group. Assembly of a set of plates of the same polarity for one cell.

Element. The positive and negative groups with separators assembled for a cell.

Couple. The element of a cell containing two plates, one positive and one negative. This term is also applied to a positive and negative plate connected together as one unit for installation in adjacent cells.

Jar. The container for the element and electrolyte of a cell. Specifically, a jar for lead-acid cells is usually of hard-rubber composition or glass, but for nickel-iron-alkaline cells it is a nickel-plated-steel container frequently referred to as a can.

Tank. A lead container, supported by wood, for the element and electrolyte of a cell. This is restricted to some relatively large types of cells.

Case. A container for several cells. Specifically, wood cases are containers for cells in individual jars; rubber or composition cases are provided with compartments for the cells.

Tray. A support or container for one or more cells.

Terminal posts. The points of the cell or battery to which the external circuit is connected.

End cells. The cells of a battery which may be cut in or out of the circuit for the purpose of adjusting the battery voltage.

Pilot cell. A selected cell whose temperature, voltage, and specific gravity of electrolyte are assumed to indicate the condition of the entire battery.

Ampere-hour capacity. The number of ampere-hours which can be delivered by a cell or battery under specified conditions as to temperature, rate of discharge, and final voltage.

¹ In certain types of batteries the active material is enclosed in containers which are held in place by the grid.

Energy density. The watthours per pound (Wh/lb) of battery weight.

Power density. The watts per pound (W/lb) of battery weight.

Watthour capacity. The number of watthours which can be delivered by a cell or battery under specified conditions as to the temperature, the rate of discharge, and the final voltage.

Time rate. The rate in amperes at which a battery will be fully discharged in a specified time, under specified conditions of temperature and final voltage, as, for example, the 8-h rate or the 20-min rate.

Open-circuit voltage. The voltage of a cell or battery at its terminals when no current is flowing. For the purpose of measurement, the small current required for the operation of a voltmeter is usually negligible.

Closed-circuit voltage. The voltage at the terminals of a cell or battery when current is flowing.

Average voltage. The average value of the voltage during the period of charge or discharge. It is conveniently obtained from the time integral of the voltage curve.

Initial voltage. The voltage of a cell or battery at the beginning of a charge or discharge. It is usually taken after the current has been flowing for a sufficient period of time for the rate of change of voltage to become practically constant.

Final voltage. The prescribed voltage upon reaching which the discharge is considered complete. The final voltage is usually chosen so that the useful capacity of the cell is realized. Final voltages vary with the type of battery, the rate of the discharge, temperature, and the service in which the battery is used.

Polarity. An electrical condition determining the direction in which current tends to flow. By common usage the discharge current is said to flow from the positive or peroxide plate through the external circuit. In a nickel-iron-alkaline battery the positive plate is that containing nickel peroxide.

Charge. The conversion of electrical energy into chemical energy within the cell or battery. This consists of the restoration of the active materials by passing a unidirectional current through the cell or battery in the opposite direction to that of the discharge. A cell or battery which is said to be charged is understood to be fully charged.

Charging rate. The current expressed in amperes at which a battery is charged.

Constant-current charge. A charge in which the current is maintained at constant value. For some types of lead batteries this may involve two rates called the starting and the finishing rates.

Constant-voltage charge. A charge in which the voltage at the terminals of the battery is held at a constant value. A modified constant-voltage system is usually one in which the voltage of the charging circuit is held substantially constant but in which a fixed resistance is inserted in the battery circuit, producing a rising-voltage characteristic at the battery terminals as the charge progresses. This term is also applied to other methods for producing automatically a similar characteristic.

Boost charge. A partial charge, usually at a high rate for a short period.

Equalizing charge. An extended charge given to a battery to ensure the complete restoration of the active materials in all the plates of all the cells.

Trickle charge. A continuous charge at low rate approximately equal to the internal losses and suitable to maintain the battery in a fully charged condition. This term is also applied to very low rates of charge suitable not only for compensating for internal losses but for restoring intermittent discharges of small amounts delivered from time to time to the load circuit.

Finishing rate. The rate of charge expressed in amperes to which the charging current for some types of lead batteries is reduced near the end of charge to prevent excessive gassing and temperature rise.

Discharge. The conversion of the chemical energy of the battery into electrical energy.

Reversal. Change in normal polarity of a storage cell.

Local action or self-discharge. The internal loss of charge which goes on continuously within a cell regardless of connections to an external circuit.

Floating. A method of operation in which a constant voltage is applied to the battery terminals sufficient to maintain an approximately constant state of charge.

Specific gravity of electrolyte. The electrolyte of lead-acid batteries increases in concentration to a fixed maximum value during charge and decreases during discharge. The concentration is usually expressed as the specific gravity of the solution. This variation of the specific gravity of the solution affords an approximate indication of the state of charge of the battery.

The specific gravity of the electrolyte in nickel-iron-alkaline batteries does not change appreciably during charge or discharge and therefore does not indicate the state of charge. The specific gravities, however, are an indication of the electrochemical usefulness of the electrolyte.

Gassing. The evolution of oxygen or hydrogen or both.

Efficiency. The ratio of the output of a cell or battery to the input required to restore the initial state of charge under specified conditions of temperature, current rate, and final voltage.

Ampere-hour efficiency (electrochemical efficiency). The ratio of the ampere-hours output to the ampere-hours of the recharge.

Volt efficiency. The ratio of the average voltage during the discharge to the average voltage during the recharge.

Watt-hour efficiency (energy efficiency). The ratio of the watt-hours output to the watt-hours of the recharge.

General data. Batteries are usually rated in terms of the number of ampere-hours which they are capable of delivering when fully charged and under specified conditions as to

temperature, rate of discharge, and final voltage. For different classes of service, different time rates (see definition of *time rate*) are frequently used. For comparing the capacities of batteries of different size but of the same general design, it is customary to use the same time rate, and a comparison based on the different lengths of time they will discharge at the same rate is not recommended, as it is misleading.

Misrating. A battery which fails to deliver its rated capacity on the third successive measured cycle of charge and discharge under specified current rates, temperature of electrolyte, specific gravity, and final voltage shall be considered to be improperly rated.

LEAD-ACID STORAGE BATTERIES

155. Lead-acid batteries.¹ In the charged condition the active materials consist of lead peroxide on the positive plate and sponge lead on the negative plate. The electrolyte is a mixture of sulfuric acid and water. The strength of the electrolyte is measured in terms of specific gravity, which is the ratio of the weight of a given volume of electrolyte to an equal volume of water. Concentrated sulfuric acid has a specific gravity of about 1.830; water has a specific gravity of 1.000. The acid and water are mixed in a proportion to give the specific gravity desired. For example, an acid manufacturer to supply electrolyte of 1.210 gravity will mix roughly about 1 part of concentrated acid to 4 parts of water.

In a fully charged battery all the active material of the positive plates is lead peroxide, and that of the negative plates is pure sponge lead. In a fully charged battery all the acid is in the electrolyte, and the specific gravity is at its maximum value. The active material of both the positive and the negative plates is porous, so that it has absorption qualities similar to those of a sponge, and the pores are therefore filled with some of the battery solution. As the battery discharges, the acid, which is in the pores of the plates, separates from the electrolyte, forming a chemical combination with the active material, changing it to lead sulfate. As the discharge continues, additional acid is drawn or diffused from the electrolyte into the pores of the plates and further sulfate is formed. It can be readily understood that as this process continues, the specific gravity of the electrolyte will gradually decrease, because the proportion of acid is decreasing. On charge the reverse action takes place: the acid in the sulfated active material is driven out and back into the electrolyte. This return of the acid to the electrolyte increases the specific gravity, so that it will continue to rise until all the acid is driven out of the plates and back into the electrolyte. After all the acid has been driven back into the electrolyte, further charging will not raise the specific gravity any higher, as all the acid in the cells is in the electrolyte, and the battery is said to be fully charged. The material of the positives is again lead peroxide, and that of the negatives is spongy lead; the specific gravity is maximum.

Practically speaking, on discharge the plates absorb acid, and the specific gravity of the electrolyte decreases. On the charge the plates return the absorbed acid to the electrolyte, and the specific gravity increases. Figure 4.185, showing a cell charged, discharging, discharged, and charging, illustrates clearly the chemical action which takes place on charge and discharge.

When a cell is fully charged [Fig. 4.185(1) of the diagram], the negative plate is lead sponge, Pb; the positive plate is PbO₂; and the specific gravity of the electrolyte (sulfuric acid, H₂SO₄, and water, H₂O) is at its maximum. Chemical energy is stored in the cell in this condition.

¹ A large portion of the following information in this section on lead-acid batteries has been taken from the literature of the Electric Storage Battery Co.

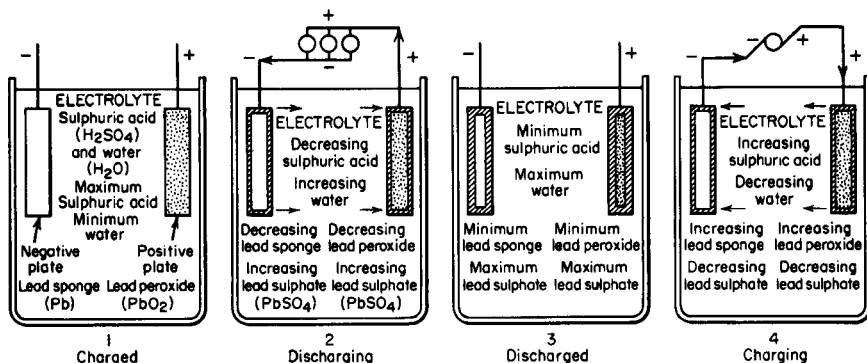


FIGURE 4.185 Chemical action in a cell on cycle of discharge and charge.

When a cell is put on discharge [Fig. 4.185(2)], the H_2SO_4 of the acid is divided into H_2 and SO_4 . The H_2 passes in the direction of the current to the positive plate and combines with some of the oxygen of the lead peroxide and forms H_2O ; the SO_4 combines with the liberated Pb of the positive plate to form lead sulfate. The SO_4 also forms lead sulfate at the negative or lead sponge (Pb) plate. As the discharge progresses, both plates finally contain considerable lead sulfate, PbSO_4 [see Fig. 4.185(3)]. The water formed has diluted the acid, lowering the specific gravity of the electrolyte. When the plates are entirely sulfated, current will cease, since the plates are then identical, and any active electric cell requires two dissimilar plates in electrolyte. In common practice, however, the discharge is always stopped before the plates have become entirely reduced to lead sulfate.

During charge [Fig. 4.185(4)], the lead sulfate, PbSO_4 , on the positive plate is converted into lead peroxide, PbO_2 , while the lead sulfate on the negative plate is converted into sponge lead Pb , and the electrolyte gradually becomes stronger as the SO_4 from the plates combines with hydrogen from the water to form acid, H_2SO_4 , until no more sulfate remains and all the acid has been returned to the electrolyte. It will then be of the same strength as before the discharge, and the same acid will be ready to be used over again during the next discharge.

156. Change in electrolyte during charge and discharge. During discharge, as stated in Sec. 155, some of the acid leaves the electrolyte and combines with the plates. During charge, the acid which has been absorbed by the plates is driven back into the electrolyte. When all the acid has been driven back into the electrolyte, the battery is fully charged.

When all the acid has been driven into the electrolyte, the electrolyte is stronger than when some of the acid is in the plates. This strength is measured in terms of specific gravity. The specific gravity of the electrolyte, therefore, changes as the battery charges or discharges. It falls on discharge and rises on charge. It is, then, an excellent indication of the state of charge of a battery, being greatest when the cell is fully charged and least when discharged.

The difference between the full-charge and discharge values of the gravity depends upon the type of cell under consideration. For example, for the type of cell in use in starting work in automobiles, the full-charge gravity in temperate climates is 1.280; discharged, 1.150.

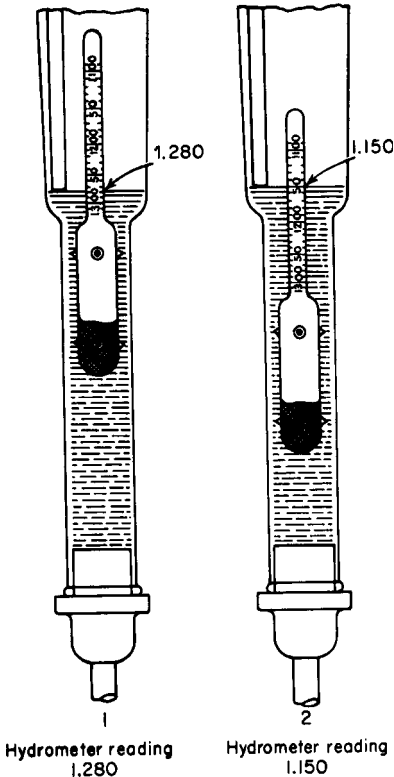


FIGURE 4.186 Use of hydrometer in determining specific gravity of electrolyte.

The specific gravity of the electrolyte is readily determined by means of a float called a hydrometer. With a high specific gravity, the hydrometer, or float, does not sink so far in the electrolyte as it does when the specific gravity is low (see Fig. 4.186).

157. Voltage characteristics. The voltage of each cell is approximately 2 V on an open circuit but is higher than this when the battery is being charged and lower when being discharged. The nominal voltage of a battery is, therefore, the number of cells multiplied by 2.

The voltage at any time on discharge or charge depends upon several factors, such as the current rate, the state of charge or discharge, and the temperature. No general averages to cover all conditions can therefore be given. In usual 6- to 8-h discharge service, the average cell voltage (Sec. 154) during discharge is roughly 1.95 V with a final voltage of about 1.75 V. As soon as the cell is put on charge, its voltage rises to about 2.15 V and then increases during charge until at the end it is between 2.4 and 2.7, depending upon local conditions. The average voltage during the entire charge is usually considered to be 2.33 V.

Typical voltage-discharge characteristics are given in Figs. 4.187 and 4.188. The effect of the discharge rate upon the voltage characteristics is shown in Fig. 4.189.

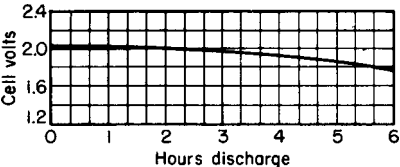


FIGURE 4.187 Type MVM Exide-Ironclad discharge characteristics at the 6-h rate. [Electric Storage Battery Co.]

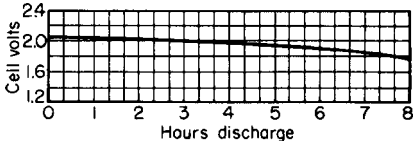


FIGURE 4.188 Type MVM Exide-Ironclad discharge characteristics at the 8-h rate. [Electric Storage Battery Co.]

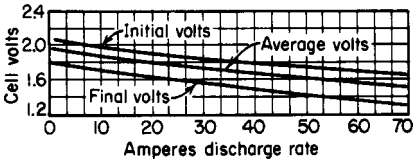


FIGURE 4.189 Type MVM Exide-Ironclad initial, average, and final volts at various discharge rates. [Electric Storage Battery Co.]

158. High discharge rates (amperes) are often confused with overdischarge (too many ampere hours taken out). A lead-acid battery of the type sold under the trade names Exide, Chloride, and Ironclad can be discharged, without injury to the plates, at any rate of current that it will deliver. The maximum permissible rate of discharge is limited only by the current-carrying ability of the wiring, motor, or other apparatus to which the battery is connected or by the current-carrying ability of the cell terminals and connectors and not by the plates themselves.

159. Rating of lead-acid batteries. All batteries are given a normal (ampere-hour) capacity rating based on a certain time rate of discharge under specified conditions of temperatures and final voltage. For example, a certain battery may have an 8-h rating of 100 Ah discharging to 1.75 V per cell at a temperature of 77°F (24°C).

The ampere-hour capacity of a battery depends upon the amount of available active material in the plates that can be reached by the electrolyte, the amount of sulfuric acid in the electrolyte, the rate of discharge, and the allowable safe limit of discharge. To produce an ampere-hour of electricity on discharge requires the combination of a certain amount of sponge lead (negative active material) and a certain amount of peroxide of lead (positive active material) with a certain amount of sulfuric acid from the electrolyte. The allowable rating therefore depends upon the construction of the plates and the number of plates that are constructed in parallel on each side of the battery.

160. Effect of discharge rates on discharge capacity of lead-acid batteries.

The useful ampere-hour capacity of a storage battery depends on the rate of discharge and is greater for a long low rate or an intermittent rate than for a short high rate. Any particular battery is given a so-called normal rate. This so-called normal rate is not the capacity obtainable under all conditions. Each different rate of discharge governs the available capacity that can be obtained from the battery.

When a battery is discharged continuously at a constant rate, its available ampere-hour capacity is a function of the rate of discharge, the available capacity being lower at the higher rates, as is shown in Fig. 4.190. The reduction in available capacity of high-rate continuous discharge is due to depletion of the acid in the pores of the plates. The depletion is due to the fact that at high rates of discharge the acid in the pores of the plates combines with the active material and is withdrawn from the solution more rapidly than it can be replenished by diffusion from the free electrolyte in the cell. It is this limitation of available acid in the pores of the plates that limits the capacity at high continuous rates of discharge, rather than any limitation due to the plates themselves. This explains the fact that after a battery has been exhausted at a high discharge rate, the balance of its normal capacity can be obtained by continuing the discharge at lower rates or by allowing the battery to recuperate while standing on open circuit for a time and

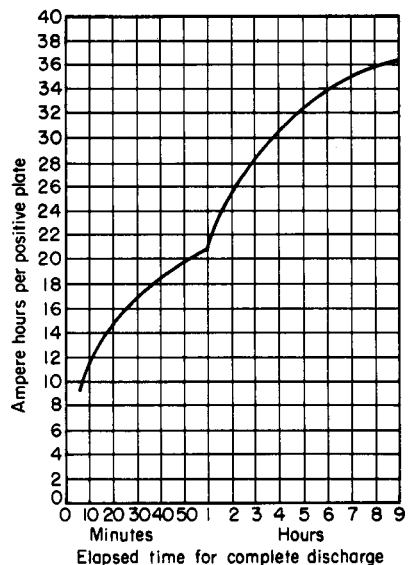


FIGURE 4.190 Curve illustrating effect of discharge rate upon available ampere-hour capacity of lead-acid storage batteries. [Electric Storage Battery Co.]

then continuing the high-rate discharge. For this reason also, as stated in Sec. 158, it is impossible to damage the plates by overdischarge at high rates, as the voltage of the battery will drop below a usable value before the active material in the plates has been discharged to the danger point.

Figure 4.190 shows the available capacity per positive plate of an Exide-Ironclad battery when discharged continuously, in varying lengths of time.

If a battery is discharged intermittently, it is evident that during periods of rest between discharges diffusion will continue, thus renewing the strength of acid in the pores of plates and increasing the available capacity corresponding to the discharge rate. The rate of diffusion depends on the difference in strength of the acid in the pores and that outside the plates, and if this difference is great, the diffusion is rapid at first but decreases as the two strengths become more nearly equal. It follows from this reasoning that the reduction in available capacity due to high rates of discharge largely disappears when the discharge is intermittent.

If the total elapsed time during which discharges are made is greater than 6 h, and if the discharges are distributed throughout that time so that there is time for this diffusion to take place, the full 6-h capacity of the battery will be available regardless of the rates at which the discharges are taken.

An illustration of the effect of acid diffusion is given in Fig. 4.191, which shows a test made on a cell of the type used in submarine boats by the United States government.

This cell has a rated capacity of 3000 A for 1 h. The curve shows it to have been discharged at that rate for 58 min, at which time it was practically exhausted at that rate, and if the discharge had been continued at that rate, the voltage would have fallen rapidly. The rate of discharge was, however, reduced to 1350 A and continued for 45 min, then to 910 A for 30 min, then to 525 A for 1 h and 20 min, and finally to 300 A for 3 h and 15 min. At each reduction in the rate of discharge the rate of acid absorption by the plates was reduced, thus allowing diffusion to strengthen the acid in the pores of the plate and so permitting the discharge to be continued. In each case the voltage at the lower discharge rate was higher than the voltage at the preceding higher rate. During the 300-A discharge it will be noted

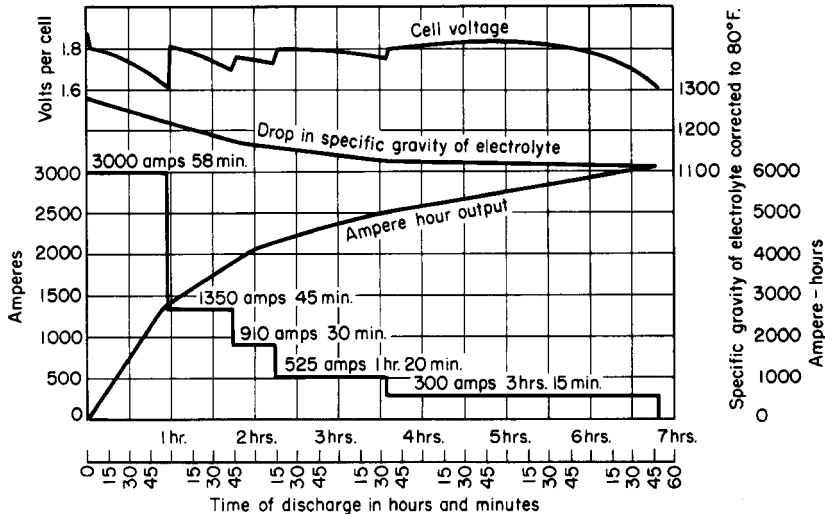


FIGURE 4.191 Curves showing effect of acid diffusion in lead-acid storage batteries on intermittent discharge. [Electric Storage Battery Co.]

that the voltage continued to rise for over an hour after the start at that rate, showing that the acid from the free electrolyte was entering the pores of the plates faster than it was being absorbed.

The curve showing ampere-hour output shows that 6000 Ah was delivered by the cell and that after the battery had been exhausted at the high rate of discharge, as much more energy was still available at lower rates.

161. Discharge limits of lead-acid batteries. In an emergency, little if any permanent harm will result if the battery is discharged to the full amount that it will give, provided that it is promptly recharged.

It has already been pointed out that the drop in specific gravity of electrolyte should not exceed a certain definite value, which varies according to the type of cell and will be furnished on application to the manufacturer.

The danger of harm from overdischarge may be illustrated by a comparison between the active material of the plates and the action which goes on when some of the electrolyte is allowed to act on copper wiring terminals of a battery. It is noticeable that a comparatively large amount of copper sulfate is formed when only a small quantity of the metal is eaten away by the acid. In the same manner, when the acid combines with the lead in the active material, the resulting lead sulfate occupies more space than the active material from which it is formed. The active material of all battery plates is porous, and this expansion of the sulfated material is accommodated by reduction in the size of pores in the active material. All battery plates are designed to accommodate a certain amount of this expansion of the active material during sulfation, and in batteries of the type under consideration this is limited to the amount represented by a certain specific-gravity reading.

Further discharge, even if it can be obtained at a satisfactory voltage, results in an excessive expansion, which so closes the pores in the active material that it becomes increasingly difficult to recharge the battery properly after an excessive discharge, and unless a proper recharge is given, the battery is likely to deteriorate.

162. Charging and charging rates for lead-acid batteries. A battery must, of course, be charged with direct current, and the current must be connected to the battery so that it will go through it in the proper direction. The positive pole of the charging source must be connected to the positive terminal of the battery, and the negative of the charging source to the negative of the battery.

While a battery is being charged, the amount of sulfate in the plates decreases, and the ability of the plate to give up the acid becomes reduced; in other words, during the early part of a charge the plates can give up the acid at a rapid rate, as there is a large amount of sulfate available. Therefore a battery that is considerably discharged can be charged at a high rate, but as the charge approaches completion, currents at a high rate cannot be utilized, and if high rates are maintained, only a portion of the current is used to withdraw acid from the plates, and the balance of the current acts to decompose the water in the electrolyte into oxygen and hydrogen, which are given off in the form of gas. Gassing of the battery, therefore, at any time shows whether or not the charging rate is too high. Consequently, when the cells are gassing on charge the rate of charge should be reduced so as not to waste the current. Furthermore, the action of the bubbles of gas in escaping from the pores of the plates and in "boiling" to the top of the electrolyte has a tendency to wash and wear the active material away from the plates, particularly the positive.

It is a well-known fact that batteries wear out. This wear shows itself to the eye principally in the positive plate, the active material of which softens with use, and were it not for this unavoidable fact, the life of batteries would be very much longer than at present. As

the active material of the plate softens with use, there is a tendency for the softened material on the surface of the plate to fall to the bottom of the jar in the form of sediment. The action of the gas in escaping from the pores of the plates and the little whirlpools created in the electrolyte when the bubbles of gas boil to the surface hasten this shedding of material and shorten the life of the battery.

Excessive gassing, therefore, should be avoided if the best life of the battery is to be obtained. A small amount of gassing at low rates and for a short time, at the completion of a charge, is not objectionable, but violent gassing having the appearance of boiling should be avoided.

163. Charging methods for lead-acid batteries. In practice, charging methods vary with the type of service. For example, in propelling electric vehicles, the battery is discharged over a period of time and then recharged. The rate in amperes to use for recharge depends upon the time available and the type of cell. The lower the rate of charge the longer will be the time required. The shorter the time available, the higher the rate must be to recharge, provided the rate is not higher than recommended for the type of cell. In any event, the rate must always be low at the end of charge when gassing begins. This is known as the finish charge rate.

Batteries charged by this cycle method of discharge and charge can have their charging equipment arranged and designed to provide a taper charge rate automatically and inherently, i.e., high at the start of charge, when a high rate can be utilized, and low at the end of charge, when gassing begins. In addition, the equipment can be arranged to stop the charge at the proper time, and all without any manual attention whatever.

Batteries, used in starting, lighting, and ignition work on automobiles equipped with a generator for charging are charged whenever the engine is running at ordinary speeds. At very low speeds or when the engine is not running, the battery supplies current for lights, ignition, and cranking. In automobile service, the rate must be sufficient to keep the battery charged and yet not overcharge it.

Batteries used for reserve emergency, standby, or voltage regulation are kept fully charged by a trickle current or floating charge. A constant voltage of appropriate value impressed across the battery terminals is sufficient for proper charging.

Regardless of the charging method, the rate in amperes must not cause excessive gassing; neither should the cell temperature rise above 110°F (43°C).

164. Equalizing charge for lead-acid batteries. Wherever practicable, batteries are given an equalizing charge at regular intervals, for example, weekly for batteries used in propelling vehicles and other services in which the battery is discharged considerably and then recharged, monthly in floating service.

In cycle service an equalizing charge is a continuation of the regular charge at a low rate. In floating service the equalizing charge is obtained by raising the voltage across the battery to increase the current into the battery. The equalizing charge continues until all cells gas freely and until it is certain by taking voltage and gravity readings that *all* cells are fully charged.

As has already been pointed out, the object of charging is to withdraw all acid from the plates. In practice, the regular charges in cycle service are not always given long enough to withdraw all the acid completely from the plates. In fact, this is not necessary, provided the acid is completely withdrawn regularly by giving an equalizing charge. If this is not done and some sulfate is allowed to remain in the plates for a considerable time, it will gradually increase, the pores of the plate will become clogged, and the battery will lose capacity and deteriorate in such a way that it becomes increasingly difficult to restore it to its normal condition. To carry frequent (such as daily) regular charges to the full extent would involve an unnecessary amount of charging and gassing, which is not desirable.

A battery is not fully charged until all the acid has been driven out of the plates by charging. To charge a battery fully, do not try to charge to a fixed or definite gravity, but charge until the specific gravity or voltage stops rising.

165. Effect of temperatures upon lead-acid batteries. The cell temperature should not exceed 110°F (43°C). The effect of high temperature is primarily to shorten the life of the wood separators which are installed between the positive and negative plates of some types of cells.

There is always a tendency for wood in contact with sulfuric acid to become carbonized. This tendency is greatly increased at temperatures above 110°F. If a battery is operated regularly under such conditions, it will probably be necessary to renew the wood separators before the battery itself is worn out.

In the materials used in any commercial storage battery, there are also present some impurities which cause very slight action in the cell even when it is not in active operation. At high temperatures, these internal losses are increased, as is evidenced by the fact that a battery placed in storage will not lose its charge seriously over a period of, say, 6 months if kept in a cool place. If kept in a temperature around 100°F (38°C), it will lose much more of its charge in, say, 3 months.

Low temperature temporarily decreases both the discharge voltage and the ampere-hour capacity which can be taken out of the battery. The battery acts as if it were numbed by the cold and unable to make the same effort as at normal temperature. The effect of cold is only temporary, the battery returning to its normal state upon its return to normal temperature even without charge. There is no danger of the electrolyte freezing in a fully charged cell, but this is likely to occur in an overdischarged battery or in one that has had water added without subsequent charging.

166. Types of lead-acid storage batteries. Lead-acid storage batteries may be roughly divided into three groups, depending upon the class of service for which they are intended. Those for automobile starting, lighting, and ignition work consist of cells assembled in a single hard-rubber container (Fig. 4.192). Those for electric-vehicle applications consist of ironclad-type cells assembled in a suitable container (Fig. 4.193). Those for stationary service consist of cells enclosed in glass jars (Fig. 4.194).



FIGURE 4.192 Automobile type of lead-acid storage battery. [Electric Storage Battery Co.]

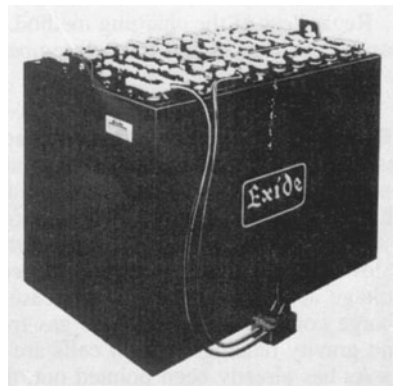


FIGURE 4.193 Ironclad type of lead-acid storage battery. [Electric Storage Battery Co.]



FIGURE 4.194 Lead-acid storage battery in enclosing glass jar. [Electric Storage Battery Co.]

167. Lead-acid batteries are easily kept in good condition for a long time of trouble-free service if the following maintenance instructions are observed:

1. Keep battery clean outside (Sec. 166).
2. Add water at regular intervals (Secs. 169 and 170).
3. Maintain battery in a healthy state of charge (Secs. 172 and 173).
4. Keep written records (Sec. 174).

168. Cleanliness

1. Keep the battery, its connections, and surrounding parts clean and dry by wiping with a dry rag, but do not remove the grease from the seal nuts. Keep the vent plugs in place and tight, and make sure their gas-escape holes are open. If electrolyte is spilled or if any parts are damp with acid, apply

a solution of ammonia or of baking soda in the proportions of 1 lb (0.45 kg) of soda to 1 gal (3.8 L) of water, then rinse with water and dry; do not allow solution to get into cells. If this treatment is given two or three times a year and the battery kept clean between times by regular washings with water or blowing off with an air jet, the life and service of the battery in general and trays or supports in particular will be increased considerably. Before hosing a battery without removing it from the compartment, consult equipment manufacturer for permission. When washing high-voltage batteries, open the connections at several places to avoid possible shocks.

2. If the terminals or connections show any tendency to corrode, scrape the corroded surface clean, wash it with soda solution or with ammonia solution, rinse with water, and coat it thinly with Vaseline or No-Ox-Id grease. No corrosion will occur unless electrolyte is spilled and allowed to remain.
3. Soda solution or ammonia will neutralize the effect of acid on clothing, cement, etc.

169. Adding water

1. During operation, water must be regularly added to each cell. Do not allow the surface of the electrolyte to get below the level specified by the manufacturer. Keep it above this point by removing the vent plugs regularly from all the cells and adding sufficient approved water to each cell as often as necessary. Do not fill so high that electrolyte will be lost through the vent plugs, eventually resulting in ruined cells. Less harm will result in allowing the level to get a little low than in adding water too high. After filling, be sure to replace and securely tighten the plugs. The intervals at which water must be added depend largely on the operating schedule, but it should not be necessary to add water more often than once a week; otherwise the battery is being given too great a charge.
2. In cold weather the time to add water is just before a charge, so that gassing (bubbling of the electrolyte resulting from charging) will ensure thorough mixing and any danger of the water freezing will be avoided.
3. Electrolyte loses some of its water by the charging of the battery and some by evaporation, but its acid is never lost in this manner; therefore, it will not be necessary to add new electrolyte unless some should get outside the cell through carelessness or by adding too much water so that the container is too full.

4. Nothing but water is required to be added to storage batteries. Never add any special powders, solutions, or jellies. A great many special powder solutions or jellies are injurious, having a corrosive or rotting action on the battery plates, reducing the voltage and capacity of the cells.
5. All the cells in the battery should take the same amount of water. If one cell takes more than the others, examine it for leakage.
6. Keep a written record of the amount of water that is being added from time to time.

170. Kind of water

1. The quality of water to add is distilled (not merely boiled) or other approved water. By approved water is meant that of which the battery manufacturers have analyzed a sample and found safe for their batteries. The local source of water is usually suitable, but before using it the battery manufacturers should be consulted. Most companies will do this without charge for users of their batteries. Transportation charges should be pre-paid, and the sample marked for identification.
2. If water is drawn from a tap or spigot, it should be allowed to run a few moments before it is used, to remove pipe accumulations. Water should not be transported or stored in a vessel of any metal except lead. Glass, earthenware, rubber, plastic, or wooden receptacles that have been used for any other purpose are satisfactory.

171. Discharge limits

1. In an emergency, little if any permanent harm will result if the battery is discharged to the full amount that it will give, provided that it is promptly and fully recharged.
2. If an ampere-hour meter is in use, the discharge should be stopped and the battery promptly recharged before or upon reaching its capacity limit in ampere-hours, as given by the manufacturers. The ampere-hour meter will run slow if the discharge is at high rates or if the meter is not calibrated at proper intervals and will then show less discharge than the battery actually gives. This fact should not be overlooked.
3. The specific gravity of the electrolyte falls on discharge and is therefore an indication of the amount of discharge. The difference between the full-charge and discharge values of the gravity depends on the type of cell. The manufacturer of the battery should be consulted for the proper values for any particular cell.

172. Hydrometer readings: specific gravity

1. If the specific-gravity or hydrometer reading is known, one can tell that the battery is fully charged or the amount by which it is discharged. With all cells connected in series, the gravity reading of one cell, known as a pilot cell, will indicate the state of discharge or charge of the whole battery.
2. The specific gravity is easily determined by allowing a hydrometer to float in the electrolyte. When the specific gravity is high, the hydrometer will not sink so far into the electrolyte as when the specific gravity is low (see Fig. 4.186).
3. To take a reading, insert the nozzle of the hydrometer syringe (Fig. 4.195) into the cell, squeeze the bulb, and then slowly release it, drawing up just enough electrolyte from the cell to float the hydrometer freely. With the syringe held vertically, the reading on the stem of the hydrometer at the surface of the liquid is the gravity reading of the electrolyte. After the testing is completed, always return the electrolyte to the cell from which it was taken.



FIGURE 4.195 Hydrometer syringe.
[Electric Storage Battery Co.]



FIGURE 4.196 Vent-plug hydrometer syringe.
[Electric Storage Battery Co.]

4. Both temperature and level of electrolyte affect the specific-gravity reading somewhat, and it is therefore desirable to record the temperature and level of the electrolyte at the same time its gravity reading is taken. A gravity reading should not be taken immediately after adding water, as the reading will give a false indication of the specific gravity. Allow a day or so for the water to mix with the electrolyte by gassing (bubbling) of the electrolyte resulting from charging or floating the battery.
5. After every 50-odd gravity readings of a pilot cell, a different cell should be used as a pilot to avoid lowering of its gravity due to possible loss of a small amount of electrolyte each time the gravity is read.
6. Hydrometer syringes are available for mounting through the vent plug of a pilot cell (Fig. 4.196). Since they are continuously in place, no dripping is experienced and the pilot cell need not be changed after every 50-odd readings.

173. Full-charge specific gravity

1. The proper specific gravity of the electrolyte with the cells fully charged and with the electrolyte at the proper level, as specified by the maker, will vary somewhat with different types of batteries. The manufacturer should be consulted for the proper value.
2. The specific gravity of a new battery is adjusted at the factory and will not require adjusting during the life of the battery unless electrolyte is actually lost out of the battery. If, however, electrolyte is lost, it should be replaced with electrolyte of about the same specific gravity as in the surrounding cells.

3. The full-charge specific gravity will decrease in value as the battery ages. No definite value can be given, but this decrease is very small: not over a few points per year at the most. This change is mentioned so that it will be understood.
4. Before adjusting low gravity, first make sure charging will not raise gravity. To do this, continue an equalizing charge until the specific gravity shows no rise and then for 3 h more. Never make a gravity adjustment on a cell which does not gas when it is being charged.
5. To adjust low gravity, first have ready sulfuric acid of specific gravity between 1.265 and 1.300, sufficiently pure for storage-battery use. Add this instead of water when restoring level until the gravity at the end of an equalizing charge is normal. Then stop adding acid and return to the use of water. A quicker method, but one requiring more work and acid, is to withdraw some of the low-gravity electrolyte from the cell and at once replace it with this new electrolyte. Do not allow a cell to stand partly empty. The amount to withdraw will have to be determined by trial, as it depends upon the gravities of both the old and the new electrolyte. Charge until all cells have been gassing for 1 h. Then, if the gravity is not normal, repeat adjustment until it is.
6. To adjust high gravity, remove some of the electrolyte and replace with water until the gravity at the end of an equalizing charge is normal.

174. Readings: written records

1. To facilitate following the operation of the battery, it is advisable to record the specific gravity and voltage of each cell at intervals. The relative state of charge should be the same each time readings for record are taken: for instance, on a manually cycled battery, at the end of a charge; on a floated battery, 10 to 15 min after starting the monthly equalizing charge.
2. Cell voltage readings should be taken while the charging current is being maintained and not after it has been reduced or interrupted. During these readings the battery voltage or the charging current into the battery should be kept constant. Cell gravities should be taken 10 or 15 min after charge has been completed and not while cells are gassing heavily.
3. The individual cell voltages, read to the hundredth of a volt, should be recorded once a month, in which case three or four times a year will be sufficient for recording the cell gravities. Otherwise cell gravities should be recorded monthly.
4. Review the monthly cell readings and compare with those for the previous month promptly. Plotting the readings saves time in reviewing and comparing. Prompt action upon indication of trouble may save time and expense later (see Sec. 175).

175. Trouble

1. The chief indications of trouble in a cell are falling off in gravity or voltage relative to the rest of the cells and lack of gassing on equalizing charge.
2. If a battery seems to be in trouble, the first thing to do is to give it an equalizing charge (Sec. 164). Then take a gravity reading of each cell. If all the cells gas evenly on the equalizing charge and the gravity of them all goes above a certain value as specified by the manufacturer, then all the battery needed was the charge. Before making an adjustment, determine whether the jar is cracked by adding water to the proper height and allowing the cell or jar to stand several hours, noting whether level falls. If a jar is cracked, change it. Never make a gravity adjustment on a cell which does not gas. If a

cell will not gas on the equalizing charging, investigate for impurities or inspect it for short circuits. For the latter, remove the elements from the jar and examine the separators carefully to make sure that none is broken or damaged, thus causing a short circuit. Also examine plates to see that they are in good condition, and note the height of sediment in the bottom of the jar. Remove any collection of "moss" on the top or edges of the plates. Handle elements very carefully so that plates will not be broken from the straps. Replace damaged separators.

176. Impurities. Impurities in the electrolyte will cause a cell to work irregularly. If it is known that any impurity has got into a cell, it should be removed at once. In case removal is delayed and any considerable amount of foreign matter becomes dissolved in the electrolyte, this solution should be replaced with new solution immediately, thoroughly flushing the cell with water before putting in the new electrolyte. If in doubt as to whether the electrolyte contains impurities, submit a sample for test.

177. Sediment. The sediment which collects underneath the plates need not cause alarm unless it deposits too rapidly, in which case there is something wrong with the way the battery is operated. In a new battery there is always a thin layer at the start. As the battery wears, the sediment becomes higher, but for batteries which are floated, the plates usually wear out before the sediment space is filled.

178. Putting battery into storage

1. If the use of the battery is to be temporarily discontinued, give it a charge until all the cells gas and add water to the cells during this charge so that the gassing will ensure thorough mixing and prevent freezing in cold weather. Add enough water to raise the level of the electrolyte to the proper level. After the charge has been completed, remove all fuses to prevent the use of the battery during the idle period. Make sure all vent plugs are in place.
2. At certain periods the battery should be reconnected, water added, and the battery charged. These periods are every 2 months in climates averaging 70 to 80°F (21 to 27°C) and every 6 months in climates averaging 40°F (4.4°C).

179. Putting battery into commission again. Add water, if needed, and give a charge until the gravity of the electrolyte has ceased rising over a period of 3 h.

NICKEL-IRON-ALKALINE BATTERIES

180. The Edison storage battery is the result of an effort to avoid many of the disadvantages of the lead-sulfuric acid combination and is a radical departure from it in every detail of construction. The positive plate consists of hollow, perforated, sheet-steel tubes filled with alternate layers of nickel hydrate and metallic nickel. The hydrate is the active material, and the metal, which is made in the form of microscopically thin flakes, is added to provide good conductivity between the walls of the tube and the remotest active material. The negative plate is made up of perforated, flat, sheet-steel boxes or pockets loaded with iron oxide and a small amount of mercury oxide, the latter also for the sake of conductivity.

The grids which support these tubes and pockets are punchings of sheet steel. The cell terminals and container are likewise of steel, and all metallic parts are heavily nickel-plated. The electrolyte is a 21 percent solution of caustic potash containing also a small amount of lithium hydrate. All separators and insulating parts are made of rubber. The details of the construction of the Edison storage battery are shown in Fig. 4.197.

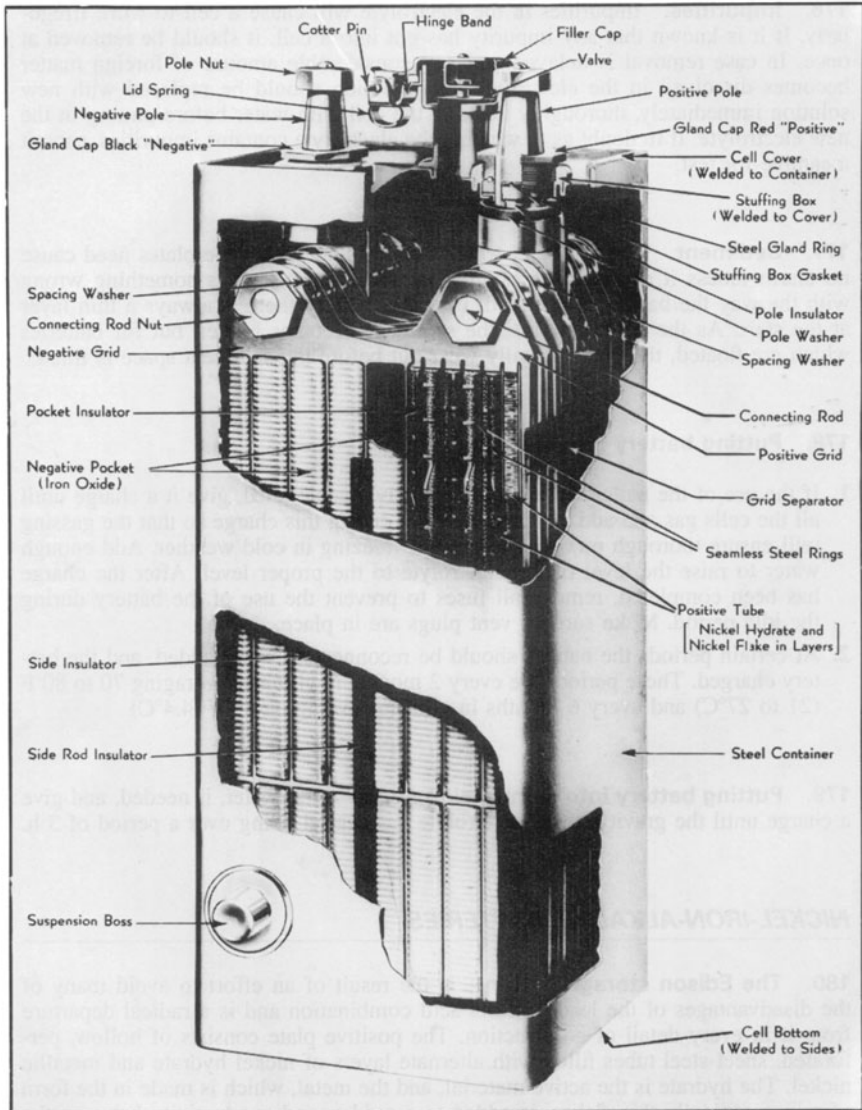


FIGURE 4.197 Edison nickel-iron-alkaline storage cell with container cut away to show construction detail. [Electric Storage Battery Co.]

The current used in charging causes an oxidation of the positive plate and a reduction of the negative, and these operations on discharge are reversed. The electrolyte acts merely as a medium and does not enter into combination with any of the active material as it does in the acid battery. Its specific gravity remains practically constant throughout the complete cycle of charge and discharge. The charge and discharge curves are shown in Fig. 4.198.

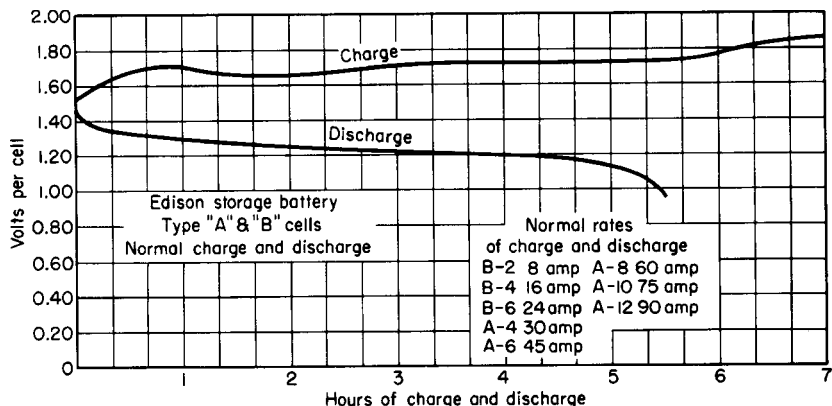


FIGURE 4.198 Charge and discharge curves of Edison battery.

The chief characteristics of the battery are ruggedness, due to its solid, steel construction; low weight, due to its stronger and lighter supporting metal; long life, due to the complete reversibility of the chemical reactions and the absence of shedding active material; and low cost of maintenance, due to freedom from the diseases, such as sulfation, so commonly met with in storage-battery practice and from the necessity of internal cleaning and plate renewals. The arguments against it are high first cost and high internal resistance. The importance of these must, of course, be weighed with the advantages and the resultant considered in each proposed installation. The battery has attained its chief prominence in vehicle propulsion, but its characteristics also recommend it for many other purposes.

181. Voltage characteristics. The voltage of each cell is approximately 1.5 V on open circuit, but it is higher than this when the battery is being charged and lower when being discharged. The voltage at any time depends upon state of charge or discharge, the temperature, and the density of the electrolyte. The average discharge voltage is approximately 1.2 V per cell. Typical voltage charge and discharge curves are shown in Fig. 4.198. Cells are generally discharged until the voltage drops from 1.0 to 0.9 V per cell. Further discharge is generally not satisfactory, since the voltage drops very rapidly if the discharge is continued past this point. The maximum voltage during charge will be between 1.80 and 1.90 V per cell. The voltage for any degree of discharge is affected slightly by the rate of discharge, as shown in Fig. 4.199.

182. Rating of nickel-iron-alkaline batteries. All batteries are given a normal ampere-hour capacity rating based on a certain rate of discharge to a final voltage of 1.0 V per cell. Some current ratings are based on a 5-h continuous discharge rate, and others on a 3 1/3-h continuous rate.

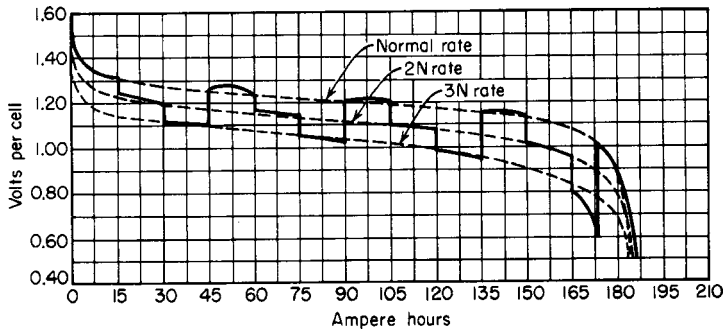


FIGURE 4.199 Discharging at high rates: a four-cell battery, normal rate 30 A, discharged successfully at 30, 60, and 90 A, with comparison of continuous discharge at each of these rates. [Electric Storage Battery Co.]

The ampere-hour capacity for discharging continuously at a constant rate to a final voltage of 1.0 V per cell will be affected by the rate of discharge (Fig. 4.199). The higher the rate of discharge, the lower the capacity of the battery. The effect upon the capacity will not be so great, however, as it is for lead-acid batteries. After a high rate of discharge, the balance of the normal capacity of the battery can be obtained by continuing the discharge at a lower rate. If the battery is discharged intermittently, the normal capacity can be obtained unless the total elapsed time of discharge is excessively short. These batteries are very rugged and withstand very severe service. They are not harmed by occasional short-circuit discharges.

183. Charging. The best method of charging Edison batteries is by the average-constant-current method. The battery is connected in series with an adjustable resistance to a constant-potential dc supply, as shown in Fig. 4.200. The positive terminal of the battery should be connected to the positive terminal of the supply. The maximum voltage available at the batteries should be at least 1.85 times the number of cells in series. Throughout the charging period the rheostat should be periodically adjusted so that the average current will be maintained at its normal rated value. At each adjustment the current should be set a few amperes above the rated value so that by the time the next adjustment is made the current will not have dropped much below normal. The battery should be charged until a maximum voltage has been reached and maintained for 30 min. If an ampere-hour meter is used with the battery in charge and discharge, satisfactory charge is generally obtained by charging

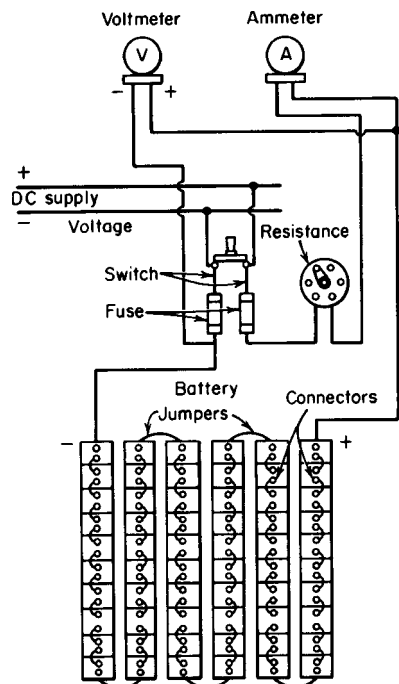


FIGURE 4.200 Correct connections for charging a battery at constant current through a variable resistor. [Electric Storage Battery Co.]

the battery at its rated current until the ampere-hours of charge is 125 percent of the ampere-hours of discharge. The condition of charge cannot be judged by means of specific-gravity readings. Automatic equipment for the control of the current during charge is being used to a greater extent.

Before starting to charge, see that the solution is at the proper level. If the solution is low, bring it to the proper level by adding pure distilled water as instructed in Sec. 169. If the battery is in a compartment, open the covers before starting a charge. If necessary, and if full capacity is not required, a battery can be taken off charge at any time and used.

184. Effect of temperature. Do not charge in a hot place or allow the temperature of the solution to exceed 115°F (46°C) on charge. High temperatures during charge or discharge will shorten the life of any kind of battery. Better efficiency is obtained if cells are charged at a temperature of 80 to 90°F (27 to 32°C). If the temperature of the solution exceeds 115°F while charging, allow the cells to cool before continuing the charge.

185. Charging at high rates. In an emergency, when time for a normal charge is not available, charging can be done at any higher rates than normal, provided there is no frothing and the temperature does not rise above 115°F (46°C).

186. Charging at low rates. If the discharge requirements are such that a low constant rate is used or if there is an intermittent rate of such value that for a given time period a low average rate will be had, then a charge rate of less than normal can be used, provided that this charge rate is approximately 120 percent of the constant or average discharge rate. The term *low discharge rate* is to be construed to mean a constant or average rate of less than 80 percent of normal.

When charging at low rates, it must be thoroughly understood that the required ampere-hour input must be put in and that, therefore, the time periods of charge must be correspondingly increased over that necessary to charge a cell fully at normal rate.

187. Boosting charge. An Edison battery can be boosted, i.e., given a supplementary charge, at high rates during brief periods of idleness, thereby materially adding to the available capacity. The principal limiting feature is that the temperature of the solution in the cells nearest the center or the warmest part of the battery does not exceed 115°F (46°C). A battery can be boosted whether it is entirely discharged or only partially discharged. The object of the boost is to supplement the remaining charge so that additional work can be done without waiting for regular charge.

The following table gives figures that can be used under average conditions, but values that will not cause excessive heating must be determined in each case by experience.

5 min at 5 times normal
15 min at 4 times normal
30 min at 3 times normal
60 min at 2 times normal

Frothing at the filler opening is an indication that the boosting has been carried too far (if the solution is at the proper height), and the boosting should be discontinued at once.

188. Overcharging is to be interpreted as charging a battery at the normal rate for periods in excess of the specified hours normal charge. For A, B, C, and N types, 12 h is considered an overcharge when the previous discharge has been taken only to an average of approximately 0.5 V per cell, and 15 h is considered an overcharge when the previous discharge has been taken to zero voltage and short-circuited. For G and L types these overcharge periods are, respectively, 8 and 10 h.

Overcharging in conjunction with proper discharges is used to compensate for either lack of work of battery or change of solution. In cases in which batteries have become sluggish owing to lack of work, as when a battery is seldom totally discharged in regular service, the battery should be periodically completely discharged to zero at normal rate and then short-circuited for 1 or 2 h. Follow with a regular overcharge.

With new Edison batteries better capacities will result if they are given plenty of work. It is, therefore, advisable to give new batteries additional work every 2 weeks for the first 2 months and every 2 months thereafter for 6 months. This should consist of a complete discharge to zero at normal rate with a short circuit of at least 2 h followed by an overcharge.

When an Edison battery does not give satisfactory capacity on discharge at rates several times normal, it is considered sluggish. This sluggishness or low capacity may result from persistent low-rate discharging, frequent low-rate charging, long stands, seldom discharging completely, or a weak solution. With the exception of the last named the primary cause is lack of work. Edison batteries thrive on work; therefore, the proper procedure is to discharge the battery completely at normal rate to zero and then short-circuit it for 2 h. Follow this by an overcharge. If the condition is rather pronounced, the cycle should be repeated. In the worst cases results can usually be obtained by several repetitions of the above. Ordinarily, this method will restore underworked batteries.

Completely discharge batteries before starting overcharges. Test for height of solution, and bring the solution to the proper height. Tests of solution height should be made before and after the battery has been completely discharged at normal rate, followed by a short circuit of at least 2 h and then an overcharge.

189. Nickel-Iron-Alkaline Batteries

(Electric Storage Battery Co.)

Cell type	Rating ^a		Weight, ^b lb per cell	
	Ampere-hour capacity	Normal rate, amp	Standard	High type
N2	11 ¹ / ₄	2 ¹ / ₄	1.94	
L20	12 ¹ / ₂	3 ³ / ₄	1.88	
L30	18 ³ / ₄	5 ⁵ / ₈	2.64	
L40	25	7 ¹ / ₂	3.24	
B1, B1 <i>H</i> ^c	18 ³ / ₄	3 ³ / ₄	5.3	6.7
B2, B2 <i>H</i> ^c	37 ¹ / ₂	7 ¹ / ₂	6.0	7.2
B4, B4 <i>H</i> ^c	75	15	9.5	10.9
B6, B6 <i>H</i> ^c	112 ¹ / ₂	22 ¹ / ₂	13.0	15.2
A4, A4 <i>H</i> ^c	150	30	16.5	19.3
A5, A5 <i>H</i> ^c	188	37 ¹ / ₂	19.6	22.5
A6, A6 <i>H</i> ^c	225	45	22.4	25.5
A7, A7 <i>H</i> ^c	263	52 ¹ / ₂	25.8	28.6
A8, A8 <i>H</i> ^c	300	60	31.2	35.9
A10, A10 <i>H</i> ^c	375	75	38.1	43.8
A12, A12 <i>H</i> ^c	450	90	47.3	53.5
A14, A14 <i>H</i> ^c	525	105	56.6	60.8
A16, A16 <i>H</i> ^c	600	120	62.9	68.0
A20 <i>H</i> ^c	750	150	84.8
A24 <i>H</i> ^c	900	180	102.5
G4, G4 <i>H</i> ^c	100	30	12.5	19.0
G6, G6 <i>H</i> ^c	150	45	17.5	21.1
G7, G7 <i>H</i> ^c	175	52 ¹ / ₂	20.8	23.0
G9, G9 <i>H</i> ^c	225	67 ¹ / ₂	24.0	27.5
G11, G11 <i>H</i>	275	82 ¹ / ₂	30.4	36.2
G14, G14 <i>H</i>	350	105	37.2	44.5
G18, G18 <i>H</i>	450	135	52.4	56.8
G22 <i>H</i> ^c	550	165	70.0
C4	225	45	24.3	
C5	281	56 ¹ / ₄	29.3	
C6	338	67 ¹ / ₂	34.4	
C7	394	78 ³ / ₄	39.8	
C8	450	90	45.5	
C10	563	112 ¹ / ₂	61.3	
C12	675	135	71.0	
D6	450	90	45.6	
D8	600	120	60.0	
D10	750	150	77.3	
D12	900	180	91.6	

^a Ratings are on basis of 5-hr rate for A, B, C, and N Type cells and 3¹/₂-hr rate for G and L Type, with average of 1.2 volts per cell and final of 1.0 volt per cell.

^b Weights are for completely assembled cells, including trays, connectors, etc.

^c The letter *H* indicates high-type cells; these cells have the same characteristics as the standard-type cells but are built higher so as to hold more electrolyte and are used in installations where frequent flushing is not convenient.

190. Maintenance of nickel-iron-alkaline batteries. The attention required by this battery is of the simplest character. It is chiefly important that the electrolyte be replenished from time to time with distilled water so that the plates will be entirely immersed and the outside of the cells be kept clean and dry, for if this is not done, leakage of current will occur with consequent corrosion of containers by electrolysis. Perhaps once or twice during the total useful life of the cell, the electrolyte may need renewal.

191. Cleaning. The cells, trays, and battery compartment must be kept dry, and care must be taken that dirt and other foreign substances do not collect at the bottom or between the cells.

Dirt and dampness are likely to cause current leakage, which may result in serious injury to the cells.

If protection of cell tops from moisture is required, they should be given a light coat of rosin or liquid Esbaline, this material being applied to the cover of the cell and sparingly to the outside of the filling aperture, care being taken not to get any great quantity on the lid hinge. Esbaline can be applied best with a small paintbrush, care being taken not to get any on the inside of lugs or on cell poles.

Rosin Esbaline must be applied warmed to approximately 170 to 190°F (77 to 88°C) and thinned to good paint consistency with benzine, etc.

A wet-steam jet or even an air blast will be found most satisfactory for cleaning but must not be used on cells while they are in the compartments. It has been found that a pressure of 70 lb with a 1-in rubber steam hose about 10 ft long into which has been inserted a piece of iron pipe about 12 in long with an orifice $\frac{1}{8}$ -in. in diameter will give wet steam with a velocity to clean the battery satisfactorily. (This orifice can be made by plugging one end of an iron pipe and drilling out with a $\frac{1}{8}$ -in drill.) When removing encrustations from the tops of cells, do not allow them to fall between or into the cells. Before reassembling, make sure that all poles, connectors, and jumper lugs are clean. Also cells, trays, and compartments must be dry before the battery is replaced.

Occasionally, cells and trays after being cleaned should be recoated with Esbalite, an alkaliproof insulating paint put out by the Electric Storage Battery Co.

The cells should be thoroughly cleaned of all grease, dirt, dried salts, and paint blisters or flakes and be perfectly free from all moisture. Painting may be done with a brush or, if the quantity is large, by dripping.

When cleaning and recoating with any cell coating be careful not to allow any of the materials to get into the cells.

192. Water or flushing. Do not allow the level of the solution to drop below the tops of the plates. Never fill higher than the proper level. If filled too high, solution will be forced out during charge.

For replenishing solution in Edison cells during operation use only pure distilled water or water which has been tested and approved by the Electric Storage Battery Co. Although pure distilled water is recommended for use in storage batteries generally, there are certain places in the United States where the local water supply is of such purity that it can be satisfactorily used. It is extremely important that no other water than pure distilled water be used unless it has received the approval of the Electric Storage Battery Co. after test at the factory's laboratories. The use of impure water will result in a slow poisoning of the electrolyte by an accumulation of impurities, the effect of which may not appear within a few months but will become apparent within the course of several years.

When solution has been spilled, use standard refill solution, which has a specific gravity of approximately 1.215 at 60°F (15.5°C).



FIGURE 4.201 Quick method of determining height of solution. [Electric Storage Battery Co.]

Battery compartments and trays must be kept dry and clean at all times; so take care when filling cells not to spill water over and around the cells and not to exceed specified height.

Test for height of solution before placing battery on charge. Do not test for solution height while battery is charging; the gassing during charge creates a false level.

A reasonably heavy-walled glass tube about 8-in (203 mm) long and of not less than $\frac{3}{16}$ in (4.8 mm) inside diameter with ends cut straight and fused enough to round the edges can be used as illustrated in Fig. 4.201 to find the level of electrolyte above plate tops. A short length of tightly fitting rubber tube forced over one end and projecting about $\frac{1}{8}$ in (3.2 mm) will prove a very good finger grip. Insert the tube until the tops of the plates are touched; close the upper end with the finger and withdraw the tube. The height of the liquid in the tube should be as specified by the manufacturer.

193. Specific gravity of nickel-iron-alkaline batteries. The density, or specific-gravity, reading of the electrolyte of an Edison cell has no value in determining the state of charge or discharge, as the specific gravity does not change during the charging or discharging of the cell to any marked extent. The small changes ordinarily observed are either due to large changes in temperature or loss of water from the electrolyte by evaporation or electrolysis in operating the cell. Therefore it is not necessary to take frequent readings to determine the specific gravity. The only time it is necessary to obtain a specific-gravity reading is to determine when a change of electrolyte would be advantageous. When making such readings, certain fundamental conditions must be observed. A suitable hydrometer must be obtained and used in accordance with the rules laid down in Sec. 172 on hydrometer readings. The glass container must be clean and must not contain acid or other impurities, as these tend to give lower readings than the true specific gravity.

Do not take a specific-gravity reading when the cell is charging, as the bubbles of gas contained in the electrolyte will cause a lower reading than the true one. Readings taken when the temperature of the electrolyte is either very high or very low will give results that will vary with the temperature. The specific gravities quoted in this section are for 60°F (15.5°C). Temperatures very much higher than this will give lower gravity readings, while temperatures very much lower than this will give higher readings.

Specific-gravity readings taken immediately after watering the cell are of no value, as the water has had no chance to be thoroughly mixed with the electrolyte and the resulting readings will be low. The specific gravity should be taken when the electrolyte is at the proper height after a complete charge. It is best to allow the cells to stand for a short period after the completion of the charge to permit free bubbles of gas to dissipate before taking readings. Corrections for temperature should be made by adding 0.0025 for each 10° above 60°F (each 5.5° above 15.5°C) to the observed reading or subtracting 0.0025 for every 10° below 60°F.

After taking a specific-gravity reading, return the solution to the same cell from which it was taken. Otherwise the gravity of the solution in the cell to which it is added will be

increased and the gravity of the solution in the cell from which it was taken will be decreased owing to the addition of water being made necessary.

The potash electrolyte in Edison cells has a normal specific gravity of approximately 1.200 at 60°F when at the normal level and thoroughly mixed by charging and when a sample is taken at least 1/2 h after charge to allow for dissipation of gas.

194. Solution renewal. Throughout the total useful life of the cell the electrolyte gradually weakens and may need renewal once or twice, depending on the severity of service, and in some cases, when maintenance and operation have been poor or when contamination has been allowed by the use of impure water, etc., a third time might be necessary.

The low-limit specific gravity beyond which it is inadvisable to run an electrolyte is 1.160. Operation at lower specific gravity than 1.160 should not be allowed, since such operation will produce sluggishness, loss of capacity, and rapid breakdown on severe service. Should the specific gravity be above 1.160 and at the same time sluggishness and loss of capacity be evident, do not immediately renew the electrolyte until it is found that an electrolyte sample sent to the factory shows a prohibitive accumulation of impurities and until the following treatment fails to produce marked improvement:

1. Discharge at normal rate to zero voltage. (When the current can no longer be kept up, either reverse the battery on the line with sufficient resistance in series or connect in series with another more nearly charged battery; then continue the discharge.) It is of prime importance that the rate be kept at normal throughout.
2. Short-circuit the battery in groups of not more than about five cells each for at least 2 h.
3. Charge at normal rate for 15 h for A, B, C, and N types and 10 h for G and L types.
4. Discharge at normal rate to approximately 1.0 to 0.9 V per cell.
5. Charge at normal rate for 7 h for A, B, C, and N types and 43/4 h for G and L types.
6. Discharge at normal rate to approximately 1.0 to 0.9 V per cell.

If the cells do not respond noticeably to this treatment, there is probably very marked contamination of the electrolyte, and the result of the analysis of a representative sample sent to the manufacturer's factory in accordance with instructions will show this. Therefore, regardless of the specific gravity, the electrolyte should be replaced as follows:

1. When previous electrolyte has reached approximately the low limit of 1.160, the new solution should be standard renewal.
2. When previous electrolyte is 1.190 or above, the new solution should be standard refill.

It is always advisable, in case the battery exhibits trouble of any sort, to communicate all details to the manufacturers or their representative, so that immediate advice may be obtained.

Do not use any other solution than Edison electrolyte. Do not pour out old solution until you have received new solution and are ready to use it. Never allow cells to stand empty. State type and number of cells when ordering Edison electrolyte for renewal.

When ready to renew solution, first completely discharge the battery at normal rate to zero and short-circuit for 2 h or more. This is done to protect the elements. Then empty cells completely. It is not necessary to shake or rinse cells, and under no circumstances should cells be filled with water.

Immediately after emptying each cell, pour in new solution. Do not allow to stand empty. Fill to exactly the proper height. For this purpose use a clean glass or enamelware funnel. A plain iron funnel can be used if it has no soldered seams, but do not by any means

use one of tinned or galvanized iron. A clean rubber tube can be used to siphon the solution directly from the container to the cell. If the tube is new, it should be thoroughly soaked in electrolyte for a couple of hours in such a position as to retain the solution. This is to remove thoroughly any impurities on the rubber. Fill to exactly the proper height, for if cells are filled too full when renewing the solution and allowed to remain that way, the specific gravity of the electrolyte will be too high when the level of the solution returns to proper height. This condition may lead to serious results and can easily be avoided by reasonable care.

Do not attempt to put in all solution received, as an excess is allowed to make up for any loss due to spilling. It may be necessary to add some more electrolyte after cells have stood a little time, as some electrolyte may be absorbed by the plates.

The specific gravity of the Edison electrolyte for renewal as shipped is about 1.250, but this will quickly fall to normal when put into a battery, owing to mixture with the old, weak solution remaining in the plates.

Do not attempt to use the electric filler for refilling cells. It was not designed for this purpose and will not work.

When the new electrolyte is in and the battery is again connected for service, give it an overcharge at the normal rate as outlined under Sec. 188, "Overcharging."

195. Cautions in operation of nickel-iron-alkaline batteries

1. Never put lead battery acid into an Edison battery or use utensils that have been used with acid; you may ruin the battery.
2. Never bring a lighted match or other open flame near a battery.
3. Never lay a tool or any piece of metal on a battery.
4. Always keep the filter caps closed except when necessary to have them open for filling.
5. Keep batteries clean and dry externally.
6. Edison electrolyte is injurious to the skin or clothing and must be handled carefully. Solution spilled on the person should be immediately washed away with plenty of water.

196. Laying up nickel-iron-alkaline batteries. If the battery is to be laid up for any length of time, be sure that the plates are covered to the proper height by solution or electrolyte. The battery should be stored in a dry place. Do not leave it in a damp place, as damage to the containers may result from electrolysis. Never let the battery stand unfilled.

Edison batteries are easy to lay up. Merely discharge to zero voltage and short-circuit. They can be left standing idle indefinitely in this condition without injury.

New Edison cells have received sufficient cycles of charge and discharge before shipment to give considerable capacity above that rated. However, Edison cells will increase still further in capacity if thoroughly worked in. Therefore it is best, if new cells are to stand for some time before being put into commission, to discharge them to zero at normal rate and short-circuit at least 6 h.

When putting the battery back into commission, go over each cell and see that all poles and connections are in good condition as for a new cell. See that the plates are properly covered with electrolyte and then charged as here instructed. First, if not already discharged, discharge cells to zero at normal rate and short-circuit. Follow this by an overcharge at normal rate, and then discharge at normal rate. Then charge at normal rate for normal hours of charge. If the battery shows signs of sluggishness, repeat the overcharge and carry the discharge down to zero until cells are fully active; then give regular charge.

NICKEL-CADMIUM BATTERIES


197. Nickel-cadmium batteries are a relatively new addition in the United States to the storage-battery family. These batteries consist of an interleaved assembly of positive and negative plates (Fig. 4.202).

Cell containers are made of nickel-plated steel. Active materials, nickel hydroxide (positive) and cadmium oxide (negative), are encased in finely perforated steel pockets. Plates consist of rows of pockets crimped together and locked into steel frames under many tons of pressure.

Positive and negative plates are welded or bolted to heavy steel busbars. Plate groups are interleaved and are separated by thin plastic rods.

The alkaline electrolyte is a solution of potassium hydroxide.

The active materials are converted on charging and discharging in accordance with the chemical reaction, which may be written as follows:



On discharge of the battery the reaction proceeds in the forward direction, while on charge the reaction is reversed. The system stores chemical energy when the battery is

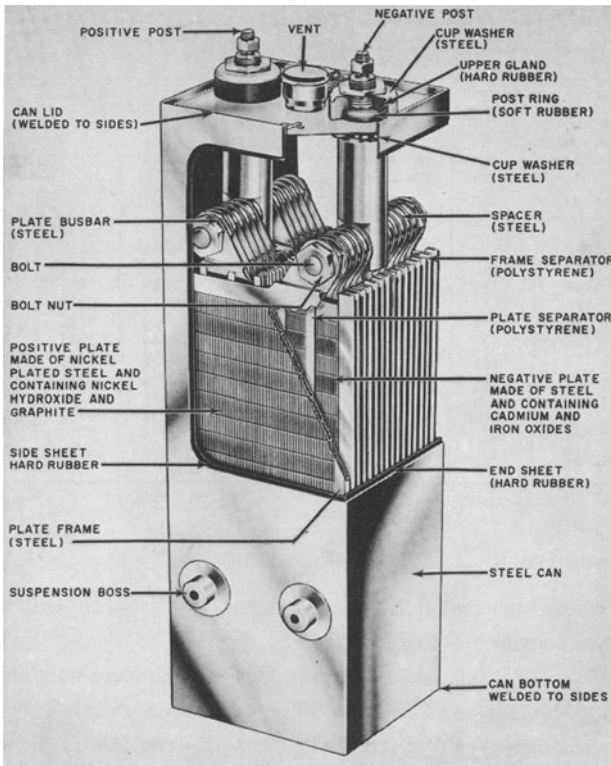


FIGURE 4.202 Cutaway view of a nickel-cadmium battery. [Nical Division of Gould-National Batteries, Inc.]

charged, and this chemical energy is converted back to electrical energy on discharge. Reversibility of this reaction under extreme environmental conditions is one of the outstanding properties of the nickel-cadmium electrochemical system.

During charge or discharge of a nickel-cadmium cell there is practically no change in the specific gravity of the electrolyte. The sole function of the electrolyte is to act as a conductor for the transfer of hydroxide ions from one electrode to the other, depending on whether the cell is being charged or discharged.

198. Data for Nickel-Cadmium Batteries

(Nicaid Division of Gould–National Batteries, Inc.)

Cell type No.	Amp-hr capacity at 8-hr rate	Width of tray, in over all	Height of tray, in over all	Length of tray containing, in. over all				Weight per cell, lb	
				2 cells	3 cells	4 cells	5 cells	Net	Ship.
EBZ17	80	6	16	13 ¹ / ₄	20 ¹ / ₈	25 ¹ / ₂	32 ¹ / ₄	21.0	24.0
EBZ19	90	6 ¹ / ₂	16	13 ¹ / ₄	20 ¹ / ₈	25 ¹ / ₂	32 ¹ / ₄	23.2	26.3
EBZ22	105	7 ¹ / ₄	16	13 ¹ / ₄	20 ¹ / ₈	25 ¹ / ₂	32 ¹ / ₄	26.5	30.7
EBZ25	120	8	16	13 ¹ / ₄	20 ¹ / ₈	25 ¹ / ₂	32 ¹ / ₄	29.7	33.5
EBZ28	135	8 ³ / ₄	16	13 ¹ / ₄	20 ¹ / ₈	25 ¹ / ₂	32 ¹ / ₄	32.8	37.4
EBZ31	150	9 ¹ / ₂	16	13 ¹ / ₄	20 ¹ / ₈	25 ¹ / ₂	32 ¹ / ₄	36.1	41.7
ERX23	165	7 ¹ / ₂	18	15 ¹ / ₄	23 ¹ / ₈	29 ⁵ / ₈	37 ¹ / ₄	36.1	41.7
ERX25	180	8	18	15 ¹ / ₄	23 ¹ / ₈	29 ⁵ / ₈	37 ¹ / ₄	38.7	45.6
ERX27	195	8 ¹ / ₂	18	15 ¹ / ₄	23 ¹ / ₈	29 ⁵ / ₈	37 ¹ / ₄	41.3	49.2
ERX29	210	9	18	15 ¹ / ₄	23 ¹ / ₈	29 ⁵ / ₈	37 ¹ / ₄	43.8	52.1
ERX33	240	10	18	15 ¹ / ₄	23 ¹ / ₈	29 ⁵ / ₈	37 ¹ / ₄	49.0	57.8
ERX37	270	11	18	15 ¹ / ₄	23 ¹ / ₈	29 ⁵ / ₈	37 ¹ / ₄	54.0	63.8

199. Characteristics

Nominal voltage per cell. 1.2 V (a 6-V battery consists of 5 cells).

Temperature range. −60 to +200°F (−51 to +93°C).

Maximum discharge current. Up to 25 times rated ampere-hour capacity.

Capacity at −60°F (−51°C). Up to 90 percent at low rates.

Internal resistance very low. 0.001 Ω for 10-Ah-type cell.

Full charge. By constant potential in 1 h at 1.55 V per cell.

Full charge. By constant potential in 6 h at 1.43 V per cell.

Charge, trickle. 1.35 V per cell to maintain charged battery.

Gassing discharge. None.

Gassing charge. Virtually none below 1.47 V per cell.

Vibration resistance. Excellent.

Shock. 80 g.

Altitude. Pressure-release valve opens 25 psi (172,369 Pa) above ambient.

Cycle life. No known limit.

Storage life. No known limit in any state of charge.

Charge retention. Up to 70 percent after 1 year at room temperature.

Orientation. Any position on discharge.

200. Advantages of nickel-cadmium batteries as stated by Nicad Division of Gould–National Batteries, Inc.:

High surge currents. Good voltage maintenance under extremely high current discharge conditions.

Constant-voltage source. Close voltage regulation during discharge (see Figs. 4.203 and 4.204).

Rapid-charge acceptance. Can be completely recharged at high rates without damage.

Long life. Designed to give exceptionally long life under cycle and float service.

Extreme-temperature operation. Normal and high-rate discharge and charge possible at temperatures from -40 to $+165^{\circ}\text{F}$ (-40 to $+74^{\circ}\text{C}$).

Excellent charge retention. Charged cells filled with electrolyte will retain approximately 70 percent of their charge after 1 year of idle storage at normal temperature.

Storageability. Can be laid up in any state of charge for long periods without attention or fear of deterioration.

Discharge in any position. Can be discharged in any position.

Easy maintenance. Negligible loss of water during service. Records of specific gravity are not necessary.

Vibration and shock resistance. Capable of withstanding up to 50 g shock and severe vibration.

Alkaline electrolyte. The potassium hydroxide electrolyte does not give off corrosive fumes on charge or discharge.

Pressure sealing. The smaller cells are normally provided with pressure-sensitive sealed vents.

Economy. Low cost per year due to long life. Very low maintenance costs. Low-cost, high-rate performance.

Small size and light weight. Nicad sintered plate batteries are smaller and lighter than conventional batteries under high-current-drain conditions.

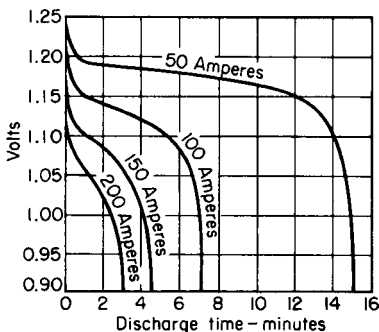


FIGURE 4.203 Typical discharge characteristics for a high-rate nickel-cadmium cell. [Nicad Division of Gould–National Batteries, Inc.]

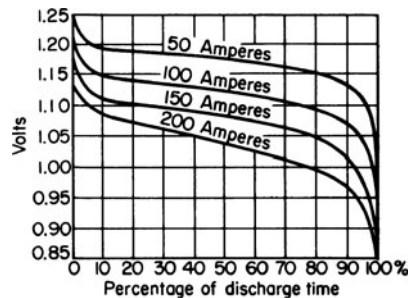


FIGURE 4.204 Discharge-voltage characteristics of a nickel-cadmium cell. [Nicad Division of Gould–National Batteries, Inc.]

201. Installation and care of nickel-cadmium batteries. The following instructions for the installation and care of nickel-cadmium batteries are those recommended by the Nicad Division of the Gould–National Batteries, Inc.

202. Important precautions

1. Maintain the battery compartment, cells, and trays in a clean and dry condition. Dirt and moisture will cause self-discharge, corrosion, and eventual leakage of cell containers.
2. Check the electrolyte level *before* adding distilled water. Maintain correct electrolyte level, but do not add water in excess of the recommended maximum level. Do not spill water or electrolyte on the cells or trays.
3. The electrolyte is an alkaline solution of caustic potash—*not* sulfuric acid, as used in lead batteries.
4. Sulfuric acid or traces thereof will rapidly ruin the Nicad battery by corroding its steel plates and cell containers. Therefore, use only the hydrometer and level test tube furnished with the battery.
5. Do not discharge at normal rates below 1.10 V per cell. Repeated overdischarges will damage the battery.
6. Always keep the vent caps closed except when checking the electrolyte or adding water.
7. Never examine the cells with an open flame. Keep tools and other metal objects away from the battery.
8. Apply boric acid solution if electrolyte is splashed on person or clothing.

203. Installing the battery. Place the battery in a clean, dry room located so that it can be easily inspected and watered. On mobile equipment such as vehicles or ships it must be securely tied down.

Avoid placing the battery in a hot location (above 125°F, or 52°C) or where it will be exposed to corrosive gases or fumes.

It is not good practice to install Nicad batteries and lead-acid batteries in the same room unless there is ample ventilation to carry away fumes from the lead-acid batteries.

All battery rooms and compartments must have good ventilation and drainage, and at the same time cinders, road dirt, soot, dust, rain, snow, and seawater must be kept out.

Accumulations of dirt and moisture on cell tops and particularly between the cells will cause corrosion and leakage of cell containers.

Holes or gratings which permit ready entry of dust, water, etc., must be closed up. However, four small drainage holes (maximum diameter of holes $\frac{1}{4}$ in, or 6.35 mm) should be provided in the bottom, one at each corner of the compartment.

Compartments which have previously housed lead-acid batteries must be washed out, neutralized with ammonia or washing-soda solution, allowed to dry thoroughly, and then painted with Nicadvar asphalt paint. Wood liners must be removed and replaced by new ones. Ample space should be provided above the battery for inserting the electrolyte-level test tube and the hydrometer into the cells.

If the battery is to be serviced through the top of a compartment, allow a minimum clearance of 2 in (50.8 mm) between the top of the battery and the underside of the access cover.

If the battery is to be serviced from the side, the clearance between the battery and the ceiling of the compartment should be at least 8 in (203.2 mm).

Small stationary batteries can be placed directly on a clean, dry floor or on a suitable wall shelf. Large batteries should be placed on racks.

Check the electrolyte level and the specific gravity and be sure that the battery is thoroughly clean and dry before placing it in position.

Nothing should be placed or allowed to lodge in the open spaces between or underneath the cells. These air gaps serve as electrical insulation between the cells and are an essential part of the battery. For this reason they must be maintained open, clean, and unobstructed at all times.

Variation of specific gravity may be found between individual cells. A maximum variation of plus or minus 0.005 point is permissible. For example, if normal specific gravity called for is 1.210, a minimum of 1.205 and a maximum of 1.215 specific gravity is satisfactory.

The cell containers must not be grounded, and the bottoms of the cells must not be allowed to rest on any object. Battery trays should never be stacked directly on top of one another, nor should water or spilled electrolyte be allowed to accumulate under the battery.

All cables leading to the battery posts should be fitted with nickel-plated cable lugs. Do not use bare copper cable lugs or connectors. After connecting cable lugs to battery, cover lugs with Nicad petroleum jelly No. 32982.

All wiring to the battery should be properly spaced and firmly secured to prevent any chance of a short circuit.

Wires or cables should never be allowed to rest on top of the cells.

Never connect to the battery a device or instrument that might cause an unnecessary constant drain, however small, as it will ultimately discharge the battery when left standing on open circuit. Voltmeters, for instance, should be connected to the battery only by means of a normally open pushbutton switch.

If either side of a high-voltage battery is grounded, it will expose personnel and battery to hazardous conditions. The shock hazard to personnel is obvious. In such cases additional high-resistance grounds in any part of the circuit will cause trouble and possibly a serious short circuit. For example, an inductive surge from breaker operations can cause a slight ground to become larger and rapidly discharge the battery. When checking battery voltage, also take readings between each terminal of the battery and ground for possible leakage, as ground indicator lights may not show slight grounds.

Most storage batteries consist of a single series of cells of the same type and ampere-hour capacity. If the battery consists of more than one tray, be sure that the negative end terminal of each tray is connected to the positive end terminal of the following tray. Cells wrongly connected will receive a reverse charge and will be damaged if the condition is allowed to continue.

On completing the installation, make sure that no loose objects such as screws or tools have been accidentally left in the battery compartment.

Check and tighten all cell-post nuts, as loose electrical connections will heat up and can cause sparking.

Verify that every person who is going to take care of the battery has a copy of these instructions.

Mount the instruction card accompanying the battery in a conspicuous position for future reference.

204. Charging. The positive terminal post of every cell is identified by a plus mark on the cell container. When charging, always connect the positive terminal of the battery to the positive lead from the charger. Only direct current can be used for charging storage batteries. If only alternating current is available, a rectifier or a motor generator is necessary to convert the alternating into direct current. Information concerning various types of charging equipment is available from manufacturers.

When a battery is first placed in service, the charging rate may vary somewhat before it is stabilized. During the first week or two the adjustment should be checked every few days.

A reasonable amount of overcharging, particularly at low- or trickle-charge rates, has a beneficial effect on Nicad batteries. When in doubt at any time as to the state of charge, it is advisable to overcharge rather than to undercharge.

Variations in line voltage due to local conditions can be large enough to throw charge voltages off normal. A normal setting during the day may rise to a point of overcharge and excessive charging at night and on weekends. If such a condition exists, it is desirable to install a constant-voltage transformer ahead of the charger.

The open-circuit voltage is the voltage of a storage battery when standing idle, i.e., when it is neither on charge nor on discharge. All types of storage batteries standing idle for a period of time have an open-circuit voltage independent of the state of charge. It therefore cannot be used to indicate the state of charge of a battery.

The open-circuit voltage of a Nicad cell is approximately 1.30 V. Nicad batteries possess the characteristic common to all storage batteries that their voltage rises throughout the charge. Hence when the battery voltage ceases to rise and the charge current remains steady, it is an indication that the battery is fully charged. The voltage of a fully charged battery, still on charge, will depend upon the magnitude of the charge current; the heavier the current, the higher the battery voltage.

The accuracy of voltmeters and ammeters is of considerable importance. Temperature changes and even slight vibration can change their adjustment. Good storage-battery maintenance requires that meters, particularly panel-mounted ones, be checked periodically to an accuracy of 0.5 percent.

Several methods of charging batteries are described below.

205. Charging engine-starting batteries. The generator voltage regulator should be set so as to hold the battery voltage between 1.45 and 1.50 times the number of cells in the battery. Readings should be taken at the battery terminal posts with the voltage regulator at proper working temperature, with its cover in place, and only after the battery voltage has ceased to rise.

If the engine is started infrequently, as in emergency standby services, or if the engine is operated only for very short periods at a time (insufficient to keep the battery in a fully charged condition), it is recommended that the battery be maintained on constant trickle charge, preferably from a dry disk or plate, metallic rectifier, at a voltage equal to 1.40 to 1.45 times the number of cells in the battery. At this charge voltage the battery may require watering as often as every 6 to 9 months.

206. Trickle charging or floating. Fully charged batteries floated across the line should be maintained at a voltage equal to 1.40 times the number of cells in the battery. If the discharges, although momentary, are relatively heavy and frequent, the voltage should be raised to 1.45 times the number of cells in the battery to ensure that the total input will exceed the total output over a period of time.

Otherwise, the battery will become slowly discharged and require so-called equalization or overcharges from time to time to bring it back to a fully charged condition.

The recommended battery voltages will hold the individual cell voltages below 1.47 V. Above 1.47 V the cells will begin to gas and hence consume water. Variations in voltage up to a maximum of 0.05 V between the individual cells of a battery on float should be disregarded, as they are of no importance. One of the most valuable features of the Nicad battery is that its floating voltage is not critical, provided, of course, that it is high enough to compensate for the loads imposed on the battery from time to time. Floating at above 1.47 V per cell will not harm the battery, but its water consumption will be considerably increased, requiring additional attention.

Trickle charging is actually preservation charging and should be used only to keep a charged battery in a fully charged condition. It cannot be used as a substitute for normal charging of a discharged battery. Trickle chargers should be equipped with a variable resistance and a voltmeter of suitable range and accuracy. Information on suitable equipment for trickle and high-rate charging of Nicad batteries will be furnished by the manufacturer upon request.

207. Constant-current charging. This method consists of charging at a constant current, not for a definite length of time or to a definite end voltage, but until the battery voltage ceases to rise, indicating that the battery is fully charged.

The length of time required to charge the battery by this method depends on the magnitude of the charge current and the state of charge of the battery at the time it is put on charge.

It is usual to insert a variable resistance of suitable size between the dc line and the battery and to reduce the resistance from time to time by hand, during the charge, so as to hold the charge current reasonably constant.

A dc line voltage of 1.40 times the number of cells in the battery is necessary at the beginning of the charge and of 1.85 times the number of cells in the battery at the end of the charge. In theory, practically any rate of charge can be employed, provided that the electrolyte temperature, which is the limiting factor, is not allowed to exceed 145°F (63°C).

Too high a charge current, however, particularly if the electrolyte is above the maximum permissible level, may cause the electrolyte to be forced out of the cell vents.

When charged by the constant-current method at the normal (7-h) charge rate, Nicad batteries will commence to gas after about 4½ h, i.e., when the battery voltage has risen to about 1.47 V per cell. Therefore, if a period of more than 7 h between discharges is available, it is desirable to charge at a lower rate than normal. This will reduce gassing and consequently the amount of water required by the battery. For example, a 100-Ah battery has a "normal" charge rate of 20 A (for 7 h) but may conveniently be charged at 14 A for 10 h or 10 A for 14 h. The specific gravity of the electrolyte remains practically constant during charge and discharge; therefore, specific-gravity readings are not necessary.

208. Ascertaining state of charge. Open-circuit voltage readings (no current passing into or being delivered by the battery) *cannot* be used as an indication of the state of charge of any storage battery.

The density of the electrolyte of the Nicad battery does not change appreciably on charge or discharge, and specific-gravity measurements, therefore, do *not* indicate its state of charge at any time.

To determine the state of charge of a partially charged battery it becomes necessary to take simultaneous current and voltage readings. There are several ways of doing this, and for services in which it is necessary to determine the state of charge frequently a satisfactory method can generally be worked out.

For certain applications involving heavy rate discharges of short duration, such as switch tripping, it has been found advantageous to install a voltmeter and a fixed resistance near the battery to provide an artificial load equal in value to the normal load. Voltage readings obtained while the battery is connected momentarily to the artificial load indicate the ability of the battery to carry the normal load.

Information regarding methods and equipment can be obtained from manufacturers of nickel-cadmium batteries.

209. Discharging. Heavy discharges (such as engine starting) will not damage the Nicad battery. Do not, however, discharge the battery below 1.10 V per cell at from 3- to

10-h rates or below 1.20 V per cell at lower current rates. Overdischarging at low rates regularly continued below these end voltages will damage the battery and is an indication that the battery is too small for its work.

210. Maintenance. Keep the cells and trays clean and dry externally at all times. Moisture and dirt allowed to accumulate on top of and particularly between the cells will permit stray intercell currents, resulting in corrosion through electrolysis of the cell containers. For this reason any water or electrolyte spilled on the cells or the trays must be wiped off. Use compressed air or, better still, low-pressure steam to clean cells and trays. Do not allow dirt to enter the vents when cleaning cells. After cleaning, regrease the cell tops and connectors with Nicad petroleum jelly No. 32982 to protect the metal.

Batteries that are charged at high rates may gas heavily toward the end of charge, giving off minute quantities of potassium hydroxide. This combines with carbon dioxide in the air, forming potassium carbonate, which deposits a noncorrosive, inert white powder on the cell tops and connectors. Potassium carbonate is electrically conductive when damp and if allowed to build up can cause current leakage and possibly discharge the battery. Any accumulation should be removed with a brush or damp cloth.

Keep all vent caps closed to prevent air from entering the cells. Open caps only to check the electrolyte. Caps must be closed when the battery is charging.

Always check and service only one cell at a time.

Never place or drop any metal articles, such as post nuts, cable lugs, or tools, on or between the cells. These will cause heavy short circuits which may damage the cell containers.

Never permit sparks, open flame, or lighted cigarettes near a storage battery. All storage batteries when gassing give off a highly explosive mixture of hydrogen and oxygen. A nonmetallic flashlight is desirable for battery inspection. Keep all connections tight.

Use only spirit thermometers when taking temperature readings. Ordinary mercury thermometers may break. Mercury running into the cell between its plates will cause sparking and explosions.

Always keep the plates covered with electrolyte. Serious damage can be caused by exposing the tops of the plates to the air. If electrolyte has been spilled accidentally from the battery, proceed as described in Sec. 213.

211. Damage from impurities. Impurities of all kinds must be kept out of the cells, as they have a harmful effect and can eventually ruin the battery.

Even a trace of sulfuric acid can ruin a Nicad battery by attacking and corroding its steel plates and cell containers. To prevent contamination never use any tools or utensils such as hydrometers, funnels, rubber hoses, battery fillers, etc., which have been used at any time for servicing lead-acid batteries.

Any vegetable oil or grease accidentally introduced into the cells will cause them to froth on charge.

212. Electrolyte. The electrolyte (solution) in Nicad batteries is alkaline and consists of specially purified caustic potash (KOH, potassium hydroxide) dissolved in distilled water. The specific gravity of the electrolyte does not change with the state of charge but remains practically constant on charge and discharge.

The use of other than Nicad electrolyte can damage the battery. Ordinary commercial grades of caustic potash should never be used, as they are not sufficiently pure.

Nicad refill or renewal electrolyte of proper specific gravity is available in nonreturnable containers holding 5, 10, 15, 20, and 130 lb (2.3, 4.5, 6.8, 9, and 59 kg). Use an enamelware

or glass pitcher and funnel for filling cells with electrolyte or water. Earthenware, hard-rubber, and plastic utensils are also suitable.

Refill electrolyte is used to replace electrolyte accidentally lost in transit or otherwise, while renewal electrolyte is used when changing the electrolyte, as described in Sec. 216.

If electrolyte should be lost by accident from any of the cells, replace the lost quantity with Nicad refill electrolyte. If refill electrolyte is not available, take the battery out of service and add enough water to cover the plates (so as to prevent damage to the plates by exposing them to the air) and procure renewal electrolyte. Upon its arrival empty out all the old electrolyte and fill the cells with renewal electrolyte. Charge the battery and check that the specific gravity is correct and uniform in all the cells before putting the battery back into service.

213. Method of adjusting electrolyte specific gravity. Cells having lost their electrolyte in shipping or by accident should be filled immediately to the proper level with Nicad refill electrolyte, and no adjustment of electrolyte specific gravity will be needed. If, however, they have been filled with water pending the arrival of refill electrolyte, the following electrolyte adjustment treatment will be necessary.

Dump the weak electrolyte-water mixture from the cells and fill with refill electrolyte. Cells which have lost electrolyte in varying amounts need adjustment of electrolyte specific gravity. Adjustment should be made during charge and toward the end of the charge when the cells are gassing freely.

If electrolyte is too strong, add distilled water. If electrolyte is too weak, add special 1.400-specific-gravity electrolyte supplied by Nicad on request. Three adjustments may have to be made before the normal specific-gravity reading is obtained. Allow 30 min between each adjustment during charge.

The amount of distilled water or special 1.400-specific-gravity electrolyte required can be found only by trial. For example, one cell may need only half a syringe full to bring the electrolyte to normal specific gravity. Yet another cell may need several syringes full, depending on the size of the cell and the strength of the electrolyte in the cell.

Each time that electrolyte is withdrawn from a cell during this adjustment, it should be replaced with an equal amount of special electrolyte or water to maintain correct electrolyte level above the plate tops.

Once adjusted to the correct specific gravity at maximum level, the cell will need only distilled water to keep the electrolyte at maximum level.

The above-described method of adjusting the electrolyte specific gravity may seem slow and cumbersome but is necessary to ensure good performance and to maintain the capacity of the cells.

The electrolyte will readily absorb carbon dioxide from the air to form potassium carbonate, which has the effect of temporarily lowering the capacity of the battery. Electrolyte must therefore be stored in airtight containers. Cell vent caps should be kept closed at all times except when adding water or checking the electrolyte, and this should always be done as quickly as possible, opening only one vent cap at a time.

When handling electrolyte wear goggles and rubber gloves; avoid splashes. The electrolyte is injurious to skin and clothing and must therefore always be handled carefully. Particularly guard the eyes! A generous quantity of concentrated boric acid solution (5 oz of boric acid powder to each quart, or 0.14 kg/0.95 L, of water) should be kept handy in a bottle or open bowl for neutralizing any accidental splashes on person or clothing. Use an eyecup for eye injuries.

Boric acid powder will dissolve in warm water within 1 h. With cold water allow 24 h. Do not use the boric acid solution on cells or trays.

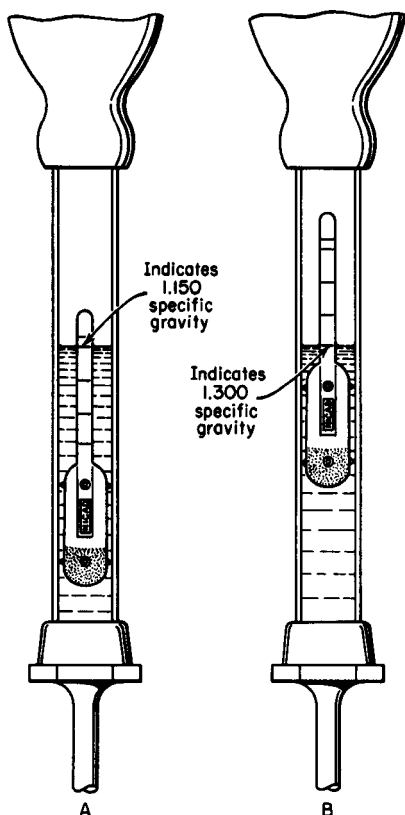


FIGURE 4.205 Application of hydrometer.
[Nicad Division of Gould-National Batteries, Inc.]

cell; then squeeze and release the bulb. This method will prevent Celoil (see Sec. 217) from being drawn up into the barrel. Draw up sufficient solution to permit the float to move freely, and then tap the glass barrel of the hydrometer gently with the finger to prevent the float from giving a false reading by sticking to the barrel wall.

The maximum level of the electrolyte is halfway between the tops of the plates and inside the cell covers (do not include vent height). At this level and down to the minimum level of $\frac{1}{2}$ in (12.7 mm) above the plate tops, the specific gravity of the electrolyte should be within the range specified on the wall card. These figures apply to normal temperatures. When extreme temperatures prevail and the observed hydrometer readings are outside these limits, it will be necessary to apply temperature- and electrolyte-volume-correction factors as described below.

To arrive at the true specific gravity of the electrolyte at 72°F (22°C), the temperature used as a base for purposes of calculation, observe and make a record of:

1. The electrolyte specific gravity
2. The electrolyte temperature
3. The electrolyte level above the plates

214. Checking the electrolyte.

Storage batteries normally lose water through natural evaporation and particularly when gassing freely on charge. While there are no corrosive or obnoxious gases given off by Nicad batteries, traces of the potassium hydroxide are lost with the gas, resulting in a gradual lowering of the specific gravity of the electrolyte over the years.

The level of the electrolyte as well as its specific gravity must therefore be checked periodically, as serious damage will be done to the plates if the electrolyte level falls below the top of the plates or the specific gravity is less than the minimum value stated on the wall card.

The electrolyte level is determined by inserting the $\frac{3}{16}$ -in. (4.8-mm-) bore plastic tube shipped with the battery through the vent until it rests on top of the plates, then placing the finger tightly over the end and withdrawing the tube for inspection. Be sure to return the electrolyte in the tube to the cell from which it was withdrawn.

A hydrometer (Fig. 4.205) is used to check the specific gravity of the electrolyte, which should be within the range specified on the wall card. The illustrations show the positions of the float in electrolyte which is too weak (Fig. 4.205B) and too strong (Fig. 4.205A).

Use only a Nicad hydrometer to take specific-gravity readings. First rest the tip of the nozzle firmly on top of the plates in the cell

If the electrolyte temperature is above 72°F, add to the specific gravity reading 0.001 for every 4° above 72°F (every 2.2° above 22°C).

If the temperature is below 72°F, subtract 0.001 from the specific-gravity reading for every 4° below 72°F.

For every $\frac{1}{4}$ in (6.35 mm) of electrolyte above the top of the plates add 0.005 to the specific-gravity reading.

The following examples show typical calculations:

EXAMPLE 1 Hydrometer reads 1.190. Electrolyte temperature is 96°F; add $0.001 \times (96 - 72) \div 4 = 0.006$. Specific gravity, corrected for temperature only, is 1.196. Electrolyte level is $\frac{3}{4}$ in; add $0.005 \times \frac{3}{4} \div \frac{1}{4} = 0.035$. Specific gravity, corrected for both temperature and volume, is 1.231.

EXAMPLE 2 Hydrometer reads 1.190. Electrolyte temperature is 40°F; subtract $0.001 \times (72 - 40) \div 4 = 0.008$. Specific gravity, corrected for temperature only, is 1.182. Electrolyte level is $\frac{3}{4}$ in; add $0.005 \times \frac{3}{4} \div \frac{1}{4} = 0.015$. Specific gravity, corrected for both temperature and volume, is 1.197.

A Nicad spirit thermometer part No. 91791 is necessary to apply proper temperature-correction factors to the hydrometer readings.

Gas bubbles in sample of electrolyte withdrawn from cells which are gassing must be allowed to disappear; otherwise false readings will be obtained.

Specific-gravity readings should not be taken on cells to which water or special 1.400-specific-gravity electrolyte has just been added, but deferred until they have had time to mix properly with the electrolyte during charge.

Always return the sample of electrolyte to the cell from which it was taken. After use wash out the hydrometer thoroughly with water to remove all traces of electrolyte as any electrolyte allowed to remain in the hydrometer will absorb carbon dioxide from the air to form a thin coating on the float, which will cause false readings.

215. Adding water. Always check the electrolyte level before adding any water to the cells. For maximum permissible level of the electrolyte refer to Sec. 214 or the wall card packed with the battery. Do not overfill.

Nicad batteries use very little water, particularly when they are on float or trickle charge. Batteries on float at a voltage equal to 1.40 times the number of cells in the battery will usually be found to require watering less than once a year.

If the cells are overfilled, the electrolyte will be forced out of the vents on charge and saturate the trays, causing electrolysis between the cells, corrosion of the cell containers, and troublesome grounds in the electrical circuit. Overfilling will also dilute the electrolyte to such an extent that the specific gravity will become too weak and the plates will be damaged.

Maintain the proper electrolyte level by the periodic addition of distilled water; do not add electrolyte. Do not use so-called distilled water for storage batteries, as it generally contains small amounts of sulfuric acid through being stored in carboys having contained sulfuric acid intended for use in lead batteries.

Some drinking water may be usable, but it is always advisable to forward to the manufacturer a laboratory analysis or a sample of the water to be used. Transportation should be prepaid. The minimum quantity of water to be sent is 2 qt (1.9 L), and the minimum quantity of electrolyte is 1 qt (0.95 L) for proper analysis. Ship in thoroughly cleaned glass or plastic bottles. Tag for easy identification. Do not send by mail. Send by express service. Label electrolyte "corrosive liquid."

Although the quantity of any impurities introduced into the battery each time the battery is watered may be insignificant, the cumulative destructive effect over a number of years will be considerable. Distilled water is so inexpensive and in most cases so easily procured that its use is easily justified in terms of battery life. Stills for producing distilled water at very low cost are available from a number of reliable manufacturers. Store distilled water in clean, airtight glass or plastic bottles or jars.

216. Change of electrolyte. Batteries which are charged at high rates for long periods and hence gas freely, with consequent loss of water and potassium hydroxide, may require change of electrolyte. Nicad batteries seldom if ever require change of electrolyte. However, it is desirable to check the specific gravity about once a year. When the specific gravity of the electrolyte, at a height of $\frac{1}{2}$ in (12.7 mm) above the tops of the plates, has fallen to the minimum specified, further operation of the battery will cause a rapid reduction in its life. At this point the battery should be discharged at the 7-h discharge rate to a voltage of 0.5 to 0.8 V per cell and have its electrolyte changed.

Remove the cells from their trays, and working on only one tray at a time, turn them upside down and empty out the electrolyte. Do not rinse the cells with water or electrolyte. Do not allow the cells to stand empty more than 30 min, as exposure of the plates to the air will damage the capacity. Fill immediately to the maximum height, i.e., halfway between the tops of the plates and inside the cell covers, with Nicad renewal electrolyte. The renewal electrolyte should, of course, always be procured in advance and be available before starting to empty the cells.

Avoid splashes. Protect the eyes! Wear goggles and rubber gloves.

While the above operations are performed, the trays or cells should not be stacked on top of one another, nor should the cell posts be allowed to touch anything except insulation. Any chance of short-circuiting the cells should be avoided. The trays should be examined for damage, and any broken parts replaced. Note that the trays are so designed that there is a clear space between the cells and the surface on which the trays rest.

After being thoroughly cleaned, preferably by steam or compressed air, the cells and the trays should be allowed to dry thoroughly and then painted or, preferably, dipped in Nicadvar, a specially prepared corrosion-resisting asphalt-base paint. After the battery has been reassembled, it should be given a 14-h charge at the 7-h charge rate before being put back into service.

217. Celoil. Nicad batteries normally contain a $\frac{1}{4}$ -in (6.35-mm) layer of Celoil floating on top of the electrolyte, which retards the natural evaporation of water from the electrolyte.

Celoil is a pure, acid-free, and nonsaponifying oil specially prepared for use in Nicad cells. Do not use anything but Nicad Celoil.

218. Laying up. When a Nicad battery is to be laid up for a few months, make sure that the specific gravity of the electrolyte is within the specified range and that the level is at least $\frac{1}{2}$ in (12.7 mm) above the tops of the plates.

Nicad batteries can be taken out of service in any state and left idle for years without deterioration.

Remove all the intertray connectors to break any stray currents, and store the battery in a cool place free from dust and moisture.

Regrease the cell tops to protect the metals with Nicad petroleum jelly No. 32982.

If the battery has been stored for some time, give it a freshening charge before placing it back in service. Charge battery for 7 h at normal rate or for 14 h at half normal rate.

219. Returning cells to factory. If a cell or battery appears to be abnormal in any respect or if an accident has occurred, it may be necessary to return it to the factory for test and repair.

Before a cell or battery is returned, a complete description of the unusual condition should be reported to the service department. If in the opinion of the company the return is indicated, full shipping instructions will be sent with return-material authorization.

Return shipments cannot be accepted without the company's authorization.

In case a cell has to be returned to the factory, it should be discharged at the 7-h rate to 0.5 to 0.8 V. The electrolyte must be left in the cell.

Tighten the post nuts, and drive a tapered rubber or wooden plug of suitable size into the vent hole. Turn the cell upside down. Leave it standing in this position for 1 h and then check that no electrolyte has leaked out.

Pack the cell, surrounded by a large quantity of liquid-absorbing material, such as sawdust, in a suitable container and ship prepaid in accordance with instructions which will be furnished by Nicad.

INSTALLATION OF STORAGE BATTERIES

220. In installing storage batteries, follow the rules of the National Electrical Code, which are given below.

221. Scope. The provisions of this section shall apply to all stationary installations of storage batteries.

222. Definition of nominal voltage. The nominal battery voltage shall be calculated on the basis of 2.0 V per cell for the lead-acid type and 1.2 V per cell for the alkali type.

223. Wiring and apparatus supplied from batteries. Wiring, appliances, and apparatus supplied from storage batteries shall be subject to the applicable provisions of the Code applying to wiring, appliances, and apparatus operating at the same voltage, however, overcurrent protection is not required for conductors from a battery rated less than 50 volts if the battery provides power for starting, ignition, or control of prime movers. The conductors are not required to be installed in a Chapter 3 wiring method (covered in Div. 9) and the normal grouping and system separation rules do not apply either. A disconnecting means is required for all ungrounded conductors fed from a stationary battery system operating over 30 volts. The disconnect must be readily accessible and within sight and not over 50 ft from the battery system.

224. Insulation of batteries of not over 250 V. The provisions of this section shall apply to storage batteries having the cells so connected as to operate at a nominal battery voltage not exceeding 250 V.

- 1. Vented lead-acid batteries.** Cells and multicompartiment batteries with covers sealed to containers of nonconductive, heat-resistant material shall not require additional insulating support.
- 2. Vented alkaline-type batteries.** Cells with covers sealed to jars of nonconductive, heat-resistant material shall require no additional insulation support. Cells in jars of conductive

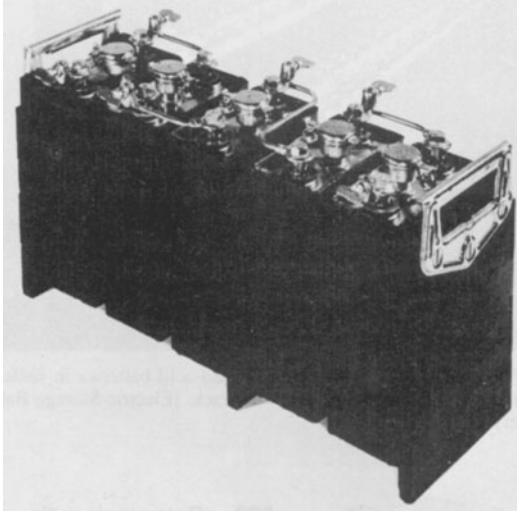


FIGURE 4.206 Alkali-type battery with cells mounted in an insulating tray. [Electric Storage Battery Co.]

material shall be installed in trays of nonconductive material with not more than 20 cells (24 V) in the series circuit in any one tray (Fig. 4.206).

3. *Rubber jars.* Cells in rubber or composition containers shall require no additional insulating support if the total nominal voltage of all cells in series does not exceed 150. If the total voltage exceeds 150, batteries shall be sectionalized into groups of 150 V or less, and each group shall have the individual cells installed in trays or on racks.
4. *Sealed cells or batteries.* Sealed cells and multicompart ment sealed batteries constructed of nonconductive, heat-resistant material shall not require additional insulating support. Batteries constructed of a conducting container shall have insulating support if a voltage is present between the container and ground.

225. Insulation of batteries of over 250 V. The provisions of Sec. 224 shall apply to storage batteries having the cells so connected as to operate at a nominal voltage exceeding 250 V, and in addition the provisions of this section shall also apply to such batteries.

Cells shall be installed in groups having a total nominal voltage of not over 250 V on any rack. Insulation, which can be air, shall be provided between racks and shall have a minimum separation between live battery parts of opposite polarity of 50 mm (2 in) for battery voltages not exceeding 600 V.

226. Racks and trays. Racks and trays shall conform to the following:

1. **RACKS** Racks, as required in this section, refer to frames designed to support cells or trays (see Fig. 4.207). They shall be substantial and be made of any of the following:
 - a. Metal so treated as to be resistant to deteriorating action by the electrolyte and provided with nonconducting members directly supporting the cells or with continuous insulating material other than paint or conducting members
 - b. Other construction such as fiberglass or other suitable nonmetallic materials

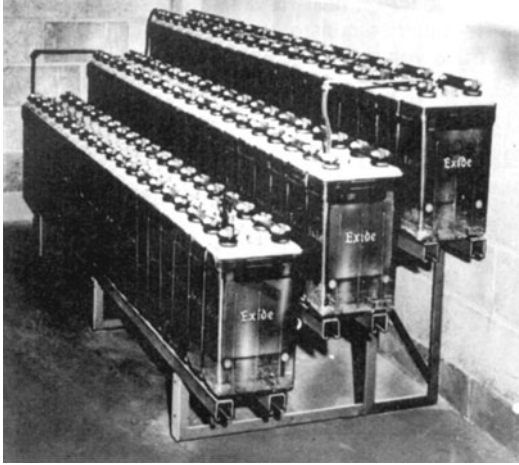


FIGURE 4.207 Installation of lead-acid batteries in sealed glass jars mounted on a three-tier rack. [Electric Storage Battery Co.]

2. **TRAYS** Trays are frames, such as crates or shallow boxes usually of wood or other non-conductive material, so constructed or treated as to be resistant to deteriorating action by the electrolyte (see Fig. 4.208).

227. Battery locations. Battery locations shall conform to the following:

1. **VENTILATION** Provisions shall be made for sufficient diffusion and ventilation of the gases from the battery to prevent the accumulation of an explosive mixture.
2. **LIVE PARTS** Guarding of live parts shall comply with Sec. 110.27 of the NEC. Working clearance is to be measured from the edge of the battery rack.



FIGURE 4.208 Lead-acid battery of cells in sealed glass jars mounted in a supporting tray. [Electric Storage Battery Co.]

228. Vents shall conform to the following:

1. **VENTED CELLS** Each vented cell shall be equipped with a flame arrester designed to prevent destruction of the cell due to ignition of gases within the cell by an external spark or flame under normal operating conditions.
2. **SEALED CELLS** Sealed batteries or cells shall be equipped with a pressure-release vent to prevent excessive accumulation of gas pressure, or they shall be designed to prevent scatter of cell parts in the event of a cell explosion.

229. Danger from gas with storage batteries. The hydrogen and oxygen given off the battery during charge, when unmixed with a large amount of air, form a combination that will explode violently if ignited by an open flame or an electric spark. If the battery is in a compartment, open or ventilate the compartment while the battery is being charged so that these gases may become mixed with air. Do not bring exposed flame, match, cigar, etc., near the battery when charging or shortly afterward.

GENERAL CONSTRUCTION MATERIALS

230. Wire nails are formed from wire of the same diameter as the shank of the nail is to be. The wire from which nails are made, hence the nail diameter, is measured by the steel-wire gage (see Table 85, Div. 2), which is the same as the Washburn & Moen gage and is used by practically all nail manufacturers, though it is sometimes given a different name.

The size of nails is designated by the *penny system*, which originated in England. Two explanations are offered as to how this curious designation came about. One is that the six-penny, fourpenny, tenpenny, etc., nails derived their names from the fact that 100 cost six-pence, fourpence, etc. The other explanation, which is more probable, is that 1000 tenpenny nails, for instance, weighed 10 lb (4.5 kg). The ancient as well as the modern abbreviation for penny is *d*, which is the first letter of the Roman coin denarius; the same abbreviation in early history was used for the English pound in weight. At any rate, the penny has persisted as a term in the nail industry.

Ordinary nails are made of steel wire with a natural bright-steel finish. The following special coatings, finishes, and heat treatments can be obtained at some additional cost:

Galvanized (hot-process)	Brass-plated	Blued
Galvanized (electro)	Cadmium-plated	Annealed
Cement-coated (regular)	Nickel-plated	Oil-quench-hardened
Cement-coated (clear)	Chromium-plated	Japanned
Coppered	Painted	Parkerized
Tinned	Acid-etched	

Nails made of copper, aluminum, brass, or stainless-steel wire are also available.

Nails are made in several different forms to meet the requirements of different applications. The more common types are illustrated in Fig. 4.209 with dimensional data are given in the following sections, including actual sized drawings of 2d up through 60d nails in Figs. 4.210 and 4.211.




FIGURE 4.209 Casing, finishing, shingle, and fine nails.

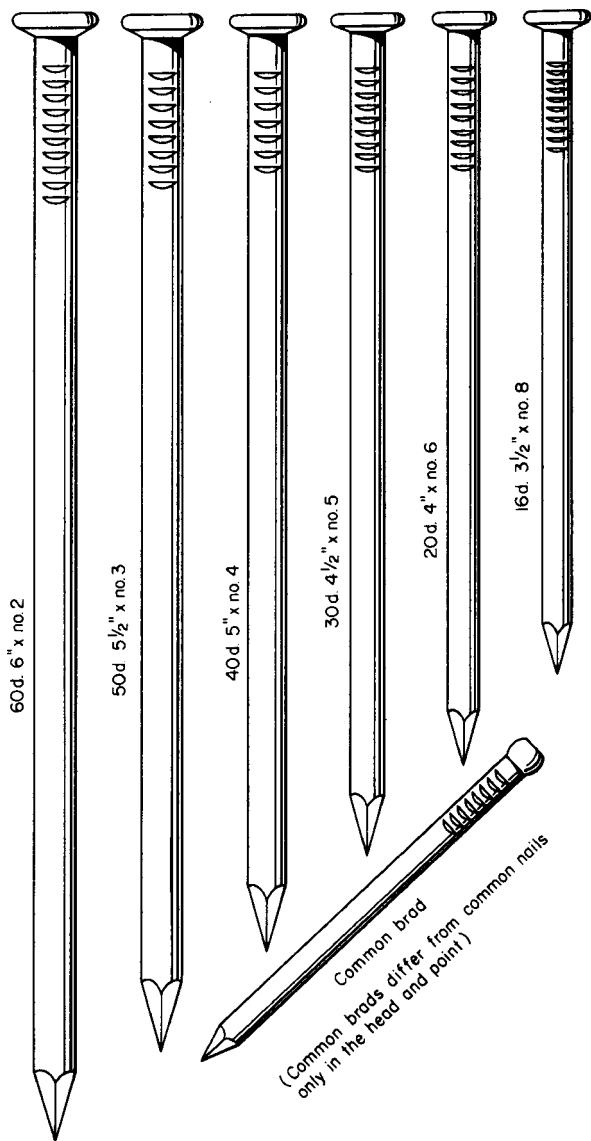


FIGURE 4.210 Common nails (actual size).

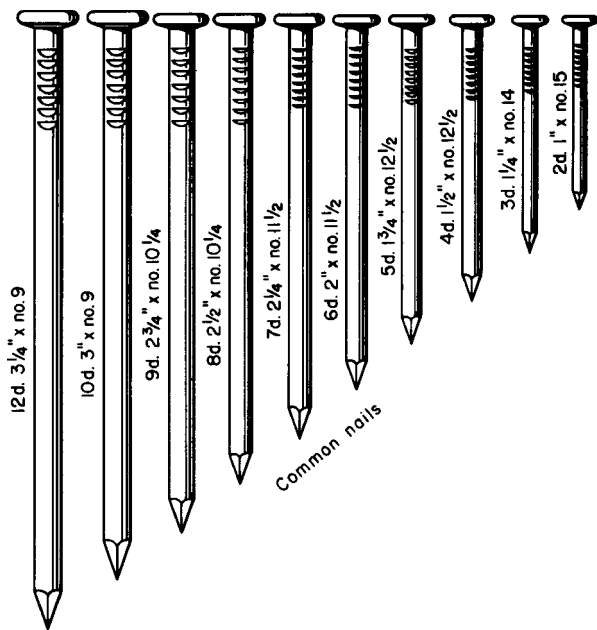


FIGURE 4.211 Common nails.

231. Dimensions of Common Nails and Brads

(American Steel and Wire Co.)

Size	Length, in	Steel-wire gage	Approximate no. per lb	Diameter in decimals, in	Approximate diameter, in	Nearest AWG gage
2d	1	15	876	0.0720	$\frac{5}{64}$	13
3d	1 1/4	14	568	0.0800	$\frac{5}{64}$	12
4d	1 1/2	12 1/2	316	0.0985	$\frac{7}{64}$	10
5d	1 3/4	12 1/2	271	0.0985	$\frac{7}{64}$	10
6d	2	11 1/2	181	0.1130	$\frac{7}{64}$	9
7d	2 1/4	11 1/2	161	0.1130	$\frac{7}{64}$	9
8d	2 1/2	10 1/4	106	0.1314	$\frac{1}{8}$	8
9d	2 3/4	10 1/4	96	0.1314	$\frac{1}{8}$	8
10d	3	9	69	0.1483	$\frac{9}{64}$	7
12d	3 1/4	9	63	0.1483	$\frac{9}{64}$	7
16d	3 1/2	8	49	0.1620	$\frac{5}{32}$	6
20d	4	6	31	0.1920	$\frac{3}{16}$	6
30d	4 1/2	5	24	0.2070	$\frac{13}{64}$	4
40d	5	4	18	0.2253	$\frac{7}{32}$	3
50d	5 1/2	3	14	0.2437	$\frac{1}{4}$	2
60d	6	2	11	0.2625	$\frac{17}{64}$	2

232. Dimensions of Casing, Finishing, Shingle, and Fine Nails

(American Steel and Wire Co.)

Nail diameters are measured by the steel-wire gage (see Div. 2, Table 85). Equivalent AWG gage numbers and fractional-inch equivalents are given in Sec. 231.

Size	Length, in.	Casing		Finishing		Shingle		Fine	
		Gage	Approx no. per lb	Gage	Approx no. per lb	Gage	Approx no. per lb	Gage	Approx no. per lb
2d	1	15½	1,010	16½	1,351	16½	1,351
3d	1¼	14½	635	15½	807	13	429	15 ^b	778
3½d	1¾	12½	345		
4d	1½	14	473	15	584	12	274	14	473
5d	1¾	14	406	15	500	12	235		
6d	2	12½	236	13	309	12	204		
7d	2¼	12½	210	13	238	11	139		
8d	2½	11½	145	12½	189	11	125		
9d	2¾	11½	132	12½	172	11	114		
10d	3	10½	94	11½	121	10	83		
12d	3¼	10½	87	11½	113				
16d	3½	10	71	11	90				
20d	4	9	52	10	62				
30d	4½	9	46						
40d	5	8	35						
2d ^a	1	17	1,560
3d ^a	1½	16	1,015

^a These sizes are called Extra Fine.

^b This nail is only 1½-in. long.

233. Dimensions of wood screws. Roundheaded wood screws do not measure full-length but are from 1/16- to 3/16-in short. For example, a No. 4 by ½-in round-headed wood screw measures about 7/16-in long under the head, and a No. 20 by 2-in screw measures about 17/8 in under the head.

234. Wood screws. Diameters are measured by the American Screw Co.'s gage and range in size from No. 0 to No. 30. They range in length from ¼ to 6 in. The increase in length is by eighths of an inch up to 1 in, then by quarters of an inch up to 3 in, and by half inches up to 5 in. Manufacturers' standards vary, but generally the threaded portion is approximately seven-tenths of the total length. There is no standard number of threads per inch for the products of all manufacturers. The gage and diameter refer to the unthreaded portion of the screw. The screws are available in three types of head (Fig. 4.212): flat, round, and oval. The oval head (see illustration of machine screws, Fig. 4.213) is used for especially high-grade work such as cabinetwork, which must present a very neat appearance.

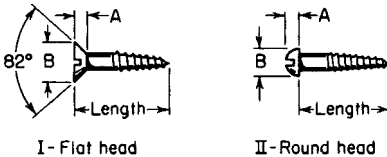


FIGURE 4.212 Wood screws.

The ordinary materials used for making wood screws are steel and brass. The flat-headed screws are regularly available in steel, with a natural bright finish or galvanized, and

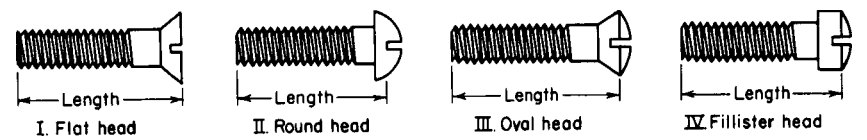


FIGURE 4.213 Machine screws.

Screw gauge no.	Diameter, in			Flat head		Round head				Clearance drill		Greatest length obtainable, in
	In decimals	In fractions	Nearest AWG gauge	A	B	A	B	Counterbore for head	Depth of hole - height of head A	No.	Diam. in	
0	0.05784	1/16-	15	1/16	7/64+	3/8
1	0.07100	5/64-	14	1/16	9/64-	1/2
2	0.08416	5/64+	12	1/16	5/32+	1/16	13/64	7/32		44	0.086	7/8
3	0.09732	3/32+	11	1/16	3/16	5/64	13/64	1 1/2
4	0.11048	7/64+	9	1/16	7/32-	5/64	13/64	7/32		33	0.133	1 1/2
5	0.12364	1/3-	8	1/16	15/64+	3/32	15/64	2 1/2
6	0.13680	9/64-	7	5/64	17/64+	3/32	1/4	17/64		28	0.1415	3
7	0.14996	5/32-	7	3/32	19/54-	7/64	3/32	3
8	0.16312	5/32+	6	7/64	5/16+	7/64	19/54	5/16		18	0.1695	4
9	0.17628	11/64+	5	7/64	11/32+	1/8	21/64	4
10	0.18944	8/16+	5	7/64	3/8-	1/8	11/32	23/64		10	0.1935	4
11	0.20260	13/64-	4	1/8	25/64+	9/64	3/8	4
12	0.21576	7/32+	4	1/8	27/64	5/32	25/64	13/32		7/32	0.2188	6
13	0.22892	15/64-	3	1/8	29/64	5/32	27/64	6
14	0.24208	1/4-	3	9/64	15/32+	5/32	29/64	29/64		1/4	0.250	6
15	0.25524	1/4+	2	9/64	1/2	11/64	29/64	6
16	0.26840	17/64+	2	5/32	17/32-	11/64	31/64	6
17	0.28156	9/32	1	5/32	35/64+	11/64	1/2	6
18	0.29472	19/64-	1	11/64	37/64	3/16	17/32	35/64		0.302	6
19	0.30788	5/16-	0	3/16	39/64-	17/32	6
20	0.32104	21/64-	0	13/64	5/8+	13/64	9/16	37/64		0.323	6
21	0.33420	21/64+	0	13/64	21/32	13/64	19/32	6
22	0.34736	11/32+	0	13/64	11/16-	7/32	5/8	6
23	0.36052	23/64+	2/0	7/32	45/64+	7/32	41/64	6
24	0.37368	3/8-	2/0	7/32	47/64	15/64	21/32	43/64		0.377	6
25	0.38684	21/64-	3/0	7/32	49/64-	15/64	11/16	6
26	0.40000	13/32-	3/0	15/64	25/32+	1/4	45/64	6
27	0.41316	13/32+	3/0	15/64	13/16	1/4	23/32	6
28	0.42632	27/64+	3/0	1/4	27/32	1/4	47/64	6
29	0.43948	7/16+	4/0	1/4	55/64+	17/64	3/4	6
30	0.45264	29/64	4/0	17/64	57/64	9/32	25/32	6

in brass. The roundheaded screws are made of steel, with a blued or nickel-plated finish, and of brass. The oval-headed screws are regularly made of brass with a nickel-plated finish.

235. Machine screws. Diameters are designated by the American Screw Co.'s gage and range in size from No. 2 to No. 34. They range in length from 1/8 to 4 in. The increase in length is by sixteenths of an inch up to 1 in, by eighths of an inch up to 2 in, and by quarters

of an inch up to 4 in. The threaded portion extends over either all or nearly all the total length. Machine screws are designated by their gage number and number of threads per inch. A No. 10-24 screw has a diameter corresponding to size No. 10 of the American screw gage and has 24 threads per inch. The gage number refers to the diameter over the thread. The screws are available with heads of four different types: flat, round, oval, and fillister (Fig. 4.213). The length of flatheaded screws is measured overall, the length of round-headed ones includes about one-half of the head, the length of oval-headed screws includes the countersinks, and the length of fillister-headed ones is measured from the rim of the head.

Standard machine screws are made of iron, aluminum, plastic, nylon, or brass. The iron screws may be provided with any one of the following finishes: natural bright, blued, nickel, brass- or silver-plated, silver- or copper-oxidized, various bronzes, japanned, lacquered, coppered, tinned, galvanized, Bower-Barff, gunmetal.

236. Data for Machine Screws

Screw gage No.	Diam, in.	Standard threads per in.	Screw gage No.	Diam, in.	Standard threads per in.
2	0.08416	48, 56, or 64	12	0.21576	20 or 24
3	0.09732	48 or 56	14	0.24208	18, 20, or 24
4	0.11048	} 32, 36, or 40	16	0.26840	} 6, 18, or 20
5	0.12364		18	0.29472	
6	0.13680	30, 32, or 36	20	0.32104	16 or 18
7	0.14996	30 or 32	24	0.37368	14, 16, or 18
8	0.16312	30, 32, or 36	30	0.45264	14 or 16
9	0.17628	} 24, 30, or 32	34	0.50628	13
10	0.18944				

237. Machine bolts and nuts. Machine bolts are designated by the diameter of the shank of the bolt. They range in length from 1½ to 30 in. The increase in length is by half inches up to 8 in. and by inches up to 30 in. Bolts are regularly furnished with one nut. The standard number of threads per inch for the bolts and nuts is as follows:

Diameter in inches	1/4	5/16	3/8	7/16	1/2	9/16	5/8	11/16	3/4	7/8	1
Number of threads/in., NC	20	18	16	14	13	12	11	10	10	14	14
Number of threads/in., NF	28	24	24	20	20	18	18	16	16	14	14

Bolts are made with either square or hexagonal heads and may be furnished with nuts of the corresponding shape. They are made of iron and may be finished with a natural black or galvanized coating.

238. Dimensions and Strengths of Machine Bolts and Nuts

<i>D</i>	<i>T</i>	<i>W</i>	<i>S</i>	<i>H</i>	<i>Q</i>	<i>U</i>	<i>R</i>	<i>V</i>	Safe tensile strength of bolt at root of thread at 6,000 lb per sq in.	Safe shearing strength at 7,500 lb per sq in.	
										Full bolt	Root of thread
1/4	3/16	3/8	17/32	7/16	3/16	7/16	1/2	5/8	160	370	200
5/16	15/64	15/32	21/32	35/64	1/4	17/32	5/8	3/4	270	575	340
3/8	9/32	9/16	51/64	21/32	5/16	5/8	47/64	57/64	410	830	510
7/16	21/64	21/32	15/16	3/4	3/8	23/32	27/32	15/64	560	1,130	700
1/2	3/8	3/4	1 1/16	27/32	7/16	13/16	61/64	15/32	760	1,470	940
5/8	15/32	15/16	121/64	15/64	9/16	1	15/32	127/64	1,210	2,300	1,510
3/4	19/32	1 1/8	119/32	119/64	11/16	1 3/16	13/8	143/64	1,810	3,310	2,260
7/8	21/32	1 5/16	155/64	1 1/2	13/16	1 3/8	119/32	161/64	2,520	4,510	3,140
1	3/4	1 1/2	1 1/2	147/64	15/16	1 9/16	113/16	27/32	3,300	5,890	4,130
1 1/8	27/32	1 11/16	225/64	131/32	1 1/8	1 13/16	23/32	29/16	4,160	7,450	5,200
1 1/4	15/16	1 7/8	221/32	25/32	1 1/4	2	25/16	227/32	5,350	9,200	6,670
1 3/8	1 1/32	2 1/16	259/64	225/64	13/8	2 3/16	217/32	33/32	6,340	11,130	7,900
1 1/2	1 1/8	2 1/4	3 3/16	219/32	1 1/2	2 3/8	247/64	33/8	7,770	13,250	9,700
1 5/8	1 7/32	2 7/16	3 3/4	213/16	15/8	2 9/16	231/32	35/8	9,090	15,550	11,360
1 3/4	1 5/16	2 5/8	323/32	31/32	13/4	2 3/4	33/16	357/64	10,470	18,000	13,080
1 7/8	1 13/32	2 13/16	363/64	3 1/4	17/8	2 15/16	225/64	45/32	12,300	20,700	15,370
2	1 1/2	3	4 1/4	3 15/32	2	3 1/8	35/8	427/64	13,800	23,560	17,250

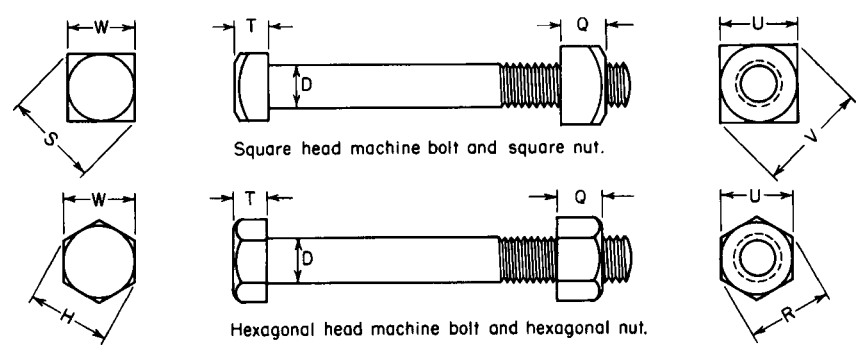


FIGURE 4.214 Machine bolts and nuts.

239. Data on carriage bolts are given in Div. 8.

240. Toggle bolts, which are used for fastening raceways and electrical devices to hollow tile or plaster-on-metal-lath surfaces, are of two general types. The screw type (Fig. 4.215) is the most frequently used but has the disadvantage that if it is ever necessary to remove the screw entirely, the toggle is lost within the wall. If the object fastened must

be removed and replaced, a nut-type toggle bolt (Figs. 4.216 and 4.217) can be used. When the type of Fig. 4.216 is used, it is usually necessary, after the device is in place, to cut off the part of the bolt that extends so as to give a neat appearance. The so-called plumbers' toggle bolt (Fig. 4.217) has a removable hexagonal cap so that the device can be inserted in the wall before the object to be fastened is slipped over the bolt. Then, on putting the cap in place, the whole bolt is backed into the wall, hiding the surplus thread from view. Cone-headed toggles (Fig. 4.218) are used principally for the erection of metal raceway and have the advantage that the toggle head will readily pass through the hole in the raceway backing. A spring-in type of toggle bolt is shown in Fig. 4.219. The wings are tempered spring steel having a cam action against the saddle which throws them to the open position. Toggle bolts are made in several diameters and lengths.

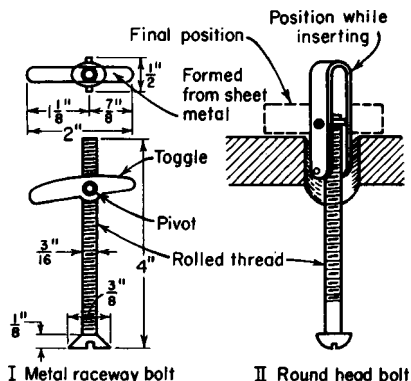


FIGURE 4.215 Screw-type toggle bolts.

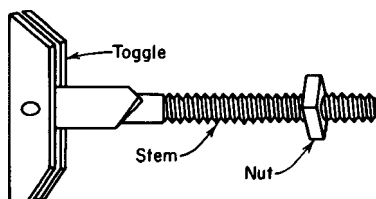


FIGURE 4.216 Nut-type toggle bolt.

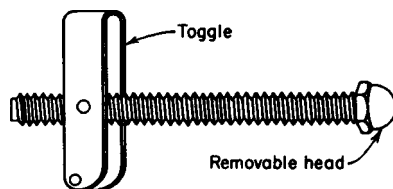


FIGURE 4.217 Plumbers' toggle bolt.


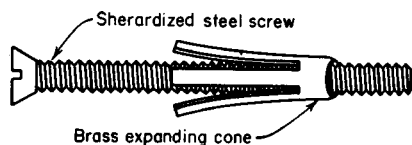


FIGURE 4.218 Toggle bolt for metal raceway.

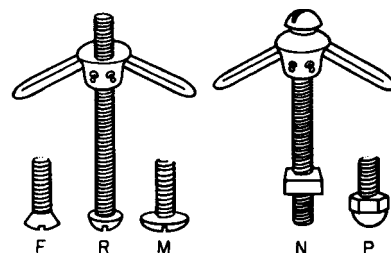

- F. With flathead screw.
- R. With roundhead screw.
- M. Mushroom head, furnished in $\frac{1}{8}$ -in diameter only.
- N. Reverse R or F screw, and add nut on any size.
- P. Plumbers' toggle; reverse R or F screw and add cap nut on any size.

FIGURE 4.219 Spring-in toggle bolt.

241. Lag screws are discussed in Div. 8.

242. Expansion sleeves, shields, and bolts are used for attaching equipment and devices to stonelike materials such as concrete, brick, tile, etc. They are made in a variety of types and consist of a lead sleeve or malleable-iron expansion shield which is inserted in a hole cut in the masonry. The equipment to be supported is attached to the sleeve or shield. As the screw is turned into the sleeve or shield, it expands the body of the sleeve or shield against the sides of the hole in the masonry so that it grips the masonry with considerable holding power. These devices are called by various trade names such as expansive anchors, expansion sleeves, expansion screws, or expansion bolts and anchors. Data and illustrations of some common types are given in the following sections.




FIGURE 4.220

243. Diamond multisize screw anchors (Fig. 4.220). These are designed to accommodate in one anchor several diameters of wood screws. The purpose is to reduce the number of anchors required to accommodate all sizes of screws. They are made in several lengths covering the majority of uses and are put up in boxes of 100.

For wood screws, No.	Length, in.	Size of drill, in.	Weight, lb per 100
6-8	$\frac{3}{4}$	$\frac{1}{4}$	1
6-8	$1\frac{1}{2}$	$\frac{1}{4}$	$1\frac{3}{4}$
10-14	$\frac{3}{4}$	$\frac{5}{16}$	$1\frac{1}{2}$
10-14	1	$\frac{5}{16}$	2
10-14	$1\frac{1}{2}$	$\frac{5}{16}$	$2\frac{3}{4}$
16-18	1	$\frac{3}{8}$	3
16-18	$1\frac{1}{2}$	$\frac{3}{8}$	$4\frac{1}{4}$
20-24	$1\frac{3}{4}$	$\frac{7}{16}$	$5\frac{1}{4}$




FIGURE 4.221

244. Diamond caulking anchors for use with machine screws (Fig. 4.221). Caulking anchors are put up in standard packages of 100 for sizes No. 10-24 and smaller and in packages of 50 for sizes No. 12-24 and larger. One caulking tool is in each box. All suggested safe loads are based on ideal conditions.

Diam of bolt or screw	Hole size, in.		Suggested safe load, lb	Weight, lb per 100
	Diam	Depth		
6-32	$\frac{1}{4}$	$\frac{3}{8}$	80	1
8-32	$\frac{3}{16}$	$\frac{1}{2}$	90	$1\frac{1}{2}$
10-24	$\frac{3}{8}$	$\frac{5}{8}$	175	2
12-24	$\frac{7}{16}$	$\frac{3}{4}$	320	$3\frac{1}{2}$
$\frac{1}{4}$ -20	$\frac{1}{2}$	$\frac{7}{8}$	400	$4\frac{1}{2}$
$\frac{5}{16}$	$\frac{5}{8}$	1	480	11
$\frac{3}{8}$	$\frac{3}{4}$	$1\frac{1}{4}$	720	16
$\frac{7}{16}$	$\frac{7}{8}$	$1\frac{1}{2}$	950	24
$\frac{1}{2}$	$\frac{7}{8}$	$1\frac{1}{2}$	1,000	24
$\frac{5}{8}$	1	2	1,250	41

245. Ackerman-Johnson expansive screw anchors.

The Ackerman-Johnson expansive screw anchor consists of a hard, biconoidal, internally threaded nut within a lead-composition expansive sleeve (Fig. 4.222). It is used for attaching fixtures or wiring to any stonelike material such as concrete, brick, tile, etc.

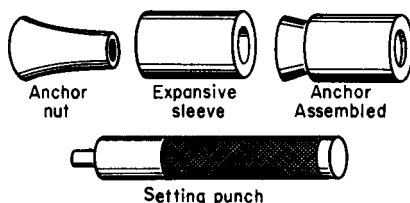


FIGURE 4.222

Method of Installing Anchor. When installed, the sleeve is driven farther toward the base of the tapered nut, being thereby expanded and swaged tightly against the sides of the hole, giving perfect holding contact throughout the length and circumference of the anchor.

To determine the anchor size best suited for the work, first select the screw or bolt to be preferred and then anchors of corresponding size number; for example, for work demanding No. 10-24 screws, specify No. 10-24 anchor; if $\frac{3}{4}$ -in bolts are required, use No. $\frac{3}{4}$ -in anchor.

A setting punch is included with every package of 50 or 1100 anchors.

Anchor size No.	Minimum dimensions of holes required, in.		Shipping weight, lb per 1000
	Diam	Depth	
6-32	$\frac{1}{4}$	$\frac{3}{8}$	$7\frac{1}{2}$
8-32	$\frac{5}{16}$	$\frac{1}{2}$	15
10-24	$\frac{3}{8}$	$\frac{5}{8}$	$22\frac{1}{2}$
12-24	$\frac{7}{16}$	$\frac{3}{4}$	34
$\frac{1}{4}$ -20	$\frac{1}{2}$	$\frac{7}{8}$	$50\frac{1}{2}$
$\frac{5}{16}$ -18	$\frac{5}{8}$	1	95
$\frac{3}{8}$ -16	$\frac{3}{4}$	$1\frac{1}{4}$	162
$\frac{7}{16}$ -14	$\frac{7}{8}$	$1\frac{1}{2}$	221
$\frac{1}{2}$ -13	$\frac{7}{8}$	$1\frac{1}{2}$	231
$\frac{5}{8}$ -11	$1\frac{1}{8}$	2	512

Hammerless Setting Tool. Anchors are set perfectly, in tile or other thin materials in which the hole extends through or has a weak bottom, by means of the hammerless setting tool (see Fig. 4.223).

The stud is screwed into the anchor, which is then inserted in position; turning the wheel moves the threaded stud rearward, thus drawing the anchor nut into its ductile sleeve, expanding the latter to any degree required for safe anchorage. The tool is furnished in sizes to use with the following sizes of anchor: 8-32, 10-24, 12-24, and $\frac{1}{4}$ -20.

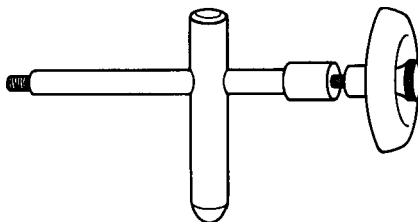


FIGURE 4.223 Hammerless setting tool.




FIGURE 4.224

246. Diamond lag-screw shield. The lag-screw shield (Fig. 4.224) is made of malleable iron in two wedge-shaped halves. The outer wedge slides forward when the screw is turned, creating a powerful expansion. The shield is galvanized by the Diamond hot-dip process.

Diam screw, in.	Outside diam and drill required, in.	Standard package	Long standard pattern		Short standard pattern	
			Length shield, in.	Shipping weight, lb.	Length shield, in.	Shipping weight, lb.
1/4	1/2	100	1 1/2	4 1/2	1	3
5/16	1/2	100	1 3/4	5	1 1/4	3
3/8	5/8	100	2 1/4	10	1 3/4	7 1/2
1/2	3/4	100	3	16	2	10
5/8	7/8	100	3 1/2	21		
3/4	1	50	3 1/2	24		

247. Interlocking Keystone Expansion Shields [For use with machine bolts or machine screws (Figs. 4.225 and 4.226).]

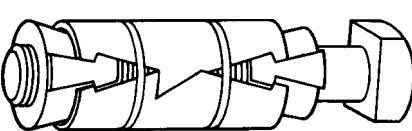


FIGURE 4.225 Double.

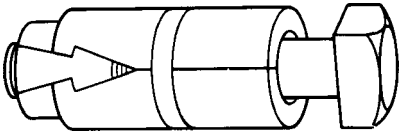


FIGURE 4.226 Single.

Diam, in.	Length, in.	Outside diam and drill required, in.	Weight, lb per 100	Diam, in.	Length, in.	Outside diam and drill required, in.	Weight, lb per 100
1/4	1 1/2	1/2	6	1/2	15/16	1/2	6
5/16	1 3/4	9/16	7	5/16	1 1/2	9/16	6
3/8	2	11/16	11	3/8	1 5/8	11/16	10
7/16	2 1/2	7/8	16	1/2	1 7/8	7/8	16
1/2	2 1/2	7/8	20	5/8	2	1	20
5/8	2 7/8	1	29	3/4	2 3/4	1 3/16	46
3/4	3 1/4	1 1/8	52				
7/8	4	1 1/2	88				
1	4 1/4	1 5/8	114				
1 1/4	6	2 1/8	300				
1 1/2	7 1/2	2 1/2	450				

248. Rawlplugs (Fig. 4.227) are made from stiffened strands of jute fiber. The fiber strands are compressed together by a patented process. Once in place, a Rawlplug can never crumble or pulp. It is unaffected by moisture or change in temperature.

The screw entering the Rawlplug automatically threads it, which permits removal and replacement of the screw as often as desired without stripping the threads so formed. The screw cannot be withdrawn by direct or indirect pulling.

Rawlplugs require only a small hole. This makes installation easy and assures a neat job. The Rawlplug is invisible when in position, as the diameter of the hole and Rawlplug is smaller than the head of the screw, giving the screw the appearance of being screwed into the masonry itself.

Owing to their composition, Rawlplugs resist and absorb shocks. They cannot work loose, slip, shear, or lose their viselike grip. When properly inserted, the Rawlplug should develop the entire strength of the screw or of the surrounding material, such as concrete, brick, stone, slate, marble, plaster, glass, hard rubber, gypsum block, wallboard, terracotta, composition walls and floors, wood, and metal.

Rawlplugs are made in the sizes listed below in lengths of $\frac{5}{8}$, $\frac{3}{4}$, 1, $1\frac{1}{4}$, $1\frac{1}{2}$, 2, $2\frac{1}{2}$, 3, and $3\frac{1}{2}$ in.

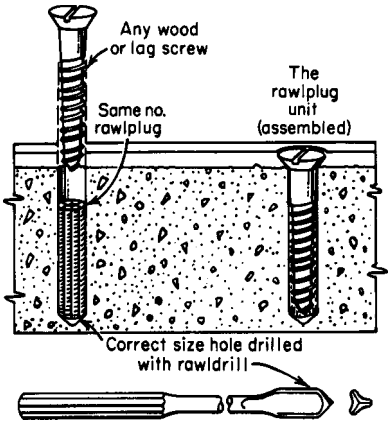


FIGURE 4.227 Installation of Rawlplugs.

Rawlplug No.	Use with screw No.	Diam drill required, in.	Rawldrill No. (not diam)	Use with tool holder No.	Size twist drill, in.
Rawlplug, Rawldrill, and Tool-holder Size Data					
6	5-6	$\frac{5}{32}$	6	14	$\frac{5}{22}$
8	7-8	$\frac{11}{64}$	8	14	No. 15
10	9-10	$\frac{3}{16}$	10	14	No. 10
12	11-12	$\frac{1}{4}$	12	14	$\frac{1}{4}$
14	14 ^a	$\frac{9}{32}$	14	14	$\frac{9}{32}$
16	16 ^a	$\frac{5}{16}$	16	20	$\frac{5}{16}$
20	20 ^b	$\frac{3}{8}$	20	20	$\frac{3}{8}$
Lag-screw Sizes ^c					
$\frac{3}{8}$	$\frac{3}{8}$	$\frac{7}{16}$			
$\frac{7}{16}$	$\frac{7}{16}$	$\frac{1}{2}$			
$\frac{1}{2}$	$\frac{1}{2}$	$\frac{5}{8}$			
$\frac{5}{8}$	$\frac{5}{8}$	$\frac{3}{4}$			

^a Or $\frac{1}{4}$ -in. lag screw.

^b Or $\frac{5}{16}$ -in. lag screw.

^c For $\frac{1}{4}$ -in. lag screw use No. 14 or No. 16 Rawlplug. For $\frac{5}{16}$ -in. lag screw use No. 20.

249. Rawl-Drives (Fig. 4.228) consist of a high-grade heat-treated steel pin with a flat head and split expanded central portion which, when driven in, grips the side of the hole with a spring action. They are easily and quickly installed, since they drive like a nail into a drilled hole no larger than the diameter of the pin itself. Rawl-Drives are for use only in

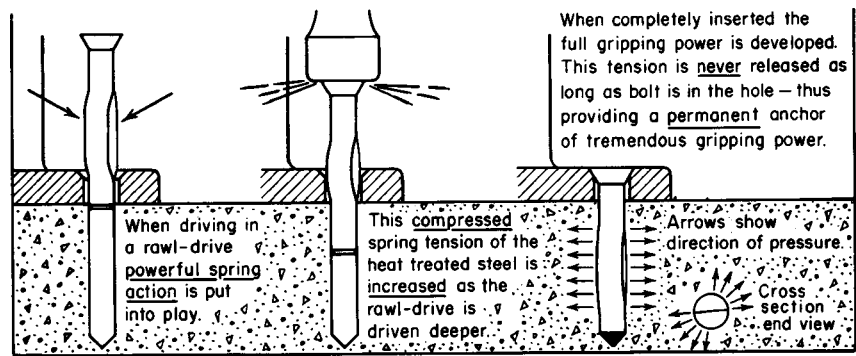


FIGURE 4.228 Principle of Rawl-drive.

solid masonry of brick, concrete, or stone. They should not be used in soft or brittle materials, such as plaster, wood, composition wood, glass, tile, etc. The manufacturer specifies that they have the following holding powers:

Holding Power of Rawl-Drives

Size Rawl-drive, in.	Average direct pull, lb	
	1-2-4 concrete	Common brick
$\frac{3}{16} \times 1\frac{1}{4}$	1,285	634
$\frac{1}{4} \times 1\frac{1}{2}$	2,050	1,183
$\frac{5}{16} \times 1\frac{1}{2}$	3,500	1,833
$\frac{3}{8} \times 2$	5,010	2,150
$\frac{1}{2} \times 3$	6,015	3,700












250. Data for Rawl-Drives

Diam of bolt and drill, in.	Length of bolt, in.	Use Rawldrill No. or size	Packed ^a in boxes of	Approx weight, lb per 100 bolts
$\frac{3}{16}$	1	No. 10	100	1 $\frac{3}{4}$
$\frac{3}{16}$	1 $\frac{1}{4}$	No. 10	100	2
$\frac{1}{4}$	1 $\frac{1}{4}$	No. 12	100	3
$\frac{1}{4}$	1 $\frac{1}{2}$	No. 12	100	3 $\frac{1}{2}$
$\frac{1}{4}$	2	No. 12	100	4
$\frac{5}{16}$	1 $\frac{1}{2}$	No. 16	50	6
$\frac{5}{16}$	1 $\frac{1}{2}$	No. 16	50	7
$\frac{3}{8}$	2	No. 20	25	10
$\frac{3}{8}$	2 $\frac{1}{2}$	No. 20	25	12
$\frac{3}{8}$	3	No. 20	25	13
$\frac{3}{8}$	3 $\frac{1}{2}$	No. 20	25	15
$\frac{1}{2}$	3	$\frac{1}{2}$ in.	25	25
$\frac{1}{2}$	3 $\frac{1}{2}$	$\frac{1}{2}$ in.	25	28
$\frac{1}{2}$	4	$\frac{1}{2}$ in.	25	30

^a A standard package consists of four boxes of the same size, length and type.

251. Anchor Selection Chart by Type of Material

(The Rawlplug Co., Inc.)

	 Rawl- plug	 Saber- tooth	 Multi- calk	 Calk-in	 Rawl- drive	 H/S drop-in	 Double	 Lag shield	 Nailir	 Spring- wing	 Rawly
Brick		•	•	•	•	•		•	•		
Concrete		•	•	•	•	•	•	•	•		
Concrete block	Use in any masonry material					•			•	•	•
Cinder block						•				•	•
Stone		•	•	•	•	•	•		•		
Marble		•		•		•			•		
Building tile						•				•	•
Ceramic tile						•				•	•
Terrazzo		•		•		•			•		
Terra cotta						•				•	•
Plaster										•	•
Dry wall										•	•
Slate						•					•
Stucco											
Glass											

252. Powder-actuated tools. A highly efficient method of attaching fasteners or materials to concrete or steel is the powder-actuated tool and fastening system. This integrated system (Fig. 4.229) permits fastening without drilling in one time-saving operation. It consists of a tool, a powder charge, and a fastener; and it fastens wood and steel to concrete of any compressive strength and to structural steel up to 1 in (25.4 mm) thick. A line of more than 100 drive pins, eye pins, and threaded studs meets the requirements for most jobs.

There are several major manufacturers of powder-actuated tool systems, and it is suggested that users be fully familiar with these tools and fastening materials. These manufacturers provide guidebooks on how to use the systems efficiently and safely. In some states and local areas mechanics who use power-actuated tools (Fig. 4.230) must be certified or licensed to indicate that they completely understand the use or proper applications of these systems.

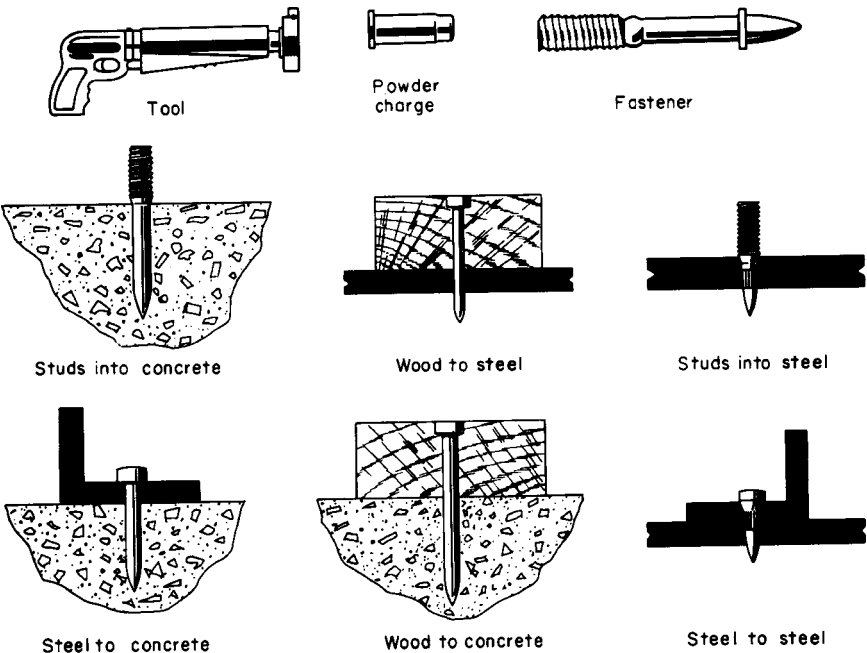


FIGURE 4.229 A basic powder-actuated tool system. [Ramset, Olin Corp.]



FIGURE 4.230 Ram-Master semiautomatic power-load feed assembly. [Ramset, Olin Corp.]

DIVISION 5

TRANSFORMERS

Construction, Types, and Characteristics	5.1
Connections: Polarity	5.51
Single-Phase Connections	5.52
Two-Phase Connections	5.54
Three-Phase Connections	5.55
Special Transformer Connections	5.64
Connections for Three-Phase Transformers	5.73
Parallel Operation	5.73
Connections and Applications of Autotransformers	5.75
Installation, Care, and Operation	5.79
Provisions for Different Types of Transformers	5.86
Provisions for Transformer Vaults	5.88
The Noise Problem	5.100
Pole and Platform Mounting	5.102
Saturable-Core Reactor	5.109

CONSTRUCTION, TYPES, AND CHARACTERISTICS

1. A transformer is an apparatus for converting electrical power in an ac system at one voltage or current into electrical power at some other voltage or current without the use of rotating parts.

2. A constant-voltage transformer (Fig. 5.1) consists essentially of three parts: the primary coil which carries the alternating current from the supply lines, the core of magnetic material in which is produced an alternating magnetic flux, and the secondary coil in which is generated an emf by the change of magnetism in the core which it surrounds. Sometimes the transformer may have only one winding, which will serve the dual purpose of primary and secondary coils.

The high-tension winding is composed of many turns of relatively fine copper wire, well insulated to withstand the voltage impressed on it. The low-tension winding is composed of relatively few turns of heavy copper wire capable of carrying considerable current at a low voltage.

3. Transformer terminology. The *primary winding* is the winding of the transformer which is connected to the source of power. It may be either the high- or the low-voltage winding, depending upon the application of the transformer.

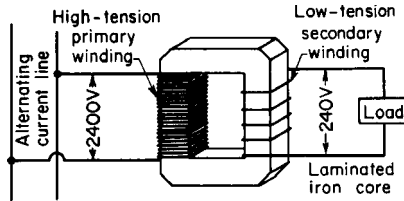


FIGURE 5.1 The elementary transformer.

The *secondary winding* is the winding of the transformer which delivers power to the load. It may be either the high- or the low-voltage winding, depending upon the application of the transformer.

The *core* is the magnetic circuit upon which the windings are wound.

The *high-tension winding* is the one which is rated for the higher voltage.

The *low-tension winding* is the one which is rated for the lower voltage.

A *step-up transformer* is a constant-voltage transformer so connected that the delivered voltage is greater than the supplied voltage.

A *step-down transformer* is one so connected that the delivered voltage is less than that supplied; the actual transformer may be the same in one case as in the other, the terms *step-up* and *step-down* relating merely to the application of the apparatus.

4. Transformer cores. Until recently, all transformer cores were made up of stacks of sheet-steel punchings firmly clamped together. One method of assembly and clamping of the sheets is shown in Fig. 5.2. Sometimes the laminations are coated with a thin varnish to reduce eddy-current losses. When the laminations are not coated with varnish, a sheet of insulating paper is inserted between laminations at regular intervals.

A new type of core construction consists of a continuous strip of silicon steel which is wound in a tight spiral around the insulated coils and firmly held by spot welding at the end. This type of construction reduces the cost of manufacture and reduces the power loss in the core due to eddy currents.

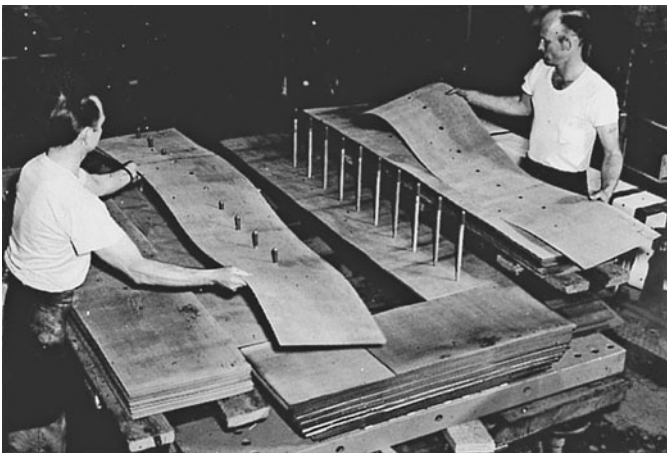


FIGURE 5.2 Assembly of transformer-core laminations.



FIGURE 5.3 Epoxycast step-down transformer assembly. [Isoreg Corp.]



FIGURE 5.4 Epoxycast high-voltage transformer in a NEMA enclosure. [Isoreg Corp.]

5. Classification of transformers

1. According to method of cooling
 - a. Self-air-cooled (dry type)
 - b. Air-blast-cooled (dry type)
 - c. Liquid-immersed, self-cooled
 - d. Oil-immersed, combination self-cooled and air-blast
 - e. Oil-immersed, water-cooled
 - f. Oil-immersed, forced-oil-cooled
 - g. Oil-immersed, combination self-cooled and water-cooled
2. According to insulation between windings
 - a. Windings insulated from each other
 - b. Autotransformers
3. According to number of phases
 - a. Single-phase
 - b. Polyphase
4. According to method of mounting
 - a. Pole and platform
 - b. Subway
 - c. Vault
 - d. Special
5. According to purpose
 - a. Constant-voltage
 - b. Variable-voltage
 - c. Current
 - d. Constant-current
6. According to service
 - a. Large power
 - b. Distribution
 - c. Small power
 - d. Sign lighting
 - e. Control and signaling

- f.* Gaseous-discharge lamp transformers
- g.* Bell ringing
- h.* Instrument
- i.* Constant-current
- j.* Series transformers for street lighting

6. Cooling of transformers. A certain amount of the electrical energy delivered to a transformer is transformed into heat energy because of the resistance of its windings and the hysteresis and eddy currents in the iron core. Means must be provided for removing this heat energy from the transformer and dissipating it into the surrounding air. If this were not done in a satisfactory manner, the transformer would operate at an excessively high temperature, which would destroy or harm the insulation of the transformer. The different methods of cooling employed are listed in Sec. 5 and described below.

In *self-air-cooled* transformers (Fig. 5.5), the windings are simply surrounded by air at atmospheric pressure. The heat is removed by natural convection of the surrounding air and by radiation from the different parts of the transformer structure. Air cooling has long been employed for transformers of very small capacity. The development of satisfactory coil insulation materials, such as porcelain, mica, glass, and asbestos, which will withstand higher temperatures than the more common insulating materials has made possible the application of air cooling to transformers of large capacity. Except in the smaller sizes, the sheet-metal enclosure is provided with louvers or gratings to allow free circulation of the air over and through the windings. Self-air-cooled transformers are commonly called *dry-type transformers*. The present-day use of self-air-cooled transformers has been extended to units of at least 3000-kVA capacity at 15,000 V.

In *air-blast-cooled transformers* (Figs. 5.6 and 5.7), the core and windings are enclosed in a metal enclosure through which air is circulated by means of a blower. This method has been used for large power transformers in ratings up to 15,000 kVA with voltages not exceeding 35,000.

In *liquid-immersed, self-cooled transformers*, the core and windings are immersed in some insulating liquid and enclosed in a metal tank. The liquid, in addition to providing



I. Ventilated dry-type with openings to aid circulation of air. [Siemens Energy & Automation, Inc.]



II. With solid-metal casing. [General Electric Co.]

FIGURE 5.5 Dry-type transformers.

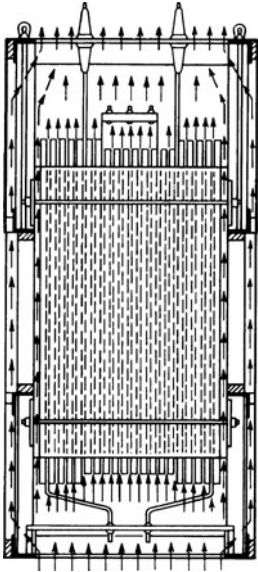


FIGURE 5.6 Longitudinal section of air-blast transformer, showing direction of air currents.

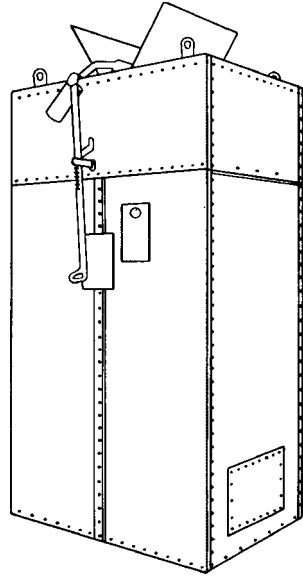


FIGURE 5.7 Exterior view of 1330-kVA air-blast transformer, showing the sheet-steel casing.

some of the required insulation between the windings, carries the heat from the core and windings to the surface of the tank. The heat is then removed into the surrounding atmosphere by natural convection of the surrounding air and by radiation from the tank. In the smaller sizes the tanks have a smooth surface (Fig. 5.8). In larger size, tanks are corrugated or finned or have external tubes (see Figs. 5.9 and 5.10), and in very large units the tanks must be supplied with external radiators (Fig. 5.11) through which the oil circulates by natural convection, owing to differences in temperature in the liquid. This method can be employed for units of any size or voltage rating, although large-capacity units become rather expensive and bulky. The common liquid employed is an insulating oil. Nonflammable and nonexplosive liquids have been developed for use as a cooling and insulating medium for electrical equipment. These liquids are used in transformers where their nonflammable and nonexplosive qualities warrant their additional expense. The use of such a liquid is particularly advantageous for transformers installed in buildings, since the transformer can then be installed in general areas without the use of a fireproof vault enclosure. Transformers insulated with such a liquid are designated as askarel-insulated transformers. Askarel has been banned by the U.S. Environmental Protection Agency and is being replaced in many instances by a listed less flammable nonpropagating liquid. See Sec. 450.23 of the National Electrical Code.

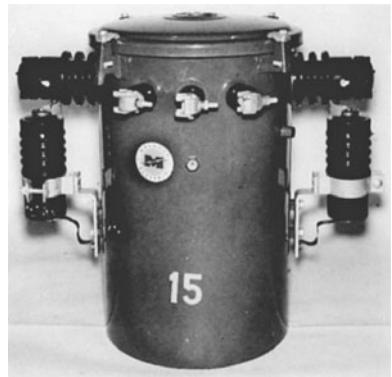


FIGURE 5.8 Small distribution transformer with smooth tank.

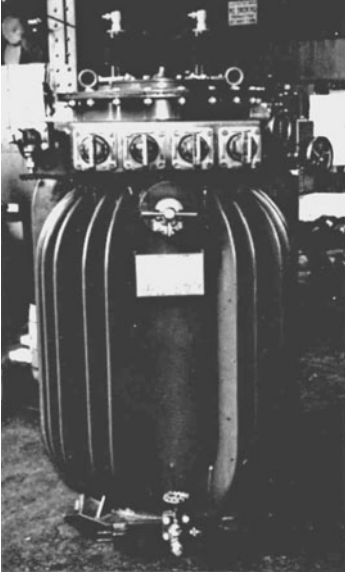


FIGURE 5.9 Medium-size transformer with corrugated tank.



FIGURE 5.10 Tubular-type tank as used on medium-size power transformers.



FIGURE 5.11 Liquid filled transformer utilizing silicone liquid listed by UL as a dielectric medium and less flammable per 450.23 of the NEC. [Dow Corning]

Large oil-immersed transformers are frequently cooled by means of a combination of *self-cooling* and *air-blast* (Fig. 5.12). The construction of the transformer is in general the same as for those which are oil-immersed and self-cooled, with the addition of a motor-driven blower or blowers mounted integrally with the transformer tank. The blowers provide a forced circulation of air up through the radiators to supplement the natural convection air currents. The blower motors are generally automatically controlled by means of a thermostat. When the oil temperature reaches a certain value, the thermostat closes the motor circuit. After the temperature has been reduced to a definite value, the thermostat opens the motor circuit, shutting off the fans.

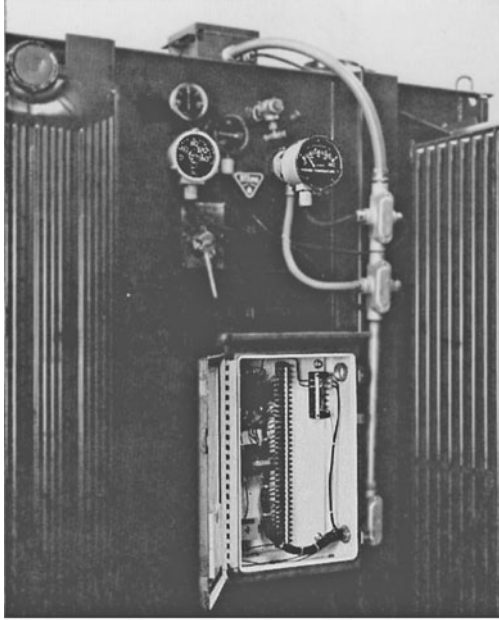
Gas-vapor transformers (Fig. 5.13) are sometimes employed for large units. The transformer is insulated with a quantity of gas necessary for start-up, along with a vaporizable liquid which provides insulation and cooling during operation. During operation, a pump delivers a stream of this liquid from the sump to the upper part of the core and coils. Here, under low pressure, the liquid is evenly distributed over the core structure and all current-carrying parts. Enough of the liquid evaporates to absorb heat from the core and coils. The hot vapors, being heavy, flow downward and enter the cooler-tube headers near the bottom of the tank. Normally, the bottom of the cooling tubes will be hotter than the top. In the cooling tubes, the vapors condense back into liquid, thus releasing their heat to the cooler-tube surfaces. The liquid returns to the pump by gravity for recirculation.

7. The oil used in transformers (*Standard Handbook for Electrical Engineers*) performs two important functions. It serves to insulate the various coils from each other and from the core, and it conducts the heat from the coils and core to some cooler surfaces, where it is either dissipated in the surrounding air or transferred to some cooling medium. It is evident that the oil should be free from any conducting material, it should be sufficiently thin to circulate rapidly when subjected to differences of temperatures at different places, and it should not be ignitable until its temperature has been raised to a very high value. Although numerous kinds of oils have been tried in transformers, at the present time mineral oil is used almost exclusively. This oil is obtained by fractional distillation of petroleum unmixed with any other substances and without subsequent chemical treatment. A good grade of transformer oil should show very little evaporation at 100°C, and it should not give off gases at such a rate as to produce an explosive mixture with the surrounding air at a temperature below 180°C. It should not contain moisture, acid, alkali, or sulfur compounds.


It has been shown by C. E. Skinner that the deteriorating effect of moisture on the insulating qualities of an oil is very marked; moisture to the extent of 0.06 percent reduces the dielectric strength of the oil to about 50 percent of the value when it is free from moisture, but there is very little further decrease in the dielectric strength with an increase in the amount of moisture in the oil.

Dry oil will stand an emf of 25,000 V between two 0.5-in (12.7-mm) knobs separated by 0.15 in (3.8 mm). The presence of moisture can be detected by thrusting a red-hot nail in the oil; if the oil “crackles,” water is present. Moisture can be removed by raising the temperature slightly above the boiling point of water, but the time consumed (several days) is excessive. The oil is subsequently passed through a dry-sand filter to remove any traces of lime or other foreign materials.

8. The insulating value of the oil, in oil-immersed transformers (*Standard Handbook for Electrical Engineers*), is depended on very largely to help insulate the transformer; this is done by providing liberal oil ducts between coils and between groups of



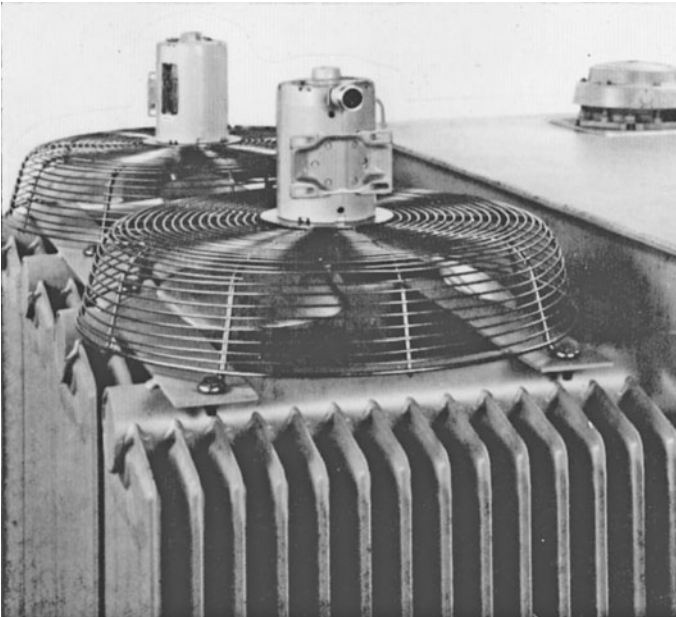I. Liquid-filled transformer with standard and optional accessories.



II. Fan cooling is temperature-activated by a liquid temperature gage.

FIGURE 5.12 Liquid-filled transformer that is self-cooled, forced-air. [Siemens Energy & Automation, Inc.]

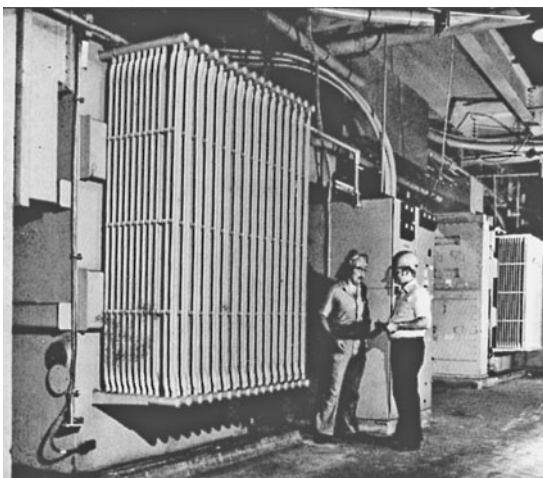


FIGURE 5.13 Gas-vapor substation-type transformer. [Westinghouse Electric Corp.]

coils, in addition to the solid insulation. The oil ducts thus serve the double purpose of insulating and cooling the windings.

Since the oil is a very important part of the insulation, every effort is made in modern transformers to preserve both its insulating and cooling qualities. Oxidation and moisture are the chief causes of deterioration. Oil takes into solution about 15 percent by volume of whatever gas is in contact with it. In the open-type transformer, oil rapidly darkens, owing to the effects of oxygen in solution in the oil and the oxygen in contact with the top surface of the hot oil.

1. *Expansion tank (or conservator).* One of the first devices used to reduce oxidation was the expansion tank (or conservator), which consisted of a small tank mounted above and connected with the main tank by means of a constricted connection so that the small tank could act as a reservoir to take up the expansion and contraction of the oil due to temperature changes and reduce the oil surface exposed to air.
2. *Inertaire transformer.* This transformer has the space above the oil in the tank filled with a cushion of inert gas which is mostly nitrogen. The nitrogen atmosphere is initially blown in from a cylinder of compressed nitrogen and is thereafter maintained by passing the inbreathing air through materials which remove the moisture and the oxygen, permitting dry nitrogen to pass into the case. A breathing regulator, which consists of a mercury U tube with unequal legs, allows inbreathing of nitrogen when the pressure in the case is only slightly below atmospheric, but prevents outbreathing unless the pressure in the case becomes 5 psi (34,474 Pa) higher than atmospheric pressure. The elimination of oxygen from within the transformer case eliminates the oxidation of the oil and prevents fire and secondary explosion within the case.

9. Insulation between windings. The great majority of transformers are constructed with two or more windings which are electrically insulated from each other. In some cases a single winding is employed, parts of the winding functioning as both primary and

secondary. These transformers are called *autotransformers*. They are frequently used when the voltage ratio is small. Autotransformers should never be used for high voltage ratios, as the low-voltage winding is not insulated from the high-voltage one, so that in case of trouble it would be dangerous to both life and equipment. Refer to Sec. 32 for further discussion.

10. Transformer insulation. The type of insulation used in dry-type-transformer design and construction has a definite bearing on the size and operating temperature of the unit. Currently four classes of insulation, each having a separate NEMA specification and temperature limit, are being used. A look at these will facilitate selection of the proper unit to meet prescribed installation and operating conditions.

1. *Class 130 insulation-system transformers.* When properly applied and loaded in an ambient not over 40°C, these transformers will operate at not more than a 60°C temperature rise on the winding. These units can be used as control-type transformers when higher temperatures might affect other temperature-sensitive devices in the enclosure or as distribution transformers in locations (textile mills, sawmills, etc.) where combustible flyings might be present in the surrounding atmosphere.
2. *Class 150 insulation-system transformers.* These units have a higher-temperature insulating system and are physically smaller and about half the weight of Class A units of corresponding rated capacities. When properly loaded to rated kilovolt-amperes and installed in an ambient not over 40°C, Class 150 units will operate at a maximum 80°C rise on the winding. For years dry-type distribution transformers have been of the Class 150 type.
3. *Class 200 insulation-system transformers.* These units also have a high-temperature insulating system and, when properly loaded and applied in an ambient not over 40°C, will operate at no more than 130°C rise on the winding. The units are smaller in size than similarly rated Class 150 units and currently are available from a number of manufacturers in ratings of 25 kVA and lower, both single- and three-phase design. One manufacturer designs in-wall, flush-mounted dry-type transformers as Class 200 units.
4. *Class 220 insulation-system transformers.* These units are insulated with a high-temperature system of glass, silicone, and asbestos components and are probably the most compact ones available. When properly loaded and applied in an ambient not over 40°C, Class 220 transformers will operate at a maximum 150°C rise on the winding. This class of insulation is used primarily in designs in which the core and coil are completely enclosed in a ventilated housing. Generally, this stipulation covers units with ratings of 30 kVA and larger. Some experts recommend that the hottest spot on the metal enclosure be limited to a maximum rise of 40°C above a 40°C ambient.

It should be noted that Class 150 insulation is being replaced with Class 200 or 220 insulation in transformers of recent design.

Another significant factor which concerns all dry-type transformers is that they should never be overloaded. The way to avoid this is to size the primary or secondary overcurrent device as close as possible to the full-load primary or secondary current for other than motor loads. If close overcurrent protection has not been provided, loads should be checked periodically. Overloading a transformer causes excessive temperature, which, in turn, produces overheating. This results in rapid deterioration of the insulation and will cause complete failure of the transformer coils.

11. Transformers are built in both single- and polyphase units. A polyphase transformer consists of separate insulated electric windings for the different phases,

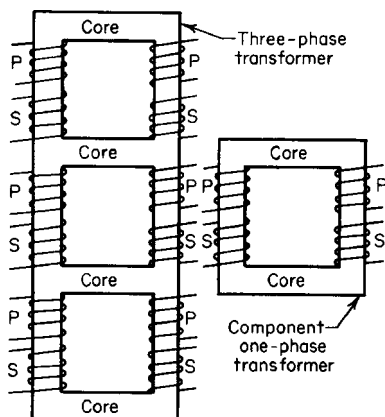


FIGURE 5.14 Three-phase core-type transformer.

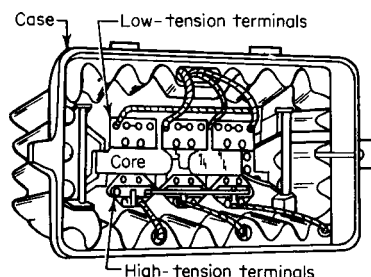


FIGURE 5.15 Interior view of a three-phase transformer.

wound upon a single core structure, certain portions of which are common to the different phases.

Three-Phase Transformers (*Standard Handbook for Electrical Engineers*). Although there are numerous possible arrangements of the coils and cores in constructing a polyphase transformer, it can be stated that a polyphase transformer generally consists of several one-phase transformers with separate electric circuits but having certain magnetic circuits in common. A three-phase transformer is illustrated in Fig. 5.14, together with the component one-phase transformer. It will be observed that a three-phase transformer requires 3 times as much copper as the one-phase component transformer but less than 3 times as much iron. Thus in comparison with three individual transformers, the three-phase unit is somewhat lighter and more efficient. Each component transformer operates as though the others were not present, the flux of one transformer combining with that of an adjacent transformer to produce a resultant flux exactly equal to that of each one alone. Figure 5.15 shows the interior of a Westinghouse three-phase transformer.

12. Application of three-phase transformers (A. D. Fishel). For central stations of medium size, three-phase transformers are rarely superior to single-phase, except when the large sizes can be applied, in which case the transformers are normally installed in substations or central stations. The chief reason for this is the nonflexibility of a three-phase transformer. It is usually purchased for a particular size and type of load, and if that load should be changed, the transformer, representing a comparatively heavy investment, remains on the hands of the central station, whereas a single-phase transformer of one-third the size could usually be adapted for some other service.

This feature becomes of less importance as the central station increases its size, and three-phase transformers for purely power service are now being used by a considerable number of the large central stations in the United States. The three-phase transformer costs less to install, and the connections are simpler, points that are of importance in connection with outdoor installations. The fact that a failure of a three-phase transformer would interrupt service more than the failure of one single-phase transformer in a bank of three is of little importance because of the comparatively few failures of modern transformers. On the

other hand, especially for 2200-V service, the single-phase transformer has been carried to a high degree of perfection and is manufactured in much larger quantities, so that better performance is usual and in some cases initial cost is lower. Three-phase distribution transformers are used extensively in underground city network service on account of the smaller space required by them in the manhole, their higher efficiency, and their lower initial cost. For overhead service for pole or platform mounting, three single-phase units are more common on account of the ease of handling and mounting the smaller-sized units.

13. Methods of mounting. Transformers are constructed with different types of metal enclosing structures to meet the requirements of different conditions of installation. One type of enclosure (Figs. 5.8 and 5.19) is designed for *mounting on poles*, either directly or with hanger irons, for use in overhead distribution work. Another type of enclosure, called the *platform type* (Figs. 5.10, 5.11, and 5.12), is suitable for installations in which the transformer stands upon its own base. It can be mounted on any flat horizontal surface having sufficient mechanical strength, such as a floor or a platform between poles. *Subway transformers* have watertight tanks which are designed primarily for underground installations when the transformer may be completely submerged in water. *Vault transformers* also have watertight enclosures so that they will not be injured by total submersion, but they are not designed to operate satisfactorily under such conditions. The vault transformers are intended for operation in underground vaults in which the transformer would not be required to operate for any considerable length of time while submerged. Small transformers for power and special application as listed in Sec. 5 (6c to 6j) are designed with special types of mounting to meet the requirements of installation for these types of service.

14. Purpose of transformers. Transformers can be classified as in Sec. 5 (5) according to the purpose of transformation for which they are employed.

The function of a *constant-voltage* transformer is to change the voltage of a system. It is designed to operate with its primary connected across a constant-voltage supply and to provide a secondary voltage which is substantially constant from no load to full load. It is the ordinary, common type of transformer. The currents of both primary and secondary vary with the load supplied by the transformer. A *variable-voltage* transformer is also intended for changing the voltage of a system but is so designed that when operated with its primary connected to a constant-voltage supply, the secondary voltage will vary widely with the load. Such transformers are necessary for the operation of many gaseous-discharge lamps.

A *current* transformer is one which is designed for changing the current of a system. The primary winding of such a transformer is connected in series with the circuit of which it is desired to change the current. The voltage of both primary and secondary will change with the value of the current of the system. Such transformers are used for instrument transformers and in some series street-lighting installations. *Constant-current* transformers are designed for supplying a constant value of secondary current regardless of the load on the transformer. The primary is connected to a constant-voltage source. The secondary voltage varies proportionally with the load, while the secondary current remains constant. The primary current and kilovolt-amperes will be constant for all loads, but the kilowatt input and power factor will vary with the load.

15. The most important application of constant-voltage transformers is raising the voltage of an electric transmission circuit so that energy can be transmitted for considerable distances with small voltage drop and small energy loss and then lowering the voltage for safe usage by motors, lights, and appliances.

16. Theory of operation of the constant-voltage transformer (see Fig. 5.1). It has been shown in Div. 1 that turns of wire wound on an iron core have self-induction. When an alternating voltage is applied to such turns, there flows through them a current that generates a countervoltage or emf that opposes the applied voltage. From formulas the transformer designer can compute just how many turns are necessary for a transformer of a given size so that it will generate a countervoltage equal to the applied voltage. So, in designing the primary winding of the transformer of Fig. 5.1, the designer would select such a number of turns for the primary winding that the countervoltage generated by it would be nearly 2400 V. Hence, when the primary winding is connected to a 2400-V circuit, it generates a countervoltage of practically 2400, and no appreciable current flows. A small current, the exciting current, just enough to magnetize the core, does flow, but it is so small that it can be disregarded in this discussion.

Since the primary and secondary windings are on the same core, the magnetic flux generated by the magnetizing or exciting current flowing in the primary winding also cuts the turns of the secondary winding and generates an emf in them. This emf will be, in accordance with a well-known law, opposite in direction to that impressed on the primary. If the secondary circuit is open, no current can flow in it, but if it is closed, a certain current, proportional to the impedance of the secondary circuit, will flow. This current, because of the direction of the emf generated in the secondary, will be in such a direction that the magnetic flux produced in the core by it will oppose the flux due to the primary winding. It will therefore decrease the effective or resultant flux in the core by a small amount which will decrease the counter-emf of the primary winding and permit more current to flow into the primary winding. As noted elsewhere, the ratio of the number of turns in the primary winding to the number of turns in the secondary winding determines the ratio of the primary to the secondary voltage.

If the voltage impressed on the transformer is maintained constant, the voltage of the secondary will be nearly constant also. When more current flows in the secondary, there will be a corresponding increase in primary current. As the load on a transformer increases, the impressed voltage remaining constant, there is actually a slight drop from the no-load voltage of the secondary, due to certain inherent characteristics of the transformer, but in a properly designed device this drop will be very small. Although the construction and elementary theory of the transformer are very simple, a theoretical explanation of all the phenomena involved in its operation is very complicated. Only the principal features have been described. Some minor, though very important, considerations that would complicate the explanation have not been treated.

17. Transformer ratios. The voltage ratio of a constant-voltage transformer, i.e., the ratio of primary to secondary voltage, depends primarily upon the ratio of the primary to the secondary turns. The voltage ratio will vary slightly with the amount and power factor of the load. For general work the voltage ratio can be taken as equal to the turn ratio of the windings.

The current ratio of a constant-voltage transformer will be approximately equal to the inverse ratio of the turns in the two windings. For example, for transforming or "stepping down" from 2400 to 120 V the ratio of the turns in the windings will be 20:1. The currents in the primary and the secondary windings will be, very closely, inversely proportional to the ratio of the primary and secondary voltages because, if the small losses of transformation are disregarded, the power put into a transformer will equal the power delivered by it. For example, for a transformer with windings having a ratio of 20:1, if its secondary winding delivers 100 A at 50 V, the input to its primary winding must receive almost exactly 5 A at 1000 V. The input and output are each practically equal, and each would equal almost exactly 5000 W.

18. The regulation of a transformer is the change in secondary voltage from no load to full load. It is generally expressed as a percentage of the full-load secondary voltage:

$$\text{Percent regulation} = \frac{\text{no-load secondary voltage} - \text{full-load secondary voltage}}{\text{full-load secondary voltage}} \times 100 \quad (1)$$

The regulation depends upon the design of the transformer and the power factor of the load. Although with a noninductive load such as incandescent lamps, the regulation of transformers is within about 3 percent, with an inductive load the drop in voltage between no load and full load increases to possibly about 5 percent. If the motor load is large and fluctuating and close lamp regulation is important, it is desirable to use separate transformers for the motors.

19. The efficiency of a transformer is, as with any other device, the ratio of the output to input or, in other words, the ratio of the output to the output plus the losses. As a formula it can be expressed thus:

$$\text{Efficiency} = \frac{\text{output}}{\text{input}} = \frac{\text{output}}{\text{output} + \text{copper loss} + \text{iron loss}} \quad (2)$$

Average efficiencies of transformers are given in Secs. 43 to 57.

20. The copper loss of a transformer is determined by the resistances of the high-tension and low-tension windings and of the leads. It is equal to the sum of the watts of I^2R losses in these components at the load for which it is desired to compute the efficiency.

21. The iron loss of a transformer is equal to the sum of the losses in the iron core. These losses consist of eddy- or Foucault-current losses and hysteresis losses. Eddy-current losses are due to currents generated by the alternating flux circulating within each lamination composing the core, and they are minimized by using thin laminations and by insulating adjacent laminations with insulating varnish. Hysteresis losses are due to the power required to reverse the magnetism of the iron core at each alternation and are determined by the amount and the grade of iron used for the laminations for the core.

22. Transformer ratings. Transformers are rated at their kilovolt-ampere (kVA) outputs. If the load to be supplied by a transformer is at 100 percent power factor (pf), the kilowatt (kW) output will be the same as the kilovolt-ampere (kVA) output. If the load has a lesser power factor, the kW output will be less than the kVA output proportionally as the load power factor is less than 100 percent.

EXAMPLE A transformer having a full-load rating of 100 kVA will safely carry 100 kW if the 100 kW is at 100 percent pf, 90 kW at 90 percent pf, or 80 kW at 80 percent pf.

Transformers are generally rated on the kVA load which the transformer can safely carry continuously without exceeding a temperature rise of 60°C for Class 130 insulation or 80°C for Class 150 insulation when maintaining rated secondary voltage at rated frequency and when operating with an ambient temperature of 40°C. (Ambient temperature is the temperature of the surrounding atmosphere.) The actual temperature of any part of the transformer is the sum

of the temperature rise of that part plus the ambient temperature. See Sec. 10 for an explanation of transformer insulation classifications.

The usual service conditions under which a transformer should be able to carry its rated load are:

1. At rated secondary voltage or not in excess of 105 percent of rated value.
2. At rated frequency.
3. Temperature of the surrounding cooling air at no time exceeding 40°C and average temperature of the surrounding cooling air during any 24-h period not exceeding 30°C.
4. Altitude not in excess of 3300 ft.
5. If water-cooled, temperature of cooling water not exceeding 30°C and average temperature of cooling water during any 24-h period not exceeding 25°C.
6. The load current shall be approximately sinusoidal. The harmonic factor shall not exceed 0.05 per unit.

GUIDE FOR LOADING OIL-IMMERSED DISTRIBUTION AND POWER TRANSFORMERS

23. The following sections on guidance for loading of transformers are excerpts from the American National Standards Institute's publication C57.92-1981.

The actual output which a transformer can deliver at any time in service without undue deterioration of the insulation may be more or less than the rated output, depending upon the ambient temperature and other attendant operating conditions.

24. Continuous loading on basis of average winding test temperature rise.

For each degree Celsius in excess of 5° that the test temperature rise is below the standard temperature rise of 55°C, the transformer load may be increased above rated kilovolt-amperes by the percentages shown in col. 3 of the accompanying table. Making use of this factor gives the kilovolt-amperes that the transformer can deliver with a 55°C temperature rise. The leeway of 5° provides for a negative tolerance in the measurement of temperature rise.

Loading on Basis of Ambient Temperature

Type of cooling	Percent of rated kVA	
	Decrease load for higher temperature each °C	Increase load for lower temperature each °C
Self-cooled	1.5	1.0
Water-cooled	1.5	1.0
Forced-air-cooled	1.0	0.75
Forced-oil-cooled	1.0	0.75

Some transformers are designed to have the difference between hottest-spot and average copper temperatures greater than the nominal allowance of 10°C. This will result in a temperature rise for average copper of less than 55°C, but the hottest-spot copper temperature rise may be at the limiting value of 65°C. Such transformers should not be loaded above rating as outlined under this heading. The manufacturer should be consulted to give information as to design of hottest-spot allowances.

25. Loading on basis of ambient temperature. For each degree Celsius that the average temperature of the cooling medium is above or below 30°C for air or 25°C for water, a transformer can be loaded for any period of time below or above its kilovolt-ampere rating as specified in the table of Sec. 24. Average temperature should be for periods of time not exceeding 24 h with maximum temperatures not more than 10°C greater than average temperatures for air and 5°C for water. On the basis used in this guide for calculating loss of life, life expectancy will be approximately the same as if the transformer had been operated at rated kilovolt-amperes and standard ambient temperatures over that period.

The use of transformers in cooling air above 50°C or below 0°C or with cooling water above 35°C is not covered by the table of Sec. 24 and should be taken up with the manufacturer.

26. Basic loading for normal life expectancy

Basic Conditions

1. The basic loading of a transformer for normal life expectancy is continuous loading at rated output when operated under normal service conditions.¹ It is assumed that operation under these conditions is equivalent to operation in a continuous ambient temperature of 30°C for cooling air or 25°C for cooling water. Normal life expectancy will result from operating with a continuous hottest-spot conductor temperature of 110°C (or equivalent variable temperature with 120°C maximum) in any 24-h period.
2. The hottest-spot conductor temperature determines loss of life due to loading. This temperature cannot be directly measured on commercial designs because of voltage hazard when placing a temperature detector at the proper location. The hottest-spot allowances are based on tests of laboratory models.
3. The hottest-spot temperature at rated load is usually taken as the sum of the average winding temperature and a 15°C allowance² for hottest spot. For mineral oil-immersed transformers operating continuously under the foregoing conditions with normal life expectancy, this temperature has been assumed to be a maximum of 110°C.

27. Continuous loading on basis of average winding test temperature rise.

For each °C in excess of 5° that the average winding test temperature rise is below 65°C, the transformer load may be increased above rated load by the percentages given in the table in Sec. 24. A 5° margin is used to provide a tolerance in the measurement of temperature rise. The loadability thus obtained is that which the transformer can carry at 65°C rise. Since this may increase the loading beyond that contemplated by the designer, the limitations should be checked before taking full advantage of this increased loadability. Among these limitations are: oil expansion, pressure in sealed units, bushings, leads, tap changers, and stray flux heating as well as the thermal capability of associated equipment such as

¹ When air cooled, the temperature of the cooling air (ambient temperature) shall not exceed 40°C and the average temperature of the cooling air for any 24-h period shall not exceed 30°C. The top liquid temperature of the transformer (when operating) shall not be lower than -20°C. Starting temperatures below -20°C are not considered as usual service conditions. When water cooled, the temperature of cooling water (ambient temperature) shall not exceed 30°C and the average temperature of the cooling water for any 24-h period shall not exceed 25°C. Minimum water temperature shall not be lower than 1°C, unless the cooling water includes antifreeze suitable for -20°C operation. The altitude shall not exceed 3300 ft (1000 m). The supply voltage wave shape shall be approximately sinusoidal, and the phase voltages supplying a polyphase transformer shall be approximately equal in magnitude and time displacement. The load current shall be approximately sinusoidal. The harmonic factor shall not exceed 0.05 per unit.

² If cooler inlet and outlet temperatures are available, a better estimate of the hottest-spot temperature is possible by making an adjustment in the 15°C allowance. Consult with the manufacturer.

cables, reactors, circuit breakers, disconnecting switches, and current transformers. High ambient temperatures will also restrict a transformer's loadability. Any of these items may limit loading, and manufacturers should be consulted for advice on such limitations.

Some transformers are designed to have the difference between the hottest-spot and average conductor temperatures greater than the 15°C allowance. This will result in an average winding temperature rise of less than 65°C, but the hottest-spot winding temperature rise may be the limiting value of 80°C. Such transformers should not be loaded above their rating as outlined in this section. The manufacturer should be consulted for information on the hottest-spot allowances used for these designs. This condition may exist in transformers with large differences (greater than 30°C) between top-and-bottom-oil temperatures. Whenever possible, data on hottest-spot and oil temperatures obtained from factory temperature should be used in calculating transformer loadability or when calculating temperatures for loads above rating.

28. Unusual temperatures and altitude service conditions. Transformers may be applied at higher ambient temperatures or at higher altitudes, but performance may be affected and special consideration should be given to these applications. The effect of the decreased air density due to high altitude is to increase the temperature rise of transformers since they are dependent upon air for the dissipation of heat losses. Transformers may be operated at rated kVA at altitudes greater than 3300 ft (1000 m) without exceeding temperature limits, provided the average temperature of the cooling air does not exceed the values of Table 28A for the respective altitudes. Transformers may be operated at altitudes greater than 3300 ft (1000 m) without exceeding temperature limits, provided the load to be carried is reduced below rating by the percentages given in Table 28B for each 330 ft (100 m) that the altitude is above 3300 ft (1000 m).

TABLE 28A Maximum Allowable Average Temperature* of Cooling Air for Carrying Rated kVA

	1000 m (3300 ft)	2000 m (6600 ft)	3000 m (9900 ft)	4000 m (13,200 ft)
Method of cooling apparatus	Degrees C			
Liquid-immersed self-cooled	30	28	25	23
Liquid -immersed forced-air-cooled	30	26	23	20
Liquid -immersed forced-oil-cooled with oil-to-air cooler	30	26	23	20

*It is recommended that the average temperature of the cooling air be calculated by averaging 24 consecutive hourly readings. When the outdoor air is the cooling medium, the average of the maximum and minimum daily temperatures may be used. The value obtained in this manner is usually slightly higher, by not more than 0.3°C, than the true daily average.

TABLE 28B Rated kVA Correction Factors for Altitudes Greater than 3300 ft (1000 m)

Types of cooling	Derating factor (%)
Liquid-immersed air-cooled	0.4
Liquid-immersed water-cooled	0.0
Liquid-immersed forced-air-cooled	0.5
Liquid-immersed forced-liquid-cooled with liquid-to-air cooler	0.5
Liquid-immersed forced-liquid-cooled with liquid-to-water cooler	0.0

29. Effect of various factors existing at one time. When two or more of the following factors affecting loading for normal life expectancy exist at one time, the effects are cumulative and the increase in loads due to each can be added to secure the maximum suggested load (each increase must be based on rated kilovolt-amperes):

- 1. Loading on basis of test temperature rise
- 2. Loading on basis of ambient temperature
- 3. Either loading on basis of load factor or loading on basis of short-time overloads

Do not use both

30. Capacities of Transformers for Induction Motors

(General Electric Co.)

Size of motor, hp	kVA per transformer		
	Two single-phase transformers	Three single-phase transformers	One three-phase transformer
1	0.6	0.6	
2	1.5	1.0	2.0
3	2.0	1.5	3.0
5	3.0	2.0	5.0
7½	4.0	3.0	7.5
10	5.0	4.0	10.0
15	7.5	5.0	15.0
20	10.0	7.5	20.0
30	15.0	10.0	30.0
50	25.0	15.0	50.0
75	40.0	25.0	75.0
100	50.0	30.0	100.0

31. Capacities of transformers for operating motors (General Electric Co.).

For the larger motors the capacity of the transformers in kilovolt-amperes should equal the output of the motor in horsepower. Thus a 50-hp motor requires 50 kVA in transformers. Small motors should be supplied with a somewhat larger transformer capacity, especially if, as is desirable, they are expected to run most of the time near full load or even at slight overload. Transformers of less capacity than those noted in Table 30 should not be used even when a motor is to be run at only partial load.

32. The autotransformer (*Standard Handbook for Electrical Engineers*). The most

efficient and effective method of operating a stationary transformer (when the ratio of transformation is not too large) is as an autotransformer, i.e., with certain portions of the windings used simultaneously as the primary and the secondary circuits. The electrical circuits of a one-phase autotransformer (sometimes called a *compensator* or a *balance coil*) are indicated in Fig. 5.16. The autotransformer has only one coil, a certain portion of which is used for both the high-tension and the low-tension windings. The number of turns of this coil is the same as would be required if it were used exclusively for the high-tension

winding and a separate additional coil were used for the low-tension winding. Moreover, when the ratio of transformation is 2:1 or 1:2, the amount of copper in the one coil is exactly the same whether it is used as an autotransformer or as a high-tension coil of a two-coil transformer of the same rating. Not only is less copper required for an autotransformer than for a two-coil transformer, but less iron is needed to surround the copper.

Referring again to Fig. 5.16, note that the one-coil transformer is designed for 10 A throughout and for a total emf of 100 V. The voltage per turn is uniform throughout, so that to obtain 50 V it is necessary merely to select any two points on the continuous winding such that one-half of the total number of turns is included between them. The load current of 20 A (required for 1000 W at 50 V) is opposed by the superposed 10 A of primary current, so that even in this section of the coil the resultant current is only 10 A.

If an ordinary two-coil transformer had been used, the circuits would have been as noted in Fig. 5.17, while the required constructive material would have been approximately as indicated in Fig. 5.18, I. With respect to its constructive material, a 1-kW 2:1-ratio autotransformer is the equivalent of a 1:1-ratio 0.5-kW two-coil transformer as shown in Fig. 5.18, II. The latter transformer requires about 14 lb (6.35 kg) of copper and 28 lb (12.7 kg) of iron as compared to about 22 lb (10 kg) of copper and 34 lb (15.4 kg) of iron for the transformer of Fig. 5.18, I. Moreover, the losses of the autotransformer are correspondingly less than those of a two-coil transformer. Refer to Sec. 116 for limitations in the allowable use of autotransformers.

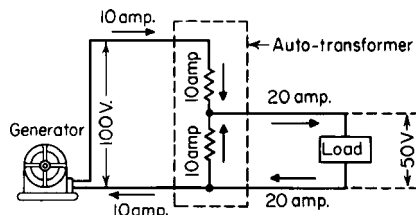


FIGURE 5.16 Electric circuits of a 1-kVA single-phase autotransformer.

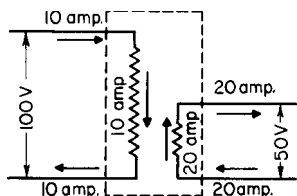


FIGURE 5.17 Electric circuits of a 1-kVA single-phase two-coil transformer equivalent to the autotransformer of Fig. 5.16.

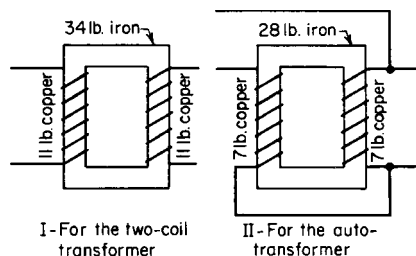


FIGURE 5.18 Comparison of constructive material required for a two-coil transformer and for an auto-transformer.

33. Constant-voltage transformers for the transformation of a large amount of power, more than 500 kVA, are called *power transformers*. Transformers for general constant-voltage power transformation, whose rating is 500 kVA or less, are called *distribution transformers*. All the methods of cooling are employed for power transformers. The choice depends upon which will result in the best overall economy, including first cost, operating expense, and space occupied. Distribution transformers generally are liquid-immersed, self-cooled. Power and distribution transformers are normally of the standard type with the windings insulated from each other, although those with autotransformer construction can be obtained for special applications in which the voltage ratio is small. Power

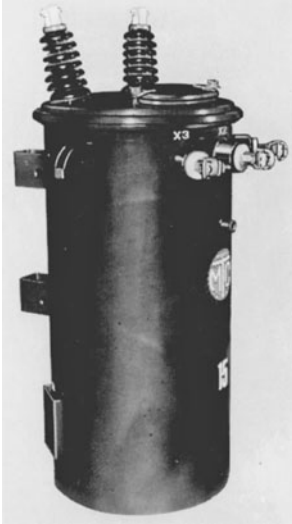


FIGURE 5.19 Distribution transformer for pole mounting.

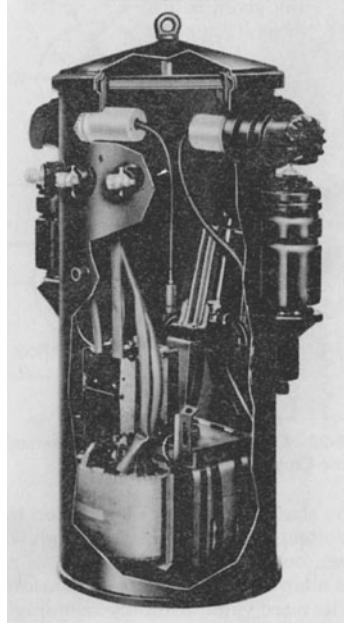


FIGURE 5.20 Sectional view of CSP transformer. [Westinghouse Electric Corp.]

transformers are always of the platform type. Distribution transformers are made with tanks for pole and platform mounting and with tanks of the subway and vault types. The tanks of the platform-type transformers of 50-kVA capacity and smaller are equipped with lugs or brackets (Fig. 5.19) for direct pole mounting or for the attachment of hanger irons for crossarm pole mounting. A constant-voltage transformer maintains an approximately constant voltage ratio over the range from zero to rated output.

34. Network transformers are distribution transformers specially constructed and equipped with attached auxiliaries such as junction boxes and switches for disconnecting and grounding the high-voltage cable to meet the requirements of transformers for supplying low-voltage networks. A network transformer is designed for use in a vault to feed a variable capacity system of interconnected secondaries.

35. Self-protected distribution transformers are equipped with lightning and overload protective equipment built integrally with the transformers. They are made in two types: completely self-protecting (CSP), i.e., having both overload and lightning protection, and with only surge protection (SP). The connections of the lightning protective equipment can be made in different ways to satisfy any desired grounding practice. A sectional view of such a CSP transformer is shown in Fig. 5.20.

36. Voltage taps. It is frequently desirable on transformers to obtain a voltage ratio which is slightly different from the standard ratio obtained with the complete winding. Most transformers are provided with two 5 percent taps on the high-voltage winding for this purpose. The taps are for reduced voltage and allow the rated secondary voltage to be obtained when the supply voltage is below the rated value. Many transformers are equipped with a ratio adjuster (Fig. 5.21). The ratio adjuster provides a means of changing taps on the transformer simply by turning an operating handle without having to take down and remake connections. The diagram of connections of a ratio adjuster is shown in Fig. 5.22. The transformer of the illustration is provided with two primary coils instead of one, as would be the more general practice. The transformer should be disconnected from the line before the taps are changed with the ratio adjuster, as the device is not intended for operation under load.

The standard taps for distribution transformers are given in Secs. 38 and 39. A rated kilovolt-ampere tap is a tap through which the transformer can deliver its rated kilovolt-ampere output without exceeding its rated temperature rise. A reduced kilovolt-ampere tap is a tap through which the transformer can deliver only a kilovolt-ampere output less than its rated value without exceeding its rated temperature rise.

Large power transformers frequently are equipped with load-ratio control equipment by means of which the connections to taps of the transformer can be changed under load.


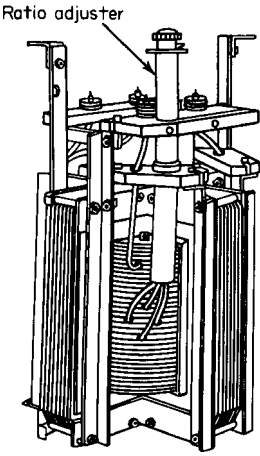


FIGURE 5.21 Core and coils for a 6600-V distribution transformer showing ratio adjuster. [General Electric Co.]

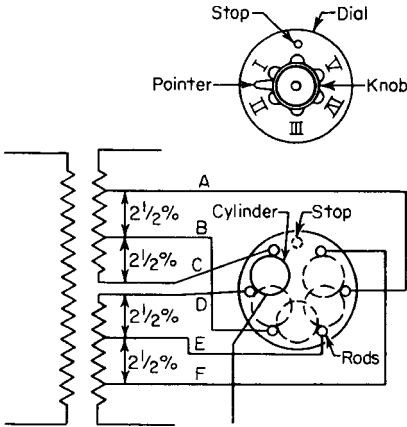

Position	Connecting	% of winding
I	C to D	100
II	B to D	97.5
III	B to E	95
IV	A to E	92.5
V	A to F	90

FIGURE 5.22 Diagram of ratio-adjuster connections to transformer with four $2\frac{1}{2}$ percent taps. [General Electric Co.]

37. Preferred Ratings of Liquid-Immersed Transformers

(kVA ratings)

Single-phase				Three-phase			
	100	2,500	20,000		300	5,000	33,333
5	167	3,333	25,000	15	500	7,500	37,500
10	250	5,000	33,333	30	750	10,000	50,000
15	333	6,667		45	1,000	12,000	60,000
25	500	8,333		75	1,500	15,000	75,000
37½	833	10,000		112½	2,000	20,000	100,000
50	1,250	12,500		150	2,500	25,000	
75	1,667	16,667		225	3,750	30,000	

38. Standard Ratings for Single-Phase Transformers

(American National Standards Institute)

(Single-ratio)							
Transformer high voltage		Minimum kVA rating for low-voltage rating of:					Sec. 40 Table A figure reference
Rating	BIL (kV)	120/240*	277 or 240/480*	2400 or 4800	7200 or 7620 or 7970		
2400/4160Y	60	10	10	—	—		9
4800/8320Y	75	10	10	—	—		9
7200/12470Y	95	10	10	50	—		10
12 470GrdY/7200	95	10	10	50	—		6, 7
7620/13 200Y	95	10	10	50	—		10
13 200GrdY/7620	95	10	10	50	—		6, 7
12 000	95	10	10	50	50		10, 11
13 200/22 860Y†	125	10	10	50	50		10, 11
13 200	95	10	10	50	50		10, 11
13 800GrdY/7970	95	10	10	50	—		6, 7
13 800/23 900Y†	125	10	10	50	50		10, 11
13 800	95	10	10	50	50		10, 11
14 400/24 940Y†	125	10	10	50	50		10, 11
24 940GrdY/14 400†	125	10	10	50	50		6, 7, 8
16 340	95	10	10	50	50		10, 11
34 500GrdY/19 920‡,§	150	10	10	50	50		6, 7, 8
34 500	200	25	25	50	50		10, 11

*Low-voltage rating of 120/240 V or 240/480 V is suitable for series, multiple, or three-wire service.

†Suitable for wye-connection on systems where ground conditions permit the use of 18-kV arresters.

‡Suitable for wye-connection on systems where ground conditions permit the use of 27-kV arresters.

§125 kV BIL may be used based on user/vendor agreement.

(Series-multiple)					
Transformer high voltage		Minimum kVA rating for low-voltage rating of:			Sec. 40 Table B figure reference
Rating	Minimum BIL (kV)*	120/240 [†]	277 or 240/480 [‡]	2400 or 4800	
2400/4160Y × 7200/12 470Y	60 × 95	10	10	50	10
4160GrdY/2400 × 12 470GrdY/7200	60 × 95	10	10	—	6, 7
2400/4160Y × 7620/13 200Y	60 × 95	10	10	50	10
4160GrdY/2400 × 13 200GrdY/7620	60 × 95	10	10	—	6, 7
4800/8320Y × 7200/12 470Y	75 × 95	10	10	50	10
8320GrdY/4800 × 12 470GrdY/7200	75 × 95	10	10	—	6, 7
4800/8320Y × 7620/13 200Y	75 × 95	10	10	50	10
8320GrdY/4800 × 13 200GrdY/7620	75 × 95	10	10	—	6, 7
7200/12 470Y × 14 400/24 940Y	95 × 125	10	10	50	10
12 470GrdY/7200 × 24 940GrdY/14 400	95 × 125	10	10	—	6, 7
7620/13 200Y × 14 400/24 940Y	95 × 125	10	10	50	10
13 200GrdY/7620 × 24 940GrdY/14 400	95 × 125	10	10	—	6, 7

*Arrester coordination may require higher BIL on multiple connection than indicated to achieve a minimum protective level of 20 %.

[†]Low-voltage rating of 120/240 V or 240/480 V is suitable for series, multiple, or three-wire service.

39. Standard Ratings for Three-Phase Transformers

(American National Standards Institute)

Transformer high voltage		Minimum kVA rating for low-voltage rating of:*					Sec. 41 figure reference
Rating	BIL (kV)	208Y/120	240 or 480	240 × 480	480Y/277	2400 or 4160Y/2400 or 4800 or 8320Y/4800	
2400	45	30	30	30	30	—	12
4160Y/2400	60	30	—	—	30	—	12
4160Y	60	30	30	30	—	—	12
4160	60	30	30	30	30	—	12
4800	60	30	30	30	30	—	12
8320Y/4800	75	30	—	—	30	—	12
8320Y	75	—	30	30	—	—	12
7200	75	30	30	30	30	150	13
12 000	95	30	30	30	30	150	13
12 470Y/7200	95	30	—	—	30	—	13
12 470Y	95	—	30	30	—	—	13
13 200Y/7620	95	30	—	—	30	—	13
13 200Y	95	—	30	30	30	—	13
13 200	95	—	30	30	—	150	13
13 800	95	30	30	30	30	150	13
13 800GrdY/7970	95	30	—	—	30	—	13
24 940GrdY/14 400	125	30	—	—	30	—	13
34 500GrdY/19 920	150	30	—	—	30	—	13







*All transformers are delta-connected unless otherwise specified.

40. Standard Accessory Equipment for Single-Phase Transformers

(American National Standards Institute)

TABLE A Accessory Equipment for Single-Phase Transformers

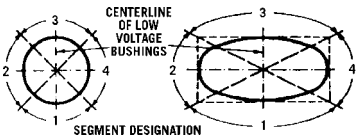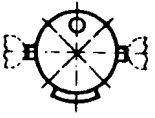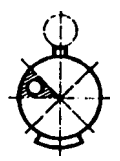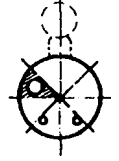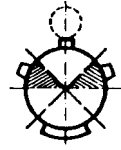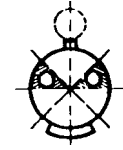(Single-Ratio)

																					
Outline drawing			Figure 6			Figure 7			Figure 8			Figure 9			Figure 10			Figure 11			
High-voltage (kV)			12.47GrdY/7.2 13.2GrdY/7.62 13.8GrdY/7.97 24.94GrdY/14.4 34.5GrdY/19.92			12.47GrdY/7.2 13.2GrdY/7.62 13.8GrdY/7.97 24.94GrdY/14.4 34.5GrdY/19.92			24.94GrdY/14.4 34.5GrdY/19.92			4.8/8.32Y and Below			7.2/12.47Y 7.62/13.2Y 13.2/22.86Y to 14.4/24.94Y 12, 13.2, 13.8, 16.34 and 34.5			13.2/22.86Y to 14.4/24.94Y 12, 13.2, 13.8, 16.34 and 34.5			
Low-voltage (V)			600 and below			5000 and below			Above 5000			600 and below			5000 and below			Above 5000			
Item No.	Section reference ^f	kVA	10 to 50	10 to 50	75 to 167	250 to 500	75 to 50	250 to 167	500 to 500	75 to 50	250 to 167	500 to 500	10 to 50	75 to 167	250 to 500	10 to 50	75 to 167	250 to 500	75 to 50	250 to 167	500 to 500
1	6.5.2	Support lug-type	A	A	B	C	A	B	C	A	B	C	A	B	C	A	B	C	A	B	C
5	6.2.3	Liquid-level marking	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
9	6.2.1	Tap changer (when specified)	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
14	6.5.1	Handhole in cover ^d	X	X	X	X	X	X	X	—	—	—	X	X	X	X	X	X	X	X	X
16	6.2.4	Lifting lugs	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X

17	6.5.4.1	Tank grounding provision	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
19	6.5.4.2	Tank grounding connector	X	X	X	X	X	X	—	—	—	—	—	—	—	—	—	—
20	6.5.4.3	Low-voltage grounding connection ^b	X	X	—	—	—	—	—	—	—	—	—	—	—	—	—	—
21	6.5.4.4	Low-voltage grounding provision ^c	X	X	X	—	—	—	—	X	X	—	X	X	—	—	—	—
22	6.1.2.2	High-voltage bushing terminals	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
23	6.1.2.3	Low-voltage bushing terminals	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
24	6.1.1.2	Low-voltage bushing arrangement	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
25	6.3.4.1(1)	Name plate location	—	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
28	6.3.4.1(2)	Name plate location	X	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
30	6.3.4.2	Name plate-type ^e	A	A	A	A	A	A	A	A	A	A	A	A	A	A	A	A
31	6.3.5	kVA rating on tank	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
32	6.2.5.1	Pressure-relief valve ^d	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X

^aSupplied only on units with internal tap changers.

^bFor 120/240 V only.

^cFor 240/480 V and 277 V.





^dSegment location not specified. Not required if cover design is in accordance with 6.2.5.2 of C57.12.20-1988.

^eNameplate shall show BIL for 34.5GrdY/19.92.

^fANSI/IEEE C57.12.20-1988.

TABLE B Accessory Equipment for Single-Phase Transformers

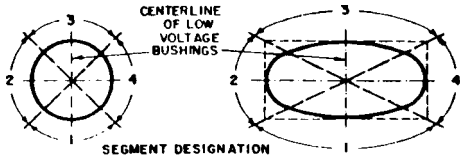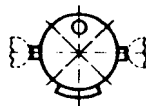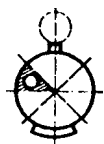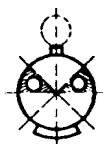(Single-Ratio)

									
Outline drawing		Figure 6		Figure 7		Figure 10			
		4.16GrdY/2.40 × 12.47GrdY/7.20		4.16GrdY/2.40 × 12.47GrdY/7.20		2.40/4.16Y × 7.20/12.47Y			
		4.16GrdY/2.40 × 13.20GrdY/7.62		4.16GrdY/2.40 × 13.20GrdY/7.62		2.40/4.16Y × 7.62/13.20Y			
		8.32GrdY/4.80 × 12.47GrdY/7.20		8.32GrdY/4.80 × 12.47GrdY/7.20		4.80/8.32Y × 7.20/12.47Y			
		8.32GrdY/4.80 × 13.20GrdY/7.62		8.32GrdY/4.80 × 13.20GrdY/7.62		4.80/8.32Y × 7.62/13.20Y			
		12.47GrdY/7.20 × 24.94GrdY/14.40		12.47GrdY/7.20 × 24.94GrdY/14.40		7.20/12.47Y × 14.40/24.94Y			
		13.20GrdY/7.62 × 24.94GrdY/14.40		13.20GrdY/7.62 × 24.94GrdY/14.40		7.62/13.20Y × 14.40/24.94Y			
High-voltage (kV)									
Item No.	Section reference [¶]	kVA	10 to 50	10 to 50	75 to 167	250 to 500	10 to 50	75 to 167	250 to 500
1	6.5.2	Support lug-type	A	A	B	C	A	B	C
5	6.2.3	Liquid-level marking	X	X	X	X	X	X	X
14	6.5.1	Handhole in cover [*]	X	X	X	X	X	X	X
16	6.2.4	Lifting lugs	X	X	X	X	X	X	X
17	6.5.4.1	Tank grounding provision	X	X	X	X	X	X	X
19	6.5.4.2	Tank grounding connector	X	X	X	X	—	—	—
20	6.5.4.3	Low-voltage grounding connection [†]	X	X	—	—	—	—	—
21	6.5.4.4	Low-voltage grounding provision [‡]	X	X	X	—	X	X	—
22	6.1.2.2	High-voltage bushing terminals	X	X	X	X	X	X	X

23	6.1.2.3	Low-voltage bushing terminals	X	X	X	X	X	X	X
24	6.1.1.2	Low-voltage bushing arrangement	X	X	X	X	X	X	X
25	6.3.4.1(1)	Nameplate location	—	X	X	X	X	X	X
28	6.3.4.1(2)	Nameplate location	X	—	—	—	—	—	—
30	6.3.4.2	Nameplate-type	A	A	A	A	A	A	A
31	6.3.5	kVA rating on tank	X	X	X	X	X	X	X
32	6.2.5.1	Pressure-relief valve [§]	X	X	X	X	X	X	X
33	6.2.2	Series-multiple device	X	X	X	X	X	X	X

*Supplied only on units with internal terminal boards.

[†]For 120/240 V only.

[‡]For 240/480 V and 277 V.

[§]Segment location not specified. Not required if cover design is in accordance with 6.2.5.2 of C57.12.20-1988.

[¶]ANSI/IEEE C57.12.20-1988.


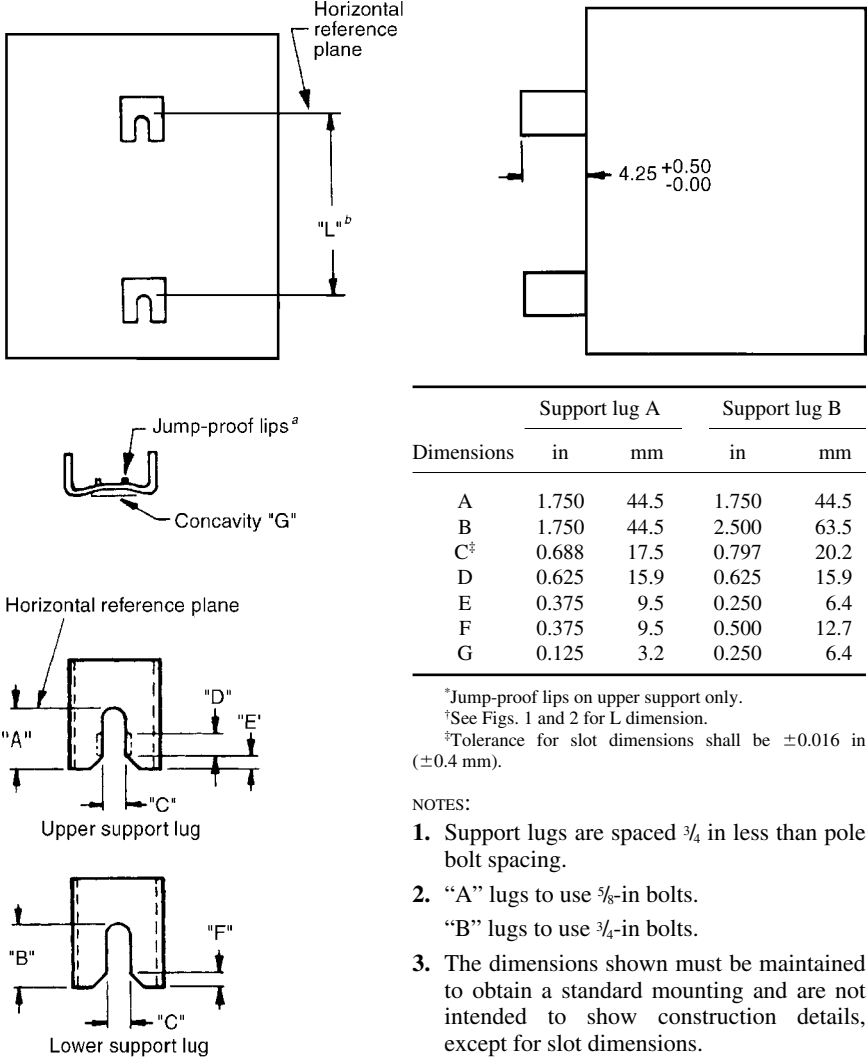


FIGURE 5.23 Transformer support lugs A and B. [American National Standards Institute]

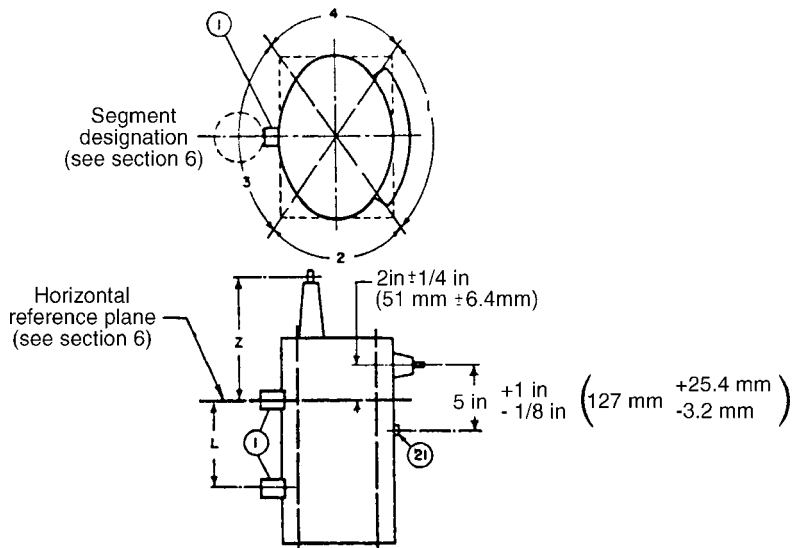

High-voltage rating (kV)	kVA	Support lug-type	L		Z*	
			in	mm	in	mm
19.92 and below	15–30	A	23 1/4	591	14 ± 2	356 ± 51
	45–75	B	23 1/4	591	14 ± 2	356 ± 51
	112 1/2–300	C	36†	914	14 ± 2	356 ± 51

*The Z dimension applies only to high-voltage cover bushing transformers.
†A spacing of 24 in (610 mm) may be used when tank height will not permit the 36-in (914-mm) dimension.

FIGURE 5.24B Segment designations and interchangeability dimensions for three-phase transformers.

NOTES:

1. Support lugs attached to transformer and intended for bolting to adapter plates for direct pole mounting or to conventional crossarm hangers.
2. Slots or holes shall be suitable for 5/8-in bolts.
3. Support-lug faces are to be in one plane.
4. For L dimension see ANSI Figs. 24A and 24B.
5. The dimensions shown must be maintained to obtain a standard mounting and are not intended to show details of construction.


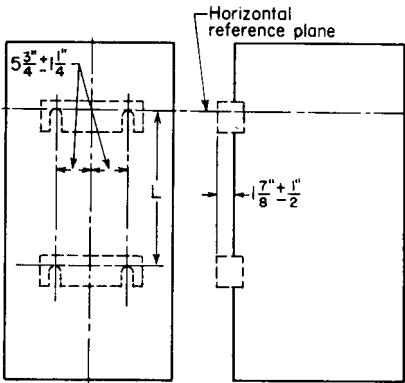



FIGURE 5.25 Transformer support lug C. [American National Standards Institute]

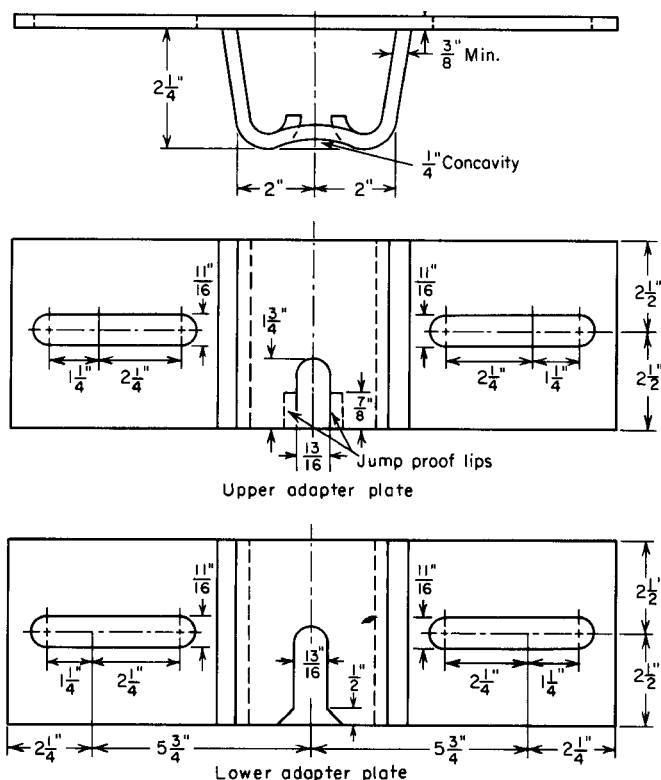


NOTES:

1. Upper and lower adapter plates are identical, except that bolt slot is $\frac{3}{4}$ in longer and jumpproof lips are omitted on lower plate and bottom of bolt slot is chamfered.
2. Use $\frac{5}{8}$ -in bolts to bolt adapter plates to transformer support lugs. Use $\frac{3}{4}$ -in bolts to bolt adapter plates to pole.
3. For ease of inserting pole bolts in adapter-plate slots and for tolerance in boring pole-bolt holes, the distance between the tops of bolt slots is $\frac{3}{4}$ in less than bolt spacing, and lower edges of slots are chamfered on lower adapter plate.
4. Tolerances, except where indicated otherwise, shall be $\pm \frac{1}{16}$ in, except that adapter-plate bolt slot tolerances shall be $\pm \frac{1}{64}$ in.
5. Adapter plates, nuts, and bolts shall be hot-dip-galvanized.
6. Not suitable for use with transformers in excess of 2000 lb.

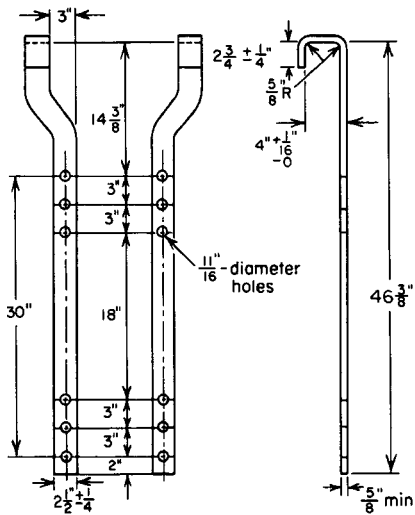FIGURE 5.26 Type C adapter plates for direct pole mounting of transformers. [American National Standards Institute]



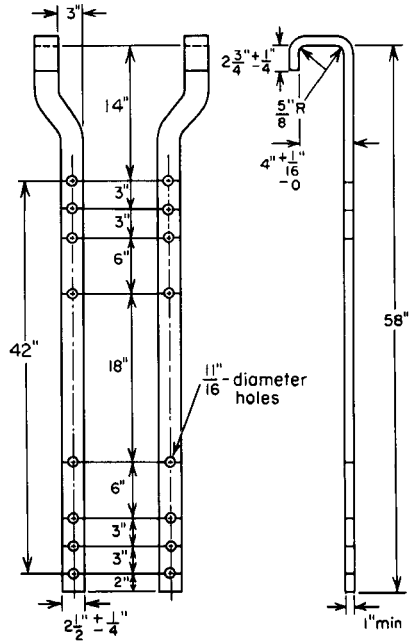Crossarm Hanger C1
For use with 75-100 kVA
single-phase



Crossarm Hanger C3
For use with 75-150 kVA three-phase
and 167 kVA single-phase




NOTES:

1. Crossarm hangers shall be hot-dip-galvanized.
2. C1- and C3-crossarm hangers each to be equipped with four square-head bolts and square nuts having NC threads, $2\frac{1}{2}$ in long, threaded to within $\frac{3}{8}$ in or less of bolt head.
3. Tolerances, except where indicated otherwise, shall be $\pm \frac{1}{16}$ in, except that bolt hole and slot tolerance shall be $\pm \frac{1}{64}$ in.

FIGURE 5.28 Crossarm hangers. [American National Standards Institute]

41. Standard Accessory Equipment for Three-Phase Transformers

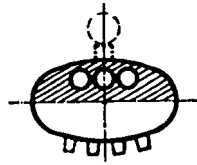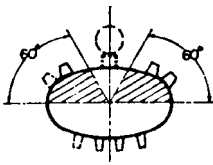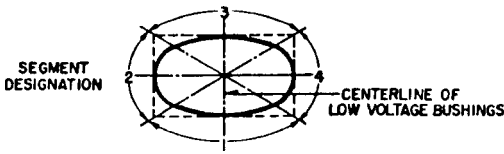(American National Standards Institute)



Outline drawing

Figure 12*

Figure 13*

High voltage (kV)	7.2 to 13.8	12.47Y to 13.2Y
	4.8 and below	13.8GrdY/7.97 and 24.94GrdY/14.4
	8.32Y and below	34.5GrdY/19.92 [†]

Low voltage (V)			600 and below				5000 and below			
Item No.	Section reference [‡]	kVA	30	45 to 75	112½ to 300	500	30	45to 75	112½ to 300	500
1	6.5.2	Support lug-type	A	B	C	—	A	B	C	—
5	6.2.3	Liquid-level marking	X	X	X	X	X	X	X	X
9	6.2.1	Tap changer (when specified)	X	X	X	X	X	X	X	X
14	6.5.1	Handhole in cover [†]	—	—	—	—	X	X	X	X
16	6.2.4	Lifting lugs	X	X	X	X	X	X	X	X
17	6.5.4.1	Tank grounding provision	X	X	X	X	X	X	X	X
21	6.5.4.4	Low-voltage grounding provision	X	X	X	X	X	X	X	X
22	6.1.2.2	High-voltage bushing terminals	X	X	X	X	X	X	X	X
23	6.1.2.3	Low-voltage bushing terminals	X	X	X	X	X	X	X	X
24	6.1.1.2	Low-voltage bushing arrangement	X	X	X	X	X	X	X	X

25	6.3.4.1(1)	Nameplate location	X	X	X	X	X	X	X	X
30	6.3.4.2	Nameplate-type [§]	A	A	A	A	A	A	A	A
31	6.3.5	kVA rating on tank	X	X	X	X	X	X	X	X
32	6.2.5.1	Pressure-relief valve [‡]	X	X	X	X	X	X	X	X

[‡]To maintain satisfactory mechanical and electrical clearances on small kVA ratings, it is permissible to encroach upon the unshaded area.

[‡]Supplied only on units with internal tap changers.

[§]Segment location not specified. Not required if cover design is in accordance with 6.2.5.2 in C57.12.20-1988.

[§]Nameplate shall show BIL for 34.5GrdY/19.92.

[‡]ANSI/IEEE C57.12.20-1988.

42. Performance of 60-Hz Single-Phase Oil-Filled Distribution Transformers

(Standard voltages of 600 or 2400 V on high-voltage side)

kVA	No load loss	Total loss at 75°C	Efficiencies at 75°C				Regulation at 75°C		% impedance at 75°C
			Full	$\frac{3}{4}$	$\frac{1}{2}$	$\frac{1}{4}$	100% pf	80% pf	
1½	20	66	95.8	96.1	95.9	94.2	3.1	3.6	3.6
3	27	98	96.9	97.1	97.1	96.0	2.4	2.6	2.5
5	41	134	97.4	97.6	97.5	96.4	1.9	2.6	2.5
7½	55	184	97.6	97.8	97.7	96.8	1.8	2.3	2.3
10	59	241	97.7	97.9	97.9	97.3	1.9	2.3	2.3
15	80	333	97.8	98.0	98.1	97.5	1.7	2.2	2.2
25	120	496	98.1	98.3	98.3	97.7	1.6	2.7	2.9
37½	154	649	98.3	98.5	98.5	98.1	1.4	2.6	2.8
50	190	795	98.4	98.6	98.6	98.2	1.3	2.3	2.5
75	288	1,194	98.4	98.6	98.6	98.1	1.3	3.1	3.6
100	357	1,553	98.5	98.6	98.7	98.2	1.3	3.2	3.8
150	550	2,292	98.5	98.7	98.7	98.3	1.3	3.8	4.8
200	800	2,905	98.6	98.7	98.7	98.2	1.2	3.7	4.8
250	1,115	3,815	98.5	98.6	98.6	98.0	1.2	3.7	4.8
333	1,310	4,665	98.6	98.7	98.7	98.2	1.2	3.7	4.8
500	1,675	6,325	98.8	98.9	98.9	98.5	1.1	3.6	4.8

43. Performance of 60-Hz Single-Phase Oil-Filled Distribution Transformers

(Standard voltage of 7200 V on high-voltage side)

kVA	No load loss	Total loss at 75°C	Efficiencies at 75°C				Regulation at 75°C		% impedance at 75°C
			Full	$\frac{3}{4}$	$\frac{1}{2}$	$\frac{1}{4}$	100% pf	80% pf	
1½	22	65	95.9	96.1	95.8	93.8	2.9	2.9	3.0
3	32	106	96.6	96.9	96.7	95.4	2.6	3.1	3.0
5	51	164	96.8	97.1	96.9	95.6	2.3	2.5	2.6
7½	59	229	97.0	97.3	97.3	96.4	2.3	3.0	3.0
10	71	288	97.2	97.5	97.6	96.8	2.3	3.0	3.0
15	97	364	97.6	97.9	97.9	97.1	1.9	3.1	3.3
25	144	544	97.9	98.1	98.1	97.4	1.7	3.1	3.4
37½	208	725	98.1	98.3	98.2	97.5	1.5	2.9	3.2
50	270	940	98.2	98.3	98.3	97.6	1.4	3.1	3.6
75	370	1,310	98.3	98.4	98.4	97.8	1.4	4.0	5.1
100	470	1,700	98.3	98.5	98.4	97.8	1.4	3.8	4.8
150	725	2,425	98.4	98.5	98.5	97.8	1.3	3.9	5.0
200	915	3,180	98.4	98.6	98.5	97.9	1.3	3.9	5.0
250	1,115	3,815	98.5	98.6	98.6	98.0	1.3	3.9	5.0
333	1,310	4,665	98.6	98.7	98.7	98.2	1.2	3.8	5.0
500	1,675	6,325	98.8	98.9	98.9	98.5	1.1	3.8	5.0

44. Performance of 60-Hz Single-Phase Oil-Filled Distribution Transformers

(Standard voltage of 13,200 V on high-voltage side)

kVA	No load loss	Total loss at 75°C	Efficiencies at 75°C				Regulation at 75°C		% impedance at 75°C
			Full	$\frac{3}{4}$	$\frac{1}{2}$	$\frac{1}{4}$	100% pf	80% pf	
2½	44	113	95.7	95.8	95.3	92.8	2.7	3.1	3.1
5	58	180	96.5	96.8	96.6	95.0	2.5	2.9	2.9
10	92	288	97.2	97.4	97.2	96.0	2.0	2.8	2.8
15	122	396	97.4	97.6	97.5	96.4	1.9	2.9	3.0
25	170	550	97.9	98.0	97.9	97.0	1.6	3.0	3.3
37½	230	748	98.1	98.2	98.1	97.3	1.5	3.0	3.3
50	300	958	98.1	98.3	98.2	97.4	1.4	2.9	3.2
75	415	1,375	98.2	98.3	98.3	97.5	1.4	4.0	5.0
100	530	1,755	98.3	98.4	98.3	97.6	1.4	4.0	5.1
150	750	2,520	98.3	98.5	98.4	97.8	1.3	3.9	5.0
200	950	3,240	98.4	98.5	98.5	97.9	1.3	3.9	5.0
250	1,115	3,815	98.5	98.6	98.6	98.0	1.3	3.9	5.0
333	1,310	4,665	98.6	98.7	98.7	98.2	1.2	3.8	5.0
500	1,675	6,325	98.8	98.9	98.9	98.5	1.1	3.8	5.0

45. Performance of 60-Hz Single-Phase Oil-Filled Distribution Transformers

(Standard voltage of 22,000 V on high-voltage side)

kVA	No load loss	Total loss at 75°C	Efficiencies at 75°C				Regulation at 75°C		% impedance at 75°C
			Full	$\frac{3}{4}$	$\frac{1}{2}$	$\frac{1}{4}$	100% pf	80% pf	
10	135	420	96.0	96.2	96.0	94.2	3.0	4.9	5.2
15	175	530	96.6	96.8	96.6	95.0	2.5	4.7	5.2
25	230	740	97.1	97.3	97.2	96.0	2.2	4.6	5.2
37½	300	985	97.4	97.6	97.5	96.4	2.0	4.5	5.2
50	375	1,225	97.6	97.8	97.7	96.7	1.9	4.4	5.2
75	500	1,630	97.9	98.0	98.0	97.0	1.7	4.2	5.2
100	610	1,995	98.1	98.2	98.1	97.3	1.7	4.2	5.2
150	825	2,715	98.2	98.3	98.3	97.5	1.4	4.1	5.2
200	1,015	3,430	98.3	98.4	98.4	97.7	1.4	4.1	5.2
250	1,200	3,930	98.5	98.6	98.5	97.8	1.3	4.0	5.2
333	1,450	4,810	98.6	98.7	98.6	98.0	1.2	4.0	5.2
500	1,950	6,570	98.8	98.8	98.8	98.2	1.1	3.9	5.2

46. Performance of 60-Hz Single-Phase Oil-Filled Distribution Transformers

(Standard voltage of 44,000 V on high-voltage side)

kVA	No load loss	Total loss at 75°C	Efficiencies at 75°C				Regulation at 75°C		% impedance at 75°C
			Full	$\frac{3}{4}$	$\frac{1}{2}$	$\frac{1}{4}$	100% pf	80% pf	
25	310	858	96.7	96.8	96.5	94.8	2.4	5.0	5.7
37 $\frac{1}{2}$	400	1,122	97.1	97.2	97.0	95.5	2.1	4.8	5.7
50	490	1,370	97.3	97.4	97.2	95.8	2.0	4.8	5.7
75	630	1,810	97.6	97.7	97.6	96.4	1.8	4.6	5.7
100	770	2,225	97.8	97.9	97.8	96.7	1.7	4.6	5.7
150	1,010	3,003	98.0	98.1	98.0	97.1	1.5	4.5	5.7
200	1,230	3,743	98.2	98.3	98.2	97.3	1.5	4.4	5.7
250	1,420	4,405	98.3	98.4	98.3	97.5	1.4	4.4	5.7
333	1,695	5,395	98.4	98.5	98.5	97.7	1.3	4.4	5.7
500	2,200	7,030	98.6	98.7	98.7	98.0	1.2	4.3	5.7

47. Performance of 60-Hz Single-Phase Oil-Filled Distribution Transformers

(Standard voltage of 66,000 V on high-voltage side)

kVA	No load loss	Total loss at 75°C	Efficiencies at 75°C				Regulation at 75°C		% impedance at 75°C
			Full	$\frac{3}{4}$	$\frac{1}{2}$	$\frac{1}{4}$	100% pf	80% pf	
50	640	1,515	97.1	97.1	96.7	94.7	2.0	5.3	6.5
75	820	1,950	97.5	97.5	97.1	95.5	1.8	5.1	6.5
100	970	2,385	97.7	97.7	97.4	95.9	1.7	5.1	6.5
150	1,220	3,160	97.9	98.0	97.8	96.5	1.5	5.0	6.5
200	1,440	3,900	98.1	98.1	98.0	96.9	1.5	4.9	6.5
250	1,630	4,615	98.2	98.3	98.1	97.2	1.4	4.9	6.5
333	1,875	5,635	98.3	98.4	98.3	97.5	1.4	4.9	6.5
500	2,400	7,380	98.5	98.6	98.6	97.9	1.3	4.8	6.5

48. Performance of 60-Hz Three-Phase Oil-Filled Distribution Transformers

(Standard voltage of 2400 V on high-voltage side)

kVA	No load loss	Total loss at 75°C	Efficiencies at 75°C				Regulation at 75°C		% impedance at 75°C
			Full	$\frac{3}{4}$	$\frac{1}{2}$	$\frac{1}{4}$	100% pf	80% pf	
10	90	345	96.7	97.0	97.0	96.0	2.6	3.4	3.4
15	113	443	97.1	97.4	97.5	96.5	2.3	3.3	3.4
25	162	650	97.5	97.7	97.8	97.0	2.0	3.3	3.4
37½	214	890	97.7	97.9	98.0	97.3	1.9	3.9	4.3
50	275	1,117	97.8	98.0	98.1	97.4	1.9	4.2	4.9
75	370	1,525	98.0	98.2	98.2	97.7	1.7	3.8	4.4
100	455	1,860	98.2	98.4	98.4	97.9	1.5	3.8	4.6
150	590	2,445	98.4	98.6	98.6	98.1	1.4	3.4	4.1
200	785	3,093	98.5	98.6	98.6	98.2	1.3	3.4	4.2
300	1,100	4,350	98.6	98.7	98.7	98.3	1.2	3.7	4.8
450	1,550	6,125	98.4	98.8	98.8	98.6	1.2	3.7	4.8

49. Performance of 60-Hz Three-Phase Oil-Filled Distribution Transformers

(Standard voltage of 4800 V on high-voltage side)

kVA	No load loss	Total loss at 75°C	Efficiencies at 75°C				Regulation at 75°C		% impedance at 75°C
			Full	$\frac{3}{4}$	$\frac{1}{2}$	$\frac{1}{4}$	100% pf	80% pf	
10	94	354	96.6	96.9	96.9	95.8	2.7	3.7	3.7
15	120	465	97.0	97.3	97.3	96.3	2.4	3.7	3.8
25	170	685	97.3	97.6	97.7	96.9	2.2	3.4	3.5
37½	225	935	97.6	97.8	97.9	97.2	2.0	3.7	4.0
50	275	1,165	97.7	98.0	98.0	97.4	1.9	3.6	4.0
75	370	1,585	97.9	98.2	98.2	97.7	1.8	3.5	4.0
100	455	1,955	98.1	98.3	98.3	97.8	1.6	3.5	4.0
150	615	2,615	98.3	98.5	98.5	98.0	1.4	3.4	4.0
200	785	3,275	98.4	98.6	98.6	98.1	1.4	3.4	4.0
300	1,100	4,350	98.6	98.7	98.7	98.3	1.2	3.7	4.8
450	1,550	6,125	98.7	98.8	98.8	98.4	1.2	3.7	4.8

50. Performance of 60-Hz Three-Phase Oil-Filled Distribution Transformers

(Standard voltage of 7200 V on high-voltage side)

kVA	No load loss	Total loss at 75°C	Efficiencies at 75°C				Regulation at 75°C		% impedance at 75°C
			Full	$\frac{3}{4}$	$\frac{1}{2}$	$\frac{1}{4}$	100% pf	80% pf	
10	100	385	96.3	96.7	96.7	95.5	2.9	2.9	3.0
15	132	512	96.7	97.0	97.0	96.0	2.6	3.3	3.3
25	190	735	97.2	97.4	97.5	96.5	2.3	3.4	3.5
37 $\frac{1}{2}$	260	1,000	97.4	97.7	97.7	96.9	2.1	3.4	3.5
50	315	1,205	97.7	97.9	97.9	97.1	1.9	3.1	3.2
75	440	1,650	97.8	98.0	98.0	97.3	1.7	3.1	3.4
100	560	2,050	98.0	98.2	98.1	97.4	1.6	3.4	3.9
150	730	2,760	98.2	98.4	98.4	97.8	1.5	3.5	4.2
200	850	3,370	98.4	98.5	98.5	98.0	1.4	3.5	4.2
300	1,150	4,470	98.5	98.7	98.7	98.2	1.3	3.9	5.0
450	1,600	6,300	98.6	98.8	98.8	98.3	1.2	3.9	5.0

51. Performance of 60-Hz Three-Phase Oil-Filled Distribution Transformers

(Standard voltage of 12,000 V on high-voltage side)

kVA	No load loss	Total loss at 75°C	Efficiencies at 75°C				Regulation at 75°C		% impedance at 75°C
			Full	$\frac{3}{4}$	$\frac{1}{2}$	$\frac{1}{4}$	100% pf	80% pf	
10	110	410	95.1	96.4	96.4	95.1	3.1	4.7	4.8
15	145	545	96.5	96.8	96.8	95.7	2.8	4.7	5.0
25	207	775	97.0	97.3	97.3	96.2	2.4	3.7	4.0
37 $\frac{1}{2}$	275	1,035	97.3	97.6	97.6	96.7	2.2	3.7	4.0
50	345	1,275	97.5	97.7	97.7	96.9	2.0	3.9	4.3
75	475	1,745	97.7	97.9	97.9	97.1	1.9	3.9	4.6
100	600	2,160	97.9	98.1	98.1	97.3	1.8	4.6	5.7
150	765	2,895	98.1	98.3	98.3	97.6	1.5	3.7	4.4
300	1,225	4,795	98.4	98.6	98.6	98.1	1.4	3.9	5.0
450	1,650	6,690	98.5	98.7	98.7	98.3	1.3	3.9	5.0

52. Performance of 60-Hz Three-Phase Oil-Filled Distribution Transformers

(Standard voltage of 13,200 V on high-voltage side)

kVA	No load loss	Total loss at 75°C	Efficiencies at 75°C				Regulation at 75°C		% impedance at 75°C
			Full	$\frac{3}{4}$	$\frac{1}{2}$	$\frac{1}{4}$	100% pf	80% pf	
15	165	565	96.4	96.7	96.6	95.2	2.8	4.6	4.8
25	230	800	96.9	97.2	97.1	96.0	2.4	3.6	3.6
37½	305	1,065	97.0	97.3	97.5	96.4	2.2	4.1	4.5
50	375	1,305	97.5	97.7	97.6	96.6	2.0	4.0	4.5
75	515	1,785	97.7	97.9	97.8	96.9	1.8	3.2	3.5
100	630	2,190	97.9	98.0	98.0	97.2	1.7	4.5	5.5
150	790	2,920	98.1	98.3	98.2	97.6	1.6	3.8	4.5
200	930	3,580	98.3	98.4	98.4	97.8	1.5	3.7	4.5
300	1,225	4,795	98.4	98.6	98.6	98.1	1.4	3.9	5.0
450	1,650	6,690	98.5	98.7	98.7	98.3	1.3	3.9	5.0

53. Performance of 60-Hz Three-Phase Oil-Filled Distribution Transformers

(Standard voltage of 22,000 V on high-voltage side)

kVA	No load loss	Total loss at 75°C	Efficiencies at 75°C				Regulation at 75°C		% impedance at 75°C
			Full	$\frac{3}{4}$	$\frac{1}{2}$	$\frac{1}{4}$	100% pf	80% pf	
37½	330	1,250	96.8	97.1	97.1	96.1	2.6	4.8	5.2
50	385	1,510	97.1	97.4	96.4	96.5	2.4	4.7	5.2
75	525	1,945	97.4	97.7	97.7	96.8	2.1	4.5	5.2
100	640	2,365	97.7	97.9	97.9	97.1	1.9	4.4	5.2
150	800	3,085	98.0	98.2	97.2	96.6	1.7	4.3	5.2
200	985	3,815	98.1	98.3	98.3	97.7	1.6	4.2	5.2
300	1,355	5,320	98.3	98.4	98.5	97.9	1.5	4.2	5.2
450	1,850	7,100	98.4	98.6	98.6	98.1	1.3	4.1	5.2

54. Performance of 60-Hz Three-Phase Oil-Filled Distribution Transformers

(Standard voltage of 44,000 V on high-voltage side)

kVA	No load loss	Total loss at 75°C	Efficiencies at 75°C				Regulation at 75°C		% impedance at 75°C
			Full	$\frac{3}{4}$	$\frac{1}{2}$	$\frac{1}{4}$	100% pf	80% pf	
75	675	2,230	97.1	97.3	97.2	96.0	2.3	4.9	5.7
100	840	2,635	97.4	97.6	97.5	96.3	2.0	4.7	5.7
150	1,100	3,485	97.7	97.9	97.8	96.8	1.8	4.6	5.7
200	1,350	4,290	97.9	98.0	98.0	97.0	1.7	4.6	5.7
300	1,765	5,830	98.1	98.2	98.2	97.4	1.6	4.5	5.7
450	2,340	7,865	98.3	98.4	98.4	97.7	1.4	4.4	5.7

55. Performance of 60-Hz Three-Phase Oil-Filled Distribution Transformers

(Standard voltage of 66,000 V on high-voltage side)

kVA	No load loss	Total loss at 75°C	Efficiencies at 75°C				Regulation at 75°C		% impedance at 75°C
			Full	3/4	1/2	1/4	100% pf	80% pf	
150	1,450	3,970	97.4	97.5	97.3	95.9	1.9	5.2	6.5
200	1,700	4,800	97.7	97.8	97.6	96.4	1.8	5.2	6.5
300	2,200	6,340	97.9	98.0	97.9	96.8	1.6	5.0	6.5
450	2,850	8,420	98.2	98.3	98.1	97.2	1.5	4.9	6.5

56. Performance of 60-Hz Single-Phase Air-Cooled Transformers

(Standard voltage of 2400 V on high-voltage side)

kVA	No load loss	Total loss at 75°C	Efficiencies at 75°C				Regulation at 75°C		% impedance at 75°C
			Full	3/4	1/2	1/4	100% pf	80% pf	
150	755	2,265	98.51	98.60	98.51	97.78	1.2	3.8	5.0
200	925	2,890	98.58	98.66	98.60	97.95	1.1	3.8	5.0
250	1,080	3,495	98.62	98.72	98.67	98.07	1.1	3.8	5.0
333	1,325	4,460	98.68	98.78	98.75	98.20	1.1	3.6	5.0
500	1,760	6,315	98.75	98.86	98.85	98.39	1.1	3.7	5.0

57. Small power transformers (Figs. 5.5 and 5.29) are constant-voltage, self-air-cooled transformers for industrial purposes. The windings are completely enclosed in metal casings. The transformers are available in single- and three-phase construction of conventional or autotransformer types with cases designed for open or conduit wiring.

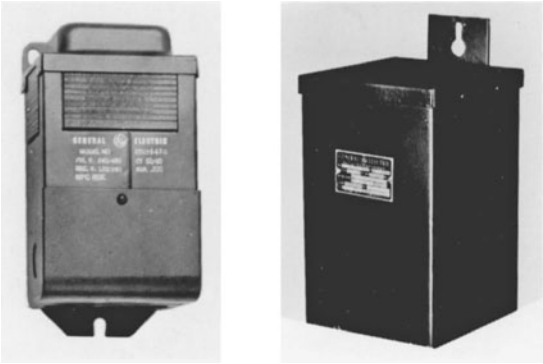


FIGURE 5.29 Small power transformers, self-air-cooled.
[General Electric Co.]

Single-phase units are available in sizes up to 50 kVA, while three-phase units are made as large as 150 kVA. Primary voltage ratings range from 125 to 2400 V. Standard secondary voltages are 115/230 or 230/460 V.

58. Small power transformers are available for taking power from motor disconnecting switches for localized lighting at the machine. Types are available for operating 115-, 64-, 32-, or 6-V lamps from 115-, 230-, 460-, or 575-V power circuits. Standard sizes are 75, 150, 225, and 300 W. Another type of small power transformer is the one designed for domestic oil-burner ignition (see Fig. 5.30).

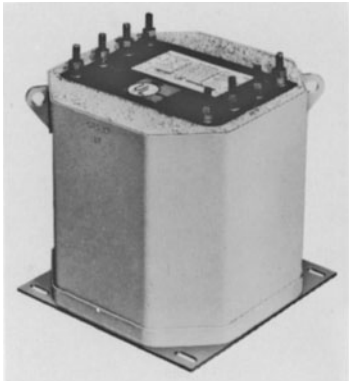


FIGURE 5.30 Replacement-type domestic oil-burner ignition transformers. [General Electric Co.]

59. Sign-lighting transformers are single-phase, constant-voltage, self-air-cooled transformers for stepping down from 115 or 230 V to the proper voltage for low-voltage incandescent lamps in signs. They are made in sizes up to 5 kVA with the windings completely enclosed in metal casings.

60. Control and signal transformers are constant-voltage, self-air-cooled transformers for the purpose of supplying the proper voltage for control circuits of electrically operated switches or other equipment and for signal circuits. They may be of the open type with no protective casing over the windings or of the enclosed type with a metal casing over the windings. Some of the available mounting types are shown in Figs. 5.31 and 5.32.

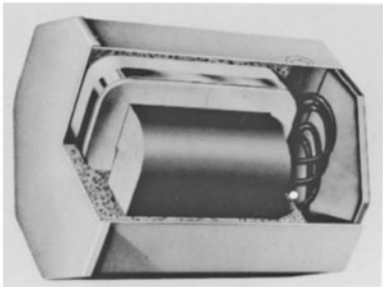
61. Transformers for many gaseous-discharge lamps must be of the variable-voltage type. These transformers are designed so that the secondary voltage drops rapidly with load. This voltage characteristic is accomplished by means of a three-winding transformer with magnetic leakage paths between the primary and each secondary, as shown in Fig. 5.33. As the load increases, the leakage flux of the primary produces a greater voltage drop in the primary winding, thereby reducing the secondary voltage. Some of these transformers are equipped with a capacitor mounted inside the same enclosing case for power-factor improvement. The transformers are of the self-air-cooled type. Various mounting types for luminous-tube work are shown in Fig. 5.34.



I. Enclosed type with flexible terminal leads.



II. Open type with lug terminals.



III. Enclosed type with flexible terminal leads, encapsulated core and coil.

FIGURE 5.31 Typical control transformers. [Westinghouse Electric Corp.]

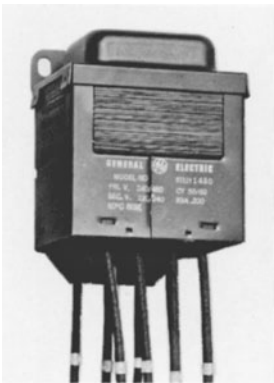


FIGURE 5.32 Control transformer. [General Electric Co.]

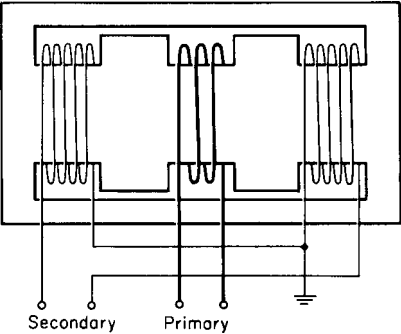


FIGURE 5.33 Cross section of a typical neon-sign transformer showing windings and leakage paths in magnetic circuit.

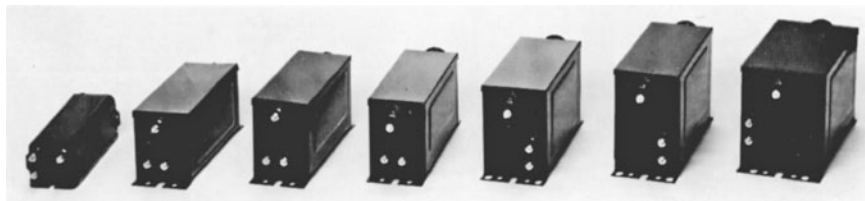


FIGURE 5.34 Luminous-tube transformers rated 3000 to 15,000 V, 30 to 120 mA, showing low- and high-voltage terminals. [General Electric Co.]

62. Bell-ringing transformers are especially designed small-capacity constant-voltage transformers for applications such as the operation of doorbells, buzzers, door openers, and annunciators. They are self-air-cooled units enclosed in metal cases. They can be obtained for primary voltages of 120 or 240 with a single secondary voltage of 10 or with three secondary voltages of 6, 12, and 18.

63. Instrument transformers are employed for the purpose of stepping down the voltage or current of a circuit for the operation of instruments, such as ammeters, voltmeters, wattmeters, etc., and relays for various protective purposes. It would be practically impossible to build delicate devices such as instruments and relays so that they would have satisfactory insulation for high voltages. Frequently such devices while energized must be accessible to operators, so that it is necessary to have the devices insulated from the high-voltage circuit. Instrument transformers are of two types: voltage and current. They are made in various types, depending upon the voltage of the circuits, requirements of installations, and accuracy required. Instrument transformers will always introduce a certain amount of error into the readings obtained on instruments supplied by them. The transformers are not rated on a thermal basis of the load which they can safely carry but upon an accuracy basis. The voltampere rating is the load which the transformer will carry without exceeding the specified accuracy limit. If accuracy can be sacrificed, the transformers can be used for loads considerably above their rated values. Instrument transformers are made in indoor, outdoor, and portable types for test purposes. Voltage transformers have a normal secondary voltage of 120 V. Current transformers have a normal secondary current of 5 A. Typical instrument transformers are shown in Figs. 5.35 and 5.36.


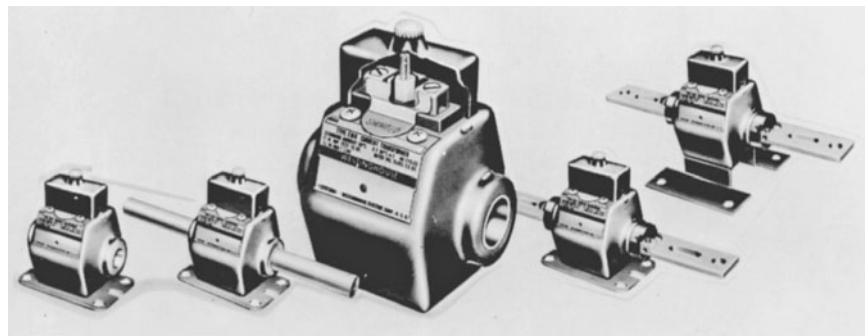



FIGURE 5.35 Typical current instrument transformers. [Westinghouse Electric Corp.]

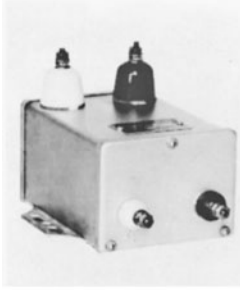

I. Relatively low voltage, unfused; dry, indoor type.



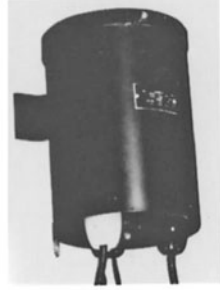
II. Relatively low voltage, fused; dry, indoor type.



III. Relatively low voltage, unfused; dry, outdoor type.



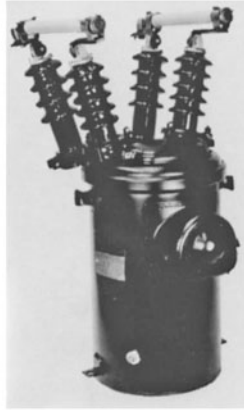IV. Medium and high voltage, fused; oil-filled, indoor type.



V. Medium and high voltage, fused; oil-filled, both indoor and outdoor type.

FIGURE 5.36 Typical voltage transformers. [General Electric Co.]

64. The current transformer (*Standard Handbook for Electrical Engineers*), considered electrically and without any reference to the change in its design to accomplish its specific duty, differs from the shunt or voltage transformer merely in the method of use. The latter transformer is ordinarily supplied with a constant impressed voltage, the load being changed by varying the impedance (load) of the total secondary circuit, while the total impedance of the secondary circuit of the former transformer is normally held constant, and the change in load is due to a simultaneous change in the primary current and emf. In the voltage transformer the actual ratio of the primary to the secondary current is of minor importance, while every effort is made to design the apparatus so that the ratio of the secondary power to the primary power is as nearly unity as possible. In the design of a series transformer no thought whatsoever is given to the ratio of the primary and secondary watts, but attention is concentrated on the endeavor to obtain a definite ratio of secondary to primary amperes.

The electric and magnetic circuits of a current transformer can conveniently be represented by the diagram shown in Fig. 5.37, in which it is used for reducing the line current to a value suitable for measurement by a low-reading ammeter, which can be thoroughly insulated from

the main circuit. If the small transformer loss is neglected, the current through the ammeter A is, since the ratio of turns $M = 2:5$, equal to two-fifths of the line current I_L .

65. Application of the current instrument transformer.

When an alternating current is so large that to connect measuring or operating instruments directly in the circuit would be impracticable or when the voltage is so high that to do so would be unsafe, the current transformer provides a means of reproducing the effect of the primary current on a scale suited to the instrument and of insulating the instrument from the main circuit. It is a special development of the transformer principle in which a constant ratio of primary to secondary current is the important consideration instead of the usual constant ratio of primary to secondary voltage.

Current transformers are used with ac ammeters, wattmeters, power-factor meters, watt-hour meters, compensators, protective and regulating relays, and the trip coils of circuit breakers. It is a standard practice in the United States to design current transformers (regardless of their capacity or ratios of transformation) to supply a rated secondary current of 5 A.

EXAMPLE A 600-A current transformer has a ratio of 120:1, i.e., when a current of 600 A flows in the primary circuit, $600 \div 120 = 5$ A will flow in the secondary circuit.

Measuring instruments for use with these transformers are so designed and are provided with scales such that they give a normal scale deflection when 5 A flows through them.

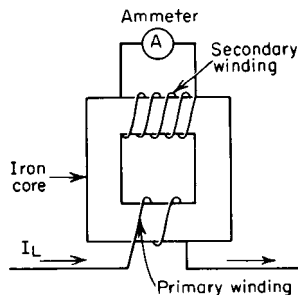


FIGURE 5.37 Elementary series transformer.

66. It is unsafe to open the secondary circuit of a current transformer when there is any current in the primary.

When the secondary circuit is closed, the current in this circuit creates a magnetomotive force (mmf) which is in opposition to the mmf of the primary current, and the core flux is thereby limited to the value necessary to generate in the secondary coil an emf sufficient to produce therein a current only slightly less than the primary current in magnetizing effect. When the secondary is open, there is no opposing mmf for limiting the core flux, which may reach a high value. Thus, even a small value of primary current produces an excessive value of core flux and a correspondingly large secondary emf. The secondary voltage under these conditions reaches a value which may both damage the insulation and prove dangerous to life. Absolutely no harm can come from short-circuiting the secondary terminals of the current transformer, and this method is used when it is necessary to insert or disconnect instruments in the secondary circuit.

67. The constant-current transformer (*Standard Handbook for Electrical Engineers*).

The operation of low-voltage lamps in parallel on a constant-voltage system necessitates a prohibitive expenditure for conducting material when the area to be lighted is extensive and the lamps are widely separated. For such service it is the common practice to operate the lamps, which are connected in series, with a constant current. The constant-current transformer is a special form of transformer which converts alternating current at a constant voltage to a constant (alternating) current with a voltage varying with the load. It consists of a primary coil upon which the constant voltage is impressed, a secondary coil (or coils) movable with respect to the primary, and a core of low magnetic reluctance. It depends for its regulation upon the magnetic leakage between the primary and secondary coils.

Consider first the primary coil; with the constant emf impressed upon this coil the total magnetism within the coil will be practically constant under all conditions. The emf generated in the secondary will depend upon the strength of the field which it surrounds. In all types of stationary transformers the secondary current is opposite in general time direction to the primary, so that there is not only a repulsive thrust between the two coils but also a considerable tendency for the magnetic lines from the primary to be forced out into space without penetrating the secondary. In the ordinary constant-voltage transformer the repelling action between the two currents is prevented from producing motion of the coils by the rigid mechanical construction, while the proximity of the primary and secondary coils limits the magnetic leakage.

In the constant-current transformer, however, the repelling action is utilized to adjust the relative positions of the primary and secondary coils; when the coils are widely separated, the paths for the leakage lines are increased and the lines which the secondary surrounds are fewer than when the coils are quite close together. The counterweights mechanically attached to the movable coil (or coils) are so arranged that when the desired current exists in the secondary coil (independent of its position along the core), the weights are just balanced. An increase in the current increases the repulsion and causes the coils to separate. With any current less than normal, the repelling force diminishes, and the primary and secondary coils approach each other, thereby restoring the current to normal. The primary can be wound for any reasonable voltage (say, as high as 10,000 V), while the secondary can be wound for the voltage required for operating the number of lamps in the circuit—from 15 to 200 or more lamps.

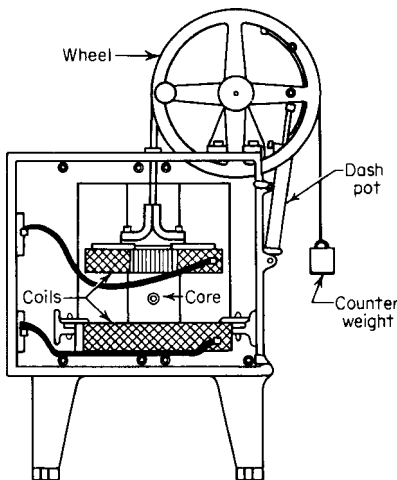


FIGURE 5.38 Constant-current transformer.

arranged to be equal to the variable repulsive thrust corresponding to a constant value of current in the coils at all positions of the movable coils. In fact, the transformer can be adjusted to regulate for a current of constant value at all loads or for one which either increases or decreases with increase of loads, while both the real value of the load current and its rate of change with the variation in load can be adjusted at will. To prevent any "hunting" action of the movable coils, each transformer is sometimes equipped with a dashpot (see Fig. 5.38).

68. Mechanical construction of the constant-current transformer.

The magnetic circuit of a constant-current transformer is usually of the *shell* type, the three limbs being placed vertically. In small sizes (Fig. 5.38) one of the coils is arranged in a fixed position, while the other is movable. In some of the larger sizes there are two fixed primary coils and two movable secondary coils, while in others both the primary and secondary coils are movable. In any event the gravitational action of one movable coil or the gravitational action of one movable coil against another to which it is mechanically interconnected is counterbalanced accurately with an excess or deficiency just equal to the repulsive thrust of the primary and secondary coils at the desired load current. By the use of cam mechanisms for the counterweights or of eccentrically placed extra weights, the excess force of the counterweights can be

69. Commercial constant-current transformers are built for natural air cooling or for immersion in oil. Oil has proved an excellent medium for insulation, cooling, and

lubrication. This type of transformer is extensively used for series street-lighting service with either gaseous-discharge or incandescent lamps. The efficiency of a constant-current transformer is high, being about 96 percent at full load for a 100-lamp transformer. The power factor, which depends upon the magnetic leakage, is low at all loads; it reaches from 75 to 80 percent at full load and decreases therefrom in almost direct proportion to the decrease in load.

Constant-current transformers are made in outdoor-pole-mounting, subway-mounting, and indoor-station types. A primary voltage of 2400 is standard. The secondary current may be 6.6 or 20 A. The standard ratings are 5, 10, 15, 20, 25, 30, 35, 40, 50, 60, and 70 kVA.

70. Series transformers are for use with series incandescent street lamps for operation of lamps at a different value of current from that of the main series circuit or for isolation of a lamp of the same current value as the main circuit from the main circuit, which operates at a high voltage. The principle of operation is the same as for instrument current transformers. The primary is connected in series with the main series circuit. The lamp or lamps are connected to the secondary. These transformers are made in single-lamp types for operating one 6.6-, 15-, or 20-A series lamp from a 6.6-A main circuit; in two-lamp series type for operating two 6.6-, 15-, or 20-A series lamps connected in series to the secondary; in two-lamp multiple type for operating two 6.6-, 15-, or 20-A series lamps connected to two separate secondaries; in group series type for operating a group of 6.6-A series lamps connected in series to the secondary; and in single-lamp type for operating a single 115-V lamp from a series 6.6-A main circuit. The group series type is made in ratings of 0.25, 0.5, 1.0, 2, 3, 4, 5, 7.5, and 9.0 kVA. The single-lamp type for a 115-V lamp is made in sizes to accommodate one lamp of any watt size from 40 to 1000 W. These are made in types for vault or subway mounting, for mounting in bases of ornamental lighting poles, and for pole mounting (Figs. 5.39 and 5.40).




I. Aerial type.



II. Pole-base type.

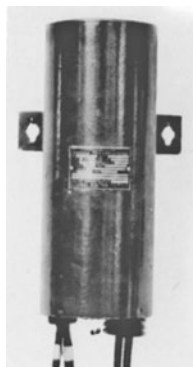FIGURE 5.39 Series transformers for supplying a single lamp from series street-lighting circuits. [General Electric Co.]



I. Small.



II. Medium.



III. Large.

FIGURE 5.40 Series transformers for operation of a group of lamps from series street-lighting circuits. [General Electric Co.]

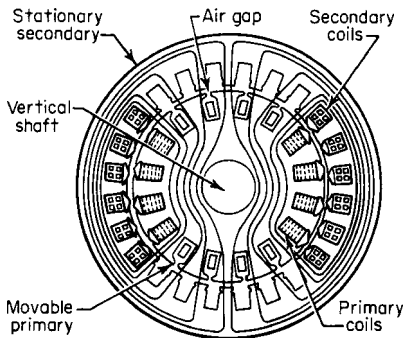


FIGURE 5.41 Section through a single-phase induction-type voltage regulator.

71. The induction regulator (Fig. 5.41) is a special type of transformer, built like an induction motor with a coil-wound secondary, which is used for varying the voltage delivered to a synchronous converter or ac feeder system. In comparison with a variable-ratio transformer it possesses the advantage of being operated without opening the circuit and without short-circuiting any transformer coil. The primary of the induction regulator is subjected to the constant voltage of the supply system, the delivered voltage obtained from the secondary winding being varied by rotating the primary structure through a certain number of degrees with reference to the secondary structure. The primary structure is normally stationary, although it is movable either automatically or by hand for the purpose of varying the secondary voltage.

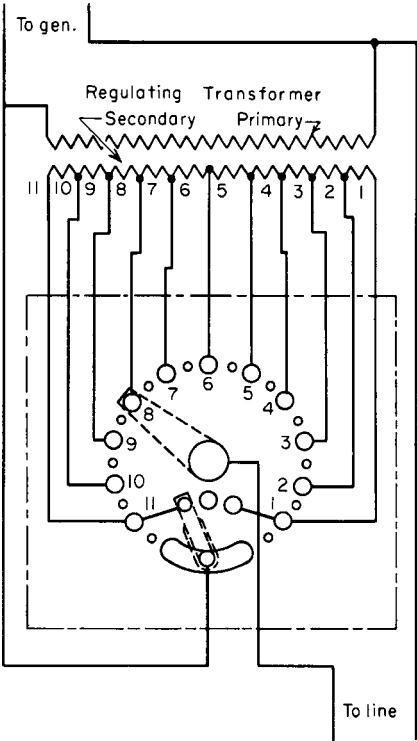


FIGURE 5.42 Single-phase step-by-step voltage regulator.

72. The step-by-step voltage regulator is merely a stationary transformer provided with a large number of secondary taps and equipped with a switching mechanism for joining any desired pair of these taps to the delivery circuit, according to the emf required. A diagram of this type is shown in Fig. 5.42. In comparison with the induction type of regulator the step-by-step type is less noisy in operation, requires less magnetizing current, and is more rapid in action. However, it provides only a limited number of voltage steps and may give trouble from arching at the switch contacts.

CONNECTIONS: POLARITY

73. Polarity of transformers (Line Material Co.). The polarity of a transformer is simply an indication of direction of flow of current from a terminal at any one instant. The idea is quite similar to the polarity marking on a battery.

As you face the high-voltage side of a transformer, the high-voltage terminal on your right is always marked H_1 and the other high-voltage terminal is marked H_2 . This is an established standard.

By definition, the polarity is additive if when you connect the adjacent high-voltage and low-voltage terminals (Fig. 5.43a) and excite the transformer, a voltmeter between the other two adjacent terminals reads the sum of the high-voltage and low-voltage winding voltages. For additive polarity, the low-voltage terminal on your right when facing the low-voltage side should then be marked X_1 and the other low-voltage terminal X_2 .

For subtractive polarity, the voltmeter in Fig. 5.43b reads the difference between the two winding voltages. In other words, the voltages subtract. In the case of subtractive polarity, the low-voltage terminal on your left when facing the low-voltage side is marked X_1 .

In making transformer connections, particularly bank connections, polarity of individual transformers must be checked. In making such connections it is necessary to remember that all H_1 terminals are of the same polarity and all X_1 terminals are of the same polarity. Thus, if you were connecting two single-phase transformers in parallel, you should connect the two H_1 terminals together, then the two H_2 terminals together, the two X_1 terminals together, and the two X_2 terminals together. By following this procedure, you can satisfactorily parallel transformers regardless of whether they are both of the same polarity or one is of additive and the other is of subtractive polarity.

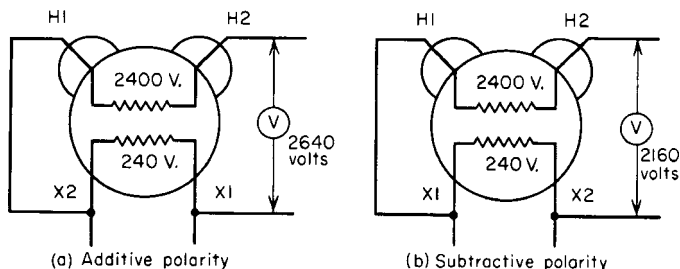


FIGURE 5.43 Transformer polarity. [Line Material Co.]

74. Tests for polarity of single-phase transformers. If a standard transformer of known correct polarity and of the same ratio and voltage as the transformer to be tested is available, the following simple method can be used. Connect together (Fig. 5.44, I) the high-tension and low-tension leads as if for parallel operation, inserting a fuse in one of the secondary leads. If both transformers are of the same polarity, no current will flow in the low-tension windings and the fuse will not blow. If the transformers are of opposite polarities, the low-tension windings will short-circuit each other and the fuse will blow. The fuse should be sufficiently small so that there can be no possibility of injuring the transformers.

A method of testing for polarity of single-phase transformers with a voltmeter is shown in Fig. 5.44, II. Connect the transformer as shown. Make, successively, voltmeter readings V , V_1 , and V_2 . If the transformer has what is called additive polarity, $V + V_1$ will equal V_2 .

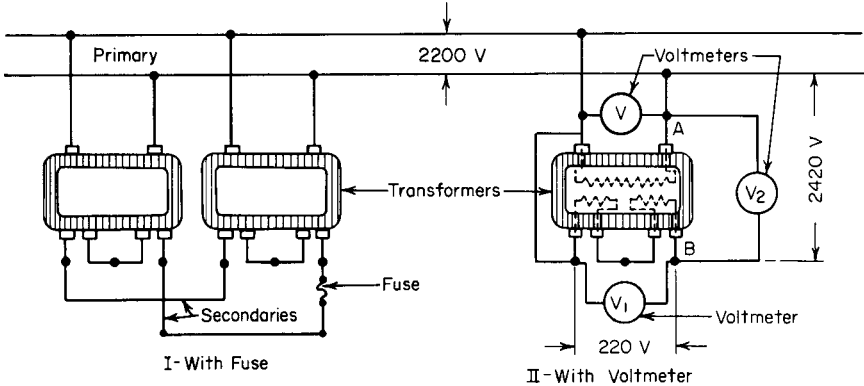


FIGURE 5.44 Testing transformers for polarity.

If the transformer has what is called subtractive polarity, V_2 will equal $V - V_1$. For example, in Fig. 5.44, II, the transformer has additive polarity, and the primary line voltage V (2200 V) plus the secondary transformer voltage V_1 (220 V) equals the voltage between A and B, or 2420 V. With subtractive polarity the voltmeter V_2 would read $(2200 - 220)$, or 1980 V.

SINGLE-PHASE CONNECTIONS

75. Connections for standard distribution transformers are shown in Figs. 5.45 and 5.46. Distribution transformers of medium and small capacity are almost invariably arranged with two secondary coils, which can be connected in series or parallel with each other so that the same transformer can be used to supply either of two different secondary

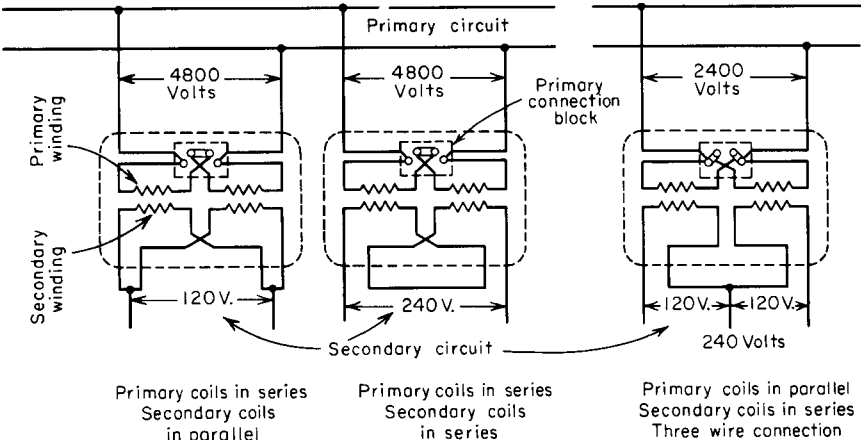


FIGURE 5.45 Connections of standard distribution transformers.

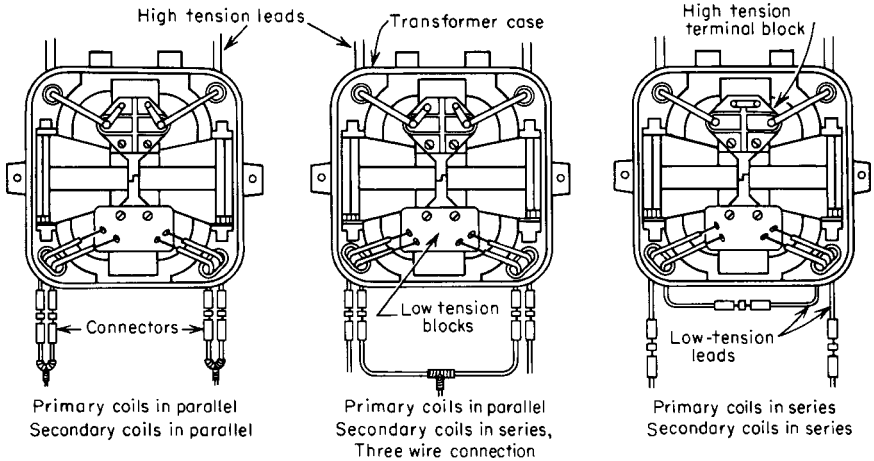


FIGURE 5.46 Method of interconnecting transformer secondaries with connectors.

voltages or a three-wire system. In transformers of the 120/240-V type their secondary windings can be so connected as to deliver 120 or 240 V or for a 120/240-V three-wire circuit. The connections of the secondary coils are made, either by splicing the secondary leads or with connectors, outside the transformer case. Some transformers are constructed with two primary coils as shown in Fig. 5.45. If the necessary primary-coil connections are made, they can be used on primary circuits of either of two voltages. Standard practice with respect to number of coils and voltage ratings is given in Secs. 38 and 39.

76. Transformer connections for three-wire secondary service are shown in Figs. 5.45, 5.46, and 5.47. In the arrangement in Figs. 5.45 and 5.46, only one transformer is used. Its secondary windings are connected in series, and a tap is made to the point of

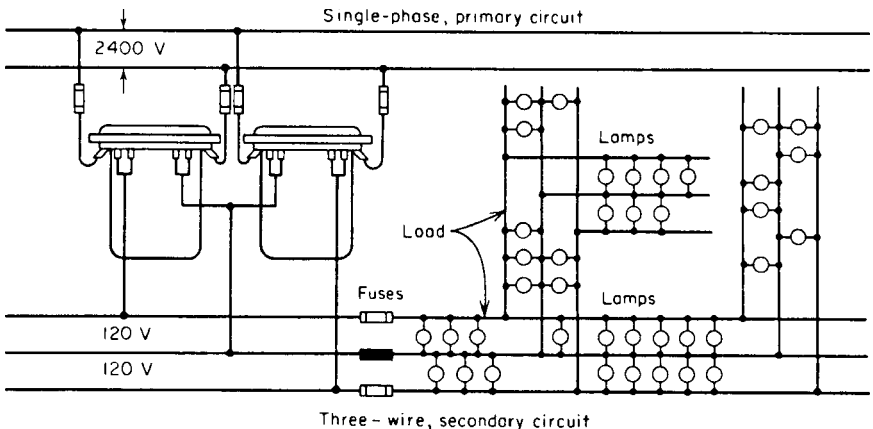


FIGURE 5.47 Two transformers serving a three-wire circuit.

connection between the two windings, providing 240 V between the two outside wires and 120 V on each of the side circuits. The transformer should have a capacity equal to the load to be supplied, and the three-wire circuits should be carefully balanced. If the three-wire circuits are decidedly unbalanced, the transformer should have a capacity equal to twice the load on the more heavily loaded of the two side circuits.

In Fig. 5.47, two transformers are shown connected to serve a three-wire circuit. The three-wire load should be balanced as nearly as possible, and if it is very nearly balanced, each transformer should have a capacity equal to one-half of the total load. If the load is badly unbalanced, each transformer should have a capacity equal to the load on its side of the circuit. See "Parallel Operation" shown in Fig. 5.47.

TWO-PHASE CONNECTIONS

77. Transformers connected to four-wire two-phase circuits are shown in Fig. 5.48. As a rule, two-phase primary lines are four-wire as shown, and to such a four-wire line the transformers are connected to each of the side circuits, as if each side circuit were a single-phase circuit not having any connection with the other. The total load should be so divided between the phases that the loads on each will be as nearly equal as possible. Each transformer should be designed for line voltage and will carry line current. Each transformer should have a kilovolt-ampere capacity equal to one-half of the kilovolt-ampere load that is served by the two transformers.

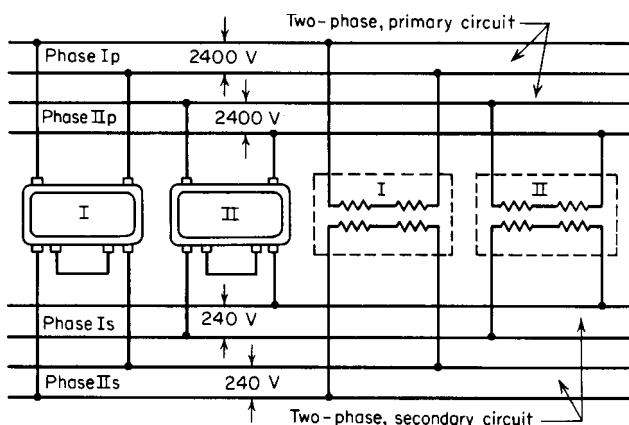


FIGURE 5.48 Transformers with two-phase to two-phase four-wire connection.

78. Transformers connected to three-wire two-phase circuits are shown in Fig. 5.49. The current in the center line wire AA for balanced load is 1.41 times the current in either of the outer wires. Each transformer has line voltage impressed on it and carries one-half the total load. A General Electric Co. publication comments thus: "Considerable unbalancing of voltage at the end of a transmission line or cable is experienced with the three-wire, two-phase system owing to the mutual induction between phases. Where the power factor is low, a still worse regulation is obtained, making satisfactory operation

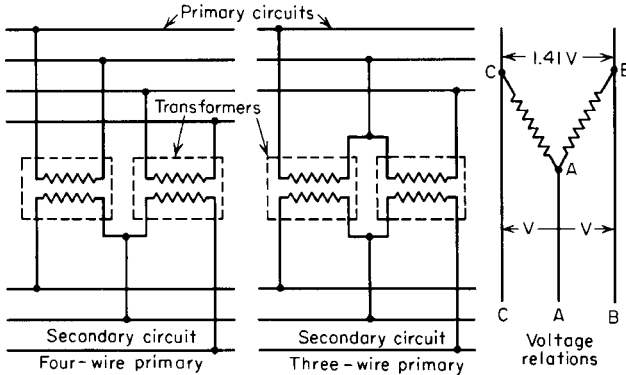


FIGURE 5.49 Connections for transformers on three-wire two-phase circuits.

difficult. Very few systems now operate on this plan, and practically all of them could be improved by the use of some other system."

79. Mixed connections are sometimes made with two-phase transformers, as shown in Fig. 5.50. With improper connections such as those shown, difficulty will be experienced in the operation of motors, and they may not run at all.

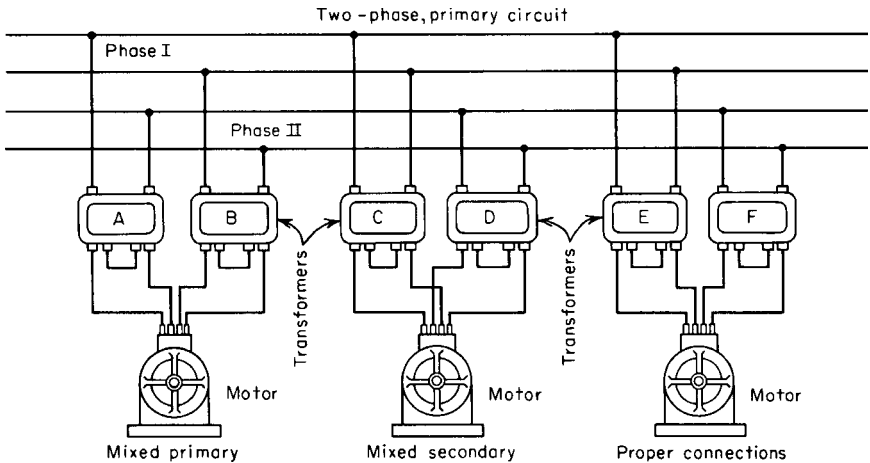


FIGURE 5.50 Correct and incorrect connections for transformers serving two-phase motors.

THREE-PHASE CONNECTIONS

80. Comparison of one three-phase transformer with a group of single-phase transformers (*Standard Handbook for Electrical Engineers*) that can be employed for obtaining the same service has been summed up by J. S. Peck as follows.

The advantages of the three-phase transformer are (1) lower cost, (2) higher efficiency, (3) less floor space and less weight, (4) simplification in outside wiring, and (5) reduced transportation charges and reduced cost of installation. The disadvantages of the three-phase transformer are (1) greater cost of spare units, (2) greater derangement of service in the event of breakdown, (3) greater cost of repair, (4) reduced capacity obtainable in self-cooling units, and (5) greater difficulties in bringing out taps for a large number of voltages. It is considered that the three-phase transformer has certain real and positive advantages over the one-phase type, while its disadvantages are chiefly those which result in the event of breakdown—an abnormal condition which occurs at rarer and rarer intervals as the art of transformer design and manufacture advances.

81. Connections of transformers for the transformation of three-phase power are given in Figs. 5.51 to 5.58 inclusive. In all these figures the polarity of the transformer units is additive. If the transformers had subtractive polarity, the interconnections between transformers would be made in exactly the same manner as shown in the figures insofar as terminal marking is concerned. The interconnections for subtractive polarity would be different with respect to the relative location of terminals. The connections shown in these figures result in standard angular displacements.

Much of the material in the following sections has been taken from a publication of the Line Material Company.

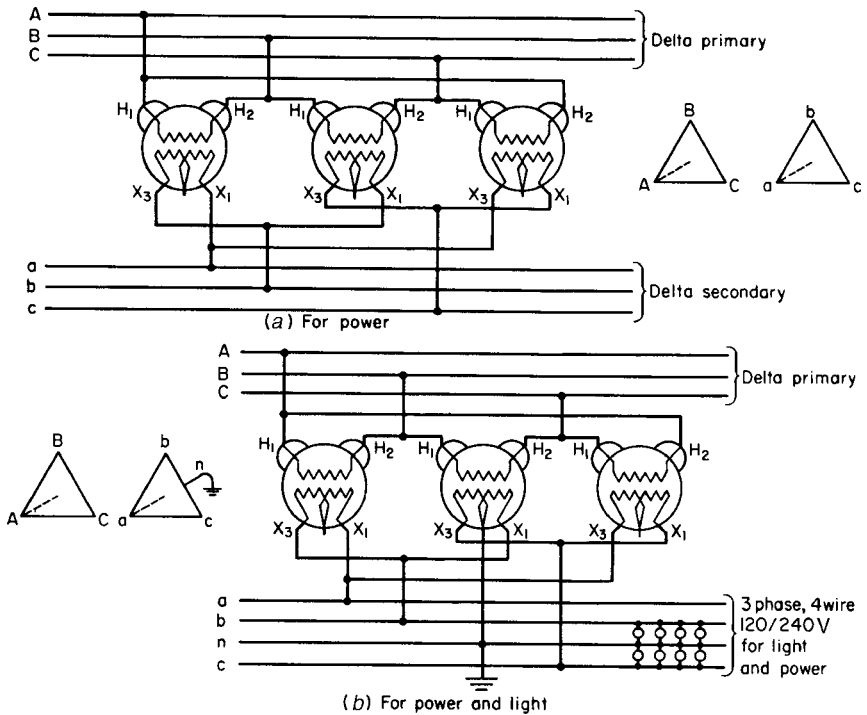


FIGURE 5.51 Transformers delta-connected on both primary and secondary.

82. Transformers with both primary and secondary coils delta (Δ) connected are shown in Fig. 5.51*a*. All three of the transformers are connected in series in a closed circuit, and each line wire is connected to the connection between two of the transformers. The voltage imposed on either the primary or the secondary of the transformer is the primary or the secondary line voltage, respectively. The current in either winding = line current $\div \sqrt{3}$, or line current $\times 0.58$. The kilovolt-ampere capacity of each transformer should be equal to one-third the total kilovolt-amperes of the load to be served. The total kilovolt-ampere load transmitted by a balanced three-phase line = $1.73IE$ (where I is the line current in each line wire and E is the voltage between wires). Therefore, the kilovolt-ampere capacity of each transformer should be $1.73IE \div 3 = 0.58IE$. This type of three-phase transformation has been the one most commonly used in the past. The ungrounded primary system will continue to supply power even though one of the lines is grounded owing to a fault. If one of the transformers in the bank should fail, secondary power can be supplied from the two remaining units by changing to the open-delta connection. Thus this type of connection is ideal from the standpoint of service continuity.

When light and power are to be supplied from the same bank of transformers, the mid-tap of the secondary of one of the transformers is grounded and connected to the fourth wire of the three-phase secondary system as shown in Fig. 5.51*b*. The lighting load is then divided between the two hot wires of this same transformer, the grounded wire being common to both branches.

83. Transformers with both primary and secondary coils, star-connected, from a three-wire primary circuit are shown in Fig. 5.52. The current in each transformer winding is the same as the line current, and the voltage imposed on each winding = line voltage $\div \sqrt{3}$ = line voltage $\times 0.58$. The kilovolt-ampere capacity of each transformer should be equal to one-third the total kilovolt-amperes of the load to be served. The total kilovolt-ampere load transmitted by a balanced three-phase line = $1.73IE$ (where I is the line current in each line wire and E is the voltage between wires). Therefore, the kilovolt-ampere capacity of each transformer should be $1.73IE \div 3 = 0.58IE$.

It is necessary that the primary neutral be available when this connection is used, and the neutrals of the primary system and of the bank are tied together as shown. If the three-phase load is unbalanced, part of the load current flows in the primary neutral. Also the third-harmonic component of the transformer exciting current flows in the primary neutral. For these reasons, it is necessary that the neutrals be tied together as shown. If this tie were

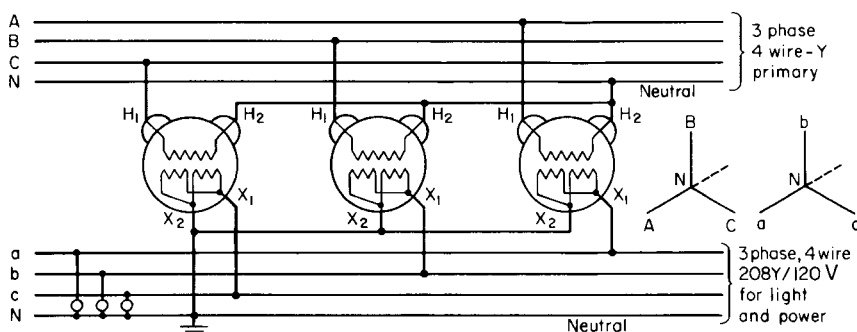


FIGURE 5.52 Transformers star-connected on both primary and secondary (four-wire primary circuit).

omitted, the line to neutral voltages on the secondary would be very unstable. That is, if the load on one phase were heavier than on the other two, the voltage on this phase would drop excessively and the voltage on the other two phases would rise. Also, large third-harmonic voltages would appear between lines and neutral, both in the transformers and in the secondary system, in addition to the 60-Hz component of voltage. This means that for a given value of rms voltage, the peak voltage would be much higher than for a pure 60-Hz voltage. This overstresses the insulation both in the transformers and in all apparatus connected to the secondaries.

84. Transformers delta-connected to the primary circuit and star-connected to the secondary circuit are shown in Fig. 5.53. Any group of transformers can have either their primary or their secondary coils connected in either star or delta. With the primary delta-connected and the secondary star-connected as shown, the secondary voltage will be 1.73 times what it would be if it were delta-connected. The neutral of the secondary three-phase system is grounded. The single-phase loads are connected between the different phase wires and neutral while the three-phase power loads are connected to the three-phase wires. Thus, 120 V is supplied to the lighting loads and 208 V to the power load. Advantages of this type of bank are the fact that the single-phase load can be balanced on the three phases in each bank by itself and the fact that the secondaries of different banks can be tied together.

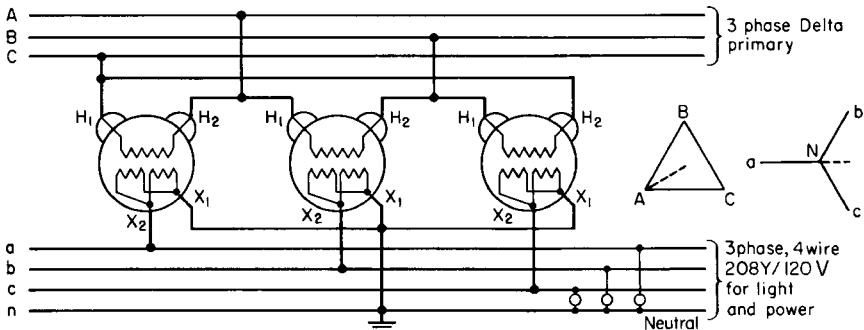


FIGURE 5.53 Transformers delta-connected primary and star-connected secondary.

85. Transformers star-connected primary and delta-connected secondary are shown in Fig. 5.54. This is the reverse of the grouping described in Sec. 84, and the secondary voltage will be only 0.58 times as great as if both secondary and primary were star-connected.

The present tendency in utilities is to replace the 2400 delta system with the 4160Y/2400-V three-phase four-wire system. This change in effect raises the distribution voltage from 2400 to 4160 without any major changes in connected equipment. The same transformers that were previously connected between lines on the 2400-V delta system are now connected between lines and neutral on the new 4160Y/2400-V system. Three-phase banks that had previously been connected delta-delta are now connected Y-delta as shown.

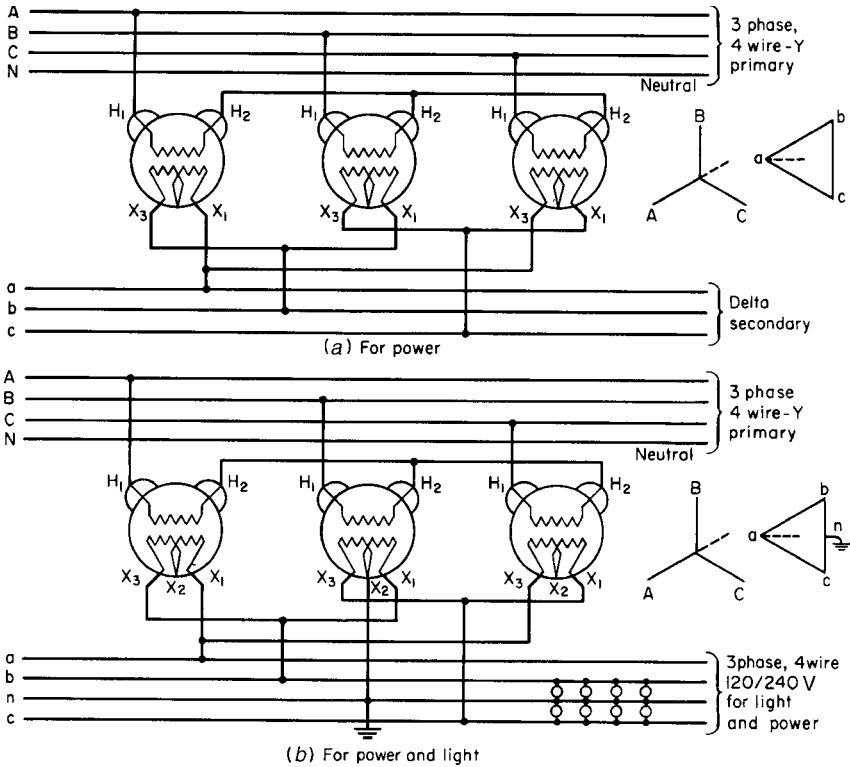


FIGURE 5.54 Transformers star-connected primary and delta-connected secondary.

When service for both light and power is to be supplied, the Y-delta bank takes the form shown in Fig. 5.54b.

If one unit of a Y-delta bank goes bad, service can be maintained by means of the connection of Fig. 5.55. In the regular Y-delta bank with three units, the neutral of the primaries of the transformers is not ordinarily tied in with the neutral of the primary system. In fact,

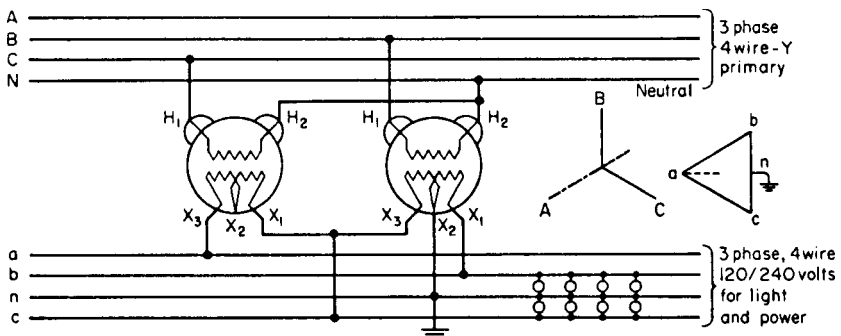


FIGURE 5.55 Y-delta connection with one unit missing.

this bank can be used even when the primary neutral is not available. In the bank with two units, however, it is necessary to connect to the neutral as shown. The main disadvantage of this hookup is the fact that full-load current flows in the neutral even though the three-phase load may be balanced. In addition to maintaining service in an emergency, this type of bank is satisfactory if the main part of the load is lighting and the three-phase load is small.

86. The three-phase V, or open-delta, connection (Fig. 5.56). Line voltage is impressed on each transformer, and line current flows in each transformer coil. This method is often used for motors but has the objection that if one of the transformers becomes inoperative, the three-phase circuit served will be fed by only one transformer and hence will be inoperative.

The combined capacity of two transformers (Harry B. Gear and Paul F. Williams, *Electric Central Station Distributing Systems*, D. Van Nostrand Co.) connected by this method and serving a given load should be 15.5 percent greater than the combined capacity of three transformers delta- or star-connected and serving the same load. For instance, if three 5-kVA transformers (total capacity, 15 kVA) are required for a certain installation and they are replaced by two 7½-kVA transformers (total capacity, 15 kVA), the two transformers will be overloaded by 15.5 percent at a full load of 15 kW at 100 percent pf.

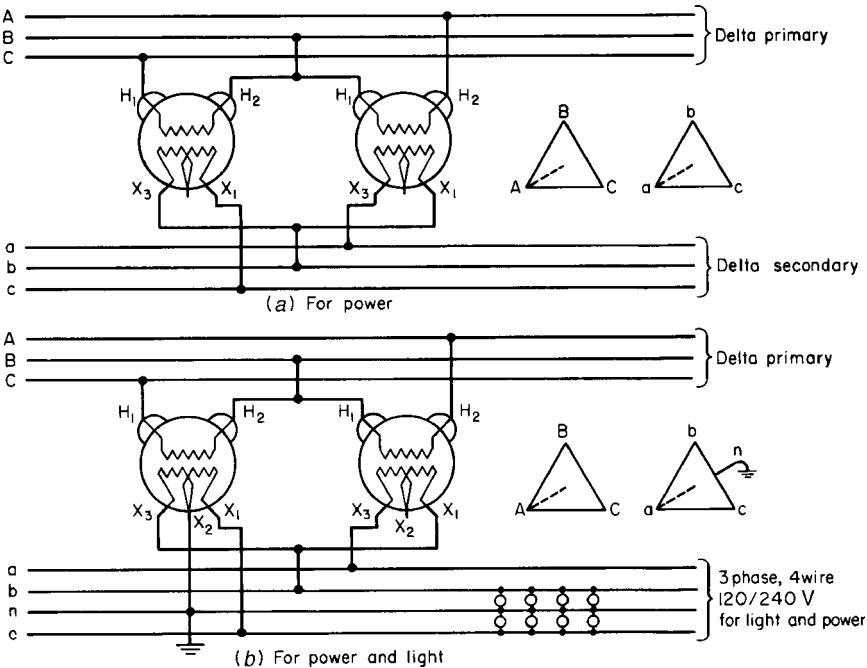


FIGURE 5.56 Three-phase V, or open-delta, connection of two transformers.

For example, assume that in a three-transformer installation the current in the secondary line is 17.3 A. This imposes a load of 10 A on the transformer secondary coils. At 200 V this is 2 kW per transformer, or 6 kW in all. If two 3-kW transformers are put in to replace the three 2-kW units, the capacity of the secondary coils would be 15 A. But, as noted above, with the open-delta connection the current in the secondary coil is the same as the current in the line, and the 15-A winding must carry 17.3 A, or 15.5 percent overload.

In the grouping of Fig. 5.56, to reverse the direction of a motor served by the group, interchange any two of the primary phase wires or reverse any two of the secondary wires.

In some cases two transformers for open-delta grouping of proper aggregate capacity to serve a given load will be cheaper than three transformers for star or delta grouping to serve the same load, but this is not always the case.

The open-delta connection can be used in an emergency if one of the transformers in a delta-delta bank fails. This type of bank is also used to supply power to a three-phase load which is temporarily light but which is expected to grow. When the load increases to a point at which the two transformers in the bank are overloaded, an increase in capacity of 1.732 times can be obtained by adding another unit of the same size and using the delta-delta connection.

When the secondary circuits are to supply both light and power, the open-delta bank takes the form shown in Fig. 5.56*b*. In addition to the applications listed above for the open-delta bank for power, this type of bank is used when there is a large single-phase load and only a small three-phase load. In this case, the two transformers would be of different kVA sizes, the one across which the lighting load is connected being the larger.

87. Disadvantages of the V, or open-delta, connection (*Standard Handbook for Electrical Engineers*). For normal operation not only must each of the V-connected transformers be larger than each of the delta-connected transformers, but the two transformers must have a combined rating 15.5 percent greater than the three transformers. This fact taken alone does not represent a disadvantage of the V connection, because the two larger transformers are exactly equal in constructive material and operating efficiency to the three smaller transformers. The real objection to the V connection for serious work resides in the tendency for the local impedance of the transformers to produce an enormous unbalance of the secondary voltages and of the primary currents. In spite of this disadvantage (which is really of little consequence in 2200-V primary distribution work), many V-connected groupings are in satisfactory operation.

88. Comparison between the delta, the star, and the open-delta methods of connection (*Standard Handbook for Electrical Engineers*). The choice between the methods would be governed largely by the service requirements. When the three transformers are delta-connected, one can be removed without interrupting the performance of the circuit, the two remaining transformers in a manner acting in series to carry the load of the missing transformer. The desire to obtain immunity from a shutdown due to the disabling of one transformer has led to the extensive use of the delta connection of transformers, especially on the low-potential delivery side. It is to be noted that if one transformer is crippled, the other two will be subjected to greatly increased losses.

Thus, if three delta-connected transformers are equally loaded until each carries 100 A, there will be 173 A in each external circuit wire. If one transformer is now removed and 173 A continues to be supplied to each external circuit wire, each of the remaining transformers must carry 173 A, since it is now in series with an external circuit. Therefore, each

transformer must now show 3 times as much copper loss as when all three transformers were active, or the total copper loss is now increased to a value of 6 relative to its former value of 3. An open-delta installation is made frequently when considerable future increase in load is expected. The increase can be accommodated by adding the third transformer to the bank at a later date and thus increasing the capacity of the load that can be carried by about 75 percent.

A change from delta to Y in the secondary circuit alters the ratio of the transmission emf to the receiver emf from 1 to $\sqrt{3}$. On account of this fact, when the emf of the transmission circuit is so high that the successful insulation of transformer coils becomes of constructive and pecuniary importance, the three-phase line sides of the transformers are connected in "star" and the neutral is grounded. The windings of most transformers operating on systems of 100,000 V or more are star-connected.

See also Sec. 87 regarding properties of an open-delta-connected group.

89. Comparative cost of transformers for different grouping for three-phase service. The accompanying table shows the costs of the single-phase transformers, of proper capacities for either a delta or an open-delta grouping, and of a three-phase transformer to serve a 75-kVA installation. The relative costs will be the same for the present date.

Method of connection or grouping	Number of transformers required	Capacity of each transformer, kVA	Aggregate capacity	Cost per transformer, \$	Aggregate cost, \$
Delta (Δ)	3	25	75	500	1500
Open-delta (V)*	2	50	100	800	1600
Three-phase transformer	1	75	75	1400	1400

*The theoretical aggregate capacity of two single-phase transformers for open-delta grouping for a 75-kVA three-phase load (see Sec. 86) would be $75 \times 1.15 = 86.3$ kVA or $86.3 \div 2 = 43.2$ kVA per transformer. The nearest commercial capacity to 43.2 kVA is 50 kVA, which gives an aggregate capacity of 100 kVA.

90. Nonstandard angular displacement. All the transformer connections shown in Figs. 5.51 to 5.56 inclusive are made to give the standard angular displacement or vector relation between the primary and secondary voltage systems as defined by the different standards publications, including those of the ANSI. These standard angular displacements are 0° for delta-delta or Y-Y connected banks and 30° for delta-Y or Y-delta banks.

Angular displacement becomes important when two or more three-phase banks are interconnected into the same secondary system or when three-phase banks are paralleled. In such cases it is necessary that all the three-phase banks have the same displacement.

If subtractive-polarity transformers are used in the connections illustrated in Figs. 5.51 to 5.56, it is found that the secondary connections are much simplified from those shown for the additive-polarity units. The additive-polarity connections for standard angular displacement are somewhat complicated, particularly in cases with a delta-connected secondary, by the crossed secondary interconnections between units.

For this reason simplified bank connections which give nonstandard angular displacement between the primary and secondary systems are sometimes used with additive-polarity units. The diagrams of Figs. 5.57 and 5.58 cover these simplified bank connections for three additive-polarity units for the more common three-phase connections with the delta-connected secondary.

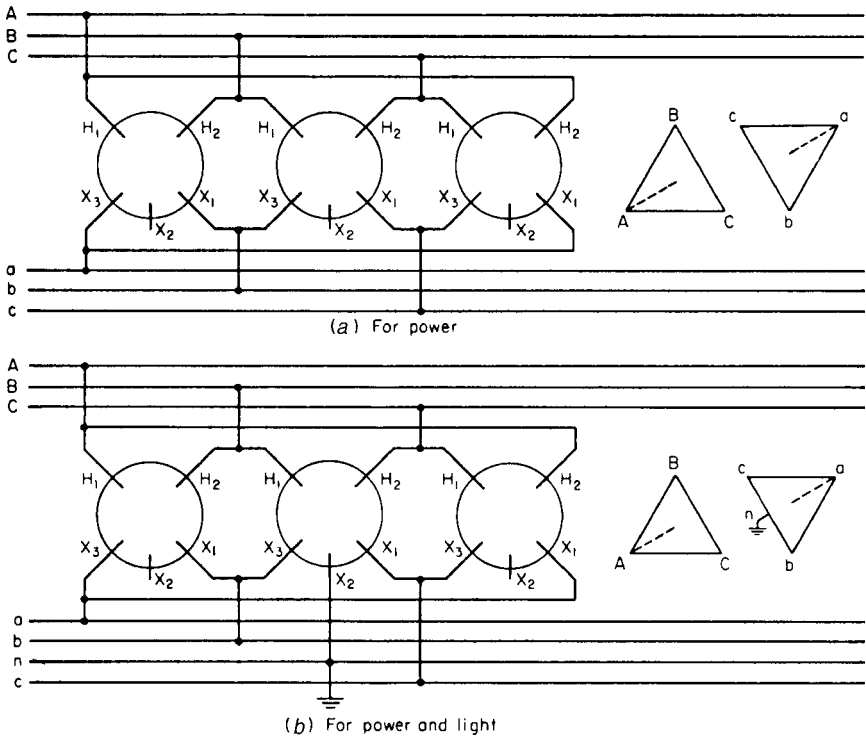


FIGURE 5.57 Delta-delta connections with nonstandard angular displacements.

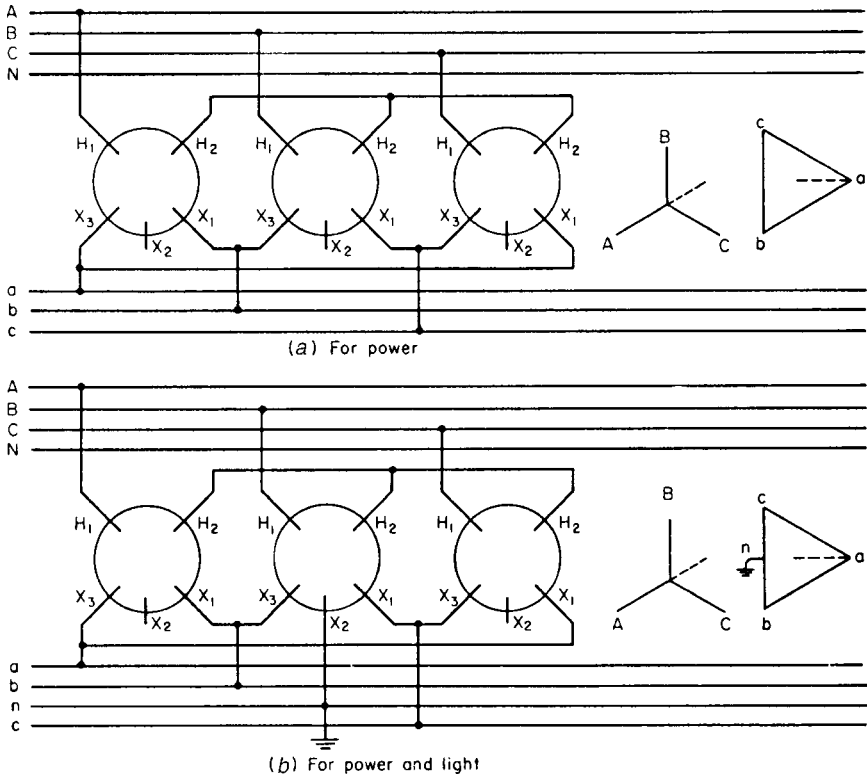


FIGURE 5.58 Y-delta connections with nonstandard angular displacements.

SPECIAL TRANSFORMER CONNECTIONS

91. Transformers connected for transforming from three-phase to two-phase or the reverse are illustrated in Fig. 5.59, which shows what is known as the *Scott connection*. The transformers required are special, and each has a lead brought out from the middle point of the high-tension winding, and a special voltage tap giving 86.6 percent of the high-tension winding is arranged. Usually two transformers just alike are purchased so that they will be interchangeable. These special transformers can be purchased from any of the large manufacturers. Those shown are Westinghouse transformers. Two standard single-phase transformers for such service should have an aggregate kilovolt-ampere rating $15\frac{1}{2}$ percent greater than their group or nominal rating.

92. Explanation of the transformation from three-phase to two-phase (*Standard Handbook for Electrical Engineers*). Assume the simple case of a total power of 30,000 W, 1.0 pf, at 100 V, three-phase to be transformed (without loss) to 30,000 W, 100 V, two-phase (see Fig. 5.60). If the load is balanced on the two-phase side, there will be 15,000 W per phase, or 150 A at 100 V. Since the three-phase power is represented as

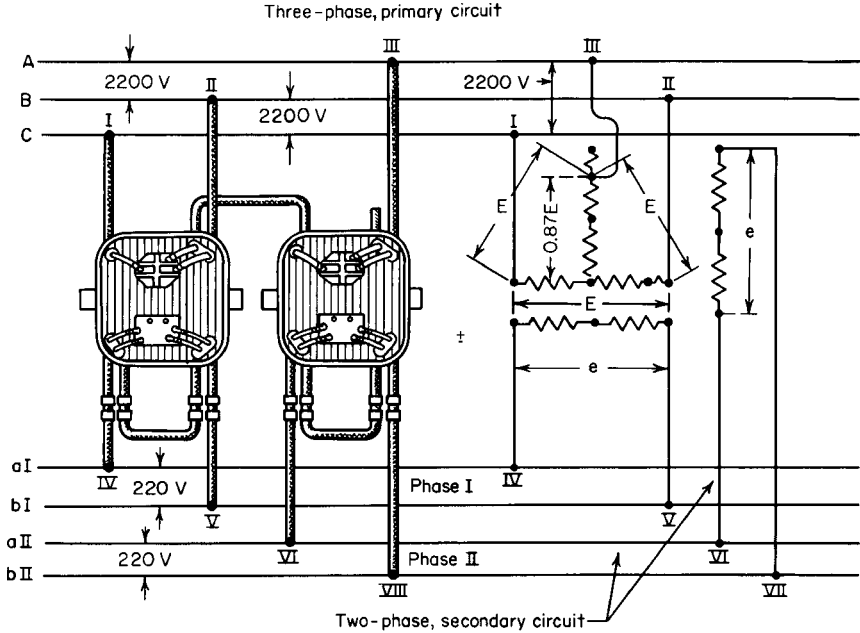


FIGURE 5.59 Transformers connected for three-phase to two-phase transformation.

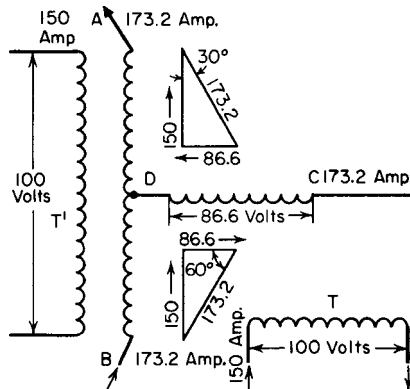


FIGURE 5.60 Three-phase to two-phase transformation.

$IE = 30,000$, where I is the current per line wire and E is the emf between line wires, I must equal 173.2 A, because E has been taken as 100 V.

As shown in Fig. 5.60, the three-phase coils of one transformer must be designed for 100 V and 173.2 A, while the three-phase coils of the other transformer must be designed for 86.6 V and 173.2 A. The current through the coil CD divides equally. A part (86.6 A) goes through DA and an equal part (86.6 A) passes differentially through DB ; thus the mmf

of these two currents has a resultant of zero, and it has no effect upon the core flux insofar as transformer T^1 is concerned. The coil ADB carries a total value of current of 173.2 A throughout all its turns, but the current in one half is 60 time degrees out of phase with that in the other half. That is to say, the 173.2 A in one half is made up of a load current of 150 A, in leading time quadrature with which is 86.6 A of superposed current, while that in the other half is made up of a load current of 150 A, in lagging time quadrature with which is a superposed current of 86.6 A. The magnetizing effect of the 173.2 A is, therefore, 150 A, and the current in the two-phase side of transformer T^1 is 150 A. In the T^1 transformer the mmf of 173.2 A in 86.6 percent turns is just equal to that of 150 A in 100 percent turns; these two currents are directly in time-phase opposition, and the apparatus operates in all respects like a one-phase transformer. The phase relations and the relative values of the several components of currents are shown in the vector diagram of Fig. 5.60.

93. Kilovolt-ampere ratings of transformers for Scott connection (three-phase to two-phase) for serving a given horsepower load. The accompanying table gives the ratings recommended by the Westinghouse Electric Corp. for transformers serving squirrel-cage induction motors and indicates the efficiency of the installation. The temperature guarantee with performance as shown is a 50°C rise.

Hp of motor	Number of transformers	kVA capacity of each transformer	Total kVA load imposed on the group of two transformers when motor is operating at full load	Efficiency of bank of transformers with full load on motor
$\frac{1}{2}$	2	$\frac{1}{2}$	0.75	92.8
1	2	$\frac{1}{2}$	1.35	94.5
2	2	1	2.40	95.2
3	2	$1\frac{1}{2}$	3.4	95.9
5	2	$2\frac{1}{2}$	5.5	96.4
$7\frac{1}{2}$	2	4	8.1	97.0
10	2	5	10.7	97.2
15	2	$7\frac{1}{2}$	15.7	97.4
20	2	10	20.9	97.6
30	2	15	31.5	97.8
40	2	20	42.0	98.0
50	2	25	51.0	98.0
75	2	$37\frac{1}{2}$	77.0	98.3

$$\text{kVA on each transformer} = \frac{\text{hp} \times 0.746 \times 0.59}{(\text{efficiency} \times \text{pf of motor})}$$

$$\text{Efficiency} = \frac{\text{kW on transformer}}{\text{kW transformer loss} + \text{kW on transformer}}$$

94. T-connected transformers for transforming from three-phase to three-phase (*Standard Handbook for Electrical Engineers*). A method of employing two transformers in three-phase transformation which practically overcomes the disadvantages of the V connection and possesses considerable merit is found in the T connection. As indicated in Fig. 5.61, one transformer is connected across between two of the line wires, while

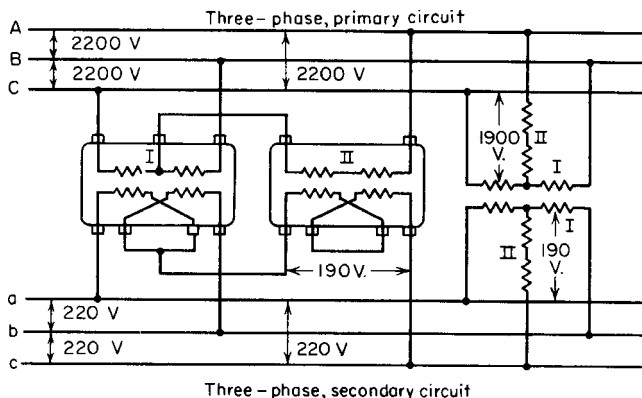


FIGURE 5.61 Transformers, T-connected for three-phase transformation.

the other is joined between the third line wire and the middle point of the first transformer. The current in the primary coil of each transformer is the same in value as that in the primary coil of the other, and the secondary currents in the two transformers are likewise equal in value. The voltage impressed across one transformer is only 86.6 percent of that across the other, so that if each transformer is designed especially for its work, one will have a rating of EI and the other a rating of $0.866EI$, where I is the current in each line wire and E is the emf between lines. The combined rating will therefore be 1.866 , as compared with $1.732EI$ for three one-phase transformers connected either Δ or Y , or with $2.0EI$ for two V -connected transformers.

95. Requisites for transformers for T connection. The two transformers should possess the same ratio of primary to secondary turns, and a tap should be brought out from the central point of one of the transformers. It is not essential that the former transformer be designed for exactly 86.6 percent of the voltage of the latter; the normal voltage of one can be 90 percent of the other without producing detrimental results. Moreover, transformers designed for the same normal emf and intended for V connection can be T-connected with considerable improvement in service.

96. In comparing the T connection with the Δ or the Y connection (*Standard Handbook for Electrical Engineers*), it is to be noted that each connection accomplishes the transformation without sensible distortion of phase relations. The T connection allows the neutral point to be reached equally as well as does the Y connection. The Δ connection, however, is the only one capable of transforming in emergencies with one disabled transformer. With reference to its ability to maintain balanced phase relations, the T connection is much better than the V connection. The aggregate kilovolt-ampere rating of two T-connected transformers should be $15\frac{1}{2}$ percent greater than the nominal kilovolt-ampere rating of the group.

97. Booster transformers (Harry B. Gear and Paul F. Williams, *Electric Central Station Distributing Systems*). Ordinary distributing transformers applied as illustrated (Fig. 5.62) are used when it is necessary to raise, by a fixed percentage, the voltage

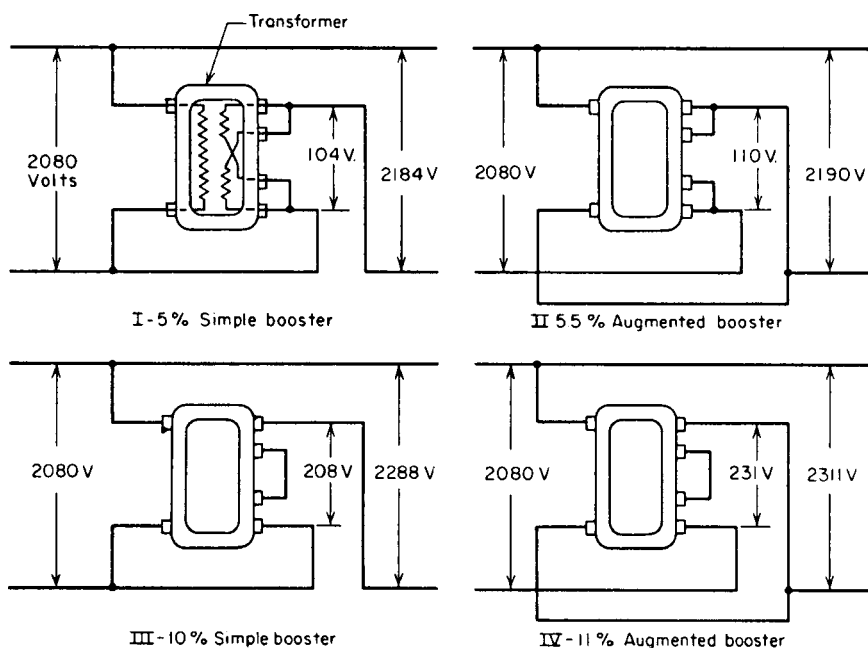


FIGURE 5.62 Boosting transformers.

delivered by a line, as it is when transformer ratios do not give quite the right voltage or when line drop is excessive. A booster raises the voltage of any primary circuit in which it may be inserted by the amount of the secondary voltage of the booster (see Fig. 5.62).

EXAMPLE On a long single-phase 2080-V lighting branch so heavily loaded that the pressure drops more than the amount for which the normal regulation of the feeder will compensate, a 110-V transformer inserted in the line as a booster will raise the pressure of the primary branch on the load side of the booster by 110 V. This raises the secondary pressure 5.5 percent on all the transformers beyond the booster.

With 440-V service supplied by star-connected 230-V transformers, a 10 percent booster in each phase raises the normal pressure of 230/400 V to 253/440 V.

The connections for a simple booster are shown in Fig. 5.62, I, the line pressure being raised from 2080 to 2184 V, or 5 percent. The connection at II is that for an augmented booster in which the line pressure is raised from 2080 to 2190 V, because the primary of the booster is connected across the line on the far side and the booster is boosted as well as the line. This gives an increase of 5.5 percent in the line pressure.

Figure 5.62, II, shows a 10 percent simple booster and IV an augmented 11.1 percent booster.

The transformers shown in Fig. 5.62 have a 10:1 or 20:1 ratio, and the percentages shown apply only to transformers of this ratio. If boosters having a ratio of 2080 to 115/230 are used, the percentages are increased by about 10 percent. Figure 5.62, I, would then become 5.5 percent; II, 6.05 percent; III, 11.1 percent; and IV, 12.2 percent.

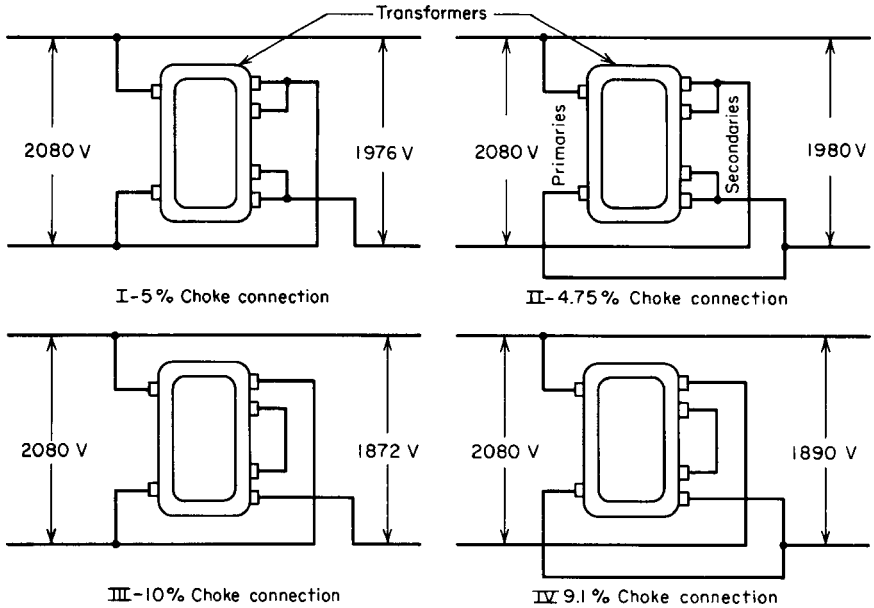


FIGURE 5.63 Bucking (choking) transformers.

98. The proper connection of the secondary for a booster or bucking transformer must usually be determined by trial for a transformer of any given type, but once it has been determined, the same connection can be used for any transformer of the same type. The connections shown in Figs. 5.62 and 5.63 are correct for transformers of the principal makers. Boost and buck transformers are also used in circuits of 600 V and less. See Sec. 108.

99. Boosters are connected in a two-phase circuit in a manner similar to that shown in Fig. 5.62 for a single-phase circuit. In three-wire two-phase feeders the boosters (secondary windings) are cut into the outer wires, and the primary windings are connected between the middle and the outside wires.

100. Booster transformers in three-phase circuits are connected as shown in Fig. 5.64 (*Electric Central Station Distributing Systems*). The insertion in any phase wire of the booster voltage affects two phases. The boosting and bucking effects, with transformers of various ratios, with the boosting transformers used in one, two, or three phases, are expressed in percentage of the primary voltage in the tables of Sec. 101.

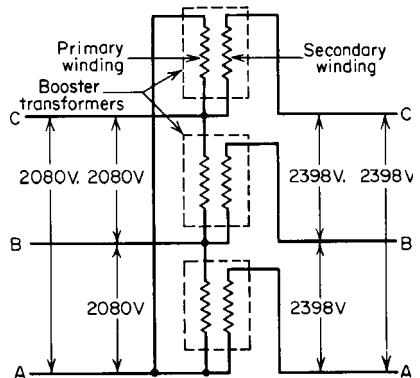


FIGURE 5.64 Booster transformers in a three-wire, three-phase circuit.

101. Voltage boosting and bucking effect of transformers connected in three-phase circuits (*Electric Central Station Distributing Systems*). Values in the body of the tables are the percentages that the voltages will be increased or decreased, respectively, by the insertion of booster or bucking transformers, of different ratios, in one, two, or three of the phase wires. Transformers are connected for boosting as shown in Fig. 5.64. *AB*, *BC*, and *CA* refer to the three phases of Fig. 5.64.

BOOSTING												
Ratios	10:1			20:1			9:1			18:1		
Booster in	<i>AB</i>	<i>BC</i>	<i>CA</i>	<i>AB</i>	<i>BC</i>	<i>CA</i>	<i>AB</i>	<i>BC</i>	<i>CA</i>	<i>AB</i>	<i>BC</i>	<i>CA</i>
A phase	10.0	10.0	5.3	5.00	0.00	2.65	11.0	0.0	5.8	5.5	0.00	2.9
A and B	15.3	10.0	5.3	7.65	5.00	2.65	16.8	5.5	5.8	8.4	2.75	2.9
A, B, and C	15.3	15.3	15.3	7.65	7.65	7.65	16.8	16.8	16.8	8.4	8.40	8.4

BUCKING												
A phase	10.0	0.0	4.6	5.0	0.0	2.3	11.00	0.00	5.06	5.5	0.00	2.53
A and B	14.6	10.0	4.6	7.3	5.0	2.3	16.06	11.00	5.06	8.3	5.50	2.53
A, B, and C	14.6	14.6	14.6	7.3	7.3	7.3	16.06	16.06	16.08	8.03	8.03	8.03

102. Bucking transformers (*Electric Central Station Distributing Systems*). When the secondary is connected in reverse order, the transformer becomes a “choke,” reducing the line pressure instead of raising it.

EXAMPLE A 5 percent choke connection is shown in Fig. 5.63, I, a 4.75 percent choke in II, a 10 percent choke in III, and a 9.1 percent choke in IV.

The transformers shown in Fig. 5.63 have a ratio of 10:1 or 20:1, and the percentages shown are only for transformers of that ratio. If bucking transformers having a ratio of 2080 to 115/230 are used, the choking percentages would be changed to the following values: Fig. 5.63, I, 5.5 percent; II, 5.24 percent; III, 11 percent; and IV, 10 percent.

103. The capacity of a transformer that is to be used as a booster (Fig. 5.65) will be determined by (1) the current *I* which will flow in the ac line and (2) the voltage *E* by which the emf on the line will be boosted. If, for example, the current in the line is 20 A and it is desired to raise the voltage (Fig. 5.65) by 110 V, then required capacity of the boosting transformer = 20 A × 110 V = 2200 VA = 2.2 kVA. Hence, for these conditions it would be necessary to use at *I* a standard 2½-kVA transformer. The secondary coils of this transformer would be connected in multiple so that they would develop 110 V.

If it is desired to boost the voltage by 220 V, then 20 A × 220 V = 4400 VA = 4.4 kVA. Hence, theoretically a 4.4-kVA transformer would be required. Note that in any case the secondary winding of the boosting transformer must be capable of carrying the primary line current (20 A, in Fig. 5.65). Furthermore, the secondary coils of the boosting transformer must be so designed and connected that they will produce at their terminals the voltage by which it is desired to boost the emf which is impressed on the line by the generator in the station.

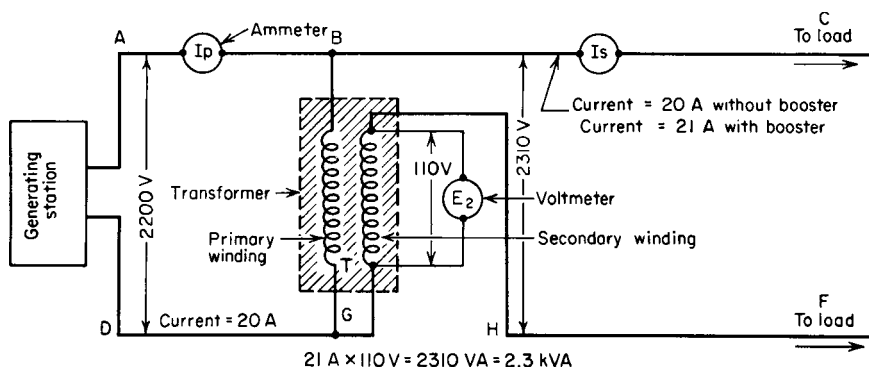


FIGURE 5.65 Example of computing capacity required for a booster transformer.

104. As a practical proposition it is usually desirable to select for the boost voltage one of the voltages for which the secondaries of distributing transformers are regularly designed or for which they can be connected. That is, the boosting voltage should, ordinarily, be either 110, 220, or 440. If a boosting voltage other than one of these standard voltages is necessary, it will then probably be necessary to obtain a specially designed transformer or a transformer which has taps on the secondary coils.

105. In every case the line current will be increased somewhat by the boosting transformer. If the load remains constant, the increase in that portion of the circuit *HFCB* (Fig. 5.65) will be in the ratio by which the voltage impressed on this portion of the circuit has been boosted. For example, if the current in the ac line *HFCB* of Fig. 5.65 was 20 A before the boosting transformer was inserted, the current after its insertion would be computed in this way:

$$\frac{I_2}{I_1} = \frac{E_2}{E_1} \quad (3)$$

$$I_2 = \frac{E_2 \times I_1}{E_1} \text{ A} \quad (4)$$

where I_1 = the line current, in amperes, before inserting the booster transformer; E_1 = emf, in volts, across *BH* (Fig. 5.65) before inserting the booster transformer; I_2 = current, in amperes, in *HFCB* after the booster is inserted; and E_2 = emf, in volts, across *BH* after the booster is inserted.

EXAMPLE If we substitute the values from Fig. 5.65 in Eq. (4), the current in *HFCB* after inserting the booster = $I_2 = (E_2 \times I_1) \div E_1 = (2310 \times 20) \div 2200 = 21 \text{ A}$. After inserting the booster, the current I_p in *ABCD* will be 21 A + the current carried by the primary winding. The value of 20 A in Sec. 103 is not strictly correct, but this relatively small difference will not appreciably affect the kilovolt-ampere rating of the booster transformer which would be used.

106. There are certain precautions that should be observed in the installation of boosters (*Electric Central Station Distributing Systems*) to protect them from injury. The booster secondary is in series with the line, and current is drawn through its primary windings in proportion to the load on the line. If the primary of the booster is opened

while the secondary is carrying the line current, the booster acts as a choke coil in the main circuit. This causes a large drop of pressure in the booster, imposing upon its secondary windings a difference of potential of 2 to 5 times normal. Under these conditions the insulation of a 2000-V transformer can be subjected to a pressure of 10,000 to 20,000 V or more, depending upon the load carried by the main circuit at the time.

If a fuse is used in the primary, its blowing creates the above condition, and the arc holds across the terminals of the fuse block until it burns itself clear. It has often been observed that if boosters have been "protected" by fuses in this way, the transformer has burned out shortly after the blowing of its primary fuses if not at the time.

Also, in using ordinary static transformers as boosters, it should be remembered that the service is different from that for which the transformer is designed. If this feature is neglected, the insulation may be subjected to excessive voltage or dielectric stresses, thus causing breakdown. The standard distributing transformer is designed to withstand a pressure of about 10,000 V between the high-voltage coils and the case, while the low-voltage coils (the 220-V coils) are designed to withstand a test pressure of 4000 V between coils, core, and case for a period of 1 min.

When a 2200–110/220-V transformer is used as a booster, the low-voltage coils are subjected to a continuous pressure of about 2300 V above ground. This sustained voltage will, if the case is grounded, be likely to destroy the insulation of the low-voltage coils. Therefore the transformer case should, if feasible, be insulated from the ground, although this may involve life hazard. When the transformer is installed on a pole, the insulation is automatically provided, since the pole acts as the insulating medium.

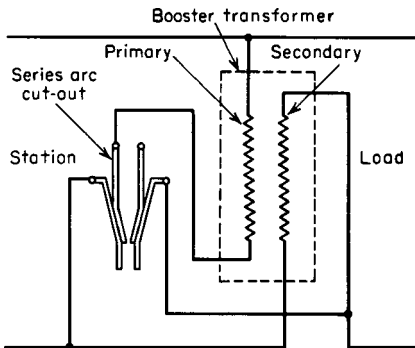


FIGURE 5.66 Series arc cutout for a booster.

main-line current when the booster is shunted out, and standard series cutouts should not be used if the line current is likely to exceed 20 to 25 A.

When the augmented booster is used, the terminals of the primary winding of the transformer which goes to the cutout should be connected to the terminal of the cutout which is shown as not being in use in Fig. 5.66.

107. Booster cutout (Gear and Williams). In connecting or disconnecting a booster, the main line should be opened before putting it in or out. If service on the line cannot be interrupted or if it is desired to switch the booster in or out at certain times, it can be done with a series arc cutout as in Fig. 5.66. The operation of the cutout simultaneously opens the primary and short-circuits the secondary of the booster. The switch must be of a type having a positive action so that arcing will not damage its contacts at the moment when the secondary is short-circuited. The arc cutout must have sufficient carrying capacity to carry the

108. Boost-buck transformers in low-voltage circuits. For circuits of 600 V or less, the most common application for a boost-buck transformer is boosting 208 to 230 or 240 V and vice versa for industrial and commercial air-conditioning systems, boosting 110 to 120 V, and 240 to 277 V for lighting systems, and voltage correction for heating systems and all types of induction motors.

In such cases a buck-boost transformer raises or lowers a supply line voltage by as much as 20 percent. A typical transformer has two primary (input) windings, both rated at either

120 or 240 V, and two secondary (output) windings, both rated at 12, 16, or 24 V. With this arrangement the primary and secondary windings can be connected together so that the electrical characteristics are changed from those of an insulating transformer to those of a boosting or bucking autotransformer.

Connections are quite similar to those shown in Figs. 5.62 and 5.63, and complete literature on boost and buck transformers can be obtained from Acme Electric Corp.

CONNECTIONS FOR THREE-PHASE TRANSFORMERS

109. Methods of connecting the windings of three-phase transformers (*Standard Handbook for Electrical Engineers*). The windings of each component transformer are connected to the external circuits just as though this component were a one-phase unit; i.e., the primaries can be connected either Y or delta. Moreover, the relative advantages of the Y connection and the delta connection are quite the same with one three-phase transformer as with three one-phase transformers. The delta connection is advantageous in some cases, in that if the windings of one phase become damaged by short circuiting, grounding, or any other defect, it is possible to operate with the other phase windings V-connected.

110. In operating a damaged three-phase transformer on two coils, it is necessary to separate the damaged transformer windings electrically from the other coils, as indicated in Fig. 5.67. The high-potential winding of the damaged phase should be short-circuited upon itself, and the corresponding low-potential winding should also be short-circuited upon itself. The winding thus short-circuited will choke down the flux passing through the portion of the core surrounded by the windings without producing in any portion of the winding a current greater than a small fraction of the current which would normally exist in such portion at full load.

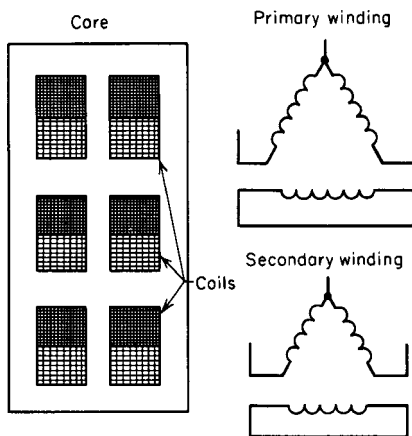


FIGURE 5.67 Operating a damaged three-phase transformer.

PARALLEL OPERATION

111. Parallel operation of transformers. Transformers will operate satisfactorily in parallel (Fig. 5.68), i.e., with their high- and low-tension windings respectively connected directly to the same circuits, provided that they have (1) the same ratio of transformation, (2) the same voltage ratings, and (3) approximately the same regulation. If the low-tension voltages are different, the transformer having the highest voltages will circulate current to those of lower voltage and cause a continuous loss. If transformers connected in parallel do not have the same regulation, they will not share the total load in proportion to their ratings. The greater share of the load will be taken by the transformer having the best regulation.

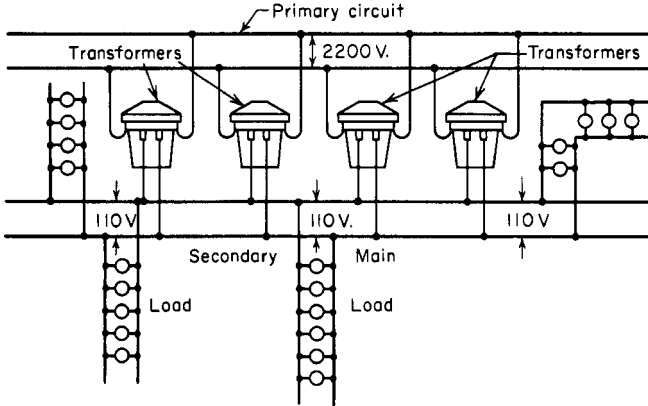


FIGURE 5.68 Transformers banked or operating in parallel.

In connecting large transformers in parallel, especially when one of the windings is for a comparatively low voltage, it is necessary that the resistance of the joints and interconnecting leads does not vary materially for the different transformers, or it will cause an unequal division of load.

112. With transformers of the same general voltage and capacity characteristics connected in multiple in a secondary network (A. D. Fishel, *Distributing Transformers*), little trouble will be encountered, as the impedance of the line between two transformers on separate poles spaced about 100 or 200 ft (30.5 or 61 m) apart will normally neutralize any difference in the transformer impedances. When transformers operated in multiple are placed on the same pole, the question of equal sharing of the load may be of some importance. The standard transformers of reliable manufacturers do not differ very widely in impedance characteristics, however, and it is usually practicable to operate transformers of

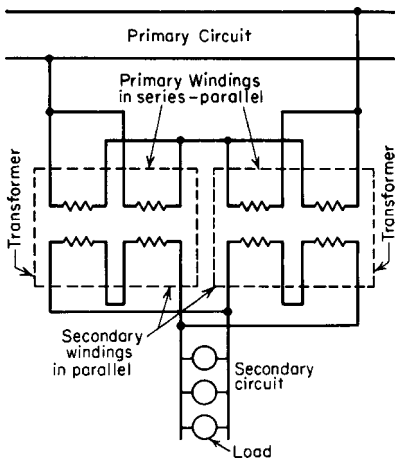


FIGURE 5.69 Connection for forcing parallel operation of transformers which have different impedance characteristics.

the various standard types in parallel. Often the commercial desirability of paralleling transformers of different sizes will overbalance the undesirability of some inequality in the sharing of the load which might result.

113. A method of forcing equal division of load between transformers having considerably different impedance characteristics (A. D. Fishel, *Distributing Transformers*) is shown in Fig. 5.69. Standard 2200-V distributing transformers are usually provided with arrangements for the series-parallel connecting of both the high-tension and the low-tension windings, and therefore the connections shown can be used. As the high-tension windings are in series, the currents in the primary windings will be the same; hence, the transformers will be equally loaded.

114. Some three-phase transformers can be paralleled, and some cannot (W. M. McCahey, *Electric Journal*). A transformer having its coils connected in delta on both high-tension and low-tension sides cannot be made to parallel with one connected either in delta on the high-tension and star on the low-tension or in star on the high-tension and delta on the low-tension side. However, a transformer connected in delta on the high-tension and in star on the low-tension side can be made to parallel with transformers (having their coils joined in accordance with certain schemes) connected in star on the high-tension side and in delta on the low-tension side. Some three-phase transformers cannot be made to parallel (without changing the internal connection arrangement of their coils) with others using the same type of connections for the two windings. For example, a transformer connected delta to delta may have its coils so interconnected that it will not parallel with another transformer, connected delta to delta. By changing the internal connections between the coils, however, it will be possible to bring out the terminals in such a way that parallel operation can be obtained.

115. How to determine whether or not three-phase transformers will operate in parallel. If the transformers are available, connect them as indicated in Fig. 5.70, leaving two leads on one of the transformers unjoined. Test with a voltmeter across the unjoined leads. If there is no voltage between E and e or between F and f of transformer 2, the polarities of the transformers are the same, the connections can be completed, and the transformers put in service.

If a voltage difference is found between E and e or between F and f or between both, the polarities of the transformers are not the same. Then connect transformer lead A successively to mains 1, 2, and 3 and at each connection test with the voltmeter between e and f and the legs of the main to which lead A is not connected. If with any trial connection the voltmeter readings between f and e and either of the two legs is found to be zero, the transformer will operate with leads f and e connected to those two legs. If no system of connections can be found that will satisfy this condition, the transformer will not operate in parallel without changes in its internal connections, and it may be that it will not operate in parallel at all (see Sec. 114).

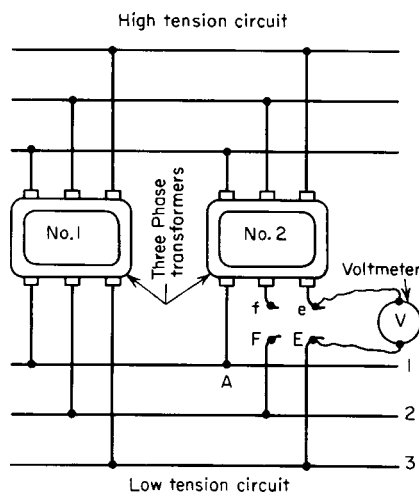


FIGURE 5.70 Testing three-phase transformers for parallel operation.

CONNECTIONS AND APPLICATIONS OF AUTOTRANSFORMERS

116. Use of autotransformers. The National Electrical Code allows the use of autotransformers for supplying interior-wiring systems under certain conditions.

A branch circuit may be supplied through an autotransformer only if the system supplied has a grounded conductor which is electrically connected to a grounded conductor of the system supplying the autotransformer, with the following exceptions.

1. An autotransformer can be used to extend or add a branch circuit for an equipment load without the connection to a similar grounded conductor when transforming from a nominal 208 V to a nominal 240-V supply or similarly from 240 to 208 V.
2. In industrial occupancies, where conditions of maintenance and supervision ensure that only qualified persons will service the installation, autotransformers can be used to supply nominal 600-V loads from nominal 480-V systems, and 480-V loads from nominal 600-V systems, without the connection to a similar grounded conductor.

This transformation is commonly employed to connect 480-V equipment in a factory with a 600-V distribution, or vice versa. A 480- to 120-V two-winding transformer is connected with its windings in series so it functions as an autotransformer, as shown in Fig. 5.71. There is an easy way to determine how to size the two-winding transformer that will be connected in this way.

Let C = transformation capacity as an autotransformer

X = rated transformation capacity as a two-winding transformer

and R = the voltage ratio of the two windings

$$X = \frac{C}{(R + 1)} \quad (5)$$

This formula is derived as follows:

Look at both sides of the transformer. When the transformer is connected as shown the current taken at point C is the sum of the currents in the shunt and series windings, but the voltage between points A and C (the low side) is simply the shunt winding voltage. On the other (high) side, the voltage between points A and B is the sum of the voltages in the shunt and series windings, but the current is simply the series winding current since all of the

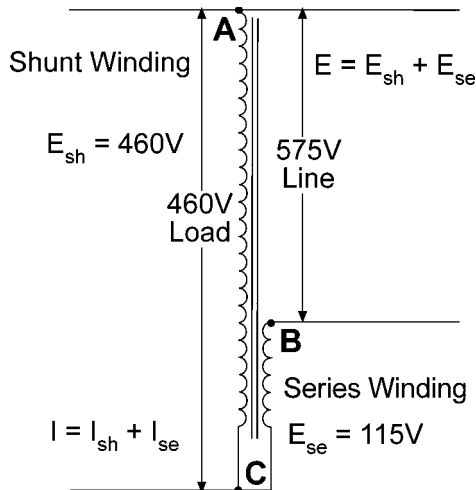


FIGURE 5.71 A 480- to 120-V two-winding transformer (or, perhaps more likely, a 480 to 120/240 center-tapped secondary with the two 120-V connections connected in parallel) connected as an autotransformer to run 465-V motors on a 575-V distribution.

current at point B must pass through that winding. Transformers are not assumed to consume power, so the power on both sides must be the same. Therefore:

$$(E_{sh} + E_{se})I_{se} = C = E_{sh}(I_{se} + I_{sh}) \text{ Note also that:}$$

$$E_{se}I_{se} = X = E_{sh}I_{sh} \text{ and that:}$$

$$\frac{E_{sh}}{E_{se}} = R \text{ which means that } R \times E_{se} = E_{sh}$$

We need only work with the left side of the first two equations, as follows:

$$(E_{sh} + E_{se})I_{se} = C$$

$$E_{sh}I_{se} + E_{se}I_{se} = C \text{ (substituting for } E_{sh} \text{ and } E_{se}I_{se}):$$

$$R(E_{se})I_{se} + X = C \text{ (substituting again for } E_{se}I_{se}):$$

$$RX + X = C \text{ (rearranging terms):}$$

$$X(R + 1) = C \text{ (solving for } X):$$

$$X = \frac{C}{R + 1}$$

EXAMPLE Suppose a 50-hp and a 3-hp motor, both rated 460-V load will be connected to a 575-V 3-phase system. If two 480-V/120-V—two-winding transformers will be connected in open delta to service the loads, what size transformers should be purchased?

The full-load ratings of the motors must be evaluated using the NEC Table 430.250, reproduced in this book in Div. 12, Table 10. The 50-hp motor draws 65 A and the 3-hp motor 4.8 A. Converting to kilovolt-amperes, $65 \text{ A} \times 465\sqrt{3}/(1000) = 52 \text{ kVA}$ and $4.8 \text{ A} \times 465\sqrt{3}/(1000) = 4 \text{ kVA}$.

Add 13 kVA (25 percent of the largest motor) to get 69 kVA total.

In the formula, R will be $480 \text{ V} \div 120 \text{ V} = 4$, and C will be 69 kVA.

Then the capacity required will be $69 \text{ kVA} \div 5$ or 14 kVA.

Remember that the capacity of an open-delta transformer bank is not the sum of the two transformers; instead, the capacity is that of the two transformers multiplied by half the square root of three. Two 10-kVA—two-winding transformers would be a good choice in this case. The final capacity would be $(10 \text{ kVA} + 10 \text{ kVA})(1/2\sqrt{3}) = 17 \text{ kVA}$.

Note that this 480-V transformer (120-V secondary) will be connected to a 600-V supply voltage. The NEC requires that field-connected autotransformers be identified for use at the elevated voltage because the dielectric withstand test is often done at a lower level for windings rated 250 V or less, and in this case the 120-V winding must be tested as though it were a 600-V winding. Transformer manufacturers are very familiar with this application and appropriate products are readily available.

Autotransformers may be used as part of the ballast for lighting units. In these applications an autotransformer which raises the voltage to more than 300 V shall be supplied only by a grounded system.

Autotransformers may be used as starting compensators for ac motors. The compensator supplies a reduced voltage to the motor circuit while the machine is accelerating from rest. Ordinarily each autotransformer used for this purpose is provided with several taps so that a number of low voltages can be obtained.

117. A starting-compensator arrangement for a two-phase induction motor (*Standard Handbook for Electrical Engineers*) is shown in Fig. 5.72. There are two autotransformers, the two separate phase lines being connected to the ends of the separate autotransformer windings. During the starting period the motor is connected between two of the ends and two intermediate taps. Figure 5.73 shows a starting-compensator arrangement for a three-phase induction motor. The three autotransformer windings are Y-connected, and low-voltage points are permanently selected along each leg of the Y. It is not necessary to employ three autotransformers for starting a three-phase

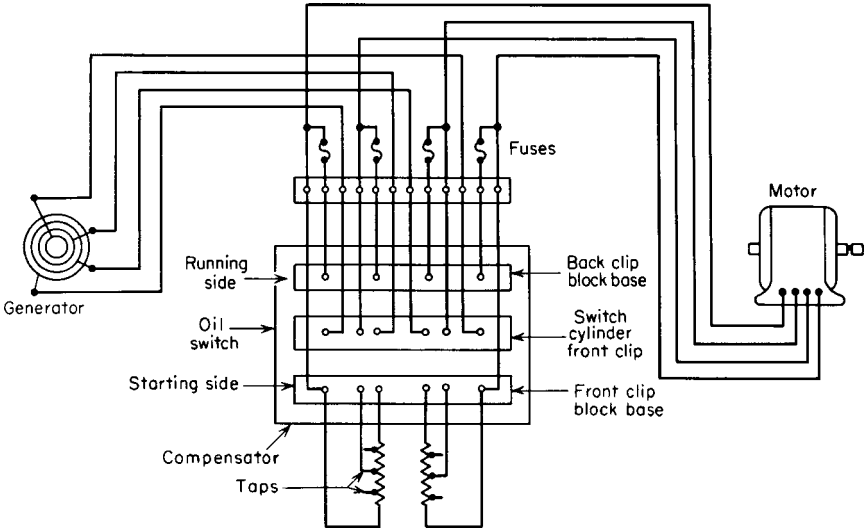


FIGURE 5.72 Two-phase starting compensator.

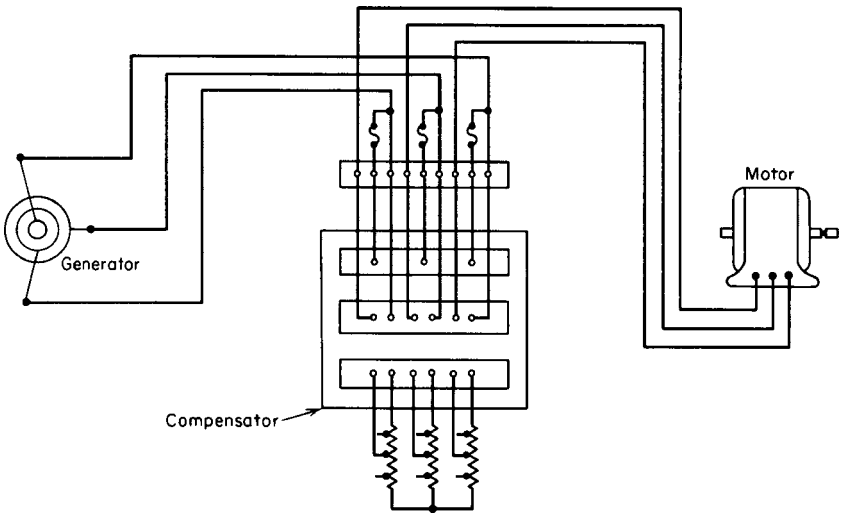


FIGURE 5.73 Three-phase starting compensator.

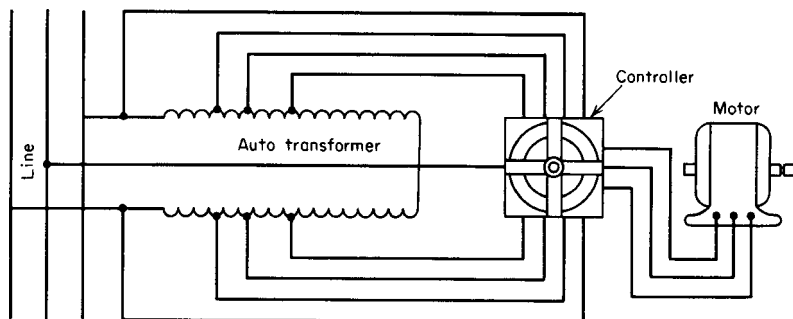


FIGURE 5.74 An autotransformer three-phase starting compensator.

motor; two V-connected autotransformers are quite satisfactory for this purpose. Figure 5.74 shows two V-connected autotransformers for starting a three-phase induction motor and operating it at four different voltages.

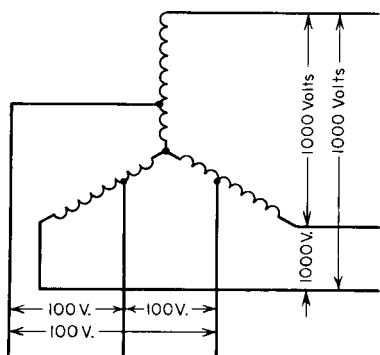


FIGURE 5.75 Y-connected three-phase autotransformer.

118. The coils of a three-phase transformer can be connected for operation as an autotransformer equally as well as can those of a one-phase transformer. The interconnections would ordinarily be by the Y method, although the delta method or a combination of the Y and delta methods may be used. Figure 5.75 represents a Y connection for autotransformer operation.

INSTALLATION, CARE, AND OPERATION

119. The successful operation of transformers (Allis-Chalmers Corporation) is dependent upon proper installation and operation as much as upon proper design and manufacture. Although a transformer requires less care than almost any other type of electrical apparatus, neglect of certain fundamental requirements may lead to serious trouble, if not loss of the transformer.

120. The following sections (122 to 148) give the requirements of the National Electrical Code for the installation of transformers. For further information see Article 450 of the NEC.

121. Application. Article 450 of the NEC applies to the installation of all transformers, except (1) current transformers, (2) dry-type transformers which constitute a component part of other apparatus and which conform to the requirements for such apparatus, (3) transformers which are an integral part of an x-ray, electrostatic-coating, or high-frequency apparatus, (4) transformers used with Class 2 or Class 3 circuits that comply with Article 725

of the Code, (5) transformers for sign and outline lighting that comply with Article 600 of the Code, (6) transformers for electric discharge lighting that comply with Article 410 of the Code, (7) transformers used for power-limited fire alarm circuits that comply with Part III of Article 760, and (8) transformers used for research, development, or testing, where effective arrangements are provided to safeguard persons from contacting energized parts.

Article 450 applies to the installation of transformers to fire pumps and in hazardous locations, except as modified by Articles 501 through 504 of the NEC. Throughout this part of the NEC, the following definition of a transformer applies: “an individual transformer, single- or polyphase, identified by a single nameplate, unless otherwise indicated in this article.”

122. Overcurrent protection. Overcurrent protection shall conform to the following requirements. As used in this section, the word *transformer* means a transformer or a polyphase bank of two or more single-phase transformers operating as a unit.

TABLE 450.3(A) Maximum Rating or Setting of Overcurrent Protection for Transformers Over 600 V (as a Percentage of Transformer-Rated Current)

Location Limitations	Transformer Rated Impedance	Secondary Protection (see Note 2)				
		Primary Protection Over 600 V		Over 600 V		600 V or Less
		Circuit Breaker (see Note 4)	Fuse Rating	Circuit Breaker (see Note 4)	Fuse Rating	Circuit Breaker or Fuse Rating
Any location	Not more than 6%	600% (see Note 1)	300% (see Note 1)	300% (see Note 1)	250% (see Note 1)	125% (see Note 1)
	More than 6% and not more than 10%	400% (see Note 1)	300% (see Note 1)	250% (see Note 1)	225% (see Note 1)	125% (see Note 1)
Supervised locations only (see Note 3)	Any	300% (see Note 1)	250% (see Note 1)	Not required	Not required	Not required
	Not more than 6%	600%	300%	300% (see Note 5)	250% (see Note 5)	250% (see Note 5)
	More than 6% and not more than 10%	400%	300%	250% (see Note 5)	225% (see Note 5)	250% (see Note 5)

Notes:

1. Where the required fuse rating or circuit breaker setting does not correspond to a standard rating or setting, a higher rating or setting that does not exceed the next higher standard rating or setting shall be permitted.

2. Where secondary overcurrent protection is required, the secondary overcurrent device shall be permitted to consist of not more than six circuit breakers or six sets of fuses grouped in one location. Where multiple overcurrent devices are utilized, the total of all the device ratings shall not exceed the allowed value of a single overcurrent device. If both circuit breakers and fuses are used as the overcurrent device, the total of the device ratings shall not exceed that allowed for fuses.

3. A supervised location is a location where conditions of maintenance and supervision ensure that only qualified persons will monitor and service the transformer installation.

4. Electronically actuated fuses that may be set to open at a specific current shall be set in accordance with settings for circuit breakers.

5. A transformer equipped with a coordinated thermal overload protection by the manufacturer shall be permitted to have separate secondary protection omitted.

TABLE 450.3(B) Maximum Rating or Setting of Overcurrent Protection for Transformers 600 V and Less (as a Percentage of Transformer-Rated Current)

Protection Method	Primary Protection			Secondary Protection (see Note 2)	
	Currents of 9 A or More	Currents Less than 9 A	Currents Less than 2 A	Currents of 9 A or More	Currents Less than 9 A
Primary only protection	125% (see Note 1)	167%	300%	Not required	Not required
Primary and secondary protection	250% (see Note 3)	250% (see Note 3)	250% (see Note 3)	125% (see Note 1)	167%

Notes:

1. Where 125 percent of this current does not correspond to a standard rating of a fuse or nonadjustable circuit breaker, a higher rating that does not exceed the next higher standard rating shall be permitted.

2. Where secondary overcurrent protection is required, the secondary overcurrent device shall be permitted to consist of not more than six circuit breakers or six sets of fuses grouped in one location. Where multiple overcurrent devices are utilized, the total of all the device ratings shall not exceed the allowed value of a single overcurrent device. If both breakers and fuses are utilized as the overcurrent device, the total of the device ratings shall not exceed that allowed for fuses.

3. A transformer equipped with coordinated thermal overload protection by the manufacturer and arranged to interrupt the primary current, shall be permitted to have primary overcurrent protection rated or set at a current value that is not more than six times the rated current of the transformer for transformers having not more than 6 percent impedance, and not more than four times the rated current of the transformer for transformers having more than 6 percent but not more than 10 percent impedance.

Voltage Transformers. When voltage transformers are installed indoors or enclosed, they shall be protected with primary fuses.

123. Autotransformers. Each autotransformer rated 600 V, nominal, or less shall be protected by an individual overcurrent device in series with each ungrounded conductor, rated or set at not more than 125% of the rated full-load input current of the autotransformer. If this calculation does not correspond to a standard rating and the rated input current is 9 A or more, the next higher standard device is permitted. No overcurrent device shall be placed in series with the shunt winding.

Referring to Fig. 5.71, no overcurrent device should be placed between points *A* and *C*. If the overcurrent device opened and the load impedance were low, the input 600 V would return to the autotransformer at some voltage approaching 600 V across the series winding (between *B* and *C* in Fig. 5.71). Given the 1:4 winding ratio, that could result in a voltage on the 480 V side of the autotransformer exceeding 2000 V.

As an example of an overcurrent protective device sizing calculation, the two 10-kVA transformers used in Sec. 116 analysis can supply 17.3 kVA of load transformation. In the formula, rearrange the terms to solve for *C*: $C = X(R + 1)$ or in this case 17.3 kVA $(4 + 1) = 87$ A. This arrangement of autotransformers must be protected at not more than 125% of this number, or 108 A, with the next higher standard size protective device (110 A) permitted.

Autotransformers field connected for this purpose must be identified for use at the elevated voltage. Refer to the discussion on this point in Sec. 116 for more information.

124. Grounding autotransformers. Grounding autotransformers covered in this section are zigzag or T-connected transformers connected to 3-phase, 3-wire ungrounded systems for the purpose of creating a 3-phase, 4-wire distribution system or providing a neutral point for grounding purposes. Such transformers shall have a continuous per-phase current rating and a continuous neutral current rating. Zigzag-connected transformers shall not be connected on the load side of any system grounding connections, including those made in accordance with 250.24(B), 250.30(A)(1), or 250.32(B) Exception.

NOTE Zigzag grounding autotransformers are comprised of two three-phase wye connections in series. Figure 5.76 shows most of the requirements as well as the angular displacements that give the transformation its name. The inner connections are a straightforward wye, and close inspection of the three outer segments of the pinwheel shows that they are also oriented in a wye configuration. In fact, at least one major transformer manufacturer now sells zigzag customers three two-winding transformers (thus, six windings) along with instructions as to how to connect them to achieve this result. The simultaneous disconnection rule is crucial because if a single-pole overcurrent device were to open, the grounding transformer will no longer function as intended, including a strong likelihood of dangerous transient overvoltages on its load side. A properly functioning zigzag connection will derive a fully functional neutral for 277-V circuits, and return one-third of the total neutral current equally to each phase. The balance of this code section is primarily divided into two parts, one for an actual neutral for a distribution system, and the other for a neutral reference for an impedance grounding connection.

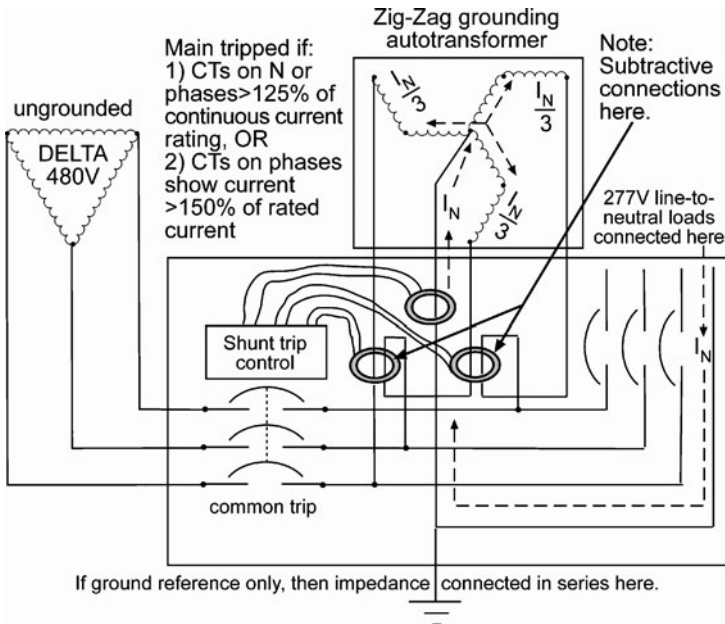


FIGURE 5.76 A zigzag-connected grounding autotransformer used to derive a 277-V neutral from an ungrounded 480-V delta distribution, showing NEC required safeguards in place.

A grounding autotransformer used to create a 3-phase 4-wire distribution system shall comply with the following four requirements:

1. The transformer shall be directly connected to the ungrounded phase conductors and shall not be switched or provided with overcurrent protection that is independent of the main switch and common-trip overcurrent protection for the 3-phase 4-wire system. A transformer used to limit transitory overvoltages shall be of suitable rating and shall be connected in accordance with this rule.
2. An overcurrent sensing device shall be provided that will cause the main switch or common-trip overcurrent protection previously referred to open if the load on the autotransformer reaches or exceeds 125 percent of the continuous current per phase or neutral rating. Delayed tripping for temporary overcurrents sensed at the autotransformer overcurrent device shall be permitted for the purpose of allowing proper operation of branch or feeder protective devices on the 4-wire system.
3. A fault-sensing system that causes the opening of a main switch or common trip overcurrent device for the 3-phase 4-wire system shall be provided to guard against single phasing or internal faults. An explanatory note advises that this can be accomplished by the use of two subtractive-connected donut-type current transformers installed to sense and signal when an unbalance occurs in the line current to the autotransformer of 50 percent or more of rated current.
4. The autotransformer shall have a continuous neutral-current rating that is sufficient to handle the maximum possible neutral unbalanced load current of the 4-wire system.

NOTE Zigzag connections are never a substitute for running a neutral to a load, regardless of how remote. If the supply system is grounded at any point, then a parallel neutral return path will exist and this will desensitize the protective controls for the transformer. The NEC now expressly prohibits the use of grounding transformers on the load side of any system grounding connection. The remainder of this section covers grounding autotransformers that do not supply utilization loads, but instead merely provide a ground reference and a specified magnitude of ground-fault current for the operation of ground-responsive protective devices, typically so an ungrounded system can be grounded through an impedance. Refer to Sec. 356 of Div. 9 for details. Insert the grounding impedance as indicated and eliminate all load connections to the neutral. There are three requirements:

1. The autotransformer shall have a continuous neutral current rating sufficient for the specified ground-fault current.
2. An overcurrent device having an interrupting rating suitable for the fault current available at its supply terminals and that will open simultaneously all ungrounded conductors when it operates shall be applied in the grounding autotransformer branch circuit.
3. The overcurrent protection covered immediately above shall be rated or set at a current not exceeding 125 percent of the autotransformer continuous per phase current rating or 42 percent of the continuous-current rating of any series-connected devices in the autotransformer neutral connection. Delayed tripping for temporary overcurrents to permit the proper operation of ground-responsive tripping devices on the main system shall be permitted but shall not exceed values that would be more than the short-time current rating of the grounding autotransformer or any series connected devices in the neutral connection thereto.

NOTE The 42 percent rule reflects the fact that the current in each phase is 33 percent of the neutral return current, and 125 percent of this is about 42 percent. An exception follows

for high-impedance grounded systems, for which the 125 percent rule is impracticable because the neutral current through the impedance is so low that 125 percent of this current does not come close to a conventional overcurrent device setting or rating.

For high-impedance grounded systems covered in NEC 250.36, where the maximum ground-fault current is designed to be not more than 10 A, and where the grounding autotransformer and the grounding impedance are rated for continuous duty, an overcurrent device rated not more than 20 A that will simultaneously open all ungrounded conductors shall be permitted to be installed on the line side of the grounding autotransformer.

125. Secondary ties. As used in this section, the word *transformer* means a transformer or a bank of transformers operating as a unit. A *secondary tie* is a circuit operating at 600 V or less between phases which connects two power sources or power supply points, such as the secondaries of two transformers. The tie may consist of one or more conductors per phase.

A. Tie Circuits. Tie circuits shall be provided at each end with overcurrent protection *according to the ampacity of the conductors*, except under the conditions described in Subparas. A1 and A2 of this section, in which cases the overcurrent protection may be in accordance with Subpara. A3 of this section.

1. *Loads at transformer supply points only.* If all loads are connected at the transformer supply points at each end of the tie and overcurrent protection is not provided, the rated ampacity of the tie shall be not less than 67 percent of the rated secondary current of the largest transformer connected to the secondary tie system.
2. *Loads connected between transformer supply points.* If a load is connected to the tie at any point between transformer supply points and overcurrent protection is not provided, the rated ampacity of the tie shall be not less than 100 percent of the rated secondary current of the largest transformer connected to the secondary tie system, except as otherwise provided in Subpara. A4.
3. *Tie-circuit protection.* Under the conditions described in Subparas. A1 and A2 of this section, both ends of each tie conductor shall be equipped with a protective device which will open at a predetermined temperature of the tie conductor under short-circuit conditions. This protection shall consist of one of the following: (1) a fusible-link cable connector, terminal, or lug, commonly known as a *limiter*, being of a size corresponding with that of the conductor and of construction and characteristics, according to the operating voltage and the type of insulation on the tie conductors, or (2) automatic circuit breakers actuated by devices having comparable current-time characteristics.
4. *Interconnection of phase conductors between transformer supply points.* If the tie consists of more than one conductor per phase, the conductors of each phase shall be interconnected to establish a load supply point, and the protection specified in Subpara. A3 shall be provided in each tie conductor at this point, except as follows:

Loads can be connected to the individual conductors of a paralleled conductor tie without interconnecting the conductors of each phase and without the protection specified in Subpara. A3 at load connection points, provided the tie conductors of each phase have a combined capacity not less than 133 percent of the rated secondary current of the largest transformer connected to the secondary tie system; the total load of such taps does not exceed the rated secondary current of the largest transformer, and the loads are equally divided on each phase and on the individual conductors of each phase as far as practicable.

5. Tie-circuit control. If the operating voltage exceeds 150 V to ground, secondary ties provided with limiters shall have a switch at each end which when open will deenergize the associated tie conductors and limiters. The current rating of the switch shall be not less than the rated current of the conductors connected to the switch. It shall be capable of opening its rated current, and it shall be constructed so that it will not open under the magnetic forces resulting from short-circuit current.

B. Overcurrent Protection for Secondary Circuits. When secondary ties are used, an overcurrent device rated or set at not more than 250 percent of the rated secondary current of the transformers shall be provided in the secondary connections of each transformer, and in addition an automatic circuit breaker actuated by a reverse-current relay set to open the circuit at not more than the rated secondary current of the transformer shall be provided in the secondary connection of each transformer.

126. Parallel operation. Transformers can be operated in parallel and switched as a unit if the overcurrent protection for each transformer meets the requirements of Sec. 122.

127. Guarding. Transformers shall be guarded as follows:

A. Mechanical Protection. Appropriate provisions shall be made to minimize the possibility of damage to transformers from external causes if the transformers are located where they are exposed to physical damage.

B. Case or Enclosure. Dry-type transformers shall be provided with a noncombustible moisture-resistant case or enclosure which will afford reasonable protection against the accidental insertion of foreign objects.

C. Exposed Energized Parts. The transformer installation shall conform with the Code provisions for guarding live parts.

D. Voltage Warning. The operating voltage of exposed live parts of transformer installations shall be indicated by signs or visible markings on the equipment or structures.

128. Ventilation. The ventilation shall be adequate to dispose of the transformer full-load losses without creating a temperature rise that is in excess of the transformer rating. Transformers with ventilating openings shall be installed so that the ventilating openings are not blocked by walls or other obstructions. The required clearances shall be marked on the transformer.

129. Grounding. Exposed noncurrent-carrying metal parts of transformer installations, including fences, guards, etc., shall be grounded and bonded where required under the conditions and in the manner specified for electrical equipment and other exposed metal parts in Parts V, VI, and VII of Article 250.

130. Marking. Each transformer shall be provided with a nameplate giving the name of the manufacturer, rated kilovolt-amperes, frequency, primary and secondary voltage, impedance if the transformer rating is 25 kVA or larger, required clearances for transformers with ventilating openings, and the amount and kind of insulating liquid where

used. In addition, the nameplate of each dry-type transformer shall include the temperature class of the insulation system.

131. Terminal wiring space. The minimum wire-bending space at fixed, 600-V and below terminals of transformer line and load connections shall be as required in cabinets as tabulated in Div. 12, Tables 33 and 34. Wiring space for pigtail connections shall comply with the requirements for box volumes discussed in Div. 9, Sec. 345 and tabulated in the NEC, Table 314.16(B).

132. Accessibility. All transformers and transformer vaults shall be readily accessible to qualified personnel for inspection and maintenance or they shall meet one of the following two conditions:

1. Dry-type transformers 600 V, nominal, or less, located in the open on walls, columns, or structures, shall not be required to be readily accessible.
2. Dry-type transformers 600 V, nominal, or less and not exceeding 50 kVA shall be permitted in hollow spaces of buildings not permanently closed in by structure, provided they meet the ventilation requirements of Sec. 128 and the separation from combustible materials requirements covered in Sec. 133.

PROVISIONS FOR DIFFERENT TYPES OF TRANSFORMERS

133. Dry-type transformers installed indoors. Transformers rated 112½ kVA or less shall have a separation of at least 300 mm (12 in) from combustible material unless separated therefrom by a fire-resistant heat-insulating barrier or unless of a rating not exceeding 600 V and completely enclosed with or without ventilating openings.

Transformers with a rating of more than 112½ kVA shall be installed in a transformer-room of fire-resistant construction unless they are constructed with class 155 or higher insulation systems and are separated from combustible material by not less than 1.83 m (6 ft) horizontally and 3.7 m (12 ft) vertically or are separated therefrom by a fire-resistant heat-insulating barrier; or are constructed with class 155 or higher insulation systems and completely enclosed, except for ventilating openings.

Transformers rated more than 35,000 V shall be installed in a vault.

134. Dry-type transformers installed outdoors. Dry-type transformers installed outdoors shall have a weatherproof enclosure. Transformers exceeding 112½ kVA shall not be located within 300 mm (12 in) of combustible materials of buildings unless the transformer has Class 155 insulation systems or higher and is completely enclosed, except for ventilating openings.

135. Less-flammable liquid-insulated transformers. Transformers insulated with listed less-flammable liquids that have a fire point of not less than 300°C shall be permitted to be installed in accordance with A or B below.

A. Indoor Installations. Indoor installations shall be permitted under any of the following three conditions:

1. In Type I or Type II buildings where the transformer is rated 35,000 V or less, no combustible liquids are stored, a liquid confinement area is provided, and the installation complies with all restrictions provided for in the listing of the liquid.
2. With an automatic fire extinguishing system and a liquid confinement area, provided the transformer is rated 35,000 V or less.
3. The installation meets the requirements for oil-insulated transformers installed indoors, as covered in Sec. 138.

B. Outdoor Installations. Less-flammable liquid-filled transformers shall be permitted to be installed outdoors, attached to, adjacent to, or on the roof of buildings, where installed in accordance with either 1 or 2 below.

1. For Type I or Type II buildings, the installation shall comply with all restrictions provided for in the listing of the liquid.
2. The installation meets the requirements for oil-insulated transformers installed outdoors, as covered in Sec. 139.

NOTE A listed less-flammable liquid is one which, when subjected to a source of ignition, may burn but the flame of which will not spread from the source of ignition. These liquids were developed to replace askarel. Askarel contains polychlorinated biphenyls (PCBs), and has been banned by the U.S. Environmental Protection Agency as a carcinogen.

136. Nonflammable fluid-insulated transformers. Transformers insulated with a dielectric fluid identified as nonflammable shall be permitted to be installed indoors or outdoors. Such transformers installed indoors and rated over 35,000 V shall be installed in a vault. Such transformers installed indoors shall be furnished with a liquid confinement area and a pressure relief vent. The transformers shall be furnished with a means for absorbing any gases generated by arcing inside the tank, or the pressure-relief vent shall be connected to a chimney or flue that will carry such gases to an environmentally safe area. For the purposes of this section, a *nonflammable dielectric fluid* is one that does not have a flash point or a fire point and is not flammable in air.

137. Askarel-insulated transformers installed indoors. Askarel-insulated transformers installed indoors and rated in excess of 25 kVA shall be furnished with a pressure-relief vent. If installed in a poorly ventilated place, they shall be furnished with a means of absorbing any gases generated by arcing inside the case, or the pressure-relief vent shall be connected to a chimney or flue which will carry such gases outside the building. Askarel-insulated transformers rated more than 35,000 V shall be installed in a vault.

138. Oil-insulated transformers installed indoors. Oil-insulated transformers shall be installed in a vault constructed as specified in Article 450 of the Code, except as follows:

- A. Not over 112½-kVA Total Capacity.** The provisions for transformer vaults specified below apply, except that the vault may be constructed of reinforced concrete not less than 100 mm (4 in) thick.
- B. Not over 600 V.** A vault is not required, provided suitable arrangements are made when necessary to prevent a transformer oil fire from igniting other materials, and the

total transformer capacity in one location does not exceed 10 kVA in a section of the building classified as combustible or 75 kVA in a section classified as fire-resistant.

- C. Electric-Furnace Transformers.** Transformers of a total rating not exceeding 75 kVA may be installed without a vault in a building or room of fire-resistant construction if arrangements necessary to prevent a transformer oil fire from spreading to other combustible material are provided.
- D. Charged Particle Accelerating Equipment.** A transformer that has a total rating not exceeding 75 kVA and a supply voltage of 600 V or less that is an integral part of charged particle accelerating equipment shall be permitted to be installed without a vault in a building or room of noncombustible or fire-resistant construction, provided suitable arrangements are made to prevent a transformer oil fire from spreading to other combustible material.
- E. Detached Buildings.** Transformers may be installed in a building that does not conform with Code provisions for transformer vaults provided that neither the building nor its contents present a fire hazard to any other property and that the building is used only in supplying electric service and the interior is accessible only to qualified persons.
- F. Portable and Surface Mining Equipment (Such as Electric Excavators).** Oil-insulated transformers may be used without a vault if (1) provisions are made to drain leaking fluid to the ground, (2) safe egress is provided for personnel, and (3) personnel are protected with at least a 6.36-mm (1/4-in) steel barrier.

139. Oil-insulated transformers installed outdoors. Combustible material, combustible buildings and parts of buildings, fire escapes, and door and window openings shall be safeguarded from fires originating in oil-insulated transformers installed on roofs, or attached or adjacent to a building or combustible material. Space separations, fire-resistant barriers, automatic water-spray systems, and enclosures which confine the oil of a ruptured transformer are recognized safeguards. One or more of these safeguards shall be applied according to the degree of hazard involved where the transformer installation presents a fire hazard. Oil enclosures may consist of fire-resistant dikes, curbed areas or basins, or trenches filled with coarse crushed stone. Oil enclosures shall be provided with trapped drains if the exposure and quantity of oil are such that removal of oil is important.

140. Modification of transformers. When modifications are made to a transformer in an existing installation that change the type of the transformer with respect to this part of the article, such transformer shall be marked to show the type of insulating fluid installed, and the modified transformer installation shall comply with the applicable requirements for that type of transformer.

PROVISIONS FOR TRANSFORMER VAULTS

141. Location. Vaults shall be located where they can be ventilated to the outside air without using flues or ducts wherever such an arrangement is practicable.

142. Walls, roofs, and floors. The walls and roofs of vaults shall be constructed of reinforced concrete, brick, load-bearing tile, concrete block, or other fire-resistive

constructions, which have adequate structural strength for the conditions and a minimum fire resistance of 3 h according to Method for Fire Tests of Building Construction and Materials, ANSI/ASTM E119-1995, Standard Methods of Tests of Fire Endurance of Building Construction and Materials, NFPA 251-2006. The floors of vaults in contact with the earth shall be of concrete not less than 100 mm (4 in) thick, but where the vault is constructed with a vacant space or other stories below it, the floor shall have adequate structural strength for the load imposed thereon and a minimum fire resistance of 3 h. If transformers are protected with an automatic sprinkler, a water spray, halon, or carbon dioxide, construction may have a 1-h rating.

143. Doorways. Vault doorways shall be protected as follows:

- A. Type of Door.** Each doorway leading into a vault from the building shall be provided with a tight-fitting door of a type as defined in the National Fire Protection Association *Standard for the Installation of Fire Doors and Windows*, No. 80, 2007 with a minimum fire rating of 3 h. The authority enforcing the Code may require such a door for an exterior-wall opening when conditions warrant. If transformers are protected with an automatic sprinkler, a water spray, halon, or carbon dioxide, construction may have a 1-h rating.
- B. Sills.** A door sill or curb of sufficient height to confine within the vault the oil from the largest transformer shall be provided, and in no case shall the height be less than 100 mm (4 in).
- C. Locks.** Entrance doors shall be equipped with locks, and doors shall be kept locked, access being allowed only to qualified persons. Personnel doors shall swing out and be equipped with panic bars, pressure plates, or other devices that are normally latched but open under simple pressure.

144. Ventilation openings. When required by Sec. 129, openings for ventilation shall be provided in accordance with the following:

- A. Location.** Ventilation openings shall be located as far as possible from doors, windows, fire escapes, and combustible material.
- B. Arrangement.** Vaults ventilated by natural circulation of air may have roughly half the total area of openings required for ventilation in one or more openings near the floor and the rest in one or more openings in the roof or in the sidewalls near the roof, or all the ventilation area may be provided in one or more openings in or near the roof.
- C. Size.** In vaults ventilated to an outdoor area without using ducts or flues, the combined net area of all ventilating openings after deducting the area occupied by screens, gratings, or louvers shall be not less than 1900 mm^2 (3 in^2)/1 kVA of transformer capacity in service, except that the net area shall be not less than 0.1 m^2 (1 ft^2) for any capacity under 50 kVA.
- D. Covering.** Ventilation openings shall be covered with durable gratings, screens, or louvers, according to the treatment required to avoid unsafe conditions.
- E. Dampers.** All ventilation openings to the indoors are to be provided with automatic-closing dampers that operate in response to fire. Such dampers shall have a fire rating of not less than $1\frac{1}{2}$ h.
- F. Ducts.** Ventilating ducts shall be constructed of fire-resistant material.

145. Drainage. If practicable, vaults containing more than 100-kVA transformer capacity shall be provided with a drain or other means which will carry off any accumulation of oil or water that may collect in the vault unless local conditions make this impracticable. The floor shall be pitched to the drain where provided.

146. Water pipes and accessories. Any pipe or duct systems foreign to the electrical installation shall not enter or pass through a transformer vault. Piping or other facilities provided for vault fire protection or for water-cooled transformers are not deemed to be foreign to the electrical installation.

147. Storage in vaults. Materials shall not be stored in transformer vaults.

148. The following instructions (Secs. 150 to 177) are for procedures in installing, caring for, and operating transformers.

149. Location. Accessibility, ventilation, and ease of inspection should be given careful consideration in locating transformers. *Water-cooled transformers* depend almost entirely upon the flow of water through the cooling coils for carrying away heat, so that the temperature of the surrounding air has little effect upon that of the transformers. For this reason air circulation is of minor importance, and water-cooled transformers can be located in any convenient place without regard to ventilation.

150. Self-cooled (dry-type) transformers depend upon surrounding air for carrying away their heat. For this reason care must be taken to provide adequate ventilation. For indoor installation the room in which the transformers are placed must be well ventilated so that heated air can escape readily and be replaced by cool air from outside. Inlet openings should be near floor level and distributed to be most effective. The outlet or outlets should be as high above the apparatus as construction of the building will permit. The number and size of air outlets required will depend on their distance above the transformer and on the efficiency and load cycle of the apparatus. In general, about 20 ft² (1.86 m²) of outlet opening or openings should be provided for each 1000 kVA of transformer capacity. Air inlets should be provided with the same total area as the outlets. If the transformer must operate for considerable periods at continuous full load, areas of the inlet and outlet openings should be increased to about 60 ft² (5.57 m²)/1000 kVA of transformer capacity.

151. Storage. When a transformer can be set up immediately in its permanent location and filled with oil, it is advisable to do so even though it will not be put into service for some time. If this is not convenient, it should be stored in a dry place having no rapid or radical temperature changes and, if possible, filled with dry transformer oil. The transformer should not be stored or operated in the presence of corrosive gases such as chlorine. If an indoor transformer is stored outdoors, it should be thoroughly covered to keep out rain.

152. Handling. When a transformer is being lifted, the lifting cables must be held apart by a spreader to avoid bending the lifting studs or other parts of the structure.

If a transformer cannot be handled by a crane, it may be skidded or moved on rollers, but care must be taken not to damage the base or tip the transformer over. A transformer should never be lifted or moved by placing jacks or tackle under the drain valve, cooling-coil outlets, radiator connections, or other attachments. When rollers are used under large transformers, skids must be employed to distribute the stress over the base.

When working about a transformer, particular care must be taken in handling all tools and other loose articles, since anything metallic dropped among the windings and allowed to remain there may cause a breakdown.

153. Inspection preliminary to installation. Transformers are in first-class operating condition when shipped by the manufacturer; i.e., they have been thoroughly tested for defects and are perfectly dry. When received, they should be examined before removing the shipment, and if any injury is evident or any indication of rough handling is visible, a claim should be filed at once and the manufacturer notified.

Moisture may condense on any metal if the metal is colder than the air, and if present, it lowers the dielectric strength and may cause a failure of the transformer. Therefore, if transformers or oil drums are brought into a room warmer than they are, they should be allowed to stand before opening until there is no condensation on the outside and they are thoroughly dry.

Before installation, each individual transformer should be thoroughly examined for indications of moisture and inspected for breakage, injury, or displacement of parts during shipment. In addition, all accessible nuts, bolts, and studs should be tightened if necessary. Before being placed in service, transformers having a plurality of voltage connections should be carefully checked to ensure that they are connected for operation at the required voltage and on the proper tap.

It is a standard practice to ship transformers connected for their maximum voltage.

If transformers are water-cooled, the cooling coils should be tested for leaks at a pressure of 80 to 100 psi (551,581 to 689,476 Pa). Water, oil, or preferably air may be used in the coil for obtaining the pressure. The coil must be outside the tank, i.e., away from the winding insulation, if water is used for the pressure test. When pressure is obtained, the supply should be disconnected, and after 1 h it should be determined whether any fall in pressure is due to a leak in the coil or a leak in the fittings at the ends of the coil.

154. Transformers shipped filled with oil. Each transformer shipped filled with oil should be inspected to see whether there is any condition indicating the entrance of moisture during shipment.

If the transformer is received in damaged condition, so that water or other foreign material has had a chance to enter the tank, the transformer should be emptied of oil and treated as though not shipped in oil, and in no case may drying be omitted.

In all cases samples of oil should be taken from the bottom and tested. The dielectric strength of the oil when shipped is at least 22 kV between 1-in (25.4-mm) disks spaced 0.1 in (2.54 mm) apart. A new transformer should not be put into service with oil which tests below this value.

155. Transformers shipped assembled without oil. Each transformer shipped assembled but not filled with oil should be carefully inspected for damage in shipment. A thorough inspection can be made only by removing core and coils from the tank. All dirt should be wiped off and parts examined for breakage or other injuries. All conductors and terminals should be examined to check their proper condition and position. The coil and core clamps should be tightened if necessary.

The tank should be inspected and, if necessary, cleaned.

When a transformer is shipped assembled but not filled with oil, moisture may be absorbed during transportation. For this reason it is a good practice to dry out all such transformers, especially transformers above 7500 V, before putting them into service.

156. Transformers shipped disassembled. Only very large transformers are shipped in this way, and special instructions covering features incident to this method of shipping are supplied by the manufacturer. These instructions should be carefully followed.

157. Drying core and coils. There are a number of approved methods of drying out transformer core and coils, any one of which will be satisfactory if carefully performed. However, too much stress cannot be laid upon the fact that if the drying is carelessly or improperly performed, great damage may result to the transformer insulation through overheating.

The methods in use may be broadly divided into two classes:

- 1. Drying with the core and coils in the tank with oil.
- 2. Drying with the oil removed. The core and coils may or may not be removed from the tank.

158. Drying with oil in tank. Under the first class, the moisture is driven off by sending current through the winding while immersed in oil, with the top of the tank open to the air or with some other arrangement made for adequate ventilation. The current necessary for this class can be secured by the short-circuit method.

This method consists in heating the windings and oil up to a high temperature for a limited time under short circuit with a partial load on the windings, the high oil temperature being obtained by blanketing the tank (or by reducing the flow of water for water-cooled transformers).

When a transformer is short-circuited in this manner, only a fraction of the normal voltage should be applied to one winding. When this method is used, the load current and maximum top-oil temperature should be in accordance with the following tabulation.

During the drying run, ventilation additional to that ordinarily provided should be maintained by slightly raising the manhole cover and protecting the opening from the weather. With good ventilation, the moisture, as it is driven off in the form of vapor, will escape to the outside atmosphere, and no condensation of moisture will take place on the underside of the cover or elsewhere, provided these parts are lagged with heat-insulating material to prevent condensation of moisture within.

The accompanying table shows the short-circuit current in percentage of full-load current which can be used for this method of drying transformers, with the corresponding maximum allowable top-oil temperature in degrees Celsius. Less than 5 percent of normal voltage will usually be required to circulate the current in the windings.

Self-cooled transformers	Water-cooled transformers	Maximum top-oil temperatures, °C
Short-circuit ampere in percentage of full load		
50	50	85
75	60	80
85	75	75

These temperature limits and loads must be adhered to strictly to obtain the desired results without danger to the transformers.

It should be noted that the higher allowable temperatures go with the smaller loads; i.e., more blanketing or less water will be required for the smaller loads than for the higher to bring the oil temperature up to the point shown in the table.

159. When to discontinue drying. Drying should be continued until oil from the top and bottom of the tank tests 22 kV or higher for seven consecutive tests taken 4 h apart with the oil maintained at maximum temperature for the load held and without filtering. The testing of the oil for dielectric strength should be made between parallel 1-in- (25.4-mm-) diameter disks, spaced $\frac{1}{10}$ in (2.54 mm) apart. All ventilating openings should then be closed, the transformer kept at the same temperature for another 24 h without filtering the oil, and as before the oil should be tested at 4-h intervals. A decrease in the dielectric strength of the oil indicates that moisture is still passing from the transformer into the oil, and drying should be continued. The temperature of the oil samples when tested should preferably be at room temperature and not in excess of 40°C.

Unless constant or increasing dielectric strength as shown by these tests indicates that drying is complete, the ventilators should be opened, the oil filtered, and the drying process continued.

After the short-circuit run has been discontinued, the transformer should be operated for 24 h at approximately two-thirds voltage, and at the same high temperature, similar tests of oil samples should be made, and the oil filtered if necessary. After a satisfactory two-thirds-voltage test, full voltage should be applied for 24 h and the same tests repeated. Water-cooled transformers may require some water to hold the top-oil temperature within the 85°C limit during this test.

160. Drying with oil removed. Typical of the second class, i.e., drying with the oil removed, are the following three methods:

1. By internal heat
2. By external heat
3. By internal and external heat

1. By Internal Heat. For this method alternating current is required. The transformer should be placed in its tank without the oil and with the cover left off to allow free circulation of air. Either winding can be short-circuited, and sufficient voltage should be impressed across the other winding to circulate enough current through the coils to maintain the temperature at from 75 to 80°C. About one-fifth of normal full-rated current is generally sufficient to do this. The impressed voltage necessary to circulate this current varies within wide limits among different transformers but will generally be approximately 0.5 to 1.5 percent of normal voltage at normal frequency.

The end terminals of the winding, not taps, must be used so that current will circulate through the total winding. The amount of current can be controlled by a rheostat in series with the exciting winding. Proper precautions should be taken to protect the operator from dangerous voltage.

This method of drying out is superficial and slow and should be used only with small transformers and then only when local conditions prohibit the use of one of the other methods.

2. By External Heat. The transformer should be placed in a box with holes in the top and near the bottom to allow air circulation. The clearance between the sides of the transformer and the box should be small so that most of the heated air will pass up through the ventilating ducts among the coils and not around the sides. The heat should be applied at the bottom of the box. With some types of transformers it is better to distribute the heat evenly around the lower coils.

The best way to obtain the heat is from grid resistors, using either alternating or direct current. The temperature limits of ingoing air are 85 to 90°C. The transformer must be carefully protected against direct radiation from the heaters. Care must also be taken to see that there is no flammable material near the heaters, and to this end it is advisable to line the wooden box completely with asbestos. Also, when forced air is used, suitable baffles should be placed between heater and inlet to the transformer enclosure.

Instead of the heater being placed inside the box containing the transformer, it can be placed outside, the heat being carried into the bottom of the box through a suitable pipe. When this plan is followed, the heat may be generated by the direct combustion of gas, coal, or wood, provided that none of the products of combustion are allowed to enter the box containing the transformer. Heating by combustion is not advocated, except when electric current is not available.

This method, although effective, requires a much longer time than Method 3.

3. By Internal and External Heat. This is a combination of Methods 1 and 2. The transformer should be placed in a box and external heat applied as in Method 2, and current circulated through the windings as in Method 1. The current should, of course, be considerably less than when no external heat is applied.

This method is used occasionally when direct current only is available, a certain amount of current being passed through the high-voltage winding only, as the cross-sectional area of the low-voltage conductor is generally too large for it to be heated with an economical amount of direct current. The use of direct current for drying out is not recommended except when alternating current cannot be obtained. When this method of drying is used, the temperature should be measured by the increase-in-resistance method.

Method 3 requires technically skilled supervision.

161. Time required for drying. There is no definite length of time for drying. Up to 3 weeks may be required, depending upon the condition of the transformer, the size, the voltage, and the method of drying used.

162. Insulation resistance. The measurement or determination of insulation resistance is of value in determining the course of drying only when the transformer is without oil. If the initial insulation resistance is measured at ordinary temperatures, it may be high although the insulation is not dry, but as the transformer is heated up, it will drop rapidly.

As the drying proceeds at a constant temperature, the insulation resistance will generally increase gradually until toward the end of the drying period, when the increase will become more rapid. Sometimes the resistance will rise and fall through a short range one or more times before reaching a steady high point. This is caused by moisture in the interior parts of the insulation working its way out through the outer portions which were dried at first.

As the temperature varies, the insulation resistance also varies greatly; therefore the temperature should be kept nearly constant, and the resistance measurements should all be taken at as nearly the same temperature as possible. The insulation resistance in megohms varies inversely with the temperature, and, for a 10°C change of temperature, the megohms change by a ratio of 2:1. Measurements should be taken every 2 h during the drying period.

163. Resistance curve. A curve of the insulation-resistance measurements should be plotted with time as abscissa and resistance as ordinate. By observation, the knee of the curve (the point where the insulation resistance begins to increase more rapidly) can be determined, and the run should continue until the resistance is constant for 12 h.

The Allis-Chalmers Corporation further recommends that the insulation resistance should be as great or greater than that given by the following formula and that the megohm resistance should be taken with all windings grounded, except the winding being tested.

Megohms at 85°C in air or at 40°C in oil are equal to

$$\frac{kV \times 30}{\sqrt{kVA/cycles}}$$

where kV = kilovolts of winding involved and kVA = kilovolt-amperes of transformer per phase.

The megohms vary inversely with the temperature, and for a 10°C change of temperature the megohms change in the ratio of 2:1. For example,

Megohms at 85°C = 300

Megohms at 75°C = 600

Megohms at 55°C = 1200

Megohms at 55°C = 2400

164. Precautions to be observed in drying without oil. As the drying temperature approaches the point at which fibrous materials deteriorate, great care must be taken to see that there are no points at which the temperature exceeds 85°C. Several thermometers should be used, and they should be placed well in among the coils near the top and screened from air currents. Ventilating ducts offer particularly good places in which to place some of the thermometers. As the temperature rises rapidly at first, the thermometers must be read at intervals of about 1/2 h. To keep the transformer at a constant temperature for insulation-resistance measurements, one thermometer should be placed where it can be read without removing it or changing its position. The other thermometers should be shifted about until the hottest points are found and should remain at these points throughout the drying period. Whenever possible, the temperature should be checked by the increase-in-resistance method.

165. Caution in drying out. It is well to have a chemical fire extinguisher or a supply of sand at hand for use in case of necessity.

It is not safe to attempt the drying out of transformers without giving them constant attention.

166. Sampling and testing of oil. The sample container should be a large-mouthed glass bottle. All bottles should be cleaned and dried with gasoline before being used. A cork stopper should be used.

The sample for dielectric tests should be at least 16 oz (0.473 L); if other tests are to be made, 1 qt (32 oz, or 0.946 L).

Test samples should be taken only after the oil has settled for some time, varying from 8 h for a barrel to several days for a large transformer. Cold oil is much slower in settling

and may hardly settle at all. Oil samples from the transformer should be taken from the oil-sampling valve at the bottom of the tank. Oil samples from a barrel should be taken from the bottom of the drum. A brass or glass "thief" can be conveniently used for this purpose. The same method should be used for cleaning the thief as is used for cleaning the container.

When samples of oil are drawn from the bottom of the transformer or large tank, sufficient oil must first be drawn off to make sure that the sample will comprise oil from the bottom of the container and not from the oil stored in the sampling pipe. A glass receptacle is desirable so that if water is present, it can be readily observed. If water is found, an investigation of the cause should be made and a remedy applied. If water is not present in sufficient quantity to settle out, the oil may still contain considerable moisture in a suspended state. It should, therefore, be tested for dielectric strength.

For *testing oil for dielectric strength*, some standard device for oil testing should be used. The standard oil-testing spark gap has disk terminals 1 in (25.4 mm) in diameter spaced 0.1 in (2.54 mm) apart. The testing cup should be cleaned thoroughly, to remove any particles of cotton fiber, and rinsed out with a portion of the oil to be tested.

The spark-gap receptacle should be filled with oil, both oil and spark gap being at room temperature or approximately 25°C. After filling the receptacle, allow 1/2 to 1 min for air bubbles to escape before applying voltage.

The rate of increase in voltage should be about 3000 V/s. Five breakdowns should be made on each filling, and then the receptacle emptied and refilled with fresh oil from the original sample. The average voltage of 15 tests (5 tests on each of three fillings) is usually taken as the dielectric strength of the oil. It is recommended that the test be continued until the mean of the averages of at least three fillings is consistent.

The dielectric strength of oil when shipped is at least 22 kV tested in the standard gap. If the dielectric strength of the oil in a transformer in service tests at less than 17,500 V, it should be filtered. New oil of less than the standard dielectric strength should not be put in a transformer.

167. Drying oil and filling transformer. In removing moisture from transformer oil, it is preferable to filter from one tank and discharge into another, although if necessary oil may be drawn from the bottom of a tank and discharged at the top. When there is much water in the oil, it should be allowed to settle and then be drawn off and treated separately.

Before the transformer is filled with oil, all accessories, such as valves, gages, thermometers, plugs, etc., must be fitted to the transformer and made oiltight. The threads should be filled in accordance with instructions from the manufacturer before putting them in place. The transformers must be thoroughly cleaned.

Metal hose must be used for filling instead of rubber hose, because oil dissolves the sulfur found in rubber and may cause trouble if the sulfur attacks the copper.

The oil used should be clean, dry oil of the grade recommended by the manufacturer.

The use of a filter press is recommended, and if one is not available, some precaution should be taken to strain the oil before putting it in the transformer.

After filling the transformer, the oil should be allowed to settle at least 12 h, and then samples taken from the bottom should again be tested before voltage is applied to the transformer.

It is very important that the surfaces of the oil when cold (25°C) be at the oil level indicated by the mark on the oil gage. When the transformer is not in service, the oil level must never be allowed to fall to a point at which it does not show in the gage. When it is necessary to replenish the oil, care must be taken to see that no moisture finds its way into the tank. As the oil heats up with the transformer under load, it will expand and rise to a higher level.

168. Putting into service. When the voltage is first applied to the transformer, it should, if possible, be brought up slowly to its full value so that any wrong connection or other trouble can be discovered before damage results. After full voltage has been applied successfully, the transformer should preferably be operated in that way for a short period without load. It should be kept under observation during this time and also during the first few hours that it delivers load. After 4 or 5 days' service it is advisable to test the oil again for moisture.

If the transformer is *water-cooled*, the main water valve should be opened as soon as the oil temperature reaches 45°C. If there are two or more sets of cooling coils in parallel, the valves of all sections should be adjusted for equal rates of flow. This can be estimated by feeling the weight of the discharge streams from the different sections. It can be determined best, however, by noting the difference in temperature between ingoing and outgoing water from each section. A careful measure should be taken of the total amount of water flowing through all sections, and the total rate of flow should be adjusted to a value not less than that specified.

169. Care. The idea that a transformer in service needs no attention may lead to serious results. Careful inspection is essential, and the directions given in this section should be followed.

In spite of all precautions, moisture may be absorbed by the transformer if it is of the open type, and during the first few days of operation it is well to inspect the inside of the manhole cover for moisture. If sufficient moisture has condensed to drip from the cover, the transformer should be taken out of service and dried. The oil should be tested and dried if necessary.

Closed-type transformers should have their oil tested at top and bottom after the first few days of operation to make sure that no moisture is being given off from the transformer into the oil.

Samples of oil from all transformers should be drawn and tested at least once every 6 months or according to the manufacturer's recommendations.

During the first month of service of transformers having a potential of 40,000 V or over, samples of oil should be drawn each week from the bottom of the tank and tested.

If at any time the oil should test below 17,500 V, it should be filtered.

Closed-type transformers when properly dried out and installed will need thorough inspection only infrequently, i.e., only when there are specific indications of trouble. Other types of transformers should be taken out of service periodically for a thorough inspection. The inside of the cover and the tank above the oil should be regularly inspected to see that they are clean, dry, and free from moisture and that the thermometer bulb is clean. If an appreciable amount of dirt or sediment is found inside the case, it is best to untank the transformer and remove the oil from the tank. The transformer and the tank should then be cleaned thoroughly and the oil filtered and tested. In cleaning, only dry cloths or waste should be used. Care should be taken to see that all nuts are tight and that all parts are in their proper places. If the transformer is water-cooled, the cooling coils should be cleaned thoroughly. The transformer and the oil should be replaced in the tank, and when the cover is put on, all cracks and openings should be closed tightly.

In the case of water-cooled transformers the rate of flow should be checked from time to time, and if it is found to have diminished, the cause should be looked for and remedied. The most frequent cause of clogging of cooling coils is the presence of air in the water, resulting in the formation of a scaly oxide.

170. Removing scale from cooling coils. Scale and sediment can be removed from a cooling coil without removing the coil from the tank. Both inlet and outlet pipes should be disconnected from the water system and temporarily piped to a point a

number of feet away from the transformer where the coil can be filled and emptied safely. Special care must be taken to prevent any acid, dirt, or water from getting into the transformer.

All the water should be blown or siphoned from the cooling coils, which should then be filled with a solution of hydrochloric (muriatic) acid (specific gravity, 1.10). Equal parts of commercially pure concentrated hydrochloric acid and water will give this specific gravity.

It may be found necessary to force this solution into the cooling coils. When this is done, one end of the coil should be partially restricted, so that the solution will not be wasted when the coil is full. After the solution has stood in the coil about 1 h, the coil should be flushed out thoroughly with clean water. If all the scale is not removed the first time, the operation should be repeated until the coil is clean, using new solution each time. The number of times it is necessary to repeat the process will depend on the condition of the coil, though ordinarily one or two fillings will be sufficient.

As the chemical action which takes place may be very violent and may often force acid, sediment, etc., from both ends of the coil, it is advisable to leave both ends partially open to prevent abnormal pressure.

171. Idle cooling coils. When a water-cooled transformer is idle and exposed to freezing temperatures, the water must be blown out of the cooling oil. In addition to blowing out the water, the cooling coils should be dried by forcing heated air through them. If it is not convenient to do this, the coil should be filled with transformer oil.

172. Stopping oil leaks (Allis-Chalmers Corporation). Oil leaks at gasketed joints can often be stopped by tightening the bolts, but if this is not effective, new gaskets must be installed. Special cork is available for this purpose. An adhesive such as shellac, Bakelite varnish, or other suitable material should be used.

Oil leaks at welds can be stopped by peening, soldering, or welding. Peening is often effective for small stains, and soldering alone or a combination of peening and soldering will usually be effective with larger leaks. For this purpose a hard solder having a high melting point (about 365°F, or 185°C) can be used.

Leaks which cannot be stopped by any of these methods must be welded. When transformer tanks are welded with the core and coils in place, the oil should not be removed.

173. General operation. An artificially cooled transformer should not be run continuously, even at no load, without the cooling medium. Therefore, it is essential to maintain a proper circulation in the cooling system.

If the water circulation in a water-cooled transformer is stopped for any reason, the load should be immediately reduced as much as possible and close watch kept of the temperature of the transformer. When the oil at the top of the tank reaches 80°C, the transformer must be cut out of service at once. This temperature should be recognized as an absolute limit and must not be exceeded. It should be held only during an emergency period of short duration.

Nearly all cooling water will in time cause scale or sediment to form in the cooling coil. The time required to clog up the cooling coils depends on the nature and amount of foreign matter in the water. The clogging materially decreases the efficiency of the coil and is indicated by a high oil temperature and a decreased flow of water, load condition and water pressure remaining the same.

174. Temperature. Thermometers should be read daily or more often. If, at rated load or less, the oil temperature reaches 80°C for an oil-immersed, self-cooled transformer

or an oil-immersed, forced-air-cooled transformer or 65°C for an oil-immersed, water-cooled transformer, it is advisable to check operating conditions.

Oil-immersed, self-cooled transformers or oil-immersed, forced-air-cooled transformers should not be operated for long periods of time at oil temperatures in excess of 80°C on account of the increased rate of deterioration of the insulations. The oil temperature in these transformers should not be allowed to exceed 90°C even for short periods of time.

If the oil temperature in oil-immersed, water-cooled transformers should exceed 65°C at rated load or less, the cooling coils need cleaning, an insufficient amount of cooling water is being used, or the temperature of the cooling water is higher than 25°C. The oil temperature in oil-immersed, water-cooled transformers should not be allowed to exceed 75°C even for short periods of time. A lower oil temperature is recommended for oil-immersed, water-cooled transformers on account of the greater difference between the temperatures of the windings and of the oil than in oil-immersed, self-cooled transformers.

Regardless of oil temperatures as indicated by thermometers, transformers should not be operated continuously at overloads in excess of 1 percent for each degree that the ambient is below 30°C for air and 25°C for water. In no case should the overload exceed 30 percent for self-cooled transformers and 25 percent for water-cooled transformers unless stipulated by the specification or contract. During overloads the transformer should be watched with special care.

Moisture may get into an open-type transformer owing to the fact that as oil is heated and cooled, it expands and contracts, causing air to be expelled from and drawn into the transformer. If the air which enters the transformer is at the same time cooled by contact with the cover to below its dew point, moisture will condense.

It is therefore a good practice to operate transformers at several degrees above air temperatures at all times. This will largely prevent condensation.

175. Recommendations relative to pole-mounted transformers. In pole mounting, convenient lugs or eyebolts are provided on the side of the case to which the rope lifting the transformer may be attached. It will be found convenient to fasten the hanger irons to the case before the transformer is raised to the crossarm. The transformer can then be raised up to and slightly above the crossarm, and the hooks on the hanger irons can then be made to engage the crossarm by lowering the transformer.

Pole-mounted transformers may be filled with oil either before or after mounting, as desired. It is sometimes necessary to add oil a short time after the transformer has been installed, owing to the fact that the insulation will absorb a certain amount of oil. It may be found necessary to replenish the oil from time to time during actual operation so that the normal oil level is kept constant. When the transformer oil is replenished, care should be taken that no moisture finds its way inside the case.

Great care should be exercised in putting on the cover. If the gasket is not properly in place or the cover not securely bolted to the case, moisture in the form of snow or rain may be driven into the transformer tank.

It is very important that the surface of the oil when cold (25°C) be at the oil level indicated on the inside of the tank or on the oil gage.

The following practice is recommended for the care of pole-mounted distribution transformers in service:

1. The oil level should be inspected once every year, and enough oil added to bring the level up to the mark inside the tank or on the oil gage.
2. Periodically the condition of the oil should be inspected, and if necessary the oil should be removed and replaced with good clean oil.
3. A periodic check of the load should be made to ensure that the transformer is not being overloaded.

176. Care and operation of transformers immersed in nonflammable, non-explosive liquids are, in general, the same as for those which are oil-immersed. The liquid may be dehydrated and filtered by means of special equipment designed for the purpose. Regular oil-filtering equipment cannot be used. The same great care with respect to moisture must be taken with these transformers as with the regular types. The transformer cover should not be taken off in a manhole.

Precautions should be taken in handling the liquid, as it has an irritating effect upon the skin, more so to some persons than to others. Especially the eyes, nose, and lips are affected when coming in contact with the liquid, and safety precautions must be observed when handling it.

When a person handles the liquid or works on a transformer filled with the liquid, an application of castor oil is recommended for the eyes and castor oil or cold cream for the nose and lips. In case the liquid comes in contact with the skin, the part should be thoroughly washed and cleaned.

A person should be careful about looking down into the transformer case, as the liquid gives off a gas at 80°C which causes irritation to eyelids, nostrils, and lips. When a person works around one of these transformers, the hands should be coated with grease and the eyes, nose, and lips protected as advised above.

THE NOISE PROBLEM

177. Transformer noise. Transformers create noise when energized. Actually, the noise is a characteristic hum that is generated by vibrations in the laminated core structure. This hum has a fundamental frequency about twice that of the applied frequency. Its relative loudness to the ear is a function of transformer design and construction characteristics, the ambient noise level of the area where it is located, and the manner in which it is installed. In some applications, such as factories, transformer noise is masked by the higher level of surrounding noise, and it poses no problem. In low-noise-level or quiet areas (hospitals, schools, libraries, apartment buildings, office interiors, churches, etc.), transformer hum can be quite objectionable and cause serious concern. In fact, this became such an application problem that manufacturers improved transformer design and construction so that they now provide low-noise-level standard units and give them a definite sound rating in decibels.

178. Selection. The decibel (dB), a unit of measure of sound level, has become a key factor in the selection of transformers in areas where noise considerations are important. The following table of average ambient noise levels in common installation areas is the starting point:

Area	Average sound level, dB
Average home	30–45
Retail store	45–55
Office area (without machines)	45–70
Office area (with machines)	50–75
Average factory	75–95

To facilitate comparison, transformer manufacturers publish the sound-level ratings in decibels of their units as determined by prescribed standard test procedures.

179. Typical ratings are listed in the following table:

Transformer rating, kVA	Average sound level, dB
0–9	40
10–50	45
51–150	50
151–300	55
301–500	60

The tables in Secs. 179 and 180 comprise a handy reference when audible-noise considerations are a factor in transformer applications. It is a simple matter of comparing transformer noise with ambient noise. Knowing the average ambient sound level of the installation area, one can select a transformer with the proper sound rating (from the table or manufacturer's data). A basic selection rule is to choose a transformer with a decibel rating lower than the average decibel level of the area in question. Otherwise, the installed results might be disappointing.

One point must be kept in mind. The sound level of a specific transformer, measured and recorded under established test conditions at the factory, may be quite different after the unit has been installed. Because of location, mechanical and/or acoustical conditions, and mounting methods, the audible sound level may be considerably higher. The ultimate objective must be to keep the job-installed noise level of the unit below the area ambient noise level.

180. Carefully check the sound-level ratings of standard transformers, particularly when applications are to be made in areas of medium and low ambient levels. If ambient noise will be considerably higher than the transformer decibel ratings in the table in Sec. 179, there should be no problem. If the spread between transformer and ambient noise is not so great, careful attention must be given to installation. Often the combination of a sufficiently quiet standard unit and recognized noise-attenuating mounting methods will resolve the problem. However, if audible noise in specific areas is especially critical, it may be necessary to order special quiet-type transformers from the factory.

181. Noise attenuation. The manner in which a transformer is located and installed has a definite bearing on the overall audible noise level in the area. If the unit is mounted in such a way that the noise vibrations are transmitted to a large vibrating surface such as sheet metal or wood, the sound can be amplified to a higher level than the unit's decibel rating. Similar amplification occurs when the unit is located in the corner of a room or close to large reflecting surfaces which act like a megaphone and give the transformer hum an acoustical level boost. In some cases of poor mounting, a special quiet-type transformer can produce a louder sound output than that of a carefully mounted standard transformer.

Some experts claim that improper location and installation can increase transformer sound levels from 10 to 20 dB. Such a condition might easily become intolerable because a 3-dB increase in sound level reportedly has the effect of almost doubling the sound volume as detected by the human ear.

182. There are a number of basic installation precautions and mounting techniques which, if carefully noted and followed, will minimize the audible sound level of energized transformers. Some of the major considerations are:

- 1. Proper Location.** This is the first consideration in a low-sound-level installation. To keep within or below prescribed area decibel limits:
 - a.** Keep the transformer as far as possible from the area in which its noise would be most objectionable.
 - b.** Avoid mounting the unit in a room corner up near the ceiling. Three-sided corners act as megaphones and amplify the sound.
 - c.** Avoid installations in narrow halls and corridors or in corners of stairwells. The transformer sound reflected from the walls can become additive to the primary sound of the transformer and cause additional decibel buildup.
 - d.** If feasible, experimental temporary operation and positioning of a free-standing transformer in a room or area will quickly indicate the best location and orientation of the unit.
 - e.** If necessary, cover the walls of the transformer room with acoustical dampening material (fiberglass, acoustical tile, or similar absorbent materials), to reduce propagation of transformer noise from the room to any adjacent areas. It should be noted, however, that such material has a major effect on the high harmonics of transformer noise but little, if any, effect on the fundamental hum. Although there are special sound-insulating materials available for the 120-cycle frequency range, their present form and cost make them impractical for the above application.
- 2. Transformer Mounting.** Mounting methods play an important role in control and reduction of the audible sound coming from the unit. The prime objective is to isolate the noise, that is, to prevent its mechanical transmission to the supporting structure and connected raceway system. This can be accomplished with one or a combination of the following installation techniques:
 - a.** Use solid mounting when the transformer can be secured to a heavy, solid mass which cannot vibrate audibly. Such would be reinforced concrete for floor or wall.
 - b.** For installation on a structural frame, wall, ceiling, or column, use the flexible-mounting technique, employing special vibration isolating pads called *flexible mounts* or vibration dampeners. There must be no solid-metal contact between the transformer and supporting surface; otherwise the vibration of the pads would be “short-circuited.” These external pads are furnished and installed by the installer. Internal vibration dampeners between the core-coil assembly and enclosure are or can be furnished by the manufacturer.
 - c.** Use flexible connections between the raceway system and the transformer enclosure to prevent transmission of noise vibrations from the enclosure to the raceway system, panels, and other mechanical parts. Flexible metal conduit and liquidtight flexible metal conduit are frequently used for these relatively short coupling sections.

POLE AND PLATFORM MOUNTING

183. Mounting distributing transformers. Units of the smaller capacities are supported either directly on the poles or on crossarms in accordance with instructions furnished by their manufacturers. Refer to Sec. 40 and Figs. 5.23 to 5.28 for details of transformer mounting lugs, adapter plates, crossarm hangers, etc.

With some of the newer transformer designs single transformers up to 167 kVA can be mounted satisfactorily directly on a pole (see Figs. 5.77, 5.78, and 5.80). Three 50-kVA transformers of the proper design can be safely supported from the crossarm on a single pole. In crossarm mounting of transformers Gear and Williams recommend that for transformers of capacities larger than 20 kVA double crossarms should be used at the top, as the top arms carry most of the weight. “Where the installation consists of three 15-kVA or



FIGURE 5.77 Overhead-type conventional 25-kVA transformer with two high-voltage cover bushings. [Cooper Power Systems]



FIGURE 5.78 Overhead-type single-phase conventional transformer with two high-voltage sidewall bushings. [Cooper Power Systems]

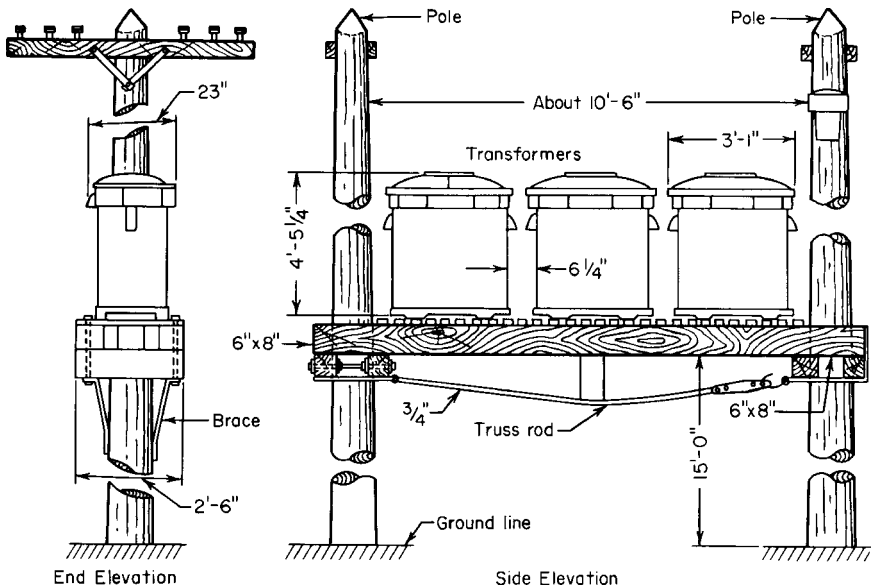


FIGURE 5.79 Platform for large transformers.



FIGURE 5.80 Pole-mounted 30-kVA distribution transformer protected with conventional surge arrester and separate current-limiting fuse. [Cooper Power Systems]

larger transformers it is advisable to use a larger-sized crossarm than the standard. An arm having a cross section of 4 by 5½ in has been found ample for installations aggregating 90 to 100 kVA.” Gear and Williams state: “Where a large amount of power is needed which requires a number of 50-kVA units which cannot be conveniently installed inside the building, they can be safely and conveniently installed on a platform between two or more poles,” as shown in Fig. 5.79. A platform for supporting three 50-kVA units can be built by bolting in gains, between two poles, two 3- by 10-in planks and nailing to them a floor of 2-in plank. Transformers have standardized bracket provisions to assure consistent mounting practices, as illustrated in Fig. 5.23 to 5.28.”

184. Methods of crossarm and platform mounting of transformers.

The methods of mounting transformers described and illustrated in the following paragraphs were taken from *Report of the Committee on Overhead Line Construction*

of the Pennsylvania Electric Association. The practices outlined were those followed by the Allegheny County Light Co. The methods provide ample clearances for persons climbing the poles and assure that the wiring will remain in place and not give trouble from short circuits. Platforms are recommended for supporting the larger transformers because of the accessibility for repairs or replacements that they provide.

185. Crossarm method of mounting single transformers of from 1- to 4-kVA capacity. The transformer should be supported by the iron hangers furnished by the manufacturer and hung at the central point on the crossarm and not out on the arm away from the pole. At the bottom of the hanger a section of an arm, not longer than the diameter of the pole, should be fastened to the pole with two lag bolts. The transformer can be hung on the bottom arm, if one is in place and supports lines, provided this arm is in the second gain or a lower one. The primary mains feeding the transformer should be on an upper arm.

In installations in which the transformers are more than 4 ft (1.2 m) below the arm supporting the primary mains, it is advisable to mount Western Union pins horizontally in the line arms. On these pins the primary wires can be tied to maintain them rigid. Iron pins should also be mounted in the transformer arm to take the stress imposed on the primary conductors by the fuse terminal screws.

186. Method of mounting transformers of from 5- to 10-kVA capacity (Fig. 5.81). The same rules should be followed as outlined in the preceding paragraph with the following additions. The transformers, on account of their increased weight and dimensions, should not be hung on a line arm. A specially placed arm should be used underneath existing arms and other apparatus. In addition to using the regular hangers which accompany transformers, a pair of iron braces 24 by 2 by ¼ in (610 by 51 by 6.35 mm)

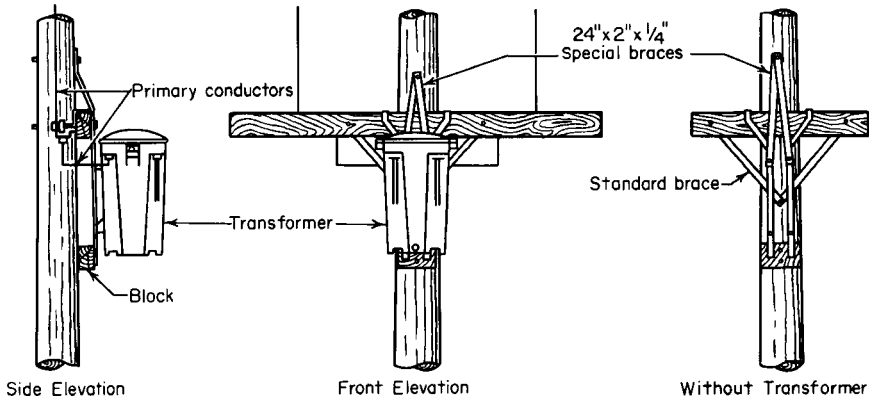


FIGURE 5.81 Method of supporting a 5- to 10-kVA transformer.

should be placed between the transformer lugs and the hanger with the hanger bolts passing through one of the holes in the braces. These braces are to be run in an upward direction and fastened to the pole with a standard through bolt (see Fig. 5.81). If the arm weakens or entirely rots away, these two braces are of sufficient strength to support the transformer and permit crossarm replacement.

187. Method of mounting two 5-kVA or two 10-kVA transformers (Fig. 5.82). Construction similar to that described above should be used, except that a standard arm on which the hanger irons can rest should be placed at the bottom. Also, only one special brace (24 by 2 by $\frac{1}{4}$ in) per transformer should be placed between the lug and hanger iron next to the pole.

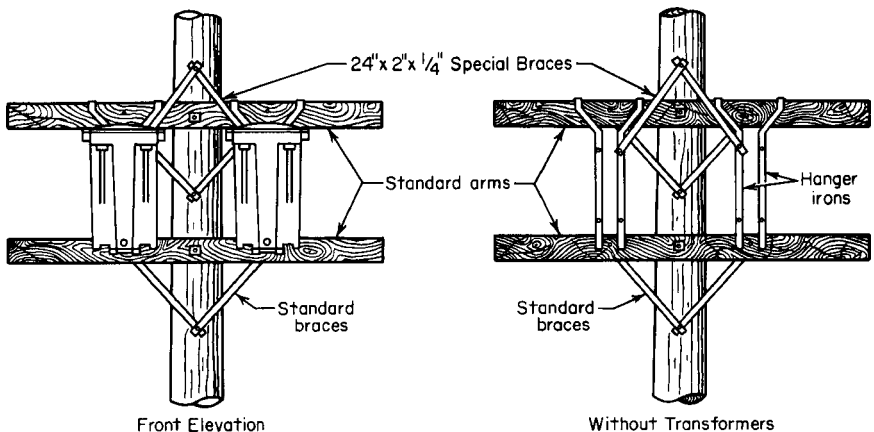


FIGURE 5.82 Method of supporting two 5-kVA or two 10-kVA transformers.

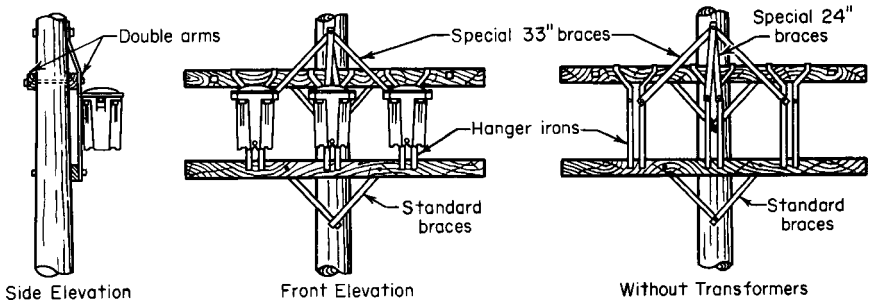


FIGURE 5.83 Method of supporting three 5-kVA transformers.

188. Method of mounting three 5-kVA transformers (Fig. 5.83). The construction should be similar to that outlined in the preceding paragraphs, except that the special braces supporting the outside transformers are 33 in (838 mm) between centers of holes. It is also advisable to place an additional crossarm on the rear side of the pole. This arm braces the front arm and provides a place where fuse blocks can be mounted.

189. Method of mounting three 10-kVA transformers (Figs. 5.84 and 5.85). The construction is similar to that for three 5-kVA transformers with the following addition. The top arm supporting the transformers should be reinforced over its entire length with a piece of 5- by 3-in (127- by 76-mm) angle iron, which should be placed with the 3-in (76-mm) leg on the top of the arm.

190. Method of mounting two 20-kVA, two 30-kVA, or one 50-kVA transformer (Fig. 5.86). For transformers of these capacities a single-pole platform is recommended. The beams for the platform should be 4-in (101-mm) by 6-lb (2.7-kg) channel iron 8 ft (2.4 m) long. The braces used are a single piece of angle iron 3 by 3 by $\frac{3}{8}$ in (76.2 by 76.2 by 9.5 mm) bent in a V shape. Pine or oak planks 2 by 12 by 24 in (51 by 305 by 610 mm) are to be laid across the channel irons for the transformers to rest upon. The wooden platform is to be held together by a 2- by 2-in (51- by 51-mm) strip of wood running on the outside of the channel iron, to which the planks are secured by 4-in wood screws or 20-penny nails.

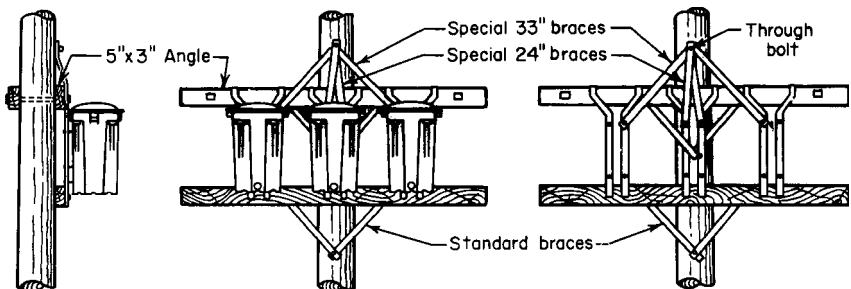


FIGURE 5.84 Method of supporting three 10-kVA transformers.

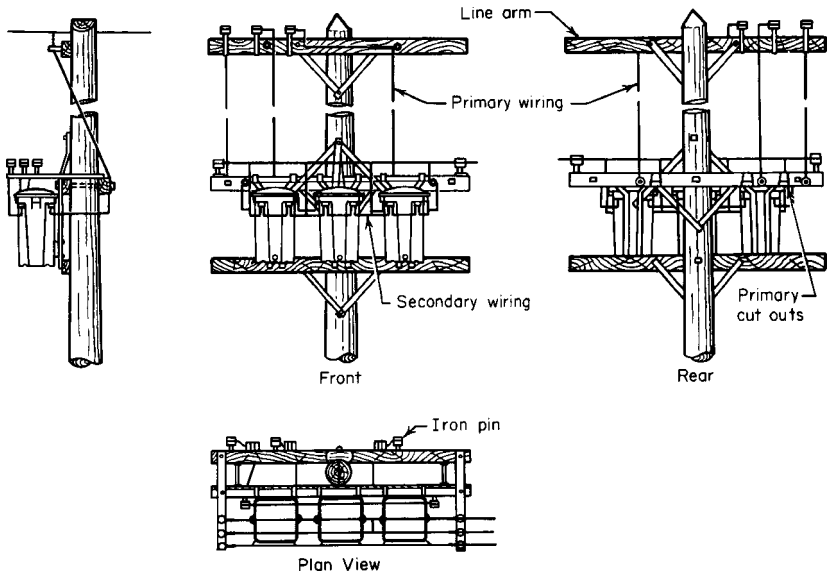


FIGURE 5.85 Wiring for three 5-kVA or for three 10-kVA transformers.

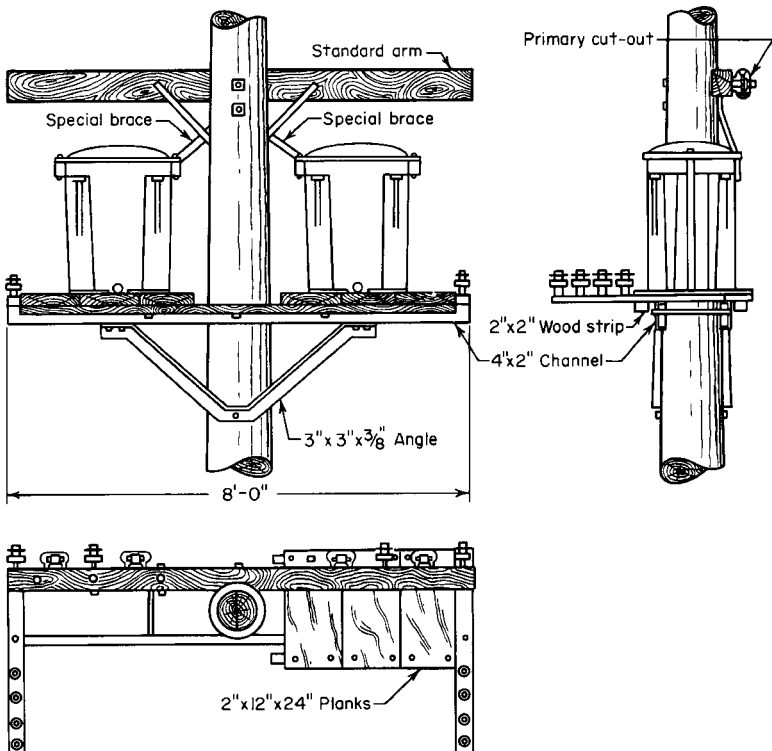


FIGURE 5.86 Single-pole platform for two 20-kVA, two 30-kVA, or one 50-kVA transformer.

191. Method of mounting three 20-kVA, three 30-kVA, two 50-kVA, or three 50-kVA transformers (Fig. 5.87). The poles should be spaced 10 ft (3 m) apart on centers. The main channel irons are 6 in (152 mm) by 10 lb (4.5 kg) by 10 ft 6 in (3.2 m) overall. Braces are of 3-in (76-mm) by 4-lb (1.8-kg) channel.

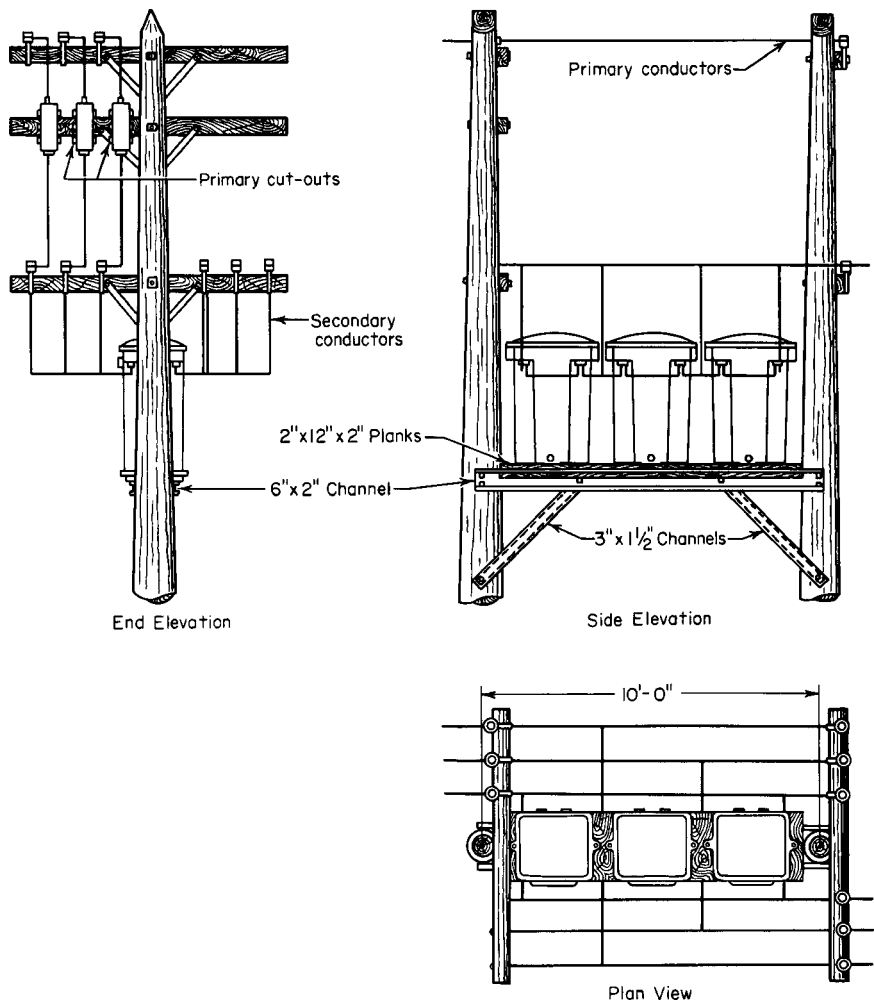


FIGURE 5.87 Double-pole platform for three 20-kVA, three 30-kVA, two 50-kVA, or three 50-kVA transformers.

SATURABLE-CORE REACTOR

192. Saturable-core reactor. In many control circuits it is desirable to be able to control the value of the inductive reactance. This can often be accomplished advantageously by means of a device called a *saturable-core reactor*.

A saturable-core reactor consists of a magnetic core associated with dc and ac windings. A common form of construction is shown in Fig. 5.88.

When there is no current in the dc winding, the inductive reactance of the ac winding will be high, since there will be a high rate of change of flux with current. If sufficient direct current is passed through the dc winding to saturate the magnetic core, then the changing current in the ac winding will produce only very small changes in the flux of the core, and the inductive reactance of the ac winding will be very small. If the current of the dc winding is adjusted, the inductive reactance of the ac winding can be varied smoothly from practically zero to its maximum value. It might appear that a saturable-core reactor could be constructed with one ac and one dc winding on a common core. This simple construction would not be satisfactory, since the variations of the flux produced by the alternating flux would induce large voltages of changing magnitude in the dc winding. To be satisfactory, the reactor must be so constructed that the flux linked with the dc winding is not affected by the alternating current in the ac winding. This can be accomplished by the construction of Fig. 5.88.

The currents in the two ac coils tend to produce flux in opposite directions through the central core on which the dc winding is wound. Therefore, the currents in the ac windings neutralize each other with respect to the production of flux linking with the dc winding.

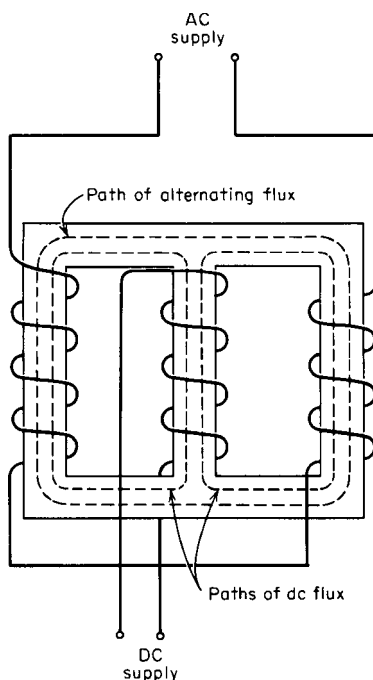


FIGURE 5.88 Saturable-core reactor.

193. Transformer losses and the effect of harmonic currents on these losses (ANSI/IEEE C57.110-1986 Appendix). Power transformers with ratings up to 50 MVA are almost always of core form construction. High-voltage and low-voltage windings are concentric cylinders surrounding a vertical core leg of rectangular or circular cross section. The vertical core legs and the horizontal core yoke members that constitute the magnetic circuit are made up of thin steel laminations. In the top and bottom yoke regions there are usually external clamping structures (clamps) that may be made of either metallic or insulating materials. Oil-immersed transformers may be either free-standing or surrounded by a metal enclosure.

If direct current is passed through the transformer winding conductors, a simple I^2R loss will be produced, where R is the dc resistance of the winding. However, if an alternating current (ac) of the same magnitude is passed through the winding conductors, an additional loss is produced. This can be explained as follows.

When transformer windings carry the ac current, each conductor is surrounded by an alternating electromagnetic field whose strength is directly proportional to the magnitude of the current. Each metallic conductor linked by the electromagnetic flux experiences an

internal induced voltage that causes eddy currents to flow in that conductor. The eddy currents produce losses that are dissipated in the form of heat, producing an additional temperature rise in the conductor over its surroundings. This type of extra loss beyond the I^2R loss is frequently referred to as *stray loss*. Although all of the extra loss is an eddy-current loss, the portion in the winding is usually called *eddy-current loss* (P_{EC}), and the portion outside the windings is called *other stray loss* (P_{OSL}).

Eddy-current loss in winding conductors is proportional to the square of the electromagnetic field strength (or the square of the load current that produces the field) and to the square of the ac frequency. Other stray losses are generally proportional to current raised to a power slightly less than 2, because the depth of penetration of the electromagnetic flux into the other metallic parts (usually steel) varies with the field strength. (For very high frequency harmonic currents the electromagnetic flux may not totally penetrate winding conductors either, but it is conservative to assume that the eddy-current loss, P_{EC} , is proportional to the square of the harmonic current magnitude.)

When a transformer is subjected to a load current having significant harmonic content, the extra eddy-current loss in winding conductors and in other metallic parts will elevate the temperature of those parts above their normal operating temperature under rated conditions. Experience has shown that the winding conductors are the more critical parts for determination of acceptable operating temperature, so that objective should be to prevent the losses in winding conductors under harmonic load conditions from exceeding the losses under rated 60 Hz operating conditions.

The inner winding of a core form transformer typically has higher eddy-current loss than the outer winding, because the electromagnetic flux has a greater tendency to fringe inwardly toward the low reluctance path of the core leg. Furthermore, the highest local eddy-current loss usually occurs in the end conductors of the inside winding. This is a result of the fact that this is the region of highest radial electromagnetic flux density (closest spacing of the radially directed flux lines) and the radial flux passes through the width dimension of the rectangular winding conductor. Since the width dimension of a conductor is typically 3 to 5 times the thickness dimension, the thickness dimension and eddy-current loss is produced in the end conductors.

Harmonic currents flowing through transformer leakage impedance and through system impedance may also produce some small harmonic distortion in the voltage waveform at the transformer terminals. Such voltage harmonics also cause extra harmonic losses in the transformer core. However, operating experience has not indicated that core temperature rise will ever be the limiting parameter for determination of safe magnitudes of nonsinusoidal load currents.

194. Underwriters Laboratories transformer ratings.³ A K-factor rating is optionally applied to a transformer indicating its suitability for use with loads that draws nonsinusoidal currents. A transformer intended for use with loads drawing nonsinusoidal currents may be marked "Suitable for nonsinusoidal current load with K-factor not to exceed _____." The blank shall be filled in with K-factor rating of 4, 9, 13, 20, 30, 40, or 50.

(The following analysis is adapted from *Practical Electrical Wiring*, 20th edition, © Park Publishing, 2008, all rights reserved.) The K factor required is based on an analysis of how much current is flowing at each harmonic frequency. Look at the per-unit rms current at each given harmonic h and square it, and then multiply each result by the square of the harmonic order involved. The K factor is the summation of those results over the range of applicable harmonic orders. For example, suppose for a unit 1 A rms load, a harmonic analysis shows that it

³ This material is reproduced with the permission of Underwriters Laboratories, Inc.®, Copyright ©1995.

comprises 0.91 A at 60 Hz (first order), 0.34 A at 180 Hz (third order), 0.22 A at 300 Hz (fifth order), 0.11 A at 420 Hz (seventh order), and 0.05 A at 540 Hz (ninth order). The even order harmonics generally cancel. Remember that these currents are not in phase, and do not add arithmetically (hence seeming to add to more than 1). Square each of these numbers, multiply each one by the square of the harmonic order (1, 9, 25, 49, 81, respectively), and add the results together. The result (3.97) points to a K-4 rating for this application.

195. Measurement of harmonics. The measurement of nonsinusoidal voltages and currents may require equipment different from the conventional meters used to measure sinusoidal waveforms. Many voltage and current meters respond only to the peak value of a waveform, and indicate a value that is equivalent to the rms value of a pure sine wave. For a sinusoidal waveform, the rms value will be 0.707 times the peak value. Meters of this type are known as *average responding meters* and will only give a true reading if the waveform being measured is sinusoidal. Both analog and digital meters may be average responding instruments. Voltages and currents which are nonsinusoidal, such as those with harmonic frequencies, cannot be accurately measured using an average responding meter. Only a meter (see Fig. 5.89 for an example) that measures “true rms” can be used to correctly measure the rms value of a nonsinusoidal waveform.

When measuring a nonsinusoidal waveform, it is often desirable to also know the magnitude of each frequency present. To accomplish this, a *harmonic analyzer* is necessary. An *analog harmonic analyzer* is a voltage measurement instrument that uses selective filtering to tune out all frequencies, except the one being analyzed.

With the widespread use of microprocessors, and recent advances in digital data acquisition, the analog analyzers have been superseded by analyzers capable of digital harmonic analysis. The most popular harmonic analyzers today use a Fast Fourier Transform (FFT) technique to break down a complex waveform into its individual frequency components. The FFT is a useful tool for quickly performing a Fourier analysis on a block of sampled data. FFT-based harmonic analyzers also have the ability to display the phase as well as magnitude of each frequency present. Current transformers and clamp-on ammeters easily adapt to digital harmonic analyzers, making current as well as voltage harmonic measurements a simple procedure.

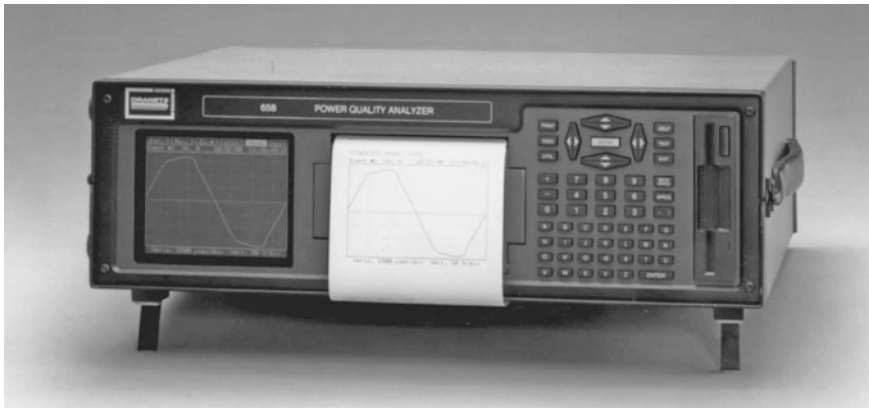


FIGURE 5.89 Analysis of power quality with a Model 658 digitizing oscilloscope, true RMS ammeter, true RMS voltmeter, harmonic distortion analyzer, power disturbance monitor, and strip chart recorder in one compact instrument. [Dranetz Technologies, Inc.]

This page intentionally left blank

DIVISION 6

SOLID-STATE DEVICES AND CIRCUITS

Fundamentals of Electronics	6.1
Discrete Solid-State Components	6.4
Integrated Circuits	6.39
Integrated-Circuit Logic Functions	6.46
Microcomputers	6.68
Electronic Memories	6.74
Product Reliability	6.85

FUNDAMENTALS OF ELECTRONICS

1. From vacuum tubes to transistors. The *science of electronics* was founded on the ability of the electron tube (most importantly, the vacuum tube) to generate, amplify, and control an electric signal to accomplish a wide variety of functions. During its half-century dominance of the electronics art, the vacuum tube fostered the invention of radio, television, and radar, of factory automation and computers, and indeed of all the phenomena that we associate with electronics even today. Yet, with the invention of the transistor by Bell Laboratories in 1948, the tube was headed for extinction. Today, except for a few special functions, it no longer occupies an important place in electronic technology.

In place of the electron tube, the transistor has emerged as the cornerstone of modern electronics. Based on the theory of electron conduction in a solid crystalline material rather than in a vacuum or a gaseous environment, the transistor not only can perform virtually all the functions formerly associated with the tube, it can do them faster, more cheaply, and more reliably. Moreover, it occupies an infinitesimally small amount of space and, unlike the tube, requires no power-wasting filament that ties large equipment to the commercial power lines.

The dramatic effects of these advantages are most readily evident in the field of computers. The most advanced computer in the vacuum-tube era costs millions of preinflation dollars; consisted of an entire roomful of equipment utilizing tens of thousands of vacuum tubes; required a power plant just to heat the filaments and an air-conditioning plant to keep the computer cool; was difficult to keep in operation owing to vacuum-tube failures; and had less capability than today's simple calculator, which fits into a vest pocket, requires only an occasional battery replacement, and is thrown away at the first sign of trouble because of its low replacement cost.

But while the transistor is the cornerstone of today's electronics technology, it is not, in itself, the means for accomplishing the exponential expansion of electronic-capabilities

since the mid-1970s. That distinction is reserved for the invention and development of integrated circuits.

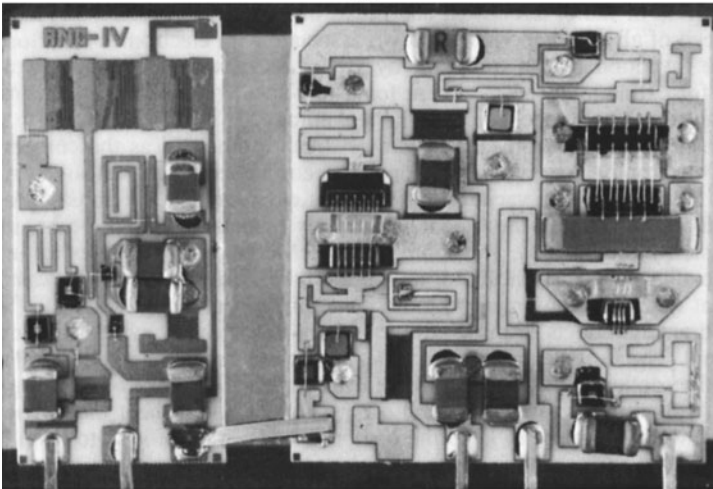
2. Integrated circuits. There are two types of integrated circuits (IC) in use today: monolithic and hybrid.

A monolithic IC consists of a semiconductor substrate, called a *chip* or *die*, in which all necessary active and passive components are formed and interconnected to perform a desired circuit function (Fig. 6.1*a*). The chip is then encased in a suitable package, which may subsequently be interconnected on a printed-circuit board with other monolithic ICs and/or discrete components to form circuits of greater scope and complexity.

A hybrid IC (Fig. 6.1*b*) consists of an insulating substrate with deposited passive elements (resistors and capacitors) and metallized interconnected patterns, to which active elements are



(a)



(b)

FIGURE 6.1 (a) A modern monolithic microprocessor integrated circuit contains upward of 70,000 transistors on a tiny silicon die. (b) An example of a hybrid circuit utilizes power transistor chips and integrated circuits with deposited passive elements on an insulating substrate in a radio-frequency amplifier module. [Motorola Inc.]

added in uncased chip form either by wire bonding or by other die-attachment techniques. The active elements may be discrete devices or monolithic ICs. Hybrid circuits can be considerably smaller than circuits of equivalent complexity made by interconnecting the same components in encapsulated form on a more conventional printed-circuit board. However, they do not have most of the major attributes of monolithic ICs and are utilized principally where size reduction is required but where the required performance cannot be built into a monolithic structure.

3. Characteristics of monolithic integrated circuits

Size and Weight Reduction. Monolithic integrated circuits consist of a number of transistors and associated resistors fabricated and interconnected within the same monolithic piece of solid semiconductor material. Since these functional elements are fashioned by a slight change in the atomic structure of the material rather than by the addition of actual physical elements, the dimensions of these elements are so small that it is possible today to fabricate and interconnect tens of thousands of individual components within a piece of material no larger than the fingernail of a small child. And researchers are already anticipating circuits of million-transistor complexity within a single monolithic building block of similar dimensions.

Obviously, it is the size and weight reduction of integrated circuits, compared with equivalent vacuum-tube circuits (or even those made from individual discrete transistors), that has put the power of a full-scale computer into a pocket or purse. But size and weight reduction have long ceased to be the principal objectives on integrated circuits. Though vitally important in certain applications such as medical electronics and space apparatus, the physical characteristics of equipment are dictated more by the dimensions of the peripherals—the display and keyboard of calculators and computers, the loudspeakers and picture tubes of radio and TV, etc.—than they are by the associated electronics. Indeed, the size and weight advantages of integrated circuits would be of limited importance if they were not paced by corresponding reductions in cost and the improvements in component reliability and circuit performance.

Cost Reduction. The cost of the active elements associated with transistors, particularly transistors within complex integrated circuits, borders on the insignificant. This is so because semiconductor devices are made by batch processing, in which individual manufacturing processes operate not on a single device but simultaneously on a batch of devices ranging from hundreds of integrated circuits to thousands of discrete transistors. The basic cost of such devices therefore reflects primarily the packaging, testing, and marketing such devices rather than the raw materials or manufacture of the basic element. As a result, discrete small-signal transistors can be purchased for only pennies (in large quantities), and complex ICs housing up to thousands of fully interconnected transistors are available for only a few dollars. Each transistor serves the function of an erstwhile vacuum tube, whose individual cost equaled or exceeded that of many of today's complex ICs. It is clear therefore that an attempt to duplicate the functions of today's very-large-scale integrated circuits (VLSI circuits) before the era of semiconductor technology would have priced the resulting equipment out of the market.

Improved Reliability. Semiconductor electronics is based on the movement of free electrical particles (electrons and holes) within a loop of solid materials. Once such particles have been introduced into the material during manufacture, their movement can be controlled but the particles themselves cannot be destroyed. The basic semiconductor device therefore has no inherent wear-out mechanism. While the packaging of semiconductor devices does introduce some potential failure modes and while such devices can be damaged

through overvoltage and excessive heat, modern manufacturing technology and circuit design techniques have reduced such failures almost to the vanishing point. It is this attribute of semiconductors that makes possible today's highly complex electronic equipment utilizing millions of transistors.

Improved Performance. While transistors have replaced vacuum tubes in most applications, there are a few application areas in which tubes still dominate. Primarily, these are the areas of very high power and very high (microwave) frequencies. Since ICs are based on transistor technology, it is clear that they have not yet penetrated these applications to a significant degree. In all other applications, particularly those involving complex circuitry utilizing many transistors, the IC not only represents the most cost-effective component but also provides the best performance.

This performance advantage is the result of the close spacing between transistors within the monolithic substrate of the IC, which greatly reduces signal-propagation delay within a large system. Propagation-delay time is composed of two constituents: (1) the time required for a circuit stage (transistor) to perform its operation and (2) the time required for the signal to travel to the succeeding stage or stages. In the early days of transistors, the reaction time of the transistor was relatively slow so that interstage travel time was not a significant factor in total propagation delay. Today's transistors, however, can operate at subnanosecond speeds. Thus, even if we assume that a signal travels along its conductive path between transistors with the speed of light (approximately 1 ft/ns), signal travel time through large systems composed of discrete transistors can become a significant part of the total delay. Within ICs, the spacing between transistors can be held to a few micrometers, eliminating travel time as a major factor of overall operating speed for most electronic applications.

DISCRETE SOLID-STATE COMPONENTS

Integrated circuits have penetrated all digital electronic equipment. They are still limited, however, in the amount of power they can produce, and their uses in linear applications have not yet been fully exploited. Discrete solid-state components therefore are still very much in evidence, and there is no indication that their use rate will diminish significantly in the immediate future.

Among the most prevalent discrete components are transistors themselves (both signal transistors and power transistors), as well as zener diodes and rectifiers, thyristors, and a growing family of transducers such as light-, temperature-, and pressure-activated devices. Most of the nontransistor components had counterparts in the electron-tube era, but they are subject to the same benefits of smaller size, improved performance, greater reliability, and lower cost when converted to the solid state.

4. Fundamentals of solid-state devices. Solid-state devices, whether discrete or IC, are fabricated from semiconductor materials, so named because their conductivity lies somewhere between that of a conductive material and that of an insulator. While a variety of semiconductor materials (germanium, selenium, copper oxide, etc.) have been used to fabricate solid-state devices in the past and still others (notably gallium arsenide) are coming into limited use for special purposes, the most common material in current use is silicon. This material is used for both discrete components and integrated circuits. A basic understanding of its properties therefore is essential to an understanding of today's solid-state devices.

The Silicon Atom. From an electrical standpoint, the silicon atom (Fig. 6.2) consists of a nucleus containing 14 protons (each with an electrical charge of +1) and three orbital rings

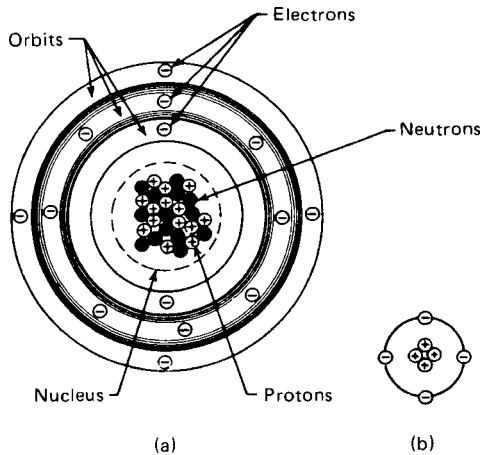


FIGURE 6.2 (a) A diagram of a silicon atom shows a nucleus of 14 protons and 14 neutrons and three orbital rings containing a total of 14 electrons. (b) The electrical equivalent of the silicon atom.

housing a total of 14 electrons (each with a charge of -1), which electrically neutralize the protons of the nucleus. The outermost ring contains four electrons. Since the electrons in the two inner rings are tightly bound to the nucleus, they contribute nothing to the electrical properties of the atom and therefore can be disregarded. The four outer-ring electrons, however, are loosely bound to their neutralizing protons and can easily be dislodged from their orbits by some external force.

The Crystal Structure. The atoms of silicon tend to arrange themselves into a crystal structure. With proper processing, the material can be of single-crystal form, in which all the atoms are arranged in a continuous, well-ordered lattice (Fig. 6.3), whereby each of the four outer-ring electrons associated with one atom forms a bond with one of the

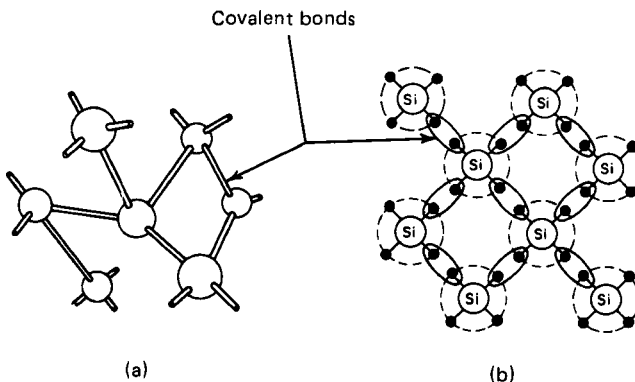


FIGURE 6.3 Symbolic diagram (a) and schematic representation (b) of a pure silicon lattice structure. Covalent bonds between adjacent atoms firmly fix all electrons in their respective orbits, rendering the structure nonconductive at very low temperatures.

of a neighboring atom so that every electron of every atom is tightly bound within the crystal lattice. Thus, while the four outer electrons of an individual silicon atom can easily be removed by an external force, once they have been bound in the lattice, they are very difficult to dislodge. Intrinsic (pure) single-crystal silicon therefore behaves like an insulator at very low temperatures.

Electrons and Holes. As temperature is raised, however, thermal energy is imparted to the lattice structure, causing it to vibrate. When this occurs, electrons at random points throughout the crystal gain enough energy to break their bond and become free to wander through the lattice. Wherever such a bond is broken, a hole is left in the lattice. And because a hole is caused by an electron leaving the orbit of a particular atom, that atom becomes a positive ion with an electrical charge of $+1$.

At any given temperature above absolute zero, there will be a given number of electrons that gain enough energy to break the covalent bond. The higher the temperature, the greater the number of broken bonds; hence the greater the number of electron-hole pairs scattered throughout the crystal. These electrons and holes can be regarded as charge carriers which are free to move through the crystal lattice. The electrons represent negative charges; the holes, positive charges.

Once liberated from its covalent bond, an electron moves at random through the lattice until it happens to land in the vicinity of a hole in the structure. Now the hole, having a positive charge, will have an attracting influence on the negative electron, which, when sufficiently close, will jump into the hole. As a result, both the hole and the electron will disappear as free charges within the crystal.

A hole, too, is free to move through the crystal lattice. When a hole is formed, it will affect an attracting force on electrons in covalent bonds in the immediate vicinity because of its positive charge. Since, in a vibrating lattice, these bonds are none too tight, the energy gained by an electron in an adjacent bond, coupled with the attracting force of the hole, will cause the electron to break its bond in order to fill the hole. Note that the hole itself has not disappeared; it has merely moved to an adjacent atom. In this way, the hole, too, can move at random throughout the crystal. Not until the hole meets a free electron recombination will take place and cause both hole and electron to disappear as free charges.

For every hole-electron pair that is generated at one point in the lattice, there will be recombination of a free hole and electron at another point; and for every recombination, another hole-electron pair will be generated elsewhere. At any given temperature, therefore, there will always be a predictable number of carriers, both positive and negative, within the lattice, and the higher the temperature, the greater the number of free charges in the material. But it is interesting to compare the number of free charges with the total number of atoms in the silicon material. Intrinsic silicon has 5×10^{22} atoms per cubic centimeter. At room temperature (25°C), approximately 1.5×10^{10} of these atoms are ionized. Therefore, there is only one hole and one free electron for approximately every 3 trillion atoms in the crystal structure.

As the temperature is increased, the number of free carriers increases proportionally and the silicon's electrical resistivity is decreased proportionally.

5. Impurity concentrations in silicon. The only major electrical characteristic of intrinsic silicon is a temperature-sensitive resistance which (except, perhaps, as a temperature-sensing element) is undesirable in any actual use. To utilize the properties of a semiconductor material, it is necessary to introduce additional charge carriers deliberately into the intrinsic semiconductor lattice. This is done by introducing impurity atoms into the structure. If the number of charge carriers introduced by these impurity atoms is much

larger than the number of charge carriers resulting from thermal agitation of the lattice, the temperature sensitivity of the material is reduced to practical limits.

Two types of impurity atoms are of primary importance: those with three electrons in their outer rings, such as boron; and those with five electrons in their outer rings, such as phosphorus.

P-Type Material. If an atom of boron is substituted for a silicon atom in the lattice structure, the electrons of the boron atom can form covalent bonds with only three adjacent silicon atoms. Since the fourth silicon atom of the crystal structure is not symmetrically bound in the lattice, a defect exists in the lattice structure. This defect takes on the characteristics of a hole. This hole, by virtue of capturing an electron from another adjacent silicon atom, will move through the lattice in the form of a positive charge.

Impurity atoms having three electrons in the outer ring are called *acceptor atoms*, because such impurities will accept electrons from the silicon lattice. Silicon doped with acceptor atoms is called *p-type silicon*, indicating that the resulting charge carriers are holes having a positive charge.

Although the thermally generated holes in heavily doped *p-type* material have a negligible effect on the characteristics of the material, their number being small in comparison with the impurity-caused holes at normal temperatures, the thermally generated electrons do play an important part in semiconductor devices. Because their number is small compared with the number of holes, free electrons in *p-type* materials are called *minority carriers*. The holes, for obvious reasons, are called *majority carriers*.

Now if an electrical force, e.g., a battery, is applied across a *p-type* material, the holes will appear to drift toward the negative terminal of the battery and the free electrons will drift toward the positive terminal. Because the number of majority carriers predominates, conduction in doped semiconductor material is majority-carrier conduction or, in this case, *p-type* conduction.

N-Type Material. If an intrinsic piece of silicon is doped with an impurity atom having five electrons in its outer ring, only four of the impurity atom's electrons can form covalent bonds with the silicon atoms; the fifth, being very loosely bound in the lattice, is free to detach itself from the impurity atom and wander through the lattice as a negative charge. In this case, however, the free electron is not balanced by a corresponding hole because the crystal lattice is unbroken. Under this condition, the material has an excess of free negative-charge carriers and is called *n-type* material. Still, the material remains electrically neutral because the detached electron leaves a positive phosphorus ion in its wake. Impurity atoms that produce *n-type* material are called *donor atoms*.

The *n-type* material behaves very similarly to the *p-type* material just described. The majority carriers in this case are, of course, electrons. The minority carriers are holes generated by thermal excitation.

6. *P-n junctions and their characteristics.* When two oppositely doped materials are fused to form a *p-n* junction, free electrons from the *n* side and free holes from the *p* side of the junction migrate across the junction to combine with the oppositely charged carriers in the regions near the junction. Since both materials are originally electrically neutral, this migration and subsequent combination create a small electrical potential across the junction, the *p* side becoming slightly negative and the *n* side becoming slightly positive (Fig. 6.4a). This "space charge" in the vicinity of the junction quickly reaches an equilibrium condition in which the acquired negative charge on the *p* side prohibits any further migration of electrons from the *n* region and the acquired positive charge on the *n* side repels any further incursion of holes from the *p* side.

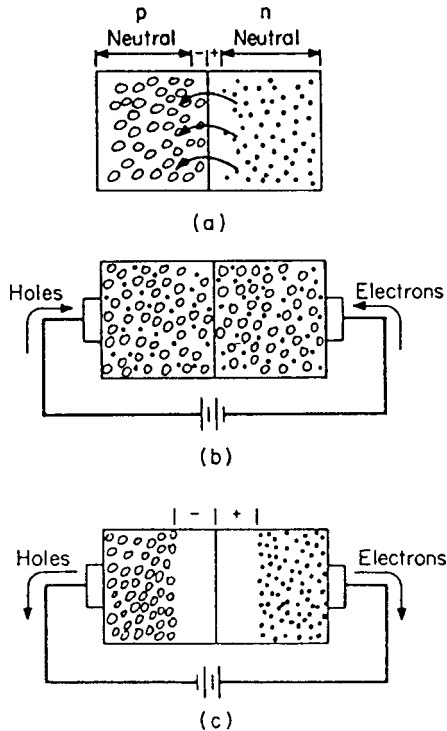


FIGURE 6.4 Junction characteristics. (a) An unbiased junction. (b) A forward-biased junction permits nearly unrestricted current flow. (c). A reverse-biased junction represents high resistance to majority carriers.

When an external voltage is applied across the junction, the equilibrium condition is altered. With the voltage connected as shown by the battery in Fig. 6.4*b* (positive to the *p* side, negative to the *n* side), some of the excess electrons that originally migrated from *n* to *p* are drawn out of the material and the voltage barrier at the junction is reduced. As a result, majority carriers from both sides can move freely and continuously across the junction. Under this condition, the junction is *forward-biased* and represents little resistance to the flow of current.

Conversely, if the potential of the battery is reversed (negative to the *p* side, positive to the *n* side; Fig. 6.4*c*), electrons from the battery enter the *p* region and fill in more of the holes in that region. This increases the potential across the junction and prevents the migration of majority carriers across the junction. The junction is then *reverse-biased* and represents a very high resistance to the flow of current.

But while a reverse-biased junction is a high resistance to majority carriers, it is a very low resistance to minority carriers. These can cross the junction quite easily and form a *leakage current*. Since the number of minority carriers in doped semiconductor material is quite small, the leakage current is correspondingly small.

Rectification. From the foregoing, it is evident that a semiconductor junction has the properties of a rectifier, permitting a current flow when biased in one direction and prohibiting a

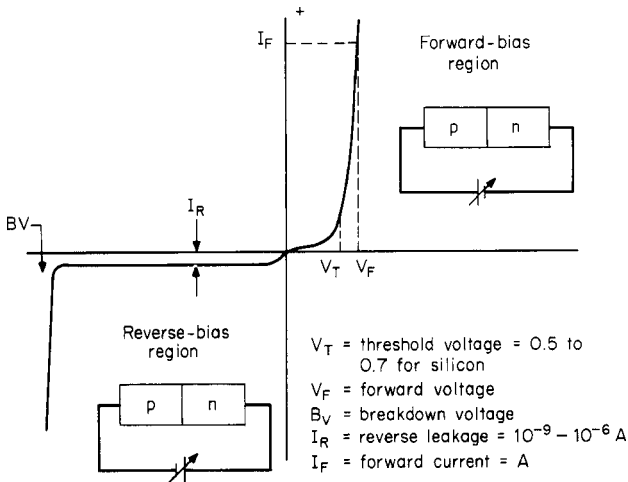


FIGURE 6.5 Junction current versus voltage characteristics. Note that the reverse bias is measured in microamperes and is virtually independent of voltage until breakdown V_B is reached.

current flow (except for leakage) when biased in the other direction. The voltage-current characteristics of such a junction are shown in Fig. 6.5. Here it is seen that, when biased in the forward direction, the current rises quickly as the applied voltage is raised. The bend in the curve at low voltage is due to the fact that the externally applied voltage must neutralize the space charge before full current is permitted to flow. Thereafter, however, the current flow is directly proportional to the applied voltage, being limited only by the bulk resistivity of the material itself.

Biased in the reverse direction, the current is seen to be extremely small (leakage) until a breakdown point is reached. At that point, current flow increases greatly for any small increase in voltage. Unless current is limited by an external resistance, the junction can be destroyed.

Capacitance Effect. A capacitor is formed when two conductors are separated by an insulator (dielectric) across which a difference of potential can exist. For a p - n junction, with no applied external voltage, the region in the immediate vicinity of the junction is depleted of free current-carrying charges. This is so because any mobile electrons near the junction in the n region have migrated across the junction to combine with the mobile holes in the p region. With the junction area thus depleted of free-charge carriers, the region can be considered to be an insulator. This region, however, is bounded at each end by a conductive region of p - and n -type material in which there are numerous free charges (holes and electrons, respectively), so that the structure fits the definition of a capacitor.

The value of the capacitance is a function of the area of the junction (die size), the resistivity of the material (determined primarily by the doping level of the high-resistivity side of the structure), and the voltage applied across the junction. For a reverse-biased junction, this capacitance decreases as the reverse voltage is increased. This is so because an increase in reverse bias increases the width of the depletion area near the junction, thereby widening the dielectric region between the two conductive regions of the structure.

The capacitance associated with a p - n junction represents a limiting factor on the frequency response of semiconductor devices. However, in some devices, such as varactor diodes, it is utilized for constructive purposes.

7. Practical applications for *p-n* junctions. A simple *p-n* junction forms the nucleus of a number of practical semiconductor components. Among the most prevalent are signal and rectifier diodes, zener and reference diodes, and varactor diodes.

Rectifier Diodes. The characteristics of a *p-n* junction are utilized most extensively in the half-wave rectifier diode to convert an ac voltage (or current) into pulsating direct current (Fig. 6.6). This characteristic is used in power supplies, demodulator circuits of AM radios, signal clippers, square-wave generators, and a variety of other applications. Many of these functions, particularly those associated with small-signal applications, are currently being combined with other circuit functions in integrated circuits, so that the use of such diodes in discrete form is diminishing. The primary exception is the rectifier diode for power supplies, which is required to pass relatively high currents and is not yet replaceable with ICs. The selection of such rectifiers, in both capabilities and packaging, continues to expand.

The use of silicon rectifiers in the most popular power supply configurations, as well as the more important circuit characteristics, is shown in Fig. 6.7.

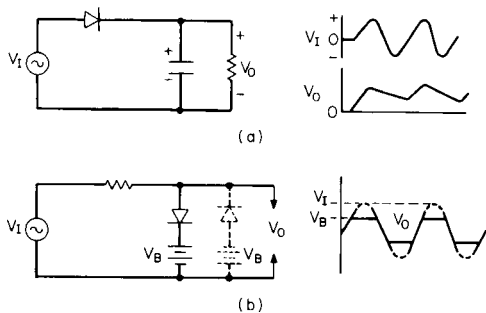


FIGURE 6.6 Schematic diagrams and waveforms of diodes used as (a) rectifiers and (b) clippers.

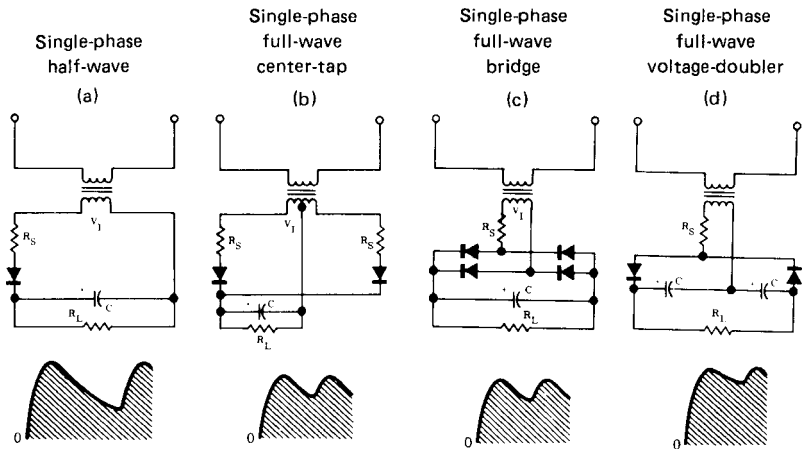


FIGURE 6.7 Practical power supply circuits and their characteristics.

Schottky Rectifiers. When a metal is brought into contact with a highly doped (low-resistivity) semiconductor material, an ohmic contact is formed. The resulting junction is highly conductive, exhibiting linear voltage-current relationships with little series resistance. Such junctions are used for the connection of metal leads to semiconductor devices. However, when a metal is brought into contact with a lightly doped (high-resistivity) semiconductor material, the resulting junction exhibits rectifying properties similar to those of a p - n junction. Alternatively known as Schottky rectifiers (diodes), surface-barrier diodes, and hot-carrier diodes, such structures are commonly employed as VHF-UHF mixers, as which they offer faster response time and lower noise than other types of devices and as high-speed rectifiers in power supply circuits, for which they have a number of advantages over standard p - n junction rectifiers. Among these advantages are:

1. Virtually nonexistent offset voltage at low current and substantially lower forward voltage drop than comparable silicon rectifiers at high currents (Fig. 6.8)
2. Substantial improvement in rectification efficiency
3. Significantly higher switching speed owing to the absence of storage time as a speed-limiting parameter

This combination of features makes Schottky rectifiers highly useful in low-voltage, high-current power supplies, in switching power supplies, and in switching circuits associated with integrated circuits.

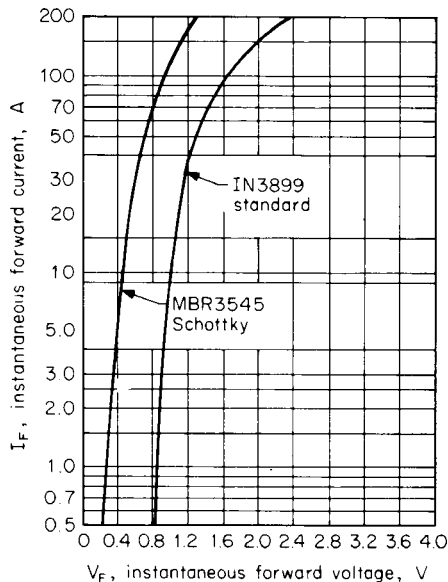


FIGURE 6.8 Typical offset voltage and forward voltage drop of standard and Schottky rectifiers with similar current ratings.

Characteristics	(a) Single-phase, half-wave	(b) Single-phase, full-wave, center-tap	(c) Single-phase full-wave, bridge	(d) Single-phase, full-wave voltage doubler
V_i	$0.910 V_o$	$0.825 V_o$	$0.805 V_o$	$0.552 V_o$
Peak inverse voltage per rectifier	$2.56 V_o$	$2.34 V_o$	$1.14 V_o$	$1.56 V_o$
Ripple	$0.12 V_o$	$0.06 V_o$	$0.06 V_o$	$0.09 V_o$
I_p per rectifier	$7.80 I_o$	$4.75 I_o$	$4.75 I_o$	$3.00 I_o$
I_{rms} per rectifier	$2.50 I_o$	$1.63 I_o$	$1.33 I_o$	$1.10 I_o$
Secondary VA	$2.35 P_o$	$2.16 P_o$	$2.16 P_o$	$1.32 P_o$
Primary VA	$2.35 P_o$	$3.05 P_o$	$2.16 P_o$	$1.72 P_o$

Condition: $R_{L(min)} = 50 R_s$.

The primary disadvantage of a Schottky rectifier is its substantially higher reverse-bias leakage current, which may be of an order of magnitude greater than that of p - n junctions. Total power dissipation with symmetrical signals, however, favors the Schottky diode because of its low voltage drop in the on condition.

The lower turn-on potential of Schottky diodes is used to increase the switching speed of conventional saturated-logic circuits by keeping the switching transistor out of deep saturation while in the on condition. This circumstance increases the turn-off speed by eliminating storage time as a factor of turn-off time. This is accomplished by connecting a reverse-biased Schottky diode across the collector-base junction of the transistor. As a positive-going base signal drives the transistor toward saturation, resulting in a collector voltage lower than the base voltage (tending to forward-bias the collector-base junction), the lower turn-on potential of the Schottky diode causes the diode to conduct before the normally reverse-biased collector-base junction of the transistor goes into conduction. Thus, the collector-base forward voltage is clamped by the low on voltage of the diode to a value that is less than required to cause reverse conduction in the collector-base junction.

Zener Diodes. Operated as a rectifier, a p - n junction utilizes the forward-conduction–reverse-blocking action of the structure. As a zener diode, it employs the “breakdown” region of the diode.

Figure 6.9 shows that, for an applied reverse voltage, the diode current is very small (leakage current) until the breakdown point is reached, at which point the reverse current increases very rapidly. This breakdown voltage is usually called *zener voltage* (V_z). A zener diode differs from a rectifier diode in that the breakdown-voltage point V_z is very precisely controlled during design and manufacture.

When used as a zener diode, the device is operated in the breakdown region, where it acts as a constant-voltage device and can be utilized as a voltage regulator in power supplies. The simple circuit in Fig. 6.10 illustrates this application. Here, when the applied unregulated dc potential is low (below the breakdown point of the diode), the diode current is very small and the device acts essentially as an open circuit. Therefore, its effect on the load circuit is virtually zero. If the applied dc voltage exceeds V_z , however, the junction breaks down and its voltage drop remains essentially constant. Therefore, the voltage available to the load remains approximately constant and equal to the zener voltage regardless of variations in source voltage or load-current requirements. Of course, if the applied voltage should drop below the point where diode breakdown is maintained or if the load resistance R_L were to decrease to the point where it could no longer sustain the voltage required for zener breakdown, the diode would come out of conduction and voltage regulation would be lost. With proper design, the value of the applied dc voltage and

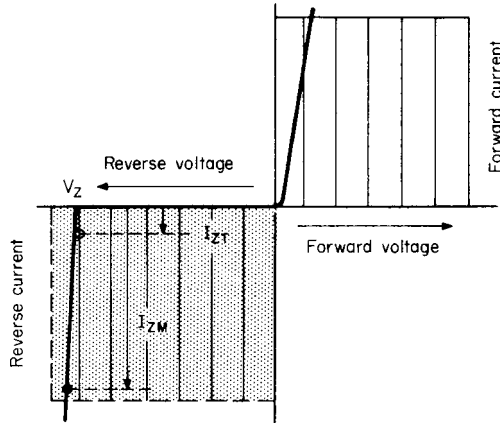


FIGURE 6.9 Typical zener-diode characteristics and major parameters. V_Z = zener breakdown voltage; I_{ZT} = zener test current at which V_Z is specified; I_{ZM} = maximum permissible zener current.

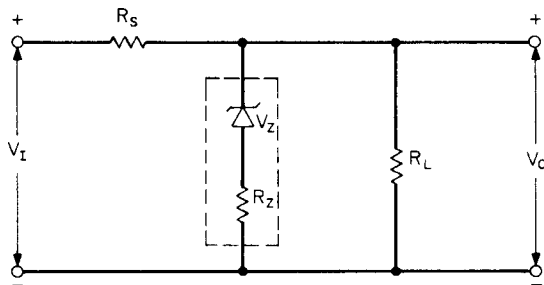


FIGURE 6.10 Simple power supply voltage regulator.

the value of the series resistance R_s are chosen so that the voltage drop across R_L in the absence of the zener diode would be greater than V_Z under any anticipated load-resistance variations.

Zener diodes are also used for a variety of other applications, including clipper circuits (by replacing the batteries utilized in the circuits of Fig. 6.6), overvoltage-protection circuits (similar to the voltage-regulator circuit of Fig. 6.10), and surge-protection circuits for all sorts of electrical equipment as exemplified by the circuit of Fig. 6.11, where the zener is used to protect against excessive fuse burnout due to prolonged periods of operation near the melting point of the fuse. The zener provides a sudden burst of current at voltages beyond V_Z so that a more tolerant fuse may be selected.

Commercial zener diodes are available with zener voltages ranging from about 2.4 to 200 V and with power ratings from milliwatts to 50 W or more so that a great many power supply regulation requirements can be satisfied. Manufacturers' data sheets usually provide a minimum current (I_{ZK}), which will assure reasonable regulation, as well as a maximum current (I_{ZM}) beyond which the diode is subject to damage.

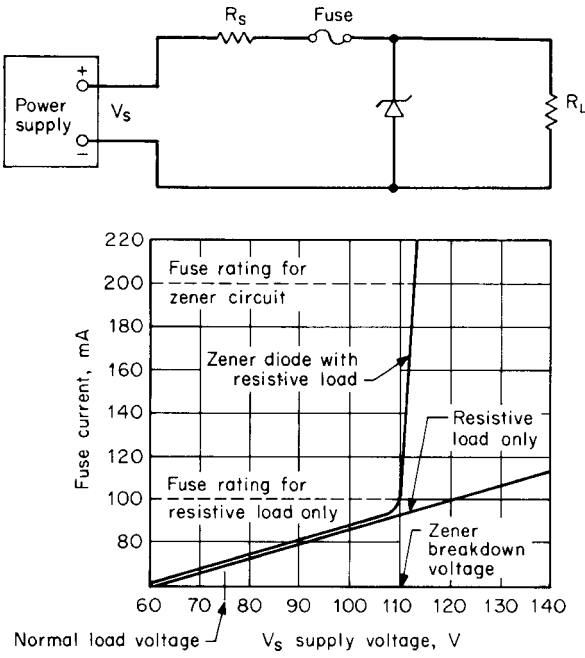


FIGURE 6.11 Zener-diode protection permits the use of fuses with higher current ratings by generating a sudden burst of current at the pre-determined fault point.

Reference Diodes. The forward and reverse characteristics of a typical zener diode are affected by temperature. This is shown in the graph of Fig. 6.12, where it is seen that a change in temperature from 25 to 100°C causes a decrease in voltage of approximately 150 mV in the forward-biased region of the diode. This corresponds to a negative temperature coefficient (TC). In the zener region, the voltage increases as temperature is increased, resulting in a positive TC.

For many applications this change in zener voltage with temperature can be tolerated. Critical applications, however, require temperature-compensated diodes, or reference diodes, whose breakdown voltage remains constant under varying temperature conditions.

A reference diode can be formed by combining one or more forward-biased diodes with a reverse-biased diode, as shown in Fig. 6.13. Here it is seen that the increase in voltage across the reverse-biased zener junction is counterbalanced by the decrease in voltage across the forward-biased junction at 7.5 mA. By judicious selection of diode junctions and proper operation, excellent temperature compensation can be achieved. It is important, however, to operate the TC device at a current level specified in the data sheet. Otherwise, voltage compensation is not obtained because the ΔV 's at different current levels are not necessarily equal.

The Transistor. The transistor is the most versatile component in the semiconductor family. Its most important characteristic is current and/or voltage amplification. Because of this capability it is the heart of most electronic circuits involving signal amplification and switching.

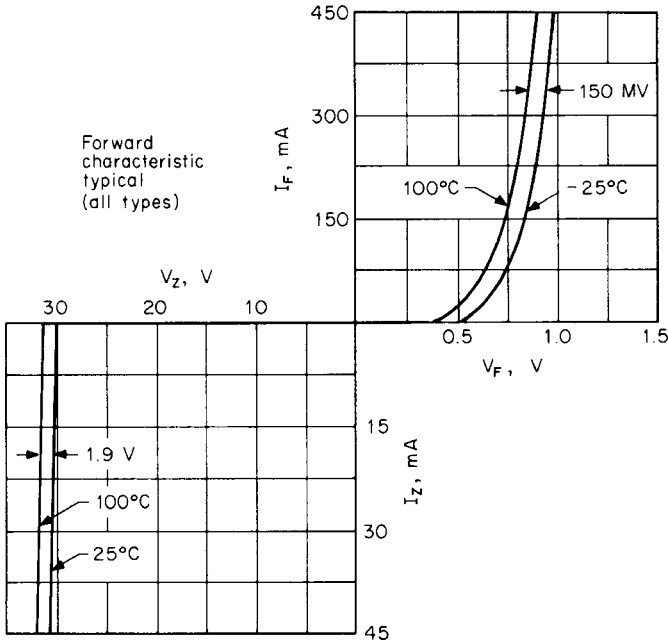


FIGURE 6.12 Typical forward and reverse diode characteristics as a function of temperature.

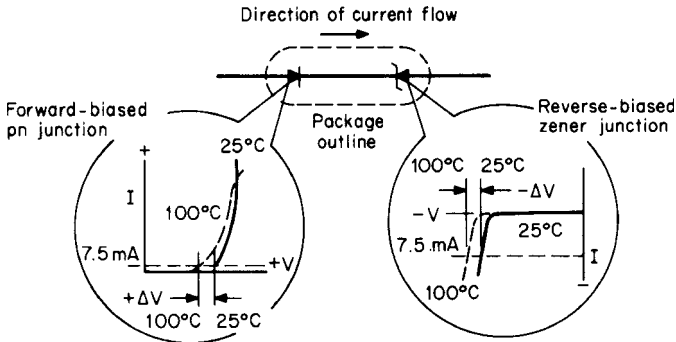


FIGURE 6.13 The temperature effect on zener breakdown voltage can be compensated for by a series-connected forward-biased diode with an equal temperature change of opposite polarity.

There are two basic kinds of transistors: *unipolar transistors*, usually referred to as field-effect transistors (FETs), and *bipolar transistors*. The FET was first described in the early 1930s but was not exploited commercially at that time. The bipolar transistor was invented in the late 1940s and rapidly became a commercial product. The FET was finally developed as a commercial product early in the 1960s, long after the bipolar transistor had established itself. FETs, especially MOSFETs, are now widely used in the front ends of low-noise radio and TV equipment, and they are the dominant devices in digital integrated circuits.

8. Bipolar transistors.

The basic element of any bipolar transistor is the p - n junction. When the junction (diode) is forward-biased (p layer positive, n layer negative), current through the device increases rapidly as the voltage is increased. Under reverse bias, only a very small leakage current can flow until the reverse voltage becomes high enough to cause breakdown.

A bipolar transistor is formed by sandwiching a very thin layer of n -doped material between two layers of p -type material (p - n - p) or a thin layer of p -type material between two n -doped layers (n - p - n). The characteristics of such a structure are varied by varying the geometries and resistivities of the three layers.

The three layers of a bipolar transistor (Fig. 6.14) are the *emitter*, the *base*, and the *collector*. The emitter represents the current source, where the current carriers originate. The base is the control element, and the collector is the element through which the current carriers are transferred to an external circuit.

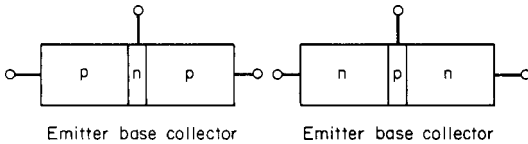


FIGURE 6.14 Physical representation of bipolar transistors.

The main difference between a p - n - p and an n - p - n transistor is that the former operates with a negative voltage on the collector while the latter operates with a positive collector voltage (with respect to the emitter). This makes it possible to have complementary circuits that often provide improved performance over single-ended circuits, which can be implemented with only one type of transistor.

Transistor action can be understood by analyzing the current flow through an n - p - n transistor under the influence of externally applied voltages (Fig. 6.15). For the normal case,

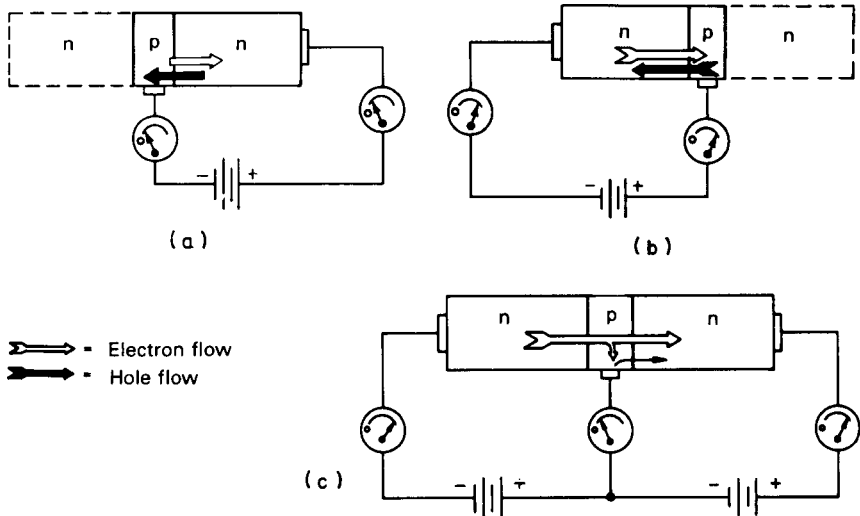


FIGURE 6.15 Transistor action. With the collector junction reverse-biased (a), only minority carriers can cross the junction, and the resulting current flow is small. A forward-biased emitter junction (b) permits a heavy flow of majority carriers. With both junctions properly biased (c), emitter-injected electrons cross the thin base region and flow out of the collector lead.

the external voltages are applied so that the emitter junction is forward-biased and the collector junction is reverse-biased. By examining first the collector junction with the emitter-open (*a*), it is obvious that only minority carriers from the base and collector can cross this junction. If the number of minority carriers in these regions is assumed to be relatively small, the total current across this junction is correspondingly small and is referred to as leakage current (I_{CBO}).

If the collector circuit is opened and a forward bias is applied to the emitter-base junction (*b*), majority carriers from the emitter and the base (electrons and holes, respectively) find it quite easy to cross this junction, causing a heavy base current.

With both junctions properly biased (*c*), if the base region were quite thick, the electrons from the emitter would combine with abundantly available holes in the base and cause an equivalent and compensating flow of current out of the base lead. In that case, the current in the collector would not be greatly affected by the emitter-injected carriers and would remain at its leakage-current value while the base current would be quite high.

However, for a very thin base region, the *lifetime* of the electrons injected into the base (before recombination takes place) is long enough so that most of them can traverse the entire base region toward the collector. Since these electrons represent minority carriers in the base region, the reverse-biased collector-base junction is actually forward-biased for the minority carriers, and the electrons will be swept across the junction into the collector region and from there into the collector power source. Therefore, the collector current equals the leakage current plus most of the injected current, while the base current is very small.

The above action gives rise to the most commonly used expressions for transistor current gain, beta (β), which is the ratio I_C/I_B and is called the *common-emitter current gain*. Beta can be quite high since, for a very thin, high-resistivity base region, almost all of the injected carriers diffuse into the collector, with very few exiting via the base lead.

Circuit configurations. There are three basic transistor circuit configurations: common-emitter, common-base, and common-collector. They differ principally in the manner in which the signal is applied to the transistor and where the load is attached. Figure 6.16 shows these basic circuits. Since the common-emitter circuit is by far the most prevalent, data sheets normally characterize the transistor in terms of this circuit.

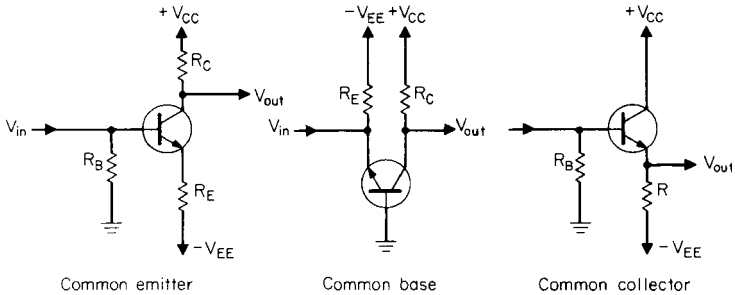


FIGURE 6.16 Basic transistor circuit configurations and their relative characteristics.

Circuit	Current gain	Voltage gain	Input resistance	Output resistance
Common emitter	High	High	Low	High
Common base	<1	High	Very low	Very high
Common collector	High	<1	High	Low

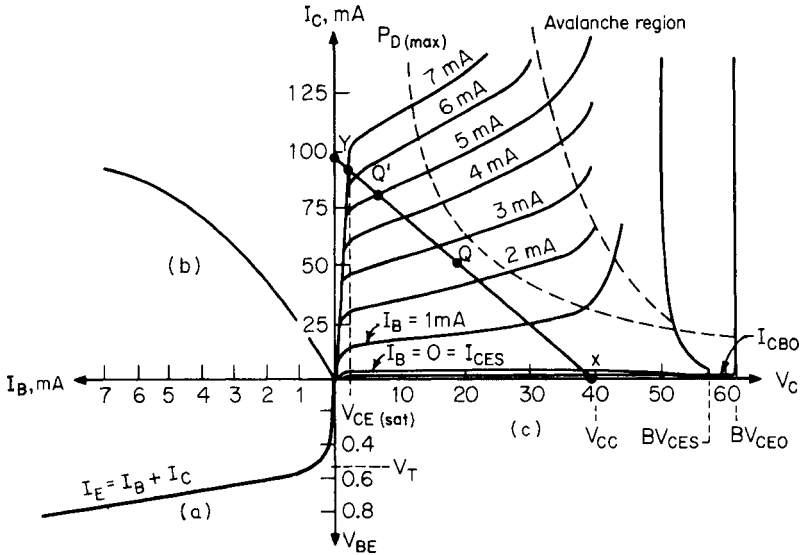


FIGURE 6.17 Typical input-output characteristic curves of a bipolar transistor in a common-emitter circuit. (a) Emitter current versus base voltage (input characteristics). (b) Collector current versus base current. (c) Collector current versus collector voltage for various values of base current (output characteristics).

Bipolar-Transistor Characteristics. Figure 6.17 shows the characteristics of a typical small-signal transistor in a common-emitter circuit. The input circuit, curve *a*, shows that a base-emitter voltage V_{BE} of less than approximately 0.5 V (for silicon) causes virtually no emitter current I_E to flow, thereby keeping the transistor cut off. Above 0.5 V, I_E rises sharply, limited only by the ohmic resistance of the emitter region. Since the latter is very small, a very small rise in V_{BE} , beyond the threshold voltage V_T , causes a large injection of emitter current into the base and from there into the collector, with a small portion flowing out of the base lead.

A typical plot of the division of emitter current between base and collector is shown in Fig. 6.17*b*. The numbers vary considerably for different transistors, but the shape of the curve remains similar. This shows that the β of the transistor can vary considerably over the range of the curve and that, for large signals, distortion can be quite high.

The collector curves in Fig. 6.17*c* are the most significant. They can be used to determine the relationship between the input and output signals of a transistor.

When the transistor is cut off ($I_B = 0$), a residual current I_{CES} flows in the collector circuit. This leakage current can be reduced somewhat (but not to zero) by applying reverse bias to the emitter junction. The limiting value, with reverse bias applied to the emitter-base junction, is I_{CBO} . This is equivalent to the collector-base leakage current when the emitter is open-circuited.

Collector current increases rapidly as the base is energized. The maximum I_C , $[I_{C(max)}]$, is that which would damage the internal transistor structure. This value of collector current is given as a maximum rating on data sheets. Thus, the output current could range from $I_{C(max)}$ to I_{CES} (or I_{CBO} in the event of reverse bias), but in practice I_C is limited to a value far less than $I_{C(max)}$.

Power Dissipation. Power dissipation P_D is the product of V_{CE} and I_C , and it causes the collector junction to heat up. Beyond a critical junction temperature $T_{J(max)}$, the device could be damaged. Thus, the $P_{D(max)}$ rating of a transistor limits the maximum V_{CE} and I_C that can be applied simultaneously. The locus of a $P_{D(max)}$ rating is the parabolic curve on the V_{CE}/I_C

plot of Fig. 6.17. A load line, XQY , must be chosen to maintain steady-state operation to the left of the locus.

Switching Action. From the above it is evident that when the voltage applied between base and emitter is less than approximately 0.5 V, there is only a very small current flow through the transistor. Between collector and emitter, therefore, the transistor represents a very high resistance, or open switch. When V_{BE} is raised significantly above the threshold voltage, the internal resistance of the transistor drops to a very small value so that the device approximates a closed switch. As shown in Fig. 6.17, it takes a change of only 7 mA of I_B along the load line XQY to cause V_{CE} to cause the voltage across this particular transistor to change from V_{CC} to near zero, that is, from an open switch to a closed switch. The switch action is accomplished by a V_{BE} of only a few tenths of a volt.

Biasing. When operated as an amplifier, the transistor must first be biased to some quiescent value of collector current, so that both positive- and negative-going input-voltage excursions will cause corresponding changes in output voltage and current. The ideal bias point is represented by Q on the load line because this permits approximately equal excursions in I_C and V_{CE} without signal clipping. The bias point is established by a quiescent base current that results in a dc collector voltage of approximately $V_{CC}/2$.

Several circuits are used for establishing the bias point. Among the most familiar are those in Fig. 6.18. The basic performance difference is in the bias-point stability.

I_C	$\beta \frac{V_{CC}}{R_B}$	$\frac{V_{CC}}{R_C + R_B/\beta}$	$\frac{R_2}{R_1 + R_2} \times \frac{V_{CC}}{R_C}$
S	1	$\frac{1}{1 + \beta R_C/R_B}$ for $R_B = \beta R_C$ $S = 0.5$	$\frac{1}{1 + \beta R_E \frac{R_1 R_2}{R_1 + R_2}}$
To make			
$I_C = \frac{I_{C(sat)}}{2}$	$R_B = 2\beta R_C$	$R_B = \beta R_C$	$\frac{R_1}{R_2} = 1 + 2 \frac{R_1}{R_E}$

At point Q on the load line in Fig. 6.17, the transistor has a beta (I_C/I_B) of approximately 20. If a transistor with a β of 40 were substituted (simulated by dividing all I_B values by 2) and if I_B were held by the bias circuit to 2.5 mA as before, the operating point would move up the load line to point Q' , a much higher value of I_C . As a result, considerable distortion would occur for high-value input signals.

The bias-point stability factor S is defined as the percent change in I_C for a percent change in β , or $\Delta I_C/I_C = S \Delta \beta/\beta$. If a percent change of β causes a corresponding percent change in I_C (the least desirable condition), then $S = 1$. If I_C is independent of β (corresponding to a zero change in I_B when β is varied), then $S = 0$. The

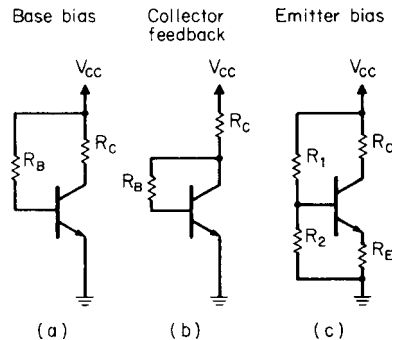


FIGURE 6.18 Conventional common-emitter bias circuits. The following table gives approximate characteristic expressions.

formulas accompanying Fig. 6.18 give I_C and S as functions of β and assign values for S under specific operating conditions. The bias arrangement in Fig. 6.18c, using emitter degeneration, is preferred because, by proper choice of resistor values, the effect of β on I_C can be made almost negligible.

9. Field-effect transistors (FETs). There are two types of field-effect transistors: the junction field-effect transistor (JFET) and the metal-oxide-semiconductor field-effect transistor (MOSFET). Of these, the MOSFET is by far the more popular and forms the basis for most digital large-scale and very-large-scale integrated circuits (LSI and VLSI). JFETs, because of their low-noise advantages, are utilized extensively in TV and radio front ends as well as in input circuitry for integrated operational amplifiers, etc.

Junction Field-Effect Transistors. In its simplest form, a JFET starts with a bar of n - or p -doped silicon which behaves as a resistor (Fig. 6.19a). By convention, the terminal into which current is injected is called the *source*; the other terminal is the *drain*. Current flow between source and drain is dependent on the drain-source voltage and on the resistivity of the material.

In Fig. 6.19b, p -type regions have been diffused into an n -type substrate, leaving an n channel between source and drain. (A complementary p channel is made by reversing the dopants in all regions of the structure.) The p regions control the current flow between source and drain and are called *gates*.

When the gates are connected to the source and a positive voltage is applied between drain and source (Fig. 6.19c), current flow in the channel creates a voltage gradient along the length of the channel. This voltage reverse-biases the gate-substrate junctions and creates the usual depletion layer in the vicinity of the junction. The depletion layer, being devoid of mobile charges, is in effect an insulating region which cannot be penetrated by the channel current. This reduces the channel width, thereby increasing its resistance.

The overall effect is shown in Fig. 6.20a, where an increase in V_{DS} causes a corresponding increase in drain current I_D , but the rate of change of current tapers off as the increasing voltage drop in the channel increases the spread of the depletion region into the channel. At V_p (pinch-off voltage) an equilibrium condition is reached whereby an increase in V_{DS} generates a neutralizing increase in channel resistance, and drain current remains essentially constant until the breakdown condition is reached.

By applying a reverse-bias voltage between the gates and the substrate (Fig. 6.20b), the channel width is reduced by the gate voltage and the maximum drain current is lowered. Further increases in gate voltage correspondingly reduce the channel width and produce successive reductions in maximum drain current.

It will be noted that current flow in an FET is made of majority carriers only and that, unlike in a bipolar transistor, the current does not cross a junction. Hence, an FET is sometimes called a *unipolar transistor*.

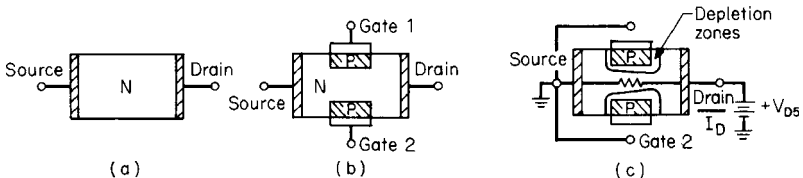


FIGURE 6.19 Development of junction field-effect transistors.

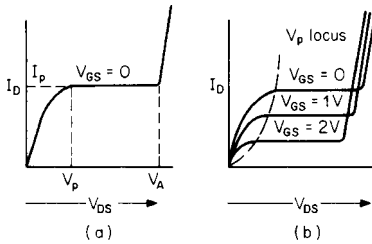


FIGURE 6.20 Drain-current characteristics.

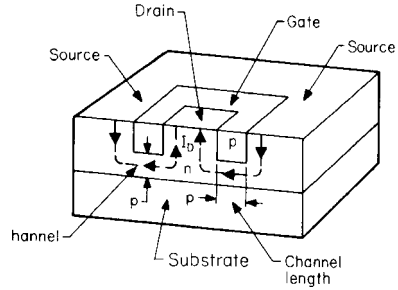


FIGURE 6.21 Cross section of a JFET structure.

A more practical structure for a junction FET is illustrated in Fig. 6.21. In this single-ended geometry, the p -type substrate takes the place of gate 2 in Fig. 6.20. An n -type layer is epitaxially grown on top of this substrate, and a p -type gate diffusion into the epitaxial layer forms the second gate and creates the channel.

MOS Field-Effect Transistors. The MOSFET operates on a somewhat different control mechanism. Figure 6.22 shows the development. Two separate low-resistivity n -type regions (source and drain) are diffused into a high-resistivity substrate, as shown in Fig. 6.22a. Next, the surface of the structure is covered with an insulating oxide layer (Fig. 6.22b), and holes are cut into the layer, allowing metallic contact to source and drain. Then, a metal area is overlaid on the oxide, covering the entire region between source and drain, and simultaneously metal contacts to drain and source are made as shown in Fig. 6.22c. The metal area between source and drain is the gate terminal. Note that there is no physical penetration of the gate metal through the oxide into the substrate. Since drain and source are isolated by the opposite-polarity substrate, the structure is analogous to two diodes connected back to back (Fig. 6.22d). If a voltage were to be applied between source and drain (in the absence of a gate voltage), the resulting current flow would be very small because one of the back-to-back diodes would be reverse biased regardless of the polarity of the applied voltage.

The metal gate area, in conjunction with the insulating oxide layer and the semiconductor layer underneath, forms a capacitor. The metal area is the top plate; the substrate material, the bottom plate. When a positive potential is applied to the gate metal, the positive charge at the metal side of the capacitor induces a corresponding negative charge at the semiconductor side. As the positive charge at the gate is increased, the negative charge "induced" in the semiconductor increases until the region beneath the oxide is changed from p -type to n -type (Fig. 6.23), and current can flow between drain and source through the induced channel. In other words, drain-current flow is "enhanced" by the gate potential. Thus, drain-current flow can be modulated by the gate voltage; i.e., channel resistance is inversely proportional to gate voltage. (The n -channel structure may be changed to a p -channel device by reversing conductivity of the semiconductor regions.)

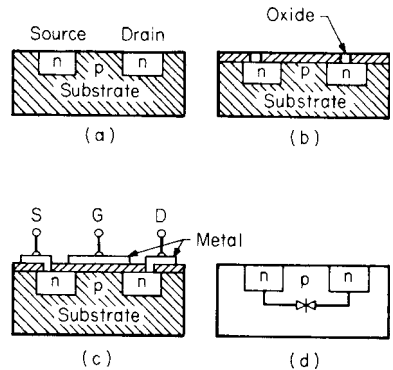


FIGURE 6.22 Development of a MOSFET.

device and is often preferred for front-end communications circuits. Third, it is extremely compatible with integrated-circuit processing, particularly for LSI and VLSI circuits, for which its smaller geometry, lower power consumption, and simpler processing make it the preferred basic device for many applications.

On the other hand, bipolar transistors are capable of operating at higher speeds and higher power. In discrete form, they are generally available with a wider range of specifications and often at considerably lower cost for applications for which both types of devices are suitable.

Power MOSFETs. While MOSFETs for small-signal applications have been widely used for some years, their performance in power circuits has been limited. The limiting factor of the conventional small-signal MOSFET structure has been the lateral channel, which has an inherently low current-carrying capacity and a relatively high on resistance coupled with a low reverse breakdown voltage.

The disadvantages of the lateral FET from a power standpoint were overcome with the development of a structure that permits the control of a vertical current flow by means of a gate field. The structure utilizes thousands of “source” sites interconnected in parallel on a single die (Fig. 6.25). A common drain at the bottom of the die minimizes the geometry of the structure to make such a multicell architecture practical. Moreover, it permits very short channel lengths to reduce the on resistance of each cell to a minimum. The overall result is a device which allows current and voltage ratings to meet virtually any desired electronic application while maintaining the higher speed and circuit-simplification advantages of MOSFETs in comparison with bipolar transistors.

The power MOSFET has made great strides, but emphasis on cost reduction is continuing. Improvements of present devices over the early double-diffused MOS structure have been significant, and prices are now approaching those associated with bipolar power transistors for medium voltage and current applications.

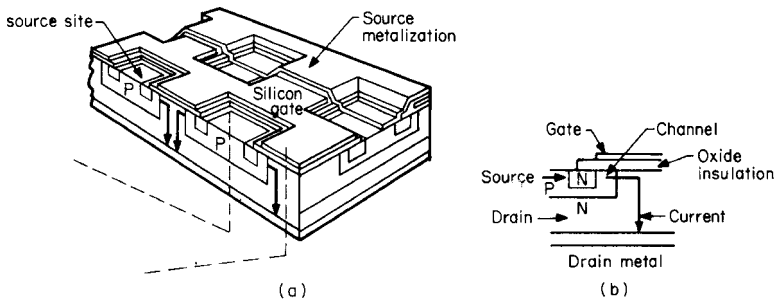


FIGURE 6.25 A power MOS transistor. The cross section (a) illustrates overall interaction of source sites, while (b) shows the details of a single transistor element in the structure.

10. Thyristors. Thyristors and their trigger devices can take numerous forms, but they share these characteristics:

1. They are “open circuits,” capable of withstanding rated voltage until triggered.
2. They become low-impedance current paths when triggered and remain so, even after the trigger source has been removed, until current through that path is interrupted or is reduced below a minimum “holding” level.

The regenerative action which holds a thyristor in the on state is due to multiple layers of opposite p - and n -doped silicon which result in the two-transistor-equivalent circuit

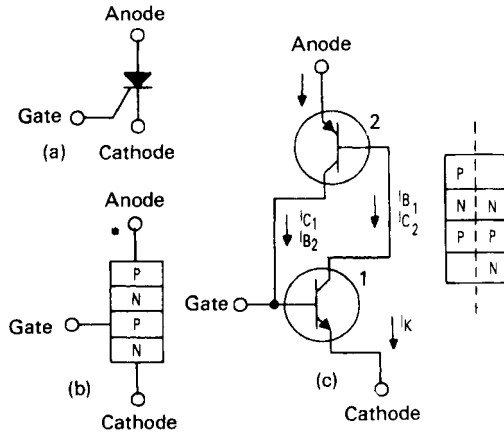


FIGURE 6.26 Two-transistor analogy of an SCR. (a) Schematic symbol of SCR. (b) A $p-n-p-n$ structure represented by a schematic symbol. (c) A two-transistor model of an SCR.

structure shown in Fig. 6.26. Here, part of the current through transistor 2 is injected back into transistor 1 to supplement the trigger current and sustain conduction when the trigger is removed. This characteristic, coupled with the thyristor's low on resistance, makes it possible to control a portion of each cycle of an ac power waveform into a load, for low-dissipation "dimming" or motor-speed-control applications, to switch capacitive discharge currents precisely in electronic pilot ignition systems, and to fulfill innumerable other control purposes.

There are a number of semiconductor devices under the title of thyristor; the most important of these are silicon-controlled rectifiers (SCRs) and triacs.

SCRs. As a rectifier, the SCR conducts current in only one direction. But unlike a two-layer rectifier, which begins conduction when its anode becomes slightly positive with respect to its cathode, the SCR will remain nonconductive even in the forward direction until the anode voltage exceeds a certain minimum value called the *forward breakover voltage* (V_{DRM}). Moreover, the value of V_{DRM} can be varied through the injection of a small current into a third, or *gate*, element, which governs the amplitude of the anode voltage needed to cause conduction, or firing.

The current-voltage relationship of an SCR is shown in Fig. 6.27. With the gate terminal open or shorted to the cathode and an external voltage applied only between anode and cathode, the reverse-bias characteristics (anode negative with respect to cathode) are identical to those of a conventional $p-n$ junction, or rectifier. Under forward-bias conditions, however, current flow does not begin (except for a small leakage current) until V_b is reached. At that point current flow begins to increase very rapidly until, at the *forward-breakover-current point*, a switchback effect takes place and the voltage across the device suddenly drops to a very low value. At that point, the voltage-current relationship becomes similar to that of a conventional forward-biased diode.

It is important to recognize the difference between the reverse-bias breakdown and the forward-bias-breakover effect. In the former, the voltage across the junction remains at its breakdown value so that power dissipation in the device is high and care must be taken to keep the maximum current at a relatively low value to prevent device damage. In the forward breakover region, owing to the switchback effect, the voltage across the device is very

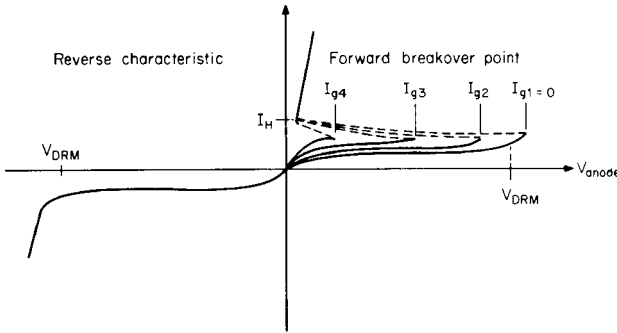


FIGURE 6.27 Thyristor characteristics illustrating breakover as a function of gate current.

low, and it can carry large amounts of current without exceeding the power-dissipation rating of the device. Hence, the device with its gate open (or shorted to the cathode) acts like a voltage-operated switch. The switch is turned on when the applied anode voltage exceeds the breakover voltage and is turned off when the anode current through the device is reduced to the *holding current* I_H , at which point the device returns to its high-resistance state and the switch is turned off.

The switching action of the SCR is greatly enhanced by employing its gate characteristics. When a current is injected into the gate, the breakover voltage of the device is reduced. As this current is increased, the breakover point becomes less and less until the barrier to forward conduction is removed entirely and the device acts as a forward-biased rectifier. The amount of gate current required to reduce breakover voltage from its open-gate value (open switch) to virtually zero (closed switch) is extremely small, so that a small amount of gate current can control a large amount of anode current. In this respect, the SCR acts very much like a sensitive relay, in which a small current through the relay coil can control a much larger current through the relay contact circuit.

A simplified SCR circuit is shown in Fig. 6.28, where the SCR is connected in series with the load R_L and an applied voltage V_{ac} . V_{ac} is less than the breakover voltage of the SCR, so that the SCR is an open circuit until a gate signal is applied. If a gate-signal pulse is applied at the beginning of the positive-going cycle of V_{ac} , the SCR is turned on and the current through the load follows the positive half cycle of the applied voltage until that voltage approaches the point A where it can no longer sustain a current above the holding-current value. The SCR is then turned off.

It must be noted that the SCR can be turned on only during the positive-going portion of the applied voltage. No amount of gate current can turn it on during the negative portion of the cycle, so that a single SCR acts like a triggered half-wave rectifier.

Various techniques can be used to permit SCRs to function during both halves of an applied ac voltage. This can be accomplished by connecting two SCRs in an inverse-parallel configuration so that one device is turned on during the positive-going half cycle and the other during the negative portion (Fig. 6.29a). Another is to utilize a triac in place of an SCR (Fig. 6.29b).

Triacs. A triac is a device which operates exactly like an SCR, except that it can be triggered on during both the positive-going and the negative-going half cycles of an applied voltage. Thus, it acts like a triggered full-wave rectifier or, as indicated by its schematic symbol, like a pair of inverse-parallel-connected SCRs. In application, the triac offers circuit

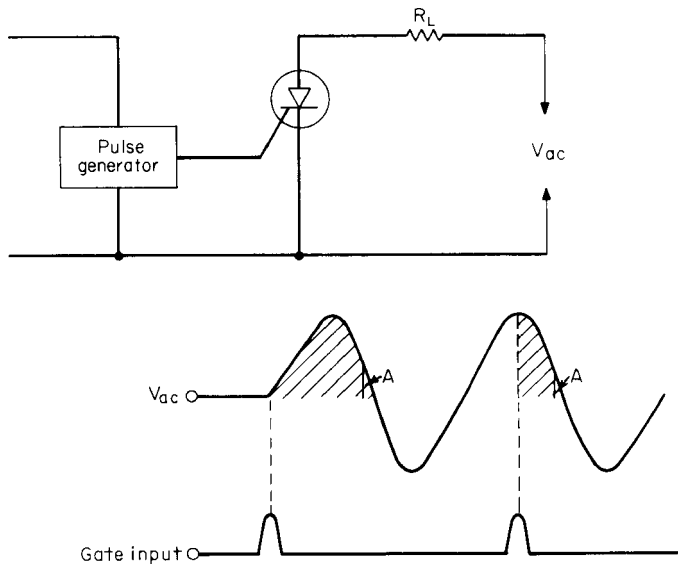


FIGURE 6.28 A simple control circuit indicates the amount of current control available with SCRs.

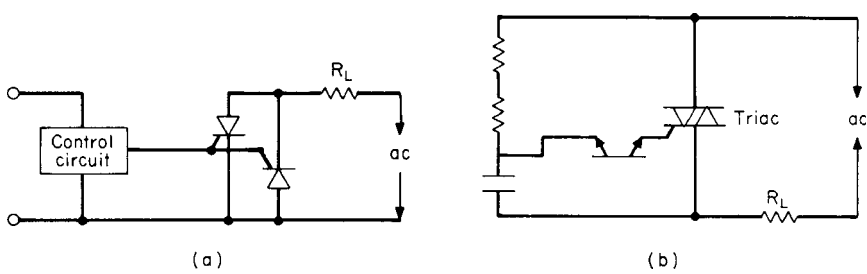


FIGURE 6.29 Full wave power control achieved by two inverse-parallel-connected SCRs (a) and through the use of a triac to replace the SCRs (b).

simplification and a reduction in component requirements where full-wave power control is required.

A triac may be triggered into conduction by either a positive- or a negative-going gate signal, but sensitivity varies considerably. The recommendations given in manufacturers' data sheets should be followed for best performance.

Gate-Turnoff Thyristors (GTOs). A gate-turnoff thyristor (GTO) combines the most desirable characteristics of SCRs and bipolar power transistors. Like a transistor, the GTO can be switched on and off by a low-power gate drive signal; like an SCR, it can pass high forward currents when turned on and block high forward voltages when turned off. But unlike the power transistor, which requires a constant drive source to keep it turned on, the GTO is turned on by a momentary pulse and remains in the on condition until the anode voltage is reduced below the level that sustains a holding current or until it is turned off by a reverse-polarity gate-turnoff pulse. In this way, it differs, too, from more conventional

thyristors (SCRs, triacs), which cannot be turned off by a gate signal. Present devices have voltage ratings up to 1400 V and current ratings on the order of 20 A. Gate current trigger requirements are 300 mA. Devices will withstand surge currents as high as 200 A.

Triggers for Thyristors. The most common form of power control using SCRs (or triacs) is phase control of alternating current. Power control is achieved by controlling the timing of the gate trigger pulse. If the trigger pulse is applied at the beginning of the positive-going anode cycle, the thyristor is turned on for virtually the entire positive half of the cycle, allowing the maximum load current to flow. As the trigger pulse is delayed, correspondingly less of the positive-going anode voltage waveform is applied to the load. Figure 6.28 explains visually how this phase control of alternating current is achieved.

There are some instances when a thyristor can be adequately triggered by the slowly rising voltage or current from the 60-Hz line without a separate trigger device, e.g., the simple motor-speed-control circuit in Fig. 6.30. Here the setting of R_3 determines the point of the applied-voltage cycle at which the gate voltage will be high enough to trigger the SCR. The circuit offers control over almost the entire half of the positive portion of the applied voltage. Much better control can be achieved, however, by employing a separate trigger device to provide reliable turn-on pulses timed to trigger the SCR at any desired point during the cycle.

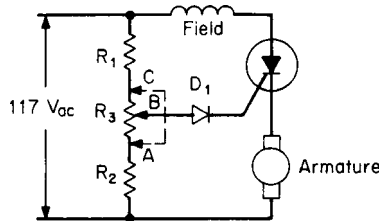


FIGURE 6.30 Half-wave motor-speed-control circuit. The thyristor is triggered directly from the 60-Hz line.

The most common trigger circuit is a relaxation oscillator (Fig. 6.31) using one of a variety of semiconductor switching devices. As shown, when the voltage on the capacitor rises to a point where the electronic switch turns on, the discharge of the capacitor produces a trigger pulse to the load. The charge time of the capacitor can be varied by the setting of R_T , so that pulse spacing can be varied at will.

A number of trigger devices serve the purpose of the electronic switch. Among them are unijunction transistors (UJT), three- and four-layer diodes, and sidacs.

Unijunction transistors. The UJT is a three-terminal device having only a single semiconductor junction. Its basic structure and equivalent circuit are shown in Fig. 6.32a and b.

In the physical structure, when a positive voltage is applied between base 2 (B_2) and base 1 (B_1) and the emitter is shorted to B_1 , the current through the device sets up an internal voltage drop. The voltage at the p - n junction, being slightly positive, reverse-biases the diode junction, and there is a small reverse-bias (leakage) current through the diode. The diode represents a high resistance in parallel with R_{b1} and has no effect on the internal voltage distribution.

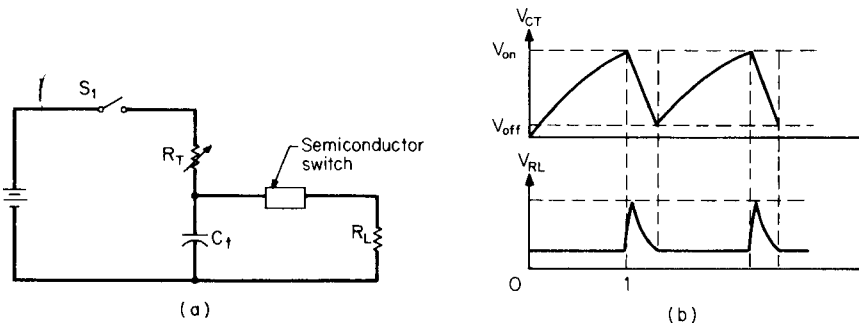


FIGURE 6.31 Basic relaxation-oscillator circuit and associated waveforms.

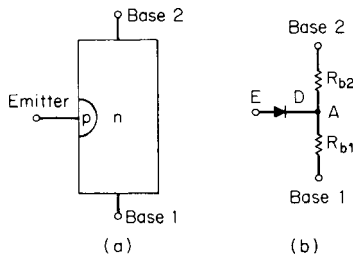


FIGURE 6.32 A unijunction transistor: basic construction (a) and equivalent electrical circuit (b).

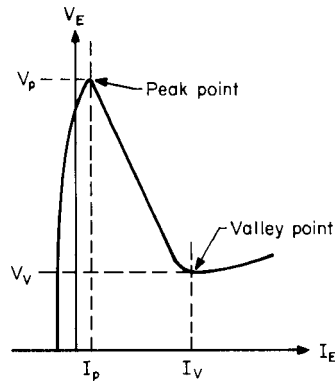


FIGURE 6.33 I - V characteristics of a unijunction-transistor input (emitter- B_1) circuit.

If a positive-going voltage is applied between the emitter and B_1 , a point will be reached where the voltage overcomes the internal reverse-bias voltage on the p - n junction and the junction becomes forward-biased, representing a very small resistance in parallel with R_{b1} . At that point, the voltage at point A drops to that of a forward-biased junction.

The emitter I - V characteristic curve of a UJT is shown in Fig. 6.33. To an external circuit, it appears that the UJT has a negative resistance to applied emitter voltage between V_p , the diode turn-on point (peak-point voltage), and V_v , the point where the diode becomes fully conductive and its voltage drops to its forward-biased value (valley point).

A relaxation oscillator utilizing a UJT (Fig. 6.34) provides an output across R_L after capacitor C_t has charged up through R_t to reach the peak-point voltage of the UJT. Subsequently, C_t discharges through R_L and the UJT to generate a positive pulse across R_L . The frequency of the pulsed output can be varied by varying the resistance of R_p , which permits triggering the thyristor load at any desired point of the positive-going anode cycle.

Unijunction transistors are highly stable devices for general-purpose trigger applications and as pulse generators and timing circuits at frequencies ranging from 1 Hz to 1 MHz.

A number of other trigger devices are available. All take advantage of the phenomenon of negative-resistance characteristics to produce switching action. The V - I characteristic curves of some of the more popular devices are illustrated in Fig. 6.35.


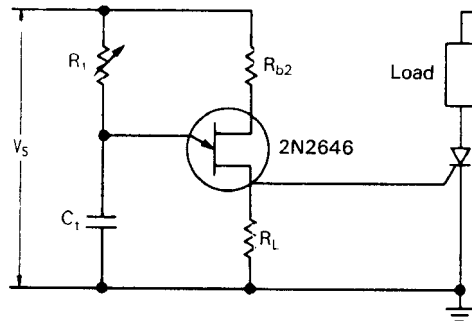


FIGURE 6.34 Basic relaxation-oscillator circuit using a UJT trigger device.

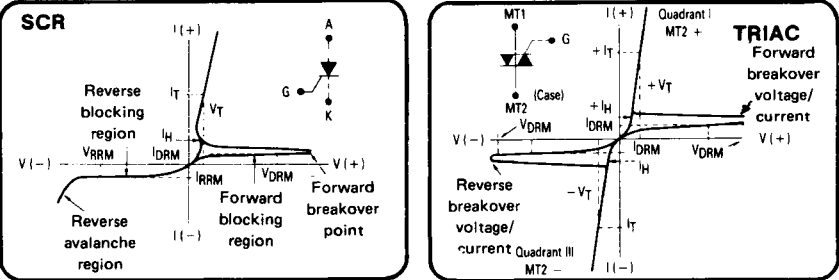Basic thyristors



Trigger devices

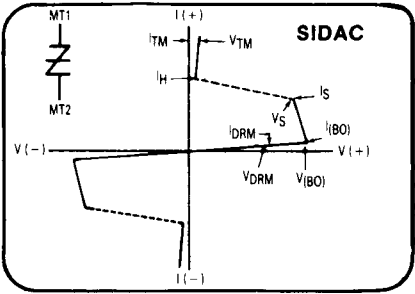
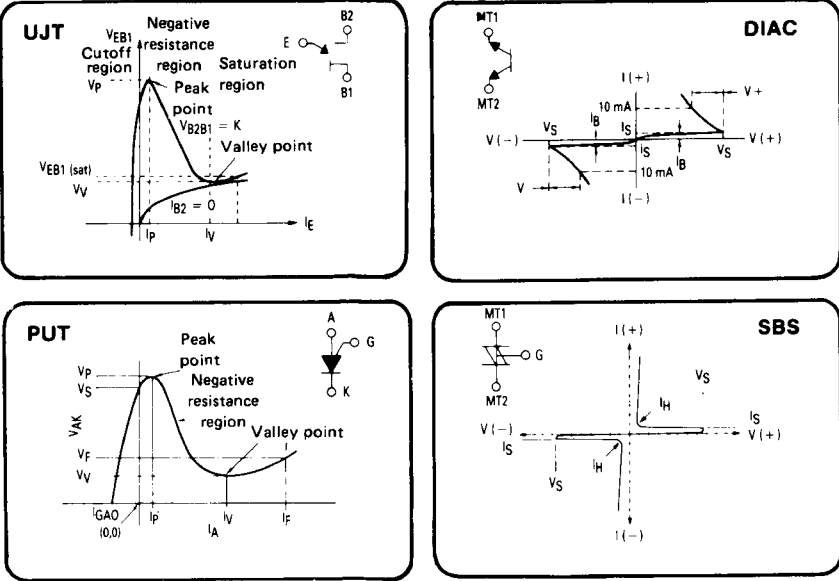


FIGURE 6.35 Voltage-current characteristics of various popular thyristor devices.

Programmable unijunction transistors (PUT). Programmable unijunction transistors are similar to UJT's except that their basic characteristics are programmable (adjustable) by means of external voltage dividers. This ability stabilizes circuit performance for variations in device parameters. The general operating frequency range is from 0.01 Hz to 10 kHz, making PUT's suitable for long-duration timer circuits.

Bilateral triggers: DIACs. Specifically designed as low-cost triggers in line-operated triac control circuits such as light dimmers, motor controls, and temperature controls, these devices exhibit symmetrical bidirectional characteristics with defined switching voltage and current points. The negative-resistance region extends over the full range of operating current, so that the concept of holding current is not applicable. Switching voltages on the order of 35 V or greater are achievable.

Silicon bidirectional switches (SBS). These devices are actually integrated circuits as opposed to the four layer discrete structures of other thyristors. They offer greater accuracy than conventional triggers, the difference between positive and negative breakover voltage being less than 0.5 V. A third lead, designated the gate, permits variations in characteristics such as breakover voltage. Switching voltages up to 10 V are achievable.

Sidacs. These components extend trigger capabilities to significantly higher voltages and currents than are achievable with other devices. With voltage ratings up to 300 V and a steady-state rms current rating of 1 A, they can replace triacs in numerous low-power applications.

11. Optoelectronics devices. The field of optoelectronics deals mainly with the phenomena of converting light into electric current and, conversely, turning electric current into light. Phototubes, followed by solid-state cadmium sulfide photocells, have been early and successful examples of light-to-current conversion, while tungsten-filament and gas-filled bulbs have been serving current-to-light conversion for many years. Their applications, however, have been restricted to direct current and low frequencies. Semiconductor light sources (LEDs and lasers) and detectors have brought about significant changes in optoelectronic applications.

Light sources basically consist of injection laser diodes (ILDs) and light-emitting diodes (LEDs). Both are semiconductor chips made of gallium arsenide (GaAs) or related III-V compounds.

Detectors consist primarily of silicon *p-n* junctions that perform the conversion function, but these may be combined (on the same chip) with other semiconductor devices such as transistors or integrated circuits to improve sensitivity and resulting output.

Light Sources. One basic characteristic of semiconductor *p-n* junctions is their sensitivity to light. Specifically, in the cutoff region the leakage current of such a diode increases with light intensity, while in the avalanche breakdown region it actually emits light. A diode therefore can be operated both as a light detector and as a light source.

The important characteristics of light sources are *spectral width*, the portion of the spectrum covered by the emitted light; *peak wavelength*, the wavelength at which maximum output is achieved; *emission pattern*, the "spread" of the light beam as it leaves the emission point; *power output*, the amount of light emitted by the device at its peak wavelength; *speed*, usually determined by the time it takes for the output to rise from 10 to 90 percent of peak power in response to an applied signal pulse; and *reliability and lifetime*, the anticipated mean time between failures of a component.

In electronic applications, the ILD is usually considered for long-distance communications in the fiber-optic transmission of CATV and telephone signals. It has a very narrow optical beam (Fig. 6.36) and can launch a greater amount of power into small-diameter fiber cores than an LED. And, because of its significantly higher speed, it has greater frequency-modulation

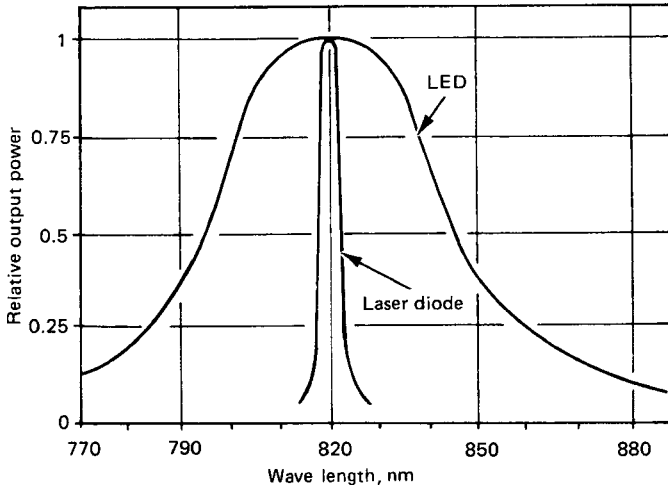


FIGURE 6.36 Typical spectral width of laser diodes and LEDs.

rates. The LED is normally preferred for short-distance communications and for other electronic functions such as optocoupling (isolation) and light-control applications. This preference is due to its substantially lower cost, its spectral match with a wide variety of detectors, its comparatively long life, and its general compatibility with most short-distance communications requirements.

The spectral response of an LED depends on the material used in its manufacture. Gallium arsenide is used primarily for LEDs with outputs in the infrared region of the spectrum between 900 and 1000 nm. Gallium arsenide phosphide produces a visible red light at about 660 nm, and gallium phosphide yields green at about 560 nm.

Visible-light diodes are widely used in panel lights, circuit-condition indicators, light modulators, displays, and the like. Infrared emitters are employed in fiber-optics communications, in card and tape readers, for shaft and position encoders, and in other applications requiring the use of photodetectors in place of the human eye because, as shown in Fig. 6.37, the detector response is much greater to infrared than to the visible-light spectrum.

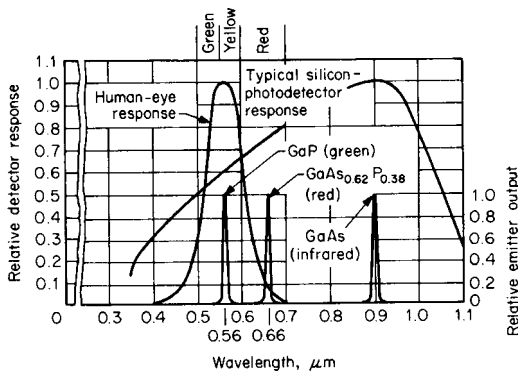


FIGURE 6.37 Spectral output of various LED materials and spectral response of two common detectors, the human eye and silicon photodetectors.

Packaging has a substantial effect on the characteristics of an LED. It affects not only the power output but the spatial response as well. Figure 6.38 shows variation of output power and light intensity to be linear functions of current for typical LEDs. One limiting value is the current limit set by the package in which the die is housed. Spatial response is a function of the placement of the die within the package (with respect to the lens) and of the shape of the lens.

Spatial distribution is also a function of the basic chip design. A simple *p-n* junction yields a lambertian emission pattern which radiates in all directions. While this is desirable for some applications, it is undesirable in others. A number of techniques have been developed to control the emission pattern of the junction. Some of the prevalent chip structures and packaging methods are illustrated in Fig. 6.39.

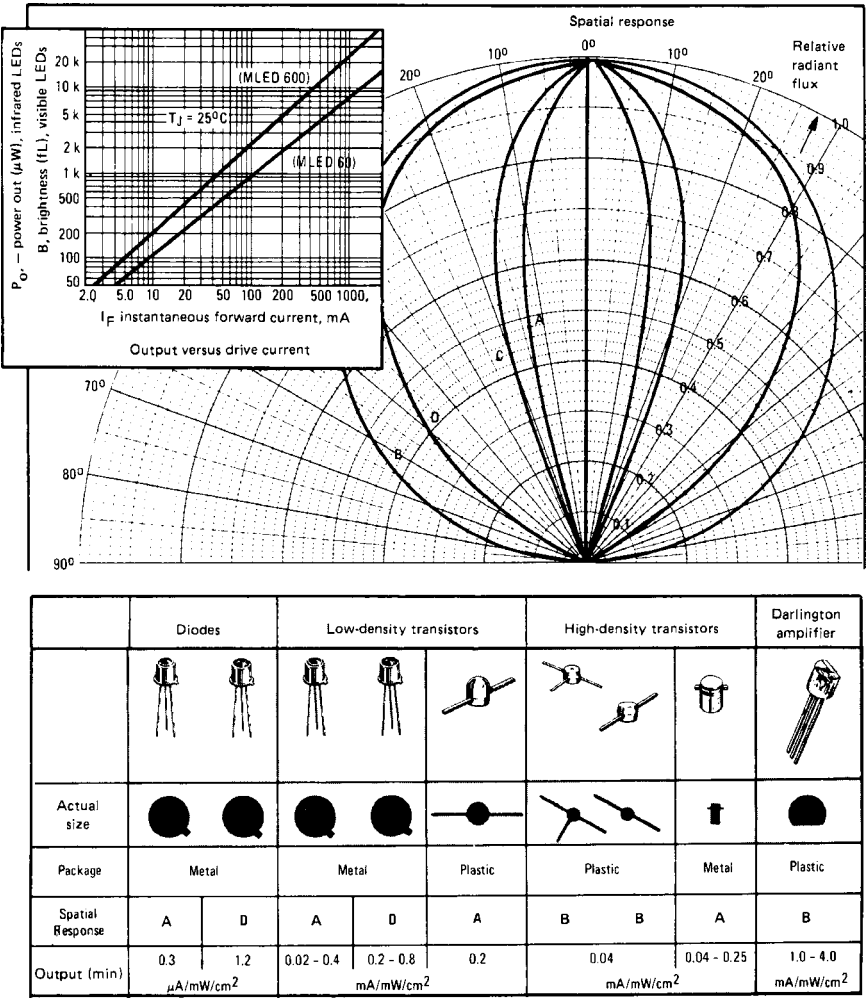


FIGURE 6.38 Typical characteristics of commonly available LEDs. Graph, upper left, shows typical output as a function of drive current. Spatial-response curves are functions of package and lens designs.

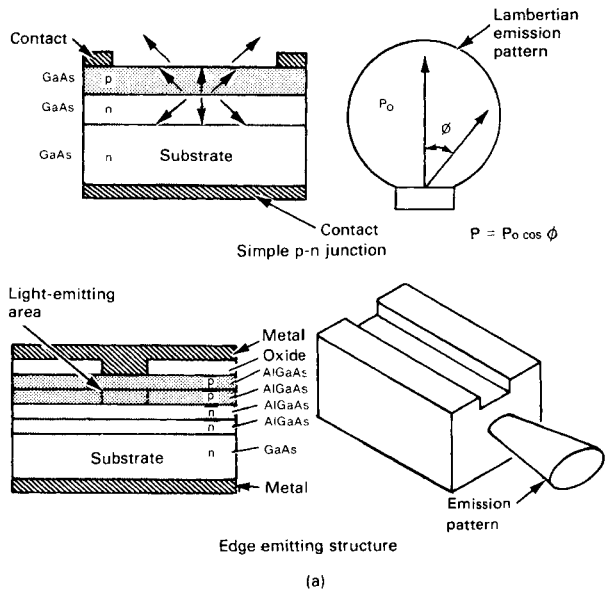


FIGURE 6.39 Chip design (a) and packaging methods (b) affect the radiation pattern of LEDs.

Photodetectors. All semiconductor materials are light-sensitive. An increase of light within a specific range of frequencies, like an increase in temperature, imparts energy to the crystal lattice, causing some of the electrons to break their covalent bonds and become free. In a homogeneous semiconductor material or in a forward-biased p - n junction, the number of light-generated carriers is relatively small compared with the normally available free carriers and add little to the overall current flow. In a reverse-biased junction, however, the increase in current due to light-induced carriers becomes significant.

Photodiodes. If a near-intrinsic layer of silicon is interspersed between oppositely doped layers, a *PIN diode* is formed. The *I* (intrinsic) layer, being nearly devoid of free carriers, adds significantly to the width of the depletion region, making the structure far more light-sensitive than the ordinary p - n junction.

If the reverse bias on a p - n junction is increased to a point near the reverse breakdown point, the electric field within the depletion region will be high enough to give any light-liberated carrier enough energy to liberate additional carriers through collision with other atoms in the lattice. This avalanche effect actually multiplies the current generated by the impinging light and greatly increases the sensitivity of the diode.

Phototransistors. When one of the junctions of a transistor, e.g., the normally reverse-biased collector-base junction, is exposed to light, a phototransistor is created. Such a device adds gain to a photodiode and therefore increases sensitivity considerably. It pays for this, however, with a decrease in response time. Whereas the response time of diodes is measured in nanoseconds, that of phototransistors is specified in microseconds. Even greater gain and correspondingly slower response time are achieved with photodarlington devices.

Virtually any semiconductor device can be made photosensitive. Thus, manufacturers are now providing phototriacs and photo SCRs in order to reduce the component count in light-sensitive equipment requiring such devices.

With the advent of integrated circuits, optodetectors are being combined with complete preamplifiers to provide an amplified low-impedance output that is far less noise-sensitive than that of a discrete detecting device.

Optocouplers. An excellent example of optoutilization to replace conventional electronic components is the optical coupler. Consisting of an infrared-emitting diode coupled to a phototransistor in a single package, the device advantageously replaces such components as interstage transformers and relays as well as coupling and feedback networks.

The diagrams in Fig. 6.40 show such a unit being used as a linear-signal coupler and as a pulse coupler. In the former mode a constant current supplied to the emitter biases this diode, and since the output (infrared) is directly proportional to the diode current, any increase or decrease of diode bias current resulting from an applied modulation input causes corresponding variations in light output. These are coupled to the detector, which provides an equivalent linear current output. Devices with current transfer ratios (I_F/I_C) ranging from 2 to 1000 percent (depending on detector gain) are currently available.

As pulse couplers, the devices are equally interesting. The principal operating difference is that in the switching mode they require no bias current. The detector is either off (with a dark current of typically less than 20 nA) or on (with a maximum continuous forward current of around 50 mA).

Used as an electronic relay, the coupler is fast (much faster than a mechanical relay), and it has no contacts to bounce, pit, or corrode. It is small and insensitive to vibration, and, in contrast to other forms of electronic relays, its output is completely isolated from its input.

Couplers of this type could be produced with an almost infinite variety of gain, sensitivity, and output current. Currently they are available with transistor output, Darlington

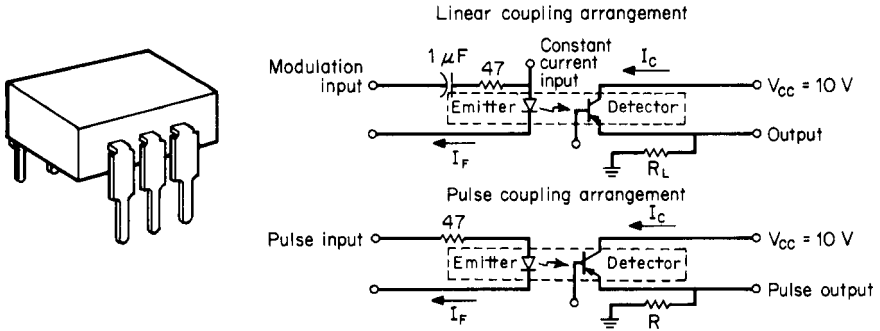


FIGURE 6.40 An optoelectronic coupler consists of an LED and a photodetector with similar spectral-response characteristics coupled to each other in a single package. It permits efficient transfer to linear or pulse signals between circuits where impedance matching is difficult.

output, SCR output, triac driver output, and Schmitt trigger output. They are even being combined with on-chip amplifiers. This is a case of matching design to a required application, and the couplers clearly lend themselves ideally to custom fabrication when end-use quantities are high enough to permit economical production.

12. Varactor diodes. Normally, a p - n junction (diode) is operated in the forward conduction region, as a rectifier, or in the reverse breakdown (avalanche) region, as a zener. There is, however, a third region, the region between forward conduction and reverse breakdown (Fig. 6.41), in which the junction is nonconductive and acts as a capacitor. This junction capacitance is an undesirable parasitic in most applications but becomes the mechanism whereby the junction can act as a variable-capacitance (tuning) diode or frequency multiplier.

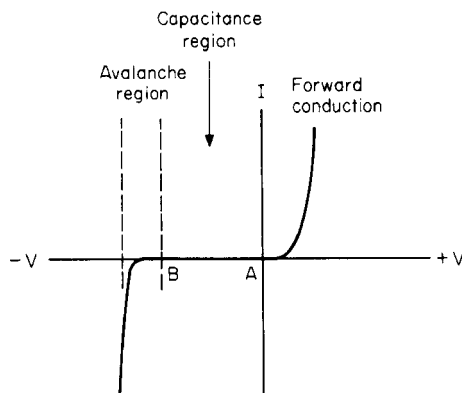


FIGURE 6.41 The three regions of a junction I - V characteristic curve are used for various applications: the forward conduction region for rectification, the capacitance region for voltage-variable capacitance diodes, and the avalanche region for zener diodes.

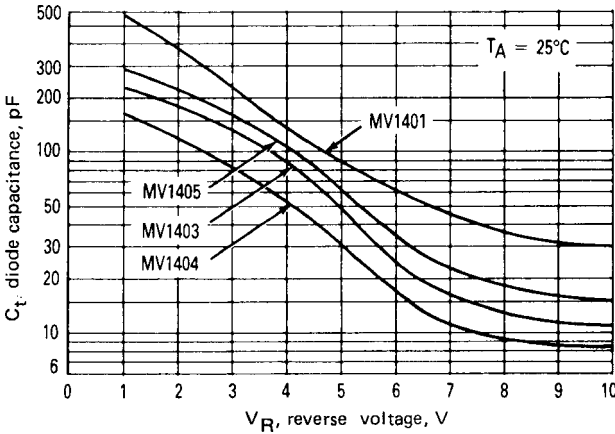


FIGURE 6.42 Typical capacitance versus reverse-voltage variations of one commercial line of hyper-abrupt junction diodes.

An unbiased semiconductor junction simulates a slightly charged capacitor, with the depletion region representing the dielectric and the n - and p -type regions adjacent to the junction representing the two conductive plates. If an external voltage is connected across the diode so as to reinforce the contact potential (reverse bias), the depletion-layer width increases, resulting in a decrease in capacitance. Conversely, if an external forward bias is applied, the depletion region narrows and capacitance increases. However, if the forward voltage is made large enough to overcome the contact potential, forward conduction occurs and the capacitance effect is destroyed. By applying a variable dc voltage of a magnitude between points *A* and *B* of Fig. 6.41, the capacitance of the junction can be varied to cover the tuning requirements of radio and television receivers.

Three parameters are of particular importance with varactor diodes: nominal capacitance, capacitance ratio, and Q . The nominal capacitance C_i is normally specified on data sheets at a particular value of reverse-bias voltage. This serves as a reference point for comparing the capacitance values of various varactor diodes. Capacitance ratio is the ratio C_{\max}/C_{\min} for a specified reverse-bias voltage range. Q is the figure of merit that defines the quality of the device as a capacitor. As a reference, mechanical tuning capacitors that are being largely replaced by varactor tuning diodes often have Q 's on the order of 1000 or greater. Tuning-diode Q 's are generally considerably lower but still are adequate to achieve the desired performance.

The capacitance change over a specific voltage range for a commercial line of tuning diodes is shown in Fig. 6.42.

Varactors can be applied to most sections of a receiver or transmitter where variable capacitors are required. Usable frequencies range to several thousand megahertz, and nominal capacitance values range from about 6 to 500 pF or greater. Capacitance ratios run from approximately 15, for AM broadcast-band tuning diodes, to as low as 2.5 for diodes used for general tuning and control purposes.

Varactor diodes are useful for a variety of radio-frequency applications, including electronic tuning, harmonic generation, and parametric amplification.

13. Transducers (sensors). Transducers are representative of a class of device that converts one form of energy into another. Sensors are often defined as the basic element within a transducer in which the actual conversion takes place. This may be followed by

additional circuitry that provides signal conditioning and amplification to accomplish an end result.

Semiconductor devices, owing to their low cost and high reliability, are being adopted in increasing numbers to accomplish the basic sensing functions. Optoelectronic devices in the form of light emitters and detectors (Sec. 11) are examples of semiconductor applications for sensing purposes. Other categories include temperature sensors and pressure sensors.

Pressure Sensors. One form of pressure sensor employs the piezoresistive effect in silicon to convert a change in pressure into a change in electric current. A commercial structure of this type is illustrated in Fig. 6.43. Here a cavity, or chamber, is etched into one side of a bar of silicon, leaving a thin, flexible bridge of silicon that acts as a diaphragm. A resistive element is diffused into this diaphragm at a point where it is most susceptible to stress when the diaphragm is flexed. A pair of contacts is placed at a point of the resistor to measure the transverse voltage at that point when a current flows through the resistor.

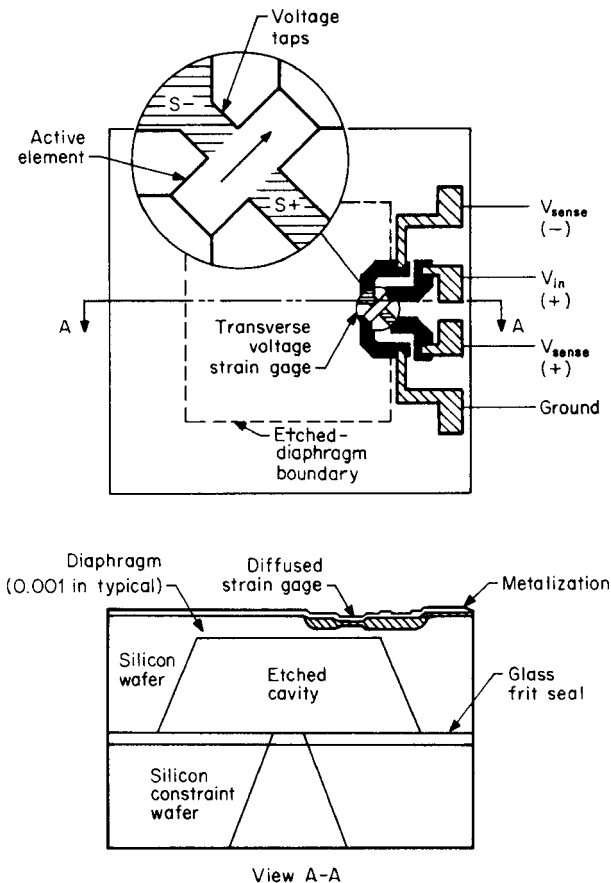


FIGURE 6.43 Top view and cross section of a commercial pressure-sensor chip. [Motorola Inc.]

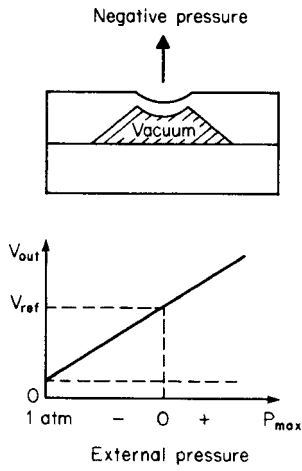


FIGURE 6.44 Absolute-pressure measurement.

depending on the polarity of the external pressure, whether positive or negative (Fig. 6.44).

For differential-pressure measurements, the chamber is left unsealed so that an external positive (downward) pressure applied to the “pressure” side of the diaphragm acts against existing atmospheric pressure at the underside to create a differential voltage. Alternatively, the difference between two external pressures can be measured by applying these simultaneously to opposite sides of the diaphragm, through pressure ports associated with the package (Fig. 6.45).

While piezoresistive techniques in silicon provide a very accurate and linear output, they are temperature-sensitive and generate an initial offset voltage. Both effects can readily be compensated for with external circuitry, but integrated-circuit technology has been

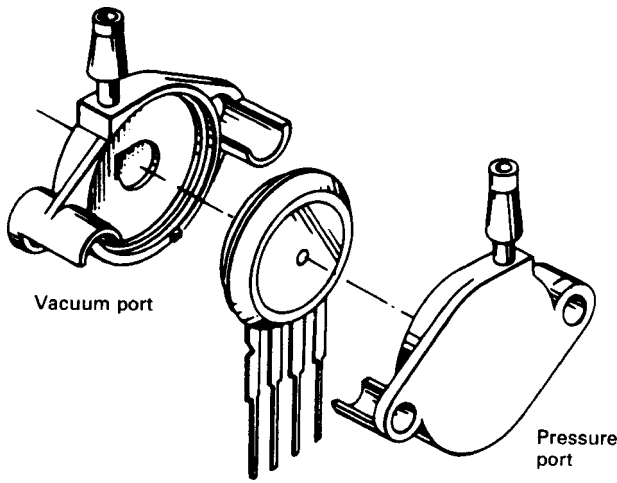


FIGURE 6.45 Packaged pressure sensor with ports for the application of external pressure.

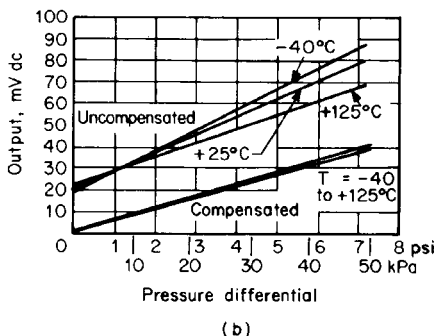
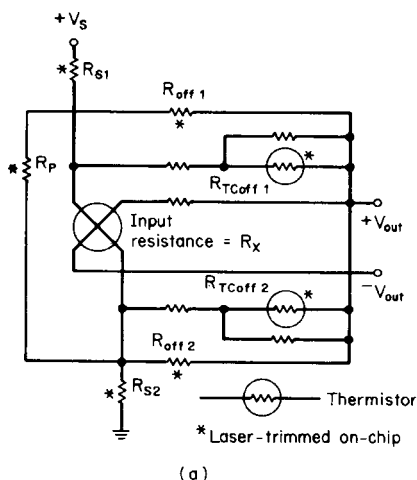


FIGURE 6.46 Schematic diagram of a fully compensated monolithic pressure sensor (a) and output characteristics of compensated and uncompensated devices (b).

employed to put temperature compensating and calibrating directly on the chip during the fabrication process. The compensating thin-film resistor network is laser-trimmed during the computer-controlled manufacturing process to provide good temperature stability and to eliminate the offset (Fig. 6.46). The more advanced devices feature on-chip amplification to increase the output-voltage span from millivolts to volts.

INTEGRATED CIRCUITS

The evolution of integrated circuits has initiated tremendous innovations in the conception, design, and manufacture of electronic equipment. The individual components such as resistors, capacitors, and inductors, which once were the building blocks of all electronic equipment, are being relegated to relatively minor peripheral functions. Circuit designs are being implemented without the benefit of capacitors and inductors, which are difficult to combine with active components on a practically sized silicon chip. Even the resistor is losing its battle against active devices, such as transistors, which can often serve the resistive function more compatibly and in much less space. Digital techniques are replacing analog functions in communications circuitry. The computer is replacing the time-honored "breadboard" for developing, testing, and evaluating new circuit and system designs; and in the factory the microscope is replacing the soldering iron as the basic manufacturing tool in many instances.

But there still remains a large number of applications for which ICs are not yet adaptable. Integrated circuits are not able to produce high power output; they are uncomfortable in VHF-UHF applications, and they are not particularly well suited to very simple electronic equipment that might have special requirements outside the realm of standard off-the-shelf ICs. Indeed, while ICs are expanding into ever larger subsystem functions, they will continue to need discrete-component supplements for some time to come.

All integrated circuits have a common goal of reducing equipment size and cost and improving reliability and performance. There are many different paths toward achieving these goals. The more important of these are listed in Table 1.

TABLE 1 Integrated-Circuit Classifications

Technology	Applications	Complexity	Selection
Monolithic	Digital	SSI	Standard
Bipolar	Linear	MSI	Semicustom
MOS		LSI	Custom
Hybrid		VLSI	
Thin film			
Thick film			

14. Integrated-Circuit Technology

Monolithic Circuits. Monolithic circuits are those in which all associated components are fabricated and interconnected on or within a single chip of silicon. Processes employed are basically separated into *bipolar*, using the two-junction transistor as its basic element, and *MOS*, using the unipolar field-effect structure as its building block.

Bipolar processing generally yields greater speed and permits the design of higher-voltage and higher-power circuits. MOS processing, including the widely implemented complementary MOS (CMOS) structure, offers greater component density and much lower internal power dissipation. Therefore, bipolar circuits are widely used in linear circuits, in small-scale-integration (SSI) and medium-scale-integration (MSI) logic circuits, where they are so well entrenched that they cannot be economically replaced, and in circuits where state-of-the-art speed is required.

MOS circuits, particularly CMOS circuits, are utilized primarily in digital LSI and VLSI designs, where their small geometries and extremely low power requirements permit implementation of circuit complexities that cannot readily be achieved by other means.

Progress is being made in combining bipolar and MOS technologies, each to its own advantage, within a single chip, and some such circuits are being marketed. Generally, however, the two technologies are being used independently.

Hybrid Circuits. Hybrid circuits utilize a combination of monolithic integrated circuits and discrete components attached to and interconnected by a thin- or thick-film conductive pattern deposited on an insulating glass or ceramic substrate (Fig. 6.47). They are used basically for size and weight reduction of complex circuitry whose component complement does not permit monolithic fabrication. High-power circuits and radio-frequency circuits which require capacitors and inductors are typical candidates for thin-film construction techniques.

The advantages of thin-film circuits over conventionally wired circuits using printed-circuit boards lie in the fact that most of the passive elements of a complete circuit, such as resistors and capacitors, can be fabricated directly and simultaneously on the insulating substrate. Similarly, all interconnections can be made at one time, often in conjunction with one of the deposition steps of the passive elements. Then the active components (or monolithic ICs) are added separately and interconnected with the previously deposited pattern on the substrate. To save space, active elements are often utilized in chip form and wire-bond

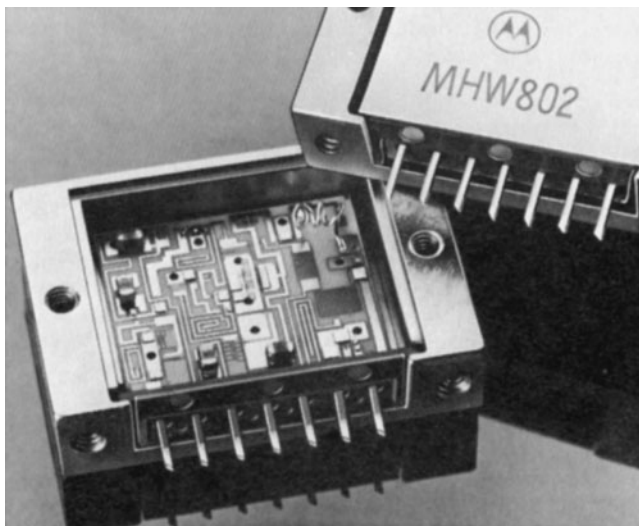


FIGURE 6.47 Hybrid UHF power amplifier module capable of 2.2-W output at frequencies up to 900 MHz. It is designed for portable cellular radio applications.

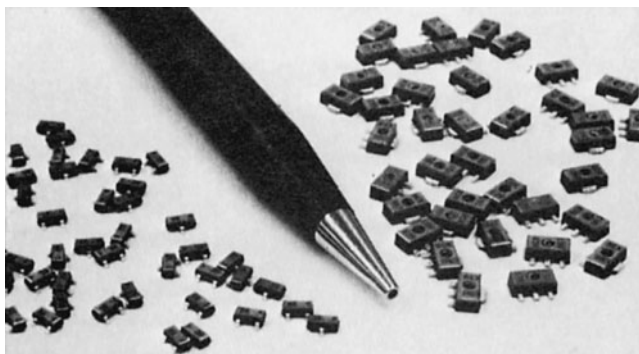


FIGURE 6.48 Tiny surface-mounted packages now replace unencapsulated chips in hybrid-circuit designs because of their simpler installation and testing.

techniques are employed for subsequent interconnections. This practice, however, introduces manufacturing and testing complications. The recent proliferation of surface-mounted packages for both discrete active components and ICs (Fig. 6.48) greatly simplifies hybrid-circuit manufacturing with little penalty on space utilization.

Digital Circuits. Digital circuits are those dealing exclusively with the technology of *ones* and *zeros*. Their active elements, predominantly transistors, are used as switches which are either on or off. These circuits are used as digital logic elements in computer and control applications. They are composed primarily of basic building blocks, called *gates*, which are interconnected in a variety of ways to form more complex functions such as flip-flops, counters, and a myriad of other circuit entities. In all instances, however, the basic

circuit is driven by a signal whose voltage level is either high or low (one or zero), causing the circuit to be turned on or off and the output voltage to be either high or low, or true or false, depending on the terminology associated with a particular application. Generally, digital circuits, no matter how complex, are operated at low voltages, normally ranging between 3 and 10 V.

Linear Circuits. Linear circuits are not as clear-cut in definition. Generally, they encompass analog functions, such as amplifiers, whose output is *proportional* to the *level* of the input signal. Also included in the linear category are analog-to-digital (A/D) and digital-to-analog (D/A) converters, comparators, voltage regulators, and even interface circuits whose functions are more digital than analog in nature.

In recent years, the proliferation of circuits and the increasing complexity which permits the combination of digital and linear functions in a single chip have made these classifications virtually obsolete. The present trend is toward definitions that classify circuits in terms of their primary intended applications. Categories such as logic circuits, microcomputer circuits, voice-data circuits, analog circuits, power-conversion circuits, etc., are becoming more commonplace. While such definitions also have limitations and while there is as yet no standardization of such classifications, they serve as the basic subsections for the following discussions. These discussions, moreover, will be limited primarily to standard circuits, available off the shelf from IC manufacturers and distributors as the basic building blocks for system designs. A brief discussion of the growing trend toward semi-custom and custom approaches is included.

15. Integrated-circuit complexity. Integrated circuits in general and logic circuits in particular are classified within four basic categories: small-scale integration (SSI), medium-scale integration (MSI), large-scale integration (LSI), and very-large-scale integration (VLSI). Initially, each of these encompassed a degree of chip complexity involving a specified number of equivalent gate circuits (gate equivalents). The rapid progress in IC technology has rendered this practice virtually obsolete, since the VLSI circuit of only a decade ago would hardly be classified as more than MSI today. Nevertheless, the terms still apply on a relative basis, although the judgment of where one classification ends and the other begins is largely a matter of personal interpretation.

16. Integrated-Circuit Selection

Standard versus Custom Circuits. From the very beginning of the technology, the development and production of state-of-the-art ICs has been a time-consuming and expensive endeavor. For IC manufacturers, each new circuit represented a gamble on whether the device would sell in large enough quantities to permit recovery of the development cost and, subsequently, to produce a profit. In the earliest days, the odds were good because there were enough universally required circuits to assure large-scale acceptance. Gates and flip-flops for digital equipment, operational amplifiers, and voltage regulators in the linear field were certain to find ready markets. IC manufacturers found it easy to identify such circuits and rapidly built up inventories of a large variety of “standard” off-the-shelf devices that were sold to all comers.

Even then, however, some equipment manufacturers opted to have special proprietary circuits designed on a custom basis if their volume requirements were large enough to amortize development costs. In many instances, these custom circuits, after an agreed-upon time, became standard circuits offered on the open market.

As the technology advanced, it became more difficult to identify increasingly complex circuits that would find a large general market. Accordingly, the development of standard circuits has become a greater gamble for the manufacturer. And as the demand for ever-increasing device complexity has increased, the number of original-equipment manufacturers (OEMs) able to afford the cost of designing such proprietary VLSI circuits is dwindling. As a result, an intermediary technology has emerged that permits the development of very complex semicustom circuits, utilizing a library of predefined basic circuits.

Called applications-specific integrated circuits (ASICs), these devices sacrifice some custom-design flexibility, by being constrained to the basic-circuit library, but are much less costly and less time-consuming to produce.

ASIC technology is applicable largely to circuits so complex that they can be implemented only through computer-aided-design (CAD) techniques. Currently, two types of ASIC techniques have reached production status: gate arrays and standard cells.

Gate Arrays. The most complex digital logic circuits can be designed through the interconnection of basic gate circuits in various unique arrangements and sequences. IC manufacturers take advantage of this fact by producing complete wafers full of identical basic gate circuits. Then they provide a computer-stored program for interconnecting the gates into circuits of increasing complexity. During the design cycle, the system designer formulates a complex design by using the library of subcircuits issued by the IC manufacturer. The computer-stored program is then utilized to develop an interconnect system that converts the network of gates on the wafer into an exact duplication of the complex design. Use of prefabricated gate arrays and a proven CAD program saves months of time compared with custom design of VLSI circuits.

Macrocell Arrays. Macrocell arrays are similar to gate arrays, except that the prediffused wafers do not contain prewired basic gates but rather a pattern of islands each of which contains a number of prediffused transistors and resistors (Fig. 6.49). The IC manufacturer issues a library of predefined functions called *macros* that the computer program can produce from the discrete parts within each island and subsequently interconnect into a custom IC. In theory, the macrocells—flip-flops, counters, registers, and a wide variety of additional digital building blocks—can be designed more efficiently from discrete components than from basic gates, yielding smaller geometries (equivalent to lower cost) and improved performance. As with gate arrays, the designer develops VLSI circuits with the macros contained in the library, and the computer develops the necessary mask patterns that convert the prediffused macrocell wafers into functional VLSI circuits.

Commercial Implementation. The efficiency of the gate-array-macrocell-array concepts depends upon the availability of arrays that closely match the needs of the designer. For example, a prediffused array with fewer on-chip gates (or islands) than required for the envisioned VLSI circuit would increase the number of IC packages; an array with too many on-chip gates would result in unused wafer space. IC manufacturers therefore offer a variety of array sizes (Table 2) that permit a close match between need and availability. Moreover, such arrays are available for a variety of technologies (bipolar and MOS) to offer a number of performance options.

Standard Cells. Standard-cell concepts go one step further toward true custom designs than gate or macrocell arrays do. These too start with a computer-stored catalog of basic circuits (standard cells) that form the building blocks for VLSI designs. Rather than using prediffused wafers of basic cells, with each cell requiring an equal

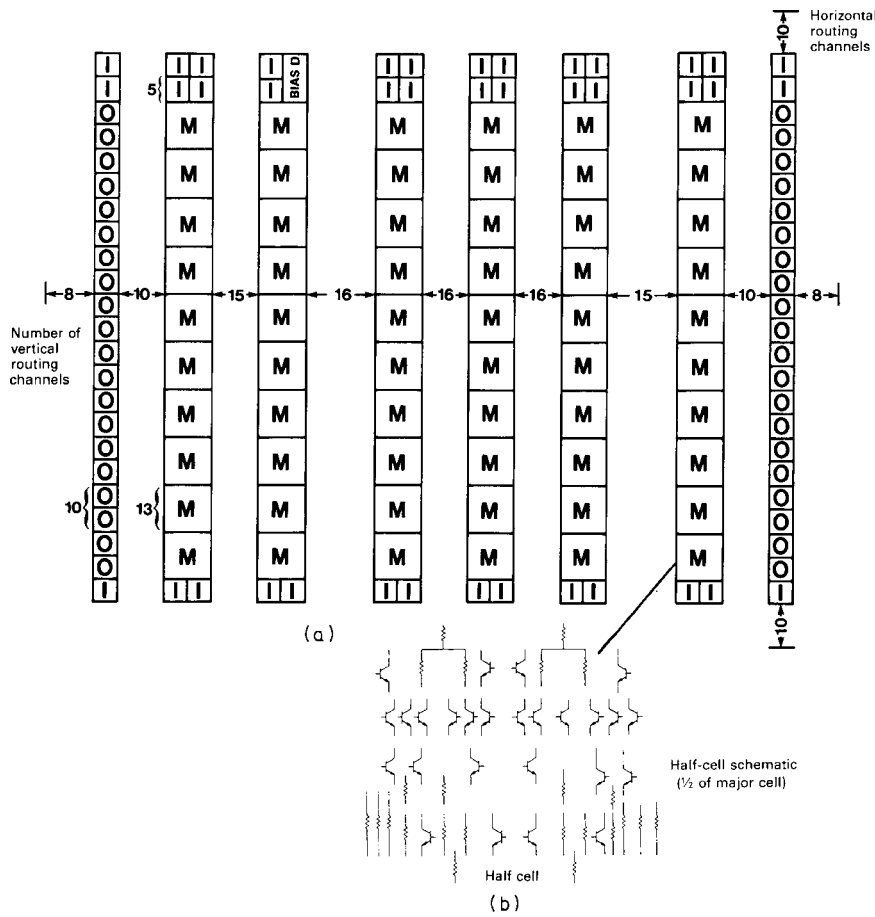


FIGURE 6.49 A typical macrocell-array chip layout (a) illustrates cell placement and routing channels. Component content (b) represents one-half of the complement within each major cell. *M* = major cell; *I* = input cell; *O* = output cell.

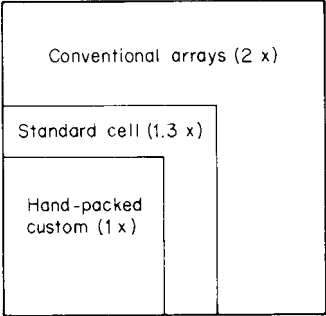


FIGURE 6.50 Relative comparison of die size between full-custom and semi-custom circuits.

amount of chip space, a standard cell is designed to provide maximum efficiency with a layout requiring a minimum amount of space. The computer then provides the necessary mask patterns for the fabrication of the complete circuit, not just the interconnect patterns for the prediffused arrays. The use of custom-designed standard cells, compared with equivalent cells made from array components, can save a significant amount of chip space (Fig. 6.50) and produce end results that closely rival those of true custom circuits. Yet, because these end circuits are fashioned from predefined building blocks with the computer doing much of the design, development time is substantially reduced.

TABLE 2 Macrocell Arrays*

Technology:	ECL			TTL			ECL-TTL		
Bipolar array number:	MCA 600 ECL	MCA 1200 ECL	MCA 2500 ECL	MCA 500 ALS	MCA 1300 ALS	MCA 2800 ALS	MCA 2900 ETL		
Gate equivalent	652	1192	2472	533	1280	2720	2958		
Major or primary cells	24	48	110	24	60	130	130		
Macrocell components	67	106	178	77	140	250	272		
I/O ports									
Input only	28	34	52	30	36	...	30 TTL, 72 ECL		
Output only	15		
Uncommitted	18	26	68	12	40	120	40 TTL, 48 ECL		
Maximum gate delay, ns	1.2	1.2	0.5	3.0	3.0	1.1	1.1		
Maximum toggle frequency, MHz	160	160	400	80	80	125	125		
Power dissipation, W (typical)	2.2	4.0	6.5	1.0	1.4	2.5	4		
Technology	3-μm silicon-gate HCMOS				2-μm silicon-gate HCMOS				
CMOS array number	HCA 6306	HCA 6312	HCA 6324	HCA 6348	HCA 6206	HCA 6212	HCA 6225	HCA 6236	HCA 6248
Gate equivalent	648	1200	2295	4860	648	1200	2430	3699	4860
Major or primary cells	216	400	765	1620	216	400	810	1233	1620
Macrocell components	104	104	104	104	104	104	104	104	104
I/O ports									
Input only	2 + 1 or 0 + 1	17 + 1	58 + 1	53 + 1	2 + 1 or 0 + 1	17 + 1	8 + 1	0 + 1	53 + 1
Output only
Uncommitted	35	42	56	54	35	42	80	95	5
Maximum gate delay, ns			2.5 typical				1.9 typical		
Maximum toggle frequency, MHz			70 typical				85 typical		
Power dissipation, W (typical)	Dependent on the number of outputs switched simultaneously				Dependent on the number of outputs switched simultaneously				

*These arrays run the gamut of technologies and offer a variety of cell configurations. Comparative speed-power specifications are given. [Motorola Inc.]

INTEGRATED-CIRCUIT LOGIC FUNCTIONS

Logic circuits are implemented with either bipolar or MOS technologies. Bipolar logic circuits encompass a variety of different basic “families,” each with its unique advantages and limitations. These various families are divided into two generic categories: saturated logic and nonsaturated logic. In saturated-logic designs, the transistor (acting as a switch) is driven from the cutoff condition to the saturated condition by the input signal. In nonsaturated logic, the transistor is not switched from full off to full on but swings above and below a specified reference level. Thus, nonsaturated logic avoids some of the inherent transistor time delays associated with saturated-mode switching but pays for the resulting improvement in switching speed with increased power consumption.

Integrated logic circuits have gone through a number of iterations. The early forms, carryovers from discrete designs, were bipolar resistor-transistor-logic (RTL) and diode-transistor-logic (DTL) circuit designs, all utilizing saturated-logic forms. These have been largely replaced with a variety of transistor-transistor-logic (TTL) designs utilizing bipolar technology, with bipolar nonsaturated emitter-coupled-logic (ECL) designs where maximum speed is required, and with CMOS (complementary MOS) designs using MOS technology where low power consumption is a basic requirement. In general, SSI and MSI circuits are being implemented with bipolar and CMOS technologies, both of which offer a wide selection of standard circuits as building blocks. LSI and VLSI designs utilize CMOS technology to an ever-increasing degree.

17. Transistor switching characteristics. While the performance of a logic family is judged on a number of characteristics, the most important of these is switching speed. *Switching speed* defines the time it takes for a transistor, or gate, to change its output from one state to another in response to a change in the input signal.

Figure 6.51 shows a typical switching transistor and its associated input and output waveforms. In a “perfect” switch, the output current would follow the input-voltage waveform exactly. The practical circuit involves a number of delays. Note that collector current

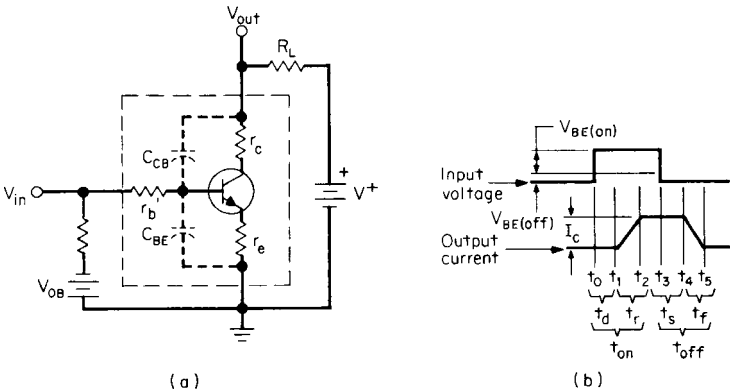


FIGURE 6.51 A typical saturated-mode switching circuit (a) and its input and output waveforms (b).

does not begin to flow until time t_1 , some time after t_0 , where the base voltage rises to its maximum value. The difference between t_0 and t_1 is the *turn-on delay time* (t_B), caused by the need to charge or discharge the transistor interelectrode capacitances (C_B and C_C) before current flow can begin.

At t_1 collector current begins to flow but cannot rise instantly to its maximum value because of the finite time required for charge carriers to traverse the base region of the transistor between the emitter and the collector. The time required for the current to rise from 10 to 90 percent of its maximum value (from t_1 to t_2) is called *rise time* (t_B).

When the transistor is driven into saturation, both the emitter and the collector junctions are forward-biased and dump minority carriers (electrons, in the case of an n - p - n transistor) into the base region. When the base voltage suddenly drops to zero, at t_3 , these carriers must be ejected through the collector circuit. Hence, current continues to flow until all these carriers have been pulled out of the base region. The time difference between t_3 (the drop of the base signal to zero) and the point where collector current begins to drop at t_4 is called *storage time* (t_s). Even then, collector current cannot drop instantly to zero because the interelectrode capacitances cannot discharge instantly. The gradual decay of collector current between t_4 and t_5 is the *fall time* (t_f).

From the above, it is clear that a practical transistor switch involves both a turn-on delay time (t_{on}) and a turn-off delay time (t_{off}). Of these, t_{off} is by far the greater and is significantly influenced by t_s , which in turn results from driving the transistor into saturation.

The Gate Function. The basic circuit of all logic elements is the gate circuit. Virtually all building blocks associated with digital equipment, flip-flops, counters, shift registers, etc., can be made by interconnecting a series of gate circuits. Hence, the complexity of any given logic circuit is specified by the number of equivalent individual gate functions it encompasses. The electrical characteristics of a basic gate circuit within a given logic family (TTL, ECL, CMOS, etc.) are often used for comparing the capabilities of various logic families.

A gate is simply an electrical or electronic switching circuit, with two or more inputs, through which power is applied to a load. The mechanical equivalent (Fig. 6.52a) shows an OR gate consisting of two switches (relays) connected in such a way that power is applied to the lamp (load) when either switch *A* or switch *B* is closed. Figure 6.52b shows an AND gate which applies power to the load only when switch *A* and switch *B* are closed.

In Fig. 6.52c, an additional relay is connected to the OR circuit so that power is applied to the load only when switch *A* and switch *B* are *not* closed. This is a NOT OR, or NOR, gate.

Similarly, an AND circuit connected in such a way that the load is powered only when switch *A* and switch *B* are *not* closed simultaneously (Fig. 6.52d) is a NAND gate.

The additional relays perform the function of an *inverter*; i.e., they invert a normally high (or 1) output of an OR or AND gate into a low (or 0) output, and vice versa. Hence, an OR or AND gate can be converted to the NOR or NAND function by running the outputs through an inverter.

In Fig. 6.53, the switching relays of Fig. 6.52 have been replaced by diodes which serve similar functions. In the OR gate (a), the output is high (or 1) when the input to diode *A* or diode *B* is high. In the two-input AND gate (b), the output is high only when both diode inputs are high. If either input were low, the corresponding diode would conduct and the output would be equal to the very low (0) voltage drop of the conducting diode.

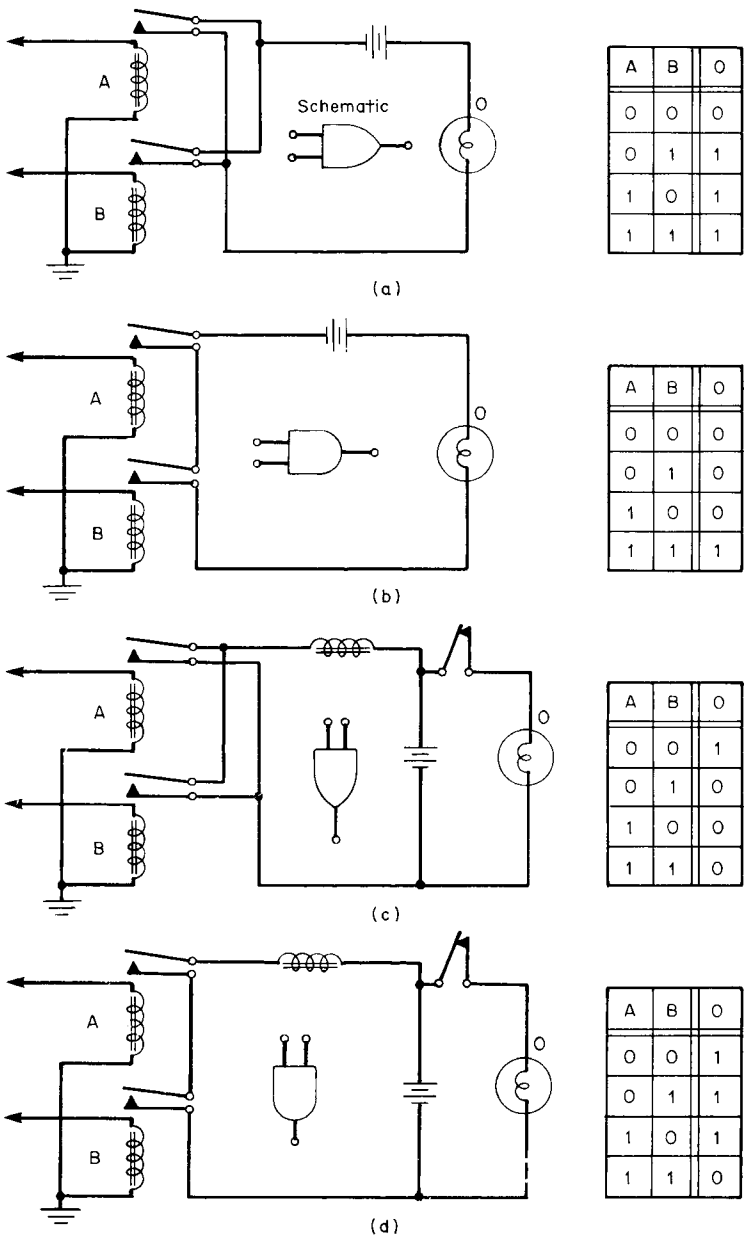


FIGURE 6.52 Basic mechanical gate functions. (a) Mechanical equivalent of a two-input OR gate and its representative functional truth table which illustrates the status of the output *o* as a function of the status of inputs *A* and *B*. (b) Mechanical AND gate and its accompanying truth table. (c) NOR gate and its truth table. (d) NAND gate and its truth table.

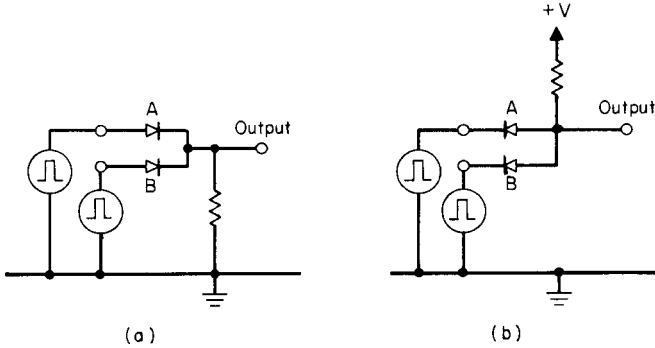


FIGURE 6.53 Diode logic OR (a) and AND (b) gates.

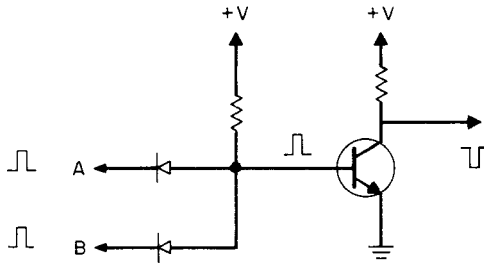


FIGURE 6.54 Basic NAND function.

When a common-emitter transistor circuit is added to the above circuits (Fig. 6.54), the transistor automatically converts a low-level input into a high-level output (and a high-level input into a low-level output), thereby acting as an inverter. Thus, a transistor added to a diode AND gate results in a NAND gate, and a transistor added to a diode OR gate results in a NOR gate.

18. Saturated-logic gates. In many switching-circuit families the transistors are driven from deep-in cutoff, where the collector voltage is equal approximately to the supply voltage, to a high level of conduction (saturation), where the collector junction becomes forward-biased, resulting in a very low collector voltage, $V_{CE(sat)}$, that remains relatively constant even if the base-drive voltage is further increased. In this latter condition, virtually all the power supply voltage is dropped across the collector load resistor—a limiting condition that prevents any further increase in collector current even if the charge injected into the base is increased by a further rise in base voltage. This is called *saturated-mode switching*.

Diode-Transistor Logic (DTL). The basic DTL gate circuit is the DTL NAND gate shown in Fig. 6.55. Note that it uses the NAND circuit of Fig. 6.54 plus an offset-voltage diode circuit. The offset-voltage diode circuit, being returned to a negative bias voltage through resistor R_3 , improves noise immunity and transistor turn-off time.

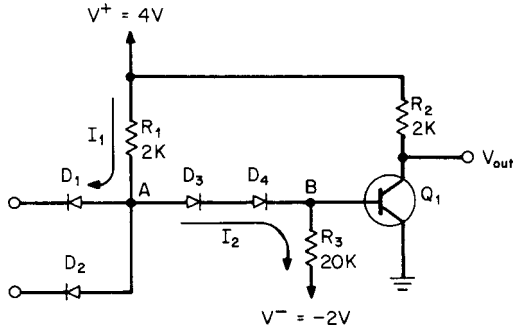


FIGURE 6.55 Basic DTL NAND gate. Operation: With a low-state voltage, say $V_{CE(sat)} = 0.1$ V, applied to input diode D_1 or D_2 , current I_1 will flow through the diode, causing the voltage at point A to equal one diode drop, or approximately 0.7 V. At the same time, current I_2 will flow through diodes D_3 and D_4 , causing the voltage at point B to be two diode drops less than that at point A, or approximately -0.7 V. With a negative voltage thus applied to the base of transistor Q_1 , the transistor will be cut off and its collector voltage V_{out} is equal to V^+ , or 4 V (neglecting leakage current). If we now apply a high-state voltage, say 4 V, to both input diodes, they will be reverse-biased and become nonconductive. The base of Q_1 therefore “sees” a relatively high positive voltage, and the transistor will be driven into saturation. Its output voltage then is $V_{CE(sat)}$. Therefore, V_{out} swings from $V_{CE(sat)}$ to nearly V^+ .

Transistor-Transistor Logic (TTL).

The DTL circuit just described was the basis of a more advanced logic line currently in use. Known as transistor-transistor logic (TTL), this logic is considerably faster than other forms of saturated logic.

The basic diagram of a typical TTL gate circuit is shown in Fig. 6.56. The principal difference between DTL and TTL is that the latter uses the collector-base junctions of a multiple-emitter transistor Q_1 as the input diodes and the collector-base junction as the off-set diode. This, however, has a considerable effect on the operation, as follows:

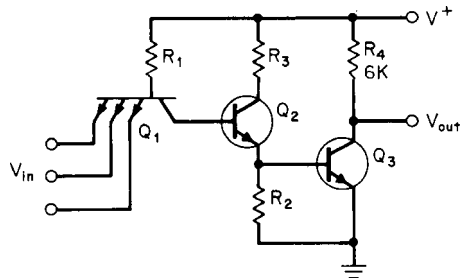


FIGURE 6.56 Basic TTL gate circuit.

When the input voltage to one or more of the Q_1 emitters is very low, say, zero, the base-emitter junction is forward-biased, through R_1 , to a high positive voltage. Current flow through this junction, therefore, establishes approximately 0.7 V at the base. The collector of Q_1 is returned to ground through the base-emitter junctions of Q_2 and Q_3 . Thus, the

collector-base junction is also forward-biased, and it would appear that there should be a current flow through the emitter-base junctions of Q_2 and Q_3 . This cannot occur, however, because it would require a Q_1 base voltage of at least three junction drops [$V_{BE(Q3)} + V_{BE(Q2)} + V_{CB(Q1)}$], or 2.1 V, to turn both Q_2 and Q_3 fully on. Therefore, Q_2 and Q_3 remain cut off and the output voltage V_{out} is equal to V^+ (minus a small leakage drop).

Now if the input voltage is increased to approximately 0.6 V, the Q_1 base voltage rises to 1.3 V, and the collector junction of Q_1 and the base junction of Q_2 will be brought to the threshold of conduction through R_2 . As input voltage increases still further to about 1.3 V, Q_1 base voltage rises to 2.0 V, the collector and Q_2 base junctions become fully conductive, and the voltage across R_2 rises to 0.6 V. This brings Q_3 to the threshold of conduction, so that any additional increase in input voltage causes Q_3 to turn on and the output voltage drops to $V_{CE(sat)}$.

For most of the operating cycle the multiple-emitter input transistor acts as though it were a pair of back-to-back diodes. During one small part of the turn-off operation it does act like a transistor, thereby improving circuit speed. Specifically, when the input is in the high state and both Q_2 and Q_3 are conducting, the voltage at the base of Q_1 is 2.1 V while the base voltage of Q_2 is 1.4 V. Thus, Q_2 is in saturation, and a heavy charge is built up in its base region. Now the input suddenly drops to zero and the Q_1 base voltage drops to 0.7 V (the forward voltage drop of the input diode). If the Q_1 collector-base junction were an ordinary diode, it would be reverse-biased and Q_2 would be suddenly cut off. As a result, the stored charge in the Q_2 base would have to be dissipated by recombination, and Q_2 would continue to conduct until equilibrium was restored. Storage time, therefore, would be relatively long.

With the transistor, however, for the conditions existing at Q_2 turn-off, the emitter of Q_1 quickly drops to nearly zero volts. The base drops to 0.7 V, but the collector remains near 1.4 V because of the charge in the base of Q_2 . These are the proper biases for transistor action and cause a sudden surge of Q_1 collector current that quickly clears Q_2 of its stored charge. Thus, storage time of Q_2 is drastically reduced.

19. Nonsaturated-logic gates. See Secs. 20, 21, and 22.

20. Schottky TTL. The basic TTL family has been substantially improved by a number of variations, involving the use of Schottky diodes to keep the transistors out of saturation during turn-on. Since the switching time delay associated with transistor *storage time* is the result of driving the device into saturation, nonsaturated logic can considerably improve switching speed.

Schottky TTL simply involves the use of a Schottky diode between collector and base of a transistor, as shown in Fig. 6.57. Since this configuration can be achieved during the fabrication of the transistor without the use of a separate diode, it adds little to the device cost, but it has a great effect on performance.

Specifically, since the turn-on voltage for the diode is considerably less than that for a conventional junction diode (in this case, the collector-base junction of the transistor), diode conduction occurs before the $V_{CE(sat)}$ region of the transistor is reached. Therefore, the collector voltage will be clamped at a value that prevents the collector-base junction from becoming forward-biased, and storage-time delay during turn-off is avoided (see Secs. 17 to 23).

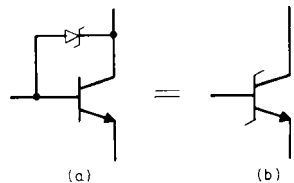


FIGURE 6.57 A representative Schottky-clamped transistor (a) is normally indicated by the schematic symbol in (b).

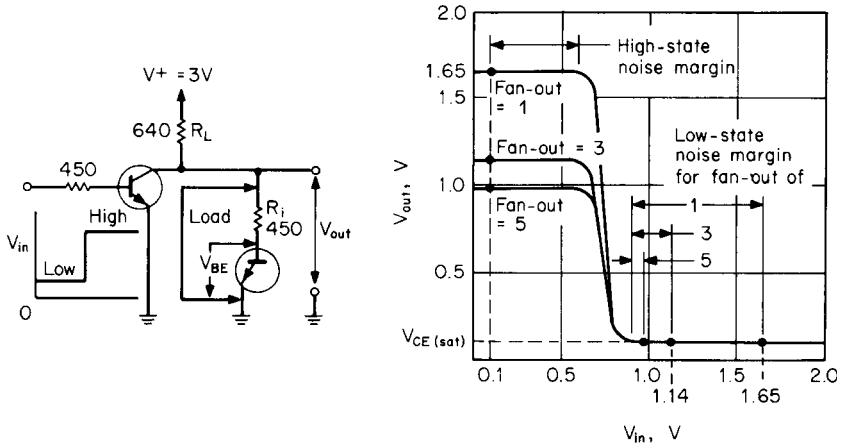


FIGURE 6.58 A simple RTL inverter circuit is used here to demonstrate the concept of noise immunity and the fanout effect on noise immunity.

By raising the minimum achievable collector voltage somewhat, the maximum output voltage of the transistor is correspondingly reduced. This lowers the noise margin slightly, but not enough to be seriously detrimental for most applications.

Noise margin can be simply described with the aid of the basic RTL inverter circuit and transfer characteristics in Fig. 6.58. From the transfer characteristics it is seen that when the input to the transistor is low (say, 0 to 0.6 V in this instance), the output voltage is high and current is delivered to the load. As the input voltage rises to approximately 0.6 V, the transistor begins to conduct and its output rapidly drops toward $V_{CE(sat)}$ (approximately 0.1 V). For any input voltage greater than 0.9 V, the output remains at $V_{CE(sat)}$. The output voltage swing therefore is from 0.1 to 1.65 V.

Under low-input conditions, if a noise pulse of 0.5 V or higher were to appear at the input of the gate, the noise voltage would add to the 0.1-V input voltage and the gate would tend to change its output from high to low. Therefore, the gate is immune to noise signals up to 0.5 V, or it has a high-state noise margin of 0.5 V.

The RTL circuit is used in the above example because it permits a simple discussion of noise immunity (it is no longer a popular logic format). It also offers a simple demonstration of the effect of fanout (FO) on noise immunity. In this instance, if the output voltage were applied simultaneously to five succeeding stages, the high-state voltage would drop to approximately 1 V and the low-state noise immunity would approach zero.

Schottky TTL logic families now include a variety of circuit innovations. All are based on the familiar 54/74 TTL series, which for years has been the dominant logic family for general-purpose applications. Only within the last few years has the Schottky LSTTL series made significant inroads, replacing the original 7400 series with lower power requirements and higher speed. The latest in this progressive logic series are the advanced low-power Schottky (ALSTTL) family and the FAST Schottky TTL series.

The low-power Schottky (LSTTL) family combines an improvement in current and power reduction over the standard 7400 TTL by a factor of 5. This is accomplished by advanced processing and by using Schottky diode clamping to prevent saturation.

The advanced low-power Schottky TTL family (ALSTTL) provides a 50 percent power reduction compared with the standard 54/74 LSTTL and yet offers improved circuit performance over the standard LS owing to a state-of-the-art oxide-isolated process (MOSAIC).

ALS also differs from LS in that p - n - p transistors on the input stage are utilized to lower input currents and raise thresholds.

The *FAST Schottky TTL family* provides a 75 to 80 percent power reduction compared with the standard Schottky 54/74S TTL and yet offers a 20 to 40 percent improvement in circuit performance over the standard Schottky owing to the MOSAIC process. Also, FAST circuits contain additional circuitry to provide a flatter power-frequency curve. The input configuration of FAST uses a lower input current, which translates into higher fanout.

Speed-power comparisons of these three families are indicated in Table 3.

TABLE 3 Speed-Power Characteristics for Schottky TTL Logic*

Characteristics	Symbol	LS	ALS	FAST	Units
Quiescent supply current or gate	I_G	0.4	0.2	1.1	mA
Power or gate (quiescent)	P_G	2.0	1.0	5.5	mW
Propagation delay	t_p	9.0	5.0	3.7	ns
Speed-power product	...	18	5.0	19.2	pJ
Clock frequency (D-F/F)	f_{\max}	33	35	125	MHz
Clock frequency (counter)	f_{\max}	40	45	125	MHz

*All typical ratings.

21. Emitter-coupled logic (ECL). Emitter-coupled logic is the fastest form of logic currently available. It is nonsaturated logic which is extremely flexible, with both OR and NOR logic outputs available from the same basic gate configuration.

ECL utilizes a pair of input transistors, one of which is in a conductive state while the other is nonconductive. Switching is accomplished by means of a signal appearing across a common-emitter resistor. The basic gate circuit of an emitter-coupled logic circuit is shown in Fig. 6.59. It consists principally of a switching circuit, followed by an emitter-follower output circuit. The switching circuit consists of transistors Q_1 and Q_2 , which are connected in a differential amplifier configuration. Operation is as follows:

Assume for a moment that all input transistors Q_1 are cut off owing to logical 0 being applied to their gates. Q_2 has its base connected to a fixed stable bias source V_{BB} of -1.15 V, which causes Q_2 to conduct heavily since its emitter is connected, through R_{E2} , to -5.2 V. Under these conditions the voltage drop across the base-emitter junction of Q_2 is approximately 0.75 V, and the current through Q_2 is

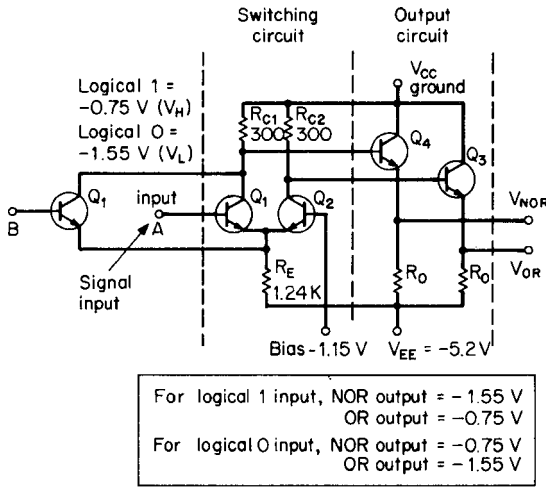
$$\begin{aligned}
 I_{Q2} &= [V_{EE} + V_{BE(Q2)} + V_{BB(Q2)}]/RE \\
 &= (-5.2 + 0.75 + 1.15)/1.24 \\
 &= -2.66 \text{ mA}
 \end{aligned}$$

and $V_{C2} = I_{Q2}R_{C2} \approx -0.8$ V


In the on condition, therefore, Q_2 is not in the saturated mode because the voltage across the collector-base junction is still positive ($V_C - V_B$), keeping this junction reverse-biased.

Transistor Q_3 , seeing -0.8 V on its base compared with -5.2 V as an emitter source, goes into heavy conduction, yielding the OR output of

$$V_{OR} = V_{C(Q2)} - V_{BE(Q2)} = -(0.8 + 0.75) = -1.55 \text{ V}$$



(a)

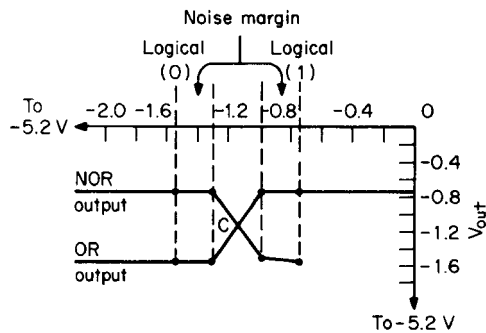

(b)

FIGURE 6.59 (a) Basic ECL gate circuit. (b) Typical transfer characteristic curve.

which represents the output-low condition.

At the same time, the base of Q_4 , being connected to the collector of Q_1 (which is nonconductive), sees a voltage of zero, causing this transistor to conduct even more heavily. Its output voltage is

$$V_{NOR} = V_{C(Q1)} - V_{BE(Q4)} = -0.75 \text{ V}$$

which represents the output-high condition indicative of the NOR function.

If a positive-going signal is now applied to one or more of the Q_1 transistors, the transistors begin to conduct, tending to increase the emitter voltage of Q_1/Q_2 . In turn, this reduces the forward bias on Q_2 , causing a nearly equivalent decrease in Q_2 collector current. Thus, it is clear that emitter current remains essentially constant but is switched from Q_2 to Q_1 . At the same time, the output-voltage levels of Q_3 and Q_4 reverse from their

previous states, which again is consistent with their respective OR/NOR functions. The transfer characteristics illustrated in the graph of Fig. 6.59*b* indicate the following:

1. When an ECL gate is driven by another ECL gate, it provides two output signals: one identical to the input, the other equal to the inverted input.
2. The fixed logic levels are -0.75 (logical 1) and 1.55 (logical 0) V, resulting in a difference of 800 mV between the on state and the off state.
3. The transistors are never driven into saturation; therefore, storage time is eliminated.
4. The noise margin is approximately 250 mV.
5. The total current flow in the circuit remains relatively constant, thereby maintaining a relatively constant drain on the power supply and preventing internally generated noise spikes.

The circuit, furthermore, has a very high input impedance and a very low output impedance, which makes high fanout possible. Thus, ECL not only is the highest speed logic available but provides other features that make it highly desirable for advanced systems. Its principal detriment is its limited (800-mV) logic swing, which makes it somewhat more sensitive to externally generated noise than some other logic forms. In addition, power consumption is considerably higher than for other logic forms.

Like TTL, emitter-coupled logic also comprises a number of families with progressively improved performance. Three families are in popular use: ECL 10K, ECL 10KH, and ECL III.

The ECL 10K series has become the industry standard for high-speed applications. To make the circuits comparatively easy to use, edge speed (rise and fall times) are deliberately slowed to 2.0 ns while the important propagation delay is held to 2.0 ns. The slow edge speed permits use of wire-wrap and standard printed-circuit lines; however, the circuits are specified to drive transmission lines for optimum performance.

The newer ECL 10KH family features 100 percent improvement in propagation delay and clock speeds while maintaining a power supply current equal to that of the ECL 10K. This ECL family is voltage-compensated, which allows guaranteed dc and switching parameters over a ± 5 percent power supply range. Noise margins of ECL 10KH are 75 percent better than those of the ECL 10K series. ECL 10KH is compatible with ECL 10K and ECL III, a key element in allowing users to enhance existing systems by increasing the speed in critical timing areas.

ECL III, with its 1-ns gate propagation delays and greater than 1-GHz flip-flop toggle rates, is the industry speed leader. The 1-ns rise and fall times require a transmission-line environment for all but the smallest systems. For this reason, all circuit outputs are designed to drive transmission lines, and all output logic levels are specified when driving $50\text{-}\Omega$ loads. Because of ECL III's fast edge speeds, multilayer boards are recommended above 200 MHz. ECL III's popularity is with high-speed test and communications equipment.

Speed-power comparisons for Motorola ECL families are given in Table 4.

TABLE 4 ECL Family Comparisons

Parameter	MECL 10KH	MECL 10K		MECL III
		10,100 series 10,500 series	10,200 series 10,600 series	
Gate propagation delay	1.0 ns	2 ns	1.5 ns	1 ns
Output edge speed	1.2 ns	2.2 ns	2.0 ns	1 ns
Flip-flop toggle speed	250 MHz min	125 MHz min	200 MHz min	300–500 MHz min
Gate power	25 mW	25 mW	25 mW	60 mW
Speed-power product	25 pJ	50 pJ	37 pJ	60 pJ

22. CMOS logic. While individual p -channel and n -channel MOS devices have certain performance advantages over bipolar structures and while a p -channel logic line did gain some popularity for a short time, these advantages were not sufficient to displace bipolar logic. Not until processing technology permitted *complementary* MOS cells to become space-competitive with individual bipolar cells did MOS become a serious challenge. Now, CMOS logic families promise to become the dominant logic form over the next few years, particularly in the areas of general-purpose logic, where speed is not an overriding consideration, and in VLSI circuitry, where high chip density demands the lowest possible dissipation.

Some of the features of CMOS are attributable directly to the basic MOS transistor structure, while others are the result of (or are enhanced by) the complementary symmetry configuration. For example, the MOS transistor inherently has a very high input resistance, thereby eliminating dc fanout restrictions and providing low power dissipation. The CMOS configuration reduces power dissipation even more and increases speed, noise immunity, and logic swing.

A simple p -channel MOSFET inverter and its transfer characteristics are shown in Fig. 6.60a. (The use of a second [fixed-bias] MOSFET in place of a conventional load resistor is particularly beneficial since a resistor would require far more chip area. Thus, MOS is cost-effective by increasing the permissible number of circuits on a wafer.)

As indicated by the transfer characteristic curve, for an input voltage V_{in} between ground and V_{to} , transistor Q_s is off, so the output voltage V_o approaches the V^- state. As the input voltage approaches threshold voltage V_{to} , Q_s begins to conduct, and for further increases of V_{in} the output voltage is reduced. Note, however, that for a fixed MOSFET load resistance V_o can never reach zero because the resistance of Q_o never reduces to zero regardless of the value of V_{in} . In fact, its on resistance is substantially higher than that of bipolar transistors. Therefore, the total output-voltage swing is always less than the supply voltage V^- .

The complementary configuration (Fig. 6.60b) results in far more satisfactory performance. In this connection, the signal is applied simultaneously and in phase to both transistors so that when the signal value is zero, Q_1 is off and Q_2 is on. Under this condition, the output voltage is very nearly the full supply voltage. When the gate voltage goes high (positive), transistor Q_1 is turned on while Q_2 is turned off. This causes V_o to go virtually to zero because the current flowing through Q_1 is the leakage current of Q_2 , which is very, very low. (The resistance of an MOSFET in cutoff is approximately 5000 M Ω , resulting in a leakage current of less than 1 nA.)

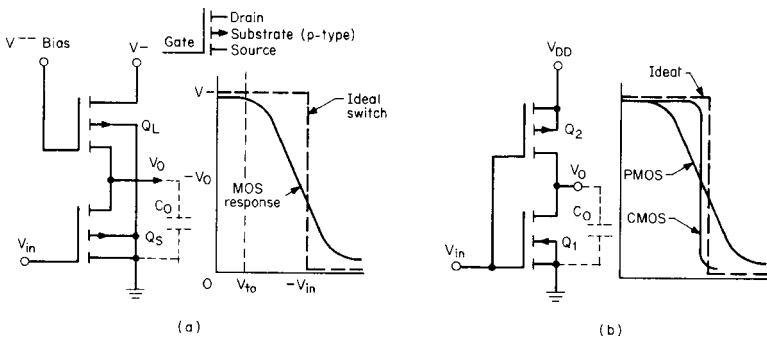


FIGURE 6.60 Inverter circuits and their response characteristics. (a) Typical PMOS inverter circuit using a fixed-bias MOSFET as a load. Transfer characteristics compare response with a “perfect” switch. (b) Typical CMOS inverter circuit with p - and n -channel MOSFETs. Characteristics closely approach an “ideal” switch.

The transfer characteristic curve for the complementary circuit is shown in comparison with that of a single-ended circuit. Observe that the slope of the complementary circuit curve is much steeper in the transition region, thus providing much greater noise immunity. This is caused by the input signal acting on both transistors in opposition, turning one device on and the other off.

In addition, it is evident that the circuit conducts current only during a very short time after turn-off (Fig. 6.61), as required to charge capacitor C_o through the load (the load is assumed to be another CMOS inverter circuit). This reduces power dissipation of the structures to such a low value that thousands of them can be fabricated within a tiny chip of silicon without special heat-sinking techniques.

Progressive improvements in technology have resulted in the current availability of two CMOS logic families: a standard metal-gate family and a high-speed silicon-gate family. In silicon-gate CMOS, the metal (aluminum) gate associated with standard CMOS is replaced by a heavily doped silicon layer which serves a similar function but has the following advantages:

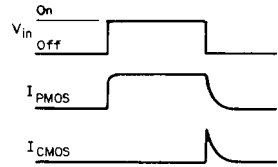


FIGURE 6.61 A comparison of current flow in a PMOS and a CMOS inverter during a full on-off cycle of V_{in} .

1. It reduces the threshold voltage required to turn the transistor on.
2. It provides self-alignment of the gate electrode, thereby simplifying manufacture and improving fabrication accuracy.
3. It reduces gate-to-drain capacitance, thereby increasing circuit speed.
4. It permits improved space utilization, thereby increasing packing density.

General comparisons of speed and power requirements for the two CMOS families are indicated in Table 5.

TABLE 5 Speed-Power Characteristics for CMOS Logic*

Characteristic	Symbol	Standard CMOS	High-speed CMOS	Units
Quiescent supply current or gate	I_G	0.0001	0.0003	mA
Power or gate (quiescent)	P_G	0.0006	0.001	mW
Propagation delay	t_p	125	8.0	ns
Speed-power product	...	0.075	0.01	pJ
Clock frequency (D-F/F)	f_{max}	4.0	40	MHz
Clock frequency (counter)	f_{max}	5.0	40	MHz

23. Comparison of logic-family characteristics. The variety of established and newly introduced logic families challenges the system designer with choosing the best available technology for each design. Each family offers distinct advantages and limitations.

The three most often used characteristics for determining family selection are propagation delay, operating frequency, and power consumption. For the logic families described here, these characteristics are displayed and compared in the graphs of Fig. 6.62. Graph *a* illustrates the tradeoffs between power dissipation and propagation delay at low operating frequencies. As frequency increases, the changes in power-dissipation characteristics of the various families vary considerably, as shown in graph *b*. These factors, plus the ever-changing impact of economics, must be considered in the selection of the most suitable logic line.

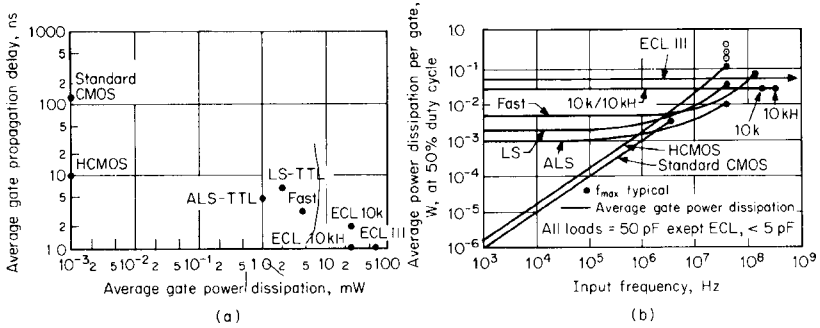


FIGURE 6.62 A comparison of major characteristics of various logic families. (a) General comparison of speed-power characteristics. (b) Variations in power dissipation as a function of operation frequency.

Linear-Circuit Families. Linear (analog) integrated circuits are as pervasive and as unique as the markets they serve. They do not lend themselves readily to classification by building-block families, as do digital circuits for which standardized basic circuits can be used repetitively in various combinations to build highly complex end systems. Linear circuits tend to be complete functional circuits applicable to a wide variety of specific unique functions. And as circuit and chip complexity increases, this situation will become even more prevalent.

There are, however, a number of linear classifications that do encompass the family approach. Chief among these are operational amplifiers and voltage regulators. These represent basic circuits utilized in many different pieces of equipment, each of which requires some variation in performance specifications.

24. Operational amplifiers. Throughout history, there has been a continuous goal to develop the “ideal” device for a particular class of application: one that would satisfy all necessary requirements, thereby eliminating the need for any other product. In the field of signal amplifiers, the operational amplifier comes close to approaching that ideal.

Originally, the operational amplifier was designed principally for performing arithmetic operations. In such applications, high amplifier gain was not of critical importance, but absolute stability and accuracy were. These were achieved through the design of a high-gain amplifier that permitted the application of a large amount of negative feedback to provide the necessary accuracy.

This is still the basic design criterion for operational amplifiers. But while virtually any operational amplifier will serve a tremendous number of amplifier functions, the ideal device still remains to be invented. Hence, while the basic operational amplifier exhibits tremendous versatility, the operational-amplifier classification probably contains more type numbers than any other single applications category.

Basically, the operational amplifier is a multistage low-level amplifier with an open-loop gain (A_{VOL} , before the application of negative feedback), ranging from a low of, say, 25,000 (25 V/mV) to 1 million or more. With such high gain levels readily available, further gain increases are apt to be by-products of improvements in other parameters rather than specific design goals. This is evident from Fig. 6.63, which shows the percent of amplifier gain error as a function of open-loop gain. It is clear that for a reasonable closed-loop-gain requirement, say, 100 or less, an open-loop gain of 1×10^6 will permit sufficient feedback to hold gain error to negligible levels.

Since integrated circuits are intolerant of capacitors, analog functions are achieved with dc amplifier configurations. This usually involves *differential* amplifier input circuits which provide stable, direct-coupled amplification with very high circuit gain.

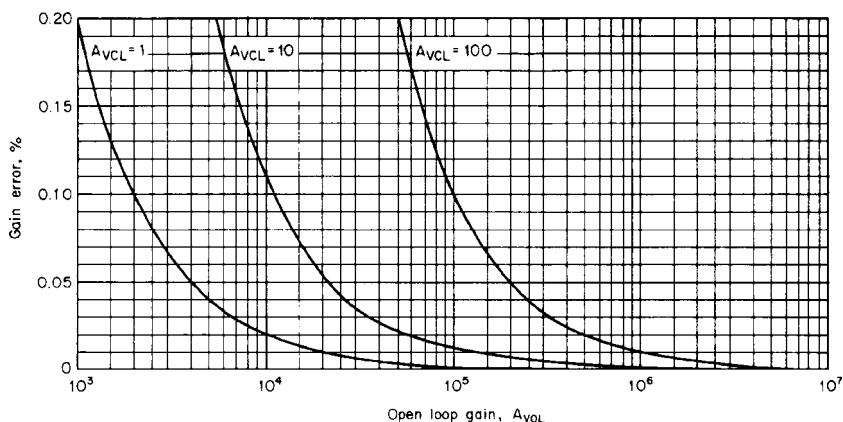


FIGURE 6.63 When operational amplifiers are used at modest closed-loop gains, closed-loop-gain error can be held to negligible levels.

The block diagram for a typical operational amplifier is shown in Fig. 6.64a. Most integrated-circuit operational amplifiers follow this format. The primary differences are those of the circuits within each of the blocks that give the amplifier its ultimate performance specifications.

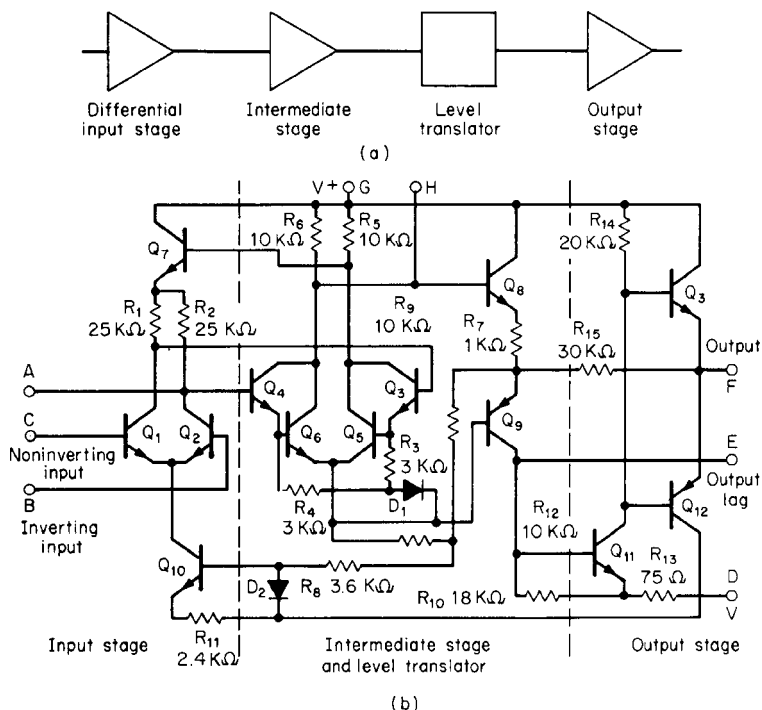


FIGURE 6.64 A block diagram of a typical operational amplifier (a) and schematic diagram of an MC1709 circuit (b).

The first stage of an operational amplifier is a differential amplifier that provides most of the circuit gain. It is desirable to have high gain in this section so that any imperfections in succeeding stages (offset voltage, etc.) have little or no effect on the output. The first stage, too, should employ a current source at the common-emitter node for good common-mode rejection.

The second stage does not require a current source in the emitter because common-mode rejection and other matching-dependent characteristics of the total amplifier are determined primarily by the specifications of the first stage. It is needed primarily to provide additional gain. Its input resistance should be relatively high to prevent excessive loading of the first stage. Therefore, an emitter-follower or Darlington-amplifier stage is often employed.

Since a single-ended output is normally employed for the second stage, it follows that a dc voltage is present at its output. In a direct-coupled system, this dc level is propagated through the amplifier chain so that the amplifier output voltage would have a dc component in addition to a desired ac output signal. Therefore, some means of level translation is employed between the second and final stages. By eliminating the dc level at the final stage, the output voltage will vary about a zero reference level, thus preventing any undesired dc current in the load and also increasing the permissible output-voltage swing.

Differential Amplifier. The differential amplifier is the ideal circuit for direct coupling because of its versatility, its excellent stability, and its high immunity to interfering signals.

From the standpoint of stability, the circuit can be made virtually insensitive to temperature changes, which often cause excessive drift in other configurations. It is versatile in that it may be adapted for applications requiring floating inputs and outputs, as in the case of some sense amplifiers, or for applications in which grounded inputs and/or outputs are more desirable. In both cases, it exhibits the same drift-free interference-rejection capabilities.

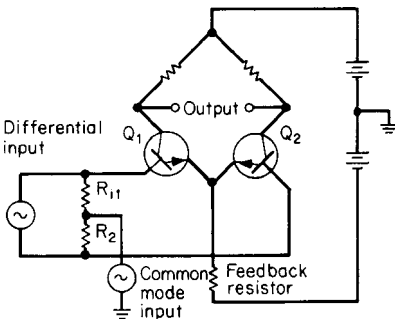


FIGURE 6.65 A basic differential amplifier circuit.

To illustrate these capabilities, examine the schematic diagram of a simple differential amplifier shown in Fig. 6.65. Note that the two transistors with their respective collector resistors form a bridge which, if the transistor and resistor characteristics are identical, is perfectly balanced. Thus, the voltage across the output terminals is zero. If we now apply a differential-mode input signal and if R_{i1} equals R_{i2} , so that the input voltages are equal in amplitude but opposite in phase, there will be a difference in voltage between the two output terminals which is proportional to the gain of the transistors.

If a common-mode input signal is applied (caused by line pickup or other interference), the input signals to each transistor will be equal in amplitude and in phase. The bridge will remain balanced, and the voltage between the output terminals will remain zero. Thus, the circuit provides high gain for differential-mode signals and no output at all for common-mode signals.

In applications in which output must be taken between one output terminal and ground, the common-mode signal will produce some output voltage, although there will be a very substantial reduction of gain for the common-mode signal as compared with the gain for the differential-mode input.

If, for example, a common-mode signal causes the current through the transistors to rise, the voltage drop across the common-emitter resistor also rises. This represents

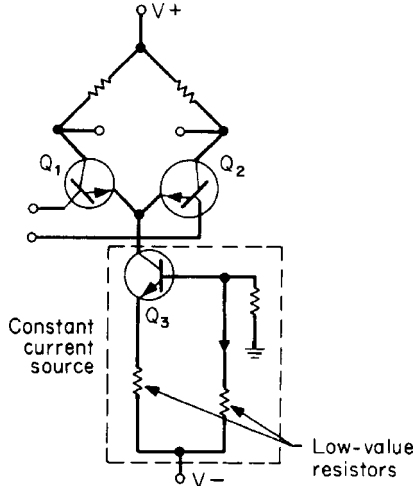


FIGURE 6.66 A differential amplifier operating from a constant-current source. With a fixed voltage at the base of Q_3 , this transistor provides a constant current regardless of load because its collector current is relatively independent of collector voltage.

degeneration, and the gain of the transistors is very low. For differential-mode signals, the current through one transistor rises while that through the other transistor drops by an equal amount. Thus, the current through the emitter resistor remains constant and no degeneration occurs. The gain for the differential-mode signal, therefore, with matched conditions assumed, is unaffected whereas that for the common-mode signal is substantially reduced.

A modified version of the basic differential amplifier, using a constant-current circuit in place of an emitter resistor (Fig. 6.66), represents the most common basic amplifier not only for operational-amplifier input stages but for virtually all low-power amplification purposes.

Darlington Circuit. In many applications for which an amplifier is used with a high-impedance signal source, it is desirable to have a higher input resistance than is available with conventional bipolar transistor circuits. In such cases, today's technology offers field-effect transistors and Darlington (bipolar) transistor configurations. The Darlington circuit, used as the intermediate amplifier stage in Fig. 6.64, is shown in its simplistic form in Fig. 6.67.

The input resistance of a transistor is a function of its emitter resistance r_e and its β such that $R_{in} = \beta r_e$. In the Darlington circuit shown, the input resistance of Q_2 becomes the emitter resistance (approximately) of Q_1 , and the input resistance of the circuit is

$$R_{in} = \beta r_{e(Q1)}$$

$$\text{but } r_{e(Q1)} = \beta r_{e(Q2)}$$

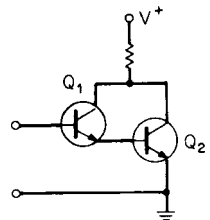


FIGURE 6.67 A simplified circuit of a Darlington transistor pair.

$$\begin{aligned}\therefore R_{in} &= \beta_{(Q1)} \times \beta_{(Q2)} r_{e(Q2)} \\ &= \beta^2 r_{e(Q2)} \text{ for transistors with equal } \beta\text{'s}\end{aligned}$$

Thus the input resistance of the Darlington transistor pair is extremely high, and its loading effect on the driving source is negligible. The total β of the Darlington is also the square of the individual betas so that extremely high current gain can be obtained.

On the other hand, the ac input resistance of the pair is dependent on the input capacitance, which now shunts a much higher input resistance. Therefore, the frequency response curve of a Darlington drops off very rapidly as frequency is increased. In operational amplifiers, which are primarily intended for low-frequency applications, this is not a serious limitation, particularly since the high open-loop gain of such devices permits large amounts of negative feedback to compensate.

Operational-Amplifier Specifications. Operational-amplifier specifications, as listed on manufacturers' data sheets, cover a wide range of characteristics. Among the most important are the following:

Open-Loop Voltage Gain (A_{VOL}). This is normally specified in volts (output) per millivolts (input). This specification defines the maximum available voltage gain, without feedback, and gives an indication of the eventual accuracy that can be obtained when feedback is applied (see Fig. 6.63).

Common-Mode Rejection Ratio (CMRR). CMRR is defined as the ratio of common-mode input voltage to differential-mode input voltage that will yield the same differential-mode output voltage. With well-designed monolithic integrated circuits, common-mode rejection ratios can be as high as 100 dB.

Input Offset Voltage (V_{IO}). Although IC technology permits close matching of adjacent transistors, perfect matching is not achievable. A slight mismatch in gain between the two differential-amplifier transistors will result in an undesirable dc voltage across the differential output terminals. V_{IO} is defined as the offsetting base-emitter voltage required for equal emitter currents in the two transistors.

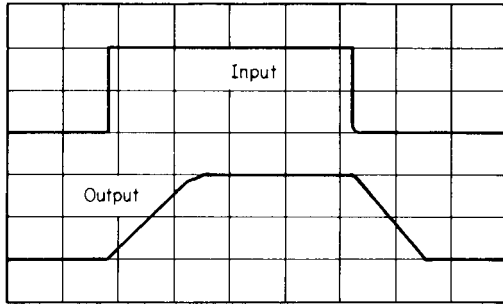
Input Offset Current (I_{IO}). I_{IO} is the difference in base currents required to produce equal emitter currents in differential-amplifier transistors.

Input Bias Current (I_B). I_B refers to the amount of current flowing in input terminals under no-signal conditions. When an amplifier is required to respond to extremely small input signals, the input bias current limits the response. Today's standard operational amplifiers have normal I_o 's on the order of only a few nanoamperes, and even this can be substantially reduced through the use of FET input devices to the picoampere range.


Slew Rate (SR). Slew rate refers to the maximum time rate of change of closed-loop-amplifier output voltage. It is determined by applying a step-function input signal and measuring the slope of the output pulse, as shown in Fig. 6.68a. Obviously, if an applied signal voltage varies more rapidly than the slew rate of the amplifier, the amplifier cannot respond exactly and the output signal is distorted. This can occur on a sine-wave signal, as illustrated in Fig. 6.68b, as well as on a pulsed signal.

Slew rate is specified in terms of the maximum signal-voltage change per microsecond that can be tolerated without signal distortion.

Other Parameters. Among other parameters normally specified for operational amplifiers are *power supply voltage*, which indicates the maximum output voltage obtainable; *bandwidth*, which indicates frequency response; and *temperature coefficient* of the input offset voltage, which describes the effect of temperature on operational-amplifier operation.



(a)

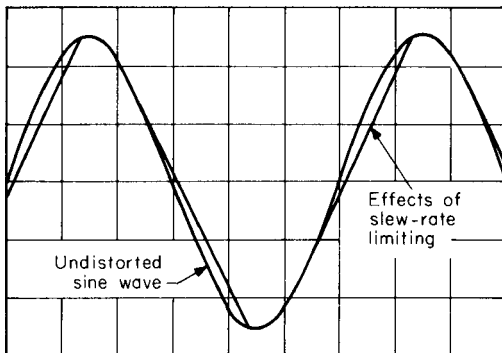

(b)

FIGURE 6.68 The effect of slew-rate limiting on a pulse input (a) and on a sine wave (b).

25. Power supply circuits. The power supply, which converts ac to dc operating voltages, is the one circuit that is universally required for all ac line-operated electronic equipment. In addition, the sensitivity of active components to changes in operating voltage and the potentially large variations in applied ac source voltage and load currents demand that power supplies for most equipment be well regulated in order to maintain stable operation under these variable conditions. Voltage-regulator circuits therefore are important functions for most power supplies.

Voltage regulators can be designed with discrete components to match the specific requirements of any equipment. However, the prevailing need for such circuits has resulted in a large variety of monolithic IC regulators to approximate most ideal requirements closely at a small fraction of the cost of equivalent discrete circuits.

26. Voltage regulators. A voltage regulator operates on the principle that a variable resistance in series or in shunt with the load resistance of an unregulated power supply can be used to compensate for any variation in output voltage or load resistance to keep the voltage across the load at a "constant" value.

The simplest shunt voltage regulator (Fig. 6.69a) is that of a zener diode in series with a voltage-dropping resistor R_s . Operated in the breakdown region, the zener acts much like

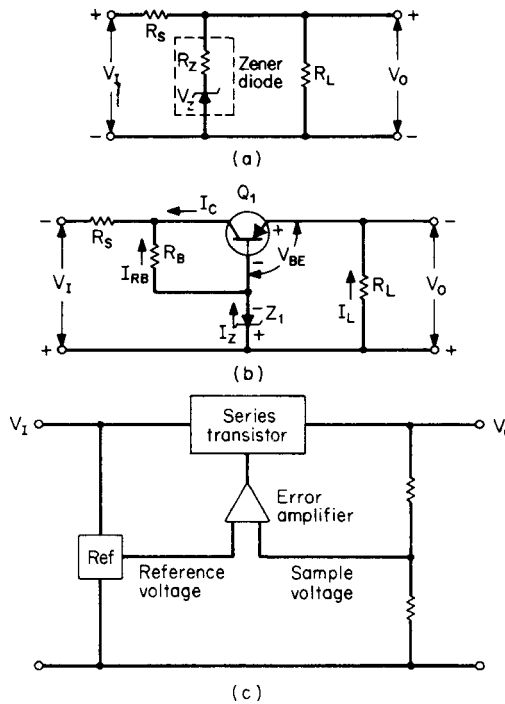


FIGURE 6.69 Progression of voltage regulators. The circuit in *c* forms the basis of today’s more complex regulator ICs. (a) Basic zener shunt regulator. The internal zener resistance R_Z is very small compared with R_S and R_L . (b) A simple series-pass regulator improves efficiency and performance. (c) An improved series regulator uses the gain of a differential amplifier to increase regulator sensitivity and provide additional functions.

a voltage-activated variable resistor, in that the voltage across its terminals tends to remain constant while the current through the device varies in accordance with an applied voltage. Thus, in the simple circuit of Fig. 6.69*a*, if the input voltage to the circuit V_I were to increase (for a constant load resistance) or if the load resistance were to increase (for a constant input voltage), the output voltage V_O would tend to increase. As a result, the current through the zener would increase, and this increased current, flowing through R_S , counteracts the initial increase in V_O , thereby keeping this voltage close to its original value.

An improved regulator circuit is the series regulator of Fig. 6.69*b*. Here, the series resistance R_o of the previous circuit is replaced with the collector-emitter resistance of a power transistor. The collector-base feedback resistor, in conjunction with the zener diode, varies the bias on the transistor, thereby causing a change in its internal resistance to compensate for any change in output voltage.

A further improvement in performance results from the circuit configuration in Fig. 6.69*c*, in which a differential amplifier (or operational amplifier) is used to control the resistance of the series-connected transistor. The differential amplifier continuously samples the output voltage, compares it with a fixed reference voltage, and produces an “error voltage” to control the bias on the series transistor. Because the differential amplifier has considerable gain, even very small changes in output voltage will be detected and compensated for. The circuit in Fig. 6.69*c* forms the basis of most IC voltage regulators in use today.

IC voltage regulators are available in a variety of configurations to meet the specific needs of the system designer. These configurations include the following:

1. Three-terminal fixed-output regulators with either positive or negative output
2. Three-terminal adjustable-output regulators with positive or negative output
3. Floating regulators for increased voltage range
4. Tracking regulators with a combination positive and negative output voltage
5. Switching regulators for use in switching power supplies

Three-Terminal Fixed-Output Regulators. Such regulators are available with a variety of fixed-output voltages in a range from approximately 2 to 40 V. Permissible output currents run the gamut from 100 mA to approximately 3 A, and both positive and negative output regulators are readily obtainable. The diagram in Fig. 6.70 illustrates the simple application and the range of voltage and current available for one commercial line of regulators, but even this wide variety of capabilities is expandable through the addition of external components. Paralleling the regulator with an external series-pass transistor (Fig. 6.71) can increase current-handling capacity; adding an external preregulator (Fig. 6.72) permits operation with higher input voltage than the maximum of 35 to 40 V for which this series of regulators was designed.

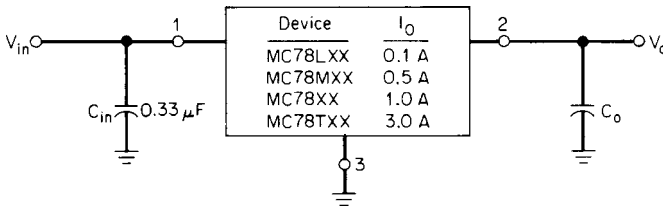


FIGURE 6.70 Basic circuit configurations for positive fixed-output three-terminal regulators. C_{in} : Required if regulator is located more than a few (about 2 to 4) inches away from input supply capacitor; for long input leads to regulator up to $1\ \mu\text{F}$ may be needed for C_{in} . C_{in} should be a high-frequency type of capacitor. C_o : improves transient response. XX: these two digits of the type number indicate nominal output voltage. Available voltages are 5, 6, 8, 12, 15, 18, 20, and 24 V.


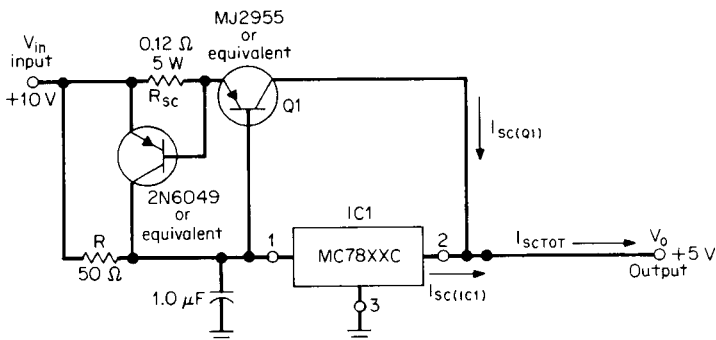


FIGURE 6.71 A current-boost configuration for positive three-terminal regulators. R : used to divert IC-regulator bias current; determines at what output-current level Q_1 begins conducting. Values shown are for a 5-V, 5-A regulator using an MC7805CK on a 2.5°C/W heat sink and Q_1 on a 1°C/W heat sink for T_A up to 70°C . [Motorola Inc.]

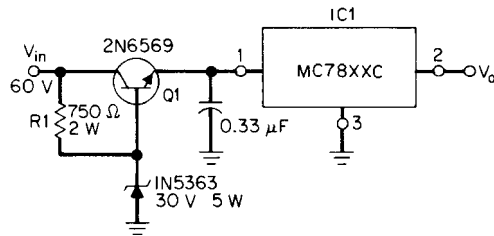

$$R1 = \frac{V_{in} - 30}{1.5} \times h_{FEQ1}; V_{CE0Q1} \geq V_{in}$$

FIGURE 6.72 A preregulator for input voltages above the specified maximum input voltage of the regulator. Values shown are for $V_{in} = 60$ V. Q_1 should be mounted on a $2^\circ\text{C}/\text{W}$ heat sink for operation at T_A up to $+70^\circ\text{C}$. IC_1 should be appropriately heat-sinked for the package type used. [Motorola Inc.]

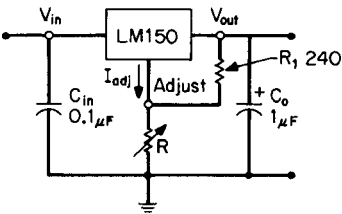


FIGURE 6.73 An adjustable three-terminal regulator circuit.

The simplicity of obtaining the exact output voltage required with an adjustable three-terminal output-voltage regulator is shown in Fig. 6.73. As in the previously used series, maximum output voltage is approximately 40 V, but any value from 1.2 V to the maximum limit can be obtained through the adjustment of R_2 . Current values from 100 mA to 3 A are available.

Floating Regulators. When wide flexibility in output voltage and current is required, a floating regulator can be employed. In the configuration illustrated in Fig. 6.74 the regulator is isolated from the main power supply by a dedicated power

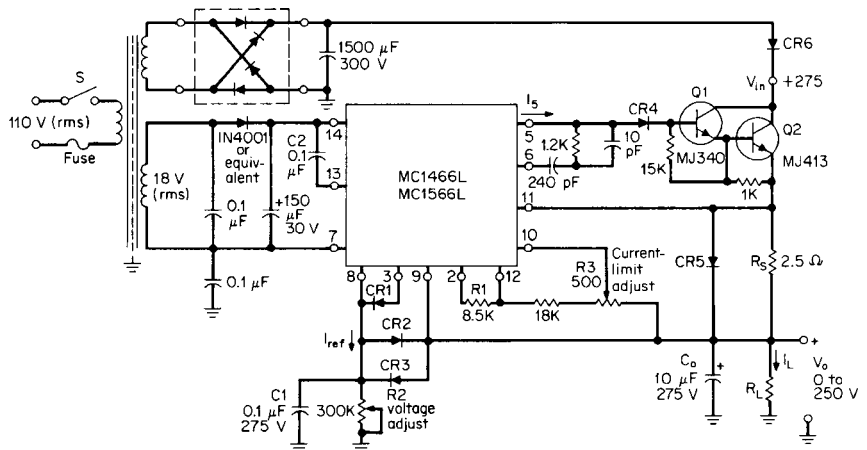


FIGURE 6.74 An MC1566, MC1466 floating-regulator configuration. For constant-voltage operation, output voltage V_o is given by $V_o = (I_{ref})(R_2)$, where R_2 is the resistance from pin 8 to ground and I_{ref} is the output current of pin 3. The recommended value of I_{ref} is 1.0 mA dc. Resistor R_1 sets the value of I_{ref} at $8.5/R_1$, where R_1 is the resistance between pins 2 and 12. For constant-current operation, (a) select R_5 for a 250-mV drop at the maximum desired regulated output current I_{max} ; and (b) adjust potentiometer R_3 to set constant-current output at the desired value between zero and I_{max} . Values shown are for a 0- to 250-V, 100-mA regulator using an MC1486L with Q_1 and Q_2 mounted on a $1^\circ\text{C}/\text{W}$ heat sink for $T_A \leq 70^\circ\text{C}$. [Motorola Inc.]

source of its own. Its output-voltage and -current capabilities are limited only by the choice of external series-pass transistors.

Tracking Regulators. Applications requiring a dual polarity (+ and -) power supply, such as operational-amplifier circuits, can be served with tracking regulators. These consist of two regulators, interconnected so that the positive and negative regulators have the same output-voltage levels, which track each other in the event of parameter changes.

The circuit of Fig. 6.75 uses an MC1568 or MC1468 monolithic dual regulator for this purpose. Its outputs are set internally for ± 15 V, but an external adjustment can change both outputs simultaneously from 8.0 to 20 V through the use of two balancing resistors.

Alternatively, tracking regulators can be developed by interconnecting two separate regulators, one positive and the other negative, in such a way that the output of one drives the input of the other.

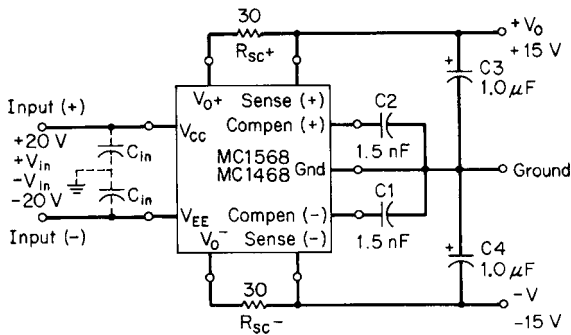


FIGURE 6.75 A dual-tracking regulator provides equal but opposite polarity outputs where both positive and negative voltages are required.

Switching Regulators. Switching power supplies, or “switchers,” are making rapid inroads into the power supply market. Compared with linear supplies, they have significant advantages in efficiency, size, and weight. They are, however, more complex and in the past have been considered principally for high-power applications. With the advent of IC regulators and improvement and cost reductions of other solid-state components, the cost-performance tradeoffs are no longer severe even for medium- and low-power requirements. As anticipated, therefore, switching power supplies are rapidly increasing their market share.

The basic circuit configuration of a typical flyback switcher is shown in Fig. 6.76. In this off-line circuit, the ac line voltage is rectified by a bridge rectifier and filtered by capacitor C_1 . The resulting dc voltage is then “chopped” by high-frequency square-wave pulses applied to the transistor in series with the primary-transformer winding. The resulting square wave is then passed through a high-frequency transformer. This provides the required step up or step down to produce the desired dc output after a second rectification and filtering process.

The output voltage is regulated by varying the width of the pulses applied to the chopper transistor. This is done through a pulse-width-modulator control circuit consisting of a triangular-wave generator, a pulse-width modulator, a dc reference source, and a comparator. The comparator senses the dc output voltage of the supply and compares it with the reference source. Any deviation of the output voltage from its design value will cause a control voltage from the comparator to provide a compensating pulse-width compression or expansion by the pulse-width modulator.

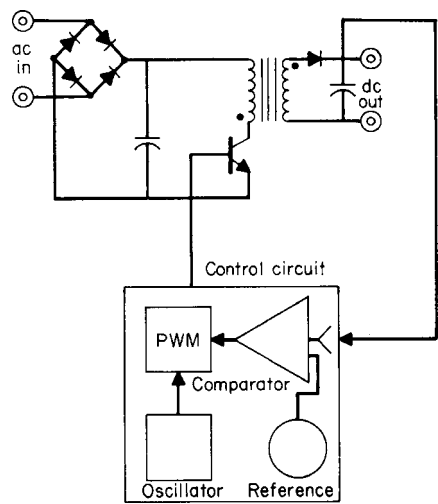


FIGURE 6.76 A representative block diagram of a typical flyback switching power supply.

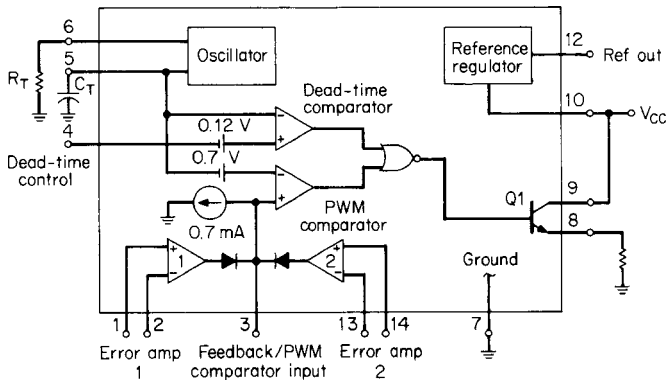


FIGURE 6.77 A block diagram of an MC34060 pulse-width-modulation control circuit incorporating the primary building blocks for the control of a switching power supply. [Motorola Inc.]

The control circuits are quite complex, as indicated by the block diagram of a typical unit in Fig. 6.77. Monolithic IC processing, however, has reduced the cost to a point at which switching power supplies are cost-competitive with series-regulated supplies for many applications. This is particularly true in view of the cost savings accruing from lower-cost transformer and filtering requirements.

MICROCOMPUTERS

Computer concepts in the 1940s were credited with revolutionizing the scientific and engineering fields by replacing people power with electronic power for computational purposes. In the 1950s, by using vacuum tubes, large computer installations performed rather primitive

routines and proved the value of these concepts in actual practice. In the early 1960s, widespread use of the transistor and its attending improvement in reliability, performance, and size expanded the influence of the computer to include business and process control applications. In the 1970s, integrated-circuit technology, with its attending cost reductions, spawned the microprocessor, which broadened computer applications to affect virtually every human endeavor and practice. From the laboratory to the factory floor, from the office to the warehouse, from the kitchen to the automobile, the invasion of the microprocessor has created dramatic changes in equipment architecture and its use.

Computers, whether mainframe, mini, or micro, all have essentially the same basic organization; that is, they all consist of a central processing unit (CPU) which performs the basic arithmetic and logic operations in response to a sequential series of instructions (program), a memory section which stores the program, and an input/output section (I/O) which communicates with external equipment. The principal difference between the three classes of computers is in the word length that can be processed and in the memory capacity, being largest for mainframe and smallest for microcomputers. The larger the word size and the internal the memory, the faster the operation of the computer and the larger and more powerful the program which can be sorted and executed.

Additionally, mainframe computers and minicomputers are usually made with bipolar components (TTL or ECL), which are inherently faster than the MOS technology employed for microprocessor units (MPUs), the CPUs associated with microcomputers. But the distinction between the various computer classifications is blurring as the latest microcomputers exceed the capabilities of today's minicomputers and approach those of existing mainframes. That is, microcomputers utilizing the latest 32-bit MPUs can serve applications formerly in the domain of the more powerful minis and mainframes, depending on the amount of memory and other peripheral circuitry used in association. It is likely that in the future the distinction between computers will be based more on the amount of circuitry crammed into a computer's architecture than on the inherent capability of the technology employed.

The pervasiveness of the microcomputer, however, depends not so much on the upper limit of its speed and processing power as it does on its miniscule size and its incredibly low cost. It is this combination that makes a microcomputer suitable not only as a general-purpose machine which must be reprogrammed for each specific end use but also as a pre-programmed and dedicated "engine" that loses its identity as a computer and becomes an electronic ignition system, a smart cash register with built-in inventory control, a control system for home appliances, or one of countless other machines in everyday use.

27. Computer architecture. The diagram in Fig. 6.78 shows the basic components of a typical computer. The heart of the system is the central processing unit (CPU), which consists of an arithmetic-logic unit (ALU) and a control unit. In a microcomputer, these two entities are normally processed on a single chip called a *microprocessor unit* (MPU). Together, these two sections provide all the action within the computer: the control unit "fetches" the instructions and the data from the memory section in the proper sequence and feeds these to the ALU; the ALU performs the actual arithmetic and logic operations in accordance with the instructions it receives from the control unit and passes the results onto the output section. The output section converts the results into the corresponding electrical stimulus needed to activate the peripheral equipment associated with the computer. This equipment may be a printer, a display terminal, a control mechanism such as a motor or relay, a modem (for transmission to a remote location over telephone lines), or any other electronic or electromechanical system.

The memory system represents the brain of the computer. The main memory stores all the instruction (program) to be run and all the data which are to be manipulated. In a dedicated microcomputer, the memory section is invisible to the user. It consists of an electronic

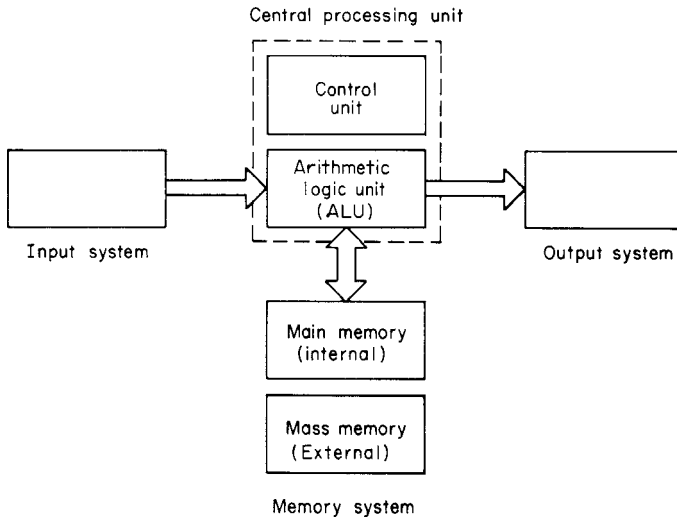


FIGURE 6.78 Basic components of a typical computer.

read-only memory (ROM), which stores the code sequence for the particular program that is to be run. In a general-purpose computer, much of the internal memory is random-access (RAM), often called a *read-write memory* because it can be programmed and reprogrammed at will. With such computers, the specific program to be run must first be loaded into the RAM from an external source through the input section.

The main-memory system shown in the diagram represents that portion of the system which is an integral part of the microcomputer itself. In a microcomputer dedicated to one specific application, this is all the memory needed. General-purpose computers operate in conjunction with associated mass memory, which is external to the computer. Such memories are in the form of disks, tapes, and cassettes which represent permanent storage for the various programs that the computer may be called upon to run at different times. These programs must be transferred from the external memory to the computer's internal main memory before they can be used effectively.

The input section converts the output of a signal source into a format acceptable to the microprocessor and memory. The signals from such input peripherals as the keyboard, disk and tape readers, etc., may already be in the proper format. Other potential input systems such as pressure and temperature sensors, modems, and light or presence detectors have output signals that are incompatible with either the computer memory or the MPU. These must first be converted into the proper format by the input section.

28. Computer language. The language of the modern computer is *binary*. That is, all data and all instructions processed by the computer consist of a series of binary digits (bits) representing either a zero (0) or a one (1).

A zero is normally represented by a low voltage level, while a one is represented by a high voltage level. The actual voltage value representing a 1 or a 0 depends upon the type of logic employed.

The basic computer word consists of eight bits, called a *byte* (Fig. 6.79). A single byte can represent decimal numbers from 0 to 256 (2×10^8); 2 bytes (16 bits) can represent

numbers up to 65,536 (2×10^{16}), etc. Similarly, a 2-byte (16-bit) word can encompass over 65,000 memory addresses or program instructions.

Within the computer, information is processed in blocks of parallel bits (bytes or multiple bytes) which are transferred from one section to another along parallel paths called *buses*. A microcomputer generally has three distinct buses: a data bus, an address bus, and a control bus (Fig. 6.80).

The data bus carries the data words between the ALU and the main memory. It is therefore bidirectional and usually has as many lines as the number of data bits which the ALU is able to process in one operation. Thus, an 8-bit MPU has an 8-bit data bus; a 16-bit machine has a 16-bit data bus, etc. An 8-bit machine could be used to process a 16-bit data work, but it would require two cycles of operation and would be considerably slower than a 16-bit machine.

1	0	1	1	0	0	1	0
---	---	---	---	---	---	---	---

FIGURE 6.79 An 8-bit computer word (byte) can be implemented by eight parallel-connected transistors, or memory cells, each programmed to either a high level (1) or a low-level (0) state. The word can represent a letter, a number, a symbol, or an instruction code.

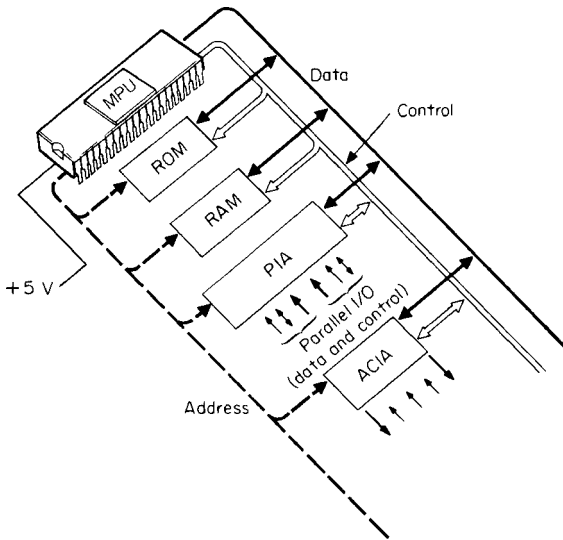


FIGURE 6.80 A typical MPU bus system uses three separate inter-connect paths to carry signals between the MPU and its peripheral chips. PIA = peripheral interface adapter; ACIA = asynchronous communications interface adapter.

The address bus is used by the control unit to fetch data and instructions from specific locations in the main memory and transport it to the ALU for processing. The most popular 8-bit machines utilize 16-bit address buses to access in excess of 65,000 memory address locations.

The control bus accesses all portions of the microcomputer. It controls the sequence of events that carries out a particular instruction, activating the read and write lines of the memory, as needed, initiating the transfer of instructions and data to various parts of the CPU in the proper sequence, and generally controlling the entire sequence of program execution.

29. Microcomputer hierarchy. The first major component of the microcomputer era was a PMOS 4-bit microprocessor introduced by Intel Corp. in 1971. This limited-capability chip was soon joined by 8-bit NMOS MPUs from a number of manufacturers. As processing technology improved to permit increased component density, processor power increased first to 16-bit and, most recently, to 32-bit data manipulation on a single chip of silicon. The latter utilize CMOS technology, which, owing to its extremely low power requirements, permits the operation of tens of thousands of transistors in such a small area without demanding extraordinary measures of heat dissipation.

While microprocessor power was expanding from 4 to 32 bits, microcomputer-chip architecture was expanding in other directions as well. Recall that a microprocessor consists of a single chip housing the ALU and control-unit functions. A complete microcomputer requires memory and I/O circuitry as well. Understandably, as increasing component densities facilitated the increase of on-chip componentry, designers began to utilize the excess chip space to place memory and I/O functions on the same chip with the MPU. This resulted in a diversified series of components called *microcomputer units* (MCUs), which provide virtually complete microcomputer capabilities on a single chip. The repertoire of MCUs is necessarily large because of the many different applications in which microcomputers are employed. These varying applications require different amounts of memory and, in many instances, different I/O functions. Thus, with a basic MPU structure as a core, semiconductor manufacturers are offering MCUs that are tailor-made for different end-use functions by surrounding the MPU with differing complements of on-chip peripheral circuits (Table 6). This capability is becoming so commonplace that some manufacturers are including microprocessor cores and associated peripheral choices as basic cells to be used in the design of semicustom (ASIC) microcomputers.

TABLE 6 On-Chip Peripheral Variations Available with a Basic MC6805 MPU Core

Features	Suffix	HCMOS MC68HC05	CMOS MC146805			
		C4	E2	F2	G2	H2
Number of pins		40	40	28	40	40
RAM (bytes)		176	112	64	112	112
User ROM (bytes)		4160	0	1089	2106	2106
I/O lines, bidirectional		24	16	16	32	24
I/O lines, unidirectional		0	4	0	4	0
Timer (bits)		16	8	8	8	8
Special features		SPI, SCI	Bus expander	COP, synthetic audio output tone generator
EPROM version		MC1468705F2	MC1468705G2	

NOTE SPI = serial peripheral interface; SCI = serial communications interface; COP = computer-operating-properly reset timer which acts as a watchdog to reset the CPU automatically if it is not reset by a program sequence within a given time.

30. Product availability. The proliferation of microcomputer applications has spawned a large array of component building blocks with which to implement microcomputer systems. Fundamental, still, for low-level applications are the 8-bit MPUs with their wide assortments of associated memory and I/O chips. These have recently been joined by increasing numbers of 8- and 16-bit MCUs which can be selected for

dedicated applications without the need for additional peripheral chips except, perhaps, for interface circuits to match an MCU to the voltage and current requirements of specific input and output equipment.

For more sophisticated computer applications, 32-bit microprocessors have become commonplace, and 64-bit MPUs are in the early stages of implementation. These circuits are so complex that manufacturers have not yet combined them with memory and I/O peripherals on the same chip, but associated peripheral chips to match the characteristics of the MPUs are being introduced in considerable numbers. These peripherals are often as complex as the MPUs themselves and greatly reduce design time as well as the size of the resulting equipment.

Implementation of microcomputers in a wide range of personal computers as well as dedicated machines is further aided by the availability of increasing numbers of board-level products. These predesigned boards greatly speed up the equipment design cycle. They are being offered not only by the chip manufacturers themselves but also by other manufacturers. Regardless of manufacturer, the boards are designed in families that work together to form complete systems. They offer a choice of basic single-board-microcomputer modules as well as additional peripheral modules that provide a variety of memory capacity and interface choices.

Board families are defined in terms of the bus structure they support; that is, all boards within a given bus family, say, the VMEbus family, have identical pin assignments so that they will be properly interconnected when plugged into a backplane. It is possible, therefore, to purchase VMEbus boards (modules) from different vendors and be assured that they will be compatibly interconnected when plugged into a VMEbus chassis. The large variety of modules available for some bus structures has given rise to the open-system philosophy which permits rapid assembly of complete functional systems with tailor-made capabilities by choosing the appropriate modules and plugging them into the slots (sockets) of a prewired chassis (Fig. 6.81).

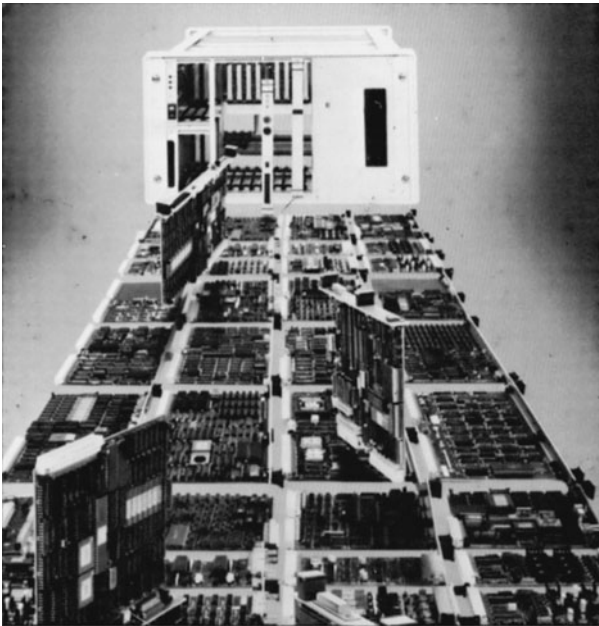


FIGURE 6.81 A prewired chassis and board assortment simplifies microcomputer design and assembly.

ELECTRONIC MEMORIES

While MCUs normally have on-chip memory sections with a memory capability deemed adequate (by the manufacturer) for the intended application, the MPUs implement their memory sections with peripheral chips. Since all microcomputers require some sort of memory, these devices are the most prevalent of the microprocessor peripherals.

There are many different types of memories. They are classified in a variety of ways, as shown in Table 7. These memories are electronic memories associated with the actual operation of the computer, not with the permanent mass storage of operating programs or large files of data. The mass-storage memories, such as disks, tapes, and cassettes, are separate from the microcomputers and are used only as sources of information to be entered into the computer when required. They are *nonvolatile*, meaning that the information they contain is “permanent” (unless deliberately removed), and they store large amounts of data in a serial fashion. This means that access time is relatively slow.

TABLE 7 Memory Descriptors*

By function	RAM, ROM, PROM, EPROM, EEPROM
By capacity (number of bits)	1K (1000), 16K, 64K, 256K, 1M (1,000,000)
By organization	4K × 1, 4K × 4, 2K × 8, etc.
By technology	NMOS, CMOS, bipolar (TTL, ECL)
By operation	Dynamic, static (RAM only)

*A representative description might be: a 256K × 1-bit NMOS dynamic RAM.

On the other hand, the so-called main memory, or operating memory, within the computer is electronic in nature, and information is stored in a matrix of cells that are accessed in a parallel manner, so that information transfer to and from such memories is relatively fast.

As with logic circuits, memory characteristics are determined by the technology employed. Bipolar ECL and TTL memories are the fastest, NMOS memories have the highest chip density and therefore the highest storage capacity, and CMOS memories have the lowest power dissipation.

31. Memory organization. An electronic memory consists of a number of storage units called *cells*. Each cell is a transistor circuit that can be charged to either of two binary states: a high (voltage) level or a low level. A high level is designated as 1, and the low level is designated as 0. In practice, the cells are operated in groups called *words* which store information in binary coded form. The content of a memory word can be the binary code for a number, a letter, or an instruction for manipulating data.

A memory is specified by two numbers that indicate the total number of cells (bits) in the memory and the manner in which these cells are grouped. A 1024 × 1-bit memory (commonly called 1K memory) contains 1024 cells, each of which is separately addressable and programmable. A 128 × 8-bit memory also contains 1024 cells. Each one of these is also individually programmable, but each is accessible only with a group of seven other cells with which it is permanently associated.

32. Memory capacity. Memory chips are available in a variety of sizes and cell organizations. Capacity has been increasing rapidly as computer power and processing technology have increased.

Early memories had a capacity of only 128 bits, or 16 bytes. The subsequent 1K-bit memory was considered quite a breakthrough but was quickly replaced by 4K, 16K, and 64K memories. Today, 265K-bit memories are available and 1M (megabit) devices are being introduced. These large-capacity memories are fabricated by NMOS technology, with smaller capacity units being available in CMOS and bipolar processing.

33. Memory functions. Functionally, electronic memories are divided into two basic classifications: random-access memories (RAMs) and read-only memories (ROMs). RAMs are *volatile* memories whose content disappears when power to the memory is interrupted. ROMs are *nonvolatile*, in that they retain their content even when power is shut off. Hence, RAMs are used for the actual manipulation of a program or the storing of a program on a temporary basis, while ROMs are employed for storing permanent data such as microprograms, look-up tables, and display graphics.

The addresses of both RAM and ROM are accessible in a random fashion, but RAMs are read-write memories whose contents can be changed at will, whereas ROMs are read-only memories. In general, ROMs are preprogrammed during manufacture with the custom program specified by the customer. There are, however, a number of variations—PROMs, EPROMs, EEPROMs—which are custom-programmable by the user.

Random-Access Memories (RAMs). There are two types of RAMs: static and dynamic. In a static RAM, the individual cells are flip-flops which, once set to either 1 or 0, will retain their setting indefinitely, until either deliberately reset or until power is removed. The basic cell (Fig. 6.82) consists of six transistors. T_1 and T_2 represent the actual flip-flop, T_3 and T_4 function as load resistors for the flip-flop, and T_5 and T_6 are isolation transistors that isolate the cell from the access lines (bit lines) until the cell is ready to be addressed.

The basic cell of a dynamic MOS RAM (Fig. 6.83) utilizes only a single transistor and therefore requires considerably less chip space. Data storage is accomplished by charging the associated capacitor for a 1 level or discharging it for a 0 level. In the diagram, the capacitor

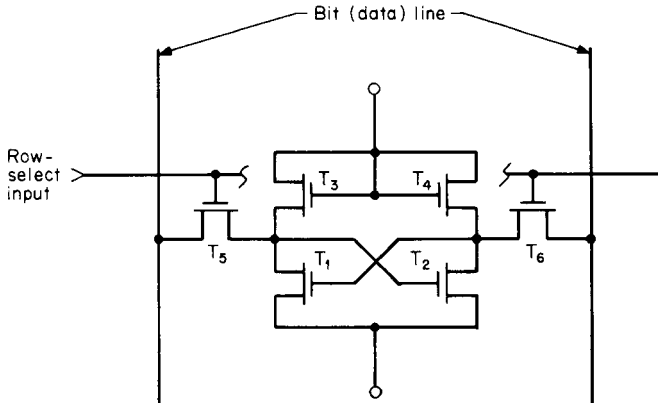


FIGURE 6.82 A typical six-transistor static MOS memory cell. T_1 and T_2 comprise a flip-flop, with T_3 and T_4 representing load resistors (note the fixed bias on these transistors). T_5 and T_6 are isolation transistors which, when turned on by a row-select signal, cause the state of the flip-flop to be reflected on the bit (data) lines.

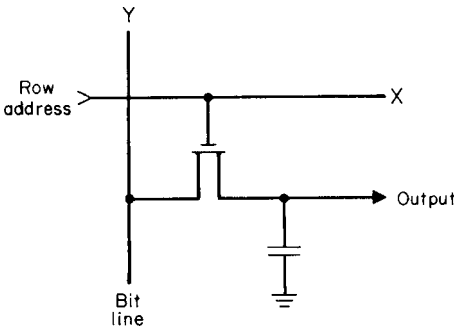


FIGURE 6.83 A single-transistor dynamic RAM cell. Additional circuitry is needed to refresh all cells in the memory on a regular, periodic schedule.

is charged when both *X* and *Y* lines are made high and discharged when the *X* line is high and the *Y* line is low. Unfortunately, the small capacitor will not retain its charge very long. Therefore, dynamic RAMs must be refreshed (the charged cells must be recharged) periodically (say, every millisecond) in order to maintain their information. The refreshing circuitry adds substantial complexity to the circuit. On the other hand, dynamic RAMs dissipate a relatively small amount of power. For this reason and because of the smaller space requirements, they are preferred for memories with a large number of cells (large capacity).

Read-Only Memories (ROMs, PROMs, EPROMs, EEPROMs)

ROMs. Read-only memories are an integral part of all microcomputers. They store the operating routines of the system (microprograms) and provide conversion data, display codes, and other information that is periodically accessed by the computer but is not subject to change.

A ROM consists basically of a series of OR gates addressed by a decoder circuit (Fig. 6.84). The truth table associated with the diagram indicates the state of the four output

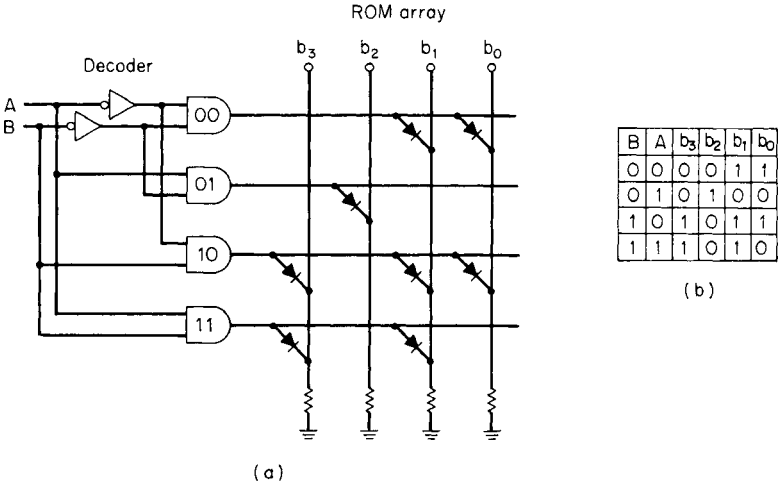


FIGURE 6.84 (a) Basic configuration of a typical read-only memory. (b) Truth table corresponding to the simple circuit.

lines, b_0 to b_3 , as a function of the input signals A and B . If, for example, the input signals are both HIGH, then output lines b_1 and b_3 are HIGH because the output of AND gate 11 in the decoder is HIGH. Similarly, if B is HIGH and A is LOW, output lines b_0 , b_1 , and b_3 will be HIGH because the output of decoder gate 10 is HIGH. Output b_2 will be HIGH only when the output of NAND gate 01 is HIGH, which occurs only if A is HIGH and B is LOW. Thus, for any combination of input signals, the output can be determined by the number and placement of the diodes that comprise the OR gates.

The simple circuit described is a 4×4 ROM consisting of 4 words, with 4 bits per word. If the number of output lines were extended to 8, the resultant ROM would be 4×8 . An increase in the capacity of the decoder will provide ROMs with thousands of different 8-bit output combinations.

ROMs are available as factory mask-programmable devices which are fabricated by the manufacturer to any set of custom patterns specified by the user. They can also be obtained as standard preprogrammed devices containing various popular functions such as character generators, code converters, look-up tables, etc.

PROMs. The ROM of Fig. 6.84 can be converted into a unit that is user-programmable (PROM) simply by placing diodes in all possible locations within the matrix and fabricating a fusible link in series with each diode (Fig. 6.85). The user can burn out any link, using a PROM programmer, in order to create any special set of codes desired. Of course, this can be done only once, so that this type of PROM is sometimes called a *one-time programmable ROM*.

Erasable Programmable ROMs (EPROMs). The ideal memory is a nonvolatile one which maintains its program even after power is removed from the system (as with a standard mask-programmed or one-time field-programmed PROM discussed above), yet one whose program can be altered at will (as with a standard RAM). Development efforts in that direction are bearing fruit, and several iterations of programmable ROMs have been introduced. These do not yet have the reprogramming speed and ease of the conventional RAM, but they are enjoying considerable popularity for a number of applications, and they are indicative of the rapidly expanding technology.

One of the earliest practical ROMs that was repeatedly erasable and reprogrammable in the field was labeled EPROM. The information stored in the memory cells could be erased by subjecting the device to ultraviolet light, which entered the package through a quartz window at the top (Fig. 6.86). While the EPROM can be erased and reprogrammed repeatedly, it must be removed from the system and bulk-erased by exposing the entire unit to a high-intensity ultraviolet-light source. There are a number of suitable ultraviolet programmers, but the erase time is on the order of half an hour, which falls far short of meeting the criteria for the ideal memory. Moreover, the EPROM can be unintentionally erased by sunlight and fluorescent light and requires special shielding after programming. Despite these limitations, the UV EPROM still enjoys considerable use, and its principles of operation are fundamental to even the more advanced devices currently emerging.

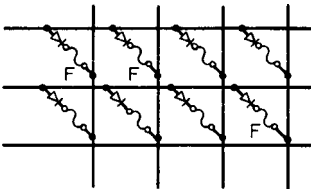


FIGURE 6.85 Fusible links in series with each diode can be “blown” in a PROM programmer to create any desired pattern arrangement.

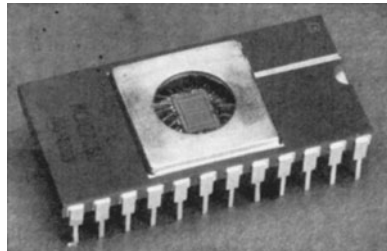


FIGURE 6.86 Ultraviolet erasable read-only memory (UV-EPROM).

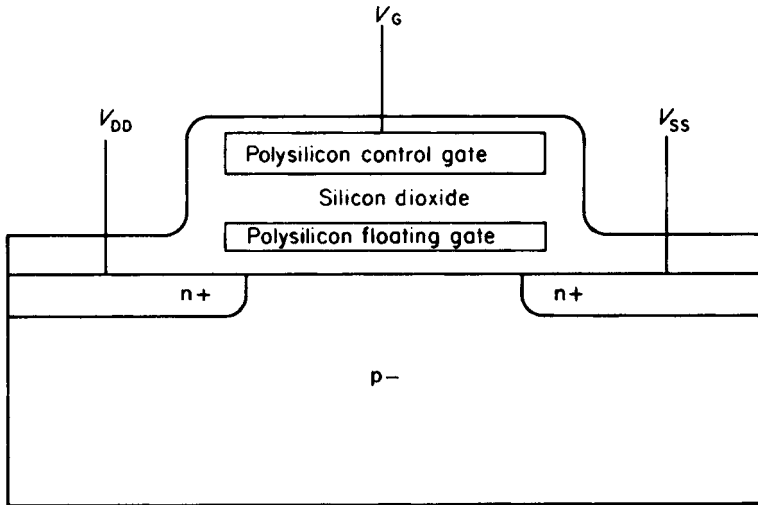


FIGURE 6.87 A typical EPROM-device structure.

The EPROM is basically an MOS device whose structure is illustrated in Fig. 6.87. It is characterized by two stacked polysilicon gates which are separated from each other and from the substrate of the cell by an insulating layer of silicon dioxide. The gate closest to the substrate is a floating gate which is not connected in the circuit. The upper gate is the control gate, which is used to energize the cell. Under the initial condition, the cell acts as a conventional MOS transistor so that when a positive voltage is applied to the control gate and the drain, a channel is created between source and drain, permitting a drain-current flow.

If the drain voltage and the control-gate voltage are raised to a high level (say, 30 V), some of the electrons in the channel gain enough energy to cross the silicon dioxide barrier and impinge upon the floating gate, where they become trapped. This raises the turn-on threshold level of the MOS transistor so that it will not be turned on when normal operating voltages are applied. The cell then is said to be charged, representing an open circuit and yielding a high output level (1) when connected in a conventional circuit.

The charge on the floating gate can be removed by the application of light to the structure. Sunlight or fluorescent light will erase the charge but would require an excessive amount of time. A strong dose of ultraviolet light will bulk-erase the entire memory in about 30 min.

Electrically Erasable Programmable ROMs (EEPROMs). The EEPROM is very similar in theory and structure to the EPROM. The principal difference is in the thickness of the oxide between the floating gate and the substrate. Whereas the thickness of this oxide layer for the EPROM is on the order of 1000 Å, that of the EEPROM is on the order of 100 Å or less. As a result of this thinner oxide, the floating gate can be charged *and discharged* by a voltage applied to the control gate. Write and erase times for typical EEPROMs with present technology are on the order of 10 ms. While the EEPROM is not competitive with RAM speeds, its in-circuit program-erase capability makes it suitable for a great many applications. Devices of this type are currently available with 64K-bit capacity. They are also included as on-chip peripheral circuits for a number of MCUs to expand MCU versatility.

34. Accessing the memory. The total number of cells in a single memory chip can range from several hundred on the low end to 1 million (1 megabit) with current state-of-the-art technology. The cells are arranged in rows and columns (Fig. 6.88), with the exact location of each cell specified by its row and column number. There are two basic organizational schemes for accessing the memory: bit organization and word organization.

Bit Organization. In a bit-organized memory chip (e.g., $1K \times 1$, $64K \times 1$, etc.), each cell is addressed in conjunction with similarly located cells on other chips of the same capacity and organization. In Fig. 6.89, for example, eight identical chips are used to store information in byte-sized (8-bit) words. Each chip stores one of the 8 bits, and all chips are addressed simultaneously for programming or reading.

Word Organization. A word-organized memory chip is one in which a number of columns corresponding to the number of bits in the word are addressed simultaneously. In this manner, a complete word can be stored in a single chip (Fig. 6.90).

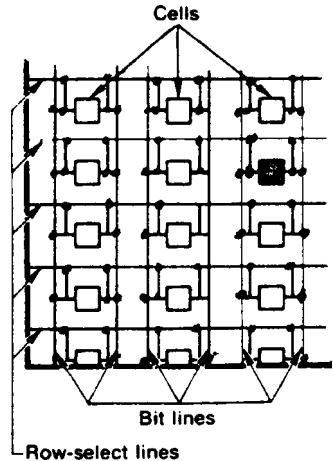


FIGURE 6.88 A semiconductor memory is a rectilinear pattern of digital circuits, called cells, each of which can hold a high-level (logic-1) or low-level (logic-0) voltage charge. Each cell is accessed for programming or reading simply by energizing the proper column and row.

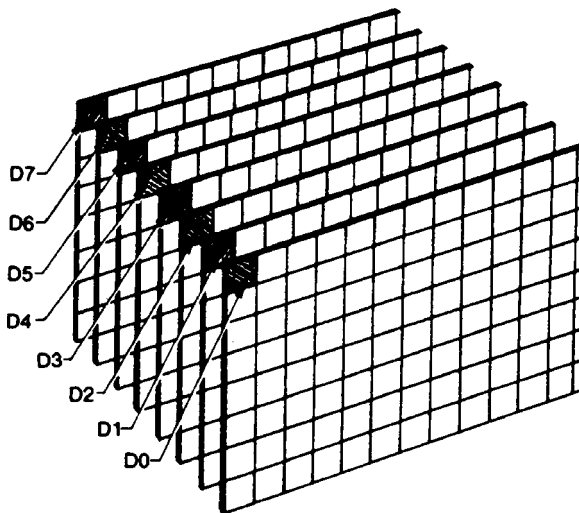


FIGURE 6.89 Bit-organized memory requires multiple memory chips, with each chip storing one bit of a complete word.

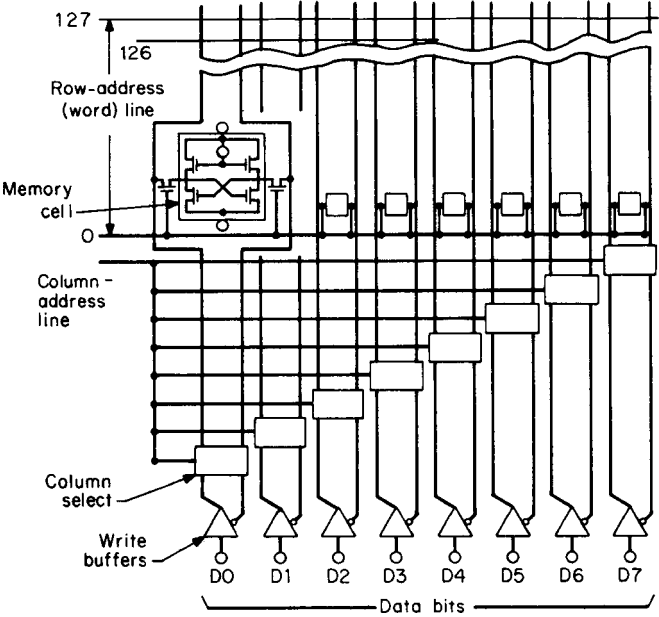


FIGURE 6.90 A 1K (128×8) byte-organized chip addresses all bits associated with a complete word on a single chip.

35. Memory circuitry. A memory array receives a number of signals from the micro-processor. The primary ones are as follows:

1. The address signal which activates the rows and columns on each chip that represent the cells associated with a given address
2. The binary word representing the data to be entered into the addressed cells in the case of a programming step
3. A read-write signal generated by the processor which determines whether information is to be entered into the memory or extracted from it

The circuitry required to respond to these signals and generate the desired results resides directly on the memory chip along with the array of memory cells. Typical operation can be described with the aid of diagrams utilized in a representative MOS static memory chip.

The Memory Cell. Figure 6.91 is a conventional MOS flip-flop in which T_1 and T_2 are cross-coupled inverters and T_3 and T_4 represent their respective load resistors. A positive pulse applied to point A appears at the gate of T_2 , turning this transistor on. As a result, the voltage at point B goes to 0 (ground), and since this voltage is applied to the gate of T_1 , the latter is turned off. Voltage at A therefore

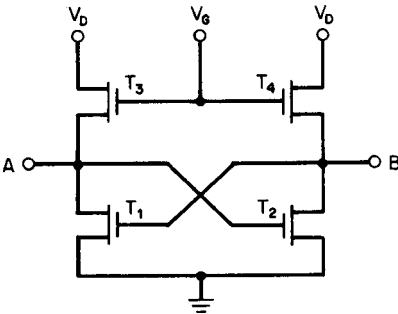


FIGURE 6.91 A typical MOS static memory cell.

goes high and remains high even when the external signal is removed. In this condition, the cell is considered to store a 1.

To reprogram the cell to contain a 0, a positive pulse is applied to point *B*, turning T_1 on and T_2 off. Again, this condition remains stable until it is deliberately changed by another positive signal to point *A*. Clearly, the cell is programmable.

Row Address. In practice, a cell is programmed by means of a two-rail bit-line system (Fig. 6.92), in which a signal and its complement are simultaneously applied to points *A* and *B*. To be applied to the cell, however, isolation transistors T_5 and T_6 must be turned on. Programming is accomplished by applying the desired programming signals on the bit lines and then momentarily turning on T_5 and T_6 with a pulse applied simultaneously to their gates. Once programmed, a cell is read by briefly turning T_5 and T_6 on without having an external signal on the bit lines.

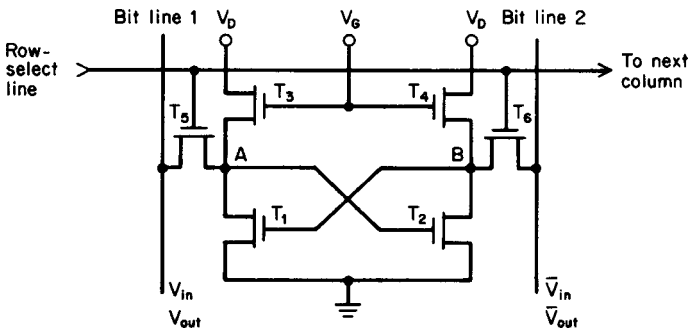


FIGURE 6.92 A cell is programmed or read by a signal on the row-select line which causes the cell to be connected to its bit lines through T_5 and T_6 .

Column Address. In Fig. 6.93, the column-select circuitry and a write buffer have been added to Fig. 6.90. Note that the write buffer generates the programming signal and its complement, to be applied to the bit lines. To access the bit lines, however, transistors T_7 and T_8 must be turned on. The address code defines which of the columns is to be activated. In Fig. 6.93, each of the columns can be separately addressed, as required for a single-bit organization. In Fig. 6.90, all eight of the column-select circuits are activated simultaneously, as required for a byte-organized orientation.

Read-Write Circuit. In Fig. 6.94, a read buffer circuit has been added to the previous diagram, permitting the data on the bit lines to be applied to the data bus for transmittal back to the MPU. Note, however, that the data line that carries the data from the memory to the MPU is the same as the line that carries the programming data from the MPU to the memory. To avoid undesirable feedback, the read buffer must be disabled during a write operation. This is accomplished with a three-state read buffer circuit as in Fig. 6.94b.

Three-State Buffer. A three-state buffer is a circuit whose output can be high, low, or open-circuited. A high output at bit line 1 turns T_4 on and T_1 off. If T_2 and T_3 are turned on by a separate high-level signal on their gates, then the output line is connected to the positive-voltage source through T_3 and T_4 , and the output is high. A high output at bit line 2 turns on T_1 , turns off T_4 , and presents a low signal to the output. But if T_2 and T_3 are turned off, then regardless of the state of T_1 and T_4 the output is isolated from the inputs because of the very high resistance of T_2 and T_3 .

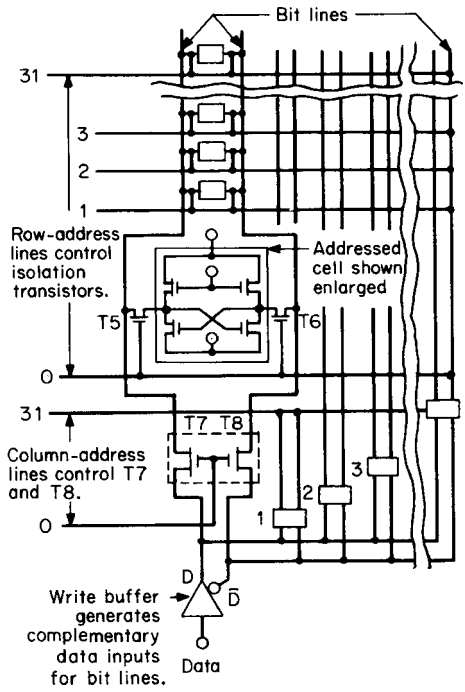


FIGURE 6.93 Column-address circuitry. Data can be entered into the memory only when transistors T_7 and T_8 are turned on.

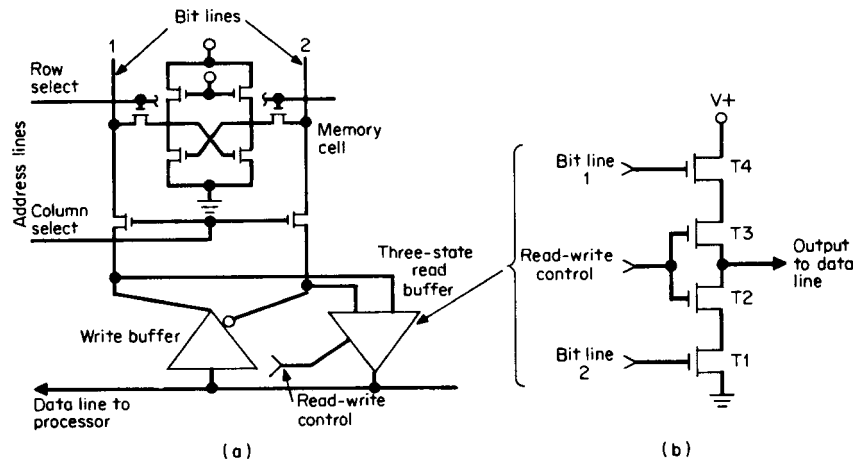


FIGURE 6.94 (a) Connection of read buffer to memory column. (b) Three-state read-buffer schematic diagram.

T_2 and T_3 are turned off during writing operations and turned on at all other times. Thus, the cell is always connected to the data line through the read buffer except during a write cycle, during which the read buffer is in the open-circuit state.

36. Address decoding. The number of unique bit patterns required to address all rows in a single-column, word-organized memory equals 2^n , where n is the number of rows. Thus, a small 128×8 -bit memory, for example, requires 128, or 2^7 , unique address patterns, which can be generated with a 7-bit binary code. These 128 unique address patterns can be applied to a single-address decoder that has 128 output lines. For each address, the decoder provides a high-level signal on a different output line. There are many different decoder circuit configurations. The circuit shown in Fig. 6.95 is for illustration and does not necessarily represent any specific design.

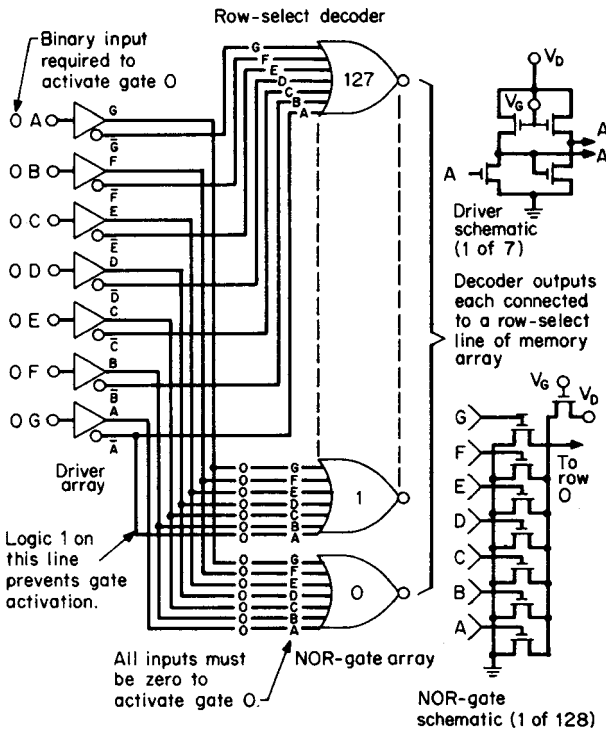


FIGURE 6.95 Example of an address decoder for a single-column 128×8 bit memory. The output from each NOR gate enables one of the 128 different rows in the memory matrix.

Decoder Circuit. The *decoder circuit* consists of 128 seven-input NOR gates having a common driver circuit. Each NOR gate is activated (puts out a high-level signal) only when all seven inputs are low. The driver circuit, in turn, is configured so that each of the 128 possible input patterns activates a different NOR gate.

The only difference between this circuit and the previous one is that four gates of the decoder are used to select the blocks while the row-select function is handled by 32 five-input NOR gates. The same binary address pattern that accesses a memory address in a one-block system can access the same address in a four-block organization and other organizations as well.

NOTE Much of the information provided in this division is based on the work of technical and marketing specialists of the Motorola Semiconductor Sector. The author gratefully acknowledges the kind permission of Motorola for the use of material from its various data sheets, application notes, and other documents.

PRODUCT RELIABILITY

37. Semiconductor reliability. In today's marketplace, quality and reliability are paramount to the success of a product. Quality is defined here as the ability of a device to operate within its specifications when received by the user; reliability refers to its capability to operate within specifications over long periods of time and under the most adverse environmental conditions to be encountered in practice.

Semiconductors are inherently extremely reliable. Properly designed and used, they can be expected to outlive the equipment in which they are employed. Yet they are subject to a wide range of failure mechanisms that must be anticipated and circumvented during manufacture in order to achieve this inherent feature.

To ensure high reliability, the government has developed a stringent series of tests and screens involving all phases of manufacturing for military applications. The manufacturing techniques required to meet these qualifications have been adopted in some measure by manufacturers of products intended for commercial applications so that, except for very special requirements, there are no longer significant variations in inherent reliability between commercial and military products.

Basic Military Qualifications Tests. The Basic MIL-qualification tests, called *JAN* (*Joint Army-Navy*), are divided into groups to satisfy three objectives:

1. Group A—verifies that form, fit, and function conform to design specifications.
2. Group B—assures manufacturing integrity and verifies reliability in ground support applications.
3. Group C—provides evidence of long-term reliability under harsh environmental conditions where severe mechanical and environmental stresses exist.

Examples of the types of tests included in each group are given below.

Group A Tests

Visual/mechanical. Consists of a sampling of devices that is examined to determine whether they meet the applicable materials, design, construction, marking, and workmanship standards.

DC tests. Verify the major voltage, current, and other dc parameters of the device first under normal (25°C) temperature conditions, then at an appropriate high and/or low temperature limit to confirm satisfactory performance over the entire temperature range.

AC tests. Check parameters associated with dynamic operating conditions, such as capacitances, noise figure, switching time, etc.

Safe operating area (SOA) tests. Limited to power transistors, these tests corroborate the power limits over which the devices are designed to operate.

Current surge. Applies principally to diodes, e.g., rectifiers.

Selected tests. Assigned to specific devices for unique specifications that do not fit a general specification.

Thus, the complete spectrum of electrical device characteristics is accounted for, and successful completion of this test sequence provides assurance that the devices are capable of operating, at least initially, in accordance with their design.

Group B Tests. This sequence of tests includes screens that are intended to verify that the devices are mechanically sound and that they can be expected to operate satisfactorily over time and under adverse operating conditions. Since a number of these screens involve stress factors that could result in ultimate performance degradation, the electrical parameters expected to be affected are tested before and after the applied screen to ascertain that the performance change remains within prescribed limits.

Solderability. Determines the solderability of wires, lugs, tabs, and all types of terminals that are normally joined by a soldering operation. The procedure includes an accelerated aging test that simulates a minimum of 2 to 10 years natural aging under a combination of various storage conditions that have different deleterious effects.

Resistance to solvents. Verifies that the markings will not become illegible when the component is subjected to various solvents employed by equipment manufacturers.

Thermal shock. Simulates transferring equipment from a heated shelter to the outside environment in an arctic area. While temperature limits may vary with specified conditions, the test usually involves exposure of the components to temperatures of -55°C and $+125^{\circ}\text{C}$, or the maximum rated specification of the component.

Surge current test. Subjects devices under test to high forward current stress conditions to determine the ability of the chip and the contacts to withstand current surges.

Hermetic seal. Determines the effectiveness of the seal of semiconductors with internal cavities. There are two types of required tests—fine leak and gross leak.

Steady-state operation life. Designed to weed out components that might be subject to “infant mortality” on the proven premise that if a semiconductor device is likely to fail, it will do so during the early hours of normal operation.

Intermittent operation life. Similar to the steady-state operation life test, above, except that the devices are subject to sudden sequential on-off periods to provide added stress.

Blocking life. Performed on rectifier diodes only, this test is normally run at an elevated temperature of 150°C for 340 h, with the primary blocking junction reverse-biased. The reverse-bias voltage is 80 to 85 percent of the rated voltage of the device.

Decap internal visual. Verifies conformance to the original specifications by “opening” samples of a completed lot and comparing the internal structure with the qualified design report.

Scanning electron microscope (SEM) inspection. Verifies the quality of the metalization on the semiconductor die by checking for defects such as voids, separations, notches, cracks, depressions, or tunnels and other processing-related faults.

Bond strength. Verifies the integrity of wire (or clip) bonds within the package by applying stresses that will cause the maximum potential for wire breaks and associated die failures.

Thermal resistance tests. Determine the efficiency of the chip-to-header interface in transferring heat from the chip to the header.

High-temperature (nonoperating) life. Verifies that the devices will not degrade after storage at maximum temperature for 340 h.

Group C Tests. Whereas previous test groups deal with the design and manufacturing integrity of semiconductors, this group of tests adds additional assurances that the products will withstand severe environmental stresses over prolonged time periods.

Thermal shock (glass strain). Exposes the devices to sudden extreme changes in temperature by alternately immersing them in hot and cold liquids ranging from 0 to 100°C and, subsequently, testing them for hermeticity and electrical parameters to determine if any failures occurred.

Terminal strength. Checks the capabilities of the device leads, welds, and seals for their ability to withstand pulls and bends and other physical stresses.

Moisture resistance. An accelerated test method of evaluating the resistance of the device to the deteriorative effects of high humidity and heat typical of tropical conditions.

Mechanical shock. Consists of mounting the devices in a fixture that is subsequently dropped repeatedly from a predetermined height to produce a high-impact force on the various mechanical parts and bonds.

Vibration. Simulates the use of devices in the field, when mounted on a jeep, truck, or airplane, in order to confirm the integrity of the package and the wire bonds within the package.

Constant acceleration. Designed to detect structural and mechanical weaknesses not detected in other shock and vibration tests.

Salt atmosphere. An accelerated laboratory corrosion test simulating the effect of shipboard or seacoast atmospheres on devices by subjecting them to a controlled salt atmosphere fog stream to detect subsequent flaking, pitting, or corrosion that will interfere with device application.

The above tests are required for all standard military (MIL-Qualified) semiconductors and are described in detail in documents MIL-S-19500 and MIL-STD-750 maintained by the Department of the Navy. In addition, many of them are employed routinely during the manufacturing process of commercial products as a safeguard against processing faults and to provide a continual check of end-product quality and reliability.

38. Semiconductor packages. Semiconductor devices are available in a seemingly endless variety of packages. Some of these variations are cost-related, others are function-related, and still others are preference-related.

Cost-related selections normally include metal and ceramic packages on the high end of the scale, and plastic packages on the low end. Plastic packages are dominant in commercial equipment, while metal and ceramic packages are usually mandated for military and high-reliability applications, or where power requirements are beyond the capabilities of plastic packages.

For this discussion, function-related packages relate to sizes and shapes dictated by the functions contained on the chip. Thus, discrete components may utilize from two to four pins, while integrated circuit packages may require hundreds of pins to accommodate the I/O requirements of the enclosed function.

Preference-related packages are those that offer the same or similar functions in different package configurations to accommodate design preferences. Typical choices include such variations as leaded or surface-mount packages, in-line or dual in-line pin configurations or special structures such as press-fit and stud packages.

Integrated circuits, typically, are housed in dual in-line packages (Fig. 6.97a) to accommodate a large number of leads in an acceptable amount of space. Large-scale integrated circuits, whose I/O requirements cannot easily be satisfied even with dual in-line structures are accommodated by special VLSI packages such as pin grid arrays (PGAs) and leaded chip carriers (LCCs) (Fig. 6.97b). And for equipment where available space is at a premium, equivalent space-saving small outline integrated circuit (SOIC) packages for surface-mount applications (Fig. 6.97c) are gaining in popularity and availability. While integrated circuits for military and hi-rel applications are usually made of ceramic, a few metal packages with relatively high pin counts are also available (Fig. 6.97d).

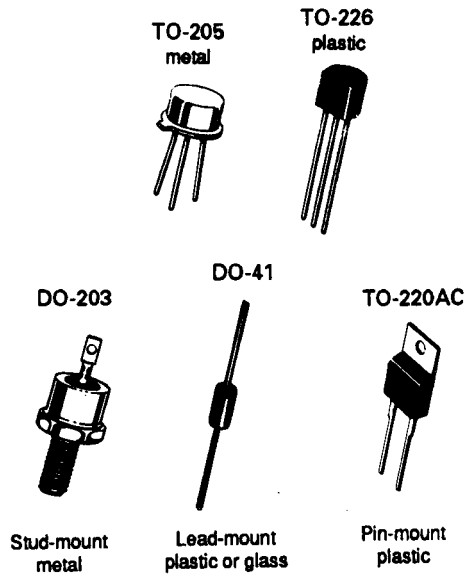
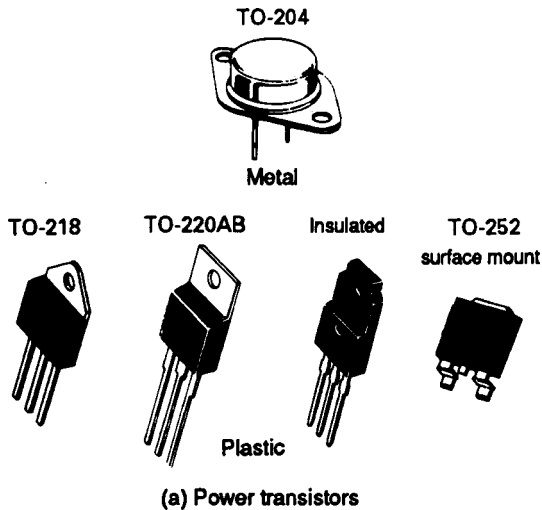


FIGURE 6.98 Representative sampling of packages used for discrete devices.

sink, or where the heat sink is common to several devices, insulating (mica or silicone rubber) washers can be used between the package and the heat sink.

When electrical insulation is required prior to heat sinking, the need for a thermal grease becomes more pronounced since there are now two isolating surfaces between the package and the heat sink. Data obtained by Thermalloy, Inc. (Fig. 6.99) show relative thermal resistance values between different types of insulating materials and also for various mounting screw torque values. It is quite evident that the use of grease is much more effective in reducing thermal resistance than an increase in the amount of force used to mate the two surfaces. Indeed, excessive tightening of the mounting screw can cause potential problems, particularly if the mounting hole is too large, by pulling the package into the hole (Fig. 6.100). The resulting buckling not only reduces surface contact, but can also cause cracking of the die in the package. Die rupture can also occur when the leads of a device must be bent in order to fit into a fixture or socket.

Typical examples of mounting several types of semiconductor packages are illustrated in Fig. 6.101.

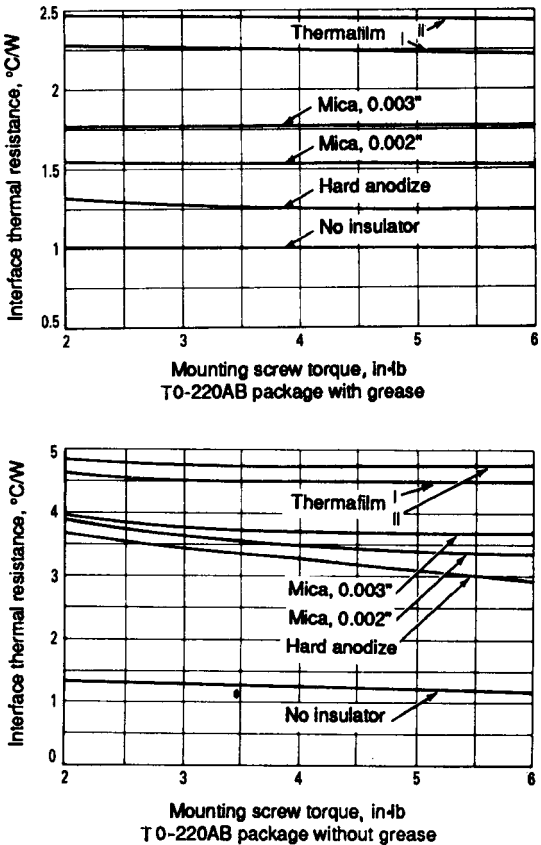


FIGURE 6.99 Interface thermal resistance for various types of insulating materials as a function of mounting screw torque—with and without the use of grease.

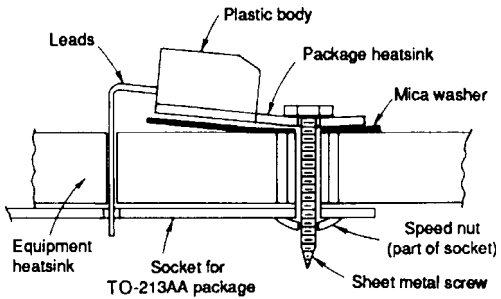


FIGURE 6.100 Exaggerated example of improperly mounted semiconductor package.

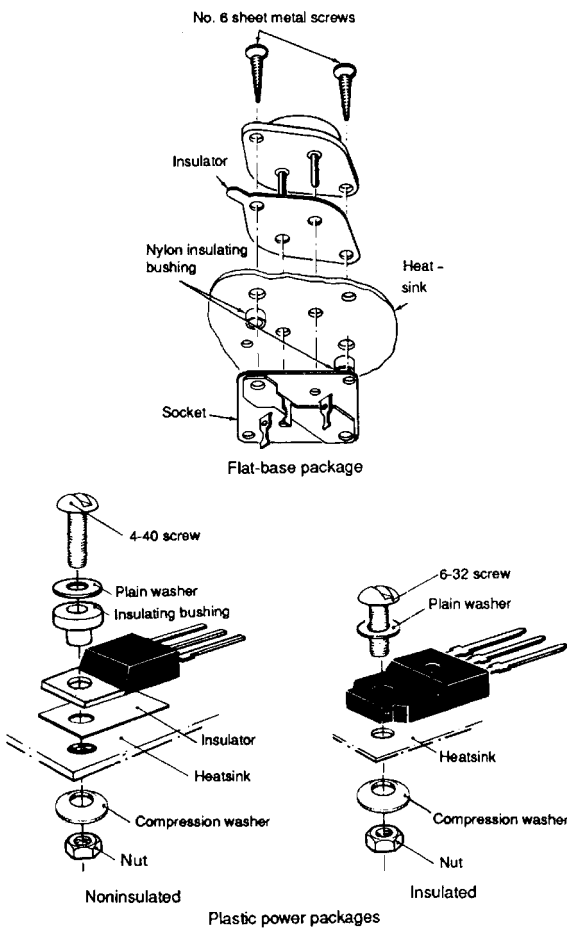


FIGURE 6.101 Typical methods for mounting various types of power device packages.

To reduce insulation problems, some of the more recent power devices are being produced in insulated packages. These newer packages, housing multiple-chip and monolithic integrated power circuits as well as discrete components, come in two basic forms. The first (Fig. 6.102*a*) uses a mounting plate that is insulated from the chip and can be fastened directly to a grounded chassis or heat sink. The second (Fig. 6.102*b*) utilizes a thermal conductive plastic overmold to cover the metal mounting base of the basic package.

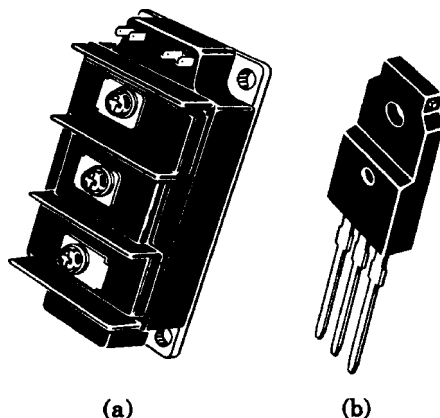


FIGURE 6.102 Two commercial types of power packages requiring no external insulation.

39. Transient suppression*. A not-infrequent cause for semiconductor problems is the incidence of transients, which can stress the devices beyond their electrical design limits.

Some transients are internally generated as a result of inductive switching, commutation voltage spikes, etc. These are easily suppressed because their energy content is known and predictable. Others, however, may be created outside the circuit and coupled into it. These are more difficult to anticipate, and their suppression is often beyond the control of the circuit designer. Such transients include lightning-generated spikes and substation problems, but can also be caused by switching of parallel loads within the same branch of a power distribution system. Effective transient suppression requires that the impulse energy within the transient be dissipated in an added transient suppressor at a low enough voltage so that the capabilities of the circuit or associated components will not be exceeded.

Several types of transient suppressors have been in widespread use. Among these are the carbon block spark gaps, gas tubes, selenium rectifiers, metal oxide varactors, and zener diodes. Of these, zener diodes, especially those designed specifically for surge suppression, e.g., the 1N6267–1N6303 series, have the most favorable set of characteristics.

There are two characteristics of primary importance for surge suppressors. The first, the zener breakdown voltage rating, must be equal to or lower than the maximum voltage of the equipment or circuits it is to protect. The second is the maximum power rating of the suppressor, beyond which it may itself be damaged. The latter must take into account both the maximum peak voltage and current ratings of the device, as well as the voltage excursions and pulse width of the transients.

*Abstracted from Motorola Application Note AN843.

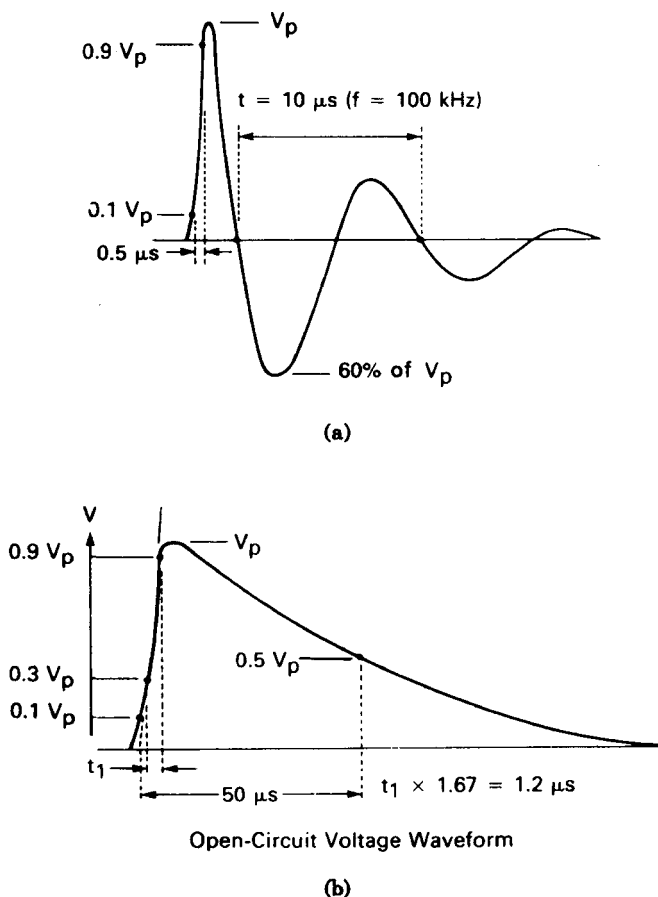


FIGURE 6.103 Typical indoor (a) and outdoor (b) transient waveshapes.

Typical waveshapes for indoor and outdoor locations (Fig. 6.103) are defined in IEEE standard 28, ANSI standard C62.1, and can be considered as realistic representations. Peak ac power line voltage transients in indoor locations are usually limited to approximately 6.0 kV due to the spark-over spacing between conductors used in standard wiring practices. In outdoor locations, such as electrical service entrances, power line connections to additional buildings, etc., no such limitations exist.

The amplitude of randomly induced voltage transients and their energy content are difficult to define, but data from surge counters and other sources (Fig. 6.104) have provided some insight. In this plot, data for low exposure were taken from locations with little load switching or lightning activity; medium exposure is considered as areas with severe switching transients and frequent lightning activity; high-exposure systems are those supplied by long unprotected overhead lines with high spark-over clearances. Surge characteristics deemed representative of various locations within a building are given in Table 8.

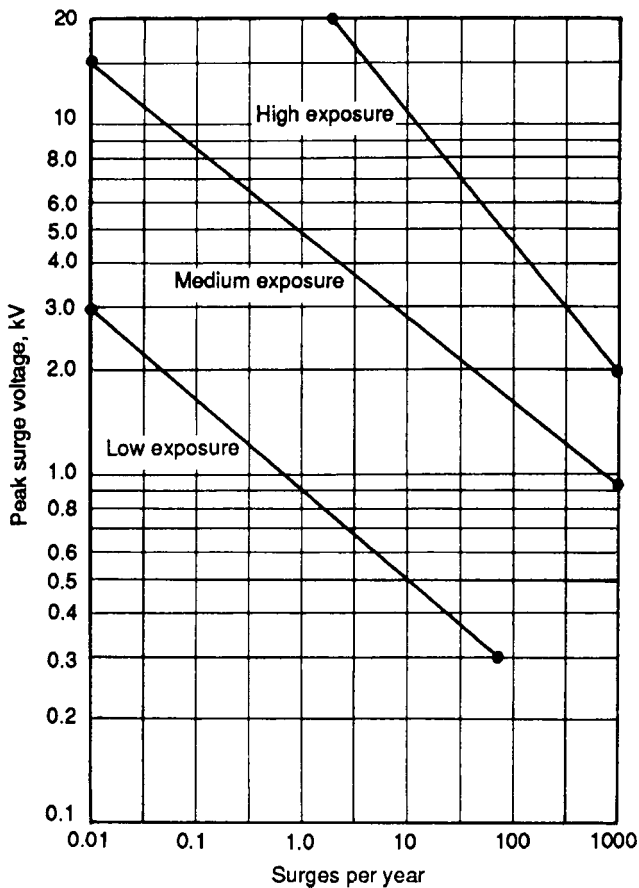


FIGURE 6.104 Peak surge voltages versus surges per year. [EIA Paper, 587.1/F, May 1979, p. 10]

TABLE 8 Surge Voltages and Currents Anticipated at Various Locations


Location	Surge voltage	Surge current	Energy (joules*) dissipated in suppressor with clamp voltage of		
			250 V	500 V	1000 V
1	6.0 kV	200 A	0.4	0.8	1.6
2	6.0 kV	500 A	1.0	2.0	4.0
3	10 kV or more	10 kV or more	20	40	80

*Joules = power × time.


1. Outlets and circuits a long distance from electrical service entrance
2. Major bus lines and circuits a short distance from service entrance
3. Electrical service entrance and outdoor locations

A safe approximation of the peak power contained in a transient can be obtained by considering its shape to be that of a rectangular pulse with the same peak power. For example, an exponential discharge with a time constant of 1.0 ms can be approximated with a rectangular 1.0-ms pulse with the same peak power as the transient.

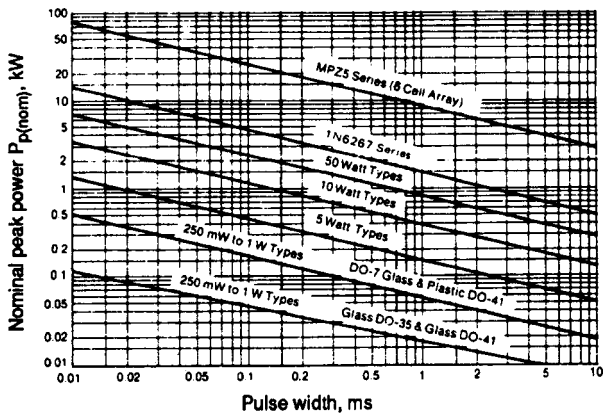Because pulse width determines the heating effect of the transient, the peak power dissipation ratings of typical zener diodes are also a function of pulse width, as shown in Fig. 6.105*a*. And when the transient is expected to be repetitive, peak power must be further derated as in Fig. 6.105*b*.



(a)

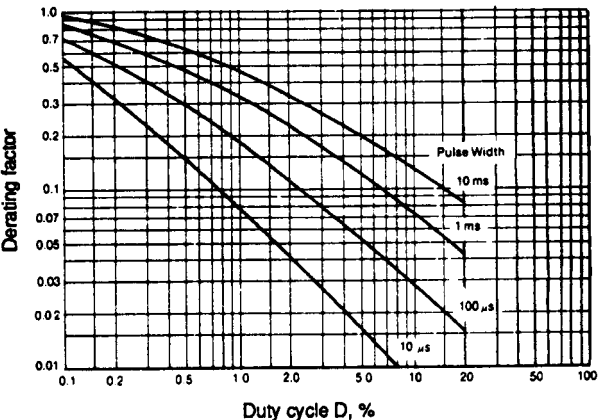

(b)

FIGURE 6.105 (a) Peak power ratings of typical zener diodes as a function of pulse width. (b) Power derating as a function of duty cycle.

This page intentionally left blank

DIVISION 7

GENERATORS AND MOTORS

Principles, Characteristics, and Management of DC Generators (Dynamos)	7.1
Principles, Characteristics, and Management of AC Generators (Alternators)	7.41
Principles, Characteristics, and Management of Electric Motors	7.55
Direct-Current Motors	7.62
Alternating-Current Motors	7.72
Conversion Equipment	7.117
Troubles of AC Motors and Generators: Their Localization and Correction	7.120
Care of Motors	7.128
Control Equipment for Motors	7.136
Motor Drives and Application	7.201
Motor Circuits	7.222
Control Circuits	7.243
Industrial Control Panels	7.245
Air-Conditioning and Refrigerating Equipment	7.250
Engine- and Gas-Turbine Generators	7.257

PRINCIPLES, CHARACTERISTICS, AND MANAGEMENT OF DC GENERATORS (DYNAMOS)

1. Direct-current generators impress on the line a direct or continuous emf, one that is always in the same direction. Commercial dc generators have commutators, which distinguish them from ac generators. The function of a commutator and the elementary ideas of generation of emf and commutation are discussed in Div. 1. Additional information about commutation as applied to dc motors, which in general is true for dc generators, is given below.

2. Excitation of generator fields. To generate an emf, conductors must cut a magnetic field which in commercial machines must be relatively strong. A permanent magnet can be used for producing such a field in a generator of small output, such as a telephone magneto or the magneto of an insulation tester, but in generators for light and power the field is produced by electromagnets, which may be excited by the machine itself or be separately excited from another source.

Self-excited machines may be of the series, shunt, or compound type, depending upon the manner of connecting the field winding to the armature. In the series type of machine, the field winding (the winding which produces the magnetic field) is connected in series with the armature winding. In the shunt type, the field winding is connected in parallel,

shunt, with the armature winding. Compound machines have two field windings on each pole. One of these windings is connected in series with the armature winding, and the other is connected in parallel or shunt with the armature winding.

3. Armature winding of dc machines may be of the *lap* or the *wave* type. The difference in the two types is in the manner of connecting the armature coils to the commutator. A coil is the portion of the armature winding between successive connections to the commutator. In the lap type of winding (see Fig. 7.1) the two ends of a coil are connected to adjacent commutator segments. In the wave type of winding (see Fig. 7.2) the two ends of a coil are connected to commutator segments that are displaced from each other by approximately 360 electrical degrees.

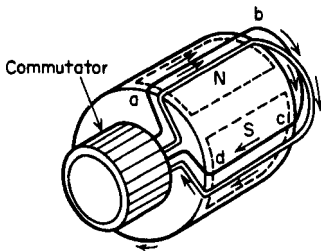


FIGURE 7.1 Two coils of a four-pole lap-wound armature.

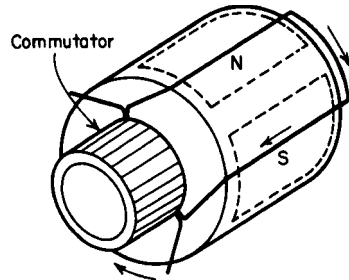


FIGURE 7.2 Coil on a four-pole wave-wound armature.

The type of armature winding employed affects the voltage and current capacity of the machine but has no effect upon the power capacity. This is due to the fact that the number of parallel paths between armature terminals is affected by the type of winding. For a wave-wound machine there are always two paths in parallel in the armature winding between armature terminals. For a lap-wound machine there are as many parallel paths in the armature winding as there are pairs of poles on the machine. For the same number and size of armature conductors, a machine when wave-connected would generate a voltage that would equal the voltage generated when lap-connected times the number of pairs of poles. But the current capacity would be decreased in the same proportion that the voltage was increased. The current capacity of a machine when wave-connected is therefore equal to the capacity when lap-connected divided by the number of pairs of poles.

4. The value of the voltage generated by a dc machine depends upon the armature winding, the speed, and the field current. For a given machine, therefore, the voltage generated can be controlled by adjusting either the speed or the field current. Since generators are usually operated at a constant speed, the voltage must be controlled by adjusting the field current.

5. Separately excited dc generators are used for electroplating and for other electrolytic work for which the polarity of a machine must not be reversed. Self-excited machines may change their polarities. The essential diagrams are shown in Fig. 7.3. The fields can be excited from any dc constant-potential source, such as a storage battery, or from a rectifier connected to an ac supply.

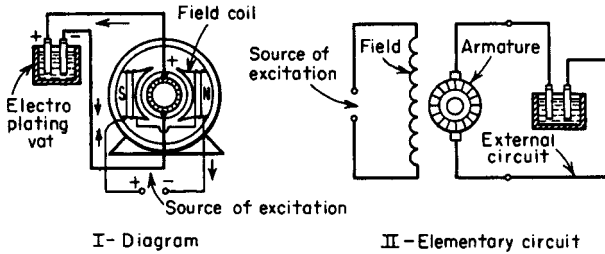


FIGURE 7.3 Separately excited generator.

The field magnets can be wound for any voltage because they have no electric connection with the armature. With a constant field excitation, the voltage will drop slightly from no load to full load because of armature drop and armature reaction.

Separate excitation is advantageous when the voltage generated by the machine is not suitable for field excitation. This is true for especially low- or high-voltage machines.

6. Series-wound generators have their armature winding, field coils, and external circuit connected in series with each other so that the same current flows through all parts of the circuit (see Fig. 7.4). If a series generator is operated at no load (external circuit open), there will be no current through the field coils, and the only magnetic flux present in the machine will be that due to the residual magnetism which has been retained by the poles from previous operation. Therefore, the no-load voltage of a series generator will be only a few volts produced by cutting the residual flux. If the external circuit is closed and the current increased, the voltage will increase with the increase in current until the magnetic circuit becomes saturated. With any further increases of load the voltage will decrease.

Series generators have been used sometimes in street-railway service. They have been connected in series with long trolley feeders supplying sections of the system distant from the supply point in order to boost the voltage. However, power rectifiers have replaced dc generators for most installations of this type.

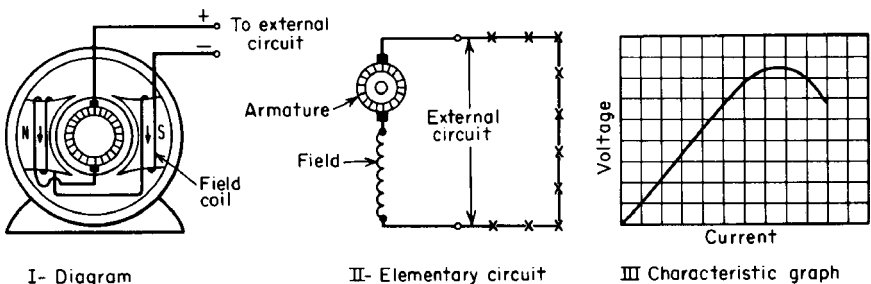


FIGURE 7.4 Series generator.

7. The shunt-wound generator is shown diagrammatically in Fig. 7.5, I and II. A small part of the total current, the exciting current, is shunted through the fields. The exciting current varies from possibly 5 percent of the total current in small machines to 1 percent in large ones. The exciting current is determined by the voltage at the brushes and the

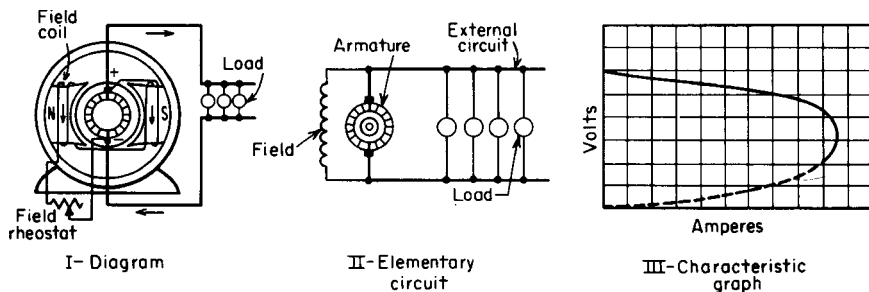


FIGURE 7.5 Shunt generator.

resistance of the field winding. Residual magnetism in the field cores permits a shunt generator to “build-up.” This small amount of magnetism that is retained in the field cores induces a voltage in the armature (William H. Timbie, *Elements of Electricity*). This voltage sends a slight current through the field coils, which increases the magnetization. Thus, the induced voltage in the armature is increased. This in turn increases the current in the fields, which still further increases the magnetization, and so on, until the normal voltage of the machine is reached and conditions are stable. This “building-up” action is the same for any self-excited generator and often requires 20 to 30 s.

If a shunt generator (Timbie) runs at a constant speed, as more and more current is drawn from the generator, the voltage across the brushes falls slightly. This fall is due to the act that more and more of the generated voltage is required to force the increasing current through the windings of the armature; i.e., the armature IR drop increases. This leaves a smaller part of the total emf for brush emf, and when the brush voltage falls, there is a slight decrease in the field current, which is determined by the brush voltage. This and armature reactions cause the total emf to drop a little, which still further lowers the brush potential. These causes combine to lower the voltage gradually, especially at heavy overloads. The curve in Fig. 7.5, III, shows these characteristics. For small loads the curves is nearly horizontal, but at heavy overloads it shows a decided drop. The point at which the voltage of a commercial machine drops off rapidly is beyond the operating range and is of importance only for short-circuit conditions.

The voltage of a shunt machine can be kept fairly constant by providing extra resistance in the field circuit (see Fig. 7.6), which may be cut out as the brush potential falls. This will allow more current to flow through the field coils and increase the number of magnetic lines set up in the magnetic circuit. If the speed is kept constant, the armature conductors cut through the stronger magnetic field at the same speed and thus induce a greater emf and

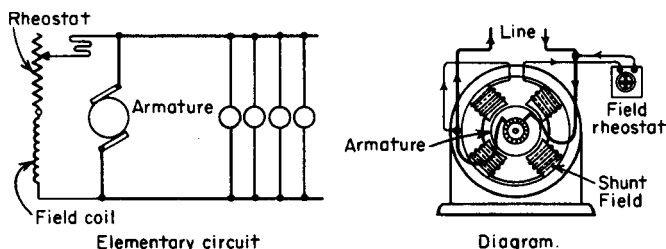


FIGURE 7.6 Shunt-wound generator with a rheostat.

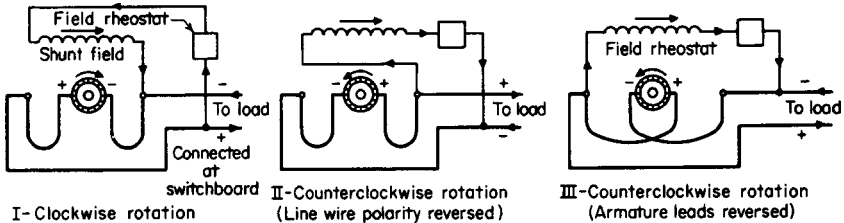


FIGURE 7.7 Changing the rotation direction of a shunt machine.

restore the brush potential to its former value. This resistance can be cut out either automatically or by hand (see Sec. 42 of Div. 1).

Shunt-wound generators give a fairly constant voltage, even with varying loads, and can be used for any system which incorporates constant-potential loads. This will operate well in parallel because the voltage of the machines decreases as the load increases. Shunt generators running in parallel will divide the load well between themselves if the machines have similar characteristics.

The necessary change in connections when reversing the direction of rotation of a shunt-wound machine is indicated in Fig. 7.7. Rotation is *clockwise* when, facing the commutator end of a machine, the rotation is in the direction of the hands of a clock. *Counterclockwise* rotation is the reverse. When changing the direction of rotation, do not reverse the direction of current through the field windings. If the direction is reversed, the magnetism developed by the windings on starting will oppose the residual magnetism and the machine will not "build up."

8. Parallel operation of shunt generators. As suggested in Sec. 7, shunt-wound generators will in general operate very well in parallel and will divide the load well if the machines have similar characteristics. If the machines do not have similar characteristics, one machine will take more than its share of the load and may tend to drive the other as a motor. When this machine is running as a motor, its direction of rotation will be the same as when it was generating; hence the operator must watch the ammeters closely for an indication of this trouble. Shunt generators are now seldom installed. Figure 7.8 shows the connections for shunt generators that are to be operated in parallel.

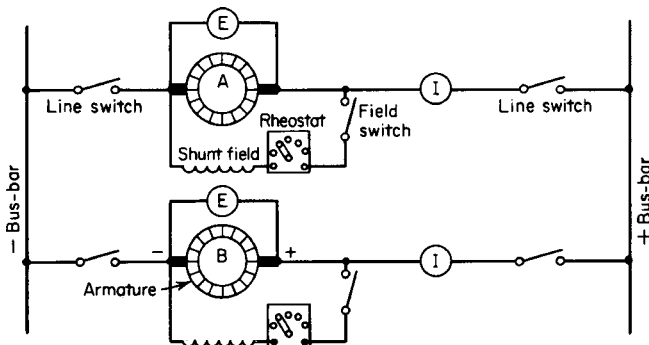


FIGURE 7.8 Connections for shunt generators for parallel operation.

9. The compound-wound generator is shown diagrammatically in Fig. 7.9, I. If a series winding is added in a proper manner to a shunt generator (Fig. 7.5), the two windings will tend to maintain a constant voltage as the load increases. The magnetization due to the series windings increases as the line current increases, thus tending to increase the generated voltage. The drop of voltage at the brushes that occurs in a shunt generator can thus be compensated for.

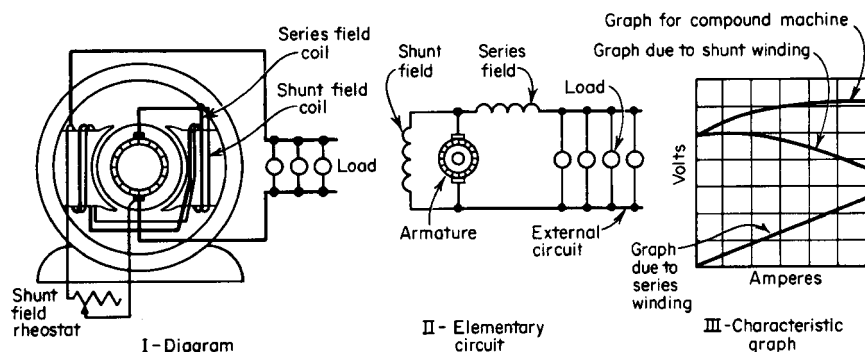


FIGURE 7.9 Compound generator.

The series winding must be connected in such a manner that its current will aid that of the shunt-field winding in producing magnetic flux. With this proper connection, the machine is said to be cumulatively connected. If the series field is connected in the reverse manner, so that the series field tends to produce flux in the opposite direction to that produced by the shunt field, the machine is said to be differentially connected. Differential connection of compound machines is used in very special cases.

10. A flat-compounded generator is one having its series coils so proportioned that the voltage remains practically constant at all loads from 0 to $1\frac{1}{4}$ full load.

11. An overcompounded generator has its series windings so proportioned that its full-load voltage is greater than its no-load voltage. Overcompounding is necessary when it is desirable to maintain a practically constant voltage at some point out on the line distant from the generator. It compensates for line drop. The characteristic curve (Fig. 7.9, III) indicates how the terminal voltage of a compound-wound machine is due to the action of both shunt and series windings. Generators are usually overcompounded, so that the full-load voltage is from 5 to 10 percent greater than the no-load voltage.

Although compound-wound generators are usually provided with a field rheostat, it is not intended for regulating voltage, as the rheostat of a shunt-wound machine is. It is provided to permit initial adjustment of voltage and to compensate for changes of the resistance of the shunt winding caused by heating. With a compound-wound generator, the voltage having been once adjusted, the series coils automatically strengthen the magnetic field as the load increases. For dc power work, compound-wound generators are used almost universally when rectifiers are not employed.

12. An undercompounded generator is one with a relatively weak series-field winding, so that the voltage decreases with increased load.

13. If a compound-wound generator is short-circuited, the field strength due to the series windings will be greatly increased but the field due to the shunt winding will lose its strength. For the instant or so that the shunt magnetization is diminishing, a heavy current will flow. If the shunt magnetization constitutes a considerable proportion of the total magnetization, the current will decrease after the heavy rush and little harm will be done if the armature has successfully withstood the heavy rush. However, if the series magnetization is quite strong in proportion to the shunt, their combined effect may so magnetize the fields that the armature will be burned out.

14. A short-shunt compound-wound generator has its shunt field connected directly across the brushes (see Fig. 7.9, II). Generators are usually connected in this way because this arrangement tends to maintain the shunt-field current more nearly constant on variable loads, as the drop in the series winding does not directly affect the voltage on the shunt field.

15. A long-shunt generator has its shunt-field winding connected across the terminals of the generator (see Fig. 7.10).

16. Nearly all commercial dc generators have more than two poles. A two-pole machine is a bipolar machine; one having more than two poles is a multipolar machine. Figure 7.11 shows the connections for a four-pole compound-wound machine. Diagrams for machines having more poles would be similar. In multipolar machines there is usually one set of brushes for each pair of poles, but with wave-wound armatures, such as those used for railway motors, one set of brushes may suffice for a multipolar machine. The connections of different makes of machines vary in detail; since manufacturers will always furnish complete diagrams, no attempt will be made to give them here. The directions of the field windings on

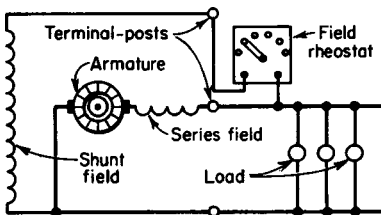


FIGURE 7.10 Long-shunt compound-wound generator.


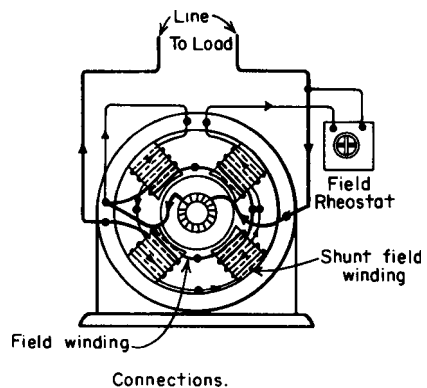


FIGURE 7.11 Four-pole compound-wound generator.

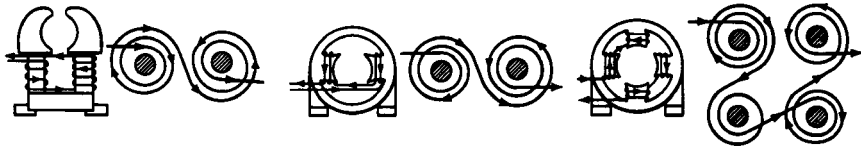

I- Old bipolar machine



II- Modern bipolar machine

III Multipolar machine

FIGURE 7.12 Directions of field windings on generator frames.

generator frames are given in Fig. 7.12. The directions of the windings on machines having more than four poles are similar in general to those of the four-pole machines.

17. A series shunt for a compound generator consists of a low-resistance connection across the terminals of the series field (see Figs. 7.13 and 7.14) through which the compounding effect of the series winding can be regulated by shunting more or less of the armature current around the series coils. The shunting resistance may be in the form of grids, on large machines, or of ribbon resistors. In the latter case it is usually insulated and folded into small compass.

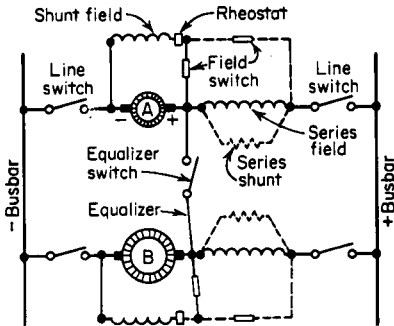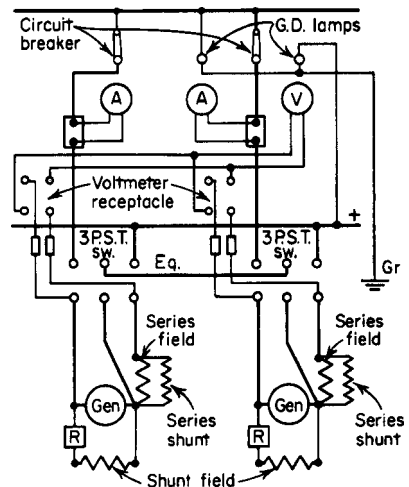**FIGURE 7.13** Elementary connections for parallel operation of compound-wound generators.**FIGURE 7.14** Connections of two compound-wound generators to a switchboard.

18. Parallel operation of compound-wound generators is readily effected if the machines are of the same make and voltage or are designed with similar electrical characteristics (Westinghouse Electric Corp.) The only change that is usually required is the addition of an equalizer connection between machines. If the generators have different compounding ratios, it may be necessary to adjust the series-field shunts to obtain uniform conditions.

19. An equalizer, or equalizer connection, connects two or more generators operating in parallel at a point where the armature and series-field leads join (see Fig. 7.13), thus

connecting the armatures in multiple and the series coils in multiple so that the load will divide between the generators in proportion to their capacities. The arrangement of connections to a switchboard (Westinghouse Electric Corp.) is illustrated in Fig. 7.14. Consider, for example, two overcompound-wound machines operating in parallel without an equalizer. If for some reason there is a light increase in the speed of one machine, it will take more than its share of load. The increased current flowing through its series field will strengthen the magnetism, raise the voltage, and cause the machine to carry a still greater amount until it carries the entire load. When equalizers are used, the current flowing through each series coil is inversely proportional to the resistance of the series-coil circuit and is independent of the load on any machine; consequently, an increase of voltage on one machine builds up the voltage of the other at the same time, so that the first machine cannot take all the load but will continue to share it in proper proportion with the other generators.

20. Operation of a shunt and a compound dynamo in parallel is not successful because the compound machine will take more than its share of the load unless the shunt-machine field rheostat is adjusted at each change in load.

21. Connecting leads for compound generators. See that all the cables for machines of equal capacity that lead from the series fields of the various machines to the busbars are of equal resistance. This means that if the machines are at different distances from the switchboard, different sizes of wire should be used or resistance inserted in the low-resistance leads.

With generators of small capacity the equalizer is usually carried to the switchboard, as suggested in Figs. 7.14 and 7.15, but with larger ones it is carried under the floor directly between the machines (Fig. 7.16). The positive and the equalizer switches of each machine may be mounted side by side on a pedestal near the generator (Fig. 7.16). The

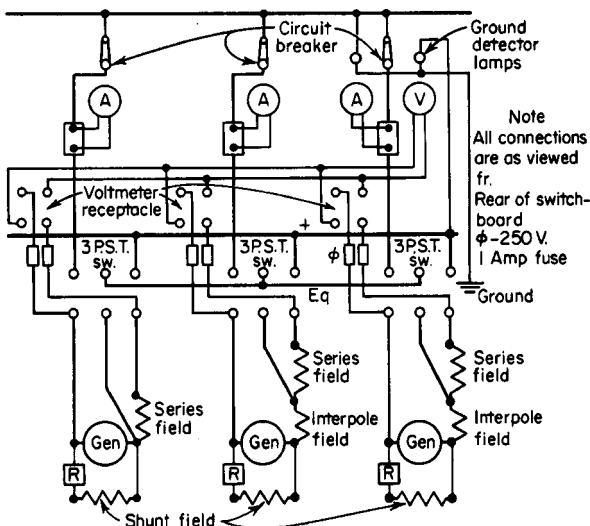


FIGURE 7.15 Connections of two dc commutating-pole generators in parallel with one generator without commutating poles.

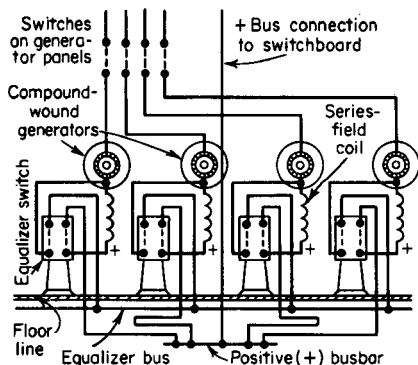


FIGURE 7.16 Equalizer carried directly between machines.

difference in potential between the two switches is only due to the small drop in the series coil. The positive busbar is carried under the floor near the machines, permitting leads of minimum length. Leads of equal length should be used for generation of equal capacities. If the capacities are unequal (see Sec. 25), it may be necessary to loop the leads (see Fig. 7.16).

22. Ammeters and circuit breakers for compound generators should, as in Fig. 7.14, always be inserted in the lead not containing the compound winding. If the ammeters are put in the compound-winding lead, the current indications will be inaccurate

because current from this side of the machine can flow through either the equalizer or the compound-winding lead.

23. Starting a shunt- or compound-wound generator. (1) See that there is enough oil in the bearings, that the oil rings are working, and that all field resistance is cut in. (2) Start the prime mover slowly and permit it to come up to speed. See that the oil rings are working. (3) When machine is up to normal speed, cut out field resistance until the voltage of the machine is normal or equal to or a trifle above that on the busbars. (4) Throw on the load. If three separate switches are used, as in Fig. 7.13, close the equalizer switch first, the series-coil line switch second, and the other line switch third. If a three-pole switch is used, as in Fig. 7.14, all three poles are, of course, closed at the same time. (5) Watch the voltmeter and ammeter and adjust the field rheostat until the machine takes its share of the load. A machine generating the higher voltage will take more than its share of the load and if its voltage is too high, it will run the other machine as a motor.

24. Shutting down a shunt- or compound-wound generator operating in parallel with others. (1) Reduce the load on the machine as much as possible by cutting resistance into the shunt-field circuit with the field rheostat. (2) Throw off the load by opening the circuit breaker if one is used; otherwise open the main generator switches. (3) Shut down the driving machine. (4) Wipe off all oil and dirt, clean the machine, and put it in good order for the next run. Turn on all resistance in the field rheostat. Open the main switch.

25. Adjusting the division of load between two compound-wound generators. First adjust the series shunts of both machines so that, as nearly as possible, the voltages of both will be the same at one-fourth, one-half, three-fourths, and full load. Then connect the machines in parallel, as suggested in Fig. 7.13, for trial. If, upon loading, one machine takes more than its share of the load (amperes), increase the resistance of the path through its series-field coil path until the load divides between the machines proportionally to their capacities. Only a small increase in resistance is usually needed. The increase can be provided by inserting a longer conductor between the generator and the busbar, or iron or

nickel silver washers can be inserted under a connection lug. Inasmuch as adjustment of the series-coil shunt affects both machines when the machines are connected in parallel, nothing can be accomplished through making such an adjustment.

26. Commutating-pole dc generators. Generators which do not have commutating poles (Westinghouse Electric Corp.) and which operate under severe overloads and over a wide speed range are apt to spark under the brushes at the extreme overloads and at the higher speeds. This happens because the field due to the armature current distorts the main field to such an extent that the coils being commutated under the brush are no longer in a magnetic field of the proper direction and strength. To overcome this, *commutating poles* are placed between the main poles (see Fig. 7.17). These poles introduce a magnetic field of such direction and strength as to maintain the magnetic field, at the point where the coils are commutated, at the proper strength for good communication. Commutating poles are sometimes called *interpoles*. Commutating poles is the preferable term.

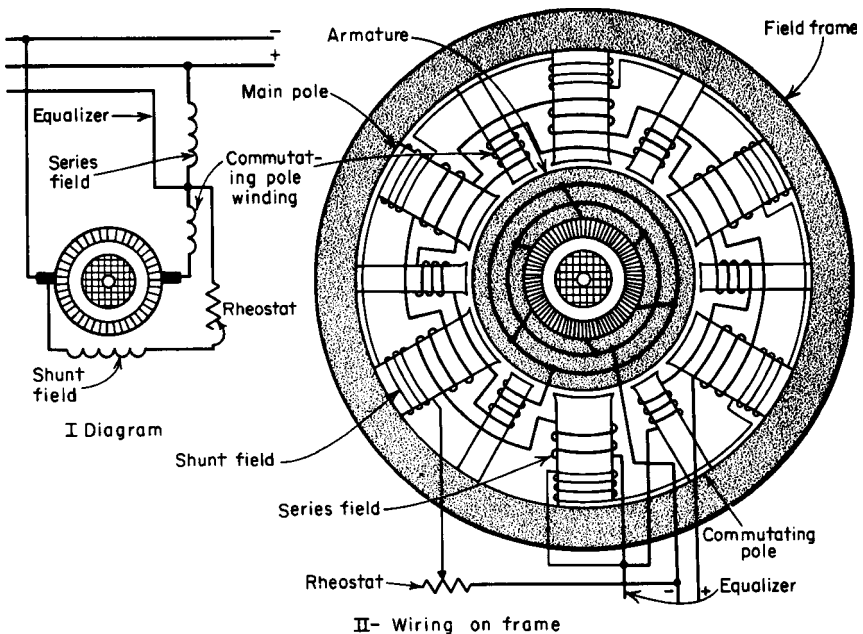


FIGURE 7.17 Compound-wound commutating-pole (interpole) machine.

The winding on the commutating poles is connected in series with the armature so that the strength of the corrective field increases and decreases with the load. The adjustment and operation of commutating-pole generators are not materially different from those of non-commutating-pole machines.

When the brush position of a commutating-pole machine has once been properly fixed, no shifting is required afterward or should be made, and most commutating-pole generators are shipped without any shifting device. An arrangement for clamping the brush holder rings securely to the field frame is provided.

In commutating-pole apparatus, accurate adjustment of the brush position is necessary. The correct brush position is on the no-load neutral point, which is located by the manufacturer. A template is furnished with each machine, or some other provision is made so that the brush location can be determined in the field. If the brushes are given a backward lead on a commutating-pole generator, the machine will overcompound and will not commute properly. With a forward lead of the brushes, a generator will undercompound and will not commute properly.

27. The object in using a commutating pole is to produce within the armature coil under commutation an emf of the proper value and direction to reverse the current in the coil which it is yet under the brush—a result that is essential to perfect commutation. The variation in the flux distribution in the air gap of a commercial dc machine of the ordinary shunt-wound type, at no load and under full load, is shown in Fig. 7.18. Consider now the value and position of the flux in the coil under the brush when the machine is operating at full load. The motion of the armature through this flux causes the generation within the coil of an emf, and the sign of this emf is such as to tend to cause the current in the coil to continue in the direction which it had before the coil reached the brush; hence it opposes the desired reversal of the current before the coil leaves the brush.

There is an additional detrimental influence which tends to retard the rapid reversal of the current even when all other influences are absent. This influence is due to the local magnetizing effect of the current in the coil under the brush. This effect causes the lines of force which surround the conductor to change in value with the fluctuations of the current as it tends to be reversed. As a result, an emf which opposes the change in the value of the current is generated in the coil. This reactive emf is in the same direction as that due to the cutting of the flux by the coil under the brush and is likewise proportional to the speed.

It will be apparent that even if the field distortion were completely neutralized, the detrimental reactive emf would remain. The improved and practically perfect commutation of the commutating-pole machine is due to the fact that the flux, which is superposed locally upon the main field, not only counterbalances the undesirable main flux cut by the coil under the brush but causes an emf sufficient to equal and opposite the reactive emf to be generated within the coil. This effect will be appreciated from a study of Fig. 7.19, which represents the distorted flux of the motor of the usual design, as shown in Fig. 7.18, and indicates the results to be expected when the flux due to the auxiliary or commutating pole is given the relatively proper value.

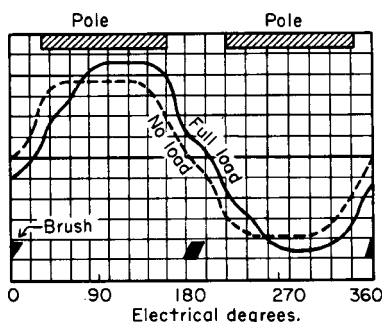


FIGURE 7.18 Distribution of magnetic flux at no load and at full load, without commutating poles.

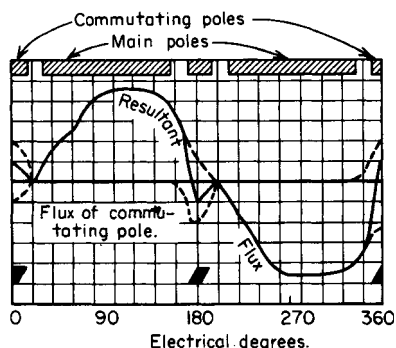


FIGURE 7.19 Distribution of magnetic flux at full load, with and without commutating poles.

This desirable effect is more pronounced the weaker the main field. The commutation voltage, if correct for a low speed, is correct for a high speed; and with the increase of load-current and main-field distortion there is a proportional increase of the counter-magnetizing field produced in the coil under the brush, up to the point of magnetic saturation of the auxiliary pole. Sparkless operation is ensured for all operating ranges of both speed and load.

28. The action of the magnetic flux in a commutating-pole generator

is illustrated in Fig. 7.20. The direction of the main-field flux is shown by the dashed line. The direction of the armature magnetization is shown by the dotted lines. The direction of the flux in the commutating pole is shown by the full line. It is evident that the commutating-pole flux is in a direction opposite to that of the armature flux, and as the commutating-pole coil is more powerful at the commutating point in its magnetizing action than the armature coils, the flux of the armature coils is neutralized. With a less powerful magnetizing force from the commutating pole than from the armature at the commutating point, the armature would overpower the commutating pole and reverse the direction of the flux, which would result in a bad commutating condition.

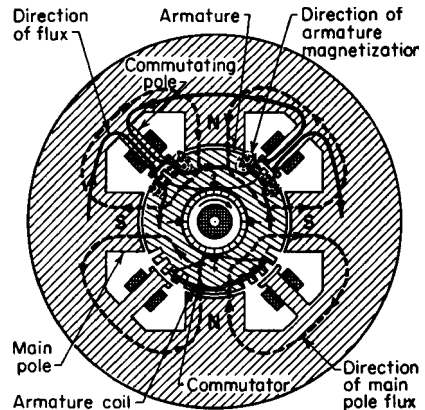


FIGURE 7.20 Distribution of flux in a commutating-pole generator.

29. Determining the neutral point of a motor or generator

(Fig. 7.21). Two copper-wire contact points, or contactors, *C* are inserted in an insulating block and are allowed to extend through it about $\frac{1}{16}$ in (1.6 mm). The distance between the centers of the points should be equal to the width of one commutator bar. The contactors are connected to a millivoltmeter *V*, which preferably should be of the differential type. Place both points on the commutator while the machine is being rotated with the brushes lifted from the commutator and the shunt field is being excited. While shifting the points around the periphery of the commutator, hold the block so that an imaginary line connecting the two contact points will be perpendicular to the axis of the commutator.

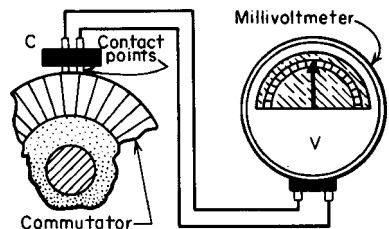


FIGURE 7.21 Connections for determination of the neutral point.

If a differential voltmeter is used, its needle will indicate either to the right or to the left of the zero point until the contacts are exactly over the neutral position; then the voltmeter will read zero. The brushes can now be shifted so that an imaginary line, parallel to the axis of the commutator and bisecting the bearing surface of the brush, will coincide with a point equidistant between the two contact points.

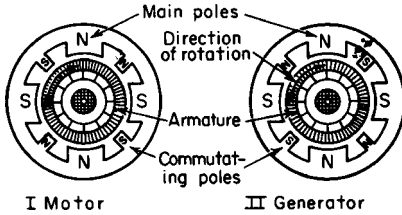


FIGURE 7.22A Polarity of commutating poles (clockwise rotation).

30. Determining the proper polarity of the commutating poles. For a motor, proceeding from pole to pole around the frame in the direction of armature rotation, each commutating pole should have the same polarity as the main pole which just precedes it (Fig. 7.22A, I). For a generator, proceeding from pole to pole around the frame in the direction of armature rotation, each commutating pole should have a polarity opposite to that of the main pole which just precedes it (Fig. 7.22A, II).

31. Commutating-pole machines will run in parallel with each other and with non-commutating-pole machines, provided correct connections are made (see illustrations). The series-field windings on commutating-pole machines are usually less powerful than on non-commutating-pole machines, and particular attention should therefore be paid to getting the proper drop in accordance with instructions of Sec. 25. A connection diagram is shown in Fig. 7.15.

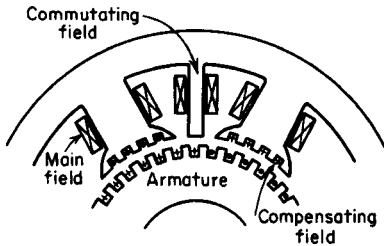


FIGURE 7.22B Section of a dc machine showing the location of a compensating field winding.

32. Compensating field windings.

The commutating poles of a dc motor or generator do not neutralize the effect of the armature current upon the flux of the machine. They simply produce a local flux at the commutating location of the armature conductors. For machines that must operate under very severe conditions of overload and speed range, means must be provided for satisfactory operation to neutralize the tendency of the armature current to distort and change the flux of the machine. This neutralization is produced by means of an

additional winding called a *compensating field winding*. A compensating field winding consists of coils embedded in slots in the pole faces of the machine, as shown in Figs. 7.22B and 7.22C. The compensating winding is connected in series with the armature in such a manner that the current through the individual conductors of the compensating field winding will be opposite to the direction of the corresponding armature conductors, as shown in Fig. 7.22B.

33. Three-wire dc generators are ordinary dc generators with the modifications and additions described below. They are usually wound for 125/250-V, three-wire circuits. In the case of commercial three-wire generators (Westinghouse Electric Corp.), four equidistant taps are made in the armature winding, and each pair of taps diametrically opposite each other is connected through a balance coil. The balance coil may be external (Fig. 7.23) or wound within the armature. The middle points of the two balance coils are connected, and this junction constitutes the neutral point to which the third, or neutral,

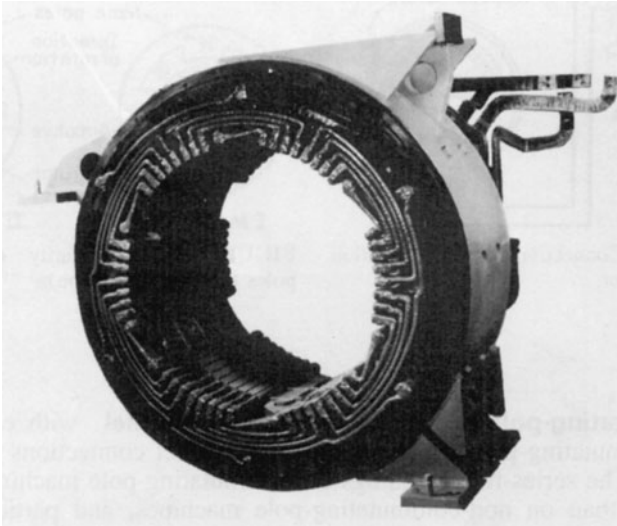


FIGURE 7.22C Frame and field structure of a dc motor showing compensating windings in the faces of the main poles. [Westinghouse Electric Corp.]

wire of the system is connected. A constant voltage is maintained between the neutral and outside wires which, within narrow limits, is one-half the generator voltage. The generator shaft is extended at the commutator end for the collector rings. Four collector brushes and brush holders are used in addition to the regular dc brushes and brush holders.

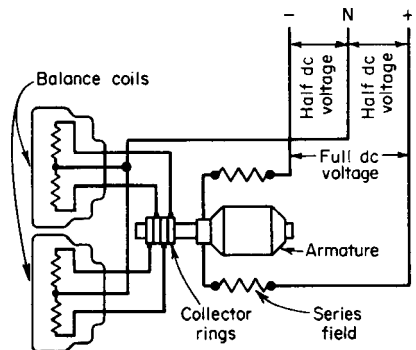


FIGURE 7.23 Connections for a three-wire generator.

34. The series coils of compound-wound three-wire generators are divided into halves (see Fig. 7.23), one of which is connected to the positive and one to the negative side. This is done to obtain compounding on either side of the system when operating on an unbalanced load. To understand this procedure, consider a generator with the series field on the negative side only and with most of the load on the positive side of the system. The current flows from the positive brush through the load and back along the neutral wire without passing through the series field. The generator is then operating as an ordinary shunt machine. If most of the load is on the negative side, the current flows out the neutral wire and back through the series fields, boosting the voltage by the maximum amount. Such operation is evidently not satisfactory, and so divided series fields are provided.

35. Switchboard connections for three-wire generators. Figure 7.24 is a diagrammatic representation of switchboard connections for two three-wire generators operated in multiple (Westinghouse publication). Two ammeters indicate the unbalanced load. The positive lead and equalizer are controlled by a double-pole circuit breaker, as are the negative lead and equalizer. Note that both the positive and the negative equalizer connections as well as both the positive and the negative leads are run to the circuit breakers as well as to the main switches on the switchboard. This must be done in all cases. Otherwise, when two or more machines are running in multiple and the breaker comes out, opening the main circuit to one of them but not breaking its equalizer leads, its ammeter is left connected to the equalizer busbars and current is fed into it from the other machines through the equalizer leads, either driving it as a motor or destroying the armature winding (see also Figs. 7.25 and 7.26).

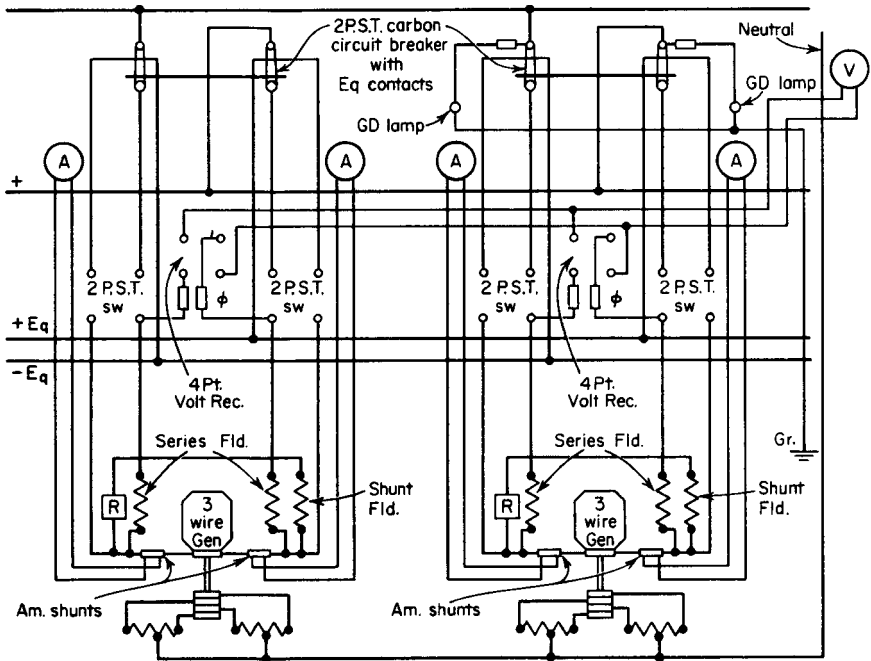


FIGURE 7.24 Connections of two three-wire dc generators operating in parallel, $125/250$ V.

36. As there are two series fields, two equalizer buses are required when several three-wire machines are installed (see Fig. 7.24) and are to be operated in parallel. The two equalizers serve to distribute the load equally between the machines and to prevent crosscurrents due to differences in voltage on the different generators. Because of the equalizer connections, two small terminal boards, one for each side of the generator, are supplied. Arrangement is also made for ammeter shunts on the terminal boards.

An ammeter shunt is mounted directly on each of the contact boards of the machine. The total current output of the machine can thereby be read at the switchboard. Because the shunts are at the machine, there is no chance for current to leak across between generator

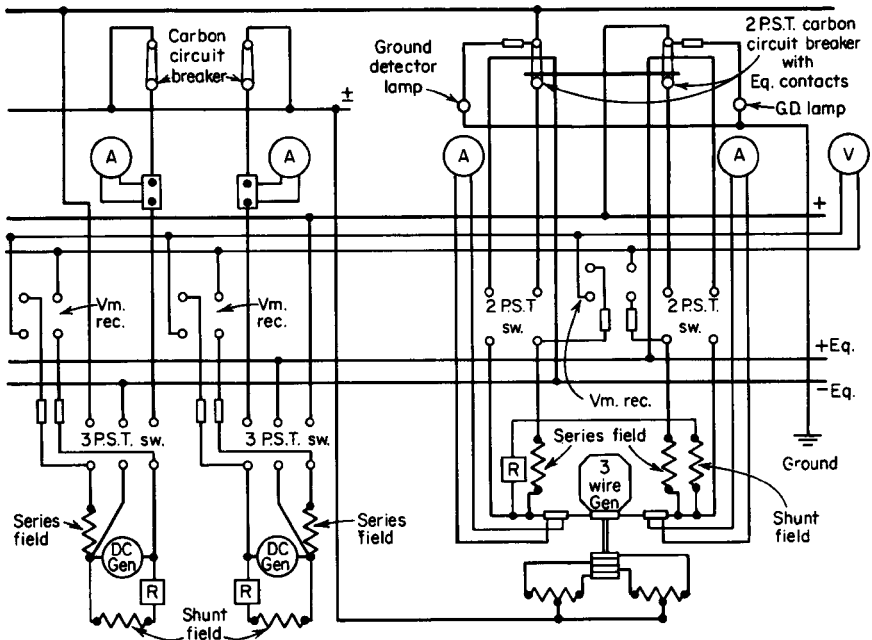


FIGURE 7.25 Connections of a three-wire dc generator, $125/250$ V, in parallel with two two-wire generators, 125 V.

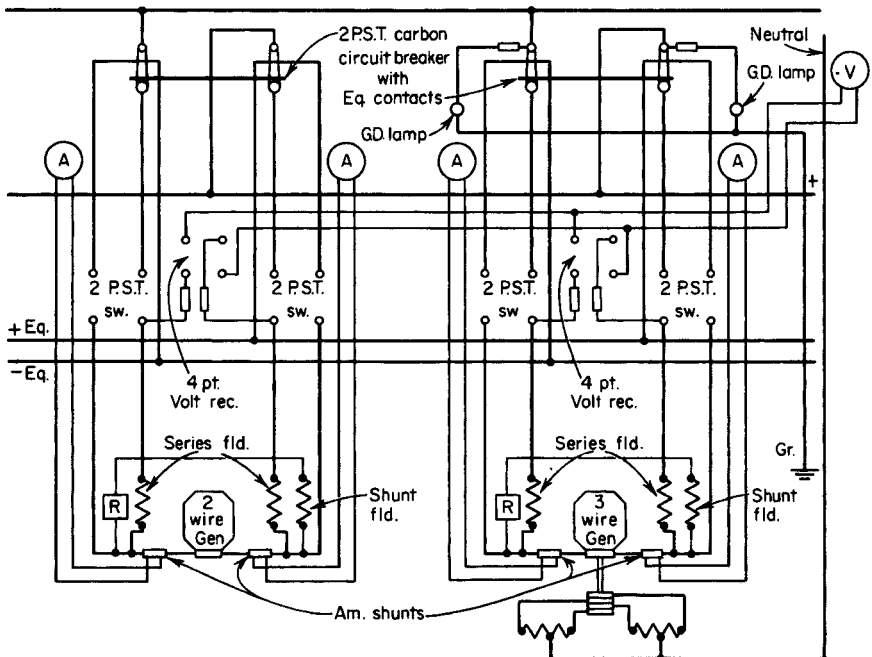


FIGURE 7.26 Connections of a three-wire dc generator, $125/250$ V, in parallel with a two-wire generator, 250 V.

switchboard leads without causing a reading on the ammeters. Two ammeters must be provided for reading the current in the outside wires. It is important that the current be measured on both sides of the system, because with an ammeter on one side of the system only it is possible for a large unmeasured current to flow in the other side with disastrous results.

37. Wires connecting the balance coils to a three-wire generator must be short and of low resistance. Any considerable resistance in these wires will affect the voltage regulation. The unbalanced current flows along these connections; consequently, if they have much resistance, the resulting drop in voltage reduces the voltage on the heavily loaded side.

Switches are not ordinarily placed in the circuits connecting the four collector rings to the balance coils. When necessary, the coils can be disconnected from the generator by raising the brushes from the collector rings. Switching arrangements often make it necessary to run the balance-coil connections to the switchboard and back, requiring heavy leads to keep the drop low, or if heavy leads are not used, poor regulation may result. The balance coils are so constructed that there is very little likelihood of anything happening to them that will not be taken care of by the main circuit breakers. Complete switchboard connection diagrams are given in Figs. 7.24, 7.25, and 7.26.

38. Commutating-pole three-wire generators. In three-wire generators, connections are so made that one-half of the commutating-pole winding is in the positive side and the other half is in the negative side. This ensures proper action of the commutating pole at an unbalanced load (see Figs. 7.24, 7.25, and 7.26 and the text accompanying them).

39. Three-wire dc generators can be operated in parallel with each other (Westinghouse publication) and in parallel with other machines on the three-wire system (see Figs. 7.24, 7.25, and 7.26). When a three-wire, 250-V generator is operated in multiple with two-wire, 125-V generators, the series fields of the two two-wire generators must be connected, one on the positive side and one on the negative side of the system, and an equalizer must be run to each machine. Similarly, when a three-wire, 250-V generator is operated in multiple with a 250-V two-wire generator, the series field of the 250-V two-wire generator must be divided and one-half connected to each outside wire. The method of doing this is to disconnect the connectors between the series-field coils and to reconnect these coils so that all the N pole fields will be in series on one side of the three-wire system and all the S pole fields in series on the other side of the system.

40. Testing for polarity. When a machine that is to operate in parallel with others is connected to the busbars for the first time, it should be tested for polarity. The $+$ lead of the machine should connect to the $+$ busbar and the $-$ lead to the $-$ busbar (Fig. 7.27, I). The machine to be tested should be brought up to normal voltage but not connected to the bars. The test can be made with two lamps (Fig. 7.27, II), each lamp of the voltage of the circuit. Each is temporarily connected between a machine terminal and the bus terminal of the main switch. If the lamps do not burn, the polarity of the new machine is correct, but if they burn brightly, its polarity is incorrect and should be reversed. A voltmeter can be used (Fig. 7.27, III). A temporary connection is made across one pair of outside terminals, and the voltmeter is connected across the other pair. No deflection or a small deflection indicates correct polarity. (Test with voltmeter leads one way and then reverse them, as

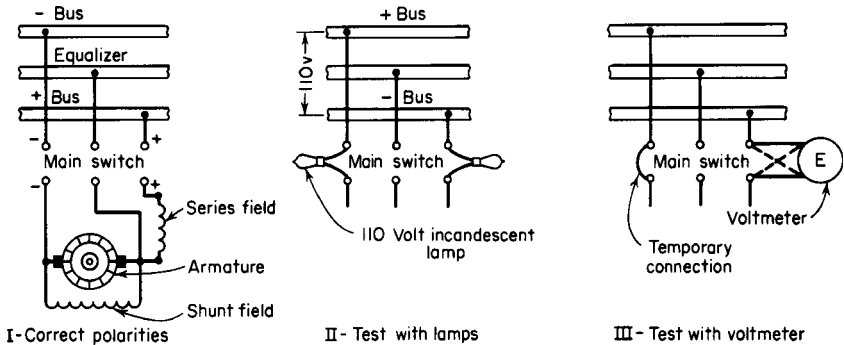


FIGURE 7.27 Tests for polarity.

indicated by the dotted lines.) A full-scale deflection indicates incorrect polarity. Use a voltmeter having a voltage range equal to twice the voltage on the busbars.

41. Third-brush generators were often used on automobiles to provide the necessary electric power for the changing of the storage battery and the operation of lights. If an ordinary generator were employed for this purpose, the voltage would vary over a wide range as the speed of the car changed. The voltage would vary nearly proportionally to the speed. This, of course, would not be satisfactory either for the proper charging of the battery or for operation of the car lights. The third-brush generator is a special shunt generator with the field winding connected between one of the main brushes and the auxiliary, or third, brush (see Fig. 7.28). As the speed of the automobile increased, thereby increasing the speed of the generator, the voltage tended to increase. This increase in voltage increased the current delivered by the generator. But the increase in current so changed the magnetic-flux distribution in the machine that the voltage between the third brush and main brush A was reduced. This reduced the field current and therefore the flux of the machine and tended to bring the main voltage between brushes A and C back to its former value. This action did not maintain an absolutely constant voltage for different speeds, but the voltage

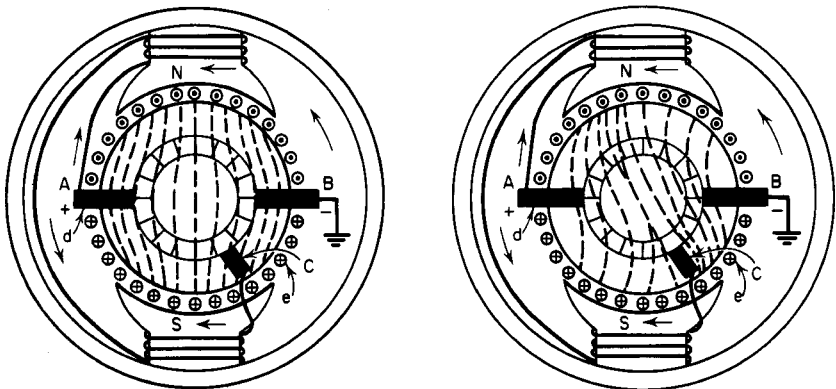


FIGURE 7.28 Third-brush generator. [Charles L. Dawes, "Direct Currents," *A Course in Electrical Engineering*]

was held within certain limits so that an excessive voltage which would overcharge the battery and shorten the life of the lamps was not developed at high speeds. It should be noted that present-day automobiles use an ac generator (alternator) with rectifier diodes to provide a 12-V dc supply.

42. Diverter-pole generators are a special type of dc generators (developed by the Electric Products Co.) that have particular advantages for the charging of batteries by the floating method. The machine is constructed with additional pole pieces (the diverter poles) located midway between the main poles in the same manner as commutating poles. Each main pole is connected by a magnetic bridge to one diverter pole. The windings of the main poles are connected in shunt with the armature winding, and the windings of the diverter poles in series with the armature winding. The construction, connections, and load-voltage characteristics for such a generator are shown in Fig. 7.29. These generators will produce an almost constant terminal voltage from no load to 110 percent of rated load. Above 110 percent of rated load, the voltage drops very rapidly.

At no load, a part of the magnetic flux resulting from the shunt coil on the main pole piece is diverted and does not pass through the armature. As the load increases, the series winding on the diverter pole rediverts this flux to the armature and provides a commutating field.

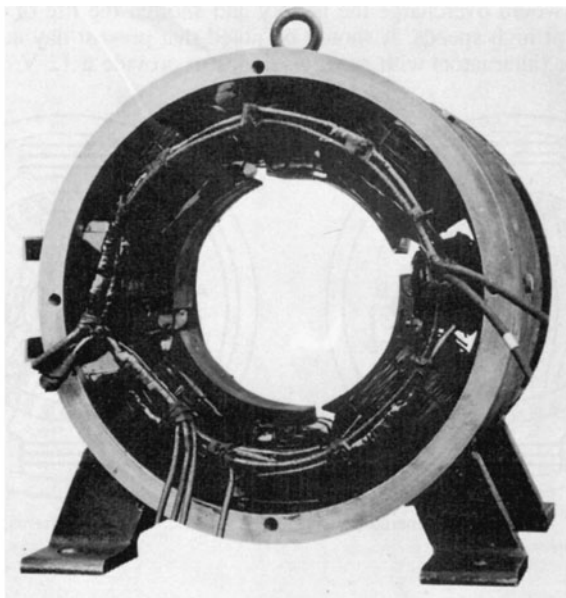
If the shunt and series windings are properly proportioned, the flux in the armature varies with the load to compensate for the IR drop in the generator and for speed changes of the driving motor.

A flat voltage curve is obtained, since the necessary magnetic changes produced by the series winding take place only in the diverter pole, the flux from the main pole remaining constant. The flux densities in the diverter pole are kept low, so that the magnetic changes which occur in this part of the magnetic circuit take place on the straight portion of the magnetization curve, thus eliminating most of the curvature from the voltage characteristic. By correct adjustment of the diverter-pole winding by means of an adjustable shunt, a very straight, flat curve is obtained with only a very slight rise on approaching zero load.


At some value of the load current the ampere-turns on the diverter pole will equal those on the main pole, and at this time the magnetic flux leaking across the ridge to the diverter pole is all rediverted across the air gap; hence there is no further leakage flux for an increased current to be rediverted to the armature. When the load is increased beyond this point, the increased ampere-turns on the diverter pole combine with the armature cross-magnetizing force to send magnetic flux in the reverse direction across the leakage bridge, which tends to demagnetize the main pole and reduce the generator voltage. Good commutation is assured, as the diverter pole provides a commutating field of the correct direction for improving commutation, and this field varies with the current output just as in a commutating-pole generator.

43. Control generators are specifically designed dc generators which are employed for the precise automatic control of dc motors. They are used to perform a wide variety of functions, such as:


1. Controlling and regulating speed, voltage, current, or power accurately over a wide range
2. Controlling tension and torque to maintain product uniformity in winding, drawing, and similar operations
3. Speeding up acceleration or deceleration to increase the production of high-inertia machines, etc.



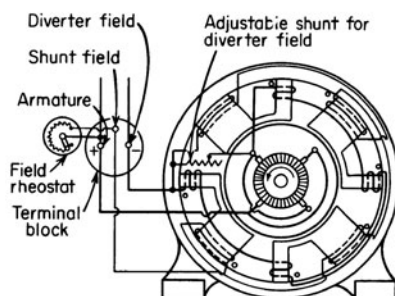I. Frame and field-winding construction.



II. Connections.

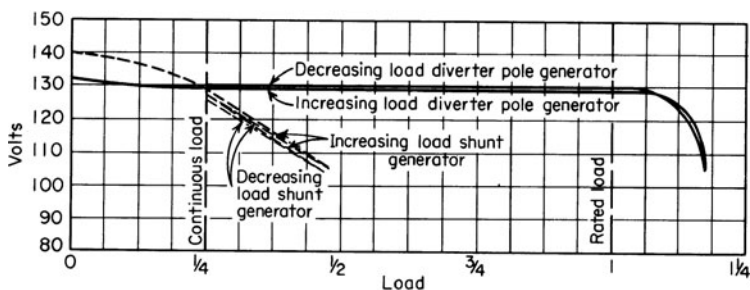

III. Load-voltage characteristics.

FIGURE 7.29 Diverter-pole generator. [Electric Products Co.]

Small motors can be supplied directly with power from the control generator. In the majority of applications, however, the capacity of the control generator is not sufficient to supply the motor directly, and the control generator energizes the field of a main generator which supplies the motor with power. A control generator must possess the characteristics of moderately fast response and low power consumption from the activating control circuit. The application of control generators for motor control is discussed in greater detail in Sec. 143.

44. The amplidyne is a control generator manufactured by the General Electric Co. Its construction, as shown in Fig. 7.30A, differs from that of the conventional dc generator in the following ways:

1. Separately excited field windings (up to four individual windings) with only a small number of ampere-turns in each winding. The field windings are called *control fields* or *control windings*.
2. Brushes (*A* and *B* in Fig. 7.30A) located in the conventional neutral position which are short-circuited on each other.
3. Pole structure split in two.
4. The addition of a second set of brushes (*C* and *D* in Fig. 7.30A) 90 electrical degrees from the conventional neutral position. These brushes are the load brushes of the machine and are connected to the output terminals of the machine.
5. A compensating field winding wound around the pole structure of the machine instead of being located in slots on the face of the poles. The compensating field winding is connected in series with the load-brush circuit.

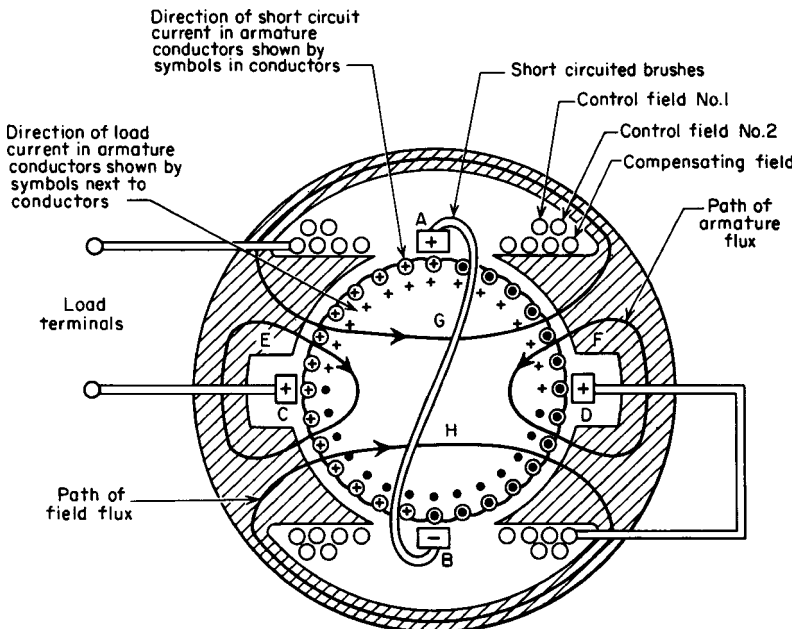


FIGURE 7.30A Cross section of an amplidyne generator.

The amplidyne functions in the following manner. When a control-field winding or windings are energized, a magnetic flux will be produced in paths *G* and *H* of Fig. 7.30A. The rotation of the armature through this flux will generate voltage in the armature conductors. However, because of the small number of ampere-turns in the control-field windings, the voltage generated from brush *B* to brush *A* will produce only a reasonable value of current in the short-circuited armature. The direction of this short-circuited armature current will be as shown by the designations inside the conductors in Fig. 7.30A. The short-circuited armature current will produce magnetic flux in the paths *E* and *F*. Voltages will be induced in the armature conductors by this flux *E* and *F*. These conductor voltages will produce no net voltage from brush *B* to brush *A*, since the voltages in the conductors from *B* to *C* and *B* to *D* will just neutralize the voltages produced in the conductors from *C* to *A* and *D* to *A*, respectively. A voltage will be produced, however, from brush *C* to brush *D*. Since brushes *C* and *D* are connected to the terminals of the machine, an output voltage will be produced whenever a control-field winding is energized. When brushes *C* and *D* are connected to an external load circuit, current will flow through the armature conductors because of the load current in the directions designated in Fig. 7.30A by the markings alongside each conductor. The actual current through each individual armature conductor will be the combination of the armature short-circuit current in paths *B* to *A* and the armature load current in paths *C* to *D*. The load current in the armature should not materially affect the flux of the machine. Therefore, a compensating field winding is connected in series with the load. This winding is so located and designed that its ampere-turns will practically neutralize the ampere-turns produced by the armature load current. The functioning of the machine is summarized as follows:

1. Excitation of a control-field winding produces flux *G* and *H*.
2. Flux *G* and *H* produces no net voltage between brushes *C* and *D* but does produce net voltage in armature paths *BCA* and *BDA*.
3. Voltage in paths *BCA* and *BDA* produces current in the armature because of the short circuit *AB*.
4. Short-circuit current in the armature produces flux *E* and *F*.
5. Flux *E* and *F* produces no net voltage between brushes *A* and *B* but does produce net voltage between brushes *C* and *D*. This is the load or output voltage of the machine.
6. Voltage *CD* produces load current in the armature and external circuit.
7. Ampere-turns (flux-producing tendency) of the load armature current are neutralized by ampere-turns of compensating field winding.

Thus the control-field current controls the short-circuit armature current, which in turn controls the output voltage. Since the control-field winding is designed with a very small watt capacity, a very small change of input power to a control-field winding will produce a large change in output power.

The symbolic representation of an amplidyne generator as used in wiring diagrams is shown in Fig. 7.30B.

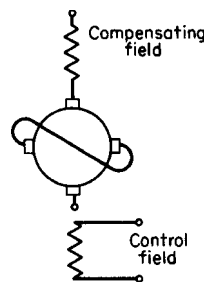


FIGURE 7.30B Basic symbol for an amplidyne.

45. Rototrol is the trade name of the control generator made by the Westinghouse Electric Corp. The Rototrol is essentially a small dc generator that is similar in electrical and mechanical construction to a standard dc generator of equal size, except that the Rototrol is provided with a number of field windings. The voltage output of the machine

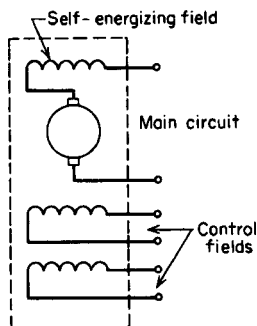


FIGURE 7.30C Basic symbol for the Rototrol.

depends entirely upon the control and interaction of these field windings. The Rototrol is provided with a self-energizing field winding and two or more control-field windings (see Fig. 7.30C.) The self-energizing field winding is generally connected in series with the Rototrol armature and furnishes the necessary excitation for the normal operation of the machine. All the other field windings are called *control-field windings*. The control-field windings are used to measure and compare standard and actual values representative of the quantity to be regulated. One of the control-field windings is called a *pattern-field winding*, and the others are called *pilot-field windings*. The pattern field is the control field, which is separately excited from an independent source and is used as a calibration, or standard of comparison. The pilot fields, the rest of the control-field windings, measure directly or indirectly the quantity to be regulated.

46. The efficiency of a dc generator increases with the load up to a certain point. Figure 7.31 indicates typical efficiency performances. Large-capacity machines have higher full-load efficiencies than small ones. Generators should be of such capacity that insofar as possible they will operate at loads in the neighborhood of their normal ratings.

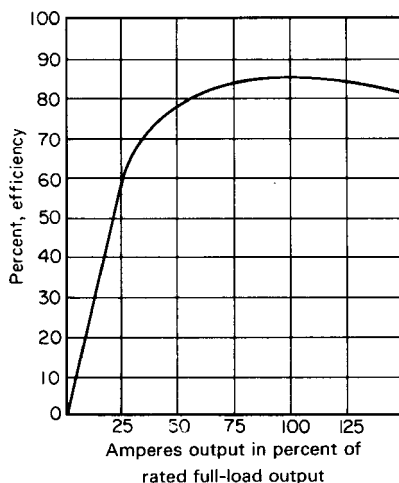


FIGURE 7.31 Efficiency graph of a 12 kW compound-wound dc generator.

47. Approximate data on standard compound-wound dc commutating-pole generators. The efficiency of a generator depends on its design and, to a certain extent, on its speed and voltage. Average values that are fairly representative of modern practice are given in the following table.

Capacity, kW	Output current, A			Efficiency, percent		
	125 V	250 V	500 V	1/2 load	3/4 load	Full load
5	40	20	10	77.0	81.0	82.5
10	80	40	20	82.0	85.0	86.0
15	120	60	30	82.5	86.5	86.5
20	160	80	40	84.0	86.6	87.5
25	200	100	50	85.0	88.0	89.0
35	280	140	70	87.0	89.0	89.5
50	400	200	100	88.0	89.6	90.5
60	480	240	120	88.5	90.5	91.0
75	600	300	150	88.5	90.5	91.0
90	720	360	180	88.5	90.5	91.0
100	800	400	200	89.0	90.5	91.0
125	1,000	500	250	90.5	91.0	91.0
150	1,200	600	300	90.5	91.3	91.5
200	1,600	800	400	91.0	91.5	92.0
300	2,400	1,200	600	91.3	91.8	92.0
400	3,200	1,600	800	91.8	92.3	92.5
500	4,000	2,000	1,000	91.8	92.2	92.5
750	6,000	3,000	1,500	92.0	92.3	92.5
1,000	8,000	4,000	2,000	92.5	93.0	93.5

48. Rating of dc generators. The standard methods of rating generators are as follows.

Continuous Rating. A generator given a continuous power output rating will carry its rated load continuously in an ambient temperature of 40°C without exceeding a specified rise in temperature. Some large generators (larger than 1 kW/rpm) designed for metal-rolling-mill service (other than reversing hot-mill service) will carry 115 percent of their rated load continuously without injury to themselves, provided service conditions are normal. The factor of 1.15 is known as a *service factor*.

Overload. A general-use industrial generator will carry 150 percent of its rated current for 1 min without injury to itself. Some large generators (larger than 1 kW/rpm) have additional overload-time capabilities.

49. Brushes: their adjustment and care (*Westinghouse Instruction Book*). Brushes on a dc generator should be on or near the no-load neutral point of the commutator. The neutral point on most standard non-commutating-pole generators is in line with the center of the pole, and the brushes should be set a little in advance of this neutral point. The brushes of non-commutating-pole generators should be given a slight forward lead in the direction of rotation of the armature. Motor brushes should be set somewhat back of the neutral point, the backward lead in this case being approximately equal to the forward lead on generators. The exact position in either case is that which gives the best commutation at normal voltage for all loads. In no case should the brushes be set far enough from the neutral point to cause dangerous sparking at no load. For commutating-pole machines it is essential that the brushes be located at the neutral point.

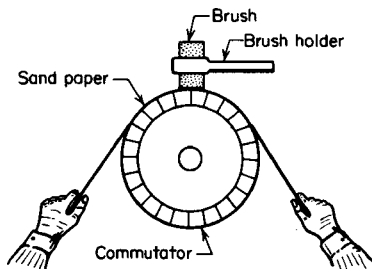


FIGURE 7.32 Sandpapering brushes.

Treat each set of brushes similarly in turn. Start with coarse and finish with fine sandpaper. With copper-plated brushes, bevel their edges slightly so that the copper will not touch the commutator.

The ends of all brushes should be fitted to the commutator so that they make good contact over their entire bearing faces. This can be most easily accomplished after the brush holders have been adjusted and the brushes inserted as follows. Lift a set of brushes sufficiently to permit a sheet of sandpaper to be inserted. Draw the sandpaper in one direction only, preferably in the direction of rotation, under the brushes (Fig. 7.32), being careful to keep the ends of the paper as close to the commutator surface as possible and thus avoid rounding the edges of the brushes.

50. Operating instructions. Do not lubricate the commutator with oil; a piece of muslin moistened with Vaseline can be used to clean and lubricate the commutator.

Emery is a conductor and should not be used in fitting brushes or cleaning the commutator; use sandpaper or sandstone (Sec. 80), and do not use it on the commutator too frequently.

Do not use greater brush tension than necessary; tension greater than 2 lb/in² (13,790 Pa) is seldom required. When replacing brushes, use the quality and size originally supplied with the machine and fit them to the commutator with sandpaper before use (Sec. 49). Do not open generator-field circuits quickly; open the switch slowly, permitting the arc to extinguish gradually, which should take about 5 s.

51. When starting, a generator may fall to excite itself (*Westinghouse Instruction Book*). This may occur even when the generator operated perfectly during the preceding run. It will generally be found that this trouble is caused by a loose connection or a break in the field circuit, by poor contact at the brushes due to a dirty commutator or perhaps to a loss of residual magnetism, or by the incorrect position of the brushes. Examine all connections, try a temporarily increased pressure on the brushes, and look for a broken or burned-out resistance coil in the rheostat. An open circuit in the field winding can sometimes be traced with the aid of a magneto bell, but this is not an infallible test, as some magnetos will not ring through a circuit of such high resistance and reactance even though it is intact. If no open circuit is found in the rheostat or in the field winding, the trouble is probably in the armature. But if nothing is wrong with the connections or the winding, it may be necessary to excite the field from another generator or some other outside source.

Calling the generator we desire to excite 1 and the other machine from which current is to be taken 2, we should follow this procedure. Open all switches and remove all brushes from generator 1, connect the positive brush holder of generator 1 with the positive brush holder of generator 2; also connect the negative holders of the machines together (it is desirable to complete the circuit through a switch having a fuse of about 5 A capacity in series). Close the switch. If the generator in trouble connects to busbars fed by other generators, the same result can be effected by insulating the brushes of the machine in trouble from their commutator and closing the main switch (see Fig. 7.33A.) If the shunt winding of generator 1 is all right, its field will show considerable magnetism. If possible, reduce the voltage of generator 2 before opening the exciting circuit;

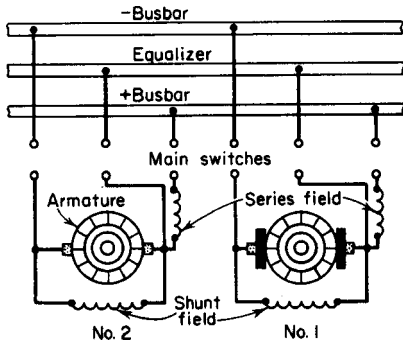


FIGURE 7.33A Exciting a generator.

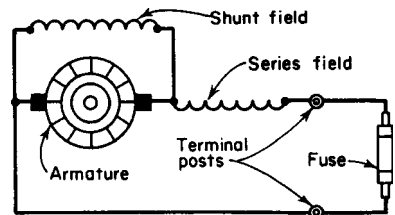


FIGURE 7.33B Another method of exciting a generator.

then break the connections. If this cannot be done, throw in all the rheostat resistance of generator 1; then open the switch very slowly, lengthening the arc which will be formed until it breaks.

A simple means of getting a compound-wound machine to pick up is to short-circuit it through a fuse having approximately the current capacity of the generator (see Fig. 7.33B). If sufficient current to melt this fuse is not generated, there is something wrong with the armature, either a short circuit or an open circuit. If, however, the fuse has blown, make one more attempt to get the machine to excite itself. If it does not pick up, something is wrong with the shunt winding or connections.

If a new machine refuses to excite and the connections seem to be all right, reverse the connections of the shunt field; i.e., connect the wire which leads from the positive brush to the negative brush and the wire which leads from the negative brush to the positive brush. If this change of connections does no good, change back and locate the fault as previously suggested.

52. The proper connections for a shunt motor are shown in Fig. 7.34. The field *B* is connected as shown, so that when switch *D* is closed, it becomes excited before the armature circuit through switch *E* is closed. Thus when the motor armature has current admitted to it through switch *E* and starting resistance box *A*, the field is already on and the full torque of the motor is obtained. The torque of a motor is equal to the product of a constant, the flux per pole, and ampere-turns on the armature, and the number of poles. Hence, if the full field is not on the motor at starting, full torque will not be obtained.

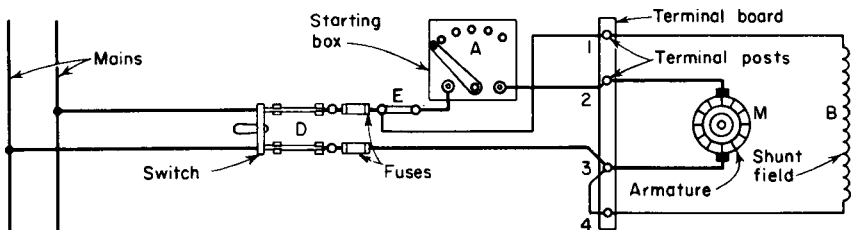


FIGURE 7.34 Control-apparatus connections for a shunt motor.

53. If a motor will not start when the starting box is operated and when current is flowing in the armature, investigate to see if field flux is present. This can be done by holding a piece of iron, such as a key, against the pole piece. If the flux exists, the key will be drawn strongly against the pole piece; if there is no flux, there will be practically no attraction.

54. Reversed field-spool connection. In some cases a manufacturer may have shipped a motor with one or more field spools reversed. Then no torque or, perhaps, very weak torque will be noticed. Under such conditions a trial with an iron key will indicate the presence of field magnetism, yet the weakness or total absence of torque will be present, and a trial of polarity should be made.

55. Running in the wrong direction. Sometimes a motor when set up and started will run in the wrong direction. The only change necessary is to reverse the field connection. Thus Fig. 7.35, I, shows the connection for one direction of rotation, and Fig. 7.35, II, that for the other. Note that in Fig. 7.35, I, the brushes are shifted backward against the direction of rotation. For the opposite rotation, a backward lead, as shown in Fig. 7.35, II, must be chosen.

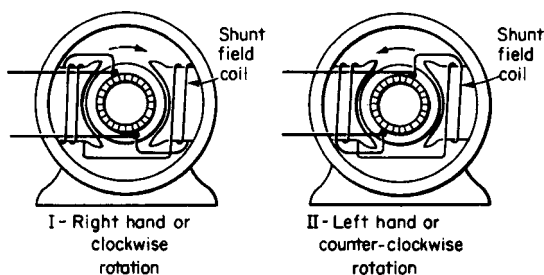


FIGURE 7.35 Connections for shunt-wound motors.

56. Testing polarity of field. This can be done in two ways. The first way is to use a compass, bringing it near the various poles and noting the direction of the deflection of the needle. Since in all motors the poles alternate in magnetic polarity, in one pole the magnetism coming out and in the next going in, a certain end of a compass needle will point toward one pole and away from the next when conditions are normal. If, however, two adjacent poles show similar magnetism, the trouble is located and the offending spool should be reversed. This should be done end for end, not by turning the axis. The latter operation does not change the direction of magnetism, while the former does.

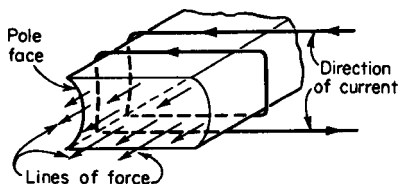


FIGURE 7.36 Direction of magnetism and current about a pole.

Direction of magnetism is determined by the following rule. When looking at the face of an electromagnet (such as the field spool of a motor), a pole will be north if the current is flowing around it in a direction opposite to the motion of the hands of a watch (Fig. 7.36) and south if in the same direction as the motion of the hands of a watch (see also the rules outlined in Div. 1).

Another method of determining whether the magnetism of the poles is correct is to use two ordinary nails, their lengths depending upon the distance between pole tips. The point of one nail should touch one pole tip, the point of the other nail should touch the other pole tip, and the heads of nails should touch each other.

When the current flows around the field spools, the polarity between any poles is properly related if the nails placed as suggested stick together by the magnetism. If there is no tendency to stick, the polarity of the two poles is alike and therefore wrong.

57. Open field circuit. If, on closing the field switch, no magnetism is obtained by trial with an iron key as suggested above, there is an open circuit within one of the spools or in the wires leading to these spools. The open circuit can be located by shunting out one spool at a time and allowing current to flow through the rest until the defective spool is discovered. On a two-pole motor try first one spool and then the other. For a very short time, say, 10 min, double voltage can be carried on a spool. On a motor having four or more poles, three spools can always be left in circuit during the open-circuit investigations.

58. A method of locating an open-circuit field coil is illustrated in Fig. 7.37A. Connect one terminal of the voltmeter to one side of the field-coil circuit, and with the bared end of a wire or a contactor successively touch the junctions of the field-coil leads around the frame. When the open coil is bridged, the voltmeter will show a full deflection. Another way is to connect the field-coil circuit terminals to a source of voltage. Connect the voltmeter successively across each coil as indicated by the dotted lines in Fig. 7.37A. There will be no deflection on the voltmeter until the open coil is bridged, when the full voltage of the circuit will be indicated.

59. A grounded field coil can be located (Fig. 7.37B) by connecting a source of voltage to the machine terminals, having first raised the brushes from the commutator, if it is a dc machine. Connect one terminal of the voltmeter to the frame and the other to a lead with a bared end. Tap exposed parts of the field circuit with the bared end of the lead. The voltmeter deflection will be least near the grounded coil.

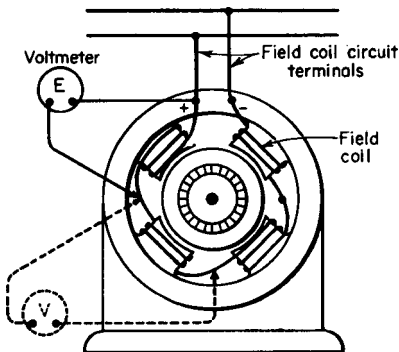


FIGURE 7.37A Locating field-coil troubles.

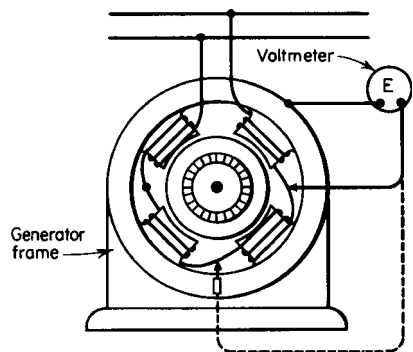


FIGURE 7.37B Locating a grounded coil.

60. Heating of field circuits (*Westinghouse Instruction Book*). Field coils may heat from any of the following causes: (1) too low speed, (2) too high voltage, (3) too great forward or backward lead of brushes, (4) partial short circuit of one coil, and (5) overload.

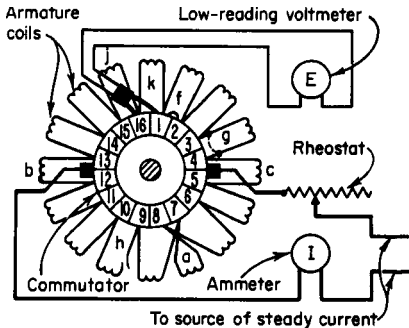


FIGURE 7.38 Method of testing an armature.

an insulating block *j*. In use, the current is adjusted to produce a convenient deflection of the voltmeter when each of the points rests on an adjacent bar. The points are moved around the commutator and bridged across the insulation between every two bars. If the voltmeter deflection is the same for every pair of bars, there is no trouble in the armature.

62. Sparking due to an open armature circuit. A cause of a sparking commutator is an open circuit in the winding, either in the armature body or, more often, at the point where the lead from the armature winding is soldered to the commutator. In the latter case resoldering is a ready remedy. If, however, the point of open circuit cannot be located, the bars can be bridged over on the commutator itself by fastening with solder or otherwise a strip of copper around the segments which indicate the break.

The indication of this trouble is very apparent, for if an open circuit exists, the long, heavy spark which accompanies it soon eats away the mica between the two segments on each side of the break. This shows positively where to bridge over. An open circuit also shows itself, when the machine is running, by the viciousness of the spark. It is unlike any other kind of commutator sparking, being heavy, long, and destructive in its action.

63. A poor connection between a bar and coil leads will cause a considerable deflection of the voltmeter (Fig. 7.38) when one of the points rests on the bar in trouble and the other on either of the adjacent bars.

64. An open-circuited coil such as *h*, Fig. 7.38, will prevent the flow of current through its half of the armature. There will be no deflection on that half of the armature until the "open" is bridged. Then the voltage of the testing circuit will be indicated.

65. Tests for open armature circuits. Another method (Fig. 7.39A) is to apply to the commutator, at two opposite points, a low voltage, say from a battery or a dynamo with

61. Direct-current armatures can be tested for common troubles with the arrangement of Fig. 7.38. Terminals *b* and *c* are clamped to the commutator at points displaced 180 electrical degrees from each other and connected with a source of steady current through an adjustable resistance and an ammeter. For a two-pole machine the terminals *b* and *c* will be located at opposite sides of the commutator. The terminals of a low-reading voltmeter (a galvanometer can often be used) are connected to two bare metal points, which are separated, by a distance equal to the width of one commutator segment plus the width of one mica strip, by

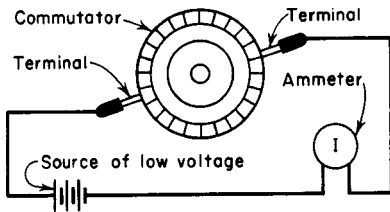


FIGURE 7.39A Testing for an armature open circuit with an ammeter.

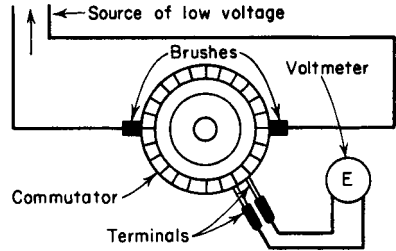


FIGURE 7.39B Testing for an armature open circuit with a voltmeter.

its voltage kept low. Place an ammeter in circuit and clean the surface of the commutator so that it is bright and smooth.

The terminal ends leading the current into and out of the commutator should be small, so that each rests only on a single segment (Fig. 7.39A). Note the ammeter reading and rotate the armature slowly. At the point where the open circuit exists, the ammeter needle will go to zero if the leads to the commutator bar have become entirely open-circuited. This occurs because the segment is attached to the winding through the commutator leads.

If the armature does not show the above symptoms, try connecting a low-reading voltmeter or a galvanometer to two adjacent segments while the current is passing through the armature as described from some external low-voltage source (Fig. 7.39B). Note the deflection. Pass from segment to segment in this manner, recording the drop between the successive pairs of bars. This drop, if the current is held constant from the external source, should be the same between each pair of adjacent segments. If any pair shows a higher drop than the others near it, a higher-resistance connection exists there, perhaps causing sparking and biting of commutator insulation, to a less degree, to be sure, than with an actual open circuit but perhaps enough to cause the trouble requiring the investigation.

66. The test for armature short circuits can be made as indicated in Fig. 7.39B. Called a *bar-to-bar test*, it is most valuable in locating faults in armatures. This is the method to use if a short circuit from one segment to another is suspected. When the section in which the short circuit or partial short circuit exists comes under the contacts, a low or perhaps no deflection is shown on the galvanometer or voltmeter, thus locating the defective place. Such short circuits, if they occur when running, owing to defective insulation, burn out the coil short-circuited. When the coil passes through the active field in front of the pole piece, an immense current is induced in it, causing destruction of the insulation. When this occurs, the coil should be open-circuited and bridged over, as suggested above, until a new coil can be inserted.

67. If two bars or a coil is short-circuited as at *f* or *g*, Fig. 7.38, respectively, there will be little or no voltmeter deflection when the two bars connecting to the “short circuit” are bridged by the points.

68. A grounded armature coil can be detected in the same manner as indicated in Fig. 7.39A for a field coil. Impress a low voltage on the terminals clamped to the commutator. Ground one side of the voltmeter on the shaft or spider, and touch a lead connected to the other side to all the bars in succession. The minimum deflection will obtain when the bars connecting to the grounded coil are touched.

69. Crossed coil leads as at *a*, Fig. 7.38, are indicated by a twice-normal deflection when the points bridge the bars 6 and 7 to which the crossed coils should rightly connect. The crossing of the coil leads connects two coils in series between the adjacent commutator segments and hence causes a twice-normal drop.

70. Reversed armature coil. Instead of the armature winding progressing uniformly around from bar to bar of the commutator, at some point a coil may be connected backward. Such a reversed coil often causes bad sparking. One way to locate such a trouble is to pass a current through the armature at opposite points on the commutator. Then with a compass explore around the armature the direction of magnetism from slot to slot. If a coil is reversed when the compass comes before it, the needle will reverse, giving a very definite indication of the improperly connected coil.

71. Heating of armature (*Westinghouse Instruction Book*). Excessive heating of the armature may develop from any of the following causes: (1) too great a load, (2) a partial short circuit of two coils heating the two particular coils affected, and (3) short circuits or grounds on armature or commutator.

72. Hot armature coils. Sometimes when a new machine is started, local heating occurs in the armature, following the exact shape of the armature coil. This may occur because, in receiving the final turning off, the commutator bars were bridged with copper from one segment to another by the action of the turning tool. An examination of the commutator surface will reveal this bridging. When it is removed, satisfactory operation will ensue if the trouble has not gone too far and seriously injured the insulation of the coil.

73. Care of commutators. Commutators should be kept smooth by the occasional use of No. 00 sandpaper. A small quantity of Vaseline should be used as a lubricant. The lubricant should be applied to high-voltage generators with a piece of cloth attached to the end of a dry stick. If the commutator gets out of true, it should be turned down (refer to Sec. 80). Inspect the commutator surface carefully to see that the copper has not been burned over from segment to segment in the mica, and remove with a scraper any particles of copper which may be embedded in the mica. Keep oil away from the mica end rings of the commutator, as oily mica will soon burn out and ground the machine.

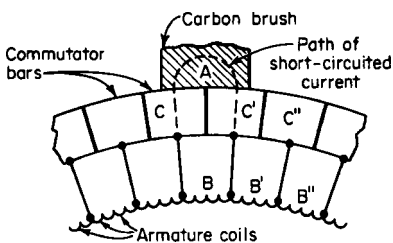


FIGURE 7.40 Armature coil short-circuited when commutating.

74. Process of commutation and correction of glowing and pitting. The path of the current is as shown in Fig. 7.40. *A* is the carbon brush; *C*, *C'*, *C''* are the commutator segments; *B*, *B'*, *B''* are the windings of the armature. At the position shown, coil *B* is short-circuited by the carbon, the current passing into the face of the brush and out again as shown by the dotted line. This local current may be many times larger than the normal flow of current and is the one that causes pitting.

With perfect commutation and no sparking or glowing, an emf should be created in the short-circuited coil under the brush by means of the flux from the pole tip away from which the armature is revolving. This emf should be just large enough to reverse the current within the short-circuited coil and to render it equal to the current in the winding proper. Since on one side of the brush the current is in one direction and on the other side in the other direction, the act of commutation beneath the brush is to reverse this current and bring it up to the correct amount in the opposite direction.

With copper brushes this reversal of current must be very accurately effected. With carbon brushes there is a much smaller tendency to spark; hence they will stand a certain inexactness in commutation adjustment. Experiments indicate that the carbon can resist as much as 3 V creating current in the wrong direction and still not spark or glow. This is the property that has caused the use of carbon brushes instead of copper on most apparatus. When, however, this potential, induced in the wrong direction, rises above 3 V during the passage of the armature coil underneath the brush, trouble from sparking and glowing occurs.

This is the reason that the brushes in a motor are pulled backward as far as possible at no load, so that the coil short-circuited by the brush can enter the fringe of flux from the pole tip, thus creating the proper reversal of current while the coil is passing under the brush. Since adjacent poles are opposite in polarity, only one pole can provide the proper flux direction for this reversal. In a motor it is always the pole behind the brush, and thus the brush requires a backward lead. In a generator it is the pole ahead of the brush in the direction of rotation. Hence generators require a forward lead.

If a motor gives trouble from glowing and pitting, the cause is probably this induced current, and the remedy is, first, to see that the lead of the brushes brings them in the most satisfactory position. If no change of lead or brush position which will eliminate the trouble can be found, the width of the brush must be changed. The wider the brush, the longer the coil suffers a short circuit, as described. Conversely, the narrower the brush, the sooner the current must be reversed. There is, therefore, a width of brush which best satisfies both conditions.

Usually, however, when glowing occurs, the cause is too wide a brush, and often serious trouble from this cause can be entirely eliminated by varying the width of the brush, perhaps only by $\frac{1}{8}$ in (3.175 mm).

75. Sparking due to a rough commutator. First, the commutator surface may not be perfectly smooth after receiving its last turnoff. The work may have been poorly done by the manufacturer, with the result that the commutator surface, instead of being left smooth, is somewhat rough. The result, especially with high-speed commutators, is that the brush does not make first-class contact with the commutator surface. It may chatter with attending noise, and thus the operation of many motors (especially those of high voltage) will be attended by sparking. As a result, the commutator surface, instead of becoming bright and smooth with time, becomes rough and dull or raw. Under these conditions the brushes do not make good contact, and the heat generated even under proper commutator conditions, owing to the resistance of brush contact, is multiplied several times, with a consequent increase of the commutator's temperature. In addition, the friction of brush contact (which should give a coefficient of 0.2) is, with a rough commutator, much higher than it should be. This high friction tends to increase the temperature.

76. Heating of a commutator (*Westinghouse Instruction Book*) may develop from any of the following causes: (1) overload, (2) sparking at the brushes, (3) too high brush pressure, and (4) lack of lubrication on the commutator.

77. Hot commutator. All this trouble (Sec. 75) is cumulative. The result is that the temperature will finally rise to a point at which the solder in the commutator will melt, perhaps short-circuiting or open-circuiting the winding. A commutator will stand very slight sparking, but if sparking is noticeable and if it continues for long periods of time, trouble is apt to result. If the load is usually very light on a motor and full load or overload is infrequent, a smoothing of the commutator occurs during the light-load period, averting trouble. This is the reason that certain railway motors, which sometimes show sparking under their normal hour-rating load, give satisfaction in commutation. The coasting of the car smooths the imperceptible damage done by the sparking during the heavy load.

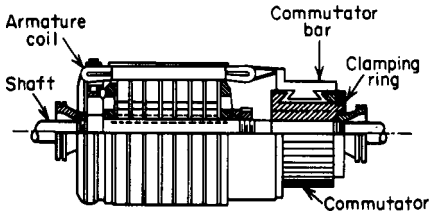


FIGURE 7.41 Section of a dc motor armature.

lated from them and should hold each segment individually from any movement relative to another.

Since the clamp must touch and hold down all segments, a failure to do so in any case results in a loose bar, which moves relatively to the next bar and causes roughness and thus sparking, with all its commutators due to poor turning or to poor design is shown uniformly over the surface of the commutator on which brushes rest. A roughness due to a high or loose bar is shown by local trouble near the bad bar and its corresponding bars around the commutator. The jump of the brush occurs at the high bar and causes the sparking (see also Secs. 79 and 81).

79. Blackening of a commutator. Sparking due to a loose or high bar causes a local blackening instead of a uniform blackening, which occurs in the case of poor design or a poor commutator surface resulting from poor turning. Also, if the speed of the commutator is low enough, a spark will occur when the bad segment passes the brush. At ordinary speeds or in cases of several loose bars, the appearance of the sparking will not differ from that due to poor design or poor turning. In such a case the commutator surface must be examined to identify the cause.

It must be remembered that the slightest movement of a bar, especially with higher-voltage and high-commutator-speed machines, may cause the trouble. A splendidly designed motor may operate very poorly because of a commutator fault.

80. Grinding commutator (Westinghouse Electric Corp.). When a commutator must be resurfaced, the resurfacing should always be done with a grinding rig, whether the surface is to be ground concentric or to remove high bars or flat spots. A sandstone should never be used on a commutator to obtain a true surface because it simply follows the irregularities in the surface and in some cases may even exaggerate them. The grinding rig consists of an abrasive stone set up similarly to a lathe tool in a rigging or carriage which may be moved back and forth in an axial direction and may be equipped with a radial feed. It should be supported very rigidly so that the stone is subjected to a very minimum of vibration.

78. Loose commutator segments.

A further and more serious cause of sparking and commutator trouble is the fact that the commutator may not be "settled" when shipped by the manufacturer. A commutator is made of many parts (Fig. 7.41) insulated one from another and bound together by mechanical clamping arrangements. The segments themselves are held on each end by a clamp ring, which must be insulated

In large dc equipment, such a rigging can be mounted on a brush arm by removing the brush holders on that arm. In some cases, to obtain maximum rigidity it may even be desirable to brace the brush-holder bracket arm while grinding. It is also possible by removing the brush rigging to hold the grinder on parallels supported from the bedplate.

Grinding should be done when the machine is running in its own bearings and at rated speed in the case of a constant-speed machine. If grinding is done at a low speed, any slight unbalance will cause the commutator to run eccentric at rated speed.

Great care must be exercised to prevent copper and stone dust from entering the windings. The grinding rig should be equipped with a vacuum-cleaner arrangement, fitted over the stone to catch all dust. If a suction system is not available, the necks of the commutator and the front end windings should be protected by pasting heavy paper over them or by covering them with a cloth hood properly applied.

A simple, effective, and inexpensive device for collecting dust during the grinding of commutators and collectors is illustrated in Fig. 7.42. It can be made from three small pieces of equipment: (1) a 4-ft (1.2-m) length of 1½-in rubber hose, (2) a vacuum bag from a household vacuum cleaner, and (3) a small ejector which can either be purchased or be improvised from a 1½-in Y pipe fitting.

At one end of the rubber hose cut away, in the form of a long arc, the bottom and about half of the sidewalls to fit the radius of the commutator or ring to be ground. Cut a hole in the hose in the middle of the remaining arc portion to fit the grinding stone. Fit the hose to the stone and commutator or ring so as to form an enclosure, or shoe, around the grinding surface to collect the dust. Attach the other end of the hose to the intake of the ejector. Attach the vacuum bag to the exhaust of the ejector. Use compressed air from a shop air line to produce the suction.

The stones used in grinding commutators may be classed as rough, medium, and fine. The rough stone has a grit of about 80 mesh and is used only when a very large amount of copper is to be removed. It should be employed very seldom, because if sufficient copper is to be removed to warrant its use, it would be better to take a cut off the surface in a lathe. The medium stone has a grit of about 120 mesh and is used for the bulk of the grinding work, the fine stone being used only to obtain a fine finish. The fine stone should have a grit of about 200 mesh.

After grinding, all commutator slots should be cleaned out thoroughly and the edges of the bars beveled. Beveling accomplishes two things. It removes the burrs caused by the stone's dragging copper over the slots and eliminates the sharp edge at the entering side of the bar under a brush. The bevel on the bars is achieved with a special beveling tool; it should be about 1/32 in (0.8 mm) chamfer at 45° for medium thickness of bars. For thinner or wider bars, the beveling can be changed accordingly.

Practically all up-to-date machines have undercut mica. This undercutting should be kept 1/16 in (1.6 mm) deep \pm 1/64 in (0.4 mm). If it is apparent that enough copper is going to be removed by grinding so that the undercutting will be shallow, the commutator should be reundercut before grinding. This is done by means of a small circular high-speed saw about 0.003 in (0.76 mm) thicker than the nominal thickness of the mica. In undercutting, great care must be taken to see that a thin sliver of mica is not left against one side of the slot. Sometimes such a sliver must be removed by scraping by hand.

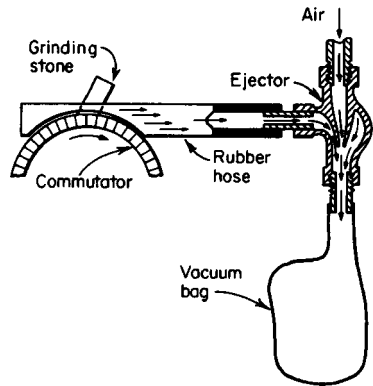


FIGURE 7.42 Method of commutator grinding, showing dust collector. [Westinghouse Electric Corp.]

After grinding, undercutting the mica, and beveling the edges of the bars, the commutator surface should be polished while operating at rated speed. Aloxite or sandpaper (never emery cloth or paper) should first be used, as it will remove the burrs due to beveling. After a very fine grade of sandpaper is used, a high polish can be obtained by burnishing the commutator with dense felt or canvas. The surface can be even further improved if a small amount of light oil is applied to the canvas during the polishing.

81. Loose commutator clamp rings. First, draw the clamps of the commutator down firmly so that when the commutator is at normal temperature, the clamping rings cannot be screwed down farther without excessive effort. This is necessary so that all the bars may have direct pressure from the clamp, rendering impossible any movement up or down. Second, smooth the surface of the commutator.

To get the clamps down firmly, run the motor. If roughness appears, shut the motor down at a convenient time, and while it is hot, tighten the clamping rings. If the tightening bolts can be screwed up somewhat, the machine should again be put in service for at least 4 h. At the end of this time, shut it down again and make another trial on the tightening bolts. If the tightening bolts cannot be screwed farther, the commutator should be surfaced, either by turning with a tool or by grinding. If the clamps are down tight and the surface of the commutator has been properly smoothed, there will be no further trouble.

82. Slotting commutators. There seems to be a prevalent idea that slotting should cure all commutator troubles irrespective of their causes. This is not true, but slotting is a cure for certain specific troubles. If the peripheral speed of the commutator is so slow that the dirt which may collect in the slots between commutator bars will not be thrown out by centrifugal force, slotting may aggravate rather than correct commutation difficulties (see Sec. 86).

83. The principal reason for slotting commutator is to relieve them of high mica, i.e., mica that projects above the surface. High mica is generally due to one of two causes: either the mica is too hard and does not wear down at an equal rate with the copper, or the commutator does not hold the mica securely between the segments, allowing it to work out by the combined action of centrifugal force and the heating and cooling of the commutator.

It is event that a commutator with a surface made irregular by projecting mica rotating at high speed under a brush must impart to the brush a vibratory action and thus impair the close contact that should exist between brush and commutator. The result is that sparking takes place more or less violently, depending on the condition of the commutator surface and the rate of speed.

This condition generally manifests itself after the machine has been running for some time and often will account for the development of sparking which did not occur at the time of installation. Often a case of this kind is aggravated by increasing the brush tension, causing a still faster rate of wear of copper over mica, with attendant increased heating of the commutator.

84. What is accomplished by slotting. A harder brush can at times be used, with the idea of grinding off the mica and bringing it down to the commutator surface. Instead of the trouble being cured, the commutator will, in most cases, assume the raw appearance of being freshly sandpapered instead of the glossy surface it should have, and both brush and commutator will wear rapidly.

This condition can be restored to normal and the commutator kept to a true surface by slotting, after which, with proper care and the use of proper brushes, commutator troubles will generally cease, provided the electrical design of the machine is not at fault. Even then there are cases that may be benefited to a certain extent by slotting, by reason of the good brush contact obtained. Most cases that show improvement are ones in which the trouble is not inherent in the design of the machine but is due to mechanical causes.

With a slotted commutator it is possible to use a brush of fine grain and soft texture because there is not the same tendency to wear away the brush as with an unslotted commutator. The commutator will then take on the much-desired polish that is generally not possible with the harder brush. The lift of both brush and commutator will be increased, and friction and consequent heating will be reduced. These advantages will effect a saving that will more than offset the cost of slotting.

85. Various methods of slotting. A variety of slotting devices are on the market (Figs. 7.43 to 7.47). Some operate with the armature swung between the centers of a lathe; others use a special tool in a shaper, with the armature secured to its bed. Still others are operated by hand, with the armature resting on blocks. In all cases the full width of the mica should be removed and the resulting slot carefully cleaned of burrs and rough edges. The slotting need not be carried deeply in the commutator: $\frac{1}{16}$ (1.6 mm) is generally considered sufficient (see also Sec. 80).

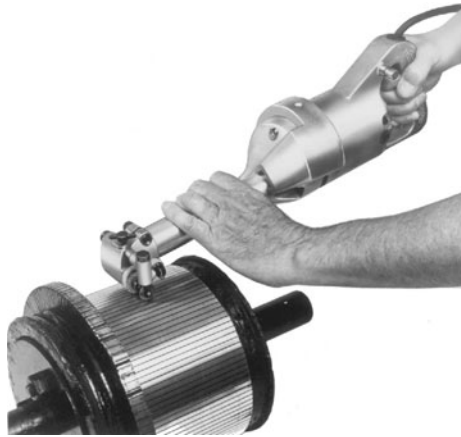


FIGURE 7.43 Hand-type mica miller. [The Martindale Electric Co.]



FIGURE 7.44 Suspension-type flexible-shaft undercutter. [The Martindale Electric Co.]

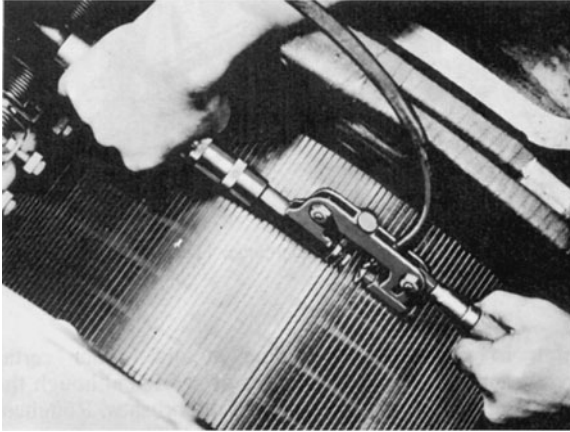


FIGURE 7.45 Flexible-shaft undercutter in use on a large generator. [The Martindale Electric Co.]

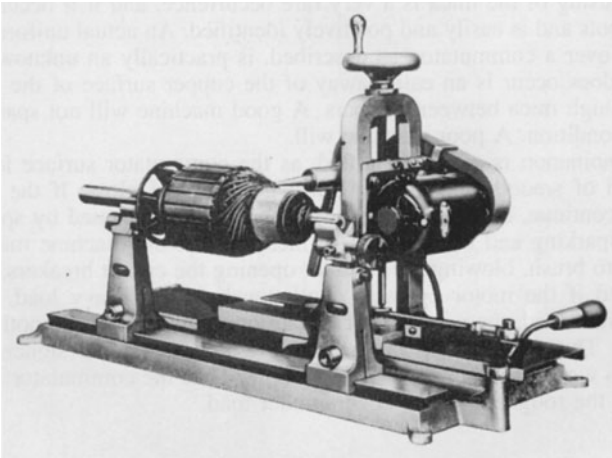


FIGURE 7.46 Bench-type undercutter for a horizontal commutator. [The Martindale Electric Co.]

86. A slotted commutator should have proper and frequent care, as there is a chance of small particles of copper being dragged across from bar to bar and for dirt, oil, and carbon dust to accumulate in the slots and short-circuit the commutator.

87. High mica in commutator. Some motors, under certain conditions, roughen their commutators after a short term of service, although there seem to be no excessive sparking under or at the edges of the brushes. Roughening may occur even though the commutator has been well settled. The commutator acts as if the mica used between bars to insulate the various segments from each other had protruded upward, causing roughness and excessive sparking.

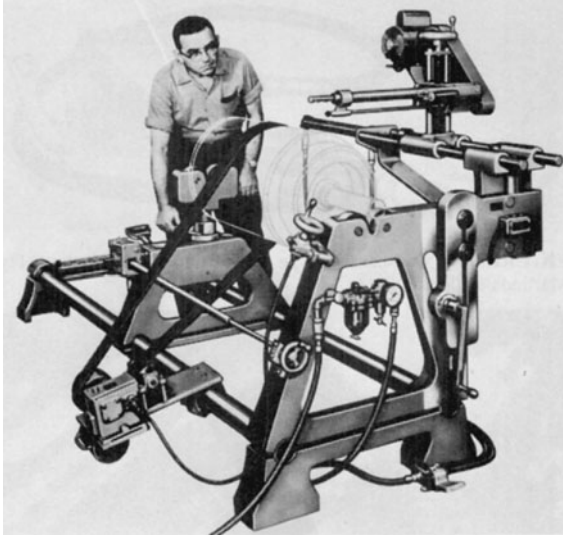


FIGURE 7.47 Shop-type undercutter. [The Martindale Electric Co.]

Actual raising of the mica is a very rare occurrence, and if it occurs, it does so at certain spot and is easily and positively identified. An actual uniform protruding of mica all over a commutator, as described, is practically an unknown phenomenon. What does occur is an eating away of the copper surface of the commutator, leaving the high mica between the bars. A good machine will not spark enough to cause this condition. A poor machine will.

The phenomenon is easily identified, as the commutator surface looks raw all over instead of smooth and bright with a good brown gloss. If the condition is allowed to continue, a general roughness appears, accompanied by sparking, until finally the sparking and heating will so increase that the machine may flash over from brush to brush, blowing the fuses or opening the circuit breakers. The trouble is aggravated if the motor operates continuously under heavy load. If there are periods of light load, the commutator has an opportunity to be smoothed down by the brushes. This condition is appreciated by railway-motor designers. A railway motor coasts a considerable portion of the time. Thus the commutator is smoothed, neutralizing the roughening that occurs under load.

88. Remedying a roughened high-mica commutator. (1) Use the commutator on work for which the load is somewhat intermittent, (2) replace it altogether, or (3) slot the commutator. Then, as there no longer are two different materials to wear down or to be worn away by sparking, an unequal surface will not result. The mica need to be cut down only $\frac{1}{16}$ in (1.6 mm), and a narrow, sharp chisel will do the work satisfactorily. No trouble will result from short-circuiting in this case, since centrifugal force keeps the slots clean. Some manufacturers ship machines with slotted commutators.

89. Brush troubles. When there is an excessive drop in speed from no load to full load, the position of the brushes on the commutator (Sec. 49) should first be investigated. No brush position that causes sparking should be chosen. The following sections outline brush troubles and their remedies.

90. Sparking of the brushes may be due to one of the following causes (*Westinghouse Instruction Book*): (1) The machine may be overloaded. (2) The brushes may not be set exactly at the point of commutation—a position where there is no perceptible sparking can always be found, and at this point the brushes should be set and secured. (3) The brushes may be wedged in the holders. (4) The brushes may not be fitted to the circumference of the commutator. (5) The brushes may not bear on the commutator with sufficient pressure. (6) The brushes may be burned on the ends. (7) The commutator may be rough; if so, it should be smoothed off. (8) A commutator bar may be loose or may project above the others. (9) The commutator may be dirty, oily, or worn out. (10) The carbon in the brushes may be unsuitable. (11) The brushes may not be spaced equally around the periphery of the commutator. (12) Some brushes may have extra pressure and may be taking more than their share of the current. (13) Mica may be high. (14) The brushes may be vibrating. (15) Brush toes may not be in line.

These are the more common causes, but sparking may be due to an open circuit or a loose connection in the armature. This trouble is indicated by a bright spark which appears to pass completely around the commutator and can be recognized by the scarring of the commutator at the point of open circuit. If a lead from the armature winding to the commutator becomes loose or is broken, it will draw a bright spark as the break passes the brush position. This trouble can be readily located, as the insulation on each side of the disconnected bar will be more or less pitted. The commutator should run smoothly and true, with a dark, glossy surface.

91. Glowing and pitting of the carbon brushes. This condition may be due to either of two causes; poor design or a wrong position of the brushes on the commutator. The error of design may be only in the choice of width of carbon brush used. The pitting is due to glowing. If the glowing is at the edge of the carbon, it is plainly visible and easily located. It may, however, occur underneath the carbon, so that only with difficulty can it be seen. Such glowing pits the carbon face by heat disintegration. With some machines three-fourths of the brush face may be eaten away, and the pits may be $\frac{1}{4}$ to $\frac{1}{2}$ in (6.35 to 12.7 mm) deep when discovered. A usual (incorrect) decision is that the current per square inch of contact is too great, the calculation being made by dividing the *line amperes* by the *square-inch cross section of either the positive or the negative brushes*. If this calculation gives a value under 45 or 50, it is certain that the cause of the trouble has not been judged correctly.

The real cause of the glowing is, to be sure, excessive current through the carbon, but this is not the line current if the calculation, as stated, shows a brush-face density below 50 A/in² (7.75 A/cm²). It is a local current caused by the short circuiting of two or more segments of the commutator when the brush rests upon them. The usual overlap of a carbon brush is about two segments, and while these two segments are under the brush, the armature coils connected to them are short-circuited. If the design of the machine is such that the coil so short-circuited encloses stray flux from the pole tip, this flux will create in the short-circuited coil a current perhaps many times larger than the brush is capable of carrying, with the result that glowing and pitting occur.

92. Chattering of brushes is sometimes experienced on dc machines. Under certain conditions it may become so prominent as not only to be of annoyance but also actually to break the carbons. An examination of the commutator will reveal no roughness, the surface being, perhaps, perfectly smooth and bright. This trouble occurs principally with the type of brush holder which has a box guide for the carbon. The spring which forces the brush into contact rests on the carbon, which has fairly free play in the box guide. Chattering usually occurs with high-speed commutators, running at 4000 to 5000 ft/min (20.3 to 25.4 m/s) peripheral speed.

Such brush holders are necessary on commutators which, like those on engine-driven machines, may run out of true owing to the shaft play in the bearings caused by the reciprocating motion of the engine. The clamped type of holder is usually free from bad chattering but rocks on a commutator that runs out, causing poor contact and perhaps sparking.

Lubricating the commutator causes the chattering to disappear immediately, but there is no commutator compound which gives a lubricating effect lasting over possibly $\frac{1}{2}$ h. Thus, it is not practical to lubricate often enough to prevent the chattering. There will be no chattering if the angle of the brush with the radial line, passing through the center of the carbon and the center of the commutator, is less than 10° and if the carbon trails instead of leads on the commutator. Figure 7.48 shows the correct setting which will stop all serious chattering, together with two incorrect settings which may give trouble.

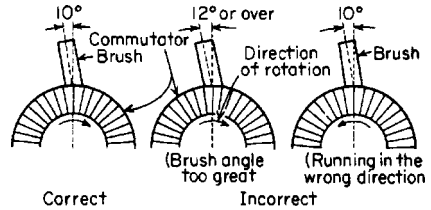


FIGURE 7.48 Methods of setting brushes.

93. Low speed. The fault may be in the winding of the armature or field, in which case a remedy is difficult. Considerable range of speed can be obtained by the choice of brush position on the commutator. For many motors a speed variation of 15 percent can be obtained, without sparking by brush shift. Therefore, if the discrepancy of speed is within this amount, the brushes should be moved to counteract it. A backward shift of the brush gives increased speed, and a forward shift decreased speed. At any brush position, however, there must be practically no sparking. A first-class motor should run at full load within 4 percent (up or down) of the nameplate speed if the voltage is as specified on the nameplate. The speed at no load should not be more than 5 percent higher than this; and the speed at full load, hot, should not be over 5 percent greater than the speed at full load, cold.

94. Bearing troubles of dc motors and generators. See Sec. 236.

95. Sporadic motor sparking has been known to be due to irregular short circuits on the line which were caused by wind blowing the line wires together.

PRINCIPLES, CHARACTERISTICS, AND MANAGEMENT OF AC GENERATORS (ALTERNATORS)

96. Types of ac generators. The different types of ac generators (alternators), classified according to the method of producing the voltage, are listed below:

1. Synchronous alternators
 - a. Revolving field
 - b. Revolving armature
2. Induction alternators
 - a. Stator winding
 - b. Rotor winding
3. Inductor alternators

97. Synchronous ac generators are discussed in an elementary way in Secs. 73, 115, 144, 145, 148, and 152 of Div. 1. These generators may be constructed with either the armature or the field structure as the revolving member. Small generators up to 50 kW are commonly made with the revolving-armature construction. The required magnetic field is produced by dc electromagnets, which are excited as a small dc generator or exciter. The fundamental construction and connections for a revolving-field alternator are shown in Fig. 7.49.

98. The emf in a synchronous alternator is generated as suggested in Fig. 7.50. As each field coil, *D* for instance, sweeps past the armature coils, the lines of flux from the field coil cut the armature coils. As coil *D* passes from *A* to *C*, an alternating emf represented by the curve *ABC* will be generated in the armature. It should be understood that in commercial alternators the armature coils are set in slots and arranged differently from those shown in Fig. 7.50, which only illustrate a principle.

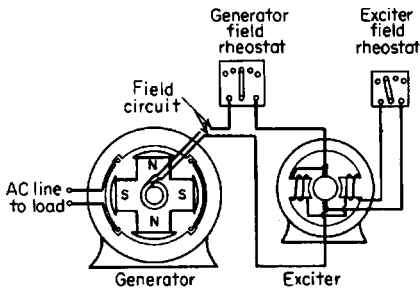


FIGURE 7.49 Elementary diagram of an ac generator and exciter.

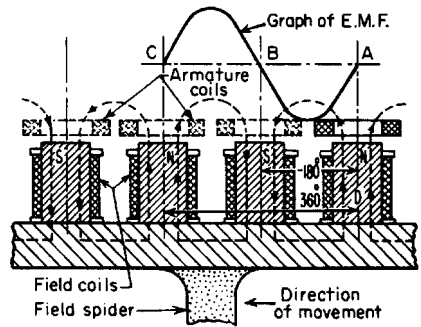


FIGURE 7.50 Armature and field structure developed.

The value of the voltage generated by a given synchronous alternator depends upon the speed and direct field current. Since the speed must be held constant to maintain the proper frequency, the voltage must be controlled by adjustment of the field current.

99. The speed and number of poles of an alternator determine the frequency which it generates.

$$f = \frac{p \times \text{rpm}}{120} \quad \text{or} \quad p = \frac{120f}{\text{rpm}} \quad \text{or} \quad \text{rpm} = \frac{120f}{p} \quad (1)$$

where af = frequency in hertz (cycles per second)
 rpm = revolutions per minute of rotor and
 p = the number of field poles

EXAMPLE What is the frequency of a two-pole alternator running at 3600 rpm?

SOLUTION Substitute in the formula

$$f = \frac{p \times \text{rpm}}{120} = \frac{2 \times 3600}{120} = \frac{7200}{120} = 60 \text{ Hz}$$

EXAMPLE How many poles has a 25-Hz alternator running at 500 rpm?

SOLUTION Substitute in the formula

$$p = \frac{120f}{\text{rpm}} = \frac{120 \times 25}{500} = \frac{3000}{500} = 6 \text{ poles}$$

100. Synchronous Speeds: AC Generators and Motors

Application to Generators. The table shows the speeds at which the rotor of an alternator having a given number of field poles must turn to generate voltage at given frequencies.

Application to Motors. The table indicates the synchronous speed of the rotary magnetic field of an induction motor having a given number of poles and taking current at a given frequency.

The table also shows the speeds of synchronous motors having a given number of field poles and taking currents at given frequencies.

Number of poles	RPM when frequency is											
	25	30	33½	40	50	60	66⅔	80	100	120	125	133½
2	1,500	1,800	2,000	2,400	3,000	3,600	4,000	4,800	6,000	7,200	7,500	8,000
4	750	900	1,000	1,200	1,500	1,800	2,000	2,400	3,000	3,600	3,750	4,000
6	500	600	667	800	1,000	1,200	1,333	1,600	2,000	2,400	2,600	2,667
8	375	450	500	600	750	900	1,000	1,200	1,500	1,800	1,875	2,000
10	300	360	400	480	600	720	800	960	1,200	1,440	1,500	1,600
12	250	300	333	400	500	600	667	800	1,000	1,200	1,250	1,333
14	214	257	286	343	428	614	571	686	857	1,029	1,071	1,143
16	188	225	250	300	375	450	500	600	750	900	938	1,000
18	167	200	222	267	333	400	444	533	667	800	833	889
20	150	180	200	240	300	360	400	480	600	720	760	800
22	136	164	182	217	273	327	364	436	545	655	682	720
24	125	150	167	200	250	300	333	400	500	600	625	667
26	115	138	154	185	231	280	308	370	461	564	577	615
28	107	128	143	171	214	257	286	343	429	614	536	571
30	100	120	133	160	200	240	267	320	400	480	500	633
32	94	113	125	150	188	225	250	300	375	450	487	500
36	83	100	111	133	166	200	222	266	333	400	417	444
44	79	82	91	109	136	164	182	218	273	327	341	363
48	63	75	83	100	125	150	167	200	250	300	312	333
54	56	66	74	90	111	133	148	178	222	266	278	296
60	50	60	67	80	100	120	133	160	200	240	250	266
68	44	53	59	71	88	106	118	141	176	212	221	235
72	42	50	55	67	83	100	111	133	166	200	208	222
96	31	38	42	50	64	75	82	100	125	150	156	167
100	30	36	40	48	60	72	80	96	120	120	150	160

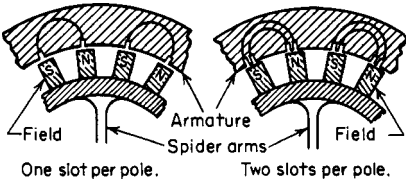


FIGURE 7.51 Single-phase armature windings.

single-phase windings. Single-phase alternators are seldom made now, except for emergency or standby power.

102. Two-phase alternator. In a generator of the type indicated in Fig. 7.52, the centers of the two component coils I and II are situated 90 electrical degrees apart, and the single-phase emf's generated in coils I and II by the passage of the field system past them differ in phase by 90 degrees. This property has given rise to the term *quarter-phase* for this type of machine, but it is more frequently called a *two-phase machine*. The emf in coil I is zero when that in coil II is a maximum, and vice versa. The curves of emf in coils I and II can be plotted as indicated in Fig. 7.53. Figure 7.54 shows two methods of connecting the armature windings of two-phase alternators. The armature coils can be arranged in one or

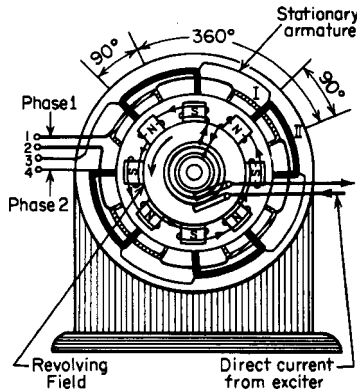


FIGURE 7.52 Two-phase alternator.

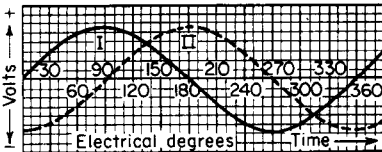


FIGURE 7.53 Graph of two-phase current.

101. Single-phase alternator. The circumferential distance from the centerline of one pole to the centerline of the next pole of the same polarity constitutes 360 electrical degrees. See Fig. 7.50, which shows how a single-phase emf is generated. Figure 7.49 is a diagrammatic illustration of a single-phase alternator, and Fig. 7.51 shows diagrammatically two different kinds of

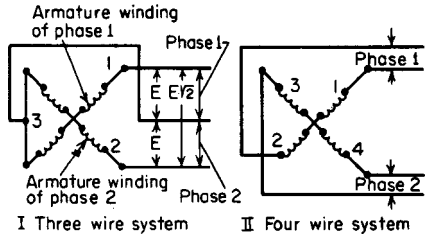


FIGURE 7.54 Methods of connecting two-phase generator armature windings.

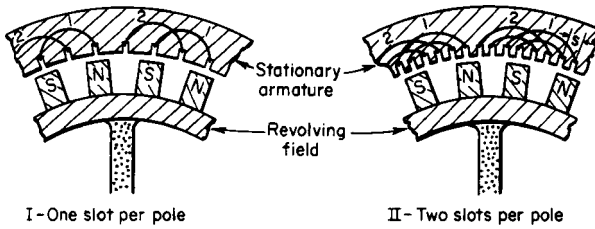


FIGURE 7.55 Two-phase armature windings.

more slots per pole per phase, as suggested diagrammatically in Fig. 7.55. In commercial machines the windings are almost always arranged in more than one slot per pole. (See Div. 1 for further information about two-phase currents.)

103. Three-phase alternator coils are arranged as illustrated in Fig. 7.58, and the curves of instantaneous emf are displaced from one another by 120 electrical degrees as indicated in Fig. 7.57. These curves also represent the emf's for the winding shown diagrammatically by coils I, II, and III in Fig. 7.56. Here three coils are distributed (60 electrical degrees apart) over a pole pitch, and the phase displacement between the emf's is 60 degrees. However, if in connecting the coils the middle coil is connected in the reverse sense from the other two, the result will be three voltages 120 electrical degrees apart, as shown in Fig. 7.57.

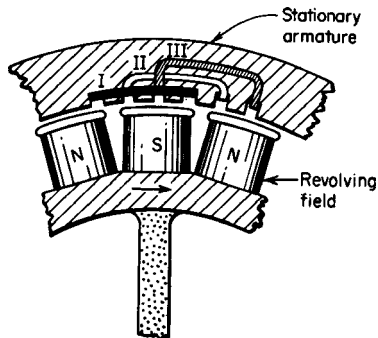


FIGURE 7.56 Six-phase grouping.

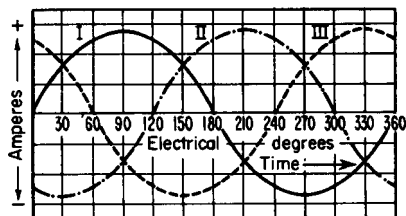


FIGURE 7.57 Graph of three-phase currents.

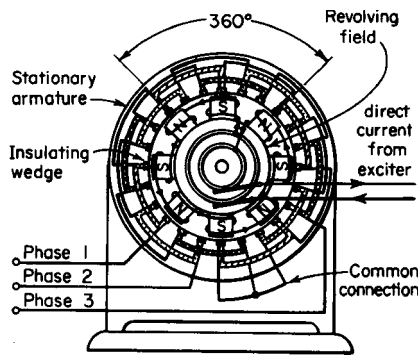


FIGURE 7.58 Three-phase Y-connected alternator.

The two methods of connecting three-phase armature windings are shown in Fig. 7.59. These methods are discussed in greater detail in Div. 1. Armature windings can be arranged in one or more slots per pole per phase (Fig. 7.60). The Y method is almost always used to connect three-phase generators.

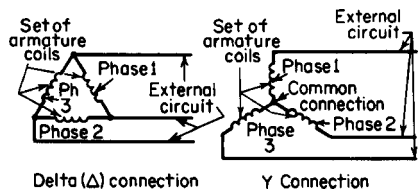


FIGURE 7.59 Methods of connecting three-phase armature coils.

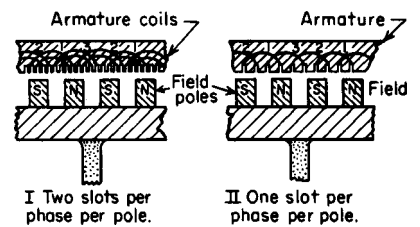


FIGURE 7.60 Three-phase armature windings.

104. Approximate Performance Values of AC Generators

(208Y/120, 240, 480Y/277, 480, 600, and 2400 V, three-phase)
It should be understood that values will vary somewhat with speed and other conditions. Those given are general and approximate only and do not apply to any particular manufacturer's line. A slow-speed machine is assumed to be one turning at from 100 to 200 rpm; a medium-speed machine, one turning at from 200 to 300 rpm; and a high-speed machine, one turning at from 300 to 1200 rpm. In the table, S indicates slow speed, M medium speed, and H high speed.

Output kVA	Current				Efficiency			Exciter capacity required
	208Y/120, 240 V	Three-phase						
		480Y/277, 480 V	600 V	2,400 V	½ load	¾ load	Full load	
50 S M H	120.3	60.1	48.0	12.0	85.5* 86.6	88.0* 89.8	89.0* 90.8	7.0 2.0
75 S M H	180.4	90.2	72.2	18.0	88.0* 87.1	90.0* 89.7	91.3* 90.8	8.0 3.0
100 S M H	240.6	120.3	96.2	24.1	89.0* 87.7	91.0* 90.2	92.0* 91.3	9.0 3.0
125 S M H	301.0	150.0	120.0	30.1	91.0* 90.1	92.0* 91.7	92.5* 92.7	9.0 5.0
150 S M H	360.8	180.4	144.3	36.1	90.5* 91.0 90.2	91.7* 92.0* 91.8	92.2* 93.0* 92.3	14.0 9.0 4.3
200 S M H	481.1	241.6	192.4	48.1	90.7 91.0 90.1	92.3* 93.0* 92.7	93.4* 93.5* 93.5	12.0 11.0 6.0
300 S M H	723.0	362.0	289.0	72.0	91.0* 92.0* 89.2	93.0* 93.5* 92.1	93.5* 94.2* 93.2	20.0 15.0 12.0
400 S M H	962.0	481.0	385.0	96.2	92.0* 92.0* 90.2	93.0* 94.0* 92.3	94.0* 94.5* 93.8	23.0 14.0 12.0
500 S M H	1,203.0	602.0	481.0	120.0	92.5* 91.8 90.8	94.0* 93.5 93.5	94.5* 94.4 94.5	23.0 16.0 13.0
600 S M H	1,450.0	722.0	578.0	144.0	92.5* 92.4 90.0	94.0* 94.1 92.4	94.5* 94.8 93.8	28.0 22.0 20.0
700 S M H	1,690.0	841.0	673.0	168.0	93.0* 91.8 90.0	94.0* 94.1 92.5	94.6* 95.0 94.0	35.0 24.0 20.0
800 S M H	1,930.0	977.0	773.0	193.0	92.8 92.1 91.5	94.5* 94.0 93.0	95.3* 95.0 94.0	32.0 23.0 17.0
1,000 S M H	2,406.0	1,203.0	962.0	241.0	93.0* 92.3 92.5	94.0* 94.2 94.0	94.8* 95.0 94.6	35.0 29.0 25.0
1,250 S M H	3,000.0	1,500.0	1,200.0	300.0	93.5* 92.5 92.0	94.5* 94.6 94.2	95.7* 95.5 95.3	38.0 30.0 26.0
1,500 S M H	3,640.0	1,804.0	1,443.0	361.0	93.6* 92.2 93.0	94.7* 94.4 95.1	95.4* 95.5 95.9	42.0 38.0 22.0
2,000 S M H	4,850.0	2,420.0	1,924.0	481.0	94.0* 92.6 92.3	95.0* 94.8 94.7	95.8* 95.3 95.7	50.0 42.0 38.0

*Engine-type machines: efficiencies-do not include friction of bearings.

105. Exciters for ac generators are compound-wound dc generators, flat-compounded and rated at 125 V for the smaller sizes of generators and at 250 V for the larger sizes. Systems of excitation in general use are:

1. Individual exciter for each generator unit
 - a. Direct-connected to the alternator shaft
 - b. Belt-connected to the alternator shaft
 - c. Brushless with integral rectifiers
2. Exciter-bus system supplied by one of the following combinations:
 - a. Induction-motor-driven exciters and steam-driven exciters
 - b. Induction-motor-driven exciters and hydraulic-turbine-driven exciters
 - c. Built-in rectifiers, solid-state

The individual exciter unit (Fig. 7.61) has the advantage of rapid response at the time of system short circuits or rapid fluctuations in load. It also has a high efficiency due to being driven by the highly efficient prime mover of the generator and to eliminating the loss in a generator field rheostat, since the generator voltage is controlled through variation of the field current of the exciter. The direct connection to the generator shaft is used for 1200-, 1800-, and 3600-rpm alternators. The belt connection is ordinarily used for slower-speed alternators so that a cheaper, higher-speed exciter (usually 1800 rpm) can be used.

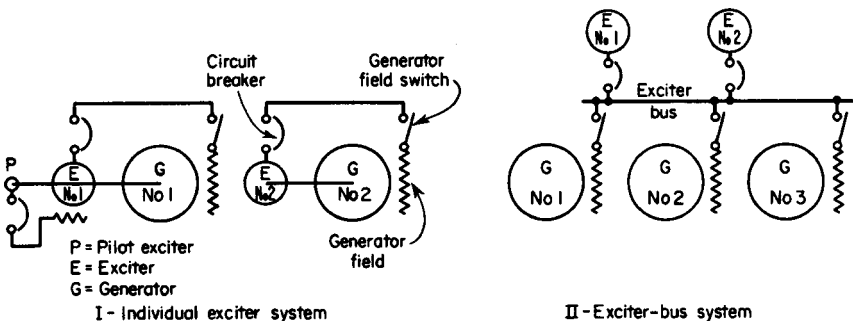


FIGURE 7.61 Systems of excitation for ac generators.

The exciter-bus system (Fig. 7.61) has the advantage of not crippling the alternator because of trouble with the exciter and of keeping closer voltage regulation when the primer mover driving the alternator is subject to speed variations. With this system at least two of the exciters should be steam- or hydraulic-driven to ensure ability to start the plant up after a shutdown.

Since failure of the excitation power will produce a failure of the ac generation and a possible shutdown of the station, the exciter system should be as reliable as possible. With the exciter-bus system there should be at least one or two spare exciter units. In some plants, for extreme reliability a storage battery is floated on the exciter bus to ensure continuity of the dc excitation. Induction motors should be used for driving the exciters, because they can be started rapidly and will not fall out of step during voltage fluctuations caused by short circuits on the system.

With the individual-exciter system, pilot exciters are frequently used to supply the field of the main exciter. This procedure adds to the rapidity of response to voltage fluctuations.

106. Synchronizing. Two or more ac generators will not operate satisfactorily in parallel unless (1) their voltages, as registered by a voltmeter, are the same, (2) their frequencies are the same, and (3) their voltages are in phase. If the machines are not in phase, even if their individual voltages and their frequencies are the same, the voltage of one will, at given instants, be different from that of the other and there will be an interchange of current between the machines. When two or more generators all satisfy the three listed requirements, they are in synchronism. *Synchronizing* is the operation of getting machines into synchronism. Incandescent lamps or instruments are, as described below, used to indicate when machines are in synchronism.

107. Synchronizing a single-phase circuit with lamps. The elementary principle involved in determining synchronism is indicated in Fig. 7.62. If the voltage and frequency of generators *A* and *B* are the same and the machines are in phase, point *a* will be at the same potential as point *a'* at every instant. Hence the lamps between *a* and *a'* will not light as long as the three conditions are satisfied. As long as the conditions are not satisfied, there will be a fluctuating crosscurrent from *a* to *a'* and a constant fluctuation of the brilliancy of the incandescent lamps. When the lamps become dark and remain so, the generators are in synchronism and may be thrown together. Had the connection at *a'* been made to the *b'* generator lead, the lamps would be bright when the generators were in synchronism, but for reasons outlined in Sec. 110 the connection shown, which provides the dark-lamp method of synchronizing, is preferred. The same condition occur in the *b—b'* set of lamps as in the *a—a'* set. A voltmeter of proper rating can be substituted for the lamps.

If the voltage generated is so high that it is not desirable to connect a sufficient number of lamps in series for it, a single lamp fed through voltage transformers can be used for synchronizing, as suggested in Fig. 7.63.

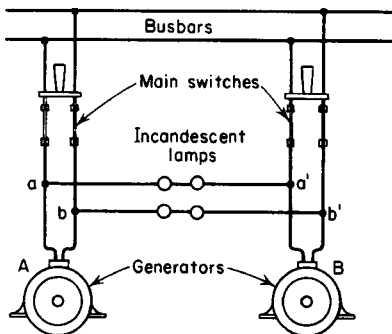


FIGURE 7.62 Circuits for synchronizing with lamps.

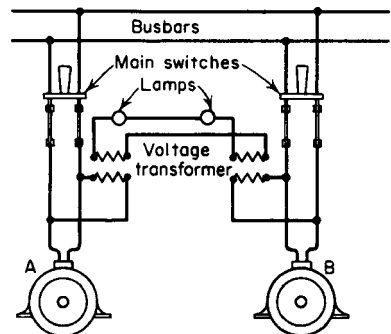


FIGURE 7.63 Circuits for synchronizing high-voltage circuits with lamps.

108. Phasing out three-phase circuits. Before connecting the leads from a polyphase generator that is to operate in parallel with others to the generator switch, the circuits must be *phased out*; i.e., the leads must be so arranged that when the generator switch is thrown, each lead from the generator will connect to the corresponding lead of the other generator. If this is not arranged, there may be considerable damage owing to an interchange of current when the two machines are in parallel. After once phasing out it is necessary to synchronize only one phase of the machine with the corresponding phase of the other machine.

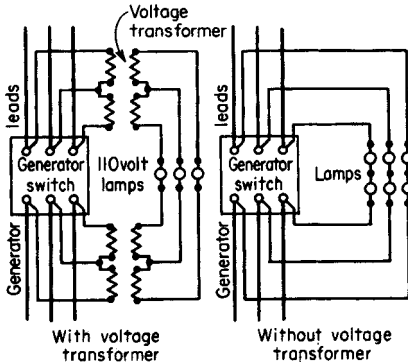


FIGURE 7.64 Connections for phasing out three-phase circuits.

Connections for phasing out three-phase circuits are shown in Fig. 7.64. If voltage transformers are not used, the sum of the voltages of the lamp in each line should be approximately the same as the voltage of the circuits. On 460-V circuits two 230-V or four 115-V lamps should be used in each phasing-out lead.

To phase out, run the two machines at about synchronous speed. If all the lamps do not become bright and dark together, interchange any two of the main leads on one side of the switch, leaving the lamps connected to the same switch terminals, after which all the lamps should fluctuate together, indicating that the connections are correct. The machines are in phase when all the lamps are dark.

109. The synchronizing connections for three-phase generators are shown in Fig. 7.65. A synchronizing plug can be used instead of the single-pole synchronizing switch shown. The illustration indicates the connection used when machines are to be synchronized to a bus. If only two machines are to be synchronized, the connections are the same as shown in Fig. 7.65, except that the bus transformer and the corresponding lamp are omitted and one plug is required instead of two.

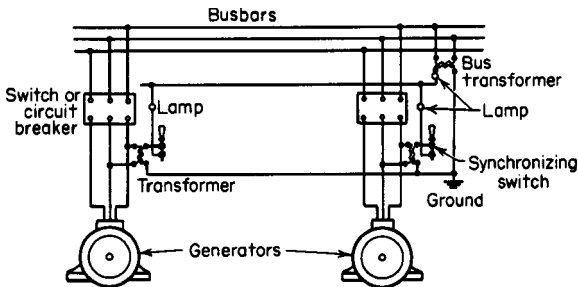


FIGURE 7.65 Connections for synchronizing three-phase circuits when transformers are required.

110. Synchronizing dark or light. *Synchronizing dark* appears to be the preferable method. All the connections shown are for synchronizing dark. When the lamps are dark, the machines are in phase, and it is necessary to close the switch when the pulsation is the slowest obtainable or ceases altogether, i.e., at or just before the middle of the longest dark period.

Should a filament break, the synchronizing lamps would remain dark and thus apparently indicate synchronism and possibly cause an accident. Therefore it is considered desirable by some authorities to reverse the synchronizing circuit connections and thereby to *synchronize light*. Synchronizing light eliminates the danger due to the breaking of a filament but has the disadvantage that the time of greater brilliancy is difficult to determine. The light period is relatively long compared with the dark period, so that synchronizing

light is usually considered more difficult, and if the synchronizing-light method did not eliminate the danger due to filament breakage, it would never be used.

The probability of a filament's breaking when synchronism approaches and the machines are not in phase is remote. If breakage occurs at any other time in the operation, it will be noticed. As a protection against accidents due to breakage, two synchronizing lamps should always be placed in multiple.

111. The number of lamps to use in a group to indicate synchronism is determined by the voltage of the generators. With high-voltage circuits it is not feasible to use a sufficient number of lamps, so a transformer that has a secondary voltage of 115 V is employed (see the diagrams). The greatest voltage impressed on the lamps is double that of one generator or the secondary voltage of one transformer. Thus the maximum voltage on the lamps when two 230-V generators are being synchronized is 460 V. The dark period can be shortened by impressing on the lamps a voltage higher than their normal. For two 230-V machines, for example, three 115-V lamps might be used, but the life of the lamps would be greatly reduced.

112. A synchroscope (see Fig. 7.66) is an instrument that indicates the difference in phase and frequency between two alternators. It shows whether the machine to be synchronized is running fast or slow. The pointer rotates clockwise if the machine is running fast and counterclockwise if it is running slow. When the pointer remains stationary pointing upward, the machines are in synchronism. It is quite common to use two synchronizing lamps in addition to a synchroscope, so that one system is a check against the failure of the other. Should the lamps remain dark any longer than a few seconds, the operator should look for trouble in either the lamps or the connections. After the main switches have been thrown, thus connecting the machines in parallel, the machines will hold themselves in synchronism.

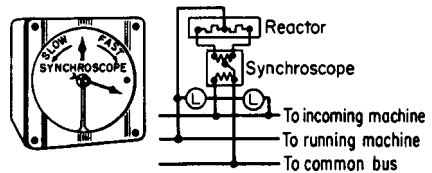


FIGURE 7.66 Synchroscope and wiring diagram.

113. Although for successful parallel operation ac generators need not be of the same type, output, and speed, it is universally conceded that the question of wavelength is important, since if the waves are of different shapes, crosscurrents will always be present. Similar waveshapes are more readily obtained with machines of similar type. Satisfactory parallel operation, the previously mentioned conditions being fulfilled, consists in obtaining

1. Correct division of the load among the machines
2. Freedom from hunting

114. Division of load. Machines with similar characteristics tend to divide the common load proportionally to the ratings of the machines. Such a proportional load division may be disturbed if the steam supply to the engines is defective or variable from any cause. The steam supply is regulated by the engine governors, and defects in one or more of these governors will cause poor load division. It is essential that the governors of all the engines have similar speed-regulation characteristics so that a sudden change in the load will cause

the same amount of regulation on each engine. Correct load division is therefore essentially a problem for the engine governors.

Varying the voltage of an alternator running in parallel with others by adjusting its field rheostat will not vary the load on it as with a dc generator. To increase the energy delivered by an alternator the prime mover must be caused to do more work. An engine should be given more steam or a waterwheel more water.

115. Adjustment of field current. When the rheostats of two alternators running in parallel at normal speed are not adjusted to give a proper excitation, a crosscurrent will flow between the armatures. The intensity of this current depends only upon the difference in the field currents and the impedances of the armature windings. It may vary over a wide range, from a minimum of zero when both field currents are normal to more than full-load current when they differ greatly. The effect of this crosscurrent is to increase the temperature of the armatures and, consequently, to decrease the allowable useful output of the generators. It is important that the rheostats be adjusted to reduce it to a minimum. This crosscurrent registers on the ammeters of both generators and usually increases both readings. The sum of the ammeter readings will be minimized when the idle current or crosscurrent is zero.

In general, the proper field current for a machine running in parallel with others is that which it would have if running alone and delivering its load at the same voltage. To determine the proper position of the rheostats, trial adjustments must be made after the alternators have been paralleled until the position at which the sum of the ammeter readings is minimized is found.

To illustrate this method let us consider two similar alternators *A* and *B* (Fig. 7.67) operating in parallel. When the generator field rheostats of both are properly adjusted, no crosscurrents will flow through the armatures, and the main ammeters will show equal readings if each machine is receiving the same amount of power from its prime mover. If the rheostat of *A* is partly cut in to reduce its field current, a crosscurrent lagging in *B* and leading in *A* will flow between the armatures. The effect of this crosscurrent will be to strengthen *A*'s magnetization and weaken *B*'s until they are approximately equal. The resultant emf of the system will thereby be lowered.

On the other hand, if the rheostat of *B* is partly cut out to increase its field current, a crosscurrent leading in *A* and lagging in *B* will flow between the armatures, strengthening *A*'s magnetization and weakening *B*'s magnetization until they are again equal. The resultant emf of the system will thereby be raised. A crosscurrent of the same character is therefore produced by decreasing one field current or increasing the other; i.e., in both cases it will lead in the first machine and lag in the second. The emf of the system will, however, be decreased in one case and increased in the other. It is obvious that by simultaneously adjusting the two rheostats the strength of the crosscurrent can be varied considerably and the emf of the system maintained constant.

For the first trial adjustment, cut in *A*'s rheostat several notches and cut out *B*'s by the same amount so as not to vary the emf of the system. If this reduces the sum of the main ammeter readings, continue the adjustment in the same direction until the result is minimized. After this point has been reached, a further adjustment of the rheostat in either direction will increase the ammeter readings. If the first adjustment increases the sum of the ammeter readings, it is being made in the wrong direction; in this case move the rheostats back to the original positions, and then cut out *A*'s rheostat and cut in *B*'s. If both adjustments increase the sum of the ammeter readings, the original positions of the rheostats are the proper ones.

In making these adjustments it may be difficult to locate the exact points at which the crosscurrent is minimized, as it may be possible to move the rheostats over a considerable range when near the correct positions without materially changing the ammeter readings.

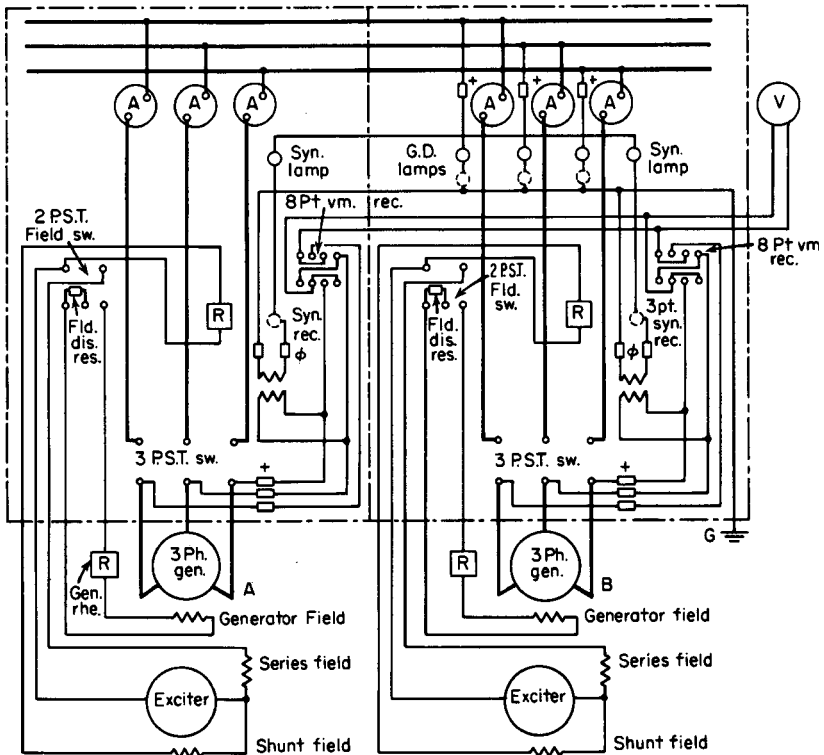


FIGURE 7.67 Two three-phase alternators of similar characteristics operating in parallel.

When the adjustment is carried this far, it is close enough for practical operation. If the generators are provided with power-factor meters, the same result can be obtained by adjusting the field currents until all the power-factor meters read the same while maintaining the voltage constant.

116. Starting a single alternator. (1) See that there is plenty of oil in the bearings, that the oil rings are free to turn, and that all switches are open. (2) Start the exciter and adjust for normal voltage. Start the generator slowly. See that the oil rings are turning. (3) Permit the machine to reach normal speed. Turn the generator field rheostat so that all its resistance is in the field circuit. Close the field switch. (4) Adjust the rheostat of the exciter for the normal exciting voltage. Slowly increase the alternator voltage to normal by cutting out the resistance of the field rheostat. (5) Close the main switch.

117. Starting an alternator to run in parallel with others. (1) Bring the exciter and generator to speed as described in Sec. 116. Adjust the exciter voltage and close the field switch, the generator field resistance being all in. (2) Adjust the generator field resistance so that the generator voltage will be the same as the busbar voltage. (3) Synchronize, as outlined above. Close the main switch. (4) Adjust the field rheostat until crosscurrents

are at a minimum (see Sec. 115), and adjust the governors of the prime movers so that the load will be properly distributed between the operating units in proportion to their capacities. (5) Adjust the governor of the machine which is to take the greatest load so that it will admit more steam.

118. Cutting out a generator which is running in parallel with others (*Westinghouse Instruction Book*). (1) Preferably cut down the driving power until it is just sufficient to run the generator at no load. This will reduce the load on the generator. (2) Adjust the resistance in the field circuit until the armature current is at a minimum. (3) Open the main switch.

Caution. The field circuit of a generator which is to be disconnected from the busbars must not be opened before the main switch has been opened, for if the field circuit is opened first, a heavy current will flow between the armatures.

119. Induction generators have the same construction as induction motors (see Sec. 117). A revolving magnetic field is produced by the stator currents in exactly the same manner as in an induction motor (see Sec. 147). Induction generators are made in two types as listed in Sec. 96. The type in which the stator winding is the source of voltage is used to produce voltages of ordinary power frequencies, such as 25, 50, or 60 Hz. The type in which the rotor winding is the source of voltage is used to produce voltages of higher frequencies than ordinary power frequencies, such as 90, 100, 175, 180, or 400 Hz. These higher frequencies are often required for the operation of high-speed portable tools and machines, 400-Hz lighting, and large electronic computers.

Induction generators, in which the stator windings are the source of voltage, have their stator windings connected to the electric system which is to receive the power and their rotor windings short-circuited as shown in Fig. 7.68. The machine cannot function as a generator until a revolving magnetic field has been produced in the machine. The current which produces the rotating magnetic field must therefore be supplied in the stator winding from a source external to the machine. Therefore, an induction generator of this type must be operated in parallel with a synchronous generator. Such an induction generator is, in effect, an induction motor which is driven at a speed above the speed of its rotating magnetic field.

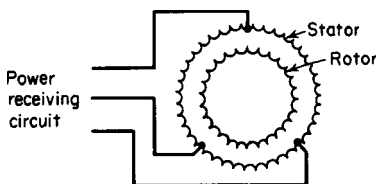


FIGURE 7.68 Induction-generator connections.

Suppose that an induction motor which has a slip of 5 percent at full load when operating as a motor is driven at a speed 5 percent greater than the speed of the rotating magnetic field. The flux cut by the rotor conductors will be practically the same as when it was operating as a motor. But the direction of motion of the conductors relative to the flux will be reversed. Hence the machine will become a generator and deliver power to the line approximately equal to its full-load motor rating. The frequency of the current supplied by an induction generator will always be the same as that of the synchronous generator with which it is in parallel. The induction generator tends to supply a leading current, just as does a condenser. The power factor at which it operates is determined by the slip and the design and does not depend upon the load.

Induction generators in which the rotor is the source of voltage are used for the generators, in motor-generator frequency-changer sets. The stator windings are connected to a

25-, 50-, or 60-Hz main power supply, and the rotor supplies the power to the higher-frequency circuits as shown in Fig. 7.69. If a 60-Hz current is passed into the primary winding of a standard wound-rotor motor and the motor is operated at synchronous or no-load speed, practically no voltage is generated in the secondary. If, however, the rotor is held stationary, a 60-Hz voltage can be obtained from the secondary. If the rotor is revolved in the opposite direction to that in which it would revolve as a motor, a voltage of a frequency higher than 60 Hz is generated. The high frequency depends upon the speed and number of poles in the generator and can be calculated from the following formula:

$$\text{High frequency} = \frac{\text{poles} \times \text{rpm}}{120} + \text{line frequency} \quad (2)$$

The voltage delivered by the induction frequency changer depends upon the design of the primary and secondary windings, the speed of the set, and the applied primary voltage.

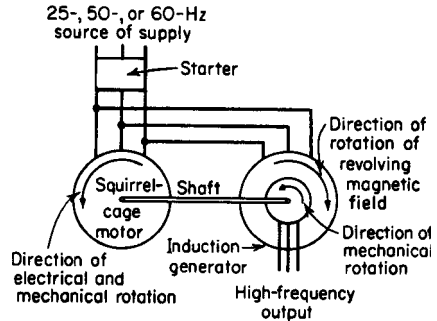


FIGURE 7.69 Schematic diagram of induction frequency-changer set.

120. Inductor alternators are employed to produce voltages of frequencies between 500 and 10,000 Hz for supplying the power to induction furnaces for the melting and heating of steel and alloys. The rotating element carries no electrical windings but consists simply of a toothed steel member (Fig. 7.70). The stationary member supports two sets of windings, the field windings and the armature coils. As the toothed member revolves, it varies the reluctance of the magnetic paths and thereby varies the flux produced by the current in the field windings. The flux also links with the armature coils, and its variation induces a voltage in these cells.

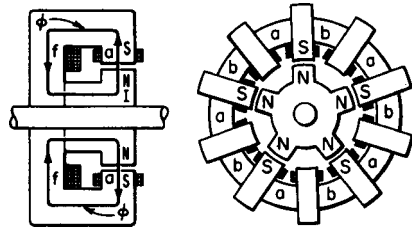


FIGURE 7.70 An inductor alternator. This type of construction has been used for relatively small alternators employed in radio transmission and gives as high as 200,000 Hz. [Charles H. Sanderson, ed., *Electric System Handbook*]

PRINCIPLES, CHARACTERISTICS, AND MANAGEMENT OF ELECTRIC MOTORS

121. Types of electric motors. Electric motors are manufactured in a number of different types. They may be divided into three main groups, depending upon the type of electric system from which they are designed to operate: dc, single-phase ac, and polyphase ac. There are several types of motors in each one of these groups, constructed so that they

produce different starting and running characteristics. The principal types of electric motors follow:

- Direct-current
 - Shunt-wound
 - Straight shunt-wound
 - Stabilized shunt-wound
 - Series-wound
 - Compound-wound
 - Permanent magnet
- Polyphase alternating-current
 - Induction
 - Squirrel-cage
 - Normal-torque, normal-starting-current
 - Normal-torque, low-starting-current
 - High-torque, low-starting-current
 - Low-torque, low-starting current
 - High-resistance-rotor
 - Automatic-start
 - Multispeed
 - Wound-rotor
 - Commutator, brush-shifting
 - Synchronous
 - Direct-current excited
 - Permanent-magnet
 - Reluctance
 - Single-phase alternating-current
 - Repulsion
 - Induction
 - Shading-pole-starting
 - Inductively split-phase-starting
 - Capacitor-type
 - Capacitor start
 - Permanent-split capacitor
 - Two-value capacitor
 - Repulsion-start, induction-run
 - Repulsion-induction
 - Series
 - Universal
 - Series-wound
 - Compensated series-wound

122. Speed classification of motor. Each electric motor possesses an inherent speed characteristic by which it can be classified in one of several groups. The following classification of speed characteristics is that adopted by the National Electrical Manufacturers Association (NEMA).

1. A *constant-speed motor* is one in which the speed of normal operation is constant or practically constant; for example, a synchronous motor, an induction motor with small slip, or a direct-current shunt-wound motor.
2. An *adjustable-speed motor* is one in which the speed can be controlled over a defined range, but when once adjusted remains practically unaffected by the load. Examples of

adjustable-speed motors are: a direct-current shunt-wound motor with field resistance control designed for a considerable range of speed adjustments, or an alternating-current motor controlled by an adjustable frequency power supply.

3. A *multispeed motor* is one which can be operated at any one of two or more definite speeds, each being practically independent of the load; for example, a direct-current motor with two armature windings or an induction motor with windings capable of various pole groupings. In the case of multispeed permanent-split capacitor and shaded-pole motors, the speeds are dependent upon the load.
4. A *varying-speed motor* is one in which the speed varies with the load, ordinarily decreasing when the load increases, such as a series-wound or repulsion motor.
5. An *adjustable varying-speed motor* is one in which the speed can be adjusted gradually, but when once adjusted for a given load, will vary in considerable degree with change in load, such as a direct-current compound-wound motor adjusted by field control or a wound-rotor induction motor with rheostatic speed control.
6. The *base speed of an adjustable-speed motor* is the lowest-rated speed obtained at rated load and rated voltage at the temperature rise specified in the rating.

123. Service classification of motors. Electric motors are classified into two groups, depending upon the type of service for which they are designed. *General-purpose motors* are those motors designed for general use without restriction to a particular application. They meet certain specifications as standardized by NEMA. A *definite-purpose motor* is one which is designed in standard ratings and with standard operating characteristics for use under service conditions other than usual or for use on a particular type of application. A *special-purpose motor* is one with special operating characteristics or special mechanical construction, or both, which is designed for a particular application and which does not meet the definition of a general-purpose or a definite-purpose motor.

124. Brake motors are motors equipped with electrically controlled brakes as an integral part of the motor assembly. The brake motor manufactured by one company consists of one or more rotating steel disks splined on a pinion on the motor shaft, with stationary friction linings on each side of each disk. A helical spring in the center applies pressure to provide the required braking, and two, three, or four magnets, depending on the rating of the brake, supply force to compress the spring and release the brake while the motor is running.

When power is applied to the motor, the brake is immediately energized, since the brake leads are connected directly to the motor leads in the conduit box. The current energizes the magnets, which pull the armature plate toward the end plate. This action removes the pressure on the revolving disks and allows them to move freely between the friction linings, releasing the brake. Since the rotating disks are separated from the friction surfaces at all times except during actual braking, the motor delivers full rated horsepower at the output shaft.

When the motor is disconnected from the power supply, the magnets are immediately deenergized, and the spring pushes the armature plate away from the adjustable plate toward the motor. This applies braking pressure on the surfaces between the revolving disks and the friction linings, bringing the motor to a quick, smooth stop. This inherent smooth action, free from hammer blow, keeps stresses at the minimum in the brake and in belts, cables, gears, or chains through which the motor drives.

125. Gear motors are motors equipped with a built-in reduction gear as an integral part of the motor assembly. The motor itself is generally a 60-Hz, nominal 1750-rpm machine. Output-shaft speeds between 4 and 1430 rpm are available. These motors can be

obtained equipped with almost any type of general-purpose polyphase induction, single-phase, or dc motor.

Loads of the same horsepower and speed rating will require different gear sizes, depending upon the type of load. Therefore, time of operation and frequency and severity of shock must be determined to select the proper gear motor for a specific application. To assist engineers in their selection, the American Gear Manufacturers Association (AGMA) has defined three classes of service, according to the degree to which all these variables are present:

Class I. Steady loads not exceeding the normal rating of the motor on 8-h-per-day service or moderate shock loads if service is intermittent.

Class II. Steady loads not exceeding the normal rating of the motor on 24-h-per-day service or moderate shock loads running 8 h per day.

Class III. Moderate shock loads on 24-h-per-day service or heavy shock loads running 8 h per day.

126. Direction of mounting of motors. The standard type of motor is designed to be mounted with its shaft horizontal. Motors can be obtained, however, for mounting with their shafts vertical, but such motors are more expensive and require more careful attention.

127. Bearings for motors may be of the sleeve or the ball-bearing type. Ball-bearing construction is of two kinds: (1) ball bearings with provision for in-service lubrication and (2) prelubricated ball bearings which require no service lubrication. Ball bearings generally are used for small motors up to 30 hp. The type to use is largely one of individual preference, since both types when properly designed and maintained will give satisfactory service. Most manufacturers are prepared to furnish from regular stock with either sleeve or ball bearings any type of motor up to 200 hp, except some totally enclosed motors.

For especially quiet operation, sleeve bearings are preferable.

The application of grease-packed ball bearings is particularly advantageous under the following conditions:

1. When the motor frame does not remain in a stationary position after installation
2. If the motor is located in an inaccessible place
3. For many totally enclosed motor applications
4. For motors with vertically mounted shafts
5. For high speeds
6. For heavy-thrust loads

The cost of ball-bearing-equipped motors is slightly higher than that of sleeve-bearing motors.

128. Types of motor enclosure. The various types of electric motors can be obtained with constructions which offer different degrees of enclosure and protection to the operating parts and windings. The different standard types as explained and defined by NEMA are as follows:

Open

General-Purpose. Ventilating openings permit the passage of external cooling air over and around the windings of the machine.

Dripproof. Ventilating openings are so constructed that successful operation is not interfered with when drops of liquid or solid particles strike or enter the enclosure at any angle from 0 to 15° downward from the vertical.

Splashproof. Ventilating openings are so constructed that successful operation is not interfered with when drops of liquid or solid particles strike or enter the enclosure at any angle not greater than 100° downward from the vertical.

Guarded. Openings giving direct access to live metal or rotating parts (except smooth rotating surfaces) are limited in size by the structural parts or by screens, baffles, grills, expanded metal, or other means, to prevent accidental contact with hazardous parts. Openings giving access to such live or rotating parts shall not permit the passage of a cylindrical rod 0.75 in (19.05 mm) in diameter.

Semiguarded. Some of the ventilating openings, usually in the top half, are guarded as in the case of a *guarded* machine, but the others are left open.

Dripproof Guarded. This type of dripproof machine has ventilating openings as in a *guarded* machine.

Externally Ventilated. Designating a machine that is ventilated by a separate motor-driven blower mounted on the machine enclosure. Mechanical protection may be as defined above. This machine is sometimes known as a *blower-ventilated* or *force-ventilated* machine.

Pipe-Ventilated. Openings for the admission of ventilating air are so arranged that inlet ducts or pipes can be connected to them. Open pipe-ventilated machines may be self-ventilated (air circulated by means integral with the machine) or force-ventilated (air circulated by means external to, and not part of, the machine).

Weather-Protected. Type I: Ventilation passages are so constructed as to minimize the entrance of rain, snow, and airborne particles to the electric parts, and having its ventilated openings constructed as to prevent the passage of a cylindrical rod 0.75 in (19.05 mm) in diameter. Type II: In addition to the enclosure described for a Type I machine, ventilating passages at both intake and discharge are so arranged that high-velocity air and airborne particles blown into the machine by storms or high winds can be discharged without entering the internal ventilating passages leading directly to the electric parts.

The normal path of the ventilating air that enters the electric parts of the machine is so arranged by baffling or separate housings as to provide at least three abrupt changes in direction, none of which is less than 90°. In addition, an area of low velocity not exceeding 600 ft/min (183 m/min) is provided in the intake air path to minimize the possibility of moisture or dirt being carried into the electric parts.

Encapsulated Windings. A machine with moisture-resistant windings is one in which the windings have been treated such that exposure to a moist atmosphere will not readily cause malfunction. This type of machine is intended for exposure to moisture conditions that are more excessive than the usual insulation system can withstand.

Sealed Windings. A machine with sealed windings is one which has an insulation system which, through the use of materials, processes, or a combination of materials and processes, results in windings and connections that are sealed against contaminants. This type of machine is intended for environmental conditions that are more severe than the usual insulation system can withstand.

Totally Enclosed

Nonventilated. Not equipped for cooling by means external to the enclosing parts.

Fan-Cooled. Equipped for exterior cooling by means of a fan or fans, integral with the machine but external to the enclosing parts.

Fan-Cooled Guarded. All openings giving direct access to the fan are limited in size by design of the structural parts or by screens, grills, expanded metal, etc., to prevent accidental contact with the fan. Such openings do not permit the passage of a rod 0.75 in (19.05 mm) in diameter.

Explosion-Proof. Designed and constructed to withstand an explosion of a specified gas or vapor which may occur within it and to prevent the ignition of the specified gas or vapor surrounding the machine by sparks, flashes, or explosions of the specified gas or vapor which may occur within the machine casing.

Dust-Ignition-Proof. Designed and constructed in a manner which will exclude ignitable amounts of dust or amounts which might affect performance or rating, and which will not permit arcs, sparks, or heat otherwise generated or liberated inside of the enclosure to cause ignition of exterior accumulations or atmospheric suspensions of a specific dust on or in the vicinity of the enclosure.

Pipe-Ventilated. Openings are so arranged that when inlet and outlet ducts or pipes are connected to them, there is no free exchange of the internal air and the air outside the case. Totally enclosed pipe-ventilated machines may be ventilated as described for other pipe-ventilated machines.

Water-Cooled. Cooled by circulating water; the water or water conductors coming in direct contact with the machine parts.

Air-Over. Intended for exterior cooling by a ventilating means external to the machine.

Air-to-Air-Cooled. Cooled by circulating the internal air through a heat exchanger which, in turn, is cooled by circulating external air. It is provided with an air-to-air heat exchanger for cooling the internal air and a fan or fans, integral with the rotor shaft or separate, but external to the enclosing part or parts, for circulating the external air.

129. Torques of motors. The *locked-rotor or static torque* of a motor is the minimum torque which it will develop at rest for all angular positions of the rotor, with rated voltage applied at rated frequency.

The *pull-up torque* of a motor is the minimum torque developed by the motor during the period of acceleration from rest to the speed at which breakdown torque occurs. For motors which do not have a definite breakdown torque, the pull-up torque is the minimum torque developed up to rated speed.

The *breakdown torque* of a motor is the maximum torque that the motor will develop with rated voltage applied at rated frequency without an abrupt drop in speed.

The *pull-in torque* of a synchronous motor is the maximum constant torque under which the motor will pull its connected inertia load into synchronism at rated voltage and frequency.

The *pullout torque* of a synchronous motor is the maximum sustained torque which the motor will develop at synchronous speed with rated voltage applied at rated frequency with normal excitation.

The *full-load torque* of a motor is the torque necessary to produce its rated horsepower at full-load speed.

130. The rating of an electric motor includes the service classification (Sec. 120), voltage, full-load current, speed, number of phases and frequency if alternating-current, and full-load horsepower. The horsepower rating that is stamped on the motor nameplate by the manufacturer is the horsepower load which the motor will carry without injury to any part of the motor.

In any motor a certain amount of the input energy is lost in the machine. This energy is dissipated in the form of heat, which raises the temperature of the motor. As the load on a motor is increased, the losses increase, and therefore the temperatures of the different parts of the machine increase with the load. If too great a load is put on the motor, the motor will become excessively hot, causing probable injury to the insulation of the windings.

Motor and generator insulation systems are divided into classes according to the thermal endurance of the system for temperature-rating purposes. Four classes of insulating

systems are used in motors and generators, namely, Classes A, B, F, and H. These classes have been established in accordance with IEEE standards. The insulation class is one which by experience or accepted test can be shown to have suitable thermal endurance when operated at the limiting temperature specified in the NEMA temperature-rise standard for the machine under consideration. *Experience* means successful operation for a long time under actual operating conditions of machines designed with temperature rise at or near the temperature-rating limit. *Accepted test* means a test on a system or model system which stimulates the electrical, thermal, and mechanical stresses occurring in service.

Depending on the type of motor, winding type, motor service factor, etc., the insulation classes are generally based on maximum internal winding temperatures measured by the change-of-resistance method using maximum actual anticipated normal winding temperatures of 105 to 115°C for Class A systems, 130 to 140°C for Class B systems, 155 to 160°C for Class F systems, and 180°C for Class H systems.

In general, maximum ambient temperature is 40°C for any motor unless that motor is specifically designed for a different figure, in which case the correct ambient should be stamped elsewhere on the nameplate.

General-purpose open-type motors are usually rated for continuous operation in a 40°C ambient temperature under normal service conditions. These conditions include, in addition to the 40°C ambient temperature, operation at an altitude no greater than 3300 ft (1006 m) above sea level, applied voltage within 10 percent of rated value, system frequency within 5 percent of rated value, combined variation of both voltage and frequency within 10 percent of rated values, unobstructed or unhampered ventilation, and proper mounting and mechanical connection to the driven load. Motors may be provided with various classes of insulation as shown in the motor insulation list above.

131. Starting currents of motors. In stating the current taken by a motor, specify just what current is meant, as starting currents are given in several different ways. In some cases the starting current pulled from the line is not the same as the current flowing into the motor itself at the instant of starting. If the rotating member of a motor is held stationary (locked rotor) and voltage is applied to the machine, a certain current would be indicated. This current is the first inrush current that will occur at starting. If the starting current is measured with a well-damped ammeter under actual starting conditions (the rotor is free to revolve), the current indicated on the ammeter will be less than the first inrush current. This is true because the ammeter does not have a chance to indicate the peak current before the motor has started to revolve and the current has decreased somewhat. It is a standard practice to take the free-rotor values of starting currents as 75 percent of the locked-rotor values.

The *locked-rotor current of a motor* is the current taken directly by the motor with the revolving part held stationary.

The *locked-rotor current of a motor and its starter* is the current taken from the line with the revolving part held stationary.

The *free-rotor current of a motor* is the maximum current taken directly by the motor during the starting period as indicated by a well-damped ammeter.

The *free-rotor current of a motor and its starter* is the maximum current drawn from the line during the starting period as indicated by a well-damped ammeter.

The *average starting current* of a motor is the average value of the starting current that must be considered in selecting fuses or circuit breakers. Fuses with a rating equal to the average starting current of a motor will allow the motor to start without rupturing the fuses. Owing to the time-lag characteristic of fuses, the peak value of the starting current will not rupture fuses of a rating considerably less than the peak value of the starting current.

132. Permissible motor-starting currents. The operating conditions of an electric power system are affected by the currents taken by motors under starting conditions. Excessive power fluctuations will cause large changes in the voltage of the system and excessive voltage drops under the peak-current conditions. These power and voltage fluctuations may produce unsatisfactory operating conditions for one or more of the following reasons:

1. Actuation of undervoltage protective or release devices on motor controllers, causing the shutdown of motors
2. Stalling of induction motors that are operating close to full load or slightly over full load
3. Objectionable dips in the light output of lamps and flickering of lamps
4. In the case of small private generating plants, danger of overloading of generators

Each electric power company has definite rules for permissible starting currents for motors supplied from its system. At present there is no standardization of these rules, each company having its own set of rules. Some of these rules limit the starting current on the basis of an allowable percentage of full-load current of the motor. With one of the newer rules, called the *increment method*, the maximum starting current of any motor must not be greater than a certain number of amperes per kilowatt of the customer's maximum-demand load.

133. The speed regulation of a motor is the percentage drop in speed between no load and full load based on the full-load speed.

$$\text{Percent speed regulation} = \frac{\text{no-load speed} - \text{full-load speed}}{\text{full-load speed}} \times 100 \quad (3)$$

DIRECT-CURRENT MOTORS

134. Direct-current motors. All dc motors must receive their excitation from some outside source of supply. Therefore they are always separately excited. The interconnection of the field and armature windings can be made, however, in one of the three different ways employed for self-excited dc generators. A dc motor may be designed, therefore, to operate with its field connected in parallel or in series with its armature, producing, respectively, a shunt or a series motor. If the machine is provided with two field windings, one connected shunt and the other series, it is a compound motor. The speed of a shunt motor connected directly to the line is nearly constant from no load to full load, while the speed of a series motor drops off rapidly as the load is increased. If a series motor were operated at no load with normal voltage, it would attain a dangerous speed, so high in most cases that it would throw itself apart by centrifugal force. A series motor should never be operated at no load unless there is sufficient external resistance connected in series with the motor to limit its speed to be a safe value. For this reason a belt drive should never be used with a series motor.

Standard compound motors are designed to operate with the shunt and series fields connected so as to aid each other (cumulative). Their operating characteristics therefore are a

compromise between those of shunt and series motors. Their speed drops off considerably as the load is increased, but not nearly so much as with series motors. A compound motor will not run away under no load. The amount of change of speed from no load to full load depends upon the strength of the series field. The stronger the series field, the greater the change in speed from no load to full load. Special compound motors with their field windings connected to buck each other (differential motors) are used sometimes for special applications. If the series field is of just the proper strength, a differential compound motor will operate at a more constant speed than a shunt motor, but it tends to be unstable under overload conditions.

Many shunt motors have a weak series-field winding in addition to the shunt-field winding. The series-field winding is connected cumulatively and consists of only a very few turns. The purpose of the series-field winding is to counteract partially the effect of the armature current upon the speed of the motor. The armature current tends to reduce the strength of the magnetic field of the motor. Therefore, as the load on the motor is increased, the decrease in the strength of the field may cause a rise in the speed. A motor with a rising-speed characteristic is unstable. A few series-field turns will sufficiently counteract the demagnetizing effect of the armature current and stabilize the speed characteristic of the motor. These motors, although actually cumulative compound motors with a very weak series field, are called stabilized shunt motors.

Typical characteristics for shunt, series, and compound motors are shown in Figs. 7.71, 7.72, and 7.73.

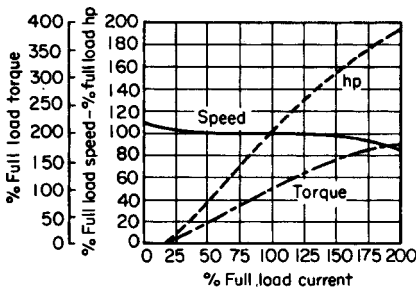


FIGURE 7.71 Typical characteristics for a shunt motor.

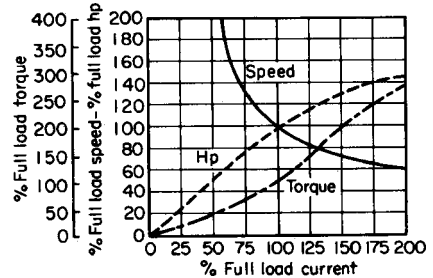


FIGURE 7.72 Typical characteristics for a series motor.

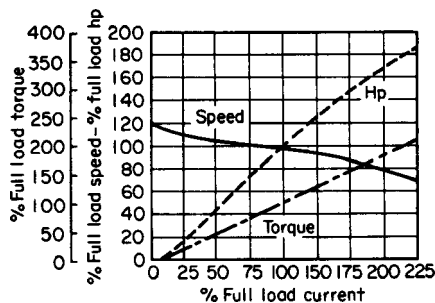


FIGURE 7.73 Typical characteristics for a compound motor.

The speed regulation due to variations in load from rated load to no load of standard dc motors which meet NEMA* requirements will not exceed the following values:

hp	Shunt-wound regulation, %	Compound-wound	
		Speed, rpm	Regulation, %
1/20–1/8, inclusive	...	1725	30
1/20–1/8, inclusive	...	1140	35
1/6–1/3, inclusive	...	1140	30
1/6–1/3, inclusive	...	1725	25
1/2–3/4, inclusive	...	1725	22
1/2	...	1140	25
Less than 3	25
3–50, inclusive	20
51–100, inclusive	15
101 and larger	10

*This material is reproduced with the permission of the National Electrical Manufacturers Association from the NEMA Standards Publication MG 1-2006 copyright © 2006 by NEMA.

135. Torque characteristics of dc motors. The torque developed by any one of the three types of dc motors, either at starting or while running, depends upon the product of the magnetic flux and the armature current. Since in a shunt motor the flux is nearly constant at all times, the torque varies nearly directly with the value of the armature current. In a series motor the armature current flows directly through the field winding, so that the flux is not constant but varies almost directly with the value of the armature current. The torque

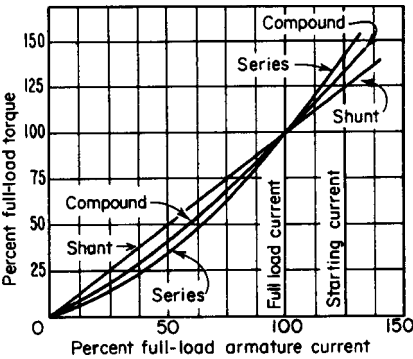


FIGURE 7.74 Torque characteristics for dc motors.

The maximum value of starting torque that it is satisfactorily possible for any dc motor to produce is limited only by the commutating conditions. These usually limit the current to approximately 200 percent of full-load current for a shunt motor and 250 percent of full-load current for a series or compound motor. The corresponding torques are approximately 200 percent of full-load torque for a shunt motor, 300 percent for a compound motor, and 400 percent for a series motor.

There is no value of pullout torque for a dc motor. If the load on a dc motor were continually increased, the motor would gradually slow down as the load increased until finally

of a series motor, therefore, varies approximately as the square of the armature current. Doubling the armature current will make the torque 4 times as great. The cumulative compound motor has a torque characteristic that is a compromise between that of the series motor and that of the shunt motor. The torque will increase faster than the increase in armature current but not so fast as the square of the armature current. The way in which the torque varies with the armature current for a cumulative compound motor depends upon the relative strength of the series and shunt fields. The curves of Fig. 7.74 indicate the relation between torque and armature current for the different types of dc motors.

the load would become so great that the motor would gradually stop. Of course, it would never be feasible in practice to overload the machine to such an extent that it would stop, and long before such a load was reached the fuses in the circuit would blow.

136. Method of starting dc motors A dc motor of any capacity, when its armature is at rest, will offer a very low resistance to the flow of current, and an excessive and perhaps destructive current would flow through it if it were connected directly across the supply mains while at rest. Consider a motor adapted to a normal full-load current of 100 A and having a resistance of $0.25\ \Omega$; if this motor were connected across a 250-V circuit, a current of 1000 A would flow through its armature; in other words, it would be overloaded 900 percent, with consequent danger to its windings and also to the driven machine. For the same motor, with a rheostat having a resistance of $2.25\ \Omega$ inserted in the motor circuit, at the time of starting the total resistance to the flow of current would be the resistance of the motor ($0.25\ \Omega$) plus the resistance of the rheostat ($2.25\ \Omega$), or a total of $2.5\ \Omega$. Under these conditions exactly full-load current, or 100 A, would flow through the motor, and neither the motor nor the driven machine would be overstrained in starting. This indicates the necessity of a rheostat for limiting the flow of current in starting the motor from rest.

An electric motor is simply an inverted generator or dynamo. Consequently when its armature begins to revolve, a voltage is generated within its windings just as a voltage is generated in the windings of a generator when driven by a prime mover. This voltage generated within the moving armature of a motor opposes the voltage of the circuit from which the motor is supplied and hence is known as a *counter-emf*. The net voltage tending to force current through the armature of a motor when the motor is running is, therefore, the line voltage minus the counter-emf.

For the motor cited above, when the armature reaches such a speed that a voltage of 125 is generated within its windings, the effective voltage will be 250 minus 125, or 125 V, and therefore the resistance of the rheostat may be reduced in $1\ \Omega$ without the full-load current of the motor being exceeded. As the armature further increases its speed, the resistance of the rheostat may be further reduced until when the motor has almost reached full speed, all the rheostat may be cut out and the counter-emf generated by the motor will almost equal the voltage supplied by the line, so that an excessive current cannot flow through the armature.

It is a general practice to provide a rheostat for starting a dc electric motor except for small fractional-horsepower motors of $\frac{1}{4}$ hp or smaller. In special cases, when the motor is started very infrequently and the starting load is light, larger motors can be started by throwing them directly across the line. Motors as large as 5 hp have been successfully started in this way, but the manufacturer should be consulted whenever one contemplates starting a motor larger than 1 hp by this method. The resistor providing the starting resistance is divided into sections and is so arranged that the entire length or maximum resistance of the rheostat is in circuit with the motor at the instant of starting and that the effective length of the resistance conductor, and hence its resistance, can be reduced as the motor comes up to speed.

In cutting out the resistance of a starting rheostat care must be used not to cut it too rapidly. If the resistance is cut out more rapidly than the armature can speed up, a sufficient counter-emf will not be generated to oppose the flow of current properly and the current will be excessive.

The standard starting rheostat, when thrown into the first position, limits the armature current to about 150 percent of the full-load current. This current will produce a starting torque of about 150 percent of full-load torque for a shunt motor, of about 175 percent for a standard cumulative compound motor, and of about 225 percent for a series machine. If greater starting torque is required, it can be obtained by advancing the starter to the second or third point. The allowable starting torque that can be obtained in this way is limited by commutating conditions to about 200 percent of full-load torque for a shunt motor, to

300 percent for a compound motor, and to 400 percent for a series motor. The currents corresponding to these maximum allowable torques are approximately 200 percent of full-load current for a shunt motor, 250 percent of full-load current for a cumulative compound motor, and 250 percent of full-load current for a series motor.

137. Speed control of dc motors. The speed of dc motors for a given load can be controlled by the following methods:

1. Armature control
 - a. Variable resistance in series with armature
 - b. Variable-voltage generator supplying armature (Ward-Leonard system)
 - c. Variable voltage supplied to armature by controlled electronic rectifier
 - d. Resistance shunted across armature
2. Field control
 - a. Shunt-field rheostat
 - b. Variable-voltage generator supplying shunt field
 - c. Variable voltage supplied to shunt field by controlled electronic rectifier
 - d. Resistance shunted across series field
3. Combination of armature and field control

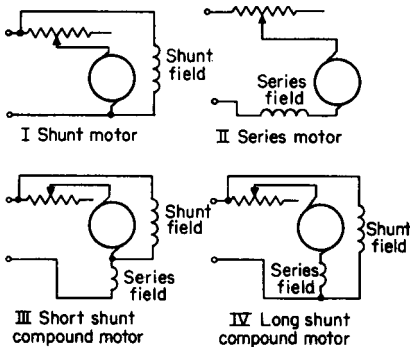


FIGURE 7.75 Speed control with armature resistance.

is easy to apply and requires only simple and relatively inexpensive equipment, and gradual control of the speed down to practically zero speed can be obtained. Armature series resistance control, however, has the following objections:

1. *Bulk of rheostat.* This may not be very objectionable if only a few motors are so controlled, but for larger numbers the extra space becomes a factor, and in many cases it is difficult to find sufficient room near the motor.
2. *Inefficiency of the system.* The same amount of power is supplied at all speeds, but at low speeds only a small part is converted into useful work, the balance being wasted in the rheostat as heat.
3. *Poor speed regulation with varying loads.* Since the impressed voltage at the armature terminals is equal to the line voltage minus the resistance drop in the rheostat ($V_t = V - I_a R_x$), any change in the current drawn by the motor produces a change in the terminal voltage, the counter-emf, and therefore the speed.

138. Armature speed control. Any dc motor may have its speed reduced below normal by armature control. With this method, the speed is controlled by varying the voltage impressed upon the armature, while the voltage of the field is held constant. For a constant-torque load, the speed will vary in approximate proportion to the voltage impressed on the armature. The allowable horsepower output will decrease proportionally to the decrease in speed.

Armature speed control can be obtained by inserting an external variable resistance in series with the armature circuit. The location of such a resistance for the different types of dc motors is shown in Fig. 7.75. This method

Armature series resistance control is the type of speed control most commonly employed for series motors. Series motors requiring speed control are used chiefly for intermittent duty, and the total loss of energy in the control resistance therefore is not so great as it would be for continuous duty. Generally, armature series resistance control is not employed for shunt and compound motors unless a wider speed range than can be obtained satisfactorily by field control is desired or unless very low speeds are required.

Armature speed control obtained by a variable-voltage generator (Ward-Leonard system) requires an individual motor-generator set for each motor whose speed is to be controlled. Although this method is applicable to any type of dc motor, it is most commonly used with shunt or compound motors. A schematic diagram is given in Fig. 7.76. The Ward-Leonard system gives very close control of the speed over a wide range but has the disadvantage of requiring three full-size machines for each motor drive. For automatic drive control with dc motors, a variation of the Ward-Leonard system can be used, employing control generators (see Secs. 43, 44, 45, and 143).

The variable voltage for armature control can be obtained from a controlled electronic rectifier. Electronic armature speed control gives close control of the speed over a wide range. Electronic control of dc motor speed can be adapted for automatic drive control (see Sec. 142).

Resistance shunted across the armature is useful for controlling the speed of dc motors to very low values at light loads. It is used only in conjunction with armature series resistance control. Connections for this method are shown in Fig. 7.77.

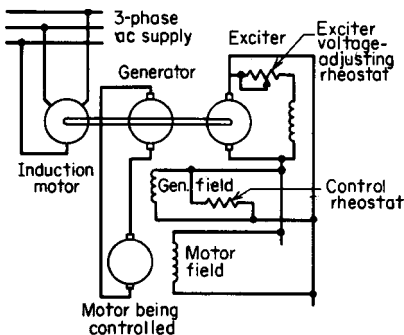


FIGURE 7.76 Ward-Leonard system of speed control.

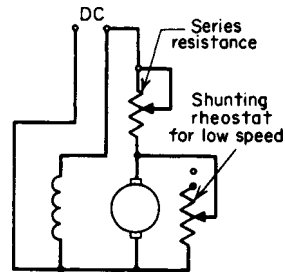


FIGURE 7.77 Speed control using a shunt across the armature.

139. Field speed control. The speed of dc motors can be controlled by varying the field current of the motor while the armature voltage is held constant. Reducing the field-current will reduce the flux and consequently increase the speed of the motor. Field control gives close control of the speed over a limited range. The speed of any shunt motor can be increased by approximately 25 percent above normal by field control. If a greater speed range than this is required, a shunt motor designed for adjustable-speed service should be used. A speed range of 4:1 is the practical limit for field control with an adjustable-speed shunt motor. The simplest method of obtaining field speed control for shunt or compound motors is by means of a field rheostat connected in series with the shunt field. The proper location of a field rheostat in motor circuits is shown in Fig. 7.78. This method is the one most commonly used for speed control of shunt and compound motors. It is very easy to apply, requires simple and inexpensive equipment that occupies only a very small space,

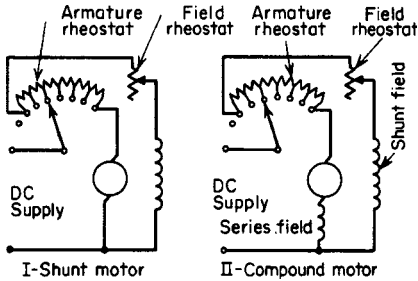


FIGURE 7.78 Control of speed with a field rheostat.

does not consume any appreciable amount of power in the control equipment, and gives good speed regulation with varying loads.

Field control of shunt or compound motors can be obtained by energizing the shunt field from a variable-voltage generator. This method requires an individual motor-generator set for each motor to be controlled and has no advantage over the simple field rheostat method except for automatic drive control of small motors requiring only a limited speed range. When this method is employed in automatic drive control, the shunt field of the

motor is excited by a control generator (see Secs. 43, 44, and 45).

Field control of shunt and compound motors is sometimes obtained by supplying the shunt field from a controlled electronic rectifier. The fundamental principles and connections of controlled rectifiers are the same as those discussed for rectifiers employed for electronic armature control. Electronic field control generally is employed only in combination with electronic armature control when a very wide speed range is required.

Field control of series motors is obtained by shunting a resistance across the series field. If a resistance or rheostat is placed in parallel with the field of a series-wound motor, the speed will be increased instead of decreased at a given load. This procedure is known as *shunting the field of the motor*. This shunt would not be applied until the motor had been brought up to normal full speed by cutting out the starting resistance. With a shunted field a motor drives a load at a speed higher than normal and therefore requires a correspondingly increased current. More current is required to produce a given torque. The allowable torque at speeds above normal is therefore less than the rated full-load torque. With this type of speed control the motor is practically a constant-horsepower machine, the allowable rating being almost the same for all speeds.

140. A combination of armature and field control is employed when a wide speed range is required. The following combinations are frequently employed:

1. Armature resistance combined with a shunt-field rheostat
2. Ward-Leonard system combined with a shunt-field rheostat
3. Electronic armature control combined with electronic field control

A common combination used for controlling the speed of standard constant-speed motors is to employ armature control for reducing the speed to 50 percent below normal and field control for increasing the speed 25 percent above normal.

141. Automatic drive control (servo system) is the automatic control of a motor to meet specified requirements of the driven equipment or material. A few of the more common requirements that are automatically fulfilled by automatic drive control are:

1. Production of uniform acceleration and deceleration
2. Maintenance of constant speed regardless of load and control of speed over a wide speed range
3. Production of constant torque over a wide speed range

The essential elements of an electric drive-control system are shown in the block diagram of Fig. 7.79. An electric drive-control system must have the ability (1) to pick up a signal whenever there is a deviation from the required performance of a driven machine or process, (2) to convert this variation signal into a proportional electrical signal, (3) to compare this electrical signal with the desired standard, (4) to have the deviation from the standard activate a correction in the electrical input to the drive motor, and (5) to provide antihunting characteristics.

Requirements 1 and 2 are fulfilled by the conversion element (pickup) of Fig. 7.79. The conversion element may take a variety of forms. It may be a pilot generator coupled to the drive motor or driven machine, which will pick up any variation in speed and translate this speed variation into a proportional voltage variation. It may be a resistor in series with the armature of the drive motor. The voltage across such a resistor will act as a pickup for any variation in the current delivered to the motor. Such a pickup can be used for constant-torque control of a motor. Phototubes are used as the pickup device in many cases. A phototube circuit will pick up and convert into a voltage any deviation from the proper position of a machine tool or of a driven object. The pickup device may be a set of synchros, which will pick up and convert into a signal voltage any deviation from a desired angular position (see Sec. 178).

Requirement 3 of the control system is fulfilled by the comparison circuit of Fig. 7.79. For example, consider the conditions for automatic speed control of a motor. The voltage of the conversion element (a pilot generator) is connected in series with a standard voltage, and any variation in the voltage of the pilot generator results in a variation of current in the comparison circuit. This variation in current will be controlled in magnitude and direction by the variation in the voltage of the pilot generator. The output of the comparison circuit may not be great enough to produce proper functioning of the activation circuit. In such cases, a modification circuit, which will consist of an electronic amplifying circuit, must be employed. Often it is desired that the controlled machine be influenced by some factor or factors in addition to the main controlling function. Such requirements are fulfilled by modification circuits.

Requirement 4 of the control system is fulfilled by the activation circuit of Fig. 7.79. The output of the comparison and modification circuit must be connected to an activation circuit, which will control the input circuit to the drive motor so as to correct the deviation of the driven device. For example, the output of the comparison circuit may act upon the control circuit of a thyristor and in this manner control the input to the drive motor.

Requirement 5 of the control system is fulfilled through coupling or feedback circuits between comparison and activation circuits. The purpose of these antihunt circuits is to prevent overshooting of the correction and to prevent serious oscillations about the desired controlled condition. Although these antihunt circuits are in many cases essential, a discussion of them is beyond the scope of this book.

In the majority of dc drive-control applications, the requirements are met through the use of dc motors controlled by electronic or electrodynamic control systems. In both these control systems, dc motor performance is controlled through (1) control of input to the motor armature, (2) control of input to the motor field, or (3) combination control of input to the motor armature and field. In the electronic control systems, the motor input is adjusted by means of thyristor rectifiers. In electrodynamic control systems, the motor input is adjusted by means of control generators (see Sec. 43).

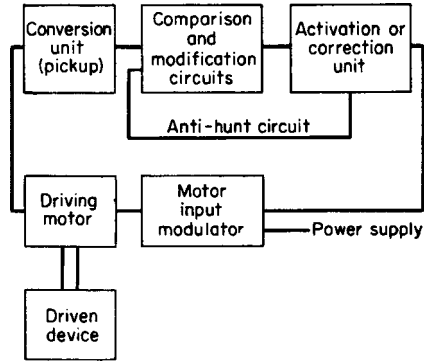


FIGURE 7.79 Elements for automatic drive control.

142. In the electronic control of dc motors, either the armature or the field, or both, are supplied through electronic rectifiers. The output of the rectifiers is automatically controlled in accordance with the requirements of the driven machine or process.

143. Automatic electrodynamic drive control is frequently called a *servo system*. In electrodynamic control of dc motors, the input to the motor is automatically controlled in accordance with the requirements of the load by means of a control generator. Small motors may be supplied with power directly from the control generator. When the capacity of the control generator is not sufficient to supply the motor director, the control generator energizes the field of a main generator and thus controls the input to the motor. Electrodynamic control circuits for constant-speed control of a dc motor are shown in Figs. 7.80 and 7.81. The circuit of Fig. 7.80 employs an amplidyne control generator, and that of Fig. 7.81 a Rototrol control generator. When a sufficient speed range can be obtained by field control, the control generator may control the input to the field of the motor instead of the input to the armature, as is shown in the figures. In the circuits of both Figs. 7.80 and 7.81, the conversion element, or pickup, is the pilot generator, which is coupled to the main dc drive motor. In the circuit of Fig. 7.80, the voltage of the pilot generator is impressed upon the comparison circuit so as to oppose the reference voltage. In the circuit of Fig. 7.81, the voltage of the pilot generator energizes the pilot field of the Rototrol. The comparison circuit of Fig. 7.81 consists of the combination of the pilot- and pattern-field circuits. In the circuits of both figures, the activation circuit is the armature circuit of the control generator. When the signal voltage from the pilot generator is not sufficient to actuate the field circuit of the control generator directly, an electronic amplifier is inserted between the pickup circuit and the field of the control generator. In both the circuits shown in the figures, the circuit is adjusted for the desired speed by means of the adjusting rheostat.

In the amplidyne control circuit of Fig. 7.80, if the speed of the motor rises above the value corresponding to the setting of the adjusting rheostat, the greater opposing voltage of the pilot generator weakens the field of the amplidyne. This will lower the voltage output of the amplidyne and thereby weaken the field of the main generator. The voltage output of the main generator is thus reduced. Therefore, the input and consequently the speed of the motor are reduced until the speed has been brought back to the value determined by the setting of the adjusting rheostat.

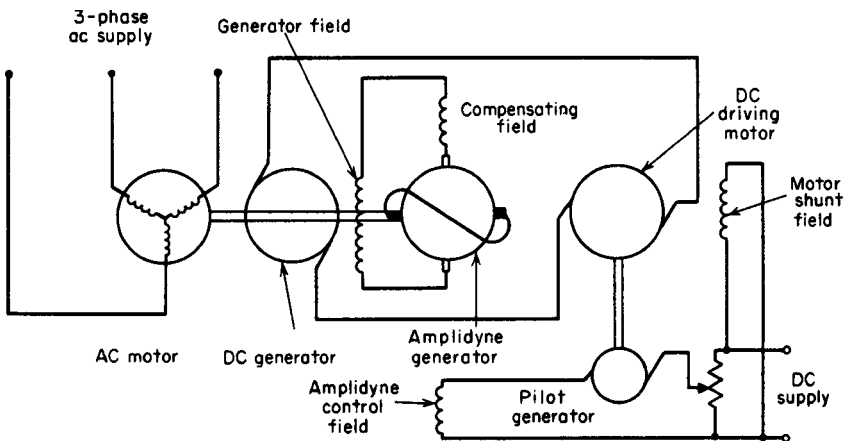


FIGURE 7.80 Speed control using an amplidyne generator.

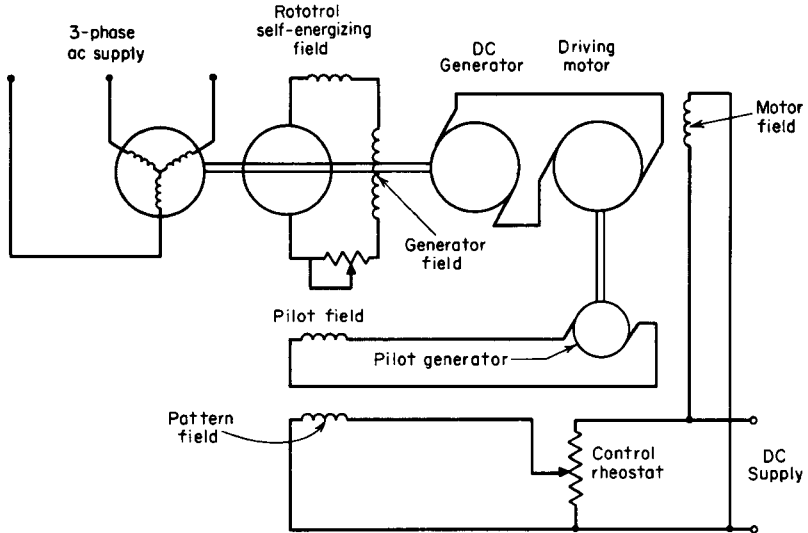


FIGURE 7.81 Speed control using a Rototrol.

In the Rototrol circuit of Fig. 7.81, if the speed of the motor rises above the value corresponding to the setting of the adjusting rheostat, the strength of the pilot field of the Rototrol is increased. Since the pilot field opposes the constant pattern field, the field flux of the Rototrol will be reduced. This will lower the voltage of the Rototrol and thereby weaken the field of the main generator. The voltage output of the main generator is thus reduced. Therefore, the input and consequently the speed of the motor are reduced until the speed has been brought back to the value determined by the setting of the adjusting rheostat.

Circuits for constant-current control of a dc motor by means of electrodynamic control systems are shown in Figs. 7.82 and 7.83. The pickup element consists of a resistor in series with the motor armature circuit. Any deviation in the armature current will result in a

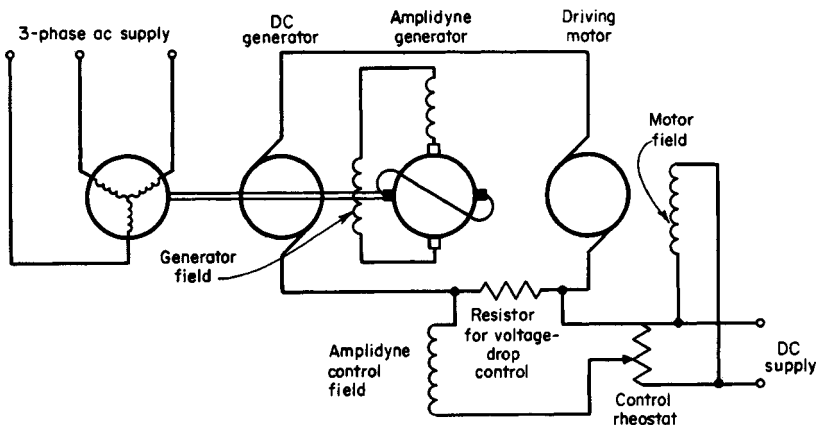


FIGURE 7.82 Constant-current control using an amplidyne generator.

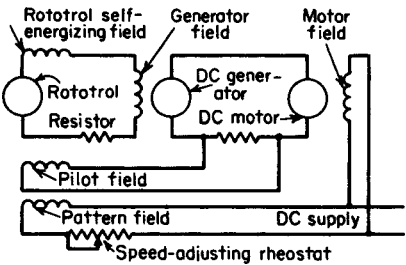


FIGURE 7.83 Constant-current control using a Rototrol control generator.

proportionate change in voltage across the resistor. The voltage across the resistor activates the comparison circuit in the manner discussed for constant-speed controls.

144. Position control. It is often desirable to have a control system that functions to control the position of a driven object or rotating machine. The position of a driven object may be indicated by a phototube scanning the driven object. The angular position of a rotating machine may be indicated by the

error voltage of a synchro circuit (see Sec. 178). The phototube or synchro pickup and conversion element can actuate either an electronic or an electrodynamic control system so as to control the process or driven machine in accordance with the position desired.

145. Approximate Efficiencies of DC Motors: Continuous Rated, 40°C Rise

hp	Percentage efficiency			hp	Percentage efficiency		
	1/2 load	3/4 load	Full load		1/2 load	3/4 load	Full load
1/2	62.0	65.0	68.0	20	82.0	85.0	86.5
3/4	65.0	70.0	72.0	26	83.0	86.0	87.0
1	70.0	73.0	75.0	30	84.0	87.0	88.0
1 1/2	72.0	76.0	78.0	40	85.0	87.5	88.5
2	72.0	77.5	81.0	50	85.5	88.0	89.5
3	72.0	77.0	79.0	60	85.0	88.0	90.0
5	77.0	81.0	81.5	75	86.0	89.0	90.5
7 1/2	79.0	82.0	83.5	100	86.0	89.0	90.5
10	81.0	83.0	85.0	125	86.0	89.0	90.5
15	81.5	84.5	86.0	150	87.0	90.0	91.0
				200	89.0	91.5	92.0

ALTERNATING-CURRENT MOTORS

146. General construction of polyphase induction motors. Polyphase induction motors have two windings, one on the stationary part of the machine, or stator, and one mounted on the revolving part, or rotor. The stator winding is embedded in slots in the inner surface of the frame of the machine and is similar to the armature winding of a revolving-field type of ac generator. The rotor winding may be one of two types, squirrel-cage or wound-rotor. In a *squirrel-cage machine* the rotor winding consists simply of copper or aluminum bars embedded in slots in the iron core of the rotor and connected together at each end by a copper or aluminum ring. The rotor winding thus forms a complete closed circuit in itself. The rotor winding of the *wound-rotor machine* is similar to the armature winding of a revolving-armature type of ac generator. The free ends of the winding are brought out to slip rings. The rotor circuit is not closed until the slip rings are connected either directly together or through some resistances external to the machine.

147. Principle of operation of the induction motor. The induction motor differs from other types of motors in that there is no electrical connection from the rotor winding to any source of electrical energy. The necessary voltage and current in the rotor circuits are produced by induction from the stator winding. The operation of the induction motor depends upon the production of a revolving magnetic field. The stator winding of a simple two-phase induction motor connected to a simple two-phase alternator is shown in Fig. 7.84.

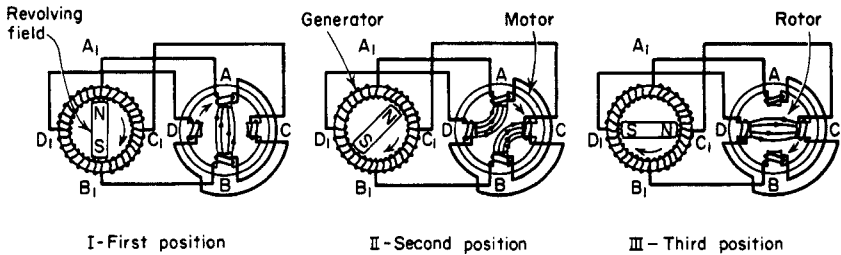


FIGURE 7.84 Principle of the induction motor.

Windings of the types shown in the illustration are not used in commercial machines, but the general theory involved is the same as with commercial windings. The revolving field of the generator, in turning the direction shown by the arrow, generates a two-phase current, which is transmitted to the motor. The current in conductors of one phase magnetizes poles *A* and *B*, and that in the other phase poles *C* and *D*. The winding is so arranged that a current entering at *A* will produce a south pole at *A* and a north pole at *B*. At the instant shown at I, motor poles *A* and *B* are magnetized while poles *C* and *D* are not, because it is a property of a two-phase circuit that when the current in one of the phases is at a maximum value, the current in the other phase is at a zero value. Hence, at this instant a magnetic field will be set up in the machine in a vertical direction, with a north pole at *B* and a south pole at *A*.

At another later instant, represented at II, the currents in both of the phases are equal and in the same direction. The motor poles will be magnetized as shown. The currents in changing from their values in I to their values in II have moved the magnetic field through an angle of 45° toward the right. At the instant illustrated at III, because of the properties of two-phase currents there is no current in the phase of the conductors which are wound on poles *A* and *B*, but the current in the phase of the conductors which magnetize poles *C* and *D* is at maximum. Hence, the magnetic field produced in the machine at instant III is in a horizontal direction with a south pole at *C* and a north pole at *D*. The magnetic field has been moved around another 45° . Similar action occurs during successive instants, and the magnetic field is caused to rotate continually in the same direction within the motor frame as long as the two-phase current is applied to the stator terminals. Thus, when the stator winding of a polyphase motor is connected to a source of polyphase power, a revolving field is produced inside the machine.

If a closed electric circuit such as the rotor winding of an induction motor is inserted in the machine, the revolving magnetic field will cut across the conductors of this winding and in that way produce a voltage in them. This voltage acting upon the closed rotor circuit will send a current through the different conductors of the rotor winding. The rotor conductors then will be carrying a current and lying in a magnetic field. Such a condition will produce a force upon the conductors of the rotor winding, tending to turn them in the same direction as that in which the magnetic field is revolving.

If the rotor winding were revolved at the same rate of speed as that at which the magnetic field revolves, there would be no relative motion between the field and the conductors of the rotor winding. Since there would be no relative motion, there would be no cutting of the magnetic field across the conductors and therefore no voltage or current produced in the rotor winding. If there is no current in the rotor winding, no torque can be produced, which tends to keep the machine revolving. As the machine slows down, however, the magnetic field will revolve at a higher speed than the rotor, producing a relative motion between the magnetic field and the conductors of the rotor winding. This relative motion produces a cutting of the conductors by the flux, with the resultant voltage and current necessary to develop a turning effort upon the rotor. The operation of an induction motor depends upon the difference in speed between the revolving magnetic field and the actual speed of the machine or rotor. This difference in speed is called the *slip of the motor*. The rotor is said to slip a certain number of revolutions behind the revolving magnetic field. The greater the load on an induction motor, the more the rotor must slip behind the revolving magnetic field to produce a greater cutting of the flux by the rotor conductors, with the resulting greater current in the rotor and greater turning effort to carry the greater load. Even at no load an induction motor cannot revolve as fast as the magnetic field revolves, since enough torque must be developed to overcome the friction and other losses in the motor.

148. The synchronous speed of an induction motor is the speed at which its magnetic field revolves. It depends upon the number of poles for which the stator is wound and the frequency of the supply voltage.

$$\text{Synchronous speed} = \frac{120f}{P} \quad (4)$$

where f = frequency of supply

P = the number of poles per phase for which the stator is wound

Synchronous speed is in revolutions per minute.

148A. The slip of an induction motor is the ratio of the difference between the rotating magnetic-field speed (rpm or angular velocity) and the actual rotor speed to the rotating magnetic-field speed. The speed of the rotating magnetic field is equivalent to the synchronous speed of the machine (see Table 100), which is determined by the frequency of the current and the number of poles of the machine (Sec. 147). Then

$$\text{Slip in rpm} = \text{synchronous speed} - \text{actual speed} \quad (5a)$$

$$\text{Percent slip} = \frac{\text{synchronous speed} - \text{actual speed}}{\text{synchronous speed}} \times 100 \quad (5b)$$

When there is no load on a motor, the slip is very small; i.e., the rotor speed is practically equal to the synchronous speed. Slip varies with the design of a motor and may vary from 4.0 to 8.5 percent at full load in motors of from 1 to 75 hp of ordinary design.

EXAMPLE What is the slip at full load of a four-pole 60-Hz induction motor which has a full-load speed of 1700 rpm?

SOLUTION From Table 100 or Sec. 147 the speed of the rotating field or the synchronous speed of a four-pole 60-Hz motor is 1800 rpm. Then, substituting in the above formula,

$$\begin{aligned}\text{Percent slip} &= \frac{\text{synchronous speed} - \text{actual speed}}{\text{synchronous speed}} \times 100 = \frac{1800 - 1700}{1800} \times 100 \\ &= \frac{100}{1800} \times 100 = 5.5 \text{ percent}\end{aligned}$$

Therefore the slip is 5.5 percent. The voltage of the motor and whether it is single-phase, two-phase, or three-phase are not factors in the problem.

148B. Breakdown torque of an induction motor. Most induction motors will “break down” at a certain torque if they are overloaded. The breakdown limit, the maximum running torque that can be developed, is the point at which a further increase in load will cause the motor speed to decrease rapidly and then to stop. This point is usually between 2 and 4 times the full-load rated torque, depending on the design and the capacity of the motor. In a few cases there is no breakdown torque, the maximum torque occurring at standstill. Under these conditions there will be no sudden decrease in the speed as the load is increased. Instead, the speed will gradually decrease as the load is increased until standstill is reached.

149. General operating characteristics of induction rotors. The following rules, though approximate, are accurate enough for practical use under the normal range of operation of an induction motor from no load to 150 percent of rated load:

1. The slip of an induction motor varies directly with the load. Doubling the load will double the slip.
2. For any given load the slip varies directly with the resistance of the rotor circuit. If the resistance of the rotor circuit is doubled, the slip for the same load will be twice its original value.
3. For any load the slip varies inversely as the square of the voltage impressed on the stator winding. If the voltage is reduced to one-half of its normal value, the slip is increased to 4 times its normal value for any load.
4. The torque developed by an induction motor varies directly with the slip.
5. The torque developed at any particular slip varies inversely with the resistance of the rotor circuit.
6. The torque for any particular slip varies directly as the square of the voltage impressed on the stator.
7. The maximum torque is not affected by the resistance of the rotor circuit. A large value of resistance for the rotor circuit simply makes the maximum torque occur at a high slip.
8. The maximum torque varies directly with the square of the voltage impressed on the stator circuit.

150. Starting characteristics of induction motors. The starting torque varies directly with the square of the voltage impressed on the stator. If three-fourths of normal voltage is impressed at starting, the starting torque will equal only nine-sixteenths of the torque developed with normal voltage impressed at starting.

The value of the starting torque of an induction motor also depends on the value of the resistance of the rotor circuit. As the resistance of the rotor circuit is increased, the starting torque is increased until the resistance of the rotor circuit is of just the right value to make the maximum torque occur at starting. If the resistance of the rotor circuit is still further increased, the starting torque will be decreased. Thus, a certain value of rotor resistance will produce maximum starting torque, and either a greater or a smaller value of motor resistance than this amount of resistance produces less starting torque (see Fig. 7.87).

The current taken at starting by an induction motor depends upon the voltage impressed on the stator and the resistance of the rotor circuit. For a fixed rotor resistance the starting current varies directly with the impressed voltage. For a particular impressed voltage, increasing the resistance of the rotor circuit decreases the value of the starting current.

151. Characteristic curves of the induction motor. The curves of Fig. 7.85 are fairly typical of the average normal-torque, normal-starting-current, commercial induction motor. Note that the normal rating of the motor is taken at such a point that both the power factor and the efficiency are the highest possible. The motor could be designed so that either the power factor or the efficiency, but not both, could be higher than shown at normal load, but the design of an induction motor is a compromise between the leading factors that results in the best efficiency and power factor obtainable with suitable overload and starting characteristics.

The characteristics of a polyphase induction motor running single-phase are shown in Fig. 7.86. In Fig. 7.88 is shown the speed-torque characteristic of a polyphase induction motor running single-phase. Note that the starting torque when operated single-phase is zero. A polyphase induction motor will not start when connected to a single-phase supply. Once started, however, it will operate from a single-phase supply and carry approximately half the rated load without over-heating.

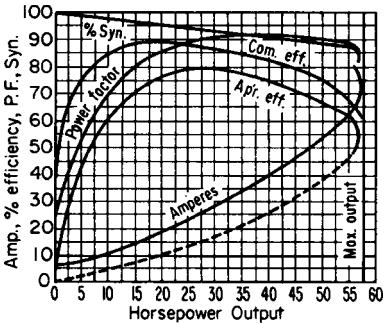


FIGURE 7.85 Typical performance graph of a 20-hp (14.9-kW) three-phase induction motor.

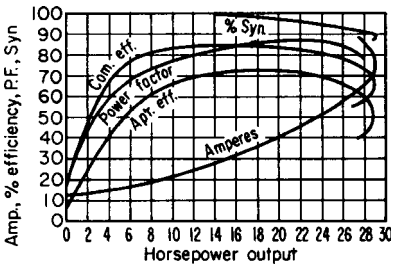


FIGURE 7.86 Performance graph of the motor shown in Fig. 7.85 when running single-phase.

152. High-efficiency induction motors. Efficiency is a measure of the effectiveness with which a motor converts electrical energy into mechanical energy; in other words, watts in versus watts out. In the conversion process, watts are lost, transformed into heat which is dissipated by the motor-cooling system, such as through the motor frame, or lost through friction and windage. High-efficiency motors available from many manufacturers reduce the watts loss in one or all of several areas over standard industrial motor designs, in some cases by as much as 50 percent. General techniques for watts-loss reduction include the following:

Watts-Loss area	Efficiency improvements
1. Iron	Iron losses are essentially independent of load. Use of thinner-gage, lower-loss core steel reduces eddy-current losses, and adding iron by making the motor core longer reduces losses due to lower operating flux densities.
2. Stator I^2R	Use of more copper and larger conductors increases the cross-sectional area of stator windings, lowering resistance R and reducing losses due to current flow I . I^2R losses are load dependent.
3. Rotor I^2R	Use of larger rotor conductor bars increases the size of the cross section, lowering resistance R and reducing losses due to current flow I .
4. Friction and windage	Friction and windage losses are independent of load. Use of low-loss fan designs (on fan-cooled motors) reduces losses due to air movement. Bearing design can reduce friction losses.
5. Stray load loss	Use of optimized design and improved quality-control procedures minimize stray load losses, such as those due to nonuniform current distribution in stator and rotor conductors, air gap, and so forth. These losses combined may be 10 to 15 percent of total motor losses and tend to increase with load.

Generally, high-efficiency motors are more expensive than standard industrial motors; however, the additional initial investment may be more than justified by the reduction in the cost of electricity used. There are a number of ways to evaluate the economic impact of motor efficiency. An example of a simple payback analysis is given here. Other methods include a present-worth life-cycle analysis and a cash-flow and payback analysis. Details of the various methods of analysis can be found in financial-management texts.

The simple payback method gives the number of years required to recover the differential investment for a higher-efficiency motor to determine the payback period. The premium for the higher-efficiency motor is divided by the annual savings. First, the annual savings must be determined by using the following formula:

$$S = 0.746 \times \text{hp} \times L \times C \times N \left(\frac{100}{E_B} - \frac{100}{E_A} \right) \quad (5c)$$

where S = annual dollar savings

hp = horsepower

L = percentage load $\div 100$

C = energy cost, dollars/kWh

N = annual hours of operation

E_B = lower-motor percent efficiency

E_A = higher-motor percent efficiency

The efficiencies for the percent load at which the motor will be operated must be used, since motor efficiency varies with load, as shown in Fig. 7.85. Then, the motor-cost premium is divided by the annual savings to compute the payback period for the higher-efficiency motor. If motor A costs \$300 more than motor B and yields annual savings of \$100, the simple payback period is \$300/\$100, or 3 years. The payback method is easy to apply but ignores savings occurring after the end of the payback period and does not consider the time value of money or changes in energy costs.

See Sec. 6 of Div. 1 for coverage of financial tools that account for the time value of money and future changes in operating expenses. See Sec. 173 for motor-efficiency marking and minimum efficiencies of "energy-efficient" motors.

153. The torque curves of an induction motor with a wound rotor, from rest to synchronism, running both three-phase and single-phase with external resistance and without external resistance, are shown in Fig. 7.87. The curves are plotted with torque in foot pounds at 1-ft (0.3-m) radius. Curve *A* shows the torque from rest to synchronism without resistance in the rotor circuit. If the proper value of resistance is inserted, curve *B* is obtained, and the starting torque is 440 ft·lb (596.6 J) against 170 ft·lb (230.5 J) without resistance. Curve *C* indicates the torque when too much resistance is used in the motor. Curve *E* illustrates the torque for single-phase, which is zero at starting. A wound-rotor induction motor starts as shown on curve *B* until it reaches point *F*, when the resistance is cut out and the motor adjusts itself to its operating position at *G*. Thus, if the torque required of the motor for which the curve is shown is greater than 440 ft·lb, shown at *H*, the motor will break down and come to rest. With the resistance in the rotor, a starting torque of 440 ft·lb is available, but this load cannot be brought up to normal speed. The motor can bring only the torque represented by point *F*, or 290 ft·lb (393.2 J), to normal speed.

In Fig. 7.87, note that the torque of a three-phase motor rises to a maximum and then drops, reaching zero at synchronism. This means that an induction motor never runs at synchronous speed.

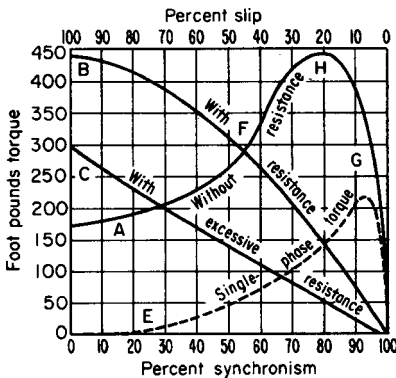


FIGURE 7.87 Torque graph of a 30-hp (22.4-kW) induction motor.

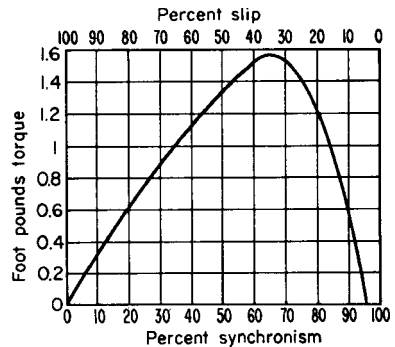


FIGURE 7.88 Torque graph of a 1-hp (745.7-W) three-phase induction motor running single-phase.

154. Speed control of induction motors. It is possible to control the speed of an induction motor by any one of the following methods:

1. Changing the impressed voltage
2. Changing the number of poles for which the machine is wound
3. Changing the frequency of the supply
4. Changing the resistance of the rotor circuit
5. Introducing a foreign voltage into the secondary circuit
6. Operating two or more motors connected in cascade

155. Reducing the impressed voltage will increase the slip of an induction motor proportionally to the square of the voltage. At the same time, however, the breakdown torque of the motor is also reduced as the square of the voltage, so that the motor is in danger

of stalling under load. For this reason, changing the impressed voltage alone is employed for the speed control of induction motors only in emergencies or other special cases.

156. Speed control of induction motors by changing the number of poles.

The actual speed of an induction motor depends upon the speed of the revolving magnetic field produced by the stator winding (synchronous speed). The synchronous speed of an induction motor is inversely proportional to the number of poles for which the stator winding is wound. Thus, on a 60-Hz circuit a two-pole induction motor has a synchronous speed of 3600 rpm; a four-pole motor, 1800 rpm; an eight-pole motor, 900 rpm, etc. It is therefore possible to alter the speed of an induction motor by changing the number of its poles.

This can be accomplished by using two or more separate primary windings, each having a different number of poles, or by using a single winding which can be connected to form different number of poles. This method is, of course, not applicable to the ordinary type of induction motor but requires a motor with a number of leads brought out from the primary winding (see Sec. 172). Gradual speed control cannot be obtained by this method. Only a certain number of definite speeds, four at the most, can be obtained.

157. Speed control of a polyphase motor by adjusting the frequency of the primary current.

Since the synchronous speed of an induction motor is equal to the alternations per minute of the supply circuit divided by the number of poles in each phase circuit, a change in speed can be effected by changing the frequency of the supply circuit.

Figure 7.89 shows the speed-torque and other curves of a 60-Hz motor when operated at 60, 30, 15, and 6 Hz, or at 100, 50, 25, and 10 percent of the normal frequency. The speed-torque curves corresponding to the above frequencies are *a*, *b*, *c*, and *d*. The current curves are *A*, *B*, *C*, and *D*. This figure shows that for the rated torque *T* the current is practically constant for all speeds, but the emf varies with the frequency. Consequently, the apparent power supplied, represented by the product of the current by emf, varies with the speed of the motor and is practically proportionate to the power developed.

When only one motor is operated, the generator speed can be varied. If the generator is driven by a waterwheel, its speed can be varied over a wide range and the motor speed will also vary. If the generator field is held at practically constant strength, the motor speed can be varied from zero to a maximum at constant torque with a practically constant current.

Controlling the speed of an induction motor by changing the frequency of the supply requires a separate generator for each motor or an electronic adjustable-speed drive for each motor.

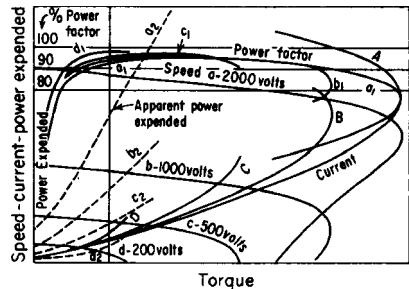


FIGURE 7.89 Performance graph of a polyphase induction motor with different applied frequencies and different applied voltages.

158. Speed control of induction motors by adjusting the resistance of the secondary circuit.

Inserting resistance in series with the rotor of an induction motor will decrease the speed of the motor. The amount of decrease in speed produced will depend on the load on the motor. It is not possible to produce much change in speed by this method at light loads. This method of speed control is, of course, applicable only to wound-rotor

motors. Speed control by adjusting the resistance of the rotor circuit has two drawbacks. After the speed has been adjusted for any load, it does not remain constant with a change in load. With external resistance in series with the rotor, the motor has a varying-speed characteristic. Considerable power is wasted in the external resistance required for changing the speed. The amount of power wasted depends upon the value of the external resistance. The efficiency of the motor is thus decreased approximately proportionally to the reduction in speed.

Speed control by means of adjustable secondary resistance is, however, very useful when constant speeds are not essential, for example, in operating cranes, hoists, elevators, and dredges and also for service in which the torque remains constant at each speed, as in driving fans, blowers, and centrifugal pumps. In service for which reduced speeds are required only occasionally and speed variation is not objectionable, this method of control can also be used to good advantage. On account of energy loss in the resistors, efficiency is reduced when the motor is operated at reduced speeds, the reduction being greatest at the slowest speeds. The circuits are essentially the same as for starting by varying resistance in the rotor circuit. The rotor usually has a Y-connected winding in which is connected, in series in each phase, an external resistance. If the adjustable arm is moved, the amount of resistance in series in each phase can be varied from a maximum to zero and the speed varied gradually from the highest speed to the lowest.

159. Speed control of induction motors by introduction of a foreign voltage into the secondary circuit. If a foreign voltage is introduced into the secondary circuit of an induction motor, it will alter the speed of the motor. If this foreign voltage acts in a direction opposite to that of the voltage induced in the secondary circuit, the speed of the motor will be reduced. If the foreign voltage acts in the same direction as the voltage induced in the secondary circuit, the speed of the motor will be increased. With this method of speed control it is possible to obtain speeds both above and below the synchronous speed of the motor. Speed control by the introduction of a foreign voltage into the secondary circuit has two advantages. No power is wasted in resistance, and the speed is practically constant for all loads with the same value of foreign voltage introduced.

The brush-shifting type of polyphase induction motors, as explained in Sec. 177, employs the foreign-voltage method of speed control. When the operating characteristics of these motors are applicable, the motors provide a very efficient means of obtaining adjustable speed for ac installations.

An electronic method of foreign-voltage speed control is feasible for medium-size and small motors. The diagram of the circuit for such a method is shown in Fig. 7.90. The arma-

ture of a dc motor is connected through a three-phase full-wave ignitron or thyatron rectifier to the rotor slip rings of the induction motor. This connection introduces the counter-emf of the dc motor into the rotor circuit of the induction motor. The value of the counter-emf of the dc motor is adjusted by adjustment of the field rheostat of the dc motor. The speed of the induction motor is therefore controlled through adjustment of the field rheostat of the dc motor. The dc motor may be coupled mechanically to the induction motor so that it helps to drive the load, or the dc motor may drive an ac generator so that the greater portion of the power taken by the dc motor is returned to the ac supply system.

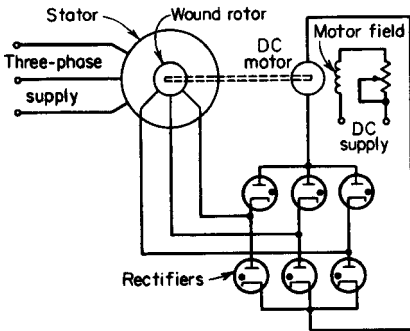


FIGURE 7.90 Control of a wound-motor induction motor using electronic means.

There are other methods of obtaining speed control by the foreign-voltage method, but all require additional revolving machines besides the motor itself. Their use is not feasible for ordinary applications, and they are employed in special cases for the speed control of large motors.

160. Speed control of polyphase motors by operating two or more motors connected in cascade offers, under some conditions of service, the most convenient and economical method of speed variation. In this arrangement all the rotors are mounted on one shaft, or the several shafts are rigidly connected. The primary of the first motor is connected to the line; its secondary, which must be of the phase-wound slipping type, is connected to the primary of the second motor, and so on. The secondary of the last motor can be of either the squirrel-cage or the phase-wound type. In practice more than two motors are rarely used. The arrangement is shown in Fig. 7.91.

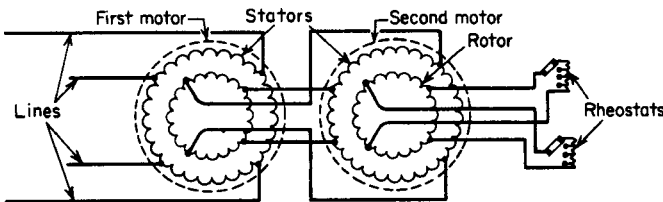


FIGURE 7.91 Two polyphase motors connected in cascade.

Speed changes are obtained by varying the connections of the motors. The following combinations are possible with two motors: each motor can be operated separately at its normal speed with its primary connected to the line, the other motor running idle; the motors can be connected in cascade so that the rotors tend to start in the same direction (direct concatenation); or the motors can be connected so that the rotors tend to start in opposite directions (differential concatenation). If the first motor has 12 poles and the second 4, the following synchronous speeds can be obtained on a 25-Hz circuit:

1. Motor 2 (4 poles) running single, 750 rpm
2. Motors in differential concatenation (equivalent of 8 poles), 375 rpm
3. Motor 1 (12 poles) running single, 250 rpm
4. Motors in direct concatenation (equivalent of 16 poles), 187.5 rpm

By the use of adjustable resistance in the secondary circuits, changes from one speed to the next can be made with uniform gradations.

A great number of speed combinations are possible with this method; the control is simple and safe, as few leads are required and main circuits are not opened for most of the speeds. The rotors can be made with smaller diameters than is possible with other multi-speed motors; hence the flywheel effect is reduced to a minimum. In general, a cascade set is applicable when speed changes must be made frequently with high horsepower output and primary voltage and when speed ratios are other than 1:2.

161. Application of the methods of speed control of induction motors. From the preceding sections, it is apparent that changing the speed of an induction motor by simple reduction of the impressed voltage (Sec. 155), changing the number of poles

(Sec. 156), changing the frequency of the primary current by changing generator speed (Sec. 157), adjusting the resistance of the secondary circuit (Sec. 158), introducing a foreign voltage into the secondary circuits (Sec. 159), and operating motors in cascade (Sec. 160) have very limited application. In recent years, however, rapid changes in the technology of solid-state electronics have resulted in the availability of electronic drive systems for ac induction motors that make speed control of such motors feasible for an increasing number of applications. Known as *electronic adjustable-speed drives* (ASDs), these systems are available in virtually any horsepower for all kinds of applications from many manufacturers. In all cases, the motor manufacturer should be consulted concerning the use of an ASD and the limits of ASD output characteristics that can be used.

In addition to controlling the speed of a motor at load, ASDs are available to control the motor during starting and stopping periods, providing controlled acceleration and deceleration, thus limiting the starting current and providing gentle startups and gradual shut-downs, to increase equipment life and reduce mechanical breakdowns. By matching motor speed to the requirements of the load, ASDs can save energy that mechanical devices, such as valves and vanes, would waste.

ASDs may change the input power from single-phase to three-phase, for the speed control of small three-phase motors from single-phase power supplies, or may control the pulse width of the single-phase supply, typically used for the speed control of ceiling-mounted paddle fans. Frequency control, within limits, may be combined with voltage control, with the lower frequency at low voltage and increasing frequency with increasing voltage.

Commonly, ASDs also include motor-overload protection, although additional external overload protection may be specified to meet Code requirements. Other functions, such as adjustable-load limitation, phase-failure protection, ASD component-failure protection, etc., may also be included.

For further information on the speed control of induction motors, refer to Secs. 289 and 321.

162. Classification of squirrel-cage induction medium motors. Polyphase squirrel-cage induction medium motors rated more than 1 hp were formerly called “integral horsepower” motors. Polyphase squirrel-cage induction medium motors are classified by NEMA standards into four design types as follows:

A Design A motor is a squirrel-cage motor designed to withstand full-voltage starting and developing locked-rotor and pull-up torque as shown in Sec. 164 and breakdown torque as shown in Sec. 165, with locked-rotor current higher than the values shown in Sec. 163 and having a slip at rated load of less than 5 percent.*

A Design B motor is a squirrel-cage motor designed to withstand full-voltage starting, developing locked-rotor, breakdown, and pull-up torques adequate for general application as specified in Secs. 164 and 165, drawing locked-rotor current not to exceed the values shown in Sec. 163 and having a slip at rated load of less than 5 percent.*

A Design C motor is a squirrel-cage motor designed to withstand full-voltage starting, developing locked-rotor torque for special high-torque application up to the values shown in Sec. 164, pull-up torque as shown in Sec. 164, and breakdown torque up to the values shown in Sec. 165, with locked-rotor current not to exceed the values shown in Sec. 163 and having a slip at rated load of less than 5 percent.

A Design D motor is a squirrel-cage motor designed to withstand full-voltage starting, developing high locked-rotor torque as shown in Sec. 164, with locked-rotor current not greater than shown in Sec. 163 and having a slip at rated load of 5 percent or more.

*Motors with 10 and more poles may have slip slightly greater than 5 percent

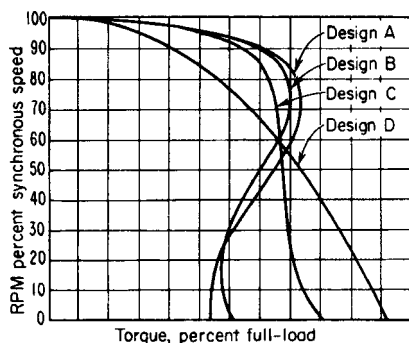


FIGURE 7.92 Typical speed-torque characteristics for squirrel-cage induction motors.

The former standard for *Design E* motors was rescinded by NEMA in February 2000. Typical speed-torque curves for the four design types are given in Fig. 7.92.

163. Locked-Rotor Current of Three-Phase 60-Hz Medium Squirrel-Cage Induction Motors Rated at 230 V (NEMA standard)*

The locked-rotor current of single-speed, three-phase, constant-speed induction motors, when measured with rated voltage and frequency impressed and with rotor locked, shall not exceed the following values:

hp	Locked rotor current, A [†]	Design letters	hp	Locked rotor current, A [†]	Design letters
1/2	20	B,D	50	725	B,C,D
3/4	25	B,D	60	870	B,C,D
1	30	B,D	75	1085	B,C,D
1 1/2	40	B,D	100	1450	B,C,D
2	50	B,D	125	1815	B,C,D
3	64	B,C,D	150	2170	B,C,D
5	92	B,C,D	200	2900	B,C
7 1/2	127	B,C,D	250	3650	B
10	162	B,C,D	300	4400	B
15	232	B,C,D	350	5100	B
20	290	B,C,D	400	5800	B
25	365	B,C,D	450	6500	B
30	435	B,C,D	500	7250	B
40	580	B,C,D			

*This material is reproduced with the permission of the National Electrical Manufacturers Association from NEMA Standards Publication MG 1-2006 copyright © 2006 by NEMA.

[†]Locked-rotor current of motors designed for voltages other than 230 V shall be inversely proportional to the voltages.

164. Locked-Rotor Torque of Single-Speed Polyphase Squirrel-Cage Medium Motors with Continuous Ratings (NEMA standard)*

1. The locked-rotor torque of Designs A and B, 60- and 50-Hz, single-speed, polyphase squirrel-cage medium motors, with rated voltage and frequency applied, shall be not less than the following values, which are expressed in percent of full-load torque requirements. For applications involving higher torque requirements, see the locked-rotor-torque values for Design C and D motors.

hp	Synchronous speeds, rpm							
	60 Hz	3600	1800	1200	900	720	600	514
	50 Hz	3000	1500	1000	750
1/2	140	140	115	110	
3/4	175	135	135	115	110	
1	...	275	170	135	135	115	110	
1 1/2	175	250	165	130	130	115	110	
2	170	235	160	130	125	115	110	
3	160	215	155	130	125	115	110	
5	150	185	150	130	125	115	110	
7 1/2	140	175	150	125	120	115	110	
10	135	165	150	125	120	115	110	
15	130	160	140	125	120	115	110	
20	130	150	135	125	120	115	110	
25	130	150	135	125	120	115	110	
30	130	150	135	125	120	115	110	
40	125	140	135	125	120	115	110	
50	120	140	135	125	120	115	110	
60	120	140	135	125	120	115	110	
75	105	140	135	125	120	115	110	
100	105	125	125	125	120	115	110	
125	100	110	125	120	115	115	110	
150	100	110	120	120	115	115		
200	100	100	120	120	115			
250	70	80	100	100				
300	70	80	100					
350	70	80	100					
400	70	80						
450	70	80						
500	70	80						

*This material is reproduced with the permission of the National Electrical Manufacturers Association from NEMA Standards Publication MG 1-2006 copyright © 2006 by NEMA.

2. The locked-rotor torque of Design C, 60- and 50-Hz, single-speed, polyphase squirrel-cage medium motors, with rated voltage and frequency applied, shall be not less than the following values, which are expressed in percent of full-load torque.

hp	Synchronous speeds, rpm			
	60 Hz	1800	1200	900
	50 Hz	1500	1000	750
1		285	255	225
1.5		285	250	225
2		285	250	225
3		...	250	225
5		250	250	225
7½		250	225	200
10		250	225	200
15		225	200	200
20–200, inclusive		200	200	200

3. The locked-rotor torque of Design D, 60- and 50-Hz, single-speed, polyphase squirrel-cage medium motors rated 150 hp and smaller, with rated voltage and frequency applied, shall be not less than 275 percent, expressed in percent of full-load torque.

4. The pull-up torque of Design A and B, single-speed polyphase squirrel-cage medium motors, with rated voltage and frequency applied, shall be not less than the following values which are expressed in percent of full-load torque.

hp	Synchronous speeds, rpm							
	60 Hz	3600	1800	1200	900	720	600	514
	50 Hz	3000	1500	1000	750
1/2		140	140	115	110
1/2		100	100	100	100
3/4		120	100	100	100	100
1		...	190	120	100	100	100	100
1 1/2		120	175	115	100	100	100	100
2		120	165	110	100	100	100	100
3		110	150	110	100	100	100	100
5		105	130	105	100	100	100	100
7 1/2		100	120	105	100	100	100	100
10		100	115	105	100	100	100	100
15		100	110	100	100	100	100	100
20		100	105	100	100	100	100	100
25		100	105	100	100	100	100	100
30		100	105	100	100	100	100	100
40		100	100	100	100	100	100	100
50		100	100	100	100	100	100	100
60		100	100	100	100	100	100	100
75		95	100	100	100	100	100	100
100		95	100	100	100	100	100	100
125		90	100	100	100	100	100	100
150		90	100	100	100	100	100	...
200		90	90	100	100	100
250		65	75	90	90
300		65	75	90
350		65	75	90
400		65	75
450		65	75
500		65	75

*This material is reproduced with the permission of the National Electrical Manufacturers Association from the NEMA Standards Publication MG 1-2006 copyright © 2006 by NEMA.

5. The pull-up torque of Design C motors, with rated voltage and frequency applied, shall be not less than the following values which are expressed in percent of full-load torque.

hp	Pull-up torque, percent of full-load torque			
	Synchronous speed, rpm			
	60 Hz	1800	1200	900
	50 Hz	1500	1000	750
1		195	180	165
1½		195	175	160
2		195	175	160
3		180	175	160
5		180	175	160
7½		175	165	150
10		175	165	150
15		165	150	140
20		165	150	140
25		150	150	140
30		150	150	140
40		150	150	140
50		150	150	140
60		140	140	140
75		140	140	140
100		140	140	140
125		140	140	140
150		140	140	140
200		140	140	140

*This material is reproduced with the permission of the National Electrical Manufacturers Association from the NEMA Standards Publication MG 1-2006, copyright © 2006 by NEMA.

165. Breakdown Torque of Single-Speed Polyphase Squirrel-Cage Medium Motors with Continuous Ratings (NEMA standard)*

1. The breakdown torque of Designs A and B, 60- and 50-Hz, single-speed, polyphase squirrel-cage medium motors, with rated voltage and frequency applied, shall be not less than the following values, which are expressed in percent of full-load torque.

hp	Synchronous speeds, rpm							
	60 Hz	3600	1800	1200	900	720	600	514
	50 Hz	3000	1500	1000	750
1/2		225	200	200	200
3/4		275	220	200	200	200
1		...	300	265	215	200	200	200
1 1/2		250	280	250	210	200	200	200
2		240	270	240	210	200	200	200
3		230	250	230	205	200	200	200
5		215	225	215	205	200	200	200
7 1/2		200	215	205	200	200	200	200
10–125, inclusive		200	200	200	200	200	200	200
150		200	200	200	200	200	200	
200		200	200	200	200	200		
250		175	175	175	175			
300–350		175	175	175				
400–500, inclusive		175	175					

2. The breakdown torque of Design C, 60- and 50-Hz, single-speed, polyphase squirrel-cage medium motors, with rated voltage and frequency applied, shall be not less than the following values, which are expressed in percent of full-load torque.

hp	Synchronous speeds, rpm			
	60 Hz	1800	1200	900
	50 Hz	1500	1000	750
1		200	225	200
1 1/2		200	225	200
2		200	225	200
3		200	225	200
5		200	200	200
7 1/2–20		200	190	190
25–200, inclusive		190	190	190

*This material is reproduced with the permission of the National Electrical Manufacturers Association from the NEMA Standards Publication MG 1-2006, copyright © 2006 by NEMA.

166. The Design A (normal-torque, normal-starting-current) motor is the old standard type of squirrel-cage induction motor. It is a constant-speed machine with a slip of from 2 to 5 percent at full load. It is not adapted for speed-control service. The starting torques with rated voltage applied are at least as great as given in Sec. 164.

The locked-rotor starting currents with rated voltage applied vary from 500 to 1000 percent of full-load current, the smaller values applying to motors with the larger number of poles.

The full-voltage starting currents of motors of 5 hp and smaller will be within the limitations of most power companies, so they are generally started directly across the line. Motors of larger size than 5 hp will have full-voltage starting currents that will not be within the limitations of some power companies and in such cases are started with reduced voltage.

The breakdown torques are from 175 to 300 percent of full-load torque.

167. The Design B (normal-torque, low-starting-current) squirrel-cage motor is so designed that its rotor has a high reactance and resistance at start but nearly normal reactance and resistance under running conditions. This enables this type of motor to produce approximately the same starting torque for a given voltage as the normal-torque, normal-starting-current motor but with a much smaller value of starting current.

The running performance will be very nearly but not quite so good as that of the normal-torque, normal-starting-current type, the efficiency, power factor, and breakdown torques being slightly less and the speed regulation slightly larger. The breakdown torques will be at least as great as those given in Sec. 165. The locked-rotor starting current with rated voltage applied will be not greater than that given in Sec. 163. The full-voltage starting currents of motors of 30 hp and smaller will be within the limitations of most power companies, so the motors are generally started directly across the line. Motors of larger size than 30 hp will have full-voltage starting currents that will not be within the limitations of many power companies and therefore frequently must be started with reduced voltage.

168. Design C (high-torque, low-starting-current) squirrel-cage induction motors are usually constructed with two squirrel-cage windings on the rotor, located one above the other in the rotor slots. During the starting period most of the current is carried by the top winding, which has a high resistance. This enables the motor to produce a larger starting torque with about the same value of starting current as the normal-torque, low-starting-current type of motor. After the motor has come up to speed, the two windings are equally effective in carrying the rotor current, and its operating characteristics are similar to those of the normal-torque, low-starting-current type of motor.

The locked-rotor starting currents with rated voltage applied will be not greater than those given in Sec. 163. The full-voltage starting current of motors of 30 hp and smaller will be within the limitations of most power companies, so they are generally started directly across the line. Motors of larger size than 30 hp will have full-voltage starting currents that will not be within the limitations of many power companies and therefore frequently must be started with reduced voltage. The starting torques with rated voltage impressed will be at least as great as those given in Sec. 164, Part 2. The breakdown torques will be at least as great as those given in Sec. 165.

169. The Design D (high-resistance-rotor) squirrel-cage motor, owing to the high resistance of its rotor winding, produces a high starting torque with a low value of starting current.

These motors are made in two general types, which may be classified as medium-slip and high-slip. The medium-slip motors have full-load slips from 7 to 11 percent, while the high-slip machines have full-load slips from 12 to 17 percent. The medium-slip motors are suitable for driving punch presses, shears, bulldozers, and other heavy-inertia machinery which operates under heavy, fluctuating-load conditions and which is either provided with flywheels or has a flywheel effect. These motors have full-voltage starting torques of at least 275 percent of full-load torque and full-voltage starting currents which will be not greater than those given in Sec. 163. The maximum torque of the motor occurs at standstill, so there is no noticeable breakdown torque. The full-voltage starting currents are within the limitations of most power companies. Reduced-voltage starting would not as a rule be satisfactory because of the nature of the application of these motors.

The high-slip motors are designed for meeting the requirements of elevator drive and small cranes and hoists. These motors have full-voltage starting torques of at least 275 percent of full-load torque and full-voltage starting currents which will be not greater than those given in Sec. 163. Their full-voltage starting currents meet the limitations of practically all power companies. Like the medium-slip motors, they have no breakdown torque. Owing to the nature of their application, reduced-voltage starting would not be satisfactory.

170. Derating for harmonic content (NEMA MG 1-2006).* Harmonic currents are introduced when the line voltages applied to a polyphase induction motor include voltage components at frequencies other than nominal (fundamental) frequency of the supply. Consequently, the temperature rise of the motor operating at a particular load and per unit voltage harmonic factor will be greater than that for the motor operating under the same conditions with only voltage at the fundamental frequency applied.

When a motor is operated at its rated conditions and the voltage applied to the motor consists of components at frequencies other than the nominal frequency, the rated horsepower of the motor should be multiplied by the factor shown in Fig. 7.92A to reduce the possibility of damage to the motor. This curve is developed under the assumption that only harmonics equal to odd multiples (except those divisible by three) of the fundamental frequency are present. It is assumed that any voltage unbalance or any even harmonics, or both, present in the voltage are negligible. This derating curve is not intended to apply when

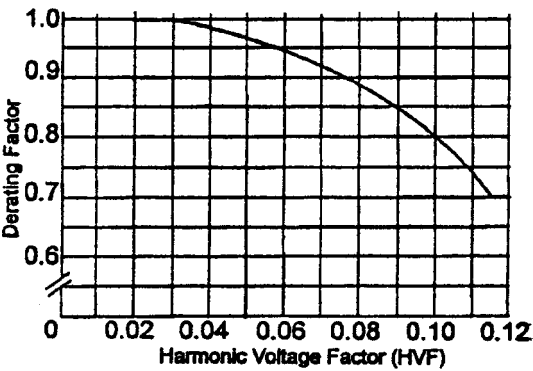


FIGURE 7.92A Proposed derating curve for harmonic voltages.

*This material is reproduced with the permission of the National Electrical Manufacturers Association from the NEMA Standards Publication MG 1-2006 copyright © 2006 by NEMA.

the motor is operated at other than its rated frequency nor when operated from a variable voltage or a variable frequency power supply, or both.

The harmonic voltage factor (HVF) is defined as follows:

$$\sqrt{\sum_{n=5}^{n=\infty} \frac{(V_n)^2}{n}}$$

where n = order of odd harmonic, not including those divisible by three

V_n = the per-unit magnitude of the voltage at the n th harmonic frequency

EXAMPLE With per-unit voltages of 0.10, 0.07, 0.045, and 0.036 occurring at the 5, 7, 11, and 13th harmonics, respectively, the value of the HVF is:

$$\sqrt{\frac{0.10^2}{5} + \frac{0.07^2}{7} + \frac{0.045^2}{11} + \frac{0.036^2}{13}} = 0.0546$$

171. Automatic-start induction motors are so arranged that they start with a high-resistance rotor and, after coming up to speed, are automatically changed to have a low-resistance rotor. At start approximately one-third of the rotor copper is in service.

These motors are made in two types. In one type the machine is of generally normal construction but with two rotor windings, one of high resistance and the other of low resistance. At standstill the low-resistance rotor winding is open-circuited so that only the high-resistance winding is in service. As the motor speeds up, a centrifugal device short-circuits the low-resistance winding so that both windings are in service.

In the other type of motor the primary winding is located on the rotor. There are two secondary windings located on the stator, one of high resistance and the other of low resistance. The functioning of the two windings is controlled by magnetic switches so that there is no centrifugal device. The low-resistance winding is of the wound type, and the high-resistance one is a squirrel-cage winding. In starting, a magnetic contactor connects the primary to the line, with the low-resistance winding open-circuited. After a certain lapse of time, a second contactor closes, short-circuiting the low-resistance winding.

These automatic-start motors are started on full voltage and have starting torques from 225 to 250 percent of full-load torque, with starting currents from 350 to 375 percent of full-load current. Their breakdown torques vary from 200 to 250 percent of full-load torque, and they have pull-in torques of from 150 to 200 percent of full-load torque. They are suitable for high-starting-torque duty when starting periods are not too frequent or of too long duration, as in compressors and air-conditioning-equipment service. They can be used in many places where power companies will not allow the starting currents drawn by high-torque, low-starting-current motors when thrown directly across the line.

172. Multispeed induction motors are squirrel-cage induction motors constructed so that the number of poles for which the stator is wound can be altered. Since the speed of an induction motor depends upon the number of poles for which the stator is wound, changing the number will alter the speed of the motor. The change in the number of poles is produced either by means of entirely separate windings or by a change in the interconnections of the different parts of a single winding. In either case the necessary leads are brought out from the stator winding to a drum controller through which the necessary change in connections is made. A gradual speed control is not possible with the multispeed motor. Motors of this type which can

be operated at two, three, or four different speeds can be obtained. Four speeds are the maximum for which it is feasible to construct multispeed induction motors. To design and construct a machine for more than four speeds would require too many complications in the wiring.

Multispeed induction motors have a practically constant speed from no load to full load for each one of their rated speed connections. They are available in all the following types:

- 1. Normal-torque, normal-starting-current
- 2. Normal-torque, low-starting-current
- 3. High-torque, low-starting-current
- 4. Low-torque, low-starting-current
- 5. High-resistance, medium- or high-slip

Multispeed induction motors may be designed and rated for constant-torque service, constant-horsepower service, or varying-torque, varying-horsepower service. The allowable rating of constant-torque motors varies directly with the speed. Constant-horsepower motors have the same rated horsepower for all speeds. With varying-torque, varying-horsepower motors the full-load rated torque varies directly with the speed. The horsepower rating of these machines therefore varies as the square of the speed.

173. Efficiency of Squirrel-Cage Induction Motors (see Sec. 152)

- 1. Efficiency of Polyphase Squirrel-Cage Medium Motors with Continuous Ratings.* The full-load efficiency of Design A and B single-speed polyphase squirrel-cage medium motors in the range of 1 through 400 hp for frames assigned in accordance with NEMA Standards Publication No. MG 13, above 250 hp up to and including 500 hp, and equivalent Design C ratings shall be identified on the nameplate by a nominal efficiency selected from the Nominal Efficiency column in Table 1 which shall not be greater than the average efficiency of a large population of motors of the same design.

TABLE 1 Efficiency Levels

Nominal efficiency	Minimum efficiency based on 20% loss difference
99.0	98.8
98.9	98.7
98.8	98.6
98.7	98.5
98.6	98.4
98.5	98.2
98.4	98.0
98.2	97.8
98.0	97.6
97.8	97.4
97.6	97.1
97.4	96.8
97.1	96.5
96.8	96.2
96.5	95.8

96.2	95.4
95.8	95.0
95.4	94.5
95.0	94.1
94.5	93.6
94.1	93.0
93.6	92.4
93.0	91.7
92.4	91.0
91.7	90.2
91.0	89.5
90.2	88.5
89.5	87.5
88.5	86.5
87.5	85.5
86.5	84.0
85.5	82.5
84.0	81.5
82.5	80.0
81.5	78.5
80.0	77.0
78.5	75.5
77.0	74.0
75.5	73.0
74.0	70.0
72.0	68.0
70.0	66.0
68.0	64.0
66.0	62.0
64.0	59.5
62.0	57.5
59.5	55.0
57.5	52.5
55.0	50.5
52.5	48.0
50.5	46.0

*This material is reproduced with the permission of the National Electrical Manufacturers Association from the NEMA Standards Publication MG 1-2006 copyright © 2006 by NEMA.

The efficiency shall be identified on the nameplate by the caption “NEMA Nominal Efficiency” or “NEMA Nom. Eff.”

The full-load efficiency, when operating at rated voltage and frequency, shall be not less than the minimum value indicated in Column B of Table 1 associated with the nominal value in Column A.

Variations in materials, manufacturing processes, and tests result in motor-to-motor efficiency variations for a given motor design; the full-load efficiency for a large population of motor of a single design is not a unique efficiency but rather a band of efficiency. Therefore, Table 1 has been established to indicate a logical series of nominal motor efficiencies and the minimum associated with each nominal. The nominal efficiency represents a value which should be used to compute the energy consumption of a motor or group of motors.

2. Efficiency Levels of Energy-Efficient Polyphase Squirrel-Cage Induction Motors. The nominal full-load efficiency of polyphase squirrel-cage induction motors rated 600 V or less, identified on the nameplate as “energy efficient” and having a corresponding minimum efficiency in accordance with Column B of Table 1 shall equal or exceed the values listed in Table 2 for the motor to be classified as “energy efficient.”

TABLE 2 Full-Load Efficiencies of Energy-Efficient Motors

Open Motors								
hp	2 Pole		4 Pole		6 Pole		8 Pole	
	Nominal efficiency	Minimum efficiency	Nominal efficiency	Minimum efficiency	Nominal efficiency	Minimum efficiency	Nominal efficiency	Minimum efficiency
1.0	—	—	82.5	80.0	80.0	77.0	74.0	70.0
1.5	82.5	80.0	84.0	81.5	84.0	81.5	75.5	72.0
2.0	84.0	81.5	84.0	81.5	85.5	82.5	85.5	82.5
3.0	84.0	81.5	86.5	84.0	86.5	84.0	86.5	84.0
5.0	85.5	82.5	87.5	85.5	87.5	85.5	87.5	85.5
7.5	87.5	85.5	88.5	86.5	88.5	86.5	88.5	86.5
10.0	88.5	86.5	89.5	87.5	90.2	88.5	89.5	87.5
15.0	89.5	87.5	91.0	89.5	90.2	88.5	89.5	87.5
20.0	90.2	88.5	91.0	89.5	91.0	89.5	90.2	88.5
25.0	91.0	89.5	91.7	90.2	91.7	90.2	90.2	88.5
30.0	91.0	89.5	92.4	91.0	92.4	91.0	91.0	89.5
40.0	91.7	90.2	93.0	91.7	93.0	91.7	91.0	89.5
50.0	92.4	91.0	93.0	91.7	93.0	91.7	91.7	90.2
60.0	93.0	91.7	93.6	92.4	93.6	92.4	92.4	91.0
75.0	93.0	91.7	94.1	93.0	93.6	92.4	93.6	92.4
100.0	93.0	91.7	94.1	93.0	94.1	93.0	93.6	92.4
125.0	93.6	92.4	94.5	93.6	94.1	93.0	93.6	92.4
150.0	93.6	92.4	95.0	94.1	94.5	93.6	93.6	92.4
200.0	94.5	93.6	95.0	94.1	94.5	93.6	93.6	92.4
250.0	94.5	93.6	95.4	94.5	95.4	94.5	94.5	93.6
300.0	95.0	94.1	95.4	94.5	95.4	94.5	—	—
350.0	95.0	94.1	95.4	94.5	95.4	94.5	—	—
400.0	95.4	94.5	95.4	94.5	—	—	—	—
450.0	95.8	95.0	95.8	95.0	—	—	—	—
500.0	95.8	95.0	95.8	95.0	—	—	—	—

Enclosed Motors								
hp	2 Pole		4 Pole		6 Pole		8 Pole	
	Nominal efficiency	Minimum efficiency	Nominal efficiency	Minimum efficiency	Nominal efficiency	Minimum efficiency	Nominal efficiency	Minimum efficiency
1.0	75.5	72.0	82.5	80.0	80.0	77.0	74.0	70.0
1.5	82.5	80.0	84.0	81.5	85.5	82.5	77.0	74.0
2.0	84.0	81.5	84.0	81.5	86.5	84.0	82.5	80.0
3.0	85.5	82.5	87.5	85.5	87.5	85.5	84.0	81.5
5.0	87.5	85.5	87.5	85.5	87.5	85.5	85.5	82.5
7.5	88.5	86.5	89.5	87.5	89.5	87.5	85.5	82.5
10.0	89.5	87.5	89.5	87.5	89.5	87.5	88.5	86.5
15.0	90.2	88.5	91.0	89.5	90.2	88.5	88.5	86.5
20.0	90.2	88.5	91.0	89.5	90.2	88.5	89.5	87.5
25.0	91.0	89.5	92.4	91.0	91.7	90.2	89.5	87.5
30.0	91.0	89.5	92.4	91.0	91.7	90.2	91.0	89.5
40.0	91.7	90.2	93.0	91.7	93.0	91.7	91.0	89.5
50.0	92.4	91.0	93.0	91.7	93.0	91.7	91.7	90.2
60.0	93.0	91.7	93.6	92.4	93.6	92.4	91.7	90.2
75.0	93.0	91.7	94.1	93.0	93.6	92.4	93.0	91.7
100.0	93.6	92.4	94.5	93.6	94.1	93.0	93.0	91.7
125.0	94.5	93.6	94.5	93.6	94.1	93.0	93.6	92.4
150.0	94.5	93.6	95.0	94.1	95.0	94.1	93.6	92.4
200.0	95.0	94.1	95.0	94.1	95.0	94.1	94.1	93.0
250.0	95.4	94.5	95.0	94.1	95.0	94.1	94.5	93.6
300.0	95.4	94.5	95.4	94.5	95.0	94.1	—	—
350.0	95.4	94.5	95.4	94.5	95.0	94.1	—	—
400.0	95.4	94.5	95.4	94.5	—	—	—	—
450.0	95.4	94.5	95.4	94.5	—	—	—	—
500.0	95.4	94.5	95.8	95.0	—	—	—	—

*This material is reproduced with the permission of the National Electrical Manufacturers Association from the NEMA Standards Publication MG 1-2006 copyright © 2006 by NEMA.

3. Efficiency Levels of NEMA* Premium Efficiency Electric Motors. The nominal full-load efficiency of random wound NEMA Premium Efficiency electric motors rated 600 V or less, identified on the nameplate by the caption "NEMA Nominal Efficiency" or "NEMA Nom. Eff." and having a corresponding minimum efficiency in accordance with Column B of Table 1 shall equal or exceed the values listed in Table 3.

TABLE 3 Full-Load Efficiencies for NEMA Premium Efficiency Electric Motors Rated 600 V or Less (Random Wound)

Open Motors						
hp	2 Pole		4 Pole		6 Pole	
	Nominal efficiency	Minimum efficiency	Nominal efficiency	Minimum efficiency	Nominal efficiency	Minimum efficiency
1.0	77.0	74.0	86.5	82.5	82.5	80.0
1.5	84.0	81.5	86.5	84.0	86.5	84.0
2.0	85.5	82.5	86.5	84.0	87.5	85.5
3.0	85.5	82.5	89.5	87.5	88.5	86.5
5.0	86.5	84.0	89.5	87.5	89.5	87.5
7.5	88.5	86.5	91.0	89.5	90.2	88.5
10.0	89.5	87.5	91.7	90.2	91.7	90.2
15.0	90.2	88.5	93.0	91.7	92.4	90.2
20.0	91.0	89.5	93.0	91.7	92.4	91.0
25.0	91.7	90.2	93.6	92.4	93.0	91.7
30.0	91.7	90.2	94.1	93.0	93.6	92.4
40.0	92.4	91.0	94.1	93.0	94.1	93.0
50.0	93.0	91.7	94.5	93.6	94.1	93.0
60.0	93.6	92.4	95.0	94.1	94.5	93.6
75.0	93.6	92.4	95.0	94.1	94.5	93.6
100.0	93.6	92.4	95.4	94.5	95.0	94.1
125.0	94.1	93.0	95.4	94.5	95.0	94.1
150.0	94.1	93.0	95.8	95.0	95.4	94.5
200.0	95.0	94.1	95.8	95.0	95.4	94.5
250.0	95.0	94.1	95.8	95.0	95.4	94.5
300.0	95.4	94.5	95.8	95.0	95.4	94.5
350.0	95.4	94.5	95.8	95.0	95.4	94.5
400.0	95.8	95.0	95.8	95.0	95.8	95.0
450.0	95.8	95.0	96.2	95.4	96.2	95.4
500.0	95.8	95.0	96.2	95.4	96.2	95.4

Enclosed Motors						
hp	2 Pole		4 Pole		6 Pole	
	Nominal efficiency	Minimum efficiency	Nominal efficiency	Minimum efficiency	Nominal efficiency	Minimum efficiency
1.0	77.0	74.0	85.5	82.5	82.5	80.0
1.5	84.0	81.5	86.5	84.0	87.5	85.5
2.0	85.5	82.5	86.5	84.0	88.5	86.5
3.0	86.5	84.0	89.5	87.5	89.5	87.5
5.0	88.5	86.5	89.5	87.5	89.5	87.5
7.5	89.5	87.5	91.7	90.2	91.0	89.5
10.0	90.2	88.5	91.7	90.2	91.0	89.5
15.0	91.0	89.5	92.4	91.0	91.7	90.2
20.0	91.0	89.5	93.0	91.7	91.7	90.2
25.0	91.7	90.2	93.6	92.4	93.0	91.7
30.0	91.7	90.2	93.6	92.4	93.0	91.7
40.0	92.4	91.0	94.1	93.0	94.1	93.0
50.0	93.0	91.7	94.5	93.6	94.1	93.0
60.0	93.6	92.4	95.0	94.1	94.5	93.6
75.0	93.6	92.4	95.4	94.5	94.5	93.6
100.0	94.1	93.0	95.4	94.5	95.0	94.1
125.0	95.0	94.1	95.4	94.5	95.0	94.1
150.0	95.0	94.1	95.8	95.0	95.8	95.0
200.0	95.4	94.5	96.2	95.4	95.8	95.0
250.0	95.8	95.0	96.2	95.4	95.8	95.0
300.0	95.8	95.0	96.2	95.4	95.8	95.0
350.0	95.8	95.0	96.2	95.4	95.8	95.0
400.0	95.8	95.0	96.2	95.4	95.8	95.0
450.0	95.8	95.0	96.2	95.4	95.8	95.0
500.0	95.8	95.0	96.2	95.4	95.8	95.0

*This material is reproduced with the permission of the National Electrical Manufacturers Association from the NEMA Standards Publication MG 1-2006 copyright © 2006 by NEMA.

174. Wound-rotor induction motors, when operated without external resistance in the rotor circuit and with the slip rings short-circuited, have operating characteristics similar to those of normal-torque, normal-starting-current squirrel-cage machine. If external resistance is inserted in the rotor circuit, the speed of the motor can be controlled. With load on the motor the speed can be controlled over a wide range. At no load and with light loads on the motor, it is possible to obtain only slight changes in the speed. When the speed is adjusted for any particular load, the speed does not stay constant as the load varies but decreases considerably as the load increases. The amount that the speed drops off from no load to full load depends upon the amount of external resistance in the rotor circuit; the greater the resistance, the greater the speed change. The characteristics of the wound-rotor motor operating with external resistance in the rotor circuit are similar to those for a dc motor with armature control. Considerable energy is lost in the external resistance, the efficiency of the motor being reduced approximately in proportion to the reduction in speed produced. Wound-rotor motors are started by throwing the stator directly across the line with external resistance in the rotor circuit. The value of the starting torque developed and the corresponding starting current depends upon the amount of external resistance in the rotor circuit (see Secs. 150 and 153). The breakdown torque of a wound-rotor motor will

be at least as large as the figures given in Sec. 176. With the proper amount of external resistance in the rotor to produce a maximum torque at standstill, the starting current will be from 250 to 300 percent of the full-load current. The maximum value of the starting torque will be from 200 to 275 percent of full-load torque.

Wound-rotor motors with speed control are constant-torque machines, the horsepower decreasing in proportion to the decrease in speed.

175. Average Efficiencies and Power Factors for Polyphase Wound-Rotor Induction Motors (with Rotor Short-Circuited)

hp	Efficiency			Power factor		
	1/2 load	3/4 load	Full load	1/2 load	3/4 load	Full load
2	71.0	75.0	75.5	40	52	60
3	75.0	78.0	79.0	50	68	70
5	78.0	80.0	80.5	60	75	77
7 1/2	78.5	81.0	81.5	65	75	78
10	80.0	82.0	82.5	65	75	79
15	80.0	82.0	82.5	65	75	79
20	84.0	85.5	86.0	70	76.5	81
25	86.0	88.0	88.0	70	77	81
30	86.0	88.0	88.0	72	78	82
40	86.0	88.0	88.0	72	78	82
50	86.0	88.0	88.0	78	84	86
60	86.5	88.5	88.5	79	85	88
75	88.0	88.0	88.8	82	87	89

176. Breakdown Torque of Polyphase Wound-Rotor Medium Motors with Continuous Ratings

(NEMA standard)*

The breakdown torques of 60- and 50-Hz polyphase wound-rotor medium motors, with rated voltage and frequency applied, shall be not less than the following values, which are expressed in percent of full-load torque.

		Breakdown torque, percent of full-load torque		
		Synchronous speeds, rpm		
		1800	1200	900
hp	60 Hz			
	50 Hz	1500	1000	750
1		250
1 1/2		250
2		275	275	250
3		275	275	250
5		275	275	250
7 1/2		275	275	225
10		275	250	225
15		250	225	225
20–200, inclusive		225	225	225

*This material is reproduced with the permission of the National Electrical Manufacturers Association from the NEMA Standards Publication MG 1-2006 copyright © 2006 by NEMA.

177. In the commutator brush-shifting type of polyphase induction motor, the relative location of the two windings is reversed from that of the ordinary induction motor. The primary winding, the winding that is connected to the supply, is located on the rotor. The secondary winding is placed in the stator slots. In addition to the primary winding, the rotor carries a commutator in the same manner as in a dc motor. The two ends of each phase of the secondary winding (the stationary winding) are connected to two brushes bearing upon the commutator. The arrangement and connection of the windings are indicated in Fig. 7.93. The position of the two brushes of each phase can be shifted by means of a handwheel. When the handwheel is adjusted so that the brushes of each phase are on the same commutator segment, the secondary winding is short-circuited and the motor operates like a squirrel-cage machine. As the brushes are moved apart, a section of the adjusting winding is placed in series with the secondary winding. This impresses upon the secondary an additional voltage to the one induced in it by the revolving magnetic field. If the brushes are moved in one direction, the voltage impressed by the adjusting winding will oppose the normal induced voltage. Such a shift of the brushes will therefore reduce the speed of the machine. A shifting of the brushes in the opposite direction causes the voltage from the adjusting winding to aid the normal induced voltage in the secondary and thus increases the speed of the motor. These machines are designed to give a speed range of 3:1. The highest speed is approximately 40 percent above synchronous speed, and the lowest speed is approximately 60 percent below synchronous speed. The decrease in speed from no load to full load is from 5 to 10 percent at the high speeds and from 15 to 25 percent at the low speeds. Very low, creeping speeds can be obtained by inserting resistance in the rotor circuit.

These brush-shifting motors are rated on a constant-torque basis, so that the horsepower rating decreases with the speed. The breakdown torque at low speeds is from 140 to 250 percent of full-load torque. The breakdown torque increases somewhat with the speed, so that at high speed it is from 300 to 400 percent of normal torque.

These motors are started by connecting the primary directly to the line with the brushes in the low-speed position. In this way they will develop a starting torque of from 140 to 150 percent of full-load torque with a starting current of from 125 to 175 percent of full-load current for the maximum horsepower rating. In some special cases, resistance is connected in series with the secondary for starting.

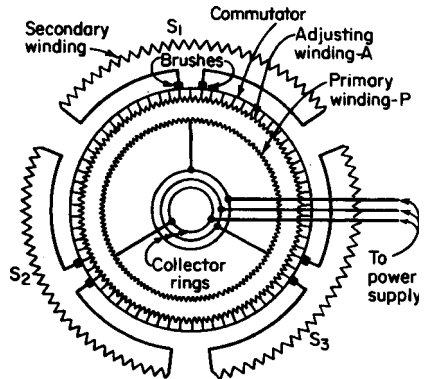


FIGURE 7.93 Commutator type of polyphase induction motor. [General Electric Co.]

178. Synchros are special ac motors employed for:

1. Remote indication of position, such as indicating the position of generator rheostats, waterwheel governors, water-reservoir levels, gates or valves, and turntables
2. Remote signaling systems, such as signaling from switchboard to generator room or from steel-mill furnace to blower room and marine signals between engine room and bridge
3. Automatic or remote position control, such as system frequency, synchronizing of incoming generators, waterwheel governors, gates or valves, color screens on lights in theaters, and motor drives (see Sec. 144)

4. Operation of two machines so as to maintain a definite time-position relation or a definite speed relation, as in lift bridges, hoists, kiln drives, elevators, unit printing presses, and conveyors

Synchros are known by various trade names such as Selsyn, Synchrotie, Auto-syn, and Telegon. Units are available in single-phase and three-phase types. The polyphase units conform in appearance and general characteristics to a three-phase wound-rotor induction motor. The single-phase units have a three-phase wound secondary and a single-phase primary. Some single-phase units are constructed with the primary located on the stationary member of the machine, and others with the primary on the movable member. Depending upon the torque developed by the machine, synchros are classified as indicating synchros or power synchros. Power synchros are always of three-phase construction. Most of the indicating synchros are constructed single-phase. Indicating synchros are manufactured in a general-purpose type and a high-accuracy type. The general-purpose type will indicate angular position within an accuracy of plus or minus 5° , and the high-accuracy type provides an accuracy of indication within plus or minus 1° .

A synchro system requires the use of at least two synchro machines. The connections for two single-phase units are shown in Fig. 7.94, and those for two three-phase units in Fig. 7.95. With both the single-phase and the polyphase units, if the rotors of the two machines are in corresponding positions, the voltages of the two secondaries at each instant of time will be equal in magnitude and opposite in direction. Therefore, no current will flow in the rotor circuits, no torque will be developed in either machine, and the machines will be in equilibrium. When the two rotors are not in corresponding positions, the voltages of the two secondaries will not neutralize each other and a current will be produced in the two secondaries. This current will produce torque in the machines, which will act upon the rotors, tending to move them into corresponding positions.

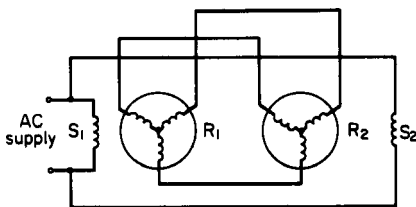


FIGURE 7.94 Circuit for two single-phase synchros.

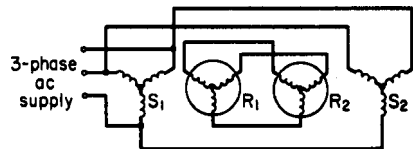


FIGURE 7.95 Circuit for two three-phase synchros.

In signaling or indicating applications the synchro located at the sending end is called the *transmitter*, and the synchro at the receiving end is called the *receiver*. If desired, a number of receivers can be connected in parallel to a single transmitter. The torque exerted upon each receiver will be reduced from that available when only one receiver is used. The torque can be calculated from the following formula:

$$T_r = T_1 \times \frac{2}{N + 1} \quad (5d)$$

where T_r is the torque available at each receiver

T_1 is the torque available if only one receiver is used

N is the number of receivers

When the position taken by the receiver differs from that of the transmitter, a three-phase synchro is introduced between the transmitter and the receiver. This intermediate synchro is called a *differential synchro*. With such a system, the receiver will take up a position that will be either the sum or the difference of the angles applied to the transmitter and the differential. Conversely, if two synchros are connected through a differential synchro and each is turned through an angle, the differential synchro will indicate the difference between the two angles.

The fundamental synchro control circuit generally used for control purposes is shown in Fig. 7.96. When the positions of the rotors coincide, a maximum voltage will be induced in stator S_2 . When the rotors are displaced 90 electrical degrees from each other, no resultant voltage will be produced between the terminals of S_2 .

This is true since the axis of the winding S_2 will be located 90 electrical degrees from the axis of the field produced in machine 2. The system is adjusted so that when the desired condition exists, the rotors will be displaced 90 electrical degrees from each other. This is the equilibrium position. The circuit therefore functions to produce an error voltage in the stator of machine 2 whenever there is a displacement of the shafts from the equilibrium position. The relative polarity of the error voltage depends upon the direction of the displacement. The error voltage can be employed to instigate the functioning of other devices, which will operate to correct the condition causing the displacement. These correction devices will function until the synchros are brought into the equilibrium position, when absence of voltage in S_2 will stop their functioning. Refer to Sec. 144 for the application of synchros in position drive control.




FIGURE 7.96 Fundamental synchro control circuit for the production of an error voltage.

179. Synchronous motors. The general construction of a synchronous motor is the same as that of synchronous ac generators with the addition of an auxiliary winding similar to either the squirrel-cage or the wound-rotor winding of an induction motor embedded in the pole faces. The purpose of the auxiliary winding is to produce starting torque so that the motor will be self-starting. A synchronous motor will not develop starting torque through synchronous-motor action. A synchronous motor is started without dc field excitation by induction-motor action through its auxiliary winding. As the motor comes up to speed and dc excitation voltage is applied to its field winding, a pull-in torque is developed, tending to pull the motor into step. If the inertia of the load is not too great, this pull-in torque will accelerate the motor to synchronous speed, and it will continue to operate as a synchronous motor. As long as the motor runs at synchronous speed, the auxiliary winding will be inactive, since no voltage will be produced in the auxiliary winding under this condition. If the motor should instantaneously tend to run at a speed slightly greater or less than synchronous, a voltage is produced in the auxiliary winding, causing a flow of current. This current will produce a torque which will act to bring the motor back to synchronous speed. The auxiliary winding, in addition to furnishing a means of making the motor self-starting, therefore provides a dampening effect tending to eliminate instantaneous fluctuations of the speed.

A synchronous motor has two very important characteristics. It operates at constant speed, and its power factor is under the control of the operator. If the average speed of a synchronous motor deviates from synchronism, the motor pulls out of step and ceases to function as a synchronous motor. The power factor, unlike that of an induction motor, is not a fixed value dependent upon the design and load. It depends upon the value of the direct field current and can be adjusted by the operator to a leading, unity, or lagging power-factor value. For any particular load a certain field current will make the motor operate at

unity power factor. This value of field current is called *normal excitation*. A field current less than normal excitation will produce a lagging power factor, and a field current more than normal will produce a leading power factor.

180. A synchronous motor can be used to correct low power factor of the system that feeds it in addition to driving a mechanical load provided it has sufficient capacity. This characteristic is often of considerable importance. It is well known that the power factor of the induction motor, even under full-load condition, is seldom greater than 95 percent, and it often falls as low as 50 or 60 percent at light load. The result is that an ac generator driving a considerable number of induction motors ordinarily operates at a comparatively low power factor. If this alternator is loaded to its full kilowatt capacity at such a low power factor, over-heating will result.

If the alternator is not loaded beyond its normal current capacity, it operates at a low energy load but with the same heating losses as at full load on account of the reduced power factor. The advantage of the synchronous motor on such a system is that by proper adjustment of its field current it can be made to draw from the line a current which is leading with respect to the voltage and which will neutralize the lagging current taken by the induction motors. The current in the ac generator can thereby be brought into phase with the voltage, and the generator will operate under its normal conditions. When used in this manner as a compensator for lagging current, the synchronous motor must be of larger size than required by its power output on account of the excess current which it draws from the line.

A *synchronous condenser* is a synchronous motor that operates only to correct the power factor and does not pull any mechanical load.

181. Classification of synchronous motors

1. According to power-factor rating
 - a. 1.0 (unity)-power-factor
 - b. 0.8 (leading)-power-factor
2. According to speed
 - a. High-speed
 - b. Low-speed
3. According to service
 - a. General-purpose
 - b. Special-purpose

The horsepower ratings of synchronous motors are based on unity or 0.8-pf operation. A unity power-factor motor is designed to carry its rated horsepower load when operating at unity power factor. An 0.8-pf motor is designed to carry its rated horsepower load when operating at 0.8 pf leading. Either a unity- or an 0.8-pf-rated motor can be operated at power factors below their rated amount provided the horsepower output is reduced below the rated value by a sufficient amount so that the machine will not be overheated in operation.

Synchronous motors are divided into two groups according to the value of their rated speed. Motors with speeds of 500 rpm or greater are called *high-speed motors*, and those with speeds below 500 rpm are classed as *low-speed motors*.

182. General-purpose synchronous motors are rated on a 40°C temperature-rise basis with a service factor of 1.15 (see Sec. 130). When started with full voltage, these motors will have starting kVA inrushes of from 550 to 700 percent of the motor's normal kVA rating. Normal torque values for these motors are given in Sec. 184. The pull-in torques as given in Sec. 184 are based on the standardized normal Wk^2 of load.

183. Operation at Other Than Rated Power Factors (NEMA standard)*

1. For an 0.8-pf motor which is to operate at 1.0 pf with normal 0.8-pf armature current and with field excitation reduced to correspond to that armature current at 1.0 pf, multiply the rated horsepower and torque values of the motor by the following constants to obtain the horsepower at 1.0 pf and the torques in terms of the 1.0-pf horsepower rating:

Horsepower	1.25
Locked-rotor torques	0.8
Pull-in torque	0.8
Pullout torque (approximate)	0.6

For example, consider a 1000-hp, 0.8-pf motor which has a locked-rotor torque of 100 percent, a pull-in torque of 100 percent, and a pullout torque of 200 percent and which is to be operated at 1.0 pf. In accordance with the foregoing, this motor could be operated at 1250 hp, 1.0 pf, 80 percent locked-rotor torque (based upon 1250 hp), 80 percent pull-in torque (based upon 1250 hp), and a pullout torque of approximately 120 percent (based upon 1250 hp).

2. For a 1.0-pf motor which is to operate at 0.8 pf with normal 1.0-pf field excitation and the armature current reduced to correspond to that excitation, multiply the rated horsepower and torque values of the motor by the following constants to obtain the horsepower at 0.8 pf and the torques in terms of the 0.8-pf horsepower rating:

Horsepower	0.35
Locked-rotor torques	2.85
Pull-in torque	2.85
Pullout torque (approximate)	2.85

For example, consider a 1000-hp, 1.0-pf motor which has a locked-rotor torque of 100 percent, a pull-in torque of 100 percent, and a pullout torque of 200 percent and which is to be operated at 0.8 pf. In accordance with the foregoing, this motor could be operated at 350 hp, 0.8 pf, 285 percent locked-rotor torque (based upon 350 hp), 285 percent pull-in torque (based upon 350 hp), and a pullout torque of approximately 570 percent (based upon 350 hp).

*This material is reproduced with the permission of the National Electrical Manufacturers Association from the NEMA Standards Publication MG 1-2006 copyright © 2006 by NEMA.

184. Minimum-Torque Values for Synchronous Motors

(NEMA standard)*

The locked-rotor, pull-in, and pullout torques (motors shall be capable of delivering pull-out torque for at least 1 min), with rated voltage and frequency applied, shall be not less than the following:

Torques, percent of rated full-load torque					
Speed, rpm	hp	Power factor	Locked-rotor	Pull-in (based on normal Wk^2 of load) ^{†,‡}	Pullout [‡]
500-1800	200 and below	1.0	100	100	150
	150 and below	0.8	100	100	175
	250-1000	1.0	60	60	150
	200-1000	0.8	60	60	175
	1250 and larger	1.0	40	60	150
		0.8	40	60	175
450 and below	All ratings	1.0	40	30	150
		0.8	40	30	200

*This material is reproduced with the permission of the National Electrical Manufacturers Association from the NEMA Standards Publication MG 1-2006 copyright © 2006 by NEMA.

[†]Values of normal Wk^2 are given in Sec. 185.

[‡]With rated excitation current applied.

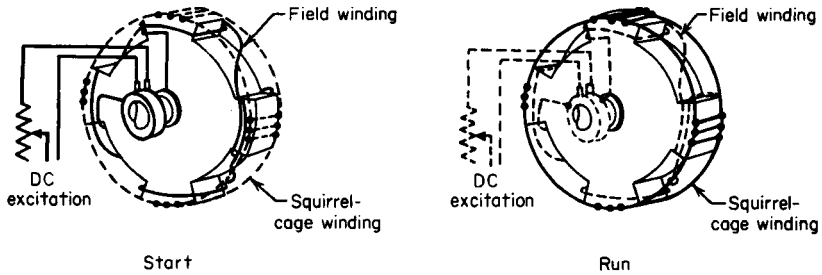
185. Effect of load Wk^2 . The inertia of the load (load Wk^2) is very important in the selection and operation of synchronous motors. The load inertia that a synchronous motor can accelerate is limited by the thermal capacity of its amortisseur winding. Smaller synchronous motors can accelerate relatively higher load Wk^2 than larger motors can. NEMA sets standards for the load Wk^2 which can be accelerated for standard synchronous motors.

186. Special-purpose synchronous motors. For applications in which the characteristics of general-purpose motors do not fit the operating requirements, the manufacturer fits the design of the auxiliary windings and motor proportions to meet specific applications. These custom-made motors are built with the following types of auxiliary windings:


1. Conventional squirrel-cage winding
2. Conventional squirrel-cage winding plus single-phase wound-rotor winding
3. Three-phase wound-rotor winding

The fundamental connections and functioning of the different types of auxiliary windings are illustrated in Fig. 7.97.


By means of proper design of a conventional squirrel-cage winding the torque characteristics can be varied over the limits given in Sec. 184. If higher starting torques with low starting kVA are required, a wound-rotor auxiliary winding is employed (see Fig. 7.97). For applications requiring a fairly high starting torque with a fairly low starting-inrush kVA, a single-phase wound-rotor winding is added to the conventional squirrel cage. For applications requiring exceptionally high starting torques with low starting kVA, a three-phase



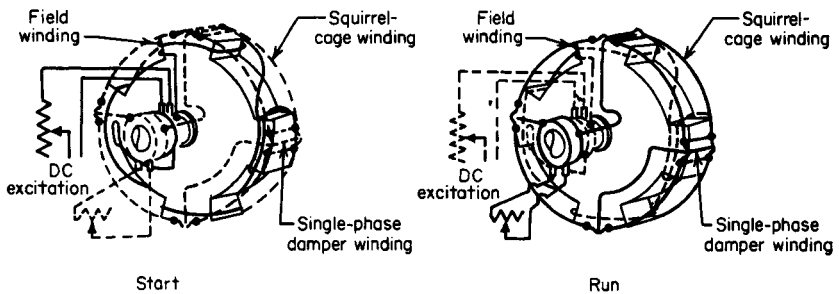Conventional design. *Start:* Motors start like standard induction motors, by means of squirrel-cage windings embedded in the pole faces. *Run:* The motor comes up to speed and after a predetermined definite time, the dc field excitation is applied. This causes the motor to shift from induction to synchronous operation.



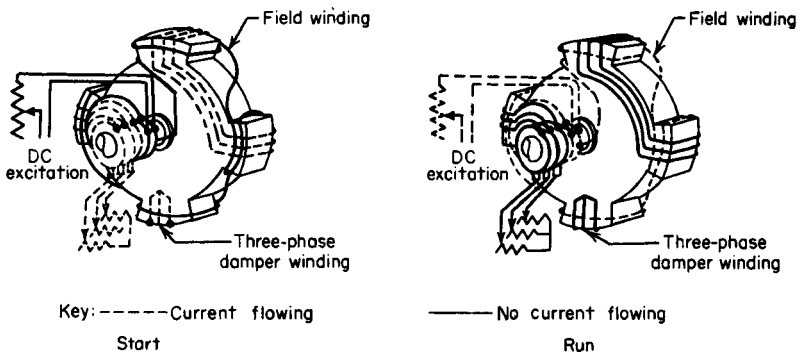High torque; low starting kVA. *Start:* Motor gets high torques at start with low-kVA inrush, by a standard squirrel-cage winding plus a separate series winding on the pole faces connected to an external resistor. *Run:* The motor comes up to speed and after a predetermined definite time, the dc field excitation is applied. This causes the motor to shift from induction to synchronous operation.



High torque; starting kVA 50 percent or less of normal. *Start:* Motor starts like any ordinary three-phase wound-rotor motor. The external resistor makes possible variable high torque together with extremely low starting kVA. *Run:* The motor comes up to speed and after a predetermined definite time, the dc field excitation is applied. This causes the motor to shift from induction to synchronous operation.

FIGURE 7.97 Types of auxiliary windings for synchronous motors. [Westinghouse Electric Corp.]

wound-rotor winding is employed. Motors with a wound-rotor auxiliary winding are started under full voltage with external resistance inserted in the auxiliary winding as in starting wound-rotor induction motors.

187. The repulsion motor (Fig. 7.98) has an armature which is like that of a dc machine. It is provided with two brushes E_1 and E_2 , which are inclined to the axis of the stator winding. These brushes are connected by a low-resistance conductor D , which short-circuits the armature. A machine of this type has a high starting torque with a small starting current and a rapidly decreasing speed with increasing load, being similar in this respect to a dc series motor. The power factor of the repulsion motor increases with the speed, and near synchronous speed it attains a value much higher than is generally obtained in induction motors. These motors are used principally for constant-torque applications such as printing-press drives, fans, and blowers. The direction of rotation of a repulsion motor can be reversed by shifting the brushes to the reverse side of the neutral.

188. The compensated repulsion motor (Fig. 7.99) is similar to the repulsion motor, except that it has a compensating winding and two compensating brushes C_1 and C_2 , which the repulsion motor does not have. The compensating winding is wound on the stator. The compensating brushes are connected in series with the compensating winding. These motors have a starting torque equal to about $2\frac{1}{2}$ to 3 times full-load torque with approximately twice full-load current. Owing to the corrective action of the compensating winding, the power factor is very high at all loads. However, the efficiency of this machine is lower than that of the induction motor. Single-phase motors of this type are well adapted for loads involving heavy starting torque and sudden overloads.

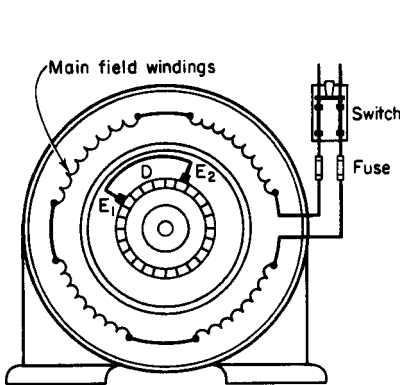


FIGURE 7.98 Repulsion motor.

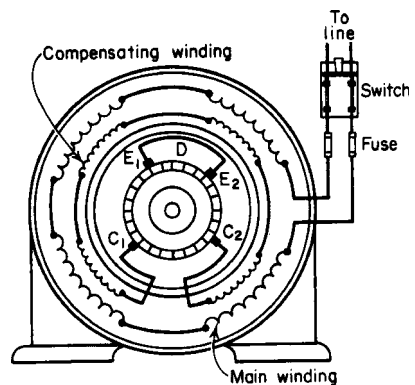


FIGURE 7.99 Compensated repulsion motor.

189. Brush-shifting type of single-phase motor. The brush-shifting single-phase repulsion motor, as manufactured by the General Electric Co., is a compensated repulsion motor. It is an adjustable varying-speed type of motor. Speed is adjusted by shifting the position of the brushes on the rotor. The speed may be controlled directly at the motor by means of a brush-shifting handle attached to the brush rigging. If the speed is to be controlled from some point remote from the motor, the brush-shifting handle can be

connected to a pedestal or foot controller by means of a rocker-shaft assembly (bracket, rocker shaft, and levers). These motors can be obtained in $\frac{1}{4}$ - to 3-hp sizes for either a reversing or a nonreversing service. The motor is reversed simply by shifting the brushes in the opposite direction from the neutral point. The brush-shifting motor is a constant-torque motor. The rated horsepower is the allowable horsepower for the highest speed. As the speed is reduced, the allowable horsepower is reduced in proportion. A speed reduction of 3:1 is possible when operating against a constant torque of 75 percent of the rated value. If operating against 100 percent normal torque, a speed reduction of 4:1 can be obtained. The no-load speed is approximately 60 percent above synchronous speed. At no load or with light loads very little speed reduction is possible. The starting torque of these motors with full voltage varies from 150 to 300 percent of full-load rated torque for four-pole machines and from 125 to 250 percent for six-pole motors, depending upon the brush position.

The breakdown torque is more than 400 percent of full-load rated torque when the brushes are in the maximum-speed position. As the brushes are shifted for the lower speeds, the breakdown torque decreases. These motors are generally started with full voltage.

190. A single-phase induction motor, when its rotor is not revolving, has no starting torque. After the rotor commences revolving, a continuous turning effort is exerted by a certain interaction of magnetic fields. Single-phase induction motors are provided, therefore, with auxiliary means for making them self-starting. Single-phase induction motors can be divided into the following groups, depending upon the method employed for starting:

1. Shading-coil
2. Inductively split-phase
3. Capacitor split-phase
4. Repulsion-start, induction-run
5. Repulsion-induction

191. Shading-coil single-phase induction motors. Some fractional-horsepower motors, principally those used on small ventilating fans, are made self-starting by the *shading-coil method*. The stator winding of these motors is not distributed around the frame, as in most induction motors, but is wound on projecting pole pieces, as in dc machines. In addition to the main stator winding a short-circuited coil, or shading coil, as it is called, is placed around only a portion of the pole piece (Fig. 7.100). This shading coil makes the flux in the portion of the pole piece surrounded by it lag behind the flux in the other portion of the pole. The shifting of the flux thus produced will develop sufficient torque to start small motors under very light load conditions. These motors are made in sizes of from $\frac{1}{250}$ to $\frac{1}{40}$ hp and are used for driving small fans.

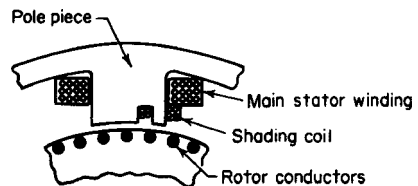


FIGURE 7.100 Construction of a shading-coil motor.

192. The inductively split-phase single-phase induction motor is provided with an auxiliary starting winding in addition to the main stator winding. This winding is located in stator slots so that it is displaced 90 electrical degrees from the main stator

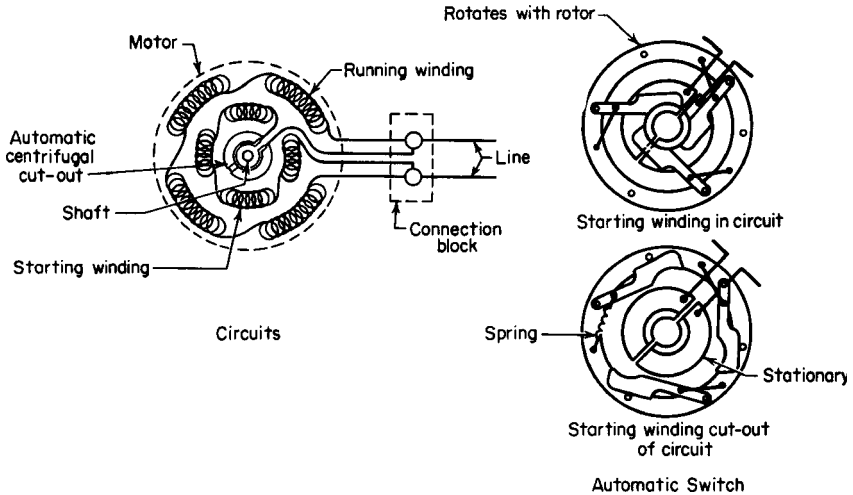


FIGURE 7.101 Single-phase motor.

winding, as shown in Fig. 7.101. If two currents sufficiently out of phase with each other are passed through the main and auxiliary windings, conditions similar to those existing in a two-phase induction motor will be produced. The necessary two currents, which are from 30 to 45 degrees out of phase with each other, are obtained from the single-phase supply by constructing one of the circuits with a relatively high inductance and the other with a relatively high resistance. The main or running winding is normally of high inductance at the time of starting. The auxiliary winding is wound with finer wire, giving it higher resistance than the main winding. The running winding remains in the circuit at all times of operation, while the starting winding remains in the circuit only until the motor has reached 50 to 80 percent of synchronous speed. When the speed at which the starting winding should be cut out is reached, an automatic centrifugal switch operates and opens the starting circuit. This type of single-phase induction motor thus starts as a two-phase machine until the starting winding is cut out, when it continues to operate, by virtue of the running winding only, as a single-phase motor.

These motors are constant-speed machines, not adapted for any speed control. They are made in sizes up to $\frac{1}{3}$ hp and in two types, the general-purpose type and the high-torque type. The general-purpose type has the following characteristics: full-voltage starting torque 75 to 175 percent of full-load torque, full-voltage starting current with NEMA specifications of Sec. 200, breakdown torque 175 to 225 percent of full-load torque, and pull-up torque 75 to 200 percent of full-load torque. They are suitable for full-voltage starting on any power system.

The high-torque type of motor has the following characteristics: full-voltage starting torque 150 to 275 percent of full-load torque, full-voltage starting current approximately 850 percent of full-load current, breakdown torque 225 to 350 percent of full-load torque, and pull-up torque 225 to 325 percent of full-load torque. The full-voltage starting currents exceed NEMA specifications of Sec. 200 and may not be permissible for some installations.

193. Capacitor motors are single-phase induction motors which have two stator windings displaced 90 electrical degrees from each other just as the inductively split-phase motor does. Therefore their starting torque is developed by two-phase action. In the capacitor motor the necessary phase displacement between the currents of the two stator

windings is produced by placing a capacitor in series with the auxiliary winding. By this means the phase displacement can be made more nearly 90 degrees, which results in better starting torque with lower starting current than can be obtained with the inductively split-phase-started motor. Capacitor motors are available in the following types:

1. Capacitor-start, induction-run
2. Capacitor-start, capacitor-run
 - a. Two-value capacitor (high-torque)
 - b. Permanent-split capacitor (low-torque)
3. Multispeed, capacitor-start, capacitor-run

Capacitor motors have the advantages of quiet operation, high power factors, and reduction in radio interference.

194. The capacitor-start, induction-run motor starts by two-phase action. After the motor has reached approximately 75 percent of full-load speed, a centrifugal switch opens the auxiliary circuit, and the motor continues to run as an ordinary single-phase induction motor. A diagram for a motor of this type is shown in Fig. 7.102. These motors develop starting torques of 275 to 400 percent of rated full-load torque. The breakdown torque is from 200 to 300 percent of rated full-load torque. Starting currents are sufficiently low so that the motors are started with full voltage. Motors of this type are made in sizes of from $\frac{1}{8}$ to $\frac{3}{4}$ hp.

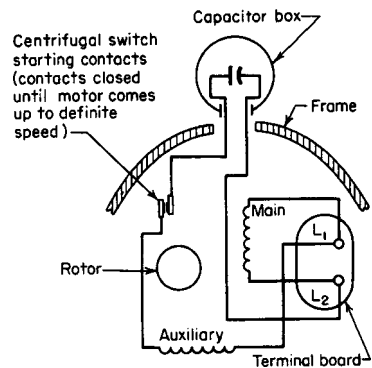


FIGURE 7.102 Connection diagram of a capacitor-start, induction-run motor. [Wagner Electric Corp.]

195. Capacitor-start, capacitor-run single-phase induction motors utilize both stator windings at all times. The motor secures its power from a single-phase supply but really operates when both starting and running as a two-phase motor. For the *two-value capacitor motor* a larger value of capacity is used during the starting period than is employed for running conditions. This larger capacity can be obtained by adding a capacitor (Figs. 7.103 and 7.104) or by changing the connections to an autotransformer which supplies the power to a single capacitor (Fig. 7.105). For small motors the change in the connections between starting and running is performed by a centrifugal switch (Fig. 7.103), while for larger motors a definite time relay is employed (Fig. 7.104). The two-value capacitor motor produces a high starting torque of 275 to 450 percent of rated full-load torque with starting currents that in most cases are sufficiently low so that the motors can be started with full voltage. Breakdown torques will be from 200 to 300 percent of rated full-load torque. These motors are available in sizes of from $\frac{1}{8}$ to 10 hp.

The permanent-split-capacitor motor utilizes a single value of capacity that is the same for both starting and running (Fig. 7.106). There is no change in connections between the starting and running conditions. These motors have low starting torques of a value from 40 to 60 percent of rated full-load torque. The breakdown torques will be from 150 to 200 percent of rated full-load torque. The starting current will generally be sufficiently low for full-voltage starting. These motors are made in sizes of from $\frac{1}{8}$ to 10 hp.

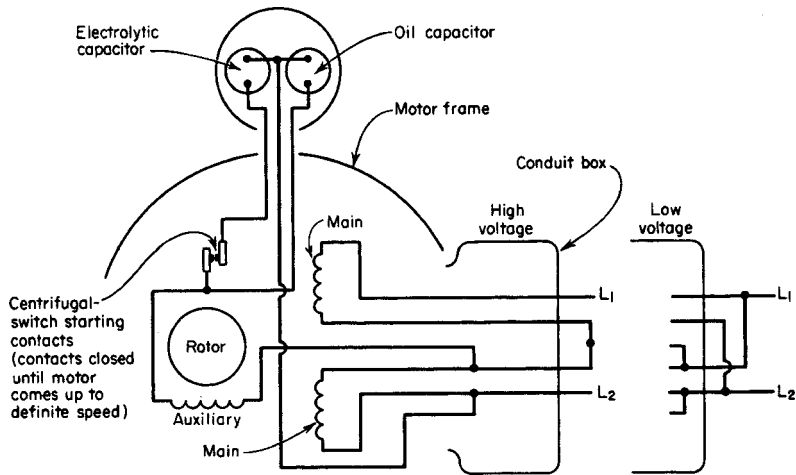


FIGURE 7.103 Connection diagram for a two-value capacitor motor (capacitor-start, capacitor-run) with centrifugal switch. [Wagner Electric Corp.]

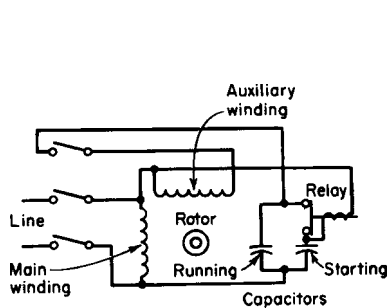


FIGURE 7.104 Connection diagram for a two-value capacitor motor (capacitor-start, capacitor-run) with acceleration relay. [General Electric Co.]

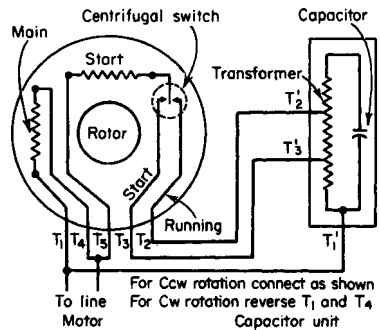


FIGURE 7.105 High-starting-torque capacitor motor. [General Electric Co.]

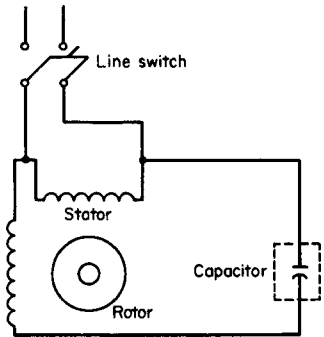


FIGURE 7.106 Permanent-split-capacitor motor. [General Electric Co.]

The principal advantage of capacitor-start, capacitor-run motors over capacitor-start, induction-run motors is that they operate at a higher power factor.

196. Multispeed capacitor motors are typically permanent-split-capacitor motors used for fan service in appliances. These motors have a tapped main winding operated at full voltage and are not intended for general use. Multispeed capacitor motors may also be single-value capacitor-start, capacitor-run motors equipped with a selector switch and an auto-transformer for supplying different voltages to the main winding. They are suitable only for special classes of services, since the breakdown torque is

reduced in proportion to the square of the voltage impressed on the main winding. It is possible to provide the motor with a centrifugal switch so that when properly connected, the motor can be started only with full voltage impressed upon the main winding.

197. Repulsion-start, induction-run single-phase motors. Single-phase induction motors which are started by repulsion-motor action are constructed similarly to the straight-repulsion motor with the addition of a centrifugal device which shorts the commutator segments after the motor has come up to speed. The motor starts as a repulsion motor, but after it has come up to the required speed so that the commutator segments are short-circuited, it operates as a straight-induction motor. These motors are constant-speed machines not capable of speed control. The starting torques of different motors vary from 300 to 500 percent of full-load torque. The breakdown torque is at least 175 percent of full-load torque. Starting currents of these motors vary from 200 to 350 percent of full-load current, so generally they can be started directly across the line. When it is necessary or desirable to limit the starting current to smaller values, a resistance type of starter is employed. These motors are made in sizes of from $\frac{1}{8}$ to 15 hp.

198. The repulsion-induction motor has two rotor windings. One of these windings is an ordinary induction rotor winding, and the other is a repulsion winding connected to a commutator with short-circuited brushes. There is frequently a compensating winding on the stator connected to brushes bearing on the commutator, as discussed in Sec. 188. This motor starts by repulsion-motor action. Since there is no short-circuiting device, after the machine has come up to speed, both the repulsion and the induction windings are active. Under running conditions the motor functions as a combined induction and repulsion motor. The starting torque with rated voltage impressed for different sizes and speeds varies from 225 to 300 percent of full-load torque. There is no definite breakdown point, maximum torque occurring at standstill. The starting currents of these motors, when thrown directly across the line, are within the requirements of most power companies. When starting currents are to be limited to smaller values, a resistance type of starter is employed. The repulsion-induction motor is a constant-speed machine with a speed variation from no load to full load of about 6 percent. Its speed cannot be adjusted. These motors are made in sizes of from $\frac{1}{2}$ to 10 hp.

199. The single-phase series, or universal, motor (Fig. 7.107) comprises an armature of the dc type connected in series with the field. It will operate successfully on either ac or dc circuits. The single-phase series motor finds its widest application in fractional-horsepower services such as those for fans, appliance motors, and electric tools. These machines have approximately the same speed-torque characteristics as dc series machines. In

the larger capacities, single-phase series motors are equipped with windings which compensate for the armature reaction. The compensating winding is placed in the pole face and must be so connected that at any instant the current will flow in the same direction in all the conductors under any one pole. The winding can be connected in series with the armature. When so connected, it is called a *conductively compensated winding*. The compensating

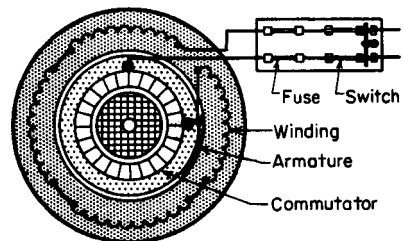


FIGURE 7.107 Series or universal motor.

winding can be short-circuited on itself. When thus arranged, it receives its current by induction, and the machine is said to be inductively compensated.

200. Small single-phase motors.* Small single-phase motors (1 hp or less) were formerly called *fractional-horsepower* motors. NEMA standardization rules specify that the minimum locked-rotor torque of single-phase, general-purpose small motors, with rated voltage and frequency applied, shall be not less than the following:

hp	Minimum locked-rotor, oz·ft*					
	60-Hz speed, rpm			50-Hz speed, rpm		
	3600	1800	1200	3000	1500	1000
¹ / ₈	...	24	32	...	29	39
¹ / ₆	15	33	43	18	39	51
¹ / ₄	21	46	59	25	55	70
¹ / ₃	26	57	73	31	69	88
¹ / ₂	37	85	100	44	102	120
³ / ₄	50	119	...	60	143	...
1	61	73

*On the high voltage connection of the dual voltage motors, minimum locked-rotor torques up to 10% less than these values may be expected.

NEMA standards also specify that the locked-rotor current of 60-Hz single-phase, general-purpose small motors shall not exceed the values given in the following table.

Two-, four-, six-, and Eight-pole, 60-Hz motors, single-phase

hp	Locked-rotor currents, A			
	115 V		230 V	
	Design O	Design N	Design O	Design N
¹ / ₆ and smaller	50	20	25	12
¹ / ₄	50	26	25	15
¹ / ₃	50	31	25	18
¹ / ₂	50	45	25	25
³ / ₄	...	61	...	35
1	...	80	...	45

*This material is reproduced with the permission of the National Electrical Manufacturers Association from NEMA Standards Publication MG 1-2006, copyright © 2006 by NEMA.

201. Single-phase medium motors.* Single-phase medium motors rated more than 1 hp were formerly called *integral-horsepower* motors. Single-phase medium motors are classified by NEMA into two design types, Design L and Design M. The distinction is made on the basis of the value of the locked-rotor current of the motor. NEMA standards specify that the locked-rotor current of single-phase, 60-Hz Design L and M motors of all types, when measured with rated voltage and frequency impressed and with the rotor locked, shall not exceed the following values:

hp	Locked-rotor currents, A		
	Design L motors		Design M motors, 230 V
	115 V	230 V	
$\frac{1}{2}$	45	25	...
$\frac{3}{4}$	61	35	...
1	80	45	...
$1\frac{1}{2}$...	50	40
2	...	65	50
3	...	90	70
5	...	135	100
$7\frac{1}{2}$...	200	150
10	...	260	200

In accordance with NEMA standards the locked-rotor torque of single-phase, 60-Hz, general-purpose medium motors, with rated voltage and frequency applied, shall be not less than the following:

hp	Minimum locked-rotor torque, lb·ft		
	Synchronous Speed, rpm		
	3600	1800	1200
$\frac{3}{4}$	8.0
1	...	9.0	9.5
$1\frac{1}{2}$	4.5	12.5	13.0
2	5.5	16.0	16.0
3	7.5	22.0	23.0
5	11.0	33.0	...
$7\frac{1}{2}$	16.0	45.0	...
10	21.0	52.0	...

202. Methods of reversing motors. In the following paragraphs instructions are given for reversing the different types of motors.

Direct-Current Shunt or Series Motors. Interchange the connections of either the field or the armature winding. Reversing the line leads will not change the direction of rotation. If the motor is not equipped with commutating poles, the brushes should be shifted to the same position on the opposite side of the neutral axis.

*This material is reproduced with the permission of the National Electrical Manufacturers Association from NEMA Standards Publication MG 1-2006, copyright © 2006 by NEMA.

Direct-Current Compound Motors.

Method 1. Interchange the connections of the two armature leads.

Method 2. Interchange the connections of the two shunt-field leads and also the connections of the two series-field leads. Interchanging the connections of just the two shunt-field leads would change the direction of rotation, but the motor would operate as a differential compound motor instead of cumulatively. If the motor is not equipped with commutating poles, the brushes should be shifted to the same position on the opposite side of the neutral axis.

Any Four-Wire Two-Phase Induction Motor. Interchange the connections to the line of the two leads of either phase.

Any Three-Wire Two-Phase Induction Motor. Interchange the connections to the line of the two outside wires.

Any Three-Phase Induction Motor. Interchange the connections to the line of any two leads. In reversing the commutator type of polyphase induction motor the brush-shifting mechanism must be adjusted to the proper position for the reversed rotation in addition to reversing the connections of two of the line leads.

Synchronous Motors. Ordinary synchronous motors are reversed in the same manner as induction motors.

Single-Phase Induction, Shading-Pole Starting. The direction of rotation cannot be reversed except in special cases. If the pole pieces of the machine can be removed, the direction of rotation can be reversed by revolving the pole pieces 180° on their own axes. This will place the shading coils on the opposite sides of the pole pieces. With these machines, each shading-coil circuit must be provided with a switch. The direction of rotation depends on which shading-coil circuit is closed.

Single-Phase Induction, Inductively Split-Phase Starting. Interchange the connections of either the main or the auxiliary winding.

Single-Phase Capacitor Motor. Interchange the connections of either the main or the auxiliary winding.

Single-Phase Induction, Started by Repulsion Action. Shift the brushes to the same position on the opposite side of the neutral axis.

Single-Phase Repulsion Motor. Shift the brushes to the same position on the opposite side of the neutral axis.

Single-Phase Series Motor. It is reversed in the same manner as a dc series motor.

202A. Electric-motor braking. Braking of electric motors can be performed by friction braking, plugging, dynamic braking, or regenerative braking.

Friction braking of electric motors consists of retarding the motor speed or of completely stopping the motor by a solenoid-operated friction brake of the shoe or disk type.

Plugging is the method of retarding the motor speed and completely stopping the motor or of reversing the motor by applying electric power in the reverse direction so that the motor develops torque in the direction opposite to that of rotation. Plugging will quickly

bring a motor and its driven load to a stop. If the reverse power is not removed when the motor comes to a stop, the motor will reverse and accelerate in the opposite direction.

Dynamic braking is the method of retarding the motor speed or of completely stopping the motor through making the motor act as a generator with a resistance load.

Regenerative braking is the method of retarding the motor speed by making the motor, functioning as a generator, feed its generated power back into the supply line. Regenerative braking will not stop the motor. It is effective only for the braking of overhauling loads. Overhauling loads are those which attain a speed greater than that of the motor speed-load characteristic and under which, therefore, the load tends to drive the motor.

203. Plugging of motors. To employ plugging retardation of an electric motor, a reversing switch or contactor must be provided in the control equipment. To stop or retard the speed of the motor by plugging, the connections to the power supply are simply reversed in the proper manner so that the motor develops torque in the opposite direction to that in which it is rotating. For squirrel-cage induction motors, the braking action can be cushioned to reduce the shock to the machine and power system by the use of resistance connected in series with the reversed connections to the supply. For wound-rotor induction motors, the plugging torque can be controlled by adjusting the resistance in the motor secondary circuit. For synchronous motors, the dc field circuit is deenergized during the plugging operation, and the motor is plugged in the same manner as a squirrel-cage induction motor. For dc motors, additional resistance must be used in series with the reversed power connections. When the motor must come to a stop without reversal, a zero-speed switch or a timing relay must be used to open the motor circuit when the machine comes to a stop.

Advantages

1. Simple arrangement and installation
2. Fast operating performance
3. Freedom to rotate after stopping in contrast to braking with a mechanically set brake
4. No friction parts and freedom from maintenance
5. Suitability for large motors and severe duty

Disadvantages

1. Reversing controller required
2. Zero-speed switch or consistent timing relay required if reversing is to be prevented
3. Availability of power required (plugging impossible if power fails)
4. Power system capable of supplying the peak plugging current required
5. Special bracing possibly required for motor windings

If motor and its load must positively be held stationary when the motor is deenergized, an additional spring-set or other type of mechanical brake is necessary.

204. In dynamic braking, the armature of the motor is disconnected from the power supply, and the load will drive the motor as a generator. The generator action is loaded either through resistance banks or through part of the motor winding. For dc shunt or compound motors, the armature is disconnected from the line and connected to a resistor bank; the shunt field is left connected to the supply line. For dc series motors, the machine is disconnected from the supply, and the armature and series-field circuits are segregated from

each other. The field winding is connected in series with the proper limiting resistance to the supply line. The armature is connected to a resistor bank load.

For dynamic braking of squirrel-cage induction motors, a source of excitation must be provided. This excitation may be provided (1) from a separate source of direct current, (2) from the ac supply through a rectifier, or (3) by means of capacitors. In the first method, dynamic braking is accomplished by disconnecting the motor from the supply and connecting one phase of the motor primary to a separate source of direct current. The motor will then be driven by the load as a generator and will load itself through the induced current in the motor secondary flowing through the squirrel-cage winding. The dc excitation must be removed at the end of the braking period; otherwise the windings will overheat. In the second method, dynamic braking is accomplished in the same manner as in the first method except that the dc supply for the excitation is obtained from the ac supply through a single-phase rectifier. The rectifier is usually of the contact, or barrier-layer, type.

A diagram of the connections required is shown in Fig. 7.108. In the third method, a capacitor is permanently connected across the motor terminals. In braking, the motor is disconnected from the supply. The capacitor will supply the motor with excitation so that it will

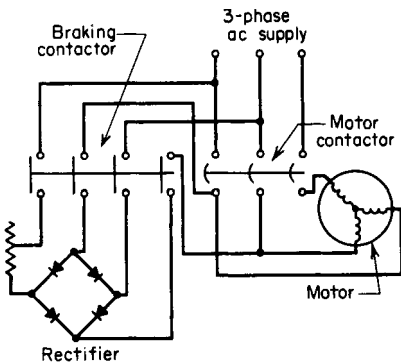


FIGURE 7.108 Dynamic braking of an induction motor with rectified direct current.

function as an induction generator. The braking action is produced by the power losses inside the machine. The braking action can be improved by connecting a loading resistor in parallel with the capacitor. The larger the capacitor, the greater the braking action. All braking action ceases with this method at about one-third of synchronous speed.

For wound-rotor induction motors, dynamic braking could be accomplished by all three of the methods just described for squirrel-cage motors. However, the first method, using a separate source of direct current for excitation, is usually the only feasible one. The amount of the braking action can be controlled by adjusting the secondary resistance. For synchronous motors, dynamic

braking is accomplished by disconnecting the motor armature from the ac supply and connecting the armature to a resistor bank load. The field is left excited from direct current.

Advantages

1. The motor cannot be reversed. No zero-speed switch or other antireversing device is required.
2. There is smooth, positive retardation lacking the shock of a mechanically set brake and less severe than plugging.
3. The braking torque is easily adjustable by varying the dc excitation or, as in wound-rotor induction-motor applications, by varying the motor secondary resistors.
4. In dynamic braking of small ac motors by the use of capacitors, the braking is independent of the power supply; furthermore, the capacitor furnishes a power-factor correction while the motor is operating.

Disadvantages

1. A source of dc excitation is required during the braking period except in capacitor braking.
2. Braking is not available if the exciting source fails.

3. This method is more expensive and more complicated than plugging. If the source of excitation is not already available and additional equipment must be installed, the extra cost may be prohibitive.
4. Control must provide means for disconnecting the excitation at the expiration of the braking period.
5. Dynamic braking is useless as a holding force after motor has come to rest and is deenergized.
6. Capacitor dynamic braking is ineffective and ceases to exist below approximately one-third speed; therefore, it is of little value except on drives involving considerable friction. The cost of capacitor braking is prohibitive with large motors.
7. Rectifier-excited dynamic braking is impracticable and expensive in the case of large motors.

205. Regenerative braking cannot be used for stopping a motor. It will produce braking action only when the load overhauls the motor and drives the motor at a speed above the speed-load characteristic of the motor. When a load overhauls its drive motor (except for series dc motors), the voltage generated in the machine will be greater than the supply-line voltage. Consequently the motor will function as a generator and feed power back into the supply line. This is an inherent characteristic of the motor and does not require any changing of connections or control equipment. If a series dc motor is overhauled by its load, the motor loses its excitation and becomes incapable of regenerative braking unless the connections are changed. Therefore, to use regenerative braking on a series motor the series field and armature must be segregated from each other and connected individually to the supply. Sufficient resistance must be connected in series with the series field so that the current will be held to normal value.

Advantages

No extra equipment is required except for series-wound dc motors. This method can be made effective with dc motors at reduced speeds by strengthening the motor field, i.e., by lowering the speed at which the motor will regenerate.

Disadvantages

This method is effective only at overhauling speeds; it is useless as a means of stopping. If dc motors must be made to regenerate at low speeds, the control becomes involved and expensive. The motor may require special fields.

CONVERSION EQUIPMENT

206. The conversion of alternating current to direct current is usually effected with a motor-generator set, a synchronous converter, an electronic rectifier, a contact (barrier-layer) rectifier, or solid-state semiconductor rectifiers.

207. A motor-generator set consists of a motor mechanically coupled to and driving one or more generators. The motor is usually alternating-current and is mounted on the same bedplate and on the same shaft with the generator or generators which it drives.

A motor-generator set can be employed to convert electrical energy from one voltage or frequency to another voltage or frequency, to convert alternating current to direct current, or to convert direct current to alternating current. When an ac motor is used, it may be of either the induction or the synchronous type. The induction type has the advantages of low first cost and rugged construction. It may also be wound for voltages as high as 13,500 V. This will, in many cases, eliminate the necessity for transformers. This type has, however, poorer speed regulation and a lower power factor. A synchronous-motor drive is probably more frequently used for large-capacity installations than is the induction motor. The synchronous motor is inherently a constant-speed motor. Therefore, a more nearly constant voltage can be maintained at the generator terminals than by the use of an induction motor. The field of the synchronous motor may be overexcited. The motor then acts as a synchronous condenser, thus improving the power factor.

208. A synchronous converter (sometimes called a *rotary converter*) for converting alternating to direct current or vice versa consists (Fig. 7.109) of a dc motor equipped with slip rings. Taps are brought out from equidistant points on the armature winding and connected to these rings. As ordinarily used, the machine is then driven as a synchronous motor, by an alternating emf which is impressed on the armature through the slip rings. As the armature rotates, an alternating emf is induced in the armature winding, as in any dc generator. This alternating induced emf is rectified by the commutator and leaves the brushes as a pulsating or direct current. If a synchronous converter is utilized for converting alternating current to direct current, it is called a *direct converter*, or merely a converter. If it converts direct current to alternating current, it is called an *inverted converter*. If the main-pole flux distribution is such that the induced emf has a sine waveform (see Table 209 for values),

$$\frac{E_{ac}}{E_{dc}} = 0.707 \left(\sin \frac{180}{n} \right) \quad (6)$$

where E_{ac} = the effective alternating-current voltage, in volts between adjacent slip rings
 E_{dc} = the direct-current voltage, in volts
 n = the number of slip rings for a bipolar machine or the number of taps per pair of poles for a multipolar machine

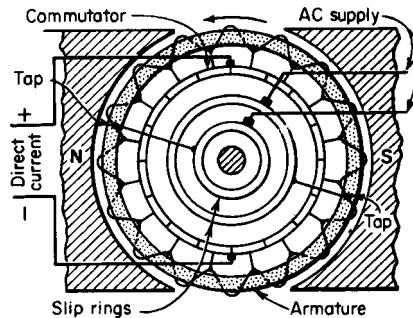


FIGURE 7.109 Two-pole single-phase synchronous converter.

209. Ratio of the Effective AC to DC Voltage with Different Numbers of Taps

Number of taps per pair of poles	Number of phases	$\frac{E_{ac}}{E_{dc}}$ (between adjacent taps)	$\frac{E_{ac}}{E_{dc}}$ (line voltage)
2	1	0.707	0.707
3	3	0.612	0.612
4	4 or 2	0.500	0.707
6	6	0.354	$\left\{ \begin{array}{l} 0.707 \text{ (diametrical)} \\ 0.612 \text{ (double } \Delta) \end{array} \right\}$
12	12	0.183	0.682 (double chord)

NOTE Synchronous converters are subject to hunting. The cause of hunting and the remedy are the same as for a synchronous motor.

210. The methods of starting a synchronous converter are (1) from its dc side as a shunt motor, (2) by means of an auxiliary motor mounted on its shaft, and (3), if polyphase, from its ac side as an induction motor. Whatever method is used, the armature must be brought up almost to synchronous speed before the load is applied to the generator.

211. Usual Relation among Number of Poles, Phases, Taps, and Slip Rings of a Synchronous Converter

2 pole			4 pole		6 pole		8 pole		12 pole	
Phases	Slip rings	Taps	Slip rings	Taps	Slip rings	Taps	Slip rings	Taps	Slip rings	Taps
1	2	2	2	4	2	6	2	8	2	12
2	4	4	4	8	4	12	4	16	4	24
3	3	3	3	6	3	9	3	12	3	18
6	6	6	6	12	8	18	6	24	6	36

NOTE The tendency of modern practice in large three-phase conversion installations is to use a six-phase converter. It is connected to the three-phase line through a set of transformers.

212. The relation between the values of direct and alternating current of any synchronous converter is

$$I_{dc} = 0.354 \times I_{ac} \times n \times \text{power factor} \times \text{efficiency} \quad (7)$$

where I_{dc} = direct current, in amperes

I_{ac} = effective alternating current, in amperes

n is as given in Eq. (6)

213. A frequency-changer motor generator consists of an ac generator or generators driven by an induction or a synchronous motor or motors. The frequency of the generator is different from that of the motor. Since the speed regulation of the induction motor is inherently poorer, a synchronous driving motor is usually applied. The output frequency

of a set which is driven by a synchronous motor will vary only with the input frequency and not with the load. The synchronous motor can also be utilized for improving the power factor of the energy-supplying system. Since the motor and the generator are mounted on the same shaft and hence rotate at the same speed, the desired frequency change must be obtained by a proper ratio between the number of motor poles and the number of generator poles. The ratio between the frequency applied to the motor and the frequency which the generator will supply is exactly equal to the ratio between the number of poles on the motor and the number of poles on the generator. That is,

$$\frac{\text{Number of poles on motor}}{\text{Number of poles on generator}} = \frac{\text{frequency applied to motor}}{\text{frequency supplied by generator}} \quad (8)$$

For 60- to 25-Hz conversion this practically limits the speed to 300 rpm with 24 poles on the 60-Hz machine and 10 poles on the 25-Hz machine.

TROUBLES OF AC MOTORS AND GENERATORS: THEIR LOCALIZATION AND CORRECTION

214. Troubles of ac machinery. Much of the material under this heading is based on that in the book *Motor Troubles*, by E. B. Raymond.

215. Induction-motor troubles (H. M. Nichols, *Power and the Engineer*). The author asserts that the unsatisfactory operation of an induction motor may be due to either external or internal conditions. The voltage or the frequency may be wrong, or there may be an overload on the machine. Low voltage is the most frequent cause of trouble. The starting current sometimes amounts to twice the running current, with the result that the voltage is particularly low at starting. The best remedy for this disorder is larger transformers and larger motor leads, one or both. The troubles that occur most frequently within the motor itself are caused by faulty insulation and by an uneven air gap due to the springing of the motor shaft or to excessive wear in the bearings. If a wound-rotor machine refuses to start, the trouble may be due to an open circuit in the rotor winding. Most wound-rotor motors designed to employ a starting resistance will not start at all if the resistance is left out of the secondary circuit with the secondary circuit open. A short-circuited coil in the motor will make its existence known by local heating in the latter.

216. Troubles of ac generators (*Westinghouse Instruction Book*). The following causes may prevent ac generators from developing their normal emf:

1. The speed of the generator may be below normal.
2. The switchboard instruments may be incorrect, and the voltage may be higher than that indicated, or the current may be greater than is shown by the readings.
3. The voltage of the exciter may be low because its speed is below normal, its series field is reversed, or part of its shunt field is reversed or short-circuited.
4. The brushes of the exciter may be incorrectly set.
5. A part of the field rheostat or other unnecessary resistance may be in the field circuit.
6. The power factor of the load may be abnormally low.

217. Causes of shutdowns of induction motors. Sometimes there is trouble from blowing fuses. Or possibly, and more serious, the fuses do not blow, and the motor, perhaps humming loudly, comes to a standstill. Under these conditions the current may be 10 times normal, so that the heating effect, being increased as the square of the current or a hundredfold, causes the machine to burn out its insulation.

Since the torque, or turning power, of an induction motor is proportional to the square of the applied voltage (one-half voltage produces only one-quarter torque), it is evident that lowering the voltage has a decided effect upon the ability of the motor to carry load and may be the cause of its stopping. Another cause may be that the load on the motor more than equals its maximum output.

The bearings may have become worn, so that the air gap, which ordinarily is not much over 0.040 in (1 mm) and on small motors may be as small as 0.015 in (0.38 mm), has been gradually reduced at the lower side of the rotor to practically zero. The rotor commences to rub on the stator. The friction soon becomes so great that it is more than the motor can carry, and the motor shuts down.

A shutdown may be due to the bearings' introducing excessive friction. Hot bearings, in turn, may be due to excess of belt tension, dirt in the oil, oil rings not turning, or improper alignment of the motor to the machine that it drives. Under such conditions, ascertain whether the voltage has been normal, whether the air gap is such that the armature is free from the field, and whether the load imposed upon the motor is more than that for which it was designed. In any installation a system whereby an inspector will examine the gap, bearings, etc., periodically should be arranged.

Rarely, shutting down may be due to the working out of the starting switch, which may be located within the armature. Such a switch is operated by a lever engaging a collar that bears on contacts which, as they move inward, cut out the resistance that is in series with the rotor winding and is located within it.

If the short-circuiting brushes work back, introducing resistance into the armature circuit while the machine is trying to carry load, the machine will at once slow down and probably stop, usually burning out the starting resistance. Of course, this can occur only from faulty construction. The remedy is to fit the brushes properly so that they will not work out. It is well to inspect them at the time of air-gap inspection.

218. Low torque while starting induction motors. Even when the circuit to the motor is closed, it sometimes does not start. The same general laws of voltage, etc., apply to the motor at starting as when it is running. Hence, the points mentioned in Sec. 217 should be investigated and, if necessary, corrected. The resistance, which is frequently inserted in the armature, may be short-circuited, thus giving a low starting torque. To obtain a proper starting torque with a reasonable current with a wound-rotor motor, a resistance must be inserted in the rotor circuit. The resistance not only limits the current, which would be large with the motor standing still, but causes the current of the armature to assume a more effective phase relation, so that a far larger torque is obtained with the same current. A partial or complete short circuit of the resistance will reduce the starting torque.

219. Low maximum output of induction motors. The maximum load which a motor can carry may be less than desired or less than the nameplate indicates. This may be due to improper interconnection of the motor windings or to low line voltage. If the line voltage is considerably below the rated voltage of the motor, the maximum torque that the motor can develop may be so reduced that the motor will stall on small overloads. Many motors are designed for operation at two voltages, for example, 115/230 or 230/460. This is accomplished by dividing the stator winding into two parts. For operation on the low-voltage

rating, the two parts of the winding should be connected in parallel, while for operation on the high-voltage rating the two parts should be connected in series. Sometimes, when a motor is put in service on a supply which has a voltage corresponding to the low-voltage rating of the motor, the windings are connected in series. With this connection the motor would be operating at half rated voltage. This wrong connection will be indicated by the motor's starting very slowly or failing to start or by its stalling without overheating and without tripping the overcurrent devices.

220. Winding faults of induction motors. It sometimes happens that when an attempt is made to operate a new induction motor, although it will start, the currents are excessive and unbalanced, undue heating appears, or a peculiar noise is emitted, accompanied possibly by dimming of the lights on the same circuit and the lowering of speed, with perhaps an actual shutdown of other induction motors thereon. If, after examination, no difficulty is found with the air gap, belt tension, starting resistance, or bearings, the probabilities are that the coils of the motor have been wrongly connected or that the winding has been damaged during transportation. Certain indications of these conditions are shown by instrument readings. The winding faults in a three-phase motor may be:

1. One coil of the rotor may be open-circuited. The armature or the rotor may have a defective winding, just as may the stator.
2. Two coils or phases of the armature may be open-circuited.
3. The armature may be connected properly, but the stator coil or phase may be reversed.
4. Part of the stator may be short-circuited.
5. One phase of the stator may be open-circuited.

221. With an open circuit in the field or stator in a three-phase motor, the current would flow only in two legs. There would be no current in the other leg, and the motor would not start from rest with all switches closed. However, a three-phase or two-phase motor will run and do work single-phase if it is assisted in starting. The starting torque is zero, but as the speed increases, the torque increases.

With a small motor, giving a pull on the belt will introduce enough torque so that the motor will pick up its load. Therefore while an open circuit in the field winding should be found and repaired, if there is not time for repairs, the motor can be operated single-phase to about two-thirds of normal load. The power-factor conditions and effects on the rest of the circuit are practically no worse than when the motor is running three-phase. The torque of a 1-hp three-phase induction motor from rest to synchronism, when running single-phase, is indicated in Fig. 7.88.

222. Squirrel-cage armature or rotor troubles. Unusual operation due to reversals of phase, phases being open-circuited, and other causes occur with squirrel-cage armatures as well as with wound armatures. Poor soldering of the armature bars may be the cause. Sometimes a solder flux that will ensure proper operation for a while can be used, but time will develop poor electrical contacts because of chemical action at the joints. If the resistances of all the squirrel-cage joints are uniformly high, the effect is simply like that of an armature having a high resistance, which causes a lowering of the speed and local heating at the joints. If some of the joints are perfect but some bad, the motor may not have the ability to come up to speed, and there will be unbalanced currents.

223. Effects of unbalanced voltages on induction motors. The maximum output of a polyphase induction motor may be materially decreased if the voltages impressed on the different phases are unequal. On a three-phase system the three voltages between the legs 1–2, 2–3, and 1–3 should be approximately equal. Also on a two-phase system the voltage 1–2 should equal the voltage 3–4. If these voltages impressed on the induction motor are not equal, the maximum output of the motor as well as the current in the various legs is proportionately affected.

For example, with a two-phase motor, if the voltages in the two legs differ by 20 percent, a condition sometimes met in normal practice, the output of the motor may be reduced by 25 percent. Then, instead of being able to give its maximum output of, say, 150 percent for a few moments, it will give only 112 percent. The varying loads which the motor may have to carry may shut it down. In cases of low maximum output, the relative voltages on the various legs should always be investigated. If they vary, the trouble may be due to this variation.

In addition to the effect on the maximum output, the unequal distribution of current in a two-phase motor under such conditions may be quite serious. Consider a specific case of a 15-hp, six-pole, 1200-rpm, 230-V motor with the voltage on one leg 230 and the voltage on the other leg 180; current in leg 1 was 60 A and in leg 2 was 35 A at full load. The normal current at full load was 35 A. Thus the fuse might blow in the phase carrying the high current, causing the motor to run single-phase. If an attempt were made to start the motor, the blown fuse not being noticed, there would be no starting torque.

When unbalanced voltages are detected, make a careful check for a blown fuse. Often a service or feeder fuse will open and go undetected except for slight unbalanced line-to-line voltages. This occurs on installations such as sewer treatment plants, where some large pump, vacuum, or blower motors run continuously. If a “main” fuse opens while one of these motors is running, the motor itself generates the “third” phase, and other motors will start and run at reduced efficiency. If three-phase motors are protected by three overload relays, the large line current in one motor lead will cause the circuit to open. Accordingly, check for open fuses in the feeder or service switch if properly sized motor-overload devices trip out frequently.

If only two overload protective devices are provided for three-phase motors, the excessive current could be in the unprotected leg and cause a motor-winding failure.

If no fuses have been detected and unbalanced line-to-line voltages exist, check to see whether single-phase loads connected to the three-phase system are properly balanced.

After checking for open fuses and balanced single-phase loads, call the electric power company if unbalanced voltages appear on the line side of the main service switch.

224. Induction-motor starting-compensator troubles. Sometimes a mistake is made in the connections to the compensator, so that full voltage is used at starting and lesser voltage after throwing over the switch. Then the motor at starting takes excessive current, and since the maximum output is in proportion to the square of the voltage, the motor capacity is much reduced when it is apparently running in the operating position. Such action, therefore, can usually be accounted for by a wrong connection in the compensator. Sometimes a motor connected to a compensator takes more current at starting than it should; under this condition a lower tap should be tried. Compensators are usually supplied with various taps, and the one which produces the least disturbance on the line, giving at the same time the desired starting torque on the motor, should be selected.

When a motor, having been connected to a compensator, will not start, the cause may be entirely in the compensator. The compensator may have become open-circuited owing to a flash within. The switch may have become deranged so that it will not close, or a connection within the compensator may have loosened. Possibly, when a motor will not start when it is connected to a compensator just installed, one secondary coil of the compensator may be improperly interconnected.

225. Induction-motor collector-ring troubles. It is essential that the contact of the brushes on the collector rings be good; otherwise contact resistance will be so great as to slow the motor down and to cause heating of the collector itself. This effect is particularly noticeable when carbon brushes are used. The contact resistance of a carbon brush under normal operation pressure and carrying its usual density of current (40 A/in^2 , or 6.2 A/cm^2) is $0.04 \text{ } \Omega/\text{in}^2$ ($0.258 \text{ } \Omega/\text{cm}^2$). Thus, under normal conditions, the drop is 0.04×40 , which equals 1.6 V . If the contact is only one-quarter of the surface, this drop would be 6.4 V and might materially affect the speed of the motor. Thus, if the speed is farther below synchronous speed than it should be, an investigation of the fit of the brush upon the collector may show up the trouble.

If copper brushes are used, this trouble is much less liable to occur, since the drop of the voltage due to contact resistance when running at normal density (150 A/in^2 , or 23.25 A/cm^2) is only one-tenth that of carbon. The same trouble may occur owing to the pigtail, which is generally used with carbon brushes, making poor contact with the carbon, which gives the same effect as a poor contact with the collector itself.

226. Improper end play in induction motors. Induction motors are so designed that the revolving parts will play endwise in the bearing, $1/16 \text{ in}$ (1.6 mm) or so. If in setting up the machine the bearings so limit this end action that the rotor does not lie exactly in the middle of the stator, a strong magnetic pull tends to center the rotor. If the bearings will not permit this centering, the thrust collars must take the extra thrust, which in an induction motor is considerable. If in addition to the magnetic thrust the belt pull is such as also to draw in the same direction, the trouble is increased. The end force may be such as to heat the bearing excessively and to cause cutting, soon rendering the motor inoperative.

In case of trouble with bearings, the end play should be tested by pushing against the shaft with a small piece of wood, placed on the shaft center. With the machine operating under normal conditions there should be no particular difficulty in pushing the shaft first one way from one side and then the other way from the other side. If it is found that the revolving part is hugging closely against one side, the trouble can be corrected either by pressing the spider along the shaft in a direction toward which the hugging is occurring or by driving the tops of the lamination teeth in the same direction. With a wooden wedge the tops of the teeth can often be driven over $1/8$ to $3/16 \text{ in}$ (3.2 to 4.8 mm) without any difficulty. This movement will usually correct the trouble. Driving the teeth of the stator $1/8 \text{ in}$ or so in the opposite direction to that of the end thrust will usually accomplish the same result. It is best to choose the teeth (stator or rotor) which are most easily driven over. The thin, long ones move more easily than do the short, broad ones.

227. Oil leakage of induction motors. Sometimes a bearing will permit oil to be drawn out, perhaps a very little at a time. Ultimately enough will accumulate to show on the outside or on the windings of the machine. Although a motor will run for a period with its windings wet with ordinary lubricating oil without apparently being injured, insulation soaked with oil will deteriorate and eventually fail.

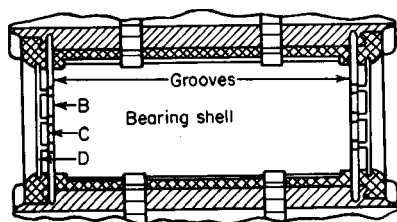


FIGURE 7.110 Grooves to prevent oil leakage.

One of the principal causes is a suction of the oil due to the drafts of air from the rotor, and one of the best methods of stopping the trouble, under ordinary conditions, is to cut grooves as shown in Fig. 7.110 at *B* and *D*. These grooves on a 50-hp motor may be $1/8 \text{ in}$

(3.2 mm) deep and $\frac{3}{16}$ in (4.8 mm) wide. Each groove has three holes drilled through the bearing shell to convey the oil collected by the grooves into the oil well. These grooves are just as effective with a split as with a solid bearing. It is impossible here to discuss the various causes of oil leakage. The grooves as suggested are a general remedy and cover many cases.

228. General summary of synchronous-motor troubles. Failure of a synchronous motor to start is often due to faulty connections in the auxiliary apparatus. This should be carefully inspected for open circuits or poor connections. An open circuit in one phase of the motor itself or a short circuit will prevent the motor from starting. Most synchronous motors are provided with an ammeter in each phase so that the last two causes can be determined from their indications: no current in one phase in case of an open circuit and excessive current in case of a short circuit. Either condition will usually be accompanied by a decided buzzing noise, and a short-circuited coil will often be quickly burned out. The effect of a short circuit is sometimes caused by two grounds on the machine.

Starting troubles should never be assumed until there has been a trial to start the motor light, i.e., with no load except its own friction. It may be that the starting load is too great for the motor.

If the motor starts but fails to develop sufficient torque to carry its load when the field circuit has been closed, the trouble will usually be found in the field circuit. First, determine whether or not the exciter is giving its normal voltage. If the exciter voltage is assumed to be correct, the trouble will probably be due to one of the following causes: (1) open circuit in the field winding or rheostat or (2) short circuit or reversal of one or more of the field spots. An open circuit can often be located by inspection or by use of a magneto.

Most field troubles are caused by excessive induced voltage at the start or by a break in the field circuit. Excessive voltage may break down the insulation between field winding and frame or between turns on any one field spool, thus short-circuiting one or more turns, or it may even burn the field conductor off, causing an open circuit.

Causes of overheating in synchronous motors are about the same as those in ac generators. Probably the most common cause of overheating is excessive armature current due to an attempt to make the motor carry its rated load and at the same time compensate for a power factor lower than that for which it was designed. If the motor is not correcting a low power factor but doing mechanical work only, the field current should be adjusted so that the armature current is minimum for the average load that the motor carries.

229. Difficulties in starting synchronous motors. A synchronous motor starts as an induction motor. The starting torque, as in an induction motor, is proportional to the square of the applied voltage. For example, if the voltage is halved, the starting effort is quartered. When a synchronous motor will not start, the cause may be that the voltage on the line has been pulled below the value necessary for starting. In general, at least half voltage is required to start a synchronous motor.

Difficulty in starting may also be caused by an open circuit in one of the lines to the motor. Assume the motor to be three-phase. If one of the lines is open, the motor becomes single-phase, and no single-phase synchronous motor, as such, is self-starting. The motor therefore will not start and will soon get hot. The same condition is true of a two-phase motor if one of the phases is open-circuited.

Difficulty in starting may be due to a rather slight increase in static friction. It may be that the bearings are too tight, perhaps from cutting during the previous run. Excessive belt tension, if the synchronous motor is belted to its load, or any cause which increases starting friction will probably give trouble. Difficulty in starting may be due to field excitation

on the motor. After excitation exceeds one-quarter of normal value, the starting torque is influenced. With full field on, most synchronous motors will not start at all. The field should be short-circuited through a proper resistance during the starting period.

Usually compensators are used for starting synchronous motors. If there is a reversed phase in a compensator or if the windings of the armature of the synchronous motor are connected incorrectly, there will be little starting torque. Incorrect connection can be located by noting the unbalanced entering current. Readings to determine this unbalancing should be taken with the armature revolving slowly. The revolving can be effected by any mechanical means. While the motor is standing still, even with correct connections, the armature currents of the three phases usually differ somewhat. This is due to the position of the poles in relation to the armature, but when the armature is revolving slowly, the currents should average up. If the rotor cannot be revolved mechanically, similar points on each phase of the armature must be found. Then when the rotor is set successively at these points, the currents at each setting should be the same. Each phase, when located in a certain specific position as related to a pole, should, with right connections, take a certain specific current. With wrong connections the currents will not be the same.

230. Open circuit in the field of a synchronous motor. If in the operation of a synchronous motor the field current breaks for any reason, the armature current will appreciably increase, causing either a shutdown or excessive heat. It becomes important therefore in synchronous motors to have the field circuit permanently established.

231. Short circuit in an armature coil of a synchronous motor. A short circuit in an armature coil of a synchronous motor burns it out completely, charring it down to the bare copper. When this occurs, the symptoms are so evident that there is no difficulty in identifying the trouble. Under ordinary circumstances such a coil may be cut out and operation continued. In an induction motor, the current in the short-circuited coil rises only to a certain value but heats it many times more than normal. It is not necessarily burned out immediately, and perhaps it may not be burned out at all.

232. Hunting of synchronous motors. Synchronous motors served by certain primary sources of energy tend to hunt. The periodicity of the swinging is determined by properties of the armature and the circuit. It may reach a certain magnitude and there stick, or the swinging may increase until finally the motor breaks down altogether. This trouble usually occurs on long lines having considerable resistance between the source of energy and the synchronous motor. Sometimes it occurs under the most favorable conditions. Irregular rotation of a prime mover, such as a single-cylinder steam engine, is often responsible for the trouble. The usual remedy is to apply to the poles bridges of copper or brass in which currents are induced by the wavering of the armature. These currents tend to stop the motion. Different companies use different forms of bridges. When hunting or pulsating occurs and the motor is not already equipped with bridges, it is best to consult the manufacturer. In general, the weaker the field on a synchronous motor, the less the pulsation. Sometimes pulsations may be so reduced that no trouble results, simply by running with a somewhat weaker field current.

233. Improper armature connections in synchronous motors. This trouble usually manifests itself by unbalanced entering currents and by a negligible or very low starting torque. The circuits should be traced out and the connections remade until the three entering currents for three-phase or the two entering currents for two-phase are approximately

equal. These currents will not be equal even with correct connection when the armature is standing still.

234. Bearing troubles of synchronous motors are similar to those of induction motors. A difference is that with a synchronous motor the air gap between the revolving element and the poles is relatively large, so that the wearing of the bearing, which throws the armature out of center, is not so serious as with an induction motor. End play should be treated in the same way as with an induction motor.

235. Collector rings and brushes. One of the most common sources of trouble with synchronous motors is sparking at the collector rings. Much of this trouble is due to the lack of proper care. The collector rings are one of the most important parts of the machine, and they should be frequently inspected.

Any black spots that appear on the surface of the collector should be removed by rubbing lightly with fine sandpaper the first time that the machine is shut down. It is very important that this be done because although these spots are not serious in themselves, they will lead to pitting of the rings and the necessity of regrinding. However, no harm is done to the rings if the condition is corrected at once.

Sometimes an imprint of the brushes will be found on the surface of the collectors. This may occur on a machine which is subjected to moisture or acid fumes which will act on the surface of the ring. In case the machine is shut down for any length of time, the fumes will act upon the surface of the ring except where it is in contact with the brushes. The surface of the ring will be slightly high at this point. This causes the brush to jump slightly and arc and thus burn its imprint on the ring.

In such an installation it is a good practice for the operator, when shutting down the machine, to apply a little paraffin to the rings as the motor comes to a stop and while they are still warm. In general, rings give better service when the motor is run continuously than when it is shut down part of the time.

Another cause of brush imprint on the rings is a slight imbalance in the rotor, which causes a jerk or movement in the rings once every revolution. This results in jumping of the brush, with a consequent small arc, which in time burns an imprint of the brush on the ring.

Brush imprints due to fumes will occur at any point where the motor happens to stop. Imprints due to a rotor imbalance will always occur at the same place on the ring relative to the rotor.

Since there is always an electrolytic action on the surface of an iron ring, the collector operation is improved by occasionally reversing the polarity of the rings. Sometimes trouble will occur on one ring only, and by reversing the polarity every day or so the trouble will entirely disappear.

Occasionally ring trouble will arise from a ring not being of uniform hardness, so that it wears unevenly. Such a ring should be replaced. Small pinholes in the surface of a cast-iron ring will not cause trouble.

236. Bearing troubles of motors and generators. Modern generators and motors have self-oiling bearings. These should be filled to such a height that the rings will carry sufficient oil upon the shaft. If the bearings are too full, oil will be thrown out along the shaft. Watch the bearings carefully from the time at which the machine is first started until the bearings are warmed up; then note the oil level. The expansion of the oil due to heat and foaming raises the level considerably during that time. The oil should be renewed about once in 6 months or oftener if it becomes dirty or causes the bearings to heat.

The bearings must be kept clean and free from dirt. They should be examined frequently to see that the oil supply is properly maintained and that the oil rings do not stick. Use only the best quality of oil. New oil should be run through a strainer if it appears to contain any foreign substances. If the oil is used a second time, it should first be filtered and, if warm, allowed to cool. If a bearing becomes hot, first feed heavy lubricant copiously, loosen the nuts on the bearing cap, and then, if the machine is belt-connected, slacken the belt. If no relief is afforded by these means, shut down, keeping the machine running slowly until the shaft is cool so that the bearing may not "freeze." Renew the oil supply before starting again. A new machine should always be run at a slow speed for an hour or so to see that it operates properly. The bearings should be inspected at regular intervals to ensure that they always remain in good condition. The higher the speed, the greater the care to be taken in this regard.

A warm bearing, or "hot box," is probably due to one of the following causes: (1) excessive belt tension, (2) failure of the oil rings to revolve with the shaft, (3) rough bearing surface, and (4) improper lining up of bearings or fitting of the journal boxes.

CARE OF MOTORS*

237. Modern methods of design and construction have made the electric motor one of the least complicated and most dependable forms of machinery in existence and have thereby made the matter of its maintenance one of comparative simplicity. This statement should not, however, be taken to mean that proper maintenance is not important; on the contrary, it must be given careful consideration if the best performance and longest life are to be expected from the motor. The two major features, from the standpoint of their effect upon the general performance of the motor, are those of proper lubrication and the care given to insulation, because they concern the most vital, and probably the most vulnerable, parts of the machine.

238. Lubrication. The designs of bearings and bearing housings of motors have been remarkably improved. The bearings of modern motors, whether sleeve, ball, or roller, require infrequent attention. This advance in the art is not yet fully appreciated, for although there may have been some necessity for more frequent attention in the case of older designs with housings less tight than on modern machines, oiling and greasing of new motors are quite often entrusted to uninformed and careless attendants, with the result that oil or grease is copiously and frequently applied to the outside as well as the inside of bearing housings. Some of the excess lubricant is carried into the machine and lodges on the windings, where it catches dirt and thereby hastens the ultimate failure of the insulation.

Modern designs provide for a plentiful supply of oil or grease being held in dusttight and oiltight housings. If the proper amount of a suitable lubricant is applied before starting, there should be no need to refill the housings for several months even in dusty places. Infrequent though periodic and reasonable attention to modern bearings of any type will tend to ensure longer life of both bearings and insulation.

239. Greasing ball bearings. Only a high grade of grease, having the following general characteristics, should be used for ball-bearing lubrication:

*Courtesy of General Electric Co.

1. Consistency a little stiffer than that of Vaseline, maintained over the operating-temperature range
2. Melting point preferably over 150°C
3. Freedom from separation of oil and soap under operating and storage conditions
4. Freedom from abrasive matter, acid, and alkali

In greasing a motor, care must be taken not to add too large a quantity of grease, as this will cause too high an operating temperature with resulting expansion and leaking of the grease, especially with large bearings operated at slow speeds.

1. **Pressure-Relief Systems.** The following procedure is recommended for greasing ball-bearing motors equipped with a pressure-relief greasing system:

Make sure, by wiping clean the pressure-gun fitting, bearing housing, and relief plug, that no dirt gets into the bearing with the grease. Always remove the relief plug from the bottom of the bearing before using the grease gun. This prevents putting excessive pressure inside the bearing housing. Excessive pressure might rupture the bearing seals.

With a clean screwdriver or similar tool, free the relief hole of any hardened grease, so that any excess grease will run freely from the bearing. With the motor running, add grease with a hand-operated pressure gun until it begins to flow from the relief hole. This tends to purge the housing of old grease. If it might prove dangerous to lubricate the motor while it is running, follow the procedure with the motor at a standstill.

Allow the motor to run long enough after adding grease to permit the rotating parts of the bearing to expel all excess grease from the housing. This very important step prevents overgreasing the bearing. Stop the motor and replace the relief plug tightly with a wrench.

2. **Other Types.** A motor that is not equipped with the pressure-gun fitting and relief plug on the bearing housing cannot be greased by the procedures described. Under average operating conditions, the grease with which the bearing housings of these motors were packed before leaving the factory is sufficient to last approximately 1 year. When the first year of service has elapsed and once a year thereafter (or oftener if conditions warrant), the old grease should be removed and the bearings supplied with new grease. To do this, disassemble the bearing housings and clean the inside of the housings and housing plates or caps and the bearings with a suitable solvent. When they have been thoroughly cleansed of old grease, reassemble all parts except the outer plates or caps.

Apply new grease, either by hand or from a tube, over and between the balls. The amount of grease to be used varies with the type and frame size of the particular motor. The instruction sheet that accompanied the motor should be consulted for this information.

The addition of the correct amount of grease fills the bearing housing one-third to one-half full. More than the amount specified must not be used. When the motor is reassembled, any V grooves that are found in the housing lip should be refilled with grease (preferably a fibrous, high-temperature-sealing grease) which will act as an additional protective seal against the entrance of dirt or foreign particles.

240. The technique for greasing motors equipped with roller bearings is very similar to that used for ball bearings. Specific instructions for the individual design should be followed, however, because more frequent greasing or slight changes in technique may sometimes be necessary.

241. Oiling sleeve bearings. The oil level in sleeve-bearing housings should be checked periodically with the motor stopped. If the motor is equipped with an oil-filler gage, the gage should be approximately three-quarters full at all times.

If the oil is dirty, drain it off by removing the drain plug, which is usually located in the bottom or side of the bearing housing. Then flush the bearing with clean oil until the outcoming oil is clean.

In fractional-horsepower motors, there may be no means of checking oil level, as all the oil may be held in the waste packing. In such cases, a good general rule for normal motor service is to add 30 to 70 drops of oil at the end of the first year and to reoil at the end of each subsequent 1000 h of motor operation.

Most fractional-horsepower motors built today require lubrication about once a year. Small fan and agitator motors will often require more frequent lubrication, with 3-month intervals between oilings.

242. Cleaning Bearings

Sleeve Bearings. Sleeve-bearing housings are provided with liberal settling chambers into which dust, dirt, and oil sludge collect. The only cleaning necessary is to remove the drain plug and drain the oil, which will flush out most of the settled material with it.

Whenever the motor is disassembled for general cleaning, the bearing housing should be washed out with a solvent. Before being assembled, the bearing lining should be dried and the shaft covered with a film of oil.

Ball Bearings. The pressure-relief method of greasing motors, described above, tends to purge the bearing housing of used grease. Complete cleaning of bearings, therefore, is required at infrequent intervals only. For a thorough and convenient flushing when the bearings are not disassembled, the following method is recommended.

1. Wipe clean the housing, pressure-gun, and relief fittings, and then remove the fittings. Every care should be taken to keep dirt out of the bearings. Once in a bearing, a bit of abrasive may not be removed even with the most thorough cleaning. Afterward, it may become dislodged and get between the bearing surfaces with subsequent serious results.
2. With a clean screwdriver or a similar tool, free the pressure-fitting hole in the top of the bearing housing of hardened grease. Also free the relief-plug hole in the bottom of the housing of old grease to permit easy expulsion of the old grease during the cleaning process after the solvent has been added.
3. Fill a syringe with any suitable modern grease solvent, and inject some of it into the bearing housing through the pressure-fitting hole while the motor is running. As the grease becomes thinned by the solvent, it will drain out through the relief hole. Continue to add solvent until it drains out quite clear.
4. Replace the relief plug and inject solvent until it can be seen splashing in the filling hole. Allow the solvent to churn for a few minutes, and then remove the relief plug and drain off the solvent. Repeat the churning operation until the solvent runs clean.
5. When using any type of solvent for flushing, replace the relief plug and inject a small amount of light lubricating oil. Allow it to churn for a minute or two before draining off. This will flush out the solvent. To complete the job, grease the bearing, using the method previously described.

This method permits the cleaning of all standard motors operating at an angle not exceeding 15° from the horizontal, except totally enclosed, fan-cooled motors. For these

motors, the bearing at the pulley end can be flushed as described. To clean the fan-end bearing, first remove the fan cover and fan to make the drain plug at the bottom of the housing accessible.

243. Care of insulation. Motors should be stored in a dry, clean place until ready for installation. Heat should be supplied, especially for larger high-voltage machines, to protect them against alternate freezing and thawing. This advice is equally applicable to spare coils.

Motors that have been long in transit in a moist atmosphere or have been idle for an extended period without heat to prevent the accumulation of moisture should be thoroughly dried out before being placed in service. Machines may also become wet by accident, or they may sweat as a result of a difference in their temperature and that of the surrounding air, just as cold water pipes sweat in a warm, humid atmosphere. This condition is, of course, very injurious and should be prevented, particularly in the case of large or important motors, by keeping them slightly warm at all times. Current at a low voltage can be passed through the windings, electric heaters can be used, or even steam pipes can be utilized for protective purposes. During extended idle periods, tarpaulins can be stretched over the motor, and a small heater put inside to maintain the proper temperature.

244. Drying out. If a motor has become wet from any cause whatever, it should be dried out thoroughly before being operated again. The most effective method is to pass current through the windings, using a voltage low enough to be safe for the winding in its moist condition. For 2300-V motors, 230 V is usually satisfactory for circulating this drying-out current. Thermometers should be placed on the windings to see that they are being heated uniformly. Temperatures should not exceed 90°C (Class A insulation). Applying the heat internally in this manner drives out all moisture and is particularly effective on high-voltage motors, in which the insulation is comparatively thick.

Heat can be applied externally by placing heating units around or in the machine, covering the whole with canvas or other covering and leaving a vent at the top to permit the escape of moisture. In doing this it is essential that warm air circulate over all the surfaces to be dried. The air should be allowed to escape as soon as it has absorbed moisture. Therefore, the heaters should be so placed and baffles so arranged as to get a natural draft, or small fans can be used to force circulation. Twelve-inch (0.3-m) fans set to blow air across the fronts of glow heaters and then into the lower part of a machine from opposite sides, and so on up around the windings and out the top, will produce excellent results. The temperature of the winding should not be allowed to exceed 100°C for Class A-insulated motors. Smaller machines can conveniently be placed in ovens, the same temperature limits being observed.

245. Insulation-resistance tests. The time required for complete drying out depends considerably on the size and voltage of the motor. Insulation-resistance measurements should be taken at intervals of 4 or 5 h until a fairly constant value is reached. This value should at least equal the recommended Institute of Electrical and Electronic Engineers standard, which is

$$\text{Megohms} = \frac{\text{voltage}}{\text{kVA}/100 + 1000} \quad (9)$$

The insulation resistance of dry motors in good condition is considerably higher than this value.

The more convenient way to measure this resistance is through the use of a megohmmeter, although if a 500-V dc source is available, readings can be taken with a voltmeter. The ungrounded side of the system should be connected to all the motor terminals through the voltmeter, the opposite or grounded side being connected directly to the motor frame. The insulation resistance is found by the method of Sec. 177 of Div. 1.

When the voltmeter method is used, the connection to the frame should always be made through a fuse of not more than 10 A in size. The circuit should be tested, and the side showing a complete or partial ground then connected to the frame through the fuse.

Obviously, the insulation resistance varies over a wide range, depending upon moisture, temperature, cleanliness, etc., but it is a good indication of the general condition of the insulation and its ability to stand the operating voltage. Such readings should be taken before a high-potential test to determine whether the insulation is ready for such a test and afterward to make sure that the high potential has not injured the insulation.

246. High-voltage tests. High-voltage tests should be made after drying out or after repairs to determine the dielectric strength of the insulation. New windings should successfully stand a high-potential 50–60 Hz test of twice the normal voltage plus 1000. There is some disagreement as to the proper value to use for motors that have been in operation for some time, but it is reasonable to assume that after thorough cleaning and drying the winding of a used motor should stand 150 percent of normal voltage for 1 min. Small high-potential testing sets are available for such work and are of such capacity that very little damage will result from a breakdown during a test.

247. Periodic inspection. A systematic and periodic inspection of motors is necessary to ensure best operation. Of course, some machines are installed where conditions are ideal and dust, dirt, and moisture are not present to an appreciable degree, but most motors are located where some sort of dirt accumulates in the windings, lowering the insulation resistance and cutting down creepage distance. Steel-mill dusts are usually highly conductive, if not abrasive, and lessen creepage distances. Other dusts are highly abrasive and actually cut the insulation while being carried through by the ventilating air. Fine cast-iron dust quickly penetrates most insulating materials. Hence the desirability of cleaning motors periodically. If conditions are extremely severe, open motors might require a certain amount of cleaning each day. For less severe conditions, weekly inspection and partial cleaning are desirable. Most machines require a complete overhauling and thorough cleaning about once a year.

For the weekly cleaning, the motor should be blown out, using moderate-pressure, dry, compressed air of about 25 to 30 psi (172,369 to 206,843 Pa) pressure. If conducting and abrasive dusts are present, even lower pressure may be necessary, and suction is to be preferred, as damage can easily be caused by blowing the dust and metal chips into the insulation. On most dc motors and large ac motors the windings are usually fairly accessible, and the air can be properly directed to prevent such damage. On the larger ac machines the air ducts should be blown out so that the ventilating air can pass through as intended.

On large machines insulation-resistance readings should be taken in the manner indicated above. As long as the readings are consistent, the condition of the insulation would ordinarily be considered good. Low readings would indicate increased current leakage to ground or to other conductors, owing to one of perhaps several causes, such as deteriorated insulation, moisture, dirty or corroded terminals, etc.

Inspection and servicing should be systematic. Frequency of inspection and degree of thoroughness may vary and must be determined by the maintenance engineer. They will be governed by (1) the importance of the motors in the production scheme (If the motor fails,

will production be slowed seriously?), (2) percentage of the day in which the motor operates, (3) the nature of the service, and (4) the environment.

An inspection schedule must therefore be elastic and adapted to the needs of each plant. The following schedule, covering both ac and dc motors, is based on average conditions insofar as dust and dirt are concerned.

Every Week

1. Examine commutator and brushes.
2. Check oil level in bearings.
3. See that oil rings turn with the shaft.
4. See that the shaft is free of oil and grease from bearings.
5. Examine starter, switch, fuses, and other controls.
6. Start motor and see that it is brought up to speed in normal time.

Every Six Months

1. Clean motor thoroughly, blowing out dirt from windings, and wipe commutator and brushes.
2. Inspect commutator clamping ring.
3. Check brushes and renew any that are more than half worn.
4. Examine brush holders and clean them if dirty. Make sure that brushes ride free in the holders.
5. Check brush pressure.
6. Check brush position.
7. Drain, wash out, and renew oil in sleeve bearings.
8. Check grease in ball or roller bearings.
9. Check operating speed or speeds.
10. See that the end play of the shaft is normal.
11. Inspect and tighten connections on the motor and control.
12. Check current input and compare with normal input.
13. Run the motor and examine the drive critically for smooth running, absence of vibration, and worn gears, chains, or belts.
14. Check motor foot bolts, end-shield bolts, pulley, coupling, gear and journal set-screws, and keys.
15. See that all covers, belt, and gear guards are in good order, in place, and securely fastened.

Once a Year

1. Clean out and renew grease in ball- or roller-bearing housings.
2. Test insulation by a megohmmeter.
3. Check the air gap.
4. Clean out magnetic dirt that may be hanging on poles.
5. Check clearance between the shaft and journal boxes of sleeve-bearing motors to prevent operation with worn bearings.

6. Clean out undercut slots in the commutator.
7. Examine connections of the commutator and armature coils.
8. Inspect armature bands.

247A. Records. Maintenance persons should have a record card for every motor in the plant. All repair work, with the cost, and every inspection can be entered on the record. In this way, excessive attention or expense will show up, and the causes can be determined and corrected.

Inspection records will also serve as a guide to tell when motors should be replaced because of the high cost to keep them operating. Misapplications, poor drive engineering, and the like will also be disclosed.

248. Brush inspection. The first essential for satisfactory operation of brushes is free movement of the brushes in their holders. Uniform brush pressure is necessary to assure equal current distribution. Adjustment of brush holders should be set so that the face of the holder is approximately $\frac{1}{8}$ in (3.175 mm) up from the commutator; any distance greater than this will cause brushes to wedge, resulting in chattering and excessive sparking.

Check the brushes to make sure that they will *not* wear down too far before the next inspection. Keep an extra set of brushes available so that replacements can be made when needed. Sand in new brushes, and run the motor without load as long as possible.

It is false economy to use brushes down to the absolute minimum length before replacement. There have been cases in which brushes wore down until the metal where the pigtail connects to the brush touched the commutator. This, of course, caused severe damage to the commutator.

Make sure that each brush surface in contact with the commutator has the polished finish that indicates good contact and that the polish covers all this surface of the brush. Check the freedom of motion of each brush in the brush holder.

When replacing a brush, be sure to put it in the same brush holder and in its original position. It has been found helpful to scratch a mark on one side of the brush when removing it so that it will be replaced properly.

Check the springs that hold the brushes against the commutator. Improper spring pressure may lead to commutator wear and excessive sparking. Excessive heating may have annealed the springs, in which case they should be replaced and the cause of heating corrected. Larger motors have means for adjusting the spring pressure, which should be 2 to $2\frac{1}{2}$ psi (13,790 to 17,237 Pa) of area of brush contact with the commutator.

249. Commutator inspection. Inspect the commutator for color and condition. It should be clean, smooth, and a polished brown color where the brushes ride on it. A bluish color indicates overheating of the commutator.

Roughness of the commutator should be removed by sandpapering or stoning. Never use emery cloth or an emery stone. For this operation, run the motor without load. If sandpaper is used, wrap it partly around a wood block. The stone is essentially a piece of grindstone, known to the trade as a commutator stone. Press the stone or sandpaper against the commutator with moderate pressure with the motor running without load, and move it back and forth across the commutator surface. *Use care not to come in contact with live parts.*

If the armature is very rough, it should be taken out and the commutator turned down in a lathe. When this is done, it is usually necessary to cut back the insulation between the

commutator bars slightly. After the commutator has been turned down, the brushes should be sanded and run in as described previously. This is not necessary after light sandpapering or stoning.

250. Cleaning. About once a year or oftener if conditions warrant, motors should be cleaned thoroughly. Smaller motors, the windings of which are not particularly accessible, should be taken apart.

First, the heavy dirt and grease should be removed with a heavy, stiff brush, wooden or fiber scrapers, and cloths. Rifle-cleaning bristle brushes can be used in the air ducts. Dry dust and dirt may be blown off, using dry compressed air at moderate pressure, for example, 25 to 50 psi (172,369 to 344,738 Pa) pressure at the point of application, taking care to blow the dirt out from the winding. As stated before, if the dirt and dust are metallic, conducting, or abrasive, air pressure may drive the material into the insulation and damage it. Hence, for such conditions pressure is not so satisfactory as a suction system. If compressed air at low pressure is used, care must be taken to direct it properly so that the dust will not cause damage and will not be pocketed in the various corners.

Grease, oil, and sticky dirt are easily removed by applying cleaning liquids specifically designed for purpose. Any of these liquids evaporate quickly and, if not applied too generously, will not soak or injure the insulation.

If one of the other liquids must be used, it should be applied outdoors or in a well-ventilated room. It must be remembered that gasoline or naphtha vapor is heavier than air and will flow into pits, basements, etc., and may remain there for hours or even days. The casual smoker or a spark from a hammer or chisel or even from a shoe nail may cause a serious explosion. Therefore, proper ventilation of the room is essential and may require specially piped ventilating fans. The use of carbon tetrachloride obviates the explosion hazard, but some ventilation is required to remove the vapor, which might affect the safety and comfort of the workers.

There are several good methods of applying the cleansing liquid. A cloth, saturated in the liquid, can be used to wipe the coils. A paintbrush, dipped in the liquid container, is handy to get into the corners and crevices and between small coils. Care should be taken not to soak the insulation, as would be the case if coils or small machines were dipped into the liquid.

Probably the best method of applying the liquid is to spray it on. A spray gun, paint-spraying appliance, or an ordinary blowtorch is often used with good results, although the last device is likely to give a heavier spray than desirable. An atomizer will give excellent results using a pressure of about 80 psi (551,581 Pa) if the insulation is in good condition or 40 to 50 psi (275,790 to 344,738 Pa) if the insulation is old. The atomizer should be held not more than 5 or 6 in (127 or 152 mm) away from the coils.

Although the insulation will dry quickly at ordinary room temperature after such cleaning methods, it is highly desirable to heat it to drive off all moisture before applying varnish. This heating or drying-out process has already been discussed and therefore need only be mentioned here.

If the motor can be spared from service long enough, the insulation should be dried out by heating to from 90 to 100°C. While the motor is warm, a high-grade insulating varnish should be applied. For severe acid, alkali, or moisture conditions, a black plastic baking varnish or epoxy resin is best. If oil or dusts are present, a clear or yellow varnish or epoxy resin should be used.

The varnish may be sprayed or brushed on. For small stators or rotors, it is best to dip the windings into the varnish, cleaning off the adjacent metal parts afterward by using a solvent of the varnish. After applying the varnish, the best results are obtained by baking for 6 to 7 h at about 100°C. Experience with particular conditions of operation or the condition

of the insulation may indicate the desirability of applying a second coat of the same varnish, followed again by 6 to 7 h of baking at 100°C.

If the machine must be put back in service quickly or if facilities are not available for baking, fairly good results will be obtained by applying one of the quick-drying black or clear varnishes which dry in a few hours at ordinary room temperature.

Insulation-resistance readings should be taken, as explained previously, to determine whether the winding is in satisfactory condition for applying a high-potential test. After this test, it is a good practice to run the motor without load for a short time to make certain that everything has been connected, assembled, and adjusted properly.

Motors should generally be given an overhauling at intervals of 5 years or so normally or, if the service is more severe, more frequently. This practice is beneficial in avoiding breakdowns and in extending the useful life of the equipment. When periodic overhauling is practiced, the following advice may be helpful:

1. Check the motor air gap, between stator and rotor, with feelers for uniformity. Too little clearance at the bottom may indicate worn bearings.
2. Take the motor apart and inspect it thoroughly. Measurement of the bearings and journals may disclose a need for new bearing linings. Remove the waste from waste-packed bearings and rearrange or replace it so that any glaze on the wool is removed from its point of contact with the shaft. Any gummy deposit on the wool should be replaced. All lubricant should be cleaned out of the bearings, and a fresh supply put in when the motor is reassembled.
3. The rotors should be cleaned with a solvent to remove any accumulated dirt, after which any rust should be removed with fine sandpaper (not emery paper). When clean and dry, the rotors should be coated with a good grade of clear varnish or lacquer to protect them from moisture. To prevent injury to the bearings, they should be completely protected with a clean rag when the motor is disassembled.
4. The rotors of wound-rotor motors should be given the same treatment as the stators. In addition, soldered joints and binding cords should be inspected and any weakness remedied.
5. The stator bore should be cleaned of dirt with a solvent, and any rust should be removed with fine sandpaper (not emery paper). Care should be taken during this operation not to damage the top sticks or end turns of the stator winding. When the stator bore has dried, any remaining dirt in the bore should be wiped out with a cloth or brushed out with a soft brush. A hand bellows or dry compressed air at low pressure may also be employed.

CONTROL EQUIPMENT FOR MOTORS

251. Electric Controller Terminology

Ambient Temperature. The temperature of the medium such as air, water, or earth into which the heat of the equipment is dissipated. For self-ventilated equipment, the ambient temperature is the average* temperature of the air in the immediate neighborhood of the equipment. For air- or gas-cooled equipment with forced ventilation or secondary water cooling, the ambient temperature is taken as that of the ingoing air or cooling gas. For self-ventilated enclosed (including oil-immersed) equipment considered as a complete unit, the ambient temperature is the average* temperature of the air outside the enclosure in the immediate neighborhood of the equipment.

*The average of temperature readings at several locations.

Apparatus. A term said to describe the enclosure, the enclosed equipment, and attached appurtenances.

Auxiliary Contacts of a Switching Device. Those contacts which, in addition to the main-circuit contacts, function with the movement of the latter.

Combination Controller. A full magnetic or semimagnetic controller with additional externally operable disconnecting means contained in a common enclosure. The disconnecting means may be a circuit breaker or a disconnect switch. Combination starters are specific forms of combination controllers.

Contactors. A two-state (on-off) device for repeatedly establishing and interrupting an electric power circuit. Interruption is obtained by introducing a gap or a very large impedance.

Continuous Duty. A duty that demands operation at substantially constant load for an indefinitely long time.

Control Circuit of a Control Apparatus or System. That circuit which carries the electric signals directing the performance of the controller but does not carry the main power circuit.

Drum Controller. An electric controller that utilizes a drum switch as the main switching element.

Drum Switch. A switch in which the electric contacts are made by segments or surfaces on the periphery of a rotating cylinder or sector or by the operation of a rotating cam.

Duty (of a Controller). A requirement of service that defines the degree of regularity of the load. The frequency and length of time of operation and rest must be specified.

Electric Controller. A device or group of devices which serves to govern in some predetermined manner the electric power delivered to the apparatus to which it is connected. The term *controller* does not apply to a simple disconnecting means whose primary purpose in a motor circuit is to disconnect the circuit, together with the motor and its controller, from the source of power.

Full-Magnetic Controller. An electric controller having all its basic functions performed by devices that are operated by electromagnets.

General-Use Switch. A switch which is intended for use in general distribution and branch circuits. It is rated in amperes and is capable of interrupting the rated current at the rated voltage.

Intermittent Duty. A requirement of service that demands operation for alternate periods of (1) load and no load, (2) load and rest, or (3) load, no load, and rest, such alternate intervals being definitely specified.

Isolating Switch. A switch intended for isolating an electric circuit from the source of power. It has no interrupting rating, and it is intended to be operated only after the circuit has been opened by some other means.

Magnetic Contactor. A contactor actuated by electromagnetic means.

Magnetic-Control Relay. A relay which is actuated by electromagnetic means. When not otherwise qualified, the term refers to a relay intended to be operated by the opening and closing of its coil circuit and having contacts designated for energizing and/or deenergizing the coils of magnetic contactors or other magnetically operated device.

Manual Controller. An electric controller having all its basic functions performed by devices that are operated by hand; for example, a toggle switch or a drum-type controller.

Master Switch. A switch dominates the operation of contactors, relays, or other remotely operated devices. A master switch may be automatic, such as a float switch or a pressure regulator, or it may be manually operated, such as a drum, pushbutton, or knife switch.

Motor-Circuit Switch. A switch intended for use in a motor branch circuit. It is rated in horsepower, and it is capable of interrupting the maximum operating overload (see "Operating Overload") current of a motor of the same rating at the rated voltage.

Open-Phase Protection (Phase-Failure Protection). A form of protection that operates to disconnect the protected equipment on the loss of current in one phase conductor of a polyphase circuit or to prevent the application of power to the protected equipment in the absence of one or more phase voltages of a polyphase system.

Open-Phase Relay. A polyphase relay designed to operate when one or more input phases of a polyphase circuit are open.

Operating Overload. The overcurrent to which electric apparatus is subjected in the course of the normal operating conditions that it may encounter. For example, those currents in excess of running current which occur for a short time as a motor is started or jogged are considered normal operating overloads for control apparatus.

Overcurrent Relay. A relay that operates when the current through the relay during its operating period is equal to or greater than its setting.

Overload Protection. The effect of a device operative on excessive current, but not necessarily on short circuit, to cause and maintain the interruption of current to the device governed. When it is a function of a controller for a motor, the device employed provides for interrupting any operating overloads but is not required to interrupt short circuits.

Overload Relay. A relay that responds to electric load and operates at a preset value of overload. Overload relays are usually current relays, but they may be power, temperature, or other relays.

Part-Winding Starter. A starter which applies voltage successively to the partial sections of the primary winding of an alternating-current motor.

Periodic Duty. A type of intermittent duty in which the load conditions are regularly recurrent.

Phase-Sequence-Reversal Protection (Phase-Reversal Protection). A form of protection that prevents energization of the protected equipment on reversal of the phase sequence in a polyphase circuit.

Pilot-Duty Rating. A generic term formerly used to indicate the ability of a control device to control other devices.

Relay. An electric device that is designed to interpret input conditions in a prescribed manner and after specified conditions have been met to respond to cause contact operation or similar abrupt change in associated electric control circuits. Inputs are usually electric but may be mechanical, thermal, or of other quantities. Limit switches and similar simple devices are not relays. A relay may consist of several units, each responsive to specified inputs, the combination providing the desired performance characteristic.

Semimagnetic Controller. An electric controller having only part of its basic function performed by devices that are operated by electromagnets.

Snap Action. A rapid motion of contacts from one position to another position or their return. This action is relatively independent of the rate of travel of the actuator.

Solid-State Contactor. A contactor whose function is performed by a semiconductor device or devices.

Starter. An electric controller for accelerating a motor from rest to normal speed, to protect, and to stop the motor. (A device designed for starting a motor in either direction of rotation includes the additional function of reversing and should be designated a *reversing starter*.)

Three-Wire Control. A control function which utilizes a momentary-contact pilot device and a holding circuit contact to provide undervoltage protection.

Two-Wire Control. A control function which utilizes a maintained-contact type of pilot device to provide undervoltage release.

Undervoltage Protection. The effect of a device, operative on the reduction or failure of voltage, to cause and maintain the interruption of power to the main circuit.

Undervoltage Release. The effect of a device, operative on the reduction or failure of voltage, to cause the interruption of power to the main circuit but not to prevent the reestablishment of the main circuit on return of voltage.

252. Enclosure of controllers. Except when the control equipment is mounted on switchboard panels under the control of experienced operators, the control equipment of motors should be enclosed in a metal or approved nonmetallic case. Different types of enclosures are available to meet the requirements of any surrounding conditions. Most general-purpose controllers are enclosed in a sheet-metal case. If a controller must be placed in a hazardous location in an explosive atmosphere, the advice of the experts of the control manufacturers should be obtained. The standard types of nonventilated enclosures are given in Sec. 253.

253. Classification of standard types of nonventilated enclosures for electric controllers (National Electrical Manufacturers Association) is as follows:*

Type 1. Enclosures constructed for indoor use to provide a degree of protection to personnel against access to hazardous parts and to provide a degree of protection of the equipment inside the enclosure against ingress of solid foreign objects (falling dirt).

*This material is reproduced with the permission of the National Electrical Manufacturers Association from NEMA Standards Publication NEMA 250-2003, copyright © 2003 by NEMA.

Type 2. Enclosures constructed for indoor use to provide a degree of protection to personnel against access to hazardous parts; to provide a degree of protection of the equipment inside the enclosure against ingress of solid foreign objects (falling dirt); and to provide a degree of protection with respect to harmful effects on the equipment due to the ingress of water (dripping and light splashing).

Type 3. Enclosures constructed for either indoor or outdoor use to provide a degree of protection to personnel against access to hazardous parts; to provide a degree of protection of the equipment inside the enclosure against ingress of solid foreign objects (falling dirt and windblown dust); to provide a degree of protection with respect to harmful effects on the equipment due to the ingress of water (rain, sleet, snow); and that will be undamaged by the external formation of ice on the enclosure.

Type 3R. Enclosures constructed for either indoor or outdoor use to provide a degree of protection to personnel against access to hazardous parts; to provide a degree of protection of the equipment inside the enclosure against ingress of solid foreign objects (falling dirt); to provide a degree of protection with respect to harmful effects on the equipment due to the ingress of water (rain, sleet, snow); and that will be undamaged by the external formation of ice on the enclosure.

Type 3S. Enclosures constructed for either indoor or outdoor use to provide a degree of protection to personnel against access to hazardous parts; to provide a degree of protection of the equipment inside the enclosure against ingress of solid foreign objects (falling dirt and windblown dust); to provide a degree of protection with respect to harmful effects on the equipment due to the ingress of water (rain, sleet, snow); and for which the external mechanism(s) remain operable when ice laden.

Type 3X. Enclosures constructed for either indoor or outdoor use to provide a degree of protection to personnel against access to hazardous parts; to provide a degree of protection of the equipment inside the enclosure against ingress of solid foreign objects (falling dirt and windblown dust); to provide a degree of protection with respect to harmful effects on the equipment due to the ingress of water (rain, sleet, snow); that provides an additional level of protection against corrosion and that will be undamaged by the external formation of ice on the enclosure.

Type 3RX. Enclosures constructed for either indoor or outdoor use to provide a degree of protection to personnel against access to hazardous parts; to provide a degree of protection of the equipment inside the enclosure against ingress of solid foreign objects (falling dirt); to provide a degree of protection with respect to harmful effects on the equipment due to the ingress of water (rain, sleet, snow); that will be undamaged by the external formation of ice on the enclosure that provides an additional level of protection against corrosion; and that will be undamaged by the external formation of ice on the enclosure.

Type 3SX. Enclosures constructed for either indoor or outdoor use to provide a degree of protection to personnel against access to hazardous parts; to provide a degree of protection of the equipment inside the enclosure against ingress of solid foreign objects (falling dirt and windblown dust); to provide a degree of protection with respect to harmful effects on the equipment due to the ingress of water (rain, sleet, snow); that provides an additional level of protection against corrosion; and for which the external mechanism(s) remain operable when ice laden.

Type 4. Enclosures constructed for either indoor or outdoor use to provide a degree of protection to personnel against access to hazardous parts; to provide a degree of protection of

the equipment inside the enclosure against ingress of solid foreign objects (falling dirt and windblown dust); to provide a degree of protection with respect to harmful effects on the equipment due to the ingress of water (rain, sleet, snow, splashing water, and hose-directed water); and that will be undamaged by the external formation of ice on the enclosure.

Type 4X. Enclosures constructed for either indoor or outdoor use to provide a degree of protection to personnel against access to hazardous parts; to provide a degree of protection of the equipment inside the enclosure against ingress of solid foreign objects (windblown dust); to provide a degree of protection with respect to harmful effects on the equipment due to the ingress of water (rain, sleet, snow, splashing water, and hose-directed water); that provides an additional level of protection against corrosion; and that will be undamaged by the external formation of ice on the enclosure.

Type 5. Enclosures constructed for indoor use to provide a degree of protection to personnel against access to hazardous parts; to provide a degree of protection of the equipment inside the enclosure against ingress of solid foreign objects (falling dirt and settling airborne dust, lint, fibers, and flyings); and to provide a degree of protection with respect to harmful effects on the equipment due to the ingress of water (dripping and light splashing).

Type 6. Enclosures constructed for either indoor or outdoor use to provide a degree of protection to personnel against access to hazardous parts; to provide a degree of protection of the equipment inside the enclosure against ingress of solid foreign objects (falling dirt); to provide a degree of protection with respect to harmful effects on the equipment due to the ingress of water (hose-directed water and the entry of water during occasional temporary submersion at a limited depth); and that will be undamaged by the external formation of ice on the enclosure.

Type 6P. Enclosures constructed for either indoor or outdoor use to provide a degree of protection to personnel against access to hazardous parts; to provide a degree of protection of the equipment inside the enclosure against ingress of solid foreign objects (falling dirt); to provide a degree of protection with respect to harmful effects on the equipment due to the ingress of water (hose-directed water and the entry of water during prolonged submersion at a limited depth); that provides an additional level of protection against corrosion and that will be undamaged by the external formation of ice on the enclosure.

Type 7. Type 7 enclosures are intended for use indoors in locations classified as Class I, Group A, B, C, or D, as defined in the National Electrical Code. The letters A, B, C, and D indicate the gas or vapor atmospheres in the hazardous location. The enclosures are marked with the appropriate Class and Group(s) for which they have been qualified.

These enclosures are capable of withstanding the pressures resulting from an internal explosion of the specified gases and containing such an explosion sufficiently that an explosive gas-air mixture existing in the atmosphere surrounding the enclosure will not be ignited. Enclosed heat-generating devices do not cause external surfaces to reach temperatures capable of igniting explosive gas-air mixtures in the surrounding atmosphere.

Type 8. Type 8 enclosures are for indoor or outdoor use in locations classified as Class I, Group A, B, C, or D, as defined in the National Electrical Code. The letters A, B, C, and D indicate the gas or vapor atmospheres in the hazardous location. The enclosures are marked with the appropriate Class and Group(s) for which they have been qualified.

These enclosures and enclosed devices are arranged so that all arcing contacts, connections, and so forth are immersed in oil. Arcing is confined under the oil such that it will not ignite an explosive mixture of the specified gases in internal spaces above the oil or in the

atmosphere surrounding the enclosure. Enclosed heat-generating devices do not cause external surfaces to reach temperatures capable of igniting explosive gas-air mixtures in the surrounding atmosphere.

Type 9. Type 9 enclosures are intended for indoor use in locations classified as Class II, Group E, F, or G, as defined in the National Electrical Code. The letters E and G indicate the dust atmospheres in the hazardous location. The enclosures are marked with the appropriate Class and Group(s) for which they have been qualified.

These enclosures are capable of preventing the entrance of dust. Enclosed heat-generating devices do not cause external surfaces to reach temperatures capable of igniting or discoloring dusts on the enclosure or igniting dust-air mixtures in the surrounding atmosphere.

Type 10. Type 10 enclosures are designed to meet the requirements of the Mine Safety and Health Administration, U.S. Department of the Interior, which may be in effect from time to time. They are for equipment to be used in mines with atmospheres containing methane or natural gas with or without coal dust.

Type 12. Enclosures constructed (without knockouts) for indoor use to provide a degree of protection to personnel against access to hazardous parts; to provide a degree of protection of the equipment inside the enclosure against ingress of solid foreign objects (falling dirt and circulating dust, lint, fibers, and flyings); and to provide a degree of protection with respect to harmful effects on the equipment due to the ingress of water (dripping and light splashing).

Type 12K. Enclosures constructed (with knockouts) for indoor use to provide a degree of protection to personnel against access to hazardous parts; to provide a degree of protection of the equipment inside the enclosure against ingress of solid foreign objects (falling dirt and circulating dust, lint, fibers, and flyings); and to provide a degree of protection with respect to harmful effects on the equipment due to the ingress of water (dripping and light splashing).

Type 13. Enclosures constructed for indoor use to provide a degree of protection to personnel against access to hazardous parts; to provide a degree of protection of the equipment inside the enclosure against ingress of solid foreign objects (falling dirt and circulating dust, lint, fibers, and flyings); to provide a degree of protection with respect to harmful effects on the equipment due to the ingress of water (dripping and light splashing); and to provide a degree of protection against the spraying, splashing, and seepage of oil and non-corrosive coolants.

253A. The following tables provide comparisons of specific applications of enclosures for indoor and outdoor nonhazardous locations (NEMA standard).*

Note that because the NEC has relocated this information from the motor article (Article 430) to the general requirements article (Article 110), it now applies to enclosures generally and not just for motor controllers:

*This material is reproduced with the permission of the National Electrical Manufacturers Association from NEMA Standards Publication NEMA 250-2003, copyright © 2003 by NEMA.

Comparison of Specific Applications of Enclosures for Indoor Nonhazardous Locations

Provides a degree of protection against the following environmental conditions	Type of enclosure									
	1*	2*	4	4X	5	6	6P	12	12K	13
Incidental contact with the enclosed equipment	X	X	X	X	X	X	X	X	X	X
Falling dirt	X	X	X	X	X	X	X	X	X	X
Falling liquids and light splashing	...	X	X	X	X	X	X	X	X	X
Circulating dust, lint, fibers, and flyings [†]	X	X	...	X	X	X	X	X
Settling airborne dust, lint, fibers, and flyings [†]	X	X	X	X	X	X	X	X
Hosedown and splashing water	X	X	...	X	X
Oil and coolant seepage	X	X	X
Oil or coolant spraying and splashing	X
Corrosive agents	X	X
Occasional temporary submersion	X	X
Occasional prolonged submersion	X

*These enclosures may be ventilated. However, Type 1 may not provide protection against small particles of falling dirt when ventilation is provided in the enclosure top. Consult the manufacturer.

[†]These fibers and flyings are nonhazardous materials and are not considered the Class III-type ignitable fibers or combustible flyings. For Class III-type ignitable fibers or combustible flyings. For Class III-type ignitable fibers or combustible flyings see the National Electrical Code, Article 500.

Comparison of Specific Applications of Enclosures for Outdoor Nonhazardous Locations

Provides a degree of protection against the following environmental conditions	Type of enclosure									
	3	3R*	3S	3X	3RX*	3SX	4	4X	6	6P
Incidental contact with the enclosed equipment	X	X	X	X	X	X	X	X	X	X
Rain, snow, and sleet [†]	X	X	X	X	X	X	X	X	X	X
Sleet [‡]	X	X
Windblown dust	X	...	X	X	...	X	X	X	X	X
Hosedown	X	X	X	X
Corrosive agents	X	X	X	...	X	...	X
Occasional temporary submersion	X	X
Occasional prolonged submersion	X

*These enclosures may be ventilated.

[†]External operating mechanisms are not required to be operable when the enclosure is ice-covered.

[‡]External operating mechanisms are operable when the enclosure is ice-covered.

254. Motor controllers* are classified according to size and to the method of performing the necessary operations, shown below.

1. Manual
2. Magnetic
 - a. Full magnetic with automatic master switch
 - b. Full magnetic with manual master switch
 - c. Semimagnetic

*This material is reproduced with the permission of the National Electrical Manufacturers Association from NEMA Standards Publication ICS2-2000, copyright © 2000 by NEMA.

The following tables list the NEMA controller sizes for manual and magnetic single- and three-phase motor controllers. There are no NEMA size designations for semimagnetic controllers.

Manual Motor Controllers: Maximum Ratings

NEMA size	Single-phase hp (LRA)		Three-phase hp (LRA)	
	115 V, 60 Hz	230 V, 60 Hz	200 V, 60 Hz	460 V, 60 Hz
M-0	1 (80)	2 (65)	3	5 (42)
M-1	2 (130)	3 (90)	7½	10 (70)
M-1P	3 (140)	5 (135)		

Ratings for Three-Phase Single-Speed Full-Voltage Magnetic Controllers for Limited Plugging and Limited Jogging Duty

Size of controller	Continuous current rating (A)	At 200 V 60 Hz		At 230 V 60 Hz		At 400 V 50 Hz		At 460 V 60 Hz		At 575 V 60 Hz		Service-limit current rating (A)
		HP*	LRA	HP*	LRA	HP*	LRA	HP*	LRA	HP*	LRA	
00	9	1.5	46	1.5	40	1.5	26	2	25	2	20	11
0	18	3	73.6	3	64	5	58	5	46	5	36.8	21
1	27	7.5	146	7.5	127	10	102	10	81	10	64.8	32
2	45	10	186.3	15	232	25	231	25	183	25	146	52
3	90	25	420	30	435	50	458	50	363	50	290	104
4	135	40	667	50	725	75	686	100	725	100	580	156
5	270	75	1248	100	1450	150	1369	200	1450	200	1160	311
6	540	150	2496	200	2900	300	2746	400	2900	400	2320	621
7	810			300	4400			600	4350	600	3480	932
8	1215			450	6500			900	6525	900	5220	1400
9	2250			800	11600			1600	11600	1600	9280	2590

*These horsepower ratings are based on the locked-rotor current ratings given in Table 45, Div. 12. For motors having higher locked-rotor currents, a larger controller should be used so that its locked-rotor current rating is not exceeded.

Ratings for Single-Phase Full-Voltage Magnetic Controllers for Limited Plugging and Limited Jogging Duty

Size or controller	Continuous current rating, A	Single-phase horsepower (LRA) at		Service-limit current rating, A
		115 V	230 V	
00	9	⅓ (50)	1 (48)	11
0	18	1 (96)	2 (72)	21
1	27	2 (144)	3 (102)	32
IP	36	3 (204)	5 (168)	42
2	45	3	7½ (240)	52
3	90	7.5 (480)	15 (450)	104

In a manual controller all the basic operations, such as the closing of switches and the movement of rheostat handles, are performed by hand.

In a magnetic controller the basic functions of the closing of switches or the movement of rheostat handles are performed by magnetic contactors (see Sec. 255). A full-magnetic controller is one which automatically performs all its operations in the proper sequence after the closure of a master switch. The master switch for a full-magnetic controller, such as a float switch, a pressure switch or regulator, or a time switch, is frequently automatically operated. In other cases, the master switch, such as a pushbutton, is manually operated. A semimagnetic controller operates with a combination of manual and magnetic performance. In certain cases, some of the basic operations are performed by hand and the rest by means of magnetic contactors. In other types of semimagnetic controllers, all the basic operations are performed with magnetic contactors, but the time and sequence of the operation of the contactors are controlled by hand.

255. A magnetic contactor is a switch operated by an electromagnet. One form of magnetic contactor is shown in Fig. 7.111, which illustrates the basic parts. It consists of a stationary electric magnet, as at *a* in the figure, and a movable iron armature *b*, on which are mounted an electrical contact *c* and a stationary electrical contact *d*. When no current is flowing through the operating coil *e* of the electric magnet *a*, the armature is held away from the magnet by means of gravitational force or a spring. Under this condition the contacts *c* and *d* are open. When the operating coil is energized, the magnet attracts the armature and closes the electrical contacts *c* and *d*.

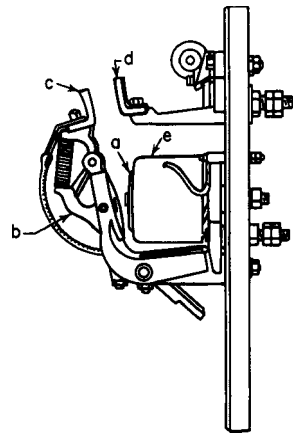


FIGURE 7.111 Magnetic contactor. [Square D, Schneider Electric]

Magnetic contactors may be of the shunt or the series type, depending upon the connection of the operating coil. In the shunt contactor the operating coil is connected across the terminals of the circuit or portion of the circuit that the contactor is controlling. In some cases the operating coil of a shunt contactor might be connected to a separate course of supply from the circuit controlled by the contactor. A series contactor has its operating coil connected in series with the circuit controlled by the contactor.

256. Series contactors for motor-control application are constructed so that the contactor will not close until the current of the circuit has dropped below a definite value. They are made in two general forms, *single-coil* and *two-coil*. The single-coil type is referred to simply as a series contactor, while the two-coil type is called a *series lockout* contactor. Both types, however, possess the lock-out feature of the contactor; i.e., they are held open until the current has dropped to some definite value.

The general principle of operation of the single-coil type can be understood from a study of Fig. 7.112. The current passing through the operating coil produces an mmf which acts upon two magnetic paths. One path is through the core of the coil, a section of restricted area *A*, the armature, and main air gap back to the core of the coil. The other path is through the core of the coil, adjustable air gap, tail of armature *B*, armature, and main air gap

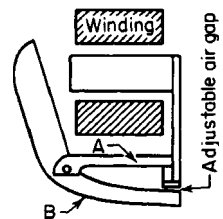


FIGURE 7.112 A series contactor operating magnet.

back to the core of the coil. When no current is passing through the coil, the armature is in the open position. When a large current is passing through the operating coil, the mmf is so strong that part *A* of restricted area becomes saturated so that the flux through this part cannot exceed a certain amount. The magnetic flux through the adjustable air gap and part *B* will vary with the current through the operating coil, and this path will not become saturated. Any flux passing across the adjustable air gap produces an attracting force on the tail of armature *B* which tends to hold the armature open against the closing force exerted between the core and the main part of the armature. As the current is reduced in value, the

flux across the adjustable air gap is reduced and thus reduces the holding-out force on tail *B*. After the current has been reduced to a certain value, which depends upon the adjustment of the adjustable air gap, the holding-out force on tail *B* is not sufficient to overcome the closing force exerted by the core upon the main part of the armature, and the contactor closes.

In the two-coil type of series contactor (Fig. 7.113), two coils are connected in series with each other and the circuit to be controlled. The armature is pivoted so that one coil, the larger of the two, acts upon one side of the armature, exerting a force tending to close the contactor. The smaller coil acts upon the other side of the armature and exerts a force tending to hold the contactor open. The areas of the magnetic circuits are so designed that the force tending to close the contactor remains practically constant regardless of the value of the current, while the force tending to hold the contactor open varies with the current. Therefore, after the current has decreased to a certain value, the holding-out force is not sufficient to overcome the closing force and the contactor closes. The air gap of the locking-out circuit can be adjusted so that the current above which the contactor holds open can be adjusted over a wide range.

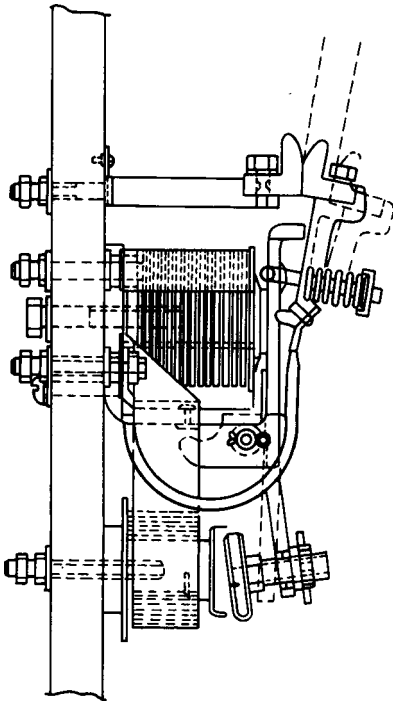


FIGURE 7.113 Magnetic lockout contactor.

257. Overload protective devices. Most motor controllers have incorporated in them as an integral part some device for protecting the motor against overloads harmful to it. These overload protective devices are made in many different types and forms. Those made by reliable manufacturers are listed by the Underwriters Laboratories Inc. Before purchasing control equipment, take care to make sure that the equipment has been listed by them. All the following types of overload protective devices are used in motor-control equipment.

1. Non-time-delay fuses
2. Time-delay fuses
3. Circuit breakers
4. Thermal sensors
5. Thermal overload relays

6. Magnetic overload relays
7. Solid-state overload relays

For a description of these devices see Div. 4. For selection of overload protective devices with respect to both size and type, refer to Secs. 380, 381, and 382.

258. Undervoltage devices. Most motor starters are provided with either an undervoltage protective device or an undervoltage release device.

An *undervoltage protective device* is one which opens the supply circuit to the motor upon failure or reduction of voltage and which maintains the circuit open until it is again closed by the operator.

An *undervoltage release device* is one which operates on a reduction or failure of voltage, thereby opening the main circuit, but it does not prevent the automatic reclosing of the main circuit upon the return of normal voltage. It is applied in conjunction with some automatic starters. In certain applications, such as fans, blowers, and pumps, an automatic starter provided with an undervoltage release may be advantageously used. Its operation on a reduction or failure of voltage will stop the motor. Then the reestablishment of voltage causes the automatic starter to restart the motor, thus minimizing the shutdown period. An undervoltage release should not be employed in applications in which an unexpected return of power would endanger an operator.

259. Methods of controlling the acceleration of motors with the type of power system on which they may be used are given below. The simplest method is one in which the motor is thrown directly across the line by means of a manual or magnetic switch. The speed of acceleration of the motor and the magnitude and duration of the starting current depend solely upon the characteristics of the motor and its connected load.

With manual control of acceleration the speed of acceleration depends upon the judgment of the operator. Manual control can be obtained through the use of manual controllers or semimagnetic controllers. In semimagnetic controllers of this type, the time and sequence of closing of the magnetic contactors are controlled by a manually operated master switch.

With automatic acceleration the only part of the starting operation that may depend upon the operator is the initiation of the sequence of events (such as pushing a START button). When this is done, the resulting sequence of operations is automatically performed and controlled by contactors alone or by contactors controlled by relays.

Acceleration methods	Applicable to
A. No acceleration control (across-the-line starting)	AC and small dc motors
B. Manual	AC and dc
C. Automatic	
1. Time	
a. Solenoid with action retarded by an adjustable dashpot	DC
b. Pneumatic timer	AC and dc
c. Timing relay	AC and dc
d. Inductive time limit	AC and dc
e. Electronic timer	AC
2. Current	AC and dc
3. Counter-emf	DC
4. Time-current (magnetic relay)	DC
5. Time-current (electronic)	AC
6. Frequency	AC

260. In time-limit acceleration the closing of the respective contactor contacts is controlled by a timing device so that the starting resistance is shorted out of the circuit or connections to the autotransformer are changed in a certain definite time. Most modern automatic starters are of the time-limit type. They are used for all general-purpose applications. The other types of automatic acceleration are used for special applications in which they have advantages over the time-limit type. The timing of the closing of the respective contactors for time-limit acceleration can be accomplished in several ways, as listed in Sec. 259.

261. In time-limit acceleration provided by a solenoid with action retarded by an adjustable dashpot, the time of closing the magnetic accelerating contactors is controlled by a fluid dashpot attached to the lower part of the operating rod of a solenoid. In some starters the dashpot-controlled solenoid is a timing relay (Sec. 265) which controls the time of closing the operating coil of a magnetic accelerating contactor (Sec. 262).

262. A fluid-dashpot timing relay is illustrated in Fig. 7.114. The motion of the plunger of the solenoid is retarded by an adjustable fluid dashpot attached to the lower end of the solenoid plunger. The delayed time for closing the relay contacts can be adjusted from 2 to 30 s. The dashpot is filled with a silicone fluid whose viscosity is affected only very slightly by changes in temperature. Such relays will operate satisfactorily in ambient temperatures from +120 to -30°F ($+49$ to -35°C).

263. Solid-state reduced-voltage starters, as shown in Fig. 7.115, are available from several manufacturers in ratings up to at least 800 hp for standard three-phase, ac induction motors. These include such features as:

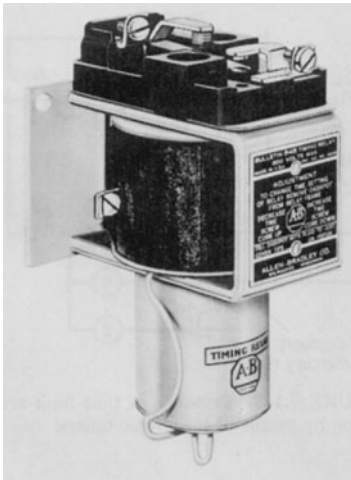


FIGURE 7.114 Fluid-dashpot timing relay. [Allen-Bradley Company, Inc.]

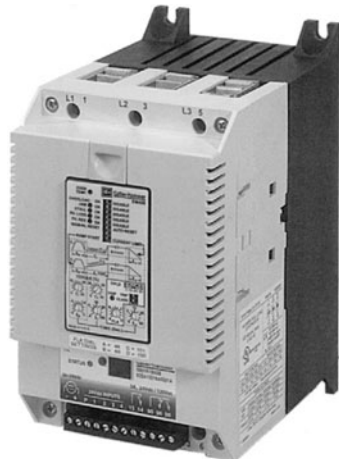


FIGURE 7.115 Solid-state reduced-voltage starter. [Eaton Corp., Cutler-Hammer Products]

1. Adjustable starting current, from 100 to 400 percent of motor full-load current, to match breakaway torque to applied load
2. Adjustable current limit, from 100 to 400 percent of motor full-load current, providing stepless acceleration at reduced current and torque
3. Adjustable current ramp, from 2 to 30 s, for very gradual acceleration, such as to take up slack in the drive system even after the fixed turn-on ramp has expired
4. Adjustable pulse start, from 0 to 2 s, providing an initial 400 percent current pulse to the motor to break loose high-friction, high-inertia loads
5. Adjustable current trip, from 50 to 400 percent of motor full-load current, with contacts to initiate audible or visual alarm signaling when the motor reaches the trip setting
6. Power-saving feature which reduces voltage to the motor when it is running at no load or is lightly loaded, to reduce energy consumption

It should be noted that solid-state controllers employ silicon-controlled rectifiers (SCRs) which do not provide an air break when off. When the branch-circuit disconnect is closed, a solid-state controller has potentially lethal voltages at the motor terminals as well as at the line terminals, even in the OFF state. An isolation contactor or magnetic contactor provides the necessary isolation.

264. Contactors equipped with pneumatic timers provide a means for the time control of acceleration. The timer of Fig. 7.116 consists of an air chamber and an adjustable vent which controls the time delay of the operation of the contactors. The timer is actuated by a lever attached to the arm of a contactor.

The principle of controlling acceleration by a mercury timer is shown in Fig. 7.117. All contactors except the last acceleration contactor are equipped with a pneumatic timer. When the START button is pressed, current flows from L1, through STOP and START buttons to 10, through the operating coil ③, through contacts $\frac{O.L.}{No.5}$, and back to L2. This energizes the operating coil ③ of the main-line contactor $\frac{3}{4}$. Contactor $\frac{3}{4}$ closes, connecting the motor across the line in series with all the starting resistance. When contactor $\frac{3}{4}$ closes, it closes

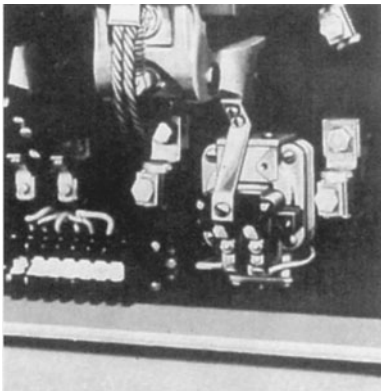


FIGURE 7.116 Pneumatic timer. [Square D, Schneider Electric]

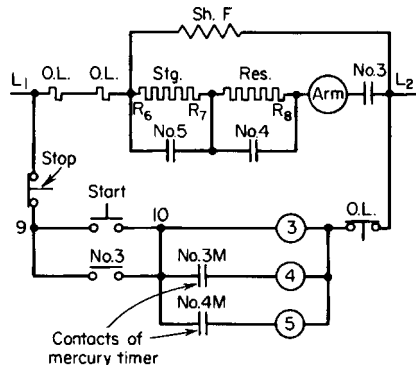


FIGURE 7.117 Principle of time-limit acceleration by means of pneumatic timers.

its auxiliary contacts $\frac{3}{\text{NO}}$, which provides a means of energizing the operating coils of the contactors when the START button is released. The closing of contactor 3 causes the pneumatic timer 3M to start to function. After a certain definite time required for the air to pass through the orifice of the plunger, pneumatic timer 3M closes its contact $\frac{3M}{\text{NO}}$. This energizes the operating coil ④ of accelerating contactor 4, which closes its contacts $\frac{4}{\text{NO}}$. This shorts the resistance R_7-R_8 . The closing of contactor 4 causes the pneumatic timer 4M, attached to it, to start to function. After a certain definite time this timer closes its contacts $\frac{4M}{\text{NO}}$, energizing the operating coil ⑤ of accelerating contactor 5. Contactor 5 operates, closing its contacts $\frac{5}{\text{NO}}$ and shorting out resistance R_6-R_7 . The motor is now connected directly across the line.

265. Timing relays are the most commonly used devices to obtain automatic control of motor acceleration. A timing relay is a device which, when energized, will operate to close or open its contacts after a definite lapse of time from the instant that the relay is energized. Time-limit control of motor acceleration is accomplished with these relays through their time control of the closing or opening of the operating circuits of the motor-accelerating contactors.

The more common types are pneumatic timing relays, fluid-dashpot timing relays, and synchronous-motor timing relays. The fluid-dashpot and pneumatic relays are operated by a magnetic coil which, when energized, exerts a pull upon the central movable member, or plunger. The time taken for the movable member to close or open the contacts of the relay is governed by the retarding action of the dashpot or air bellows.

Dashpot timing relays (Fig. 7.114) are equipped with an adjustable fluid dashpot. The fluid used should be one whose viscosity is not affected by changes in ambient temperature. The timing range of these relays can be adjusted from about 2 to 30 s.

Pneumatic relays (Fig. 7.118) are equipped with an air chamber and adjustable vent which controls the time delay in the operation of the relay. The timing range of these relays can be adjusted from about 0.2 to 200 s.

Synchronous-motor timer relays (Fig. 7.119) consist of a set of contacts driven from the shaft of a very small synchronous motor so that there is a definite time lag between the starting of the motor and the closing of the contacts. A controller utilizing such a relay is described in Sec. 312.

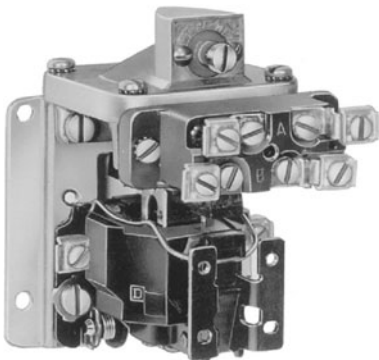


FIGURE 7.118 Pneumatic timing relay. [Square D, Schneider Electric]

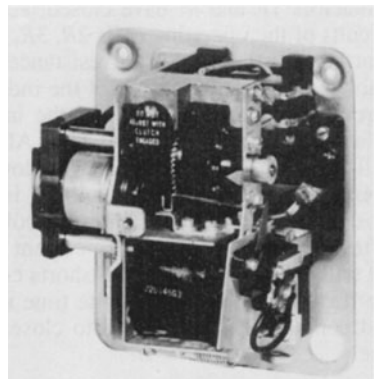


FIGURE 7.119 Synchronous-motor timer relay. [General Electric Co.]

266. Acceleration controlled by inductive time-limit contactors or relays makes use of the inductive time-lag effect of the decay of current in a heavily inductive circuit. This method of timing is often called *magnetic timing*. In controllers employing this method, each accelerating contactor may be of the inductive time-limit type or of the ordinary shunt type, each being controlled by an inductive time relay. Inductive time-limit contactors may be of the normally open-contact (holdout) type or of the normally closed type.

267. An inductive time-limit accelerating contactor of the normally open-contact type (Fig. 7.120) consists of a pivoted armature acted upon by two coils located on opposite sides of the pivot point. The main operating coil acts to close the contactor, while the auxiliary coil acts to hold the contactor open. In the diagram of the controller of Fig. 7.121 the coils marked 2R, 3R, 4R, and 5R are the main operating coils of the respective inductive time-limit contactors 2R, 3R, 4R, and 5R. The coils marked HC2, HC3, HC4, and HC5 are the holdout coils of the contactors 2R, 3R, 4R, and 5R, respectively.

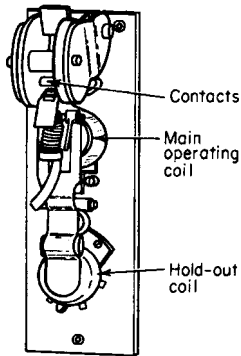


FIGURE 7.120 Inductive time-limit contactor of the normally open-contact type.

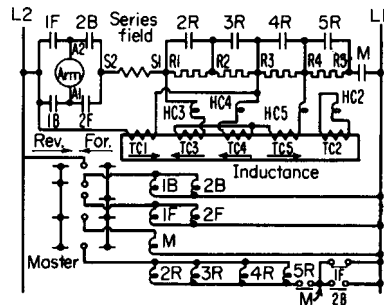


FIGURE 7.121 Connections for inductive time-limit acceleration. [Eaton Corp., Cutler-Hammer Products]

268. The principle of controlling acceleration by inductive time-limit accelerating contactors of the normally open-contact type is illustrated by the typical control diagram of Fig. 7.121. In addition to the contactors, an iron-core inductive unit is required. This inductance consists of a set of coils TC1, TC2, TC3, TC4, and TC5 wound on a common iron core. In starting the motor from rest, if the operator moves the master switch to the running position for forward direction of rotation, the circuits of operating coils 1F, 2F, and M to close. This connects the motor across the line in series with all the starting resistance. Voltage will be impressed upon coils TC1, TC3, TC4, and TC5, causing these coils to be energized and to hold out their respective contactors. But the coils are so connected that the mmf's of the coils just neutralize each other, so that no flux is produced in the core. There is therefore no current in the closed circuit of coils HC2 and TC2, and contactor 2R is free to close when its operating coil is energized. As soon as contactors 1F and M have closed, auxiliary contacts on these contactors close the circuits of the operating coils 2R, 3R, 4R, and 5R. Contactor 2R immediately closes, shorting out the section of resistance R_1 - R_2 and shorting coils HC3 through TC3. This unbalances the mmf's of the inductance, and a definite flux is produced in the core. This change in flux and the inductance of coils HC3 and TC3 oppose the delay of current in HC3 and TC3. After a certain

lapse of time the current in *HC3* will drop to nearly zero. The holdout coil *HC3* of the contactor *3R*, being now deenergized while its main coil *3R*, is energized, causes contactor *3R* to close. The closing of contactor *3R*, shorting coils *HC4* and *TC4*, again unbalances the flux. After a definite time lapse the current in *HC4* will drop to nearly zero, and contactor *4R* will close. Closing of *4R* shorts coils *HC5* and *TC5* and once again unbalances the flux. After another definite time interval the current *HC5* drops to nearly zero, and contactor *5R* is allowed to close. The motor is then connected directly to the line.

When plugging, i.e., throwing from full speed in one direction to full speed in the other, one should have a time delay in the closing of contactor *2R*. Coil *TC1* is connected across the armature and resistance *R₁-R₂*. The current through coil *TC* therefore depends upon the sum of the voltage across the armature and the resistor *R₁-R₂*. The voltage across the armature when starting from rest is very low, but in plugging, it is normal line voltage. In plugging, therefore, the current through *TC1* is much higher than it is when starting from rest. This larger current through *TC1* unbalances the mmf's of the inductance and produces a flux which induces a current in shorted coils *HC2* and *TC2*. This induced current will hold out contactor *2R* until the current has had time to be reduced to nearly zero.

269. The principle of time-limit acceleration by inductive time-limit contactors of the normally closed-circuit type is illustrated in Fig. 7.123. A contactor of this type is shown in Fig. 7.122. A copper tube encircles the magnetic core of the contactor, over which two operating coils are wound. These two coils act in opposition to each other. When the main winding is open-circuited after having been carrying current, the magnetic flux decreases. This decrease in flux induces a heavy current in the enclosed copper tube. The induced current opposes the decay of the flux, so that there is a considerable lapse of time after the circuit of the main coil is opened before the flux decays sufficiently to allow the armature to be released. The length of time delay will depend upon the original value of the flux, which can be controlled by adjusting the current in the neutralizing winding.

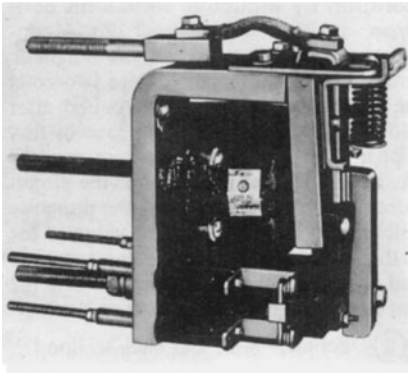


FIGURE 7.122 Inductive time contactor of the normally closed-contact type. [Westinghouse Electric Corp.]

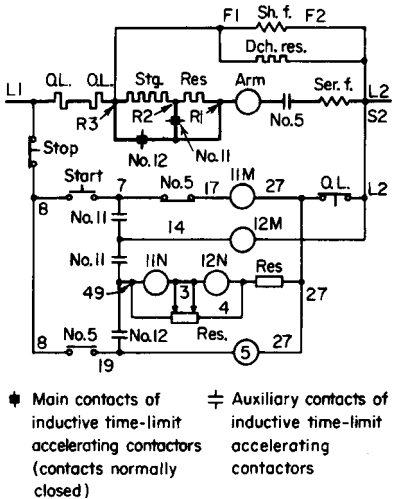


FIGURE 7.123 Principle of time-limit acceleration by means of inductive-time-limit contactors of the normally closed-contact type.

Acceleration is automatically performed in the following manner. When the START button is pressed, current flows from $L1$, through STOP and START contacts to 7, through contacts $\frac{5}{a}$, operating coil $\frac{11}{M}$, contacts $\frac{0L}{b}$, and back to line $L2$. The armature of contactor 11 is therefore attracted, opening its main contacts $\frac{11}{a}$ and closing its auxiliary contacts $\frac{11}{b}$. The closing of the two sets of auxiliary contacts $\frac{11}{b}$ energizes the main operating coil $\frac{12}{M}$ and neutralizing coils $\frac{11}{N}$ and $\frac{12}{N}$. The armature of contactor 12 is therefore attracted, opening its main contacts and closing its auxiliary contacts $\frac{12}{b}$. This energizes the operating coil $\frac{5}{a}$, which closes the main-line contactor 5. The motor is then connected to the line in series with all the starting resistance. When contactor 5 closes, it opens its auxiliary contacts $\frac{5}{a}$ and closes its auxiliary contacts $\frac{5}{b}$. The closing of contacts $\frac{5}{b}$ keeps the operating circuits of the contactors energized when the START button is released. The opening of contacts $\frac{5}{a}$ opens the main operating coil circuit $\frac{11}{M}$ so that after a definite time, determined by the adjustment of the resistances controlling $\frac{11}{N}$ and $\frac{12}{N}$, contactor 11 drops out and thereby closes its main contacts, shorting out the resistance R_2-R_2 . At the same time, auxiliary contacts $\frac{11}{b}$ are opened, which opens the circuit of the main operating coil $\frac{12}{M}$. After a definite time the flux of contactor 12 decreases a sufficient amount so that contactor 12 drops out, closing its main contacts and shorting out resistance R_3-R_2 . The motor is now connected directly across the line. As contactor 12 drops out, its auxiliary contact $\frac{12}{b}$ opens, which disconnects all the operating coils of the accelerating contactors. In case of an overload, the operating coils or bimetallic heater elements open the contacts $\frac{0L}{b}$, deenergizing the operating coil $\frac{5}{a}$ of the main-line contactor so that the motor is disconnected from the line and will not start up again until pressing the START button again starts the above sequence of starting operations. To stop the motor, the STOP button is pressed, which opens the circuit of the operating coil of the main-line contactor.

270. Acceleration by means of inductive time relays

requires the use, for each step of resistance, of an ordinary shunt contactor in conjunction with a magnetic time relay. A magnetic time (inductive-time) relay can be constructed in just the same manner as the inductive-time accelerating contactors of the normally closed-contact type described in Sec. 269. The only differences are that it is smaller in size and that its main contacts are not capable of carrying as heavy currents. The principle of operation in obtaining acceleration by this means is shown in Fig. 7.124. The same general system of symbols is used as given in Sec. 269 and Fig. 7.123. The main contacts of the line contactor are $\frac{5}{a}$. The

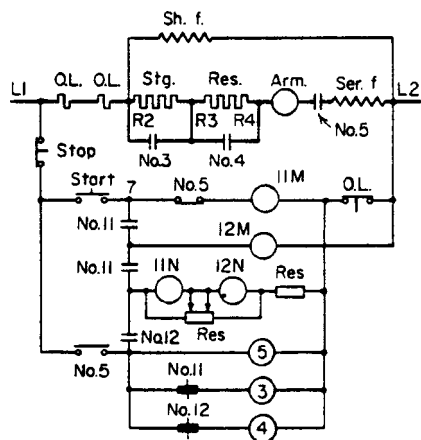


FIGURE 7.124 Principle of operation of time-limit acceleration by means of inductive-time-limit relays.

contacts of the regular shunt-coil accelerating contactors are $\frac{3}{11}$ and $\frac{4}{11}$. The main contacts of the inductive-time-limit relays are $\frac{11}{11}$ and $\frac{12}{12}$. When the START button is pressed, current flows from $L1$ through the STOP and START button to 7, through contacts $\frac{5}{5}$, operating coil $\frac{11}{11}$, contacts $\frac{11}{11}$, and back to line $L2$. The armature of relay 11 is therefore attracted, opening its main contacts $\frac{11}{11}$, which opens the circuit operating coil $\frac{3}{3}$. At the same time auxiliary contacts $\frac{11}{11}$ close, thus energizing operating coil $\frac{12}{12}$ and neutralizing coils $\frac{11}{11}$ and $\frac{12}{12}$. The armature of relay 12 is therefore attracted, opening its main contacts $\frac{12}{12}$, which open the circuit of operating coil $\frac{4}{4}$. At the same time auxiliary contacts $\frac{12}{12}$ close, energizing operating coil $\frac{5}{5}$, which closes the main-line contactor 5. The motor is then connected to the line in series with all the starting resistance. When contactor 5 closes, it closes its auxiliary contact $\frac{5}{5}$ and opens its auxiliary contact $\frac{5}{5}$. The closing of $\frac{5}{5}$ makes power available for the operating coils when the START button is released. Opening of contact $\frac{5}{5}$ opens the main operating-coil circuit $\frac{11}{11}$ so that after a definite time determined by the adjustment of the resistance controlling the neutralizing coils $\frac{11}{11}$ and $\frac{12}{12}$ relay 11 drops out and thereby closes its main contacts $\frac{11}{11}$. Closing of contacts $\frac{11}{11}$ energizes the operating coil $\frac{3}{3}$, which operates contactor 3, shorting out the resistance R_2-R_3 . As relay 11 drops out, it opens its auxiliary contacts $\frac{11}{11}$, which open the circuit of the main operating coil $\frac{12}{12}$ of relay 12. After a definite time, the flux of relay 12 decreases a sufficient amount so that relay 12 drops out, closing its main contacts $\frac{12}{12}$ and energizing the operating coil $\frac{4}{4}$. Operating coil $\frac{4}{4}$ closes the contacts of contactor 4, which short out the resistance R_3-R_4 . The motor is now connected directly across the line. As relay 12 drops out, its auxiliary contacts $\frac{12}{12}$ open, which disconnects all the operating coils of the accelerating relays.

271. Time-limit acceleration controlled by pneumatic timing relays attached to contactors (see Fig. 7.125).

When the START button is pressed, current flows from + through the START and STOP buttons, through the overload relay OL contacts, through the main contactor operating coil $\frac{M}{M}$, and back to $-$. This energizes the operating coil $\frac{M}{M}$ of the mainline contactor, which closes its contact $\frac{A}{11}$ and connects the motor across the line in series with all the starting resistance. When the contactor M closes, it also closes its auxiliary contact $\frac{M}{11}$, which provides a current path around the START pushbutton, which can now be released. A pneumatic timer attached to the M contactor also begins its time delay when the M contactor closes. After the preset delay, the timed contact $\frac{M}{11}$ closes and energizes the operating coil of the first acceleration contactor $\frac{1A}{1A}$. When $\frac{1A}{1A}$ is energized, acceleration contact $\frac{1A}{11}$ closes and bypasses a portion of the resistance in series with the motor. A pneumatic timer attached to the $1A$ contactor also begins its time delay when the $1A$ contactor closes. After the preset delay, the timed contact $\frac{1A}{11}$ closes and energizes the operating coil of the second acceleration contactor $\frac{2A}{2A}$. When $\frac{2A}{2A}$ is energized, acceleration

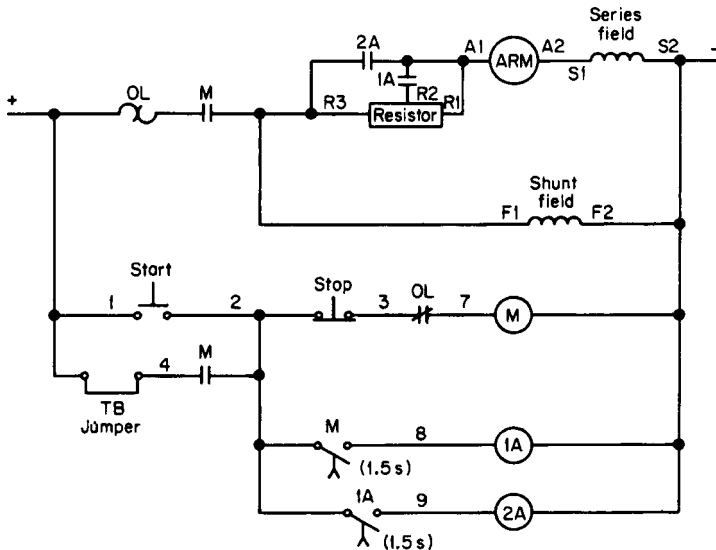


FIGURE 7.125 Principle of time-limit acceleration by means of the pneumatic timing-relay method applied to a dc motor. [Square D, Schneider Electric]

contact $\frac{2A}{\text{---}}$ closes and bypasses the remainder of the resistance in series with the motor. The motor is now running across the line.

Primary-resistor starting of squirrel-cage motors is another effective method (see Fig. 7.126). Operation of the pilot device initiates the timing relay TR and closes its two normally open auxiliary contacts $\frac{M}{\text{---}}$. This energizes the coil \textcircled{M} of the main-line contactor and closes its contacts $\frac{M}{\text{---}}$. Since the voltage drop in the resistors causes a decreased voltage at the motor terminals, the motor starts and accelerates at reduced voltage, with a consequent reduction in current and torque. After a certain time delay, the timing relay TR times out, and the timed contact closes and energizes the operating coil \textcircled{A} of the accelerating contactor. When coil \textcircled{A} is energized, the contacts $\frac{A}{\text{---}}$ are closed, causing resistors to be shorted out and thereby transferring the motor to line-voltage operation. The motor remains energized during the transfer from the reduced-voltage start to line-voltage operation. Note the elementary wiring diagram for this control in Fig. 7.126.

272. With current-limit acceleration, cutting out the various steps of starting resistance or changing taps on an autotransformer is controlled by the decay of the starting current as the motor accelerates. The rapidity of closing the successive contactors depends upon the load of the motor. With light loads the motor will accelerate on each step more rapidly, so that the current decreases more rapidly and causes the successive contactors to function in a shorter time. Total time for the starting period therefore depends upon the load.

Current-limit acceleration is performed by means of series contactors of the types described in Sec. 256. Acceleration can be accomplished by using series contactors of the

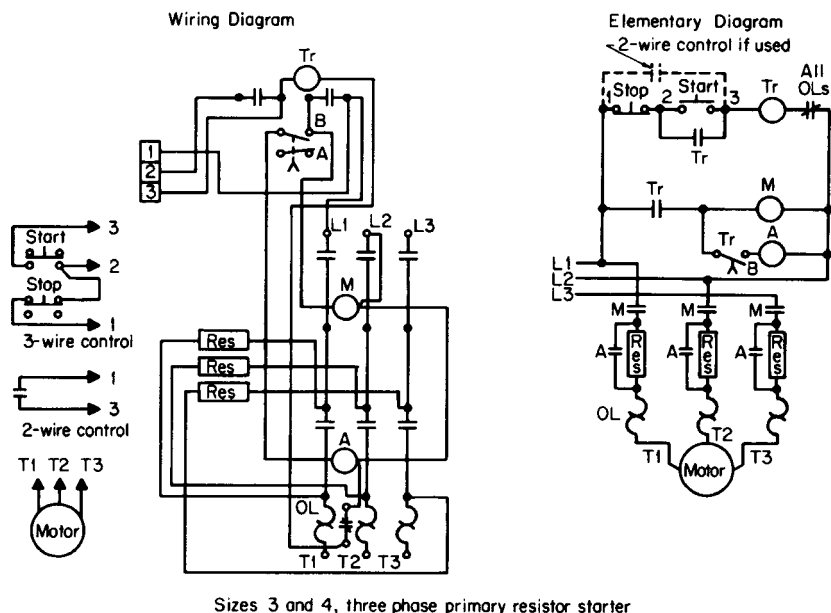


FIGURE 7.126 Principle of primary-resistor starting of squirrel-cage motors. [Square D, Schneider Electric]

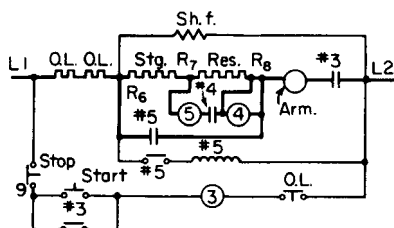


FIGURE 7.127 Principle of current-limit acceleration by means of series contactors of the single-coil type.

current to pass through operating coil ⑤ of the second series accelerating contactor. When the starting current has decreased to the value for which the series contactor 5 is adjusted, operating coil ⑤ closes its contactor 5. Closing of contact 6 shorts out all the starting resistance and also the main operating coils of contactors 4 and 5, so that there will be no danger of these contactors dropping out under light loads. Contactor 5 has an auxiliary shunt holding coil ⑤, which holds this contactor closed after it has once been closed by its main operating coil ⑤. When contactor 5 closes, it also closes its auxiliary contacts ⑤, thus energizing the auxiliary holding-coil circuit for the contactor. The motor is now connected directly to the line.

The method of controlling acceleration by means of two-coil series lockout contactors (Sec. 256) is shown in Fig. 7.128. Pressing the START button energizes the operating coil ③

single-coil type as shown in Fig. 7.127. Pressing the START button energizes the operating coil ③ of the main-line contactor 3 so that line contacts ③ close, connecting the motor to the line in series with the starting resistance. When the starting current has decreased to the value for which the series contactor 4 is adjusted, operating coil ④ closes its contactor 4.

The closing of contacts ④ shorts out the section of resistance R_7-R_8 and allows the starting

of the main-line contactor 3 so that line contacts $\frac{3}{1}$ close, connecting the motor to the line in series with the starting resistance. When the starting current has decreased to the value below that for which the lockout coil $\textcircled{4L}$ of contactor 4 will hold this contactor open,

contactor 4 closes its contacts $\frac{4}{1}$. This shorts out the section of starting resistance R_7 – R_8

and the lockout coil $\textcircled{4L}$ of contactor 4 so

that the contactor will not drop out under light loads. The current now passes through the operating coil $\textcircled{5}$ and lockout coil $\textcircled{5L}$ of contactor 5, which locks open until the current has dropped in value to the amount for which the contactor is adjusted to operate. When the

current has dropped to this value, contactor 5 closes its contacts $\frac{5}{1}$, which short out the resistance R_6 – R_7 and the lockout coil $\textcircled{5L}$. With the lockout coils shorted out, these contactors do not need any auxiliary shunt holding coil, since the series operating coils will hold the contactors closed with only about 5 percent of their normal current. The motor is now connected directly across the line.

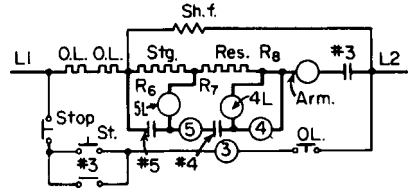


FIGURE 7.128 Principle of current-limit acceleration by means of series contactors of the two-coil type.

273. Counter-emf acceleration is really a special method of current-limit acceleration, since the current that flows through the motor depends upon the value of the counter-emf. It is applicable only to dc motors. The time required for the starting period will depend upon the load on the motor in just the same way as for the other current-limit acceleration methods.

When acceleration is controlled by the counter-emf method, the operating coils of the magnetic contactors are connected across the armature winding (Fig. 7.129). At standstill no counter-emf is produced in the armature winding. As soon as the motor starts to revolve, a counter-emf is generated in the armature winding. The counter-emf is directly proportional to the speed so that as the motor speeds up, the counter-emf increases. Since the operating coils of the magnetic contactors are connected across the armature, their operation depends upon the value of the counter-emf. The magnetic contactors are adjusted so that a definite value of counter-emf is required to operate each one, a higher value of counter-emf being required to operate each successive contactor. When the speed has reached a value at which the counter-emf is sufficient to operate one of the contactors, the contactor closes and shorts out a section of the starting resistance.


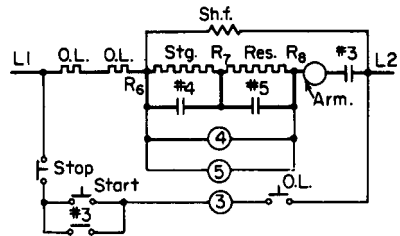


FIGURE 7.129 Principle of counter-emf acceleration.


274. Time-current control of acceleration, as the name implies, is a combination of time and current control of the accelerating period. With time control the time of acceleration is entirely independent of the load on the motor, while with current control the time of acceleration depends entirely upon the load on the motor. With time-current control the

time of acceleration is modified by the load on the motor but is not entirely dependent upon the load.

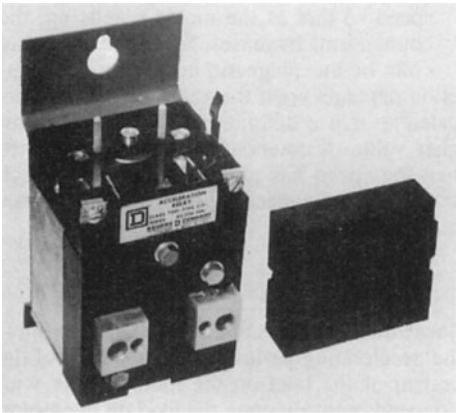One method of obtaining time-current control of acceleration is through the use of the time-current acceleration relay of Fig. 7.130. This relay consists of a series operating coil *A*, a steel core *C*, a core support plate *B*, an air gap *F*, and a movable circular inductor tube *E*, carrying the movable contacts *G* and a set of stationary contacts *H*. When the circuit of the operating coil is closed, the current changes in a very short time from zero to some definite value, depending upon the circuit in series with which the coil is connected. A magnetic flux is built up rapidly in the iron core *C* and air gap *F*. This flux also links with the inductor tube *E*, which forms a closed single-turn conductor. The rapid change of flux linked with the induction tube *E* causes considerable current to be induced in the induction tube. The current through the operating coil and the induced current in the inductor tube are in such directions that they produce a repelling force between the coil and the tube. The tube is therefore rapidly propelled upward upon the closing of the operating-coil circuit. The parts are so designed that considerable force is exerted upon the tube, and it would travel 1 ft (0.3 m) or more if it were not for the fact that as the tube starts to move, it passes through the field *F*, which now causes eddy currents to be set up in the tube. These eddy currents cause a retarding action, just as a wattmeter vane is retarded as it is forced through a magnetic field, and this, combined with the force of gravity, stops the tube, which then starts to fall under the force of gravity. Inasmuch as current still flows through *A*, causing flux in *F*, the inductor tube is likewise retarded by eddy currents in the downward direction just as it is retarded in the upward direction. This retarding action therefore provides a time delay, which may be as much as 1.45 s, in the closing of contacts *G* and *H*. The length of time will depend upon the current *A* and the type of inductor tube used. Since the current in *A* determines the strength of the flux in *F*, *C*, and *E*, a lower current in *A* will cause the inductor tube to jump less distance, and the retarding action in the downward direction will be less, so the time also will be less. In practice, the current in *A* is the same as the motor current, so that when heavy current flows in the motor owing to a heavy load, the time will be longer, and when the motor current is less as on light loads, the time will be less. Hence we have time-current control, i.e., a system of control in which the time is modified by the current or load on the motor.



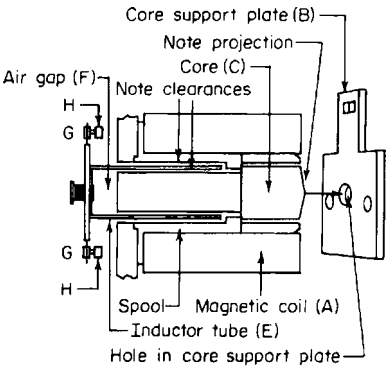I. Complete relay.



II. Cross-section view.

FIGURE 7.130 Time-current relay. [Square D, Schneider Electric]

The principle of time-current control of acceleration with these time-current relays is illustrated by the elementary control circuit in Fig. 7.131. When the START button is pressed, the operating coil ③ of the main-line contac-

tor 3 is energized. Contacts $\frac{3}{1}$ close and connect the motor to the line in series with the starting resistance. Upon the closing of contactor 3, current passes through the operating

coil ⑥ of time-current relay 6, and the auxiliary contacts $\frac{3}{2}$ of contactor 3 close. Current will start to flow through operating coil ④, but before its contactor 4 has time to close its contacts $\frac{4}{1}$, the inductor-tube relay 6 has been raised and opens the contacts $\frac{6}{2}$ of this relay, thereby opening the circuit of operating coil ④. After a time delay, depending upon the setting of relay 6 and the load on the motor, the inductor tube of relay 6 drops and recloses contacts $\frac{6}{2}$. The operating coil ④ of contactor 4 is now energized, and contactor 4 operates, closing its contacts $\frac{4}{1}$. This shorts out the resistance R_9-R_{10} , closes auxiliary contacts $\frac{4}{2}$, and energizes the operating coil ⑦ of time-current relay 7. Current will start to flow through the operating coil ⑤ of contactor 5, but before the contactor can close, the inductor tube of relay 7 has jumped up and opened the $\frac{7}{2}$ contacts. After a time delay, the inductor tube of relay 7 drops, reclosing the contacts $\frac{7}{2}$ of this relay and energizing the operating coil ⑤ of contactor 5. Contactor 5 now operates and closes its contacts $\frac{5}{1}$. The motor is now connected directly to the line.

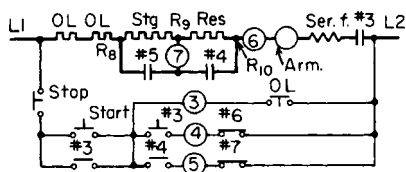


FIGURE 7.131 Principle of time-current acceleration by means of a magnetic time-current relay.

275. AC static, stepless crane control for wound-rotor motors is a development of the Square D Co. This type of control is used with a three-phase, ac wound-rotor motor. The control consists of thyristor assemblies on the primary side and fixed secondary resistors. Stepless, regulated hoisting and lowering speeds are obtained by using a thyristor stepless master switch and a permanent-magnet type of tachometer. Indicating lights mounted on control modules help the troubleshooting of modules (Fig. 7.132).

Five pairs of thyristor assemblies are used in the motor primary circuit to provide static, stepless control of the phase sequence and magnitude of motor voltage. The power-limit stop is arranged to disconnect the motor and directly open the brake circuit when the switch trips. Balanced three-phase motor power for lowering out of the tripped limit stop is also provided. A fixed resistor in each phase of the motor secondary is used to alter the basic speed-torque characteristic for speed-regulated operation. The application of this type of control is shown in Fig. 7.132.

Reduced speed is obtained by adjusting the degree of conduction of the power thyristors. The solid-state control modules produce properly synchronized firing pulses to turn on the thyristors in response to a speed-control signal.

The master-switch inductor unit produces an ac output voltage which is proportional to the amount of deflection of the master-switch handle from the off point. The signal converter changes this ac command signal to a dc signal. A permanent-magnet type of tachometer generator, mechanically coupled to a rotating unit of the hoist drive, provides the feedback signal used to obtain speed regulation. The signal comparator module compares these signals. Its output speed-control signal is used to actuate the thyristor control

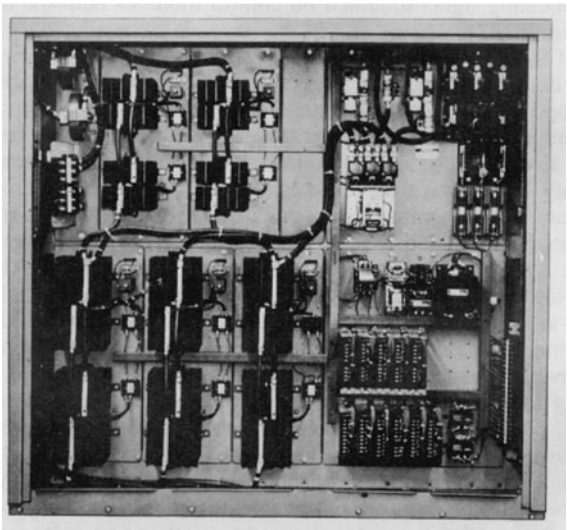


FIGURE 7.132 AC static, stepless thyristor control for crane ac wound-rotor motors. [Square D, Schneider Electric]

modules, which energize either the hoist or lower thyristors to produce proper motor operation.

The tachometer continuity module is used to apply an ac voltage to the tachometer circuit and its collectors to ensure continuity. This ac voltage operates the undervoltage relay. Overspeed protection is provided by a mechanical centrifugal overspeed switch in the tachometer assembly.

276. Frequency control of acceleration is a development of the Square D Co. for application to wound-rotor induction motors. The operation of the frequency relays employed in this method depends upon the action of resonant circuits. An ac circuit which contains both inductance and capacity will be resonant at some definite frequency, depending upon the value of the inductance and the capacity. At the resonant frequency, such a circuit will pass a very much higher value of current than at any other frequency. The current of such circuits will increase with frequency up to the resonant frequency. The operating coils of the frequency relays, which have a certain value of inductance, will produce a resonant circuit when connected in series with an external condenser. If condensers of different capacities are used with a set of relays, the respective relays will become resonant at different frequencies (Fig. 7.133). The higher the capacity, the lower the resonant frequency.

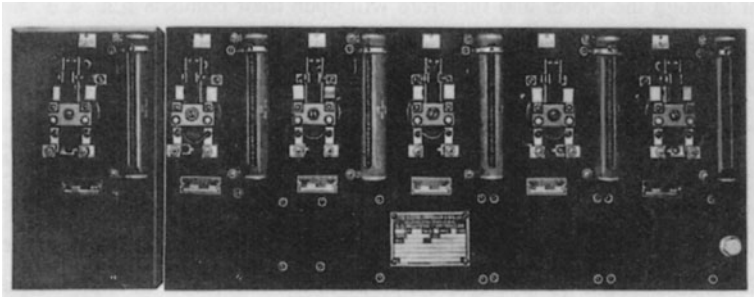


FIGURE 7.133 Frequency relays for the control of acceleration of a wound-rotor induction motor. [Square D, Schneider Electric]

The application of this method of acceleration to a wound-rotor induction motor is shown in Fig. 7.134. The relays *PR*, *1AR*, *2AR*, and *3AR* are frequency relays. Each relay operating coil in series with its capacitor is connected to a potentiometer rheostat so that it can be adjusted to the proper current. The relays are supplied with power from the secondary resistor so as to receive a maximum voltage of 90 V, on 60-Hz circuits, when the motor primary is first connected to the line. The relays have normally closed contacts. After a relay has attracted its armature, the armature will not drop out until the current of the operating coil has decreased to a certain value. The frequency at which the current reaches the dropout value will vary with the resonant frequency of the circuit. The higher the resonant frequency, the higher the frequency at which the dropout current will be reached. The relays are connected in series with progressively larger values of capacity, so that the resonant frequencies of the relays progressively decrease. The dropout currents will occur at progressively lower frequencies. At standstill the frequency of the secondary circuit of an induction motor is the same as that of the primary supply circuit and decreases as the speed of the motor increases. It is approximately zero at full speed. The frequency relays will therefore drop out progressively as the motor accelerates. The operation of the motor illustrated can be controlled manually by moving the master controller to successive positions, or the acceleration can be made fully automatic by throwing the master to the last position. If the master is thrown to the last position forward, when the motor is at rest, the master contacts *MF*, *F*, *P*, *1A*, *2A*, and *3A* will all be closed. The motor will then be automatically accelerated as follows. Operating coils \textcircled{M} and \textcircled{F} are first energized; they operate contactors *F* and *M* and close contacts $\frac{F}{\uparrow\downarrow}$ and $\frac{M}{\uparrow\downarrow}$. Closing contactor *F* closes its auxiliary

Elementary Diagram for Bridge or Trolley Control








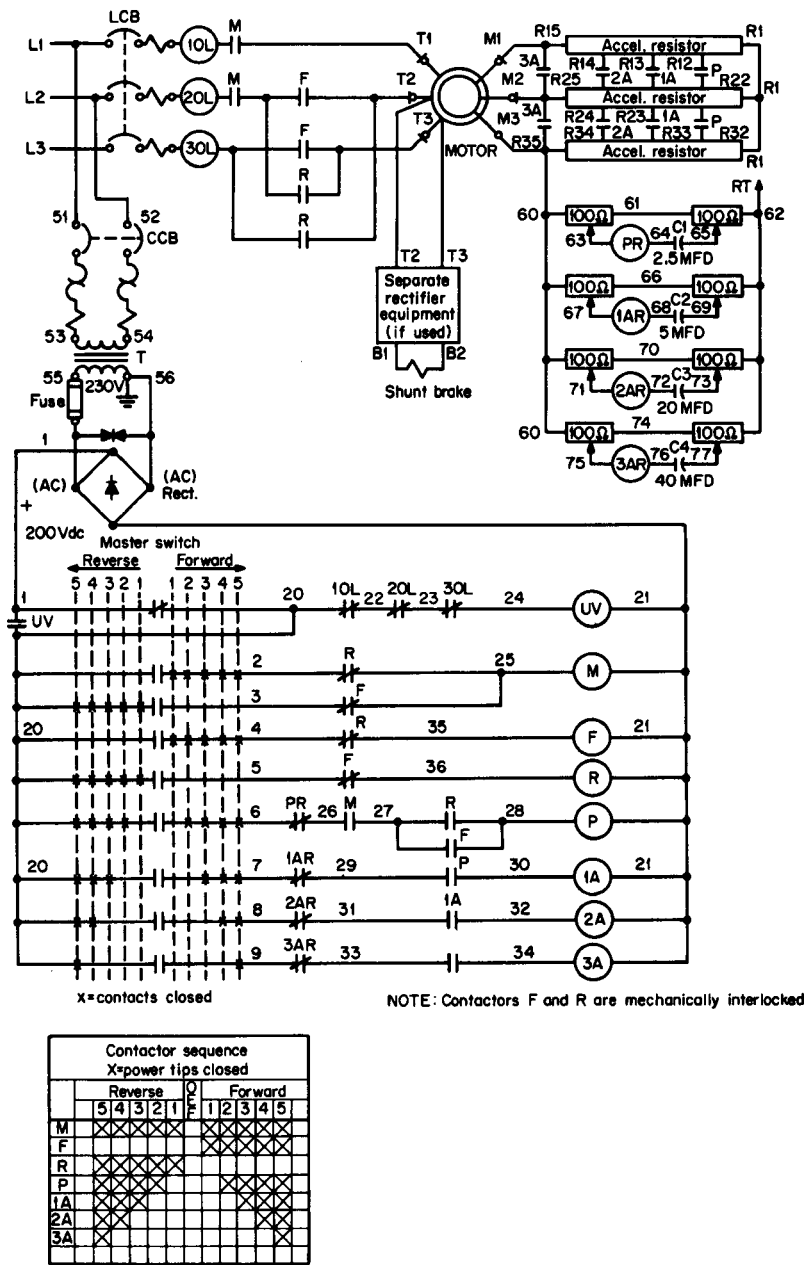









FIGURE 7.134 Principle of frequency acceleration.


contacts . The motor is now connected to the line with resistance in its rotor circuit. The starting current in the rotor circuit energizes the operating coils PR , $1AR$, $2AR$, and $3AR$ of all the frequency relays. The relay PR , which is the plugging relay and has only $2\frac{1}{2}$ μF in series with its coil, will not pass enough current to operate. Since all the frequency relays have normally closed contacts, the contacts  of relay PR will stay closed, and operating coil  of contactor P will be energized. Thus contactor P will close its contacts  immediately. The frequency relays $1AR$, $2AR$, and $3AR$ will operate immediately upon passage of current through the motor and therefore will open their contacts , , and . Closure of contactor P closes its auxiliary contacts , but operating coil  will not be energized until relay $1AR$ drops out and closes its contacts . Relay $1AR$ will drop out after the motor has accelerated to a sufficient speed so that the frequency of the rotor is such as to cause the current of operating coil  to decrease the dropout value. When relay $1AR$ drops out, it closes its contacts  and energizes the operating coil  of contactor $1A$. Contactor $1A$ then operates and closes its contacts , shorting out some of the resistance. In a similar manner as the motor accelerates, frequency relays $2AR$ and $3AR$ drop out at progressively higher speeds and cause contactors $2A$ and $3A$ to close.

277. Methods of starting dc motors. As discussed in Sec. 136, dc motors are almost always started with resistance in series with the armature winding. Both manual and automatic starters are used.

278. Types of Controllers for dc Motors

<i>Controller Type</i>	<i>Remarks</i>
1. Manual starters	Available in nonreversing and reversing types
a. Across-the-line	without dynamic braking
b. Starting rheostats (dial-type starters)	Obsolete; suitable only for nonreversing service without dynamic braking
c. Drum	Suitable for nonreversing and reversing service with or without dynamic braking
d. Multiple-switch	Suitable only for nonreversing service without dynamic braking
2. Manual-starting and speed-regulating controllers	Obsolete; suitable only for nonreversing service without dynamic braking
a. Starting and speed-regulating rheostats (dial-type controllers)	Suitable for nonreversing and reversing service with or without dynamic braking
b. Drum	
3. Magnetic starters	Available in nonreversing and reversing types
a. Time-limit acceleration	with or without dynamic braking
b. Current-limit acceleration	
c. Counter-emf-limit acceleration	
d. Time-current acceleration	

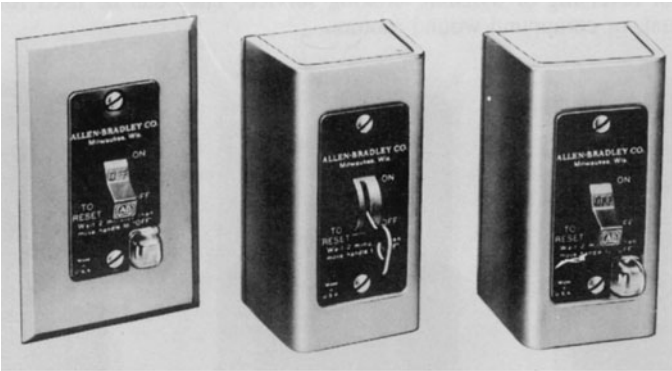279. Across-the-line manual starters for dc motors are made as standard equipment in sizes up to and including 2 hp. They consist of a manually operated switch in a suitable enclosure. They can be obtained with or without thermal overload relays. Those of the smaller types are sometimes called *auxiliary* or *secondary breakers* (see Div. 4). Most of the overload relay devices can be reset by throwing the handle to the extreme off and then to the on position. The release mechanism generally is constructed on the trip-free principle so that the switch cannot be held closed against a dangerous overload. These starters cannot be provided with undervoltage release or protective devices. Typical starters of these types are shown in Figs. 7.135, 7.136A, 7.136B, 7.136C, and 7.137.



I. Flush-plate type for switch-box mounting. II. Enclosed key-operated toggle-switch type. III. Enclosed toggle-switch type.

FIGURE 7.135 Manual across-the-line fractional-horsepower starters for ac or dc motors. [Allen-Bradley Company, Inc.]



FIGURE 7.136A Toggle-switch manual across-the-line starter for a dc motor. [Westinghouse Electric Corp.]



FIGURE 7.136B Drum-type manual across-the-line starting switch for a dc motor. [Square D, Schneider Electric]



FIGURE 7.136C Toggle-switch manual across-the-line starters for ac motors only. [Square D, Schneider Electric]

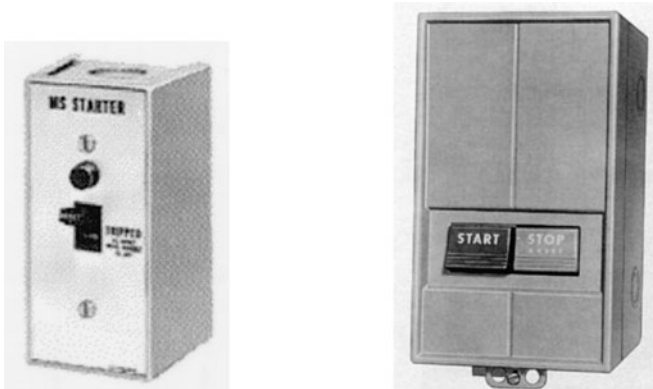


FIGURE 7.137 Manual across-the-line fractional-horsepower starters for ac or dc motors: left, toggle-switch type; right, pushbutton type. [Eaton Corp., Cutler-Hammer, Inc.]

280. Starting rheostats for dc motors,

sometimes called *dial* or *face-plate starters*, are obsolete and no longer available. They will be encountered only on very old installations. They consist of a series of contacts mounted on an insulating panel and connected to different points in a resistance unit (see Fig. 7.138). An arm or a dial bearing a contact is arranged so that it can be moved across the stationary row of contacts. Moving the arm to the first contact closes the armature circuit in series with the starting resistance. As the arm is moved across the buttons, sections of the starting resistance are successively cut out of the circuit until the last contact is reached. Then all the resistance has been cut out of the circuit, and the armature is connected directly across the line. These starting rheostats are not suitable for reversing or dynamic braking service. They can be used for starting series, shunt, or compound-wound motors.

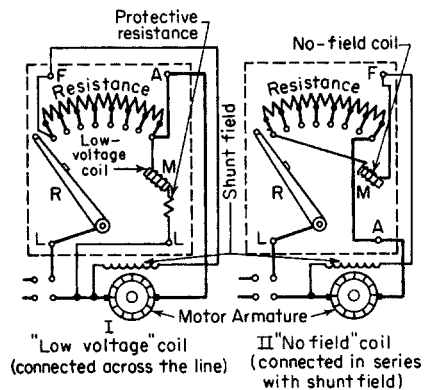


FIGURE 7.138 Low-voltage protection provided by a low-voltage coil and by a no-field coil.

281. Undervoltage protective devices for starting rheostats will also be encountered only on very old installations. Replacements are not available.

These can be operated by either a low-voltage coil or a no-field coil (Fig. 7.138). On a manually operated starter, each device usually consists of an electromagnet M , which under conditions of normal voltage holds the operating arm R in the running position, and a spring (not shown in the diagram) which returns the operating arm to the off position upon failure or decrease of voltage. Starters are sometimes so constructed that instead of the electromagnet being made strong enough to hold the arm in the running position against the force of the spring, a catch is provided to engage and hold the arm after it has been manually moved to the running position. Then, if the voltage drops below a predetermined value, the

electromagnet disengages the catch. This releases the arm, which is returned to the off position by the spring. The magnet coil may be connected directly across the line (Fig. 7.138, I) with a protective resistance in series, in which case it is called a *low-voltage coil*, or it may be connected in series with the shunt field (Fig. 7.138, II), in which case it is called a *no-field coil*. Both arrangements provide low-voltage protection. If the coil is connected across the line, the current carried by the coil, and therefore the coil losses, will be less than if it is connected in series with the shunt field. The difference between the maximum and minimum field currents of wide-speed-range adjustable-speed motors renders it impractical to design a series-connected holding coil which will operate satisfactorily throughout the range.

282. In starting a dc motor using a starting rheostat close the line switch and move the operating arm of the rheostat step by step over the contacts, waiting a few seconds on each contact for the motor to accelerate. If this process is performed too quickly, the motor may be damaged by excessive current; if too slowly, the rheostat may be damaged. If the motor fails to start on the first step, move promptly to the second step and if necessary to the third, but no farther. If the motor doesn't start when the third step is reached, open the line switch at once, allow the starter handle to return to the off position, and look for faulty connections, overload, etc. The time of starting a motor with full-load torque should not, as a general rule, exceed 15 s for rheostats for motors of 5 hp and lesser output and 30 s for those of greater output.

283. To stop a dc motor using a starting rheostat, open the line switch. the arm will return automatically to the off position. Never force the operating arm of any starting rheostat back to the off position.



FIGURE 7.139 Solid state or overload relay. [Siemens Energy & Automation, Inc.]

284. Overload protection is not generally provided in starting rheostats. Overload protection must be provided at some other point in the motor circuit by means of fuses, circuit breakers, or magnetic contactors controlled by overload relays (Fig. 7.139).

285. Drum-switch controllers are made in a variety of types. They can be obtained for both reversing and nonreversing service and with or without contacts for dynamic braking. They are used for series, shunt, and compound motors. The essential features of a drum controller are a central movable drum upon which are mounted a set of contact segments and a set of stationary contact fingers. A typical drum controller is illustrated in Fig. 7.140. The movement of the drum is controlled by means of a handle on top of the case. As this handle is moved from the off position, the armature circuit is closed in series with the starting resistance by means of the first set of movable segments on the drum, making contact with the first set of stationary fingers. As the handle is moved around, the resistance is short-circuited step by step by the contacts located farther around on the drum. Small controllers of this type are self-contained, the starting resistance being mounted in a ventilated box on the rear of the drum switch. In

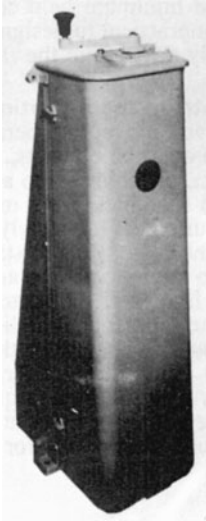


FIGURE 7.140 Nonreversing drum controller. [Westinghouse Electric Corp.]

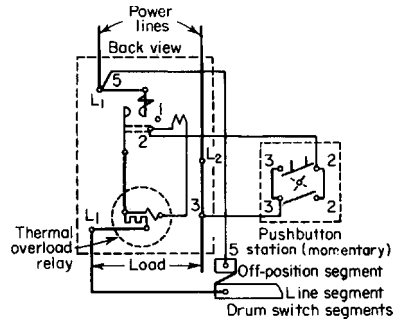


FIGURE 7.141 Connections for a thermal overload protective unit used with a drum starter.

the larger sizes the resistance is mounted separately from the drum switch. Drum controllers do not provide any overload or undervoltage protection. Short-circuit protection may be provided by fuses or a circuit breaker mounted separately from the controller. A magnetic contactor with an overload relay will provide both overload and undervoltage protection. Such a protective unit has the advantage that it may be electrically interlocked with the drum switch so that the line contactor cannot be closed unless the drum switch is in the off position. This provision safeguards against the possibility of the motor being thrown directly across the line. Connections for a typical magnetic-contactor protective panel are shown in Fig. 7.141.

286. The manually operated multiple-switch controller for dc motors (Fig. 7.142) comprises a number of switches S , which are manually closed in sequence. Thereby the resistances R are shunted out of circuit as the armature accelerates. The switches are mechanically interlocked so that they cannot be closed in anything but the proper sequence. When the last switch S_5 is closed, all the resistance is short-circuited. The switches, after being closed, are held in the closed position by a catch. This catch is in turn held by a low-voltage protective magnet M .

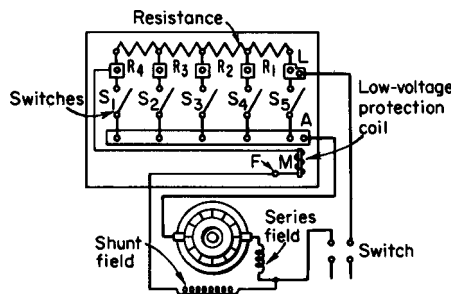


FIGURE 7.142 Connections for a multiple-switch dc controller.

Upon the failure of voltage, the catch is released and all the switches are thrown to the off position by gravity or by a spring. A switch of this type is especially adapted for

starting large motors. A sufficient time period will elapse in the ordinary closing of the switches to provide a protection against too rapid acceleration. The arrangement of a number of switches in parallel tends to minimize heating of the contacts, particularly of the contact of the last switch S_5 . One of the contact blocks of each switch is often made of laminated copper strips and the other of carbon. The laminated brushes and the copper-to-carbon arcing contacts render a switch of this type exceptionally adaptable for use with large motors. Overload protection must be provided outside the controller. These controllers are suitable for series, shunt, or compound motors in nonreversing service without dynamic braking.

287. Apparatus for field control of shunt or compound motors. The variable resistance in series with the shunt field, necessary for the speed control of shunt or compound motors by the field-control method, may be provided by means of a field rheostat separate from the starting rheostat, or the starting rheostat and the field rheostat may be combined into a single piece of equipment forming a combined starting and speed-adjusting controller. Such combined starting and speed-adjustment controllers are available in both dial and drum types of construction.

Drum controllers for combined starting and speed adjustment (field control) are provided with two sets of contacts, one for control of the starting resistance and the other for control of the speed of the motor through variation of shunt-field resistance. Although controllers of this type are most frequently applied on machine tools, they are desirable for any service in which the work is severe and the expense of a controller is justified.

288. Motor-generator variable-voltage systems, formerly called Ward-Leonard systems, consist of an adjustable-voltage dc generator driven at a constant speed by an ac motor and a source of direct current to excite the generator separately. The variable-output voltage of the dc generator serves as the input to one or more dc motors whose speed will vary with the voltage supplied. The motor-generator combination acts as an amplifier, since a small current in the generator exciter circuit can control the generator output voltage and the armature current of one or more driven dc motors. These systems are regenerative; e.g., the descending load on a hoist driven by a dc motor supplied by the motor-generator system will return energy to the system.

289. Solid-state variable-voltage systems supply direct current as the output of a bank of thyristors called a converter. A converter can be described as equipment that will change electrical energy from one form to another. This change is accomplished in two different modes of operation. The first mode is *rectification*, in which the converter changes alternating current or voltage to direct current or voltage. The second mode is known as *inversion*, in which the converter changes direct current or voltage to alternating current or voltage. During rectification, power flow is from alternating to direct current. Conversion is accomplished with as few as three or six thyristors, although multiples of these frequently are connected in parallel to increase capacity.

Although the converter and its controls are relatively simple, dc variable-speed drives provide satisfactory performance in the most demanding applications. These applications range from simple, general-purpose nonreversing drives with a fixed shunt field and a 5 percent voltage regulator to sophisticated steel-mill reversing drives with shunt-field controls and high-performance 0.1 percent speed regulators. Generally, the latter also provide inversion capabilities for fast deceleration via power pumpback into the ac line.

Solid-state converters, through proven performance, provide a high degree of reliability. Modern forms of modular construction and packaging techniques allow quick replacement of components or assemblies to minimize downtime if a fault occurs. The compactness and light weight of modern converters eliminate the need for elaborate foundations and require a minimum amount of floor space. In many instances, the converters can be wall-mounted or packaged with other system assemblies to utilize floor space efficiently.

Form Classifications. Standard designations are used to describe converter characteristics. An operating-quadrant diagram (Fig. 7.143) is used for this purpose. The designations are intended to describe the functional characteristics of converters but not necessarily the circuits of components used. Converters are identified by “form” letters to classify their functional capabilities.

Form A. A single converter capable of unidirectional voltage and current flow. It operates as a rectifier in Quadrant I only.

Form B. A double converter capable of providing a positive voltage and current or a negative voltage and current. It has no inversion capability and operates as a rectifier in Quadrants I and III.

Form C. A single converter capable of bipolarity voltage and unidirectional current flow. It operates as a rectifier in Quadrant I and as an inverter in Quadrant IV.

Form D. A double converter capable of bipolarity voltage and bidirectional current flow. It operates as a rectifier in Quadrants I and III and as an inverter in Quadrants II and IV. Its performance is identical to that of a Ward-Leonard drive.

These forms refer to the converter capabilities only and not to the motor. Motor direction and power flow may be reversed by armature switching or field reversal without the use of an elaborate Form D converter. For example, a motor can be reversed with a Form A converter and a reversing switch or a reversing field. Similar combinations may be obtained for regeneration (reverse power flow).

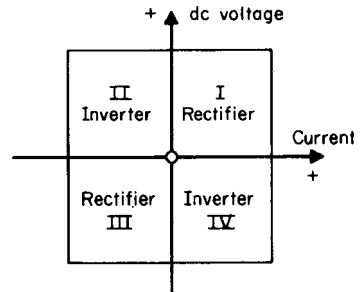


FIGURE 7.143 Operating quadrants of thyristor converter units.

290. Apparatus for armature speed control of dc motors. When armature speed control is employed, the same piece of equipment serves for both starting and speed control. An ordinary starting controller should not be used for armature speed control, however, as it is not designed for continuous duty but only for intermittent service, as in starting. In employing a controller for armature speed control, make sure that it is designed for that type of service and not simply for starting duty. Controllers suitable for armature control are available in both the rheostat and the drum types.

291. Rheostat-type armature-control speed regulators (Fig. 7.144) are used for speed reduction with shunt, compound, or series motors in nonreversing service when the torque required decreases with the speed but remains constant at any given speed, as with fans, blowers, and centrifugal pumps. They can also be used in applications in which the torque is independent of the speed, as in printing presses. However, this method of

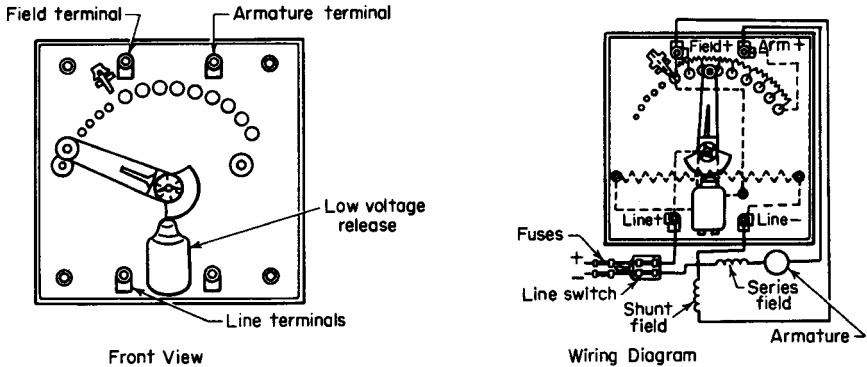


FIGURE 7.144 Armature-control speed regulator, removed from enclosure.

speed control is not suitable for such applications if operation continues for long periods at reduced speed, since such operation is not economical. If the torque varies, constant speed cannot be obtained with these controllers.

In the regulator shown, the low-voltage release consists of an electromagnet enclosed in an iron shell, a sector on the pivot end of the operating arm, and a strong spring which tends to return the arm to the off position. The magnet is mounted directly below the pivot of the arm, and its coil is connected in shunt across the line in series with a protecting resistance. When the magnet is energized, its plunger rises and forces a steel ball into one of a series of depressions in the sector on the arm with a sufficient force to hold the arm against the action of the spring; each depression corresponds to a contact. The arm can be easily moved by the operator, however, as the ball rolls when the arm is turned. When the voltage fails, the magnet plunger falls and the spring throws the operating arm to the off position. Standard commercial rheostats of this type are designed to give about 50 percent speed reduction on the first notch.

292. Operation of armature-control speed regulators (Fig. 7.144). Continuous motion of the operating arm starts the motor and brings it gradually to maximum speed. Moving the arm over the first few contact buttons increases the shunt-field strength if the motor is shunt or compound. The movement over the succeeding buttons cuts out armature resistance and permits the motor to speed up.

293. Drum controllers suitable for armature speed control are widely used for crane and hoist motors and in railway applications. Their general appearance and construction are the same as for the drum controller shown in Fig. 7.140. Crane controllers are arranged for reversing service and usually for dynamic braking.

294. Magnetic contactors and starters for dc motors are available in a number of different types for reversing and nonreversing duty, with or without dynamic braking, and for inching and jogging service. They can be used with constant-speed or adjustable-speed shunt or compound motors and with series motors. When they are used with adjustable-speed motors, speed is controlled by a field rheostat mounted separately from the magnetic controller.

When armature speed control is required, it is obtained by controlling the functioning of the contactors by a master controller. The operator adjusts the master controller to the position for the desired speed, and this action initiates the functioning of the contactors, which adjusts the resistance to the corresponding value.

Magnetic starters consist of the necessary magnetic contactors and relays mounted on a panel (open type) or enclosed in a sheet-metal cabinet (enclosed type). Magnetic starters and controllers are equipped with some form of overload relay which opens the circuit of the operating coil of the line contactor upon the occurrence of an overload on the motor. The master switch for initiating the operation of the controller may consist of an automatic float or pressure switch, a pushbutton switch, or a drum or rotary switch. The automatic switches and the pushbutton masters are used for simple control such as starting and stopping or starting, stopping, and reversing, while the drum or rotary switch is employed when full speed control by the operator is required, as for the control of cranes, hoists, etc. Undervoltage protection or release is provided through the operating coil of the main-line contactors, since upon failure or abnormal reduction of the line voltage, the operating coil of the contactor will be deenergized and the contactor will open the motor circuit. The principles of the different methods of automatically controlling the acceleration are discussed in Secs. 259 to 275. The appearance of typical dc magnetic controllers is shown in Figs. 7.145 to 7.149 inclusive.

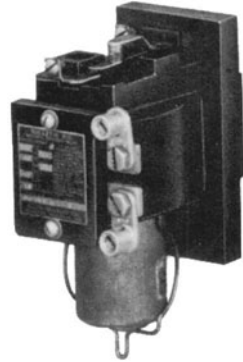


FIGURE 7.145 Magnetically operated overload relay that can be used in the protection of ac or dc motors. [Allen Bradley Company, Inc.]

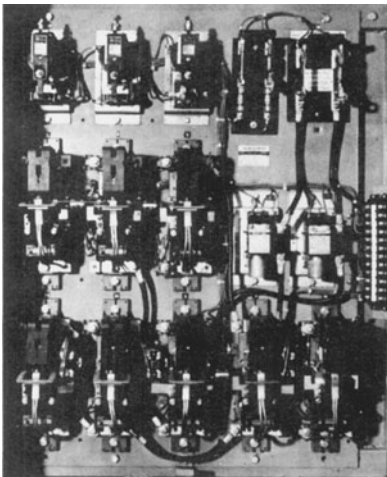


FIGURE 7.146 Pneumatic-relay type of time-limit controller for a dc motor. [Square D, Schneider Electric]

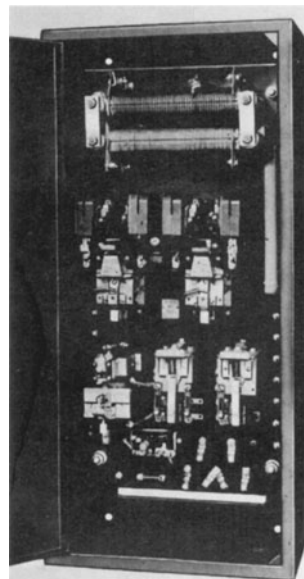


FIGURE 7.147 Inductive-time-limit controller for a dc motor. [Westinghouse Electric Corp.]


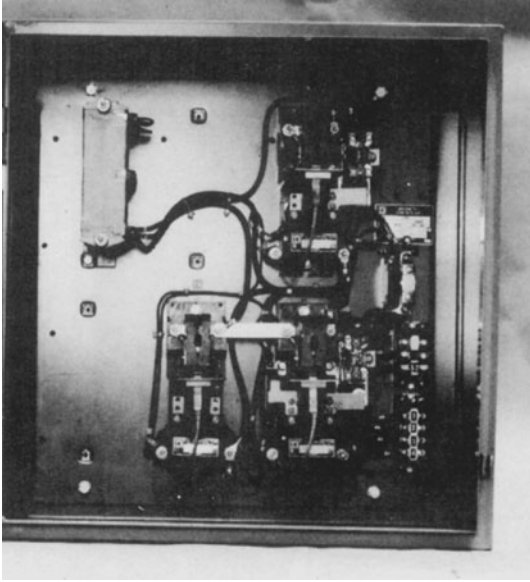


FIGURE 7.148 Pneumatic-timing relay-type time-limit acceleration controller for a dc motor. [Square D, Schneider Electric]

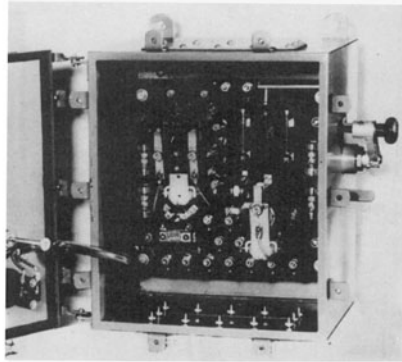295. Field relays must be used with magnetic starters when field speed control is employed. This is necessary to ensure that the motor will be started with full field. These relays are called *vibrating* or *fluttering relays*, since during the acceleration or deceleration of the motor their armatures flutter or vibrate between the open and closed positions, alternately shorting and cutting in the field resistance. The operating coil of the relay is connected in series with the armature of the motor, and the contacts are connected across the shunt-field rheostat. During the starting period, whenever the armature current exceeds the value for which the relay is set, the relay will close, short-circuiting the field resistance so that the field strength is maximum. After the starting resistance in series with the armature has been cut out of the circuit, the field relay will hold in until the motor has accelerated sufficiently to reduce the armature current to the value which will allow the field relay to drop out. As it drops out, the field resistance will be cut into the field circuit, thus weakening the field strength. This weakening of the field reduces the counter-emf and therefore will cause the armature current to increase and further accelerate the motor. The increase in armature current causes the field relay to close again, short-circuiting the field resistance. This action is rapidly repeated, the relay vibrating between open and closed positions until the motor has been accelerated to the speed for which the field rheostat is adjusted. The armature current is then at its normal value and is not sufficient to operate the field relay, which remains open with the field resistance cut into the field circuit.




I. Current-limit type. [Ward-Leonard Electric Co.]



II. Counter-emf type. [Ward-Leonard Electric Co.]



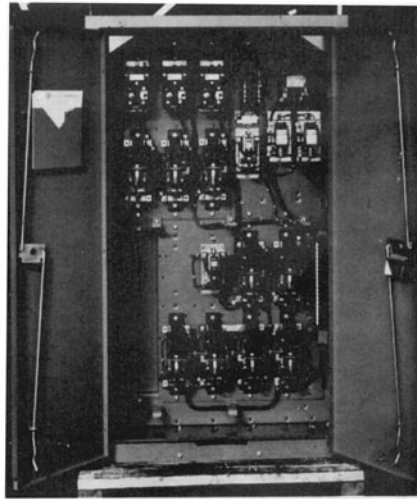III. Time-current type in NEMA Type 4 (watertight) cabinet.



IV. Time-current type.

FIGURE 7.149 Typical magnetic controllers for dc motors.

296. DC safety disconnect switches, as shown in Fig. 7.150, are specially designed to provide in a very satisfactory manner for the disconnect switch required by the National Electrical Code for crane installations. The switch in Fig. 7.150 is arranged for lever operation but is not difficult to close, in contrast to most large-size manually operated disconnect switches. Pushing the operating handle up closes the double-pole control-circuit contacts and energizes the magnetic coil to close the switch and connect power to the crane. Pulling the operating handle down breaks both sides of the control circuit.

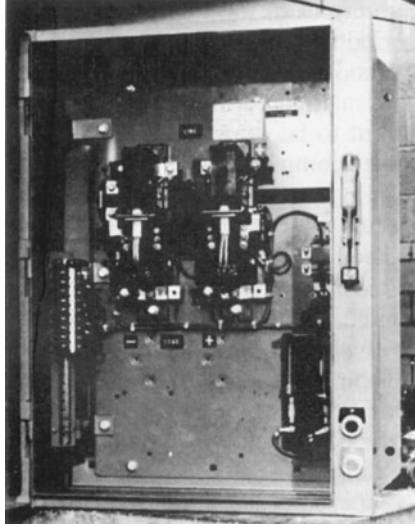


FIGURE 7.150 Direct-current motor disconnect switch.

297. Methods of starting polyphase squirrel-cage induction motors

1. Full-voltage (across-the-line)
2. Reduced-voltage
 - a.* By means of autotransformer (compensator)
 - b.* By means of series resistor
 - c.* By means of series reactor
 - d.* By means of part-winding
 - e.* By means of star-delta
 - f.* By means of solid-state reduced-voltage

Any polyphase induction motor can be safely started by applying full voltage at starting without harm to the motor, but as discussed in Sec. 132, the heavy starting current drawn from the line by this method may produce too great power and voltage fluctuations in the power supply system. When the starting current must be reduced, one of the methods listed in item 2 above is employed for reducing the voltage impressed on the motor during starting. In Method *a* the motor is connected at the start to the secondary of an autotransformer. After the machine has accelerated sufficiently, the motor is switched over to full line voltage. With this method there are just two steps in the sequence of starting operations: reduced voltage of some definite value and, directly, full line voltage. Starters employing

the transformer method of reducing the voltage are called compensators or auto-transformer starters. In Method *b*, resistance is connected in series with the motor leads from the supply. One or more steps of resistance can be employed. In most cases only one step is used, so that the motor is first connected to the line with some definite value of resistance in series, and then, after the machine has accelerated sufficiently, it is thrown over to full line voltage. When starting conditions are more severe or the starting current must be more closely regulated, additional steps are employed for cutting out resistance. Method *c* is similar to the series-resistance method except that reactance is inserted in series with the motor during starting instead of resistance. With this method only one step of reactance is used.

For the same value of starting torque developed, the autotransformer method of starting will limit the first value of peak starting current to the lowest value. The amount of power consumed during the starting period will be considerably less than with resistance starting. A disadvantage of this method is that the motor is generally entirely disconnected from the supply during the transition period from reduced to full line voltage. This causes a second peak current to be drawn from the line at the instant that full voltage is applied. Some power companies will not allow the use of autotransformer starters for this reason.

With resistance starting, the motor is connected to the supply continuously throughout the starting period, the motor impressed voltage being increased by shorting out the starting resistance. Although the line current will increase whenever some or all of the starting resistance is short-circuited, the magnitude of such peaks will not be nearly so great as the peak current involved at the instant when full voltage is applied with autotransformer starting. The resistance-starting method has the advantage that it produces very smooth starting conditions with respect both to strains imposed upon the motor and load and to the power and voltage fluctuations produced in the supply circuit during the starting period. Resistance starting is used when the strains imposed upon the load with compensator starting would be detrimental or when this method is required by the regulations of power supply companies. The resistance method is not generally satisfactory unless a starting torque of 50 percent or less of full-load torque is sufficient.

With series-reactance starting, just as in resistance starting, the motor connections need not be broken during the starting period. The reactor is short-circuited when the motor attains its maximum speed on reduced voltage. For the same current drawn from the line, reactance starting will develop the same starting torque as resistance starting. Reactance starting has the advantages over resistance starting that less power is consumed during the starting period and that the transition peaks of current will be lower because of the opposing effect of the inductance to sudden changes in the current. For the same number of steps reactance starting will produce the smoothest starting conditions of any of the three starting methods. However, in the smaller sizes control equipment of this type is more expensive than either of the other two types and for all sizes is more expensive than resistance starting. It is not practicable to make reactance starters for more than two steps of starting control, so that, by using a greater number of steps, smoother starting can be obtained with resistance starting. For many large motors, a reactance starter will be cheaper than a transformer starter, since only two sets of switching contacts are required for a one-step starter as compared with three sets for a transformer starter. For these reasons, reactance starting is utilized only with very large motors when one or two steps of starting will be satisfactory.

On account of the lower cost of across-the-line starters the general practice is to employ this type of starting whenever it is possible to use motors whose starting currents are within the allowable limits.

Refer to Fig. 7.152 and Secs. 299, 300, and 301 for further comparison.

In method (d), the motor is provided with two windings, and 12 leads are generally brought out. On initial start-up, only one winding is energized, and the second winding is

energized after a short predetermined time delay. Two contactors, rated for part-winding start, are required, and overload protection must be provided for each winding. Part-winding start motors are often dual-voltage motors, such as 230/460 V, with each winding designed for 230 V. When used on 230-V service, the windings are connected in parallel. When used for 460-V service, they are connected in series. In 230-V service, part-winding start (two-step) or full-winding start is available. In 460-V service the motor must be used with full-winding start. See Sec. 312.

In method (e), the motor has six leads, two for each winding, and is connected in star for the initial start-up, then reconnected in delta for normal running. The transition of connection may be initiated by a timer or a current-sensing device. The transition period from star to delta may be "open," in which case the motor is entirely disconnected from the supply during the transition period, or "closed" transition may be used, which involves additional contactors and resistors to maintain current during the transition period. Mechanical interlocking of contactors, to prevent them from closing a short circuit across the line, is necessary. The overload protection should be connected into only one end of each winding and selected on the basis of 58 percent of the motor full-load current. That is, when selecting the overload protection, enter the manufacturer's overload selection tables using a motor full-load current equal to 58 percent of the nameplate full-load current for the motor in its across-the-line delta connection. Starters for star-delta start motors, with mechanically interlocked contactors, are available. See sec. 313 for complete schematic diagrams.

In method (f), solid-state reduced-voltage starters are used, as described in Sec. 263.

298. Starting with and without compensators. The starting current taken by a squirrel-cage induction motor at the instant of starting is equal to the applied emf divided by the impedance of the motor. Only the duration of this current, and not its value, is affected by the torque against which the motor is required to start. The effect of starting without and with a compensator is illustrated by diagrams I and II in Fig. 7.151. Motor I is thrown directly on a 460-V line. The impedance of the motor is $5\ \Omega$ per phase; the starting torque, 10 lb at 1-ft radius; and the current taken, 92 A. In diagram II a compensator is inserted, stepping down the line voltage from 460 to 60 percent of 460, or 276 V. This reduces the starting current of the motor to 60 percent of 92, or about 55 A, and the starting torque becomes $0.6^2 \times 10$, or 3.6 lb at 1-ft radius. The current in the line is reduced to 60 percent of 55, or 33 A.

Thus when a compensator is used, the starting torque of the motor can be reduced to approximately the value required by the load, and the current taken from the line is correspondingly decreased.

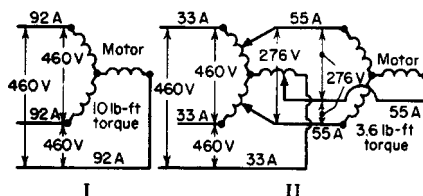


FIGURE 7.151 Starting with (I) and without (II) compensator.

299. General Comparison of Starting Conditions among Three Types of Reduced-Voltage Starters

(Allis-Chalmers Corporation)

Characteristic	Autotransformer type	Primary resistor type	Reactor type
Starting line current at same motor terminal voltage	Least	More than autotransformer type	
Starting power factor	Low	High	Low
Quantity of power drawn from the line during starting	Less	More than autotransformer type	
Torque	Torque increases slightly with speed	Torque increases greatly with speed	
Torque efficiency	The autotransformer-type starter provides the highest motor starting torque of any reduced-voltage starter for each ampere drawn from the line during the starting period	Low	Low
Smoothness of acceleration	Motor is momentarily disconnected from the line during transfer from start to run	Smoother. As the motor gains speed, the current decreases. Voltage drop across resistor or reactor decreases and motor terminal voltage increases. Transfer is made with little change in motor terminal voltage	
Cost	Equal	Lower in small sizes, otherwise equal	Equal
Ease of control	Equal	Equal	Equal
Maintenance	Equal	Equal	Equal
Safety	Equal	Equal	Equal
Reliability	Equal	Equal	Equal
Line disturbance	Varies with line condition and type of load		

300. Comparison of Current Torque Starting Characteristics for Squirrel-Cage Motors

(Allis-Chalmers Corporation)

Refer to Fig. 7.152.

Method of starting	Starting current drawn from the line as a percentage of full-load current	Starting torque as a percentage of full-load torque
Connecting motor directly to the line-full potential	470	160
Autotransformer 80% tap	335	105
Resistor or reactor starter to give 80% applied voltage	375	105
Autotransformer 65% tap	225	67
Resistor or reactor starter to give 65% applied voltage	305	67
Resistor or reactor starter to give 58% applied voltage	273	54
Autotransformer 50% tap	140	43
Resistor or reactor starter to give 50% applied voltage	233	43

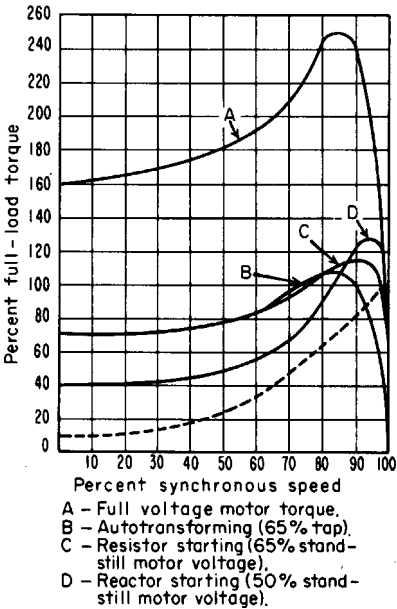


FIGURE 7.152 Accelerating torque characteristics of a squirrel-cage induction motor. [Allis-Chalmers Corporation]

301. Comparison of autotransformer and resistance for decreasing voltage in starting squirrel-cage motors. The motor in Fig. 7.153 is supposed to require 100 A to start it, i.e., to provide the energy needed to produce the necessary starting torque. At I, where an autotransformer is used to lower the voltage to 115, a current of 100 A is produced in the motor primary with a current in the line of 50 A. This condition is due to

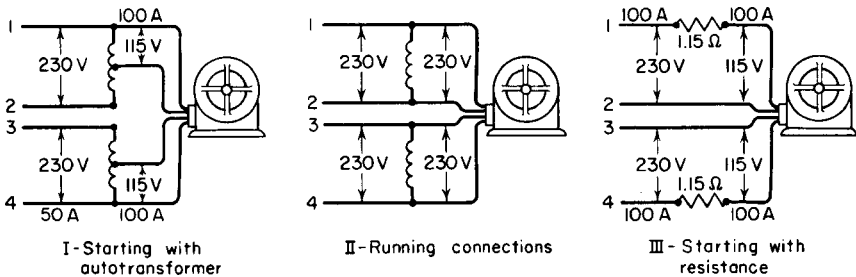


FIGURE 7.153 Starting with resistance and with compensator.

the transformer action of the autotransformer. At II are shown the running conditions at which the autotransformer is entirely disconnected from the circuit. At III are illustrated the conditions that would obtain if the voltage were lowered for starting by inserting resistance in series with the line. Obviously 100 A must flow in all portions of the line even though the resistance of $1.15\ \Omega$ reduces the line voltage of 230 to a voltage of 115, which is impressed on the motor. There is a loss of energy in the resistance. For the same line starting current the starting torque available with the resistance method will be considerably less than that developed when a compensator is employed. As stated in Sec. 297, the resistance-starting method has the advantage that it produces very smooth starting conditions with respect to both the strains imposed upon the motor and load and the voltage fluctuations produced in the supply circuit during the starting period. A comparison of starting torques and currents when reducing the voltage in the two different ways is given in Table 300.

302. Across-the-line ac motor controllers are made in a variety of types. The most common types are:

1. Manual motor-starting switch with no overload protection (toggle and drum switches)
2. Manual motor-starting switch with thermal overload protection
3. Magnetic switch (contactor) without overload protection
4. Magnetic switch with thermal overload protection

303. The manual motor-starting switch is simply a tumbler, rotary, or lever switch without overload protection constructed in an especially rugged manner. Some designs provide undervoltage protection. A single switch is used for nonreversing duty and an interlocked pair for reversing duty up to 2 hp. Drum-switch types are more commonly used for reversing applications. Some representative types are illustrated in Figs. 7.154 and 7.155.

304. Manual across-the-line starting switches with thermal overload protection are shown in Figs. 7.156, 7.157, and 7.158. The overload protection is obtained by means of a thermal overload relay. (For more comprehensive discussion of the principles of thermal overload relays refer to Div. 4.)

305. Magnetic across-the-line motor controllers consist of a magnetically operated contactor controlled from a pushbutton station. Starters are provided with thermal overload and undervoltage protection. For the switch and circuit shown in Fig. 7.159,

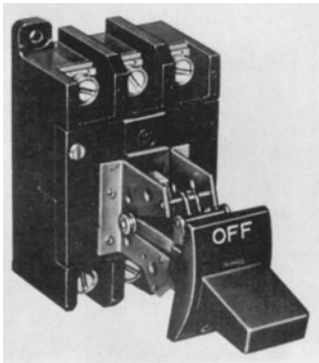


FIGURE 7.154 Toggle-type motor-starting switch without overload protection for polyphase squirrel-cage motors. [Westinghouse Electric Corp.]



FIGURE 7.155 Drum-switch type of motor-starting switch without overload protection for polyphase squirrel-cage motors. [Eaton Corp., Cutler-Hammer Products]



FIGURE 7.156 Manual cross-the-line starters with thermal overload protection for polyphase squirrel-cage motors. [General Electric Co.]



I. [Eaton Corp., Cutler-Hammer Products]



II. [Square D, Schneider Electric]

FIGURE 7.157 Manual cross-the-line starters with thermal overload protection for squirrel-cage motors.

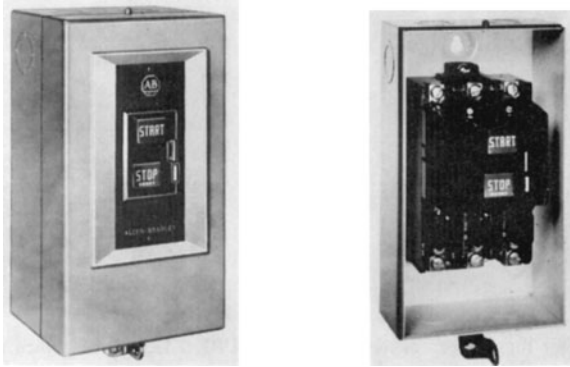


FIGURE 7.158 Manual across-the-line starter with overload protection for a squirrel-cage motor. [Allen-Bradley Company, Inc.]

I. Size 1 polyphase-motor starter.



II. Three-wire control of a magnetic across-the-line starter.

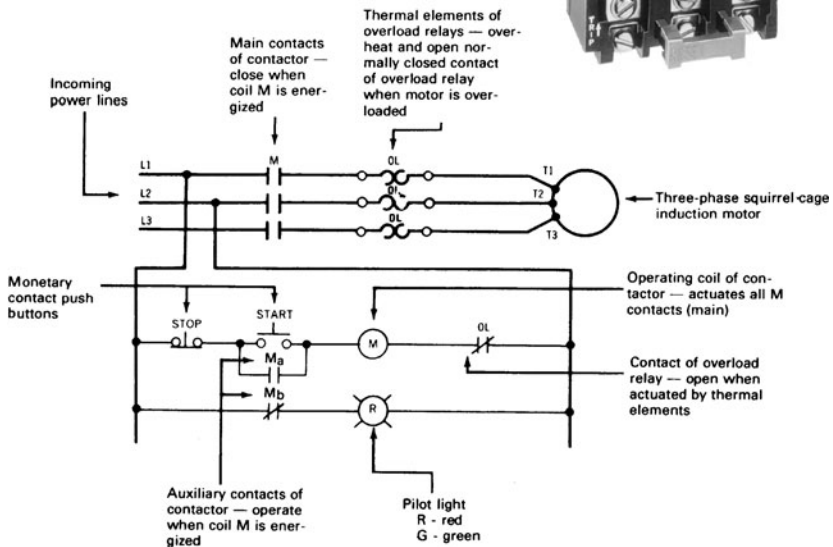


FIGURE 7.159 Magnetic across-the-line starting. [Square D, Schneider Electric]

pressing the **START** button closes the circuit of the operating coil <M> of the magnetic contactor. This allows a current to flow from one side of the line, through the **START** button, through the operating coil, and back to the other side of the line. The operating coil, being energized, closes the magnetic contactor. The closing also closes an auxiliary contact so that when the **START** button is released, the operating coil is still energized. To stop the motor the **STOP** button is pressed. This opens the circuit of the operating coil, allowing the switch to reopen. In case of an overload the thermal overload relays operate and open their contacts. This deenergizes the operating coil and allows the contactor to open. If the voltage of the line fails or falls to a low value, the operating coil will not be energized sufficiently to hold the contacts of the contactor closed. As the contactor drops out, the contacts are opened and the motor will not start upon return of normal voltage until the **START** button is pressed.

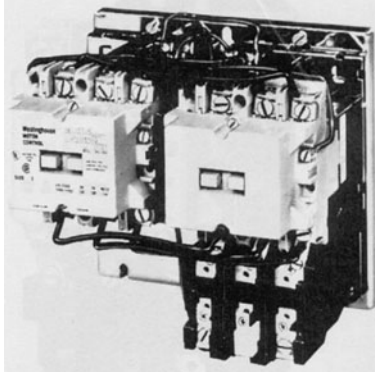


FIGURE 7.160 Reversing-type magnetic across-the-line starter for a squirrel-cage motor. [Westinghouse Electric Corp.]

Magnetic across-the-line starting controllers are made in a variety of types for both nonreversing and reversing duty. The reversing types consist of two magnetic contactors electrically interlocked so as to prevent the closing of both switches at the same time (Fig. 7.160).

306. Combination magnetic across-the-line starters are the magnetic across-the-line starters which include in the same metal enclosure the motor branch-circuit short-circuit protective device. The following different combinations are available as standard equipment:

1. Magnetic starter and motor-circuit protector (Fig. 7.161)
2. Magnetic starter and fused motor-circuit switch (Fig. 7.162)
3. Magnetic starter and inverse-time circuit breaker

National Electrical Code rules require the installation of short-circuit protection and a motor-circuit disconnect means on the line side of each magnetic starter. Combination starters make a very compact and neat installation to meet these requirements. Almost any desired combination for nonreversing or reversing service can be obtained (Fig. 7.163).

307. Motor-circuit protection and isolation. The disconnect means required by the National Electrical Code provides a way to isolate the motor and other portions of the motor branch circuit from the power lines to permit safe servicing and replacement of fuses. This disconnect means there must be a circuit breaker, a motor-circuit switch (rated in either motor horsepower or motor full-load current and motor locked-rotor current), or a properly rated general-use switch. General-use switches are used primarily with small motors. The motor branch circuit must also contain short-circuit protection for the circuit components. This protection may be in the form of either time-delay or non-time-delay fuses selected in accordance with the rules of the National Electrical Code, motor short-circuit protectors (fuse-type devices called MSCPs), or a circuit breaker.

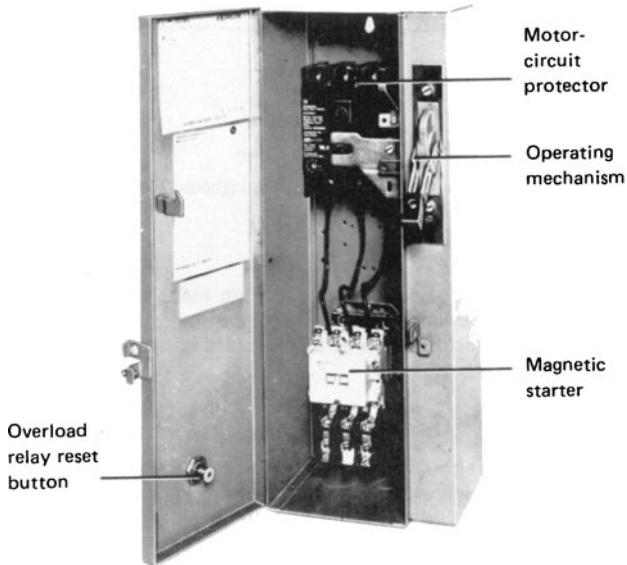


FIGURE 7.161 Combination starter with adjustable-trip-only circuit breaker. [Westinghouse Electric Corp.]



FIGURE 7.162 Combination starter with fusible disconnect, control transformer, and optional features. [Square D, Schneider Electric]

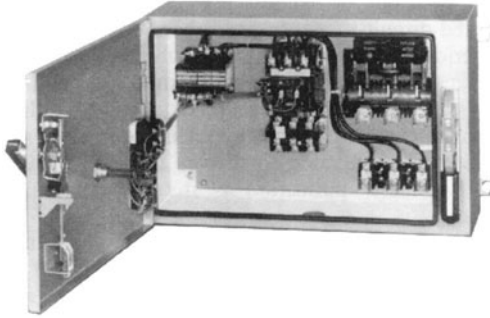


FIGURE 7.163 Across-the-line combination starter and Type 12 horizontal enclosure with optional features. [Allen Bradley Company, Inc.]

For small motors, adjustable magnetic-trip-only circuit breakers, called *motor-circuit protectors*, offer close short-circuit protection because the magnetic-trip element of these devices can be adjusted to the lowest possible value that permits the motor to start. On the other hand, molded-case inverse-time circuit breakers in the smaller frame sizes (up to 150 A) have no provision for adjusting their magnetic-trip setting, and the inverse-time characteristic of these circuit breakers is slower for a given overload than the inverse-time characteristic of the thermal overload relays in the circuit. Hence, the latter operate first and open the circuit when an overload or low-level fault occurs. The magnetic-trip portion of an inverse-time circuit breaker is the only portion that ever causes the circuit breaker to operate in a properly designed motor branch circuit containing overload relays.

308. Reduced-voltage starters. From the viewpoint of controlling current in-rush, the solid-state reduced-voltage starter provides a smoother start for squirrel-cage motors than any other type of starting equipment. Stepless primary resistance starting also provides a smooth start. When the power company severely limits the motor inrush current, these are the ideal automatic motor starters. The primary resistance starter is, however, the most expensive method of reduced-voltage starting and should never be used when an appreciable breakaway torque is required.



FIGURE 7.164 Low-voltage autotransformer reduced-voltage synchronous motor starter. [Allen Bradley Company, Inc.]

The automatic autotransformer starter (Fig. 7.164) is the most effective method of reduced-voltage starting when the application requires a reduction in the current drawn from the line coupled with the greatest possible starting torque. Closed-circuit transition, an option afforded by the autotransformer starter, is particularly advantageous since the high transient currents associated with open-circuit transition starters are eliminated.

Primary-resistance starters are usually employed when the starting current must be reduced and a lower starting torque as compared with that of the autotransformer starter is of little consequence. Primary-reactance starters are similar to the primary-resistance type but are usually applied only to high-voltage starters or on starters for very large motors.

One of the least expensive methods of obtaining reduced-inrush-current starting involves a part-winding starter. It uses two smaller-size contactors as compared with the contactor size employed for across-the-line starting. Voltage-reducing equipment such as transformers, resistors, or reactors is not required. Transition from start to run is inherently closed-circuit transition, and therefore high transient currents during the transition period are nonexistent. Part-winding starting does have some disadvantages. It has a very low and erratic starting torque and can be applied only to induction motors which have been designed for part-winding service. Almost invariably, this type of starting is increment because of the low starting torque. Part-winding starting is not recommended for drives that are frequently started or for high-inertia drives. Its main application is in air-conditioning and ventilating installations.

Star-delta starting is similar to part-winding starting, in that accessory equipment for voltage reduction is not necessary. The stator winding of the motor must be connected in delta with six leads brought out. Starting current and torque are about one-third normal. Star-delta starting is more efficient than part-winding starting and is somewhat more expensive.

309. Primary-resistance starters for squirrel-cage induction motors are made in both manual (semimagnetic) and magnetic types. The magnetic types generally provide time-limit acceleration. They are similar to starters for dc motors, except that they are provided with resistors and switching equipment for each phase, all phases being switched simultaneously. In some types all the resistance is cut out in one step, while in others the starting resistance is cut out in several steps. The manual starters may be of the dial or the drum type. With the manual starters, overload and undervoltage (if desired) protection must be provided separately from the starter. A magnetic starter is shown in Fig. 7.165. Magnetic starters are provided with overload protection and with undervoltage protection or release as desired. Primary-resistance starters of the drum and magnetic types can be obtained for reversing or nonreversing service.

310. Primary-reactance starters. It is possible to reduce the motor terminal voltage as required by using series reactors rather than resistors. However, this method is not generally employed except in high-voltage or high-current installations, or both, in which the heating and physical construction of resistors is a problem. The use of reactors results in an exceptionally low starting power factor and somewhat aggravates the already poor line regulation. Then, too, owing to the relative difficulty of changing the reactance values in the field, reactor starting is more expensive and less flexible than resistor starting on all but the largest machines. The added cost has a very real basis, in that the reactors must be carefully designed and applied, since any saturation would lead to inrushes equal to full-voltage starting current. Such a condition would, of course, make the use of the reactors pointless.

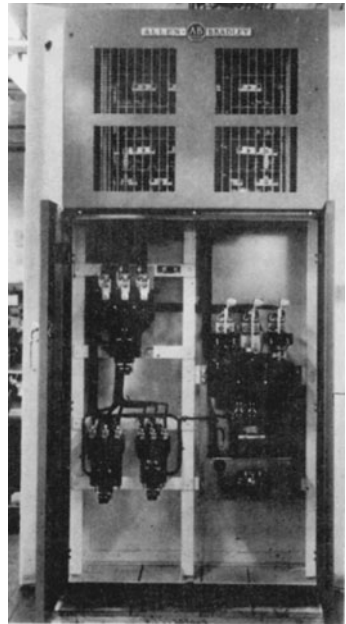


FIGURE 7.165 Primary-resistance-type reduced-voltage motor starter, ac, polyphase. [Allen-Bradley Company, Inc.]

Resistor- and reactor-starting methods have one advantage in common: in both cases, the motor terminal voltage is a function of the current taken from the line. It can therefore be assumed that during acceleration the motor voltage will rise as the line current drops, resulting in greater accelerating energy at the higher speeds and a correspondingly less severe disturbance when the transition to full voltage occurs. This advantage is generally overestimated, first, because the line current does not decrease significantly from locked value until rather late in the accelerating period, and, second, because the difference between the line voltage and the motor terminal voltage is a vector and not a scalar difference.

311. Autotransformer starting. One of the most effective methods of reduced-voltage starting uses the autotransformer. It is preferred to the primary-resistance type when the starting current drawn from the line must be held to a minimum value and maximum starting torque per line ampere is needed.

The autotransformer starter has distinctive characteristics which are often overlooked. First, it is plain that the motor terminal voltage is not a function of load current and remains substantially constant during the accelerating period. Of course, there is some voltage variation in the transformers, but this is negligible, and, from the standpoint of overall power factor, so is the magnetizing current.

Second, note that because of the turns-ratio advantage, the ratio of line current to torque is the same for autotransformer starting as for full-voltage starting. Here we must distinguish between motor current and line current, which are not equal, as they are in resistor and reactor starting.

Autotransformers, also known as compensators or autostarters, consist of an autotransformer, a double-throw switching device, and overload and undervoltage protective devices, all compactly mounted in a sheet-metal case. They can be obtained for either manual (semimagnetic) or magnetic operation. The manual type is provided with a lever outside the case which controls the double-throw-switch mechanism. When the handle is in the off position, the motor and autotransformer are both disconnected from the line. Throwing the lever to the **START** position connects the autotransformer to the line and the motor to the secondary taps of the autotransformer applying the reduced voltage for starting. When the handle is thrown to the **RUN** position, the motor is connected directly to the line and the autotransformer is entirely disconnected from the circuit. The switching mechanism is so designed that it cannot be left in the **START** position but will automatically return to the off position unless thrown to the **RUN** position after the start.

Most manual compensators are provided with a **STOP** button so interconnected with the overload protective device that, if pressed, the button will actuate the device and open the compensator contacts.

In the automatic compensator the same sequence of operations as in the hand-operated type is performed automatically after the operator has pressed the **START** button. The acceleration may be time-limit- or current-limit-controlled. Most automatic compensator starters employ the time-limit method. The closing of the **START** button closes the operating coil of a magnetic contactor which connects the motor to the line through the autotransformer. With time-limit control, after a sufficient time has elapsed, a time-delay relay closes its contacts, completing the operating circuit of a second magnetic contactor. The closing of this second contactor disconnects the autotransformer from the circuit and throws the motor directly across the line. With the current-limit control, a current-limit relay closes the operating-coil circuit of the second contactor after the current has been reduced to the proper value.

To stop the motor it is necessary simply to depress the **STOP** button, which opens the operating coil of the magnetic contactor, allowing the contacts to open and disconnect the motor from the line.

Compensators are provided with two or more sets of secondary taps on the autotransformers so that the voltage best suited to the required starting conditions may be used. Typical compensators are shown in Fig. 7.164 and Fig. 7.167.

The standard compensator does not provide for reversing duty. For such service an additional reversing switch of either the manual or the magnetic type is required.

Overload protection on autotransformer starters is provided by thermal or magnetic overload relays. In manual compensators the overload relay opens the holding-coil circuit, allowing the switch of the compensator to return to the off position. In magnetic compensators the overload relay breaks the circuit of the operating coil of the magnetic contactor so that the contactor opens. Typical connections for overload protection with thermal relays are shown in Figs. 7.166 and 7.167. The relays generally are arranged so that they can be

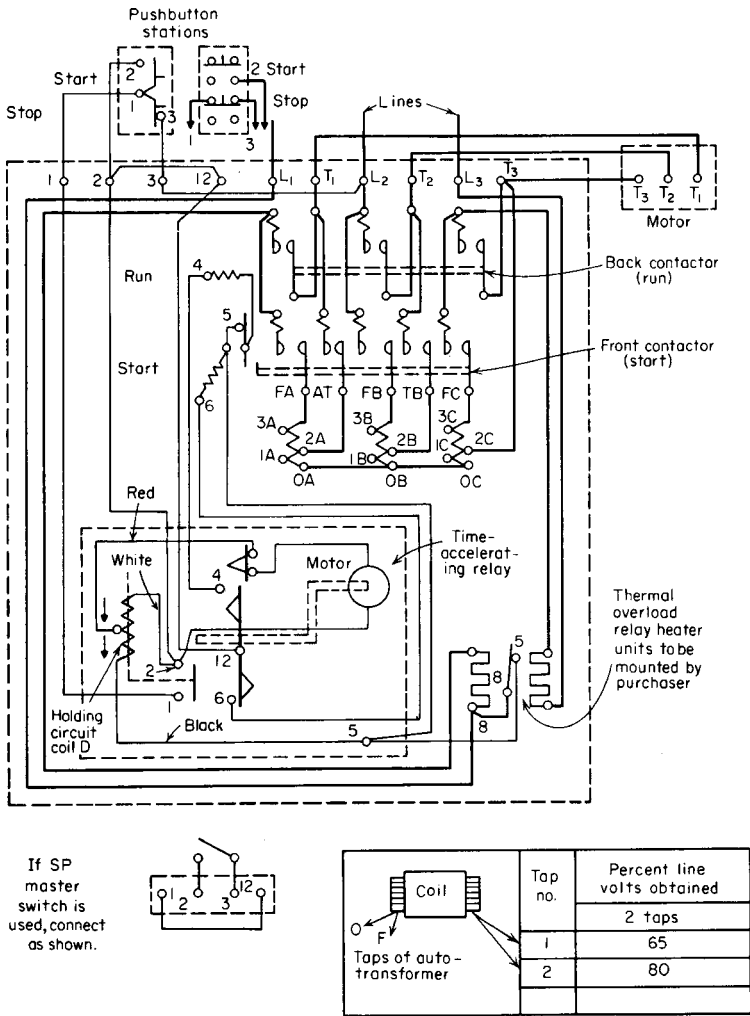


FIGURE 7.166 Connections for a magnetic compensator (autotransformer starter). [General Electric Co.]



FIGURE 7.167 Autotransformer reduced voltage starter. [Square D, Schneider Electric]

adjusted to operate at different currents. Thermal relays inherently have inverse-time characteristics. When the magnetic relays are employed, they generally are equipped with devices to give the inverse-time feature.

Undervoltage protection is almost always provided on autotransformer starters. For magnetic compensators the coil acts as the undervoltage coil (see Fig. 7.166). If the voltage of the line drops sufficiently, this operating coil is deenergized to such an extent that it releases the holding circuit interlock wired in parallel with the **START** button.

The magnetic compensator is diagrammed in Fig. 7.166. It consists of a run contactor, a start contactor, an autotransformer, an accelerating relay, and an overload relay. In the compensator illustrated, acceleration is time-controlled. Figure 7.166 functions as follows. When the **START** button is pressed, a circuit is closed for L_2 , through the **STOP** and **START** buttons, to 2, to 12, through the accelerating relay contact to 6, through the operating coil of the start contactor to 5, through overload relay contacts to 8, and back to L_1 . The operating coil of the start contactor is thus energized, and the start contactor closes, applying reduced voltage to the motor through the transformer. At the same time a circuit is closed from L_2 , through **STOP** and **START** buttons to 2, through the motor of the accelerating relay to 5, through the overload relay to 8, and back to L_1 . Current through coil D closes contact 1–2 and allows current to flow from L_2 through the **STOP** button to 1, through contact 1–2 to 12, through 12–6 to the operating coil of the start contactor, and back to L_1 , even though the **START** button is opened. After a certain definite time the timing motor opens contacts 12–6 and closes contacts 12–4. The opening of contacts 12–6 breaks the circuit of the operating coil of the start contactor, allowing the contactor to open, and closes contact 5. The closing of contacts 12–4 and 5 allows current to flow from L_2 through the **STOP** button to 1, through contact 1–2 to 12, through contacts 12–4, through the operating coil of the run contactor, through contact 5, through the overload relay to 8, and back to L_1 . The operating coil of the run contactor is thus energized, and this contactor closes, applying full voltage to the motor. Opening the overload relay or pressing the **STOP** button will open the circuit of coil D . This deenergizing of D will allow contact 1–2 to open, which breaks the circuit to the operating coil of the run contactor, allowing this contactor to open and disconnect the motor from the line.

Two types of autotransformer connections of control schemes are in common use today. One is designated *closed-circuit transition* or *Korndorfer connection*, named after its inventor, and the other *open-circuit transition*. Figure 7.168 is a typical diagram of a closed-circuit transition starter. The taps of the autotransformer are permanently connected to the motor. Three contacts are used. The control sequence is as follows. When the **START** button is pressed, contactors $1S$ and $2S$ close, connecting the motor through the transformer taps to the power line. At the instant that contactor $2S$ is closed, a timing mechanism is activated. After a predetermined time, the time drops out $1S$, and for a short interval, until R closes, part of the transformer windings functions as a reactor. When contactor R closes, it bypasses the transformer and connects the motor to full line voltage. A late-break auxiliary contact on R drops out $2S$.

Figure 7.169 is a diagram of a typical open-circuit transition autotransformer starter. It contains two contactors. A pilot device closes the circuit to contactor S , which connects the motor to the reduced-voltage taps of the autotransformer and the transformer to the line.

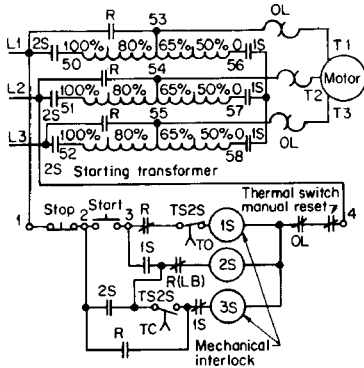


FIGURE 7.168 Typical closed-circuit transition autotransformer starter. [Allen-Bradley Company, Inc.]

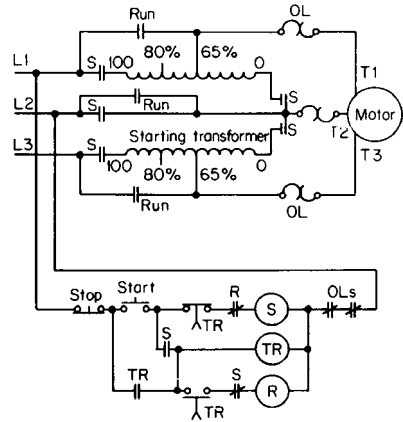


FIGURE 7.169 Typical open-circuit transition autotransformer starter. [Allen-Bradley Company, Inc.]

Simultaneously, a time-delay relay TR is energized. After a time interval, TR opens S , disconnecting the motor and transformer from the line. Contactor R then closes to connect the motor across the line. This is an open-circuit device since contacts R must not be closed until contacts S are open. Any overlap will cause dangerously large currents to flow through part of the transformer windings. The main objection to open-circuit transition is the flow of high transient currents when the motor is reconnected to full-voltage operation.

312. Part-winding starting. If the stator windings of an induction machine are divided into two or more equal parts, with all the terminals for each section available for external connection, the machine may lend itself to what is known as *part-winding starting*. Part-winding starters are designed for use with squirrel-cage motors having two separate parallel stator windings.

Part-winding starters are available in either a two- or a three-step construction. The two-step starter is designed so that when the control circuit is energized, one winding of the motor is connected directly to the line. This winding then draws about 65 percent of normal locked-rotor current and develops approximately 45 percent of normal motor torque. After about 1 s, the second winding is connected in parallel with the first; the motor is then fully across the line and develops its normal torque.

The three-step starter has resistance in series with the motor on the first step. Initially, one winding is connected to the line in series with a resistor. After a short time interval (about 1 s), the resistor is shorted out, and the first winding is connected directly to the line. The second winding is connected to the line in parallel with the first winding 1 s later. The motor then draws full line current and develops normal torque.

By far the most common number of winding sections or parts is two; the stator then consists of two windings, with six leads brought out, and the motor is intended to deliver its rated output with the windings in parallel (see Fig. 7.170). These windings may or may not be identical, but in any case they cannot occupy the same slot simultaneously. Applications of the line voltage to one of the winding sections will cause the motor to draw from 65 to 80 percent of normal starting current, with a torque output of about 40 percent of normal locked torque.

same as those in the automatic starter, except that the timing unit is omitted and the operator utilizes a START-RUN-STOP button instead of the START-STOP button found on the automatic starter.

As shown in Fig. 7.171, the motor windings are first connected to the line in Y or star. Starting current and torque are consequently about one-third normal. In the basic method, the transition to delta must be preceded by opening the circuit to the motor. The star-delta method therefore is inherently one of open-circuit transition.

The appeal of this method, as with the part-winding technique, lies largely in its lack of accessory voltage-reducing equipment. While it has the disadvantage of open-circuit transition, a star-delta starter does give a higher starting torque per line ampere than a part-winding starter. Star-delta is almost always an increment method, because the low starting torque (33 percent) rarely allows the motor to start on the first step. The time delay allows the sagging voltage caused by motor inrush current to recover. Noise and vibration are conspicuously absent, and except for the normal transients associated with open-circuit transition the current inrushes are not excessive at any point.

Figure 7.172 shows a modification using resistors to maintain continuity and thus avoid the difficulties associated with the open-circuit form of transition. The resistors must be carefully proportioned, both in ohmic value and in watts dissipation, for the application in question.

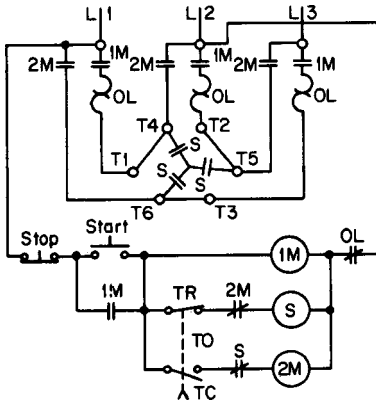


FIGURE 7.171 Star-delta starter. [Allen-Bradley Company, Inc.]

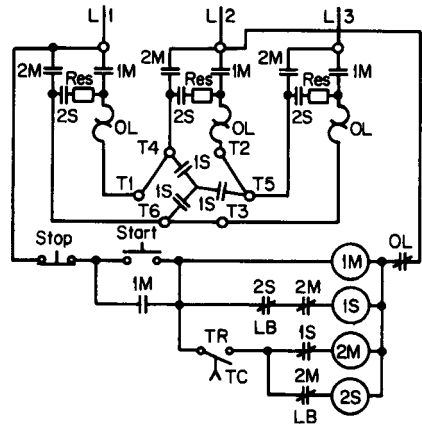


FIGURE 7.172 Modified star-delta starter. [Allen-Bradley Company, Inc.]

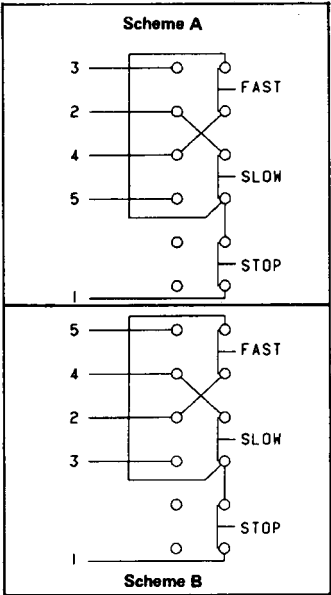
314. Control apparatus for multispeed induction motors. Controllers for multispeed squirrel-cage motors are predominantly two-speed starters, consisting of two contactors, mechanically and electrically interlocked, and two three-pole overload relays, one for each speed. Various contactor-pole configurations are available. Selection is dependent upon the motor winding pattern.

Two-speed motors with a single winding (called *consequent-pole motors*) have tap points on their windings connected differently for each of the two speeds. Controllers for consequent-pole motors consist of a three-pole contactor interlocked with a five-pole contactor (called a 3×5 controller), where two poles of the latter device are used to tie three tap points together to make a star (Y) connection. The ratio of low to high speed is fixed for such motors.


Two-speed motors with two windings can be made with any desired ratio of low to high speed. The windings can be:

- 1. Y-Y (uses 3×3 controller)
- 2. Y-delta (uses 3×4 controller)
- 3. Delta-Y (uses 4×3 controller)
- 4. Delta-delta (uses 4×4 controller)

Two-speed controllers for these motors are various combinations of three- and four-pole contactors as shown above. A four-pole configuration is required for each delta winding so that the delta winding not in use can be opened when the other motor winding is connected to the line. If the unused delta winding is not opened, induced currents in this winding will cause the motor to overheat. See Fig. 7.173 for connection diagrams.



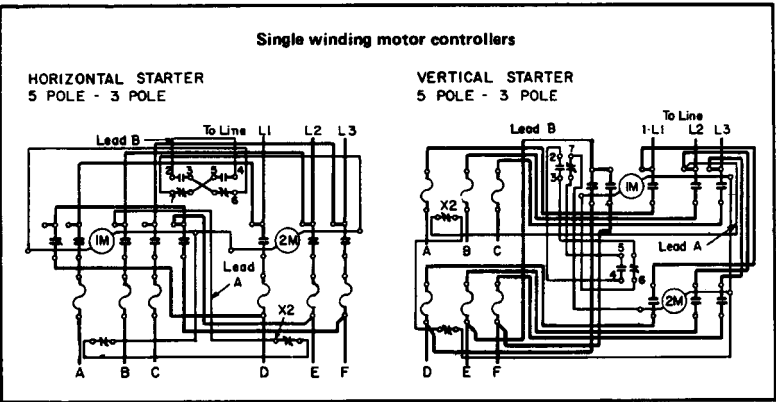
I. Control-station diagram.



II. Connection diagram for consequent-pole motors.

FIGURE 7.173 Two-speed controllers. [Westinghouse Electric Corp.]

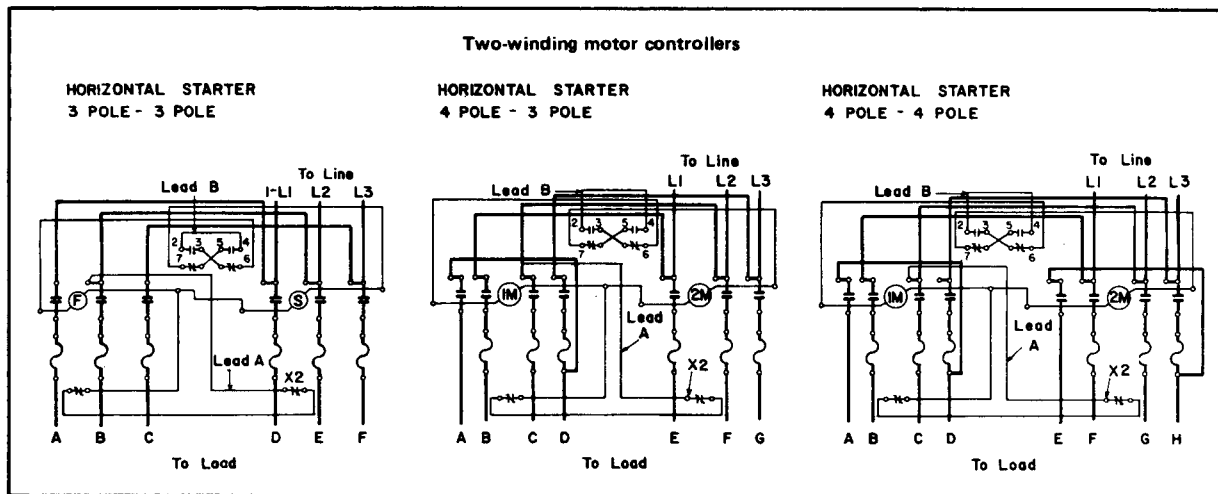III. Connection diagram for separate-winding motors.



Motor type		Low-speed (slow) connections	High-speed (fast) connections	Contactor poles	Control-station diagram
One-winding motor	Constant torque	T1-D, T2-E, T3-F, (T7-F)	T4-B, T6-A	5 × 3	Scheme A
	Variable torque	T1-D, T2-E, T3-F	T4-B, T5-C, T6-A	5 × 3	Scheme A
	Constant torque	T1-A, T2-B, T3-C	T4-E, T5-F, T6-D, (T7-F)	5 × 3	Scheme B
Two-winding motor	Y-Y	T1-D, T2-E, T3-F	T11-A, T12-B, T13-C	3 × 3	Scheme A
	Y-delta	T1-E, T2-F, T3-G	T11-B, T12-C, T13-D, T17-A	4 × 3	Scheme A
	Delta-Y	T1-B, T2-C, T3-D, T7-A	T11-E, T12-F, T13-G	4 × 3	Scheme B
	Delta-delta	T1-B, T2-C, T3-D, T7-A	T11-E, T12-F, T13-G, T17-H	4 × 4	Scheme B

FIGURE 7.173 (Continued)

315. Controllers for three-speed and four-speed motors have a contactor and a three-pole overload relay for each speed, with the contactors and control stations suitably interlocked. The motor full-load current at each speed must be considered when selecting overload relay elements just as for single-speed and two-speed starters. Often the low speed of a multi-speed starter is also used to clear a jam, and in those cases the phase rotation within the motor must be reversed. A reversing contactor is required in addition to the multispeed starter for such applications, and the operator must select direction (forward or reverse) in addition to speed. Control for direction is often in the form of a maintained-contact selector switch.

316. Controllers for wound-rotor motors are manufactured in dial, drum, and magnetic types. The same piece of equipment is utilized for both starting and speed control when speed control is desired. The same precautions must be taken in using a controller for speed control, however, as are outlined in Sec. 290 for armature speed controllers for dc motors.

317. Dial controllers for wound-rotor ac motors are similar to dial controllers for dc motors, except that they have two or three sets of resistances controlled by means of two or three contact arms. These controllers control the resistance in the rotor (secondary) circuit only, so a separate switch and overload protection must be provided in the stator circuit. It is best to have this primary line switch of the magnetic type so that it can be electrically interlocked with the secondary controller. With such an arrangement the motor cannot be started unless the resistance is cut into the rotor circuit. For reversing service a reversing switch is provided in the stator circuit.

318. Drum controllers for wound-rotor ac motors are similar in appearance and general construction to those employed for dc motors (see Fig. 7.140), except that the movable contacts control two or three sets of resistances instead of only one set. In addition to these contacts for controlling the rotor resistance, some drum controllers are provided with contacts for opening and closing the stator circuit. If the drum is not so designed, it is best to have the line switch of the magnetic type so interlocked with the secondary controller that the switch cannot be closed unless the resistance is cut into the rotor circuit.

Controllers of this type are suitable for nonreversing or reversing service. Overload protection and undervoltage protection, if desired, must be provided in the stator circuit.

319. Magnetic controllers for wound-rotor induction motors consist of a primary contactor and one or more secondary contactors, depending upon the number of steps of secondary resistance employed. They can be obtained for reversing or nonreversing duty. Reversing starters require two electrically interlocked primary contactors. Time acceleration is employed for most of these controllers, but current limit or frequency limit is used for some applications.

A multicircuit-escapement type of timing relay controls the sequence and time of operation of the successive contactors. A controller using frequency control of acceleration is shown in Fig. 7.174.

320. The use of silicon-controlled rectifiers (SCRs) is one of the newer methods of reduced-voltage starting. These starters provide smooth, stepless acceleration of standard squirrel-cage motors in applications such as starting conveyors, compressors, and



FIGURE 7.174 Microprocessor controlled adjustable frequency drive controller designed for reliable control of 3-phase induction motors. [Allen Bradley Company, Inc.]

pumps. A controller with vertical open construction is shown in Fig. 7.175, and a typical simplified wiring diagram in Fig. 7.176. The unique feature of this solid-state starter is the use of start and run contactors. Operation is as follows:

1. When the START pushbutton is operated after the disconnect switch has been closed, the start contactor is energized.
2. When the start contactor contacts are closed, the SCRs start to fire. The motor is brought up to speed either with *constant-current acceleration* or with *linear-timed acceleration*.
3. When the sensing circuit of the starter detects a current approaching the full load current of the motor, the run contactor will be energized.

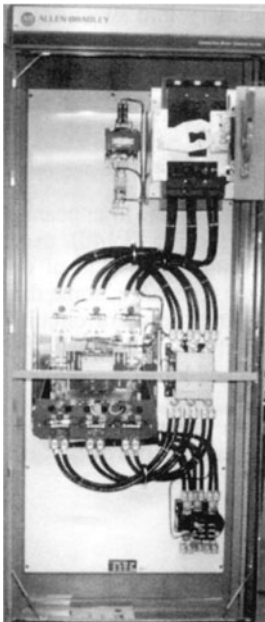


FIGURE 7.175 Solid-state reduced-voltage Smart Motor Controller. [Allen-Bradley Company, Inc.]

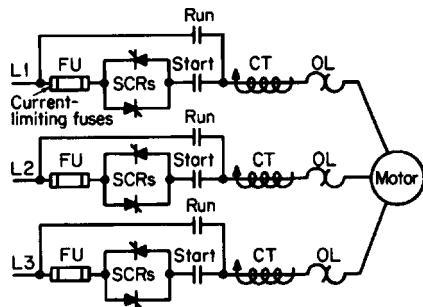


FIGURE 7.176 Simplified wiring diagram of an SCR starter. [Allen-Bradley Company, Inc.]

4. When the run contacts are closed, the SCRs are turned off.
5. After the SCRs stop conducting, the start contactor is deenergized, and the motor runs under the control of the run contactor.
6. When the stop pushbutton is energized, the run contactor is deenergized, and the motor is isolated from the line.

321. Adjustable-frequency motor controllers are designed to drive squirrel-cage induction motors over a range of speed that typically varies from one-thirtieth to twice normal rated speed. The virtue of these controllers is their ability to use standard off-the-shelf ac motors that are lightweight, rugged, and easy to maintain and yet provide speed control almost equivalent to that of dc motors.

In an adjustable-frequency motor controller, the incoming ac supply voltage is rectified by a variable-voltage dc level. The dc voltage is then inverted to an adjustable-frequency output by a microprocessor that creates a new sine wave with properly selected pieces of direct current at the desired frequency. The voltage is generally adjusted proportionally to provide a constant-volts-per-hertz excitation to the motor terminals up to normal rated frequency (50 or 60 Hz). Above normal rated frequency, the voltage supplied to the motor remains at rated motor voltage to obtain energy savings.

Selecting the proper size of motor to drive a given load over a 6:1 ratio of speeds when supplied by an adjustable-frequency motor controller is more complex than for a single- or two-speed application. First, the load torque-versus-speed requirements must be determined, and then a single motor that can cover the range must be selected.

Figure 7.177 illustrates the torque-speed characteristic of a typical induction motor when controlled from an inverter over the frequency range of 2 to 120 Hz. From 2 Hz up to the nominal rated frequency of 60 Hz, the motor can supply constant torque T_n . Within this range, the magnitude of the motor slip speed remains the same, in revolutions per minute, for a constant-torque load (Region 1). At 60 Hz, the output voltage reaches its maximum value. As a result, the motor operates in the weakened field range from 60 to 120 Hz, yielding a constant-horsepower characteristic (Region 2). Within this range, the motor's slip speed varies as a constant percentage of its set synchronous speed.

As can be noted from Fig. 7.177, the percentage rated torque shown is 80 percent of the motor nameplate rating. This is to compensate for the additional heating which occurs in a motor owing to the nonsinusoidal output of the inverter.

Figure 7.177 is directly applicable to most separately ventilated and totally enclosed nonventilated Class B rise motors.

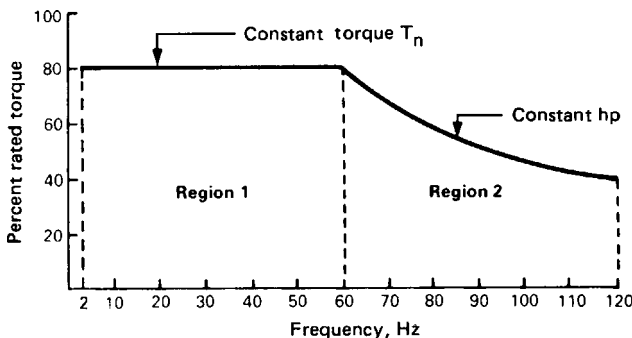


FIGURE 7.177 Induction-motor torque-speed characteristic, 2–120 Hz, Class B temperature rise. [Westinghouse Electric Corp.]

322. The starting equipment for the commutator type of polyphase induction motor generally consists simply of some type of across-the-line starter, as described in Secs. 302 to 307. In the special cases in which resistance is connected in series with the secondary for starting, the control would be similar to that employed for wound-rotor motors. The speed control can be regulated by shifting the brushes in any one of the following three ways:

1. By means of a handwheel mounted on the motor
2. By means of a handwheel located conveniently for the operator and connected to the brush-operating shaft by a chain drive
3. By means of a pilot motor and reduction-gear mechanism which is mounted on the main motor frame and controlled by pushbuttons located at the most convenient point for the operator

Typical connections for a magnetic controller used when motor speed is hand-adjusted are shown in Fig. 7.178. The operating coil of the contactor is connected in series with a limit switch on the motor so that the contactor will not operate unless the brushes are adjusted to the low-speed position. When a secondary resistor is employed for special starting conditions or for obtaining creeping speeds, a magnetic controller is always employed. This controller will consist of a primary contactor electrically interlocked with a secondary contactor.

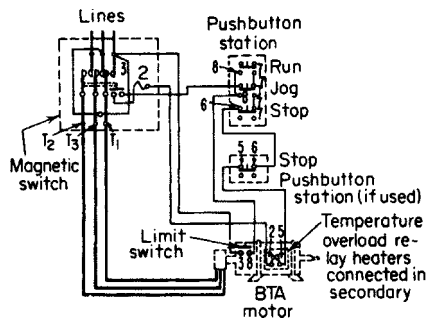


FIGURE 7.178 Connections for control of a commutator-type polyphase induction motor when speed is adjusted by hand. [General Electric Co.]

323. The control equipment for synchronous motors of conventional design is the same as that for squirrel-cage induction motors with the addition of the necessary field-control equipment. Controllers for synchronous motors may be reduced-voltage (Fig. 7.179) or full-voltage.

The essential parts of a fully automatic controller for reduced-voltage transformer starting are a line contactor, an accelerating contactor, a time-delay relay, a field-actuating relay and contactor, an autotransformer, a field rheostat, and overload and undervoltage protective devices. (See Fig. 7.180.) When the controller is in the off position, the field circuit is short-circuited through the proper value of resistance.

Pushing the START button energizes the accelerating contactor, which connects the autotransformer to the line and the motor to the secondary taps of the autotransformer. At the same time the time-delay relay is



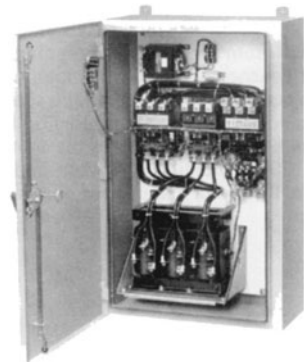


FIGURE 7.179 Low-voltage auto-transformer reduced-voltage synchronous motor starter. [Allen-Bradley Company, Inc.]

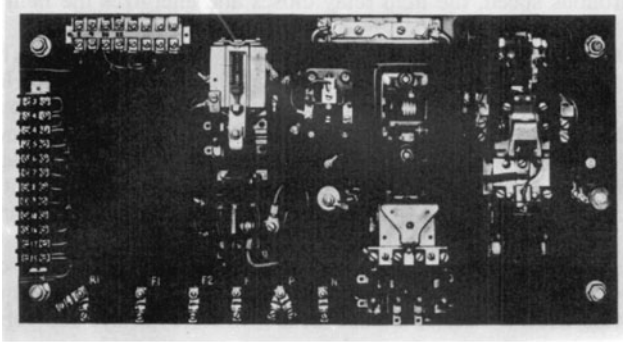

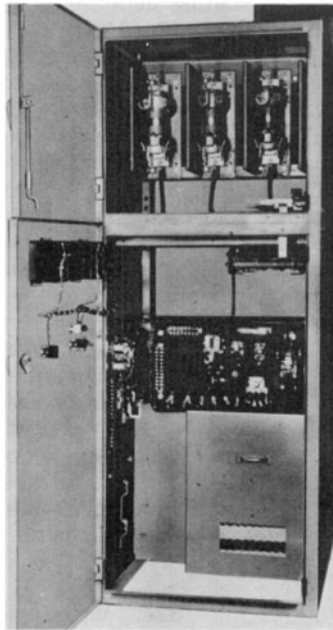I. Control panel removed from case.



II. Complete starter in case.

FIGURE 7.180 Automatic synchronous-motor full-voltage starter.
[Westinghouse Electric Corp.]

energized. After the time interval set, which corresponds to the setting of the time-delay relay, the accelerating contactor opens and the line contactor closes. The opening of the accelerating contactor disconnects the autotransformer from the line and disconnects the motor from the autotransformer. The closing of the line contactor connects the motor directly to the line and energizes the field-actuating relay. When the motor reaches approximately synchronous speed, the field relay closes and energizes the field contactor, which closes and applies excitation to the field circuit.

An automatic starter for full-voltage starting of synchronous motors (Fig. 7.181) consists of a line contactor, a field-actuating relay and contactor, a field rheostat, and overload and undervoltage protective devices. Pushing the **START** button energizes the line contactor

and connects the motor directly across the line with the field short-circuited through the proper value of resistance. When the motor reaches nearly synchronous speed, the contacts of the field-actuating relay automatically close. After a definite time the field contactor closes, applying excitation to the field circuit.

Resistance starters for synchronous motors of conventional design are generally fully automatic. They are similar to primary-resistance starters for squirrel-cage induction motors with, as mentioned above, the necessary relays and contactors for field control.

A saturable-reactor type of controller is employed sometimes for very large motors when a large number of starting steps are required. The principle of this method of acceleration is illustrated in Fig. 7.181. Each phase is supplied with a saturable reactor, which is built on a three-leg iron core. Coils on the outside legs of the reactors are connected in series with the motor, and coils on the middle leg are connected to a source of direct current in series with a rheostat. In starting the motor the dc coils are at first disconnected from their supply. The reactor then has a high impedance to alternating current and limits the first inrush of current. The dc coils are then energized with all the resistance of their control rheostat cut into the circuit. The current in the dc coils decreases the impedance of the ac coils. As the rheostat cuts resistance out of the dc circuit, the direct current increases still further, reducing the impedance of the ac coils until the reactor core is saturated and the impedance of the ac coils is practically zero. A large number of steps is thus easily available for starting the motor. An actual controller would generally be automatically operated and would include field-control equipment for the motor.

The control equipment for synchronous motors with wound-rotor secondaries will generally consist of a fully automatic magnetic controller of the same general type as that used for wound-rotor induction motors with the addition of relays and contactors for field control.

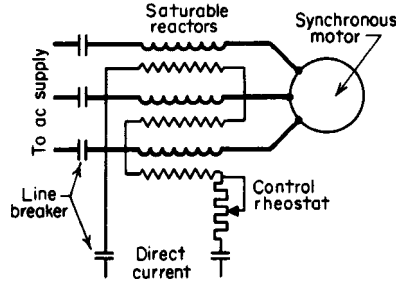


FIGURE 7.181 Connections for starting a synchronous motor with saturable reactors.

324. Vacuum contactors for ac applications. In recent years, metallurgy and vacuum technology have progressed to the point where motor controllers using contacts that operate in a vacuum have become more common. In a vacuum contactor, the main contacts are sealed inside ceramic tubes from which all air has been evacuated; i.e., the contacts are in vacuum. No arc boxes are required because any arc formed between opening contacts in a vacuum has no ionized air to sustain it. The arc simply stops when the current goes through zero as it alternates at line frequency. The arc usually does not survive beyond the first half cycle after the contacts begin to separate. The ceramic tube with the moving and stationary contacts enclosed is called a vacuum interrupter or a bottle, and there is one such bottle for each pole of the contactor. A two-pole contactor has two vacuum bottles, and a three-pole contactor has three vacuum bottles. A metal bellows (like a small, circular accordion) allows the moving contact to be closed and pulled open from the outside without letting air into the vacuum chamber of the bottle. Both the bellows and the metal-to-ceramic seals of modern bottles have been improved to the point that loss of vacuum is no longer cause for undue concern.

The moving contacts are driven by a crossbar supported by two bearings that are clamped in alignment.

The contacts in an unmounted bottle (vacuum interrupter; see Fig. 7.182) are normally closed because the outside air pressure pushes against the flexible bellows. For contactor duty, the contacts must be “normally open” when the operating magnet is not energized.


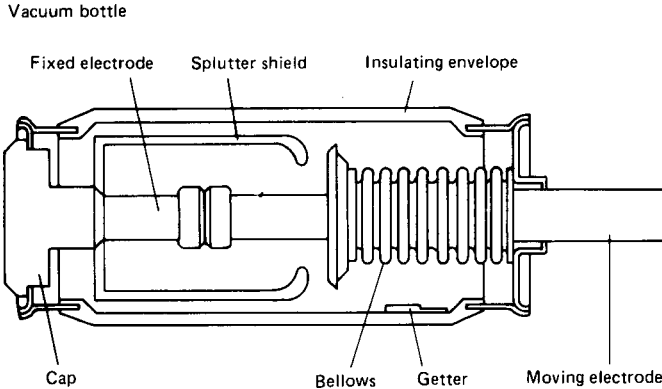


FIGURE 7.182 Cross-section view of a vacuum interrupter.

Therefore, the contacts of the vacuum bottles must be held open by a kickout spring. The kickout-spring system pulls against the moving armature and crossbar and thereby forces the bottles into the open position. In the open position, the crossbar is pulling the moving contacts to hold them open.

325. Control equipment for single-phase motors. Single-phase motors are almost always started by throwing directly across the line. Some type of across-the-line starter similar to those discussed in Secs. 302 to 307 for polyphase motors is employed. Some of the manual types with thermal overload protection are frequently called *secondary breakers*. They are not really circuit breakers, for they are not designed to interrupt short circuits. Typical single-phase manual across-the-line starters are shown in Fig. 7.183.

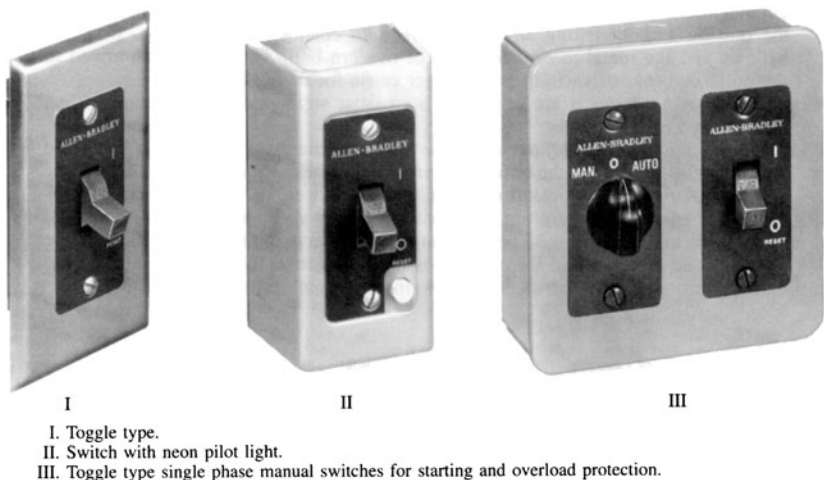When the starting current of the larger sizes is greater than that allowed by the utility, a dial or drum starting rheostat similar to those for dc motors is generally employed.



I. Toggle type.
 II. Switch with neon pilot light.
 III. Toggle type single phase manual switches for starting and overload protection.

FIGURE 7.183 Manual across-the-line starters for single-phase motors. [Allen-Bradley Company, Inc.]

MOTOR DRIVES AND APPLICATION

326. Design of motor drives. The proper design of motor drives for machines is very important. It involves not only the selection of a type and rating of motor but also the selection of a method of connecting the motor to the driven machine and the selection of control equipment. It is affected by power supply, driven-machine requirements, space limitations, safety and working conditions for operators, initial cost and operating costs, production and quality of product, and surrounding conditions. The objective is to obtain a final installation which will be the best when all considerations are taken into account. The manner of attacking and the complexity of the solution of the problem depend upon the particular case. In some cases the limitations are so definitely fixed that they dictate only one answer. For instance, a machine requires a speed of 1600 rpm and full-load power of 24 hp with a very occasional peak of 28 hp and an average load of 20 hp. It is not necessary to maintain an absolutely fixed ratio of speed between driving and driven shaft. No speed control is required, but the speed should not vary by more than 10 percent with load changes. The starting-torque requirements are very light, but the power company will allow only exceptionally low starting currents. The power supply is 60 Hz, 230 V, three-phase. The machine is operated in a dry and clean location with normal temperatures. In this case there is no difficulty in making the proper selection. A normal-torque, normal-starting-current, or a normal-torque, low-starting-current, 25-hp, four-pole, 230-V, three-phase, 1800-rpm, open squirrel-cage induction motor with reduced-voltage starting equipment would be used. The motor would be belt-connected to the machine.

In many cases the problem is not so simple, and it cannot be split into several simple isolated problems that can be answered individually, such as the selection of the type and rating of motor, the method of connection, etc. The selection of the type of motor and the method of connection are interdependent, so that the whole problem must be considered as a unit, carefully weighing all factors involved. Generally several different plans can be used. Each one should be worked out with respect to initial cost, operating costs, and maintenance; then the possible solutions should be weighed against each other, taking into account, in addition to the above costs, the effect of the proposed drives upon the safety and working conditions of operators and upon the production and quality of the product.

It is evident that to design proper motor-drive installations it is necessary to know the different methods of mechanical connections and their advantages and limitations and all the other important factors that will affect the correct selection of motors. In the following sections, the important points that must be considered in the selection of motors and mechanical connections are discussed, followed by tables which, it is believed, will be helpful guides to proper selection.

327. Methods of driving machines. Two methods can be employed for driving the individual machines of a shop. Each machine may be equipped with its own individual motor. This is called *individual drive*. In other cases a single motor may be employed to drive a group of machines by means of shafting and belts. This is called *group drive*. Group drive at one time was widely used. Individual drive, however, has proved to have so many advantages that it is used to drive practically all modern machines.

328. Motors can be mechanically connected to machines in several ways. When the speed of the motor is the same as the speed desired for the machine, direct coupling of the motor shaft to the machine shaft is used. When the speed of the motor is different from the speed of the machine shaft, a connection which will give the proper speed ratio between the motor and the machine must be used. A speed ratio may be secured by

using a flat belt, V belts, a chain, or a set of gears. With belts the speed ratio is inversely proportional to the effective diameter of the two pulleys. With a chain or gears the speed ratio is inversely proportional to the number of teeth on the two sprockets or gears. In some cases a variation in speed can be obtained by using variable-diameter pulleys or more than one set of gears, which can be shifted.

329. The factors to be considered in selecting the method of connection of the motor to the machine are the speed ratio desired, the peak loads to be transmitted, the positiveness of the drive, the space required, the noise, the maintenance, the appearance, and the first cost of the motor and the method of connection. Since the horsepower of a motor is given by the following formula,

$$\text{hp} = \frac{6.28 \times \text{rpm} \times T}{33,000} \text{ (see Sec. 68, Div. 1)} \quad (10)$$

it follows that for a given horsepower, if the speed of the motor is increased, the torque needed is decreased. To produce torque in a motor costs money for windings to create the necessary magnetic flux and for steel to provide a path for the flux. Therefore, the smaller the torque and, consequently, the higher the speed, the cheaper will be the motor. For very high speeds, however, the extra strength which must be built into the rotor to enable it to withstand the high centrifugal force more than offsets the saving due to the lower torque required.

The 1800-rpm motor is usually the cheapest motor, higher-speed motors being more expensive on account of the higher centrifugal force and lower-speed motors being more expensive on account of the greater flux and torque required. Therefore, one of the first factors to consider in selecting the mechanical connection of the motor to the machine is to see if an 1800-rpm motor can be used. The speed of the shaft on the machine to which the motor is to be connected varies with the type of machine and is frequently much lower than 1800 rpm. For example, on forging machines using large flywheels the shaft speed may be as low as 50 to 60 rpm; on machine tools, such as lathes, drills, millers, etc., it may be between 200 and 300 rpm. Speeds as high as 1000 to 2000 rpm occur on grinders and woodworking machines. In most cases, therefore, some reduction in speed is required between the motor and the machine. Direct connection of the motor to the machine shaft with a flexible or rigid coupling is possible only when the speed of the shaft can be the same as the speed of the motor. Belts, gears, or chains must be used in all other cases to effect a change of speed between the motor and the shaft.

For a speed of 1200 rpm, a 1200-rpm motor directly coupled to the shaft will usually be more practical than an 1800-rpm motor with a belt, gear, or chain connection to the 1200-rpm shaft. For speeds between 600 and 13 rpm, gear motors can be used. These motors have a rotor speed of 1800 rpm and gears built into the end frame of the motor to give the output shaft speed desired. These motors cost about twice as much as a high-speed motor with belt drive but are frequently used on account of the saving in space and elimination of troublesome belts. They are available in three classes of construction according to the severity of service (see Sec. 122).

330. Belt drive is the least expensive method of connection when speed ratio is required. The factors to be considered when applying a belt drive are speed ratio, pulley sizes, belt speeds, distance between pulley centers, type of belt, size of belt, number of belts, number of pulleys, use of idler pulleys, and slippage. The maximum speed ratio which can be obtained with belt drive is limited by the practical sizes of pulleys obtainable, the arc of contact of the belt on the smaller pulley, and the practical distance between the pulleys. The maximum practical speed ratio may be as high as 10:1 for fractional-horsepower motors but is about 6:1 for ordinary sizes and not more than 4:1 for motors of 50 hp and up. As the diameter of a minimum size of a motor pulley is reduced, the strains

on the motor bearings and shaft are increased. A minimum size of pulley is therefore specified by NEMA. The maximum diameter of a motor pulley is in nearly all cases limited by the belt speed, which should not exceed 5000 ft/min (25.4 m/s). This will occur only for machines which operate at a higher speed than the motor. Flat belts are slightly cheaper than V belts but have a shorter life and are noisier and more dangerous. Flat belts with a high speed ratio usually require idler pulleys, and space must be available for an idler pulley when required. There is always some slippage between the belt and the pulleys, and a belt drive should be used only when a positive drive is not required.

331. Maximum Horsepower Limits for Two-Bearing Motors for Belt Drive (General Electric Co.)

Motor speed rpm	Flat-belt drive, maximum hp	V-belt drive, maximum hp	Motor speed, rpm	Flat-belt drive, maximum hp	V-belt drive, maximum hp
1,700–1,800	40	60; ball-bearing, 75	680–720	200	300
1,440–1,500	40	60; ball-bearing, 75	560–600	200	300
1,150–1,200	75	100; ball-bearing, 125	500–514	150	300
850–900	125	200	440–450	150	250

332. Chain drive is a more positive drive than belt drive, and although it is more expensive than belt drive, it is used when slippage under varying loads is not desired. The factors to be considered when applying a chain drive are the speed ratio, the size of sprockets, the width of chain, chain speed, and noise. The maximum speed ratio for a chain drive is about 8:1 with a maximum chain speed of 1500 ft/min (7.6 m/s). For quietness and smoothness a speed of 600 ft/min (3 m/s) or less is desirable. A chain drive is noisier than belt drive.

333. Maximum Horsepower Limits for Two-Bearing Motors for Chain Drive (General Electric Co.)

Motor speed, rpm	Maximum hp	Motor speed, rpm	Maximum hp	Motor speed, rpm	Maximum hp
1,700–1,800	5	1,150–1,200	25	720–750	75
1,440–1,500	10	850–900	50		

334. Gear drive is an absolutely positive drive but is the most expensive method of connection. The factors to be considered when applying a gear drive are speed ratio, gear sizes, pitch-line speed, space, and noise. The maximum speed ratio is about 10:1 for a single set of gears, but any speed ratio is obtainable by using several sets of gears. When the pinion of ordinary spur gearing is mounted on the motor shaft, two-bearing motors should be limited to the maximum horsepower values given for chain drive in Sec. 333. The maximum pitch-line speed with steel pinions is about 1300 ft/min (6.6 m/s). Gear drive usually is compact and takes up only a small space but is noisier than the other methods. It should be used on any application in which slippage or breaking of the belt or chain would be seriously dangerous. It can also be used for much larger speed ratios than are practicable with belts or chains.

335. Speed Limitations for Belt, Gear, and Chain Drives

(Allis-Chalmers Corporation)

This table represents good practice, under normal operating conditions for the use of these drives on motors and generators which are not provided with outboard bearings.

Full-load rpm of motor or generator		Max hp rating motor	Max kW rating of generator
Above	Including		
Flat-belt drive			
2,400	3,600	20	15
1,800	2,400	30	20
1,200	1,800	40	30
900	1,200	75	50
750	900	125	75
720	750	150	100
560	720	200	150
V-Belt drive [*]			
2,400	3,600	20	15
1,800	2,400	40	30
1,200	1,800	76	50
900	1,200	125	75
750	900	200	100
720	760	250	160
560	720	300	200
Gear drive ^{†,‡}			
1,500	1,800	7½	5
1,200	1,800	15	10
900	1,200	25	15
750	900	50	30
560	750	75	50
Chain drive [§]			
2,400	3,600	20	15
1,800	2,400	40	30
1,200	1,800	75	40
900	1,200	125	75
750	900	200	125
720	750	250	150
560	720	300	200

NOTES The limitations are based on the use of pulleys, etc. They will be less than those given when motors are belted to low-speed drives such as countershafts.

The values are not intended to establish a definite dividing line below which the use of outboard bearings is not standard but rather to establish a dividing line which will indicate to the motor user what the manufacturers consider to be good practice in general service.

The use of outboard bearings is approved and recommended for belted motors in frame sizes of 250 hp, 575 to 600 rpm and larger.

When an outboard bearing is specified, it is assumed that the necessary three-bearing type of baseplate and slide rails, if required, are included with the motor.

*Limiting dimensions of V-belt sheaves for general-purpose motors in frames 505 and smaller are given in NEMA MG1-14.42. Limiting dimensions for V-belt sheaves for motors in frames larger than 505 have not been standardized; they are specified by the motor manufacturer.

†These values are based on the use of steel pinions.

‡In general, for quiet operation and freedom from severe vibration peripheral speed of cut-steel gearing at the pitch diameter should not exceed 1400 ft/min (7.1 m/s).

§Limiting dimensions of chain-drive sprockets for general-purpose motors in frames 505 and smaller are given in NEMA MG1-14.7. Limiting dimensions of chain-drive sprockets for motors in frames larger than 505 have not been standardized; they are specified by the motor manufacturer.

336. Comparison of Methods of Connection for Adjustable-Speed Drive

Type of motor	Type of drive	Space required	Speed variation ratio	First cost
Constant speed	Variable pitch motor pulley	Same as V-belt connection	1¼:1	Low
Constant speed	Separate unit with variable-diameter pulleys	Considerable	3¼:1	Medium
Constant speed	Variable-diameter pulley unit built on motor housing	Moderate	3¼:1	Medium
Constant speed	Variable-position rollers	Small	10:1	High
Adjustable speed	Direct coupling	Small	4:1	High

337. Comparison of Methods of Connection for Constant-Speed Drive

Type of drive	Relative noise	Space required	Speed ratio obtainable	Peak load transmitted	First cost
1. Direct coupling, standard motor	0	Small; motor must extend out from end of drive shaft	0	Limited only by motor	1 (considered as 100 percent)
2. Direct coupling, general-purpose gear motor	Slight	Same as 1. Angle drive obtainable in small motors	Any	Full load	2 times the standard motor
3. Direct coupling, special-purpose gear motor	Slight	Same as 2	Any	150 per cent of full load	2½ times the standard motor
4. Direct coupling, heavy-duty gear motor	Slight	Same as 2	Any	200 percent of full load	3 times the standard motor
5. V belt	0	Moderate	10:1 in fractional-horse power sizes; down to 4:1 for 50 hp and up	Any by multiplying motor horsepower by a service factor*	1⅓ times the standard motor
6. Flat belt	Considerable	Considerable	Same as 5	Same as 5	Slightly higher than for standard motor
7. Chain	Considerable	Moderate	8:1	Same as 5	1⅓ times the standard motor
8. Gear	High	Small	10:1 single reduction; 100:1, double reduction	Same as 5	1½ times the standard motor

*Refer to Sec. 382.

338. The important factors to be considered in selecting a motor are:

1. Power supply
 - a. Type of system: dc or ac; frequency; number of phases
 - b. Voltage and frequency conditions
 - c. Effect of motors on power supply system
 - d. Power rates
2. Requirements of driven machine
 - a. Speed
 - b. Mechanical arrangement
 - c. Power and torque
 - d. Special conditions
3. Surrounding conditions
 - a. Ambient temperature
 - b. Atmospheres
 - c. Water
 - d. Altitude
 - e. Quietness
4. Codes, standards, and ordinances

339. The type of power supply system available in most cases answers the question of whether ac or dc motors will be used as well as the frequency of the motors for ac. For most applications either ac or dc motors will be satisfactory. In some cases special requirements of extra-wide speed range, large number of adjustable-speed machines, or severe accelerating or reversing duty may justify the conversion of alternating to direct current.

If a new power plant is to be installed, the operating conditions may sometimes affect the choice of current. Even in this case the characteristics of the new plant generally should agree with those of the nearest central station in order to obtain breakdown service and to operate economically with central-station energy on reduced loads. For certain applications, dc motors are preferable—for example, in adjustable-speed service, as in machine-tool operation, in service when frequent starts must be made with very high torque, or in reversing service, as in the operation of cranes, hoists, etc. The voltage of ac circuits can be so readily transformed up or down that such energy is more economical for distribution over considerable areas. For plants extending over a considerable area or distributing energy to distances, say, of $\frac{1}{4}$ mi ($\frac{2}{5}$ km) or more, alternating current is nearly always more economical.

For ac motors, three-phase, 60 Hz is most desirable except for small fractional-horsepower motors. The demand for two-phase motors is small, and they are therefore not generally available in stock for quick shipment. If a multispeed motor is desired when the power supply is two-phase, it is best to transform to three-phase for this machine, as multispeed motors are difficult to wind for two-phase. Standard 60-Hz motors are usually suitable for operation on 50-Hz systems with some modification in their ratings and characteristics. The demand for 40- or 25-Hz motors is so small that they are not generally available in stock. For special high-speed applications in the woodworking industry and for portable tools, motors of higher frequencies than 60 Hz are available and are sometimes advantageous. The power supply can be obtained by means of an induction frequency changer.

340. The conditions of the supply voltage and frequency, if alternating current, with respect to value and regulation must be known to select the proper motors and control. With ac systems the voltage can, of course, be changed through transformers

whenever it is advisable. Table 341 gives a guide for good practice in the maximum and minimum horsepower limits for the different standard motor voltages.

Motors will operate successfully under some conditions of voltage and frequency variations but not necessarily in accordance with the standards established for operation at normal rating (see Sec. 130). When the variations in voltage and frequency exceed those limits, special motors and control will probably be required.

The voltage regulation of the supply should be known to select motors which will deliver sufficient torque, even with the probable drop in voltage, to start and carry the load. All induction-motor torques and synchronous-motor starting torque and pull-in torque vary as the voltage squared.

The speed of ac motors will be affected by the frequency of the supply voltage as discussed in previous sections for each type of motor.

341. Guide to Horsepower Limits of Individual Motors for Different Systems

Voltage	Min hp	Max hp	Voltage	Min hp	Max hp
Dc			Ac, two- and three-phase		
115	None	30	110–115–120 220–230–240 440–560 2,200 4,000 6,600	None	15
230	None	200		None	200
550–600	1/2	None		None	500
Ac, one-phase				40	None
				75	None
110–115–120	None	1 1/2	6,600	400	None
220–230–240	None	10			
440–650	5	10			

342. The effects of motors and their control on the power supply system will affect the selection of the proper type of motor.

The effect of motor-starting currents upon the supply and permissible limits for starting currents are discussed in Sec. 132.

With fluctuating loads, care should be taken to see that the following limits are not exceeded:

1. Frequencies of current pulsation in the range of 250 to 600 per minute may cause objectionable light flicker even if the voltage variation is as small as 0.5 percent.
2. The usual limit for current pulsation is 66 percent of motor full-load current, although in some cases the system regulation may require a limit of 30 or 40 percent to avoid light flicker.

343. Effect of power rates on motor selection.

When speed adjustment is required, the energy charge in the power rates should be considered in the selection of the type of motor and in choosing between mechanical adjustable-speed drive and an adjustable-speed motor.

The power rates are generally based on the maximum demand of the consumers. The choice of motor and use of flywheels may smooth out the power demand. This will keep the maximum demand down and lower the rate.

A power-factor clause is incorporated in many rate schedules. These adjust the rate according to the power factor of the load or involve a penalty or bonus for power factors that are below or above certain values. In such cases, consideration should be given to the use of synchronous motors or power capacitors.

344. Effect of speed requirements on motor selection. Since there is a great difference in the speed characteristics of different types of motors, the maximum allowable speed regulation (variation in speed with load) on the driven machine is an important factor in the selection of the proper motor. The actual operating speed, number of speeds, and the speed range required are factors which must be considered in the joint selection of type of motor and mechanical connection. See Secs. 328 to 337 for description and comparison of different methods of mechanical connection. When speed control of the driven machine is required, it can be obtained through speed control of a motor of the proper type or by means of a motor coupled to the machine through a mechanical speed-adjusting connection.

Close speed regulation is desirable for many applications such as machine tools, textile machinery, and similar work.

When large peak loads occur, wide speed regulation is desirable. This will allow the motor to slow down under the peak loads and reduce the horsepower carried at these moments. If the motor has a small speed regulation, it may be greatly overloaded at the peak loads unless the machine is equipped with an exceptionally large motor.

For peak loads occurring periodically, when the peaks occur less than 25 times per minute, flywheels should be employed with motors having a wide speed regulation. This will allow the use of a smaller motor and will tend to even out the peaks of power drawn from the supply.

345. Mechanical-arrangement features of the driven machine should be taken into account in motor selection. The General Electric Co. makes the following recommendations:

1. **Horizontal or Vertical Shaft.** Arrangement of the driven machine usually determines whether a horizontal or a vertical motor is needed. Horizontal motors are more generally available and less expensive: most grease-lubricated ball-bearing motors will operate in either position. Fractional-horsepower, waste-packed sleeve-bearing motors are satisfactory for short periods of vertical operation when no thrust is involved.
2. **Tilted Shaft.** If momentary, this will require special construction of bearing housings for oil-ring-lubricated sleeve-bearing motors to avoid loss of lubricant. For long periods of tilted operation, bearings suitable for end thrust may be necessary. Ball-bearing motors with grease lubrication are suitable for tilted operation.
3. **Inverted Operation and Rolling**
 - a. When the driven machine requires mounting the motor with the feet above or to one side of the shaft, rearrangement of the end shields of most motors makes them suitable.
 - b. If the driven machine requires operation of the motor at a changing angle from the horizontal (shaft remaining horizontal) of more than 10 or 12°, ball-bearing motors will usually be required. Within this angle, sleeve-bearing motors with modified oil gages are applicable.
4. **Portable Machines.** A portable type of driven machine may require motors and control of greater compactness and less weight than standard and may necessitate special bearing construction for ring-oiled sleeve-bearing motors.

346. The horsepower and torque requirements of the driven machine are main factors in determining the proper motor rating, type of motor, and motor-control equipment. The greatest care should be exercised in determining as accurately as possible the horsepower required and both the starting- and running-torque requirements. The motor not only must have sufficient horsepower and torque capacity under running conditions but must be able to develop sufficient torque at starting to start the load satisfactorily under the most severe starting conditions that may be encountered in the particular application. Sometimes all these requirements will be known from past experience. In all cases, when it is possible, it is best to conduct tests so that the power and torque requirements can be accurately determined. Money spent in such determinations is wisely expended even if it requires the rental of a motor for conducting the tests. In performing tests it should be remembered that the test-motor losses must be subtracted from the power input to the motor, since the motor to be purchased is rated on horsepower output.

If the power and torque requirements cannot be determined from past experience or test, the information can generally be obtained from the manufacturer of the machine to be driven or from the motor experts of motor manufacturers. Whenever there seems to be any question about the accuracy of such information, it should be carefully checked, since machine-tool manufacturers often overestimate the horsepower required to be on the safe side. The result is that the motors run only partially loaded at considerably reduced efficiency. The electrical losses and interest and depreciation on the unnecessary extra investment may be considerable in a large installation.

Whenever the frequency of the starting period is great (more than 4 to 6 times per hour), it is best to consult the motor manufacturers. Such frequent starting may require special motors and controls.

Many machines work on a definite duty cycle that repeats at regular intervals.* Often this horsepower value occurs during the cycle when the values of power required and the length of their duration are known, and the rating of the motor required can be calculated by the rms method.

Multiply the square of the horsepower required for each part of the cycle by the time in seconds necessary to complete that part of the cycle. Divide the sum of these results by the effective time in seconds to complete the whole cycle. Extract the square root of this last result. This gives the rms horsepower. If the motor is stopped for part of the cycle, only one-third of the rest period should be used in determining the effective time for open motors (enclosed motors use one-half of the rest period). This is due to the reduction in cooling effect when the motor is at rest.

EXAMPLE Assume a machining operation in which an open motor operates at 8-hp load for 4 min, 6-hp load for 50 s, and 10-hp load for 3 min and the motor is at rest for 6 min, after which the cycle is repeated.

$$\text{rms hp} = \sqrt{\frac{(8^2 \times 240) + (6^2 \times 50) + (10^2 \times 180)}{240 + 50 + 180 + \frac{360}{3}}} = \sqrt{59.5} = 7.7 \text{ hp}$$

Use a 7.5-hp motor.

NOTE For fast-repeating cycles involving reversals and deceleration by plugging, the additional heating due to reversing and external WK^2 loads must be taken into consideration,

*Courtesy of Westinghouse Electric Corp.

and a more elaborate duty-cycle analysis than shown above is required. It is necessary to know the torque, time, and motor speed for each portion of the duty cycle, such as acceleration, running with load, running without load, deceleration, and at rest.

For such detailed duty cycles it is sometimes more convenient to calculate on the basis of torque required rather than on the horsepower basis. The following formula for the accelerating time for constant torque may be helpful:

$$\text{Time, s} = \frac{wk^2 \times \text{change in rpm}}{308 \times \text{torque (lb}\cdot\text{ft) available from motor}} \quad (11)$$

This formula can be used when the accelerating torque is substantially constant. If the accelerating torque varies considerably, the accelerating time should be calculated in increments; the average accelerating torque during the increment should be used. The size of the increment used depends on the accuracy required. Fair accuracy is obtained if the minimum accelerating torque is not less than 50 percent of the maximum accelerating torque during the increment.

In addition to determining the horsepower rating with regard to heat capacity, a check should be made to assure that the peak loads imposed by the driven machine, even though of short duration, do not exceed the maximum power that the motor will develop without stalling. From tables of locked-rotor and maximum running-torque values, determine the maximum torque in terms of full-load torque. This value should always exceed peak torque imposed by the duty cycle. Preferably, this should be at least 25 percent greater to compensate for unusual conditions, such as low voltage, high friction, etc.

347. Horsepower rating of motor. After having determined the horsepower requirements of the load, select a motor with sufficient horsepower rating to take care of these requirements. See Sec. 130 for a discussion of motor ratings.

348. Any special conditions of operation of the driven machine must be carefully considered. Some machines such as propeller-type fans and deep-well pumps impose an axial thrust on the motor bearings. In some cases standard ball-bearing motors will furnish sufficient thrust capacity. For extremely heavy thrusts, special plate-type oil-lubricated bearings may be required.

For some tools such as precision grinders, to ensure high quality of the finished product specially balanced motors are required to give very small amplitudes of vibration.

Sometimes the driven machine requires limited or even zero end play. This will necessitate the use of preloaded ball bearings or sleeve bearings with endplay-limiting devices.

349. The surrounding conditions of temperature, atmospheres, and water must be carefully determined in the application of motors. Refer to Sec. 128 for a discussion of the different standard types of enclosures available and a guide to the surrounding conditions under which their applications will be satisfactory. For a discussion of rating of motors and effect of room temperatures upon operation, refer to Sec. 130. The manufacturers should be consulted when the motor and control will be subjected to any unusual risk such as the following:

1. Exposure to chemical fumes
2. Operation in damp places
3. Operation at speeds in excess of specified overspeed

4. Exposure to combustible or explosive dust
5. Exposure to gritty or conducting dust
6. Exposure to lint
7. Exposure to steam
8. Operation in poorly ventilated rooms
9. Operation in pits or where entirely enclosed in boxes
10. Exposure to flammable or explosive gases
11. Exposure to temperatures above 40°C or below 10°C
12. Exposure to oil vapor
13. Exposure to salt air
14. Exposure to abnormal shock or vibration from external sources

350. Water (General Electric Co.). If operation for long periods underwater is required, special enclosed equipment, with counter air pressure to prevent the entrance of water, is usually necessary. For occasional flooding or submersion, extremely tight, totally enclosed nonventilated motors equipped with stuffing boxes may suffice. If hosing down or splashing of water is involved, splashproof motors will usually meet all but extreme conditions, which will require enclosed motors.

351. Altitude (General Electric Co.). No change in design is considered necessary for most electric machines for altitudes not exceeding 3300 ft (1006 m) above sea level. For higher altitudes, the temperature rise of electric machinery generally will increase approximately 1 percent for each 330-ft (101-m) increase in altitude above 3300 ft.

352. Quietness (General Electric Co.). Installations in residences and in public buildings, such as theaters, hospitals, and schools, may require the use of quiet motors and sound-isolating bases. In many cases, special building layout and construction may be needed to ensure the necessary quietness.

353. Codes, standards, and ordinances (General Electric Co.). Motors and control must conform to local and national standards such as those shown below to allow connection of power, satisfy safety and fire requirements, and permit lowest insurance rates:

1. NEMA standards, which specify mounting dimensions for induction motors and, in general, minimum performance characteristics for all types of motors and control
2. IEEE standards, which specify temperature limits for insulation materials and prescribe the methods of rating and testing apparatus
3. The National Electrical Code, which is the general guide of inspectors in determining acceptability of enclosures, protection, and installation of motors
4. State laws, which stress safety and reduction of fire hazards
5. City ordinances, which may specify particular construction considered necessary locally to avoid fires and accidents

354. Standard ratings of motors (NEMA standards).* The standard horsepower ratings of motors are 1, 1.5, 2, 3, 5, 7.5, 10, 15, 25, and 35 mhp and $\frac{1}{20}$, $\frac{1}{12}$, $\frac{1}{8}$, $\frac{1}{6}$, $\frac{1}{4}$, $\frac{1}{3}$, $\frac{1}{2}$, $\frac{3}{4}$, 1, $1\frac{1}{2}$, 2, 3, 5, $7\frac{1}{2}$, 10, 15, 20, 25, 30, 40, 50, 60, 75, 100, 125, 150, 200, 250, 300, 350, 400, 450, 500, 600, 700, 800, 900, 1000, 1250, 1500, 1750, 2000, 2250, 2500, 3000, 3500, 4000, 4500, 5000, 5500, 6000, 7000, 8000, 9000, 10,000, 11,000, 12,000, 13,000, 14,000, 15,000, 16,000, 17,000, 18,000, 19,000, 20,000, 22,500, 25,000, 27,500, 30,000, 35,000, 40,000, 45,000, and 50,000 hp.

The standard full-load speed ratings for constant-speed, integral-horsepower dc motors are 3500, 2500, 1750, 1150, 850, 650, 500, 450, 400, 350, 300, 250, 225, 200, 175, 150, 125, 110, 100, 90, 80, 70, 65, 60, 55, and 50 rpm.

The standard full-load ratings for small constant-speed dc motors from $\frac{1}{20}$ to 1 hp are 3450, 2500, 1725, and 1140 rpm.

The standard speeds for 60-Hz synchronous motors are 3600, 1800, 1200, 900, 720, 600, 514, 450, 400, 360, 327, 300, 277, 257, 240, 225, 200, 180, 164, 150, 138, 129, 120, 109, 100, 95, 90, 86, and 80 rpm.

The standard synchronous speeds for 60-Hz, polyphase and single-phase induction motors, except permanent-split-capacitor motors, are 3600, 1800, 1200, 900, 720, 600, 514, 450, 400, 360, 327, 300, 277, 257, 240, and 225 rpm.

The standard synchronous speeds for 60-Hz, single-phase permanent-split-capacitor motors are 3600, 1800, and 1200 rpm.

The approximate full-load speeds of induction motors can be obtained from the synchronous speeds by means of the approximate full-load slips.

The standard voltages are as follows:

1. Direct-current fractional-horsepower motors intended for use on adjustable voltage rectifier power supplies*	
a. Single-phase primary power source	75, 90, 150, or 180 V
b. Three-phase primary power source	240 V
2. Industrial direct current*	180, 240, 250, 500, 550 or 700 V
3. Universal	115 or 230 V
4. Single phase	
a. 60 Hz	115, 200, or 230 V
b. 50 Hz	110 or 220 V
5. Polyphase	
a. 60 Hz	115,† 200, 230, 460, 575, 2300, 4000, 4600, 6600, or 13,200 V
b. 50 Hz, three-phase	220 or 380 V

*Armature voltage.

†15 hp and smaller.

NOTE It is not practical to build motors of all horsepower ratings for all of the standard voltages.

The standard frequencies are as follows:

1. *Alternating-current motors.* The standard frequency shall be 50 or 60 Hz.
2. *Universal motors.* The standard frequency shall be 60 Hz ac.

NOTE Universal motors will operate successfully on all frequencies below 60 Hz and on direct current.

*This material is reproduced with the permission of the National Electrical Manufacturers Association from the NEMA Standards Publication MG 1-2006 copyright © 2006 by NEMA

355. Service factors. A general-purpose ac motor or, when applicable, any ac motor having a rated ambient temperature of 40°C, continuous duty, is suitable for continuous operation at rated load under normal conditions. When the voltage and frequency are maintained at the values specified on the nameplate, the motor may be overloaded up to the horsepower obtained by multiplying the rated horsepower by the service factor shown on the nameplate. When the motor is operated at any service factor greater than 1, it will have a higher temperature rise and may have different efficiency, power factor, and speed than at rated load, while the locked-rotor torque and current and breakdown torque will remain unchanged. Usual service factors are described in the accompanying table.

Service Factors

(NEMA standard)*

Horsepower	Synchronous speed, rpm						
	3,600	1,800	1,200	900	720	600	514
$1/20$	1.4	1.4	1.4	1.4			
$1/12$	1.4	1.4	1.4	1.4			
$1/8$	1.4	1.4	1.4	1.4			
$1/6$	1.35	1.35	1.35	1.35			
$1/4$	1.35	1.35	1.35	1.35			
$1/3$	1.35	1.35	1.35	1.35			
$1/2$	1.25	1.25	1.25	1.15 [†]			
$3/4$	1.25	1.25	1.15 [†]	1.15 [†]			
1	1.25	1.15 [†]	1.15 [†]	1.15 [†]			
$1 1/2$ –125 [†]	1.15 [†]	1.15 [†]	1.15 [†]	1.15 [†]	1.15 [†]	1.15 [†]	1.15 [†]
150 [†]	1.15 [†]	1.15 [†]	1.15 [†]	1.15 [†]	1.15 [†]	1.15 [†]	
200 [†]	1.15 [†]	1.15 [†]	1.15 [†]	1.15 [†]	1.15 [†]		
250	1.0	1.15 [†]	1.15 [†]	1.15 [†]			
300	1.0	1.15 [†]	1.15 [†]				
350	1.0	1.15 [†]	1.15 [†]				
400	1.0	1.15 [†]					
450	1.0	1.15 [†]					
500	1.0	1.15 [†]					

*This material is reproduced with the permission of the National Electrical Manufacturers Association from the NEMA Standards Publication MG 1-2006 copyright © 2006 by NEMA.

[†]For polyphase squirrel-cage medium motors these service factors apply only to designs A, B, and C motors.

356. Effects of variation of voltage and frequency upon the performance of induction motors (NEMA standards)*

1. Induction motors are at times operated on circuits of voltage or frequency other than those for which the motors are rated. Under such conditions, the performance of the motor will vary from the rating. The following are some of the operating results caused by small variations of voltage and frequency and are indicative of the general character of changes produced by such variation in operating conditions.
2. With a 10-percent increase or decrease in voltage from that given on the nameplate, the heating at rated horsepower load may increase. Such operation for extended periods of time may accelerate the deterioration of the insulation system.

*This material is reproduced with the permission of the National Electrical Manufacturers Association from the NEMA Standards Publication MG 1-2006 copyright © 2006 by NEMA.

3. In a motor of normal characteristics at full rated-horsepower load, a 10-percent increase of voltage above that given on the nameplate would usually result in a decided lowering in power factor. A 10-percent decrease of voltage below that given on the nameplate would usually give an increase in power factor.
4. The locked-rotor and breakdown torque will be proportional to the square of the voltage applied.
5. An increase of 10 percent in voltage will result in a decrease of slip of about 17 percent, while a reduction of 10 percent will result in an increase of slip of about 21 percent. Thus, if the slip at rated voltage were 5 percent, it would be increased to 6.05 percent if the voltage were reduced 10 percent.
6. A frequency higher than the rated frequency usually improves the power factor but decreases locked-rotor torque and increases the speed and friction and windage loss. At a frequency lower than the rated frequency, the speed is decreased, locked-rotor torque is increased, and power factor is decreased. For certain kinds of motor load, such as in textile mills, close frequency regulation is essential.
7. If variations in both voltage and frequency occur simultaneously, the effects will be superimposed. Thus, if the voltage is high and the frequency low, the locked-rotor torque will be very greatly increased, but the power factor will be decreased and the temperature rise increased with normal load.
8. The foregoing facts apply particularly to general-purpose motors. They may not always be true with special-purpose motors, built for a particular purpose, or as applied to very small motors.

357. Operation of 230-V general-purpose induction motors on 208-V network systems (NEMA standard). A 230-V general-purpose induction motor is not recommended for operation on a 208-V system. A motor for such a system should be rated for 200 V. This is so because utilization voltages commonly encountered on 208-V systems are below the -10 percent tolerance on the 230-V rating for which the 230-V motor is designed. Such operation will generally cause excessive overheating and serious reduction in torque.

358. Characteristics of polyphase two-, four-, six-, and eight-pole, 60-Hz medium induction motors operated on 50 Hz

1. **Speeds.** The synchronous speeds of 60-Hz motors when operated on 50 Hz will be five-sixths of the 60-Hz synchronous speed. The full-load speeds of 60-Hz motors when operated on 50 Hz at the rated 60-Hz voltage will be approximately five-sixths of the 60-Hz full-load speed. When voltages less than the 60-Hz rated voltage are applied, the slip will be increased approximately inversely as the square of the ratios of voltages. For example, when a 60-Hz, 460-V motor is operated at 420 V, 50 Hz, the slip will be increased by approximately 20 percent over the slip at 460 V, 50 Hz. When operated at 380 V, 50 Hz, the slip will be increased by approximately 46 percent over the slip at 460 V, 50 Hz.
2. **Torques.** The full-load torques in pound-feet of 60-Hz motors operated at 50 Hz will be approximately six-fifths of the 60-Hz full-load torques in pound-feet.

The breakdown torques in pound-feet of 60-Hz motors when operated on 50 Hz at the rated 60-Hz voltage will be approximately 135 percent of the 60-Hz breakdown torque in pound-feet. Therefore, the 50-Hz breakdown torque expressed in a percentage of the 50-Hz full-load torque will be approximately 112 percent of the 60-Hz breakdown torque

expressed in a percentage of the 60-Hz full-load torque. When voltages less than the rated 60-Hz voltages are applied, the breakdown torques will be decreased as the square of the voltages. For example, when a 460-V, 60-Hz motor is operated at 420 V, 50 Hz, the breakdown torque will be reduced by approximately 17 percent below the torque at 460 V, 60 Hz; when operated at 380 V, 50 Hz, the breakdown torque will be reduced by approximately 32 percent below the torque at 460 V, 50 Hz. It may thus be seen that a 60-Hz, 460-V motor having 200 percent breakdown torque will also have a 200 percent breakdown torque as a 50-Hz motor operated at approximately 435 V, and when operated on 50 Hz at 380 V, the breakdown torque will be approximately 153 percent of the full-load 50-Hz torque.

The locked-rotor torques of 60-Hz motors operated on 50 Hz will vary in the same manner as the breakdown torques described above. For example, when a 460-V, 60-Hz motor having a 135 percent locked-rotor torque expressed in a percentage of 60-Hz full-load torque is operated on 50 Hz, 380 V, it may have as low as 103 percent locked-rotor torque expressed in a percentage of 50-Hz full-load torque.

3. *Locked-Rotor Current.* The locked-rotor current of 60-Hz motors, when operated on 50 Hz at the rated 60-Hz voltage, will be approximately 15 percent higher in amperes than the 60-Hz values. The 50-Hz value of locked-rotor current will vary in direct proportion to any slight variation in voltage from the rated 60-Hz voltage.

For example, a 60-Hz, 460-V motor with a locked-rotor current of 290 A will have approximately 334 A on 50 Hz at 460 V and approximately 319 A at 440 V and 50 Hz.

The code letter appearing on the motor nameplate to indicate locked-rotor kilovolt-amperes per horsepower applies only to the 60-Hz rating of the motor.

4. *Temperature Rise.* The temperature rises of 60-Hz motors when operated on 50 Hz will be higher than those attained on 60-Hz operation. When 60-Hz general-purpose open motors having a service factor of 1.15 and an ambient-temperature rating of 40°C are suitable for operation on 50-Hz circuits and are operated on 50 Hz at five-sixths of the 60-Hz voltage and horsepower rating, they will have no service factor. In general, the temperature rise of 460-V, 60-Hz 40°C motors when operated at 380 V, 50 Hz, will be approximately the same if the load is five-sixths of the rated load.

359. Operation of small dc motors on rectified alternating current (NEMA standard).*

1. *General.* When direct-current small motors intended for use on adjustable-voltage electronic power supplies are operated from rectified power sources, the pulsating voltage and current wave forms affect the motor performance characteristics. Because of this, the motors should be designed or specially selected to suit this type of operation.

A motor may be used with any power supply if the combination results in a form factor at rated load equal to or less than the motor rated form factor.

NOTES Sixty-Hz motors equipped with speed-responsive switching devices may require mechanical modification for satisfactory operation at 50 Hz.

The information given above is based on motors rated 60 Hz, 460 V. The same relationship will apply to motors of other standard voltage ratings.

*This material is reproduced with the permission of the National Electrical Manufacturers Association from the NEMA Standards Publication MG 1-2006 copyright © 2006 by NEMA.

A combination of a power supply and a motor which results in a form factor at rated load greater than the motor rated form factor will cause overheating of the motor and will have an adverse effect on commutation.

There are many types of power supplies that can be used; some are:

- a. Single-phase, half-wave
- b. Single-phase, half-wave, back rectifier
- c. Single-phase, half-wave, alternating-current voltage controlled
- d. Single-phase, full-wave, firing angle controlled
- e. Single-phase, full-wave, firing angle controlled, back rectifier
- f. Three-phase, half-wave, voltage controlled
- g. Three-phase, half-wave, firing angle controlled

It is impractical to design a motor or to list a standard motor for each type of power supply. The combination of power supply and motor must be considered. The resulting form factor of the combination is a measure of the effect of the rectified voltage on the motor current as it influences the motor performance characteristics, such as commutation and heating.

2. **Form Factor.** The form factor of the current is the ratio of the root-mean-square value of the current to the average value of the current.

Armature current form factor of a motor-rectifier circuit may be determined by measuring the rms armature current (using an electrothermic instrument, electro-dynamic instrument, or other true rms responding instrument) and the average armature current (using a permanent-magnet moving-coil instrument). The armature current form factor will vary with changes in load, speed, and circuit adjustment.

Armature current form factor of a motor-rectifier circuit may be determined by calculation. For this purpose, the inductance of the motor armature circuit should be known or estimated, including the inductance of any components in the power supply which are in series with the motor armature. The value of the motor inductance will depend upon the horsepower, speed, and voltage ratings and the enclosure of the motor and should be obtained from the motor manufacturer. The method of calculation of the armature current form factor should take into account the parameters of the circuit, such as the number of phases, the firing angle, half-wave, with or without back rectifier, etc., and whether or not the current is continuous or discontinuous.

Ranges of armature current form factors on some commonly used motor-rectifier circuits and recommended rated form factors of motors associated with these ranges are shown in the table below.

360. Operation of medium dc motors on rectified alternating current (NEMA standard). When a direct-current medium motor is operated from a rectified alternating-current supply, its performance may differ materially from that of the same motor when operated from a low-ripple direct-current source of supply, such as a generator or a battery. The pulsating voltage and current wave forms may increase temperature rise and noise and adversely affect commutation and efficiency. Because of these effects, it is necessary that direct-current motors be designed or specially selected to operate on the particular type of rectified supply to be used.

Typical combination of power source and rectifier type	Range of armature current form factors*	Recommended rated form factors of motors
Single-phase thyristor (SCR) or thyatron with or without back rectifiers:		
Half-wave	1.86–2	2
Half-wave	1.71–1.85	1.85
Half-wave or full-wave	1.51–1.7	1.7
Full-wave	1.41–1.5	1.5
Full-wave	1.31–1.4	1.4
Full-wave	1.21–1.3	1.3
Three-phase thyristor (SCR) or thyatron with or without back rectifiers:		
Half-wave	1.11–1.2	1.2
Full-wave	1.0–1.1	1.1

*The armature current form factor may be reduced by filters or other circuit means which will allow the use of a motor with a lower-rated form factor.

361. Operation of dc motors by reduced armature voltage (NEMA standard). When a dc motor is operated below base speed by reduced armature voltage, it may be necessary to reduce its torque load below rated full-load torque to avoid overheating the motor.

362. Operating Speeds of Various Machine Tools

Saws, circular, wood	9,000 ft per min at rim
Band, wood	4,000 ft per min at rim
Band, hot iron, and steel	200–300 ft per min at rim
Grindstones	800 ft per min at rim
Emery wheels	5,000 ft per min at rim
Drills, for wrought iron	12 ft per min outer edge
For cast iron	8 ft per min outer edge
Milling cutters, for brass	120 ft per min outer edge
For cast-iron	60 ft per min outer edge
For wrought iron	50 ft per min outer edge
Wrought steel	35 ft per min outer edge
Screw cutting, gun metal, etc.	30 ft per min at circum
Steel	8 ft per min at circum
Boring, cast-iron	10 ft per min at circum
Sawing	
Brass	70 ft per min at circum
Gun metal	30 ft per min at circum
Steel	25 ft per min at circum
Wrought iron	30 ft per min at circum
Cast iron	20 ft per min at circum

363. Motor-driven pumps (Westinghouse Electric Corp.). Either dc or ac motors are satisfactory. For most cases, shunt-wound dc or squirrel-cage ac motors and synchronous motors above 25 hp are suitable, but when starting conditions are severe, as when the pump must be started against a full discharge pipe, compound-wound dc, and wound-rotor

ac motors are preferable. For small centrifugal pumps, squirrel-cage motors are suitable. On large units, squirrel-cage or synchronous motors are used. In many government buildings wound-rotor motors are specified for their low starting currents.

$$\text{Water hp} = \frac{\text{gpm} \times \text{tdh (in ft)}}{3960} = \frac{\text{gpm} \times \text{tdh (in lb)}}{1720}$$

where gpm = gallons per minute and tdh = total dynamic head.

$$\text{bhp} = \frac{\text{gpm} \times \text{tdh (in ft)}}{3960 \times \text{pump eff}}$$

where bhp = brake horsepower.

$$\text{kW input} = \frac{\text{gpm} \times \text{tdh (in ft)}}{5308 \times \text{pump eff} \times \text{motor eff}}$$

$$\text{kWh per million gallons pumped} = \frac{\text{tdh (in ft)} \times 3.1456}{\text{pump eff} \times \text{motor eff}}$$

$$\text{Velocity} = \frac{\text{gpm}}{2.45 \times D^2} \qquad \text{Velocity head} = \frac{V^2}{64.4}$$

NOTE When the head is expressed in feet, formulas are correct only for liquids of 1.0 specific gravity.

On plunger pumps high-starting-torque squirrel-cage motors are recommended to take care of the full pump load plus the accelerating load. For boiler-feed service and other applications requiring variable-speed motors, a wound-rotor motor with continuous-duty resistors should be used.

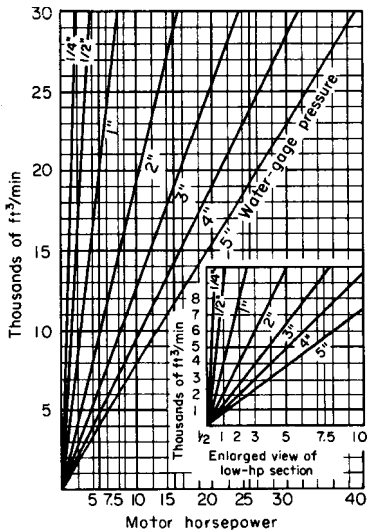


FIGURE 7.184 Curves for horsepower required to drive fans and blowers. [Westinghouse Electric Corp.]

364. Motor-driven fans and blowers

(Westinghouse Electric Corp.). The approximate horsepower required to drive fans and blowers may be obtained from the curve in Fig. 7.184 when the cubic feet per minute and water-gage pressure are known. Horsepower for pressures and quantities not shown on the curves may be figured from the following formula (the average ventilating fan has an efficiency of 60 percent):

$$\text{hp} = \frac{\text{ft}^3/\text{min} \times \text{pressure in inches water gage}}{6.346 \times \text{fan efficiency}} \tag{12}$$

The horsepower required by a fan varies approximately as the cube of the speed; the volume, directly as the speed. Motor horsepower should exceed the rated horsepower of a forward-curved fan by about 20 percent but can be near the rated horsepower of backward-curved fans with non-overload characteristics.

If fan speed will be increased by adjustable pitch sheaves or sheave changes, base the motor rating on the highest speed.

Standard shunt-wound direct-current or normal-torque ac motors have sufficient starting torque. Synchronous motors are used when power-factor correction is desired.

Multispeed variable-torque squirrel-cage motors are recommended when the volume of air must be varied. Any combination of 1800-, 1200-, 900-, and 600-rpm speeds can be supplied. If the volume variation obtained with fixed motor speeds is not suitable, a wound-rotor induction motor with the proper control will allow speed adjustment between 100 and 50 percent of the motor speed.

Shunt-wound dc motors with suitable control give variable-speed adjustment over the same range as wound-rotor motors.

365. Motor-driven compressors. Compressors equipped with unloaders can be started by normal-starting torque ac motors of NEMA Design B. Compressors which start loaded require high-starting-torque ac motors of NEMA Design C.

Most air-conditioning compressors, especially hermetic refrigerant motor-compressors and centrifugal compressors, start unloaded. If the compressor starts loaded, it will require motor-starting torques of 200 to 220 percent of full-load torque. High-starting-torque Type A motors (Design C) will develop these torques when started across the line. With across-the-line starting, the total current inrush is the locked-rotor current of the motor. When a low-starting-current, high-starting-torque motor will not meet the inrush or torque requirements, a wound-rotor motor and Class 13-100 magnetic starter are recommended.

Large reciprocating air compressors are generally driven by high-speed belted or low-speed direct-connected engine-type synchronous motors.

The horsepower required can be determined by using the following instructions applied to the curves in Fig. 7.185.

AIR COMPRESSORS AT ANY LEVEL Curve A can be used when the discharge pressure and cubic feet per minute are known. The curves are lines of constant horsepower. Dotted lines are for two-stage water-cooled units.

AIR COMPRESSORS AT ANY ALTITUDE First select the equivalent sea-level pressure from curve B. This will take care of the increase in compression ratio above sea-level ratio. Then from curve A determine the total horsepower for the pressure corresponding to the equivalent sea-level pressure and free air capacity you desire. Multiply this horsepower by the correction factor from curve C.

AIR-CONDITIONING AND REFRIGERATION The vast majority of compressors used in air-conditioning and refrigeration equipment are hermetic refrigerant motor-compressors (see Sec. 399), which employ special low-starting-torque motors as an integral part of the compressor and must be started unloaded. To estimate accurately the total electrical starting and running load of a hermetic refrigerant motor-compressor and the air-conditioning or refrigerating equipment of which it is a part, it is necessary to know the electrical ratings of the specific motor-compressor or equipment. As detailed in Sec. 399, a hermetic refrigerant motor-compressor is not rated in horsepower. Air-conditioning and refrigerating equipment is rated for its cooling capacity in British thermal units per hour or in tons of cooling capacity. One ton of cooling capacity equals 12,000 Btu/h.

The electrical input per ton of cooling depends not only on the efficiency of the compressor motor but also on the efficiency of the compressor in its system. The efficacy of the system is dependent on many factors, including the cooling temperature (high temperature for air conditioning, medium temperature for unfrozen-food preservation, low temperature for frozen-food storage and food freezing). Other factors affecting the overall efficiency of the system include the system condensing medium, such as water-cooled, evaporatively cooled, or air-cooled, the kind of refrigerant, the number and type (and

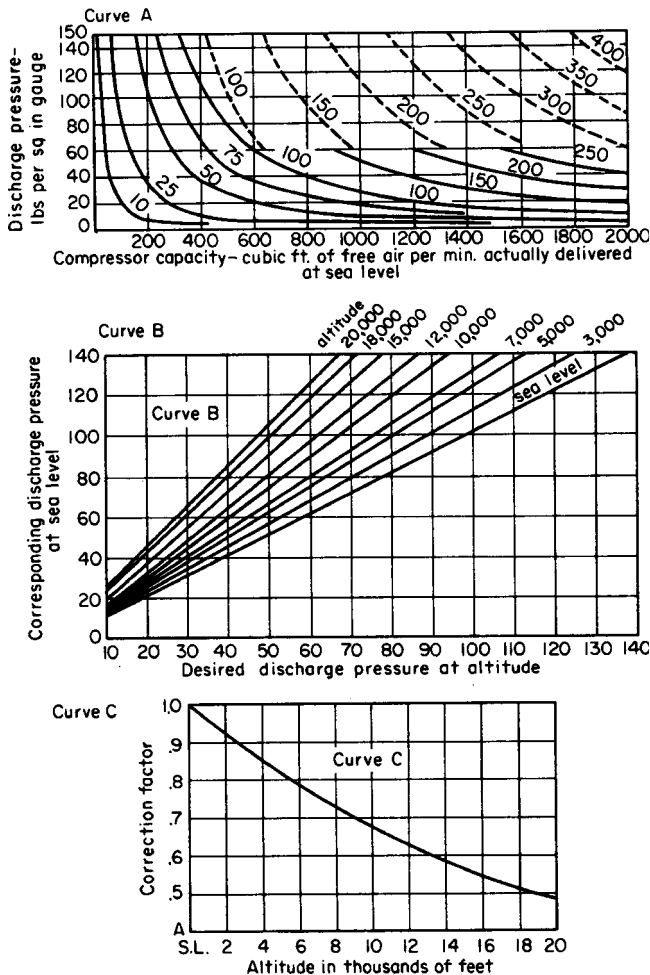


FIGURE 7.185 Curves for determining horsepower required to drive compressors. [Westinghouse Electric Corp.]

efficiency) of auxiliary motors, such as fan motors, etc. Even approximate conversion from tons of cooling to electrical-input power is feasible only when there is adequate knowledge of the equipment to be installed.

It is traditional to convert tons of cooling to motor horsepower by estimating 1 hp/ton, but this can result in a 100 percent error on the high side for some high-efficiency equipment and can be as much as 25 percent on the low side for other equipment. It is best to consult the mechanical contractor or the equipment manufacturer to obtain accurate information.

366. Foundations are necessary to support and maintain in alignment generators and other electrical machines of any considerable size. They are made of masonry. Brick or stone set in mortar (preferably cement mortar) will do, but concrete is almost universally

used because it is usually the cheapest. A 1:3:6 mixture of concrete (1 part cement, 3 parts sand, and 6 parts crushed stone or gravel by bulk) or even a 1:3:7 mixture will give excellent results. Brick or stone for foundations can be set in mortar consisting of 1 part cement and 3 parts sand.

367. The size of a foundation is determined by the size of the machine supported and by the stress imposed by the machine. The base area of any foundation must be great enough so that its weight and the weight of the machine supported will not cause it to sink into the soil. If a machine is not subjected to any external forces (i.e., if it is self-contained), the only requirement of the foundation (provided the machine is not one that vibrates excessively) is to keep it from sinking into the ground, and the lightest foundation that will do this is satisfactory. Therefore motor generators and rotary converters do not require foundations heavy enough to resist the tendency of the external apparatus to tip or to displace the foundation. No rule can be given for determining the proper weight for a foundation in such a case. However, with a solid foundation it is usually true that if the foundation is large enough to include all the foundation bolts of the machine and to extend to good bottom, it will be sufficiently heavy. Experience is required to enable one to design the lightest foundation that will do, so it is well for the beginner to be sure that the foundation is heavy enough.

368. Foundation for a gear motor (Westinghouse Electric Corp.). A foundation or mounting which provides rigidity and prevents weaving or flexing, with resultant misalignment of the shafts, is essential to the successful operation of a gear drive. A concrete foundation should be used whenever possible and should be carefully prepared to conform with data regarding bolt spacing and physical measurements contained in the identified dimension leaflet.

Gear motors are designed with a tolerance of $+0$ and $-1/32$ in (-0.794 mm) between the shaft center and the base. Therefore, shimming may be required. Shims of various thicknesses, slotted to slide around the foundation bolts, should be used. After alignment has been secured through shimming, the gear motor should be bolted down and grouted in. When the unit must be installed on structural foundations, a supporting baseplate of steel should be provided to obtain proper rigidity. This baseplate should be of a thickness not less than the diameter of the holding-down bolts.

369. Alignment of motors. After the motor has been properly located and the right kind of mounting has been built, the next step is to align the motor properly with its drive. The following procedure is recommended by the General Electric Co. Belt drive is the most common form of mechanical transmission, but the principles involved and the methods used in aligning generally apply equally well for chain drive. The tools usually used for aligning motors or line shafting are the square, plumb bob, and level. Tool manufacturers also build combination squares and levels and similar tools that aid in quickly and accurately aligning machinery.

The first step in aligning two machines is to see if they are level. It is possible for a machine to be out of line in more than one plane. If by placing a level or plumb on the machine it is found to be out by a certain amount, the motor must be mounted so that it will be out by a like amount.

A simple and easy method of aligning a motor pulley with the driven pulley is shown in Fig. 7.186. First, the crown or centerline of the pulleys must be on the same centerline; second, the motor shaft must be parallel to the driven shaft.

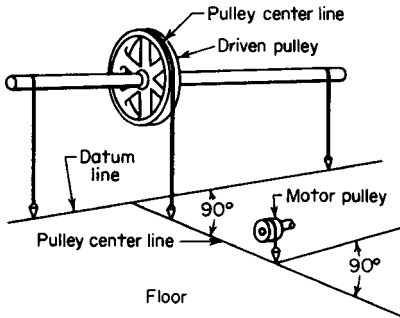


FIGURE 7.186 Method of aligning two pulleys.
[General Electric Co.]

By using a plumb bob and drawing a datum line on the floor, a base of operation is established. Next, drop a plumb line from the center of the driven pulley to the floor. With a square, draw a line perpendicular to the datum line. Next, drop a plumb line from the center of the motor pulley and move the motor up or back until the plumb bob rests on the centerline of the driven pulley. From the pulley centerline, perpendiculars can be drawn through the centers of the holes in the motor feet. A level should be used to see that the line shafting is level. If it is not, the motor feet must be shimmed up so that the motor shaft and the line shaft will be out of level by the same amount. Chain drive can be aligned in a similar manner.

With belt drive, a sliding base is nearly always used to allow for belt adjustment. Another method, therefore, is to use the following procedure when aligning two pulleys:

1. Place the motor on the base so that there will be an equal amount of adjustment in either direction, and firmly fasten the motor to the base by the four holding-down bolts.
2. Mount the motor pulley on the motor shaft.
3. Locate the base and motor in approximately the final position, as determined by the length of belt.
4. Stretch a string from the face of the driven pulley toward the face of the motor pulley.
5. Parallel the face of the motor pulley with this string.
6. Using a scratch pin, mark the end positions of the sliding base.
7. Extend these lines.
8. Move the base and motor away from the string by an amount equal to one-half the difference in face width of the two pulleys. Use the two extended lines as a guide to keep the base in its proper position.
9. The belt should now be placed on the pulleys to see if it operates satisfactorily. If it does not operate properly, the base can be shifted slightly until proper operation is obtained.
10. Firmly fasten the base to the floor, ceiling, or sidewalls by lag screws or bolts.

MOTOR CIRCUITS

370. National Electrical Code **rules definitely specify certain requirements** with respect to the size and location of the component parts of motor branch circuits. The following tables and rules are in accordance with the 2008 edition of the Code. Certain cities have adopted motor wiring tables and rules which may be more exacting than those required by the Code. In such communities these local requirements should be followed in preference to the tables presented herein.

Section 370 through 395 are the rules for conventional motors and motor circuits. Sections 399 through 407 are the rules for air-conditioning and refrigerating equipment which includes a hermetic refrigerant motor-compressor. See Sec. 399.

In the following sections the terminology of the National Electrical Code with respect to *within sight* is adhered to. A distance of more than 15 m (50 ft) is considered

equivalent to being *out of sight*, even though there may be no obstructions between the two points.

Full-Load Motor Currents. According to the National Electrical Code, whenever the current rating of a motor is used to determine the ampacity (current-carrying capacity) of conductors or the ampere ratings of switches, branch-circuit overcurrent devices, etc., the values given in Tables 7 to 10 of Div. 12, including footnotes, should be used in lieu of the actual current ratings marked on a motor nameplate. Motor-overload protection should be based on the motor-nameplate current rating. If a motor is marked in amperes but not in horsepower, the horsepower rating should be assumed to be that corresponding to the value given in Tables 7 to 10 of Div. 12, interpolated if necessary.

Exceptions

1. *For multispeed motors, the selection of conductors on the line side of the controller shall be based on the highest of the full-load current ratings shown on the motor nameplate; selection of conductors between the controller and the motor shall be based on the current ratings of the winding(s) that the conductors energize.*
2. *For torque motors, in which the rated current is the locked-rotor current, this nameplate current shall be used.*
3. *For ac motors used on adjustable-voltage, variable-torque drive systems, the maximum operating current marked on the motor and/or control nameplate shall be used. If the maximum operating current does not appear on the nameplate, the ampacity determination shall be based on 150 percent of the values given in Tables 9 and 10 of Div. 12.*

The incoming branch circuit or feeder to power conversion equipment included as part of an adjustable-speed drive system shall be based on the rated input to the power conversion equipment, and is to be taken at 125 percent of that value. If the drive has a bypass mechanism that allows the motor to run directly across the line, the conductors must meet the larger of two calculations, one being 125 percent of the input rating to the drive, and the other being 125 percent of the Div. 12, Tables 7 to 10 tabulation, as applicable.

371. Phase converters. The National Electrical Code defines a *phase converter* as an electric device that converts single-phase electrical power for the operation of equipment that normally operates from a three-phase electrical supply. Such phase converters are of two types: (1) static with no moving parts and (2) rotary with an internal rotor that is required to be rotating before load is applied. Single-to three-phase converters are typically used in rural areas with only single-phase utility power and where three-phase motor use is desirable because of the lower cost and greater efficiency of three-phase motors. The National Electrical Code includes rules for three-phase motor circuits operated using phase converters. The ampacity and overcurrent protection of the single-phase supply conductors shall not be less than 125 percent of the phase converter nameplate single-phase input full-load amperes.

Where the phase converter supplies specific fixed loads, and the conductor ampacity is less than 125 percent of the phase converter nameplate single-phase input full-load amperes, the conductors shall have an ampacity and overcurrent protection rating not less than 250 percent of the sum of the full-load, 3-phase current rating of the motors and other loads served where the input and output voltages of the phase converter are identical.

Where the input and output voltages of the phase converter are different, the current as determined by this section shall be multiplied by the ratio of output to input voltage.

372. Types of motor branch circuits. Branch circuits supplying motors as required by the National Electrical Code may be divided into three types, as follows: (1) a branch circuit supplying only a single motor, (2) a branch circuit supplying several motors but no other equipment except that directly associated with the motors, and (3) a branch circuit supplying one or more motors, lamps, receptacles, and/or electric heaters, etc. (combination load).

373. Rating or setting for an individual motor circuit. The motor branch-circuit short-circuit and ground-fault protective device shall be capable of carrying the starting current of the motor. Torque motor branch circuits shall be protected at the motor-nameplate current rating in accordance with 240.4(B) of the NEC. For motor circuits of 600 V or less, a protective device having a rating or setting not exceeding the values given in Table 43 of Div. 12 shall be permitted. An instantaneous-trip circuit breaker (without time delay) shall be used only if it is adjustable and is part of a listed combination controller having coordinated motor overload and also short-circuit and ground-fault protection in each conductor. A motor short-circuit protector shall be permitted in lieu of devices listed in Table 43 of Div. 12 if the motor short-circuit protector is part of a listed combination motor controller having both coordinated motor overload protection and short-circuit and ground-fault protection in each conductor if it will operate at not more than 1300 percent of full-load motor current for other than Design B energy-efficient motors and 1700 percent of motor full-load current for Design B energy-efficient motors. If the table ratings for instantaneous-trip circuit breakers are insufficient to allow the motor to start, and that has been confirmed by engineering evaluation, they may be increased to the same limits as for motor short-circuit protectors.

Exceptions

- a. Where the setting specified in Table 430-52 of the NEC is not sufficient for the starting current of the motor, the setting of an instantaneous trip circuit breaker shall be permitted to be increased but shall in no case exceed 1300 percent of the motor full-load current for other than Design B energy efficient motors and no more than 1700 percent of full-load motor current for Design B energy efficient motors. Trip settings above 800 percent for other than Design B energy efficient motors and above 1100 percent for Design B energy efficient motors shall be permitted where the need has been demonstrated by engineering evaluation. In such cases, it shall not be necessary to first apply an instantaneous trip circuit breaker at 800 percent or 1100 percent.*
- b. Where the motor full-load current is 8 A or less, the setting of the instantaneous-trip circuit breaker with a continuous current rating of 15 A or less in a listed combination motor controller that provides coordinated motor branch-circuit overload and short-circuit and ground-fault protection shall be permitted to be increased to the value marked on the controller.*

Where the values for branch-circuit protective devices determined by Table 43 of Div. 12 do not correspond to the standard sizes or ratings of fuses, nonadjustable circuit breakers, or thermal protective devices or the possible settings of adjustable circuit breakers, a higher size, rating, or possible setting that does not exceed the next higher standard ampere rating shall be permitted.

Exception. Where the values for branch-circuit short-circuit and ground-fault protective devices specified in the tables, or as modified by using the next-higher standard size device, are not sufficient for the starting current of the motor:

- 1. The rating of a non-time-delay fuse not exceeding 600 A or a time-delay Class CC fuse shall be permitted to be increased but shall in no case exceed 400 percent of the full-load current.*

2. *The rating of the time-delay (dual-element) fuse shall be permitted to be increased but shall in no case exceed 225 percent of the full-load current.*
3. *The rating of an inverse-time circuit breaker shall be permitted to be increased but in no case shall exceed (a) 400 percent for full-load current of 100 A or less or (b) 300 percent for full-load currents greater than 100 A.*
4. *The rating of a fuse of 601–6000-A classification shall be permitted to be increased but shall in no case exceed 300 percent of the full-load current.*

For a multispeed motor, a single short-circuit and ground-fault protective device shall be permitted for two or more windings of the motor provided the rating of the protective device does not exceed the above applicable percentage of the nameplate rating of the smallest winding protected.

Exception: For a multispeed motor, a single short-circuit and ground-fault protective device shall be permitted to be used and sized according to the full-load current of the highest current winding, provided that each winding is equipped with individual overload protection sized according to its full-load current and that the branch-circuit conductors feeding each winding are sized according to the full-load current of the highest full-load current winding and the controller for each winding has a horsepower rating not less than that required for the winding having the highest horsepower rating.

Where maximum branch-circuit short-circuit and ground-fault protective-device ratings are shown in the manufacturer's overload-relay table for use with a motor controller or are otherwise marked on equipment, they shall not be exceeded even if higher values are allowed as shown above.

Suitable fuses shall be permitted in lieu of devices listed in Table 430.52 of the NEC for power electronic devices in a solid state motor controller system provided that the marking for replacement fuses is provided adjacent to the fuses.

Self-protected combination controllers are also permitted as short-circuit and ground-fault protection for motors, and they have the same rating limitations as for motor short-circuit protectors, covered above. They also have a note attached advising care on delta systems in terms of observing the individual pole interrupting capability. This refers to the fact that on a corner-grounded delta system a ground fault will impose the full line-to-line voltage on a single pole of the breaker, instead of the line-to line voltage divided by the square root of three, as would be the case in conventional wye systems.

374. Several motors or loads on one branch circuit. Two or more motors or one or more motors and other loads shall be permitted to be connected to the same branch circuit under the conditions of 1, 2, or 3 below:

1. *Not more than 1 hp.* Several motors each not exceeding 1 hp in rating shall be permitted on a branch circuit protected at not more than 20 A at 125 V or less, or 15 A at more than 125 V but not more than 600 V if all the following conditions are met:
 - a. The full-load rating of each motor does not exceed 6 A.
 - b. The rating of the branch-circuit protective device marked on any of the controllers is not exceeded.
 - c. Individual running overload protection conforms to Sec. 380.
2. *If the smallest motor is protected.* If the branch-circuit protective device is selected not to exceed that allowed by Sec. 373 for the motor of the smallest rated motor, two or more motors or one or more motors and other load or loads, with each motor having

individual overload protection, shall be permitted to be connected to a branch circuit when it can be determined that the branch-circuit protective device will not open under the most severe normal conditions of service that might be encountered.

3. *Other group installation.* Two or more motors of any rating or one or more motors and other load or loads, with each motor having individual overload protection, shall be permitted to be connected to one branch circuit when the motor controller or controllers and overload device or devices are (a) installed as a listed factory assembly and the motor branch-circuit short-circuit and ground-fault protective device is either factory-provided as part of the assembly or specified by a marking on the assembly, or (b) the motor branch-circuit short-circuit and ground-fault protective device, the motor controller or controllers, and the overload device or devices are field-installed as separate assemblies listed for such use and provided with manufacturers' instructions for use with each other, or (c) all the following conditions are met:
 - a. Each motor-running overload device is listed for group installation with a specified maximum rating for fuse and/or inverse-time circuit breaker.
 - b. Each motor controller is listed for group installation with a specified maximum rating of fuse and/or circuit breaker.
 - c. Each circuit breaker shall be listed and be of the inverse-time type.
 - d. The branch circuit shall be protected by fuses or inverse-time circuit breakers having a rating not exceeding that specified in Sec. 373 for the highest rated motor connected to the branch circuit plus an amount equal to the sum of the full-load current ratings of all other motors and the ratings of other loads connected to the circuit. Where this calculation results in a rating less than the ampacity of the supply conductors, it shall be permitted to increase the maximum rating of the fuses or circuit breaker to a value not exceeding that permitted by 240.4(B) of the NEC.
 - e. The branch-circuit fuses or inverse-time circuit breakers are not larger than allowed by 430.40 of the NEC for the overload relay protecting the smallest rated motor of the group.
4. *Single-motor taps.* For group installations described in 1, 2, and 3 above, the conductors of any tap supplying a single motors shall not be required to have an individual branch-circuit short-circuit and ground-fault protective device provided it complies with any of the following three conditions: The first possibility is that no conductor to the motor has an ampacity less than that of the branch-circuit conductors; and the second is that no conductor to the motor has an ampacity less than one-third that of the branch-circuit conductors, with a minimum in accordance with Sec. 387, the conductors to the motor-running overload protective device being not more than 7.5 m (25 ft) long and being protected from physical damage. The third possibility is the most complicated. If the conductors run from the short-circuit and ground-fault protective device terminate in a manual motor controller additionally marked "Suitable for Tap Conductor Protection in Group Installations" those conductors are permitted to have an ampacity as low as one-tenth that of the rating of the short-circuit and ground-fault protective device. They must be protected from damage and be enclosed in a raceway or within the controller, and they must not exceed 3 m (10 ft) in length. Otherwise their minimum size rises to equal that of the branch-circuit conductors.

375. Motors on general-purpose branch circuits. Overload protection for motors used on general-purpose branch circuits shall be provided as specified in 1, 2, 3, or 4 below.

1. *Not more than 1 hp.* One or more motors without individual overload protection shall be permitted to be connected to general-purpose branch circuits only when the installation complies with the limiting conditions specified in conditions 1a and 1b of Sec. 374, as well as the provisions of parts (2) and (3) of Sec. 380.

2. *More than 1 hp.* Motors of larger ratings than specified in condition 1 of Sec. 374 may be connected to general-purpose branch circuits only when each motor is protected by overload protection selected to protect the motor as specified in Sec. 380. Both the controller and the motor-running overload device shall be approved for group installation with the short-circuit and ground-fault protective device selected in accordance with Sec. 374.
3. *Cord- and plug-connected.* Where a motor is connected to a branch circuit by means of an attachment plug and receptacle and individual overload protection is omitted as provided in condition 1 above, the rating of the attachment plug and receptacle shall not exceed 15 A at 125 V or 250 V. Where individual overload protection is required as provided in condition 2 for a motor or motor-operated appliance that is attached to the branch circuit with an attachment plug and receptacle, the overload device shall be an integral part of the motor or of the appliance. The rating of the attachment plug and receptacle shall determine the rating of the circuit to which the motor may be connected, as is provided in Article 210 of the National Electrical Code.
4. *Time delay.* The branch-circuit short-circuit and ground-fault protective device protecting a branch circuit to which a motor or motor-operated appliance is connected shall have sufficient time delay to permit the motor to start and accelerate its load.

376. Multimotor and combination load equipment. The rating of the branch-circuit short-circuit and ground-fault protective device for multimotor and combination load equipment shall not exceed the rating marked on the equipment.

377. The component parts of a motor branch circuit for an individual motor are shown in Fig. 7.187.

P_1 : *Overcurrent protective device in feeder or main.* It may consist of fuses or a circuit breaker. Refer to Sec. 390.

S_B : *Branch-circuit switch.* It is not required by National Electrical Code rules. It may consist of a switch or a circuit breaker. It must have an ampere rating at least 115 percent of the full-load current rating of the motor. For ac motors of 1200 hp or less and dc motors of 40 hp or less, the switch must be of the motor-circuit type, however, a general-use or isolating switch may be used where plainly marked "Do not operate under load." If a switch is used, it must have fuse clips large enough to accommodate fuses required at P_2 . If a circuit breaker is used as a branch-circuit short-circuit and ground-fault protective device, it will serve the double purpose of a branch-circuit switch and a circuit protective device. Refer to Sec. 386.

P_2 : *Branch-circuit short-circuit and ground-fault protective device.* It may consist of fuses or a circuit breaker. If a circuit breaker is used, it will serve the double purpose of a branch-circuit switch and an overload protective device. Refer to Sec. 385.

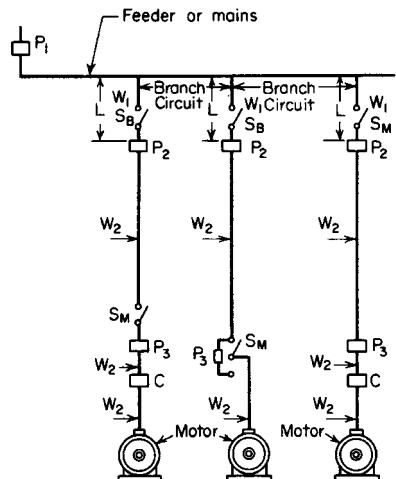


FIGURE 7.187 Single-line diagrams giving requirements for component parts of branch motor circuits with branch-circuit short-circuit and ground-fault protection.

S_M: Motor switch. It may consist of a switch or a circuit breaker. It must have a rating and be of a type as described for *S_B*. If the switch is fused, the fuse clips must be large enough to accommodate the size of fuses required at *P₃*. Switch *S_M* must be located within sight of motor controller *C*. If switch *S_M* is of the two-throw or two-position type (Diagram II) for cutting the motor overload protective device out of the circuit during the starting period, the switch must be so arranged that it cannot be left in the starting position. It must be within sight from the location of controller *C*, and it must also be within sight from the motor and driven machinery location unless it is capable of being locked in the open position.

P₃: Motor-overload protective device. It may consist of fuses, thermal relays, magnetic relays, circuit breakers, or a thermal protector in the motor. It generally is not required for intermittent-duty motors. Except for a thermal protector in the motor, the device shall be rated or selected to trip at not more than 125 percent of the motor full-load current rating for motors marked with a service factor not less than 1.15 or marked to have a temperature rise not over 40°C and at not more than 115 percent for all other types of motors. This value may be modified as permitted by Sec. 380, condition 6. The motor-overload protective device is generally incorporated in controller *C* and mounted inside the controller case. Refer to Secs. 380 to 382.

C: Motor controller. Refer to Sec. 379.

W₁: Branch-circuit tap wires from point of connection of feeder to branch-circuit overload protective device. If a branch-circuit short-circuit and ground-fault protective device is located at the point of connection to the feeder, the ampacity of the tap wires must be at least 125 percent of the motor full-load current. If the length *L* of the wires from the point of connection to the feeder to the branch-circuit short circuit and ground-fault protective device is 7.5 m (25 ft) or less, the ampacity of the tap wires must be at least one-third of the ampacity of the feeder. If the length *L* of the wires from the point of connection to the feeder to the branch-circuit short-circuit and ground-fault protective device is greater than 25 ft, the tap wires must be of the same size as the feeder, except in high-bay manufacturing buildings over 11 m (35 ft) high at walls, where the length *L* is permitted to be not over 25 ft long horizontally and not over 30 m (100 ft) in total length under special conditions detailed in the exception to Sec. 430.28 of the 2008 National Electrical Code.

W₂: Branch-circuit wires from motor-overload protective device to motor. They must have an ampacity of at least 125 percent of the motor full-load current for continuous-duty motors. Refer to Sec. 387.

378. The component parts of a motor branch circuit supplying several motors are shown in Fig. 7.188.

P₁: Short-circuit and ground-fault protective device in branch circuit. It may consist of fuses or an inverse-time circuit breaker listed for group installation. If the motor-overload protective device consists of overload relays, the rating of the fuses or the setting of the circuit breaker must not be greater than is permitted in condition 12 of Sec. 380, unless the motor-overload protective device *P₃* and controller *C* are listed for group installation.

If the motor-overload protective devices are cut out during the starting period, *P₁* must consist of fuses or an inverse-time circuit breaker rated not more than 400 percent of the full-load current of the smallest motor so protected. Refer to Sec. 385.

S_M: Combined motor and branch-circuit switch. It may consist of a switch or a circuit breaker. It must have a continuous-duty rating of at least 115 percent of the motor

full-load current. For ac motors of 100 hp or less and dc motors of 40 hp or less and for all cases in which a switch is used for shutting down the motor, the switch must be of the motor-circuit type. If the switch is fused, the fuse clips must be large enough to accommodate the size of fuses required at P_3 . If the switch is used for shutting down the motor, it should be located as close as possible to the motor and its driven machinery and in the most accessible location for the operator. If the switch is not used for shutting down the motor, it may be remote from the motor provided that it is located within sight from the controller C and is either located within sight of the motor and its driven machinery or so arranged that it can be locked in the open position. If the switch of the two-position or double-throw type (Diagram II) for cutting the motor overload protective device out of the circuit during the starting period, it must be so arranged that it cannot be left in the starting position. If S_M is a fused switch or circuit breaker, the supply from P_1 is a feeder. Refer to Sec. 386.

P_3 . *Motor-overload protective device.* It may consist of fuses, thermal relays, magnetic relays, a circuit breaker, or a thermal protector in the motor. Except for a thermal protector in the motor, the device shall be rated or selected to trip at not more than 125 percent of the motor full-load current rating for motors marked with a service factor not less than 1.15 or marked to have a temperature rise not over 40°C and at not more than 115 percent for all other types of motors. This value may be modified as permitted by Sec. 380, condition 6. The motor-overload protective device is generally incorporated in the controller C and mounted inside the controller case. Refer to Secs. 374 and 380 to 382.

C : *Motor controller.* Refer to Secs. 374 and 379.

W_1 : *Individual motor tap wires from points of connection to branch circuit to motor-overload protective device.* If the motor-overload protective device is located at the point of connection to the branch circuit, the ampacity of the wires must be at least 125 percent of the motor full-load current. If the length L of the wires is 7.5 m (25 ft) or less, the ampacity of the wires must be at least one-third of the ampacity of the branch-circuit wires. If the length L of the wires is greater than 25 ft, the wires must be of the same size as the branch-circuit wires.

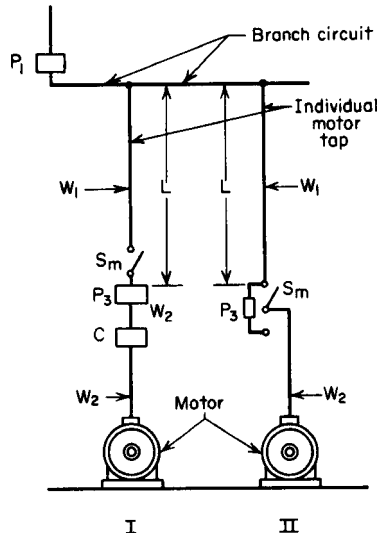


FIGURE 7.188 Single-line diagrams giving requirements for motor circuits when a branch-circuit short-circuit and ground-fault protective device is used for more than one motor.

379. Motor controllers. Each motor must be provided with a suitable controller that can start and stop the motor and perform any other control functions required for the satisfactory operation of the motor, such as speed control. The different types of motor-control equipment are discussed in Secs. 251 and 325. A controller must be capable of interrupting the current of the motor under stalled-rotor conditions. Each motor must have its own individual controller except that, for motors of 600 V or less, a single controller may serve a group of motors under any one of the following conditions:

1. If a number of motors drive several parts of a single machine or a piece of apparatus such as metalworking and woodworking machines, cranes, hoists, and similar apparatus.
2. If a group of motors is under the protection of one overcurrent device as permitted in condition 1 for motor branch circuits as given in Secs. 374 and 375.
3. If a group of motors is located in a single room within sight of the controller location. A distance of more than 15 m (50 ft) is considered equivalent to being out of sight.

The controller must have a horsepower rating that is not less than that of the motor, except as follows:

1. *Stationary motor of $\frac{1}{8}$ hp or less.* For a stationary motor rated at $\frac{1}{8}$ hp or less that is normally left running and is so constructed that it cannot be damaged by overload or failure to start, such as clock motors and the like, the branch-circuit protective device may serve as the controller.
2. *Stationary motor of 2 hp or less.* For a stationary motor rated at 2 hp or less and 300 V or less, the controller may be a general-use switch having an ampere rating at least twice the full-load current rating of the motor. On ac circuits, general-use snap switches suitable for use only on ac (not general-use ac, dc snap switches) may be employed to control a motor having a full-load current rating not exceeding 80 percent of the ampere rating of the switch.
3. *Portable motor of $\frac{1}{3}$ hp or less.* For a portable motor rated $\frac{1}{8}$ hp or less, the controller may be an attachment plug and receptacle.
4. *Circuit breaker as controller.* A branch-circuit inverse time circuit breaker, rated in amperes only, may be used as a controller for all motors including Design E. When this circuit breaker is also used for overload protection, it shall conform to the appropriate provisions of this section governing the type of protection afforded.

A controller need not open all conductors to the motor unless it serves as a disconnecting means or unless one pole of the controller is placed in a permanently grounded conductor, in which case the controller must be designed so that the pole in the grounded conductor cannot be opened without simultaneously opening all conductors of the circuit.

Machines of the following types shall be provided with speed-limiting devices or other speed-limiting means unless the inherent characteristics of the machines, the system, or the load and the mechanical connection thereto are such as to limit the speed safely or unless the machine is always under the manual control of a qualified operator:

1. Separately excited dc motors
2. Series motors
3. Motor-generators and converters that can be driven at excessive speed from the dc end, as by a reversal of current or a decrease in load

Adjustable-speed motors, if controlled by field regulation, shall be so equipped and connected that they cannot be started under a weakened field unless the motors are designed for such starting.

The controller for a motor should be as near as possible to the motor to make the length of the wires between the controller and the motor as short as possible. For motor circuits 600 V or less, a disconnecting means must be within sight from the location of the motor and its driven machinery unless the controller disconnecting means is capable of being locked in the open position. The exception to 430.102 of the NEC outlines conditions where it is not necessary for the disconnecting means to be in sight of the motor. For motor circuits over 600 V, the controller disconnecting means is permitted to be out of sight from

the controller, provided the controller is marked with a warning label giving the location and identification of the disconnecting means to be locked in the open position. See Sec. 383 for type and rating of the disconnecting means.

The control point should be located so that it will be in the most accessible location for the operator of the machine driven by the motor. In the case of manual controllers the location of the control point will be the same as the location of the controller. For magnetic controllers the location of the control point will be the point of location of the *START* and *STOP* pushbuttons, which may or may not be the same as the location of the controller.

For motors rated over 600 V, the ultimate-trip current of overcurrent (overload) relays or other motor protective devices used shall not exceed 115 percent of the controller's continuous current rating. Where the motor branch-circuit disconnecting means is separate from the controller, the disconnecting means current rating shall not be less than the ultimate trip setting of the overcurrent relays in the circuit.

380. Overload protection of motors. Each continuous-duty motor must be protected against excessive overloads under running conditions by some approved protective device. This protective device, except for motors rated at more than 600 V, may consist of thermal relays, thermal release devices, or magnetic relays in connection with the motor controller, fuses, an inverse-time circuit breaker, or a thermal protector built into the motor.

Except for a thermal protector in the motor, the National Electrical Code requires that the protection be as follows:

1. More Than 1 hp. Each continuous-duty motor rated more than 1 hp shall be protected against overload by one of the following means:

a. A separate overload device that is responsive to motor current. This device shall be selected to trip or shall be rated at no more than the following percentage of the motor-nameplate full-load current rating:

	<i>Percent</i>
Motors with a marked service factor not less than 1.15	125
Motors with a marked temperature rise not over 40°C	125
All other motors	115

For a multispeed motor, each winding connection shall be considered separately. This value may be modified as permitted by Par. 6.

Where a separate motor-running overload device is so connected that it does not carry the total current designated on the motor nameplate, as for wye-delta starting, the proper percentage of nameplate current applying to the selection or setting of the overload device shall be clearly designated on the equipment, or the manufacturer's selection table shall take this into account.

b. A thermal protector integral with the motor, approved for use with the motor which it protects on the basis that it will prevent dangerous overheating of the motor due to overload and failure to start. The National Electrical Code specifies the level of protection to be provided by the motor manufacturer. If the motor current-interrupting device is separated from the motor and its control circuit is operated by a protective device integral with the motor, it shall be so arranged that the opening of the control circuit will result in an interruption of current to the motor.

c. A protective device integral with the motor that will protect the motor against damage due to failure to start shall be permitted if the motor is part of an approved assembly that does not normally subject the motor to overloads.

d. For motors larger than 1500 hp, a protective device employing embedded temperature detectors which cause current to the motor to be interrupted when the motor attains a temperature rise greater than marked on the nameplate in an ambient of 40°C.

2. *1 hp or Less, Manually Started*

- a. Each continuous-duty motor rated at 1 hp or less that is not permanently installed, is nonautomatically started, and is within sight from the controller location shall be permitted to be protected against overload by the branch-circuit short-circuit and ground-fault protective device. This branch-circuit protective device shall not be larger than that specified in 430.32 and 430.53 of the NEC, except that any such motor may be used on a nominal 120-V branch circuit protected at not over 20 A.
- b. Any such motor that is not in sight from the controller location shall be protected as specified in Par 3. Any motor rated at 1 hp or less that is permanently installed shall be protected in accordance with Par. 3.

3. *1 hp or Less, Automatically Started.* Any motor of 1 hp or less that is started automatically shall be protected against overload by the use of one of the following means:

- a. A separate overload device that is responsive to motor current. This device shall be selected to trip or be rated at no more than the following percentage of the motor-nameplate full-load current rating:

	Percent
Motors with a marked service factor not less than 1.15 or greater	125
Motors with a marked temperature rise 40°C or less	125
All other motors	115

For a multispeed motor, each winding connection shall be considered separately. This value may be modified as permitted by Par. 6.

- b. A thermal protector integral with the motor, approved for use with the motor which it protects on the basis that it will prevent dangerous overheating of the motor due to overload and failure to start. Where the motor current-interrupting device is separate from the motor and its control circuit is operated by a protective device integral with the motor, it shall be so arranged that the opening of the control circuit will result in an interruption of current to the motor.
- c. A protective device integral with the motor that will protect the motor against damage due to failure to start shall be permitted (1) if the motor is part of an approved assembly that does not normally subject the motor to overloads or (2) if the assembly is also equipped with other safety controls (such as safety combustion controls of a domestic oil burner) that protect the motor against damage due to failure to start. Where the assembly has safety controls that protect the motor, this fact shall be indicated on the nameplate of the assembly where it will be visible after installation.
- d. When the impedance of the motor windings is sufficient to prevent overheating due to failure to start, the motor may be protected as specified in Par. 2a for manually started motors if the motor is part of an approved assembly in which the motor will limit itself so that it will not be dangerously overheated.

Many ac motors of less than 1/20 hp, such as clock motors, series motors, etc., and also some larger motors such as torque motors come within this classification. It does not include split-phase motors having automatic switches to disconnect the starting windings.

4. *Wound-Rotor Secondaries.* The secondary circuits of wound-rotor ac motors, including conductors, controllers, resistors, etc., shall be considered to be protected against overload by the motor overload device.

- 5. *Intermittent and Similar Duty.*** A motor used for service which is inherently short-time, intermittent, periodic, or varying-duty (as illustrated by Table 12 of Div. 12) is considered to be protected against overload by the branch-circuit short-circuit and ground-fault protective device, provided the protective-device rating or setting does not exceed that specified in Table 43 of Div. 12.

Any motor is considered to be for continuous duty unless the nature of the apparatus which it drives is such that the motor cannot operate continuously with load under any condition of use.

- 6. *Selection of Setting of Overload Relay.*** When the overload relay selected in accordance with Par. 1a or 3a is not sufficient to start the motor or to carry the load, higher size sensing elements or incremental settings shall be permitted to be used. However, it should not exceed 140 percent of the motor full-load current rating of motors marked with a service factor not less than 1.15, and of motors marked to have a temperature rise not over 40°C, and not be higher than 130 percent of the full-load current rating for all other motors. If not shunted during the starting period of the motor, the overload protective device shall have sufficient time delay to permit the motor to start and accelerate its load.
- 7. *Shunting during Starting Period.*** If the motor is manually started (including starting with a magnetic starter having pushbutton control), the running overload protection may be shunted or cut out of the circuit during the starting period of the motor, provided the device by which the overload protection is shunted or cut out cannot be left in the starting position and provided fuses or inverse-time circuit breakers rated or set at not over 400 percent of the full-load current of the motor are so located in the circuit as to be operative during the starting period of the motor. The motor-running overload protection shall not be shunted or cut out during the starting period if the motor is automatically started, except as follows: (a) the motor-starting period exceeds the time delay of available motor-overload protective devices; and (b) listed means are provided to (1) sense motor rotation and automatically prevent shunting or cutout in the event that the motor fails to start, (2) limit the time of overload protection shunting or cutout to less than the locked-rotor time rating of the protected motor, and (3) provide for shutdown and manual restart if the motor-running condition is not reached.
- 8. *Fuses Inserted in Conductors.*** When fuses are used for motor-running protection, a fuse shall be inserted in each ungrounded conductor. A fuse shall also be inserted in the grounded conductor if the supply system is three-wire, three-phase, ac with one conductor grounded.
- 9. *Devices Other Than Fuses Inserted in Conductors.*** If devices other than fuses are used for motor-running overload protection, Table 41 of Div. 12 shall govern the minimum allowable number and location of overload units such as trip coils or relays.
- 10. *Number of Conductors Opened by Overload Device.*** Motor overload devices other than fuses or thermal protectors shall simultaneously open a sufficient number of ungrounded conductors to interrupt current flow to the motor.
- 11. *Motor Controller as Running Overload Protection.*** A motor controller shall also be permitted to serve as the overload device if the number of overload units complies with Par. 9 and if these units are operative in both the starting and the running positions in the case of a dc motor and in the running position in the case of an ac motor.
- 12. *Overload Relays.*** Overload relays and other devices for motor-overload protection that are not capable of opening short circuits or ground shall be protected by fuses, circuit breakers with ratings or settings in accordance with Sec. 373, or a motor short-circuit protector, unless approved for group installation, and marked to indicate the maximum size of fuse or inverse-time circuit breaker by which they must be protected.

13. Automatic Restarting. A motor-overload device that can restart a motor automatically after overload tripping shall not be installed unless approved for use with the motor it protects. A motor overload device that can restart a motor automatically after overload tripping shall not be installed so that its automatic restarting can result in injury to persons.

381. Application of fuses for motor-overload protection. If regular fuses are used for the overload protection of a motor, they must be shunted during the starting period, since a regular fuse having a rating of 125 percent of the motor full-load current would be blown by the starting current. Many cases of dc motor and some wound-rotor-induction-motor installations will be an exception to this rule. Aside from these exceptions it is not common practice to use regular fuses for the overload protection of motors. Time-delay fuses can sometimes be satisfactorily employed for the overload protection of motors, since ones rated at 125 percent of the motor full-load current will not be blown by the starting current for ordinary conditions of motor service. In fact, the manufacturers of these fuses recommend that for ordinary service fuses of a smaller rating than 125 percent of the motor full-load current be employed. Typical heavy-service conditions are:

1. Motors slightly overloaded
2. Motors with severe starting conditions, such as large fans, compressors, etc.
3. Motors which are started frequently or reversed quickly
4. Motors which have the protective time-delay fuses located in places where high ambient temperatures prevail

Even time-delay fuses may not be satisfactory unless they are shunted during the starting period, because the 125 percent value cannot be exceeded and available ratings of fuses may not permit selection close to but not exceeding 125 percent.

Direct-current motors under ordinary conditions of service will not require a starting current of such value that it would blow regular fuses rated at 125 percent of the motor full-load current. Standard manual starters for dc motors are equipped with a starting resistance of a value which will limit the starting current on the first step to 150 percent of the motor full-load current. This current for the normal duration of the starting period would not blow a fuse rated at 125 percent of the full-load current. For ordinary conditions of service, therefore, regular fuses can often be used for the protection of dc motors. In many cases what has been said for dc motors will hold true for wound-rotor induction motors.

382. Thermally protected motors are equipped with built-in overload protection mounted directly in the motor. The built-in protector usually consists of a thermostat which when heated above a certain temperature opens two small contacts within the enclosing case of the thermostat. The thermostat is mounted on the windings or the stator iron of a motor. The contacts may open the motor circuit directly. On three-phase motors, the thermostat may be connected to open the center point of a Y-connected motor winding. When the thermostat does not directly open the motor circuit, the contacts are provided with leads so they may be connected in a control circuit in a manner that will cause the controller to open the motor circuit or give a warning signal when the thermostat operates because of overheating of the motor (see Fig. 7.189).

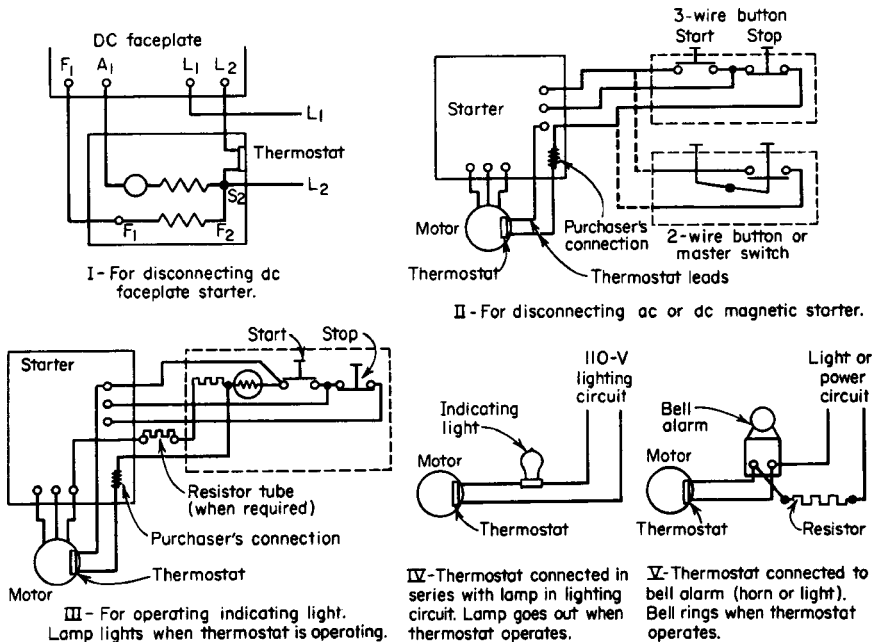


FIGURE 7.189 Connections for thermostats of Thermoguard motors. [Westinghouse Electric Corp.]

The thermostat type of thermal protector employs a bimetallic element which warps on a temperature increase, causing the contact to open. A thermal protector may also consist of PTC thermistors, one in each phase and connected in series for three-phase motors (Fig. 7.190).

At normal winding temperatures, the resistance of the PTC thermistor is low, and it remains virtually constant up to the critical temperature. Beyond this point, a small increase in temperature greatly increases the resistance. When the temperature of any of the PTC thermistors transgresses the critical or switching temperature range, the circuit operates to give a warning or to disconnect the power. When cooling occurs, the circuit returns to normal resistance and the motor can be restarted. Either manual or automatic reset can be used.

On the thermally protected motor designed for warning only, a neon-glow lamp may be mounted on the conduit box for visual warning (see Fig. 7.191, I). This lamp can also be supplied for remote mounting (if specified) for installations in which the motor conduit box would not be visible.

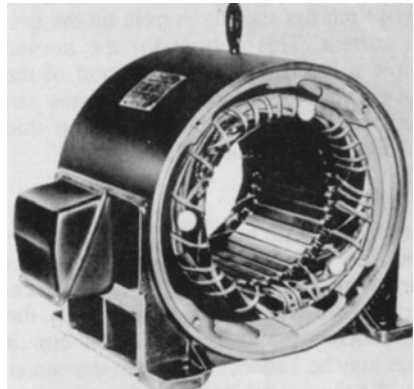


FIGURE 7.190 Method of locating PTC thermistors for the protection of a three-phase motor. [Westinghouse Electric Corp.]

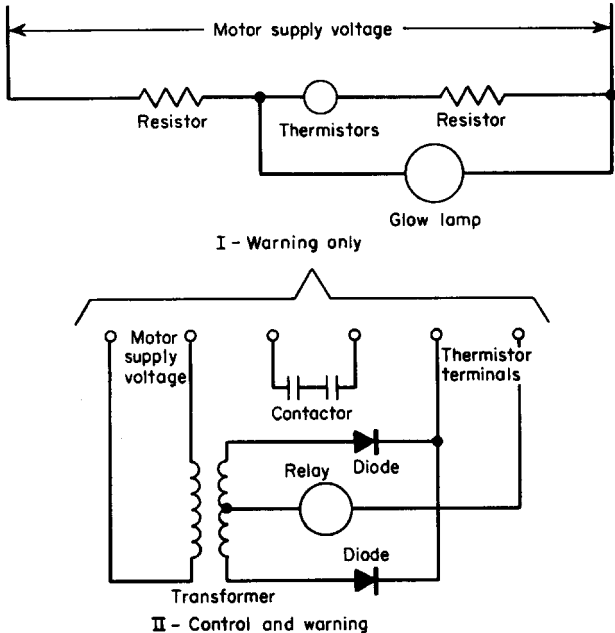


FIGURE 7.191 Basic circuits for Guardistor thermally protected motors.
[Westinghouse Electric Corp.]

383. Motor switches. Each motor with its controller must be provided with some form of approved manual disconnecting means, as at S_M in Figs. 7.187 and 7.188. This disconnecting means, when in the open position, must disconnect both the controller and the motor from all ungrounded supply wires, and all poles must operate simultaneously. To qualify as a disconnecting means in this part of the code, the disconnect must not be capable of reclosing automatically. This rule prevents ordinary time clocks from qualifying as motor-circuit disconnects. The switch is also permitted to open a permanently grounded supply wire provided it is so designed that the pole opening the grounded wire cannot be opened without simultaneously opening all supply wires. It must be a type which will plainly indicate whether it is in the open or the closed position. It must be a listed device and may consist of a manually operated air-break switch, a manually operated circuit breaker, a molded case switch (nonautomatic circuit interrupter), or a manually operated oil switch. The oil switch or circuit breaker may be equipped for electrical operation in addition to the hand mechanism. More than one switch may be used in series, as at S_B and S_M in Fig. 7.187, but at least one of the switches must be readily accessible.

For motors rated over 600 V, the ultimate-trip current of overcurrent (overload) relays or other motor protective devices used shall not exceed 115 percent of the controller's continuous current rating. Where the motor branch-circuit disconnecting means is separate from the controller, the disconnecting means current rating shall not be less than the ultimate trip setting of the overcurrent relays in the circuit. See Sec. 385.

No additional switch is required with most types of manual across-the-line starters, since their switch acts as the disconnecting means, although there are rating and location limitations covered in item 9. All magnetic types of starters and controllers must be provided with a switch ahead of the starter and within sight of it. All autotransformer starters require a separate disconnecting switch ahead of the starter.

Every switch in the motor circuit between the point of attachment to the feeder and the point of connection to the motor must be a listed device and be a motor-circuit switch, rated in horsepower, a circuit breaker or a molded-case switch except under the following conditions:

1. For stationary motors of $\frac{1}{8}$ hp or less, the branch-circuit overcurrent device is permitted to serve as the disconnecting means.
2. For stationary motors of 2 hp or less operating at not more than 300 V, a general-use switch having an ampere rating of at least twice the full-load motor current rating is permitted to be used. On ac circuits general-use snap switches suitable only for use on ac (not general-use ac, dc snap switches) are permitted to be used to disconnect a motor having a full-load current rating not exceeding 80 percent of the ampere rating of the switch. A listed manual motor controller is also permitted provided its horsepower rating is not less than the motor and it is marked "Suitable as motor disconnect." See item 9 below for coverage of and additional limitations for these disconnects where the motor exceeds 2 hp.
3. A general-use switch is permitted to be used for motors of a size over 2 hp but not larger than 100 hp which are equipped with a compensator starter, provided that all the following provisions are complied with:
 - a. The motor drives a generator provided with overload protection.
 - b. The controller is capable of interrupting the stalled-rotor current and is provided with a no-voltage release and with running overload protection not exceeding 125 percent of the motor full-load current rating.
 - c. Separate fuses or an inverse-time circuit breaker, rated or set at not more than 150 percent of the motor rated current, is provided in the branch circuit.
4. For stationary motors that are rated at more than 40 hp, dc, or 100 hp, ac, the disconnecting means is permitted to be a general-use switch, or an isolating switch plainly marked "Do not operate under load."
5. For cord- and plug-connected motors, a horsepower-rated attachment plug and receptacle having ratings no less than the motor ratings are permitted to serve as the disconnecting means. Horsepower-rated plugs and receptacles are not required for cord- and plug-connected appliances or a portable motor rated $\frac{1}{3}$ hp or less.
6. A general-use switch is permitted to serve as the disconnecting means for a torque motor.
7. An instantaneous trip circuit breaker that is part of a listed combination motor controller shall be permitted to serve as a disconnecting means.
8. A listed self-protected combination controller is permitted to serve as a disconnecting means.
9. Manual motor controllers are controllers first, and disconnecting means second. They do not meet all the internal spacing requirements of conventional switches and circuit breakers, and therefore there are limitations on their use as disconnecting means. A listed manual motor controller additionally marked "Suitable as motor disconnect" is permitted to serve as a disconnecting means provided it is located after the final branch-circuit and ground-fault protective device. Note that one of these manual motor controllers is also permitted on the line side of electronic-style fuses protecting a solid-state motor controller system, however, where this is the case the fuses become classified as supplementary overcurrent protective devices and one of the other conventional overcurrent protective devices must be installed on the line side of the manual motor controller.
10. The final disconnecting means in this group is a listed system for system isolation, which must be arranged on the load side of the overcurrent protective device and any disconnecting means required for that overcurrent device. These are extremely specialized

listed systems for very complicated industrial processes that use monitored controls, often at multiple locations, which allow for safe access, often from multiple locations, to large continuous process machinery. The description for these disconnecting systems that is used in *NFPA 79, Electrical Standard for Industrial Machinery* is far more enlightening, namely, “redundantly monitored, remotely operated contactor isolating system that incorporates control lockout provisions and is listed for disconnection purposes.”

A motor-circuit switch is intended for use in a motor branch circuit and is rated in horsepower. It must be capable of interrupting the maximum operating overload current of a motor of the same horsepower as the switch at the rated voltage. It also must have a continuous rating of at least 115 percent of the full-load current of the motor. If a fused switch is used, it must be large enough to accommodate the size of fuses employed.

If the motor switch is used for shutting down the motor, it must be located as close as possible to the motor and its driven machinery and in the most accessible location for the operator. One switch may be employed to serve the double purpose of motor- and branch-circuit switch as shown at S_M in III of Fig. 7.187. There are specific code limitations on how far from a motor or the associated controller a disconnect is permitted to be. The first concept, addressed in “a” below, is that usually both the controller disconnect and the motor disconnect must be within sight of the loads they disconnect. Although similar, the rules differ between controller disconnects (covered in “b” below) and motor disconnects (covered in “c” below).

- a. *“In sight from” requirements.* The NEC defines “in sight from” as being visible and not over 15 m (50 ft) from the specified location. If you can see one component from the other but they are more than 15 m (50 ft) apart, they are not “in sight from” each other. This concept, which originated in the NEC motor article, is now formally defined in NEC Article 100 for use throughout the NEC.
- b. *Controller disconnects.* An individual motor disconnecting means must be in sight from each motor controller. The three exceptions to this rule are not commonly used. Medium-voltage (over 600V) controllers can have disconnects that are out of sight if the disconnects can be locked open and a warning sign is posted on the controller giving the location of the remote disconnecting means. A single disconnect can be installed for a group of controllers operating continuous process machinery, provided no controller ends up out of sight of the disconnect, and both the disconnect and all the controllers under it must be within sight of the driven machinery. Note that this last exception waives only the individual disconnect rule, while reinforcing the in-sight requirement. The third exception allows the disconnect to be out of sight of a valve actuator motor assembly containing the controller if an in-sight location would introduce additional hazards. This situation mirrors comparable language that applies to the motor disconnect, covered in more detail in “c” below. When this exception is used, the valve motor and controller assembly must have the disconnect location marked on the assembly.
- c. *Motor disconnects.* A disconnect is required within sight of the motor and its driven machinery. The controller disconnect is permitted to serve for this purpose if it meets the same location requirements. There is an exception that allows the in-sight disconnect to be omitted if the disconnecting means for the controller can be individually locked in the open position; however, that exception is now limited to (1) industrial occupancies with written safety procedures that ensure that only qualified persons will service the motor, or (2) other installations if the additional disconnect would introduce additional hazards or would be impracticable. For example, it would be plainly impracticable to place a disconnect 15 m (50 ft) down a well shaft to be “in sight” (not over 15 m [50 ft] distant) from a submersible pump motor 30 m (100 ft)

down the same shaft. Variable frequency drives should not have the motor disconnected unless the drive itself is first disconnected, and multi-motor equipment may cause hazards unless a coordinated stop is arranged. Large motors (over 100 hp) only need isolation switches anyway, so their disconnects can be remote, and additional disconnects in hazardous (classified) locations only exacerbate the explosion hazards. For many common residential, commercial, and farm applications, however, there must be an additional disconnecting means located within sight of the motor regardless of the lockability of the controller disconnect.

384. Group switching. Under any one of the following conditions, the National Electrical Code rules will allow a single switch to be provided for a group of motors if the motors are rated at not more than 600 V:

1. Where a number of motors drive several parts of a single machine or piece of apparatus, such as metalworking and woodworking machines, cranes, and hoists
2. Where a group of motors is under the protection of one set of overcurrent devices as permitted by the Code (see Sec. 380)
3. Where a group of motors is in a single room within sight of the location of the disconnecting means

The disconnecting means shall have a horsepower rating not less than is required for a single motor, the rating of which equals the sum of the horsepower or full-load and locked-rotor currents, whichever results in the largest horsepower rating, of all the motors of the group. See Tables 7 through 10 and Tables 44 and 45 of Div. 12 for full-load and locked-rotor currents and equivalent horsepower ratings.

385. Branch-circuit short-circuit and ground-fault protection. The wires of motor branch circuits must be protected against short circuits and ground faults by a protective device located at the point where the branch-circuit wires are connected to the feeder or main, as at location P_2 in Fig. 7.187. National Electrical Code rules, however, allow the size of these branch-circuit protective devices to be considerably greater than the allowable ampacity of the wires. This provision is for the purpose of permitting the passage of the starting current without the employment of excessively large conductors.

With this practice the motor-overload device will protect against overloads of moderate severity, and the branch-circuit protective device will protect against short circuits and ground faults. The recommended maximum rating of fuses and setting of circuit breakers for motor branch circuits supplying an individual motor are given in Tables 42 and 43 of Div. 12.

The National Electrical Manufacturers Association has adopted a standard of identifying code letters that may be marked by the manufacturers on motor nameplates to indicate the motor kilovolt-ampere input with a locked rotor. These code letters with their classification are given in Table 42 of Div. 12. In determining the starting current to employ for circuit calculations, use values from Table 43 of Div. 12.

Although the branch-circuit short-circuit and ground-fault protective device must pass the starting current of the motor, the rating of the protective device need not be as great as the maximum value of the starting current of the motor. Owing to the time-lag characteristics of fuses and inverse-time circuit breakers, the starting current, which lasts for only a short time, will not rupture fuses or operate inverse-time circuit breakers of a considerably smaller rating than the maximum value of the starting current. The percentage of the maximum starting current that fuses must be rated for or inverse-time circuit breakers be set for, so that the starting current will not open the circuit, depends upon the frequency and duration

of the starting periods. Under ordinary starting conditions, fuses rated or inverse-time circuit breakers set at from 50 to 67 percent of the maximum starting current will allow the passage of the starting current. See Secs. 373 and 374 for maximum ratings or settings of short-circuit and ground-fault protective devices for motors rated 600 V or less.

Either fuses or circuit breakers may be employed for the protection of motor branch circuits for motors rated at not more than 600 V. When circuit breakers are used, they must have a continuous current rating of not less than 115 percent of the full-load current rating of the motor.

It is often not convenient or practicable to locate the branch-circuit short-circuit and ground-fault protective device directly at the point where the branch-circuit wires are connected to the main. In such cases, the size of the branch-circuit wires between the feeder and the branch-circuit protective device must be the same as that of the mains, unless the length of these wires is not greater than 7.5 m (25 ft). When the length of the branch-circuit wires between the main and the branch-circuit protective device is not greater than 25 ft, Code rules allow the size of these wires to be such that they have an ampacity not less than one-third of the ampacity of the mains (see Fig. 7.188) if they are protected against physical damage.

Each motor and motor branch circuit and feeder of more than 600 V shall be protected by devices coordinated to interrupt automatically the motor-running overcurrent (overload) and fault currents in the motor, the motor-circuit wiring, and the motor controller.

1. *Motor-overload protection.* This protection can consist of one or more thermal protectors integral with the motor or external current-sensing devices, or both. The operation of the overload interrupting device must simultaneously disconnect all ungrounded conductors and should not automatically reset so as to restart the motor after reset unless such automatic restarting cannot be dangerous. The rating of the controller and disconnect switch must be coordinated with the trip current of the overload device.
2. *Fault-current protection.* Protection against fault currents can be obtained by one of the following means:
 - a. A circuit breaker of suitable type and rating so arranged that it can be serviced without hazard. It must simultaneously disconnect all ungrounded conductors and be able to sense the fault current by integral or external sensing elements.
 - b. Fuses of a suitable type and rating in each ungrounded conductor. Fuses shall be used with suitable disconnecting means, or they shall be of a type that can also serve as the disconnecting means. They shall be so arranged that they cannot be serviced while they are energized.

Differential protection can be employed to provide the protection for both items 1 and 2. A differential protective system is a combination of two or more sets of current transformers and a relay or relays energized from their interconnected secondaries.

The primaries of the current transformers are connected on both sides of the equipment to be protected, both ends of the motor phase windings being brought out for this purpose. All the apparatus and circuits included between the sets of current transformer primaries constitute the protected zone. The current transformer secondaries and the relay elements are so interconnected that the relay elements respond only to a predetermined difference between the currents entering and leaving the protected zone. When actuated, the relay or relays serve to trip the branch-circuit breaker, thus disconnecting the motor, the control apparatus in the motor circuit, and the branch-circuit conductors from the source of power and, in the case of a synchronous motor, deenergizing its field circuit.

386. Branch-circuit switches. National Electrical Code rules do not require a switch to be located on the line side of the short-circuit and ground-fault protective device, as at S_B in Fig. 7.187, unless no switch is located as at S_M in Fig. 7.187, I. When no switch

is located at S_M , a switch must be located at S_B to serve as a motor switch (see Sec. 383). If a circuit breaker is employed for branch-circuit short-circuit and ground-fault protection, it will serve as both a switch and a protective device. Although not required, a branch-circuit switch is very convenient, providing a means of disconnecting the entire branch circuit from the supply. It is recommended that a branch-circuit switch be provided on all circuits operating at a voltage greater than 230 V unless a safety-fuse type of panel is used (see Sec. 86, Div. 4). The branch-circuit switch must have fuse clips large enough to accommodate the branch-circuit fuses, as required by Sec. 385 and Table 43 of Div. 12.

If a branch-circuit switch is used, it must comply with the requirements for a motor switch. Refer to Sec. 383.

387. Size of wire for motor branch circuits. The wires of a branch circuit supplying a single continuous-duty motor must have an ampacity of at least 125 percent of the full-load rated current of the motor. The size of the wires of a motor branch circuit supplying a single motor in short-time-duty service may be different from those for a continuous-duty motor. In most cases, the ampacity of the wires need not be greater than the percentages of the full-load current of the motor given in Table 12 of Div. 12.

The wires between the slip rings and the controller of a wound-rotor induction motor must have an ampacity of at least 125 percent of the full-load secondary current of the motor for continuous-duty motors. For other than continuous-duty motors, the ampacity of the wires must be not less than the percentages of full-load secondary currents as given in Table 12 of Div. 12. If the secondary resistor is separate from the controller, the wires between the secondary controller and the resistance of a wound-rotor induction motor must have an ampacity which is not less than the percentages of the full-load secondary current of the motor given in Table 13 of Div. 12.

The wires of a branch circuit supplying several motors but no other equipment except that directly associated with the motors must have an ampacity of not less than 125 percent of the full-load current rating of the largest motor (highest full-load current rating) plus the sum of the full-load current ratings of the rest of the motors. The more usual applications of multimotor arrangements involve motor feeders supplying multiple branch-circuits. These wires are sized as covered in Sec. 54 of Div. 3 and Sec. 389.

For the size of branch circuit tap conductors, refer to Secs. 377 and 378.

388. Remote-control circuits. Control circuits shall be so arranged that they will be disconnected from all sources of supply when the disconnecting means is in the open position. The disconnecting means is permitted to consist of two separate devices, one of which disconnects the motor and the controller from the source or sources of power supply for the motor, and the other the control circuit from its power supply. Where separate devices are used, they shall be located immediately adjacent to one another, although the National Electrical Code provides exceptions to this rule if more than 12 motor control-circuit conductors must be disconnected and it would be unsafe to open control-circuit conductors because of the nature of the controlled machine or process.

If a transformer or other device is used to obtain a reduced voltage for the control circuit and is located in the controller, such a transformer or other device shall be connected to the load side of the disconnecting means for the control circuit.

The conductors of these control circuits must be protected against overcurrent at their ampacities (7 A for 18 AWG, 10 A for 16 AWG).

1. If the conductors do not extend outside the control-equipment enclosure, they are permitted to be protected by the motor branch-circuit short-circuit and ground-fault protective

device, provided this device is rated at not more than 400 percent of the 60°C ampacity given in Table 19 of Div. 12 of the control-circuit conductors 8 AWG and larger, and at not more than 25 A for 18 AWG, 40 A for 16 AWG, 100A for 14 AWG, 120A for 12 AWG, and 160A for 10 AWG.

2. Conductors which extend outside the control-equipment enclosure and are No. 14 or larger are permitted to be protected by the motor branch-circuit short-circuit and ground-fault protective device if this device is rated at not more than 300 percent of the 60°C ampacity given in Table 18 of Div. 12 of the control-circuit conductors, with an allowance for 45A protection for 14 AWG, 60A for 12 AWG, and 90A for 10 AWG.
3. Except as indicated in item 4, when the conductors are in the secondary of a single-phase control-circuit transformer having only a two-wire (single-voltage) secondary, they are permitted to be protected in the primary (supply) side of the transformer by protective devices suitable to protect the transformer if the primary protection does not exceed the ampacity of the secondary conductors or the values given in items 1 and 2 when the value of primary protection is multiplied by the primary-to-secondary transformer ratio.
4. Where the conductors are in the secondary of a control transformer and the conditions comply with the requirements of Article 725 of the NEC for a Class 1 power-limited circuit or a Class 2 or Class 3 remote-control circuit, the protection provisions set forth in Article 725 supersede these requirements.
5. If the opening of the control circuit would create a hazard, as, for example, in the control circuit of fire pump motors, etc., the branch-circuit short-circuit and ground-fault protective device for the motor is sufficient protection and an additional device need not be installed.

389. Size of motor feeder or mains. For the determination of the size of motor mains or feeders, refer to Div. 3, particularly Sec. 54. In addition to that information, note that duty cycle also plays a role in the calculations. If a motor is operating under other than continuous duty cycle, as covered in Table 12 of Div. 12, the largest motor used to enter the initial calculation may not be the largest motor on the job. For example, suppose a feeder will supply both a 15 hp and a 10 hp 460-V continuous-rated motors. The rating of the 15 hp motor (21 A) has a full-load current from Div. 12, Table 10 of 14 A, and this would usually be the largest motor for calculation purposes and it would immediately have the 125 percent factor added, bringing its contribution to the feeder load to 26 A. However, if the smaller motor were used for varying duty it must be taken at 200 percent, or 28 A, and it becomes the largest motor for calculation purposes. Add the other motors at full load ratings from the tables, as modified for duty-cycle service accordingly.

390. Overload protection of motor feeders or mains. The size of the protective equipment for motor feeders or mains is determined from the so-called starting current of the circuit, as explained in Sec. 54 of Div. 3. Fuses or circuit breakers can be used for the overload protection of motor feeders or mains. The feeder short-circuit and ground-fault protection calculation starts with the largest branch-circuit protective device setting determined under Sec. 373, and then adds the full-load currents of the other motor branch circuits determined by motor horsepower from Tables 7 to 10 of Div. 12. However, if any motor short-circuit protectors or instantaneous-trip circuit breakers are being used, for calculation purposes they must be replaced using the same type of protective device as is being

used for feeder protection. This assures that the feeder protection is not oversized. If there are other (non-motor) loads, they are added to the total calculation.

If the feeder consists of the busbars in a motor control center, then the overall load represented by all the connected circuits must not exceed the rating of the motor control center, but the overcurrent protection for the motor control center must not exceed the rating of the common power bus, even if a conventional motor feeder calculation would otherwise allow a higher rating or setting of the overcurrent device.

391. Motor-wiring data for locked-rotor current and standard switch sizes are given in Tables 44 to 46 of Div. 12.

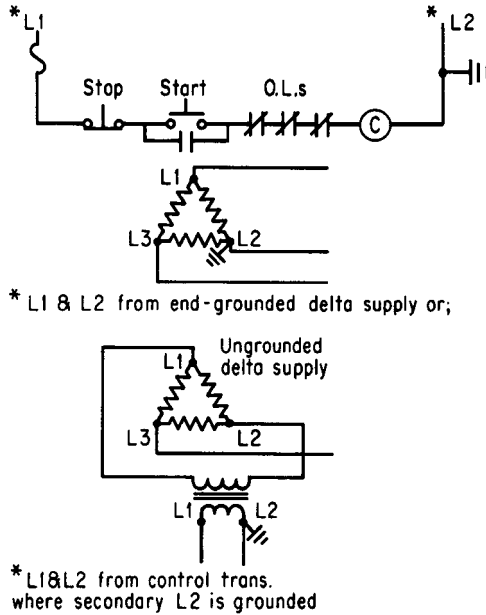
392. Protection of live parts. The National Electrical Code requires that live parts shall be protected in a manner judged adequate to the hazard involved. The rules state:

1. *Where required.* Exposed live parts of motor and controllers operating at 50 V or more between terminals, except for stationary motors having commutators, collectors, and brush rigging located inside motor end brackets and not connected conductively to supply circuits operating at more than 150 V to ground, shall be guarded against accidental contact by enclosure, or by location as follows:
 - a. By installation in a room or enclosure accessible only to qualified persons
 - b. By installation on a suitable balcony, gallery, or platform so elevated and arranged as to exclude unqualified persons
 - c. By elevation 2.5 m (8 ft) or more above the floor
2. *Guards for attendants.* If the live parts of motors or controllers operating at more than 150 V to ground are guarded against accidental contact only by location as specified in Par. 1 and if adjustment or other attendance may be necessary during the operation of the apparatus, suitable insulating mats or platforms shall be provided so that the attendant cannot readily touch live parts without standing on the mats or platforms.

CONTROL CIRCUITS

393. Electric control circuits constitute a broad subject, and the reader is urged to refer to special books devoted to this important phase of motor circuitry. Such textbooks as the *Motor Control Electronics Handbook* by Richard Valentine, published by McGraw-Hill, provide an excellent insight on how to understand, select, and design control circuits.

394. Arrangement of control wiring in grounded circuits. It is a requirement of the National Electrical Code that if one side of a control circuit is *intentionally* grounded, the control circuit shall be so arranged that an accidental ground in the control circuit remote from the motor controller will not *start* the motor nor bypass manually operated shutdown devices or automatic safety shutdown devices. Figure 7.192 shows two methods that satisfy this code rule. The elementary wiring diagram at the top of Fig. 7.192 shows the arrangement of a START-STOP pushbutton connected to the holding coil of a magnetic starter. Note that all control devices are connected to the *L1* side of coil *C* and that the other side is connected to the grounded circuit conductor *L2*. Note that this rule only applies to control circuits that leave to controller enclosure. It is still permitted (and usually done) to connect



When one side of the control circuit is grounded circuit shall be so arranged that an accidental gr. in remote-control devices will not start motor. Drawing shows acceptable arrangements

FIGURE 7.192 Arrangement of control wiring in grounded circuits. [Electrical Construction and Maintenance]

the running overload relays on the grounded side of the contactor. Referring to the upper portion of Fig. 7.192, the three normally closed overload relays could be connected to the right of the contactor holding coil unless the overloads were in a separate enclosure.

The L2 conductor could be the grounded conductor of an end-grounded three-phase delta supply or the grounded conductor of the secondary winding of a control transformer.

395. Control circuits from ungrounded systems. It is significant that the Code rule described in Sec. 394 applies only to grounded-type control circuits and is concerned only with preventing a motor from being accidentally started. In ungrounded three-phase 230- or 460-V three-wire systems, there is always a possibility of one or more accidental grounds occurring in a control circuit connected to such systems. If two grounds occur in the same control-circuit conductor at certain critical points, a motor could accidentally start, or if a second ground develops after a motor has been started, it is possible that the motor will not stop after the stop button is pressed. There are two ways to prevent this. The first method is illustrated in Fig. 7.192, in which a control transformer provides a grounded secondary and the control circuit is wired as shown.

The second method applies when the control circuit is taken directly from an ungrounded supply. The arrangement illustrated in Fig. 7.193 utilizes double-pole START and STOP buttons wired with one pole of each button on opposite sides of coil S. With this arrangement one or more accidental ground will not start the motor; nor will a ground prevent the motor from being stopped after the motor is in operation and a second ground occurs.

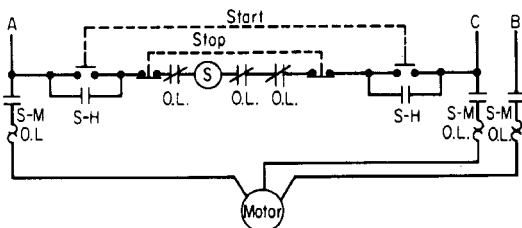


FIGURE 7.193 Ideal control circuit when the supply system or the control circuit is ungrounded. [*Electrical Construction and Maintenance*]

The arrangement shown in Fig. 7.193 is ideal when long control circuits are used because pressing the STOP button opens both lines to coil *S* and line-to-line capacitive coupling will not keep the coil energized, as it occasionally has done when standard START-STOP control circuits were used.

INDUSTRIAL CONTROL PANELS

396. New rules in the National Electrical Code **for industrial control panels** may have a significant impact on how these panels are assembled, and by whom. The NEC in Article 409 now defines all control assemblies of *two or more components* as being within the scope of these rules. To provide some context, all combination starters, with a disconnect switch and fuse block or a circuit breaker and contactor with running overload protection are included. See Figs. 7.161, 7.162, and 7.163 as but some of many examples. Most of the article provisions duplicate other NEC rules and are covered elsewhere in this division. However NEC 409.110 has marking requirements that affect anyone who installs or significantly modifies these components in the field. The short-circuit current rating developed as part of this process will govern whether the industrial control panel is allowed to be installed based on the fault current that is available at its line terminals. (See Sec. 48 in Div. 4.) Specifically, the label must include the following information:

- The name of the manufacturer, or a trademark, or other descriptive marking by which the organization responsible for the product can be identified
- The supply voltage, number of phases, frequency, and full-load current for each incoming supply circuit
- The short-circuit current rating of the panel based on one of the following:
 1. Short-circuit current rating of a listed and labeled assembly
 2. Short-circuit current rating established utilizing an approved method. (An explanatory note follows, calling out *UL 508A, Suppl. SB* as an example of an approved method.)

The short-circuit current rating marking *is not required* on an industrial control panel that contains only control circuit components and no power circuit components. This exception exists for the simple reason that *short-circuit current ratings are not assigned to components that are not in the power circuit*, and therefore if a panel is assembled with no power circuits entering, there would be no basis for determining such a rating. Such control panel would still be an industrial control panel, and must otherwise meet all the

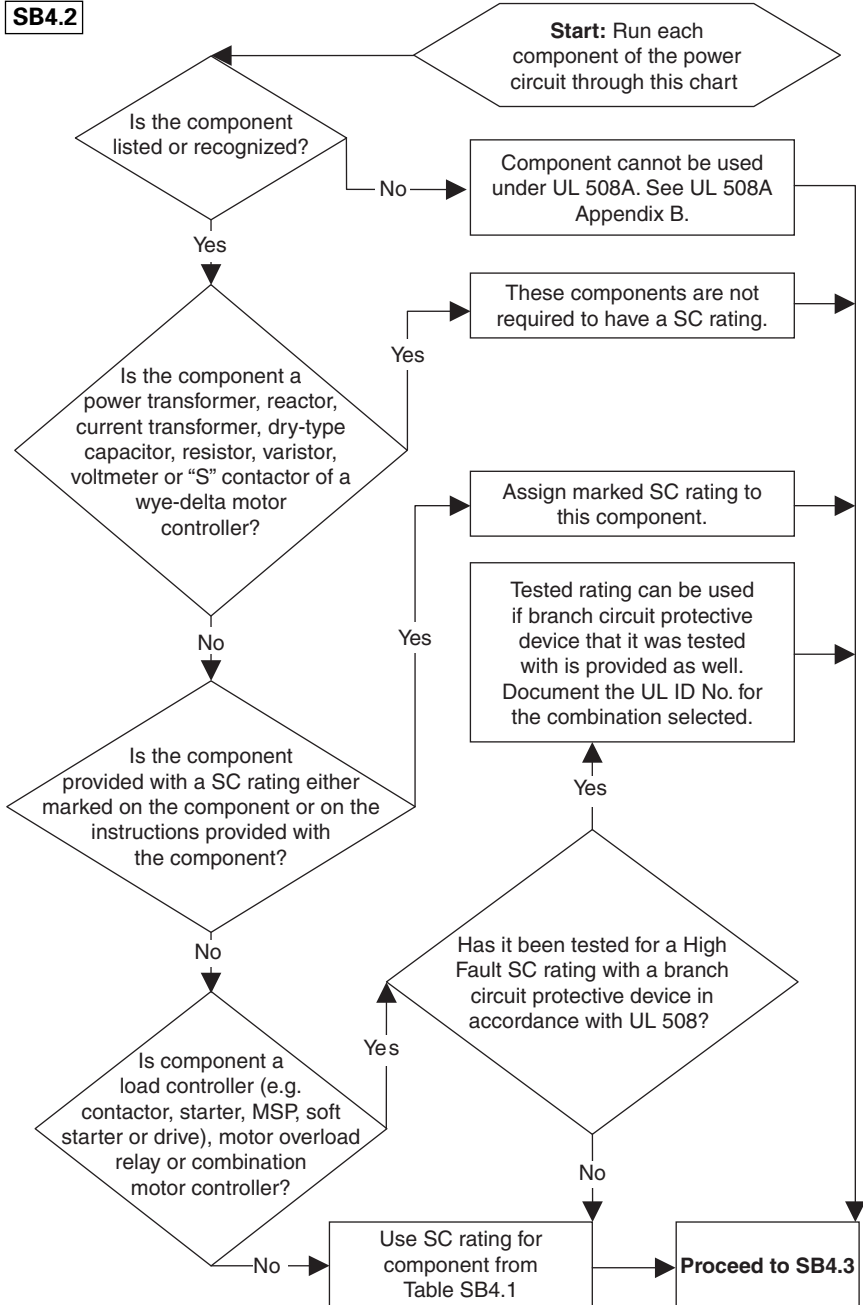
marking requirements, but the short-circuit current rating would not be included in those markings.


- If the panel will be used as service equipment, it must be evaluated and marked accordingly.
- The panel must include an electrical wiring diagram or the identification number of a separate such diagram or a designation referenced in a separate wiring diagram.
- The enclosure type number (Sec. 253) must be marked on the enclosure.


Most of these requirements are easily met, but the short-circuit current rating provisions are not.

397. Labeling must show the *short-circuit current rating*. If the product is installed as it was shipped from a major manufacturer, or by a UL listed panel assembly shop, this marking will be supplied already. When the assembly is field wired by electricians, this rating must be determined using an “approved method.” The NEC cites *UL 508A, Suppl. SB* as the example of note. This now crucial publication for this work exempts some components such as voltmeters, reactors, and power transformers from short-circuit ratings, and describes how to apply established ratings for other components. It needs to be emphasized, however, that what is included is neither obvious nor intuitive. For example, some terminal blocks are considered by their manufacturers to be control system components and *have not* been tested under high-fault exposures, but others that have a seemingly similar function were evaluated under a different product standard and *have been* so tested. On the weak-link-in-the-chain principle, using the former component instead of the latter would likely result in a dramatic (many tens of thousands of amperes) reduction in the final rating for the assembly. Review the flow chart following for a better idea as to what is involved in determining this rating. The object is to assure that all power components that could be subjected to fault current will not result in catastrophic failures.

398. The following flowcharts provide an overview as to how short-circuit current ratings are to be determined for industrial control panels, if they are assembled in the field and have no rating. Begin by making a list of all power circuit components and determine their individual short-circuit current ratings using the first flowchart (SB4.2). Then look to see if feeder level protection within the panel (if it is to be provided) mitigates the potential fault current exposure of the branch circuit components by using the second flowchart (SB4.3). Then apply the third flowchart (SB4.4) to arrive at the final rating that will go into the marking. At all times, refer to the current *UL 508A Suppl. SB* for full details. Note that most manufacturers of motor control components publish, in larger formats than in this book, their own flowcharts. The flowcharts that follow have been rearranged to accommodate a smaller page size and still be legible, but the technical content has not changed.

SB4.2

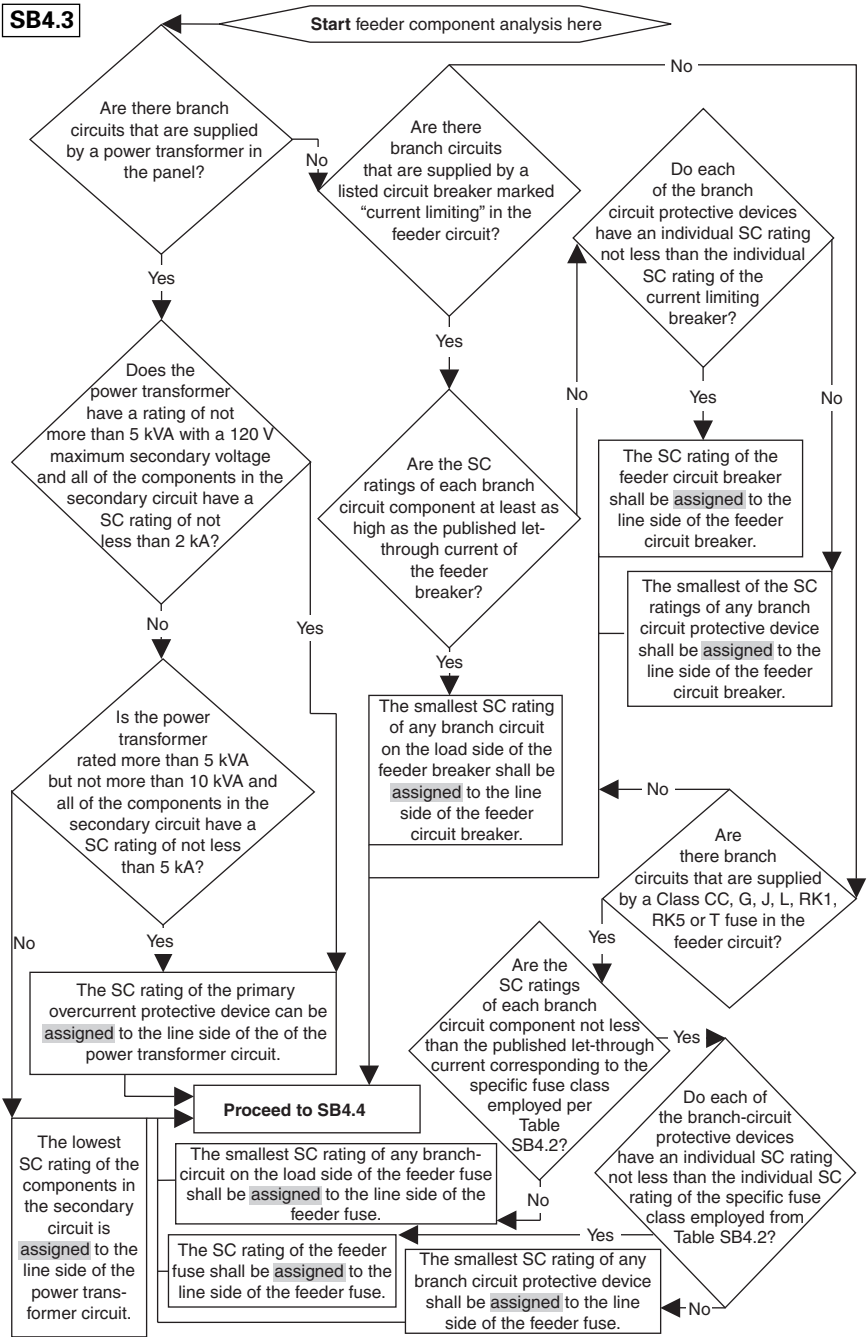

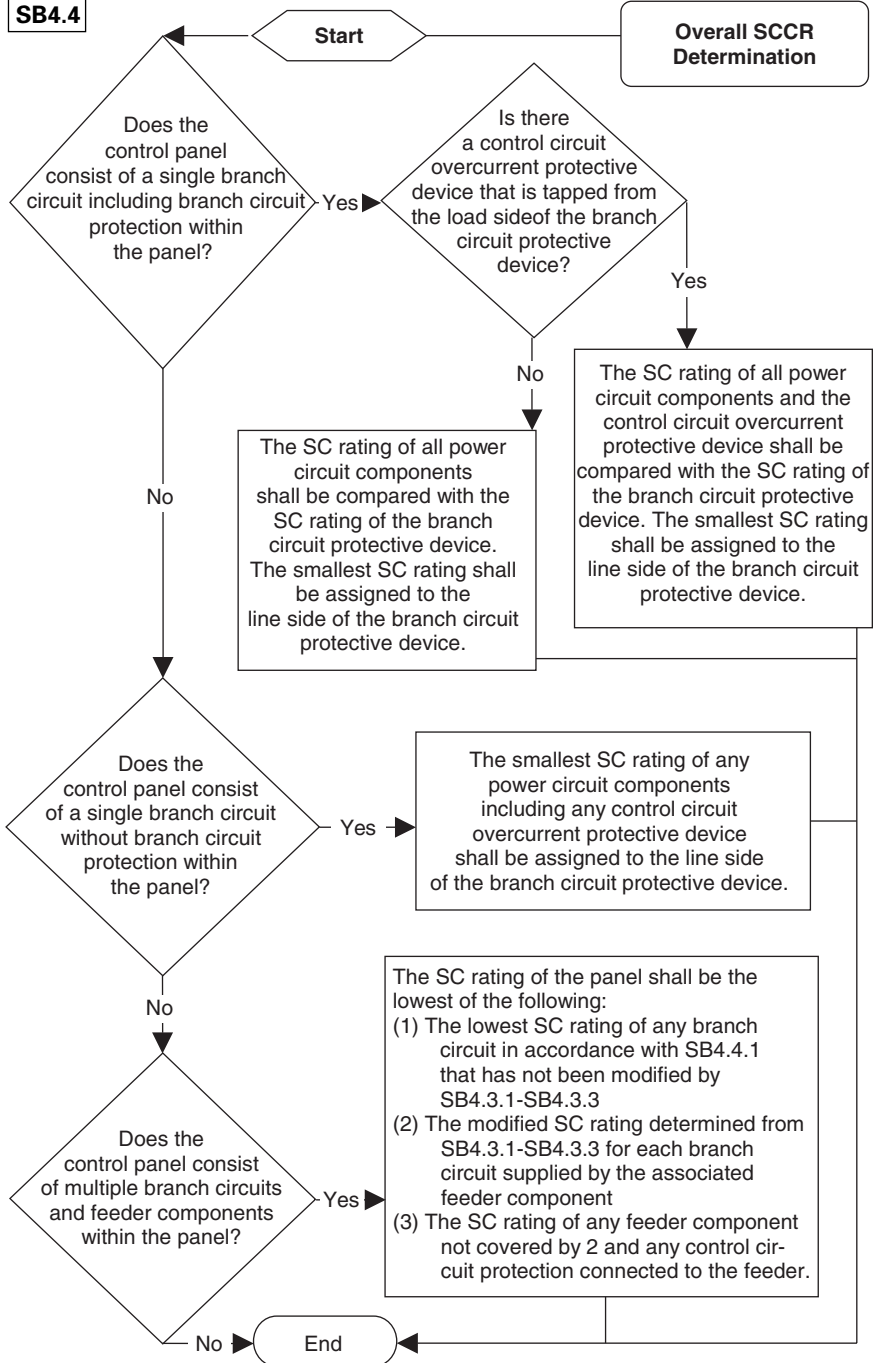SB4.4

AIR-CONDITIONING AND REFRIGERATING EQUIPMENT

399. The rules in the National Electrical Code for air-conditioning and refrigerating equipment incorporating a hermetic refrigerant motor-compressor and for the circuits supplying such equipment are somewhat different from the rules applying to conventional motors and motor circuits because of the special nature of a hermetic refrigerant motor-compressor. The following sections describe only those rules that differ from those described in Secs. 370 through 395. If a situation is not described in the following sections, the rules of Secs. 370 through 395 apply, except as noted in Sec. 397.

Types of air-conditioning and refrigerating equipment which do not incorporate a hermetic refrigerant motor-compressor and circuits which do not supply such a motor-compressor are not to be installed under the rules given in Secs. 399 through 407. Examples of such equipment are devices that employ a refrigeration compressor driven by a conventional motor, furnaces with air-conditioning evaporator coils installed, fan-coil units, remote forced-air-cooled condensers, and remote commercial refrigerators.

The National Electrical Code defines a hermetic refrigerant motor-compressor as follows:

Hermetic refrigerant motor-compressor. A combination consisting of a compressor and motor, both of which are enclosed in the same housing, with no external shaft or shaft seals, the motor operating in the refrigerant.

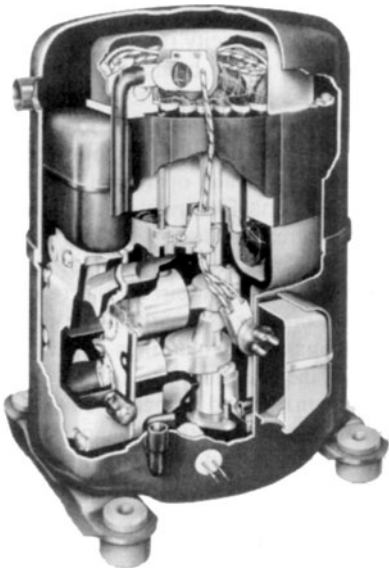


FIGURE 7.194 Cutaway of a hermetic motor-compressor. [Tecumseh Products Co.]

Because there is no motor external shaft (see Fig. 7.194), the hermetic refrigerant motor-compressor does not have a horsepower rating. The motor is rated instead by the rated-load current and the locked-rotor current. The National Electrical Code defines the rated-load current as follows:

Rated-load current. The rated-load current for a hermetic refrigerant motor-compressor is the current resulting when the motor-compressor is operated at the rated load, rated voltage, and rated frequency of the equipment it serves.

The rated-load current is established in the equipment driven by the motor-compressor, rather than being the maximum current for a given motor temperature rise, because the motor winding is cooled by the refrigerant and because the degree of cooling depends on the characteristics of the refrigerant used, its flow rate, temperature, density, etc., and these factors are determined by the equipment. Therefore, the manufacturer of the motor-compressor, not knowing all the equipment in

which the motor-compressor will be used, selects the motor-overload protection system to protect the motor and motor-circuit components and wiring at the maximum-load conditions for which the motor-compressor is intended. If the motor-compressor is used in an application in which it is effectively larger than needed for the rating conditions of the equipment, the rated-load current for the motor-compressor marked on the equipment nameplate may be significantly less than its maximum, and the motor-compressor-overload

protection system may not protect the motor-circuit wiring, motor controller, and motor-circuit switches against overheating due to overloads.

The National Electrical Code establishes limiting relationships between the maximum continuous current permitted by the motor-compressor-overload protection system and the ampacity of the motor-circuit wiring, the rating of the motor controller, motor-circuit switches, and motor-circuit short-circuit and ground-fault protective devices (see Sec. 399). When this limiting relationship is exceeded for the marked rated-load current of the motor-compressor in the equipment, an additional equipment-rating current must be marked by the equipment manufacturer. This is designated *branch-circuit selection current* and is defined in the National Electrical Code as follows:

Branch-circuit selection current. Branch-circuit selection current is the value in amperes to be used instead of the rated-load current in determining the ratings of motor branch-circuit conductors, disconnecting means, controllers, and branch-circuit short-circuit and ground-fault protective devices wherever the running overload protective device permits a sustained current greater than the specified percentage of the rated-load current. The value of branch circuit selection current will always be equal to or greater than the marked rated-load current.

A significant portion of air-conditioning and refrigerating equipment incorporating a hermetic refrigerant motor-compressor also incorporates conventional motors, such as fan and/or water-pump motors, and/or electric resistance heaters on the same circuit. The National Electrical Code requires such equipment to be marked with (1) the minimum supply-circuit conductor ampacity (usually shortened to “Min. Circuit Amp.”) and (2) the maximum rating of the branch-circuit short-circuit and ground-fault protective device. The ratings marked are to be based on the maximum concurrent loading condition, since all motors and other loads may not be operating at the same time. For example, on an air conditioner with electric resistance space heaters, the motor-compressor does not usually operate at the same time as the heaters, as it does on a heat pump. The National Electrical Code requires that the supply wires have an ampacity at least as great as the marked minimum and that the branch-circuit short-circuit and ground-fault protective device rating not exceed the marked maximum rating. If the type of branch-circuit short-circuit and ground-fault protective device (fuse or circuit breaker) is marked, then that same type of protective device must be used. On the other hand, if the label refers to “maximum overcurrent protective device rating” or equivalent wording, then the installer may choose the type of protective device to use. When these minimum and maximum markings appear, the installer need not calculate the values required for the installation.

Since the marked motor-compressor rated-load current and branch-circuit selection current (if marked) and the marked minimum supply-circuit conductor ampacity and maximum rating of the branch-circuit short-circuit and ground-fault protective device vary somewhat from one make and model of equipment to another, even though the equipment may have the same cooling or heating capacity, the installer must know the marking on the particular equipment to be installed. This information is generally available in the equipment manufacturer’s literature, so that the equipment itself need not be available before the supply circuit can be designed and partially installed. However, the equipment marking should be checked before the installation is completed. The National Electrical Code also requires that a short-circuit current-rating be developed for this equipment and that it be included on the nameplate. An exception exempts multimotor and combination-load equipment from this rating requirement, but only if it is used in one- and two-family dwellings, or if cord- and plug-connected equipment, or equipment on a branch circuit rated 60 A or less.

400. Ampacity and rating. For a hermetic refrigerant motor-compressor, the rated-load current marked on the nameplate of the equipment in which the motor-compressor is employed shall be used in determining the rating or ampacity of the disconnecting means,

the branch-circuit conductors, the controllers, the branch-circuit short-circuit and ground-fault protection, and the separate motor-overload protection. If no rated-load current is shown on the equipment nameplate, the rated-load current shown on the compressor nameplate shall be used.

Exception No. 1. Where so marked, the branch-circuit selection current shall be used instead of the rated-load current to determine the rating or ampacity of the disconnecting means, the branch-circuit conductors, the controller, and the branch-circuit short-circuit and ground-fault protection.

Exception No. 2. For cord- and plug-connected equipment the nameplate marking as explained under Par. 2 of Sec. 401.

401. Branch-circuit short-circuit and ground-fault protection. The rules of Sec. 399 generally apply except for the rating of the protective device. As noted in Sec. 399, for multimotor and combination-load air-conditioning and refrigerating equipment, the equipment nameplate is required by the National Electrical Code to specify the maximum rating of the supply-circuit short-circuit and ground-fault protective device. When this rating is marked, a calculation by the installer is not necessary, and the marked maximum rating cannot be exceeded.

- 1. Rating or Setting for an Individual Motor-Compressor.** The motor-compressor branch-circuit short-circuit and ground-fault protective device shall be capable of carrying the starting current of the motor. The required protection shall be considered as being obtained when this device has a rating or setting not exceeding 175 percent of the motor-compressor rated-load current or branch-circuit selection current, whichever is greater, provided that if the protection specified is not sufficient for the starting current of the motor, it shall be permitted to be increased but shall not exceed 225 percent of the motor rated-load current or branch-circuit selection current, whichever is greater. Note that these are not-to-exceed thresholds, and are therefore not subject to a round-up allowance. Hermetic compressor motors are designed to run somewhat overloaded in the conventional sense, because the refrigerant surrounds the motor, and therefore there is less room for error under fault conditions. For this reason, calculations are rounded down to the next lower standard size of overcurrent protective device, although they need not be reduced below 15 A.
- 2. Rating or Setting for Equipment.** The equipment branch-circuit short-circuit and ground-fault protective device shall be capable of carrying the starting current of the equipment. When the hermetic refrigerant motor-compressor is the only load on the circuit, the protection shall conform with Par. 1 above. When the equipment incorporates more than one hermetic refrigerant motor-compressor or a hermetic refrigerant motor-compressor and other motors or other loads, the equipment protection shall conform with Sec. 374 and the following:
 - a.** Where a hermetic refrigerant motor-compressor is the largest load connected to the circuit, the rating or setting of the protective device shall not exceed the value specified in Par. 1 above for the largest motor-compressor plus the sum of the rated-load current or branch-circuit selection current, whichever is greater, of the other motor-compressor or motor-compressors and the ratings of the other loads supplied.
 - b.** Where a hermetic refrigerant motor-compressor is not the largest load connected to the circuit, the rating or setting of the protective device shall not exceed a value equal to the sum of the rated-load current or branch-circuit selection current, whichever is greater, the rating or ratings for the motor-compressor or motor-compressors, and the value specified in Par. 3d of Sec. 374 for other loads supplied.

The following are exceptions to Par. 2 given earlier.

1. Equipment which will start and operate on a 15- or 20-A, 120-V or a 5-A, 208- or 240-V single-phase branch circuit shall be considered as protected by the 15-A or 20-A over-current device protecting the branch circuit, but if the maximum circuit-protective-device rating marked on the equipment is less than these values, the circuit protective device shall not exceed the value marked on the equipment nameplate.
2. The nameplate marking of cord- or plug-connected equipment rated not greater than 250 V, single-phase, such as some room air conditioners (see Sec. 407), household refrigerators and freezers, drinking-water coolers, and beverage dispensers, shall be used in determining the branch-circuit requirements, and each unit shall be considered a single motor unless the nameplate is marked otherwise.

402. Overload protection. Overload-protection provisions in the National Electrical Code for hermetic refrigerant motor-compressors and equipment employing such motor-compressors have the same purpose as overload protection for conventional motor circuits, but there are some significant differences in the rules. Some reasons for this variation are described in Sec. 396. The device that protects the refrigerant-cooled motor against overheating must do so while the motor is being cooled by the refrigerant under running conditions and also under locked-motor conditions without such refrigerant cooling. The conditions necessary to do this and also to protect the other components and wiring in the motor-compressor branch circuit commonly result in the need for both temperature- and current-sensing devices, or *system protection*. The National Electrical Code therefore treats protection of the motor-compressor and protection of the motor-compressor control apparatus and branch-circuit conductors separately, as described in Pars. 1 and 2 below.

1. **Protection of Motor-Compressor.** One of the following means shall be used:
 - a. A separate overload relay which is responsive to the motor-compressor current. This device shall be selected to trip at not more than 140 percent of the motor-compressor rated-load current.
 - b. A thermal protector integral with the motor-compressor, approved for use with the motor-compressor which it protects, on the basis that it will prevent dangerous overheating of the motor-compressor due to overload and failure to start. If the current-interrupting device is separate from the motor-compressor and if its control circuit is operated by a protective device integral with the motor-compressor, it shall be so arranged that the opening of the control circuit will result in an interruption of current to the motor-compressor.
 - c. A fuse or inverse-time circuit breaker responsive to the motor current, which shall also be permitted to serve as the branch-circuit short-circuit and ground-fault protective device. This device shall be rated at not more than 125 percent of the motor-compressor rated-load current. It shall have sufficient time delay to permit the motor-compressor to start and accelerate its load.
 - d. A protective system, furnished or specified and approved for use with the motor-compressor which it protects on the basis that it will prevent dangerous overheating of the motor-compressor due to overload and failure to start. If the current-interrupting device is separate from the motor-compressor and if its control circuit is operated by a protective device which is not integral with the current-interrupting device, it shall be so arranged that the opening of the control circuit will result in an interruption of current to the motor-compressor.
2. **Protection of Motor-Compressor Control Apparatus and Branch-Circuit Conductors.** Except for motor-compressors and equipment on 15- or 20-A branch circuits as

described in Par. 3 below, one of the following means shall be used (the device used may be the same device or system described in Par. 1):

- a.* An overload relay selected in accordance with Par. 1
- b.* A thermal protector which is applied in accordance with Par. 1 and which will not permit a continuous current in excess of 156 percent of the marked rated-load current or branch-circuit selection current
- c.* A fuse of inverse-time circuit breaker selected in accordance with Par. 1
- d.* A protective system which is in accordance with Par. 1 and which will not permit a continuous current in excess of 156 percent of the marked rated-load current or branch-circuit selection current

3. *Motor-Compressors and Equipment on 15- or 20-A Branch Circuits.* Overload protection for motor-compressors and equipment used on 15- or 20-A or 15-A, 208- or 240-V single-phase branch circuits shall be permitted as indicated in *a* and *b* below.

- a.* The motor-compressor shall be provided with overload protection selected as specified in Par. 1. Both the controller and the motor-overload protective device shall be approved for installation with the short-circuit and ground-fault protective device for the branch circuit to which the equipment is connected.
- b.* The short-circuit and ground-fault protective device protecting the branch circuit shall have sufficient time delay to permit the motor-compressor and other motors to start and accelerate their loads.
- c.* For cord- and attachment-plug-connected equipment, the rating of the attachment plug and receptacle shall not exceed 20 A at 125 V or 15 A at 250 V.

403. Disconnecting means. The rules of Secs. 383 and 386 generally apply, but the method of determining the required rating of the switch differs, and a disconnecting means must be located within sight from and be readily accessible from the air-conditioning or refrigerating equipment.

1. *Single Motor-Compressor.* A disconnecting means serving a hermetic refrigerant motor-compressor shall be selected on the basis of the nameplate rated-load current or branch-circuit selection current, whichever is greater, and locked-rotor current, respectively, of the motor-compressor as follows:

- a.* The ampere rating shall be at least 115 percent of the nameplate rated-load current or branch-circuit selection current, whichever is greater, except a listed nonfused motor circuit switch having a horsepower rating not less than the equivalent horsepower determined in accordance with *b* below shall be permitted to have an ampere rating less than 115 percent of the specified current.
- b.* To determine the equivalent horsepower in complying with the requirements of Sec. 383, select the horsepower rating from Tables 7 to 10 of Div. 12 corresponding to the rated-load current or branch-circuit selection current, whichever is greater, and also the horsepower rating from Tables 44 and 45 of Div. 12 corresponding to the locked-rotor current. If the nameplate rated-load current or the branch-circuit selection current and locked-rotor current do not correspond to the currents shown in Tables 7 to 10 or 44 and 45 of Div. 12, select the horsepower rating corresponding to the next higher value. If different horsepower ratings are obtained when applying these tables, select a horsepower rating at least equal to the larger of the values obtained.

2. *Multimotor and Combination Loads.* When one or more hermetic refrigerant motor-compressors are used together or are used in combination with other motors and/or loads such as resistance heaters and when the combined load may be simultaneous on a single disconnecting means, the rating for the combined load shall be determined as follows.

- a. Determine the horsepower rating of the disconnecting means from the summation of all currents, including resistance loads, at the rated-load condition and also at the locked-rotor condition. Consider the combined rated-load current and the combined locked-rotor current so obtained as a single motor for the purpose of this requirement as follows:
- (1) Select the full-load current equivalent to the horsepower rating of each motor, other than a hermetic refrigerant motor-compressor, from Tables 7 to 10 of Div. 12. Add these full-load currents to the motor-compressor rated-load current or currents or the branch-circuit selection current or currents, whichever is greater, and to the rating in amperes of other loads to obtain an equivalent full-load current for the combined load.
 - (2) Select the locked-rotor current equivalent to the horsepower rating of each motor, other than a hermetic refrigerant motor-compressor locked-rotor current or currents and to the rating in amperes of other loads to obtain an equivalent locked-rotor current for the combined load. When two or more motors and/or other loads cannot be started simultaneously, select appropriate combinations of locked-rotor and rated-load current or branch-circuit selection current, whichever is greater, to determine the equivalent locked-rotor current for the simultaneous combined load.

Exceptions to (1) and (2) are:

1. The rated full-load current for small shaded-pole and permanent split-capacitor fan and blower motors provided as part of multimotor equipment may be used in the calculation instead of the motor horsepower rating.
2. For small motor-compressors not having the locked-rotor current marked on the nameplate or for small motors not covered by Tables 7 to 10 of Div. 12, assume the locked-rotor current to be 6 times the rated-load current.
3. When the rated-load or locked-rotor current as determined above would indicate a disconnecting means rated in excess of 100 hp, the provisions of Par. 4 of Sec. 383 would apply.
4. For cord-connected equipment such as room air conditioners, household refrigerators and freezers, drinking-water coolers, and beverage dispensers, a separable connector or an attachment plug and receptacle are permitted to serve as the disconnecting means.
5. When part of the concurrent load is a resistance load and the disconnecting means is a switch rated in horsepower and amperes, the horsepower rating of the switch shall be not less than the combined load to the motor-compressor or motor-compressors and other motor or motors at the locked-rotor condition, and the ampere rating is permitted to be not less than this locked-rotor load plus the resistance load. This alternative calculation may permit a smaller switch than would otherwise be required, especially when the load of the resistance heaters is large compared with the motor load.

The ampere rating of the disconnecting means must be at least 115 percent of the summation of all currents at the rated-load condition determined in accordance with Par. 2a(1) above.

404. Group switching. The rules of Sec. 384 do not apply to an air-conditioning or refrigeration system incorporating a hermetic refrigerant motor-compressor. Such equipment is considered a single machine and is permitted to have a single switch for a group of motors even if the motors are remote from each other.

405. Controllers. The rules for motor controllers for hermetic refrigerant motor-compressors are generally the same as described in Sec. 379, except for the method of determining the rating.

A motor-compressor controller shall have both a continuous-duty full-load current rating and a locked-rotor current rating not less than the nameplate rated-load current or branch-circuit selection current, whichever is greater, and locked-rotor current, respectively, of the motor-compressor. If the motor controller is rated in horsepower but is without one or both of the foregoing current ratings, determine equivalent currents as follows. Use Tables 7 to 10 of Div. 12 to determine the equivalent full-load current rating and Tables 44 and 45 of Div. 12 to determine the equivalent locked-rotor current rating.

A controller serving more than one motor-compressor or a motor-compressor and other loads shall have a continuous-duty full-load current rating and a locked-rotor current rating not less than the combined load as determined in accordance with Par. 2 of Sec. 401.

406. Size of wire for branch circuits. The rules given in Sec. 387 generally apply to branch circuits supplying hermetic refrigerant motor-compressors that are permanently connected, except that the motor-compressor rating is established as described in Sec. 397. As noted in Sec. 396, for multimotor and combination-load air-conditioning and refrigerating equipment, the equipment nameplate is required by the National Electrical Code to specify the minimum supply-circuit conductor ampacity in accordance with the rules in the Code. When this rating is marked, a calculation by the installer is not necessary. For wye-start delta-run applications, the wires running to each winding must have an ampacity not less than 72 percent of the rated full-load current or 72 percent of the branch-circuit selection current, whichever is greater.

407. Provisions for room air conditioners. The National Electrical Code has special provisions for room air conditioners which are (1) rated not over 250 V ac, single-phase, and (2) which are cord- and attachment-plug-connected. The Code defines for this purpose a room air conditioner (with or without provisions for heating) as an appliance of the air-cooled window, console, or in-wall type which is installed in the conditioned room and which incorporates a hermetic refrigerant motor-compressor.

1. Room air conditioners shall be grounded.
2. A room air conditioner shall be considered a single motor unit in determining its branch-circuit requirements when all the following conditions are met:
 - a. It is cord- and attachment-plug-connected.
 - b. Its rating is not more than 40 A and 250 V, single-phase.
 - c. Total rated-load current is shown on the room-air-conditioner nameplate rather than individual motor currents.
 - d. The rating of the branch-circuit short-circuit and ground-fault protective device does not exceed the ampacity of the branch-circuit conductors or the rating of the receptacle, whichever is less.
3. The total marked rating of a cord- and attachment-plug-connected room air conditioner shall not exceed 80 percent of the rating of a branch circuit where no other loads are supplied.
4. The total marked rating of a cord- and attachment-plug-connected room air conditioner shall not exceed 50 percent of the rating of a branch circuit when lighting units or other appliances are also supplied. Where the circuitry is interlocked to prevent simultaneous operation of the room air conditioner and other outlets are supplied, a cord-and attachment plug-connected room air conditioner shall not exceed 80 percent of the branch circuit rating.

5. An attachment plug and receptacle shall be permitted to serve as the disconnecting means for a single-phase room air conditioner rated 250 V or less if (a) the manual controls on the room air conditioner are readily accessible and are located within 1.8 m (6 ft) of the floor or (b) an approved manually operable switch is installed in the readily accessible location within sight from the room air conditioner.

ENGINE- AND GAS-TURBINE GENERATORS

408. Engine-driven generators (diesel, gasoline, or gas) are the most economical and practical source of *standby power* in a wide range of applications. They are sized from a few hundred watts to several hundred kilowatts. Control is obtained manually, remotely, or automatically. Units are designed as either stationary or mobile power stations. Cooling is obtained by natural-convection fan-forced air or by circulating water.

Generator engines are generally four-cycle units having one to six cylinders, depending on size and capacity. In larger sets, ignition current is supplied by starting batteries. A typical arrangement is shown in Fig. 7.195.

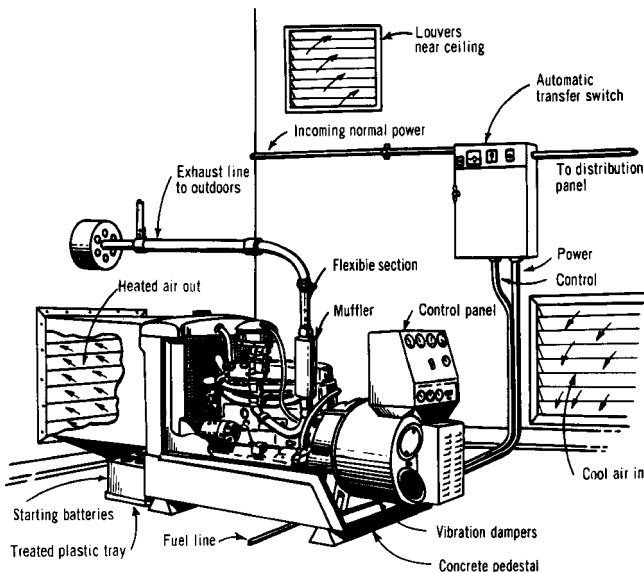


FIGURE 7.195 Typical installation of an engine-generator for a standby or emergency supply system. [*Electrical Construction and Maintenance*]

409. Location. In most instances, the power plant should be close to the normal electric service, in a place where it is warm enough to start easily. Locations where ambient temperatures may be unusually high should be avoided because inefficient cooling may result. On the other hand, in locations where temperatures fall below 50°F (10°C), special accessories, such as an electric water jacket or a manifold heater, may be needed to ensure dependable automatic starts.

410. Mounting. Smaller units, of 10 kW and less, should be installed on a concrete foundation equipped with anchor bolts. In some cases, steel-beam sections will make a satisfactory base. Such a base raises the plant off the floor for convenience in servicing and lessens the chance of accidental damage from loose objects, seepage, etc. For larger plants that are equipped with steel skids, a separate foundation may not be required.

Always allow at least 2 ft (0.6 m) of unobstructed space around the power plant on all sides. This permits room for servicing the unit. If this space is not available, position the plant so that the carburetor, distributor, governor, fuel pump, oil fill, etc., are easily accessible.

411. Battery mounting. Batteries should be mounted in a clean, dry location free from falling dirt or dust, and they should be installed on a wood base rather than on a concrete floor. Allow room for easy maintenance of the battery.

412. Exhaust piping. Exhaust pipes should be of wrought iron, cast iron, or steel. Because exhaust fumes are dangerous, care should be taken to prevent leaks in the exhaust system. The exhaust pipe should terminate outside away from doors, windows, or other openings.

413. Cooling. Ventilation openings must always be provided and located so that cool air can be brought in and forced through the engine-cooling system and directly out without recirculating.

Other important installation considerations include fuel-line and fuel-tank installation, muffler requirements, heaters, battery chargers, and automatic controls.

414. Automatic transfer switches are being used increasingly wherever continuity of light and power is needed to preserve life and to prevent accidents, theft, panic, or loss of goodwill and revenue. An automatic transfer switch is an emergency device that automatically transfers electrical loads from a normal source, usually a utility, to an emergency source, usually an engine-generator set, when the normal source fails or its voltage is substantially reduced. The transfer switch automatically retransfers the load back to the normal source when it is restored. (See Fig. 7.205.)

Construction Considerations. The automatic transfer switch consists of two major components, namely, an electrically operated, double-throw transfer switch and a control panel. The control panel provides the necessary voltage sensing, time delays, and signals for operating the transfer switch.

Automatic transfer switches of double-throw construction are used primarily for emergency and standby power generation systems rated 600 V and less. These transfer switches do not normally incorporate overcurrent protection and are designed and applied in accordance with the National Electrical Code, particularly Articles 517, 700, 701, and 702. They are available in ratings from 30 to 4000 A. For reliability, most automatic transfer switches rated above 100 A are mechanically held and electrically operated from the power source to which the load is to be transferred. To provide maximum versatility and further reliability, today's control panels utilize solid-state sensing and timing circuitry. Transfer switches used for emergency or legally-required standby circuits within the scopes of Articles 700 and 701 of the National Electrical Code must be electrically operated and mechanically held regardless of size, and they must be listed for their application.

An automatic transfer switch is usually located in the main or secondary distribution system which feeds the branch circuits. Because of its location in the system, the abilities which must be designed into the transfer switch are unique and extensive as compared with the design requirements for other electrical devices. For example, special consideration should be given to the following characteristics of an automatic transfer switch: (1) its ability to close against high inrush currents, (2) its ability to carry full-rated current continuously from either normal or emergency sources, (3) its ability to withstand fault currents, (4) its ability to interrupt at least 6 times the full-load currents, and (5) its ability to withstand the stress of two out-of-phase power sources connected to it. In addition to considering each of the above characteristics individually, it is also necessary to consider the effect each has upon the others.

In arrangements to provide protection against failure of the utility service, consideration should also be given to (1) an open circuit within the building area on the load side of the incoming service, (2) overload or fault condition, and (3) electrical or mechanical failure of the electric power distribution system within the building. It is desirable to locate transfer switches close to the load and to have their operation independent of overcurrent protection. It is often desirable to use multiple smaller transfer switches located near the load rather than one large transfer switch at the point of incoming service. As shown in Fig. 7.196, multiple transfer switches can also provide varying degrees of protection, depending upon how critical the loads are.

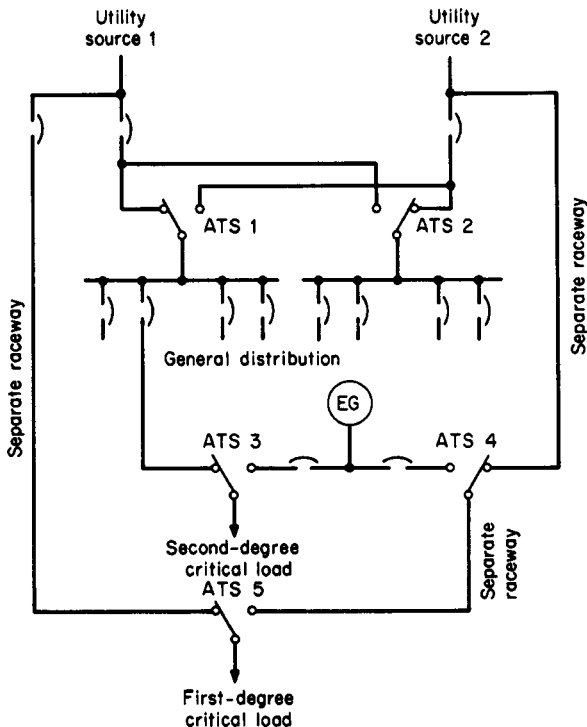


FIGURE 7.196 Two utility sources combined with an engine-generator set to provide varying degrees of emergency power. *ATS* = automatic transfer switch; *EG* = engine-generator set.

Ratings. An automatic transfer switch is unique in the electrical distribution system in that it is one of the few electrical devices that may have two unsynchronized power sources connected to it. This means that the voltages impressed on the insulation may actually be as high as 960 V on a 480-V ac system. A properly designed transfer switch provides sufficient spacings and insulation to meet these increased voltage stresses.

Domestic ac voltage ratings of automatic transfer switches are normally 120, 208, 240, 480, or 600 V, single or polyphase. Standard frequencies are 50 to 60 Hz. Automatic transfer switches can also be supplied for other voltages and frequencies when required.

Today automatic transfer switches are available in continuous-current ratings ranging from 30 through 4000 A. Typical ratings include 30, 70, 100, 150, 260, 400, 600, 800, 1000, 1200, 1600, 2000, 3000, and 4000 A.

Most transfer switches are capable of carrying 100 percent of rated current continuously at an ambient temperature of 40°C. However, some transfer switches, such as those incorporating integral overcurrent protective devices, may be limited to a continuous load current not to exceed 80 percent of the switch rating.

When selecting an automatic transfer switch, it usually is necessary only to determine the maximum continuous load current which the transfer switch must carry. Momentary inrushes, which occur when lighting or motor loads are first energized, can be ignored if the transfer switch is rated for total-system loads according to UL 1008. The automatic transfer switch should be sized equal to or greater than the calculated continuous current.

The *withstand current rating* pertains to the ability of an automatic transfer switch to withstand the magnetic and thermal stresses of high-fault currents until the fault has been cleared by an overcurrent protective device. The overcurrent protective device is usually located externally from the transfer switch, although there are some transfer switches that, for purposes of economy, do include integral overcurrent protection. To differentiate between the two, one recognized standard defines the following type designations:

Transfer switch, Type A means an automatic transfer switch that does not employ integral overcurrent devices.

Transfer switch, Type B means an automatic transfer switch that employs integral overcurrent devices.

In a Type A transfer switch, the main contacts stay closed while the system's coordinated protective devices clear the fault, whereas a Type B transfer switch depends upon trip elements to open the contacts of the transfer switch during a short-circuit fault. The latter arrangement depends upon *interruption rating*, which should not be confused with withstand rating. This discussion addresses itself to the conventional Type A transfer switch as found in most properly engineered and fault-current-coordinated applications.

To evaluate and coordinate transfer switching and overcurrent protection, a short-circuit study should be made on the system to determine the available fault-current magnitude and the X/R ratio of the circuit at each point in the distribution system where a transfer switch is to be located. This study is usually made by the system designer.

Solid Neutral on ac and dc Systems. Solid neutrals can be used with the grounding connections made as required in Sec. 250.24 of the 2008 National Electrical Code where automatic ac-to-ac transfer switches are used. Where multiple grounding creates objectionable ground current, the corrective action specified in Sec. 250.6(B) should be taken.

Section 230.95 requires ground-fault protection of equipment. Because the normal source and the emergency source are typically grounded at their locations, the multiple neutral-to-ground connections usually require some additional means or devices to assure proper ground-fault sensing by the ground-fault protection device. Additional means or devices are generally required because the normal alterations to stop objectionable current per Sec. 250.6(B) do not apply when the objectionable current is a ground-fault current. [See Sec. 250.6(C).] Rather, solutions such as an overlapping neutral transfer pole or a

conventional fourth pole are often added to the transfer switch. However, when switching the neutral conductor with a conventional fourth pole, consideration should be given to possible resulting high-voltage transients. Other solutions are isolation transformers and special ground-fault circuits.

On ac-to-dc automatic transfer switches, a solid-neutral tie between the ac and dc neutrals is not permitted where both sources of supply are exterior distribution systems. Section 250.164 regarding location of grounds for dc exterior systems clearly specifies that the dc system can be grounded only at the supply station.

Where the dc system is an interior isolated system, such as a storage battery, solid-neutral connection between the ac system neutral and the dc source is acceptable.

On an ac-to-dc automatic transfer switch where the neutral must be switched, the size of the neutral switching pole must be considered. A four-pole double-throw switch must be used where a three-phase, four wire normal source and a two-wire dc emergency source are transferred. Owing to the neutral being switched, a four-pole double-throw transfer switch would be required. In this instance, one pole of the dc emergency source would carry 3 times the current of the other poles.

Close Differential-Voltage Supervision of Normal Source. Most often the normal source is an electric utility company whose power is transmitted many miles to the point of utilization. The automatic-transfer-switch control panel continuously monitors the voltage of all phases. Because utility frequency is, for all practical purposes, constant, only the voltage need be monitored. For single-phase power systems, the line-to-line voltage is monitored. For three-phase power systems, all three line-to-line voltages should be monitored to provide full-phase protection.

In addition, monitoring protects against operation at reduced voltage, such as brownouts, which can damage loads. Since the voltage sensitivity of loads varies, the pickup (acceptable) voltage setting and dropout (unacceptable) voltage setting of the monitors should be adjustable. The typical range of adjustment for the pickup is 85 to 100 percent of nominal, while the dropout setting, which is a function of the pickup setting, is 75 to 98 percent of the pickup selected. Usual settings for most loads are 95 percent of nominal for pickup and 85 percent of nominal for dropout (approximately 90 percent of pickup).

Consideration must be given to close differential-voltage supervision at installations where the loads are more sensitive to voltage reduction. Starter-type fluorescent lighting is extremely voltage-sensitive, and below 90 percent voltage it becomes uncertain as to whether or not a fluorescent lamp will light. Therefore, close differential sensing is required for this type of lighting.

Electronic-equipment load is frequently voltage-critical. Such installations include patient-care equipment in health care facilities, television stations, microwave communications, telephone communications, computer centers, and similar applications.

Lightly loaded polyphase motors have a tendency to run single-phase, with the loss of voltage in one phase, thus leading to motor burnups. Automatic transfer switches with properly set close differential-voltage levels will help to detect phase outages.

Coordination with Automatically Started Engine-Generator Sets. In these installations, the normal source is usually a utility power line, and the emergency source is an automatically started engine-generator set which starts upon failure of the normal source. To ensure proper operation and maximum reliability, a minimum installation as illustrated in Fig. 7.198 should be arranged to:

1. Initiate engine starting of the engine-generator set from a pilot engine-start contact on the automatic-transfer-switch control panel when utility voltage drops to an unacceptable level.

2. Sustain connection of load circuits to the normal source during the starting period to provide utilization of any existing service on the normal source.
3. Measure output voltage and frequency of emergency source through the use of a voltage-frequency-sensitive monitor and effect transfer of the load circuits to the engine-generator set when both voltage and frequency of the power plant are approximately normal. Sensing of the emergency source need only be single-phase since most applications involve an on-site engine-generator with a relatively short line run to the automatic transfer switch. In addition to voltage, the emergency source's frequency varies during startup. Combined frequency and voltage monitoring will protect against transferring loads to an engine-generator set with an unacceptable output.
4. Provide visual signal and auxiliary contact for remote indication when the emergency source is feeding the load.

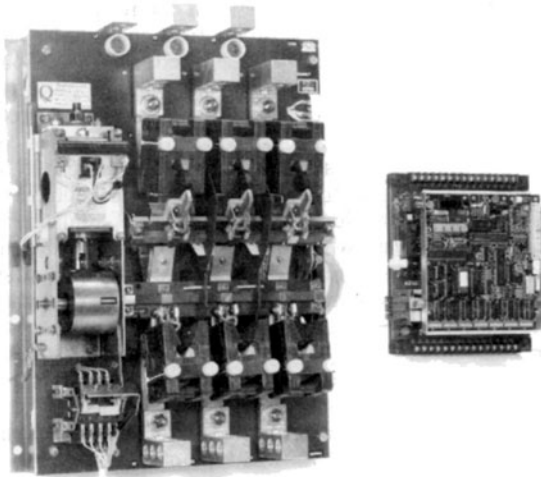


FIGURE 7.197 Automatic emergency transfer switch and control panel. [Automatic Switch Co.]

Time Delays. Time delays are provided to program operation of the automatic transfer switch. To avoid unnecessary starting and transfer to the alternative supply, a nominal 1-s time delay, adjustable up to 6 s, can override momentary interruptions and reductions in the normal source voltage but allow starting and transfer if the reduction or outage is sustained. (See Fig. 7.198.) The advantages of this feature are realized in all types of automatic-transfer installations. In standby plant installations the reduced number of false starts is especially important to minimize wear on the starting motor, ring gear, battery, and associated equipment. This delay is generally set as 1 s but may be set higher if reclosers on the high lines take longer to operate or if momentary power dips exceed 1 s. If longer delay settings are used, care must be taken to ensure that sufficient time remains to meet NEC 10-s power restoration requirements.

Once the load has been transferred to the alternate source, another timer delays retransfer to the normal source until that source has had time to stabilize. The timer is adjustable from 0 to 30 min and is normally set at 30 min. Another important function of this timer is to assure that the engine-generator set operates under load for a preselected minimum time, thus assuring continued good performance of the engine and its starting system. This delay should be automatically nullified if the engine-generator set fails and the normal source is available.

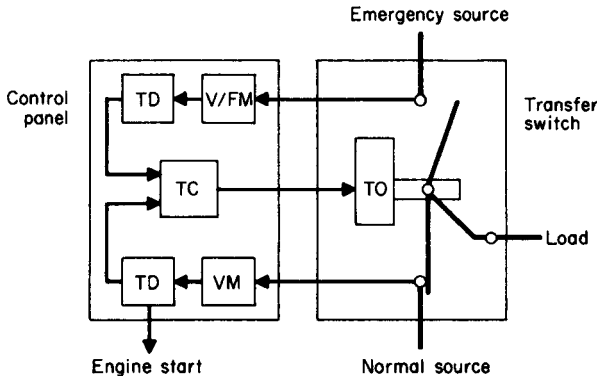


FIGURE 7.198 Block diagram of a typical automatic transfer switch. *TD* = time delay; *TO* = transfer operator; *TC* = transfer controls; *V/FM* = voltage/frequency monitor; *VM* = voltage monitor.

Engine-generator manufacturers often recommend a cooldown period for their sets which allows them to run unloaded after the load has been retransferred to the normal source. A third time delay, usually 5 min, is provided for this purpose. Running an unloaded engine for more than 5 min is neither necessary nor recommended since it can cause deterioration in engine performance.

It is sometimes desirable to sequence transfer of the loads to the alternate source when more than one automatic transfer switch is connected to the same engine-generator. Utilization of such a sequencing scheme can reduce starting kilovolt-ampere capacity requirements of the generator. A fourth timer, adjustable from 0 to 1 min, will delay transfer to emergency for this and similar requirements.

Transfer of Motor Loads. Automatic transfer switches operate rapidly, with total operating time usually less than 0.5 s, depending upon the manufacturer and the rating of the transfer switch. Therefore, transferring motor loads may require special consideration in that the residual voltage of the motor may be out of phase with that of the power source to which the motor is being transferred. On transfer, this phase difference may cause damage to the motor, and the excessive current drawn by the motor may trip the overcurrent protective device. Motor loads above 50 hp with relatively low load inertia in relation to torque requirements, such as pumps and compressors, may require special controls.

Automatic transfer switches can be provided with accessory controls that disconnect motor controllers prior to transfer and reconnect them after transfer when the residual voltage has been substantially reduced. Automatic transfer switches can also be provided with in-phase monitors that allow transfer between sources when both sources are synchronized. Another approach is to use a three-position transfer switch with accessory controls that allow the switch to pause in the neutral position while the residual voltage decays substantially before completing the transfer.

Of the above approaches, many engineers prefer the use of the in-phase monitor because loads are not intentionally disconnected for a period of time, there is no control interwiring between the automatic transfer switch and the motor controllers, and the transfer switch remains a two-position double-throw device.

Manually Operated Transfer Switches. Though this discussion pertains primarily to automatic transfer switches, there are applications that justify the use of *non-automatic* transfer switches. Manually operated transfer devices are commonly used in applications

where operating personnel are available and the load is not of an emergency nature requiring immediate automatic restoration of power.

Typical applications are found in health-care-facility equipment systems, industrial plants, sewage plants, centers for civil defense control, farms, residences, telephone buildings, and other communication facilities. Double-throw knife switches and safety switches are sometimes used for these applications. However, many of these devices must be operated under "no-load" conditions; i.e., operators must be sure that they have disconnected the load by opening breakers or other load-interrupting devices before they operate the switch. Though some double-throw switches are load-break and may be rated as single-throw switches, they may not be suitable for transferring all classes of load between two unsynchronized power sources. Because these devices are marginal adaptations, there often is a reluctance on the part of personnel to operate them.

There are nonautomatic transfer switches that meet the safety requirements of UL 1008. Such switches are electrically operated by manually actuating a control station. The pole construction of these switches is similar to that of automatic transfer switches, and thus they have the ability to transfer all classes of load between two unsynchronized power sources.

Whether the transfer switch be automatic or nonautomatic, careful consideration should be given to its coordination with upstream overcurrent protective devices. Furthermore, the selection of the transfer switch as well as other emergency power equipment should be based on the required degree of reliability, elimination of unnecessary outages, convenience of operation, and safety of personnel as needed for the application.

415. Gas-turbine generators. In the larger sizes, from about 700 kW up, the turbine-driven generator offers a number of advantages as a source of power. These units are small in size and weight when compared with other types of power sources of the same capacity. They can provide much more power capability in the same space required for standby power-using reciprocating engines.

The installation of gas-turbine generators is relatively simple because foundations either are small and light or are not required at all for some skid-mounted units. Vibration is minimal. Cooling water is not required because the unit is normally air-cooled. However, soundproofing of the room or location in which the unit is installed may be required if the high-frequency vibrations emitted are objectionable. Effective equipment for soundproofing is available.

Other applications in which the gas-turbine generator has been particularly successful include cogeneration systems and utility peak-load service.

Figure 7.199 shows an unclosed gas turbine generator set that provides 4370 kW, 60 Hz (continuous-duty rating at ISO conditions), along with 165,600 lb/h of clean, dry exhaust heat at 927°F for many commercial and industrial applications. The major components are, left to right, the generator, the accessory-reduction gear, and the gas turbine engine. The unit's Centaur Taurus gas turbine is a single-shaft, constant-speed, axial-flow machine with 12 air compressor stages, an annular combustor, and three turbine stages. The unit is mounted on a single skid and measures about 32 ft long, 8 ft wide, and 8.5 ft high. Its weight is approximately 42,500 lb.

416. Matching generating capacity and load in optional standby systems.

Where an optional standby system is to be wired, the NEC only requires that it have enough capacity to handle all the load the owner chooses to have remain operational at one time. The owner decides what those loads are to be, but the decision should be reflected in the permanent wiring on site. This is done by creating a standby panelboard that includes the loads the owner has determined are essential to remain energized. Then, knowing what

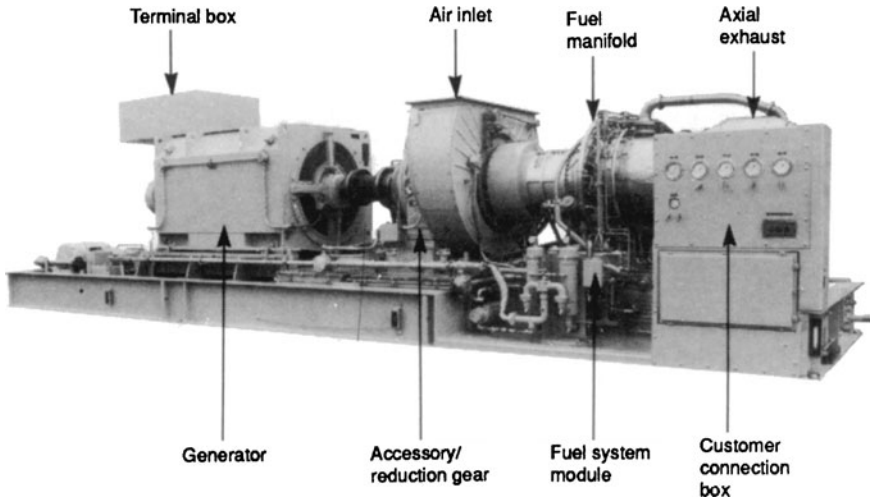


FIGURE 7.199 A 4-mW gas turbine generator set. [Solar Turbines Inc.]

loads will be represented and using load calculation provisions generally as presented in NEC Article 220, determine the required electrical demand for the standby panelboard. Compare this result with the proposed rating of the generator and the transfer equipment and make sure they both are up to the job. If not, either decrease the anticipated load or increase the intended plant and equipment accordingly.

The 2008 National Electrical Code has made a distinction between automatic and manual transfer switches in this regard. The automatic switch requires the load in the standby panel to agree with the generator size. On the other hand, where the transfer is made manually, the load in the standby panel can exceed the generator capacity. This allows an operator, for example, to turn on breakers controlling space heating, and then, when the desired temperature is reached, shut off those circuits and turn on others that are needed for a limited time. However, sizing the load to the generator is still the best design. Murphy's law holds that when the generator is needed, the least qualified person will be the only one available to make the load decisions, with a likely outcome being an overloaded generator shutting down at an inopportune time.

This page intentionally left blank

DIVISION 8

OUTSIDE DISTRIBUTION

Pole Lines: General, Construction, and Equipment	8.1
Pole-Line Construction	8.32
Pole-Line Guying	8.55
Underground Wiring	8.67
Grounding of Systems	8.84

POLE LINES: GENERAL, CONSTRUCTION, AND EQUIPMENT

1. The reports of the Committee on Overhead Line Construction of the National Electric Light Association contain what are probably the best and most complete specifications for pole-line construction for lighting and power distribution that have ever been compiled. Some of the material in this division regarding pole lines has been abstracted from those reports. The National Electric Light Association (NELA) has been reorganized and succeeded by the Edison Electric Institute (EEI). As specifications and standards of the NELA organization are revised, they will be known as those of the EEI.

2. The National Electrical Safety Code, IEEE ANSI-C2, comprises an exhaustive collection of rules for proper installation, maintenance, and operation of electrical distribution systems. Companies are now, in general, endeavoring to follow these rules. Ultimately, it is believed, their adoption will be universal.

3. There are three principal types of overhead line construction:

- 1.** Bare or weatherproof covered wire supported by insulators mounted on or hung from crossarms located on buildings or near the tops of poles.
- 2.** Weatherproof covered wire supported by insulators mounted on racks on the sides of buildings or poles.
- 3.** Insulated aerial cable which either is self-supporting from clamps bolted to sides of poles or crossarms or is supported by messenger cable from clamps bolted to the sides of poles or crossarms. See Div. 2 for descriptions of the types of wire and cable.

4. There are four main types of poles used for overhead line construction:

1. Wood poles
2. Steel poles
3. Reinforced-concrete poles
4. Structural-steel fabricated towers

5. The most common woods now available for poles are Douglas fir and southern yellow pine (a collective term referring to either the loblolly, longleaf, shortleaf, or slash pines), according to the *Standard Handbook for Electrical Engineers*. Douglas fir is more available in the long lengths required for transmission voltages, but the great majority of poles installed today are for distribution work, and probably 75 percent are southern yellow pine. Many other woods have been used historically and are still in service, including chestnut and northern white cedar, but these are not generally available today. Western Red Cedar is still being used, particularly for applications where its internal rot resistance is critical.

6. Wood poles are classified by three measurements:

1. Length, with standard lengths varying in 5-ft (1.5 m) increments.
2. Minimum circumference at a distance 2 ft below the top of the pole. This distance is important in terms of being able to specify mounting hardware. These measurements are resolved into classes based on 2-in. increments, beginning with Class 1, which has a minimum pole-top circumference of 27 in. There are 10 classes, with higher classifications applying to smaller pole tops, as follows: Class 2, 25 in.; Class 3, 23 in.; Class 4, 21 in.; Class 5, 19 in.; Class 6, 17 in.; Class 7, 15 in.; Class 8, 13 in.; Class 9, 11 in. Class 10 is seldom used today. For heavier loading, the classification system now includes H-6 downward through H-1 sizing, running in 2-in. steps downward from 39 in. (H-6) through 37 in. (H-5), 35 in. (H-4), 33 in. (H-3), 31 in. (H-2), and 29 in. (H-1).
3. Minimum circumference at a distance of 6 ft (1.8 m) from the butt. This distance determines the ability of the pole to resist breakage at the ground line from horizontal forces. This circumference often varies by species, because the species differ in terms of strength, and the point of the classification is to assure equivalent performance in terms of acceptable loading by any pole in a given classification. For example, any Class 6 pole should be able to withstand a 1500-lb (6672 N) load applied horizontally at a point 2 ft (600 mm) below the pole top. Table 6A shows a typical range of pole sizes arranged by class and ground-line circumference for Douglas fir and southern yellow pine.

Table 6B shows the maximum loading for vertical poles of differing heights and classes. The weights given were calculated for three-cluster or crossarm-mounted transformers. The weights must be recalculated if other mounting arrangements produce different bending moments. The numbers are based on kiln-dried wood poles, degraded to 75 percent of standard test values to allow for variations in fiber strength. The calculations also apply a safety factor of 5:1, and assume two 250-lb (113.4 kg) linemen are working on the pole with their usual pole equipment. The tabulated results also account for stress produced by hoisting cables.

TABLE 6A ANSI 05.1-2002 Dimension Table For Southern Pine and Douglas-fir Poles

Length of pole (feet)	Class	Top of pole minimum dimensions (inches)														
		H-6	H-5	H-4	H-3	H-2	H-1	1	2	3	4	5	6	7	8	9
	Minimum horizontal breaking strength (lb)	10000	8700	7500	6400	5400	4500	3700	3000	2400	1900	1500	1200		740	
	Minimum circumference at top (inches)	39	37	35	33	31	29	27	25	23	21	19	17	15	13	11
	Groundline* distance from butt(Ft)	Minimum circumference at 6 feet from butt (inches)														
20	4	—	—	—	—	—	—	31.0	29.0	27.0	25.0	23.0	21.0	19.5	17.5	14.0
25	5	—	—	—	—	—	—	33.5	31.5	29.5	27.5	25.5	23.0	21.5	19.5	15.0
30	5.5	—	—	—	—	—	—	36.5	34.0	32.0	29.5	27.5	25.0	23.5	20.5	—
35	6	—	—	—	—	43.5	41.5	39.0	36.5	34.0	31.5	29.0	27.0	25.0	—	—
40	6	—	—	51.0	48.5	46.0	43.5	41.0	38.5	36.0	33.5	31.0	28.5	—	—	—
45	6.5	58.5	56.0	53.5	51.0	48.5	45.5	43.0	40.5	37.5	35.0	32.5	30.0	—	—	—
50	7	61.0	58.5	55.5	53.0	50.5	47.5	45.0	42.0	39.0	36.5	34.0	—	—	—	—
55	7.5	63.5	60.5	58.0	55.0	52.0	49.5	46.5	43.5	40.5	38.0	—	—	—	—	—
60	8	65.5	62.5	59.5	57.0	54.0	51.0	48.0	45.0	42.0	39.0	—	—	—	—	—
65	8.5	67.5	64.5	61.5	58.5	55.5	52.5	49.5	46.5	43.5	40.5	—	—	—	—	—
70	9	69.0	66.5	63.5	60.5	57.0	54.0	51.0	48.0	45.0	41.5	—	—	—	—	—
75	9.5	71.0	68.0	65.0	62.0	59.0	55.5	52.5	49.0	46.0	—	—	—	—	—	—
80	10	72.5	69.5	66.5	63.5	60.0	57.0	54.0	50.5	47.0	—	—	—	—	—	—
85	10.5	74.5	71.5	68.0	65.0	61.5	58.5	55.0	51.5	48.0	—	—	—	—	—	—
90	11	76.0	73.0	69.5	66.5	63.0	59.5	56.0	53.0	49.0	—	—	—	—	—	—
95	11	77.5	74.5	71.5	67.5	64.5	61.0	57.0	54.0	—	—	—	—	—	—	—
100	11	79.0	76.0	72.5	69.0	65.5	62.0	58.5	55.0	—	—	—	—	—	—	—
105	12	80.5	77.0	74.0	70.5	67.0	63.0	59.5	56.0	—	—	—	—	—	—	—
110	12	82.0	78.5	75.0	71.5	68.0	64.5	60.5	57.0	—	—	—	—	—	—	—
115	12	83.5	80.0	76.5	72.5	69.0	65.5	61.5	58.0	—	—	—	—	—	—	—
120	12	85.0	81.0	77.5	74.0	70.0	66.5	62.5	59.0	—	—	—	—	—	—	—
125	12	86.0	82.5	78.5	75.0	71.0	67.5	63.5	59.5	—	—	—	—	—	—	—

*The figures in this column are intended for use only when a definition of groundline is necessary in order to apply requirements relating to scars, straightness, etc.

Source: Brown Wood Preserving Co. Inc.

TABLE 6B Maximum Weight That May Be Installed on Wood Poles

Pole length, ft	Mounting distance from pole top to uppermost attachment, ft	Pole class			
		Maximum allowable weight, lb			
		1	2	4	5
30	1	4,650	3,500	1,700	730
	4	6,700	5,200	2,730	1,270
35	1	3,800	2,900	1,450	655
	4	5,240	4,000	2,070	970
	5	5,800	4,480	2,350	1,100
	8	7,900	6,200	3,360	1,630
40	1	3,200	2,300	1,100	590
	4	4,250	3,150	1,570	890
	5	4,670	3,150	1,770	1,020
	8	6,200	4,750	2,550	1,520
45	1*	2,560	1,890	835	465
	4*	3,400	2,550	1,170	670
	5*	3,760	2,810	1,310	750
	8*	4,950	3,780	1,830	1,070
	13*	8,000	6,200	3,200	1,950
	16*	10,600	8,350	4,500	2,820
	17*	11,600	9,120	5,050	3,200
50	1*	2,260	1,340	660	
	4*	2,950	1,800	910	
	5*	3,200	2,000	1,000	
	8*	4,160	2,650	1,380	
	13*	6,600	4,250	2,350	
	16*	8,600	5,650	3,220	
	17*	9,400	6,200	3,660	
	20*	12,300	8,400	4,900	
55	13*	5,750	3,600		
	16*	7,300	4,700		
	17*	7,900	5,100		
	20*	10,200	6,700		
60	13*	4,960	2,850		
	16*	6,400	3,750		
	17*	6,900	4,100		
	20*	8,900	5,300		
65	13*	3,750	2,550		
	16*	4,850	3,300		
	17*	5,260	3,600		
	20*	6,800	4,700		

*Mounting heights are provided for equipment located as underbuild on 34.5-kV lines. If higher poles are required for clearance (i.e., railroad crossings), the preferred mounting height for equipment is nearer the ground to reduce the stress on the pole.

Source: Commonwealth Edison Co.

7. Approximate Weights of Wood Poles in Pounds

(The MacGillis & Gibbs Co.)

Length of pole, ft	Northern white cedar										Western red cedar									
	Class										Class									
	1	2	3	4	5	6	7	8	9	10	1	2	3	4	5	6	7	8	9	10
16	230	190	135	135	105	85										
18	420	300	250	210	155	155	125	95										
20	720	600	440	350	300	230	190	190	130	100	700	600	500	400	300	225	200	180	135	100
22	820	780	540	500	400	315	200	225	170	120										
25	1,020	980	600	515	420	300	225	250	200	150	850	720	600	480	400	320	250	225	200	135
30	1,320	1,170	870	630	520	420	350	350	275	1,000	850	730	610	500	420	350	325	250	
35	1,620	1,320	1,060	820	720	510	450	1,200	1,000	850	750	650	560	470	450		
40	2,040	1,675	1,280	1,020	790	625	1,500	1,300	1,100	900	800	700				
45	2,640	1,970	1,535	1,215	1,080	1,800	1,550	1,300	1,150	1,000					
50	3,200	2,640	1,860	1,470	1,380	2,000	1,800	1,550	1,400	1,300					
55	3,800	2,960	2,260	1,620	1,560	2,300	2,000	1,750	1,600	1,600					
60	4,500	3,460	2,640	1,700	2,600	2,200	2,000	1,900						
65	3,200	2,500	2,300	2,200						
70	3,600	3,000	2,700	2,600						
75	4,200	3,600	3,100	3,000						
80	5,000	4,200	3,600	3,500						
85	5,500	4,500	4,000							
90	6,600	5,600	4,800							

8. Wood-pole specifications. The American National Standards Institute (ANSI) has standardized the specifications and dimensions for wood poles. ANSI specifications provide that all poles shall be free from sap rot, cracks, bird holes, plugged holes, injurious checks, and damage by marine borers. All poles shall be free from splits, shakes, hollow, and decay in the tops. Nails, spikes, and other metal shall not be present unless specifically authorized by the purchaser. There are further detailed restrictions regarding blue stain, hollow centers, shakes in the butt surface, splits, grain twist, insect damage, scars, etc., which vary with the different types of poles. Anyone interested in such details is advised to consult the ANSI.

Allowable deviations from straight poles are illustrated in Fig. 8.1. Dimension A should be taken from the following table:

A, ft	3½	4	5	5½	6	6½	7	7½	8	8½	9	9½	10	10½	11
Total length of pole, ft....	16–18	20–22	25	30	35–40	45	50	55	60	65	70	75	80	85	90

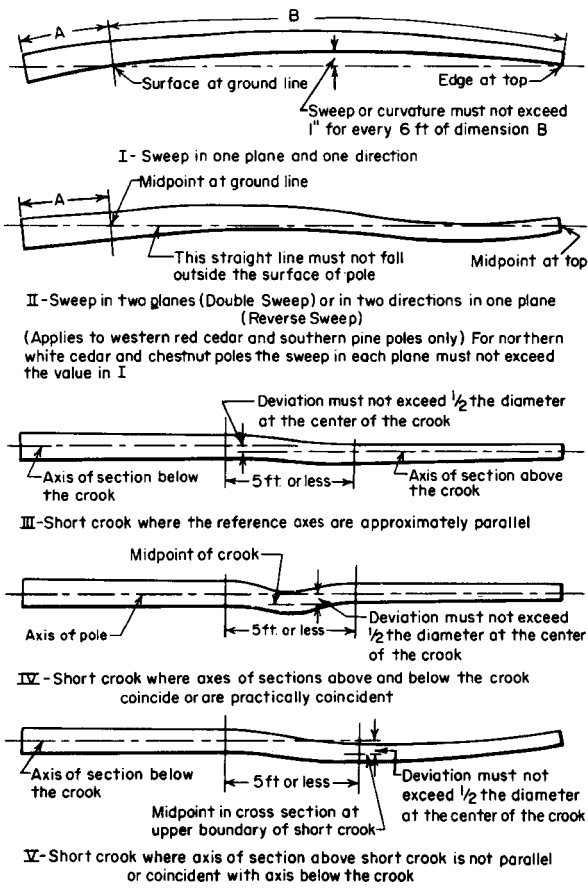


FIGURE 8.1 Allowable sweeps and crooks in wood poles. [American National Standards Institute]

9. Preservation of poles. Owing to the continually increasing scarcity of timber and the labor cost of replacing decayed poles, general practice is to impregnate poles with some substance which resists or retards decay. Southern pine poles generally are pressure-treated for their entire length. Common practice is to treat only the butt of poles of other woods, because since these woods are naturally resistant to decay, practically all decay occurs within the portion 1½ ft (0.46 m) above or below the groundline.

10. Methods of butt treating (Naugle Pole & Tie Co.). The specifications for each of the three methods of treating require that poles be seasoned at least four *seasoning months* before the treatment (see Sec. 11). All fibrous inner bark and foreign substances must be thoroughly removed from that portion of the pole between the points 1½ ft above and 1½ ft below the groundline. In general, the methods of treatment are as follows. *Treatment A* provides for a continuous submersion in hot Carbolineum (a coal-tar derivative) for a minimum interval of 15 min. *Treatment B* provides for a continuous submersion in cold creosote for a minimum interval of 4 h, to be followed by a continuous submersion in cold creosote for a minimum interval of 2 h. In each of these three treatments the poles are placed in upright tanks with the butts continuously submerged to a height of 1½ ft above the groundline.

Figure 8.2 shows, as would be expected, that the softer and more porous woods which suffer most rapid decay are most benefited and have the longest life after treatment. Such woods can absorb the most oil. The cost of treatment varies with the amount of oil injected and with local conditions.

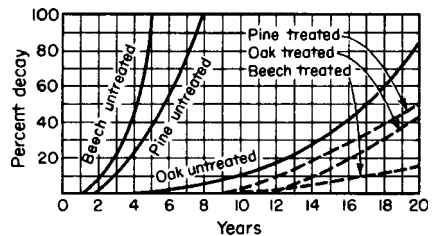


FIGURE 8.2 Life of treated and untreated poles.

11. Calendar months are rated in equivalent seasoning months as follows:

Calendar month.....	Jan.	Feb.	Mar.	Apr.	May	June	July	Aug.	Sept.	Oct.	Nov.	Dec.
Seasoning month.....	1/8	1/8	1/4	1/2	3/4	1	1	1	1	3/4	3/4	1/8

Poles which have been properly piled for seasoning must be seasoned for a total of 4 seasoning months, counting the seasoning months as given in the above table. For example, poles which are cut in January or February must be seasoned to the end of August before the time will have equaled 4 seasoning months.

12. Steel poles are made in three general types: (1) latticed, (2) expanded truss, and (3) tubular. The latticed type is made from structural-steel angles or channels joined and braced by latticed crossbars. The expanded truss is made from structural H sections, the web of which has been sheared by a rotary shear at fixed intervals so as to remove some of the metal. The pole is then heated to a cherry red and expanded by a special machine which grips the flanges and pulls them apart to the desired width (see Fig. 8.3). Latticed and expanded-truss steel poles are used for medium-voltage transmission lines with spans 250 to 350 ft (76.2 to 106.7 m) in length. Their life is 25 to 50 years or more, depending on the adequacy of painting and upkeep. Tubular poles are built up from length of steel tubing,

using a large-diameter tube for the base and successively smaller tubes for the upper sections. They were extensively used for street-railway and trolleybus wiring in cities, where appearance is important. Their higher cost prevented their use through open country.

13. Fabricated steel towers are made from four main structural angles as uprights, cross-braced with smaller structural angles. Steel towers are ordinarily used for high-voltage lines with spans of more than 350 ft (106.7 m).

14. The design of reinforced-concrete poles requires considerable skill. When persons unfamiliar with concrete-pole design must build them, they had best accept the proportions of poles that have been built and are giving good service. Figure 8.4 shows some of the major considerations. The pole is proportioned for a 150-ft (45.7-m) span to withstand a gale successfully, with the wind at a velocity of 70 mi/h (113 km/h) and $\frac{1}{2}$ in. (12.7 mm)

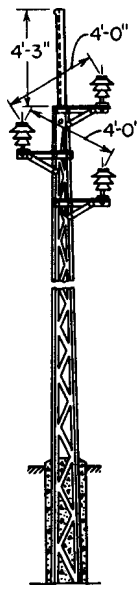


FIGURE 8.3 Bates expanded steel pole.

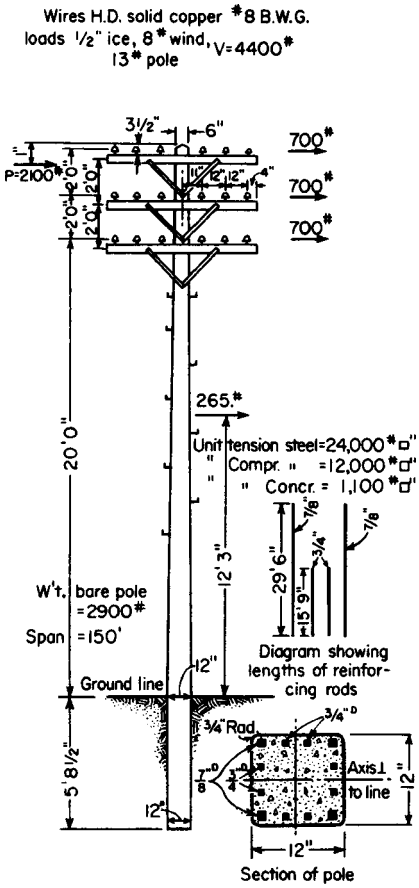


FIGURE 8.4 A 30-ft (9.1-m) reinforced-concrete pole. [Universal Portland Cement Co.]

of ice on the wires. The horizontal load thus imposed by the wind on all the 18 wires, tending to overturn the pole, is 2100 lb (9341 N). The sides of the reinforcing bars are $1\frac{1}{4}$ in. (31.75 mm) in from the faces of the pole. The concrete is a 1:2:4 mixture. It should be mixed wet, using carefully selected materials with the fine aggregate next to the forms. Air bubbles should be eliminated by careful tamping or churning. Corners of the pole should be chamfered off. The square reinforcing rods, which are of the mechanical-bond type, are bound together by a web system not shown in the illustration. The web system consists of a spiral of No. 12 steel wire wound outside the rods and securely bound to them. The rods are also secured together with horizontal ties 1 in. (25.4 mm) wide and $\frac{1}{4}$ in. (6.35 mm) thick, spaced to 3 to 5 ft (0.9 to 1.5 m) apart. The reinforcement thus forms an independent skeleton which can be assembled and lowered into the forms. It is likely that it is most economical to cast poles exceeding 35 ft (10.7 m) in height in their final vertical positions. Shorter poles are erected with a derrick. Gains for crossarms and holes for bolts are cast in poles. Metal pole steps may be cast in solid also.

15. Reinforced-concrete poles (*Standard Handbook for Electrical Engineers*) are the most durable and usually the most expensive. The life of a properly designed concrete pole is practically unlimited. The facility with which special purposes can be served with reinforced concrete is also a great advantage. The exterior form can easily be modified to harmonize with any desired scheme of decoration. When it is desired to lead wires from the pole top to ground, the poles can be made hollow, and thus at a slight additional cost the wires are completely hidden from view and protected from the weather. Concrete poles may fail, but they will not fall to the ground. The principal drawback to this form of construction has been the cost and the difficulty of manufacture. The poles are heavy and cumbersome to transport, so that, when possible, it is well to make them in the neighborhood where they are to be used. Both concrete and steel poles can be transported in small packages over mountains and erected on the spot, but in this respect steel is much superior to concrete. Concrete poles are classified according to the horizontal load which can be applied to the pole 2 ft (0.6 m) from the top:

Class	A	B	C	D	E
Horizontal load applied 2 ft from top, lb	4000	3000	2000	1500	1000

16. Depth to set poles in the ground. One rule is that poles should, on straight lines, be set in the ground one-sixth of their lengths. The following table indicates good practice for normal soils:


Pole length, overall, ft	Depth to set in ground, ft		Pole length, overall, ft	Depth to set in ground, ft	
	Straight lines	Curves, corners, and points of extra strain		Straight lines	Curves, corners, and points of extra strain
30	5.5	6.0	55	7.0	7.5
35	6.0	6.5	60	7.5	8.0
40	6.0	6.5	65	8.0	8.5
45	6.5	7.0	70	8.0	8.5
50	7.0	7.5	75	8.5	9.0

17. The size of pole to use cannot be definitely specified without knowing local conditions. Municipal ordinances sometimes regulate the heights of poles and wires. If there are trees along the line, the wires should be carried entirely above them or through the lower branches, which interfere less than do the higher ones, on which the foliage is thicker. For lines on highways it is usually customary to place the lowest wire at least 18 ft (5.5 m) above the highway, and 21 ft (6.4 m) is better. Railway companies frequently specify 22 ft (6.7 m) between the top of the rail and the lowest crossarm. Wires should be at least 15 ft (4.6 m) above sidewalks. The height of the pole will depend upon the number of crossarms to be carried. It is desirable to avoid abrupt changes in the level of wire. Hence, if the line runs uphill and downdale, the longer poles should be used in the valleys.

Guy wires should, except when otherwise provided by ordinance, be at least 18 ft above a highway and 12 ft (3.7 m) above a sidewalk.

Also in cities it is a good practice to use 35-ft (10.7-m) poles to carry either one or two crossarms, 40-ft (12.2-m) poles to carry three or four crossarms, and 45-ft (13.7-m) poles to carry more than four crossarms. For suburban lines 30-ft (9.1-m) poles are often used. For very light lines carrying only three or four wires, 6-in. (152-mm) poles 25 ft (7.6 m) long are sometimes used, though so light a pole is inexpedient if the number of wires is likely to increase. The height of a pole is always considered as the total length overall.

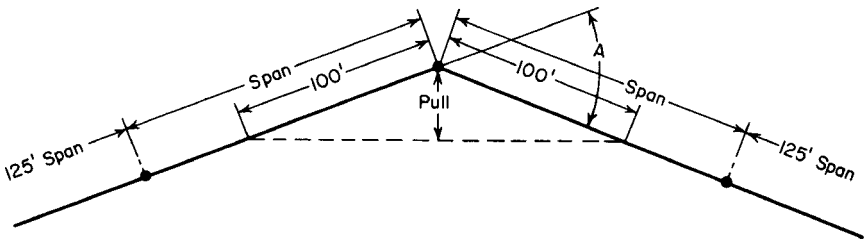18. Poles should be spaced, in straight portions of a line, about 125 ft (38.1 m) apart. The usual maximum is 150 ft (45.7 m), and the minimum about 100 ft (30.5 m). In curves and at corners the spans should be about as indicated in Fig. 8.5. For rural lines the span may be lengthened to 200 or 250 ft (61 or 76.2 m). Spans up to 400 to 500 ft (122 or 152.4 m) have been used for rural feeder lines employing aluminum cable, steel-reinforced.



Note: If the “Pull” is less than 5’ the spans adjacent to the angle pole shall be of standard length (125’). If the “Pull” exceeds 5’, the spans adjacent to the angle pole shall be reduced to the distance “Span” given in table.

Angle A	Pull in ft	Span	No. of 6000 lb side guys		
			1 Arm 6 wires	2 Arms 12 wires	3 Arms 18 wires
Less than 6°	Less than 5’	125’	NONE	NONE	NONE
6°–11°	5’–10’	115’	NONE	1	1
11°–15°	10’–13’	105’	1	1	1
15°–22°	13’–19’	95’	1	1	2
22°–30°	19’–26’	85’	1	1	2
Over 30°	Over 26’	75’	1	2	2

FIGURE 8.5 Pole spacing and side guys on curves. [Edison Electric Institute]

19. Holes for poles should be large enough to admit the poles without any slicing or chopping and should be of the same diameter from top to bottom. The diameter of the hole should always be at least large enough so that a tamping bar can be worked on all sides between the pole and the sides of the hole.

20. Setting poles. On straight lines poles should be set perpendicularly. On curves poles should slant slightly so that the tension of the wires will tend to straighten them. In filling a hole after the pole is in it, only one should be employed and as many more persons as can conveniently work around the pole should tamp in the earth as the shoveler throws it in. Some of the surplus earth should be piled around the butt of the pole so that the water will drain away. Figure 8.6 illustrates the method of setting a pole with pikes.

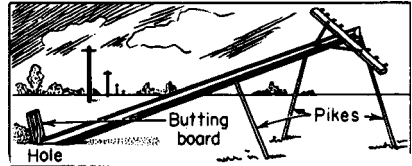


FIGURE 8.6 Method of setting a pole with pikes.

21. Setting poles with a gin pole. A few workers can set a large pole with a gin pole, as suggested in Fig. 8.7. The gin pole can be a short wooden pole or, if the poles to be raised are not too heavy, a length of wrought-iron pipe. The gin need be only one-half as long as the pole to be raised. In setting a pole the gin is first raised to an almost vertical position with its top over the pole hole. It is held in that position by fastening the guy lines. Then the hook of the tackle blocks is engaged in a sling around the pole, and the pole is raised, by workers or by a power unit, by pulling on the free end of the tackle-block line. When high enough so that its lower end can be slipped into it, the pole is dropped into the hole and adjusted to a vertical position with pikes, and the earth is tamped in. In modern practice gin poles are permanently mounted on trucks for transportation and are then called *pole derricks*. They are great savers of time and money. The methods illustrated in Figs. 8.6 and 8.7 are shown to assist those who install poles only occasionally.

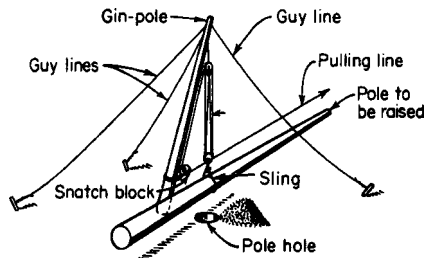


FIGURE 8.7 Gin pole for raising poles.

22. Setting poles in loose and weak soils. On important lines it is customary to use a concrete setting for the pole (Fig. 8.8, I). A suitable mixture is 1 part cement, 3 parts sand, and 3 parts broken stone or coarse gravel.

For somewhat less important lines when the soil is fairly firm, the sand barrel (Fig. 8.8, II) is a valuable expedient. This consists of a strong barrel or barrels placed at the bottom of the hole into which the pole is set. The barrel is filled with a firm, substantial soil. By this means the pole is given a larger bearing area. Sometimes a temporary sand barrel, consisting of a special iron cylinder that is placed around the pole, is filled with firm dirt and then hoisted away.

In marshy ground another expedient for less important lines is to build a triangular brace from sound portions of old poles (Fig. 8.8, III and IV) bolted together. This provides a bearing area on or near the top of the soil which resists overturning of the pole. The method of Fig. 8.8, III, is preferable to the one in Fig. 8.8, IV, because the ground member will not rot

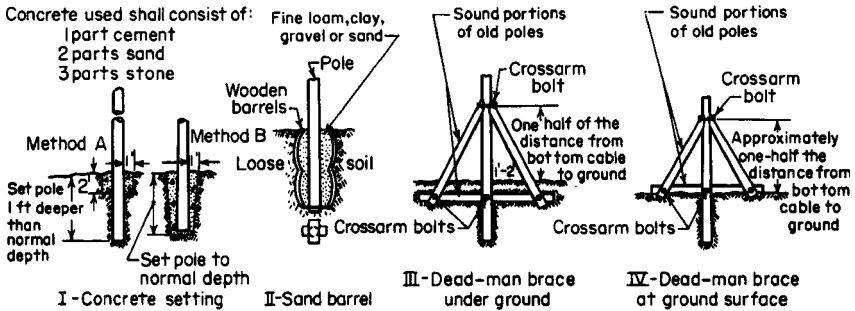


FIGURE 8.8 Methods of setting poles in poor soils. [General Electric Co.]

so fast when it is completely underground. There is, however, somewhat more labor involved in digging the trench for the ground member. These methods are not so permanent as a concrete foundation and are recommended only when the expense of a concrete foundation does not seem warranted.

23. When poles are set in rock, the hole may be blasted or a hole $1\frac{1}{2}$ in. (38.1 mm) in diameter may be drilled in the rock (Fig. 8.9); in it is placed an iron pin that extends about 6 in. (152.4 mm) above the surface. A similar hole is drilled in the butt of the pole, and the pole mounted on the pin. It must then be braced by three or four wood struts spiked to the pole 6 ft (1.8 m) from the ground, running diagonally to the rock and formed thereto, or it can be braced by guy wires made fast to metal pins set in the rock.

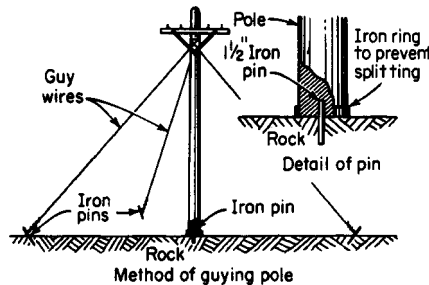


FIGURE 8.9 Method of setting a pole on rock.

24. Wooden poles which have rotted at the butt can be reinforced with a short stub pole set in the ground next to the regular pole and extending a few feet above the groundline. Various methods of stubbing are shown in Fig. 8.10, with the required materials in Fig. 8.11. In all cases two bands should be employed with spacings as given below. In Fig. 8.10 only the top band of the two is illustrated in several cases. If a wire wrap is employed (Fig. 8.10C), four wraps should be made around the pole and six wraps around both the pole and stub for poles up to 40 ft (12.2 m) long. For poles longer than 40 ft, 10 wraps should be used around both pole and stub. In employing the method of Type C, Fig. 8.10, the following dimensions should be used. Dimension C should be not less than 30 in. (762 mm) for poles up to 45 ft (13.7 m) long or 36 in. (914.4 mm) for poles 45 to 50 ft (13.7 to

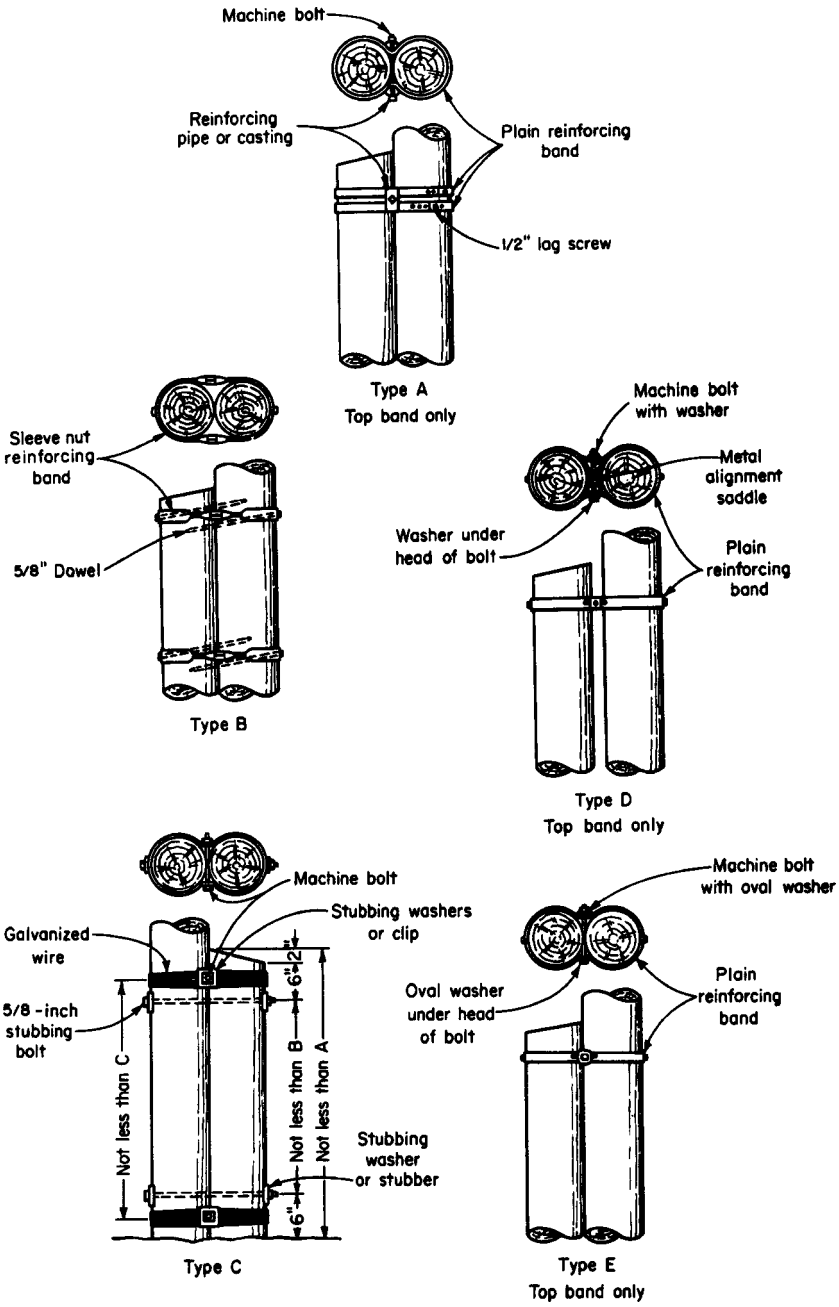


FIGURE 8.10 Methods of reinforcing with stubs. [Hubbard & Co.]

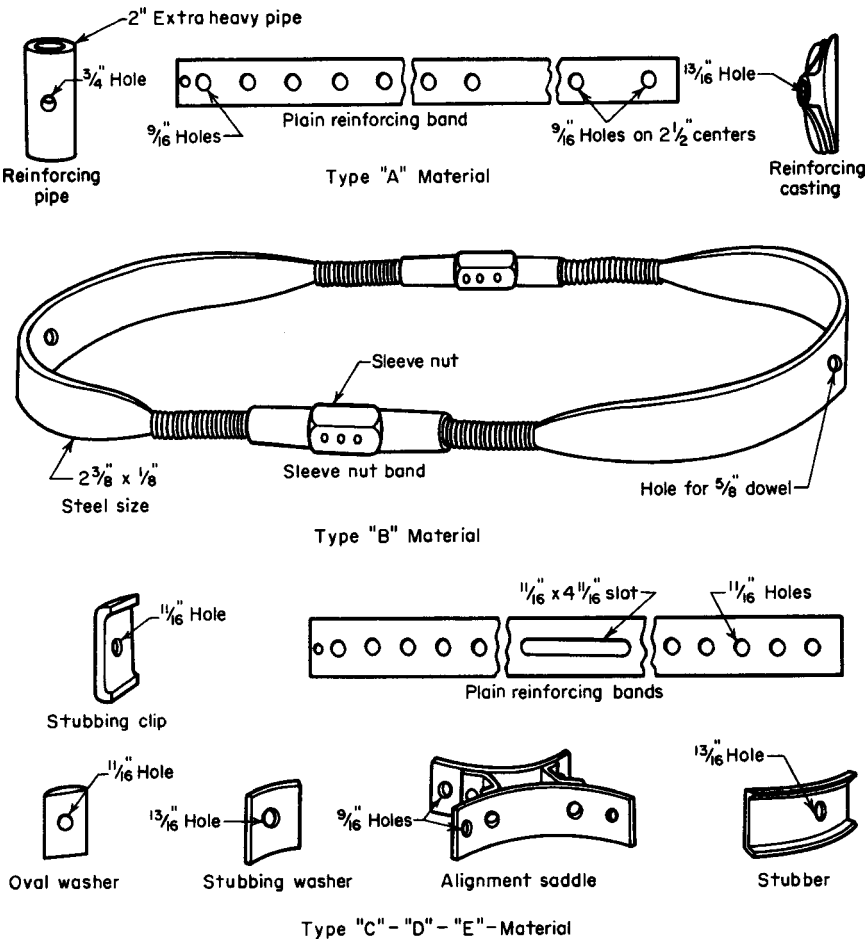


FIGURE 8.11 Materials for reinforcing with stubs. [Hubbard & Co.]

15.2 m) long; dimension *A* should be not less than 38 in. (965.2 mm) for poles up to 45 ft long or 44 in. (1117.6 mm) for poles from 45 to 50 ft long; dimension *B* should be less than 24 in. (609.6 mm) for poles up to 45 ft long or 30 in. for poles from 45 to 50 ft long. Poles are generally stubbed so that the stub is across the line. Methods *D* and *E* will not be satisfactory if the stub is located along the line. The other methods can be used for either across-the-line or along-the-line stubbing. With Method *B* the 5/8-in. dowels are not required if the poles are stubbed across the line.

25. Reinforcing old poles with concrete and steel. Wooden poles usually become unsafe because of butt rot at the groundline. Such poles can be repaired without moving the wires they support by reinforcing them with steel and concrete as shown in Fig. 8.12. For ordinary poles and conditions, 10 mild-steel rods 1/2 in. (12.7 mm) in diameter and 4 to 6 ft (1.2 to 1.8 m) long are used for reinforcing. The lower end of each

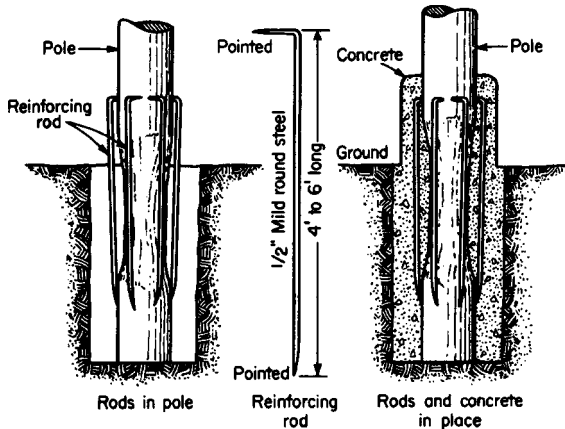


FIGURE 8.12 Reinforcing a pole with concrete.

reinforcing rod is pointed and is driven into the portion of the butt that remains in the hole. The other end is bent at right angles, and pointed. It is driven into the pole above the groundline. A 1:2½:5 mixture of concrete is used for the main body, and a richer mixture is used for the portion above the groundline and is molded in a cylindrical sheet-iron form. The concrete extends to about 1½ ft (0.46 m) above the groundline. Poles 15 to 20 years old have been satisfactorily repaired by this method without moving the supported wires.

26. Repairing steel poles. Metal poles sometimes corrode very rapidly at the ground, and when discovered the corrosion is often too far advanced to make any preventive measures effective. A very satisfactory method (Fig. 8.13) of repairing steel poles is to place a loose-fitting metal sleeve around the butt of the pole and fill the space between the two with portland cement.

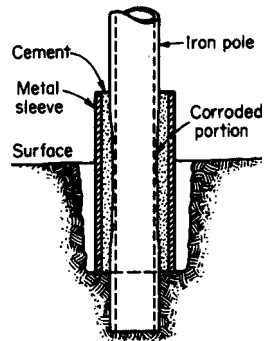


FIGURE 8.13 Repairing a metal pole.

27. Crossarm bolts are used for fastening crossarms to the poles. These bolts are standard ¾-in. galvanized machine bolts (see machine-bolt data in Div. 4 for dimensions). A square washer is used under both head and nut, as shown in Figs. 8.47 and 8.70, I.

28. Double-arming bolts (Fig. 8.14) give a more rigid construction and greater economy than the old block-spacer method of tying two crossarms together. The double-arming bolts are furnished with a long rolled thread, galvanized and fitted with four square nuts. A square washer is used under each nut, as shown in Figs. 8.48 and 8.70, II.




FIGURE 8.14 Double-arming bolts. [Line Material Co.]

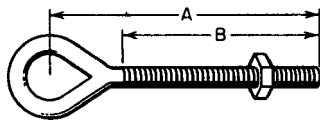


FIGURE 8.15 Standard eyebolt. [Line Material Co.]

29. Eyebolts (Fig. 8.15) are furnished with a forged oval eye, rolled threads, and a square nut, galvanized. They are used for fastening guys, dead-ending insulators, and suspending insulators to crossarms, as shown in Figs. 8.41, I; 8.87; and 8.88. A square washer is used under nut and eye.

30. Double-arming eyebolts (Fig. 8.16) are furnished with a forged oval eye and three square nuts, galvanized. The opening of the eye is 1½ by 2 in. These eyebolts are used for the same purposes as eyebolts in double-arm construction (see Figs. 8.41, IV; 8.48; and 8.86). Thimble-eye double-arming bolts, which eliminate the use of a separate thimble in attaching guy wires to the eye of the bolt, are also available.




FIGURE 8.16 Double-arming eyebolt. [Line Material Co.]

31. Eye nuts (Fig. 8.17) are used on through bolts, eyebolts, double-arming bolts, straight and angle thimble-eye bolts, crossarm bolts, and anchor rods and for other attachments when it is desired to convert a standard threaded bolt to a thimble-eye bolt. They are commonly used for dead-ending a messenger wire or span guy on the threaded end of an angle thimble-eye bolt on the opposite end of which is a down guy.

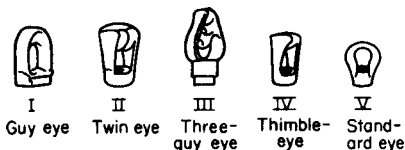


FIGURE 8.17 Eye nuts. [Hubbard & Co.]

There are two types of eye nuts: (1) the standard eye (Fig. 8.17, V), which requires the use of a thimble; and (2) the thimble eye, which has a thimble forged in it. The thimble-eye type is also made in a twin style (Fig. 8.17, II) to take two guy strands and in a three-guy style (Fig. 8.17, III) to take three guy strands. The guy eye (Fig. 8.17, I) serves the same purpose as the thimble eye, merely being forged in a slightly different manner. Refer to Fig. 8.71, II, for application.

32. Common, or buttonhead, carriage bolts (see Fig. 8.18) are used for attaching cross-arm braces to crossarms. They are provided with a square shoulder under the head. A round washer is used under the head, as shown in Fig. 8.47.




FIGURE 8.18 Carriage bolt.

33. Lag screws as shown in Fig. 8.19 are made in both fetter-drive and gimlet-point types. The $\frac{1}{4}$ - and $\frac{5}{16}$ -in. screws are generally of the gimlet-point type, while all screws of larger diameter are generally of the fetter-drive type. Fetter-drive lag screws are designed to be driveable like a nail without destroying the wood fibers, allowing them to still hold securely. Some have an increased diameter at the shoulder just below the head, so they will hold steel hardware in place without allowing it to shift laterally. Lag screws are used for attaching crossarm braces to poles, as shown in Figs. 8.47, 8.50, and 8.60.

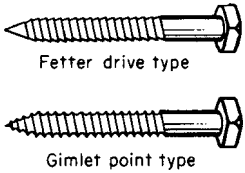


FIGURE 8.19 Lag screws.

34. Lag-screw eyes (Fig. 8.20) are galvanized and furnished with gimlet-point, lag-screw thread. The forged eye has a $1\frac{3}{4}$ by $1\frac{1}{2}$ -in. opening.

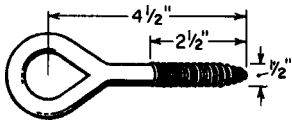


FIGURE 8.20 Lag-screw eye. [Line Material Co.]



I-Round washer II-Square washer
FIGURE 8.21 Washers.

Outside diam, in	Size of hole, in	Thickness, in	Size of bolt, in		Dimensions, in	Diam of hole, in	Size of bolt, in
			Mach	Carriage			
1	$\frac{7}{16}$	$\frac{5}{64}$	$\frac{3}{8}$		$2 \times 2 \times \frac{1}{8}$	$\frac{11}{16}$	$\frac{1}{2}$ or $\frac{5}{8}$
$1\frac{1}{4}$	$\frac{1}{2}$	$\frac{5}{64}$...	$\frac{3}{8}$	$2\frac{1}{4} \times 2\frac{1}{4} \times \frac{3}{16}$	$\frac{13}{16}$	$\frac{5}{8}$ or $\frac{3}{4}$
$1\frac{3}{8}$	$\frac{9}{16}$	$\frac{7}{64}$	$\frac{1}{2}$	$\frac{3}{8}$	$3 \times 3 \times \frac{3}{16}$	$\frac{13}{16}$	$\frac{5}{8}$ or $\frac{3}{4}$
$1\frac{3}{4}$	$\frac{11}{16}$	$\frac{1}{8}$	$\frac{5}{8}$	$\frac{1}{2}$	$3 \times 3 \times \frac{1}{4}$	$\frac{13}{16}$	$\frac{5}{8}$ or $\frac{3}{4}$
2	$\frac{13}{16}$	$\frac{1}{8}$	$\frac{3}{4}$	$\frac{5}{8}$	$4 \times 4 \times \frac{3}{16}$	$\frac{13}{16}$	$\frac{5}{8}$ or $\frac{3}{4}$
					$4 \times 4 \times \frac{1}{4}$	$\frac{15}{16}$	$\frac{3}{4}$ or $\frac{7}{8}$
					$4 \times 4 \times \frac{1}{2}$	$\frac{13}{16}$	1
					$3\frac{1}{2} \times 3\frac{1}{2} \times \frac{3}{8}$	$\frac{15}{16}$	$\frac{3}{4}$ or $\frac{7}{8}$
					$6 \times 6 \times \frac{3}{8}$	$\frac{13}{16}$	1

36. Standard Wooden Crossarms
(General Electric Supply Co.)

Pin holes						
Spacings, in			Center bolt hole, in	Brace length, in	Size and length	
Center	Sides	Ends				
Electric Light Arms					3 1/4 × 4 1/4	
28	4	1 17/32	5/8	25	3 ft 2 pin
16	12	4	1 17/32	5/8	28	4 ft 4 pin
18	17	4	1 17/32	5/8	28	5 ft 4 pin
22	21	4	1 17/32	5/8	32	6 ft 4 pin
16	12	4	1 17/32	5/8	32	6 ft 6 pin
18	17 1/2	4	1 17/32	5/8	32	8 ft 6 pin
16	12	4	1 17/32	5/8	32	8 ft 8 pin
16	9 3/4	4	1 17/32	5/8	32	8 1/2 ft 10 pin
17 1/2	15 3/4	4	1 17/32	5/8	42	10 ft 8 pin
16	12	4	1 17/32	5/8	42	10 ft 10 pin
16	9 5/8	3 7/8	1 17/32	5/8	42	10 ft 12 pin
R.S.A. Arms					3 × 4 1/4	
20	22	4	9/16	1 1/16	...	6 ft 4 pin
19	17 1/4	4	9/16	1 1/16	...	8 ft 6 pin
19	15 1/2	4	9/16	1 1/16	...	10 ft 8 pin
16	12 3/8	2 1/2	9/16	1 1/16	...	10 ft 10 pin
Western Union Arms					3 × 4 1/4	
20	11 1/2	3	9/16	2 1/32	...	6 ft 6 min
21	11 1/2	3	9/16	2 1/32	...	8 ft 8 pin
22	11 1/2	3	9/16	2 1/32	...	10 ft 10 pin
Pony Telephone Arms					2 3/4 × 3 3/4	
17	3 1/2	1 9/32	5/8	...	24 in 2 pin
23	3 1/2	1 9/32	5/8	...	30 in 2 pin
29	3 1/2	1 9/32	5/8	25	36 in 2 pin
16	9 1/2	3 1/2	1 9/32	5/8	28	42 in 4 pin
16	9 3/4	3 1/2	1 9/32	5/8	28	62 in 6 pin
16	9 3/4	3 3/4	1 9/32	5/8	28	82 in 8 pin
16	9 3/4	4	1 9/32	5/8	28	102 in 10 pin
16	9 5/8	3 7/8	1 9/32	5/8	28	120 in 12 pin
N.E.L.A. Arms					3 1/2 × 4 1/2	
30	4	1 17/32	1 1/16	28	3 ft 2 in 2 pin
30	14 1/2	4	1 17/32	1 1/16	38	5 ft 7 in 4 pin
30	14 1/2	4	1 17/32	1 1/16	38	8 ft 6 pin
30	12	4	1 17/32	1 1/16	38	9 ft 2 in 8 pin

N.E.L.A.(Light) Arms						$3\frac{1}{4} \times 4\frac{1}{4}$
30	4	$1\frac{17}{32}$	$\frac{11}{16}$	28	3 ft 2 in 2 pin
30	$14\frac{1}{2}$	4	$1\frac{17}{32}$	$\frac{11}{16}$	38	5 ft 7 in 4 pin
30	$14\frac{1}{2}$	4	$1\frac{17}{32}$	$\frac{11}{16}$	38	8 ft 6 pin
30	12	4	$1\frac{17}{32}$	$\frac{11}{16}$	38	9 ft 2 in 8 pin
New England Arms						$3\frac{3}{4} \times 4\frac{1}{4}$
30	3	$1\frac{17}{32}$	$\frac{11}{16}$	33	3 ft 2 pin
30	$13\frac{1}{2}$	$4\frac{1}{2}$	$1\frac{17}{32}$	$\frac{11}{16}$	36	5 ft 6 in 4 pin
30	$13\frac{1}{2}$	$4\frac{1}{2}$	$1\frac{17}{32}$	$\frac{11}{16}$	36	7 ft 9 in 6 pin
30	$13\frac{1}{2}$	$4\frac{1}{2}$	$1\frac{17}{32}$	$\frac{11}{16}$	36	10 ft 8 pin
New England Power Arms						$3\frac{3}{4} \times 4\frac{3}{4}$
30	3	$1\frac{17}{32}$	$\frac{11}{16}$	33	3 ft 2 pin
30	$13\frac{1}{2}$	$4\frac{1}{2}$	$1\frac{17}{32}$	$\frac{11}{16}$	36	5 ft 6 in 4 pin
30	$13\frac{1}{2}$	$4\frac{1}{2}$	$1\frac{17}{32}$	$\frac{11}{16}$	36	7 ft 9 in 6 pin
30	$13\frac{1}{2}$	$4\frac{1}{2}$	$1\frac{17}{32}$	$\frac{11}{16}$	36	10 ft 8 pin
Pacific Arms						$3\frac{1}{4} \times 4\frac{1}{4}$
28	4	$1\frac{17}{32}$	$\frac{5}{8}$	32	3 ft 2 pin
28	12	4	$1\frac{17}{32}$	$\frac{5}{8}$	32	5 ft 4 pin
28	12	4	$1\frac{17}{32}$	$\frac{5}{8}$	32	7 ft 6 pin
28	12	4	$1\frac{17}{32}$	$\frac{5}{8}$	42	9 ft 8 pin
28	12	4	$1\frac{17}{32}$	$\frac{5}{8}$	42	11 ft 10 pin

37. Wooden crossarms are generally made of Douglas fir, which, according to tests made by the U.S. Forest Service, is best suited for the purpose. Longleaf yellow pine and Norway pine also are used for crossarms. Crossarm dimensions have not actually been standardized throughout the country. The dimensions of those carried as standard by one manufacturer are given in Sec. 36. Great care should be exercised in ordering crossarms to give full specifications. It is generally best to furnish a sketch (Fig. 8.22) with accompanying dimensions for the required boring.




FIGURE 8.22 Sketch for boring of crossarm.

Figure 8.23 shows the dimensions of crossarms recommended by the Edison Electric Institute. These arms have a spacing between center pins of 30 in. (762 mm), which is believed to provide a safe climbing space. Arms of the EEI cross-sectional dimensions (Fig. 8.23) have not come into extensive use. It is a modern practice not to paint crossarms as soon as they are made. They either are treated with a wood preservative or

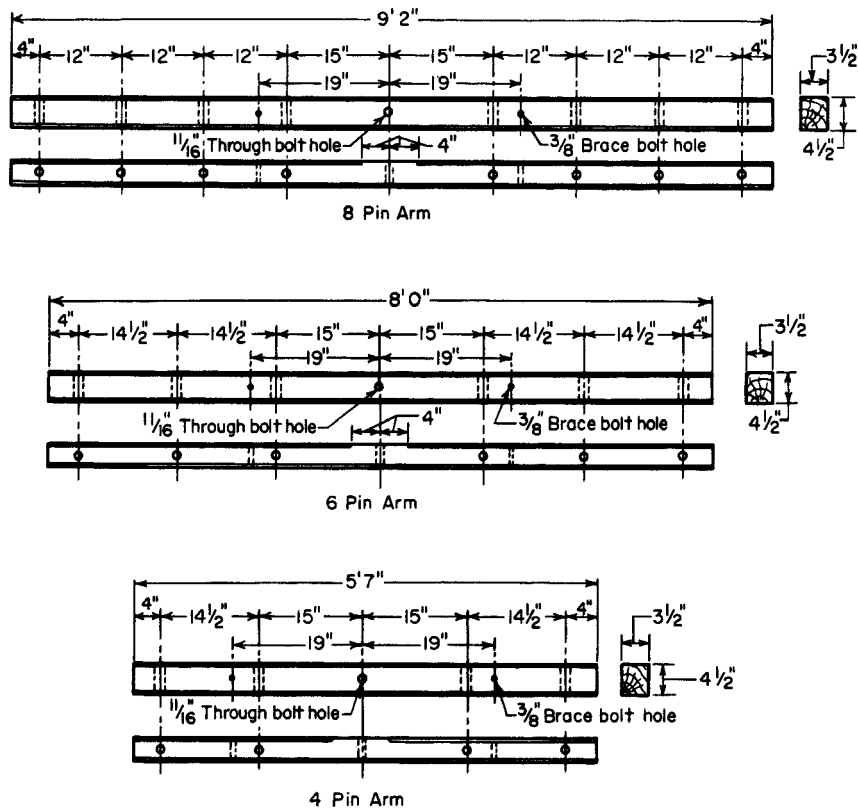


FIGURE 8.23 Crossarm dimensions recommended by the Edison Electric Institute.

are permitted to season naturally for at least 3 months and are then painted with two coats of suitable paint before erection. Crossarms of Southern pine generally are pressure-treated against decay. It is not a general practice to treat crossarms of other woods. No crossarm having a spacing of less than 20 in. (508 mm) between center pins or 12 in. (304.8 mm) between side pins should be used. The six-pin arm (Fig. 8.23) is recommended for general use.

38. Galvanized-steel crossarms are made from standard steel angles in three types, as given in Sec. 39. They cost somewhat more than wooden crossarms but are more durable and will carry heavier loads. They are used for installations subjected to heavy strains and for higher-voltage lines.

39. Types of Galvanized-Steel Crossarms
(Hubbard & Co.)

Number of pins	Length, in	Brace style	Pin spacing, in		Size of angle, in	Approximate shipping weight, lb per 100 pieces
			Pole pins	Side pins		
Telephone Arms—Pinholes, $\frac{13}{16}$ in, Pole-Mounting Hole, $\frac{11}{16}$ in						
2	20	Flat	16	$3 \times 2 \times \frac{3}{16}$	575
4	40	Flat	16	10	$3 \times 2 \times \frac{3}{16}$	1,125
6	60	Flat	16	10	$3 \times 3 \times \frac{1}{4}$	2,700
8	80	Flat	16	10	$3 \times 3 \times \frac{1}{4}$	3,600
10	100	Flat	16	10	$3 \times 3 \times \frac{1}{4}$	4,510
Electric-Light Arms—Pinholes, $\frac{13}{16}$ in, Pole-Mounting Hole, $\frac{11}{16}$ in						
2	36	Flat	30	$3 \times 3 \times \frac{1}{4}$	1,625
4	65	Flat	30	$14\frac{1}{2}$	$3 \times 3 \times \frac{1}{4}$	2,915
6	94	Angle	30	$14\frac{1}{4}$	$3\frac{1}{2} \times 3\frac{1}{2} \times \frac{5}{16}$	6,215
8	$117\frac{3}{4}$	Angle	30	$13\frac{3}{8}$	$3\frac{1}{2} \times 3\frac{1}{2} \times \frac{5}{16}$	7,700
Power Transmission Arms—Pinholes, $\frac{13}{16}$ in, Pole-Mounting Hole, $\frac{11}{16}$ in						
2	28	Flat	24	$3 \times 3 \times \frac{1}{4}$	1,290
2	40	Flat	36	$3 \times 3 \times \frac{1}{4}$	1,840
2	52	Flat	48	$3 \times 3 \times \frac{1}{4}$	2,410
4	76	Angle	24	24	$3 \times 3 \times \frac{1}{4}$	3,490
2	80	Angle	74	$3\frac{1}{2} \times 3\frac{1}{2} \times \frac{5}{16}$	5,280
4	116	Angle	38	36	$3\frac{1}{2} \times 3\frac{1}{4} \times \frac{5}{16}$	7,645

40. Crossarm braces are made from galvanized flat strap iron (Fig. 8.24, I), ribbed strap iron (Fig. 8.24, II), or angle iron (Fig. 8.24, III). Braces are attached to the back of each crossarm by a carriage bolt, with the head of the bolt at the front with a round washer under it (Figs. 8.47 and 8.60). The braces are secured to the pole with a through bolt or a lag screw. The flat type is used for ordinary loads. It is made in lengths varying in 2-in. (50.8-mm) increments from 20 to 32 in. (508 to 812.8 mm), the 28-in. (711.2-mm) length being the most common. The ribbed type, being about 25 percent stronger, is used for heavier loads. The angle-iron type is used for very heavy lines. The standard sizes are given in Table 41, the first four being the Edison Electric Institute

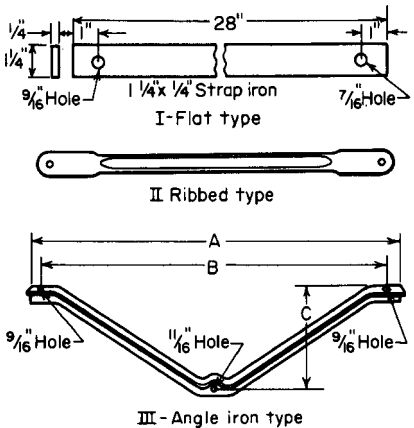


FIGURE 8.24 Standard crossarm braces.
[Hubbard & Co.]

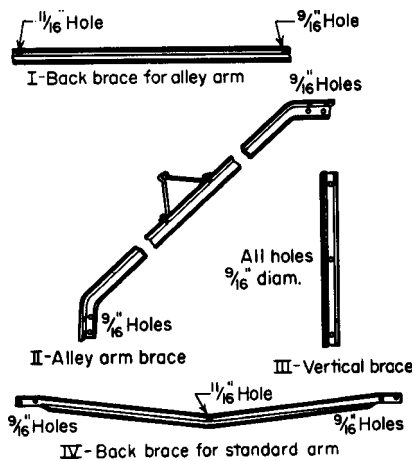


FIGURE 8.25 Special types of crossarm braces.
[Hubbard & Co.]

standard for power company use. The alley-arm brace (Fig. 8.25, II) is used to support alley-type crossarms (see Sec. 62). The vertical brace (Fig. 8.25, III) supports the upper crossarms from the lowest crossarm in alley-arm construction (Fig. 8.49). The back brace (Fig. 8.25, IV) is fastened at the back of the crossarm and on the back of the pole. It is used as an alternative to double-arm construction at crossings and at abrupt turns in the line. A back brace for alley arms is shown in Fig. 8.25, I.

41. Angle Crossarm Braces*
(Hubbard & Co.)

Dimensions, in				Approx shipping weight, lb per 100 pieces
Angle size	A	B	C	
1 1/2 × 1 1/2 × 3/16	45	42	12	858
1 1/2 × 1 1/2 × 3/16	51	48	18	1,067
1 1/2 × 1 1/2 × 3/16	63	60	18	1,210
1 3/4 × 1 3/4 × 3/16	75	72	22	1,716
1 1/2 × 1 1/2 × 3/16	51	48	14	974
1 1/2 × 1 1/2 × 3/16	40	37	12	781
1 1/2 × 1 1/2 × 3/16	51	48	14 3/4	979
1 3/4 × 1 3/4 × 3/16	63	60	18	1,408
1 3/4 × 1 3/4 × 3/16	69	66	20	1,551
1 3/4 × 1 3/4 × 3/16	75	72	18	1,639
2 × 2 × 3/16	75	72	22	1,958

*Refer to Fig. 8.24, III.

42. Crossarm Back Braces (Fig. 8.25, IV)

Angle size, in	Length overall, in.	Approx shipping weight, lb per 100 pieces	Angle size, in	Length overall, in	Approx shipping weight, lb per 100 pieces
1 1/2 × 1 1/2 × 3/16	48	550	1 3/4 × 1 3/4 × 3/16	94	1,540
1 1/2 × 1 1/2 × 3/16	60	825	1 3/4 × 1 3/4 × 3/16	109	2,204
1 1/2 × 1 1/2 × 3/16	72	1,200			

43. Insulators are used for insulating the electrical conduction wires and guy wires from the pole structure. The different types may be classified as pin, suspension, spool, strain, and wire-holder insulators. Either pin-type (Fig. 8.26) or suspension-type insulators (Fig. 8.30) are used for supporting the wires of the main electrical circuits. Spool insulators (Fig. 8.32) are used principally in the assembly of insulator racks (Fig. 8.33) for supporting low-voltage distribution mains from the sides of poles or buildings. Combined with a clevis, they are sometimes used for dead-ending low-voltage main electrical circuits. Strain insulators are used principally for insulating guy wires from the pole structure so that contact with the lower portion of the guy will not be dangerous. One type of porcelain strain insulator is frequently used for dead-ending low-voltage main electrical circuits or distribution wires. Wire-holder insulators are used in various assemblies for supporting service wires on buildings and for supporting, on the pole structure, taps for certain street-lighting luminaires. Insulators are made of either glass or porcelain, the choice for any particular size and voltage being determined by weighing the electrical and mechanical characteristics against first cost. Glass has been most commonly used for pin insulators (Fig. 8.26, I) for voltages up to 5000 V. Porcelain has been most commonly used for pin insulators for higher voltages and for the other types of insulators.

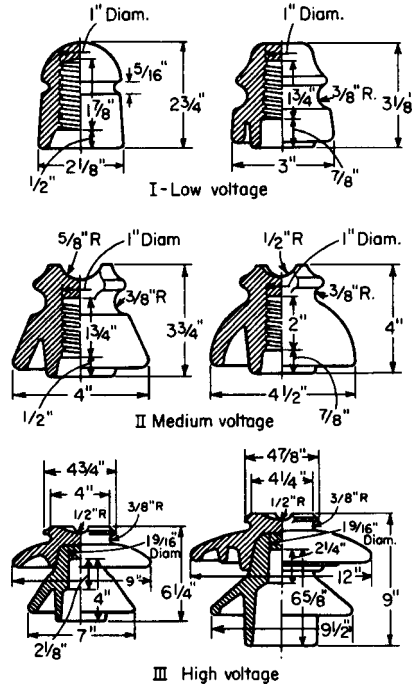


FIGURE 8.26 Typical pin-type insulators. [Locke Insulators, Inc.]

44. Pin-type insulators are molded with a central threaded hole so that the insulator is supported from threaded insulator pins mounted on the crossarms. These insulators are made in various shapes and with varying contours to meet the insulating requirements for different voltage classifications. For low-voltage work the insulators are generally grooved on the side for support of the wires. Medium-voltage insulators frequently have wire grooves on both top and sides, and the higher-voltage ones are made with only top grooves. Typical pin-type insulators are shown in Fig. 8.26.

45. Insulator pins. Pin insulators of the type shown in Fig. 8.26 are fastened on crossarms with insulator pins which thread into the cast thread inside the insulator. Insulator pins may be wood, steel, steel and lead, or steel and wood (Fig. 8.27). The wood pins (Fig. 8.27, IV) are made from oak or locust, the latter being preferred as less apt to crack. Wood pins are used on communications circuits and low-voltage distribution circuits on account of their low cost. Steel pins (Fig. 8.27, I and II) are used on the higher-voltage, longer-span lines, where the side loads on the pin are greater. Combination wood-cob-with-steel-bolt pins (Fig. 8.27, III) provide stronger construction than the plain wood at lower cost than all-steel pins. Lead adapters (Fig. 8.27, V) can be used with 1-in. steel pins to fit 1 3/8-in. insulator threads.

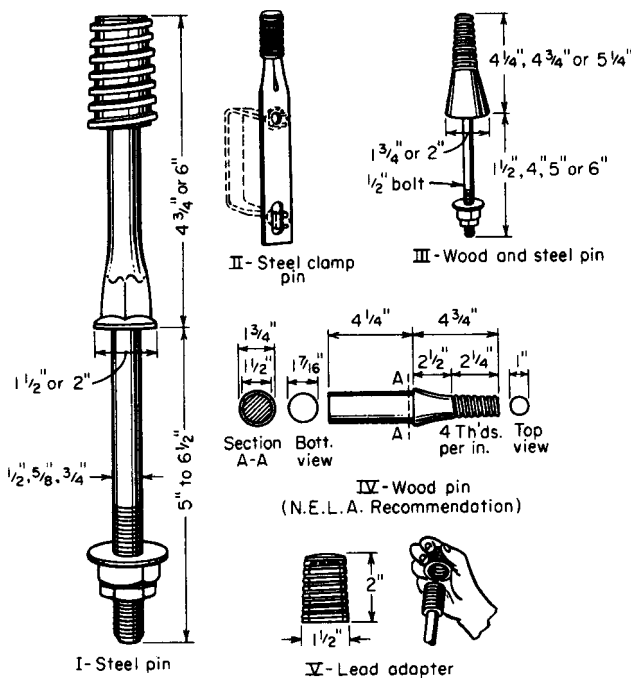


FIGURE 8.27 Insulator pins. [Line Material Co.]

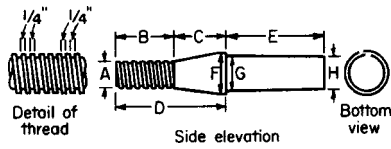


FIGURE 8.28 Wooden insulator pin.

46. Wooden insulator pins. All standard insulator pins of 1- and 1 3/8-in. top diameter have four threads to the inch and a tapering diameter of 1/16-in. increase for each inch in length. (See Fig. 8.28.)

Dimensions, in								Shipping weight per 1,000 lb
A	B	C	D	E	F	G	H	
1	2 1/2	2 1/4	4 3/4	4 1/4	1 3/4	1 1/2	1 7/16	400
1	2 1/2	4 3/4	7 1/4	4 1/4	2	1 1/2	1 7/16	510
1	2 1/2	4 3/4	7 1/4	4 1/4	2 1/4	1 3/4	1 11/16	700
1	2 1/2	4	6 1/2	5	2 1/2	2	1 5/16	930
1 3/8	2 1/4	2 1/2	4 3/4	4 1/4	1 7/8	1 1/2	1 7/16	400
1 3/8	2 1/4	5	7 1/4	4 1/4	2	1 1/2	1 7/16	510
1 3/8	2 1/4	5	7 1/4	4 1/4	2 1/4	1 3/4	1 11/16	700
1 3/8	2 1/4	4 1/4	6 1/2	5	2 1/2	2	1 5/16	930
1 3/8	2 1/4	7 1/4	9 1/2	5	3	2	1 5/16	1,160
1 3/8	2 1/4	8 3/4	11	5	3 1/2	2	1 5/16	1,280
1 3/8	2 1/4	9 3/4	12	5	3 1/2	2	1 5/16	1,360

47. Wood pins are held in crossarms

with a sixpenny nail, as shown in Fig. 8.29. The nail should not be driven entirely in. Enough of its length should extend so that the cutting jaws of a pair of pliers can be forced under the head and the nail thereby withdrawn. If this suggestion is followed, a pin can readily be removed as required.

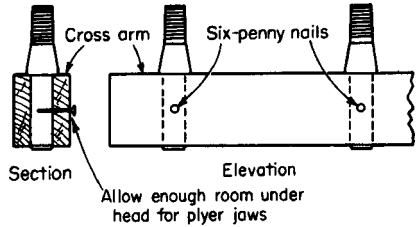


FIGURE 8.29 Fastening pin to crossarm.

48. Steel pins are either clamped over the crossarm as in Fig. 8.27, II, or the rod projects through a hole in the crossarm and is held in place with a washer, square-head nut, and pal nut (Fig. 8.27, I). The clamp type does not weaken the crossarm by the drilling of the holes but is more expensive.

49. Suspension insulators are used to support wires from under crossarms. They are used on high-voltage lines, where pin insulators would become large, expensive, and unwieldy, and are sometimes used on lower-voltage lines also. They are made in a number of different styles varying in hardware and petticoat diameters. There are three general types of hardware: hook-and-clevis, ball-and-socket, and the tongue-and-clevis, as illustrated in Fig. 8.30. The hook type (Fig. 8.30, I) is used principally to support street-lighting units. Whether to use the ball-and-socket type (Fig. 8.30, II) or the tongue-and-clevis type (Fig. 8.30, III) on power circuits is mostly a matter of individual choice. With the tongue-and-clevis type a round pin is used to hold the tongue of one unit in the clevis of the other. A cotter pin slips through a hole in the end of the round pin to keep the pin from slipping out. With ball-and-socket hardware the round pin is eliminated. The insulators are assembled by sliding the ball of one insulator into the socket of the next one from the side. A cotter pin is slipped in from the back of the socket, taking up sufficient space in the socket so that the ball cannot slide out. The socket clevis (Fig. 8.30, IV) is used when it is desired to support other hardware from the bottom of the insulator.

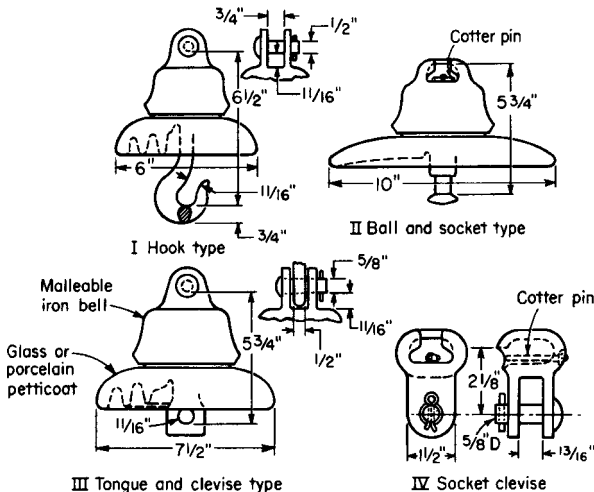


FIGURE 8.30 Suspension insulators. [Locke Insulators, Inc.]

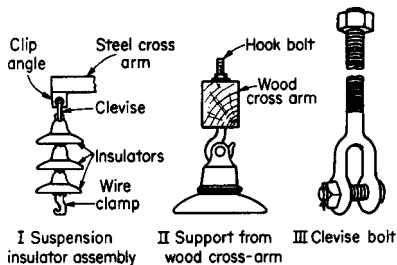


FIGURE 8.31 Details of suspension insulator supports.

and the number of units in the string affect the voltage rating. Small-diameter petticoats are preferred for locations where the insulators are subject to malicious damage from stones or bullets. The larger-diameter units are ordinarily used on the longer strings on high-voltage lines, where the wires are at a greater height from the ground.

50. Spool- and wire-holder-type insulators are used in single-wire or rack assemblies for supporting low-voltage circuits on the sides of poles and buildings and for dead-ending service wires on buildings, poles, and crossarms. In the rack assemblies (Fig. 8.33) the insulators are removable from the rack for easy replacement in case of breakage. The racks are made in two-, three-, and four-wire assemblies. Typical spool and wire-holder insulator assemblies are shown in Figs. 8.32 to 8.35.

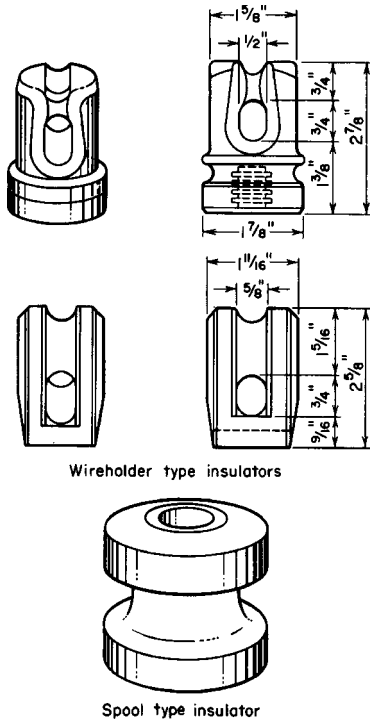


FIGURE 8.32 Typical spool- and wire-holder-type insulators. [General Electric Co.]

Suspension insulators are made up in strings, as shown in Fig. 8.31. A clevis is used to support them from steel crossarms as shown in I. With wood crossarms a hook bolt through the crossarm can be used as in II, or a clevis bolt as shown in III. The insulators are supported from each other with no additional hardware except the pins. The wire is supported from the bottom insulator with a wire clamp which is made in various types depending on the size of the wire. The voltage rating of a complete assembly is determined by the manufacturer from flashover tests. The diameter and shape of the petticoat

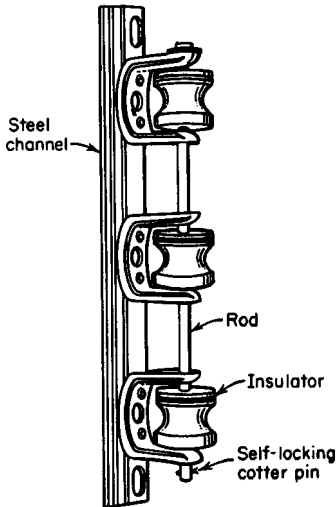


FIGURE 8.33 Low-voltage secondary rack. [Line Material Co.]

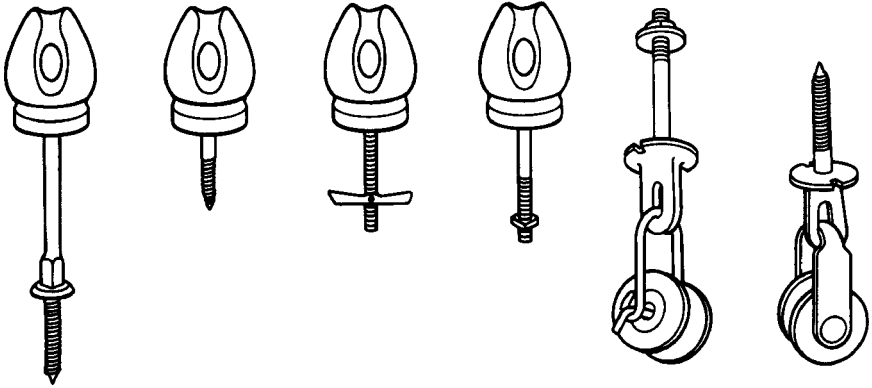


FIGURE 8.34 Typical single-wire insulator assemblies. [General Electric Co.]

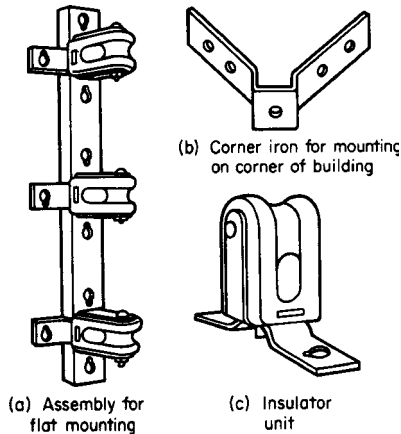


FIGURE 8.35 Typical wire-holder rack assembly. [General Electric Co.]

51. Strain insulators are used in guys and are also used in line wires at dead-ending points. Composition, porcelain, and wooden strain insulators (Fig. 8.36) were once popular with some companies and afford excellent insulation but have the objection that if an insulator burns, the wire that it supports falls. Composition and porcelain strain insulators can be made so that even if the insulating material fails, the supported wires will not fall. Figures 8.37 and 8.38 show types meeting these requirements. The strain insulator of Fig. 8.37 is inexpensive and satisfactory and has become very popular in electric-lighting-line construction.

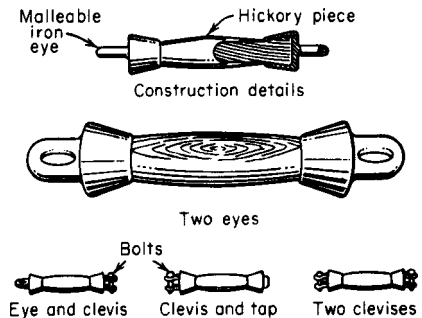


FIGURE 8.36 Wooden strain insulators.

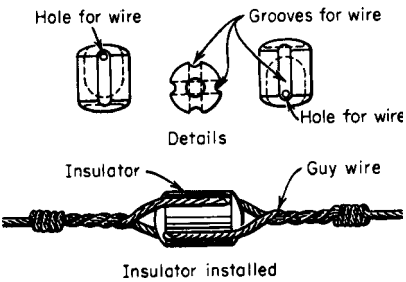


FIGURE 8.37 A porcelain strain insulator.

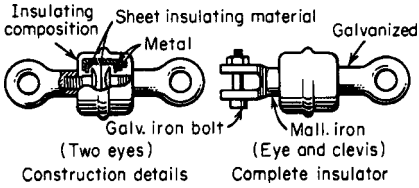


FIGURE 8.38 Composition strain insulators.

52. Emergency strain insulators can be made by knocking the end out of common glass line-wire insulators, as illustrated in Fig. 8.39. Then break out the end, hold the insulator in one hand and strike the inside of the top a sharp blow with the handle of a pair of pliers or a pair of connectors or with a screwdriver held in the other hand. If one emergency insulator will not give sufficient insulation, two or more can be used in series. Emergency strain insulators thus made are not strong enough for heavy guy wires but are more suitable for insertion in line wires.


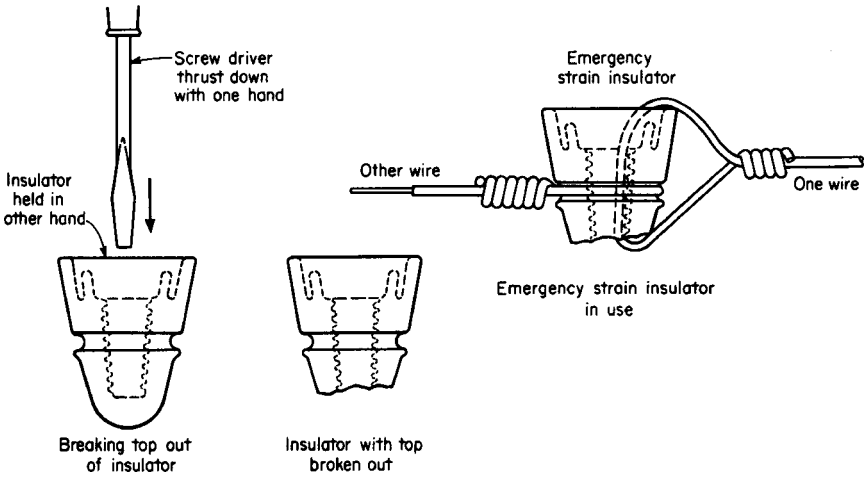


FIGURE 8.39 Emergency strain insulators.

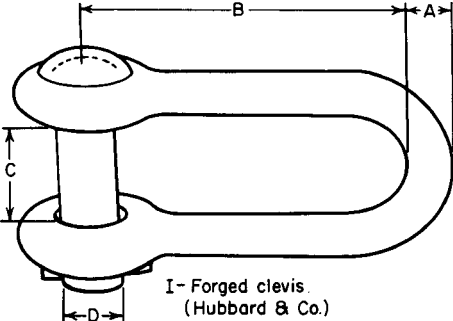53. Clevises are used in making up assemblies connecting insulators, straps, strands, etc., together. Figure 8.40 illustrates some types of clevises. The forged clevises (Fig. 8.40, I) and bent strap clevises (Fig. 8.40, II) are used to connect dead-end insulators to crossarms (Fig. 8.41, I and II). The eye clevis (Fig. 8.40, III) will connect a dead-end insulator to another piece of hardware having a pin connection. The thimble clevis (Fig. 8.40, IV) will connect a stranded cable to an insulator assembly (Fig. 8.41, III). The strain-insulator clevis (Fig. 8.40, V) is used to connect a strain insulator of the type in Fig. 8.37 to an eyebolt or eye nut (Fig. 8.41, IV).



Dimensions in inches				Approximate shipping weight lbs, 100 pcs.
A	B	C	D	
1/2	2	1 1/16	5/8	66
9/16	3	1 3/8	3/4	146
9/16	4	1 3/8	3/4	160
1/2	3	3/4	5/8	85

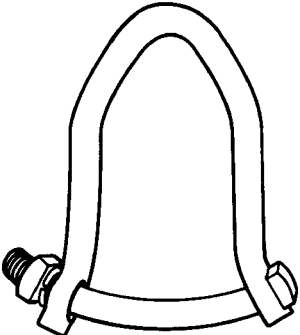
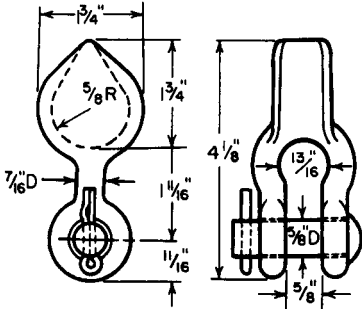
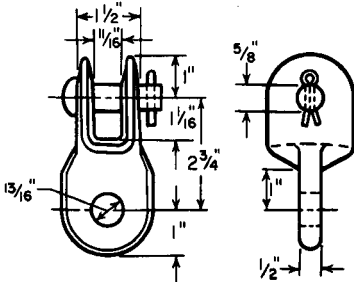
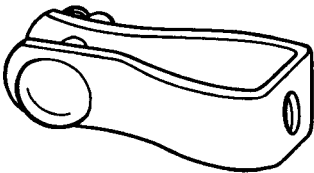


FIGURE 8.40 Clevises.

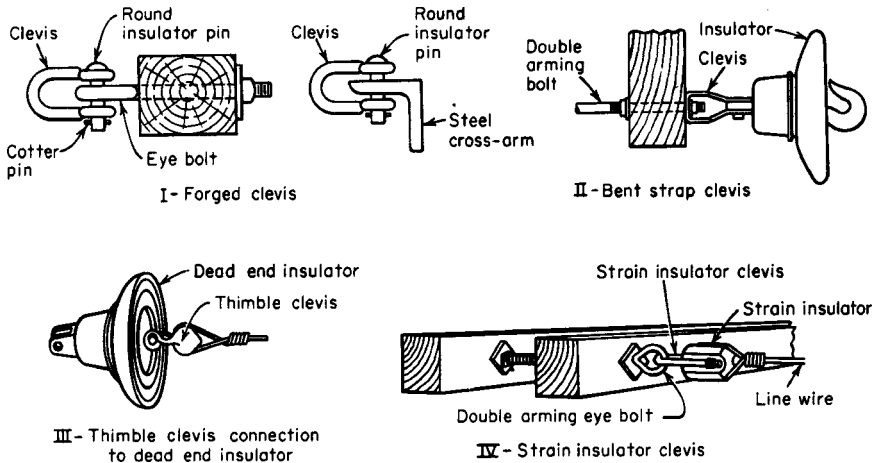


FIGURE 8.41 Applications of clevises to crossarm connections. [Hubbard & Co.]

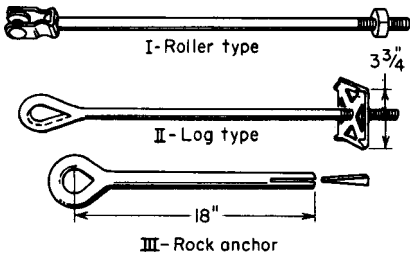


FIGURE 8.42 Guy anchor rods. [Line Material Co.]

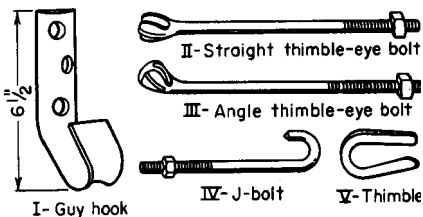


FIGURE 8.43 Guy hook, thimble-eye bolts, and J bolt. [Line Material Co.]

when a ground wire runs down the pole. The plate will fit over EEI standard 1-in. ground-wire molding and prevent the guy strand from cutting or crushing the ground-wire molding.

An alternative to this method is to connect the guy to a thimble-eye bolt. The straight thimble-eye type (Fig. 8.43, II) is used when guying between a main pole and a stub pole. The angle thimble-eye type (Fig. 8.43, III) is used when guying into the ground. A J bolt (Fig. 8.43, IV) can also be used for attaching a guy wire to a pole, but this requires the use

54. Guy anchor rods are used between the anchor and in the ground and the guy strand. Figure 8.42, I, illustrates a roller type which allows the strand to turn on the rod and prevents twisting of the guy strand. Figure 8.42, II, is used to attach to a log anchor. Figure 8.42, III, is used when anchoring to solid rock or masonry. Guy anchor rods are made in $\frac{1}{2}$ -, $\frac{5}{8}$ -, $\frac{3}{4}$ -, and 1-in. diameters.

55. In connecting a guy strand to the pole, the strand may be wrapped around the pole or may be connected to a special bolt. When the strand is wrapped around the pole, guy hooks (Fig. 8.43, I) are used to prevent the strand from slipping down the pole, and guy plates (Fig. 8.44, II) or shims (Fig. 8.44, I) are placed under the guy strand to prevent its cutting into the pole. The molding strain plate of Fig. 8.44, III, is used under the guy-wire wrap on poles

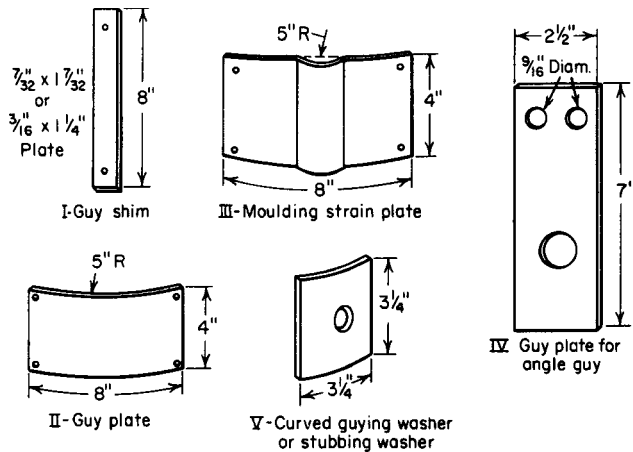


FIGURE 8.44 Guy plates and shims. [Locke Insulators, Inc., and Hubbard & Co.]

of a thimble (Fig. 8.43, V) in addition to the bolt. A stubbing washer should be used under the nut of the thimble-eye or J bolt. Under the eye of the bolt a stubbing washer (Fig. 8.44, V) is used for a 90° guy and a guy plate of the type shown in Fig. 8.44, IV, for an angle guy. Guying construction is discussed in Sec. 85.

56. When a guy strand is connected to a bolt or rod of smaller diameter, the strand should be wrapped around a thimble (Fig. 8.43, V) to prevent it being cut or broken from too sharp a bend.

57. Guy clamps (Fig. 8.45) are used for securing the ends of guy-wire strands. They are made in two-, three-, and four-bolt types.

Type	Length, in
Two-bolt, light	3
Two-bolt, heavy	4
Three-bolt, heavy	4
Three-bolt, heavy	6
Three-bolt, heavy	6
Four-bolt, heavy	8

FIGURE 8.45 Guy clamp. [Joslyn Mfg. & Supply Co.]

58. Guy protector guards are installed over guy rods, at locations where the guy might be damaged by traffic, to conceal the connection of the guy strand to the eye of the guy rod, to make the guy more visible, and to minimize accidents. They may be made of a wood strip or of steel. One type of guard (Fig. 8.46) consists of a steel plate rolled into cylindrical form, leaving a split on one side. Special clamps are fastened to the strand, and

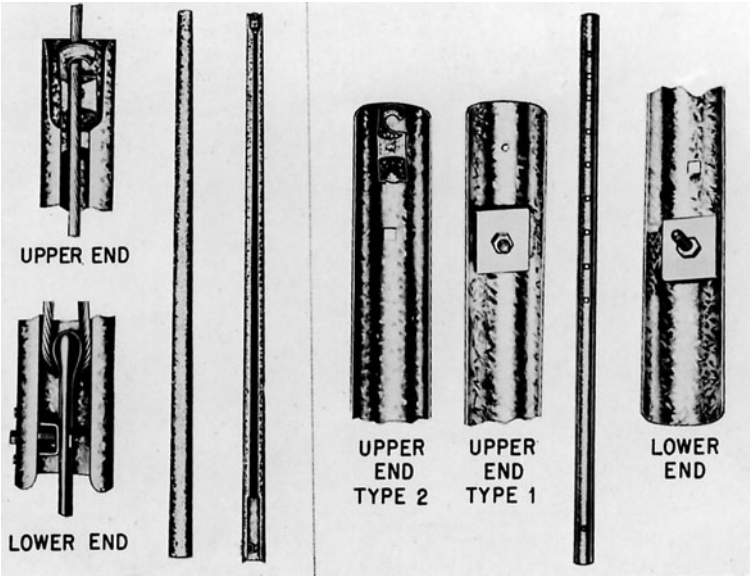


FIGURE 8.46 Guy-wire protectors. [Line Material Co.]

the guard is slipped over the strand and held by the clamps. The split is turned down toward the ground so that it is not ordinarily noticeable.

59. For guy wire, seven-strand galvanized-steel cable is used. The National Electrical Safety Code recommends that for Grades A and B construction the maximum load in the guy should not exceed 50 percent of the ultimate strength; for grade C construction 75 percent is allowable. The following table gives the strand sizes, weights, and ultimate strength of guy wire:

Diam, in	Approx weight, lb per 1,000 ft	Approx strength, lb	Diam, in	Approx weight, lb per 1,000 ft	Approx strength, lb
$\frac{3}{4}$	1,200	16,700	$\frac{3}{8}$	273	4,250
$\frac{3}{4}$	813	11,600	$\frac{5}{16}$	205	3,200
$\frac{9}{16}$	671	9,600	$\frac{9}{32}$	164	2,570
$\frac{1}{2}$	517	7,400	$\frac{1}{4}$	121	1,900
$\frac{7}{16}$	399	5,700			

POLE-LINE CONSTRUCTION

60. A single crossarm assembly for a two-wire single-phase circuit is shown in Fig. 8.47. Additional insulators for three- or four-wire lines can be added to the arm 14½ in. (368.3 mm) closer to the pole from the insulators shown. This type of arm is used for normal spans and loads when there is a straight line with no obstructions.

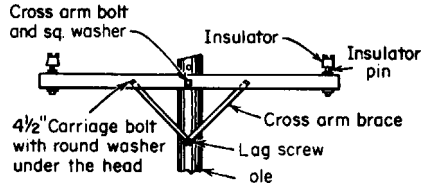


FIGURE 8.47 Single crossarm assembly.

61. Double arms are used whenever the stress on the arms is unusually severe or when every precaution is necessary to ensure safety. Double arms are often used on the poles at each side of a street intersection, at each side of railroad crossings, and at corners or other points where the direction of a line changes. Figures 8.48, 8.51, 8.52, 8.70, 8.86, 8.87, 8.89, and 8.90 show examples of double-armed poles. The two crossarms can be separated by wooden spacing blocks (Fig. 8.51), by spacing bolts or double-arming bolts (Fig. 8.48A), or by spacing nipples (Fig. 8.48B).

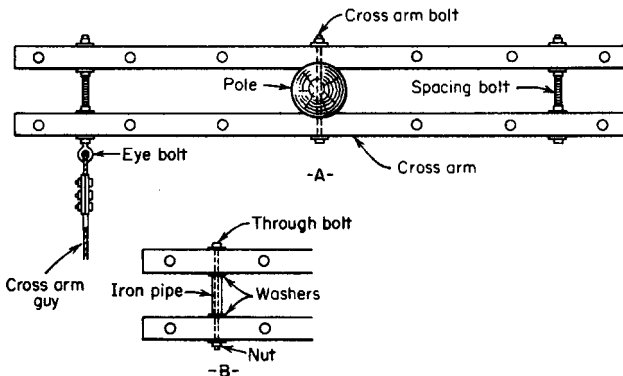


FIGURE 8.48 Method of arranging double arms.

The spacing blocks can be sawed from a crossarm. An $11/16$ -in. (17.462-mm) hole bored through the block and crossarm accommodates a $5/8$ -in. bolt. A washer is used under bolt head and nut. Spacing bolts or double-arming bolts can be used instead of spacing blocks (Fig. 8.48A); the bolts are threaded for most of their length. A galvanized-iron pipe nipple (Fig. 8.48B) can also be used to separate the crossarms. A $3/4$ -in. spacing bolt probably provides the preferable and most economical method; spacing blocks rot readily, and the bolts through them corrode rapidly. When an arm guy is to be attached to the crossarm, a double-arming eyebolt can be used as shown. Single-armed poles are now often used, particularly on junction poles, as shown in the accompanying illustrations, in locations where double arms were formerly thought necessary. The single arms are preferable in that they allow greater climbing space for lineworkers.

62. Alley arms (Figs. 8.49 and 8.50) are used in alleys and other locations where it is necessary to clear obstructions by offsetting the crossarm toward one side of the pole. The crossarms will be special arms, but standard material can generally be used for the rest of the construction. Types of standard braces for sidearm construction are discussed in Sec. 40.

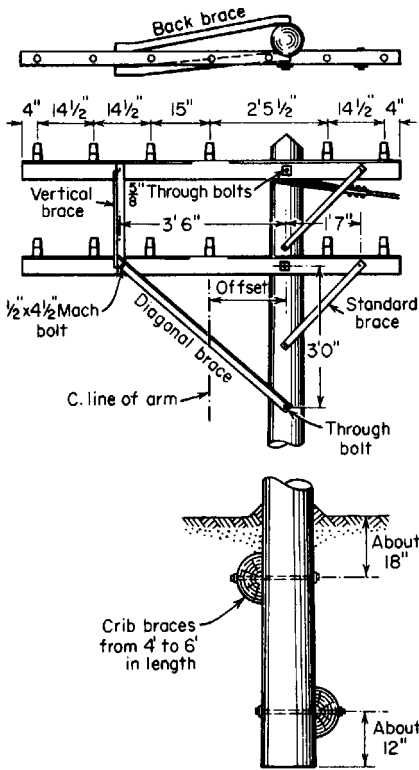


FIGURE 8.49 A side-arm pole.

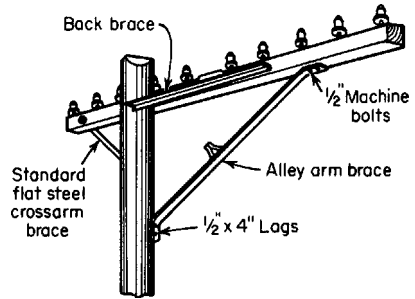


FIGURE 8.50 Bracing for alley arms. [Hubbard & Co.]

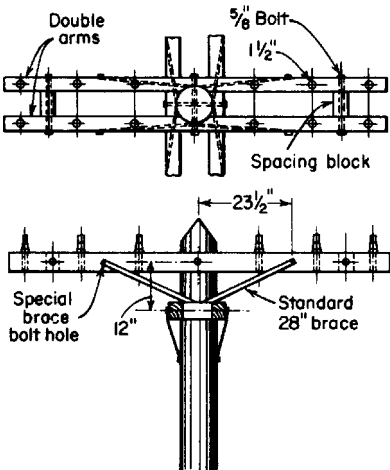


FIGURE 8.51 A buck-armed pole, double arms.

Side guys or crib braces (see Fig. 8.49) are used when the line wires are heavy to counteract the tendency of the pole to tip.

63. Reverse or buck arms are used at corners (see Figs. 8.51, 8.52, 8.86, and 8.87). In placing buck arms, ample room must be provided through which a line-worker can reach the top of the pole. A 20-in. (508-mm) square space is the minimum. Crossarm braces on buck-arm poles should be attached to the arms at a point 23 1/2 in. (596.9 mm) from the center of arm instead of at 19 in. (482.6 mm), the standard distance for ordinary framing. The 3/8-in. (9.525-mm) holes for the brace (carriage) bolts must be specially bored, at the above spacing, in buck arms. The 23-in. (584.2-mm) spacing is correct for 28-in. (711.2-mm) braces.

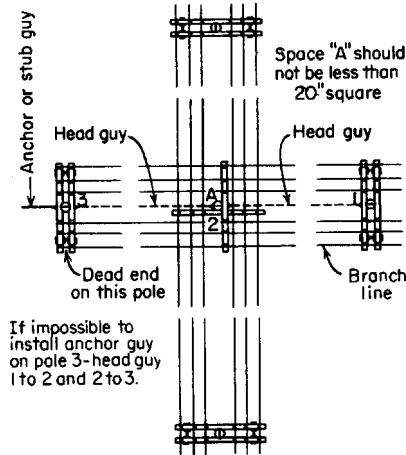


FIGURE 8.52 Junction pole without double arms.

64. A gain is a flat bearing surface on the pole at the point of attachment of the crossarm used so that the crossarm will be rigid. The gain is usually formed by cutting a notch in the side of the pole, as shown in Fig. 8.53. The gaining template of Fig. 8.54 is convenient in laying out the gains. The gain should be exactly the width of the crossarm, ensuring a snug fit. In good work, gains should always be spaced on 24-in. (609.6-mm) centers and should be $\frac{1}{2}$ in. (12.7 mm) deep. Nothing is accomplished by making them deeper. In using the gaining template (Fig. 8.53, II) the point of the "roof" of the template is placed exactly over the point of the roof of the pole and the template is shifted until its centerline (which should be marked thereon) lies exactly under a cord stretched from the roof point to the center of the pole at the groundline. Then the positions of the crossarm gains are indicated by knife scratches made along the sides of the crosspieces on the template.

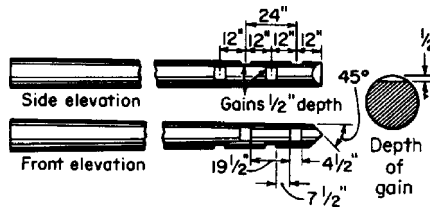


FIGURE 8.53, I Gains in pole.

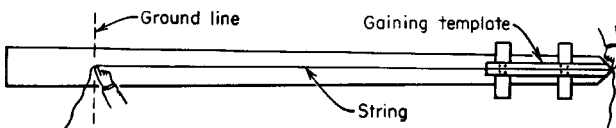


FIGURE 8.53, II Use of gaining template.


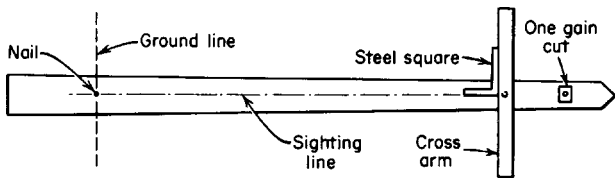


FIGURE 8.53, III Locating gain with steel square and crossarm.

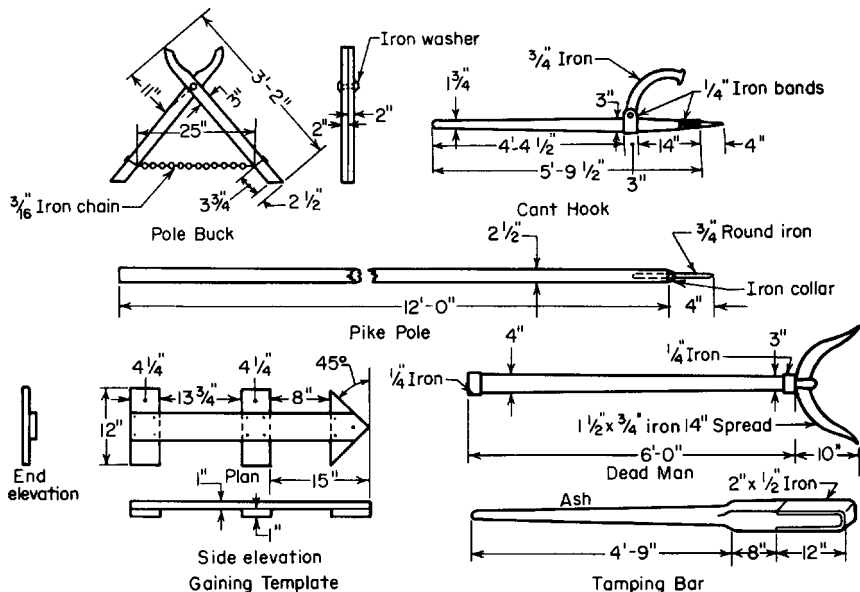

Note: The tool illustrated above as a Cant-Hook is properly termed a Peavie.
A peavie has a spike in the end of its handle, while a cant-hook has no spike.

FIGURE 8.54 Some line-construction tools.

If a gaining template is not available, a crossarm (Fig. 8.53, III) can be laid on the pole with a steel square held against its lower face, the outer edge of the short limb of the square lying at the center of the pole and the center of the crossarm. Rotate the crossarm in a horizontal plane until, by sighting, it is evident that the edge of the square coincides with an imaginary centerline to a nail in the center of the butt at the groundline. Indicate the gain location by knife scratches along the crossarm sides.

65. Metal gains (Fig. 8.55, I) can be used in attaching the crossarm to the pole instead of notching the pole. By spacing the crossarm about 1/2 in. (12.7 mm) away from the pole metal gains allow for complete drainage of water from the joint and prevent rotting of the pole and crossarm. Also, at double-arming locations, the use of metal gains spaces crossarms about 2 in. (50.8 mm) farther apart, which allows more room between the pin insulators on the two arms and more room for tie wires, an important factor on the higher-voltage lines.

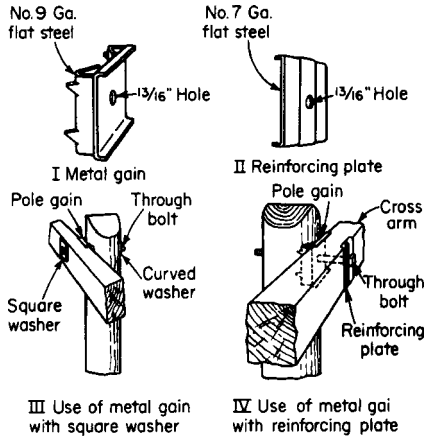


FIGURE 8.55 Metal gains. [Hubbard & Co.]

Metal gains are a great convenience when installing an additional crossarm to an existing pole which did not have the gain cut in it. In using metal gains a square washer can be employed under the head of the through bolt (Fig. 8.55, III). A better construction is to use a reinforcing plate (Fig. 8.55, II) located on the outside of the crossarm (Fig. 8.55, IV). This makes for a more rigid construction and helps to prevent checking and splitting of the crossarm at the attachment point.

66. Pole steps (Fig. 8.56, I) can be located on the pole, as shown in Fig. 8.57. A $\frac{3}{8}$ -in. (9.525-mm) hole 4 in. (101.6 mm) deep is bored for the iron step. It is driven into the hole until it projects 6 in. (152.4 mm) from the pole and is then turned with a wrench until the

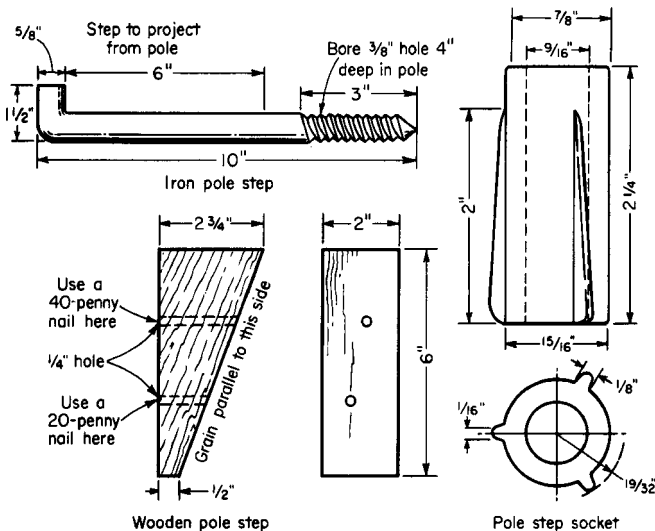


FIGURE 8.56, I Pole steps and socket.

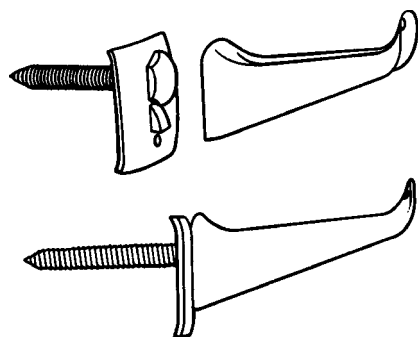


FIGURE 8.56, II Detachable pole step. [Joslyn Mfg. & Supply Co.]

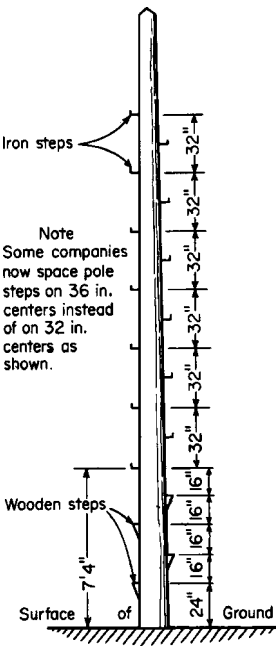


FIGURE 8.57 Location of pole steps on pole.

hook end is vertical. The wooden step is held to the pole with one 40-penny and one 20-penny nail or with cut spikes. Often the wooden steps are omitted. The lowest iron step should be at least 6½ ft (2 m) from the ground or other readily accessible place. One wood block (on a private right-of-way, more than one) may be placed on poles carrying communications cables or conductors below supply conductors, but the lowest block is not to be less than 3½ ft (1.1 m) from the ground or other readily accessible place. On poles carrying only communications conductors, additional wood blocks may be used.

Detachable pole steps are available. The one shown in Fig. 8.56, II, slips over the head of the special 9/16- by 4-in. lag screw. Turning is prevented by a punched projection. The steps can be removed to prevent unauthorized climbing.

Pole-step sockets (Fig. 8.56, I) are sometimes substituted for the wooden steps. The sockets drive into a 7/8-in. (22.225-mm) hole. To climb the pole a lineworker can temporarily insert bolts or similar pieces of metal into the sockets.

67. Secondary racks are mounted on the sides of poles or buildings to carry low-voltage mains, usually of 440 V or less, to locations where building services are tapped off. Figure 8.58, II, illustrates the rack used as a dead end with a head guy to take the tension of the wires. The building service in this case is tapped with open wires. The higher-voltage wires are shown mounted on the crossarm at the top of the pole. Figure 8.58, I, shows two secondary lines crossing; Fig. 8.58, III, shows a corner pole; Fig. 8.58, IV, shows the secondary wires supported on the side of the pole with an open-wire service tap; and Fig. 8.58, V, shows a similar construction with taps to a service cable.

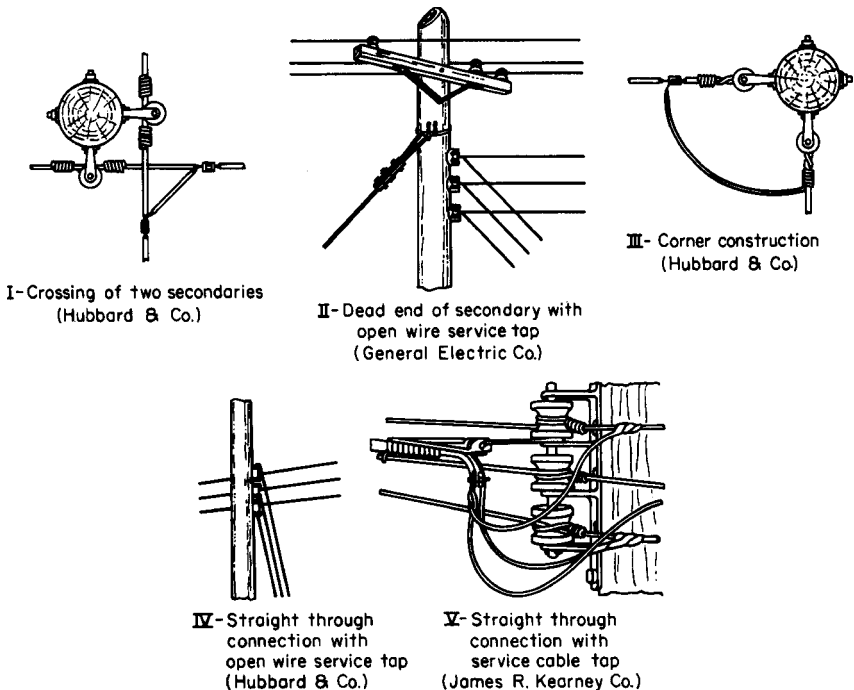


FIGURE 8.58 Ways of using secondary racks.

68. Distribution transformers reduce the primary-line voltage to a low secondary voltage suitable for customers' use. They are mounted on the side of poles or on a platform between poles. Figure 8.59, I, shows such a transformer mounted on special crossarms in the space between the high-voltage wires at the top of the pole and the low-voltage wires on the secondary rack. Taps connect the primary of the transformer, through fuses mounted on the extra crossarm, to the high-voltage wires. The secondary of the transformer is connected directly to the secondary wires at the secondary rack. Attention should be given to making these connections in a neat manner, using right-angle bends and running the several wires of a circuit parallel to each other. Whenever there is a danger of a wire touching another wire or a crossarm or brace or coming too close to a pole, wire-holder insulators (Fig. 8.32) or pin insulators should be installed on the sides of crossarms to keep the connecting wires in their proper position. Figure 8.59, II, shows a similar arrangement when the secondary wires are closer to the primary wires and the transformer must be mounted below the secondary wires. The insulators on the transformer crossarm keep the primary taps at a safe distance from the secondary wires. A compact installation is shown in Fig. 8.59, III. Such an arrangement is quite satisfactory when there are only two primary wires spaced sufficiently far apart to give plenty of climbing and working space. A three-phase bank consisting of three single-phase transformers can be mounted on a platform supported from two poles located fairly close together. This is a common practice for supplying an industrial plant. For three-phase distribution along city streets the three transformers can be mounted singly or adjacent poles, each one similar to Fig. 8.59, I. This practice is preferable when the transformer platform would be conspicuous and unsightly. Additional details for the mounting of transformers are given in Div. 5.

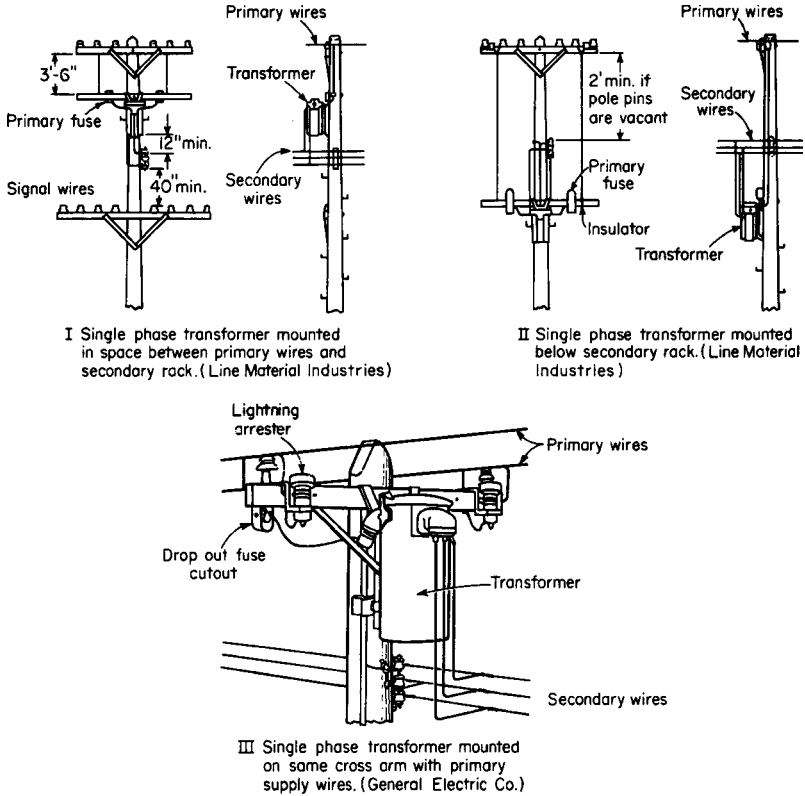


FIGURE 8.59 Mounting and wiring of distribution transformers.

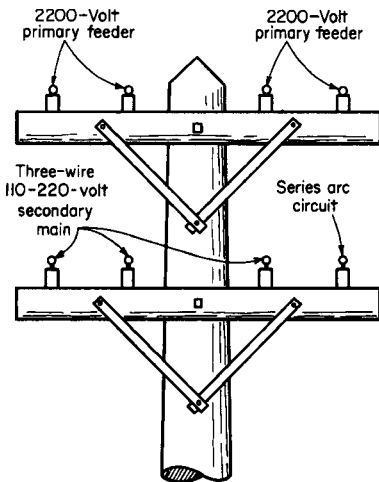


FIGURE 8.60 Location of circuits on a two-arm pole.

69. In locating circuits on poles, the through wires or trunk lines should be carried on the upper crossarms, and the local wires, those which are tapped frequently, should be carried on the lower crossarms. The two or three wires of a circuit should always be carried on adjacent pins. This is of particular importance with ac circuits, as the inductance, and consequently the inductive voltage drop, is increased as the distance between the wires of a circuit is increased. Wires of a circuit should always take the same pin positions on all poles to facilitate trouble hunting. Series circuits which do not operate during the daytime may often be carried on the pole pins of a crossarm. High-tension multiple circuits that are "hot" continuously are well placed at the ends of the arms out of the way of lineworkers. The neutral wire should always be in the center of a three-wire circuit. Figure 8.60 shows one good arrangement on a pole with two four-pin arms.

70. Joint use of poles for circuits of different power companies or for circuits of a power company and a telephone and telegraph company is frequently advantageous if the lines run along the same route (Fig. 8.61). In the rules for location of conductors and clearances, the power company circuits are frequently called simply *supply wires*; the telephone and telegraph company circuits are called *communications wires*. The National Electrical Safety Code provides that when supply circuits of different companies are located on the same pole, the higher-voltage line should be carried at the higher level except that the lines of each company may be grouped together and always carried in the same relative position. For each company the lines of higher voltage should be located in the higher position. Whenever a lower-voltage line is carried above a higher-voltage one, it must be on the opposite side of the pole. A vertical clearance of at least 4 ft (1.2 m) must be maintained between wires of different power companies, and a clearance of 6 ft (1.8 m) must be used if required by the rules of the NESC. Supply wires must be carried above communications wires, except that minor extensions may be made to existing systems which were installed with the communications wires above. Trolley feeder wires may be carried at the approximate level of the trolley wires irrespective of whether that location brings them above or below the communications wires.

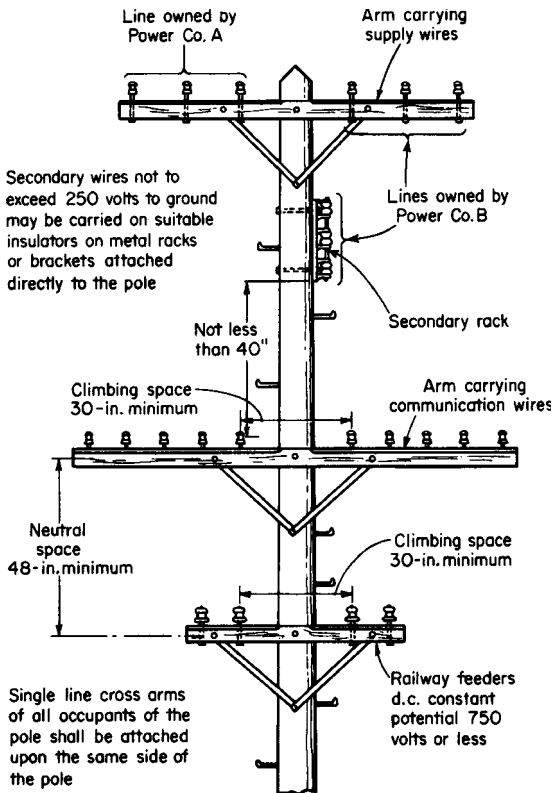


FIGURE 8.61 Construction of jointly used wood-pole lines carrying supply circuits and signal circuits, showing arrangement of attachments and clearances. [Hubbard & Co.]

71. Outside wiring as specified by the National Electrical Code. The article on outside wiring applies to electrical equipment and wiring for the supply of utilization equipment located on or attached to the outside of public and private buildings or run between buildings, structures, or poles on other premises served, but it shall not apply to equipment or wiring of an electric or communications utility used in the exercise of its function as a utility.

1. Application of Other Articles Application of other articles, including additional requirements to specific cases of equipment and conductors, is as follows:

Article 200: polarity identification

Article 210: branch circuits

Article 215: feeders

Article 230: services

Article 240: overcurrent protection

Article 250: grounding

Article 310: conductors for general wiring

Article 396: messenger-supported wiring

Article 398: open wiring on insulators

Article 426: fixed electric deicing and snow-melting equipment

Article 490: circuits and equipment operating at more than 600 V

Article 500: hazardous locations—general

Article 510: hazardous locations—specific

Article 550: mobile homes, manufactured homes, and mobile home parks

Article 553: floating buildings

Article 555 marinas and boatyards

Article 600: electric signs and outline lighting

Article 675: electrically driven or controlled irrigation machines

Article 680: swimming pools, fountains, and similar installations

Article 690: solar photovoltaic systems

Article 725: remote-control, signaling, and power-limited circuits

Article 760: fire alarm systems

Article 800: communications circuits and power-limited

Article 810: radio and television circuits

Article 820: community antenna television and radio distribution systems

2. Calculation of Load

a. Branch circuits. The load on every outdoor branch circuit is to be determined by the applicable provisions of Article 220, as given in Div. 3 of this book.

b. Feeders. The load to be expected on every outdoor feeder is to be determined by the procedure specified in Article 220, as given in Div. 3 of this book.

3. Conductor Covering Where within 3 m (10 ft) of any building or structure, other than supporting poles or towers, open individual (aerial) overhead conductors shall be insulated or covered. Conductors in cables or raceways, except Type MI cable, shall be of the rubber-covered or thermoplastic type and in wet locations shall comply with Sec. 310.8. Conductors for festoon lighting shall be of the rubber-covered or thermoplastic type.

Equipment grounding conductors need not be insulated or covered, and grounded circuit conductors need not be insulated or covered where the code specifically permits them to be uninsulated.

- 4. Size of Conductors** The ampacity of outdoor branch circuits and feeder conductors shall be according to the rating in Tables 18 to 21 of Div. 12 based on the loads as determined under Article 220.

5. Conductor Size and Support

- a. Overhead spans.* Overhead conductors shall not be smaller than No. 10 copper or No. 8 aluminum for spans up to 15 m (50 ft) in length and not smaller than No. 8 copper or No. 6 aluminum for longer spans.
- b. Festoon lighting.* Overhead conductors for festoon lighting shall not be smaller than No. 12 unless supported by messenger wires. In all spans exceeding 12 m (40 ft) the conductors shall be supported by messenger wire secured with strain insulators (Sec. 51). Festoon lighting, including both the circuit conductors and the messenger wire if applicable, must not be attached to a fire escape, downspout, or other plumbing equipment.

Definition. Festoon lighting is a string of outdoor lights suspended between two points.

- c. Over 600 V.* Overhead conductors operating at more than 600 V shall not be smaller than No. 6 copper or No. 4 aluminum where open individual conductors or smaller than No. 8 copper or No. 6 aluminum where in cable.

6. Lighting Equipment Installed Outdoors

- a.* For the supply of lighting equipment installed outdoors, the branch circuits shall comply with the requirements of Article 210 and Pars. *b* and *c* below.
- b.* A common neutral may be used for multiple ungrounded circuit conductors. The ampacity of the neutral conductor shall be not less than the calculated sum of the currents in all ungrounded conductors connected to any one phase of the circuit.
- c.* 277 V to ground may be used to supply luminaires (lighting fixtures) for illumination of outdoor areas of industrial establishments, office buildings, schools, stores, and other commercial or public buildings where a 900 mm (3 ft) clearance to windows, platforms, fire escapes, and the like is maintained.
- d.* Branch circuits exceeding 277 V for permanently installed luminaires shall be permitted to supply the auxiliary equipment of electric-discharge lamps for area illumination, provided they operate at not more than 600 V between conductors. The luminaires must be at least 6.7 m (22 ft) high on poles, or at least 5.5 m (18 ft) high on other structures such as tunnels.

- 7. Wiring on Buildings** Outside wiring on surfaces of buildings may be installed for circuits when not in excess of 600 V as open conductors on insulating supports, as multi-conductor cable, including UF, MC, or MI cable, as messenger supported wiring, in rigid metal conduit, in intermediate metal conduit, in rigid nonmetallic conduit, in cable trays, as cablebus, in wireways, in auxiliary gutters, in flexible metal conduit, in liquidtight flexible metal conduits, in liquidtight flexible nonmetallic conduit, in busways, or in electrical metallic tubing. Circuits of more than 600 V shall be installed as provided for services in Sec. 300.37. Circuits for signs and outline lighting shall be installed as provided in Article 600.

- 8. Circuit Exits and Entrances** Where outside branch and feeder circuits exit from or enter buildings, the installation shall comply with the requirements of Secs. 230.52 and 230.54 which apply to service-entrance conductors.

- 9. Open-Conductor Supports** Open conductors shall be supported on glass or porcelain knobs, racks, brackets, or strain insulators.

- 10. Open-Conductor Spacings** Conductors shall conform to the following spacings:
- a. *Open conductors exposed to weather.* 600 V or less, as provided in Table 230.51(C).
 - b. *Over 600 V.* As provided in Sec. 110.36 and 490.24.
 - c. *Separation from other circuits.* Open conductors shall be separated from open conductors of other circuits or systems by not less than 100 mm (4 in.).
 - d. *Conductors on poles.* Conductors on poles shall have a separation of not less than 300 mm (1 ft) where not placed on racks or brackets. Conductors supported on poles shall provide a horizontal climbing space not less than the following:

Power conductors, below communications conductors	750 mm (30 in.)
Power conductors alone or above communications conductors:	
300 V or less	600 mm (24 in.)
Over 300 V	750 mm (30 in.)
Communications conductors below power conductors	Same as power conductors
Communications conductors alone	No requirement

- 11. Supports over Buildings** See Sec. 230.29.
- 12. Point of Attachment to Buildings** See Sec. 230.26.
- 13. Means of Attachment to Buildings** See Sec. 230.27.
- 14. Masts as Supports** Masts must have sufficient rigidity to handle the strain, or they must be guyed accordingly. If a raceway mast is used, any fittings must be identified for use with masts, and only the feeder and branch-circuit conductors within the scope of Article 225 can be attached to the mast. For example, a telephone drop is not permitted to be attached to a power circuit mast, regardless of the strength of the raceway or the amount of guy wire support provided.
- 15. Clearance from Ground** Overhead spans of open conductors and open multiconductor cables of not over 600 V shall conform to the following:
 - 3.0 m (10 ft): above finished grade, sidewalks, or any platform or projection from which they might be reached where the supply conductors are limited to 150 V to ground and accessible to pedestrians only
 - 3.7 m (12 ft): over residential property and driveways and those commercial areas not subject to truck traffic where the voltage is limited to 300 V to ground
 - 4.5 m (15 ft): for those areas listed in the 3.7 m (12 ft) classification where the voltage exceeds 300 V to ground
 - 5.5 m (18 ft): over public streets, alleys, roads, parking areas subject to truck traffic, driveways on other than residential property, and other land traversed by vehicles such as cultivated, grazing, forest, and orchard land
- 16. Clearances Over Buildings for Conductors Not in Excess of 600 V** See Sec. 225.19 of the NEC.
- 17. Mechanical Protection of Conductors** Mechanical protection of conductors on buildings, structures, or poles shall be as provided for services (Sec. 230.50).
- 18. Multiconductor Cables on Exterior Surfaces of Buildings** Multiconductor cables on exterior surfaces of buildings shall be as provided for service cable (Sec. 230.51).
- 19. Raceways on Exterior Surfaces of Buildings** Raceways on exterior surfaces of buildings shall be arranged to drain and shall be made raintight in wet locations.
- 20. Underground Circuits** Underground circuits shall meet the requirements of Sec. 300.5.
- 21. Outdoor Lighting Equipment: Lampholders** Where lampholders are attached as pendants, they shall have the connections to the circuit wires staggered. If lampholders

have terminals of a type that puncture the insulation and make contact with the conductors, they shall be attached only to conductors of the stranded type.

22. **Outdoor Lighting Equipment: Location of Lamps** Location of lamps for outdoor lighting shall be below all energized conductors, transformers, or other electrical equipment, unless clearances or other safeguards are provided for relamping operations or unless the installation is controlled by a disconnecting means which can be locked in the open position.
23. **Vegetation as Support.** Vegetation, including trees, must not be used to support overhead conductor spans.
24. **More than One Building or Other Structure** Part II of NEC Article 225 provides the requirements covering the supply of one building or structure from another. The majority of the requirements are the same as for service entrances, as covered in Div. 9, Secs. 346 to 356. This part will, therefore, only cover the differences. The principal general difference is that wiring from one building to another, although superficially like service wiring, is not service wiring. A service entrance is the interface between premises wiring and the facilities of the serving utility. It is also the interface between wiring governed by the National Electrical Safety Code (NESC) and premises wiring governed by the National Electrical Code. These codes are very different because the NESC presumes that the maintenance of those systems will be performed by a highly regulated utility workforce operating under a unique workplace culture and environment, and that this will continue for the foreseeable future, given the organizational permanence of utility enterprises. If there is no utility interface, then there is no service. For this reason, it is incorrect to label the disconnecting means for one building fed from another as a “service” disconnect when it is actually a “building” disconnect. Specific differences are as follows:
 - a. Only one source of supply is permitted as a general rule. This is the same general rule as for services, but there are subtle differences. The permission to run multiple service laterals from a common connection to disconnected loads does not apply. The allowance for multiple supplies where the capacity requirement exceeds that which the local utility supplies through one service does not apply for obvious reasons, and the allowance for an exemption on capacity grounds by special permission does not apply either. The final difference is the permission, granted here and not for services, for additional supplies where there are “documented switching procedures” in place for safe disconnection. This normally arises on large, campus-style industrial distributions.
 - b. The six-disconnect rule is almost the same, but in this application, disconnects for surge-protective equipment and power monitoring equipment are not exempted from the allowable total of six. The access requirements, the grouping requirement, the requirement to segregate disconnects for certain critical systems, and the specification of minimum ratings for certain applications are the same as well.
 - c. For services, the allowable distance between a disconnect located outside the building and the point where the conductors enter the building is unspecified, whereas in this part of the code any disconnect, inside or outside, must be at a readily accessible location nearest the point of conductor entry. It is intended that a detached outdoor service disconnect be considered a structure, and if so considered, then the building served ends up in this part of the code and there is no net difference. However, not all building officials will classify a stand-alone service pedestal as a structure, so this will require local interpretation. Inside disconnects follow the same rules, although service disconnects must not be located in bathrooms, which is not a condition placed on building disconnects. Building disconnects also have exceptions that do not apply to service disconnect locations. They have a documented safe switching procedure allowance to place the disconnect at another location, under the same conditions as for additional sources of supply. Buildings qualifying under NEC

Article 685 for integrated electrical systems can relocate the disconnect. Signs and light poles outside need not have local disconnects either.

- d. The rules regarding how the disconnecting means are to be constructed (including the simultaneous opening of poles, the special provisions for a grounded circuit conductor, the method of operation, and the indication requirement) are all the same. However, a building disconnect for a residential outbuilding may use a snap switch as a disconnecting means; this is not permitted for a service entrance for obvious reasons.

25. Over 600 V Part III of NEC Article 225 covers medium voltage supply wiring (over 600 V). Most of this part, as in the case of Part II, matches up with the equivalent requirements for services, and only the differences will be covered here.

- a. Since circuits originating in other buildings will necessarily be either feeders or branch circuits, and not service conductors, they will have overcurrent protection at their supply ends and need simply be sized for the load according to the procedures for comparable circuits set out in the NEC articles covering branch circuits and feeders. Medium voltage service disconnects are often pole-top devices at the edge of a property, and less amenable to a readily access than a building disconnect. The requirements for isolating switches, the construction details of the disconnecting means, and the allowances for remote control operation are the same as for services.
- b. Medium-voltage feeders and branch circuits run overhead need to meet enhanced clearances reflecting the increased hazard involved for circuits operating over 600 V. These conductors must be installed so that they are at least 2.3 m (7.5 ft) away (horizontally separated) from building walls, projections, and windows. They must observe the same horizontal spacing from balconies, catwalks, and similar areas that people would have access to, and the same distance applies to other structures.

The same conductors must be at least 3.8 m (12.5 ft) either above a roof or below a roof (or other projection) where run at that level. For roofs accessible to vehicles (but not truck traffic) such as parking garages, the vertical clearance rises to 4.1 m (13.5 ft), 5.6 m (18.5 ft) if truck traffic uses the roof. Clearances over open ground vary by the type of traffic as well, beginning at 4.1 m (12.5 ft) for walkways and then rising a foot to 4.4 m (14.5 ft) for pedestrian ways and restricted traffic. Water areas not suitable for boating come in at 5.2 m (17 ft) and then open land suitable for grazing, cultivation or vehicles, along with ways subject to vehicular access generally, including roads, driveways, alleys and parking lots, all at 5.6 m (18.5 ft). The highest prescribed clearance, 8.1 m (26.5 ft) applies to runs over railways. These clearances all apply to medium voltages up to and including 22 kV *measured to ground*. Higher voltages add 10 mm (0.4 in.) per kV above 22 kV, and special cases, including clearances over navigable waters and areas with large vehicles such as mining operations may require special engineering and review by the authority having jurisdiction.

72. Tying in wires. Normally the wires should rest in the insulator grooves as shown in Fig. 8.62A, but if there is a side stress, the wires should be so arranged that the pull comes against the insulators rather than away from them (Fig. 8.62B).

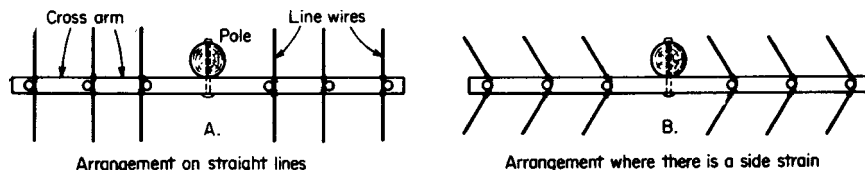


FIGURE 8.62 Positions of wire in insulator grooves.

A single tie for the smaller wires is shown in Fig. 8.63, I, and a back tie for the larger wires is shown in II. The single tie wire is about 12 in. (304.8 mm) long, and the back tie about 18 in. (457.2 mm) long. The back tie is made as follows. Bend the tie around the insulator under the line wire, with 4 in. (101.6 mm) on one side of the insulator and the balance on the other side. Wrap the short end 3 times around the line wire, leaving a space equal to the diameter of the tie wire between successive wraps. Now wrap the long end of the wire 3 times completely around the line wire, then back around the insulator, and wrap it in the spaces left between the wraps of the other end of the tie wire. Refer to Fig. 8.63 for instructions regarding cutting of tie wires.

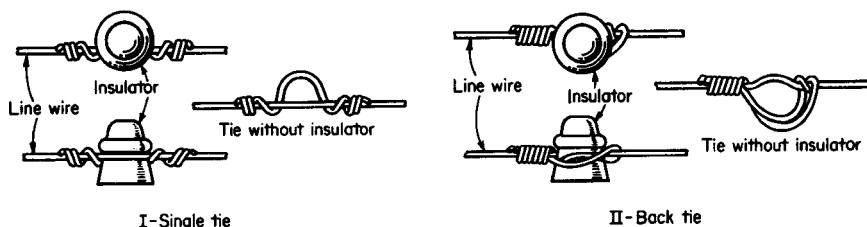


FIGURE 8.63 Methods of tying. Preferably the tie wires should not be cut off flush as shown above. Instead, their ends should be permitted to stick out or to lie along the line wires. This procedure facilitates their removal.

73. Different types of insulator ties which have been standardized by a western power company are shown in Fig. 8.64 and Table 74. The company uses medium-hard-drawn line wire. Although good ties can be made with a medium-hard-drawn weatherproof tie on a weatherproof line wire, medium-hard-drawn ties are not desirable on bare wires, as the bending radius is too small for these stiff wires. Hence, annealed bare-wire ties are used for bare line wires. Annealed ties can be cut from purchased annealed copper. Do not use a tie wire twice, as, after once being bent and strained, it will be brittle. The following table of sizes has been recommended for ordinary stresses. For very heavy stresses heavier tie wires should be used.

Line wire, size	Tie wire, size	Kind of tie	Line wire, size	Tie wire, size	Kind of tie
6	6	Single	1	4	Back
4	6	Single	2/0 and larger	2	Back
2	4	Single			

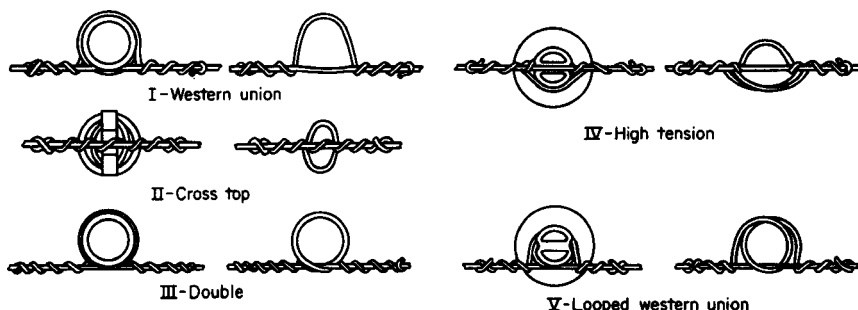


FIGURE 8.64 Ties of the different types used in ordinary distribution systems (see Table 74).

Tie wire should usually have the same kind of insulation as the line wire which it confines. The National Electrical Code requires this on indoor work, and it is also a good practice on outdoor work.

74. Types of Insulator Ties for Different Services

Size of line wire, gauge or in	Insulator	Top or side	Tie material	Tie length, in	Type of tie	Fig. 8.64
Copper						
6 or 4 WP	DGDP	Side	6 WP mhd	25	Western Union	I
2 WP	DGDP	Side	4 WP mhd	27	Western Union	I
1/0 to 4/0 WP	Cable	Top	4 WP mhd	36	Crosstop	II
1/0 to 4/0 WP	Cable	Side	4 WP mhd	30	Western Union	I
6 or 4 bare	DGDP	Side	6 bare annealed	27	Double	III
6 or 4 bare	11 kV	Top	6 bare annealed	40	High-tension	IV
2 bare	11 kV	Top	4 bare annealed	40	High-tension	IV
1/0 to 4/0 bare	11 kV	Top	2 bare annealed	44	High-tension	IV
6 to 4 bare	11 kV	Side	6 bare annealed	40	Looped WU	V
2 bare	11 kV	Side	4 bare annealed	40	Looped WU	V
1/0 to 4/0 bare	11 kV	Side	2 bare annealed	48	Looped WU	V
Steel						
1/4 and 5/16	DGDP	Side	1 strand, 5/16 in	27	Double	III
1/4 and 5/16	11 kV	Top	1 strand, 5/16 in	44	High-tension	IV
3/8	11 kV	Top	1 strand, 3/8 in	44	High-tension	IV
1/4 and 5/16	11 kV	Side	1 strand, 5/16 in	48	Looped WU	V
3/8	11 kV	Side	1 strand, 3/8 in	48	Looped WU	V

75. The bare tie wires for uninsulated line wires should always be of the same metal as the line wire. If dissimilar metals are employed, electrolytic corrosion and a consequent weakening and possible breakage of the line wire at the tying point may result. That is, bare copper wires should always be used on bare copper line wires and galvanized-iron tie wires on galvanized-iron line wires.

76. In making up line-wire ties, the tie wire should not be drawn too tightly around the line wire. The tendency of the beginner is to do this, with the result that the line wire is weakened and will probably sever when it is first subjected to an unusual stress such as that which is likely to occur when a low temperature prevails.

77. In making ties on ACSR wire (see Div. 2), the conductor must first be reinforced by wrapping with armor rods twisted around the conductor with the aid of two special wrenches.

Armor rods are shipped in sets (bundles) with the ends taped and with the center marked. Remove the tape from one end of the set and thread the rods through the two armor-rod wrenches, making sure that both the wrenches open between the *same two rods*. Leaving the set taped at one end keeps the rods from sliding while the assembly is being sent aloft and keeps ends even while making the first twist.

Center the armor rods on the conductor over the point of support. Open the wrenches and then close them with the rods around the conductor (Fig. 8.65, I). Shift the wrenches on the rods to such a position that the middle third of the armor rods will be twisted with the first turn of the wrenches. Rotate the wrenches counterclockwise to make the lay of the rods in the *same direction* as the lay of the cable. Twist the rods to give them a permanent set, so that the wrenches do not tend to spring back. After twisting the middle third, cut the remaining tape and slide the wrenches halfway to the ends. Turn the wrenches and twist the rods as before. Finally slide the wrenches as close as possible to the ends, twisting this last section the same as for previous settings.

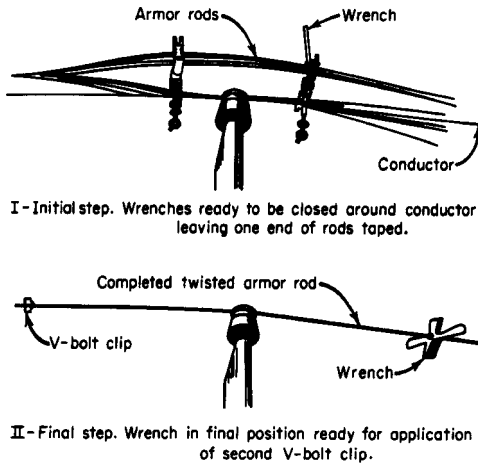


FIGURE 8.65 Installing armor rods at insulator support for ACSR wire. [Aluminum Co. of America]

The rods should be twisted snugly with a smooth lay. If they are twisted too tightly, there is a tendency to force one or more rods out of the layer, and the rods will stand away from the cable so that the assembly can be slipped along the conductor before the armor-rod clips are applied. There is a stopping point, which can be felt after a little practice.

The armor-rod (V-bolt) should be applied about 1½ in. (38.1 mm) from the ends of the assembly, which can best be accomplished by installing and tightening the V bolts while the armor-rod wrenches are still in their final twisting position (Fig. 8.65, II). This procedure leaves the ends of the rods slightly flared away from the conductor. If the wrenches are removed prior to tightening the armor-rod clips, the ends of the rods may have to be flared as a separate operation.

After installation of the armor rods the ties are made as shown in Fig. 8.66. Figure 8.66, I, shows a stop tie with the conductor on top of the insulator, and Fig. 8.66, II, shows the conductor tied on the side groove of the insulator. Above each view is shown a sketch of the manner in which the tie wire is wrapped and looped.

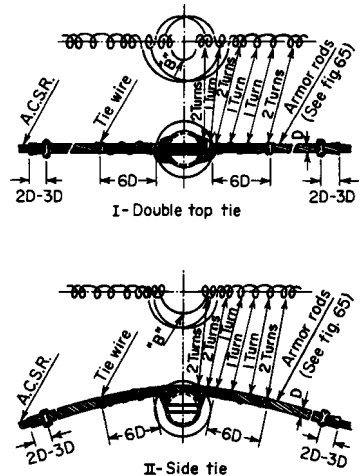


FIGURE 8.66 Ties for ACSR wire. [Aluminum Co. of America]

78. For ties on Copperweld wire use annealed-copper tie wires of the size given in the following table as recommended by the Copperweld Corp.

Size of conductor	Size of* tie wire	Length of tie wire [†]	
		Top tie	Side tie
3-Win stranded conductor			
3 No. 6 AWG	6 AWG	54 in	60 in
3 No. 7 AWG	6 AWG	52 in	58 in
3 No. 8 AWG	6 AWG	50 in	56 in
3 No. 9 AWG	6 AWG	48 in	54 in
3 No. 10 AWG	8 AWG	44 in	50 in
3 No. 12 AWG	8 AWG	44 in	50 in
Type F Copperweld-copper conductors			
1/0F	6 AWG	56 in	62 in
1F	6 AWG	54 in	60 in
2F	6 AWG	54 in	60 in
Copperweld-copper 3-wire stranded conductors			
2A	6 AWG	56 in	62 in
3A	6 AWG	54 in	60 in
4A	6 AWG	52 in	58 in
5A	6 AWG	50 in	56 in
6A	8 AWG	46 in	52 in
7A	8 AWG	44 in	50 in
8A	8 AWG	44 in	50 in
8C	8 AWG	44 in	50 in
8D	8 AWG	44 in	50 in
9½D	8 AWG	44 in	50 in

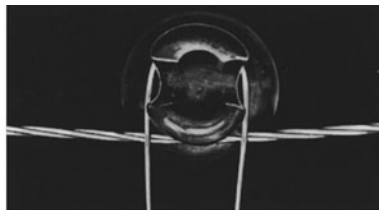
*Sizes listed apply to annealed copper tie wires. When using annealed Copperweld for tie wire, size should be two gage sizes smaller than listed for annealed copper.

[†]Included 4 in. additional length on each end for convenience in applying tie.


For top ties on Copperweld wire, the type shown in Fig. 8.67*B* is recommended. For side ties, the one shown in Fig. 8.67*A* with three loops around the insulator is used.

Notes on Tying Practice


1. Use only fully annealed tie wire.
2. Use a size of tie wire which can be readily handled, yet one which will provide adequate strength.
3. Use a length of tie wire sufficient for making the complete tie, including an end allowance for gripping with the hands. The extra length should be cut from each end after the tie is completed.
4. A good tie should
 - a. Provide a secure binding between line wire, insulator, and tie wire
 - b. Have positive contacts between line wire and tie wire to avoid any chafing contacts
 - c. Reinforce line wire in the vicinity of insulator.



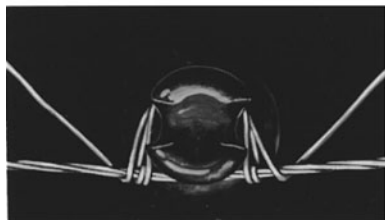I. Bend tie wire around insulator above conductor to form a U. The two legs of the tie wire should be of equal length after bending.




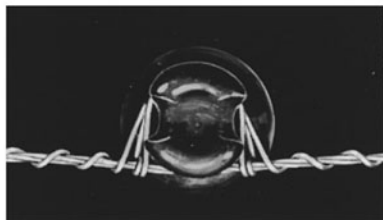II. Holding the tie wire tightly against the insulator, throw two tight close wraps around conductor on each side of the insulator; then cross legs of tie wire around insulator.




III. Finish in same way as top tie with six tight 45° spiral wraps on each side of the insulator. Bend back ends and cut off extra length of tie wire close to conductor.

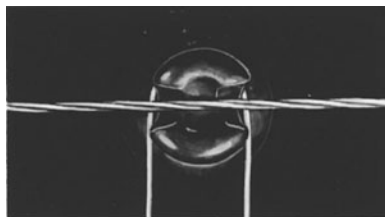
FIGURE 8.67A Side tie for Copperweld wire. [Copperweld Corp.]



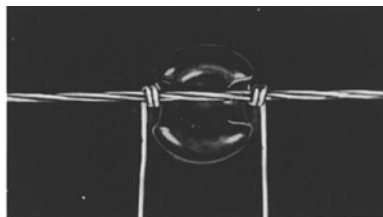I. Bend annealed tie wire of proper size and length around insulator under the conductor, forming a U. Both legs of tie wire should be of equal length after bending.



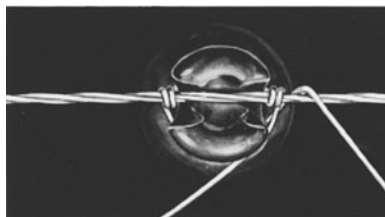II. Holding the tie wire tightly against the insulator, throw two tight close wraps around the conductor on each side of the insulator, keeping these wraps snugly against the insulator.



III. Cross the legs of the tie wire around the insulator, right to left and left to right.



IV. With both legs of the tie wire crossed, tightly wrap each leg spirally around the conductor at an angle of 45°.

FIGURE 8.67B Top tie for Copperweld wire. [Copperweld Corp.]




V. Complete six spiral 45° wraps on each side of the insulator, bending back the ends and cutting them off short.

FIGURE 8.67B (Continued)



VI. The finished top tie when made properly and tightly will greatly reduce any possibility of the conductor's chafing at the insulator.

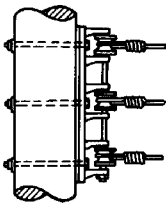5. The ties illustrated can and should be applied without the use of pliers.
6. Avoid nicking the line wire.
7. Do not use a tie wire which has been previously used.
8. Do not use hard-drawn wires for tying or fire-burned wire, which is usually either only partially annealed or injured by overheating.
9. Careful workmanship is essential.



On secondary rack

FIGURE 8.68 Low-voltage dead ends. [Hubbard & Co.]

79. For dead-ending of line wires at the end of a run or at corners, various types of construction may be used. For low-voltage, secondary rack construction, a rack may be located on the front of the pole and the tension taken by bolts through the pole (Fig. 8.68). The wires are looped around the rack insulators, and the end of the wire is wrapped around the line conductor. Other low-voltage dead ends may be made up as in Fig. 8.69. In many current installations a single-wire bracket, similar to the one shown in Fig. 8.69, I, is used to attach triplex or fourplex cables, consisting of two or three insulated cables which are spiral-wrapped around a bare messenger wire (usually the neutral of the supply). For heavier loads a low-voltage dead end on a crossarm can be made by

using a strain insulator, as shown in Fig. 8.70, I. For higher voltages one or more suspension insulators with a clamp to grip the conductor, as shown in Fig. 8.70, II and III, can be used. Instead of the conductor clamp, the conductor can be looped around a dead-end thimble (Fig. 8.71).

80. When wires are carried through trees so that they would rub against branches, special tree wire (Fig. 8.72, I) should be used. However, wires through trees should be avoided if at all possible. Tree wire has a tougher insulation which will resist abrasion from the branches better than weatherproof wire. If the tree branches are more or less continuous, tree wire should be used exclusively. If there is a span or more of clearing, it will be economical to splice in weatherproof wire to run through the clear space. For especially severe conditions a length of tree-wire molding (Fig. 8.72, II, III, and IV) should be added to the wire where the wire passes close to heavy limbs or tree trunks. In some

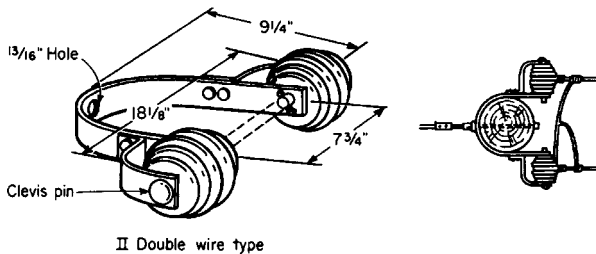
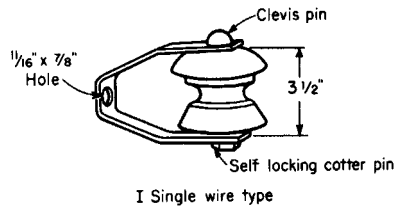


FIGURE 8.69 Dead-end insulators. [Line Material Co.]

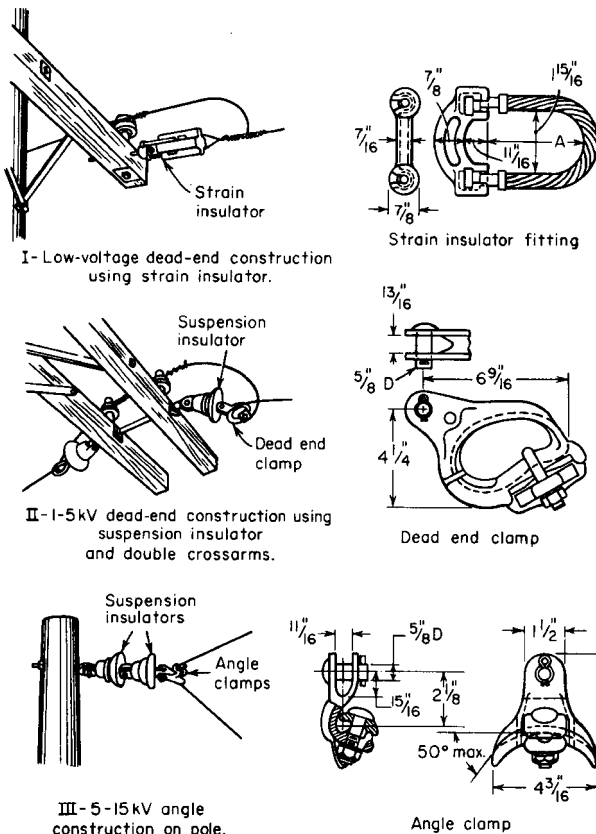


FIGURE 8.70 Types of clamps and dead-end construction. [Ohio Brass Company]

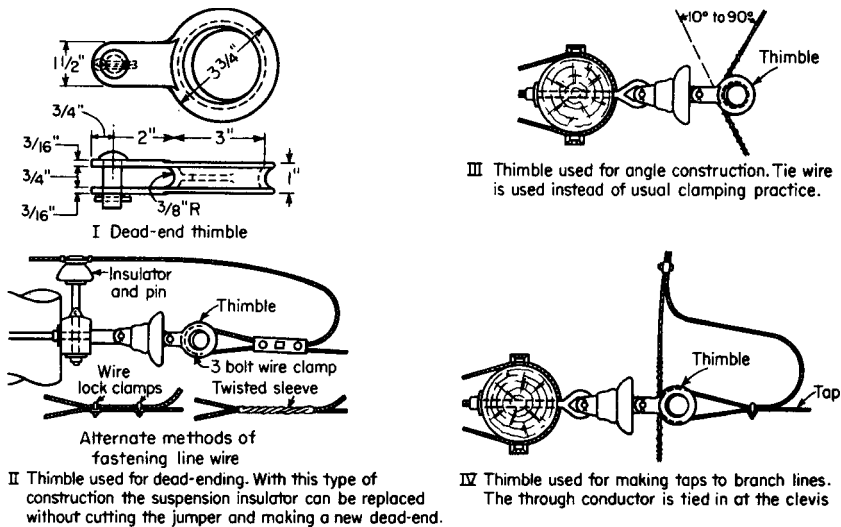


FIGURE 8.71 Dead-end construction with dead-end thimble. [Ohio Brass Company]

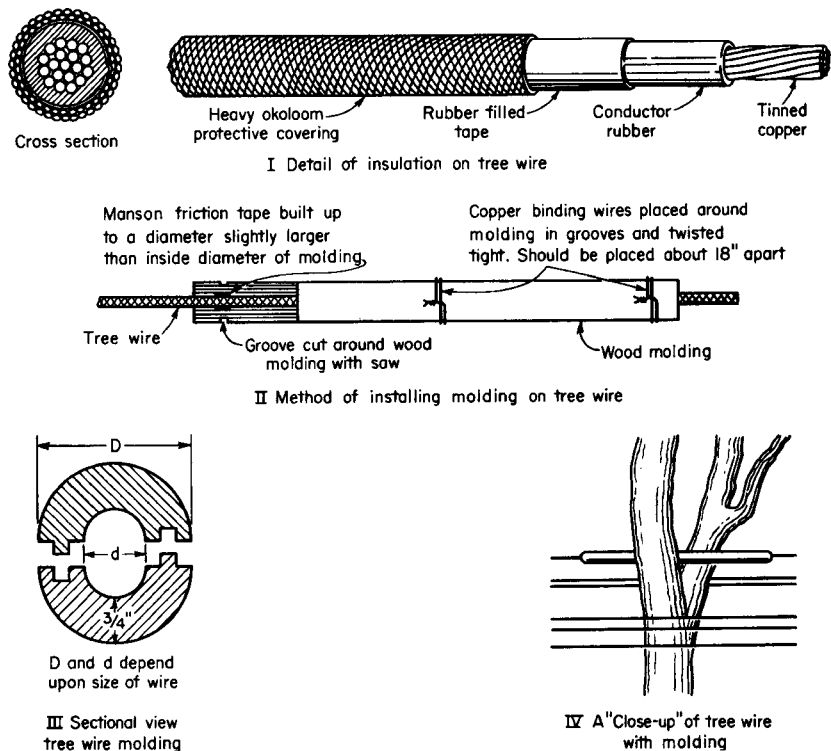


FIGURE 8.72 Tree wiring. [The Okonite Co.]

cases a tree insulator (Fig. 8.73) can be screwed to the limb or trunk of the tree. This insulator has a removable pin, and roller (Fig. 8.73) can be screwed to the limb or trunk of the tree. This insulator has a removable pin and roller (Fig. 8.73, II) so that the wire can be inserted without cutting and the pin replaced. The roller allows the wire to move freely without being cut. Wires should never be attached rigidly to trees because the swaying of the tree might break the wires.

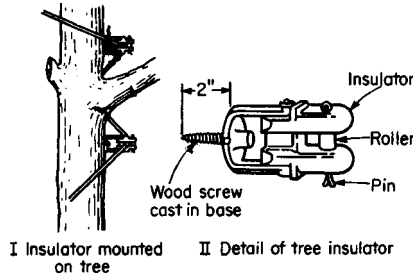


FIGURE 8.73 Tree insulator. [Line Material Co.]

81. Wire and wire sizes for electric light and power lines. No wire smaller than No. 6 is used in good construction for line wire. No. 8 is sometimes used for services not more than 75 ft (22.9 m) long that do not cross a street. Solid wires are often used for sizes up to and including No. 2/0, and cable (stranded wire) is used for larger conductors. Triple-braid weatherproof is the standard insulation of aerial line wires. Annealed or soft-drawn wire is preferable to hard-drawn for services and secondary distribution lines because it is more readily handled and, in the sizes used, has ample tensile strength. Hard-drawn copper wire or steel-reinforced aluminum cable is preferable for transmission lines and feeders.

82. Stringing wire. There are two methods, the choice depending on local conditions and the size and length of the circuit. By one method a reel of wire is set at one end of the line and a rope carried 1500 or 2000 ft (457 or 610 m) over the crossarms and attached to the wire, which is then drawn over the arms. The other way is to place the reel on a cart, and after the end of the wire has been secured to the last pole, the cart is started and the wire paid out till the second pole is reached, and then the wire is hoisted up and laid on the arm. Wire should always be paid out from the coil, the coil revolving, so that the wire will not be twisted. If wire is not received on reels, it should be placed on them before paying out.

POLE-LINE GUYING

83. Guying. Probably there are not so many guys on pole lines as there should be to ensure continuity of service and minimum maintenance expense. Lines should be guyed not for normal conditions but for the more severe conditions that are apt to obtain. The guys should be frequent and heavy enough to sustain the line after the heaviest snowstorm or during the worst possible windstorm. A guy should be used on every pole where the tension of the wires tends to pull the pole from its normal position.

Terminal poles should always be head-guyed, and on lines carrying three or more crossarms the two poles next to the terminal pole should also be head-guyed to distribute the stress.

Line guys are installed on straight pole lines to reinforce them against the excess stresses introduced by storms. It is a good practice to install head line guys, as shown in Fig. 8.74, at about every twentieth pole. This recommendation applies only to lines carrying more than one crossarm.

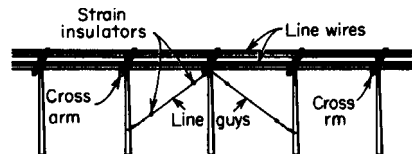


FIGURE 8.74 Line guys.

The installation of additional side guys, arranged at right angles to the line, to trees, stubs, or anchors is recommended. The side guys are attached to the same pole as the head guys.

Side guys should be installed at curves, the guys taking the direction of radii of the curves. Figure 8.5 shows a table that gives the number of side guys required for a given line with a given *pull*. The pull is the distance from the pole to a line joining two points in the line 100 ft (30.5 m) on either side of the pole (see Fig. 8.5).

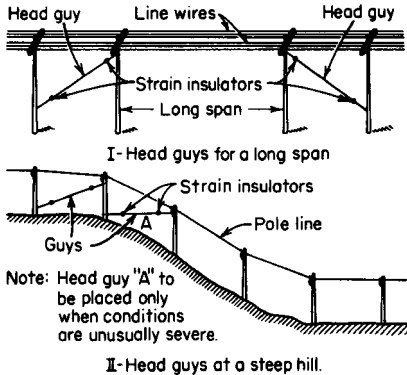


FIGURE 8.75 Head-guy locations.

Poles on either side of a long span should be head-guyed as shown in Fig. 8.75, I.

Lines on steep hills should be guyed as shown in Fig. 8.75, II, with head guys.

Poles at each side of a railroad crossing, important highway crossing, or a crossing over another wire line should be head-guyed away from the crossing as in Fig. 8.75, I.

Guy wires should be kept more than 8 ft (2.4 m) from the ground where possible to prevent persons from making accidental contact with them. A clearance of at least 3 ft (0.9 m) should be maintained between guys and electric wires; otherwise changes in temperature may cause the wires to come in contact.

84. A guy assembly consists of the following parts:

1. Attachment to pole being guyed
2. Guy wire containing one or two strain insulators
3. Attachment to stub pole or to lower part of another pole or ground anchor, anchor rod, attachment of strand, and guard.

85. Some of the methods making up a guy on a pole are shown in Fig. 8.76. The method of Fig. 8.76, I, is easy when some of the other materials are not at hand. The methods of Fig. 8.76, II and III, make a neater-looking job when the hardware is available. The method of Fig. 8.76, IV, is used at a stub pole. Refer to Sec. 55 for a discussion of the hardware required. When there is only one guy per pole, it is made around the pole just under the top crossarm as shown in Figs. 8.77 and 8.78. If there are two guys to the pole, one is made up just under the top crossarm and one just under the bottom crossarm. If more than two guys are used, the additional ones should be spaced as equally as possible between the top and bottom guys that are made up under the top and bottom crossarms, respectively. If there are two or more guys to a pole, each should be independent of the others. The different guy wires should not cross one another. If two or more guys support a pole, a turnbuckle should be inserted in all but one to equalize the stresses.

86. Guy-wire insulation. Strain insulators should be inserted in all guy wires to poles carrying electric lighting or power wires. Two insulators should be inserted in each guy. One is located at least 6 ft (1.8 m) from the pole itself or 6 ft below the lowest line wire. The other is located at least 6 ft from the lower end of the guy and at least

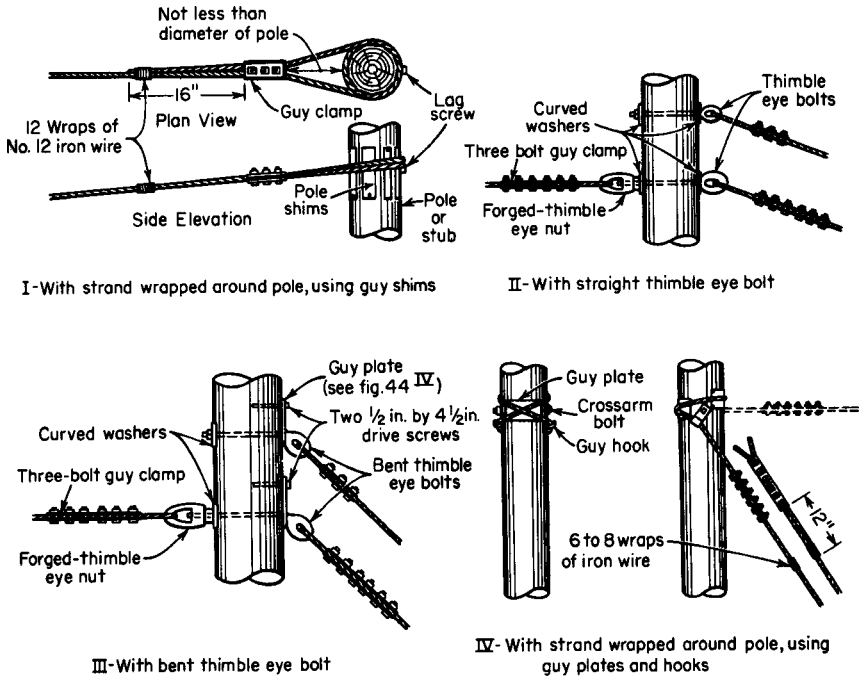


FIGURE 8.76 Methods of attaching guys to pole. [General Electric Co.]

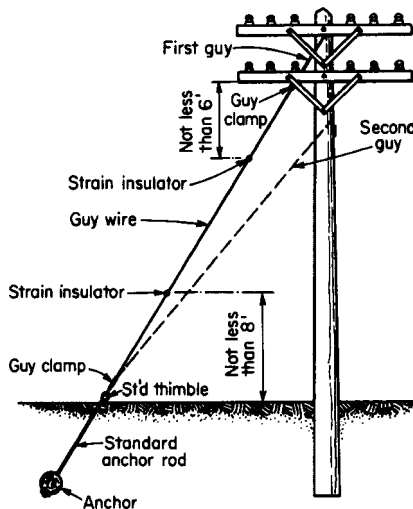


FIGURE 8.77 An anchor-guyed pole.

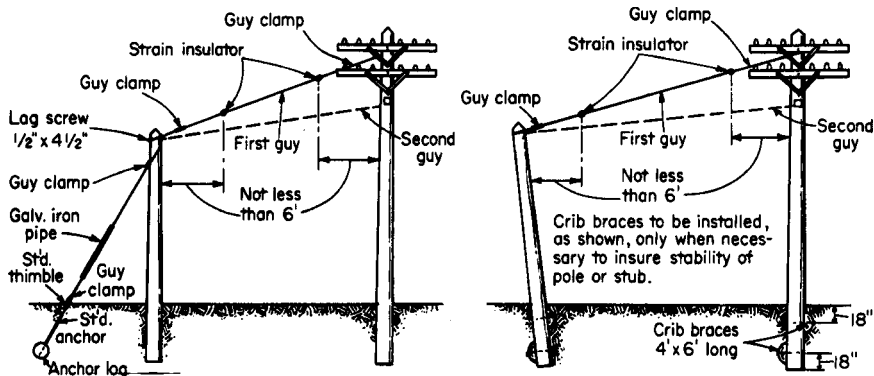


FIGURE 8.78 Poles guyed to stubs.

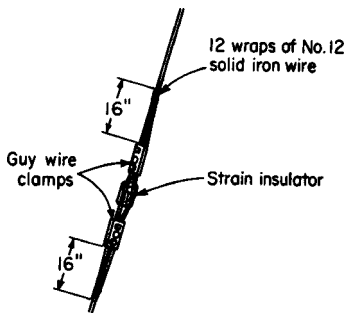


FIGURE 8.79 Method of making up a strain insulator in a guy strand. [Hubbard & Co.]

8 ft (2.4 m) from the ground. The two strain insulators are sometimes coupled in series in short guys.

The assembly makeup of a strain insulator for a guy is shown in Fig. 8.79. The two ends of the guy strand are looped through the separate holes in the insulator. The guy-wire clamps hold the wire from slipping, and the No. 12 wrapping wire secures the end of the strand to the guy wire and provides a neat appearance for the assembly. Suitable clamps can be used in lieu of the No. 12 wrapping wire at guy-wire ends.

87. The number and size of clamps to use for each looped-back connection on a guy strand are as follows:

Breaking strength of guy strand, lb	No. of clamps	Type of clamp	Breaking strength of guy strand, lb	No. of clamps	Type of clamp
4,000	1	Two bolt	10,000	2	Three bolt
6,000	1	Three bolt	16,000	3	Three bolt

88. The attachment of the guy strand to the anchor rod is shown in Fig. 8.80. Refer to Sec. 54 and Fig. 8.42 for description of anchor rods. The eye of the guy rod should extend about 3 ft (0.9 m) above the surface of the earth. Guy rods should not be installed where they will interfere with traffic. A guy protector guard (see Sec. 58) extending to about 8 ft (2.4 m) above the ground should be placed over anchor guy wires near roadways, as shown in Fig. 8.78. The foot of an anchor guy should be as far away

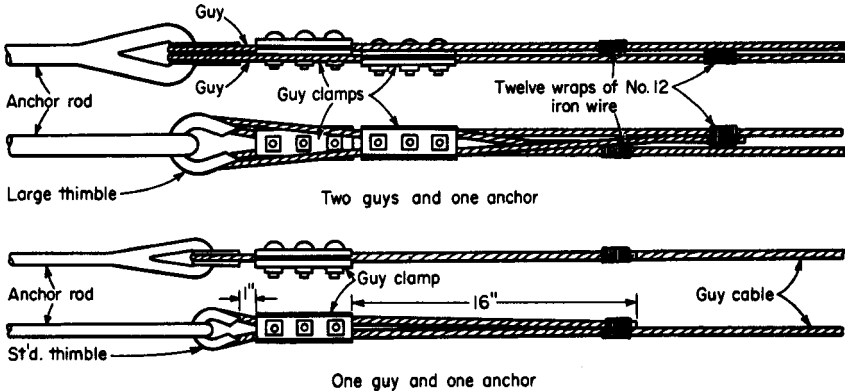


FIGURE 8.80 Methods of making up guys on guy rods.

from the foot of the pole as possible—at least a distance equal to one-fourth the height of the pole.

89. Anchors can be made from logs cut from the tops of old poles (Fig. 8.81), or patented metal or concrete anchors can be used. Figure 8.82 shows a variety of modern guy anchors which provide an effective support for guy rods. Table 90 gives the minimum size for anchor logs and rods and the depth of setting for anchors.

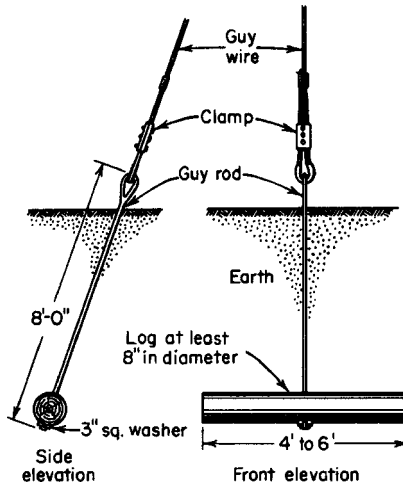


FIGURE 8.81 A guy rod and anchor.



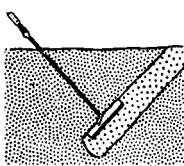



PLATE ANCHORS are used for general anchoring; are made of malleable iron or steel plates. They provide excellent holding power because pull is against undisturbed earth.

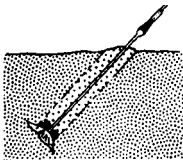

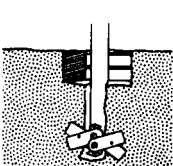EXPANDING ANCHORS are used for general anchoring. Size of anchors in folded position ranges from 6 to 12 in. dia. Expanded sizes range from 50 to 300 sq. in.



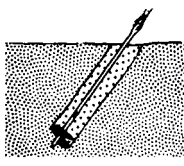
KEY ANCHORS, sometimes called pole keys, are used where standard guying is impossible because of sidewalks, property restrictions, etc. Additional keying is necessary at ground level.



SCREW TYPE ANCHORS can be selected for general anchoring in gravel, sand, clay, fill, silt, and with extension, swamp soils. The corkscrew-like blade is made of drop-forged steel. No anchor hole is required; anchor is screwed into the ground with a wrench or bar.



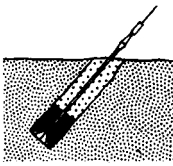ROCK ANCHORS are used for anchoring in rock, rocky soil or masonry. The expanding rock anchor is made of malleable iron, develops tremendous holding power through a wedging self-action.



CONE ANCHORS are made of steel and are used in bed rock, laminated rock, slate, sandstone, shale, hardpan, gravel, and medium-firm clay. Sizes range from 6 to 23 in. dia. It develops adequate holding power in class 2 soil through wedging action.

FIGURE 8.82 Types of modern guy anchors.

90. Size of Anchor Logs and Depth of Setting for Anchors

Size and number of guys	Min size of round logs for good soil	Length of rod below ground, ft	Size of guy rod
One No. 6 wire or one 4,000 lb	3 ft × 6 in	4	7 ft × 1/2 in
One 6,000 lb	3 ft × 7 in	4 1/2	8 ft × 5/8 in
One 10,000 lb	4 ft × 8 in	5 1/2	9 ft × 3/4 in
One 16,000 lb	5 ft × 10 in	6 1/2	10 ft × 1 in
Two 6,000 lb	5 ft × 8 in	5 1/2	9 ft × 1 in
Two 10,000 lb	6 ft × 10 in	6 or 6 1/2	10 ft × 1 1/4 in
Two 16,000 lb	6 ft × 12 in	6 1/2 or 7	11 ft × 1 1/2 in

For the depth and holding strength of patented anchors, the catalogs of the particular manufacturer must be consulted.

91. Patented guy anchors can be used in certain kinds of soil very effectively. Figure 8.83 shows one kind of anchor that is screwed into the earth with a wrench. The resistance of this sort of anchor to withdrawal from compact homogeneous soils is not determined by the weight of a column of earth the diameter of the anchor screw, but is determined by that of a cone with sides slating at 45° and having the point of the anchor as an apex. Figure 8.84 illustrates this and shows the formula used for computing the withdrawal resistance. Figure 8.84 shows the anchor inserted perpendicularly, but an anchor should always be inserted at the same angle that the guy wire assumes so that the rod of the

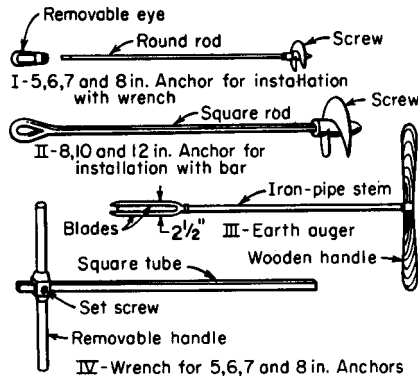


FIGURE 8.83 Matthews Scrulix anchors and wrenches.

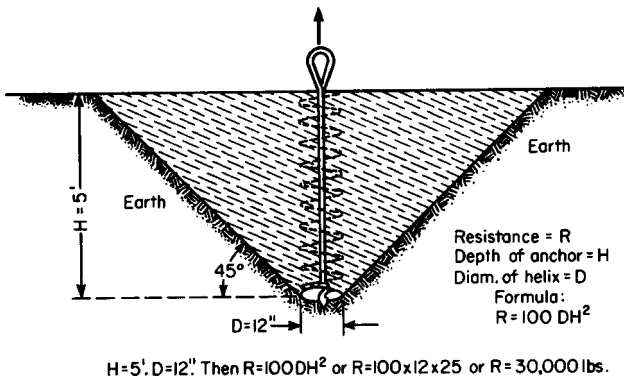


FIGURE 8.84 Carpenter's formula for resistance of Matthews anchor to withdrawal.

anchor will be in a direct line with the guy wire. Section 92 gives the actual resistances to withdrawal of the anchors.

92. The actual holding power of patented guy anchors is an uncertain quantity, except in hard clays (adobe, hardpan, or gumbo) for which Carpenter's formula (Fig. 8.84) can be used. The safest procedure is to test the anchor's resistance to withdraw in the soil in which it is to be used. A dynamometer can be employed for measuring the pull. Anchor manufacturers will gladly ship anchors on approval for test and 30 days' trial. In general, the 5-in Matthews Scrulix anchor (Fig. 8.83) should, in other than the hard clays, be used only for the lightest strains, say 1100 to 2500 lb, the 6-in. for 1500 to 2500 lb, the 7-in. for 2500 to 5000 lb, the 8-in. for 5000 to 7000 lb, the 10-in. for 7000 to 10,000 lb, and the 12-in. for 10,000 to 12,000 lb. These holding powers are based on the anchor being screwed into the earth for a depth of at least 5 ft (1.5 m). For anchorages under shallow strands of water or in swampy or caving ground, the 8-, 10-, and 12-in. anchors having the square rods are very convenient.

93. Directions for Installing Matthews Guy Anchors

5-, 6-, 7-, and 8-in. with Rods Remove the eye of the anchor; pass the rod through the wrench and replace the eye, which will serve to hold the wrench rigidly to the anchor; then screw the anchor in, at the same angle as the guy wire is to run, as far as ground conditions will permit. When it is in as far as possible, remove the eye and pull out the wrench. Then replace the eye, thus making anchor ready for guy wires. The handlebars of the wrench are adjustable and held in place with a setscrew. They can be moved back as the anchor screws in.

8-, 10-, 12-in. with Rods Place bar or other lever in eye of anchor and screw it in as far as ground conditions will permit, always at the angle that the guy wire is to run. Time will be saved and the anchor start more easily if a few spadefuls of earth are removed before starting anchor. When the anchor is set, attach the guy strand to the eye. Always pull anchor back as far as possible before finally tying the guy wire.

In Dry, Hard Ground In setting all anchors in hard ground, the work will be much easier if a small hole is first made with an earth auger (Fig. 8.83), a crowbar, or a wood auger with a long shank. This renders the insertion of the anchor easier. A little water poured down this hole before starting the anchor will help considerably if the ground is hard and dry. In installing 8-, 10-, and 12-in. anchors in very hard ground, clamp a lever to the rod by means of a chain a foot or so above the ground. As the anchor is screwed down, the lever can be moved up. The anchor will start more easily if a few spadefuls of earth are removed at the angle desired to set the guy. If someone stands on the helix of the anchor when starting until the point bites the ground, it will be helpful.

In localities where loose gravel or small flat rock occurs, drill a hole with an earth auger, a digging bar, or a crowbar as suggested above. If a small rock is encountered, it can be broken by the bar. If a large rock is "discovered," the bar can be removed and the hole drilled in another place. This will allow the use of anchors in many places where otherwise it would seem impossible to install them.

94. The methods of installing stub guys are shown in Fig. 8.78. The stubs should be long enough so that the guy wires will clear roadways by at least 18 ft (5.5 m), sidewalks by 15 ft (4.6 m), and electric wires by 3 ft (0.9 m). Stubs are used only when a line cannot be guyed properly to trees or poles. Stubs should satisfy the specification for poles as given in Sec. 8.

95. In guying to a tree, tree blocks (Fig. 8.85) should be used, and the wire should pass only once around the tree. Tree guying is undesirable and should not be done unless absolutely necessary. Guys should preferably be attached to trunks or to limbs that are not less than 8 in. (203 mm) in diameter. Do not attach a guy wire to a limb that will swing with the wind and sway the pole. Enough tree blocks should be used so that the guy wire cannot touch the tree.

96. Crossarm guys are used when the pull on a crossarm is unbalanced. Figures 8.48, 8.86, and 8.87 show examples. Crossarm guys usually extend from the arm to a pole or stub, but sometimes for light strains the Y, or bridle, guy (Fig. 8.88) is used.

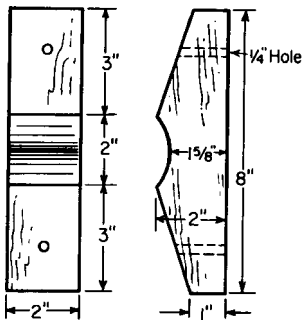


FIGURE 8.85-I Details of tree blocks.

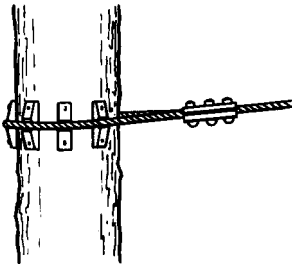


FIGURE 8.85-II Guy wire fastened to tree.

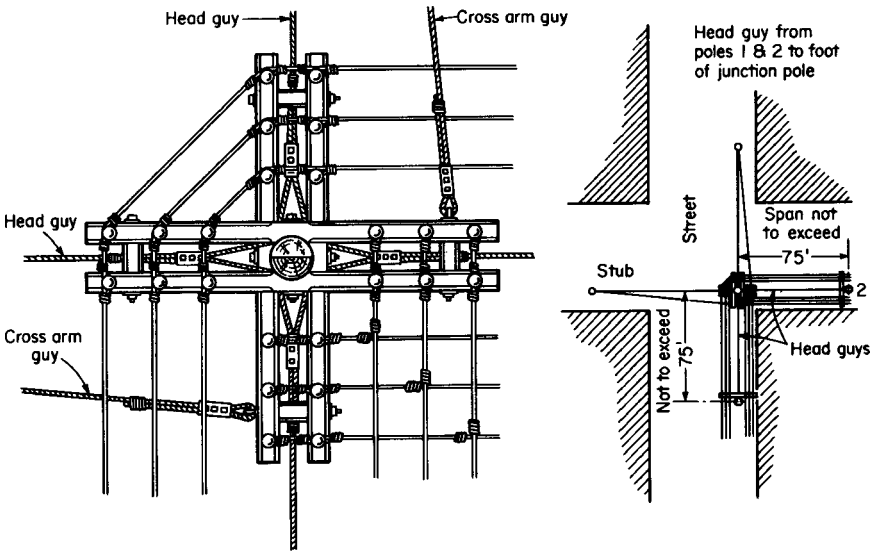


FIGURE 8.86 Method of turning corner with one pole.

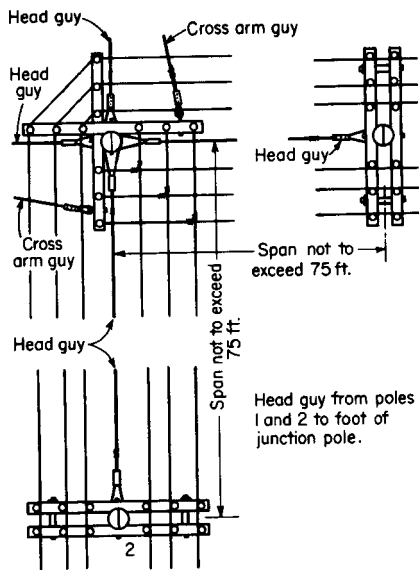


FIGURE 8.87 Corner pole without double arms.

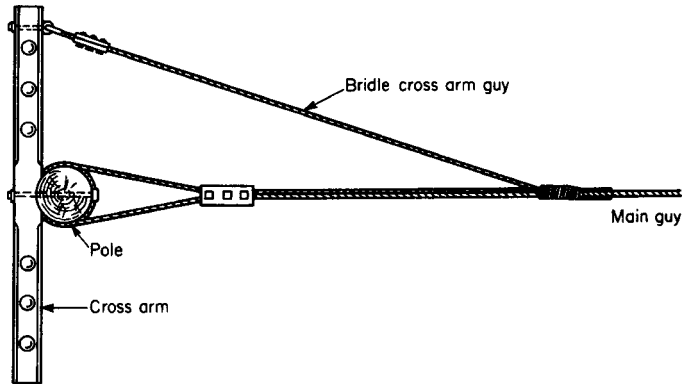


FIGURE 8.88 Bridle guy.

97. A line must be thoroughly guyed where it crosses a road. Figures 8.89 and 8.90 show two methods of holding a line at such a point. The method involving the use of side guys is preferable, but the other one will give good service when side guys cannot be installed.

98. When it is impossible to secure guying privileges along the desired route for a line or obstructions make guying difficult, the problem is generally solved by the use of self-supporting poles, a construction commonly referred to as *hog guying*. This

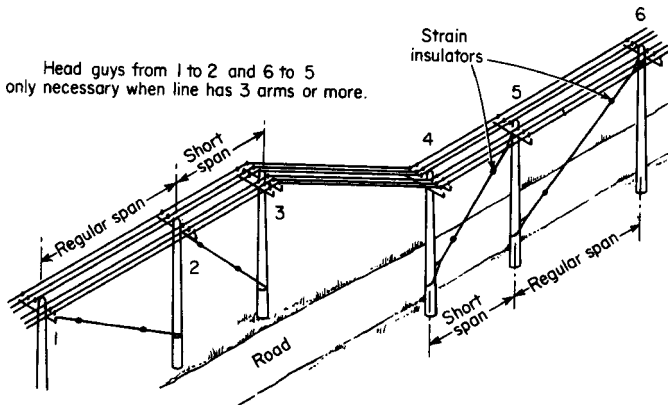


FIGURE 8.89 Guying at road crossing without side guys.

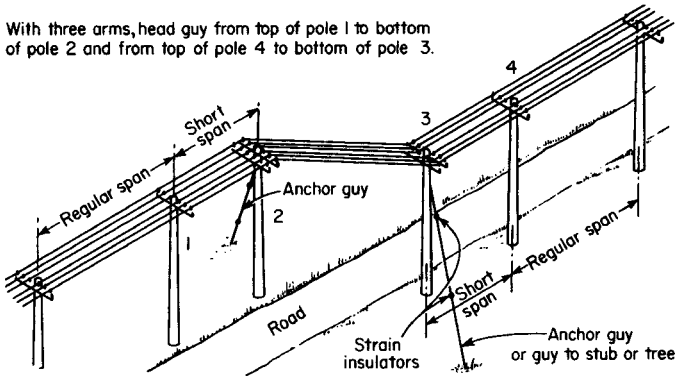


FIGURE 8.90 Guying at road crossing with side guys.

method of strengthening a pole is especially useful on corners, around curves, and at points where space is too limited for ordinary guying. The method of hog guying is illustrated in Fig. 8.91.

99. Vertical or "sidewalk" guy wires are commonly used clear a sidewalk, and can also be used where guying privileges are limited to within 5 ft (1.5 m) of the pole. Refer to Fig. 8.92 for a photo of a completed application. The horizontal strut is 2-in. galvanized iron pipe with a length equal to the distance between the anchor and the pole.

100. Pole braces are used when guying is not feasible. They cost more than equivalent guys. Figure 8.93 shows methods of bracing poles. The upper end of each brace fits in a notch cut in the pole and is bolted thereto.

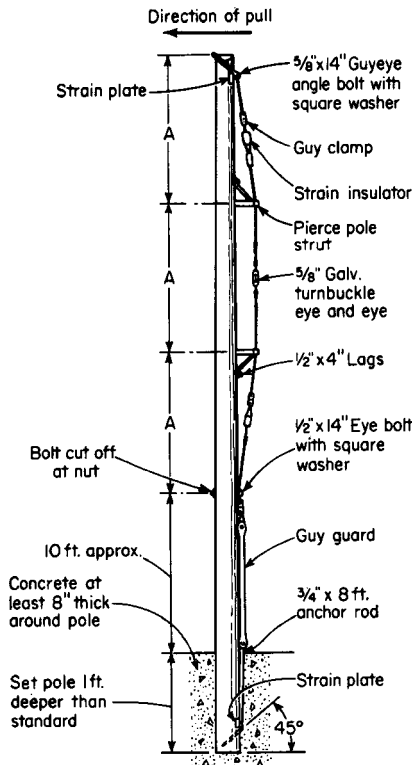


FIGURE 8.91 Details of self-supporting pole.



FIGURE 8.92 A vertical or "sidewalk" guy completely installed.

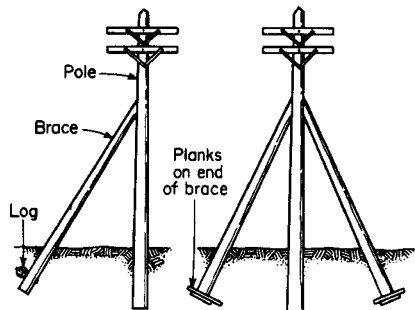


FIGURE 8.93 Bracing poles.

UNDERGROUND WIRING

101. Underground systems are of three main types:

1. Duct line
2. Cable buried directly in the ground
3. Conduits located in tunnels

A duct line consists of one or more conduits spaced close together with or without a concrete casing. The duct line is laid in a trench with the top at least 2 ft (0.6 m) underground and covered over with earth; it should be covered with pavement if it is located under a street. The duct lines terminate in underground vaults, called manholes, where transformers and protective equipment are located and where cable splices are made. The cables are drawn into the ducts from one manhole to the next. This system is ordinarily used for general underground distribution work when more than one cable is located in the same run or when the cable may have to be increased in size or replaced. Nonmetallic conduits must be encased in not less than 2 in. (50.8 mm) of concrete, unless listed by a nationally recognized testing agency as suitable for direct burial without encasement, if contained conductors operate in excess of 600 V.

Under the system in which the cable is buried directly in the ground, a trench is dug, and the cable, which is of a type to resist the corrosive effects of the ground (called parkway or nonmetallic-armored cable; see Div. 2), is laid in the trench without any protection other than that afforded by the cable insulation and earth covering (refer to Sec. 129 for further details). This method is used for single-circuit runs on which the load is apt to be steady and definite, as in street or parkway lighting systems. This method is also used for underwater lines, where the construction of a duct line would be difficult or impossible.

For groups of buildings in an industrial plant or institution, where tunnels between buildings must be constructed for steam and water lines, it is quite common to locate the electrical circuits in conduits or cable trays on the walls of the same tunnels.

102. Commercial conduit duct materials are steel conduit (rigid metal or intermediate metal), polyvinyl chloride (PVC), fiberglass (RTRC), high-density polyethylene (HDPE), and monolithic concrete. Refer to the specific wiring methods in Div. 9 for more information.

103. Plastic conduits, such as polyvinyl chloride, and polyethylene, described in Divs. 4 and 9, are being widely used for underground installation because of low cost, ease of installation, and minimum use of labor. Such conduits are available in lengths up to 30 ft (9.1 m), thereby reducing the number of couplings required in a given run. The newest non-metallic conduit material is a fiberglass material ("reinforced thermosetting resin conduit, Type RTRC" in the NEC). These conduits are difficult to bend in the field but will withstand higher ambient temperatures without deforming.

104. Iron conduit is sometimes used for duct lines, but since it costs more than other materials, it has not had general acceptance for this purpose. One important advantage is that it gives the cables better protection from damage during excavation. Wrought iron is preferable to steel conduit, which is often sold for wrought iron, because wrought iron resists corrosion much more effectively than does steel.

Wrought-iron conduit is frequently used to carry parkway lighting circuits if they are laid in filled ground which might be injurious to cable laid directly in the ground. The principal use for wrought-iron conduit in underground work is for laterals (see Sec. 110).

105. Cable-in-duct. A new popular system is cable-in-duct, which consists of a semi-rigid nonmetallic conduit and factory-installed conductors. Shipped in large reels, this system is easy to install, offset fittings and couplings are eliminated, and conductors can be withdrawn if necessary. Typical applications are for parkway, highway, and street-lighting underground systems. This is covered in the NEC as “Nonmetallic Underground Conduit with Conductors” and is discussed in Sec. 22 of Div. 9.

106. Monolithic concrete ducts can be built in two ways, by using flexible Para rubber tubing as a core and by using a duct-forming machine called a “boat.” In the rubber-tubing method, thick rubber tubes which are flexible but not readily collapsible are laid on a concrete base and separated with terra-cotta spacers. Concrete is then poured around them as in the other methods. When the concrete has set for a few hours, the tubings are withdrawn, leaving a very smooth concrete duct. In the boat method a track is built at the bottom of the trench. On this track runs the boat, which is really a die containing as many steel tubes as the number of ducts wanted. Concrete is fed into a hopper at the top and is tamped down around the tubes. The boat moved slowly along the track either by hand or by power from an electric motor, leaving the finished duct extruding from the rear. The concrete is of a special mixture which is sufficiently solid to hold the form of the ducts as the boat moves along.

The rubber-tubing method is especially advantageous when the duct line must be threaded around other underground structures and pipes. It can be used to advantage in bringing duct lines into power stations and substations, as the duct can be formed in one continuous run from the street manhole to the switching-gallery floor. The main advantage of the boat method as well as the rubber-tubing method is that there is no material in the duct to decay. Both methods have proved more expensive than using fiber conduit, so that for normal straight runs they cannot compete economically. For special irregularly shaped curves a section of the monolithic concrete duct formed by the rubber-tubing method may well be inserted even if the main run is made with one of the other materials.

107. In installing any kind of duct line a trench is excavated to such a depth that the top conduit will be 2 to 3 ft (0.6 to 0.9 m) below the surface of the ground and so that the grade of the duct line will pitch toward the manholes about 1 ft in 100 ft (0.3 m in 30.4 m) so as to ensure effective drainage. For power cables the ducts should be arranged either two conduits wide or two conduits deep so that every conduit will have earth on at least one side of it. This is necessary for conduction into the cooler ground of the heat generated by the I^2R losses in the cables. For communications cables the heat loss is low, and the ducts can be arranged in any convenient way. There should be from 1 to 3 in. (25.4 to 76.2 mm) of earth or concrete between conduits for power systems to ensure that flame and heat from a short circuit in one conduit will not affect the adjacent cables. The 3-in. separation should be used on the higher-voltage lines. Conduits are held in position during construction of the duct line by plastic spacers (Fig. 8.94). The width of the trench will depend on the working space required and on whether concrete and concrete forms are used or not. If the soil is firm, the trench may be merely 1 or 2 in. (25.4 or 50.8 mm) wider than the space required

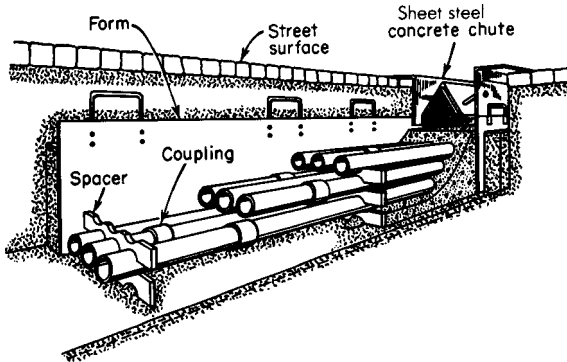


FIGURE 8.94 Construction of duct line.

by the conduits. Where concrete is required, it should be about 3 in. (76.2 mm) thick outside the conduits. In good, firm soils the trench can be dug to exactly this width and forms omitted, the concrete occupying all the space between the conduits and the earth wall. In ordinary and poor soils the trench should be made an additional 3 in. wider on each side to provide space for installing the forms.

The bottom of the trench should be carefully rammed until solid so that undue stress will not be placed on the conduits. With concrete construction the 3-in. bed of concrete is then laid, over which the lower tier of conduits is placed with spacers to ensure the correct separation between conduits. Then the concrete is tamped around them, and thus each level is built up until the duct is completed with 3 in. (76.2 mm) of concrete on top. Sometimes the spacers are removed after the conduits are held firmly in position by the backfill and before the spacers are completely covered over. At other times the spacers are left in to form a permanent part of the duct line.

108. In installing wrought-iron conduit no concrete casing is necessary if only one duct is involved. If there are several ducts in the run, the ducts are sometimes laid on a 3-in. (76.2-mm) foundation of concrete, and concrete is tamped between and around the ducts as shown in Fig. 8.96 for single vitrified duct. When the ducts will not be exposed to the dangers of future excavation, the cost of the concrete is probably not justified. Metal conduits can be obtained in 20-ft (6.1-m) lengths. Joints between adjacent lengths are made with conventional couplings. The burrs at the ends of each conduit must be carefully removed to prevent damage to the cable. When it is inconvenient to use a coupling, a union can be used instead. Metal conduit should be painted on the outside with asphalt or similar coating material to minimize corrosion.

109. Concrete for conduit work should be clean; i.e., foreign substances should not be permitted to enter its composition. If the surface on which it is to be mixed is not smooth and clean, mixing boards or pans should be used. Foreign material impairs the strength of concrete, and it becomes porous and leaky. The concrete should be mixed from portland cement, clean sand, and gravel or broken stone in the proportions, by volume of 1 part cement to 3 parts of sand and 5 parts of gravel or stone. Just sufficient water should be used to wet the mixture thoroughly and to permit a small amount of water to come to the

surface when the concrete is tamped into final position. The cement, sand, and stone should be "turned" on the mixing board at least 3 times dry and at least twice after wetting. The concrete should be placed immediately after mixing. When the concrete has been placed in the trench, several hours should be allowed for it to take its initial set before the trench is filled in. This is necessary to prevent throwing the ducts out of alignment or fracturing the "green" concrete.

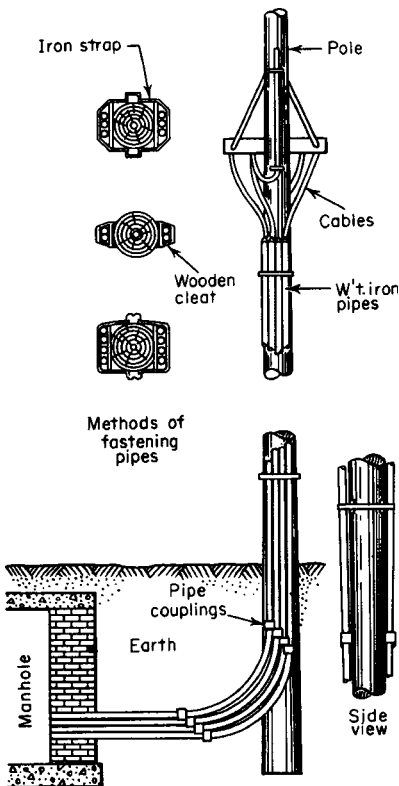


FIGURE 8.95 Wrought-iron pipe laterals.

necessary to locate splices in manholes, the distance between manholes cannot exceed these values. Furthermore, it is not advisable to pull in very long lengths of cable, because the mechanical strain on the conductors and sheath may then become too great during the pulling-in process. It is recommended that manholes be located not more than 500 ft (152 m) apart. The lines should preferably be run straight between manholes. If curves are necessary, the offsets from a straight line and the distance between manholes should not exceed the values given in the following tables:

110. For laterals which carry the service cables from the duct lines to the buildings served, concrete construction is usually not justified. Iron conduit has been commonly employed for this purpose. Iron conduit can be bent at will, and it is often necessary to thread a network of underground structures with a lateral, especially if it must cross the street. Usually wrought-iron conduit is used because this material resists the corrosive effect of the ground. An application of wrought-iron conduit from overhead to underground construction is illustrated in Fig. 8.95.

111. Manholes are necessary in a subway system to permit the installation, removal, splicing, and rearrangement of the cables. A manhole is merely a subterranean vault or masonry chamber of sufficient size to permit proper manipulation of the cables. The conduits enter the vault, and on its sides are arranged devices whereby the cables within the manhole can be supported.

The location of manholes is determined largely by the layout of the district that is to be supplied with power. Whenever a branch of lateral extends from the main subway, there must be a manhole, and there must be manholes at intersections of subways. In general, cables are not made in lengths exceeding 400 to 600 ft (122 to 183 m), and as it is

Single curve (see Fig. 8.96, I)				Reverse curve (see Fig. 8.96, II)			
A Curve offset	B Min. length curve, ft	Max. length L between manholes, ft		A Curve offset	B Min. length curve, ft	Max. length L between manholes, ft	
		4 ducts	6-16 ducts			4 ducts	6-16 ducts
0' 1"	5	800	700	0' 1"	5	800	700
0' 3"	10	740	650	0' 3"	15	740	660
0' 6"	15	685	600	0' 6"	25	655	575
0' 10"	20	640	560	1' 0"	35	570	500
1' 3"	25	600	525	1' 6"	40	515	450
1' 9"	30	570	500	2' 0"	45	485	425
2' 4"	35	545	475	2' 6"	50	455	400
3' 0"	40	515	450	3' 0"	55	435	380
3' 9"	45	485	425	3' 6"	60	420	365
4' 7"	50	470	410	4' 0"	65	400	350
5' 6"	55	445	390	4' 6"	70	385	335
6' 6"	60	425	370	5' 0"	75	365	320
7' 6"	65	400	350	6' 0"	80	345	300
8' 9"	70	370	325	7' 0"	85	320	280
10' 0"	75	345	300	7' 6"	90	310	270

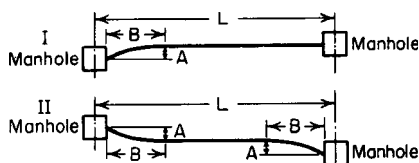


FIGURE 8.96 Offsets for main duct line: (I) single curve, (II) reverse curve.

112. Manholes are made in many shapes and sizes to meet the ideas of the designer and to satisfy local conditions. It is established, however, that the form shown in Fig. 8.97 is best for the average condition. If there are obstacles about the point where a manhole is to be located, the form of the manhole must be modified to avoid them. The form approximating an ellipse (Fig. 8.99, I) is used so that the cables will not be abruptly bent in training them around the manhole. When the rectangular type of manhole is used (Fig. 8.99, II), care must be taken not to bend the cables too sharply. The NEC has detailed rules regarding manhole sizing to prevent damage to conductors during installation, as covered in Sec. 121.

The size of manholes will vary with the number of cables to be accommodated, but in any case there must be sufficient room to work in the manhole. A 5- by 7-ft (1.5- by 2.1-m) manhole (Fig. 8.97) is probably as large as will be required in isolated plant work, while a 3- by 4-ft (0.9- by 1.2-m) manhole (Fig. 8.98) is about as small as should be used. When transformers are located in a manhole, the size should be increased to allow for working space around the transformer and for ventilation. About 2 to 3 ft³ (0.057 to 0.085 m³) of volume should be allowed per kilovolt-ampere of transformer rating.

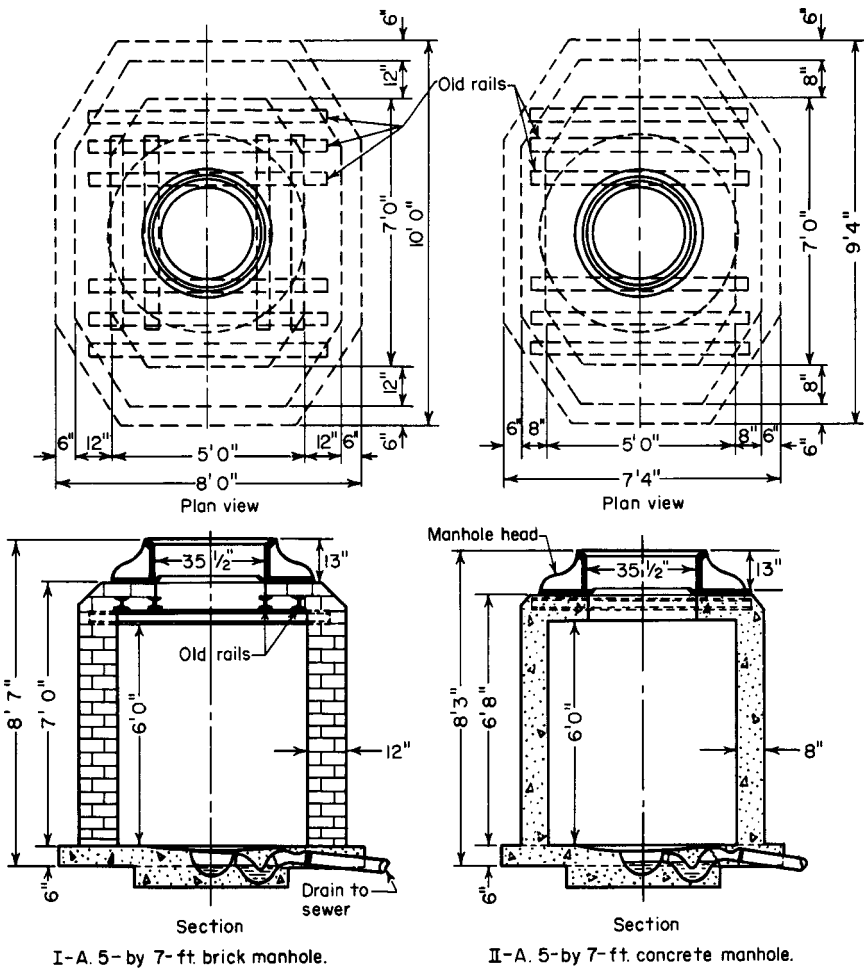


FIGURE 8.97 Typical manholes.

Manholes are built of either brick or concrete or of both of these materials. When many manholes are to be built of one size and there are no subterranean obstructions, concrete is usually the cheapest and best material. But when only a few are to be constructed or when there are many obstructions, a manhole with a concrete bottom, brick sides, and a concrete top is probably the best. Such a manhole can be constructed without having to wait for concrete to set before forms can be removed. There is a growing use of precast concrete manholes, shipped directly to the site.

113. A concrete manhole is built by first depositing the concrete floor (Fig. 8.97, II) and then erecting the form for the sides on this floor. In a self-supporting soil the sides of the hole constitute the form for outside of the manhole. If the soil is not self-supporting, there must be an outer form of rough planks, which is usually left in the ground. Steel

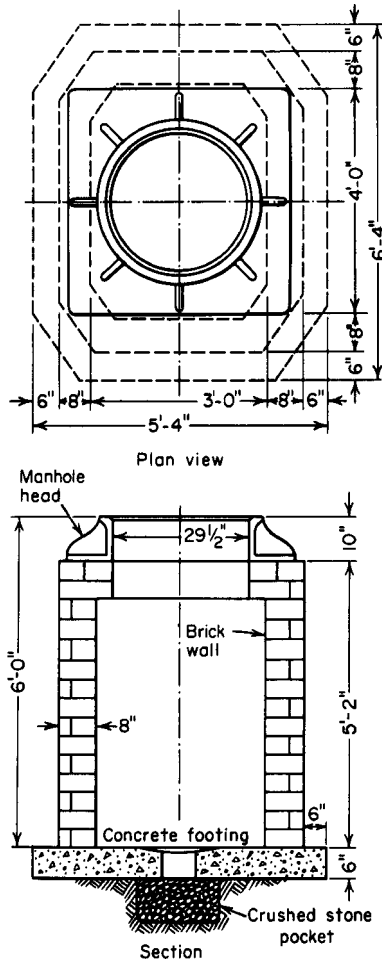


FIGURE 8.98 A 3- by 4-ft (0.9- by 1.2-m) manhole.

reinforcing (old rails are good) must be placed in the concrete top of a large manhole. In a small manhole the manhole head or cover will extend over the sidewalks, and no reinforcing or manhole roof, for that matter, is required. All reinforcing steel should be completely encased in concrete to prevent corrosion.

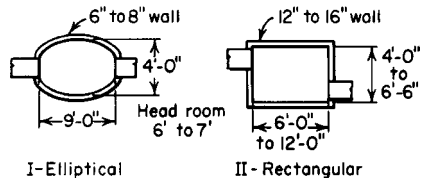


FIGURE 8.99 Type of manholes.

114. A manhole with brick walls is built (Fig. 8.97, I) by first depositing the concrete floor and then building up the brick walls thereon. If the manhole is large, the roof can be either of steel-reinforced concrete or of brick set between rails. Probably for installations in which only a few manholes are to be built, the brick-between-rails method is the best. For a small manhole no masonry roof is necessary, as the cast-steel manhole head forms the roof.

Cement mortar for building brick manholes or for conduit construction can be made by mixing together 1 part of cement, 3 parts of sand, and about $\frac{1}{3}$ part of water, all by volume.

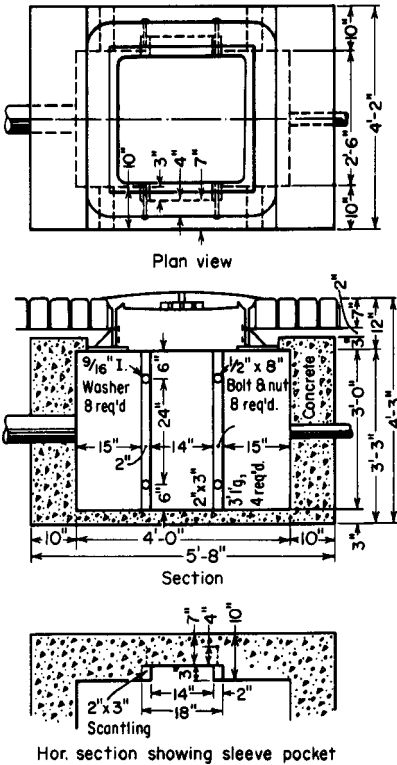


FIGURE 8.100 A concrete service box.

a smaller manhole. Covers should be round so that they cannot drop into the hole accidentally.

The NEC requires access to be at least 26×22 in. (650×550 mm) if rectangular, otherwise at least 26 in. (650 mm) in diameter. This allows for a ladder to rest against the edge of the opening; if the manhole has a fixed ladder permanently mounted, then the diameter can be reduced to 24 in. (600 mm). A similar reduction is permitted if the only wiring in the manhole is power-limited fire alarm or signaling circuits, or optical-fiber cabling. The access opening must not be directly over electrical equipment or conductors, but if this is not practicable, the manhole must be fitted with a protective barrier or a fixed ladder. The

115. Distribution or service boxes, so called, which are really small manholes, often serve the purpose of and can be used instead of larger vaults in industrial and isolated plant installations. A design for a concrete service box is shown in Fig. 8.100. A brick box would be of approximately the same dimensions. The depressions in the sidewalks are sleeve pockets. The splicing sleeves on the cables lie partially in these, after installation, and therefore less of the valuable working space of the box is occupied by them. In spite of the fact that a square manhole cover can fall into the hole, heads with square covers are often used for distribution boxes to provide an orifice giving maximum working room. These enclosures would be defined as handhole enclosures in the NEC; refer to Sec. 122 for more requirements and some current performance criteria. Today they are readily available preformed in advance that meet recognized standards, in sizes varying from as large as shown here to less than a foot square.

116. Manhole heads are frequently made of cast iron, but cast steel is better; the cover should always be of cast steel. Figure 8.101 shows a design for cast steel for a large manhole, and Fig. 8.102 one for

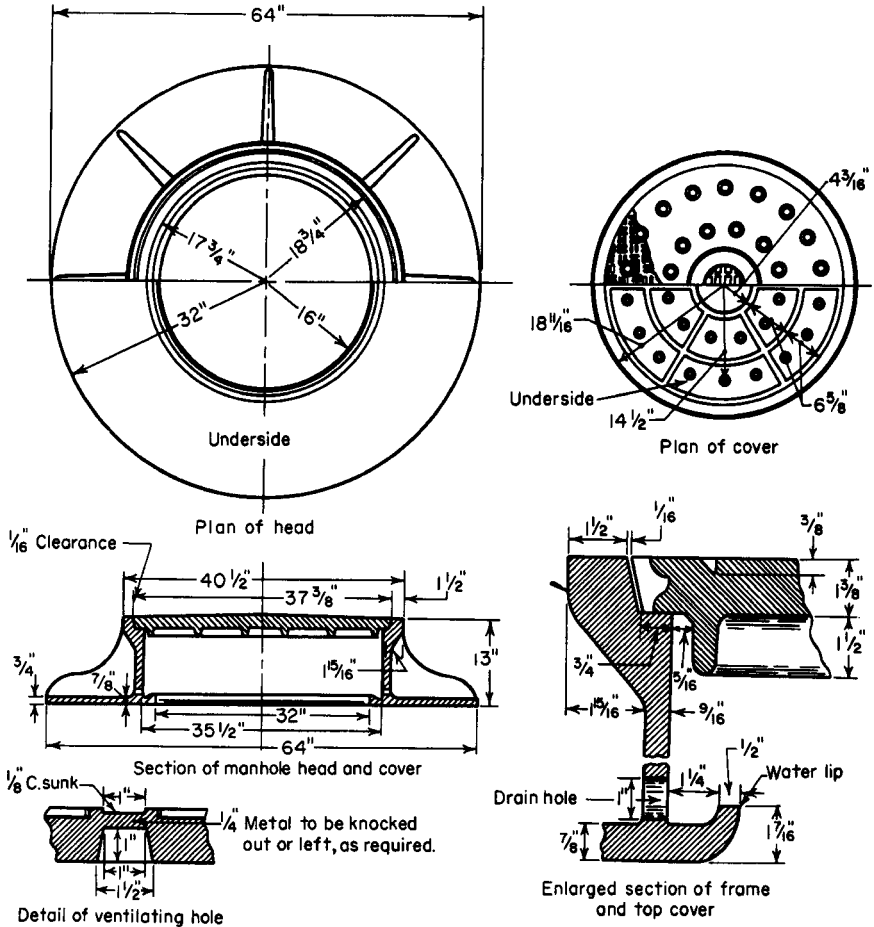


FIGURE 8.101 Head for large manholes.

cover, if rectangular, must be restrained so it cannot fall into the manhole. Covers must “prominently” identify the manhole’s function by wording (e.g., “ELECTRIC”) or a logo, and they must weigh at least 100 lb (45 kg); if not, then they must be secure so a tool will be required for access.

So-called watertight covers are now seldom used, as it is not feasible to make a satisfactory watertight cover at reasonable expense and water gets into the manholes in any event. Covers should not be fastened down because if they are and accumulated gas in a manhole explodes, the vault and cover will be shattered. A ventilated cover should be used to allow the escape of gas. The newer types have ventilating slots over approximately 50 percent of their area. Dirt and water will get into the hole, but the dirt can be cleaned out, and the water will drain out and no harm will result. If ventilation is not provided, an explosion of gas may occur and do great damage.

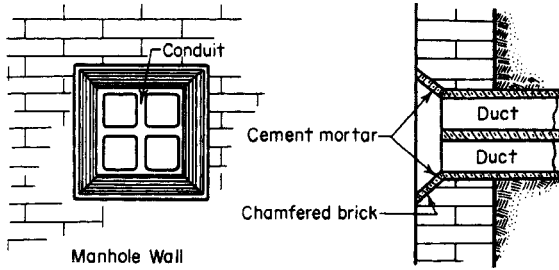


FIGURE 8.103 Chamfered wall at conduit entrance.

raceways to be listed, which is impossible in such cases. Today's duct lines use NEC recognized wiring methods, usually some form of nonmetallic conduit. When the conduit arrives at an access point, the NEC requires (for conductors 4 AWG or larger) there to be a smooth, rounded, insulated surface for them to bear against, unless they are separated from the edge of the raceway by some other insulated method that is firmly fixed in place. Nonmetallic conduit manufacturers make belled ends that serve this purpose.

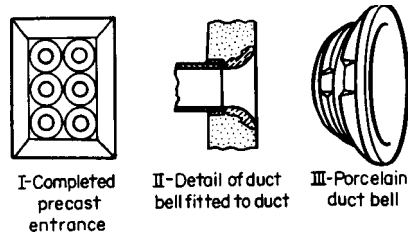


FIGURE 8.104 Manhole duct entrance using porcelain bells. [Line Material Co.]

119. A manhole hook, a convenient tool for removing manhole heads, is shown in Fig. 8.105. A common pick can be used, but the tool shown is much more convenient.

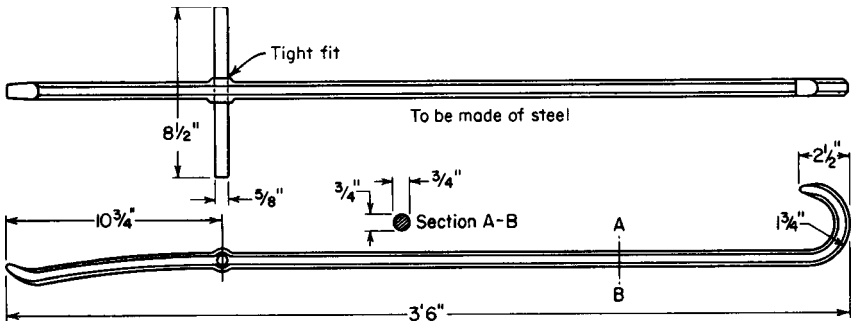


FIGURE 8.105 A manhole hook.

120. In installing cables in conduit, if a pull-in wire was not installed at the time the ducts were placed, the conduit is rodded, a pull-in wire or the drawing-in cable is drawn through, cleaners are pulled through, such as the equipment shown in Fig. 8.106, and then the cable is drawn in.

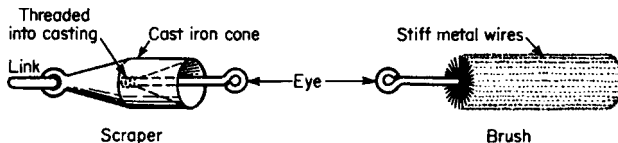


FIGURE 8.106 Scraper and brush for conduit.

121. The NEC devotes Part V of Article 110 to manhole coverage. The rules in this part apply unless an industrial occupancy demonstrates appropriate engineering supervision that supports design differences; those differences being subject to documentation and review by the inspector. The NEC requires that manholes must be designed under engineering supervision and that they must withstand the loading likely to be imposed. Section 116 includes coverage of NEC rules for access and cover specifications. The remainder of this section covers the sizing requirements, which have three components all of which apply where applicable.

- a. *Cabling work spaces.* A clear work space must be provided not less than 3 ft (900 mm) wide where cables run on both sides, and 2½ ft (750 mm) wide if the cables are on only one side, with vertical headroom not less than 6 ft (1.8 m) unless the opening is within 1 ft (300 mm) of the adjacent interior side wall of the manhole. If the only wiring in the manhole is power-limited fire alarm or signaling circuits, or optical-fiber cabling, then one of the work space dimensions can drop to 2 ft (600 mm) if the other horizontal clear work space is increased so the sum of both dimensions is not less than 6 ft (1.8 m).
- b. *Equipment work space.* If the manhole includes equipment with live parts that will require work while energized, then the normal NEC work space rules apply. The headroom rises to 6½ ft (2.0 m), and there must be clear work space at least 3 ft deep and 30 in. (750 mm) wide (wider if the equipment is wider). The depth rises to 3½ ft or 1.1 m over 150 V to ground, and then goes up to 4 ft (1.2 m) for up to 2.5 kV; 5 ft (1.5 m) for up to 9 kV, 6 ft for up to 25 kV. Refer to the NEC for higher voltages and special applications.
- c. *Bending space for conductors.* Essentially, manholes are pull boxes that are large enough for personnel to enter, and therefore they need to be sized to accommodate the installed conductors without violating the rules that normally apply to sizing pull boxes, as covered for applications not over 600 V in Sec. 324 of Div. 9. For medium-voltage applications, where the same conductor passes straight through the manhole (e.g., entering the south wall and leaving the north wall) the minimum distance is 48 times the largest shielded cable diameter (32 times the largest unshielded cable diameter). If a conductor enters one side of a manhole and then makes a right-angle turn, the dimension drops to 36 times (24 times for unshielded conductors), but it is measured in both directions, and it is increased by the sum of the outside diameters of all other cable entries on the same wall. If there are multiple rows or columns of duct openings in any direction, use the row or column that gives you the largest sizing calculation and ignore all other cable entries.

122. Handhole enclosures have minimum requirements as well. The NEC defines them as “provided for use in underground systems, provided with an open or closed bottom, and sized to allow personnel to reach into, but not enter, for the purpose of installing, operating, or maintaining equipment or wiring or both.” They must be identified for use on underground systems, and they must be designed and installed to withstand all loads likely to be imposed.

The NEC identifies a standard (ANSI/SCTE 77-2002) that can be used to evaluate loading on these enclosures. This standard identifies a series of tiers that can be specified based on the expectation of vehicular loading. Tier 5 is for pedestrian use with a safety factor for occasional nondeliberate vehicle traffic; it carries a 5000 lb vertical design load rating. Tier 8 is for sidewalk use with a safety factor for nondeliberate vehicular traffic, with a comparable design load rating of 8000 lb. Tier 15 is for parking lots, driveways, and off roadway uses that are subject to occasional nondeliberate heavy vehicular traffic; here the vertical load rating is 15,000 lb.

Handhole enclosures have the same sizing rules related to wire bending space as for manholes (Sec. 121). There is an instance where a different set of rules apply, however. If a raceway enters through the bottom plane of a bottomless enclosure, the measurements are taken from the end of the conduit or cable assembly. When such an entry is opposite a removable cover, as it would be in this case, the spacing rules change. For wires operating at 600 V and below, the minimum distance becomes the one-wire-per-terminal distance in Table 312.6(A) (see Div. 12, Table 34 which is identical) for the conductor sizes involved. For medium voltage wiring the distance is 12 times the shielded cable diameter and 8 times the diameter for unshielded conductors.

Handhole enclosures are renowned for filling up with sand and water, particularly for the ones without bottoms, which is usually the case. All wiring and splicing provisions must be listed for wet locations for this reason. In addition, if a handhole enclosure has a metal cover, it must be bonded to an equipment grounding conductor (usual case) or to a grounded circuit conductor if the application is on the line side of service equipment. This is a critical safety issue. There have been many fatalities, of both people and their pets, from energized handhole covers.

123. Rodding. Rods are pieces of round hickory about $\frac{3}{4}$ in. (19.05 mm) in diameter and 3 ft (0.9 m) long (Fig. 8.107). Fiberglass wands are commonly used today. The ends of the rods are equipped with brass knuckle-joint fittings so that the rods can be readily joined together and disjoined. In rodding, a rod is pushed into the duct, and a second rod is coupled to it. The two are pushed into the duct, a third rod joined on, and the process is repeated until the rods extend from manhole to manhole. A galvanized-iron wire is attached to the last rod, and the wire is drawn into the duct.



FIGURE 8.107 Rods for conduit.

A rope of flexible steel cable to which are attached a scraper and a brush (Fig. 8.106) is drawn through to ensure that the duct is clear and clean. To the end of this rope or cable is attached another which is used to pull in the electrical conductor cable.

If the conduit is short, a steel fish wire or ribbon, like that used by electricians in wrought-iron conduit work, can be inserted instead of the rods.

124. Pulling in cable. The cable can be attached to the pulling-in wire by any one of several methods. Fig. 8.108C shows one that was formerly much used. Probably the best methods are those illustrated in Fig. 8.108A and B. At A, a galvanized-iron wire is laced around the cable in such a way that the harder it is pulled, the tighter it grips. At B is shown a *grip* spirally laced from flexible steel strands. It slips over the cable sheath readily, but when tension

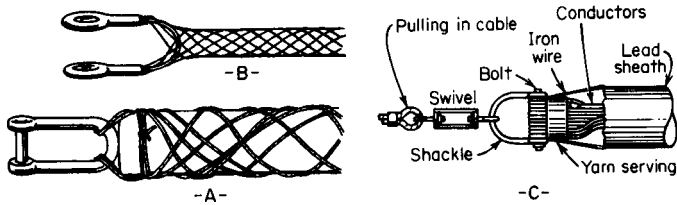


FIGURE 8.108 Methods of attaching cable to drawing-in line.

is applied, it effectively grips the cable. A swivel should always be inserted in any pulling-in line to prevent the untwisting of the drawing-in line under tension from twisting the cable.

After the cable has been fastened to the pulling-in line, a *protector* is placed in the mouth of the duct to prevent abrasion of the cable. Metal protectors can be purchased, but a good one can be formed from a piece of sole leather.

The cable is bent, as shown in Fig. 8.109, from the cable reel to the mouth of the duct, and the pulling in commences. In the far manhole, sheaves are arranged over which the pulling-in line passes (see Fig. 8.109). If eye-bolts are built in the manhole sides, the sheaves (snatch blocks) can be fastened to them. Otherwise a guide-sheave rack (see Fig. 8.110 for detail and Fig. 8.109 for application) can be set up in the manhole.

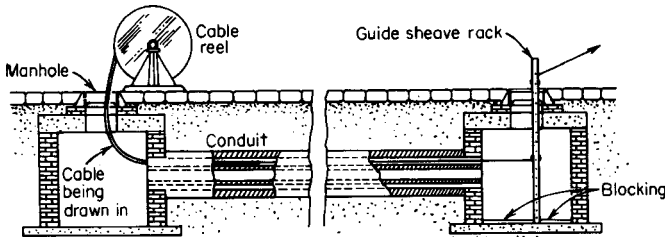


FIGURE 8.109 Drawing in cable with a winch.

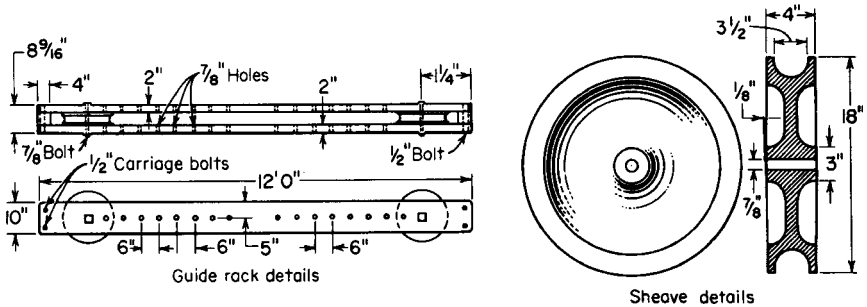


FIGURE 8.110 Guide-sheave rack and sleeve.

A winch, truck, or tractor can be used for the pulling. Workers can pull a cable in if the run is not too long. The cable sheath should be greased as it is drawn in to ensure easy pulling. When a length of cable longer than the distance between manholes is to be pulled through, it can pass over the sheaves on the guide-sheave rack provided they are large enough in diameter. A manhole capstan (Fig. 8.111) is sometimes used instead of a winch

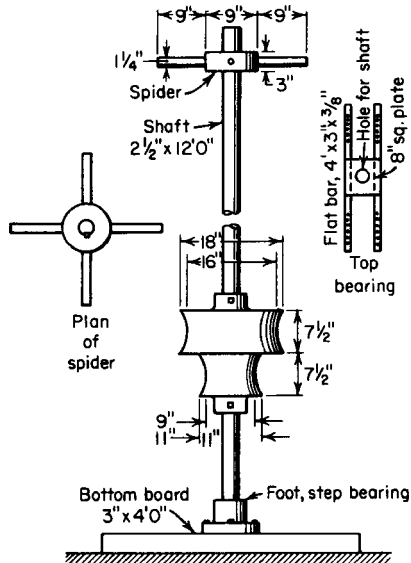


FIGURE 8.111 Manhole capstan.

on the surface of the ground. Enough cable should be pulled into the manhole to allow for forming it around the hole and splicing it. Do not permit a cable to hang over the sharp edge of a duct. Support it in the rack. For major pulls in general, and for medium-voltage pulls in particular, the pull should be continuous (not stopped and started). Carefully review the coverage of allowable pulling forces and bending radii in Div. 9 in order to be certain that the conductors will not fail after installation.

125. Supporting cables in manholes. Some provision must be made for supporting cables. Creosoted or pressure-treated planks (Fig. 8.112) are sometimes bolted to the manhole sides, and the cables are held to the cleats with pipe straps. In other cases metal supports, several forms of which are on the market, are used. One that can be readily made is shown in Fig. 8.113. A rack made of porcelain arms on a steel framework is shown in Fig. 8.114.

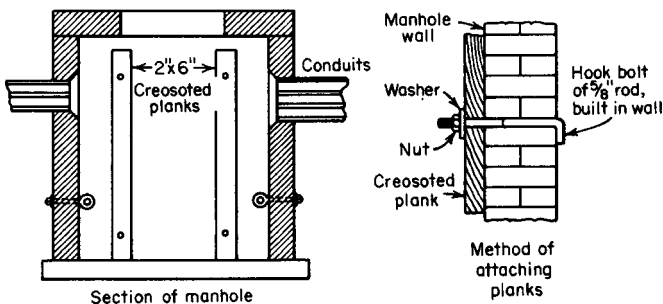


FIGURE 8.112 Creosoted- or pressure-treated-plank cable supports.

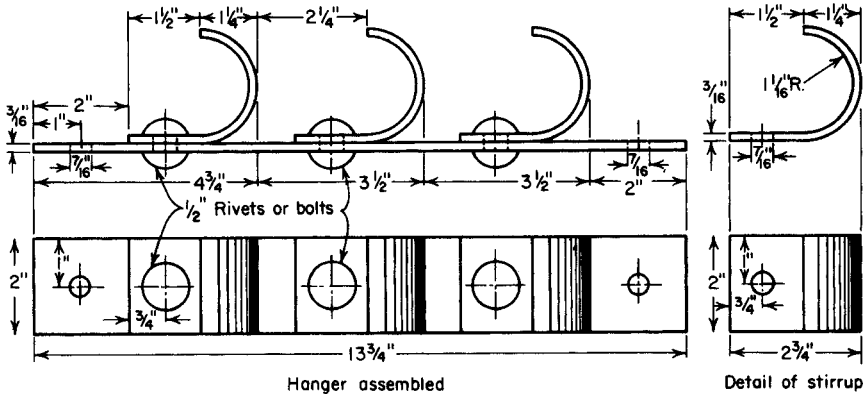


FIGURE 8.113 Iron cable support.

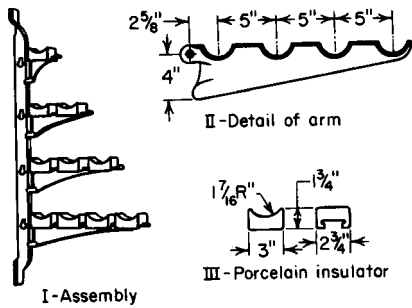


FIGURE 8.114 Cable rack. [Line Material Co.]

126. Eyebolts or stirrups should be set in manhole walls to provide means of attachment for the tackle used in pulling in cable (Fig. 8.112). An eyebolt or stirrup should be set opposite the point of entrance of each subway. Figure 8.115 shows the dimensions of a suitable stirrup.

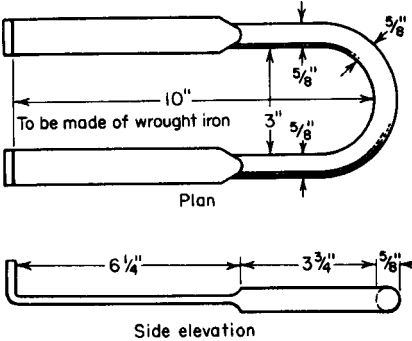


FIGURE 8.115 Stirrup for manhole wall.

127. Several cables should not be placed in one duct. Experience has shown that although it is easy enough to install cables under such conditions and mechanically easy to withdraw them, the removal almost invariably ruins the cable, because after long lying in a duct the cables become so impacted with dust and grit that when one is drawn out, the sheath is stripped either from the cable itself or from one of its companions. Consequently, conduits are now almost exclusively built by arranging a sufficient number of ducts so that each cable can have its own exclusive compartment.

128. In manholes and ducts, cables should be so arranged that there will be a minimum of crossing and recrossing. An underground cable system should be carefully planned, and the ducts should be so chosen for the cables that, as far as feasible, a cable will take the duct in the same relative position throughout the subway.

129. Installation of cable buried directly in the ground. Cable buried directly in the ground finds a wide field of application for installations of single circuits for which the cost of duct construction would be prohibitive. Some of the more common applications are:

1. Street-lighting circuits, especially in cities whose outlying sections are without ducts
2. Lighting and power circuits in parks, on estates, in industrial plants, on parkways, etc.
3. Connecting residences to mains, especially in subdivisions and for underground service in alleys
4. Connecting houses, garages, and other buildings
5. Railroad-yard and airport lighting
6. Lighting and power circuits for amusement parks, baseball, football, and general sports
7. High-wall power cable for strip mines
8. Railway-signal circuits
9. Crossings under small lakes and streams
10. Horizontal runs in mines for power, lighting, and telephone circuits

Both nonmetallic-armored cable and metallic-armored cable (parkway cable) are used for direct burial in the earth. The nonmetallic-armored types are lighter in weight, more flexible, and easier to splice and are not subject to rust, crystallization, induced sheath power loss, or trouble from stray currents. On the other hand, they do not give such good protection against mechanical injury.

The cables are installed either by digging a shallow open trench, laying in the cables, and refilling or by means of a gasoline-powered trencher-cable layer. When a trench is dug, it needs to be made only wide enough for convenient handling of a cable. The cables (600 V or less) need not be laid more than 18 in. (457.2 mm) under the surface except when subject to extreme mechanical hazard, such as at street intersections or under roadways. At such points it is advisable to bury the cable at least 30 in. (762 mm) deep and to cover it with protective pads.

130. Types UF and USE cables are Code-designated single-conductor or multiconductor cables suitable for direct burial in earth. These cables are described in Divs. 4 and 9, where typical applications at 600 V or less are discussed.

131. Underground conductors over 600 V.

The National Electrical Code includes rules for the protection of underground conductors when the supply voltage exceeds 600 V. These rules were introduced to minimize the hazards of “dig-ins,” and Sec. 300.50 of the Code covers such rules.

GROUNDING OF SYSTEMS

132. Grounding of distribution circuits. The National Electric Code requires that on systems supplying interior-wiring circuits one wire of the circuit shall be grounded, provided that the voltage from any other conductor to ground will not exceed 300 V on dc systems or 150 V on ac systems. Grounding helps to prevent accidents to persons and damage by fire to property in case of lightning, breakdown between primary and secondary windings of the transformers, or accidental contact between high-voltage wires and low-voltage wires. If some point on the low-voltage circuit is grounded, (1) lightning striking the wires will be conducted into the ground, and (2) breakdown of the transformer insulation between primary and secondary coils will reveal itself through blowing of the primary transformer fuses if one wire of the primary circuit comes in contact with one of the secondary wires. See Sec. 146 for the importance of a low-impedance ground-path return.

133. The value of grounding is illustrated in Fig. 8.116. One of the primary circuit wires is grounded at the transformer. The secondary is grounded at the customer’s water pipe. An accidental cross between ungrounded primary and secondary wires is shown by

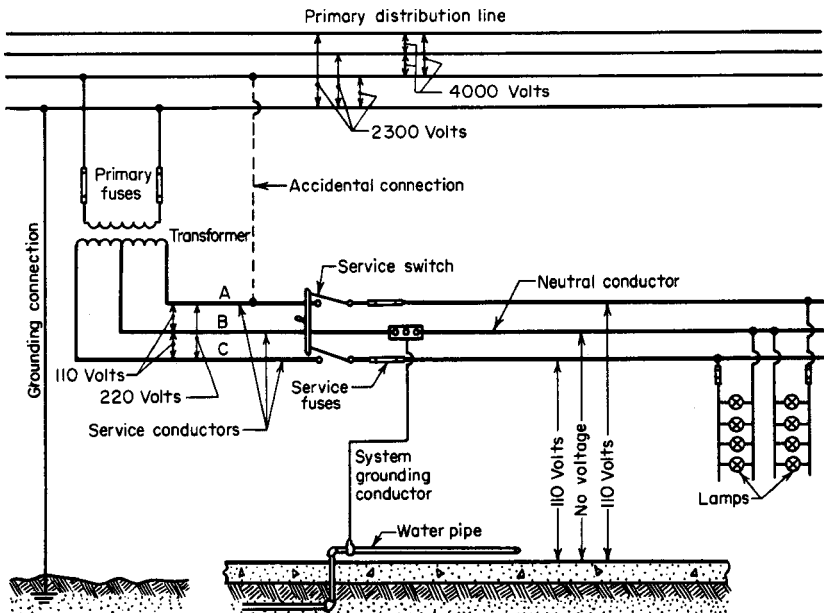


FIGURE 8.116 Ground connections for interior wiring systems.

the dotted line. Current will flow through the cross-connection, the secondary of the transformer, and the customer's water-pipe ground and up the ground connection to the other primary line. The voltage of the secondary wires to ground will be increased by the IZ drop through the water-pipe ground. A current of 100 A times a ground resistance of $2\ \Omega$ (there is practically no reactance) giving 200 V would represent very severe conditions. This means that the secondary voltage to ground would be the normal 110 V plus the 200 V, giving 310 V, which would probably not do any damage before the primary protective devices would open and break the circuit. This type of accidental cross should open the substation-feeder circuit breaker. If the cross were in the transformer itself, the primary fuse would open. If, however, there were no ground connection, the primary 2300 V would be impressed on the secondary system, which is insulated for only 250 to 600 V, and numerous insulation breakdowns and considerable damage to equipment would occur. Also, there would be danger to human life for anyone touching a fixture at such a time.

134. High-voltage transmission systems are also frequently grounded to reduce the voltage to ground and consequently the line insulation required. For example, if a 220-kV three-phase circuit has the windings of the supply transformer connected in Y, with the midpoint of the Y grounded, the voltage to ground will be $220 \div \sqrt{3} = 127\text{ kV}$. This reduction of the voltage to ground is of great value in insulating the transformer windings and in the number of insulators required for the line supports. At the same time, the advantage of the 220 kV in reducing the line current and line losses is retained.

135. Ground-wire connections to transformer secondaries should be made to the neutral point or wire if one is accessible. If no neutral point is accessible, one side of the secondary circuit may be grounded. Figure 8.117 shows theoretical diagrams of ground connections to transformer secondaries, and Fig. 8.118 illustrates how some of these connections are arranged with commercial transformers. The neutral point of each transformer feeding a two-phase, four-wire secondary should be grounded unless the motors taking energy from the secondary have interconnected windings. If they are interconnected, the center or neutral point of only one transformer is grounded. No primary windings are shown in Figs. 8.117 and 8.118. In Fig. 8.118 the secondary winding of each transformer is shown divided into two sections, as it is in commercial transformers.

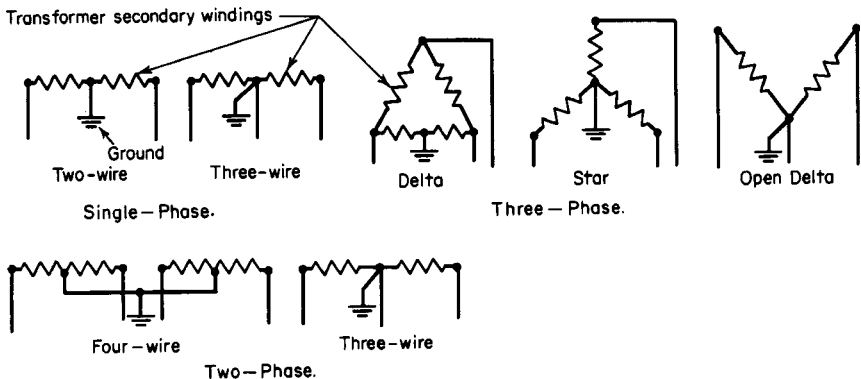


FIGURE 8.117 Theoretical diagrams of secondary-ground connections.

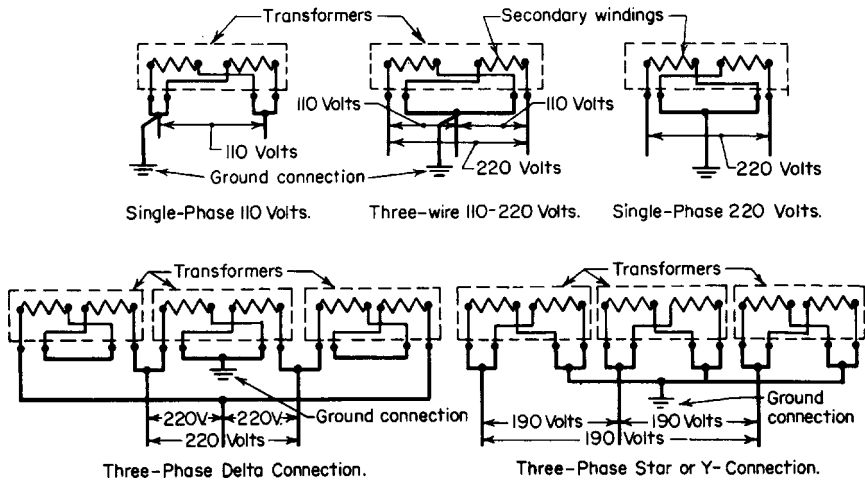


FIGURE 8.118 Ground connections to secondaries of commercial transformers.

136. Ground rods made of steel pipe with copper-welded exterior surface are extensively used. The rod is driven into the ground, and the ground wire fastened by a clamp near the top of the rod. The copper coating provides for a good electrical connection and affords resistance to corrosion from the weather and earth. Ground resistance testing as required by the NEC can be accomplished with a portable digital ground resistance tester that is battery powered with built-in rechargeable batteries and charger. See Fig. 8.119. These testers are designed for larger or more complex grounding systems, including communication grounding systems. Resistivity tests assist the design of a correct grounding system, so that later modifications are minimized.

137. Ground wires should be encased by nonmetallic molding for a distance of at least 8 ft (2.4 m) from the surface to protect against shocks to passersby. Under certain conditions of soil moisture, a shock can be received from a ground wire by a person standing on the earth's surface. The ground pipe extends about 1 ft (0.3 m) above ground and is not usually protected. Some companies encase the entire length of the ground wire in molding to protect the lineworkers.

No copper wire smaller than No. 8 should be used for a ground wire, and some companies use nothing smaller than No. 4. Copper wire is preferable. Bare wire is satisfactory and should be attached to the poles with cleats or straps. Staples, although used, should not be. The National Electrical Code requirements with respect to the size of ground wires are given in Div. 9. There should be a ground for each transformer or group of transformers, and when transformers feed a network with a neutral wire, there should, in addition, be a ground at least every 500 ft (152.4 m). The National Electrical Safety Code specifies that all ground pipes shall be galvanized and have a minimum nominal diameter of $\frac{1}{2}$ in. Steel or iron rods shall have a minimum cross-sectional dimension of $\frac{3}{8}$ in. or, if listed, they can be as small as $\frac{1}{2}$ in. (12.7 mm) in diameter.

138. The National Electrical Safety Code implies that the ground resistance should be measured at the time of installing the ground, and that the ground resistance must not exceed 25Ω for artificial (buried or driven) grounds.



FIGURE 8.119 Digital resistance tester. [Biddle Instruments, AVO International]

139. To measure the ground resistance, two additional temporary grounds, consisting of short rods 2 or 3 ft (610 or 914 mm) long, must be driven in the ground at least 20 ft (6.1 m) away from the ground being tested (Fig. 8.120, I). A direct-reading instrument is then connected to the three grounds by means of insulated leads. A magneto or a battery in the instrument furnishes the necessary power. The instrument reads the ground resistance directly in ohms. If a source of direct or alternating current is available, the resistance can be measured by the fall-of-potential method with a voltmeter and ammeter, connections for which are shown in Fig. 8.120, II. The resistance is then calculated from $R_g = E/I$.

140. When testing ground resistance in city streets there may be no convenient place to drive the auxiliary grounds. In such a case a fire hydrant can be used for the auxiliary ground, or a pad made of several thicknesses of heavy cloth about 1 ft (0.3 m) square and saturated with salt water can be placed on the sidewalk (Fig. 8.121).

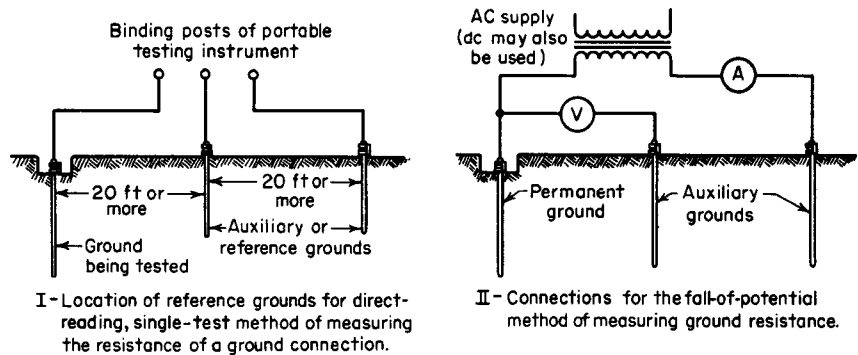


FIGURE 8.120 Circuits for measurement of ground resistance. [Copperweld Corp.]

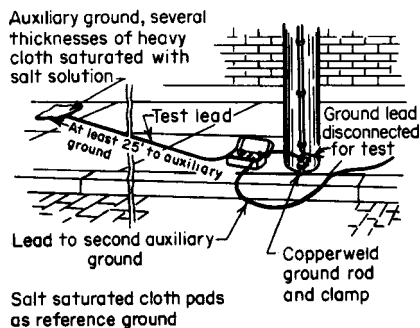


FIGURE 8.121 Testing ground resistances in paved streets.

141. Reduction of ground resistance when it exceeds the allowable value of $25\ \Omega$ can be accomplished in several ways:

- 1. Use of a larger-diameter ground rod
- 2. Use of a longer ground rod
- 3. Putting two, three, or more rods in parallel
- 4. Chemical treatment of the soil

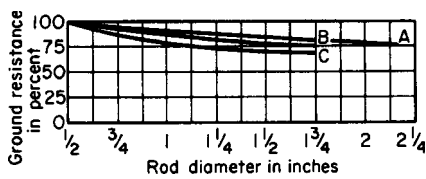


FIGURE 8.122 Effect of diameter of ground rod on ground resistance. [Copperweld Corp.]

142. The effect of the use of a large-diameter rod is shown in Fig. 8.122. It will be noted that increasing the diameter of the ground rod does not effect much reduction in resistance, and use of ground rods larger than $3/4$ in. (19.05 mm) is not recommended. The diameter of the rod should be only large enough to permit it to be driven into the soil without bending.

143. Long ground rods made in sections coupled together are very effective where there is considerable depth of dry sand and good moist soil is many feet underground. Although the 2.5 m (8 ft) minimum depth required by the National Electrical Code is sufficient for normal soil conditions, grounds as deep as 15 m (50 ft) have been used in very poor soil. The calculated effect of the depth of rod on ground resistance is shown in Fig. 8.123. The curve is for uniform soil at all depths. In practice the soil is always firmer and more moist the deeper the ground, so that the decrease of resistance with increase of depth is usually greater than is shown by the curve.

144. Using several rods in multiple is a very effective means of lowering ground resistance, as shown in Fig. 8.124. The recommended distance between rods is at least 6 ft (1.8 m), so that this method is more applicable to large steel-tower lines and substation structures than to wood-pole lines. Spacing rods as close together as the opposite sides of a wood pole is not recommended.

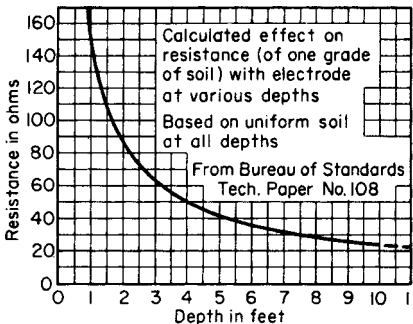


FIGURE 8.123 Effect of depth of ground rod on ground resistance. [Copperweld Corp.]

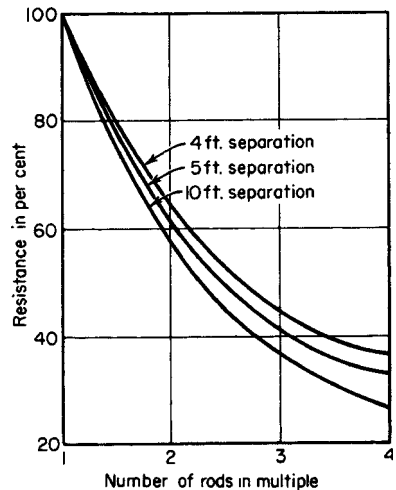


FIGURE 8.124 Effect on ground resistance of placing ground rods in multiple. [Copperweld Corp.]

145. Chemical treatment of the soil is recommended for reducing ground resistance when the other methods of Secs. 141 to 144 are not practical.

There are two practical ways of accomplishing this result, as shown in Fig. 8.125. In the method of Fig. 8.125, I, a length of tile pipe is sunk in the ground a few inches from the ground rod and filled to within 1 ft (0.3 m) or so of the ground level with magnesium sulfate, copper sulfate, or common rock salt. The magnesium sulfate is the most common, as it combines low cost with high electrical conductivity and low corrosive effect on the rod. This method is effective where there is limited space for soil treating, such as on city streets. The method of Fig. 8.125, II, is applicable where a circular or semicircular trench can be dug around the ground rod to hold the chemical. The chemical must be kept several inches

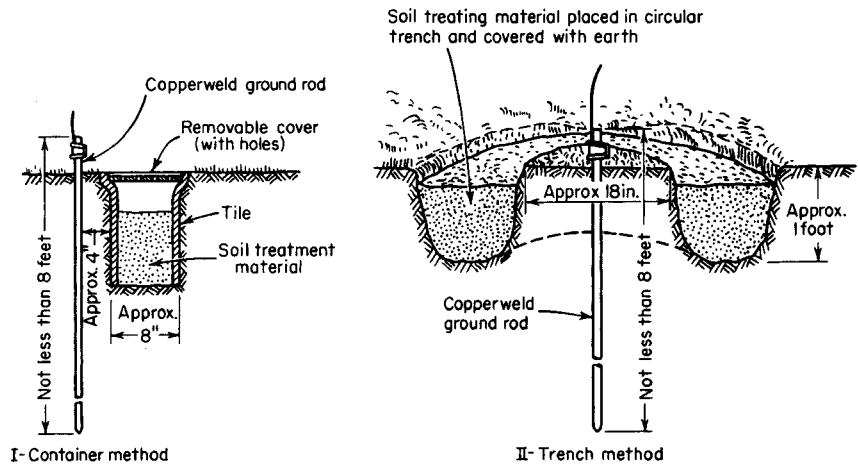


FIGURE 8.125 Methods of soil treatment for lowering of ground resistance. [Copperweld Corp.]

away from direct contact with the ground rod to avoid corrosion of the rod. The first treatment requires 40 to 90 lb (18.1 to 40.8 kg) of chemical and will retain its effectiveness for 2 to 3 years. Each replenishment of the chemical extends the effectiveness for a longer period, so that future retreating becomes less and less frequent. When the chemical is first installed, it is well to flood the treated area with water so that the chemical will diffuse through the soil. Thereafter normal rainfall will usually provide the necessary water for carrying the solution into the earth.

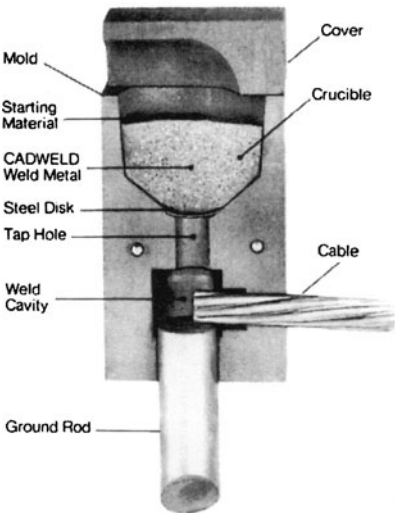


FIGURE 8.126 Cadweld is an exothermic welding process suitable for grounding electrode connections and for extensions of the grounding electrode conductor. [Erico Products, Inc.]

146. A low-impedance ground-path return is absolutely essential if line-to-ground faults in grounded systems are to open overcurrent devices in buildings. It is an important rule in the National Electrical Code [Sec. 250.24(B)], which requires a grounded conductor of a grounded utility system to extend to every building served. Such grounded conductors are then bonded to the metallic enclosures of the service equipment, and the grounded conductor is connected to an electrode on the premises by a grounding electrode conductor which usually extends from a neutral bar in the service-equipment enclosure to the electrode. See Div. 9 for detailed Code rules to size grounded and grounding conductors.

When a grounded conductor is properly bonded to the metallic service equipment, any line-to-ground fault from an ungrounded conductor to grounded equipment (raceways, cables, boxes, etc.) on the load side of overcurrent devices will be able to follow a

low-impedance path to the grounded conductor at the supply transformer, thus permitting an overcurrent device to open quickly. All ground faults must be cleared as fast as possible to avoid extended exposure of energized metallic parts, which provides a serious shock hazard. It cannot be stressed too strongly that proper bonding of the grounded conductor of the supply system to the service-entrance equipment is essential for the proper operation of overcurrent devices in the event of line-to-ground faults. For splices of the grounding electrode conductor, see Fig. 8.126. For low-magnitude ground faults, see information on ground-fault circuit interrupters in Div. 4.

This page intentionally left blank

DIVISION 9

INTERIOR WIRING

General	9.2
Open Wiring on Insulators	9.14
Concealed Knob-and-Tube Wiring	9.24
Rigid-Metal-Conduit and Intermediate-Metal-Conduit Wiring	9.25
Cable Pulling Calculations for Raceways	9.58
Interior or Aboveground Wiring with Rigid Nonmetallic Conduit	9.67
Flexible-Metal-Conduit Wiring	9.73
Liquidtight Flexible-Metal-Conduit Wiring	9.76
Metal-Clad-Cable Wiring: Types AC and MC	9.77
Surface-Raceway Wiring	9.83
Electrical-Metallic-Tubing Wiring	9.91
Nonmetallic-Sheathed-Cable Wiring	9.94
Mineral-Insulated Metal-Sheathed-Cable Wiring	9.100
Medium-Voltage-Cable Wiring	9.107
Underground-Feeder and Branch-Circuit-Cable Wiring	9.109
Interior Wiring with Service-Entrance Cable	9.109
Underfloor-Raceway Wiring	9.112
Wireway Wiring	9.128
Busway Wiring (NEMA)	9.130
Cellular-Metal-Floor-Raceway Wiring	9.162
Cellular-Concrete-Floor-Raceway Wiring	9.173
Wiring with Multioutlet Assemblies	9.181
Cablebus Wiring	9.188
Cable Trays	9.191
General Requirements for Wiring Installations	9.197
Crane Wiring	9.245
Wiring for Circuits of Over 600 Volts	9.253
Wiring for Circuits of Less than 50 Volts	9.255
Wiring for Hazardous (Classified) Locations	9.255
Installation of Appliances	9.264
Electric Comfort Conditioning	9.266
Wiring for Electric Signs and Outline Lighting	9.289
Remote-Control, Signaling, and Power-Limited Circuits	9.295
Wiring for Special Occupancies	9.300
Design of Interior-Wiring Installations	9.301

Wiring for Residential Outdoor Lighting 9.308
Wiring for Commercial and Industrial Occupancies 9.312
Farm Wiring 9.347
Solar Photovoltaic Systems 9.357

GENERAL

1. The NEC rules, which are the recommendations of the National Fire Protection Association (NFPA), should be followed in installing all interior wiring. These rules are revised every 3 years, and so it is inadvisable to include them entirety in this book. A copy of the rules can be obtained from any local inspection bureau or purchased from the NFPA. All statements are made in accordance with the 2008 edition of the Code. The Occupational Safety and Health Act (OSHA) adopted the 1971 National Electrical Code (initially the 1968 edition) as the electrical standard for employee safety in the workplace. NFPA has written a standard title “Electrical Safety Requirements for Employee Workplaces” (NFPA 70E®) that is intended to serve as an enforcement document by compliance officials of the Department of Labor.

2. There are local regulations covering the installation of wiring in force in many localities, which have been enacted by city and state governments. Sometimes these differ from the Code regulations, and so it is always well to be familiar with all the regulations in force before starting any work. The city and state rules are in reality laws and therefore take precedence over the NEC rules, which of themselves have no legal status.

3. Definitions (National Electrical Code). The NEC reserves Article 100 to cover the essential definitions required to properly apply its provisions. Not included are general terms that are commonly defined, or technical terms that are used in the same way as in related codes and standards. In addition, if a term is only used in one article, it will be defined within that article and not in Article 100. Part I of the article applies throughout the NEC; Part II covers definitions that only apply to installations operating over 600 V, nominal. Consult Article 100 if you are unclear as to how a specialized electrical term is defined that appears in the NEC.

There are four definitions, however, that are so widely used that they bear repeating here, along with some commentary, as follows:

a. AMPACITY The current, in amperes, that a conductor can carry continuously under the conditions of use without exceeding its temperature rating.

This is covered extensively in Secs. 89 to 106 of Div. 3. Note that ampacity applies to electrical conductors. Other parts of an electrical system may have current ratings, such as switches, circuit breakers, motor contactors, etc., but only electrical conductors have an ampacity, and that ampacity changes with conditions. For example, 12 AWG THHN has an ampacity of 30 A at 30°C with three (or fewer) current-carrying conductors in a raceway. Raise the number of conductors, or raise the ambient temperature, or both, and the ampacity will decrease.

The other three definitions cover the three methods of product acceptance recognized by the NEC. They are crucial to the proper application of the Code. Code making

panels have robust discussions every code cycle about which one to apply in a given situation.

- b. **APPROVED** Acceptable to the authority having jurisdiction.
- c. **IDENTIFIED** (as applied to equipment) Recognizable as suitable for the specific purpose, function, use, environment, application, etc., where described in a particular Code requirement.
- d. **LISTED** Equipment, materials, or services included in a list published by an organization that is acceptable to the authority having jurisdiction and concerned with evaluation of products or services, that maintains periodic inspection of production of listed equipment or materials or periodic evaluation of services, and whose listing states that the equipment or material or service meets appropriate designated standards or has been tested and found suitable for a specified purpose.

NOTE The means for identifying listed equipment may vary for each organization concerned with product evaluation, some of which do not recognize equipment as listed unless it is also labeled. Use of the system employed by the listing organization allows the authority having jurisdiction to identify a listed product.

The word “approved” means acceptable to the inspectional authority (technically, the “authority having jurisdiction”), and nothing more or less. It does not mean “identified” unless the inspector chooses to use compliance with the definition of “identified” as the basis for his or her decision. Similarly it does not mean “listed” unless the inspector chooses that standard as the basis for his or her decision. For this reason, any statements in product literature (and they are common) that something is “approved” by some testing laboratory is necessarily fallacious. A product may be listed by a testing laboratory, but never approved.

The word “identified” is routinely confused with the normal usage in the English language of the word “marked.” It does not mean marked. It means what Article 100 says it means. It means generally recognizable as suitable for the specific application called out in the NEC requirement. This often comes from product literature generated by manufacturers. For an example of correct usage of this term in a Code rule, the NEC requires two-winding transformers reconnected in the field as autotransformers to be *identified* for use at elevated voltage. (Refer to the example in Sec. 117 of Div. 5 for the reasons why.) These transformers are frequently listed, but as two-winding transformers. They could not be listed as autotransformers because they do not leave the factory this way, and they have wide application as two-winding transformers. A listing would be excessive because the transformer manufacturers would have to run two production lines with two different labels for the same product. The installer needs to rely on product literature from the manufacturer to verify suitability for reconnection, and fortunately, these manufacturers all provide specific information on how to make the reconnections so the transformers will buck or boost the voltage as desired.

The word “listed” covers the most specific method of product acceptance, because it means that a qualified testing laboratory, usually with testing facilities that an inspector could not possibly duplicate, has performed exhaustive tests to judge the performance of the product under the conditions contemplated in a specific Code rule. The Code note that follows the definition needs some explanation as well. Although the note is written in a general and explanatory manner, in fact all qualified testing laboratories operating under the current North American electrical safety system do require a label as evidence of the listing. It follows, then, that if a label falls off, the product no longer has the status of being listed. Further, the only way a label can be reapplied is in the presence of an employee of the testing laboratory. Sending labels through the mail is not an option and will result in disciplinary action against the manufacturer by the testing laboratory. The testing laboratories will all send personnel into the field to witness the reapplication of labels.

4. Methods of installing interior wiring (listed in the order of NEC coverage)

1. Armored cable, Type AC
2. Flat cable assemblies, Type FC
3. Flat conductor cable, Type FCC
4. Integrated gas spacer cable, Type IGS
5. Medium voltage cable, Type MV
6. Metal-clad cable, Type MC
7. Mineral-insulated, metal-sheathed cable, Type MI
8. Nonmetallic-sheathed cable, Type NM (and NMC and NMS)
9. Power and control tray cable, Type TC
10. Service-entrance cable, Type SE (and USE)
11. Underground feeder and branch-circuit cable, Type UF
12. Intermediate metal conduit, Type IMC
13. Rigid metal conduit, Type RMC
14. Flexible metal conduit, Type FMC
15. Liquidtight flexible metal conduit, Type LFMC
16. Rigid polyvinyl chloride conduit, Type PVC
17. High density polyethylene conduit, Type HDPE
18. Nonmetallic underground conduit with conductors, Type NUCC
19. Reinforced thermosetting resin conduit, Type RTRC
20. Liquidtight flexible nonmetallic conduit, Type LFNC
21. Electrical metallic tubing, Type EMT
22. Flexible metallic tubing, Type FMT
23. Electrical nonmetallic tubing, Type ENT
24. Auxiliary gutters
25. Busways
26. Cablebus
27. Cellular concrete floor raceways
28. Cellular metal floor raceways
29. Metal wireways
30. Nonmetallic wireways
31. Multioutlet assembly
32. Nonmetallic extensions
33. Strut-type channel raceways
34. Surface metal raceways
35. Surface nonmetallic raceways
36. Underfloor raceways
37. Cable trays
38. Concealed knob-and-tube wiring
39. Messenger-supported wiring
40. Open wiring on insulators

5. Armored cable (Type AC) includes Type AC. Type AC contains insulated conductors of a type accepted for general wiring applications to the NEC. The conductors are enclosed in an armor comprised of steel or aluminum interlocking tape. The armor is arranged with an internal bonding strip of aluminum or copper “in intimate contact with the armor for its entire length.” Type AC cable, which is commonly called BX, has largely been supplanted in the market by the interlocking-armor style of metal-clad cable. However, certain applications, especially patient care areas of health care facilities, require a wiring method where the outer margin of the wiring method, whether raceway or cable assembly, qualify as an equipment grounding return path, and Type AC cable inherently qualifies for this use.

6. Flat cable assemblies (Type FC) are comprised of a flat ribbon of 10 AWG conductors with a special stranding embedded in a flat nonmetallic assembly that is limited to 30-A branch circuits. The conductor ribbon is drawn into a raceway specially formed as an open channel to receive it. After the conductor assembly has been drawn in, special fittings that mount to the channel are added. These have sharp contacts that, when tightened, pierce the insulation mat supporting the conductors and make contact with the embedded conductors. The assembly is used to supply HID luminaires and other small power loads. The nonmetallic insulation is designed to be self-healing, and the tap mechanisms can be repositioned as needed.

7. Flat conductor cable (Type FCC) is a field-installed wiring system for branch circuits incorporated Type FCC cable and associated accessories for installation under carpet squares no larger than 914 mm (36 in.) square. FCC systems shall not be used outdoors or in other wet locations, where subject to corrosive vapors, in any hazardous location, or in residential, school, and hospital buildings.

8. Integrated gas spacer cable (Type IGS) is an assembly of 1 to 19 aluminum rods laid parallel, with kraft paper insulation over the bundle, inside a medium-density polyethylene jacket of 2, 3, or 4 trade size that is pressurized to a nominal 20 lb/sq in. (138 kPa) with sulfur hexafluoride (SF_6) gas. These assemblies are only permitted for use outdoors below grade or in tunnels, and must never be run in contact with a building.

9. Medium-voltage (Type MV) cable is a single or multiconductor cable with solid dielectric insulated conductors rated 2001 V or higher. Type MV cables are permitted to be used on power systems up to 35,000 V in wet or dry locations, in raceways, in cable trays, as permitted in Part II of NEC Article 396 covering messenger supported wiring, or directly buried when installed in accordance with Sec. 300.50 of the NEC. Type MV cables are not permitted in locations exposed to direct sunlight or in cable trays unless identified for these exposures. Type MV cables are permitted in exposed runs where suitable for the use and purpose, and without that qualification where accessible to qualified persons only. Type MV cable with an overall metallic sheath or armor is available with a dual “MV or MC” rating, and as such can be used where Type MC cable would be permitted.

10. Type MC metal-clad cable is a factory assembly of one or more conductors, each individually insulated and enclosed in a metallic sheath of interlocking tape or in a smooth or corrugated tube. The metallic covering may be a smooth metallic sheath, a welded and

corrugated metallic sheath, or interlocking metal-tape armor. This cable is widely used for concealed and exposed wiring when flexibility and ease of installation are important factors. Type MC cable is not permitted to be used when exposed to destructive corrosive conditions, such as direct burial in earth or in concrete or when exposed to cinder fills, strong chlorides, caustic alkalis, or vapors of chlorine or of hydrochloric acids, except when the metallic sheath is suitable for the conditions or is protected by material suitable for the conditions.

11. Mineral-insulated metal-sheathed cable (Type MI) consists of one or more electrical conductors insulated and separated by highly compressed refractory mineral insulation and protected from injury by enclosure in a liquidtight and gastight copper or nickel-clad copper sheath. The wires, insulation, and protective sheathing are manufactured as a unit. The method of installation is similar to that of metal-clad cable. Special approved fittings are used for terminating and connecting the cable to boxes and other equipment. At all points of termination of the cable an approved moisture seal must be provided.

12. Nonmetallic-sheathed cable (Types NM, NMC, and NMS) is made in three types, Types NM, NMC, and NMS. Type NM consists of two or more rubber- or thermoplastic-insulated wires bound together and protected by a plastic jacket. Type NMC cables are protected by an outer flame-retardant, moisture-resistant, fungus-resistant, and corrosion-resistant sheath which contains no cotton or paper. Type NMS cable is a factory assembly of insulated power, communications, and signaling conductors enclosed within a common sheath of moisture-resistant, flame-retardant, nonmetallic material. Nonmetallic cable may be run exposed on walls and ceilings, or concealed in the hollow spaces between partitions or between floors and ceilings. The cable is fastened directly to the surface of the walls, ceilings, or structural members with approved supports. Provision for outlets and switches is made by running the cable into outlet boxes. In most cases such cables contain an equipment-grounding conductor.

13. Power and control tray cable (Type TC) is an assembly of two or more insulated conductors, with or without associated bare or overed grounding conductors, under a nonmetallic jacket. It is not permitted to be made with a metallic cable armor either under or over the nonmetallic jacket; however, metal shielding is permitted, and where employed, the minimum bending radius of the cable must not be less than 12 times the cable diameter. Otherwise, the minimum allowable bend radius is based on the cable diameter, with a four times the diameter allowed for cables 1 in. (25 mm) or thinner, five times for cables up to 2 in. (50 mm), and six times for larger cables. In addition to cable tray usage, Type TC cable is permitted to run within raceways and on messenger wires, but for outdoor applications in direct sun it must be identified for that use. It may be directly buried, but also only if so identified.

Type TC cable is available with a more robust configuration that will meet the crush and impact tests that apply to metal-clad cable, Type MC. This form is identified as Type TC-ER. For industrial occupancies with qualified maintenance and supervision, Type TC-ER is permitted to exit a cable tray and run to utilization equipment or devices, provided also that it has continuous mechanical support, such as strut, angles, or channels. In addition, Type TC-ER is permitted to run unsupported between cable tray transitions, or from cable trays to utilization equipment or devices as long as the unsupported distance does not exceed 6 ft (1.8 m). Where the cable exits the tray, mechanical support must be provided so the required bend radius is maintained.

14. Service-entrance cable (Types SE and USE) (see Div. 2) normally is used for the conduit from the point of attachment of the service conductors on the outside of the building to the service switch, load center, or meter cabinet just inside the building. It may, however, also be employed for the interior wiring on the load side of the service switch. It is not commonly used for general interior wiring but is used for certain special portions of the wiring such as to supply large appliances like an electric range, as a feeder to a distribution panel elsewhere in the building, or as a service cable to other buildings. For unrestricted use all the conductors must be rubber- or thermoplastic-insulated. If an uninsulated neutral is used, the cable must have a final nonmetallic outer covering, the voltage to ground must not exceed 150 V, and it may be used to supply other buildings. The cable is fastened to the surface with straps spaced not over 1.4 m (4 ft 6 in.) apart.

15. Underground-feeder and branch-circuit cable (Type UF) resembles Type USE service-entrance cable in general appearance. The insulation employed may consist of a special synthetic plastic compound. When single-conductor cables are used, all conductors of the circuit must be installed in the same trench or raceway. For multiconductor cable installations all conductors of the circuit together with the protective covering of the cable are installed as a unit, just as in metal-clad or nonmetallic-sheath-cable installations. Provision for outlets is made by running the cable into suitable outlet boxes. Underground-feeder and branch-circuit cable wiring provides a convenient approved method for interior wiring in wet or corrosive locations. It may be installed underground in raceways or be buried directly in the earth. Multiconductor cables usually contain an equipment-grounding conductor.

16. Intermediate metal conduit (Type IMC) is the same as rigid metal conduit (following) except that, although threaded, it has a thinner wall. The alloy is such that it has essentially the same strength and it is permitted for the same uses as rigid metal conduit. The only real difference is that it is only made up to metric designator 103 (trade size 4) and no smaller than metric designator 16 (trade size $\frac{1}{2}$).

17. In the rigid-metal-conduit (Type RMC) method of installing interior wiring the wires are supported and protected from mechanical injury by being installed in ferrous or nonferrous types of rigid metal conduits. Ferrous types are of wrought iron or steel with coatings such as black enamel, electrogalvanizing, hot-dip galvanizing, or similar material. Nonferrous types include aluminum or brass (silicon bronze) conduits. Various types of ferrous and nonferrous metal conduits are available with outer plastic coatings to provide optimum protection from corrosion.

Rigid or intermediate metal conduit may be run exposed, supported directly on walls, ceilings, or roof structures or on suitable hanger assemblies. It may also be concealed in partitions, ceilings, or floors. Provision for connection to the circuit at outlet and switch points is made by the insertion of sheet-steel, cast-metal boxes (steel or aluminum), or special conduit fittings in the conduit run. The special conduit fittings, LB, T, LL, LR, X, etc., are called by various trade names, such as Condulets or Unilets and defined as conduit bodies by the NEC. Although rigid metal conduits are usually employed with threaded fittings and connections, many threadless fittings are available for use without threading the conduit.

Conduit, fittings, and boxes are installed complete without wires. Then the wires are pulled into the conduit from fitting to fitting, box to box, or fitting to box. In hazardous locations only threaded connections (full five threads, or $4\frac{1}{2}$ threads in the case of threads made by the manufacturer on listed equipment) are permitted.

18. The flexible-metal-conduit method (Type FMC) of installing wires is used to a limited degree in frame buildings, or similar applications in which rigid raceways would be difficult to install and a pull-in, pullout conduit system is desirable. (Flexible metal conduit is often referred to as Greenfield.) It is available in metric designators 16 through 103 (trade sizes $\frac{1}{2}$ through 4), with metric designator 12 ($\frac{3}{8}$ trade size) available under special conditions, and as covered in Sec. 170. The runs of conduit, boxes, and fittings are installed first as a complete system. Then the wires are installed in the same manner as in rigid metal conduit. It is not permitted to be used in wet locations. The NEC states that flexible metal conduit may be used as a grounding means if the total ground return path in flexible conduits is no more than 1.8 m (6 ft) and both conduit and fittings are listed for grounding and the circuit conductors are protected by a 20-A overcurrent device or less. If they are not so listed, each run of flexible metal conduit must contain a bare or insulated grounding conductor, and this grounding conductor must be attached to each box or other equipment supplied by such conduit. The separate grounding conductor is also required if the installation requires flexibility after installations, such as for vibration isolation or for connection to moveable parts such as a swinging sign.

19. Liquidtight flexible metal (Type LFMC) has, in the case of LFMC, an outer liquidtight jacket. It is not intended for general-use wiring. Wiring of this kind is expressly permitted to be used for the connection of motors or portable or stationary equipment when flexibility of connection is required. There is no outright prohibition against other uses. It is available in the same sizes and under the same rules as for flexible metal conduit. When used, it must be provided with suitable terminal connectors approved for the purpose. It cannot be used where subject to physical damage, where subject to temperatures above its rating, or in any hazardous location, except for limited flexibility, and motor connection in Div. 2 areas, Class II dust areas, Class III fiber or flyings areas, and as permitted by Sec. 504.20 for intrinsically safe systems. See Tables 4 and 5 (and 5A) in Chap. 9 of the NEC for maximum sizes of conductors allowed. Where listed and marked for the purpose, it can be used for direct burial applications.

20. Rigid polyvinyl chloride conduit and fittings (Type PVC) are constructed of polyvinyl chloride, a polymeric (plastic) material that is resistant to moisture and chemical atmospheres. These conduits can be used above grade in exposed applications generally, and the very heavy wall Schedule 80 version can be used where exposed in areas of physical damage. Such conduits may also be embedded in concrete in buildings or installed in wet locations such as laundries or dairies. Complete lines of nonmetallic fittings and boxes are available. They may also be buried directly in earth. For underground applications refer to Div. 8.

21. High density polyethylene conduit (Type HDPE) is a tubular raceway of circular cross section. It is available in discrete lengths, and also in continuous lengths on a reel. It is available from metric designator 16 (trade size $\frac{1}{2}$) up to and including metric designator 155 (trade size 6). It must not be used above 50°C, either by reason of a high ambient temperature, or high operating temperatures of the enclosed conductors, or both. Polyethylene is flammable, and for that reason it is generally limited to direct burial applications. If not specifically prohibited, it is permitted above grade if encased in a concrete envelope not less than 2 in. (50 mm) thick. It is not permitted to be exposed, and it must not be used inside buildings. NEC Table 354.24 specifies the minimum bending radius for this

material, which is more restrictive than most tubular raceways. The table begins with a 250 mm (10-in.) radius for metric designator 16 (trade size $\frac{1}{2}$) conduit, and rises to a 1.5 m (5 ft) minimum radius for the trade size 4 product. There is no table entry as of the 2008 NEC for metric designator 129 or 155 (trade size 5 or 6) conduit, so the manufacturer's directions would need to be consulted for these sizes.

22. Nonmetallic underground conduit with conductors (Type NUCC) is the same product as Type HDPE conduit, and it follows the same installation rules, but conductors are preinstalled and shipped with the product by the manufacturer. Note that even though conductors arrive with the product preinstalled, it is still classified as a raceway, and the 360° maximum bends-in-the-run rule continues to apply.

23. Reinforced thermosetting resin conduit (Type RTRC) is the fiberglass entry in the nonmetallic conduit market. At one time it was only permitted for below-grade applications, but advances in chemistry have resulted in materials that meet above-grade fire resistance tests and it is now permitted for use in buildings where concealed in walls, floors, and ceilings, and also where exposed if identified for the application. It is stiffer than PVC and has a much lower coefficient of thermal expansion (about 45 percent of the value for PVC). Although the NEC uses the same support distance table as for PVC conduit, it does allow for longer support intervals if the product is listed for larger distances. It is more difficult to bend in the field, although an extensive range of different bend angle sweeps is available to accommodate field installation issues. It must not be used above 50°C unless listed for a higher temperature.

24. Liquidtight flexible nonmetallic conduit (Type LFNC) is a flexible non-metallic raceway of circular cross section, available in three forms. Type LFNC-A has a smooth, seamless inner core and cover bonded together, with reinforcement between the core and cover layers. Type LFNC-B has a smooth inner surface together with reinforcement within the conduit wall. This is its most usual form. Type LFNC-C has a corrugated inner and outer surface, with no reinforcement in the wall. It is generally limited to 6-ft (1.8 m) lengths unless a longer length is required for the amount of flexibility called for at the point of use. However, the "B" style does not carry this length limitation. It can be used for direct burial and concrete encasement if listed and marked accordingly. It is available in the metric designator 16 through 103 ($\frac{1}{2}$ through 4 trade) sizes, with the metric designator 12 ($\frac{3}{8}$ trade size) available to enclose the leads of motors in some cases, and also in runs not over 1.8 m (6 ft) to luminaires as part of a listed assembly, or to utilization equipment.

25. In the electrical-metallic tubing (Type EMT) method of installing wiring the wires are installed in a thin-walled metallic tube or thin-walled conduit, as it is sometimes called. Electrical metallic tubing is similar to rigid conduit, except that it is constructed of much thinner material. Provisions for connecting outlets and switches to the circuit are made by means of special metallic-tubing fittings or by means of regular rigid-conduit fittings provided with an adapter. After the tubing and fittings have been installed as a complete system, the wires are pulled in from fitting to fitting as in the rigid-conduit method. Connectors and couplings are threadless types such as setscrew, compression, indenter, or tap-on.

26. Flexible metallic tubing (Type FMT) is a flexible metallic raceway intended to be used in protected locations such as suspended ceilings. Flexible metallic tubing in the $\frac{3}{8}$ trade size is restricted to 1.8 m (6 ft) lengths and was developed for use in ducts or plenums through which the excursion of smoke or gases from the raceway needed to be controlled. The wiring method is otherwise available in trade sizes $\frac{1}{2}$ and $\frac{3}{4}$, the maximum permitted.

27. Electrical nonmetallic tubing (Type ENT) is a pliable, corrugated raceway of circular cross section with integral or associated couplings, connectors, and fittings listed for the installation of electric conductors. It is composed of a material that is resistant to moisture and chemical atmospheres and is flame-retardant. It is made of the identical PVC from which Type PVC conduit (Sec. 20) is made. It is sold in metric designators up to 53 (trade sizes up to 2), but in a corrugated wall construction that allows it to be bent by hand without the application of heat. It can be supplied in continuous lengths from a reel. It is even available as a prewired assembly with specified conductor combinations already pulled in place. However, it is not a cable, and it is subject to all the normal restrictions for raceways, including the 360° bend rule. It must be supported every 900 mm (3 ft), and within the same distance of terminations. It cannot be used outdoors or for direct burial; however, it can be used in cases where it runs in concrete, even if the concrete is below grade.

You can use the ENT wiring method either exposed or concealed in low-rise construction. However, in buildings that exceed three floors above grade, it must never be exposed, even in the first three floors. Instead, in other than fully sprinklered buildings, it needs to be behind a thermal barrier that has at least a 15-min finish rating as defined in listings of fire-rated assemblies. In the case of walls, this is fairly easy to arrange, since most $\frac{1}{2}$ -in drywall used in commercial construction carries this rating. The same holds true above a drywall ceiling. However, if there is a suspended ceiling (common in commercial occupancies), check with the building inspector. The support grid and the ceiling panels need to be identified as a combination for this duty. For example, having 15-min panels would do no good if the T-bars dumped those panels onto the floor after 11 min of fire exposure.

The first floor is defined as the one with at least half its exterior wall area at or above grade level; one additional floor level at the base is allowed for vehicle parking or storage, provided it is not designed for human habitation. Beginning with the 2002 NEC, ENT can also be used in high-rise buildings (those over three floors above grade) without the use of a thermal barrier if the entire building has a complete fire sprinkler system in full compliance with *NFPA 13, Standard for the Installation of Sprinkler Systems*. The sprinkler system must cover all floors, not just the area where the use of ENT is being considered.

28. Auxiliary gutters differ from wireways only by the way they are applied in the field; they are usually listed for both purposes as they leave a manufacturer. They are available in both sheet metal and nonmetallic forms. They have hinged or removeable covers that allow for conductors to be laid in place after the system is complete. Their function is to supplement wiring spaces at meter centers, distribution centers, switchboards, and similar locations in a wiring system. They are not wireways, which are unlimited in length and intended as a circuit wiring method that connects a line and a load. An auxiliary gutter with a rectangular opening cut to match a similar opening cut in a panelboard, and used to contribute to the wire bending space in the panelboard would be an excellent example. This concept of why the auxiliary gutter article has current carrying limitations for busbars placed in the enclosure, but the wireway article does not address the topic. If a conductor needs to be pulled from the gutter through a nipple to a panel or switchboard, the use may be crossing over into the wireway article. That said, the basic field installation

rules for conductor fill, derating thresholds, use as pull boxes, and distinctions between metallic and nonmetallic versions are similar. Refer to wireway topics in this division for more information.

29. Busway systems of wiring consist of bare or insulated busbars insulated from each other and supported and protected by a sheet-metal housing. The housing and busbars are assembled as a unit in 3.0-m (10-ft) or longer sections. The system is installed by supporting the housing from the ceiling, walls, or roof structure. Busway systems are extensively used for the feeder and main circuits in industrial plants. They are available in three general types: without provision for outlets, with provision for fixed outlets, and with provision for continuously moveable outlets for portable tools and electric-welding work. With the type which has provision for fixed outlets, openings are provided every few inches for branch taps. The connection of a tap to the busbars is accomplished through the insertion of a special power attachment plug in these openings. For the wiring of the branch circuit from the power plug to the apparatus to be supplied with power, flexible conduit, rigid conduit, or metal-clad cable may be employed. This method of wiring provides a very flexible system which meets in an economical manner the requirements of plants in which production conditions necessitate the frequent shifting or replacement of machinery.

30. A cablebus system is an approved assembly of insulated conductors mounted in spaced relationship in a ventilated metal protective supporting structure, including fittings and conductor terminations. Cablebus may be used at any voltage up to 35 kV or current for which the spaced conductors are rated. It is ordinarily assembled at the point of installation from components specified by the manufacturer. First, the supporting structure is installed in the same manner as in a cable-tray support system. Next, the insulated conductors, not less than 1/0 with insulation ratings at 75°C or higher, are inserted. After this, insulating supports are installed so that the conductors are properly separated and supported at intervals of not less than 900 mm (3 ft) for horizontal runs and 450 mm (1 1/2 ft) for vertical runs. Conductor ampacity is based on the values for open conductors.

31. In cellular-concrete-floor-raceway wiring, the floor is constructed of precast reinforced-concrete members. These precast members are provided with hollow voids which form smooth, round cells. The cells form raceways for the wires. Connections to the cells from a distribution center can be made by metal header ducts run horizontally across the precast slabs and embedded in the concrete fill over the slabs. Connection from these headers to the cells is made through handhole metal junction boxes. An outlet can be located at any point along a cell. An opening into the cell at the desired point is formed by drilling a hole through the concrete floor slab. The hole is then fitted with the proper outlet fitting, and the wires fished from a handhole junction box to the outlet.

32. In cellular-metal-floor-raceway wiring, the floor is constructed of special metal structural members containing hollow spaces or cells which form raceways for the wires. Provision for pulling in and splicing wires is made by locating special junction boxes in the floor between sections of the floor members. Outlet openings and fittings may be originally provided at regular intervals along the raceway formed by the cells, or outlets may be provided at any time after completion of the building construction simply by cutting a hole in the floor and cell wall and inserting a special floor-outlet fitting. After the

complete floor structure has been erected and finished over, the wires are pulled through the raceway formed by the floor cell structure and the junction boxes.

33. In the metal wireway method of wiring, the wires are supported and protected in a sheetmetal or nonmetallic trough. The trough is installed exposed, being mounted on the ceiling or walls or supported from the roof structure. One side of the trough is fitted with a sheet-metal cover so that access can be made to the interior sections of the trough throughout its length. After the wireway has been installed as a complete system, the wires are laid in the trough and the cover is installed. Mains and feeders are run in the wireways with taps for branches taken off at the most convenient point through rigid or flexible metal conduit, connected to the wireway through knockouts provided on three sides of the trough. This system provides a flexible distribution system.

34. Nonmetallic wireways are the nonmetallic version of metal wireways. There are some important differences, however. They must be securely supported at not greater than 900-mm (3-ft) intervals [1.2 m (4 ft) for vertical runs], which is far more frequent than the 1.5 m (5 ft) and 4.5 m (15 ft) distances allowed in sheet metal version. In addition, the derating penalties for mutual conductor heating apply to any current-carrying conductor fill above three. This is far more severe than for sheet metal wireways (with 30 or fewer, no penalty), but is justified because the metallic version is a far better heat sink. Refer to Sec. 351 for more information.

35. Multioutlet assemblies are a special form of surface raceway with built-in single receptacle outlets every few inches. The assembly is supported on the surface of walls or in or on top of baseboards. It is used for wiring in dwellings and commercial buildings to provide very convenient and adequate convenience outlets. The assembly is supplied with power through a cable or conduit run concealed in the walls and brought into the back or end of the assembly.

36. A nonmetallic extension is an assembly of two insulated conductors within a nonmetallic jacket or an extruded thermoplastic covering. The assembly is mounted directly on the surface of walls or ceilings. Nonmetallic extensions are permitted only if (1) the extension is from an existing outlet on a 15- or 20-A branch circuit and (2) the extension is run exposed and in a dry location. Nonmetallic extensions are limited to residential or office buildings that do not exceed three stories above grade. This category also includes *concealable nonmetallic extensions*, which are comprised of two, three, or four insulated circuit conductors that mount on wall and ceiling surfaces in a flat configuration that is capable of concealment behind paint, joint compound, wallpaper, etc. In this form, if identified for the purpose, concealable extensions are permitted in buildings of more than three stories.

37. Strut-type channel raceways use steel, stainless steel, or aluminum formed similar to construction strut, but with generally solid surfaces and listed as an electrical raceway. It can be mounted on a building surface or suspended, and must be fastened at least every 3.0 m (10 ft) and within 900 mm (3 ft) of terminations. The strut depth varies from $1\frac{3}{16}$ to 3 in. (20.6 to 76 mm) with the allowable wire fill based on either 25 percent or

40 percent of the internal cross-sectional area, with the lesser fill mandated if the joiners between raceway sections are mounted internally. However, if the wire fill does not exceed 20 percent and the current-carrying conductor count does not exceed 30, then there is no ampacity derating for mutual conductor heating.

38. Surface metal raceways enclose wires that are inserted into a sheet-metal enclosure of various configurations. The raceway is installed exposed on interior building surfaces. The metal molding is made with a flattened-oval or rectangular cross section. Numerous fittings, adapters, and boxes, specially designed for this system, are readily available from major manufacturers of this wiring system. In some configurations the cover is separate from the base, and in others the cover and base are permanently joined and the wires are pulled in similar to tubular raceways. If the raceway exceeds 2500 mm^2 (4 in^2) in cross section, the current-carrying conductor count does not exceed 30, and the wire fill does not exceed 20 percent, then mutual conductor heating derating penalties for wire fill are excused. Where different systems run in opposite halves of a divided raceway in order to accomplish the system segregation required by the NEC, such as communications circuits and power circuits, the separate compartments must be identified by imprinting, stamping, or color coding.

39. Surface nonmetallic raceways are the nonmetallic versions of surface metal raceways and have similar requirements. As in the case of other nonmetallic equivalents, these raceways are not effective heat sinks and the allowances for conductor fill without ampacity derating penalties do not apply to these raceways.

40. In the underfloor-raceway method of wiring the wires are installed in a sheet-metal or fiber casing which is embedded in the concrete or cement fill of the floor. Generally, the ducts or raceways are laid out in the floor to form a network. Provision is made at the intersections of the ducts for the pulling in and splicing of wires by means of special floor junction boxes. Sheet-metal-type raceways are provided with outlet openings spaced at regular intervals along the raceway. These outlet openings are either plugged or equipped with special floor-outlet fittings. With the fiber-duct type of raceway the raceway is first installed in the floor without any outlet openings. After the floor has been finished, outlets may be provided at any desired point along the duct runs simply by cutting a hole in the floor and duct and inserting a special floor-outlet fitting. In the underfloor-raceway systems the wires are pulled through the ducts in the same manner as for rigid-conduit work.

41. Cable tray is a unit or an assembly of units or sections and associated fittings made of metal or other noncombustible materials forming a continuous rigid structure used to support cables. The support system includes ladders, troughs, channels, and similar support systems. Cable tray is not a wiring method and may be used only as the mechanical support for approved raceways or multiconductor cable wiring methods or specially approved multiconductor cables designed for use in cable trays; or 1/0 AWG or larger single conductors in industrial establishments where conditions of maintenance and supervision assure that only qualified persons will service the cable-tray system. First, the cable tray is installed, and then the cables or raceways are installed and secured to the cable tray. This system has particular merit in industrial applications or similar uses for which many power, control, or signal cables are required and flexibility is a major consideration.

42. Concealed knob-and-tube wiring was one of the earliest methods of installing wiring. The wires were mounted on knobs and run through tubes where they pierced structural members of the building. They were then concealed by the wall and ceiling surface. This method is still allowed by the NEC but is not used very often because of the large amount of labor required to install the wiring. In addition, the wiring seldom includes an equipment grounding conductor, which is problematic in terms of meeting installation requirements for most metallic equipment.

43. Messenger-supported wiring encompasses the use of a messenger wire to support other wiring methods, or even individual conductors in some cases. The messenger must be supported at dead ends and at intermediate locations to assure that there will be no tension on the conductors, and that they will not come in contact with the messenger supports, or any structural members, walls, or pipes. The messenger supported wiring can be a factory assembled grouping, either as aerial cable or as a bare conductor twisted with ungrounded conductors such as duplex, triplex, or quadruplex makeups. The conductors can also run through rings or saddles, or they can be attached with a field lashing material. Acceptable wiring methods for messenger support include Types MC (Sec. 10), MI (Sec. 11), TC (both power and power limited cables, Sec. 13), UF (Sec. 15), multiconductor Type SE (Sec. 14) and other factory-assembled multiconductor cables identified for the application. In industrial occupancies with qualified maintenance and supervision, there are additional allowances covering ordinary building wires. If the messenger runs outdoors, such wires must be listed for wet locations and sunlight exposure as applicable. Type MV cable is also permitted assuming the exposed use is permitted by Article 300 (see Sec. 9).

44. In the open-wiring method on insulators of installing interior wiring the wires are run either concealed or exposed on the ceiling, roof structure, or walls. They are supported on porcelain insulators of either the knob (Figs. 4.139, 4.140, and 4.141) or the cleat type (Figs. 4.143 and 4.144) so as to provide the necessary clearance between the wires and the surface being wired over.

OPEN WIRING ON INSULATORS

45. Open wiring on insulators is one of the cheapest methods of installing wiring. It finds application in factories and mills for the installation of feeder circuits in places where appearance is of little consequence. The wires may contain rubber or thermoplastic insulation. Smaller wires must be supported at least every 1.4 m (4½ ft). Conductors 8 AWG and larger may be run across open spaces and supported at distances not greater than 4.5 m (15 ft) if approved noncombustible, nonabsorptive insulating separators providing not less than 65 mm (2½-in.) separation between conductors are installed at intervals of not over 1.4 m (4½ ft). For mill construction in locations where the conductors are unlikely to be disturbed, conductors 8 AWG and larger can be run between cross members on insulators such that the conductors are at least 150 mm (6 in.) apart. Industrial occupancies with a qualified maintenance force may use 250 kcmil or larger conductors supported at 9 m (30 ft) intervals.

46. Knobs and methods of supporting conductors on them. Knobs for supporting conductors in interior work are of porcelain. Split knobs or cleats may be used for supporting conductors smaller than 8 AWG. Some methods of securing wires to knobs are shown in Fig. 9.1. The line tie of I is made by winding the conductor once around the knob,

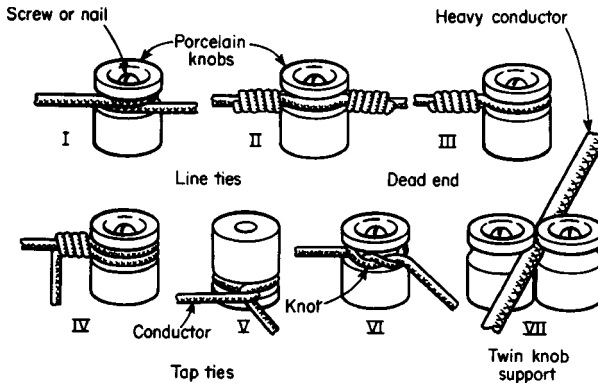


FIGURE 9.1 Methods of attaching conductors to knobs.

so both ends of the wire must be under tension to hold the wire in position. A tie wire is used at II; in making up the tie wire the slack can be drawn out of the conductor. A dead end, or termination, is shown at III. If it is necessary to change the direction of a run to get the conductor to an outlet or for any other reason, tap ties IV, V, and VI are used. It is not practicable to tie large conductors, so they may be supported as at VII.

For a discussion of types of knobs see Div. 4.

Nails used to support knobs must be not smaller than tenpenny and must be provided with cushion washers. When screws are used, they must penetrate the supporting wood to a depth equal to at least one-half the height of the knob or to at least the thickness of the cleat used.

47. The wires must have an insulation equal to that of the conductors they confine and may be used in connection with solid knobs for the support of wires of size 8 AWG or larger.

48. The method of dead-ending on a cleat

at the end of a run is illustrated in Fig. 9.2. After the wire has been passed through the groove, the free end is given several short turns around the line. When a long run is dead-ended, it is often advisable to fasten two sets of cleats in such a way that one bears against the other so that both will assume the strain as shown at II. For types and dimensions of cleats see Div. 4.

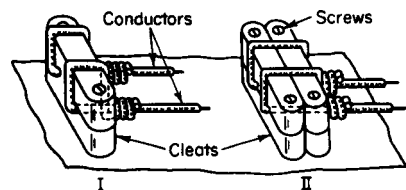


FIGURE 9.2 Dead-ending on cleats.

49. Methods of terminating heavy conductors. At the ends of all important open-wire runs of wires larger than, say, 8 AWG, strain insulators engaging in some wire-tightening device should be used. Figure 9.3 illustrates some methods. Either tightening bolts or turnbuckles can be used. The insulator may be of the type extensively used in trolley-line construction as in I, II, and III, or it may be a heavy knob (IV) held to the tightening device with stout wire. When a run changes direction, a cable clamp can often be used with economy, particularly with large conductors. If a cable clamp is used, it is

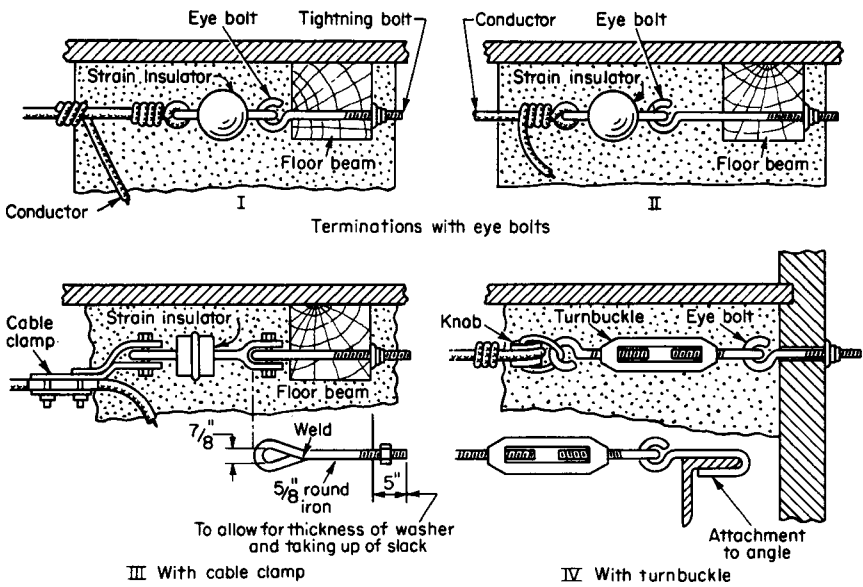


FIGURE 9.3 Methods of terminating conductors.

unnecessary to cut the conductor to change its direction, and the need to make up turns about the line wire as in I and II is eliminated.

50. Different approved methods of exposed surface wiring are illustrated in Fig. 9.4. Which method should be used in any particular case is determined largely by the size of the wire involved and other local conditions.

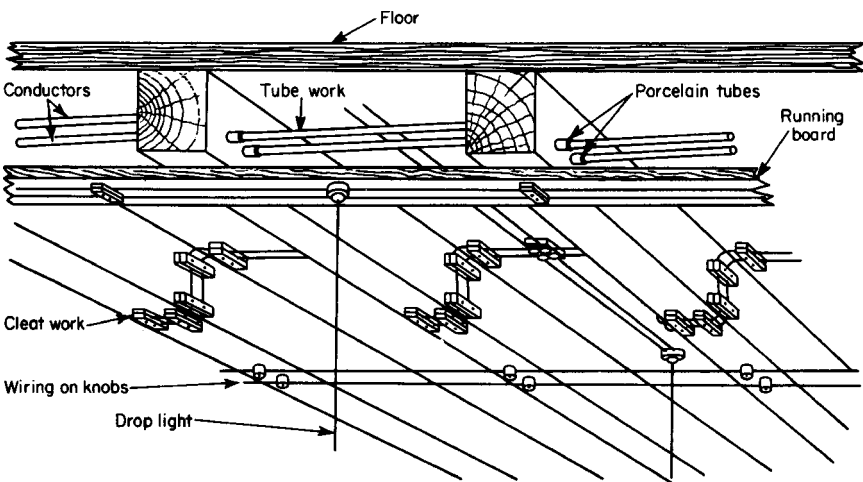


FIGURE 9.4 Openwork wiring in a mill building.

51. Physical protection of exposed surface wiring. Wires must be protected on sidewalls from physical damage and, when crossing timbers where they might be disturbed, must be protected by guard strips or running board and guard strips as shown in Figs. 9.5 and 9.6. The guard strips must be at least 25 mm (1 in.) nominal thick and at least as high as the insulators. If a running board is used, it must be at least 13 mm ($\frac{1}{2}$ in.) thick and must extend at least 25 mm (1 in.) outside the conductors but not more than 50 mm (2 in.). The wires should also be protected by porcelain tubes when passing over pipes (Fig. 9.7) or any other members. Tie wires may be used in lieu of tape.

Conductors within 2.1 m (7 ft) from the floor shall be considered exposed to physical damage. Suitable protection on sidewalls therefore should extend not less than 2.1 m (7 ft) from the floor (Fig. 9.8). This protection may consist of substantial boxing, providing an air space of 25 mm (1 in.) around the conductors, closed at the top (the wire passing through porcelain-bushed holes), or of a conduit with fittings on each providing individual bushed holes for each wire (Fig. 9.8, III).

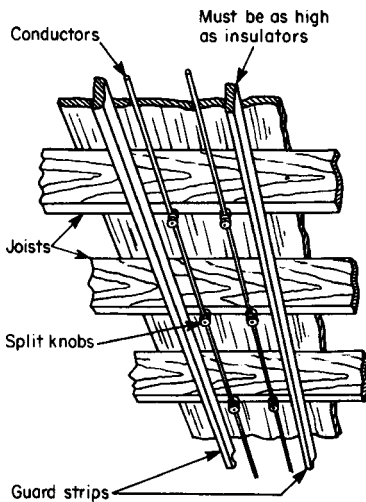


FIGURE 9.5 Guard strips to protect open wiring crossing ceiling joists.

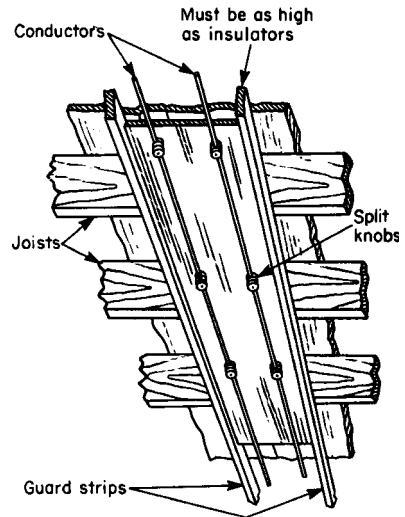


FIGURE 9.6 Running board with guard strips to protect open wiring crossing ceiling joists.

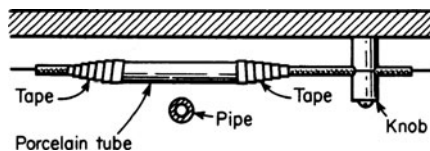


FIGURE 9.7 Protection of conductor passing over pipe.

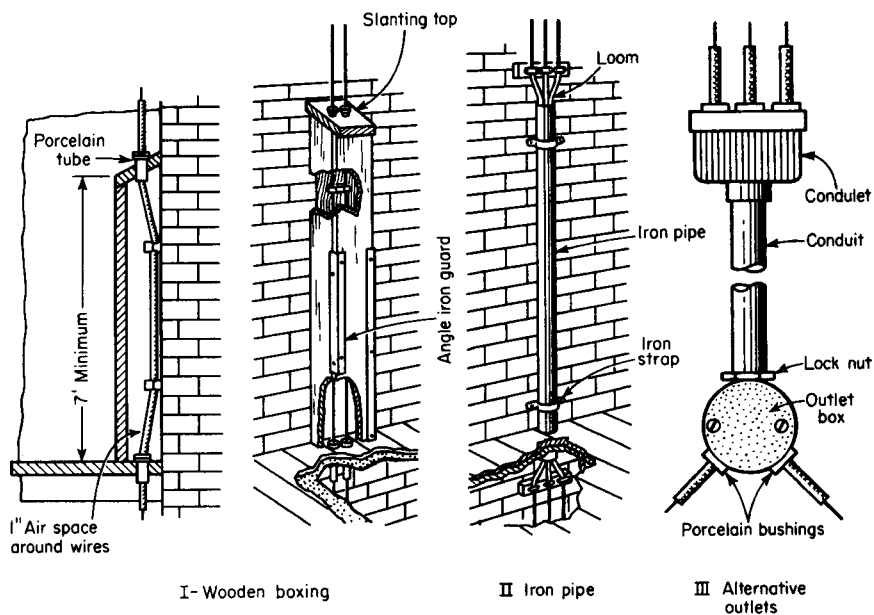


FIGURE 9.8 Protection of conductors on sidewalls.

52. Methods of carrying exposed wiring around and through beams are illustrated in Fig. 9.4, which shows tube-and-cleat arrangements. In Fig. 9.9 are shown methods that can be used when wires are supported on knobs.

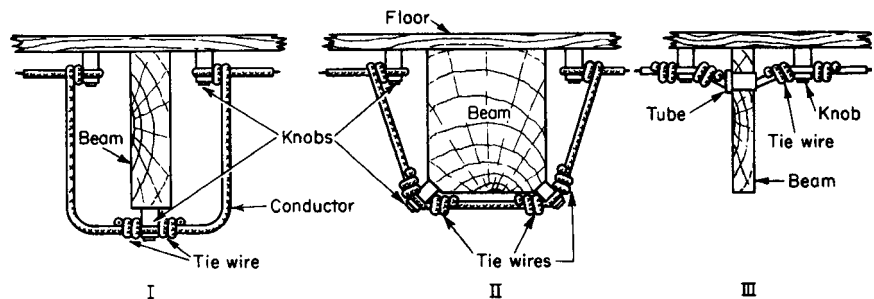


FIGURE 9.9 Openwork wiring with knobs.

53. In steel-mill buildings heavy conductors may be carried on the lower chords of the roof trusses (Fig. 9.10). This is a good location because the conductors are out of the way and not apt to be disturbed. At each truss the conductors can be supported by one of the methods illustrated in Fig. 9.11. With the method of Fig. 9.11, I, the conductor merely rests in the insulator, and the entire longitudinal strain is taken by strain insulators attached to the tightening bolts or turnbuckles at the ends of the run. This method has the

disadvantage that if the conductor breaks at any point or is burnt in two, it will fall to the floor. The tie-wire method of II is seldom used, though it is satisfactory if cleats are not obtainable. (Split knobs or cleats must be used for conductors smaller than 8 AWG.) The cleat and through-bolt method of III is probably the best, all things considered. After the conductor has been drawn taut with the tightening bolts at the end of the run, the cleat bolts are tightened and each cleat then assumes its share of the stress. Tie wires, which are unreliable and may cut into the insulation of the conductor, are unnecessary. Leather washers should be used between the insulator and the bolt to prevent breakage.

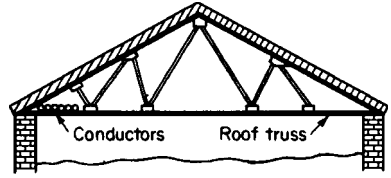


FIGURE 9.10 Conductors carried on roof truss.

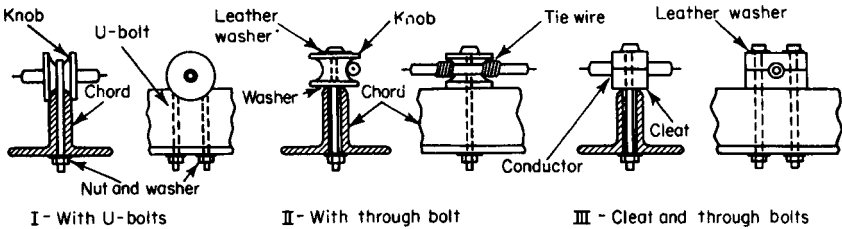


FIGURE 9.11 Attaching knobs to truss chords.

54. For supporting conductors on steel angles the Universal Insulator Support (Figs. 9.12 and 9.13 and Table 42) is a convenient fitting. It is of malleable iron and can be clamped on the flanges of steel beams, angles, channels, and Z bars and on round, square, and flat bars. It can also be attached to gas and water pipes and to the edges plates and tanks. Two insulators can be fastened to each support when necessary. Cup-pointed, case-hardened setscrews are used. Leather washers should be used under the bolts that hold the insulators.

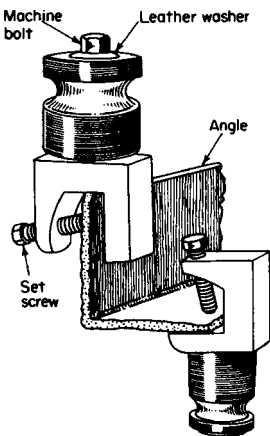


FIGURE 9.12 Universal Insulator Supports on an angle.

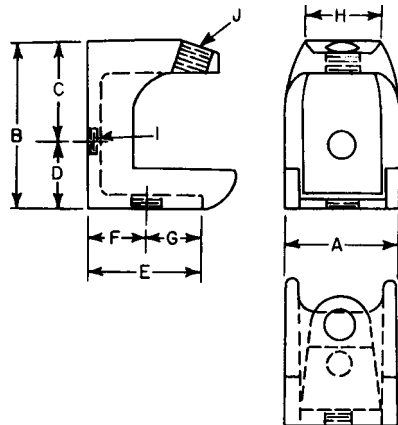


FIGURE 9.13 The Universal Insulator Support.

55. Dimensions of Universal Insulator Supports
(Steel City Division, Midland-Ross Corp., Pittsburgh)

A, Size, in	For insulators, Nos.	B, in	C, in	D, in	E, in	F, in	G, in	H, in	I, diam of tapped hole	J, diam of setscrew furnished
1	5, 5 1/2	1 1/2	7/8	5/8	1 1/16	9/16	1/2	3/4	1/4	5/16
1 1/2	10, 4, 4 1/2	1 3/4	1 3/4	5/8	1 1/2	9/16	3/4	3/4	5/16	7/16
2	1, 3, 3 W.G., 3 1/2, 24	2	1	1	2	1	1	3/4	3/8	1/2
2 1/2	25, 29, 34	2 1/2	1 1/4	1 1/4	2 1/2	1 1/4	1 1/4	3/4	1/2	5/8

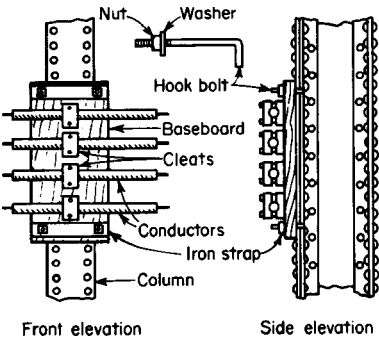


FIGURE 9.14 Attachment of wiring board to column.

insulating the conductors are held to the frame with wood screws or, preferably, with machine or stove bolts. A commercial wire rack with a cast-iron base that can be bolted to any surface is shown in Fig. 9.17. Generally a steel-frame rack is preferable to a wooden one. The rack of steel angles of Fig. 9.15 was designed for installation in the top of a pipe tunnel. The insulators are held to the cross angles with bolts with a leather washer under the head of each. The structural-steel rack of Fig. 9.16, III, is arranged for supporting from a ceiling. Angle crossarms can be used as at I, or the crossarms can each be formed of two iron straps as at I. With the two-strap method, drilling for the cleat bolts is unnecessary, and the cleats can be shifted along the arm into any desired position and there clamped fast.

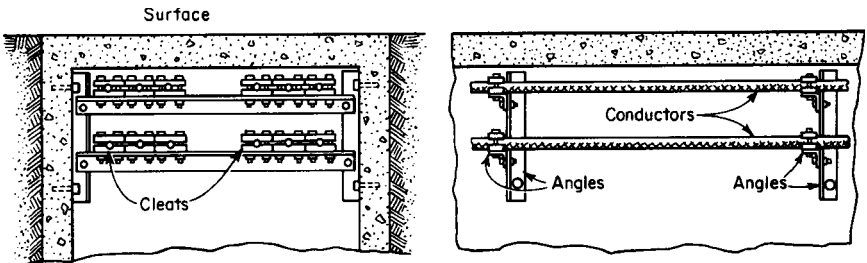


FIGURE 9.15 Angle-iron rack for conductors.

56. For supporting conductors on steel columns a wooden baseboard for the cleats clamped to the column with hook bolts (Fig. 9.14) is a good arrangement. The board must be cut out in back for the rivet heads in the column. Strap-iron cleats through which the hook bolts pass prevent warping and splitting.

57. Wire racks are used to support conductors, principally heavy ones, when there are many conductors in the run. The conductors should have flameproof or slow-burning covering. A wire rack can be made of wood fashioned into a framework somewhat along the lines of the steel ones of Figs. 9.15 and 9.16. The cleats

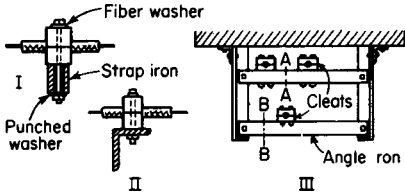


FIGURE 9.16 Rack composed of angles and strap iron: I, section A-A; II, section B-B. Wrought-iron yokes are bent to fit the grooves as shown, and $\frac{1}{2}$ -in (12.7 mm) bolts clamp them in position. Wooden blocks or sections of strap or angle iron can be bolted to the yokes for supporting the wire cleats.

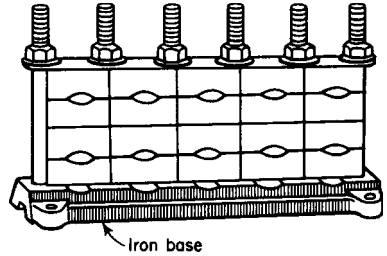


FIGURE 9.17 A commercial insulator rack.

Strain insulators engaging in turnbuckles or tightening bolts should be used at the end of each straight run to assume the strain and to provide for tightening, or else the arms and cleats at the run ends should be reinforced to assume the stress that will come on them.

58. A method of supporting open wiring in concrete buildings is shown in Fig. 9.18. A round groove of $\frac{3}{8}$ -in (9.525-mm) radius is cast in the faces of the beams, by having $\frac{3}{4}$ -in (19.05 mm) half-round molding nailed in the forms.

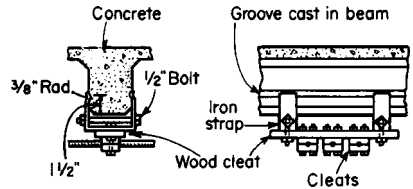


FIGURE 9.18 Supports for open wiring on a concrete beam.

59. When conductors pass through floors, walls, or partitions, they must always be protected. Openwork wires can be protected with porcelain tubes (Fig. 9.19). The tube or bushing must be long enough to bush the entire length of the hole in one continuous piece, or else the hole must first be bushed by a continuous waterproof sleeve of noninductive material and the conductor so installed that it will be absolutely out of contact with the sleeve.

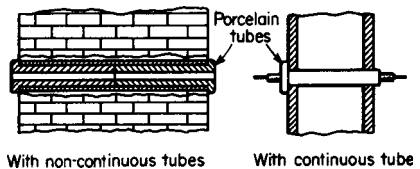


FIGURE 9.19 Protection through walls and partitions.

60. A tube for protecting a wire where it crosses another wire should always be so placed that the tube will not force the unprotected wire against the surface supporting the conductors.

61. Flexible nonmetallic tubing, or "loom" (Fig. 9.20) is used mostly in connection with open wiring and concealed knob-and-tube wiring. When metal outlet boxes or switch boxes are used, flexible tubing is required from the last porcelain support, extending into the outlet box at least 6 mm ($\frac{1}{4}$ in.), and held in place by an approved fitting such as a universal bushing or a clamp.

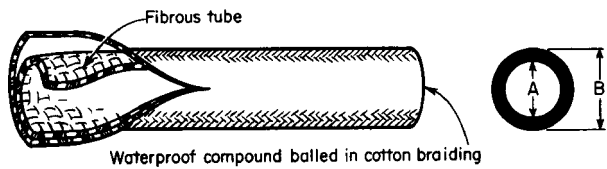


FIGURE 9.20 Flexible tubing.

Another application for flexible tubing is in completed buildings where the wires are fished in between the walls and ceilings. Flexible nonmetallic tubing is used as a covering on such wires separately encased. In concealed knob-and-tube work it is frequently impracticable to place wires 75 mm (3 in.) apart and 25 mm (1 in.) from the surface wired over as required by the National Electrical Code, and in such cases the wires must be separately encased in flexible tubing. In open wiring when the amount of separation required by the Code from the surface wired over cannot be maintained, the wires may also be encased in flexible tubing.

The following is a list of places where flexible nonmetallic tubing is applicable: in open-work where wires are exposed nearer each other than 75 mm (3 in.); on wires crossing other wires; on wires crossing gas pipes, water pipes, iron beams, woodwork, brick, or stone; and at distributing centers or when space is limited and the 75 mm (3 in.) separation required cannot be maintained. Each wire must be separately encased in a continuous length of flexible nonmetallic tubing.

Only continuous (unspliced) lengths of flexible nonmetallic tubing can be used for wire protection at outlets.

62. Properties of Flexible Tubing or Loom

A, inside diameter, in	B, outside diameter, in		Ft per coil	Largest wire, AWG or cmil	Weight, lb/1000 ft
	In decimals	To nearest, 64 in			
7/32	0.46	15/32	250	No. 14	50
1/4	0.50	1/2	250	No. 14	58
3/8	0.65	21/32	250	No. 12	75
1/2	0.78	25/32	200	No. 8	90
5/8	0.98	63/64	200	No. 4	120
3/4	1.06	1 1/16	150	No. 2	196
1	1.31	1 3/16	100	No. 2/0	250
1 1/4	1.63	1 41/64	100	200,000	400
1 1/2	1.88	1 57/64	Odd lengths	400,000	480
1 3/4	2.25	2 1/4	Odd lengths	600,000	590
2	2.63	2 41/64	Odd lengths	800,000	800
2 1/4	2.81	2 13/16	Odd lengths	1,100,000	810

63. When conductors cross damp pipes, they should be carried over rather than under so that drippings will not strike the wires. Porcelain tubes, securely taped to the conductors, should be placed on the conductors over the point where they cross.

64. Rosettes for open surface wiring are used to connect drop cords for incandescent lamps to the branch circuits. A rosette with protected (concealed) contact lugs is preferable to one with exposed lugs. Figure 9.21 shows one good type. Another good method of supporting drop cords, particularly if there is vibration, is with the ceiling button illustrated in Fig. 9.22.

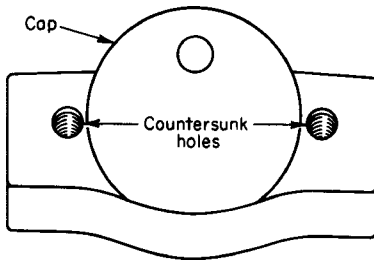


FIGURE 9.21 A cleat rosette.

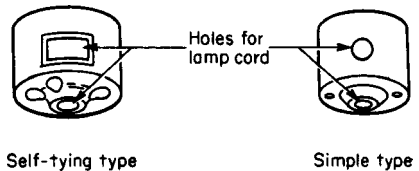


FIGURE 9.22 Ceiling buttons.

65. Switches can be supported in exposed surface wiring as shown in Fig. 9.23. The switch can be mounted on a commercial porcelain switch block.

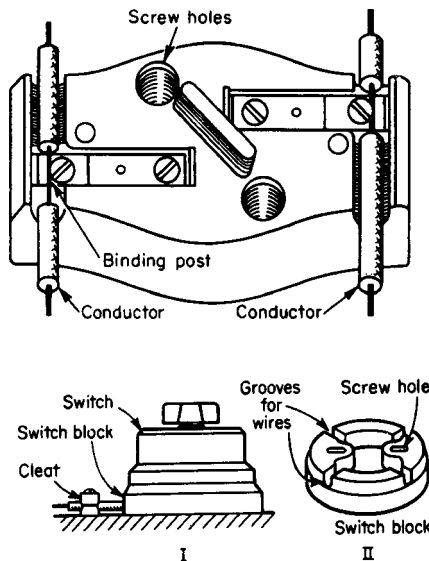


FIGURE 9.23 Support switches in exposed surface wiring.

66. Entering damp or wet locations (National Electrical Code). Conductors entering or leaving damp or wet locations shall have drip loops formed on them and shall then pass upward and inward from the outside of buildings or from the damp or wet location through noncombustible, nonabsorptive tubes.

CONCEALED KNOB-AND-TUBE WIRING

67. Concealed knob-and-tube wiring was used extensively at one time for the wiring of frame buildings when a low-cost installation was essential. It is still allowed by the National Electrical Code, but only for extensions of existing installations (or otherwise by special permission), and it is rarely used because more labor is required than with common cable systems. It has been superseded for low-cost installations by nonmetallic-sheathed cable.

68. Extensions of concealed knob-and-tube wiring are seldom practical today. (Adapted from *Practical Electrical Wiring*, 20th ed., © Park Publishing, 2008, all rights reserved.) Although this handbook extensively covers concealed knob-and-tube wiring because installers often come across it and need a reference source to help understand it, it is no longer routinely installed. The hardware is generally no longer available, and the existing knobs you might salvage from old jobs have internal spacings for old Type R conductor insulation that won't work on today's thinner insulation. Concealed knob-and-tube, as a wiring method, has no equipment grounding conductor carried with it. Over the generations, NEC provisions have changed to the point that it is almost impossible to wire anything legally without grounding it. For example, until the 1984 NEC, what is now 314.4 only required the grounding of metal boxes used with concealed knob-and-tube wiring if in contact with metal lath or metallic surfaces. Now all metal boxes must be grounded without exception. Meanwhile, grounding has been getting more difficult to arrange to remote extensions of concealed knob-and-tube outlets. Until the 1993 NEC you could go to a local bonded water pipe to pick up an equipment grounding connection, and then extend from there with modern wiring methods. Now NEC 250.130(C), which governs this work, requires that the equipment grounding connection be made on the equipment grounding terminal bar of the supply panelboard, or directly to the grounding electrode system or grounding electrode conductor. You are unlikely to be searching for a method of grounding concealed knob-and-tube wiring in a steel-frame building. Rather you will be attempting this in old wood-frame buildings, probably residential. In such occupancies, even if the water supply lateral is metallic, the water piping system ceases to be considered as an electrode beyond 1.5 m (5 ft) from the point of entry. This means fishing into the basement. If you can fish a ground wire down into the basement, you can fish a modern circuit up in the reverse direction and avoid the entire problem.

It is true that some geographical areas have more extensive use of slab-on-grade construction, and here interior water piping is sometimes permitted to qualify as electrodes because the pipes extend to grade for the minimum threshold distance of 10 ft and thereby allow interior connections. But in almost every case, trying to extend knob-and-tube wiring is like trying to erect a modern structure on a rotten foundation.

Add to these problems the fact that beginning with the 1987 NEC this wiring method cannot be used in wall or ceiling cavities that have "loose, filled, or foamed-in-place insulating material that envelops the conductors." This effectively means that such cavities cannot be insulated, because you'd have to open all the walls to install board insulation products, and if you'd do that, you'd never consider trying to save this wiring method.

69. When changing from open wiring or concealed knob-and-tube wiring to conduit, electrical-metallic-tubing, nonmetallic-sheathed-cable, armored-cable, or surface-raceway wiring, a fitting or outlet box having a separately bushed hole for each conductor must be used.

RIGID-METAL-CONDUIT AND INTERMEDIATE-METAL-CONDUIT WIRING

70. Rigid-metal-conduit wiring is allowed for both exposed and concealed work and for use in nearly all classes of buildings. For ordinary conditions, wiring in metal conduit is probably the best, although it is the most expensive. The advantages of metal conduit are that (1) wires can be inserted and removed, (2) it provides a good ground path, (3) it is strong enough mechanically so that nails cannot be driven through it and so that it is not readily deformed by blows or by wheelbarrows being run over it, and (4) it successfully resists the normal action of cement when embedded in the partitions or walls of concrete buildings.

A recent innovation is intermediate metal conduit, which has a thinner wall and is acceptable whenever rigid metal conduit is permitted.

71. When to use rigid-metal-conduit or intermediate-metal-conduit wiring.

In general, conduit wiring should be used whenever the job will stand the cost. Rigid conduit protects the conductors it contains and provides a smooth raceway, permitting ready insertion or removal.

Conduits and fittings exposed to severe corrosive influences shall be of corrosion-resistant material suitable for the conditions. If practicable, the use of dissimilar metals in contact anywhere in the system shall be avoided to eliminate the possibility of galvanic action.

Meat-packing plants, tanneries, hide cellars, casing rooms, glue houses, fertilizer rooms, salt storage, some chemical works, metal refineries, pulp and paper mills, sugar mills, roundhouses, textile bleacheries, plants producing synthetic staples, some stables, and similar locations are judged to be occupancies where severe corrosive conditions are likely to be present.

Cinder Fill. Conduit, unless of corrosion-resistant material suitable for the purpose, shall not be used in or under cinder fill where subject to permanent moisture unless protected on all sides by a layer of noncinder concrete.

Wet Locations. In portions of dairies, laundries, canneries, and other wet locations and in locations where walls are frequently washed, the entire conduit system, including all boxes and fittings used therewith, shall be so installed and equipped as to prevent water from entering the conduit, and the conduit shall be mounted so that there is at least 6 mm ($1/4$ -in) air space between the conduit and the wall or other supporting surface.

All supports, bolts, straps, screws, etc., shall be of corrosion-resistant materials or be protected against corrosion by approved corrosion-resistant materials.

72. Corrosion-resistant rigid conduit is available in three general types: (1) aluminum, (2) red brass, and (3) plastic-coated.

Aluminum rigid conduit is useful in installations where there are present certain chemical fumes or vapors which have little effect upon aluminum but have a severe corrosive effect upon steel. It is widely used because its light weight reduces installation labor costs. Uncoated or unprotected aluminum conduit should not be embedded in concrete or buried in earth, particularly if soluble chlorides are present.

A conduit of red brass has special corrosive-resistance characteristics. Its use is advantageous for installations exposed to the weather, as on bridges, piers, and dry docks and

along the seacoast; in oil refineries and chemical plants; in sewage-disposal works; underground for water-supply works; and in wiring to underwater lighting fixtures for swimming pools.

Plastic-coated rigid conduit consists of standard galvanized-steel conduit over the surface of which seamless coatings of polyvinyl chloride plastic have been extruded. Thus a uniform nonporous protective coating is formed over the entire length of the raceway. All couplings and fittings should be covered with plastic sleeves or carefully wrapped with three thicknesses of standard vinyl electrical insulating tape. This plastic-coated conduit is flame-retardant and highly resistant to the action of oils, grease, acids, alkalies, and moisture; does not oxidize, deteriorate, or shrink when exposed to sunlight and weather; and provides excellent resistance to abrasion, impact, and other mechanical wear. Typical applications are meat-packing plants, malt-liquor industries, paper and allied industries, production plants for industrial organic and inorganic products, soap and related-products industries, tanneries and leather-finishing plants, canneries, food-processing industries, dairies, fertilizer plants, and petroleum industries.

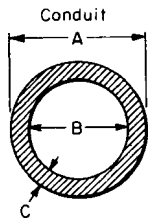


FIGURE 9.24 Section of conduit.

73. Dimensions of corrosion-resistant rigid conduit.

The internal and external diameters for aluminum conduit are the same as those for rigid steel conduit (see Fig. 9.24). The internal diameter of plastic-coated rigid conduit, of course, is the same as that of standard rigid steel conduit. The outside diameter of the plastic-coated variety is slightly greater, as given in Table 75.

74. Intermediate Metal Conduit
(Allied Tube & Conduit Corp.)

A, Outside diameter, in				B, Length of finished conduit without coupling, in.	C, Wall thickness, in.*	Nominal weight per 100, lb†
Trade size, in	Nominal	Minimum (−.005)	Maximum (+.005)			
1/2	0.815	0.810	0.820	119 1/4	0.070	57
3/4	1.029	1.024	1.034	119 1/4	0.075	78
1	1.290	1.285	1.295	119	0.085	112
1 1/4	1.638	1.630	1.645	119	0.085	144
1 1/2	1.883	1.875	1.890	119	0.090	176
2	2.360	2.352	2.367	119	0.095	235
2 1/2	2.857	2.847	2.867	118 1/2	0.130	393
3	3.476	3.466	3.486	118 1/2	0.130	483
3 1/2	3.971	3.961	3.981	118 1/4	0.130	561
4	4.466	4.456	4.476	118 1/4	0.130	625

*The wall thickness is +.015 and −.000 for IMC.

†Because of the specification of tube dimensions, weight specifications are not part of Underwriters Laboratories (UL) Standard 1242 but have been included for comparative purposes. At regular production intervals, UL inspects wall thicknesses of all trade sizes with a micrometer to check consistency with the specified standard tolerance.

75. Plastic-Coated Rigid Conduit

(General Electric Co.)

Size, in	Weight, lb/1000 ft	Ft per bundle	External diameter, in
$\frac{1}{2}$	855	100	0.900
$\frac{3}{4}$	1119	50	1.110
1	1701	50	1.375
$1\frac{1}{4}$	2247	30	1.720
$1\frac{1}{2}$	2688	10	1.960
2	3601	10	2.435
$2\frac{1}{2}$	6132	10	2.935
3	7860	10	3.560
$3\frac{1}{2}$	9433	10	4.060

76. Rigid steel conduit is made in several types, including white (galvanized), black (enameled), green (sheradized), and with an organic (plastic) coating. The white galvanized conduit is the type to be used where exposed to the weather, when embedded in concrete, or when installed in wet locations. The black conduit, which is coated with black enamel, is limited to indoor noncorrosive locations, and is seldom seen today. The green (sheradized) conduit has a special corrosion-resistant coating consisting of zinc applied in a way that alloys it to the underlying steel. It is the hardest of the zinc finishes and accepts paint without primers. Plastic coatings can be applied to the conventional galvanized product, or the sheradized finish for even more resistance to corrosion. Except for special conditions no size smaller than metric designator 16 (trade size $\frac{1}{2}$ in. is allowed. The metric designator 12 ($\frac{3}{8}$ trade size) is allowed to enclose the leads of a motor, as covered in NEC 430.245(B).

77. Standard Rigid Wrought-Iron or Steel Conduit and Couplings

Rigid steel conduit					Couplings			
Trade size, in	A, Approx. OD, in	B, Approx. ID, in	C, Approx. wall thickness, in	Thread per in	Approx wt per 1,000 ft, lb	J, OD, in	K, Length, in	Approx wt per 100 ft, lb
$\frac{1}{2}$	0.840	0.622	0.109	14	820	1.010	$1\frac{9}{16}$	14
$\frac{3}{4}$	1.050	0.824	0.113	14	1,120	1.250	$1\frac{5}{8}$	24
1	1.315	1.049	0.133	$11\frac{1}{2}$	1,600	1.525	2	39
$1\frac{1}{4}$	1.660	1.380	0.140	$11\frac{1}{2}$	2,160	1.869	$2\frac{1}{16}$	47
$1\frac{1}{2}$	1.900	1.610	0.145	$11\frac{1}{2}$	2,680	2.155	$2\frac{1}{16}$	66
2	2.375	2.067	0.154	$11\frac{1}{2}$	3,500	2.730	$2\frac{1}{8}$	105
$2\frac{1}{2}$	2.875	2.469	0.203	8	5,600	3.250	$3\frac{1}{8}$	180
3	3.500	3.068	0.216	8	7,120	4.000	$3\frac{3}{4}$	300
$3\frac{1}{2}$	4.000	3.548	0.226	8	8,520	4.500	$3\frac{3}{8}$	390
4	4.500	4.026	0.237	8	10,300	5.000	$3\frac{1}{2}$	400
5	5.563	5.047	0.258	8	13,910	6.296	$3\frac{3}{4}$	760
6	6.625	6.065	0.280	8	18,500	7.390	4	1075

NOTE All tubes are threaded both ends, and 10 ft long inclusive of the coupling on one end.

78. Data on conduit couplings and elbows are given in Secs. 77, 81, and 86 (see Fig. 9.25). The weight columns are convenient for estimating transportation charges. The internal area is useful in determining the size of conduit for unusual combinations of conductors, as explained in Sec. 94. Dimensions of elbows and couplings are often used in laying out work on the drawing board or in estimating clearances in advance. Table 82 gives the dimensions of standard conduit threads. (See Fig. 9.26.)

Running threads are not allowed on conduit for connection at couplings.

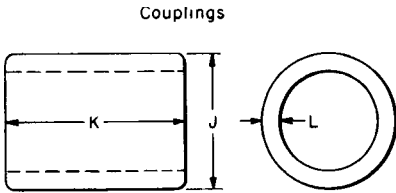


FIGURE 9.25 Conduit couplings.

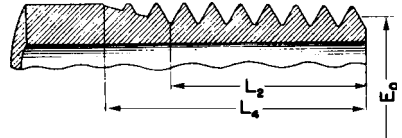


FIGURE 9.26 Conduit threads. The taper of threads shall be $\frac{3}{4}$ in/ft, and the perfect thread shall be tapered for its entire length.

79. Rigid aluminum conduit. The use of rigid aluminum conduit has gained acceptance because of its light weight, excellent grounding conductivity, ease of threading, bending, and installation, and low losses for installed ac circuits. Installations of rigid aluminum conduit require no maintenance, painting, or protective treatment in many applications.

When aluminum conduit is buried in concrete or mortar, a limited chemical reaction on the conduit surface forms a self-stopping coating. This prevents significant corrosion for the life of the structure. However, calcium chloride or similar soluble chlorides sometimes are used to speed concrete setting. In limiting the use of such speeding agents, the American Concrete Institute and most building codes recognize that embedded metals can be damaged by chlorides. As a result, if aluminum conduit is to be buried in concrete, the installer should be absolutely sure that the concrete will contain no chlorides. If there is any doubt, rigid steel conduit should be used, because even though chlorides can damage steel conduit to some degree, this will not lead to cracking or spalling of concrete.

Although aluminum conduit can be buried safely in many soils, precautions are recommended because of unpredictable moisture, stray electric current, and chemical variations in almost every soil. To assure protection when buried directly in earth, aluminum or steel conduit should be coated with bituminous or asphalt paint, wrapped with plastic tape, or encased in a chloride-free concrete envelope.

Being a nonmagnetic metal, aluminum conduit reduces voltage drop in installed copper or aluminum wire up to 20 percent of a corresponding steel-conduit installation when ac circuits are involved.

Tables 80 and 81 list important data on rigid aluminum conduit.

80. Aluminum Rigid Conduit: Nominal 10-Ft Lengths

Trade size	Lb per 100 ft*	No. per bundle	Lb per bundle*	Master shipping package			
				Bundles	pieces	Ft	Lb*
1/2	29.8	10	29.80	20	200	2,000	596
3/4	39.8	10	39.80	20	200	2,000	796
1	58.9	10	58.90	10	100	1,000	589
1 1/4	79.8	5	39.90	10	50	500	399
1 1/2	95.6	5	47.80	10	50	500	478
2	128.8	5	64.40	9	45	450	580
2 1/2	204.7	1	20.47	Loose	30	300	614
3	268.0	1	26.80	Loose	20	200	536
3 1/2	321.3	1	32.13	Loose	20	200	642
4	382.1	1	38.21	Loose	20	200	764
5	521.5	1	52.15	Loose	8	80	417
6	677.5	1	67.75	Loose	6	60	406

*Nominal shipping weights.

81. Aluminum Rigid Conduit Couplings

Trade size	Outside diameter, in.	Length, in.	Nominal weight per 100 pieces, lb	Metric designator
1/2	1 5/64	1.56	6.1	16
3/4	1 21/64	1.62	9.1	21
1	1 9/16	2.00	12.5	27
1 1/4	1 61/64	2.06	18.9	35
1 1/2	2 7/32	2.06	23.3	41
2	2 3/4	2.12	34.6	53
2 1/2	3 9/32	3.12	68.3	63
3	3 15/16	3.25	91.4	78
3 1/2	4 7/16	3.37	108.0	91
4	5	3.50	142.0	103
5	6 7/32	3.75	241.9	129
6	7 5/16	4.00	321.0	155

82. Standard Conduit: Dimensions of Threads

Trade size of conduit	Number of threads per in.	Total length L_4 of threads, in. *	Effective length L_2 of threads, in.	Pitch diameter E_0 at end of conduit, in. †	Metric designator
1/4	18	0.59	0.40	0.477	†
3/4	18	0.60	0.41	0.612	12
1/2	14	0.78	0.53	0.758	16
3/4	14	0.79	0.55	0.968	21
1	11 1/2	0.98	0.68	1.214	27
1 1/4	11 1/2	1.01	0.71	1.557	35
1 1/2	11 1/2	1.03	0.72	1.796	41
2	11 1/2	1.06	0.76	2.269	53
2 1/2	8	1.57	1.14	2.720	63
3	8	1.63	1.20	3.341	78
3 1/2	8	1.68	1.25	3.838	91
4	8	1.73	1.30	4.334	103
4 1/2	8	1.78	1.35	4.831	†
5	8	1.84	1.41	5.391	129
6	8	1.95	1.51	6.446	155

*A minus tolerance of one thread applies to the total length of threads.
†A tolerance of ±0.005 in. applies to the pitch diameter.
†Dimension not currently recognized in the NEC; no metric designator assigned.

83. Bushings are required to protect wires from abrasion where a conduit enters a box or other fitting unless the design of the box or fitting is such as to afford equivalent protection.

Connections of rigid conduit to enclosures can be made by a single locknut (outside) and a single bushing (inside) if the bushing is tightly fitted against the wall of the enclosure. Double locknuts (one inside and one outside) and a bushing always make a better connection than the single-locknut–bushing method. The NEC requires the double-locknut method if the circuit voltage exceeds 250 V to ground or if wholly insulated bushings are utilized.

When ungrounded conductors of No. 4 and larger size enter a raceway in a cabinet, pull box, junction box, or auxiliary gutter, the conductors shall be protected by a substantial bushing providing a smoothly rounded insulating surface. Figures 9.27 and 9.28 show two types of bushings that provide insulation protection. The bushing in Fig. 9.27 is wholly insulated and constructed of a tough phenolic with reinforced fibers. The bushing in Fig. 9.28 is a metal grounding bushing with provisions for installing a bonding jumper from the bushing lug to a metal enclosure. The throat, or collar, is of insulating material to protect wires.



FIGURE 9.27 Wholly insulated conduit bushing.



FIGURE 9.28 Metal grounding bushing with insulated throat. [Midwest Electric Mfg. Corp.]

Tables 84 and 88 are useful when cutting knockouts into enclosures. The spacings listed in Table 84 allow enough room between adjacent knockouts for locknuts and bushings to be attached. (See Figs. 9.29, 9.30, and 9.31.)

84. Spacings for Conduit with Given Clearances and Punched-Steel Conduit Locknuts

(All dimensions in inches)

The clearance, *C*, values are based on the *D* values given at the top of the next page.

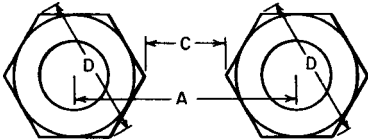


FIGURE 9.29 End view.

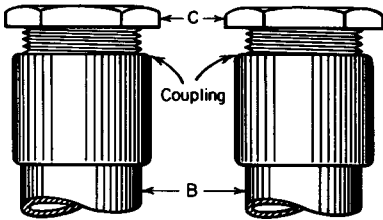


FIGURE 9.30 Elevation.

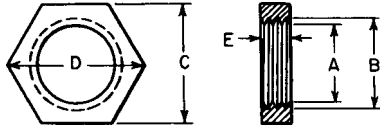


FIGURE 9.31 Conduit locknut.

Specifications																				Lock-nut dimensions		
C = 1/4 in.									C = 3/8 in.											Nominal size of conduit, in.	Threads per in.	A, in.
Size conduit	1/4	3/8	1	1 1/4	1 1/2	2	2 1/2	3	Size conduit	1/4	3/8	1	1 1/4	1 1/2	2	2 1/2	3					
1	A	1 3/8	1 3/8	1 3/8	1 3/8	1 3/8	2 3/8	2 3/8	1 3/8	A	1 3/8	1 3/8	1 3/8	1 3/8	2 3/8	2 3/8	2 3/8	3 3/8				
	B	0.53	0.55	0.54	0.55	0.56	0.64	0.70	0.70	B	0.66	0.68	0.67	0.68	0.69	0.77	0.83	0.83				
	A	1 3/8	1 3/8	1 3/8	1 3/8	1 3/8	2 3/8	2 3/8	2 3/8	A	1 3/8	1 3/8	1 3/8	1 3/8	2 3/8	2 3/8	2 3/8	3 3/8				
	B	0.55	0.57	0.56	0.58	0.58	0.66	0.72	0.72	B	0.68	0.70	0.69	0.71	0.71	0.79	0.85	0.85				
1 1/4	A	1 3/8	1 3/8	1 3/8	2 3/8	2 3/8	2 3/8	2 3/8	1 1/4	A	1 3/8	1 3/8	2	2 3/8	2 3/8	2 3/8	3 3/8	3 3/8				
	B	0.55	0.57	0.56	0.58	0.58	0.66	0.72	0.72	B	0.68	0.69	0.69	0.71	0.71	0.78	0.85	0.85				
	A	1 3/8	1 3/8	1 3/8	2 3/8	2 3/8	2 3/8	2 3/8	1 1/4	A	1 3/8	2 3/8	2 3/8	2 3/8	2 3/8	3 3/8	3 3/8	3 3/8				
	B	0.55	0.57	0.56	0.58	0.58	0.66	0.72	0.72	B	0.68	0.69	0.69	0.71	0.71	0.78	0.85	0.85				
1 1/2	A	1 3/8	1 3/8	2 3/8	2 3/8	2 3/8	2 3/8	3 3/8	1 1/2	A	1 3/8	2 3/8	2 3/8	2 3/8	2 3/8	3 3/8	3 3/8	3 3/8				
	B	0.55	0.58	0.58	0.58	0.59	0.67	0.73	0.79	B	0.68	0.71	0.71	0.71	0.72	0.80	0.87	0.92				
	A	1 3/8	2 3/8	2 3/8	2 3/8	2 3/8	2 3/8	3 3/8	1 1/2	A	2 3/8	2 3/8	2 3/8	2 3/8	2 3/8	3 3/8	3 3/8	3 3/8				
	B	0.56	0.58	0.58	0.59	0.59	0.68	0.74	0.79	B	0.69	0.71	0.71	0.72	0.72	0.81	0.87	0.92				
2	A	2 3/8	2 3/8	2 3/8	2 3/8	2 3/8	3 3/8	3 3/8	2	A	2 3/8	2 3/8	2 3/8	2 3/8	2 3/8	3 3/8	3 3/8	3 3/8				
	B	0.64	0.66	0.65	0.67	0.68	0.75	0.81	0.81	B	0.77	0.79	0.78	0.80	0.81	0.88	0.88	0.94				
	A	2 3/8	2 3/8	2 3/8	3	3 3/8	3 3/8	4 3/8	2 3/8	A	2 3/8	2 3/8	2 3/8	3 3/8	3 3/8	3 3/8	4 3/8	4 3/8				
	B	0.70	0.72	0.72	0.73	0.74	0.81	0.87	0.88	B	0.83	0.85	0.85	0.86	0.87	0.94	1.01	1.01				
3	A	2 3/8	3	3 3/8	3 3/8	3 3/8	3 3/8	4 3/8	3	A	3	3 3/8	3 3/8	3 3/8	3 3/8	4 3/8	4 3/8	4 3/8				
	B	0.70	0.72	0.72	0.79	0.79	0.81	0.88	1.06	B	0.83	0.85	0.85	0.92	0.92	0.94	0.99	0.99				
	A	3 3/8	3 3/8	3 3/8	3 3/8	3 3/8	4 3/8	4 3/8	3 3/8	A	3 3/8	3 3/8	3 3/8	3 3/8	3 3/8	4 3/8	4 3/8	5				
	B	0.83	0.86	0.85	0.86	0.87	0.94	1.00	1.12	B	0.96	0.98	0.98	0.99	0.99	1.07	1.13	1.25				
* The 3-in. lock nut is octagonal instead of hexagonal																				Nominal size of conduit, in.	B, in.	C, in.
																				1/4	0.815	1-1/4
																				3/8	1.025	1 1/4
																				1	1.283	1 1/4
																				1 1/4	1.627	2 1/4
																				1 1/2	1.866	2 3/4
																				2	2.359	2 3/4
																				2 3/8	2.820	3 3/4
																				3	3.441	4 1/4-3 1/2

$C = \frac{1}{2}$ in.										$C = \frac{3}{4}$ in.										Nominal size of conduit, in.	D, in.	E, in.
Size conduit		$\frac{1}{2}$	$\frac{3}{4}$	1	$1\frac{1}{4}$	$1\frac{1}{2}$	2	$2\frac{1}{2}$	3	Size conduit		$\frac{1}{2}$	$\frac{3}{4}$	1	$1\frac{1}{4}$	$1\frac{1}{2}$	2	$2\frac{1}{2}$	3			
$\frac{1}{2}$	A	$1\frac{1}{2}$	$1\frac{3}{4}$	$1\frac{1}{2}$	$2\frac{1}{4}$	$2\frac{1}{4}$	$2\frac{1}{2}$	$2\frac{1}{2}$	$3\frac{1}{2}$	$\frac{1}{2}$	A	$1\frac{1}{2}$	$1\frac{1}{4}$	2	$2\frac{1}{4}$	$2\frac{1}{4}$	$2\frac{1}{2}$	$2\frac{1}{4}$	$3\frac{1}{4}$	$\frac{1}{2}$	oct.	hex.
	B	0.78	0.80	0.79	0.80	0.81	0.80	0.95	0.95		B	0.91	0.93	0.92	0.93	0.94	1.02	1.08	1.08		$1\frac{1}{2}$ - $1\frac{1}{2}$	$\frac{1}{2}$ - $\frac{1}{2}$
$\frac{3}{4}$	A	$1\frac{1}{2}$	$1\frac{3}{4}$	2	$2\frac{1}{4}$	$2\frac{1}{4}$	$2\frac{1}{2}$	$2\frac{1}{2}$	$3\frac{1}{4}$	$\frac{3}{4}$	A	$1\frac{1}{2}$	2	$2\frac{1}{4}$	$2\frac{1}{4}$	$2\frac{1}{2}$	$2\frac{1}{4}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$\frac{3}{4}$	oct.	hex.
	B	0.80	0.83	0.81	0.83	0.83	0.91	0.97	0.97		B	0.93	0.95	0.94	0.96	0.96	1.04	1.10	1.10		$1\frac{1}{2}$	$\frac{3}{4}$
1	A	$1\frac{1}{2}$	2	$2\frac{1}{4}$	$2\frac{1}{4}$	$2\frac{1}{2}$	$2\frac{1}{2}$	$3\frac{1}{4}$	$3\frac{1}{4}$	1	A	2	$2\frac{1}{4}$	$2\frac{1}{4}$	$2\frac{1}{2}$	$2\frac{1}{2}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$1\frac{1}{4}$	$2\frac{1}{2}$	$\frac{1}{2}$
	B	0.80	0.81	0.81	0.83	0.83	0.90	0.97	0.97		B	0.92	0.94	0.94	0.96	0.96	1.03	1.10	1.10		$1\frac{1}{4}$	$\frac{3}{4}$
$1\frac{1}{4}$	A	$2\frac{1}{4}$	$2\frac{1}{4}$	$3\frac{1}{4}$	$2\frac{1}{4}$	$2\frac{1}{2}$	$2\frac{1}{2}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$1\frac{1}{4}$	A	$2\frac{1}{4}$	$2\frac{1}{4}$	$2\frac{1}{2}$	$2\frac{1}{2}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$3\frac{1}{4}$	2	$3\frac{1}{4}$	$\frac{1}{2}$
	B	0.80	0.83	0.83	0.83	0.84	0.92	0.99	1.04		B	0.93	0.96	0.96	0.96	0.97	1.05	1.12	1.17		$3\frac{1}{4}$	$\frac{1}{2}$
$1\frac{1}{2}$	A	$2\frac{1}{4}$	$2\frac{1}{4}$	$2\frac{1}{2}$	$2\frac{1}{2}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$1\frac{1}{2}$	A	$2\frac{1}{4}$	$2\frac{1}{4}$	$2\frac{1}{2}$	$2\frac{1}{2}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$3\frac{1}{4}$	2	$3\frac{1}{4}$	$\frac{1}{2}$
	B	0.81	0.83	0.83	0.84	0.84	0.93	0.98	1.04		B	0.94	0.96	0.96	0.97	0.97	1.06	1.11	1.17		$3\frac{1}{4}$	$\frac{1}{2}$
2	A	$2\frac{1}{4}$	$2\frac{1}{2}$	$2\frac{1}{2}$	$2\frac{1}{2}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$3\frac{1}{4}$	2	A	$2\frac{1}{4}$	$2\frac{1}{4}$	$2\frac{1}{2}$	$2\frac{1}{2}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$3\frac{1}{4}$	2	$3\frac{1}{4}$	$\frac{1}{2}$
	B	0.80	0.91	0.90	0.92	0.93	1.00	1.00	1.06		B	1.02	1.04	1.03	1.05	1.05	1.13	1.13	1.19		$3\frac{1}{4}$	$\frac{1}{2}$
$2\frac{1}{4}$	A	$2\frac{1}{4}$	$2\frac{1}{2}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$4\frac{1}{4}$	$2\frac{1}{4}$	A	$2\frac{1}{4}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$4\frac{1}{4}$	$2\frac{1}{4}$	$3\frac{1}{4}$	$\frac{1}{2}$
	B	0.95	0.97	0.97	0.98	0.99	1.06	1.13	1.13		B	1.08	1.10	1.10	1.11	1.12	1.19	1.26	1.26		$3\frac{1}{4}$	$\frac{1}{2}$
3	A	$3\frac{1}{4}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$4\frac{1}{4}$	$4\frac{1}{4}$	$4\frac{1}{4}$	$4\frac{1}{4}$	3	A	$3\frac{1}{4}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$3\frac{1}{4}$	4	$4\frac{1}{4}$	$4\frac{1}{4}$	$4\frac{1}{4}$	$3\frac{1}{4}$	$4\frac{1}{4}$	$\frac{1}{2}$
	B	0.95	0.97	0.97	1.04	1.04	1.06	1.14	1.14		B	1.08	1.10	1.10	1.17	1.17	1.19	1.24	1.24		$4\frac{1}{4}$	$\frac{1}{2}$
$3\frac{1}{4}$	A	$3\frac{1}{4}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$4\frac{1}{4}$	$4\frac{1}{4}$	$4\frac{1}{4}$	$5\frac{1}{4}$	$3\frac{1}{4}$	A	$3\frac{1}{4}$	$3\frac{1}{4}$	$3\frac{1}{4}$	$4\frac{1}{4}$	$4\frac{1}{4}$	$4\frac{1}{4}$	$4\frac{1}{4}$	$5\frac{1}{4}$	$3\frac{1}{4}$	$4\frac{1}{4}$	$\frac{1}{2}$
	B	1.01	1.04	1.03	1.04	1.11	1.13	1.31	1.31		B	1.14	1.17	1.16	1.24	1.24	1.33	1.39	1.44		$4\frac{1}{4}$	$\frac{1}{2}$

85. Conduit Chase Nipples (See Fig. 9.32.)

Trade size of nipple	A, threads per in.	B, diam of threads, in.	C, in.	D, in.	E, in.	F, in.	G, in.	H, in.	Metric designator of nipple
$\frac{1}{2}$	14.0	0.82	0.62	1.00	1.15	0.62	0.12	0.50	16
$\frac{3}{4}$	14.0	1.02	0.82	1.25	1.44	0.81	0.19	0.62	21
1	11.5	1.28	1.04	1.37	1.59	0.94	0.25	0.69	27
$1\frac{1}{2}$	11.5	1.63	1.38	1.75	2.02	1.06	0.25	0.81	35
$1\frac{1}{2}$	11.5	1.87	1.61	2.00	2.31	1.12	0.31	0.81	41
2	11.5	2.34	2.06	2.50	2.89	1.31	0.31	1.00	53
$2\frac{1}{2}$	8.0	2.82	2.46	3.00	3.46	1.44	0.37	1.06	63
3	8.0	3.44	3.06	3.75	4.33	1.50	0.37	1.12	78
$3\frac{1}{2}$	8.0	3.94	3.54	4.25	4.91	1.62	0.44	1.19	91

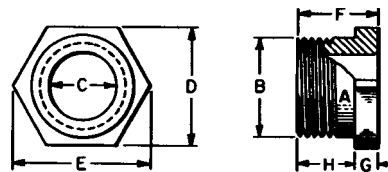


FIGURE 9.32 Conduit chase nipple.

86. Rigid Conduit Elbows (See Fig. 9.33.)

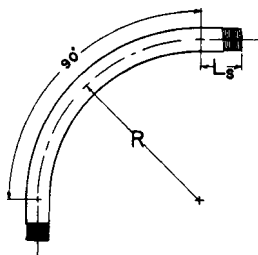


FIGURE 9.33 Conduit elbows: minimum radius for factory ells and ells made by a one-shot or a full-shoe bender.

Standard-Radius Conduit Elbows

Conduit trade size	Minimum radius to center of tube, in	Minimum straight length <i>Ls</i> at each end, in	Metric designator
1/2	4	1 1/2	16
3/4	4 1/2	1 1/2	21
1	5 3/4	1 7/8	27
1 1/4	7 1/4	2	35
1 1/2	8 1/4	2	41
2	9 1/2	2	53
2 1/2	10 1/2	3	63
3	13	3 1/8	78
3 1/2	15	3 1/4	91
4	16	3 3/8	103
5	24	3 5/8	129
6	30	3 3/4	155

87. Conduit Nipples (See Fig. 9.34.)

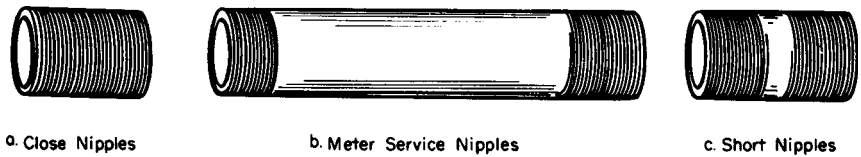


FIGURE 9.34 Conduit nipples.

Size nipple, in	Close		Start		2 in long	3 in long	4 in long	5 in long	6 in long	8 in long	10 in long	12 in long
	Length	Wt, lb per 100 pieces	Length	Wt, lb per 100 pieces	Wt, lb per 100 pieces	Wt, lb per 100 pieces	Wt, lb per 100 pieces	Wt, lb per 100 pieces	Wt, lb per 100 pieces	Wt, lb per 100 pieces	Wt, lb per 100 pieces	Wt, lb per 100 pieces
1/2	1 1/8	7	1 1/2	9	12	19	25	32	38	51	64	77
3/4	1 3/8	11	2	17	...	26	34	43	51	68	85	103
1	1 1/2	19	2	25	...	38	51	63	76	102	127	153
1 1/4	1 5/8	28	2 1/2	43	...	61	69	86	103	138	172	207
1 1/2	1 3/4	36	2 1/2	51	...	62	82	103	124	165	206	248
2	2	55	2 1/2	69	...	83	111	139	167	228	278	334
2 1/2	2 1/2	110	3	132	176	220	264	353	441	529
3	2 5/8	151	3	173	231	288	346	462	577	692
3 1/2	418	558	697	837

88. Malleable-Iron Conduit Bushings (See Fig. 9.35.)

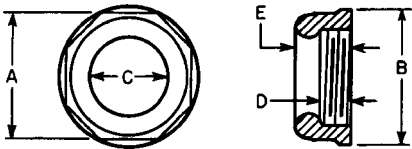


FIGURE 9.35 Conduit bushing.

Nominal size of conduit, in	A, in	B, in	C, in	D, in	E, in
$\frac{3}{8}$	$\frac{25}{32}$	$\frac{27}{32}$	$\frac{15}{32}$	$\frac{3}{16}$	$\frac{11}{32}$
$\frac{1}{2}$	$\frac{15}{16}$	$\frac{11}{32}$	$\frac{19}{32}$	$\frac{1}{4}$	$\frac{13}{32}$
$\frac{3}{4}$	$\frac{15}{32}$	$1\frac{1}{4}$	$\frac{3}{4}$	$\frac{1}{4}$	$\frac{15}{32}$
1	$1\frac{13}{32}$	$1\frac{17}{32}$	$\frac{31}{32}$	$\frac{5}{16}$	$\frac{17}{32}$
$1\frac{1}{4}$	$1\frac{11}{16}$	$1\frac{29}{32}$	$1\frac{5}{16}$	$\frac{3}{8}$	$\frac{19}{32}$
$1\frac{1}{2}$	$2\frac{1}{16}$	$2\frac{5}{32}$	$1\frac{17}{32}$	$\frac{13}{32}$	$\frac{5}{4}$
2	$2\frac{9}{16}$	$2\frac{11}{16}$	$1\frac{15}{16}$	$\frac{13}{32}$	$2\frac{1}{32}$
$2\frac{1}{2}$	$3\frac{1}{16}$	$3\frac{5}{32}$	$2\frac{11}{32}$	$\frac{15}{32}$	$\frac{3}{4}$
3	$3\frac{11}{16}$	$3\frac{25}{32}$	$2\frac{27}{32}$	$\frac{17}{32}$	$\frac{7}{4}$

89. Table 85, giving the dimensions of conduit chase nipples, is since the function of the chase nipple is about the same as that of the bushing, used for the same purposes as the bushing table. The chase nipple screws into a coupling (see Fig. 9.30), while the bushing screws onto the threaded end of a length of conduit. The chase nipple is more compact than the bushing and hence is preferable for some work.

90. Punched-steel locknuts are shown in Table 84. Locknuts are used for conduit on the outside of the box whenever the conduit enters an outlet box, and their dimensions must often be known in laying out panel or outlet boxes so that proper turning clearances can be provided for the nuts.

91. Table 84 of conduit spacings for different clearances between conduits and their locknuts or nipples is exceedingly valuable to someone who is designing or erecting conduit work. From it the designer can determine directly just what the distance between centers of conduits should be for given clearances between nipples or conduit. These data are indispensable when laying out the centers of a row of holes through which conduit is to enter a panel box or in laying out the supports for a multiple-conduit run.

92. Bends. The NEC specifies that bends of rigid conduit shall be so made that the conduit will not be injured and that the internal diameter of the conduit will not be effectively reduced. The radius of the curve of the inner edge of any field bend using sequential benders such as hickies shall not be less than shown in Table 93. See Table 86 for the minimum radius permitted for field bends made by one-shot or full-shoe benders.

The NEC also specifies that a run of conduit between outlet and outlet, fitting and fitting, or outlet and fitting shall not contain more than the equivalent of four quarter bends (360° total), including bends located immediately at the outlet or fitting.

93. Minimum Radius of Conduit or Tubing Field Bends, Centerline Measurement. The former column for lead-sheathed conductors was deleted in the 2002 NEC code cycle because these conductors are no longer made.

Raceway size, Metric designator and (trade size)	One shot and full shoe benders	Other bends
16 (1/2)	101.6 mm (4 in.)	101.6 mm (4 in.)
21 (3/4)	114.3 mm (4 1/2 in.)	127 mm (5 in.)
27 (1)	146.05 mm (5 3/4 in.)	152.4 mm (6 in.)
35 (1 1/4)	184.15 mm (7 1/4 in.)	203.2 mm (8 in.)
41 (1 1/2)	209.55 mm (8 1/4 in.)	254 mm (10 in.)
53 (2)	241.3 mm (9 1/2 in.)	304.8 mm (12 in.)
63 (2 1/2)	266.7 mm (10 1/2 in.)	381 mm (15 in.)
78 (3)	330.2 mm (13 in.)	457.2 mm (18 in.)
91 (3 1/2)	381 mm (15 in.)	533.4 mm (21 in.)
103 (4)	406.4 mm (16 in.)	609.6 mm (24 in.)
129 (5)	609.6 mm (24 in.)	762 mm (30 in.)
155 (6)	762 mm (30 in.)	914.4 mm (36 in.)

94. The NEC specifies the size of conduit to use, depending upon the number, type, and size of conductors to be installed therein. The proper size of conduit can be determined through a three-step process using the tables in NEC Chap. 9. First, determine the cross-sectional areas of the conductors to be installed by consulting Table 5 (or 5A for compact conductors), and develop the cross-sectional area of all the conductors taken together that will be part of the fill. Use the sizes in Table 8 if there are bare wires in the group. Note the fill factor from Table 1 that corresponds to the number of conductors involved. Finally, select the raceway size from Table 4, starting with the data for the raceway of choice and using the column that corresponds to the applicable fill factor; any raceway with a usable cross-sectional area equal to or larger than the conductor area will work. If all the conductors are the same size, Annex C has all the calculations done out ahead of time. Just look up the wiring method of choice and select the size that will hold the wires.

These tables incorporate Note 7 to Table 1, which says that if you divide the permitted fill area of a raceway by the area of the wires to be installed, and that calculation carried to one decimal place and truncated results in a decimal of 0.8 or larger, the fill can be rounded up to the next higher number of conductors, *provided all the conductors are the same size.*

95. Outlets for current-consuming equipment and wiring devices require the use of outlet boxes for concealed or exposed work, whereas conduit bodies (Fig. 9.38) are limited to exposed work.

96. Outlet boxes that are used for conduit wiring are of sheet steel, preferably coated with zinc. They not only hold the conduit ends firmly in position and form a pocket for enclosing wire joints but also constitute electrical connectors between the elements of the conduit system, all of which must be in good electrical contact. Each conduit run in an installation must terminate in an accessible outlet box. Outlet boxes are made in many different forms. For complete data and descriptions of outlet boxes see Div. 4. The required size of boxes is given in Sec. 345.

97. All boxes should be installed so that the outer edge of the box or the cover mounted on the box will come flush with the surface of combustible wall surfaces and 6 mm ($\frac{1}{4}$ in.) set back in noncombustible wall surfaces. The top of an outlet or junction box must never be concealed, as the wire splices inside must be accessible for inspection. The conduit must be fastened securely to the box by using a locknut on the outside and a bushing on the inside of the box (see Sec. 83).

98. Conduit junction boxes, which in reality are nothing more than pull boxes on a large scale, are often very convenient at points where several conduit lines intersect, as for instance over a switchboard (Fig. 9.36) from which conduit lines radiate. The junction box is usually supported from the ceiling and is best made of sheet iron on an angle-iron frame. The sides should be held on with machine screws turning into tapped holes in the frame so that they can be readily removed. Round holes can be cut in the sheet-iron sides for the conduits. The conductors within the box can be carried from conduit outlet to conduit outlet in any direction desired, and the use of elbows and troublesome conduit crossings can thereby be avoided.

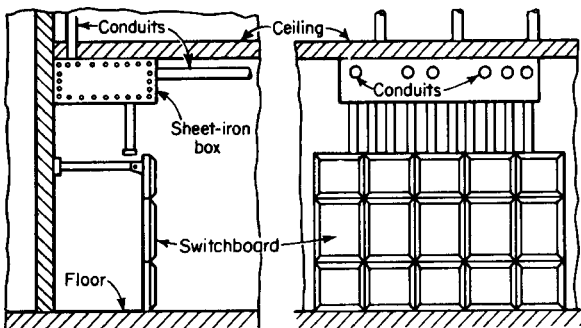


FIGURE 9.36 A sheet-iron conduit junction box.

99. Pull boxes can often be advantageously substituted for elbows (Fig. 9.37). Large elbows are expensive. If there are three or more right-angle turns in a run, a pull box should be inserted in any event. One pull box may be substituted for several elbows. Wire can be pulled in more readily when there are pull boxes. Pull boxes are generally made of sheet steel (Fig. 9.37, I). Boxes should be made and drilled in the shop, where proper tools are available, rather than on the job. The required size of pull boxes is given in Sec. 324.

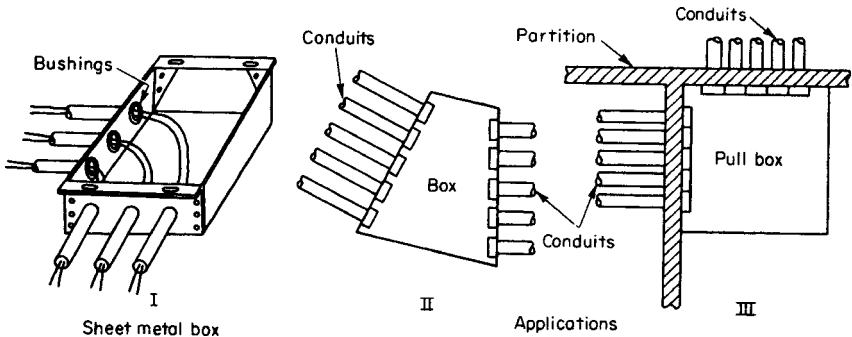


FIGURE 9.37 Conduit pull boxes.

100. Conduit bodies are fittings used to adapt conduit to different situations and conditions. Figure 9.38 shows some popular fittings, the applications of which are obvious. The NEC specifies that every conduit outlet must be equipped with an outlet box or approved fitting. Elbows, crosses, and tees can be obtained fitted with either metal or composition or porcelain wire-hole covers or with outlet or other devices. The fittings can be used as pull boxes, to support switches, or for a number of other purposes. Everyone interested in wiring should have the catalogs of the fitting manufacturers. These illustrate a great number of fitting combinations and applications.

Conduit fittings are made with their hubs for attachment to the conduit of either threaded or threadless types.

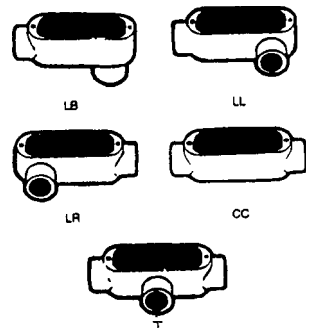


FIGURE 9.38 Popular conduit fittings.

101. Threadless fittings (Fig. 9.39) can be used with unthreaded conduit. Tightening glands or setscrews clamp the conduit within the fitting. Threadless fittings materially reduce the labor cost of conduit installation in many instances.

The NEC requires that threadless fittings be made tight and that, if installed in wet places or if buried in masonry, concrete, or fill, they be of a type to prevent water from entering the conduit.

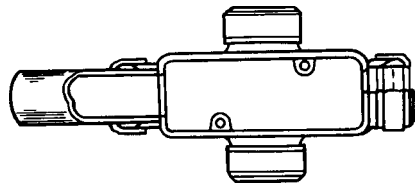


FIGURE 9.39 No-thread conduit body. [Appleton Electric Co.]

102. Conduit should run as straight and direct as possible. There should never be more than the equivalent of four right-angle bends between outlets or fittings.

103. In installing exposed conduit runs where there are several conduits in the run, it is usually better to carry the erection of all of them together rather than to complete one line before starting the others. If all are carried together, it is easier to keep all the raceways parallel, particularly at turns, and the chances are that the job will look better.

104. Galvanized-Iron Pipe Straps of the Two-Hole Type

Nominal size of conduit, in	A, width of opening, in	B, width of opening, in	C, width of strap, in	D, Distance between centers of screw holes, in	E, diam of screw hole, in	F, size of wood screw to use	Approximate number per lb
1/4	9/16	17/32	5/8	1 9/16	0.20	No. in	75
2/3	11/16	21/32	5/8	1 3/8	0.20	8 × 5/8	72
1/2	7/8	25/32	5/8	1 3/8	0.20	8 × 3/4	40
3/4	1 1/8	1	3/4	2 1/8	0.22	8 × 3/4	29
1	1 3/8	1 11/32	3/4	2 5/8	0.22	10 × 7/8	21
1 1/4	1 3/4	1 5/8	13/16	2 3/4	0.22	10 × 1	18
1 1/2	2	1 7/8	13/16	3	0.22	10 × 1	14
2	2 1/2	2 5/16	1	3 3/4	0.22	10 × 1 1/4	12
2 1/2	2 3/4	2 15/16	7/8	4 3/8	0.25	11 × 1 1/4	6

105. Conduit can be supported on surfaces with pipe straps made in two-hole (Fig. 9.40) and one-hole (Fig. 9.41) types. On wooden surfaces, wood screws secure the straps in position. On masonry surfaces, machine screws turning into lead expansion anchors can be used. (Refer to Div. 4 for types of expansion anchors.) Wooden plugs should never be used because no matter how well seasoned a plug appears to be, it will usually dry out to some extent and loosen in the hole. The dimensions in Table 104 are valuable, when laying out multiple-conduit runs, to determine the spacings necessary between the conduits to permit proper placing of the straps. The screw-hole dimensions enable one to order, in advance, screws of the proper diameters to support the straps.

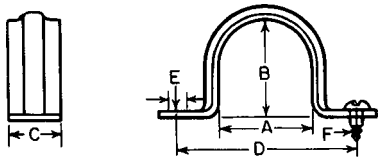


FIGURE 9.40 Pipe strap.

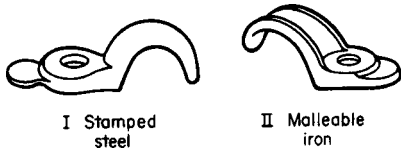


FIGURE 9.41 One-hole pipe straps. [General Electric Supply Co.]

106. Location of conduit supports. The NEC states that rigid metal conduit shall be firmly secured within 900 mm (3 ft) of each outlet box, junction box, cabinet, or fitting. Such conduit shall be supported at least every 3 m (10 ft) except that straight runs of conduit made up with approved threaded couplings may be secured as indicated in Table 107, provided such fastening prevents transmission of stresses to termination when conduit is deflected between supports. In addition, the NEC allows the first support rule to be as far as 1.5 m (5 ft) from a termination in instances where there is no structural support available. This accommodates up to 5-ft spacings between bar joists without having to arrange intermediate support.

A new rule in the 2008 NEC covering all rigid tubular raceways (including RMC, IMC, EMT, PVC, and the now separate article for fiberglass type RTRC raceways) addresses the support of short nipples between enclosures. It requires direct support for

all nipples regardless of length unless they meet three criteria. (1) They must not be over 18 in. in length; (2) they must be unbroken (without couplings); and (3) they must not enter through a concentric knockout. These requirements result in some absurd results, such as a support requirement for a 3-in. nipple if it enters a concentric knockout on just one end. You will need to discuss this with the inspector to see the extent to which it is being enforced locally.

107. Spacing of Rigid-Metal-Conduits Supports

Conduit size, in	Maximum distance between Rigid-Metal-Conduit supports, ft
$\frac{1}{2}$ and $\frac{3}{4}$	10
1	12
$1\frac{1}{4}$ and $1\frac{1}{2}$	14
2 and $2\frac{1}{2}$	16
3 and larger	20

108. Some commercial I-beam conduit hangers

are shown in Figs. 9.42 and 9.43. The one at I is an I-beam clamp formed from wrought-iron strap. The hanger or clamp (the part that grips the beam) of that at II can be purchased of either stamped steel or malleable iron. The support (the yoke in which the conduits rest) is of malleable iron or spring steel and can be purchased to accommodate one or several conduits of different sizes.

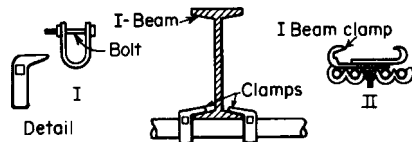


FIGURE 9.42 Commercial conduit clamps.

109. Conduit hangers and supports. A variety of conduit hangers and supports and several applications are shown in Fig. 9.43. U-channel supports are ideal for supporting several runs of conduits. In laying out these supports consideration should be given to future conduit runs as well as those to be installed initially. It is a simple matter to provide U channels or trapeze hangers with additional space for future conduits. This procedure greatly reduces the cost of installing new conduit at a later date. With the U-channel system, as shown in Fig. 9.43, special clamps are slipped into the channel slot, and the top bolt of the clamp securely fastens the conduit to the U channel.

The U channel can be directly fastened to a wall or ceiling, or it can be attached to bolted threaded rod hangers, suspended from ceilings, roof structures, or similar members.

Another excellent application for the U channel is in suspended ceilings which contain lift-out ceiling panels. In modern construction these lift-out panels provide ready access to mechanical and electrical equipment within the suspended-ceiling area. Accordingly, it is important that conduits installed in such an area do not prevent the removal of panels or access to the area. Rod-suspended U channels provide the solution to conduit wiring in such areas.

Sections of U channel and associated fittings are available in aluminum or steel types. Another type of material that can be used for supports is slotted-angle-steel units. Numerous prepunched slots allow installers to bolt on rods, straps, and similar material without drilling holes. Slotted steel has unlimited applications in forming special structures, racks, braces, or similar items.

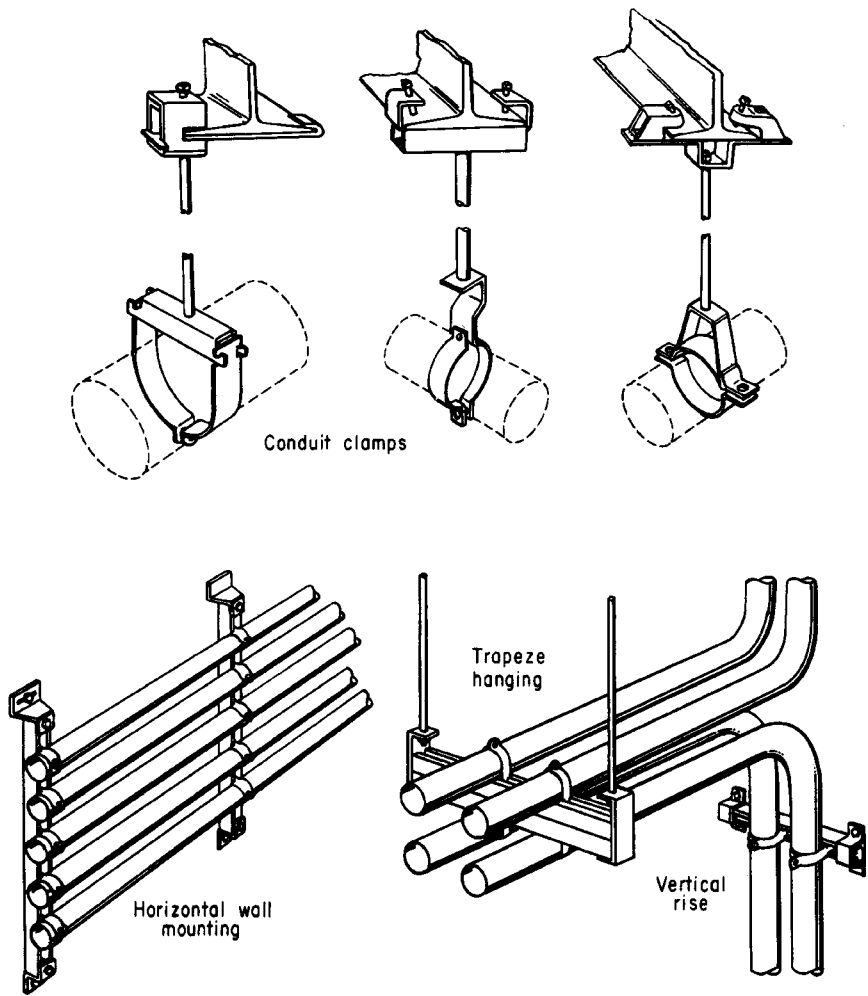


FIGURE 9.43 Beam clamps, rod hangers, and U-channel supports.

110. Conduit in concrete buildings (much of it, at any rate) can be installed while the building is being erected. The outlets should be attached to the forms, and the conduits between outlets should be attached to reinforcing steel with metal tie wires so that the conduit can be poured around them (Fig. 9.44). When several conduits pass through a wall, partition, or floor, a plugged sheet-metal tube (Fig. 9.45, I) should be set in the forms to provide a hole for them in the concrete. When a single conduit is to pass through, a nipple (Fig. 9.45, II) or a plugged sheet-metal tube can be set in the forms.

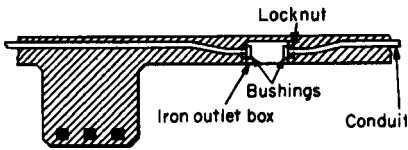


FIGURE 9.44 Conduit and outlet box in concrete.

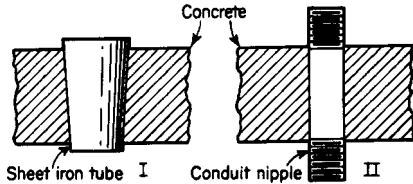


FIGURE 9.45 Methods of providing passage through concrete.

111. Conductors in Vertical Conduits must Be Supported within the conduit system as indicated in the following table.

Conductor size	Conductors, m (ft)	
	Aluminum or copper-clad aluminum	Copper
	Not greater than	
No. 18 through No. 8	30 (100)	30 (100)
No. 6 through No. 0	60 (200)	30 (100)
No. 00 through No. 0000	55 (180)	25 (80)
211,601 through 350,000 cmil	41 (135)	18 (60)
350,001 through 500,000 cmil	36 (120)	15 (50)
500,001 through 750,000 cmil	28.5 (95)	12 (40)
Above 750,000 cmil	26.5 (85)	11 (35)

The following methods of supporting cables will satisfy NEC requirements:

1. Approved clamping devices are constructed of or employ insulated wedges inserted in the ends of the conduits (Fig. 9.46). With cables having varnished cambric insulation, it may also be necessary to clamp the conductor.
2. Junction boxes may be inserted in the conduit system at the required intervals. Insulating supports of an approved type must be installed in them and secured in a satisfactory manner so as to withstand the weight of the conductors attached thereto. The boxes must be provided with proper covers.
3. The cables may be supported in junction boxes by deflecting them (Fig. 9.47) not less than 90° and carrying them horizontally to a distance not less than twice the diameter of the cable, the cables being carried on two or more insulating supports and additionally secured thereto by tie wires if desired. When this method is used, the cables shall be supported at intervals not greater than 20 percent of those mentioned in the preceding tabulation.

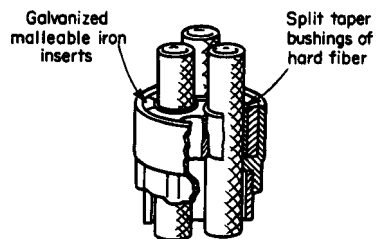


FIGURE 9.46 Cable support screwed on the end of a conduit.

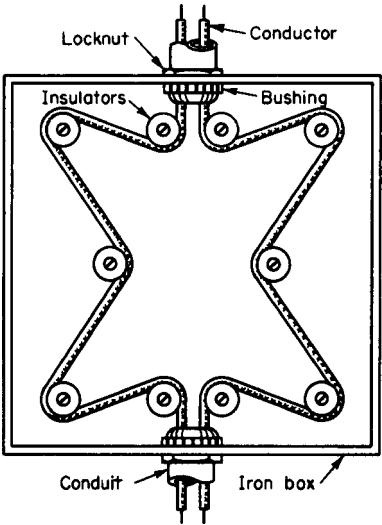


FIGURE 9.47 Supporting conductors in a vertical conductor run.

112. Properly bent conduit turns look better than elbows and are therefore preferable for exposed work (see Fig. 9.48). If bends are formed to a chalk line, drawn as suggested in Sec. 113, the conduits can be made to lie parallel at a turn in a multiple run as shown in Fig. 9.48, II. If standard elbows are used, it is impossible to make them lie parallel at the turns. They will have an appearance similar to that shown in I.

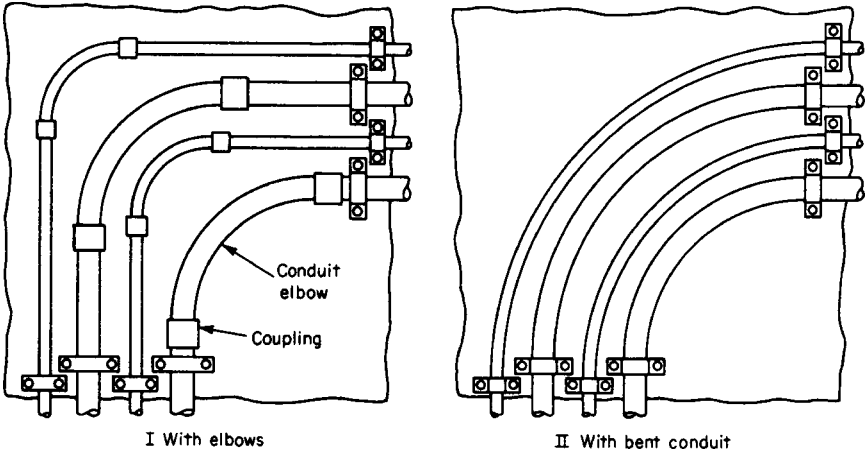


FIGURE 9.48 Right-angle turns with elbows and with bent conduit.

113. Laying out a right-angle conduit bend. Draw a chalk-line diagram of the contour of the bend on the floor as follows (see Fig. 9.49): Draw a base line CO of any length. Lay off AO 4 units long. (The units may be of any dimensions.) With a cord and piece of chalk with O as a center and a radius of 3 units describe the arc IJ . With A as a center and a radius of 5 units describe the arc EH . The line OD drawn from O through B , the intersection of the two arcs, will be at right angles with CO .

CO and OD can now be prolonged for any desired distance. The arc CD is drawn with the cord and chalk with any required radius R . The conduit bend should lie parallel to this arc when the bend is laid on the floor for inspection as shown in Fig. 9.50. The radius of curvature of the inner edge of any field bend is required by the NEC to be not less than shown in Table 93.

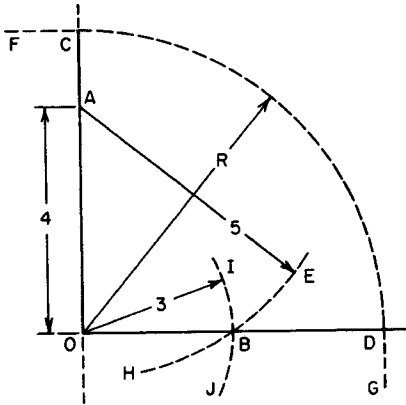


FIGURE 9.49 Laying out a right angle.

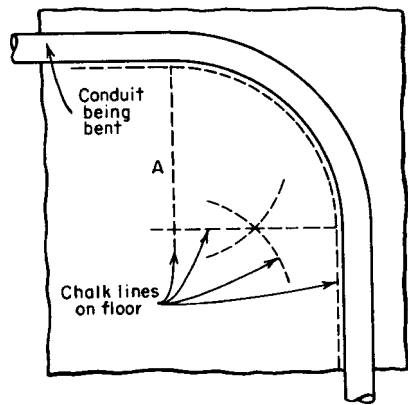


FIGURE 9.50 Forming a conduit to chalk lines.

114. Conduit hickies and benders are used to hand-bend smaller sizes of rigid steel conduit, rigid aluminum conduit, and the new Type IMC (intermediate metal conduit) in $\frac{1}{2}$ -, $\frac{3}{4}$ -, and 1-in sizes, as well as in a $1\frac{1}{4}$ -in size for small offsets (see Fig. 9.51.) Benders and hickies for thin-wall electrical metallic tubing (EMT) are widely used for all types of bends in sizes from $\frac{1}{2}$ to $1\frac{1}{4}$ in inclusive. A typical thin-wall conduit bender, shown in Fig. 9.52A, was invented by Jack Benfield of Delray Beach, Florida. Listed below are the features of this bender that have greatly improved the art of precision-bending conduit and EMT over the years:




FIGURE 9.51 The standard conduit hickey.

1. Bold cast-in symbols not only are recessed but also are paint-filled to serve as permanent benchmarks or guide points for making accurate stub lengths, back-to-back bends, saddles, and offsets.
2. The Benfield formula for making precision offsets is printed in bold letters cast into the metal as a constant reference for the operator at point at use. The formula reads:

$$\text{OFFSET DEPTH} \times \text{MULTIPLIER} = \text{DIST. NEEDED BTWN BENDS}$$

A cast-in degree scale on one side and a cooperating cast-in multiplier scale on the opposite side of the tool guide the operator in this precision offset technique.

3. A patented inner-hook contour prevents the tool from slipping. It will not chew into or nick galvanized surfaces or gouge aluminum conduits.

Precision offsets

$$\text{Depth} \times \text{multiple} = \text{distance between bends}$$

The new "multiplier scale" opposite the degree scale makes it quick and easy to follow the formula.

EXAMPLE:

To make an offset 5 in. deep with 45° bends;

1. Place marks 7 in. apart.
2. Make a 45° bend at each mark.



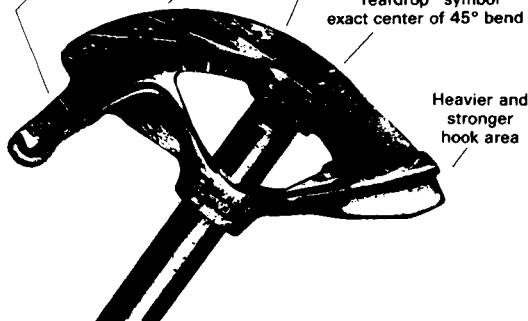
NOTE: On all Benfield® benders a straight-up handle (vertical to floor) indicates a 30° bend.

The famous Benfield "offset formula" now cast into this protected area

"Offset multipliers" lie in identical plane with degree scale

"Teardrop" symbol exact center of 45° bend

Heavier and stronger hook area



The Benfield® formula for precision offsets

$$\text{Offset depth} \times \text{constant multiplier} = \text{distance between bends}$$

Angle of bends	Use constant multiplier	Shrink per inch of offset depth
10 x 10	6	1/16
22½ x 22½	2.6	3/16
30 x 30	2.0	1/4
45 x 45	1.4	3/8
60 x 60	1.2	1/2

0° mark denotes start of bend

"Teardrop" symbol indicates the exact center of a 45° bend

Big, bold "degree scale" — larger numerals

Jumbo-size arrows and star points countersunk and painted

All letters and numerals are double-size

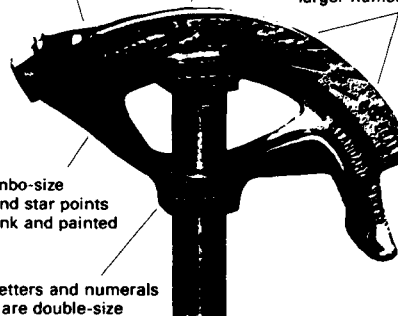


FIGURE 9.524 No. 1 Benfield bender for 1/2-in electrical metallic tubing (EMT). This tool makes the minimum National Electrical Code radius. [Jack Benfield, patent holder]

4. The hook area also includes a back-pusher contour which allows the bender to grab on in reverse to remove an overbend or to shift the bend from side to side.
5. The back of the hook has a double-width outrigger ground flat (like a T square in relation to the bender groove). This flat shoulder provides stability and maintains floor contact long enough to set the course of the bend in a plane vertical to the working surface.
6. For purposes of safety the socket for a handle has recessed threads. The entire tool is cast of tough pearlitic-alloy malleable iron with heavy sections and guard points to protect the groove from damage.
7. The extended nonskid foot pedal invites foot pressure and increased leverage by 75 percent.
8. The Benfield No. 1 bender (Fig. 9.52A) is designed for bending $\frac{1}{2}$ -in EMT only. A similar model, No. 2, is used for $\frac{3}{4}$ -in EMT, and No. 3 is for bending 1-in EMT. All three tools bend to the minimum NEC radius. If larger radii are not objectable, the No. 2 bender will bend $\frac{1}{2}$ -in rigid conduit. The No. 3 bender will bend $\frac{3}{4}$ -in rigid conduit.

The Benfield No. 6 Powr-Jack bender, shown in Fig. 9.52B, has every feature of the No. 2 bender plus an extended two-position power step that provides 200 percent more leverage, thereby extending the range for hand benders to include 1-in rigid or IMC conduit and $1\frac{1}{4}$ -in EMT.

The Benfield No. 9 double-grooved bender (Fig. 9.52D) is a one-piece malleable-iron casting with no moving parts. One groove bends $\frac{1}{2}$ -in EMT only; the other groove is for $\frac{3}{4}$ -in EMT or $\frac{1}{2}$ -in rigid conduit (Fig. 9.52C). The No. 9 Benfield makes shorter radii than standard models, i.e., 3-in inside radius for $\frac{1}{2}$ -in EMT and a 4-in radius for $\frac{3}{4}$ -in EMT and $\frac{1}{2}$ -in rigid conduit or IMC. Handles are now available in IPS $\frac{3}{4}$ -, 1-, and $1\frac{1}{4}$ -in sizes and are



FIGURE 9.52B No. 6 Benfield Power-Jack bender for 1-in rigid conduit or $1\frac{1}{4}$ -in EMT. [Jack Benfield, patent holder]



FIGURE 9.52C No. RH7 Benfield hickey for $\frac{1}{2}$ - or $\frac{3}{4}$ -in rigid conduit. [Jack Benfield, patent holder]



FIGURE 9.52D No. 9 Benfield double-grooved bender for $\frac{1}{2}$ – $\frac{3}{4}$ -in EMT and $\frac{1}{2}$ -in rigid conduit. Note that the handle has a weatherproof Zip Guide plus an expanded end permitting its use as a stub straightener. [Jack Benfield, patent holder]

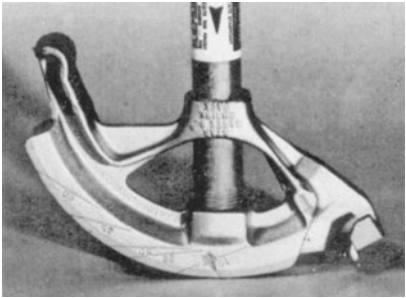


FIGURE 9.52E Model No. 16 series especially designed for rigid steel conduit and Type IMC (intermediate metal conduit). It is heavier throughout than EMT benders and made to bend to the minimum radius that the National Electrical Code allows. [Jack Benfield, patent holder]

aluminum rigid conduit. Larger models bend both rigid conduit and IMC in the $\frac{3}{4}$ - and 1-in sizes. The No. 16 series tools are not suitable for bending EMT.

Figure 9.52F, the Benfield Zip Guide, is an on-the-handle reference that speeds the work. This precalculated table for spacing between bends is accurate for any make of bender, whether hand-type, mechanical, or hydraulic. Zip Guides are a definite aid for the electrician.

The Benfield No. 7 one-shot hickey (Fig. 9.52G) bends $\frac{1}{2}$ - and $\frac{3}{4}$ -in rigid or IMC conduit. Model No. 8 bends 1- or 1 $\frac{1}{4}$ -in rigid or IMC conduit. The unbreakable plumb bob swings free on a stainless-steel bolt as a constant degree-of-angle indicator. (Two shots are required for the No. 8 model.) Multiple shots may be used on both models for larger radii and concentric bending.

The Benfield No. 10 series stubber-hickey line (Fig. 9.52H) is unique. These tools are inch-along short-radius hickies that bend *both* EMT and rigid or IMC conduit: No. 10 for

factory-engineered ready for use. They are marketed complete with an applied mylar-coated weatherproof bumper-sticker-type Zip Guide to give the operator basic bending allowances at the point of use.

Relatively new to the industry is Type IMC (intermediate metal conduit). To provide the right NEC radii for IMC, a series of Benfield benders is marketed. These models bend all three types: rigid steel conduit, rigid aluminum conduit, and IMC intermediate metal conduit. Figure 9.52E, Benfield Model No. 16, shows an extra-heavy beefed-up hook plus extra-rugged sections throughout to withstand the rigors of bending rigid conduit and Type IMC conduit to the correct NEC radius. The No. 16 bends three conduit types: $\frac{1}{2}$ -in rigid steel, $\frac{1}{2}$ -in IMC, and $\frac{1}{2}$ -in

BENFIELD®
"DEGREE SCALE"
BENDERS
Patented U. S. A.—Canada

90° STUB LENGTHS
USE ARROW
AS YOUR
BENCHMARK.
SEE THE BENFIELD
BENDER ITSELF FOR
TOOL TAKE-UP (INCHES)

NOTE RIM NOTCHES OR TEAR
DROPS INDICATE SADDLE CENTER
OR CENTER OF A 45° BEND

BENFIELD® IS A REGISTERED
TRADEMARK OF
KLEIN TOOLS, INC.

ZIP GUIDE®
FOR OFFSETS

OFFSET DEPTH INCHES	DISTANCE BETWEEN BENDS	ANGLE OF BENDS	CONDUIT SHORTENS
1	6	10°	$\frac{1}{16}$
2	5 $\frac{1}{4}$	22 $\frac{1}{2}$ °	$\frac{3}{8}$
3	6	30°	$\frac{3}{4}$
4	8	30°	1
5	7	45°	1 $\frac{1}{8}$
6	8 $\frac{1}{2}$	45°	2 $\frac{1}{4}$
7	9 $\frac{3}{4}$	45°	2 $\frac{3}{4}$
8	11 $\frac{1}{4}$	45°	3
9	12 $\frac{1}{2}$	45°	3 $\frac{3}{4}$
10	14	45°	3 $\frac{3}{4}$

START BENDS AT ARROW ON TOOL

NOTE: ON FLOOR BENDS
A VERTICAL HANDLE
INDICATES A 30° BEND.

**BACK-TO-BACK
BENDS**
LOCATE STARPOINT

OPPOSITE THE FINISH LINE
DESIRED — THE STARPOINT
FORETELLS WHERE BACK OF
THE BEND WILL LAY.

Better Bending Inst. Kits
"Back Pocket Bending Buddy"
Includes: 24 pg. Bklt. . . . W.P.
Mylar Zip-Guide . . . Offset
Formula Wallet Card
Jack Benfield
P.O. Box 2735
Delray Beach, FL 33447 U.S.A.
1-800-468-8988

FIGURE 9.52F A weatherproof Zip Guide label for any bender or hickey handle invites precision bending at the point of use. [Jack Benfield, patent holder]

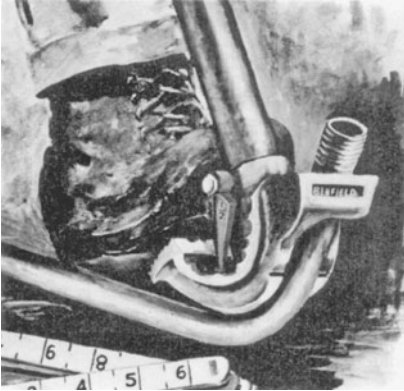


FIGURE 9.52G Action photograph of the Benfield one-shot Model no. 7 hickey for rigid or IMC conduit. It is not suitable for EMT. [Jack Benfield, patent holder]

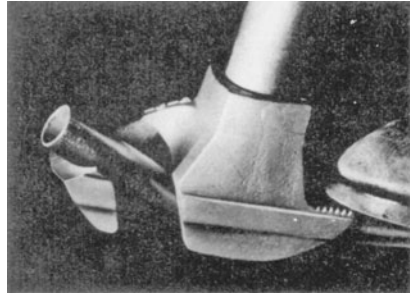


FIGURE 9.52H Benfield inch-along short-radius hickey. Model No. 10 series. It has a pedal and arrow symbol to control the distance between bites and thereby varies the bending radius for concentric conduit runs. [Jack Benfield, patent holder]

$\frac{1}{2}$ -in EMT only, No. 11 for $\frac{1}{2}$ -in rigid IMC or $\frac{3}{4}$ -in EMT, No. 12 for $\frac{3}{4}$ -in rigid IMC or 1-in EMT, and No. 13 for 1-in rigid IMC or $1\frac{1}{4}$ -in EMT.

These Benfield tools are available from wholesale electrical distributors throughout the United States and Canada. A 24-page basic training guide kit for any make of bender or hickey (whether hand type, ratchet type, hydraulic, or electrically powered) is available from Jack Benfield, P.O. Box 2735, Delray Beach, Florida 33447. This training kit dubbed in the trade “Back Pocket Bending Buddy” includes the booklet, a Zip-Guide 9-52E for the bender handle, and a wallet size offset-formula card. It is refreshingly nontechnical, replete with crystal clear diagrams and simple formulas for making stub-ups, back-to-band bends, offsets, concentric bends, and crossover saddles.

Benfield benders are produced in the United States by Klein Tools, Inc., of Chicago, Illinois. Klein Tools, Inc., franchises other manufacturers to market Benfield benders as follows:

1. Appleton Electric Company, Chicago, Illinois 60657
2. Klein Tools, Inc., Chicago, Illinois 60645
3. The Wiremold Company, West Hartford, Connecticut 06110
4. Appleton Electric Ltd., Cambridge, Ontario, Canada N3H 2N1

SURFACE METAL MOLDING BENDERS The Wiremold Benfield catalog No. 600-B (Fig. 9.52I) is a one-sweep bender with no moving parts. It makes 90° bends, offsets, and saddles in both No. 500 and No. 700 Wiremold surface metal raceway. The bender makes smooth sweeps flange-in or flange-out. An adapter that snaps into the bender groove is used to bend No. 200 Wiremold.

NOTE This tool will not bend this rectangular raceway *sideways*. To make sideways turns fittings must be used. Two separate degree scales are cast into the tool, one scale for No. 500 and the other for No. 700 Wiremold. Painted symbols serve as benchmarks to enable the operator to make precision bends as with EMT benders (Fig. 9.52I, and H). The 600-B comes complete with a two-piece handle of $\frac{3}{4}$ -in IPS coupled in the center (Fig. 9.52K). Applied to the handle is a weatherproof 3-in-by-6-in Zip-Guide instruction label, a basic reference at point of use.

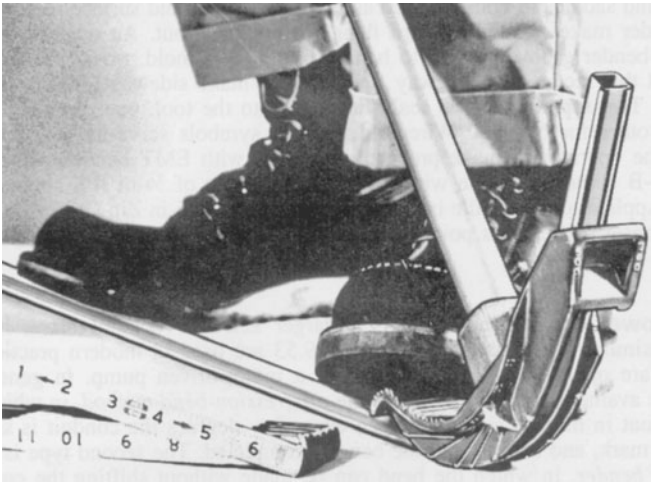


FIGURE 9.52I Action view.

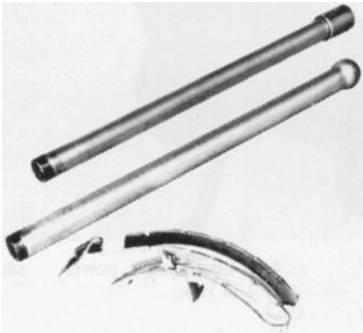


FIGURE 9.52J Top view.



FIGURE 9.52K Side view with two-piece handle.

115. Power conduit benders. For larger EMT or conduit sizes, hydraulic benders similar to the one shown in Fig. 9.53 are used in modern practice. Such benders are operated by a hand pump or a motor-driven pump. In general, two types are available. One type utilizes the *progression-bend method*, in which bends are laid out in marked spacings. Then every few degrees the conduit is shifted to the next mark, and so on, until the bend is completed. The second type is called a *one-shot bender*, in which the bend can be made without shifting the conduit. A 90° bend made with a one-shot bender provides a radius about the size of a standard factory elbow. Various shoes are available for different EMT and conduit sizes and for different sweep sizes. Information on the proper use of hydraulic benders is available from manufacturers of such equipment, and their instruction books should be followed to obtain precision bends.

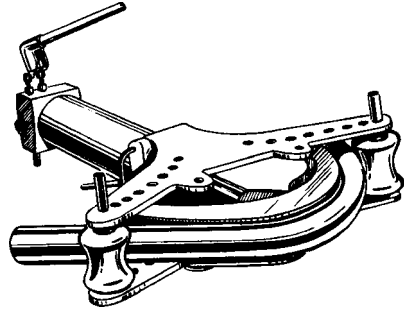


FIGURE 9.53 Hydraulic conduit bender.

Figure 9.54A shows a Condumatic power bender for making precision bends with 1/2-, 3/4-, and 1-in rigid conduit. This motor-operated tool is extremely useful on large construction jobs for which many repetitive bends are required. The Greenlee power bender shown in Fig. 9.54B bends 1/2- through 2-in conduit or EMT.

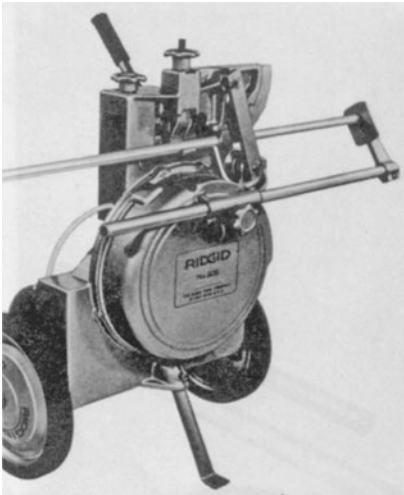


FIGURE 9.54A Condumatic power bender for 1/2-, 3/4-, and 1-in rigid metal conduit. [The Ridge Tool Co.]



FIGURE 9.54B A power bender provides 90° bends for 1/2" to 2" EMT, IMC, or rigid conduit. [Greenlee Textron, Inc.]

116. A hydraulic pipe pusher is used for underground installations of rigid metal conduit. The pusher eliminates tedious trenching operations. The conduit, which must be equipped with a cap or point, is driven through the ground laterally. A common application is under streets or roadways.

Pipe pushers can be operated at different pressures, depending on the conduit size and the type of ground through which the conduit is driven. Standard pipe pushers permit pushes up to 7 ft (2.1 m) without the pipe clamp being changed.

117. Cable pullers and wire reels (Fig. 9.55) are used for the installation of larger conductor sizes. Both are extremely useful on larger installations and save a great deal of time and labor. Multiple wire reels are also useful when a large number of small conductors are to be pulled into a single conduit. Figure 9.56 shows an electric-motor-operated cable puller which is also helpful in pulling in conductors with minimum effort.

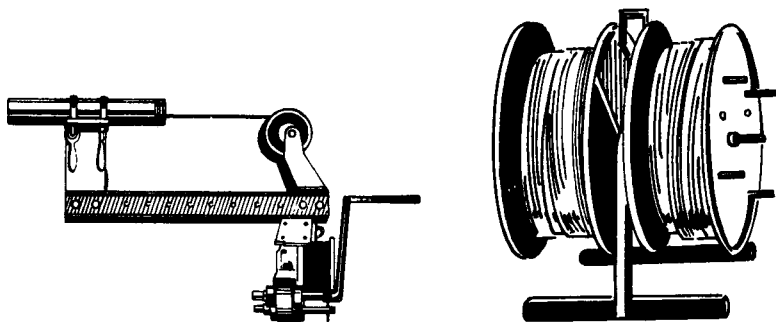


FIGURE 9.55 Hand-crank-operated cable pullet and wire reel.

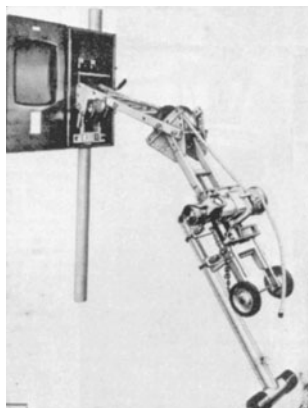


FIGURE 9.56 Motor-operated cable puller. [Enerpac]

118. Threading conduit. Dies for threading conduit are designed to produce a taper of $\frac{3}{4}$ in. (19 mm)/ft as described in Sec. 82. It is usual practice when a lot of conduit is received to rethread all the ends, which may have become filled with paint or dirt or distorted by blows. Rethreading will save more than its cost in that it ensures rapid erection. Always reream conduit after cutting a thread on it. Pipe-threading machines for threading conduit, preferably those operated by motors, should be used on big jobs, as they will soon pay for themselves in the time that they save.

119. Wrenches for turning conduit. The form of wrench shown in Fig. 9.57, I, appears to be the most popular for turning conduit. Chain wrenches (II) are not as yet much used for conduit work, but when they have been tried, they have proved very satisfactory. Their advantages are that they can be used with one hand after

the chain is around the conduit and that they can be used in confined places and close to walls where a Stilson wrench could not be utilized.

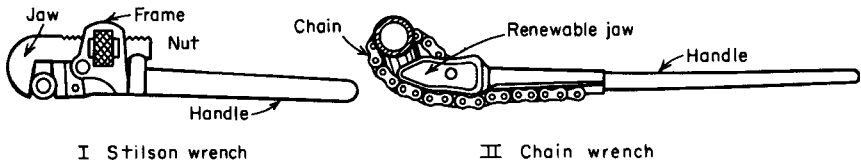


FIGURE 9.57 Wrenches for conduit.

120. Conduit ends should always be reamed. A reamer like that of Fig. 9.58 which can be turned by a bit brace is a good tool for small and medium-size conduit. For conduit of the larger sizes, reamers which have long handles attached, giving the needed leverage can be obtained. When conduit is received and after it is cut, the ends are frequently turned in (Fig. 9.59, I) and, when screwed together in a coupling, form a knife-like edge which will abrade insulation. When the ends are properly reamed, they appear as shown in Fig. 9.59, II, but if they are screwed together too tightly, they may turn up as at I, defeating the purpose that reaming should accomplish. If no other tool is available, conduit can be reamed by hand with a half-round file.

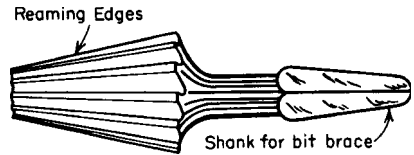


FIGURE 9.58 A bit-brace reamer.

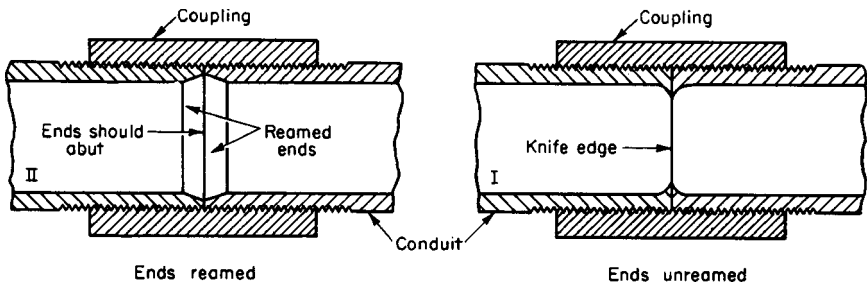


FIGURE 9.59 Reamed and unreamed conduit ends.

121. The usual tool for cutting conduit is a hacksaw. Pipe cutters should not be used because they leave a large burr on the inside of the conduit, which takes time to ream out. While the conduit is being cut, it should be held in a vise. On jobs with a great deal of conduit to cut, the installation of a motor-driven cold-cutoff saw, such as is used for cutting structural steel and rails, will prove economical. A rapidly rotating steel disk without teeth cuts the pipe. Water must be sprayed on the disk to keep it cool. Other types of power saws are available, including portable band saws that will cut up to trade size 4 conduits.

122. Fishing wire is tempered-steel wire of rectangular cross section. It can be readily obtained at electrical supply houses. A fishing wire is sometimes termed a *snake* (see Table 126 and Fig. 9.60). So that a fishing wire will slide




FIGURE 9.60 Steel fishing wire.

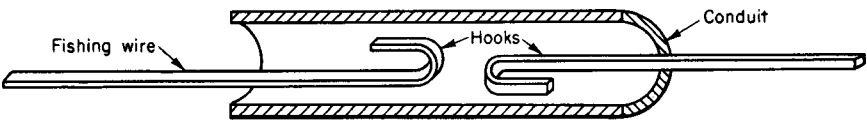


FIGURE 9.61 Hooks bent in fishing-wire ends.

readily past small obstructions, hooks should be bent in its ends as shown in Fig. 9.61. Before being bent, the ends should be annealed by heating them to a red heat and allowing them to cool slowly. If a small brass knob is riveted to the end of a fishing wire (Fig. 9.62) instead of a hook, the wire can be pushed through conduit more easily. When fishing is difficult, it is sometimes necessary to push two snakes with hook ends into the wireway, one from each of the outlets, as shown in Fig. 9.61. The wires must be worked back and forth and twisted around until the two hooked ends engage. Then one wire can be pulled into the raceway with the other.

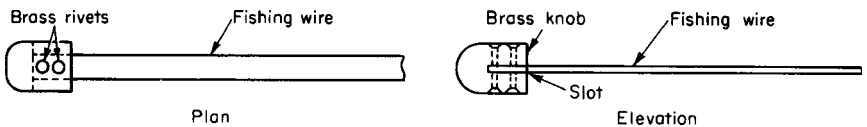


FIGURE 9.62 Knob on the end of fishing wire.

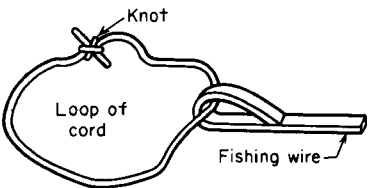


FIGURE 9.63 Cord loop on the end of fishing wire.

123. When fishing from two ends, as in Fig. 9.61, it is often advisable to tie a loop of cord, possibly 1 ft (0.3 m) long, in the hook of one wire and bend down the hook (Fig. 9.63). The other wire has an open hook which can be made to engage in the cord loop quite readily. It has been found that a fish wire will go through conduit more readily if prepared as in Fig. 9.64, by loosely winding the end with small wire or cord, so that the wire or cord cannot pull off.

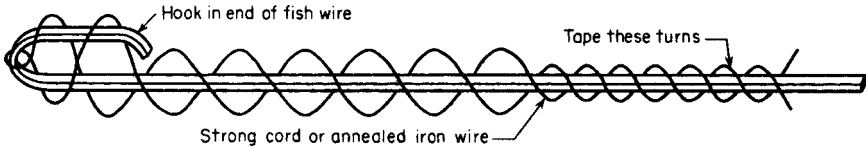


FIGURE 9.64 Fish-wire end prepared with cord.

124. Chain is used for vertical fishing. A small chain can be made to drop down a vertical wireway with little difficulty. Within a partition, the noise made by the lower end of a chain that is jiggled up and down will disclose its location almost exactly.

125. Galvanized-steel wire can be used for fishing. Any size from No. 14 up to, possibly, No. 6 may be utilized, but in nearly every case that flat steel ribbon wire is preferable.

126. Dimensions of Steel Fish Wire

Wire $\frac{1}{8}$ in. wide is the size most frequently used. The wire is usually put up in coils of 50, 75, 100, 150, and 200 ft, and in some cases 240 ft (15.2, 22.9, 30.5, 45.7, and 61 m, and sometimes 130 m).

W, width, in	T, thickness, in	Weight per 100 ft
$\frac{1}{8}$	0.015	11 oz
$\frac{1}{8}$	0.030	1 lb 4 oz
$\frac{3}{16}$	0.030	1 lb 14 oz
$\frac{1}{4}$	0.030	2 lb 8 oz
$\frac{5}{16}$	0.035	3 lb 8 oz
$\frac{3}{8}$	0.035	3 lb 12 oz

127. In drawing wire into conduit it is a mistake to use so much force that the wire cannot be withdrawn. Conduits should be big enough so that excessive force is not necessary. Small conductors (14 and 12 AWG) can be pulled in with the fish wire. Figure 9.65 shows how they can be attached to the fish wire, and Fig. 9.66 shows how the attachment should be served with tape to render pulling easy. It spoils any fishing wire to draw in with its conductors that pull hard.




FIGURE 9.65 Attachment of stranded conductor to fishing line.




FIGURE 9.66 Attachment taped over.

For conductors larger than 14 and 12 AWG, unless the pulls are very easy, a pulling-in line which is drawn into the conduit with the fish wire should be used for hauling in the conductors. Number 10 or 12 Birmingham wire gage galvanized-steel wire makes a good pulling-in line and is probably better for heavy work than rope. Two strands can be used if necessary. Braided cord is better than twisted rope for a pulling-in line, because when tension is applied, rope tends to untwist. Sash cord is satisfactory for light work. Galvanized-steel pulling-in wire can be attached to fish wire as in Fig. 9.67. Nylon rope, attached to a foam piston or even an improvised parachute made from a plastic bag and a rag filler, and blown into conduits by a Jet-Line tool, is also recommended. A Kevlar measuring tape is available for this purpose that has measurements every foot marked on it, so the total length of pull can be anticipated exactly.

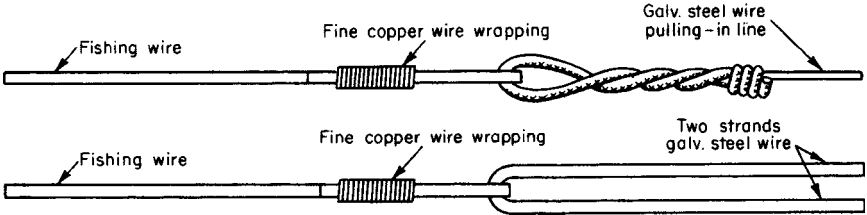


FIGURE 9.67 Attachment of pulling-in line to fish wire.

Three or four links from a chain of no greater diameter than the line should be made up in the end of a rope or cord pulling-in line. Wires to be drawn in or a fish line can be attached to the links (Fig. 9.68). One stranded conductor can be attached to a pulling-in line as in Fig. 9.69. The attachment should be taped over to make it smooth. If two conductors are to be pulled in, one of them is made up into a loop in the end of the pulling-in line, as shown in Fig. 9.69. The insulation is trimmed from this conductor for 6 in. (152.4 mm) or more, and the bared end of the other conductor is made up about the first one, forming a long, tapering connection. If a hard pull is expected, it is advisable to solder the connection. The whole should be served with tape as in Fig. 9.66. If three wires are to be drawn in instead of two, the attachment is the same, with the addition that the bared end of the third conductor is made up around the other two. The diameter at any section of the attachment must not exceed the overall diameter of the wires, and the attachment should be in the form of a conical wedge. It is sometimes necessary to cut off possibly half of the strands of the bared ends and make up only the strands that remain to ensure that the attachment will be of sufficiently small diameter. A flexible-metal basket grip (Fig. 9.70), available in many sizes, is also recommended. The weblike grip slips over the ends of cables, and when tension is applied, the grip tightens and the conductors are firmly secured.

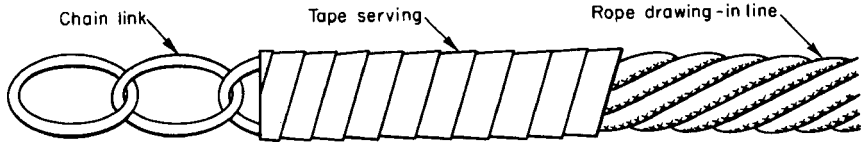


FIGURE 9.68 Chain links in the end of pulling-in line.

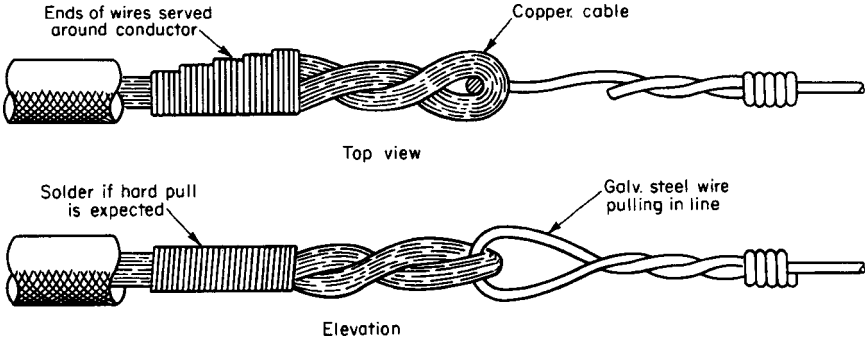


FIGURE 9.69 Attachment of stranded conductor to pull-in line.

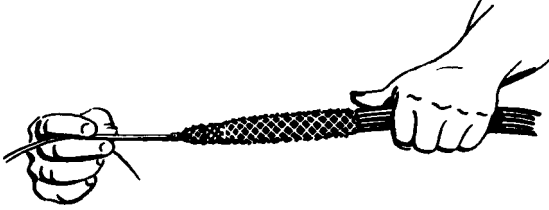


FIGURE 9.70 Metal basket grip.

128. Force for pulling-in wires is, in the case of easy pulls, supplied by the worker. Tackle blocks are permissible for heavy pulls. Cranes can often be used very effectively. Snatch blocks can be used to guide the pulling-in line to some point at which it can be pulled either with the crane hook or by the crane in traveling along its runway. A lever can be used for hard pulls either by repeatedly fastening the pulling-in line to the lever or by gripping it with a pair of pliers and then prying against the pliers with the lever. Only a short pull is possible with each setting, a succession of settings and pries is necessary to draw the conductors in.

129. In feeding conductors into conduit, care must be taken that they go in symmetrically and without lapping or twisting. If one conductor crosses another, it may make a hump that will wedge in the conduit. Liquid paste, commonly known as *wire lube*, is widely used in modern cable-pulling operations. Although in a paste form during cable pulls, the substance dries into a powder form, which aids in withdrawing conductors later on. Newer versions are carefully formulated with water and polymers and do a much better job of reducing friction than previous products.

130. Pulling methods for nonmetallic raceways. Careful consideration must be used both during the design process and while setting up a pull in order to assure that the pulling method will not saw through the inner radius of a sweep. For steel raceways, this is not a major concern, but for nonmetallic raceways it can be very difficult. Some pulling winches use steel aircraft cable that will make short work of a nonmetallic elbow, especially if it is heavily loaded. For this reason, some wiring designs place steel conduit elbows in the middle of nonmetallic conduit runs.

This solves the pulling problem, but raises another issue because normally metal conduits have to be bonded to the equipment grounding conductor that runs with the circuit conductors (in the case of a service, to the grounded circuit conductor). This may be difficult to arrange in the field, particularly where the elbow will not be accessible. On an outdoor pole, the NEC makes an exception to the normal 6-ft (1.8 m) limit on these bonding conductors so the bonding conductor can continue up the pole and connect at the top of the riser. The NEC waives the bonding rule entirely if the elbow is buried so deep that the end nearest to the top of grade is still buried 18 in. (450 mm), or if the steel sweep is encased in not less than 2 in. (50 mm) of concrete.

If the steel sweep approach is impracticable another option is to pay close attention to the pull rope. A polypropylene rope will burn through the inner radius of a PVC sweep in a little over a minute under heavy pulling forces. On the other hand, a braided polyester rope will perform far better, and more than one manufacturer has taken this idea a step further by taking the braided polyester and forming it into a flat tape that distributes the pulling friction over a wide area. Studies have shown that this extends the burn-through time by about two orders of magnitude, such that what would burn through with polypropylene in about 1½ min would take over 2½ h under the same pulling conditions with the flat tape. The tape is available in different sizes with ratings up to 6000 lb.

CABLE PULLING CALCULATIONS FOR RACEWAYS

131. Raceways must be proofed and conductors must be sized and coordinated so conductor insulation is not damaged during installation, by NEC rules. Statistics have shown that over 90 percent of failures to medium-voltage conductors in raceways stem from faulty installation practice during the process of pulling the conductors into the raceway. Statistics aren't available for lower voltage applications, but undoubtedly a large percentage of failures at these voltages have a similar cause. Often these failures don't show up for years, making it difficult to assign blame. It is very important to understand the factors that go into a successful installation that does not over-stress the insulation.

The first step is to always *proof the raceway* by running equipment like that illustrated in Fig. 8.106 through it, so it will be clean and there will be no unexpected blockages. The force applied during cable pulling is primarily to overcome oppositional frictional forces, and therefore most of the cable-pulling calculations address the sources of the friction. However, raceway runs almost invariably involve bends. When cables move through a bend on a major pull, the pulling force on their leading end combined with the frictional forces behind the bend, including forces imposed by any prior bends, subject the insulation to enormous crushing forces. This crushing force is the *sidewall bearing pressure*, and it is a major factor in designing cable pulls. What follows are a series of calculations, all of which must be factored into the pulling analysis.

132. Start with the force required to unwind the reel. It requires force to unwind cable from a coiled orientation to straight as it enters the raceway, and there are also frictional forces in play as the reel turns over the support rollers or pay-off axle. A conservative value for this is $T_{in} = 25 \times W$ where T_{in} is the tension applied on the cable entering the raceway, and W is the weight of the cable per foot. If there are multiple reels, the usual case, then multiply this number by the number of reels.

133. Now Analyze the Frictional Forces in the Raceway. The calculations that follow use terms defined in the following table:





Defined term	Definition
D	Inner diameter of the raceway, in inches
d	Outer diameter of one conductor (or cable assembly), in inches
T_{in}	Pulling tension into a specified section of the run, in pounds
T_{out}	Pulling tension out of a specified section of the run, in pounds
ω	Weight correction factor (dimensionless)
μ	Coefficient of dynamic friction (dimensionless)
W	Total weight of cables (or cable assembly) being pulled, in pounds/ft
L	Length of straight section, in feet
θ	Rise or fall angle of straight section from horizontal
φ	Angle of bend, in radians ($360^\circ = 2\pi$ radians; $90^\circ = 1.57$ radians, etc.)
R	Bend radius measured to inner wall, in feet
e	Base for natural logarithms, a mathematical constant ≈ 2.72
SP	Sidewall pressure in pounds/ft

The coefficient of dynamic friction (μ) is the first and most important variable. It is important to remember that dynamic frictional coefficients are always smaller than static coefficients. In simpler words, it takes more force to break free a load at rest than to keep it moving once it is in motion. This is why cable pullers designed for the purpose keep the cable moving once the pull has begun, and why ad hoc methods like tractors, etc., that could allow the pull to stop and start are problematic. Major pulls involve forces on the order of 10,000 lb. An interrupted pull can easily result in a failed pull, because the increased force required to break the cable free may exceed the ratings of the pulling eyes, etc.

This coefficient can range from 0.1 to 1.0, or even higher for unlubricated runs. Many texts advise using a factor of 0.5 for lubricated work, and this analysis will start with this number as well. However, some modern cable lubricants, if properly applied, produce much lower coefficients. In addition, a major wire and cable manufacturer now has a pre-lubricated line of THHN/THWN conductors that have theoretical coefficients as low as 0.15 and has published data suggesting that a coefficient of 0.28 in steel and 0.24 in PVC is actually conservative for their product.

134. How the conductors arrange themselves in the raceway makes a difference. For these purposes there are four arrangements to consider, as shown in the table below. The first case is the trivial example of one cable in a raceway, and there is no correction factor required for this case. However, for all other cases because the friction is not equally distributed across all conductors, a correction factor must be applied in order for the force to be calculated correctly, as shown in the following table:

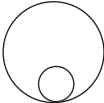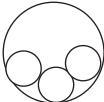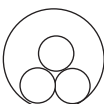Weight Correction Factor Calculations

Number of conductors	Configuration	Formula	Drawing
1	Single	$\omega = 1$	
3	Cradled	$\omega = 1 + \frac{4}{3} \left[\frac{d}{D-d} \right]^2$	
3 (use for 2 also)	Triangular	$\omega = \frac{1}{\sqrt{1 - \left[\frac{d}{(D-d)} \right]^2}}$	
4 (use for 4 or more)	Diamond	$\omega = 1 + 2 \left[\frac{d}{(D-d)} \right]^2$	

The configuration generally follows from the conduit to cable diameter ratio (D/d ratio). The triangular configuration can always be used if the D/d ratio is less than 2.5. If the ratio runs from 2.5 to 3.0, the cables could lay either way and the cradled result should be used because it is conservative. For three conductors installed to NEC requirements, it can be demonstrated geometrically that the D/d ratio under worst case fill condition will be 2.65, so a cradled configuration will be the norm for applications covered here. If the ratio is above 3.0, the cradled configuration will almost certainly be the result. On the other hand, if the cable pull involves triplexed or quadruplexed assemblies, then the configuration follows the combined cable orientation for obvious reasons. For four cables, the diamond configuration will result in most cases where the D/d ratio is less than 3.0; otherwise the cradled configuration is likely. Here again, geometric analysis shows that the worst-case fill on an NEC compliant installation with four conductors will result in a D/d ratio of 3.08, so a cradled configuration will usually result unless the conductors are quadruplexed.

135. The required pulling force for straight sections of raceway can now be determined. There are several possibilities, as follows:

- For horizontal straight sections, $T_{out} = \omega\mu WL + T_{in}$
- For inclined straight sections, $T_{out} = \pm WL (\sin \theta \pm \omega\mu \cos \theta) + T_{in}$ where the “ \pm ” symbol is “+” for rising pulls and “-” for descending pulls.
- For vertical applications same formula applies, however for these 90° angles the term “ $\sin \theta$ ” is 1 and “ $\cos \theta$ ” is 0, so for a *straight up portion* of the pull the *tension added* is WL , and for a *straight down portion* the *tension subtracted* is WL .

136. Raceway bends add significant friction, as follows. Exact bend calculations involve hyperbolic trigonometric functions and are extremely complex, especially where the bends are inclined and the effects of gravity enter the picture. Fortunately there is a relatively simple approximation that is sufficiently accurate for this work. The approximate effect of friction contributed by a bend is:

$$T_{out} = T_{in} \times e^{\omega\mu\varphi}$$

137. How to handle natural logarithms and exponents. This type of mathematical expression will not be familiar to many of the users of this handbook. A logarithm of any number is the exponent, or power, to which a base number must be raised to give the first number. For example, the logarithm of 100 to base 10 is 2, because the base number, 10, raised to the second power is 100. Of course most logarithms don’t work out to be simple numbers. The base number 10 raised to the 0.30103 power is 2.0, etc., which means that the logarithm of 2.0, (written $\log_{10} 2.0$) using base 10, is 0.30103.

The base number used in higher mathematics, given the designation “e” is derived from an evaluation of a certain area under a unit hyperbolic function using calculus. Its value has no perfect decimal representation, but it is approximately 2.72. This number turns out to be extremely useful as a base for logarithms in scientific work, and it also turns out to be essential in making pull calculations. Logarithms using this base are referred to as natural logarithms, and solutions for them are programmed into all scientific calculators. The usual designation for a natural logarithm is “ln.” For example “e” raised to the 0.69315 power is 2.0, so that is the natural logarithm of 2.0, written $\ln 2 = 0.69315$. The process can also be

inverted. Instead of finding the logarithm of a known number, if we know the base and the logarithm, the subject number can also be found. The pull calculation for a bend is exactly this type of work.

The formula gives the tension out of a pull (T_{out}) by multiplying the incoming tension (T_{in}) by a number we will refer to as the *bend multiplier*. This number is “e” raised to a power, specifically the weight correction factor (ω) \times the coefficient of friction (μ) \times the angle of the bend in radians (φ). Radians are routinely used in higher mathematics, and unlike degree measurements, radians measure angles in terms of π . Specifically, a semi-circle of 180° contains 3.14159 (π) radians. Therefore a 90° angle contains half that amount, or 1.57 radians, and a 45° angle contains one quarter that amount, or 0.785 radians.

138. Putting it all together. First calculate the exponent in the formula by simply multiplying three numbers together (ω) \times (μ) \times (φ). This number is the natural logarithm of the bend multiplier, and we need to know what the bend multiplier actually is. To find this number, use the *inversion* of the process that finds a logarithm of a known number. The easy way to do this is to use a scientific calculator. They are commonly available, and one is built into most computer operating systems. Start the calculator, complete the multiplication ($\omega \times \mu \times \varphi$), select the *invert* key or checkbox (usually “INV”), and hit the natural logarithm button (usually “ln”). The result will be the bend multiplier. This result multiplied by the tension just before the bend (T_{in}) will give the tension out of the bend (T_{out}).

This and all prior calculations generate the maximum force that must be applied by the end of the pull in order to complete the work. This will determine what form of pulling attachment is required, and whether the tensile strength of the conductors will stand up to the force, or whether the pull must be reengineered in terms of lubricant selected, or intermediate pull points provided. However, the bend calculations must be carefully recorded, at each stage in the pull, and the tension required (per these calculations) to be applied at the “out” side of each bend must be noted. This allows for the next set of calculations (below) to be performed.

139. Sidewall bearing pressure must be separately evaluated. Every time conductors are drawn through a bend, their insulation is compressed against the inner radius of the bend. The amount of force must not exceed the ability of the insulation to stand up to the pressure. Medium-voltage shielded cables are particularly vulnerable because if the shielding is permanently distorted, there may be a discontinuity that has no stress relief and results in a corona discharge under the outer jacket. If this occurs, the life of the cable will be dramatically curtailed. If the failure occurs within a raceway, the eventual fault will probably be sufficiently destructive to require the raceway to be replaced. Even 600 V applications, however, are susceptible to damage and must take sidewall pressure into account if the anticipated pulling force gets into the four figure range. The actual calculations must be done for each bend, based on the cable configuration and applicable out-of-bend tension, according to the following table:

Determination of Sidewall Bearing Pressure

Number of conductors	Configuration	Formula
1	Single	$SP = \frac{T_{out}}{R}$
3	Cradled	$SP = \frac{(3\omega - 2) \times T_{out}}{3R}$
3 (use for 2 also)	Triangular	$SP = \frac{\omega \times T_{out}}{2R}$
4 (use for 4 or more)	Diamond	$SP = \frac{(\omega - 1) \times T_{out}}{R}$

In each case the table provides a result in the form of pounds of force per foot of bend radius. Frequently the sidewall bearing pressure will be more of a limiting factor than the pulling force limitations. The table below shows acceptable sidewall pressures from a variety of industry sources, including recent research on nylon-jacketed PVC-insulated 600 V conductors (THHN/THWN). Some of these values are higher than those published years ago and reflect current research.

Sidewall Bearing Pressure (SWBP) Limits, by Conductor Type

Cable type	Max. SWBP (lb/ft)
600 V Nonshielded control cable, Type TC	300
600 V Nonshielded power cable, Types THHN, THWN, USE, RHW	1000
600 V XLPE power cable, Type XHHW	1000
PE and XLPE Type MV with concentric wire shield:	
without jacket	1200*
with encapsulated jacket	2000
PE and XLPE insulation, LC shield, LDPE jacket	1500
PE, XLPE, EPR insulation, concentric wire or tape shield	
LDPE and PVC sleeved jackets	2000†
Lead sheathed cable with and without jackets:	
XLPE insulation	2000
EPR insulation	2000
XLPE insulation, copper ribbon shield, MDPE sleeved jacket	2000

*For a pull of three single-conductor cables in the same raceway, a maximum of 750 lb/ft is recommended.
†The recommended SWBP limit should be reduced to 1500 lb/ft where the jacket is not applied tightly to the cable core.

140. Internal clearance may need consideration. Some pulling analyses suggest a review of the internal headroom, for other than cradled configurations, between the top of the conductors pulled in and the upper wall of the raceway to assure at least 1/4-in headroom on straight pulls and from 1/2- to 1-in headroom where pulling through bends. It can be shown geometrically that any cable installation that complies with NEC fill limits will necessarily exceed a cable diameter in headroom. Since this analysis presumes NEC compliance, this issue is not considered further here. It may arise in some power-limited applications for which customary fill limits have no safety implication. The question usually arises for utility installations that substantially exceed NEC fill limitations.

141. The tensile strength of the cable assembly cannot be exceeded. If a pulling basket is used, any pulling forces above 1000 lb require careful review of the manufacturer's data regarding the particular basket proposed. Therefore, if a basket will be used, the strength that can be applied is quite simply the rating of the basket. Although there are published ratings for insulation withstand to basket pulls, in general these values exceed the sidewall withstand numbers. Therefore, if the sidewall calculations have been done and the pull will satisfy the sidewall pressure ratings, go ahead and look for a basket of comparable strength.

142. Baskets are often used for lead-covered cables, and there is a special calculation that applies in these cases. The allowable applied force to a lead cable sheath has been found to be 1500 lb/square inch of sheath cross section. Since a sheath t inches thick and D inches outer diameter has an average circumference of $\pi(D - t)$, the sheath cross section will be a hollow cylinder with a total cross-sectional area equal to $\pi(D - t)t$. If the dimensions are in inches, the allowable force on a lead sheath of diameter D and thickness t will be:

$$T = 1500\pi t(D - t) = 4712t(D - t)$$

143. The conductor material itself is the ultimate test of strength in a power cable pull. If a basket will not work, look to the conductor. The allowable tension that can be applied to a copper conductor is related directly to its cross-sectional area "A". If that area is given in circular mills, the relation is as follows:

$$T = 0.008 \times A \text{ (in circular mills)}$$

Some hard-drawn aluminum alloys equal this strength, but since the NEC mandates the use of an AA-8000 series of alloy for almost all 600 V and lower applications, the constant for this alloy (0.006) is the one usually applicable. As a good example of these calculations at work, a 500 kcmil XHHW copper 600 V conductor will safely withstand $500,000 \times 0.008 = 4000$ lb of tension. Multiply this result by the number of cables that *will be providing the resistance to the forward progress of the pull*. In the case of a cradled configuration of three conductors, this will be all of three, but if the configuration will be triangular, only two will be in contact with the raceway surface and that will be the multiplier. In the case of a diamond pull of four conductors, use 60 percent of the entire group of conductors, or 2.4 times the result for a single conductor. This adequately allows for a disproportionate amount of force ending up on a few conductors, and applies to pulls with even higher numbers of conductors as well. Take care to compare such a result with the rating on the pulling eye; the maximum force will be the lesser of the two values.

Note that the tensile strength of different sized conductors differs, for obvious reasons. Pulling different sized conductors into one raceway, particularly on very difficult pulls, is therefore problematic because the smaller conductors will break more easily. Such pulls should be approached very cautiously, and if possible, limited to the tensile strength of the smaller conductors. Note also that if it is necessary to cut some of the strands to seat a large conductor in the pulling eye, judge the allowable tensile strength on the basis of the remaining strands.

144. Example, Part I: This example works through a number of the practical problems that arise when laying out large pulls. Assume a 480Y/277 V 3-phase 4-wire 400 A

feeder with a full-size neutral will be run with 600 kcmil THHN copper conductors through the following trade size 3 EMT components using conventional lubrication:

- a. 10 ft up out of a switchboard
- b. Through a 90° sweep (standard size, C/L radius = 13 in.)
- c. Through a horizontal run of 300 ft
- d. Through another standard sweep turned upwards at a 45° angle to produce an offset
- e. Through a diagonal run of 10 ft
- f. Through a 45° sweep (standard size, C/L radius = 13 in.)
- g. Through a vertical run of 20 ft
- h. Through a final 90° sweep (standard size, C/L radius = 13 in.) ending directly at the back wall of a panelboard

Solution:

- (1) Assign a coefficient of friction; for these purposes use 0.5.
- (2) Determine the tensile strength of the conductors for pulling purposes. Each cable is good for $(0.008)(600,000) = 4800$ lb. There are four cables, taken at 60 percent: $4800(4)(0.6) = 11,520$ lb.
- (3) Look up the pulling capacity of the pulling eye and rope. For the purposes of this example, use 10,000 lb.
- (4) Determine the unit cable weight per foot. From the data sheets provided by the manufacturer, the wire weighs 1987 lb/1000 ft, so the unit weight will be 1.99 lb/ft. Four wires in the pull bring the total to 3.96 lb/ft.
- (5) Calculate the weight correction factor using the formula in the table, using the EMT and conductor diameters from Tables 4 and 5 of the NEC, as follows:

$$\omega = 1 + \frac{4}{3} \left[\frac{d}{(D - d)} \right]^2 = 1 + \frac{4}{3} \left[\frac{1.051}{(3.356 - 1.051)} \right]^2 = 1 + \frac{4}{3} (0.21) = 1.28$$

- (6) Using a scientific calculator, determine the *bend multiplier* for each angle in the pull. First multiply the weight correction factor by the friction coefficient by the bend angle in radians. In this case multiply the weight correction factor just calculated (1.28) by the coefficient of friction (0.5), and then by the bend angle in radians (1.57 for the 90° bends and 0.785 for the 45° bend). On a scientific calculator, enter these results one at a time (1.005 for the 90° bends and 0.502 for the 45° bend), activate the inversion key (or check box) and hit the “ln” button for each. The result will be 2.73 for the 90° bends, and 1.65 for the 45° bend.
- (7) Determine the radius of the inner walls of the bends. Working from published data for standard trade size 3 sweeps, the centerline radius is 13 in, so the inner radius will be $13.000 \text{ in.} - \frac{1}{2}(3.356 \text{ in.}) = 11.322 \text{ in.} = 0.94 \text{ ft}$ for all standard bends.
- (8) Move through the run, one segment at a time, as follows:
 - a. Reel unwind resistance for 4 reels, $25 \times 4 \times 3.96 = 396$ lb
 - b. 10 ft up, add $W \times L = 3.96 \times 10 = 40$ lb; $T_{out} = (396 + 40) = 436$ lb
 - c. First 90° sweep, $T_{out} = 436(\text{bend multiplier}) = 436(2.73) = 1190$ lb
 - d. 300-ft run, horizontal, $T_{out} = \omega \mu WL + 1190 \text{ lb} = (1.28)(0.5)(3.96)(300) + 1190 = 760 + 1190 = 1950$ lb
 - e. Second 90° sweep, $T_{out} = 1950(\text{bend multiplier}) = 1950(2.73) = 5324$ lb
 - f. 10-ft sloping run, 45° rising: $T_{out} = (3.96 \times 10)(\sin 45^\circ + \omega \mu \cos 45^\circ) + 5324 = 40(0.71 + 1.28 \times 0.5 \times 0.71) + 5324 = 47 + 5324 = 5371$ lb

- g. 45° sweep: $T_{out} = 5371(\text{bend multiplier}) = 5371(1.65) = 8862 \text{ lb}$
- h. 20 ft vertical: $W \times L = 3.96 \times 20 = 80 \text{ lb}$; $T_{out} = (8862 + 80) = 8942 \text{ lb}$
- i. Final 90° sweep, $T_{out} = 8942(\text{bend multiplier}) = 7714(2.73) = 24,412 \text{ lb}$

This result is unacceptable because neither the cables nor the pulling hardware would make it through the last bend.

145. Example, Part II: Assume the same layout as before, but as a solution to the previous result, make two key changes. First, reduce the coefficient of friction by using better quality lubrication or consider new formulations of THHN that are prelubricated from the factory, or both. Published data show that the coefficient of friction can be reduced below, often well below 0.30 by doing so. In this case, use the published value of 0.28. In addition, reverse the pull so it goes downhill and with the majority of the bends before the long horizontal run. As before, using a scientific calculator, determine the *bend multiplier* for each angle in the pull, beginning with the lower base factors corresponding to the improved lubrication. For the 90° bends the exponent is $(1.28 \times 0.28 \times 1.57 = 0.56)$ and for the 45° bend the exponent is $(1.28 \times 0.28 \times 0.785 = 0.28)$. With the inversion key activated, hitting the “ln” key for these numbers gives *bend multipliers* of 1.76 for the 90° bend and 1.32 for the 45° bend. The combined results are dramatically different, as follows:

- i. Reel unwind resistance, $25 \times 4 \times 3.96 = 396 \text{ lb}$
- h. 90° sweep: $T_{out} = 396(\text{bend multiplier}) = 396(1.76) = 697 \text{ lb}$
- g. 10 ft down, subtract $W \times L = 3.96 \times 10 = 40 \text{ lb}$; $T_{out} = (697 \times 40) = 657 \text{ lb}$
- f. 45° sweep: $T_{out} = 657(\text{bend multiplier}) = 657(1.32) = 867 \text{ lb}$
- e. 10-ft sloping run, 45° falling: $T_{out} = -(3.96 \times 10)(\sin 45^\circ - \omega \mu \cos 45^\circ) + 867 = -40(0.71 \times 1.28 \times 0.28 \times 0.71) + 8670 = -18 + 867 = 849 \text{ lb}$
- d. 90° sweep, $T_{out} = 849(\text{bend multiplier}) = 849(1.76) = 1494 \text{ lb}$
- c. 300-ft run, horizontal, $T_{out} = \omega \mu WL + 1494 \text{ lb} = (1.28)(0.28)(3.96)(300) + 1494 = 426 + 1494 = 1920 \text{ lb}$
- b. 90° sweep, $T_{out} = 1920(\text{bend multiplier}) = 1920(1.76) = 3379 \text{ lb}$
- a. 10 ft down, subtract $W \times L = 3.96 \times 10 = 40 \text{ lb}$; $T_{out} = (3379 \times 40) = 3339 \text{ lb}$

Both the cables and the hardware easily survive, but *sidewall bearing pressure* has yet to be evaluated and compared with the 1000 lb table limit for these conductors, as follows:

First (90°) sweep (now the initial, upper sweep):

$$SP = \frac{(3\omega - 2) \times T_{out}}{3R} = \frac{(3\omega - 2)}{3} \times \frac{T_{out}}{R} = \left(\omega - \frac{2}{3}\right) \frac{T_{out}}{R}$$

$$= (1.28 - 0.67) \frac{T_{out}}{R} = (0.61) \frac{T_{out}}{R} = (0.61) \frac{697}{0.94} = 452 \text{ lb}$$

The first bend is compliant; second (45°) sweep:

$$SP = \left(\omega - \frac{2}{3}\right) \frac{T_{out}}{R} = (0.61) \frac{T_{out}}{R} = (0.61) \frac{867}{0.94} = 563 \text{ lb}$$

The second bend is compliant; third (90°) sweep:

$$SP = \left(\omega - \frac{2}{3}\right) \frac{T_{out}}{R} = (0.61) \frac{T_{out}}{R} = (0.61) \frac{1494}{0.94} = 970 \text{ lb}$$

The third bend is compliant; fourth (90°) sweep:

$$SP = \left(\omega - \frac{2}{3} \right) \frac{T_{out}}{R} = (0.61) \frac{T_{out}}{R} = (0.61) \frac{3379}{0.94} = 3595 \text{ lb}$$

This final result is not acceptable because it far exceeds the sidewall tolerance for this type of conductor. However, a final 90° bend over a switchboard with 10 ft of headroom very likely has enough room for a larger radius sweep. A sweep with a 3-ft radius (center-line measurement, readily available, inner radius 34.322 in. or $2 + (10.322 \div 12) = 2.86$ ft) would solve the problem entirely, as follows:

$$SP = \left(\omega - \frac{2}{3} \right) \frac{T_{out}}{R} = (0.61) \frac{T_{out}}{R} = (0.61) \frac{3379}{2.86} = 721 \text{ lb}$$

146. Strategies to reduce pulling resistance. In general, if a calculation shows that a pull will be difficult or impossible, consider the following strategies:

Reverse the Pull. Every bend takes all prior resistance and multiplies it by an exponential factor, so it is often better to set the pull so most of the bends are at the front end. In addition, all things being equal, it is better to work with gravity instead of against it.

Decrease the Coefficient of Friction. This can involve a better selection of lubricant, or the use of different conductors, or both.

Increase the Radius of Bends. Although this will not change the tensile strength required to make the pull, it will dramatically reduce the sidewall pressure. The sidewall bearing pressure will be the limiting factor in many cases. Frequently the last bend will be the source of difficulty, and it may be in an accessible location where it could be changed.

Staff the Cable Reels. If helpers are turning the reels and actively guiding the cables into the raceway, much or all of the unwinding resistance can be eliminated. Since this occurs at the very beginning of the pull, it will have a disproportionately positive effect in reducing the pulling force and sidewall pressures.

If all of the foregoing options fail, then the run will need to be redesigned with fewer bends or one or more intermediate pull points provided as required. Keep in mind that the NEC requires that all raceways be continuous between established pull points prior to conductor insertion. Do not attempt opening the raceway at an intermediate point and pulling the full length of conductors through and beyond that location, all in the hope of resuming the pull at that intermediate point, and then reassembling the raceway to create the appearance of an end-to-end pull.

147. Potential cable jams on three-conductor pulls require special care. When tubular raceways are bent, they do not retain a perfectly circular form through the bend. Inevitably they become slightly elliptical in cross section in the process. If a three-conductor pull begins in a triangular configuration, and the conductor sizes are in a certain ratio to the diameter of the raceway, they may assume a cradled configuration when passing around the bend, with the midpoint of the cradle falling along the inside radius of the bend. When the leading part of the pull moves beyond the bend, the raceway resumes its circular cross section, and the conductors will try to resume their triangular configuration. If the conductors

cross over each other in the process, the result will be a jam if the inner diameter of the raceway, in its normal circular form, is smaller than approximately three times the diameter of the conductors. Conductors appreciably larger than this will not lose their orientation even when they pass through an oval section of the raceway, and conductors appreciably smaller than this ratio can slip back and forth between relative positions without difficulty.

For these reasons, the NEC has identified three-conductor pulls where the D/d (raceway diameter to cable diameter) ratios run between 2.8 and 3.2 as deserving of special care, because any attempt to pull through such a jam will likely damage the insulation. When making this calculation, increase the raceway diameter by 5 percent (multiply by 1.05) to account for out-of-round raceway problems. The NEC does not prohibit these ratios from being used, but cautions the installer to be alert. It is advisable to mark the cable to be drawn in, or pull in measuring tape with the conductors so if a jam occurs, and the tape measurement corresponds to the position of a known bend, the pull can be temporarily halted before the conductors are damaged. Often pulling back and then repulling will allow the conductors to resume their proper alignment.

148. For bends, the pulling radius is not the same as the training radius.

The NEC addresses how conductors will be maneuvered into the positions in pull boxes or at terminations that will be maintained for the foreseeable future. For example, single conductors must not be bent more sharply than 8 times their diameter if nonshielded and 12 times their diameter if shielded. This is a specification of the allowable *training radius* of a conductor, and it must not be confused with a conductor's allowable *pulling radius*, which will vary with the unique conditions of every installation because it is a function of the allowable sidewall bearing pressure. As the pulling forces increase to overcome friction in the pull, these forces will increase to the point of exceeding the allowable sidewall force, unless the raceway radius increases proportionately. The example above provides a good example of this principle at work, where three of the bends can be standard radius, but one of them at the end of the pull had to be increased.

In addition, the minimum pulling radius directly affects the sizes of intermediate pulling sheaves in instances where a cable is pulled directly through a manhole into another conduit not on the opposite wall. Such sheaves must be well lubricated so the rollers will freely follow the passage of the cable. Otherwise, the sidewall bearing pressure must be calculated based on the radius of the intermediate pulling sheave, just as in fixed portions of the raceway system.

Often a compound roller system will be required for this purpose, including when large conductors are pulled into a complicated cable tray layout. No portion of a bend exceeding 20° should ever be made across a single roller. Therefore, to achieve a 90° bend during a pulling operation using compound rollers, a minimum of five rollers must be used. Arrangements that use just two rollers, one at each conduit end point, impose two sharp 45° bends through small radii on the cable and must never be used, because they defeat the purpose of maintaining a large radius during the pull.

INTERIOR OR ABOVEGROUND WIRING WITH RIGID NONMETALLIC CONDUIT

149. Rigid nonmetallic conduit of the Schedule 40 polyvinyl chloride (PVC) type may be used in walls, floors, and ceilings and for:

1. Portions of dairies, laundries, canneries, and other wet locations
2. Locations where walls are frequently washed

3. Locations subject to severe corrosive influences
4. Damp or dry location not prohibited by Sec. 147
5. Locations subject to chemicals for which the PVC material is specifically approved

It may also be used for exposed work when it is approved for the purpose and is not exposed to physical damage, unless identified for such locations. Schedule 80 is so identified, and may also be used aboveground on poles.

150. Heavy-wall PVC conduit must not be used:

1. In hazardous locations, except as specifically permitted in the articles of the Code that cover those locations.
2. Where exposed to physical damage unless identified for such use, as noted above.
3. For the support of fixtures or other equipment, with the exception of conduit bodies of a trade size not larger than the trade size of the largest entering conduit. Such conduit bodies are only for the purpose of changing the conduit direction, and must not support luminaires or devices beyond incidental splicing equipment employed in unusual instances where the conduit body contains splices.
4. Where subject to ambient temperatures, or conductor operating temperatures, exceeding those for which the conduit is listed.
5. PVC Schedule 40 and Schedule 80 are suitable for use aboveground and underground and for direct burial without encasement in concrete except as required by 300.50(B) of the NEC for over 600 V installations.

151. Underwriters Laboratories lists rigid nonmetallic PVC conduit for aboveground applications with two different labels, as shown in Fig. 9.71. The conduits are manufactured in sizes from 1/2 to 6 in. The extra-heavy-wall-type Schedule 80 conduit is utilized for special applications which require additional physical protection, such as pole risers or similar uses when conduit is subject to physical damage.

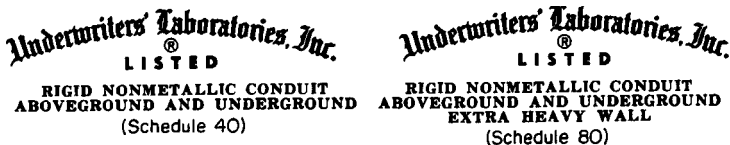


FIGURE 9.71 Identification of aboveground PVC conduits.

152. Manufacturers' classifications for rigid nonmetallic PVC conduit are:

1. *Type A*. Thin-wall for underground, encased in concrete
2. *Type 40*. Heavy-wall for direct burial in earth and limited aboveground installations
3. *Type 80*. Extra-heavy-wall for direct burial in earth and aboveground installations for general applications and when subject to physical damage as indicated in Sec. 151

From the classifications indicated in Secs. 147 and 148 it should be noted that only heavy-wall (Type 40) and extra-heavy-wall (Type 80) PVC conduits are suitable for aboveground

applications. The Type A PVC conduit is limited to underground installations when encased in concrete, and such installations should be installed as indicated for underground work in Div. 8.

153. PVC conduit fittings are shown in Fig. 9.72. Also available are a wide variety of outlet boxes constructed of polyvinyl chloride or fiber-reinforced Bakelite.

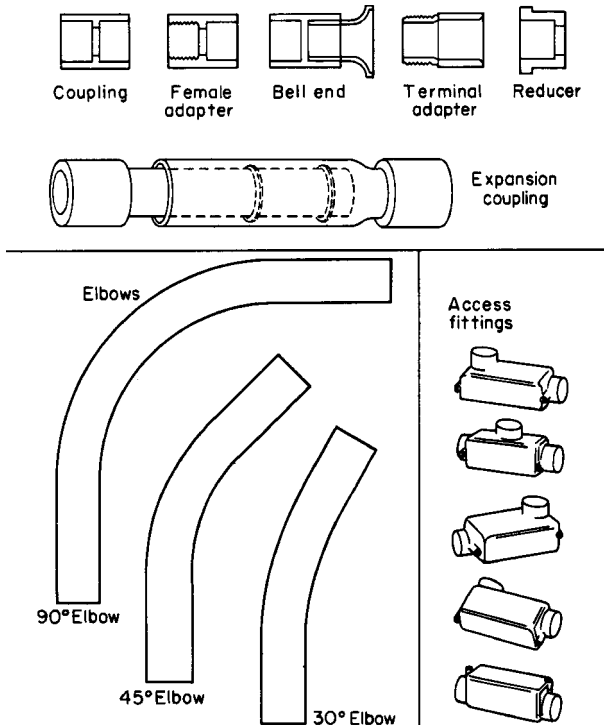


FIGURE 9.72 Fittings and accessories for PVC conduit.

154. Cutting PVC conduit. This conduit can be easily cut with a fine-tooth handsaw. For sizes from 2 through 6 in. a miter box or similar saw guide should be used to keep the material steady and assure a square cut. After cutting, deburr the conduit ends and wipe off dust, dirt, and plastic shavings. Deburring can be readily accomplished with a pocketknife. Sizes up to 1 $\frac{1}{4}$ trade size can be cut easily with special cutting tools that fit in one hand and advance a sharp blade connected to a ratchet mechanism steadily through the conduit.

155. Joining PVC conduit. The conduit should be wiped clean and dry. Then apply a coat of cement (use a natural-bristle brush or aerosol-spray cement) to the end of the conduit, including the length of the fitting socket to be attached. Finally, push conduit and fittings firmly together, and then rotate the conduit in the fitting about a quarter turn to

distribute the cement evenly. The cementing and joining operation will not require more than 1 min. Many manufacturers supply brush-top cans of PVC solvent cement, which may be used as timesaving expedients. In adapting PVC conduit to existing or metal equipment, a complete range of threaded adapters is available. Standard metallic locknuts are used at these termination points, and bushings normally are not necessary.

156. Bending PVC conduit. Although a complete line of factory elbows (90, 45, or 30°) are available (Fig. 9.72), heat-bending of PVC conduit in the field can be easily accomplished. The most accepted method for sizes from 1/2 through 2 in. is with electric *blankets* of varying sizes and ratings which consist of a 115-V, heating element that wraps around the conduit. Large sizes of conduit utilize *hot boxes* that will accept the larger conduit sizes. The conduit can be rotated to assure even heating.

The larger sizes of PVC conduit require interior support when being bent because their walls, while hot, are not capable of withstanding the force of the bending process, and will collapse. The usual way to provide this support is to insert air-tight plugs into both ends of the conduit section being heated, while the conduit is still cold. As the conduit heats, the air trapped inside heats with it, and becomes pressurized. The result is that the bends can be completed without collapsing the conduit. If bending plugs are not available, and the required bend is not a standard configuration as shown in Fig. 9.72, such as 90°, 45°, or 30° another option is to place a PVC sweep elbow in an oven, set at about 300°F. The manufactured elbow, when it gets hot and pliable, will begin to “remember” its previous form (a straight tube). Wearing gloves, remove the segment from the oven when it relaxes to the desired angle and freeze it in place with a rag wet with cold water.

Under normal conditions a complete bend can be made in less than 1 min. When exact measurements are required, preheat a length of PVC conduit and then form it in place. This is possible because PVC conduit will remain pliable for at least 3 min after it has been heated. Never use flame-type devices as a heat application to PVC conduit, because this excessive heat can ruin the conduit.

The newest method of bending PVC raceways in the smaller trade sizes is to insert special coiled springs specially sized to prevent kinking into the part of the conduit that must be bent, and then bending without heating the conduit, often with a bender such as the one illustrated in Fig. 9.52E. The spring is then withdrawn after the bend is complete.

157. Expansion and contraction. In applications in which the conduit installation will be subject to constantly changing temperatures and the runs are long, consideration must be given to expansion and contraction of PVC conduit. In such instances an expansion coupling, such as shown in Fig. 9.72, should be installed near the fixed end of the run to take up any expansion or contraction that may occur. The coupling shown in Fig. 9.72 has a normal expansion range of 6 in. (152.4 mm). The coefficient of linear expansion of PVC conduit is given in Table 352.44 of the NEC, and exceeds the expansion coefficient of steel by a factor of five. Without properly applied expansion fittings, an aboveground installation subject to the usual range of outdoor temperatures will fail. If the job is installed on a cold winter day, and the conduit cannot freely move when the hot weather arrives, the result will look like an accordion. If the same job is installed on a hot day, come the winter months the conduit will contract to the point of pulling out of glue joints and exposing the conductors within.

In addition, when PVC conduit is exposed to direct sun, it absorbs even more heat than the surface wired over. A leading maker of PVC conduit recommends that at least 140°F be used as the upper temperature design parameter for this reason. If the minimum temperature were 0°F, that change in temperature would cause a 100-ft (30 m) length of conduit to

expand and contract through a range of almost 6 in. (150 mm). The wiring system must be arranged with this in mind. Of course, some parts of the system will handle this movement without difficulty. For example, a service riser running straight up from a meter socket and ending at a weatherhead, if properly supported with clamps designed to allow movement, can expand and contract at will.

Expansion couplings may be used in either underground or exposed applications. In underground or slab applications such couplings are seldom used, because expansion and contraction may generally be controlled by bowing the conduit slightly or by immediate burial. After the conduit has been buried, expansion and contraction cease to be a factor. Care should be taken, however, to assure that contraction does not take place in a buried installation if the conduit should be left exposed for an extended period of time during widely variable temperature conditions.

158. Support of Rigid Nonmetallic Conduit should be not less than specified in the following NEC table:

Maximum spacing between conduit size, in	Supports, m (ft)
$\frac{1}{2}$ –1	0.9 m (3)
$1\frac{1}{4}$ –2	1.5 m (5)
$2\frac{1}{2}$ and 3	1.8 m (6)
$3\frac{1}{2}$ to 5	2.1 m (7)
6	2.5 m (8)

In addition, rigid nonmetallic conduit shall be supported within 900 mm (3 ft) of each box, cabinet, or other conduit termination.

159. Number of conductors. The number of conductors permitted in a single non-metallic conduit is determined in the manner described in Sec. 94. In many instances non-metallic conduits will contain equipment-grounding conductors to ground metal-enclosed equipment or grounding-type receptacles supplied by such conduits. If *bare* equipment conductors are used, the cross-sectional areas of these conductors, as listed in Table 57 of Div. 12, may be used in sizing the conduit. Accordingly, smaller conduit sizes may be permitted if bare instead of insulated grounding conductors are used.

It should be noted that extra-heavy-wall PVC conduit (Type 80) has a reduced cross-sectional area available for wiring space. Table 4, Chap. 9 of the NEC can be utilized to calculate conduction fill. The NEC now provides fill tables for Schedule 80 PVC in its Annex C, so if all the wires are of the same size, the permitted fill can be read out of the Code.

160. The number of bends in any run of conduit between outlet and outlet, fitting and fitting (LB, T, X), or outlet and fitting shall not contain more than the equivalent of four quarter bends (360°), including bends located immediately at the outlet or fitting.

161 Nonmetallic conduit lengths are normally available in 10-ft (3-m) lengths. However, lengths up to 30 ft (9.1 m) may be obtained for special applications. The longer lengths require fewer coupling connections and save time and labor.

162. Weight of Heavy-Wall (Type 40) Rigid Nonmetallic PVC Conduit

Trade size, in	Weight, lb/100 ft
1/2	16
3/4	21
1	31
1 1/4	42
1 1/2	50
2	67
2 1/2	106
3	139
3 1/2	168
4	197
5	268
6	348

163. PVC is a nonmagnetic conduit, and being nonmetallic, it provides less voltage drop and fewer reactance losses than are possible with metallic conduits with corresponding conductors used on ac circuits.

164. Other types of rigid nonmetallic conduits, such as thin-wall PVC, fiber, asbestos cement, soapstone, fiberglass epoxy, and high-density polyethylene, are designed solely for use in underground work. At one time they were recognized in the NEC for underground use, but today all conduit wiring methods must be listed, and the only other methods recognized are high-density polyethylene (Type HDPE, Sec. 21) and its sister with preinstalled conductors (Type NUCC, Sec. 22) for strictly underground use, and reinforced thermosetting resin conduit (Type RTRC, Sec. 23) that can be used above and below grade. These conduits and installation procedures, where used underground, are described in the underground-wiring sections of Div. 8. For systems of 600 V or less all types of rigid non-metallic conduits must be 450 mm (18 in.) below the surface if buried directly in earth. Lesser depths 300 mm (12 in.) are permitted if the conduit is run below 50 mm (2 in.) of concrete. Refer to Part II of Article 300 in the NEC for minimum burial depths for high voltages.

165. Conduits emerging from grade have special rules. In addition to accommodating expansion and contraction due to heating and cooling, the wiring must accommodate ground movement, whether upthrust due to frost, or downward pressure due to ground settlement. Generally an expansion fitting as shown in Fig. 9.72 will do the job nicely. In addition, where direct burial conductors enter a riser from below grade, they should have an “S” loop arranged at the entry point so ground movement will not disturb the conductors where they arrive at the upper end of the riser and terminate.

Although the usual wiring method for these transitions is PVC conduit, it is important to note that ground movement affects all raceways equally, and a steel conduit pushed past concentric knockouts and through the bottom of a meter socket through frost action could be even more dangerous than a nonmetallic wiring method. The rules only relate to the potential for ground movement, and not temperature variations. Therefore these rules [NEC 300.5(J)] apply equally to both metallic and nonmetallic conduits in such locations.

FLEXIBLE-METAL-CONDUIT WIRING

166. Flexible metal conduit can be used for many kinds of wiring, being in some cases preferable to rigid conduit (see Fig. 9.73). Its installation is much easier and quicker than the installation of rigid conduit, the latter coming in short pipe lengths, whereas flexible conduit may be had in lengths of 25 to 250 ft (7.6 to 76.2 m), depending on the size of the conduit. The rules governing the insulation on the wires are the same as for rigid conduit: outlet or switch boxes must be installed at all outlets or switches, and the conduit must be continuous from outlet to outlet and be securely fastened to the boxes.

Flexible metal conduit shall not be used (1) in wet locations; (2) in hoistways, except as provided in Sec. 620.21(A)(1) of the NEC; (3) in storage-battery rooms; (4) in any hazardous location, except as permitted by the hazardous location Code articles; (5) where exposed to oil, gasoline, or other materials having a deteriorating effect on the installed conductors; (6) underground or embedded in poured concrete or aggregate or where subject to physical damage.

Flexible metal conduit consists of a single strip of aluminum or galvanized steel, spirally wound on itself and interlocked so as to provide a round cross section of high mechanical strength and great flexibility.

Its flexibility together with the continuous length procurable makes its use practicable when rigid conduit would be out of the question. For this reason it can be employed to advantage in finished frame buildings in place of the other forms of wiring so largely employed in these structures. The conduit is easily fished and requires no elbow fittings. These can be made with the conduit itself, but care should be exercised in properly fastening the conduit at elbows (Fig. 9.74). There are on the market fittings whereby changes from other forms of wiring can be easily made to flexible-conduit wiring. Iron plates should be used to protect the conduit from nails where it passes through slots in floor beams or studding.



FIGURE 9.73 Flexible steel conduit.

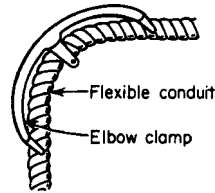


FIGURE 9.74 Elbow clamp.

167. Standard Sizes of Flexible Steel Conduit

B, nominal inside diameter, in	A, minimum OD, in	Bending radius in	Approximate ft per coil	Minimum weight, lb/1000 ft
$\frac{5}{16}$	0.470	$1\frac{3}{4}$	250	150
$\frac{3}{8}$	0.560	2	250	255
$\frac{1}{2}$	0.860	3	100	470
$\frac{3}{4}$	1.045	4	100	595
1	1.300	5	50	1020
$1\frac{1}{4}$	1.550	$6\frac{1}{4}$	50	1250
$1\frac{1}{2}$	1.850	$7\frac{1}{2}$	25	1625
2	2.350	10	25	2125
$2\frac{1}{2}$	2.860	$12\frac{1}{2}$	25	2630
3	3.360	15	25	3130
$3\frac{1}{2}$	3.860	$17\frac{1}{2}$	25	3220
4	4.360	20	25	3740

168. Installation of flexible metal conduit. If exposed, flexible metal conduit can be fastened to the surface with single-hole or two-hole straps (Figs. 9.40 and 9.41). The conduit must be secured at intervals not exceeding 1.4 m (4½ ft) and within 300 mm (12 in.) from every outlet box or fitting except 900 mm (3 ft) lengths at terminals where flexibility is required, and 1.8 m (6 ft) lengths from a fixture terminal connection for tap connections to a lighting fixture. If concealed, the conduit can be fished into place just as any concealed conductors are fished in. In making bends, care must be exercised that the conduit is not damaged.

169. The number and size of conductors to be installed in flexible metal conduits is governed, as in the case of all tubular raceways, by Table 1 of Chap. 9 of the NEC. For metric designator 12 (trade size ¾) conduit, NEC Table 348.22 has a separate wire fill table for this size conduit.

170. The minimum size of flexible conduit that is allowed by the NEC is metric designator 16 (trade size ½), except for metric designator 12 (trade size ¾) as allowed by the Code for limited motor wiring, or for a connection which is not over 1.8 m (6 ft) in length, for taps to luminaires (lighting fixtures), or for utilization equipment, or for manufactured wiring systems, or for listed assembly of wired luminaire (lighting fixture) sections or in hoistways.

171. Flexible metal conduit is joined with couplings as illustrated in Fig. 9.75. Short lengths can be coupled to longer pieces with the clamp of I and waste thereby be prevented. The clamp at II is used for coupling rigid to flexible conduit.




FIGURE 9.75 Couplings for flexible steel conduit.

172. When elbows are formed in flexible conduit, some provision must be made to prevent the conduit from straightening out and thereby preventing the withdrawal of the conductors. Pipe straps can be used in some cases, and in others an elbow clamp (Fig. 9.73) can be applied.

173. Flexible metal conduit can be connected into steel boxes with the connector illustrated in Fig. 9.76. It is clamped to the armor with a bolt which provides a connection between armor and steel box. Figure 9.77 shows flexible metal conduit connected into an outlet box.

174. To cut flexible metal conduit a fine hacksaw should be used. Special vises have a slot across their jaws to guide the saw blade, the conduit being held between grooves in the jaws. Always cut flexible conduit straight across to ensure a proper fit into connectors.

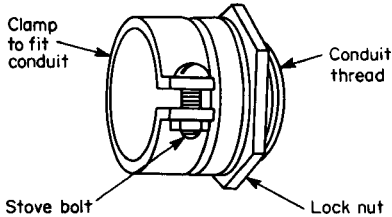


FIGURE 9.76 Connector for attaching flexible steel conduit to an outlet box.

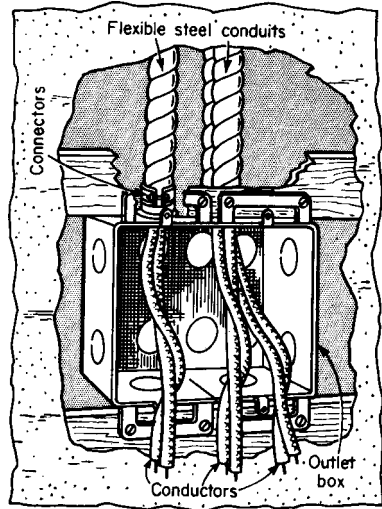


FIGURE 9.77 Flexible-steel-conduit outlet box.

175. For reaming flexible metal conduit a special reamer (Fig. 9.78) has been made, but inasmuch as the burr resulting from the hacksaw cut is very small, it can be readily removed with a three-cornered scraper made from a three-cornered file, or it can be removed with an ordinary file. The reamer illustrated is for conduit with a diameter of $1\frac{1}{4}$ in. or less.

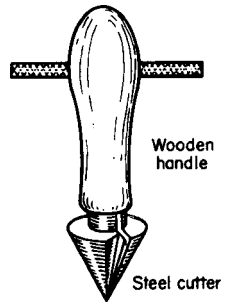


FIGURE 9.78 Reamer for flexible conduit.

176. Fish plugs for pulling in flexible conduit (Fig. 9.79) are furnished by the conduit manufacturer for $\frac{3}{8}$ -, $\frac{1}{2}$ -, and $\frac{3}{4}$ -in flexible conduit. After the conduit has been cut off square in a vise with a hacksaw, the fish plug is screwed into the tube and the fish or drawing-in wire attached to the plug for pulling in.




FIGURE 9.79 Plug for pulling in flexible conduit.

177. Pulling in conductors. Conductors are pulled into flexible conduits in much the same manner as in rigid conduits (refer to Sec. 122) with fish tapes or similar pulling means. It should be emphasized that the number of bends in any one run of flexible conduit should never exceed the equivalent of four quarter bends (360°), and preferably there should not be more than two quarter bends in a run. A fish tape which is to be inserted into a flexible conduit to pull in conductors should contain a ball or oval end instead of a hook.

A rounded tip permits the tape to be inserted without hanging onto convolutions of the flexible conduit.

178. Flexible metal conduit and fittings cannot generally be used as a grounding means. The only acceptable applications where they are so recognized is where all of the following conditions are met:

- (1) No enclosed conductor has overcurrent protection above 20 A.
- (2) The total length of the all flexible metal conduits, either ordinary flexible metal conduit or liquidtight flexible metal conduit or flexible metallic tubing or one or more of them together, in any equipment grounding return path must not exceed 1.8 m (6 ft).
- (3) The flexible metal conduit must not be subject to movement after the installation process is complete, such as for vibration isolation or for connections to a swinging sign, etc.

LIQUIDTIGHT FLEXIBLE-METAL-CONDUIT WIRING

179. Liquidtight flexible metal conduit is similar to regular flexible metal conduit, except that it is covered with a liquidtight plastic sheath (Fig. 9.80). It is not intended for general-purpose wiring but has definite advantages in many cases for the wiring of machines and portable equipment. Its use is restricted by the NEC as follows:

1. It is allowed in exposed or concealed locations where conditions of installation, operation, or maintenance require flexibility or protection from liquids, vapors, or solids. It is permitted for direct burial where listed and marked for the purpose.
2. Its use is not allowed (a) when subject to physical damage; (b) under any combination of ambient and conductor temperature conditions such that its operating temperature exceeds the rating of the material; and (c) in any hazardous location except as expressly permitted in the relevant Code articles.

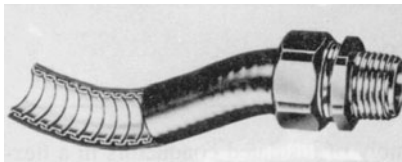


FIGURE 9.80 Liquidtight flexible metal conduit. [Electri-Flex Co.]

Care must be exercised in its installation to employ only suitable terminal fittings that are approved for the purpose. Liquidtight flexible metal conduit in metric designators 41 (trade sizes $1\frac{1}{2}$ in.) and larger shall be bonded in accordance with Sec. 250.118 of the NEC. Metric designator 35 (trade sizes of $1\frac{1}{4}$ in.) and smaller are suitable for grounding in any ground return path of 1.8 m (6 ft) or less if metric designators 12 and 16 (trade sizes $\frac{3}{8}$ and $\frac{1}{2}$) are protected at 20 A or less, and 60 A or less for metric designators 21 through 35 (trade sizes $\frac{3}{4}$ in. through $1\frac{1}{4}$) and the fittings are listed for grounding.

The Code specifies that the maximum size used must not be larger than the metric designator 103 (4 trade size).

180. Dimensions of Liquidtight Flexible Metal Conduit

Metric designator, conduit	Trade size, conduit	Actual			
		ID, in		OD, in	
		Minimum	Maximum	Minimum	Maximum
12	$\frac{3}{8}$	0.484	0.504	0.690	0.710
16	$\frac{1}{2}$	0.622	0.642	0.820	0.840
21	$\frac{3}{4}$	0.820	0.840	1.030	1.050
27	1	1.041	1.066	1.290	1.315
35	$1\frac{1}{4}$	1.380	1.410	1.630	1.660
41	$1\frac{1}{2}$	1.560	1.590	1.870	1.900
53	2	2.005	2.045	2.335	2.375
63	$2\frac{1}{2}$	2.449	2.489	2.855	2.895
78	3	3.048	3.088	3.480	3.520
91	$3\frac{1}{2}$	3.500	3.540	3.960	4.000
103	4	4.000	4.040	4.460	4.500

181. Conductor size. The NEC specifies that the maximum number of conductors installed in liquidtight flexible metal conduit is governed, as in the case of all tubular raceways, by Table 1 of Chap. 9 of the NEC. For metric designator 12 (trade size $\frac{3}{8}$) conduit, NEC Table 348.22 controls the wire fill for this size conduit.

METAL-CLAD-CABLE WIRING: TYPES AC AND MC

182. Type AC cable is a fabricated assembly of insulated conductors in a flexible metallic enclosure.

183. Type AC cables (generally referred to as *armored cable*) are branch-circuit and feeder cables with armor or flexible metal tape (Fig. 9.81). Cables of the AC type must have an internal bonding strip of copper or aluminum in intimate contact with the armor for its entire length. Most manufacturers use a flat aluminum ribbon as the bonding strip. At terminations, the bond wire is simply folded back without connection to the enclosure or other such conductors. Being in intimate contact with the metal armor, the bond wire is intended to reduce the overall impedance of the cable armor during the performance of its electrical function as an equipment grounding return path. For cables of the AC type, insulated conductors must be one of the types listed in NEC Table 310.13(A). In addition, the conductors must have an overall moisture-resistant and fire-retardant fibrous covering. For ACT (thermoplastic conductors), a moisture-resistant fibrous covering is required only on the individual conductors.



FIGURE 9.81 Type AC cable with bond wire.

When not subject to physical damage, Type AC cable may be installed in both exposed and concealed work. Type AC cable may be used in dry locations and may be embedded in

plaster finish on brick or other masonry, except in damp or wet locations. It is permitted to be fished in air voids or masonry block or tile walls where such walls are not exposed or subject to excessive moisture or dampness. It must not be used where subject to corrosive fumes or vapors, or in any wet locations, including direct burial in the earth.

184. Manipulating Type AC cable. Type AC cable must never be spliced except at outlets. Many methods of fastening cable in outlet boxes are in vogue. Clamps or box connectors can be used. Outlet and switch boxes containing internal cable clamps designed for this wiring can be used. Special cutters are available. Type AC cable must not be bent more sharply than a radius of five times the outer diameter of the cable, with the radius measured to the inner side of the bend.

185. For cutting the cable to length, a shear, bolt cutter, or hacksaw can be used. At each outlet or junction box the armor must also be cut back about 8 in. (203.2 mm) in order to leave sufficient free ends of wire for splicing. This cutting is done with a hacksaw held so as to cut across the armor at an angle of about 60° with the axis of the cable. Great care must be taken not to cut into the insulation on the conductors.

Seatek Co., has developed a Flex Splitter rotary tool (Fig. 9.82) that is far superior for cutting Type AC cable. An adjustment knob varies the depth of the cut and a rotary crank easily cuts the sheath.

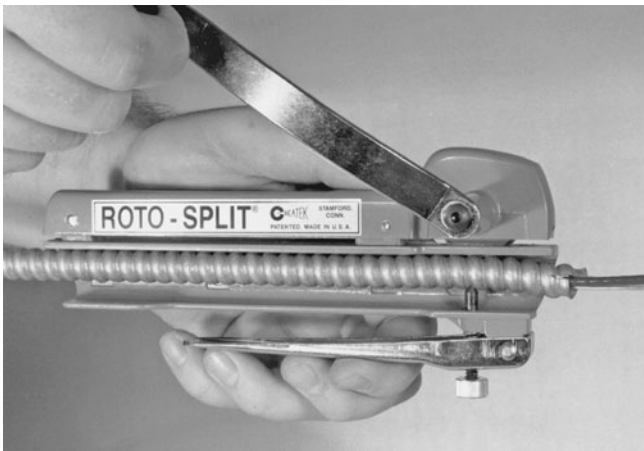


FIGURE 9.82 Method of cutting armor back from the end of cable. [Seatek Co., Inc.]

186. The wires at the ends of Type AC cable should be protected by fiber bushings. The fiber bushings employed for this purpose are called *antishort insulating bushings* (Fig. 9.83). The split bushing is pinched together and slipped over the wires inside the armor, as illustrated in Fig. 9.84. It protects the insulation of the wires from the rough edges of the cut ends of the armor.

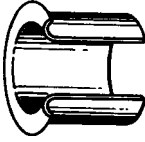


FIGURE 9.83 Antishort fiber bushing.

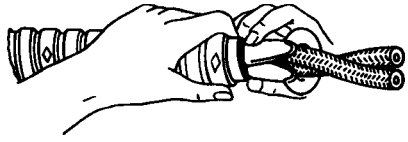


FIGURE 9.84 Method of protecting wires with antishort bushings.

187. For fastening Type AC cable to outlet boxes a connector (Fig. 9.85) can be slipped over the end of the cable. The setscrew is tightened down against the armor. The threaded end of the connector slips into standard conduit knockouts, and the locknut is then put on, holding the connector tight to the box. Another method is to use outlet boxes of the type shown in Fig. 9.86, which contain built in cable clamps in which the clamp tightens down against the armor and holds it firmly in place.

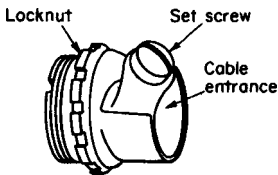


FIGURE 9.85 Box connector for Type AC armor-clad cable. [General Electric Supply Co.]

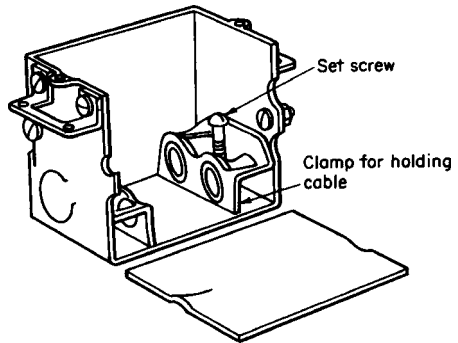


FIGURE 9.86 Outlet box with clamps for Type AC armor-clad cable. [General Electric Supply Co.]

188. Type AC cable for old-building wiring. Type AC cable can be used to great advantage in this work. It can be run with almost utter disregard of its contact with pipes or other materials and can be fished for long distances. Its own weight is sufficient to carry it down partitions, and it is stiff enough to fish between joists without the use of a fish wire. It or nonmetallic-sheathed cable can also be installed more quickly and with less cutting of walls, floors, etc., than can wires in flexible tubing.

189. The loop system of wiring is nearly always used for concealed work in order to avoid the use of junction boxes. The cables loop from one outlet to the next outlet, and splices are made only at outlet boxes. All splices must be accessible for inspection, and if a junction box is used, the cover must be left accessible.

190. Supports. Type AC cable must be secured by approved staples, straps, hangers, or similar fittings so designed and installed as not to injure the cable. The cable may be installed on the underside of floor joists in basements when it is supported at each joist and is so located as not to be subject to physical damage. The cable must be secured within

300 mm (12 in.) of every terminating location. This means it must be prevented from movement through the use of a staple or clip. This is different from elsewhere in the run, where mere support is required. For example, it is permitted to entrain the cable through holes in studs or joists, as long as a staple, clip, or equal is set within a foot of terminations. However, when it is run through an accessible ceiling, the last 1.8 m (6 ft) prior to a termination is permitted without additional securement. The cables must be supported not less than every 1.4 m (4½ ft) in the middle of the run in all other locations.

191. Through studs, joists, and rafters. Type AC cable can be run through bored holes in studs, joists, or rafters. The holes must be bored at the approximate centers of the wood members or at least 32 mm (1¼ in.) from the nearest edge when practical. If there is no objection because of weakening of the structure, the Code will allow the cable to be laid in notches in the studding or joists, provided that the cable is protected against the driving of nails into it by having the notch covered with a steel plate at least 1.6 mm (⅙ in.) thick (or thinner if so listed) before the building finish is applied.

Type AC or MC cables installed in other than vertical runs through bored or punched holes in wood or metal framing members, or through notches in wooden framing members and protected by a steel plate at least 1.6 mm (⅙ in.) thick, shall be considered supported and secured where such support does not exceed 1.4 m (4½ ft).

192. In accessible attics. Type AC and MC cables in accessible attics shall be installed as follows:

1. If run across the top of floor joists, or within 2.1 m (7 ft) of the floor or floor joists across the face of rafters or studs, in attics or roof spaces which are accessible, the cable shall be protected by substantial guard strips which are at least as high as the cable. If this space is not accessible by permanent stairs or ladders, protection will be required only within 1.8 m (6 ft) of the nearest edge of the scuttle hole or attic entrance.
2. If cable is carried along the sides of rafters, studs, or floor joists, neither guard strips nor running boards shall be required.

193. Ampacity. Where run in thermal insulation, the cable construction must employ conductors rated for 90°C, but the usable ampacity is to be taken under the 60°C column in NEC Table 310.16. This accommodates the deleterious effect that thermal insulation has on the ability of electrical conductors to dissipate heat developed during operating conditions. Refer to the coverage on this topic under “interior wiring with service-entrance cable” for more information on this subject.



FIGURE 9.87 Type MC cable with aluminum sheath and aluminum conductors. [Kaiser Aluminum & Chemical Corp.]

194. Type MC cables are power and control cables (Fig. 9.87) limited in size to conductors not smaller than No. 18 AWG and larger for copper and No. 12 AWG and larger for aluminum. The metal enclosure shall be either a smooth metallic sheath, corrugated metallic sheath, or interlocking metal tape armor. Supplemental protection of an outer covering of corrosion-resistant

material must be provided when such protection is required by Sec. 300.6 of the NEC. The cables must provide an adequate path for grounding purposes, either over their armor or by incorporating one or more additional grounding conductors within the assembly. For cables of the MC type, insulated conductors must be of a type listed in NEC Table 310.13(A), and 18 and 16 AWG may employ a fixture-wire insulation.

Except as otherwise specified in the Code and where not subject to physical damage, circuits, services, or feeders in both concealed and exposed work as follows.

The cable may be used in partially protected areas, as in cable trays and the like, in dry locations; and when any of the following conditions are met, it may be used in wet locations:

1. The metallic covering is impervious to moisture.
2. A lead sheath or moisture-impervious jacket is provided under the metal covering.
3. The insulated conductors under the metallic covering are approved for use in wet locations and a corrosion-resistant jacket is provided over the metallic armor. If identified for the use, Type MC cable may be directly buried (Fig. 9.88).

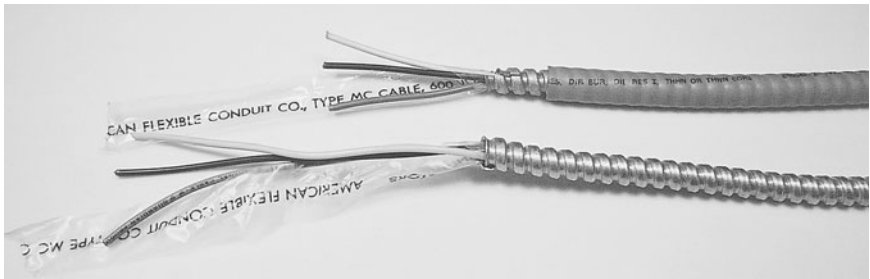


FIGURE 9.88 Interlocking-armor Type MC cable in smaller branch-circuit sizes. The upper cable has an outer nonmetallic jacket that is suitable for direct burial, and is so marked.

195. Type MC cable connectors require care in selection. At all points where Type MC cable terminates, suitable fittings designed for use with the particular wiring cable and the conditions of service must be used (see Fig. 9.89). For Type MC cable, this requires great attention to detail. For example, the armor of interlocking armor MC cable is thinner than the corresponding armor for Type AC cable, and in general a single-screw clamp of the type shown in Fig. 9.85 will not be listed for such thinner armor. Acceptable designs use wraparound clamps as in Fig. 9.89, or some form of two-screw saddle or double-grip fastener will be used in order to properly distribute the pullout forces, in accordance with listings. In addition, connectors will be listed in reference to specific cable diameters and styles, or numbers of conductors. Because these markings are so complex, the information cannot be marked on the connector, and is permitted to be shown on the smallest unit carton.

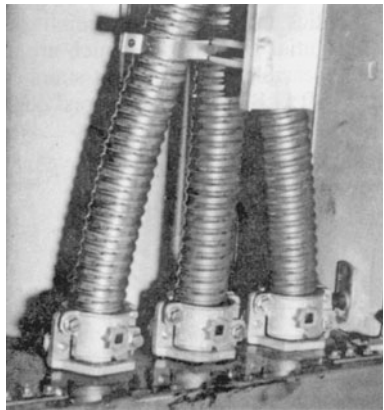


FIGURE 9.89 Connectors for Type MC cables.

196. Bends. All bends shall be so made that the cable will not be damaged; and the radius of the curve of the inner bend of any bend must not be less than 7 times the diameter of Type MC cable with an interlocked or corrugated sheath, and 10 times the diameter of a smooth sheath of a size not more than 19 mm ($\frac{3}{4}$ in.), 12 times the diameter for cables larger than 19 mm ($\frac{3}{4}$ in.) but not more than 38 mm ($1\frac{1}{2}$ in.), and 15 times the diameter for cables more than 38 mm ($1\frac{1}{2}$ in.) in diameter. For shielded conductors, as are routinely used in medium voltage work, the inner radius must be at least 12 times the overall diameter of an individual shielded conductor or 7 times the overall diameter of a multiconductor cable, whichever is greater. Type AC cable carries a minimum bending radius of five times the cable diameter, also measured to the inner radius of the cable assembly.

197. Equipment grounding. In general, interlocking-armor type MC cables require equipment grounding conductors as part of the cable assembly. Larger cables often have this conductor subdivided into three or more segments. Smooth-type and corrugated-type MC cables usually have enough metal in a sheath that is not wound in convolutions so the armor can serve as an equipment grounding conductor. Figure 9.90 shows two such examples. Although the upper cable appears to have an interlocking tape armor, it is actually a continuous tube merely formed in a way that superficially resembles an interlocking metal tape. It does, however, contain a full-sized green-insulated conductor. This feature allows it to be used in patient-care areas of health care facilities, which require both the outer margin of the wiring method and an incorporated conductor to qualify for equipment grounding.

There is a new form of interlocking-armor Type MC cable on the market that has a full-sized bare aluminum equipment grounding conductor run outside of the Mylar sheath that is placed over the circuit conductors, such that it is in constant contact with the aluminum cable armor. In this it is comparable to the bonding strip in Type AC cable. This cable does not need to have this conductor brought into an enclosure for terminations, also like Type AC cable. However, some enclosures such as panelboards and other cabinets equipped with concentric knockouts may not qualify for equipment grounding continuity, particularly for circuits operating over 250 V to ground. In such cases, instead of being cut off, the bare aluminum wire is carried into the enclosure and terminated in the same location as the green wire in conventional interlocking-armor Type MC cables.

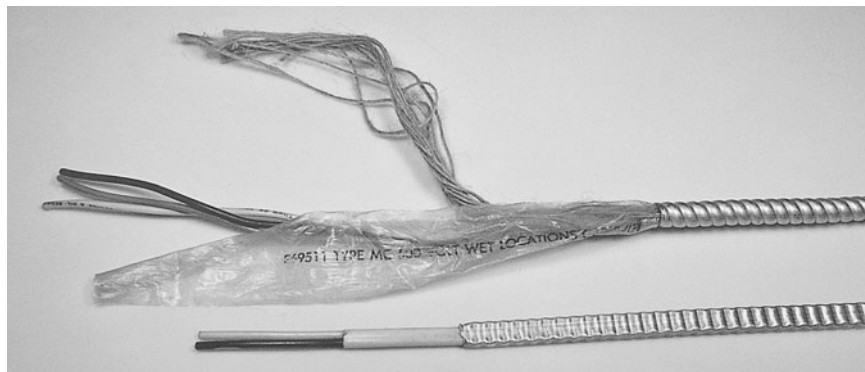


FIGURE 9.90 Corrugated Type MC cable comes in several configurations. Both these cables have an outer armor that is fully qualified as an equipment grounding return path; however, the upper cable has an additional grounding conductor for other reasons.

SURFACE-RACEWAY WIRING

198. Wiring in surface metal raceway can be used for exposed work for branch-circuit or feeder conductors. It may be installed in dry locations. It shall not be used (1) where concealed except under raised floors of information technology equipment; (2) when subject to severe physical damage unless approved for the purpose; (3) when the voltage is 300 V or more between conductors unless the metal has a thickness of not less than 1.02 mm (0.040 in.); (4) when subject to corrosive vapors; (5) in hoistways; or (6) in any hazardous location, except as expressly permitted in those specialized articles. The number of conductors installed in any raceway shall be no greater than the number for which the raceway is designed. Metal raceway must be continuous from outlet to outlet, junction box, or approved fittings designed especially for use with metal raceway. All outlets must be provided with approved terminal fittings which will protect the insulation of conductors from abrasion unless such protection is afforded by the construction of the boxes or fittings. Metal raceway should not be used in damp places.

When combination raceways are used for the installation of signal, power, and lighting circuits, each system shall be run in a separate compartment of the raceway.

Raceways may be extended through dry walls, dry partitions, and dry floors if in unbroken lengths where passing through, and provided access to the conductors is maintained on both sides of the partition.

199. Surface nonmetallic raceway is intended as a raceway for baseboard receptacles and other circuit supplies. It also serves a dual function as an attractive baseboard trim and replaces conventional baseboards.

Basically, the baseboard system contains a plastic backplate which is secured directly to the wall. Where receptacles are to be located, a metal bracket is attached through the backplate into the wall with wood screws or other fastening devices. Wires are then pulled in, and receptacles are mounted in place and wired. The wires are held in place along the raceway by a retaining clip strip, which is fastened to the wall of the raceway about every 1.5 m (5 ft). This holds the wiring in place. Finally, the external baseboard cover and receptacle cover are snapped into place. Covers over receptacles are doubly anchored by means of a flange and a 6-32 screw into the outlet body.

The material used in this system is the same as is used with rigid PVC conduit. End caps and inside or outside corners are available. One side of each of these fittings is cemented to the baseboard cover.

National Electric Code rules state that surface nonmetallic raceway and fittings must be of suitable nonmetallic material which is resistant to moisture and chemical atmospheres. It must also be flame-retardant and resistant to impact and crushing, distortion due to heat under conditions likely to be encountered in service, and resistant to low-temperature effects.

Surface nonmetallic raceways may be installed in dry locations. They must not be used (1) when concealed, (2) when subject to severe physical damage, (3) when the voltage is 300 V or more between conductors unless listed for higher voltage, (4) in hoistways, (5) in any hazardous location, except as permitted by the applicable specialized code articles, (6) when subject to ambient temperatures exceeding the listing, or (7) for conductors whose insulation exceeds those for which the nonmetallic raceway is listed.

Other Code rules such as the number and size of conductors are the same as for surface metal raceways.

200. Wiremold metal raceways are made in three general types by the Wiremold Co. These types are designated as (1) Wiremold surface raceway, used for general surface-raceway wiring systems; (2) Pancake overfloor raceway, used for overfloor surface-raceway wiring;

and (3) Plugmold raceway, used primarily for multioutlet-assemblies wiring (see Sec. 303). Plugmold can be used without receptacles as a general high-capacity surface-wiring raceway. The Wiremold surface raceway is a unit assembly, while the other two types consist of two separable parts, the base and the cover. (See Figs. 9.91 and 9.92.)



FIGURE 9.91 A flat 90° turn.

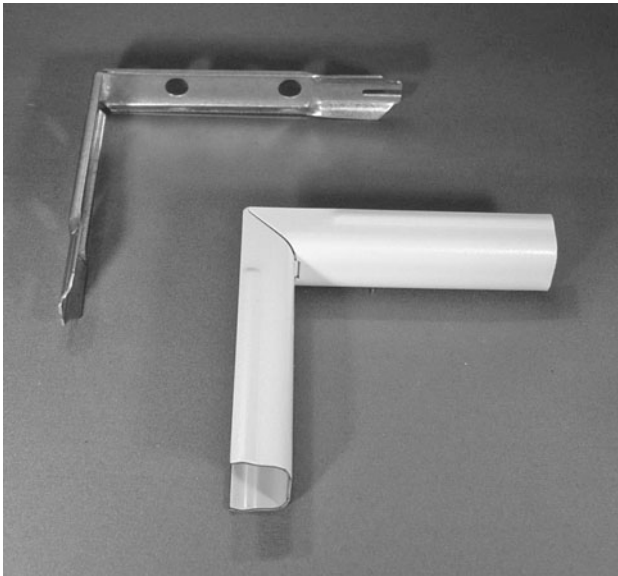


FIGURE 9.92 Inside 90° turn; outside turns are comparable.

The appearance and dimensions of the different types and sizes are shown in Fig. 9.93. The wire capacities are given in Secs. 201 to 204 inclusive. Wiremold No. 2000 is made in 5-ft (1.5-m) lengths. The standard length for the other types is 10 ft (3.05 m), although some types are available also in 5-ft lengths.

WIREMOLD Surface Metal Raceways

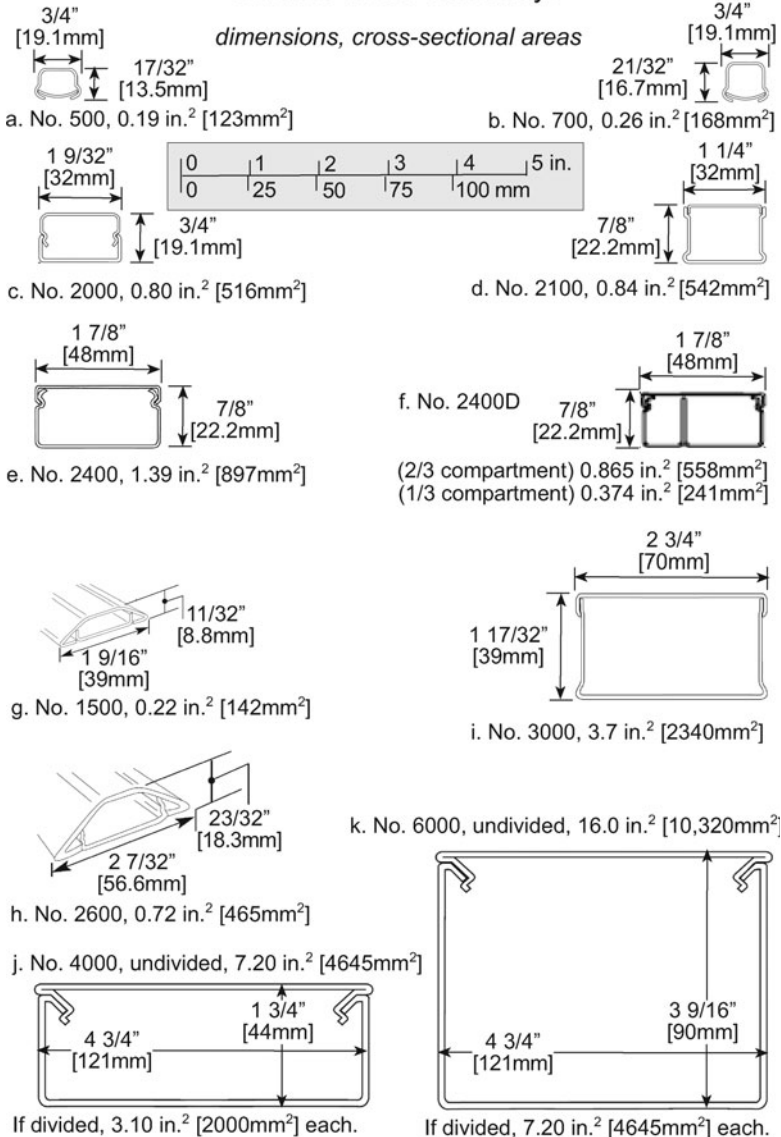


FIGURE 9.93 Types and dimensions of Wiremold raceways. [The Wiremold Co.]

Wiremold surface metal raceway consists of a metal capping with its edges crimped over a slightly curved base. The capping is crimped on the base at the factory so that capping and base are installed as a unit. The wires are pulled through the raceway from fitting to fitting in a manner similar to that employed in conduit work. The lengths are fastened together with a coupling (Fig. 9.94, I), which is fastened to the wall surface with a wood screw or toggle bolt. The base of the raceway is slipped under the end of the coupling before the screw or bolt is drawn up tight. A connection cover (Fig. 9.94, II) snaps over the ends of the raceway, closing the joint. Each section of raceway is secured at one or two intermediate points between the couplings by means of either one- or two-hole straps (Fig. 9.94, III and IV) screwed or bolted to the wall surface. The fittings and capping of Wiremold were traditionally finished in a neutral brown tint which blended well with most surroundings. Although that color is still available, it is now usually shipped in an off-white or ivory color that is more popular. The larger profiles (such as 4000 and 6000), formerly only available in an industrial shade of gray, are now also routinely available in the same off-white or ivory color. The base of the raceway and the baseplates of all fittings are given a special zinc treatment to prevent corrosion.

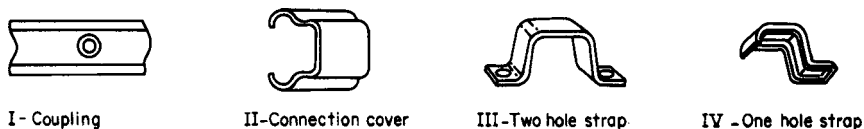


FIGURE 9.94 Wiremold metal raceway and support details.

Pancake overfloor raceway consists of two steel parts, a base and a cover. The parts have a natural galvanized finish. When this raceway is installed, the base is fastened to the floor by the appropriate means of wood screws, expansion shields, toggle bolts, etc. The conductors are then laid flat in the base of the raceway. After the connections have been completed, the cover is snapped in place over the base.

Plugmold raceway consists of two steel parts, a channel base and a snap-on cover. Both base and cover are available in the standard brown Wiremold finish or in a gray finish. When this raceway is installed, the channel base is fastened to the supporting structure with the appropriate means. The conductors are laid in the channel base, the necessary connections made, and the installation completed by snapping the cover over the base.

A very complete line of fittings, outlets, and receptacles is available for the different Wiremold raceways to meet the varied needs of installation.

201. Wire Capacities for Nos. 500 to 3000 Wiremold Raceways

(For not more than the number of wires of sizes and types indicated when no wiring devices are mounted on or in raceway)

Catalog numbers	Size and wire fill		
	Wire size AWG	Cross-sectional area, in ²	Types THHN, THWN
No. 500	10	0.19	3
	12		5
	14		7
No. 700	10	0.26	5
	12		8
	14		11
No. 2000	12	0.80	7
	14		
No. 2100	6	0.84	6
	8		9
	10		15
	12		25
	14		34
No. 2400	6	1.39	10
	8		15
	10		26
	12		41
	14		57
No. G-3000	6	3.70	29
	8		40
	10		70
	12		111
	14		152

202. Wire Capacities for Nos. 1500 and 2600 Overfloor Wiremold

(For use on floors in dry locations not subject to excessive mopping or scrubbing; raceway to be used with not more than the number of wires of sizes and types indicated)

Catalog numbers	Size and wire fill		
	Wire size AWG	Cross-sectional area, in ²	Types THHN, THWN
No. 1500	10	0.22	4
	12		6
	14		9
No. 2600	8	0.72	8
	10		16
	12		25
	14		33

203. Wire Capacities for Wiremold Nos. 2000 to 3000 Plugmold, with Devices

(For use with Wiremold attachment-plug receptacles designed for mounting in raceway; raceway to be used with not more than the number of wires of sizes and types indicated)

Catalog No. 2000 wire capacity						
		Single-conductor				
	Type of wire	No. 12		No. 14		
With receptacles	THHN/THWN	5		5		

Catalog No. 2400 wire capacity, undivided						
		Single-conductor				
	Type of wire	No. 6	No. 8	No. 10	No. 12	No. 14
With receptacles	THHN/THWN	0	2	3	6	8
Without devices	THHN/THWN	10	15	26	41	57

Catalog No. 2400 wire capacity, divided,* 2/3 (1/3)						
No devices		0	0	11(6)	19(9)	20(11)

*Raceway is available permanently divided by the manufacturer, with the divider permanently located 1/3 of the way across.

Catalog No. 2100 wire capacity						
		Types THHN/THWN				
Device no.	Description	No. 10		No. 12		No. 14
2126	Keyless socket	15		9		6
2127GA	Three-wire grounding, 15 A	4		6		9
2127GT	Three-wire grounding, 20 A	4		6		9
IG2127GT	Three-wire isolated ground	4		6		9

Catalog No. G-3000 wire capacity						
Single-conductor	Wire types	No. 6	No. 8	No. 10	No. 12	No. 14
With duplex receptacles	THHN/THWN	13	18	32	51	70
With surge/GFCI devices	THHN/THWN	7	10	18	29	40
Large single receptacles	THHN/THWN	5	7	13	21	28

204. Wire Capacities for Nos. 4000 and 6000 Wiremold Raceways

(For use with not more than the number of wires of sizes and types indicated)

NOTE For undivided 4000 and both divided and undivided 6000 Wiremold [i.e., where the raceway cross-sectional area exceeds 2500 mm² (4.0 in²)], derating for multiple current-carrying conductors in a common raceway may be avoided if the number of current-carrying conductors does not exceed 30 and the wire fill does not exceed 20 percent, or 1/2 of the number shown in the wire fill columns, which have been calculated based on the usual 40 percent fill.

Catalog No. G-4000 wire capacities, THHN/THWN														
Single-conductor	Without devices								With devices					
Device types	No. 2	No. 3	No. 4	No. 6	No. 8	No. 10	No. 12	No. 14	No. 6	No. 8	No. 10	No. 12	No. 14	
With divider:														
Power compartment only:														
NO DEVICES	10	12	15	24	33	58	93	127						
Duplex receptacles									15	20	36	57	78	
Surge/GFCI devices									9	13	22	36	49	
Large single recept.									3	5	9	15	20	
Without divider:														
NO DEVICES	24	29	34	56	78	136	216	296						
Duplex receptacles									31	43	76	120	165	
Surge/GFCI devices									20	28	49	78	107	
Large single recept.									9	13	22	36	49	
Communications and signal wiring, with divider														
Number of cables at 40% fill														
	2-Pair		25-Pair		6 strand		4-Pair cat. 5e		4-Pair cat. 6		Coaxial RG59/U		Coaxial RG6/U	
Telephone cable	90		10											
Optical fiber					27									
Unshielded twisted pair							40		28					
Coaxial											30		24	
Communications and signal wiring, without divider														
Telephone cable	187		21											
Optical fiber					55									
Unshielded twisted pair							83		58					
Coaxial											62		50	

NOTE: Other configurations have been evaluated. Refer to manufacturer's literature.

Catalog No. G-6000 wire capacities, THHN/THWN													
Single-conductor	Without devices								With devices				
Device types	No. 2	No. 3	No. 4	No. 6	No. 8	No. 10	No. 12	No. 14	No. 6	No. 8	No. 10	No. 12	No. 14
With divider:													
Power compartment only:													
NO DEVICES	24	29	34	56	78	136	216	296					
Duplex receptacles									44	61	106	168	231
Surge/GFCI devices									38	53	92	147	202
Large single recept.									33	45	79	126	173
Without divider:													
NO DEVICES	55	65	77	126	174	303	481	659					
Duplex receptacles									101	140	243	385	528
Surge/GFCI devices									89	124	216	342	470
Large single recept.									78	109	189	300	412
Additional ratings exist for even larger conductors provided no devices are installed, for undivided and (divided) raceways, as follows:													
1 AWG, 40 (18); 1/0 AWG, 34 (15); and 2/0 AWG, 28 (12).													
Communications and signal wiring, with divider													
Number of cables at 40% fill													
	2-Pair	25-Pair	6 strand			4-Pair cat. 5e	4-Pair cat. 6		Coaxial RG59/U		Coaxial RG6/U		
Telephone cable	187	21											
Optical fiber			55										
Unshielded twisted pair						83	58						
Coaxial									62		50		
Communications and signal wiring, without divider													
Telephone cable	415	48											
Optical fiber			124										
Unshielded twisted pair						184	130						
Coaxial									139		111		

NOTE: Other configurations have been evaluated. Refer to manufacturer's literature.

205. Cross-Sectional Areas of Wiremold Raceways

Raceway	Area, in ²	Raceway	Area, in ²
500	0.19	2600	.72
700	0.26		
		G-3000	3.70
		G-4000	7.20 (undivided)
			3.50 (each compartment when raceway is divided)
1500	0.22		
2000	0.80	G-6000	15.82
2100	0.84		7.20 (each compartment when raceway is divided)
2400	1.39		

ELECTRICAL-METALLIC-TUBING WIRING

206. Wiring employing electrical metallic tubing (EMT) is widely used for commercial and industrial wiring systems. The NEC allows the installation of EMT, either concealed or exposed, when either during construction or afterward it will not be subject to severe physical damage. Electrical metallic tubing may be supported in buildings of fire-resistive construction on the face of masonry or other material of which walls or ceilings are composed. It may then be buried in concrete or plaster finish. Connections between lengths of tubing and between tubing and any fitting shall provide adequate mechanical strength and electrical continuity.

In installations having cinder concrete or fill, EMT must be protected on all sides by a layer of noncinder concrete at least 50 mm (2 in.) thick unless the tubing is at least 450 mm (18 in.) under the fill. In general, EMT should not be used for direct burial applications because of limitations in its listing. If directly buried in earth, it generally requires additional corrosion protection applied over and above the galvanizing. Although asphalt paint or something comparable might be used for this purpose, it should be noted that testing laboratories do not recognize any specific nonmetallic supplementary coating for this purpose, which leaves it entirely in the hands of the inspector as to whether or not any particular coating will be approved.

In installations in which corrosive fumes or vapors may exist, as in meat-packing plants, tanneries, hide cellars, casing rooms, glue houses, fertilizer rooms, salt storage, some chemical works, metal refineries, pulp mills, sugar mills, roundhouses, some stables, and similar locations, EMT requires additional protection that must be approved for the corrosive exposure in question.

When installed in wet locations, such as dairies, laundries, and canneries, and in locations where the walls are frequently washed, the entire tubing system, including all its boxes and other fittings, shall be installed and equipped so as to prevent water from entering the tubing system, and the tubing shall be mounted so that there is at least a 6 mm (1/4 in.) air space between it and the wall or other supporting surface. For these installations all the supporting materials, such as straps, bolts, and screws, must be of corrosion-resistant material or be protected against corrosion by approved materials.

The rules regarding bends, minimum size, and allowable number of conductors are the same as for rigid metal conduit. The maximum allowable size of tubing is 4 in.

207. Table 208 gives the sizes and weights of electrical metallic tubing. Since the inside diameters are the same as those for rigid metal conduit, the same tables of number of allowable wires in a conduit apply to the tubing. The wall is thinner, however, and the outside diameters of tubing are less than those for conduit. The regular metallic tubing has a round cross section and is made of galvanized steel. However, sizes over metric designator 53 (trade size 2) have the same outside diameters as corresponding sizes of rigid metal conduit. Accordingly, the internal diameters of these larger sizes are slightly greater than those of other types of conduit.

208. Electrical Metallic Tubing

Metric designator	Trade size	Approximate weight per 1,000 ft, lb	Diameter, in		Wall thickness, in
			Inside	Outside	
16	1/2	295	0.622	0.706	0.042
21	3/4	445	0.824	0.922	0.049
27	1	650	1.049	1.163	0.057
41	1 1/4	960	1.380	1.510	0.065
53	1 1/2	1,110	1.610	1.740	0.065
63	2	1,410	2.067	2.197	0.065
78	2 1/2	2,300	2.731	2.875	0.072
91	3	2,700	3.356	3.500	0.072
103	4	4,000	4.334	4.500	0.083

209. All outlet boxes and fittings for use with EMT must be of the threadless type, since owing to the thin wall it is not permissible to thread the tubing. Special threadless fittings similar to those employed for standard rigid conduit are manufactured for tubing. Standard rigid conduit fittings can be used with tubing if an adapter is employed. Sections

of tubing can be joined by means of threadless couplings, which are available in steel, malleable-iron, and diecast construction. Tubing is connected to outlet boxes by means of connectors. One end of the connector is made for threadless attachment to the tubing, and the other end is threaded and supplied with a locknut for attachment to the box through a knockout. Raintight connections can be made to the tubing with some couplings and connectors. Standard 90° elbows (Fig. 9.95) are attached to the tubing by means of the above-described couplings. The dimensions of standard elbows are given in Sec. 210. Raintight elbows and angle-box connectors are available with the ends fitted with threadless fittings.

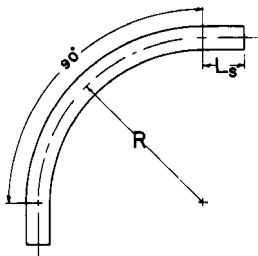


FIGURE 9.95 Standard radius, 90° elbow.

210. Standard 90° Elbows for EMT

Metric designator of tubing	Trade size of tubing	Smallest acceptable radius R to center line of tubing	Shortest acceptable length L_s of each straight end portion of tubing
16	$\frac{1}{2}$	4	$1\frac{1}{2}$
21	$\frac{3}{4}$	$4\frac{1}{2}$	$1\frac{1}{2}$
27	1	$5\frac{3}{4}$	$1\frac{7}{8}$
35	$1\frac{1}{4}$	$7\frac{1}{4}$	2
41	$1\frac{1}{2}$	$8\frac{1}{4}$	2
53	2	$9\frac{1}{2}$	2
63	$2\frac{1}{2}$	$10\frac{1}{2}$	3
78	3	13	$3\frac{1}{3}$
103	4	16	$3\frac{3}{8}$

211. Threadless couplings and connectors for EMT are of setscrew, compression, indenter, tap-on, two-piece, or squeeze-types. Such fittings are classified as concrete-tight only, or raintight and concrete-tight. Accordingly, only fittings that are classified as being raintight can be used outdoors exposed to the weather or in wet locations. Except for indenter-type fittings, EMT couplings and connectors can be installed with common hand tools. Indenter-type fittings require a special tool, and these fittings are made only up to metric designator 27 (trade size 1).

In the past, it has been routinely assumed that any split-ring compression connector (as opposed to indenter or set-screw designs) provided a watertight connection. This has proven false, and now connectors and couplings that are in fact watertight and suitable for wet locations are marked accordingly. They usually have an inner nonmetallic gland of some sort, although one manufacturer has a solid (not split) compression ring design that requires the application of a torque wrench to a crow's-foot end and special calculations in order to correctly seat the ring.

212. Support for EMT. The NEC requires EMT to be securely fastened in place at least every 3 m (10 ft) and within 900 mm (3 ft) of each outlet box, junction box, cabinet, or fitting. Methods of support are similar to those described for rigid metal conduit. Figure 9.96 shows the use of spring clips to secure EMT to U-channel supports. If there are no available structural support points, the permitted distance to termination points increases to 1.5 m (5 ft), just as for rigid metal conduit and intermediate metal conduit (see Sec. 106), but with one significant difference: the tubing must be unbroken. If there is a coupling near the box or conduit body, then the maximum distance remains at 900 mm (3 ft) EMT used as a pipe nipple between enclosures is also subject to the new restrictions on support in such applications; review Sec. 109 for more information.

213. Bending EMT. Bends in EMT must also be made so that the tubing will not be injured and the internal diameter of the tubing will not be effectively reduced. The radius of the curve of the inner bend or any field bend shall not be less than shown in Secs. 86 and 93. For metric designators 16 through 35 (trade sizes $\frac{1}{2}$ through $1\frac{1}{4}$) EMT, a hand bender, as shown in Fig. 9.97, I, is used. The EMT hickey shown in Fig. 9.97, II, is only for making


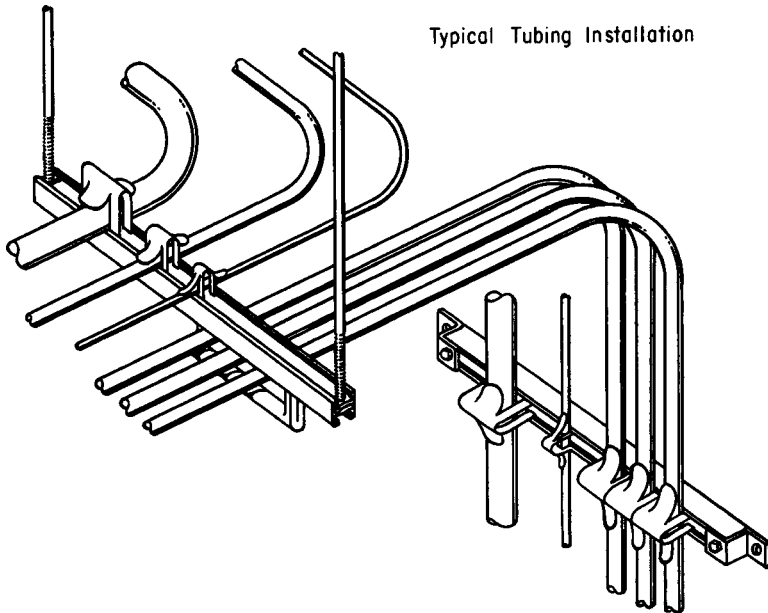


FIGURE 9.96 Spring clips secure EMT to U-channel supports.

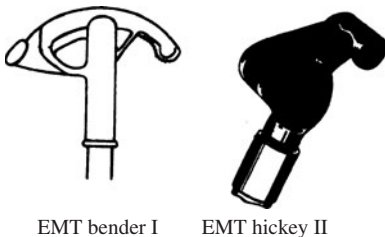

EMT bender I EMT hickey II

FIGURE 9.97 Typical EMT bender and hickey.

small offsets in metric designator 41 or 53 (1½ or 2 trade size) EMT. The wall thickness of EMT is not generally amenable to significant bends with a hickey, because there is not enough side wall support. Almost all bends in sizes larger than metric designator 35 (trade size 1¼) are made with hydraulic benders, and many rigid-metal-conduit hand *benders* are suitable for EMT. Refer to discussion in Secs. 114 and 115.

214. Installation methods. The techniques of installation described in the sections for rigid metal conduit will apply, in general, to EMT. Such items as junction or pull boxes, number of conductors permitted in a single raceway, and support hardware apply to both these wiring methods.

NONMETALLIC-SHEATHED-CABLE WIRING

215. Nonmetallic-sheathed cable is used for the wiring of new and old residences and for small offices and stores. For decades it was only permitted in one- and two-family dwellings or in multifamily dwellings or other structures not exceeding three floors above grade. This limitation was significantly relaxed in the 2002 NEC, as described at the

end of this section. This cable is frequently employed for extensions to existing installations and is commonly used in small apartment houses. Nonmetallic-sheathed cable can be run either exposed on ceilings and walls or concealed in hollow partitions or between floors and ceilings. It provides a reasonably safe and reliable wiring installation of low first cost. It is made in three types: Type NM, Type NMC, and Type NMS. Conductors are copper, aluminum, or copper-clad aluminum.

Types NM and NMS may be used only in normally dry locations which are free from corrosive vapors or fumes. It may be run or fished in air voids in masonry-block or tile walls where not exposed or subject to excessive moisture or dampness. Types NM and NMS must not be embedded in masonry, concrete, fill, or plaster or run in a shallow chase in masonry, concrete or adobe and covered with plaster, adobe or similar finish.

Type NMC is moisture- and corrosion-resistant, so that its use is allowed in dry, moist, damp, or corrosive locations and in outside and inside walls of masonry block or tile. If embedded in plaster or adobe or run in a shallow chase in masonry walls and covered with plaster or adobe, it shall be protected against damage from nails by a cover of corrosion-resistant coated steel at least 1.59 mm ($1/16$ in.) thick, or a listed alternative verified to be of equal or better hardness, under the final surface finish.

Neither Types NM and NMC, nor Type NMS is allowed to be used (1) as service-entrance cable, (2) in commercial garages, (3) in theaters and similar locations except as provided in Article 518 of the NEC, (4) in motion-picture studios, (5) in storage-battery rooms, (6) in hoistways, or on elevators or escalators, (7) in any hazardous location except as permitted by specific allowances in the hazardous location articles, or (8) embedded in poured cement, concrete, or aggregate. The cable is also not permitted to be run exposed above a suspended ceiling in other than one- or two-family dwellings. Since the definition of "exposed" in NEC Article 100 includes areas behind lift-out panels, this effectively precludes the use of this wiring method above such ceilings, even if it is firmly attached to structural members at all points.

The NFPA Standards Council made a dramatic change in the allowable uses of Type NM cable when it released the 2002 NEC. The Council agreed that Type NM cable could now be used in any building permitted to be of Types III, IV, or V construction, even if actually constructed as Type I or II, provided (for nonresidential uses) the cable is located behind the same sort of thermal barrier normally required for ENT (Sec. 27) in high-rise buildings. There is no NEC waiver for buildings with a sprinkler system; however, building codes generally permit more extensive buildings to be constructed as Type III, IV, or V if a full sprinkler system is in place. The Council action was based on the entire record before it, including NFPA fire statistics that showed no association between Type NM cable and fire prevalence, and the report of the NFPA Toxicity Advisory Committee to the effect that in a fire the contribution of Type NM cable jacketing materials is a negligible fraction of the total smoke load.

This is the first time the NEC has put building construction types at the center of a rule governing the use of a wiring method, although some rules on transformer installations include these references. Refer to *Annex E, Types of Construction* in the NEC for the complete descriptions. They can be roughly summarized as follows:

Type I—All structural members are noncombustible (or limited-combustible) and have fire ratings generally of 3 or 4 h (less in some cases), depending on the specific usage.

Type II—All structural members are as in Type I but the fire resistance generally drops to 2 or 1 h (less in some cases), depending on the specific usage.

Type III—All exterior bearing walls are noncombustible (or limited combustible) and have fire ratings of at least 2 h, but interior structural elements can be of approved combustible material.

Type IV—All exterior and interior bearing walls are noncombustible (or limited combustible) and interior columns, beams, girders, arches, trusses, floors, and roofs are of heavy timber construction without concealed spaces.

Type V—Buildings constructed of approved combustible material, that for some structural elements is subject to a minimum 1-h fire resistance rating.

216. Nonmetallic-sheathed cable, with grounding wires, is manufactured in two-, three-, and four-conductor cables in sizes running from 14 up to 2 AWG. (See Fig. 9.98.) Each wire is insulated with rubber or thermoplastic of the same thickness as required on single wires, except that the cable will have an approved size of covered or bare conductor for grounding purposes only. In Type NM cable the conductors have an outer flame-retardant and moisture-resistant coverings. Type NMC cable is similar in construction to Type NM cable except that it is protected by an outer covering that is flame-retardant and moisture-, fungus-, and corrosion-resistant. Type NMS cable can contain power, communications, and signaling conductors enclosed within a common sheath of moisture-resistant, flame-retardant, nonmetallic materials. Although part of the cable assembly, these other conductors must be firmly separated from the power conductors by the cable sheath, and thereby respect the system separation rules in the NEC.




FIGURE 9.98 Type NM cable marked NM-B has insulation rated 90°C with a final cable ampacity that given in NEC Table 310.16 for 60°C conductors.

217. When nonmetallic-sheathed cable is installed exposed, it is supported directly on the walls or ceiling with straps or staples. The distance between supports must not be greater than 1.4 m (4½ ft), and there must be a support within 300 mm (12 in.) of each outlet box or fitting. The cable must follow the surface of the wall or ceiling and not break from beam to beam. Whenever nonmetallic-sheathed cable does not follow the building finish, it must be protected from physical damage. This protection may consist of a wooden running board or metal protecting strip or a piece of conduit or EMT. It is preferable to use either conduit, especially Schedule 80 rigid PVC conduit, or EMT, especially where the cable passes through floors.

218. When nonmetallic-sheathed cable is installed concealed in new buildings, the cable is fastened to the joists or beams by means of staples. The distance between supports should not be greater than 1.4 m (4½ ft). In wiring finished buildings, when it is impracticable to support the cable between outlets, it can be fished from outlet to outlet in the same manner as Type AC cable. Where the cable is run through holes bored in studs, joists, etc., no protection is required. The holes should be bored as near to the center of the timber as possible and not less than 32 mm (1¼ in.) from the nearest edge when practical. There are cable supports that have slots to hold the cables parallel to and away from the framing member, allowing the 32 mm (1¼-in.) spacing to be maintained for multiple cables even on narrow framing members. An approved method of installing nonmetallic-sheathed cable in a new building is shown in Fig. 9.99.

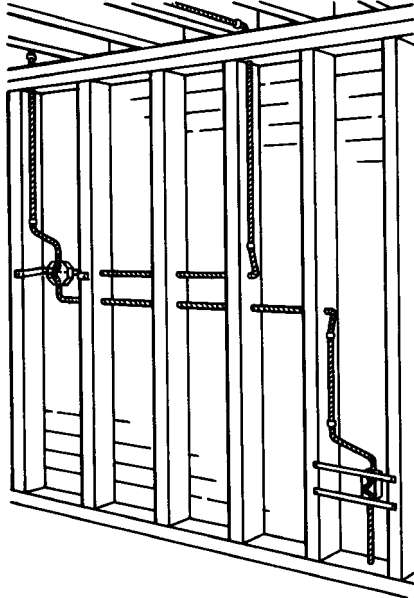


FIGURE 9.99 Method of installing nonmetallic-sheathed cable concealed in new buildings.

219. No joints or splices should be made in nonmetallic-sheathed-cable wiring except in outlet or junction boxes. This rule applies to both exposed and concealed installations. The loop system is employed generally for concealed work. The cable is looped from outlet to outlet, and the use of junction boxes is avoided.

220. Bends in cable (National Electrical Code) shall be so made and other handling shall be such that the protective coverings of the cable will not be injured, and no bend shall have a radius less than five times the diameter of the cable.

221. An approved outlet box or fitting must be provided at all outlets or switch locations. The cable must be attached to the box with some form of approved device which will substantially close the opening in the box. This connection of the cable to the box can be accomplished by means of a box with a built-in clamp, or a clamp connector (Fig. 9.100) can be employed with a box having conduit knock-outs. For data on metal boxes, see Sec. 115 of Div. 4.

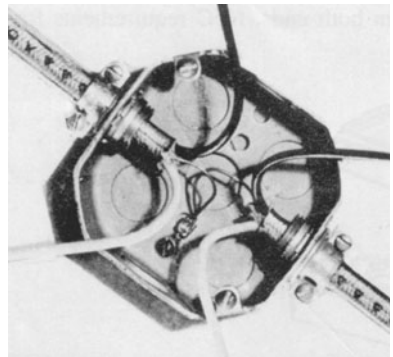


FIGURE 9.100 Nonmetallic-sheathed cable attached to outlet box by means of clamp connectors.

222. NEC rules require that outlet boxes be grounded, and most receptacles and switch yokes must be grounded as well. This means the equipment grounding wire in Type NM cable must be terminated properly so the required grounding connections can be made. This grounding wire is covered by the same 6-in. (150 mm) minimum-length-of-conductor rule as the insulated conductors, and 8 in. (200 mm) is an advisable minimum length for workability. If outlet boxes with built-in clamps are employed, the required contact between the box and the grounding wire can be made by means of a small grounding clip. The connection is made by fastening the clip over the grounding wire and box (Fig. 9.101). These copper grounding clips are commonly called G clips. The wire can also be connected to the box with a ground screw that has no other function.

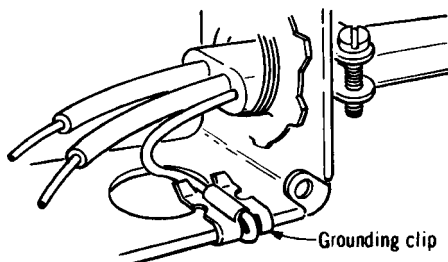


FIGURE 9.101 Grounding clip attached to metal box. In actual practice, *both* the circuit conductors *and* the grounding conductor must not be less than 6 in. (150 mm) in length from the point where they emerge from the cable jacket, and they must be long enough to extend out of the box by at least 3 in. (75 mm). [*Electrical Construction and Maintenance*]

223. Boxes of insulating material (Fig. 4.156 of Div. 4) can be used with nonmetallic-sheathed cable instead of metal boxes. With these boxes, grounding is limited, and it is not necessary to connect each box to a grounding conductor. The boxes shown in Fig. 4.156 of Div. 4 are made of plastic. Cables shall be secured to the box except that size 2 $\frac{1}{4}$ in. by 4 in. and smaller may be fastened within 200 mm (8 in.) of the box measured along the sheath. Thin sections of material are knocked out to provide openings to bring the cable into the box. In the case of nonmetallic boxes, the bare wires are spliced together and to jumpers extending to grounding terminals on receptacles and snap switch yokes.

224. A line of outlets for surface mounting with exposed nonmetallic-sheathed-cable wiring is available (Fig. 9.102). They are made of porcelain or plastic; a clamp inside the case holds the cable. There are terminal screws near each end so that cables can be brought in from both ends. NEC requirements for these devices are given in Sec. 225.

225. Devices of insulating material. Switch, outlet, and tap devices of insulating material may be used without boxes in exposed cable wiring and for concealed work for rewiring in existing buildings when the cable is concealed and fished. Openings in such devices shall form a close fit around the outer covering of the cable, and the device shall fully enclose that part of the cable from which any part of the covering has been removed.

If connections to conductors are by binding screw terminals, there shall be available as many terminals as conductors.

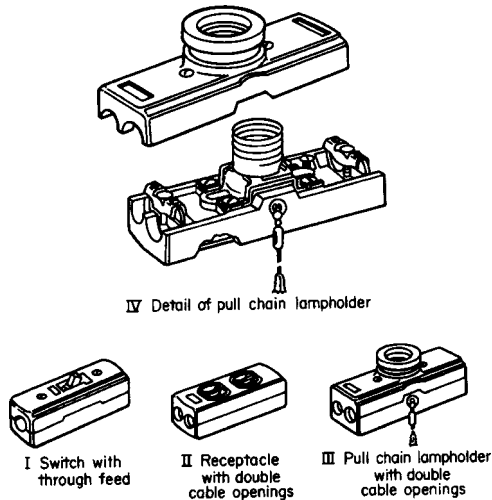


FIGURE 9.102 Surface outlets for use with nonmetallic-sheathed cable.

226. Methods of installing nonmetallic-sheathed cable in accessible attics or roof spaces are shown in Fig. 9.103. When the cable is carried across the top of floor beams or across the face of rafters within 2.1 m (7 ft) of the floor, the cable should be protected by guard strips, as shown at *B*. If the attic is accessible only through a scuttle hole without permanent stairs or ladders, the protection is required only within 1.8 m (6 ft) of the edge of the scuttle hole. The cable may be supported along the sides of rafters, studs, or floor joists without any additional protection, as at *D*.

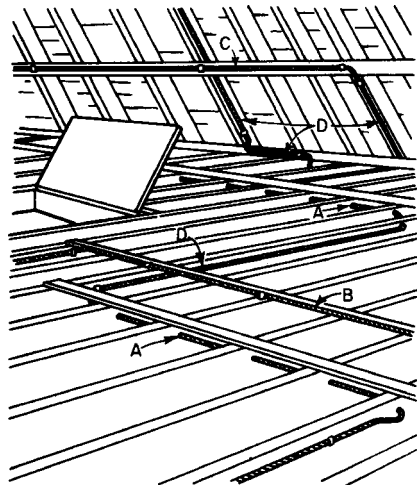


FIGURE 9.103 Methods of installing nonmetallic-sheathed cable in accessible attics or roof spaces.

227. Methods of installing nonmetallic-sheathed cable in unfinished cellars or basements are shown in Fig. 9.104. The cable may be run through bored holes in the floor joists and along the sides or faces of joists without any additional protection such as running boards or guard strips, as shown at *A* and *B*. When the cable is run at angles across the bottom faces of floor joists, the cable must be supported on the underside of running boards as shown in *C*. Assemblies containing not smaller than two No. 6 or three No. 8 conductors may be secured directly on the bottom of the joists. Cables run through or parallel to framing members or furring strips must be at least 1 1/4 in. (32 mm) from their front edges, or else protected with steel at least 1/16-in thick (or listed as equivalent), or sleeved in listed conduit or tubing equipped with a bushing where the cable

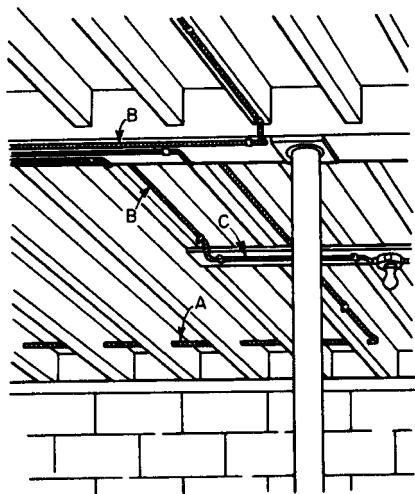


FIGURE 9.104 Methods of installing nonmetallic-sheathed cable in unfinished cellars or basements.

enters. The cable must be secured within 12 in. (300 mm) of where it enters the raceway, and the cable jacket must remain intact through the length of the raceway and into the box not less than $\frac{1}{4}$ in. (6 mm).

228. Special rules apply to Type NM cable ampacities.

(Adapted from *Practical Electrical Wiring*, 20th ed., © Park Publishing, 2008, all rights reserved.) Although the individual conductors must have a 90°C temperature rating, the final allowable ampacity must not exceed that given in the 60°C column in NEC Table 310.16 (reproduced in Table 18 of Div. 12). This applies after adjustments for ambient temperature and for mutual conductor heating have been factored. Although mutual conductor heating may seem odd, you must apply this to all the conductors in a group of cables if those cables are “bundled” for

longer than 24 in. This includes routing more than one cable through a succession of single bored holes; the NEC now requires the use of derating penalties if multiple cables are run together through thermal insulation. You need to consider this requirement in a basement, for example, where you might be tempted to run large numbers of cables back to the panelboard through a set of holes lined up through the floor joists and ending at the panel. The derating penalties in NEC 310.15(B)(2)(a) (see Div. 12, Sec. 17, item 5) apply to this condition, as well as to any instance in which more than two cables with two or more wires pass through a common opening in wood framing that is caulked or fire- or draft-stopped.

In addition, a special restriction (which also applies to any wiring method) prevents making use of the general permission to round up to the next higher overcurrent protective device if a branch circuit supplies multiple receptacle outlets. These two conditions mean that for any branch circuits supplying multiple receptacle outlets, if the resulting derated ampacity drops below the branch circuit size even by a single ampere, then you must separate the conductors. For example, the ampacity of 12 AWG in the 90°C column is 30 A, and for 14 AWG it is 25 A. Suppose just five 2-wire cables run through a common set of bored holes. Since the derating penalty is 50 percent, the resulting diminished ampacity condemns any 14 AWG cables on 15-A circuits, and any 12 AWG cables on 20-A circuits—the usual assumption. You could, of course, increase the wires by a cable size, but normally it is better to bore a parallel set of holes.

MINERAL-INSULATED METAL-SHEATHED-CABLE WIRING

229. Mineral-insulated metal-sheathed cable (Type MI) was developed to fill the need for an electrical cable which would have high heat and water resistance and would not be bulky or difficult to install. It provides a general wiring system which is suitable for a great variety of applications for systems with voltages up to and including 600 V. Type MI is approved for use in almost any type of installation. The NEC states that MI cable may be used for services, feeders, and branch circuits in both exposed and concealed work, in

dry or wet locations, and embedded in plaster finish on brick or other masonry. It may be used where exposed to weather or continuous moisture, for underground runs and embedded in masonry, concrete, or fill, in buildings in the course of construction or where exposed to oil, gasoline, or other conditions not having a deteriorating effect on the metal sheath. The sheath of mineral-insulated metal-sheathed cable exposed to destructive corrosive conditions, such as some types of cinder fill, must be protected by materials suitable for those conditions. In addition, MI cable is approved for installation in all hazardous locations.

Type MI cable is composed of only two materials, which are assembled as three components: the conductor, the insulation, and the outer sheath. The conductors are fabricated from high-conductivity copper. The insulation is a specially selected, highly compressed pure magnesium oxide which is processed to maintain permanently the excellent electrical characteristics inherent in this material. The sheath is a round, seamless copper or steel tube which provides the requirements of heat and flame resistance, mechanical protection, and ductility. The wires, insulation, and protective copper or alloy steel sheath are manufactured as a unit, as shown in Fig. 9.105. MI cable is available in single-, two-, three-, four-, and seven-conductor assemblies. Refer to Sec. 100 of Div. 2 for data. The cable possesses exceptional ability to withstand severe mechanical abuse, as shown in Sec. 230 by the summary of mechanical properties as determined from tests.

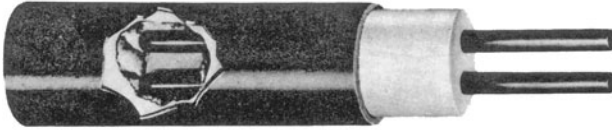


FIGURE 9.105 Type MI cable [General Cable Co.]

Both ends of each coil of cable are factory-sealed to prevent ingress of moisture into the cable. It is advisable to reseal unused cable in coils that will stand around for any length of time and to apply permanent seals to each cable run as promptly as possible. Should moisture enter cable ends during field handling and installation, the affected insulation will normally be discarded in the process of stripping back and terminating the cable. If necessary, the cable can be further dried by careful application of a torch over approximately a 2-ft (0.6-m) section of cable adjacent to the end. Insulation-resistance measurements checked by an insulation tester should indicate adequate dryness.

The general method of installation is similar to that of metal-clad cable. Standard junction or outlet boxes may be used at each point of termination or when two lengths of cable are to be joined. The tap size of these units should be the same as listed under "Corresponding Conduit Size," as given in Sec. 96 of Div. 2.

230. Summary of Mechanical Tests on Mineral-Insulated Cable

	Type MI	Metal-clad cable	EMT Type T	Rigid conduit Type T
Impact	B	D	C	A
Crushing	A	D	C	B

NOTES. Performance is indicated by the letter "grades"; A signifies best performance. EMT is electrical metallic tubing. Type T refers to Underwriters' Code Grade thermoplastic-insulated conductors. In the impact test, the cable was laid over an anvil hardy having a smoothly rounded edge with a $\frac{1}{4}$ in. radius. Weights of 50, 20, and 10 lb were dropped on the cable, and the length of drop determined which produced not more than two failures in 10 separate blows. In the crushing test the cable was crushed against the same anvil hardy used in the impact test by a flat steel plate in a compression-testing machine. The force required to crush the cable to 50 percent of its original diameter was determined.

231. Installation of MI cable. It is suggested that the MI be trained into position where the installation allows. The cable can also be snaked and fished into and through congested areas. In some cases, a simple rotating X frame has been used to advantage, facilitating paying off the cable as it is snaked through barriers. After training to position, the cable can be secured with one-hole clips, as offered by many manufacturers of conduit clips, multicable gang straps, channel and spring-set clip-supporting arrangements, cable trays, conduit hangers, and spacing bars and straps.

The cable can be trained into final position by hand in most cases. True alignment can be ensured by tapping the cable lightly along its axis with a wooden mallet. True round sweeps can be made in the larger-sized cable runs with a hand hickey, but this usually is not necessary.

NOTE NEC requires that the radius of bends (at the inner edge of the bend) shall be not less than five cable diameters for cable not more than 20 mm ($3/4$ in.) in external diameter and 10 times cable diameters greater than 20 mm ($3/4$ in.) in external diameter. Cable (except where fished) is to be supported at intervals not exceeding 1.8 m (6 ft).

The copper itself being in an annealed condition, MI is easily worked. Keeping the cable straight when unwinding the coil facilitates final training. The cable is cut after measurement, allowing for conductor tails (stretching steel wire over the proposed run is an ideal method of measuring). MI can be terminated before or after it is laid in position. If undue stressing and sharp bending are avoided during preliminary handling and roughing in work, hardening of the cable will be minimized, resulting in a more readily installed system.

In portions of dairies, laundries, canneries, and other wet locations and in locations where walls are frequently washed, the entire wiring system, including all boxes and fittings used therewith, shall be made watertight, and the cable shall be mounted so that there is at least 6 mm ($1/4$ in.) air space between it and the wall or other supporting surface.

The Code states that at all points where mineral-insulated metal-sheathed cable terminates, a seal shall be provided immediately after stripping to prevent the entrance of moisture into the mineral insulation and that, in addition, the conductors extending beyond the sheath shall be insulated with an approved insulating material. Also, when Type MI cable is connected to boxes or equipment, the fittings shall be identified for such use. MI cable terminal fittings (Fig. 9.106) are designed to seal the cable ends hermetically to prevent the entrance of moisture into the cable as well as secure mechanically the cable to the outlet box, motor, or other apparatus. The complete terminal consists of an end seal and a threaded gland.


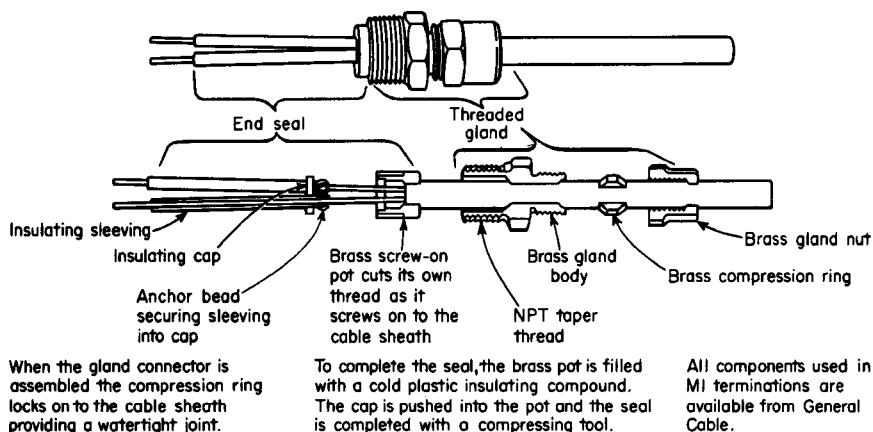


FIGURE 9.106 Standard termination for mineral-insulated cables suitable for use at temperatures up to 85°C [General Cable Co.]

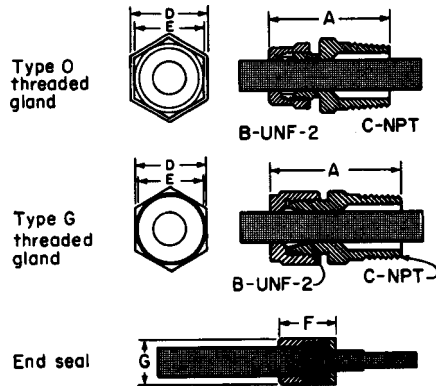232. Termination Dimensions



(Dimensions in Inches)

Group size	Pot						
	A	B	C*	D	E	F	G
Type O gland							
$\frac{3}{8}$	$1\frac{5}{16}$	$\frac{1}{2}$ -20	$\frac{3}{8}$ -18	$1\frac{1}{16}$	$\frac{3}{8}$	$\frac{9}{16}$	$\frac{18}{32}$
$\frac{1}{2}$	$1\frac{9}{16}$	$\frac{5}{8}$ -18	$\frac{1}{3}$ -14	$\frac{7}{8}$	$\frac{3}{4}$	$\frac{27}{32}$	$\frac{19}{32}$
$\frac{3}{4}$	$1\frac{3}{4}$	$\frac{7}{8}$ -14	$\frac{3}{4}$ -14	$1\frac{1}{16}$	1	$1\frac{1}{8}$	$\frac{25}{32}$
1	$1\frac{15}{16}^{\dagger}$	1-14	1-11 $\frac{1}{2}$	$1\frac{5}{16}$	$1\frac{1}{6}$	$1\frac{1}{8}$	$\frac{31}{32}$
Type G gland							
$\frac{1}{2}$	$1\frac{3}{4}$	$\frac{3}{4}$ -16	$\frac{1}{2}$ -14	$\frac{7}{8}$	$\frac{7}{8}$	$\frac{27}{32}$	$\frac{18}{32}$
$\frac{3}{4}$	$2\frac{1}{8}$	$\frac{7}{8}$ -14	$\frac{3}{4}$ -14	$1\frac{1}{16}$	1	$1\frac{1}{8}$	$\frac{25}{32}$
1	$2\frac{1}{2}$	$1\frac{1}{8}$	1-11 $\frac{1}{2}$	$1\frac{5}{16}$	$1\frac{1}{4}$	$1\frac{5}{8}$	$\frac{31}{32}$

*STD electrical conduit pipe thread.

[†]This dimension is $2\frac{5}{16}$ on sizes 637 and 684.

233. Termination Selection Chart

Application	Seals			
	Designation	Sleeving	Sealant	Glands
General use up to 85°C, wet and dry location—UL listed	Type O	PVC	Type O plastic	Type O
Hazardous locations, wet and dry up to 85°C—UL listed epoxy	Type H	PVC	Type H	Type G
Low temperatures (below -10°C)	Low temperature	Silicone rubber (Fiberglass reinforced)	Type O plastic	Type O
High temperatures (up to 125°C)	High temperatures	Silicone rubber (Fiberglass reinforced)	Type O epoxy	Type O

Ceramic-to-metal seals are available for temperature in excess of 125°C.

NOTES.

- 1. Type G glands may be used as an alternative for Type O glands in any application.
- 2. Silicone rubber Fiberglass-reinforced sleeving may be used as an alternative for PVC sleeving in any general-use application.
- 3. Type H epoxy may be used as an alternative sealant in any application.
- 4. Type O Plastic and Type O epoxy may be used as alternative sealants in Class I, Group B, and Class II, Groups E, F, and G, hazardous location.

234. Termination procedure for MI cable

Cable End Seal. Basic parts of the cable-seal termination and the complete seal are shown in Fig. 9.107. The following parts are required for making the seal.

- 1. Screw-on pot, a self-thread brass cylinder
- 2. Silicone rubber or PVC tubing, for insulating the exposed conductor ends
- 3. Insulating cap
- 4. Sealing compound, a soft plastic material or two-part epoxy compound
- 5. Crimping and stripping tools

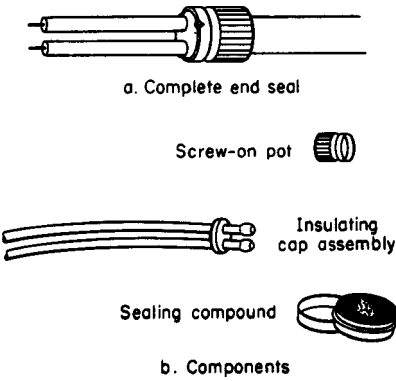


FIGURE 9.107 End seal for MI cable. [General Cable Co.]

The cable-seal termination is made by removing the copper sheath with the stripping tool to expose the length of conductors needed for the connections, screwing the self-threading screw-on pot onto the end of the cable sheath, filling the pot with sealing compound, slipping the insulating tubing and cap assembly over the exposed conductors and pressing the cap down into the end of the screw-on pot, and, finally, securing in place by crimping the edge of the pot down over the insulating cap. This insulates the end of each exposed conductor and provides a moisture seal over the insulation.

Threaded Gland. Figure 9.108 shows the parts of the threaded gland, with the gland in place before tightening and, finally, with the gland locked in the final position. The following parts are included:

1. Gland body
2. Compression ring
3. Gland nut

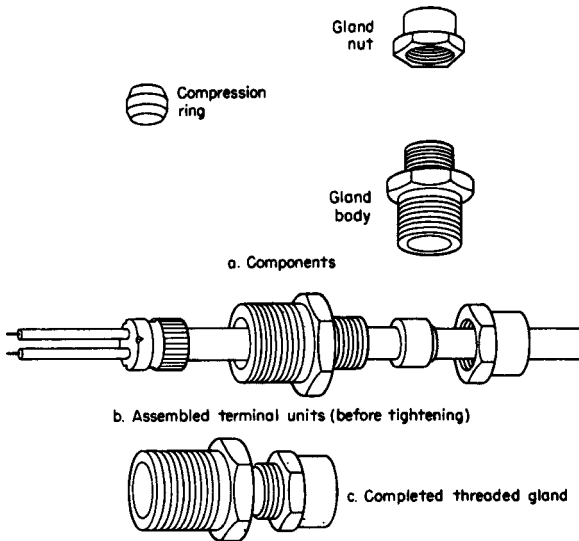


FIGURE 9.108 Threaded gland for MI cable. [General Cable Co.]

These gland parts are slipped over the end of the cable before the termination is applied, in the order of first the gland nut, then the compression nut, and finally the gland body. When the gland nut is screwed into the gland body over the compression ring, the ring is compressed onto the cable sheath, which anchors it into position. This can be applied at any point on the cable, but usually it is brought clear up to the end with the cable-seal termination seated into the counterbored end of the gland body. The outer end of the gland body is threaded for locknuts.

Assembly Tools

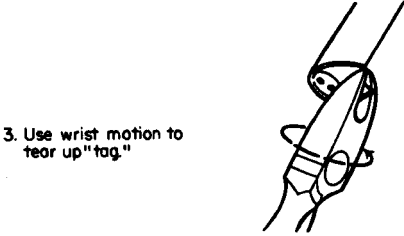
1. One hand vise
2. One screwdriver or nut driver
3. One copper tube cutter
4. One diagonal cutting pliers
5. Two pipe wrenches
6. One crimping and compressing tool
7. One stripping tool

235. Details of termination procedure for MI cable


(General Cable Co.)



1. Mark sheath only with a pencil at point which will expose desired conductor length





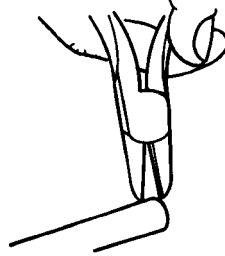3. Use wrist motion to tear up "tag."





2. Use diagonal cutters to start the rip.

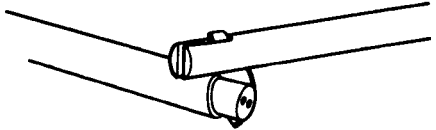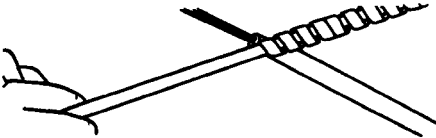4. Engage the tag in the slot of the rod and twist it around the cable. Wrist motion is continued as rod revolves about cable axis.



5. Keep rod at about 45° to the line of the cable. Keep bare rod against sheath and 45° will be regulated. Do not force tearing.

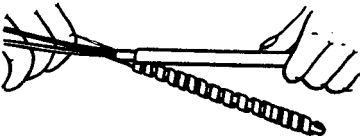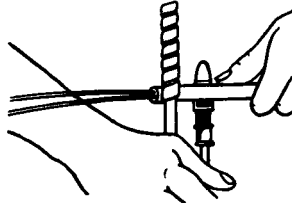6. Bring stripping tool perpendicular to axis of cable. Then ring the cable sheath at the pencil mark using a copper tube cutter. The depth of the cut should be approximately one half the thickness of the cable sheath. Do not cut through sheath.





7. After ringing, continue stripping as shown in Fig. 5 and tear off squarely at the ring. Remove any burrs at the end of the cable sheath with diagonal cutters.

235. Details of termination procedure for MI cable (Continued)



8. Slip the gland connector parts on to the cable in this order: gland nut, compression ring, gland body.

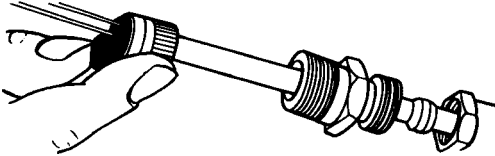9. Engage the self-threading pot finger tight. See that pot is square. Then screw on with pipe wrench engaging all threads. Examine inside of pot for cleanliness and metallic slivers or dust. Test for alignment by bringing gland body up to enclose pot.




10. Press plastic compound into sealing pot until it is packed tightly. Important: Be sure the hands are free from metal dust or filings while feeding compound into pot.

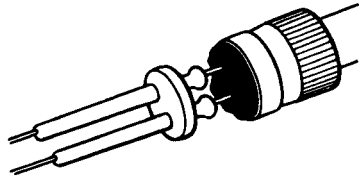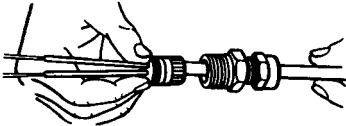
11. Slip cap and sleeving sub assembly into position



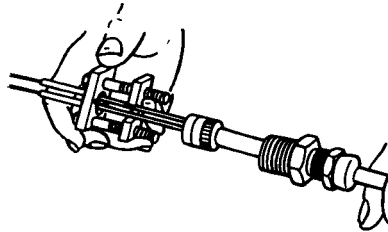
12. Force the insulating cap assembly into position on top of compound.



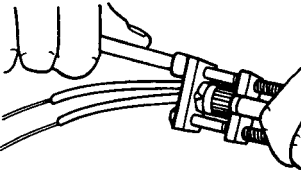13. Slip the compression and crimping tool over the insulating leads



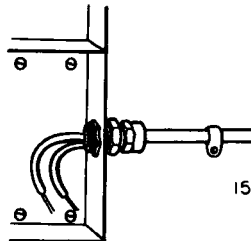14. After positioning crimping tool on pot, compress the insulating washer into place flush with the top of the pot by tightening the two slotted cap screws. This operation compresses the compound in the pot and crimps the edge of the pot into the insulating cap, holding it in place. Remove compression tool.



15. Completed termination in box utilizing standard lock nut.

MEDIUM-VOLTAGE-CABLE WIRING

236. Type MV cable is a single-conductor or multiconductor cable with extruded solid dielectric insulation. The cable may have an extruded jacket, a metallic covering, or a combination of both over the single conductors or the cabled conductors. (See Figs. 9.109, 9.110, and 9.111.)

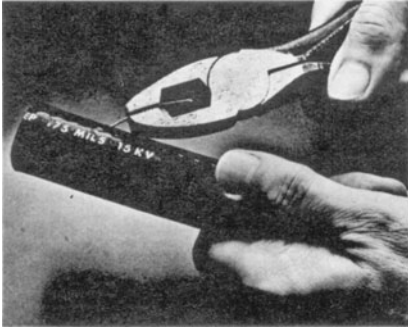


FIGURE 9.109 UniShield EP power cable, 5 kV to 35 kV. [Anaconda Company]

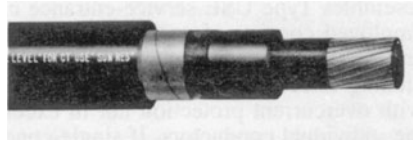


FIGURE 9.110 UniBlend EP shielded power cable, Type MV 90 copper conductor, 15,000 V, 90°C. [Anaconda Company]

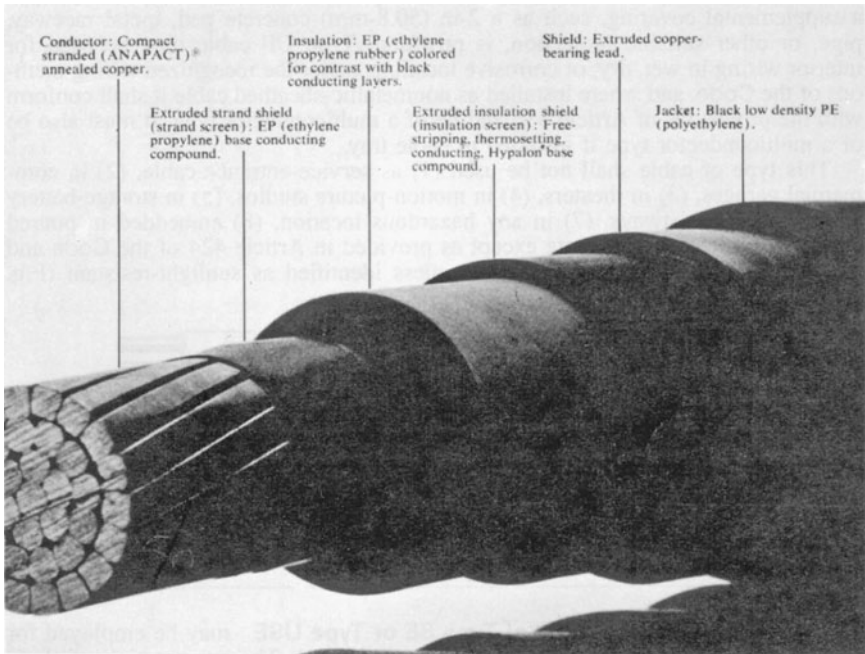


FIGURE 9.111 Compact stranded medium-voltage cable. [Anaconda Company]

237. Type MV cables are rated from 2001 V up to 35,000 V. The ampacities are governed by Sec. 310.60 of the National Electrical Code.

238. The construction of Type MV cable shall be in accordance with Article 310 of the NEC and may have aluminum, copper, or copper-clad aluminum conductors.

239. Power systems up to 35,000 V use Type MV cable, which is permitted in wet or dry locations, in raceways, in cable trays if identified for such use in messenger-supported wiring, or directly buried, installed in accordance with Sec. 300.50 of the NEC.

UNDERGROUND-FEEDER AND BRANCH-CIRCUIT-CABLE WIRING

240. Underground-feeder and branch-circuit cable provides an economical wiring system for wet and corrosive installations. Single-conductor Type UF cable resembles Type USE service-entrance cable in general appearance. The insulation employed consists of a plastic compound, NEC statements with respect to its use are: Underground-feeder and branch-circuit cable may be used underground, including direct burial in the earth, as feeder or branch-circuit cable where provided with overcurrent protection not in excess of the rated current-carrying capacity of the individual conductors. If single-conductor cables are installed, all cables of the feeder circuit, subfeeder circuit, or branch circuit, including the neutral and equipment grounding conductor, if any, shall be run together in the same trench or raceway. If the cable is buried directly in the earth, the minimum burial depth permitted is 600 mm (24 in.) if the cable is unprotected and 450 mm (18 in.) when a supplemental covering, such as a 50 mm (2 in.) concrete pad, metal raceway, pipe, or other suitable protection, is provided. Type UF cable may be used for interior wiring in wet, dry, or corrosive locations under the recognized wiring methods of the Code, and where installed as nonmetallic-sheathed cable it shall conform to the provisions of Article 334 and be of a multiconductor type. It must also be of a multiconductor type if installed in cable tray.

This type of cable shall not be used (1) as service-entrance cable, (2) in commercial garages, (3) in theaters, (4) in motion-picture studios, (5) in storage-battery rooms, (6) in hoistways, (7) in any hazardous location, (8) embedded in poured cement, concrete, or aggregate except as provided in Article 424 of the Code, and (9) where exposed to direct sunrays, unless identified as sunlight-resistant (Fig. 9.112).



FIGURE 9.112 Type UF two-conductor cable suitable for direct burial.

INTERIOR WIRING WITH SERVICE-ENTRANCE CABLE

241. Service-entrance cable of Type SE or Type USE may be employed for interior wiring, installed either concealed or exposed. The construction of these cables is described in Sec. 244. Cables with all the conductors insulated may be used for general interior wiring. Those without insulation on the grounded conductor may be used only on systems not exceeding 150 V to ground as branch circuits to existing ranges and clothes dryers. The cables with uninsulated grounding conductors must have a final nonmetallic outer covering. Cables which are used for interior wiring must be installed in accordance

with the rules for nonmetallic sheathed cable discussed in Secs. 215 to 228. In such cases the uninsulated wire becomes an equipment grounding conductor only, and is not allowed to be a circuit conductor.

242. Ampacity rules change; effects of thermal insulation. An exemption from the Type NM requirement that the final ampacity be based on the 60°C ampacity column (see Sec. 228) was removed in the 2008 NEC cycle. The results, where enforced, will be dramatic. For example, 4/0 AWG Aluminum Type SE cable made with three insulated conductors and a smaller bare conductor has been in common use for decades as a 200 A feeder run to dwelling unit panels in multifamily housing. It has an ampacity of 180 A under the 75°C ampacity column. Since the next higher standard-size overcurrent device is 200 A, it could have been used for this purpose unless the actual load ran in the 180 to 200 A window, a very unusual circumstance. Now it must be taken as a 60°C conductor, reducing the ampacity to 150 A.

The change in the ampacity rule is technically questionable in most instances; however, there is one application where the change is entirely justified, and might even not go far enough. When wiring is embedded in thermal insulation, the ampacity is significantly degraded. The results tend to get progressively worse for larger cable sizes, because larger cables are generally installed to meet an expectation of higher current draw. The heat generated by a conductor is I^2R . Larger cables carrying larger currents reduce the heat by the first power due to larger radiating surface areas, and increase the heat by the square of the current increase. This means that large cables tend to be worse than smaller ones, because the latter increase in heat ($+\Delta I^2$) usually overwhelms the former decrease ($-\Delta R$). The present rule for 60°C works well for branch circuits, but not as well for large feeders.

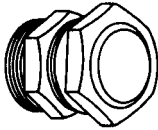
In the 1987 NEC cycle, this was confirmed by actual NEMA testing, with dramatic results. The test used 2 AWG aluminum Type SE cable of the “SEU” style (two insulated conductors and the grounded conductor configured as a spirally-wrapped conductor around the ungrounded conductors). This cable is used routinely for 100 A residential services [due to the special ampacity accorded for this purpose by 310/15(B)(6)]. It was run through thermal insulation under controlled test conditions. Specifically, the cable was run embedded in cellulose insulation with 7 in above it. Thermocouples were placed on the cable, and the various loads under test were maintained for long periods. This cable has a Table 310.16 ampacity (terminations not considered for this purpose) of 100 A. When the cable was loaded to 100 A, the cable jacket was “completely charred” as well as adjacent “charred wood members,” all while the cable was operating within its table ampacity limitations. In fact, the testing showed (65 A caused 96°C operation) the cable exceeded its rated operating temperature at any time the continuous current exceeded about two-thirds of the table ampacity.

These results strongly demonstrate the fact that the ampacity of a conductor is not necessarily what a table may predict. The ampacity of a conductor is its ability to carry current continuously *under the conditions of use*. This is determined by thermodynamics. The ampacity of 2 AWG aluminum XHHW configured as 2/3 Al SEU cable and embedded in cellulose insulation is approximately 60 A. Actually, the ampacity corresponding to Table 310.16 would be even less than that, because Table 310.16 is structured around three current-carrying conductors and this testing only used two of the three conductors in the test circuit.


This testing focused on Type SE cable, but a test run using 6 AWG copper in metal conduit embedded in foam insulation overheated those conductors as well. There is no ampacity table for thermal insulation, and it would be impossible to create one, because variations in R factors significantly change end results. However, it is fair to say, for example, that the ampacity of 4/0 Al SE cable (table ampacity of 205 A) embedded in thermal insulation is

far less than even the 60°C table result of 150 A would predict. The NEC, in 310.10, requires that no conductor may be operated above the temperature limitations of its insulation. That is the only NEC rule that covers this point, and it is referenced in a number of cable articles for this reason. To the extent practicable, good practice is to route larger circuits in such a way as to avoid contact with thermal insulation.

243. The principal use of service-entrance cable for interior wiring in dwellings is for branch circuits supplying ranges or water heaters and in farm wiring as feeders from the master service to supply the other buildings that are wired for electricity. It is also commonly used for both indoor and outdoor feeders, even for 3-phase 4-wire commercial applications. The cable is supported on the building structure by means of single-hole or two-hole cable straps made in different sizes to accommodate the size of cable. They are similar in appearance to those used for rigid conduit. Connection to switch or outlet boxes is made by means of a connector (Fig. 9.113), which is made in watertight and nonwatertight types. A typical range installation is shown in Fig. 9.114.



I Watertight Screw Connector.

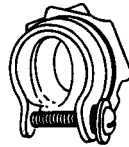

II Nonwatertight Connector.

FIGURE 9.113 Box connectors for service-entrance cable. [General Electric Co.]

244. Types of cables, indoor-use exclusion.

Two common types of cables are shown in Figs. 9.115 and 9.116. The three-conductor Type SE cable in Fig. 9.115 consists of two insulated conductors and one concentric-stranded insulated conductor (generally used as the grounded-neutral conductor). This cable is limited to services that do not exceed 150 V to ground, such as a 120/240-V single-phase supply. If used as a three-wire 120/240-V branch circuit to a range, wall-mounted oven, counter-mounted cooking unit, or clothes dryer, this cable must originate at the service equipment. In such instances, the uninsulated neutral conductor may be used to ground the metal frame of the equipment supplied, but such application is limited to existing branch-circuit installations only.

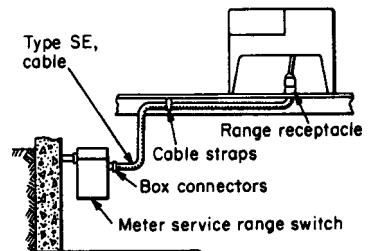


FIGURE 9.114 Installation of electric range wired with service-entrance cable.



FIGURE 9.115 Four-conductor Type SE cables uses three insulated conductors and a bare equipment ground.

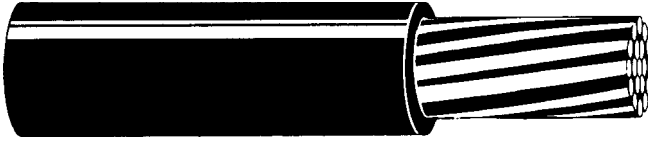


FIGURE 9.116 Single-conductor Type USE cable suitable for direct burial.

Figure 9.116 shows a single-conductor 4/0 aluminum Type USE cable. This cable, if it has no other designation, is limited to underground applications with an allowance for an outdoor only, above-grade termination. It must never be brought into a building unless it also has a building wire classification to go along with the USE designation. For example, it is not uncommon to see a Type USE/RHW cable that has been evaluated for use within buildings as well as for direct burial. When used in direct-burial applications, such a cable has a 75°C rating. The ampacity ratings of conductors are listed in Tables 19 through 23 of Div. 12. For underground applications Type USE cable should be buried not less than the depths specified for Type UF cables in Sec. 240. For over 600 V refer to Sec. 131 of Div. 8.

UNDERFLOOR-RACEWAY WIRING

245. Underfloor-raceway systems are used principally in office buildings for the installation of the wiring for telephone and signal systems and for convenience outlets for electrically operated office machinery. They provide a flexible system by which the location of outlets may be easily changed to accommodate the rearrangement of furniture and partitions. The NEC allows their use when embedded in the concrete or in the concrete fill of floors. Their installation is allowed only in locations which are free from corrosive or hazardous conditions. No wires larger than the maximum size approved for the particular raceway shall be installed. The voltage of the system must not exceed 600 V. The total cross-sectional area of all conductors in a duct must not be greater than 40 percent of the interior cross-sectional area of the duct.

246. An underfloor-raceway system consists of ducts laid below the surface of the floor and interconnected by means of special cast-iron floor junction boxes. The ducts for underfloor-raceway systems are made of either fiber or steel. Fiber ducts are made in two types, the open-bottom type and the completely enclosing type. Steel ducts are always of the completely enclosing type, usually having a rectangular cross section. In the underfloor-raceway system, provision is made for outlets by means of specially designed floor-outlet fittings which are screwed into the walls of the ducts. When fiber ducts are employed, the duct system is laid on the floor with or without openings or inserts for outlets. After the floor has been poured and finished as desired, the outlet fittings are installed into inserts or at any points along the ducts at which outlets are required. The method of installing outlet fittings is described in Sec. 261. When steel ducts are employed, provision for the outlet fittings must be made at the time that the ducts are laid, before the floor or floor fill is poured. The steel ducts are manufactured with threaded openings for outlet connections at regularly spaced intervals along the duct. During the installation of the raceway and the floor these outlet openings are closed with specially constructed plugs whose height

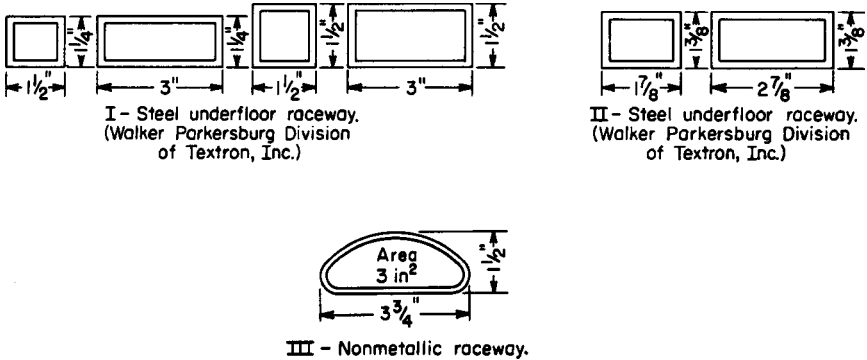


FIGURE 9.117 Dimensions of ducts for underfloor raceways.

can be adjusted to suit the floor level. The shapes and dimensions of the different types of ducts for underfloor raceways are shown in Fig. 9.117. For telephone and similar circuits, much wider ducts can be obtained.

247. General rules for the installation of underfloor raceways. In general, underfloor raceways should be installed so that there is at least 20 mm ($\frac{3}{4}$ in.) of concrete or wood over the highest point of the ducts (see Figs. 9.118 and 9.119). However, in offices approved raceways may be laid flush with the concrete if covered with linoleum or equivalent floor covering (see Fig. 9.120). When two or three raceways are installed flush with the concrete, they must either be contiguous with each other and joined to form a rigid assembly. Flat-top ducts over 100 mm (4 in.) wide but not over 200 mm (8 in.), spaced less than 25 mm (1 in.), must be covered with at least 38 mm ($1\frac{1}{2}$ in.) of concrete (see Fig. 9.121). It is a standard practice to allow 200 mm ($\frac{3}{4}$ in.) clearance between ducts run side by side. The centerline of the ducts should form a straight line between junction boxes. If the spacing between raceways is 1 in. or more, the raceway may be covered with only 1 in. of concrete. All joints in the raceway between sections of ducts and at junction boxes should

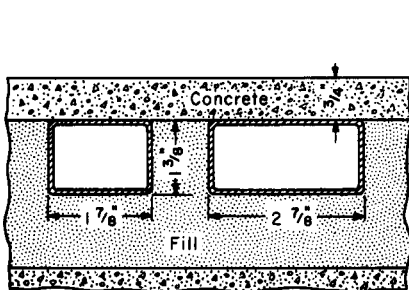


FIGURE 9.118 Any flat-top raceway 100 mm (4 in.) or less in width must be covered with wood or concrete at least 20 mm ($\frac{3}{4}$ in.) in thickness except in office occupancies.

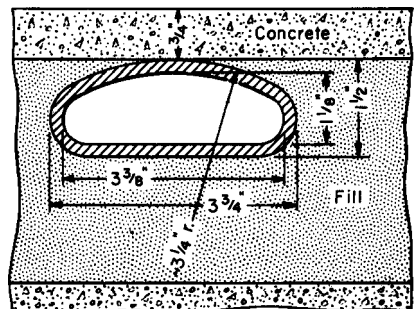


FIGURE 9.119 Any fiber raceway 100 mm (4 in.) or less in width must be covered with wood or concrete at least 20 mm ($\frac{3}{4}$ in.) in thickness.

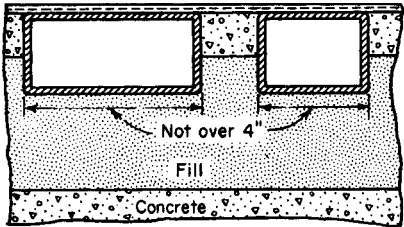


FIGURE 9.120 Approved raceways flush with concrete and covered with linoleum in an office occupancy.

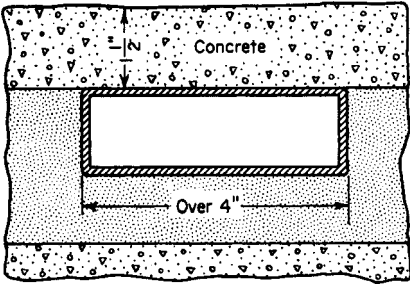


FIGURE 9.121 Any flat-top raceway over 100 mm (4 in.) wide must be covered with concrete at least 38 mm (1 1/2 in.) in thickness if raceways are spaced less than 25 mm (1 in.) apart.

be made waterproof and with good electrical contact so that the raceways will be electrically continuous. Metal raceways must be properly grounded.

248. Wires of signal or telephone systems must not be run in the same duct as wires of lighting systems. Combination junction boxes accommodating the two or three ducts of multiple-duct systems may be employed, provided separate compartments are furnished in the boxes for each system. (See Fig. 9.122.) It is best to keep the same relative location of compartments for the respective systems throughout the installation.

All joints or taps to the conductors must be made in the junction boxes. No joints or taps should be made in the ducts of the raceway or at outlet insert points. (See Figs. 9.123, and refer to Figs. 9.136, and 9.137.)

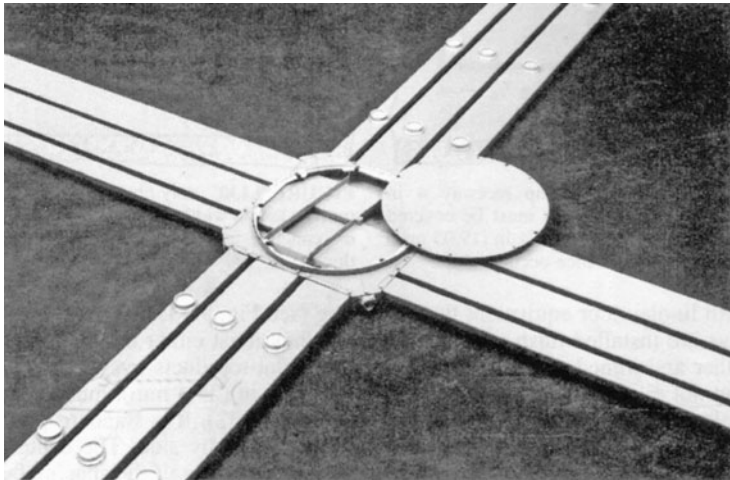


FIGURE 9.122 Three compartment floor junction box. [Walker Systems, Inc.]



FIGURE 9.123 Flush, pedestal, and multiplex service fittings. [Walker Systems, Inc.]

249. Junction boxes for use with underfloor raceways are specially constructed metal boxes. They are available in single-compartment types and in combination boxes to accommodate multiple-duct systems having two or three raceways run side by side. The general construction of the junction boxes is similar for both fiber- and steel-duct systems. Most boxes are equipped with leveling screws so that they can be leveled up with the duct runs. The covers of the boxes also are adjustable with respect to height so that they can be accurately leveled to agree with the surface of the finished floor. Different types of covers that will be suitable for the different types of floor finishes are available. With plain cement-finished floors a plain brass cover set flush with the floor (Fig. 9.124) is sometimes used. In other cases a recessed cover filled with cement is employed. For linoleum- or cork-covered floors a cover with a recess for a cork or linoleum insert is provided, as illustrated in Fig. 9.125. For marble or hardwood floors a recessed cover with a marble insert (Fig. 9.126) may be employed. With the recessed covers only a thin ring of brass shows in the finished floor, marking the location of the junction box.




FIGURE 9.124 Floor junction-box cover for cement-finished floors.

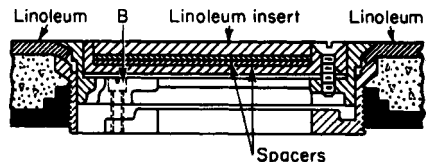


FIGURE 9.125 Floor junction-box cover for linoleum-covered floors.

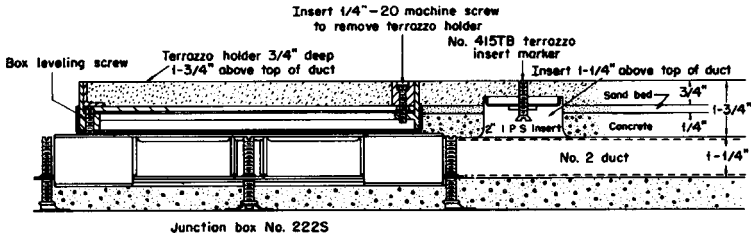


FIGURE 9.126 Floor junction-box cover for terrazzo floors. [Walker Systems, Inc.]

250. Fittings must be installed at every end of a line of raceway with a marker extending through the floor to show the line of the duct. All dead ends of raceway must be closed with a suitable fitting.

251. In installing raceways every effort should be made to avoid low points which could form traps for water.

All connections to a raceway except those made through the inserts provided in the raceway shall be made by means of flexible metal conduit where not installed in concrete, rigid conduit, intermediate metal conduit, EMT, or a special approved fitting (refer to Fig. 9.127). Where a metallic underfloor raceway system provides for the termination of an equipment grounding conductor, rigid nonmetallic conduit, electrical nonmetallic tubing, or liquidtight flexible nonmetallic conduit where not installed in concrete unless so listed may be used.

252. Inserts (National Electrical Code) shall be leveled to the floor grade and sealed against the entrance of concrete. Inserts used with metal raceways shall be metal and shall be electrically continuous with the raceway. Inserts set in or on fiber raceways before the floor has been laid shall be mechanically secured to the raceway. Inserts set in fiber raceways after the floor has been laid shall be screwed into the raceway. In cutting through the raceway wall and setting inserts, chips and other dirt shall not be allowed to remain in the raceway, and tools shall be so designed as to prevent the tool from entering the raceway and injuring conductors that may be in place.

253. Reinsulation of conductors in underfloor raceways prohibited. When an outlet is discontinued, the conductors supplying the outlet shall be removed from the raceway. The general practice is to loop wire intermediate receptacles between the header and the end of the run. This requirement assures that reinsulated conductors will not be resting in the raceway below an abandoned outlet. This in turn prevents a fish wire inserted afterward from a downstream location from getting caught on a reinsulated conductor, with very destructive consequences. It is often advisable to wire each outlet on its own pair of conductors back to the header or other junction point. Then, when an outlet is abandoned, the associated pair of conductors can be withdrawn without disrupting other outlets on the run. Take care, however, to keep track of the total number of conductors at all portions of the duct, because the ampacity derating factors for mutual conductor heating (Div. 12, Sec. 17, item 5) will apply. Some jurisdictions provide limited waivers to these derating factors in underfloor applications; however, in order to encourage this practice and thereby discourage the reinsulation of conductors. When the conductors are withdrawn, leave a pull string in their place so the outlet can be easily reactivated in the future as necessary.

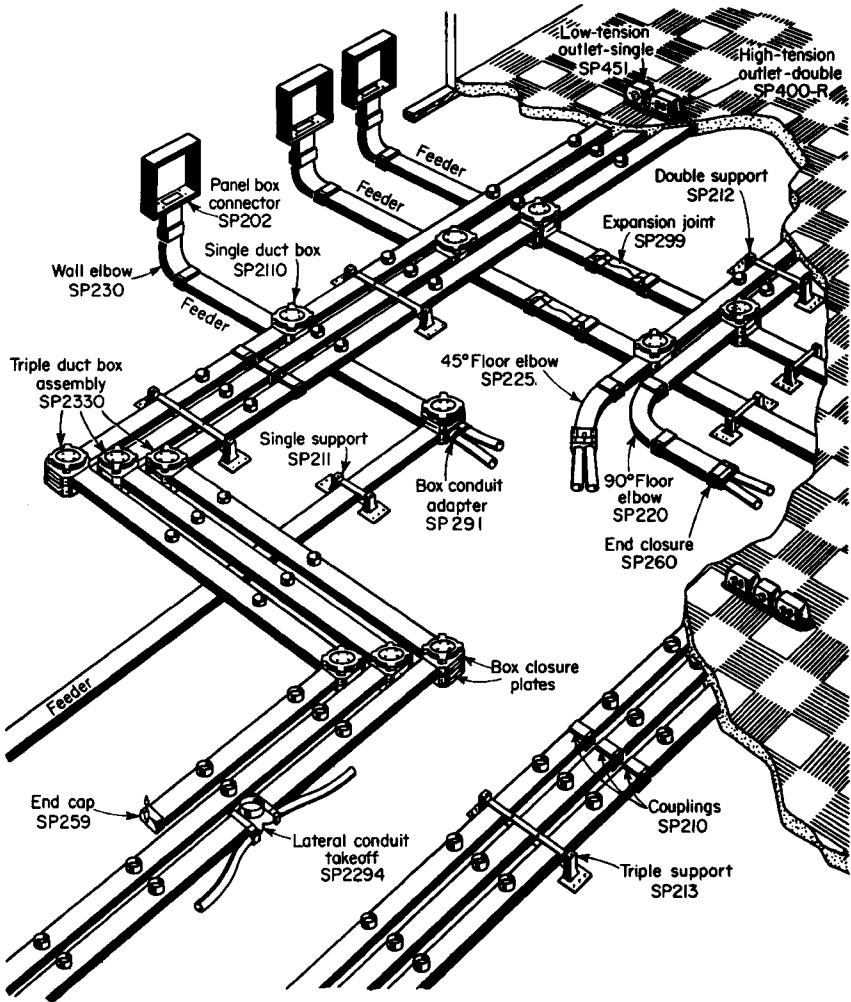


FIGURE 9.127 Component parts and method of installation for two-level steel underfloor raceways. [General Electric Co.]

254. Steel-duct raceways are made for two types of underfloor electrical distribution systems:

1. The two-level system, recommended for use when electrical growth and expansion of facilities are anticipated
2. The single-level system, recommended for underfloor wiring installations when cost and design limitations are a factor

The features of a two-level system showing raceways, junction boxes, typical supports, and other fittings are given in Fig. 9.127. Duct details are shown in Fig. 9.128.

The features of a one-level system showing raceways, junction boxes, typical supports, and other fittings are given in Fig. 9.129. Duct details for the raceway of one manufacturer

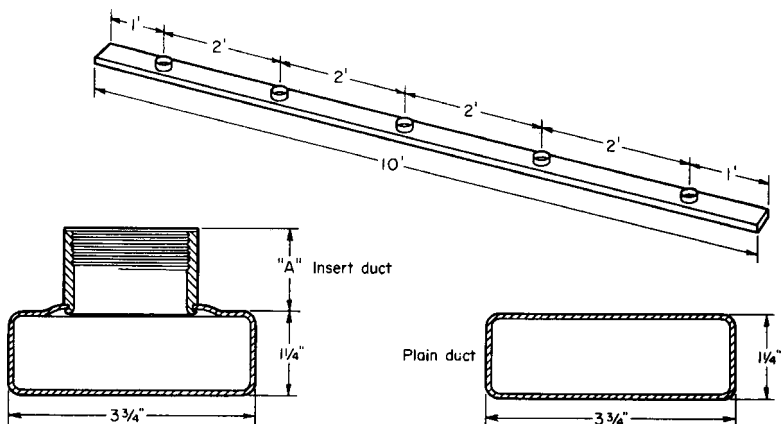


FIGURE 9.128 Duct and duct insert for a two-level raceway system. [General Electric Co.]

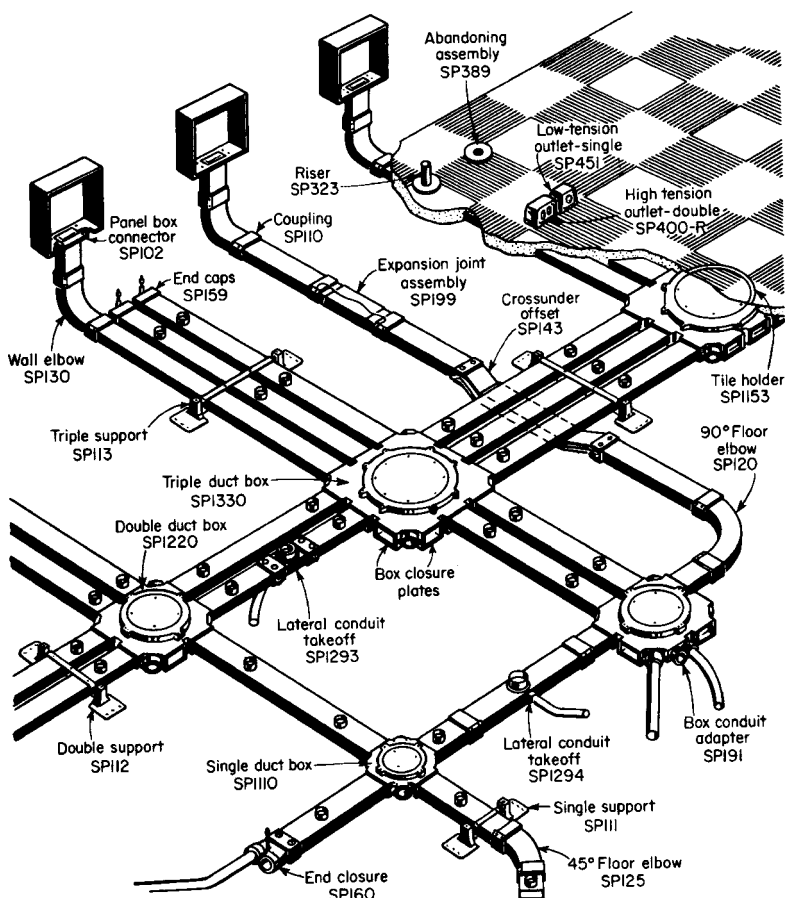


FIGURE 9.129 Component parts and method of installation for a single-level steel underfloor raceway. [General Electric Co.]

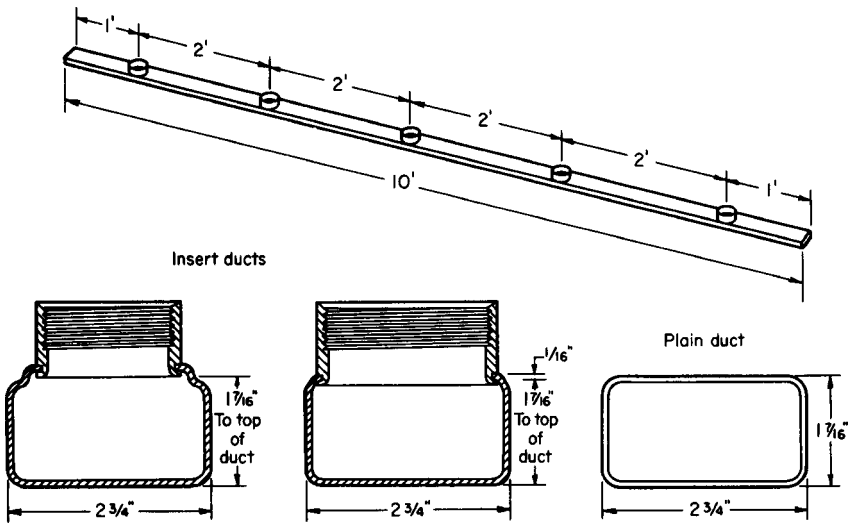


FIGURE 9.130 Duct and duct inserts for single-level raceway system. [General Electric Co.]

are given in Fig. 9.130. For dimensions of ducts available from other manufacturers refer to Fig. 9.117 and the catalogs of such manufacturers.

255. Installation of steel-duct raceways. The method of installing Walker-duct, the steel-raceway system manufactured by the Walker Systems, Inc., in the concrete fill of floors is illustrated in Fig. 9.131. The ducts are supported by saddle supports, which consist, as shown in Fig. 9.132, of two detachable parts, a base and a saddle. These supports are available for single-duct runs and in various combinations for supporting multiple-duct runs. Support should be located not more than 5 ft (1.5 m) apart. After the locations of junction boxes and duct runs have been marked out, the bases of the saddle supports are fastened to the floor by expansion bolts for concrete construction or by special toggle wires for hollow-tile work (see Fig. 9.131). The saddle is then assembled to the base, and the ducts fastened to the saddle by tie wires. The complete raceway is then leveled and adjusted to the proper height by means of the height-adjusting bolts of the saddles and the leveling screws of the couplings and junction boxes. The adjacent sections of duct are fastened together by duct couplings (Fig. 9.133). The pointed set-screws of the couplings fasten the duct to the coupling and at the same time provide an electrical ground connection between the duct and the coupling. Special fittings are available for connecting ducts and junction boxes to conduit, for connecting ducts directly to distribution cabinets, for blanking off the ends of ducts, etc.

256. The outlet openings in the ducts are closed by means of outlet plugs whose height can be adjusted to coincide with the floor level. A marker screw can be inserted in one plug of each 10-ft (3-m) length of duct if it is desired to facilitate the location of the outlets. The appearance of a duct after the installation of the floor fill with an outlet opening

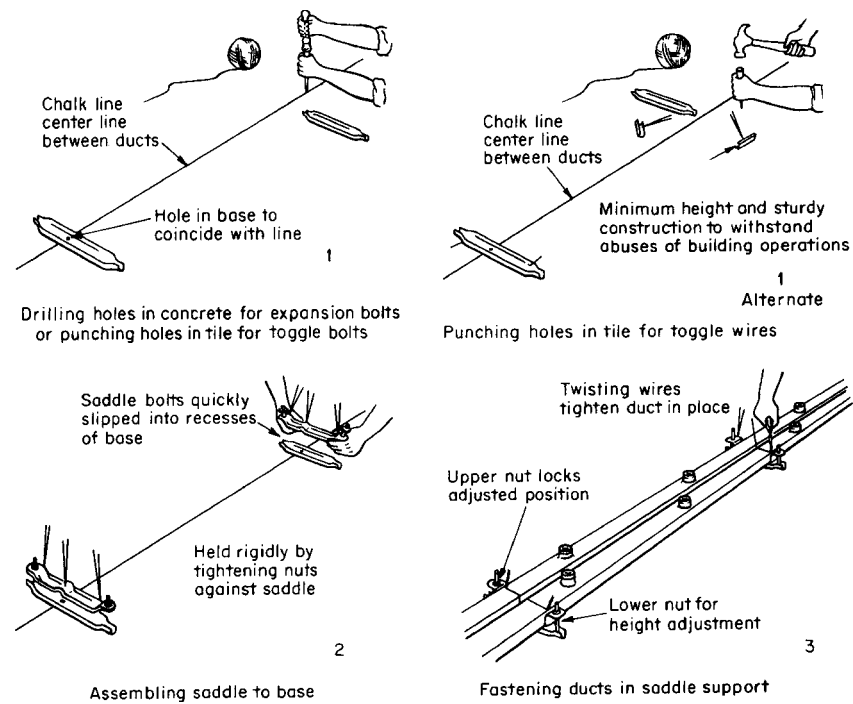


FIGURE 9.131 Method of installing a steel underfloor raceway. [Walker Systems, Inc.]



FIGURE 9.132 Saddle supports for one small and one large steel underfloor duct. [Walker Systems, Inc.]

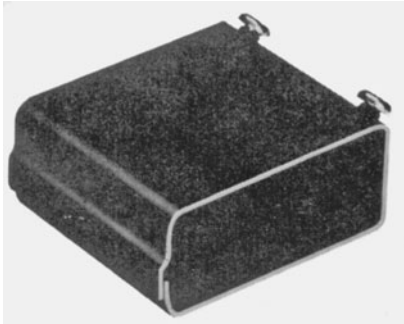


FIGURE 9.133 Coupling for a steel underfloor raceway. [Walker Systems, Inc.]

closed by means of an outlet plug is as shown in Fig. 9.134. When the floor is covered with linoleum, rubber, cork, etc., the outlets are not extended through the covering until needed. It is a good practice to indicate the location of the outlet inserts by means of an escutcheon marking screw in the plugs on each side of the junction boxes. (See Fig. 9.135.) Wood or marble floors can be laid over the outlet inserts and the outlets are not extended through the finished floor until actually needed.

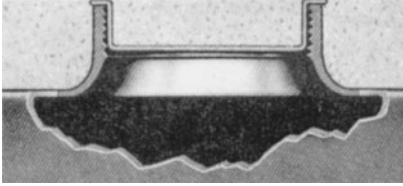


FIGURE 9.134 Appearance of outlet opening in a steel underfloor raceway with opening closed by means of an outlet plug. [Walker Systems, Inc.]

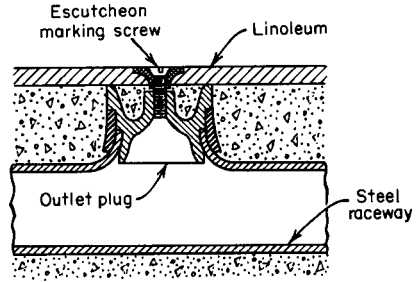


FIGURE 9.135 Outlet opening in a steel underfloor raceway closed with an outlet plug and concealed with linoleum floor covering.

257. When the raceway is installed in the concrete of the floor, the ducts are supported from the forms by saddle supports, and the whole system is accurately leveled and adjusted for the proper height, by means of the leveling screws and bolts on the fittings and saddle supports, before the floor is poured. In concrete-joist construction when building codes will not allow the saddle support to be mounted directly on the concrete pans, a saddle bridge must be used to support the duct saddles.

258. Installation of outlet fittings in steel-duct-raceway systems. When a duct outlet is to be used for service, the small amount of concrete is removed from the top depression of the outlet plug. The plug is removed by unscrewing it from the duct with a plug-removal wrench. The removal of the plug forms a neat preformed passage through the concrete to the duct-outlet opening. The necessary wires are pulled in from the nearest junction box and threaded through the service fitting. The service fitting is then screwed into the duct-outlet opening, and the floor flange adjusted. Figures 9.136 and 9.137 illustrate this process.

When it is desired to locate an outlet at a point in a raceway where there is no pre-set insert plug, an afterset insert for the outlet can be made by the use of special tools available from the manufacturer. The method of making an afterset insert is illustrated in Fig. 9.138.

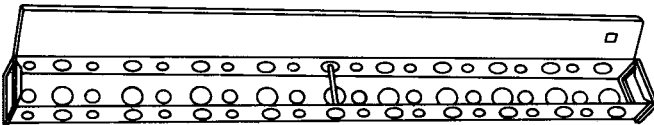


FIGURE 9.136 Pedestal service fittings for above-floor service. [Walker Systems, Inc.]



FIGURE 9.137 Flush service fittings for single service power or low voltage applications. [Walker Systems, Inc.]

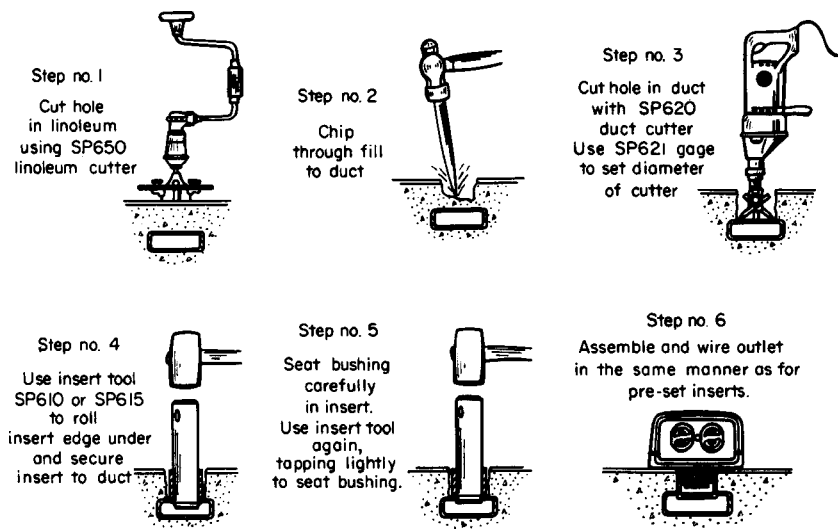


FIGURE 9.138 Method of making an outlet with an afterset insert. [General Electric Co.]

259. Trenchduct. Several makes of steel underfloor raceways are suitable for use with Trenchduct. Figure 9.139 shows a section of Trenchduct supplying two runs of under-floor steel raceways. Trenchduct is available in standard 6-ft (1.8-m) lengths at a depth of $2\frac{1}{8}$ in. (53.975 mm). Other depths are available on special order. Ducts are shipped complete with three 18-in- (457.2-mm-) long cover sections. Cover plates are $\frac{1}{4}$ -in- (6.35-mm-) thick roller-leveled steel. The Trenchduct is used to extend branch circuits from a panel-board to the underfloor raceways, and the Trenchduct shown in Fig. 9.139 has a cross-sectional area of $22\frac{1}{2}$ in² (145.15 cm²) which allows many more conductors than a conduit feed.

Cover plates for Trenchducts are adjustable upward to $\frac{3}{8}$ in. (9.525 mm) and downward to $\frac{3}{8}$ in. from a standard position by means of leveling screws flush with the top surface cover. Adjustment to finished-floor height is made by a screwdriver from the top.

Side-feed connectors provide bushed openings for feeds into the side of the Trenchduct. When specified, openings in Trenchduct are precut by the manufacturer.

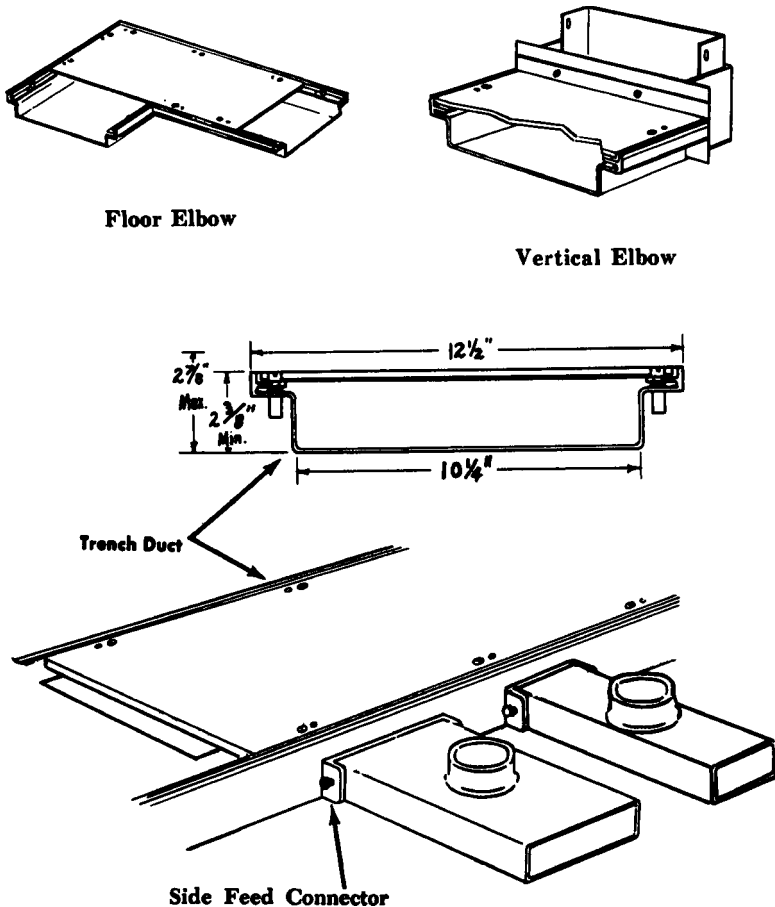


FIGURE 9.139 Typical components of a Trenchduct used in connection with an underfloor steel raceway. [Triangle Conduit & Cable Co., Inc., subsidiary of Triangle Industries, Inc.]

The Trenchduct is, in effect, a continuous junction box, because the cover plates are flush with the finished floor and one or more sections can be easily removed as required.

Vertical elbows turn the Trenchduct system up to a panelboard with full duct capacity. Figure 9.139 shows typical components of the system.

260. Installation of completely enclosing fiber-duct raceways. Completely enclosing fiber-duct underfloor raceways may be installed in either the concrete or the concrete fill of floors in a manner similar to that described for steel-duct raceways in Sec. 255. With fiber-duct raceways there are preinserted provisions for outlets, or they can be provided without any openings for outlets. After the finished floor has been laid, an outlet may be provided at any preset insert or at any point desired along the duct runs, as described in Sec. 261. The main component parts of a fiber-duct underfloor-raceway system are illustrated in Figs. 9.140 and 9.141. The different sections of duct are clamped together by means of a combination steel coupling and support provided with leveling screws for leveling the runs and adjusting to the proper height.

261. Installation of outlet fittings in fiber-duct-raceway systems. To establish outlets in a preset system after the finish is in place, it is necessary to determine the location of the insert. This can be done by means of an insert finder. Then the flooring is chipped down to expose the insert cap. The cap is removed and a hole cut in the duct so that wires can be fished through and connected to the receptacle.

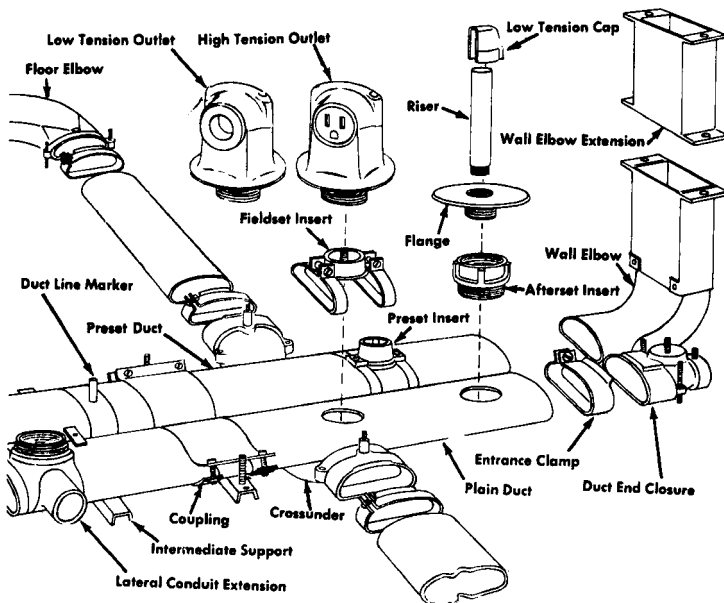


FIGURE 9.140 Component parts of a completely enclosed fiber underfloor-raceway installation.

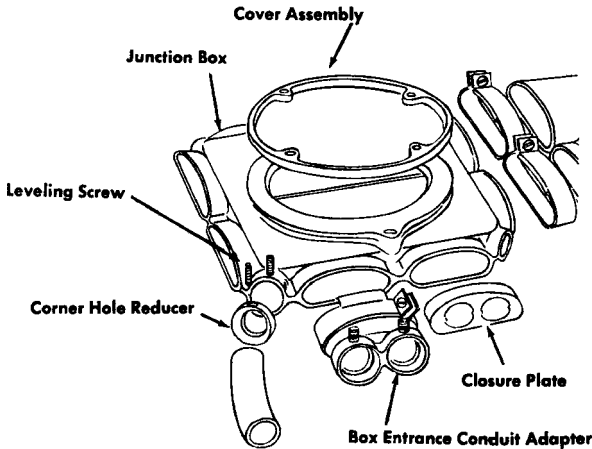


FIGURE 9.141 Junction box and associated fittings for a completely enclosed fiber underfloor-raceway system.

The procedures shown in Fig. 9.142 should be employed in installing an outlet fitting at any point in a fiber underfloor raceway of the completely enclosing type. The special tools provided by the manufacturers for this purpose should be used to ensure satisfactory workmanship.

262. Layout of underfloor-raceway systems. A very simple layout for an underfloor-raceway system, called the *single-runaround layout*, is shown in Fig. 9.143. Such a layout provides only the minimum of flexibility in the location of outlets. It is satisfactory for certain types of buildings when the installation cost must be limited and desks will be located only around the sidewalls. This layout will provide outlets only for telephone and signal systems. A similar layout is shown in Fig. 9.144. This layout, having two separate raceways, provides outlets for electrically operated office machines from one raceway and outlets for telephones and signal systems from the other raceway.

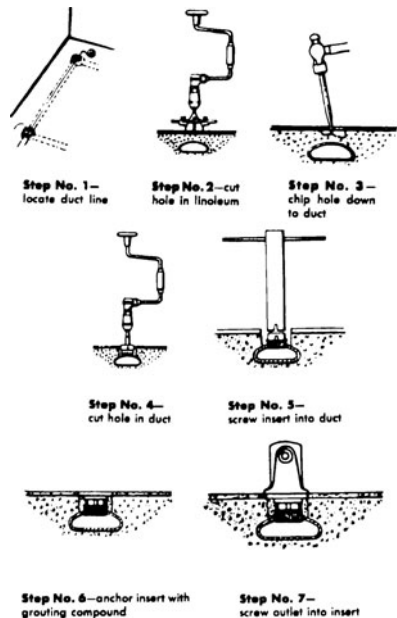


FIGURE 9.142 Method of installing afterset inserts into fiber underfloor raceways.

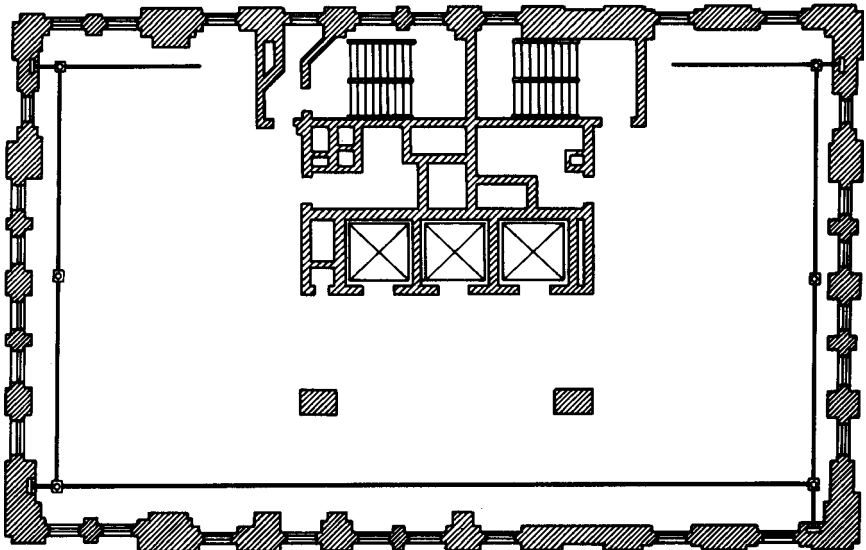


FIGURE 9.143 Single-runaround layout for an underfloor raceway.

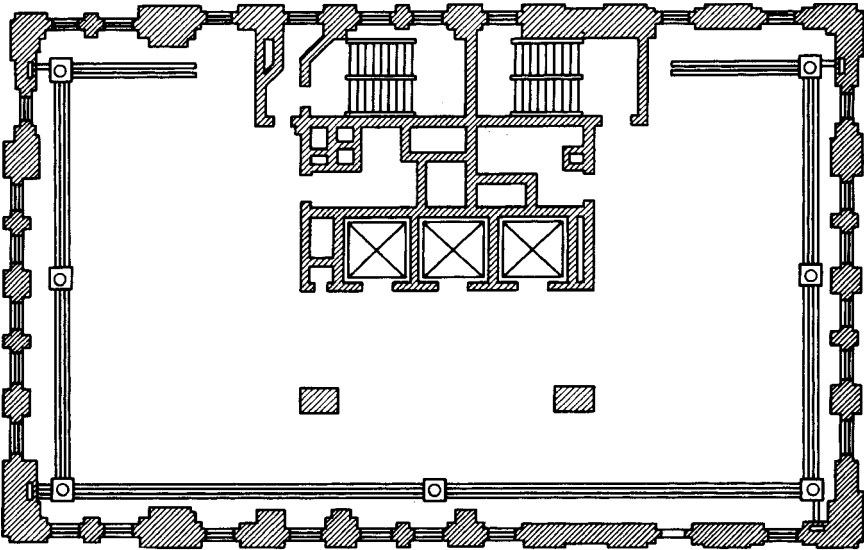


FIGURE 9.144 Double-runaround layout for an underfloor raceway.

263. To provide greater flexibility in the possible location of outlets over the entire area than is accomplished with the runaround layouts, grid layouts are employed. A typical single-grid layout is shown in Fig. 9.145, and a double-grid layout in Fig. 9.146. The flexibility provided for the location of outlets depends upon the distance between parallel duct lines. For maximum flexibility the parallel lines of ducts should be located approximately 5 ft (1.5 m) apart with the outside runs located 3 ft (0.9 m) from the outside walls. The distance between rows of junction boxes should be from 20 to 60 ft (from 6.1 to 18.3 m), depending upon the estimated number of outlets that will be required at any one time between junction boxes.

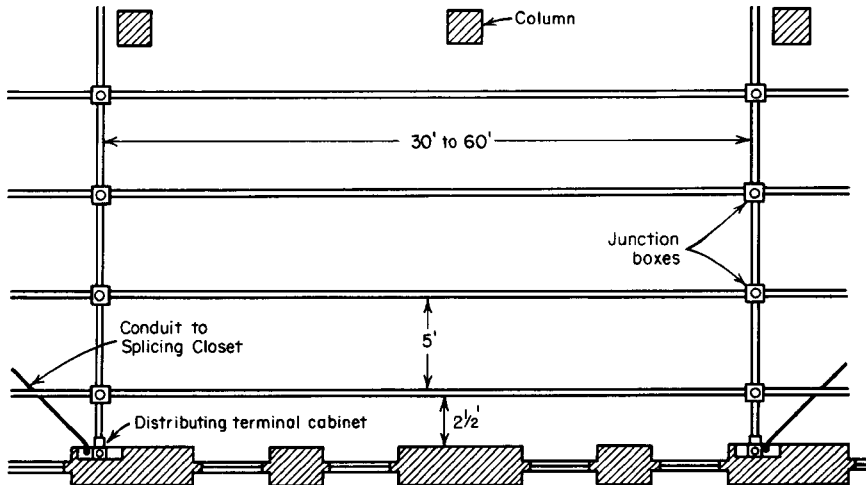


FIGURE 9.145 Single-grid layout for an underfloor raceway.

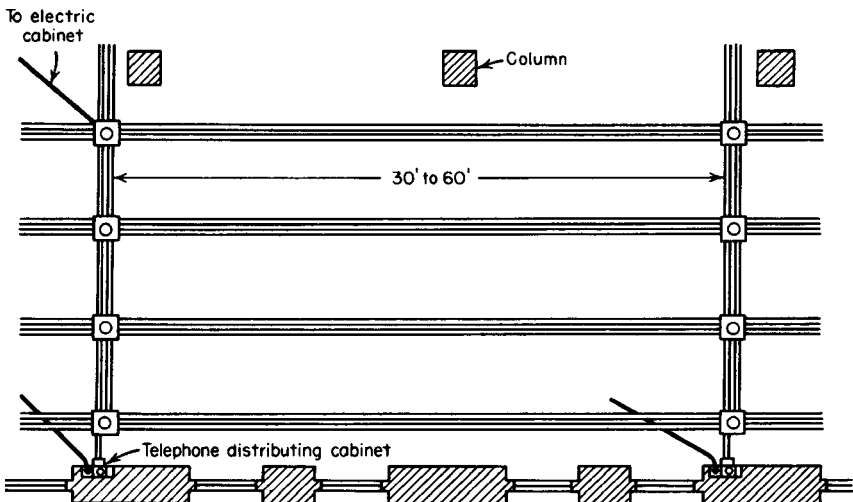


FIGURE 9.146 Double-grid layout for an underfloor raceway.

WIREWAY WIRING

264. Wireways may be installed only for exposed work, except as extensions to pass transversely through walls. They must not be used where they will be subjected to severe physical damage or to corrosive vapors or in any hazardous location, except as specifically permitted in the hazardous location articles in the NEC. Wireways for outdoor use shall be of approved raintight construction. Their chief application is for the installation of mains and feeders in industrial plants or other locations where a flexible means of supplying branch circuits is advantageous or where many wires must be located in one run. They permit access to the wires and cables at all points in the system for tapping, splicing, rerouting, inspection, installation of additional wiring, or other changes, all without disturbing the existing work. Three long sides (and the ends) may or may not be provided with knockouts for wiring entries. The fourth long side consists of a removeable cover which may be hinged or secured with screws, and provides access for installing wires and making splices. Multiple lengths can be coupled together with nuts and bolts running through a connecting coupling. A typical use of wireway is shown in Fig. 9.147. Note the use of a power distribution block for splicing purposes in this wireway section. The wire bending space must comply with Div. 12, Table 34 limits for the conductors terminated, and all uninsulated live parts must be protected as shown so they will not be exposed whether or not the wireway cover is in place.

Wireways are available in sizes 2, 2½, 3, 3½, 4, 4½, 5, 6, 8, 10, and 12 in. (50.8, 63.5, 76.2, 88.9, 102, 114, 127, 152, 203, 254, 305 mm) square. No conductor larger than that for which the wireway is designed shall be installed in wireways, provided that the sum of the cross-sectional area of all the conductors at any cross section does not exceed 20 percent of the interior area of the wireway. Splices and taps may be located within the wireway, provided the cover is left accessible. The conductors including the splices must not fill the wireway to more than 75 percent of its area at that point. The wireway must not contain more than 30 conductors at any point except for signaling circuits or for control conductors between a motor and its starter, used only for starting duty. More than 30 *current-carrying* conductors may be installed in a wireway, at a 20 percent maximum fill, if the reduction factors specified in 310.15(B)(2)(a) (Div. 12, Sec. 17, item 5) are applied. Figure 9.148 shows a more elaborate application where three wireway sections connect four panelboards to a pull box at the upper left that has been field-modified to serve as a common junction point. By distributing the approximately 85 current-carrying circuit conductors leaving the four panelboards over the three wireway runs, the installation avoids derating entirely.

Horizontal runs of wireways must be supported at each end and every 1.5 m (5 ft) unless specifically listed for supports at greater intervals, but in no case shall the distance between supports exceed 3 m (10 ft). Vertical runs of wireway shall be securely supported



FIGURE 9.147 Length of wireway with power distribution blocks, each with a clear plastic cover over the uninsulated live parts.



FIGURE 9.148 Metal wireways can often avoid derating penalties for mutual conductor heating.

at intervals not exceeding 4.5 m (15 ft) and shall not have more than one joint between supports. Adjoining wireway sections shall be securely fastened together to provide a rigid joint. An unbroken length of wireway may extend transversely through walls. Very short wireway sections are often bought and placed in service as a rectangular pull box. This is permitted but the required wire bending space and conduit spacings that apply to pull boxes generally (see Sec. 349) apply to these applications.

265. Cross-Sectional Areas of Wireways

Wireway size, in	Cross-sectional areas, in ²		
	100%	75%	20%
2½ × 2½	6.25	4.68	1.25
4 × 4	16.00	12.00	3.20
6 × 6	36.00	27.00	7.20
8 × 8	64.00	48.00	12.80

266. In computing the proper size of wireway, refer to Secs. 264 and 265. Then determine the total cross-sectional area of the conductors to be installed from Table 5 in NEC Chap. 9.

267. Nonmetallic wireways are available and are very helpful in areas where metal wireways would likely corrode. They follow essentially the same rules as metal wireways with one major exception. Because nonmetallic materials do not work as well as metal in their ability to function as a heat sink, the contained conductors, even if fewer than 30, are always subject to derating penalties for mutual conductor heating, just as if they were running in a conduit.

BUSWAY WIRING (NEMA)

268. Busway is a modern system of power distribution. It provides a flexible means for distributing power and light in industrial and commercial buildings and/or connecting branch motor circuits to the mains so that the location of the branch taps can be readily and economically changed to suit the conditions of rearrangement of machines. This system finds wide use in industrial plants when the layout of machines must be continually changed to meet changing manufacturing conditions because busway's flexibility in accommodating such change is its greatest advantage. (See Fig. 9.149.)

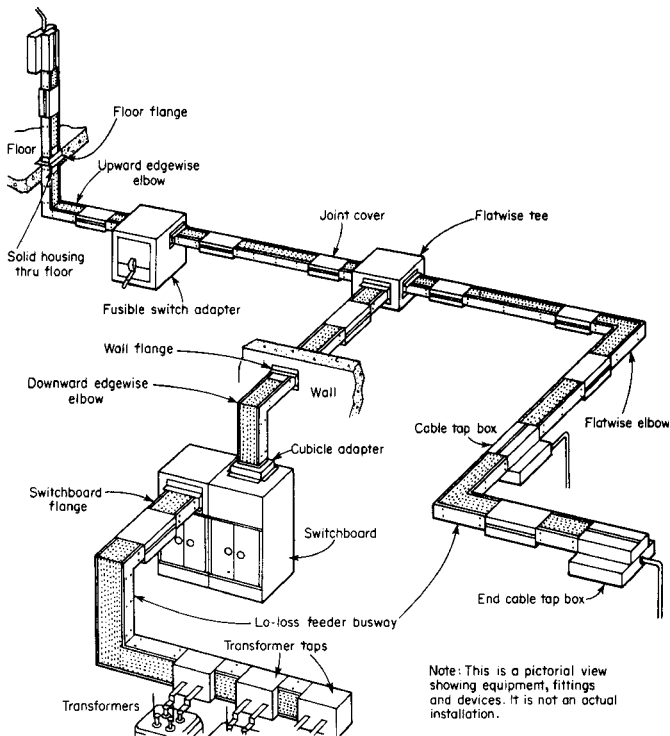


FIGURE 9.149 Low-voltage-drop feeder busway system.

By definition (NEMA standard BU1) a *busway* is a prefabricated electric distribution system consisting of busbars in a protective enclosure, including straight lengths, fittings, devices, and accessories. Busways are of the following types:

1. *Feeder busway.* A feeder busway is a busway without plug-in openings which is intended primarily for conducting electric power from the source of supply to centers of distribution but which can have provisions for bolt-on devices (see Fig. 9.150).




FIGURE 9.150 Feeder busway.

2. *Plug-in busway.* A plug-in busway is a busway having plug-in openings on one or both sides at spaced intervals, offering means for electrical connection of plug-in or bolt-on devices to the busbars. Such plug-in or bolt-on devices (bus plugs) may incorporate switches, circuit breakers, transformers, motor controllers, or other auxiliary equipment (see Fig. 9.151).

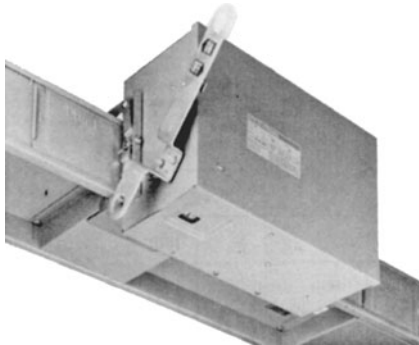


FIGURE 9.151 Fusible bus plug installed on a plug-in busway.

269. Major requirements related to the application and testing of low-voltage busway. This material is intended to assist in understanding the application and testing of low-voltage busway by summarizing the principal codes and standards applicable to the product. Since all codes and standards are revised from time to time and requirements vary from locality to locality, contact your local inspection authority and the manufacturer for the latest requirements applicable to your installation.

Groups which maintain standards enumerating busway construction and installation practices include:

1. Underwriters Laboratories Inc.
2. The National Electrical Manufacturers Association
3. The National Fire Protection Association (The National Electrical Code)
4. State and local electrical codes
5. Power companies, which frequently specify minimum conductor sizes and spacing for connection to their equipment.

Underwriters Laboratories Requirements. Busway bearing the Underwriters Laboratories listing mark must pass a series of performance tests (see UL 857). Among the tests which may be required here are:

Heating (temperature-rise) test. Busway with suitably plated joint connections must carry its rated current continuously without any part showing a temperature rise above ambient of more than 55°C. Tests are conducted on three 10-ft (3-m) sections bolted together, at any convenient voltage, at design frequency, with rated current flowing.

Resistance-to-impact test. The resistance-to-impact test will ordinarily not be required for nonventilated busway if its construction conforms to the specifications spelled out in Table A. However, all other busway must be tested to ensure that no hazardous condition will exist after any side of the enclosure has been subjected to a blow from a 50-lb weight suspended from a 30-in- (762-mm-) long pendulum arm going through a 60° angle from the vertical.

TABLE A Thickness of Sheet Metal

Maximum inside width of widest surface		Minimum acceptable thickness of sheet metal					
		Steel				Aluminum	
		Zinc-coated		Uncoated			
in	mm	in	mm	in	mm	in	mm
12*	305	0.056	1.42	0.053	1.35	0.075	1.91
18	457	0.070	1.78	0.067	1.70	0.095	2.41
30	762	0.097	2.46	0.093	2.36	0.122	3.1
More than 30	More than 762	0.126	3.20	0.123	3.12	0.153	3.89

*18 in if enclosure does not support the weight of the busbar assembly.

Dielectric test. A busway shall withstand for 1 min without breakdown of the application of a 60-Hz potential of 1000 V plus twice the maximum rated voltage between live parts and the enclosure and between live parts of opposite polarity.

Resistance-to-bending test. Busway intended for a spacing of not more than 5 ft (1.5 m) between mounting supports will ordinarily be accepted without a bending test. However, to qualify for horizontal mounting on a 10-ft (3-m) support basis or on 16-ft (4.9-m) centers in vertical risers, a busway must withstand for 5 min without rupture of the joint, appreciable permanent distortion, or short-circuiting or grounding of the phase or neutral busbars a bending moment equivalent to the weight of a 10-ft section plus an additional 100-lb (45.36-kg) force applied at the end of the 10-ft section.

Resistance-to-crushing test. Busway intended to employ a spacing of not more than 5 ft (1.5 m) between mounting supports and whose construction is in accordance with Table A will ordinarily be accepted without a crushing test. However, if the busway does not meet these spacing or construction requirements, it shall be tested to ensure that it will be able to withstand a crushing force of 200 lb (90.7 kg) plus 3 times the weight of a 10-ft (3-m) section.

Busbar pullout test. Busway intended for mounting in a vertical run shall be capable of supporting a downward force equal to 4 times the weight of an individual busbar in a 10-ft (3-m) section applied simultaneously to each of the busbars without rupture or permanent distortion of busbar supports.

Insulation-resistance and dielectric-strength test after exposure to rain. Outdoor busway must withstand a simulated rain for 8 h per day for 5 successive days without dielectric breakdown.

Short-circuit test. All busway and fittings rated 100 A or less and having a short-circuit current rating of more than 5000 A shall be tested and marked with their respective rating(s). Busway and fittings rated over 100 A and having a short-circuit current rating over 10,000 A shall be tested and marked with their respective ratings. To verify these rating(s), representative samples of the busway shall be subjected to phase-to-phase, phase-to-enclosure, and phase-to-ground conductor (when applicable) short-circuit tests. Tests may be conducted either with or without fuse or circuit-breaker protection ahead of the busway being tested, and the ratings and markings will so indicate.

Tests when busway enclosure is used as an equipment-grounding conductor. For the busway enclosure to be accepted as an equipment-grounding conductor, the busway shall be subjected to the short-circuit tests described above. In addition, two other conditions shall be met: (1) the busway enclosure shall comply with minimum cross-sectional-area requirements, and (2) a maximum resistance of 0.005 Ω is allowed when passing a direct current of 30 A between adjacent busway sections.

National Electrical Manufacturers Association Standards. In addition to the Underwriters Laboratories tests listed above, the NEMA standard for busways specifies the following:

Short-circuit current ratings. There are no minimum or maximum standards on short-circuit current ratings specified by Underwriters Laboratories. The minimum rating depends upon the maximum short-circuit available at the line and of the installed busway run. However, NEMA recommends the following minimum ratings:

Continuous current rating of busway, A	Short-circuit current ratings, symmetrical amperes	
	Plug-in busway	Feeder busway
100	10,000	
225	14,000	
400	22,000	
600	22,000	42,000
800	22,000	42,000
1000	42,000	75,000
1200	42,000	75,000
1350	42,000	75,000
1600	65,000	100,000
2000	65,000	100,000
2500	65,000	150,000
3000	85,000	150,000
4000	85,000	200,000
5000	200,000

Voltage drop. There are no minimum or maximum standards on voltage drop since these values may vary considerably depending upon several factors, including (1) the design, (2) the conductor material, (3) the continuous-current rating, (4) the current load, (5) the power factor of the load, (6) the operating temperatures, (7) the length of the run, and (8) the distribution of the load. Actual values of voltage drop in given situations can best be determined by obtaining the necessary data from a busway manufacturer and applying it to the specific situation. In general, the line-to-line voltage drop of fully loaded, three-phase busway will usually be less than 6 V/100 ft. Voltage drops for plug-in busway are

based upon an evenly distributed load along the run and are one-half that of a load concentrated at one end.

Resistance, reactance, and impedance. There are no minimum or maximum values of resistance, reactance, or impedance since these values vary considerably with different ratings and busway constructions. Busway manufacturers can supply these data for their particular products. These data are used for calculating the voltage drop for a specific application.

Unusual service conditions. For applications in which the ambient temperature is higher than 40°C, the busway current rating should be derated in accordance with the manufacturer’s recommendations, if furnished, or the following:

TABLE B

	Ambient-temperature limits	NEMA standards publication no.
Busway lengths and fittings	−30°C through +40°C	NEMA BU 1
Low-voltage-power circuit breakers	Not to exceed +40°C	NEMA SG 3
Molded-case circuit breakers	0°C through +40°C	NEMA AB 1
Enclosed switches	−30°C through +40°C	NEMA KS 1
Low-voltage cartridge fuses	See applicable UL standards	NEMA ICS 1
Electromagnetic and manual motor controls at 6000 ft and less	0°C through +40°C maximum	ICS 2 ICS 3

270. National Electrical Code requirements. The National Electrical Code, which is sponsored by the National Fire Protection Association, outlines the general guidelines which are necessary for the safe application of electrical equipment. Article 368 of the Code specifically applies to busways, although other articles in the Code are applicable in certain situations. Thorough familiarization with the NEC requirements for busways is recommended before attempting to apply busways to specific applications.

Some of the major requirements for safe application of busways as outlined in the 2008 NEC are as follows:

368.10. Uses permitted

- a. *Exposed.* Busways shall be permitted to be located in the open where visible, except as permitted in 368.10(C).
- b. *Concealed.* Busways shall be permitted to be installed behind access panels, provided the busways are totally enclosed, of nonventilating-type construction, and installed so that the joints between sections and at fittings are accessible for maintenance purposes. Where installed behind access panels, means of access shall be provided, and either of the following conditions shall be met:
 - 1. The space behind the access panels shall not be used for air-handling purposes.
 - 2. Where the space behind the access panels is used for environmental air, other than ducts and plenums, there shall be no provisions for plug-in connections, and the conductors shall be insulated.
- c. *Through walls and floors.* Busways shall be permitted to be installed through walls and floors in accordance with (C)(1) and (C)(2).
 - 1. *Walls.* Unbroken lengths of busway shall be permitted to be extended through walls.
 - 2. *Floors.* Floor penetrations shall comply with (a) and (b).
 - (a) Busways shall be permitted to be extended vertically through dry floors if totally enclosed (unventilated) where passing through and for a minimum distance of 1.8 m (6 ft) above the floor to provide adequate protection from physical damage.

- (b) In other than industrial establishments, where a vertical riser penetrates two or more dry floors, a minimum 100 mm (4 in.) high curb shall be installed around all floor openings for riser busways to prevent liquids from entering the opening. The curb shall be installed within 300 mm (12 in.) of the floor opening. Electrical equipment shall be located so that it will not be damaged by liquids that are retained by the curb.

368.12. Use not permitted. Busways shall not be installed (1) where subject to severe physical damage or corrosive vapors; (2) in hoistways; (3) in any hazardous (classified) location, unless specifically approved for such use; or (4) outdoors or in wet or damp locations unless identified for such use.

Lighting busway and trolley busway shall not be installed less than 2.5 m (8 ft) above the floor or working platform unless provided with a cover identified for the purpose.

368.30. Support. Busways shall be securely supported at intervals not exceeding 1.5 m (5 ft) unless otherwise designed and marked.

300.21. Spread of fire or products of combustion. Electrical installations in hollow spaces, vertical shafts, and ventilation or air-handling ducts shall be so made that the possible spread of fire or products of combustion will not be substantially increased. Openings around electrical penetrations through fire-resistance-rated walls, partitions, floors, or ceilings shall be fire-stopped by using approved methods to maintain the fire-resistance rating.

368.17(B). Reduction in ampacity size of busway. Overcurrent protection shall be required where busways are reduced in ampacity.

Exception: For industrial establishments only, omission of overcurrent protection shall be permitted at points where busways are reduced in ampacity, provided that the length of the busway having the smaller ampacity does not exceed 15 m (50 ft) and has an ampacity at least equal to $\frac{1}{3}$ the rating or setting of the overcurrent device next back on the line, and provided further that such busway is free from contact with combustible material.

State and Local Electrical Codes. Many states and cities have electrical codes which supplement the National Electrical Code. Before attempting to apply or install busway as well as any other type of electrical equipment, contact your local electrical inspection authority for a copy of the latest requirements applicable to the location of the installation.

Electric-Power-Company Requirements. Busways are commonly used for the main services of buildings, in which case they are usually connected to one or more distribution transformers owned by the local electric power company. This connection may be made by either cable or busbars, depending upon local practices. Since the various electric power companies throughout the United States often prefer different methods of connection to busway services, it is recommended that the local company supplying the power be contacted before applying or installing a service-entrance busway run.

Contacting Busway Manufacturers. Since the practical applications and uses of busway are nearly unlimited, it is not possible to outline here all the technical information available pertaining to busway. For this reason, it is advisable to contact one or more of the manufacturers of busway for more specific information whenever a possible application for busway is contemplated. All companies in the industry have technical experts who will assist in properly selecting and applying the busway system best suited to the specific requirements.

271. Busway layout. Present-day busway systems are designed for flexibility of layout and can be applied on applications such as a simple straight run of plug-in busway fed from a cable-tap box or a complex run with multiple feeders and plug-in devices for a high-rise building. However simple or complex, the system must be planned in advance.

The purpose of this section is to show how to plan the layout in an easy, step-by-step approach. A number of examples and details of how the busway is applied, as well as specific details on how to coordinate the installation of busway with other products, are included.

This section should be used as a reference guide only. The final decision on any system must be dictated by the particular details of the application.

When busway manufacturers receive orders for busway, an approval drawing is generally required. Experience has shown that a complete, detailed approval drawing as shown in Fig. 9.152 expedites release for manufacture. It is therefore important that the information sent to the manufacturer be as nearly complete as possible. If it is incomplete, a great deal of time can be wasted in obtaining missing information.

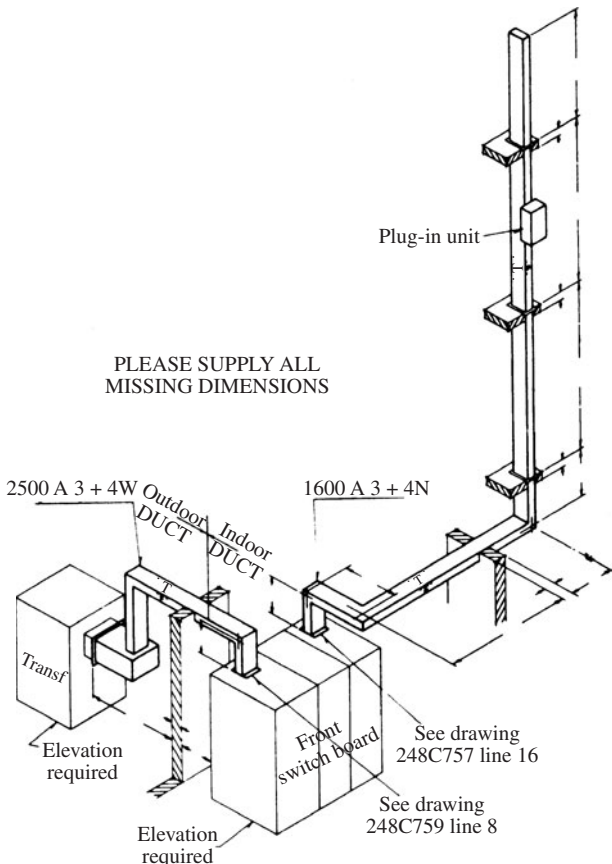


FIGURE 9.152 Typical customer-approval drawing.

The following is some of the information typically missing from sketches or drawings received by busway manufacturers:

1. Front location of switchgear, switchboards, transformers, or other cubicles
2. Floor heights and floor thicknesses on risers
3. Location of busway risers in relation to closet walls
4. Location of plugs on a riser in relation to closet walls
5. Location of walls and wall thickness

The approval drawing that is sent back to the field for approval may require additional dimensions for the complete busway layout. The electrician will be required to fill in these dimensions after field-measuring the job, approve the drawing for manufacture, and submit it through channels to the busway manufacturer.

Guidelines for Getting Basic On-Site Measurements. Before even looking at a busway job, you should have these basic materials for measuring: a sketch pad, a 50- or 100-ft (15- or 30-m) measuring tape, an 8- or 10-ft (2.4- or 3-m) folding wood rule, chalk and chalk line, plumb bob and string, and a yellow lumber crayon. Armed with these tools, you are prepared to lay out a busway system successfully.

First, it is always a good practice to walk through the entire facility to get an idea of general routing. While walking through, watch for obstructions, both vertical and horizontal. At the same time, try to establish one elevation so that offsets are not required. To do so, you must check floor elevations between rooms or various parts of the building. Otherwise, the busway installed at a specific elevation in one part of the building might be too high or too low at another point.

After the walk-through, you are ready to begin measuring the system. For reference points, use structures already available in the building, such as walls or columns. To save time, don't attempt to break the run down into specific lengths of busway. A busway manufacturer's engineer will do this and at the same time prepare an erection drawing to show the breakdown.

Actual measurement should start in the area where the switchboard or switchgear is located. If the switchboard has not been installed, chalk in the specified location and the point of entry for the busway. At this time, if the service entrance run is part of the job, you can measure its location.

One of the most important steps in planning a large busway layout is coordination between the trades. This is a good time for the electrician to meet with plumbing, heating, ventilating, and sprinkler-system trades to establish a definite right of way throughout the construction area. Once this has been established, hours of frustrating rerouting can be saved. Immediately after the right of way has been determined, electricians will often install busway hangers to claim and identify their areas.

The next step is to establish the busway elevation, then start horizontal measurements using the following examples as a guide. The examples indicate the dimensions required (see Figs. 9.153 through 9.162).

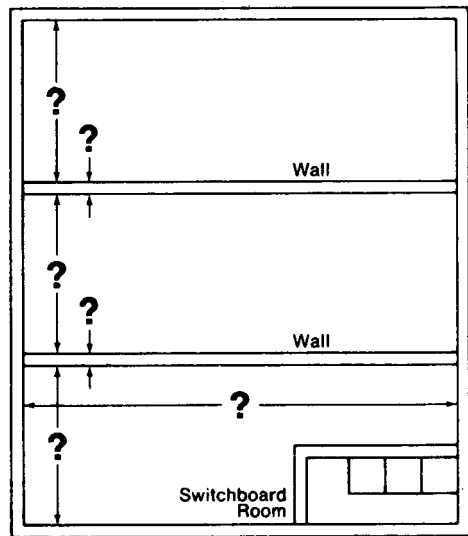
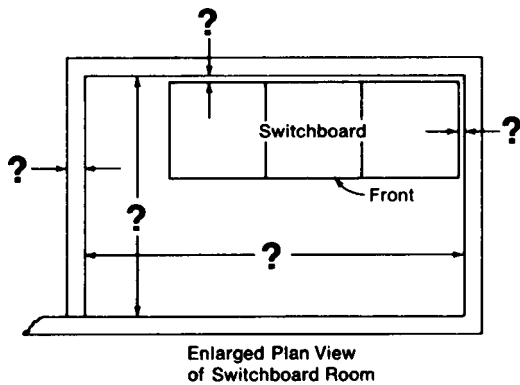


FIGURE 9.153 Basic site dimensions required before starting busway layout.

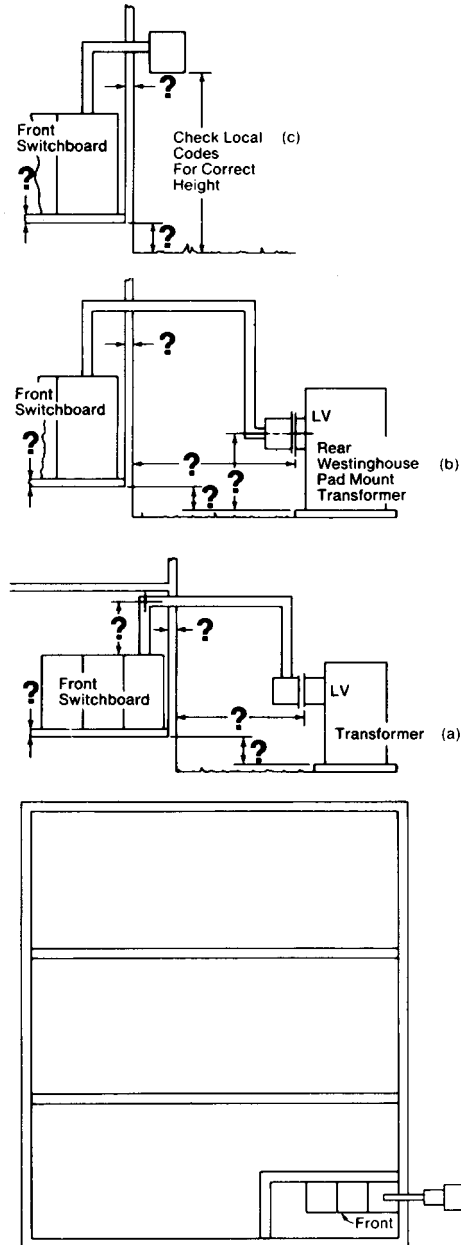


FIGURE 9.154 Service entrance run from power-center transformer, pad-mount transformer, and weather-head.

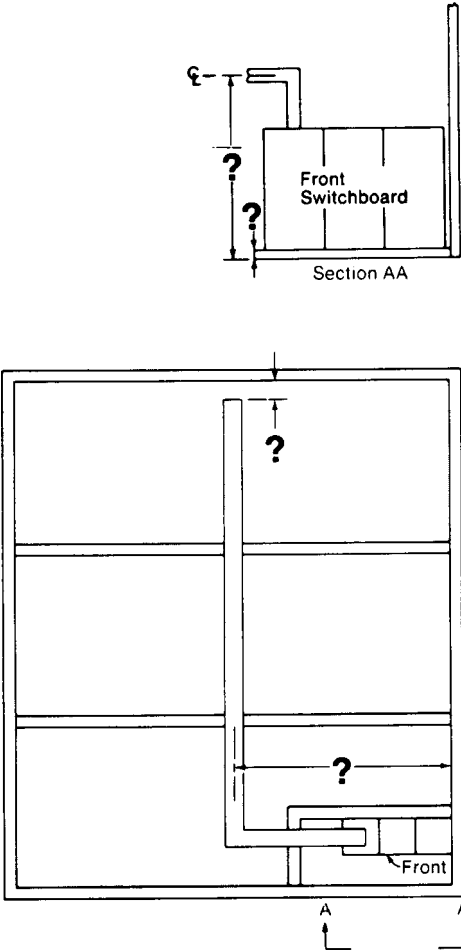


FIGURE 9.155 Elevation.


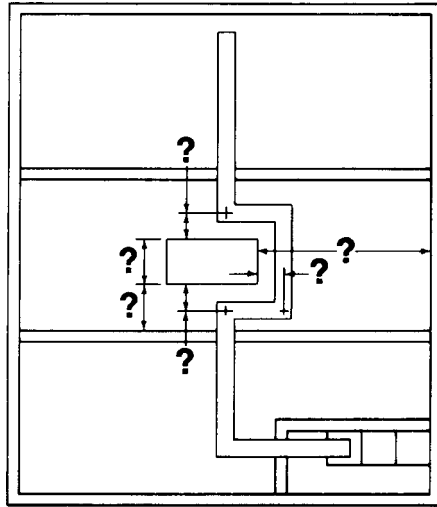


FIGURE 9.156 Horizontal offset.

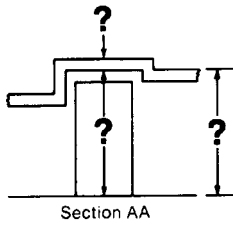

Section AA

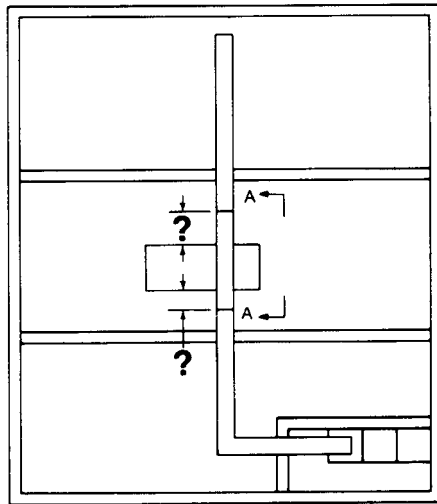


FIGURE 9.157 Vertical offset.

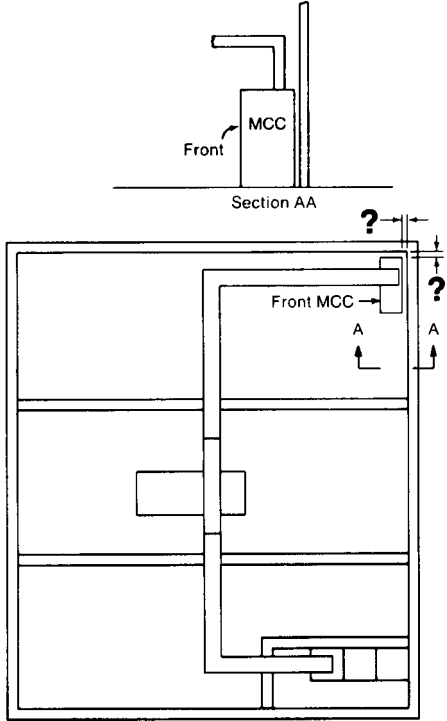


FIGURE 9.158 Vertical drop into an MCC.

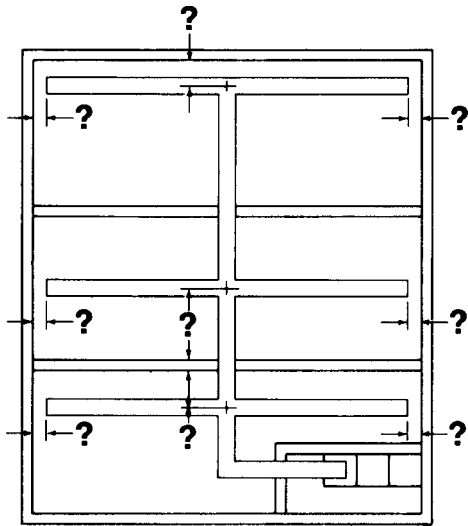


FIGURE 9.159 Single-run distribution system.

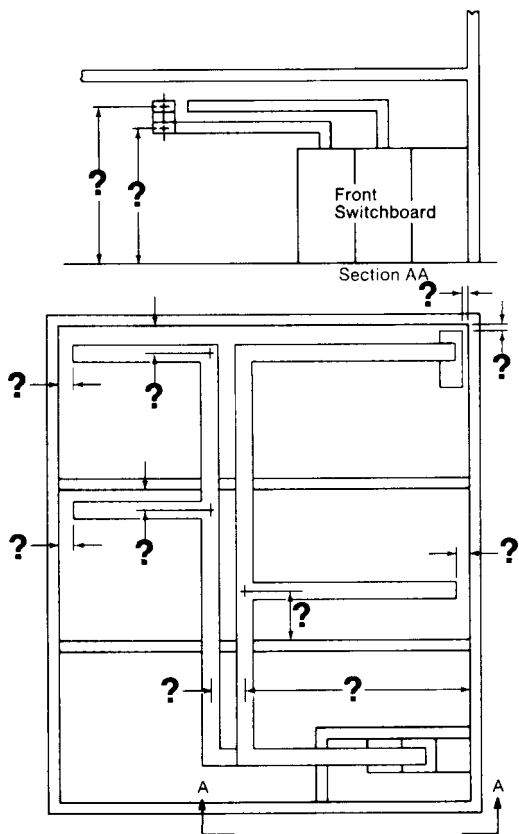


FIGURE 9.160 Double-run distribution system.

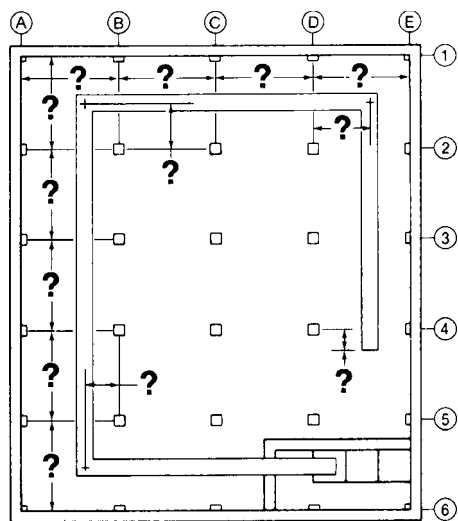


FIGURE 9.161 Using columns as reference points.

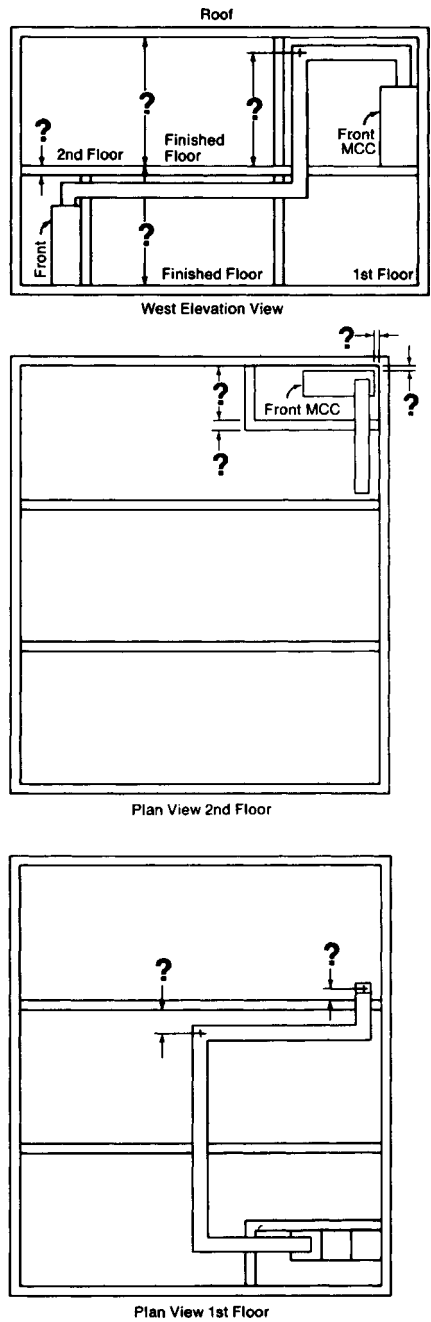


FIGURE 9.162 Multifloor.

272. Busway-riser applications. Several conditions will dictate the number of plug-in units that will fit physically on each floor: floor height, size of plugs, maximum height of plug-operating handle, other equipment or walls in close proximity to the busway riser, and orientation and phasing. Let's consider each of these conditions in turn.

Floor-Height Measurements. The basic dimensions (height from finished floor to finished floor plus floor thickness) required for every busway riser are shown in Fig. 9.163. Do not assume that all floors are of the same height.

NOTE See NEC rule in Sec. 270. If a curb is to be supplied around the floor opening, specify the height of the curb.

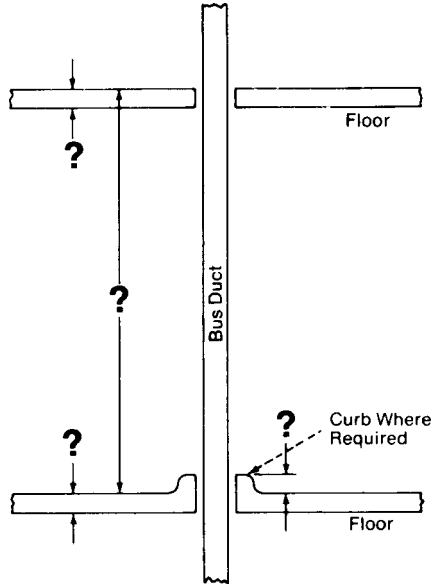


FIGURE 9.163 Basic height measurements required for risers.

Floor Height. The individual planning the riser should realize that clearance above the floor must be maintained to install vertical mounting hangers and joint-cover plates. Generally a distance of 15 to 24 in. (381 to 609.6 mm) above the floor to the centerline of the joint is required.

273. Size of plug-in devices. The floor height will dictate the number of plug-in openings physically possible for each riser on each floor. If the floor height is less than 12½ ft (3.8 m) and floor thickness remains at 6 in. (152.4 mm), it is impossible to use a 10-ft (3.05-m) straight length of plug-in busway. Instead, a shorter straight length would be used.

Using the manufacturer's plug-in unit dimensions, you can experiment with plugs to be supplied and determine the number that can fit on each floor.

Maximum Height of Plug-Operating Handles. Generally, there is no maximum height for plug-in units when a suitable means of operating such as a hook stick, rope, or chain is provided (see Sec. 404.8(A) Exception No. 1 in the NEC). However, since requirements

vary from locality to locality, contact the local inspection authority and busway manufacturer for the latest requirements applicable to your installation.

Other Equipment or Walls in Close Proximity to the Busway Riser. Applying busway with plug-in or bolt-on units in a vertical riser requires preplanning. See Figs. 9.164, 9.165, and 9.166 for examples of busway risers in an electrical closet. Busway with plug-in or bolt-on units must be arranged to clear other equipment and walls in the wiring closet. In particular, make sure that the plug-in or bolt-on hinged cover can be opened fully for maintenance.

Orientation and Phasing. To ensure that plug-in units are properly located, consult the manufacturer for coordination of busway orientation and phasing.

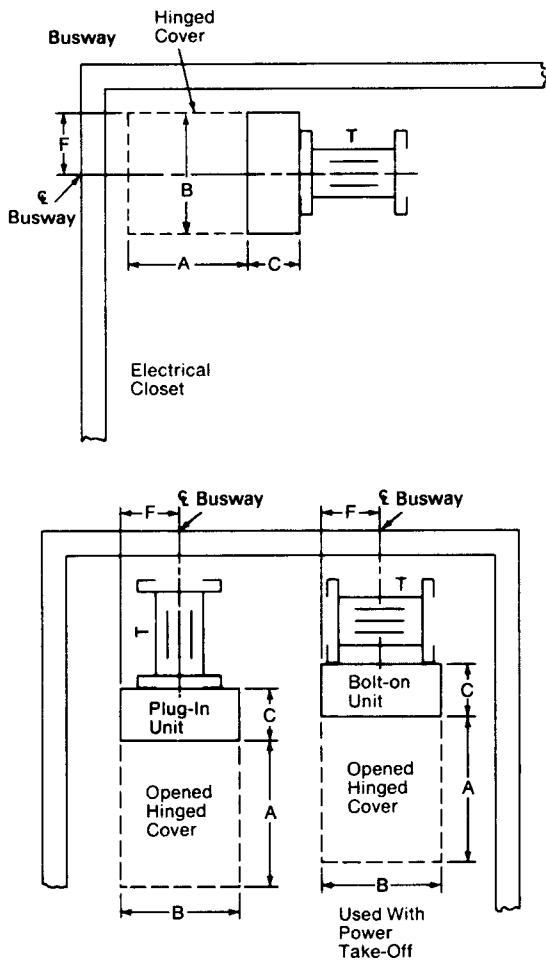


FIGURE 9.164 Examples of busway risers in an electrical closet.

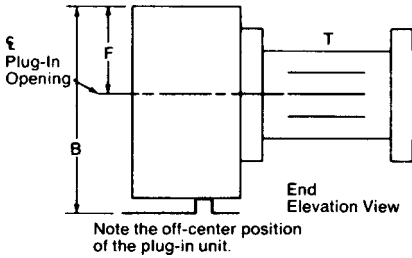


FIGURE 9.165 Plug-in position on busing.

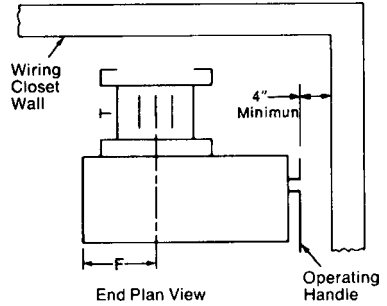


FIGURE 9.166 Busway riser in an electrical closet.

Busway Connections from Switchgear through Wall and Floor Openings. Wall and floor openings (see Fig. 9.167) for busway should be at least 1 in. (25.4 mm) larger than the outside dimensions of the busway. In some areas where there is doubt about the accuracy of the measurement, a flange must be installed through a wall, the hole must be large enough for the largest dimension.

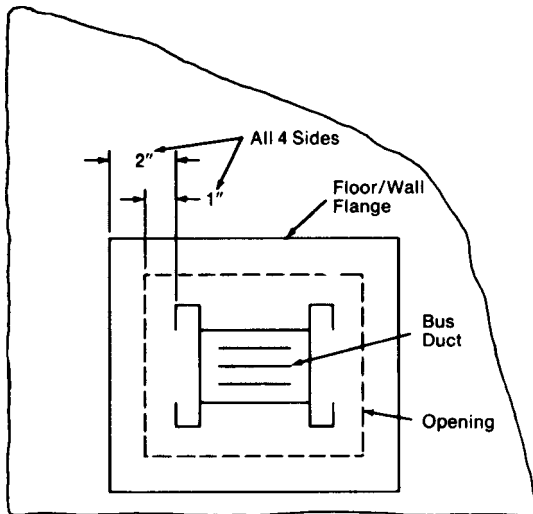


FIGURE 9.167 Minimum clearances for wall and floor openings.

Special Conditions. Certain conditions require preplanning to circumvent installation problems. Figure 9.168 is an example. If the X or Y dimensions are below the minimum needed to permit a joint between the elbow and the walls or floor, the joints must fall as shown. It then follows that openings in the walls or floors must be made large enough to install the busway. (See Fig. 9.169.) Wall thickness must also be considered.

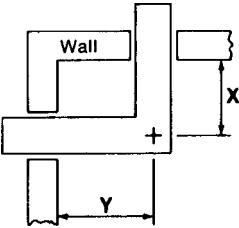


FIGURE 9.168 Example of an installation problem.

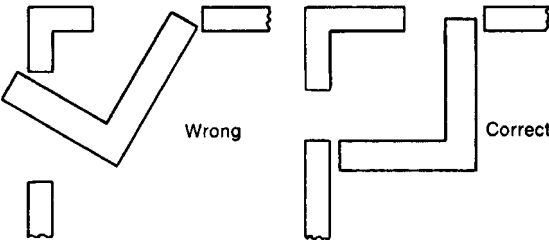


FIGURE 9.169 Solution to an installation problem.

Busway Plug-in Application. When plug-in units are to be installed, consideration must be given to providing adequate clearance from the plug-in busway to obstructions to allow the plug-in unit to swing in place. Consult the manufacturer for specific requirements. (See Fig. 9.170.)

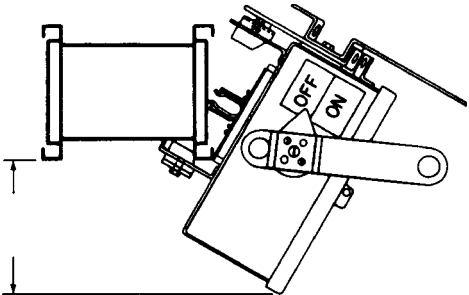


FIGURE 9.170 Clearances required to mount plug-in units on a busway.

Customer Erection Drawings. Prior to shipment of busway from the factory, the installer will receive a customer drawing. A sample appears in Fig. 9.171. This drawing contains a complete layout of the entire installation and a bill of material that includes (1) an item number which can be correlated with the drawing and a description of each piece and (2) the identification number and quantity of each piece.

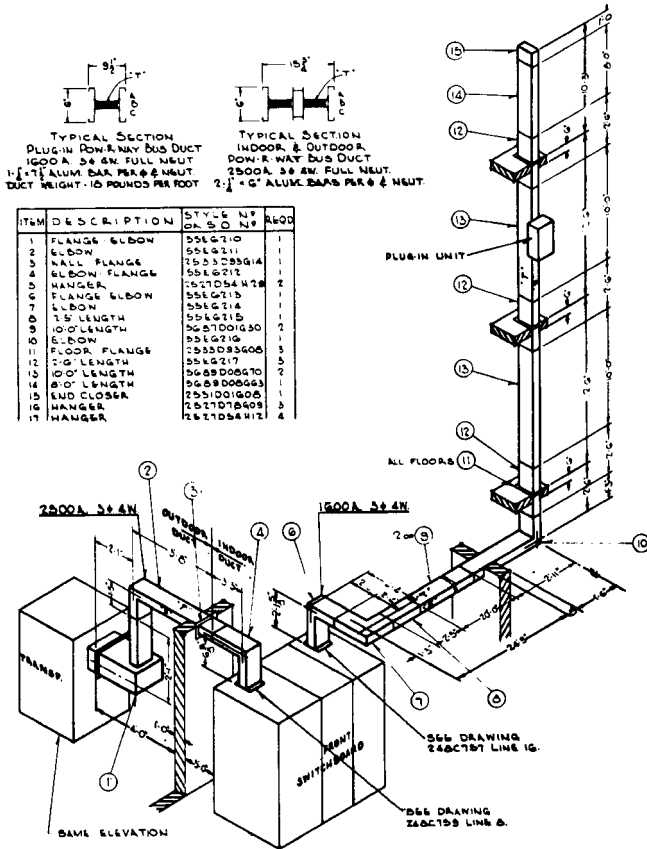


FIGURE 9.171 Typical drawing sent by a busway manufacturer to an installer.

274. Busway installation (see Fig. 9.172)

General. To ensure maximum reliability and long life for a busway system proper installation is imperative. Manufacturers supply installation drawings on all but the simplest busway layouts. Study these drawings carefully. If drawings are not supplied, make your own. Verify actual components on hand against those shown on installation drawings to ensure that there are no missing items. Manufacturers' drawings identify components by catalog number and specify their location in the installation. Catalog numbers appear on nameplates and carton labels. Read the manufacturers' instructions for installation of the individual components. If you are still in



FIGURE 9.172 Installing busway.

doubt, ask for more information; *never guess*. Almost all busway sections are built with a busway joint on one end. Refer to the installation drawing to orient each component properly. Pay particular attention to “Top” labels and other orientation marks where applicable.

Storage and Handling. Busway sections and fittings which are not to be installed and energized immediately upon receipt should be stored in a clean, dry place that has a uniform temperature to prevent condensation. Preferably, they should be stored in a heated building having adequate air circulation and protected from dirt, fumes, water, and physical damage. Because of moisture it is extremely risky to store busway outdoors. If busway must be stored outdoors, it must be securely covered for protection from weather and dirt. Temporary electrical heating should be installed beneath the cover to prevent condensation.

Indoor busway must always be protected from exposure to moisture, plaster, and other types of contaminants. This is extremely important during initial installation when the busway may be exposed to higher levels of dust and moisture.

Outdoor busway must be treated exactly the same as indoor busway until it is installed. It is not weather-resistant until it is completely and properly installed. Care must be used in unpacking. Band cutters should be used on all banding securing the package. If a crane is employed to install busway, use nylon straps and distribute, or balance, the weight of each lift. If cables are employed, spurs should be used to avoid damage to the metal housing. Do not drag busway across the floor. When installing vertical sections, it is easier to lower the busway from the floor above where it will be installed. Vertical sections are often stored on the floor above their final location to facilitate lowering them into position.

Supports and Hangers. Use the hangers or the hanging recommendations supplied by the manufacturer in the manner prescribed to afford a secure installation and proper hanger spacing. A busway which is mounted horizontally should be supported at 5-ft (1.5-m) intervals and not more than 10-ft (3-m) intervals if it is marked as being suitable for such intervals. Consider sway bracing for plug-in busway. Caution must be emphasized when all plug-in units are used on one side of a busway or when there are more plugs on one side than the other. Large plug-in units are cubicles which have considerable weight and when mounted on a horizontal run of busway should be separately supported from the building structure to prevent twisting or deformation of the busway. A busway which is to be mounted vertically should be marked to indicate that it is suitable for that purpose. When the distance between floor supports is more than that for which the busway is marked as suitable, the manufacturers’ recommendation regarding intermediate supports should be followed; however, support intervals should not exceed 16 ft (4.9 m). Busway cubicles and bus plugs should be separately supported by the building structure when so recommended by the manufacturer. (See Figs. 9.173 and 9.174.)



FIGURE 9.173 Installing busway on hangers.

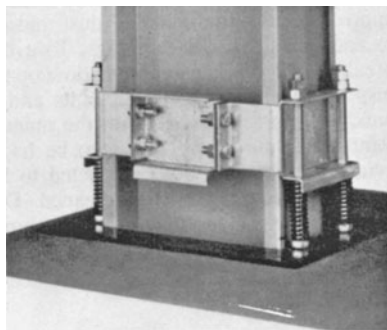


FIGURE 9.174 Riser busway section with floor support.

Testing. Be sure to recheck all steps to ensure that you have followed the manufacturer's recommendations for installation and that you have not forgotten anything. At this point the busway installation should almost be complete. Before energizing it, the complete installation should be properly tested. The testing procedures should first verify that the proper phase relationships exist between the busway and associated equipment. This phasing and continuity test can be performed in the same manner as similar tests on other pieces of electrical equipment on the job. All busway installations should then be tested with a megohmmeter or high-potential-voltage tester to be sure that excessive leakage paths between phases and ground do not exist. Megohmmeter values depend on busway construction, type of installation, size and length of busway run, and atmospheric conditions. Acceptable values for a particular busway should be obtained from the manufacturer.

Energizing. When the equipment is energized for the first time, qualified electrical personnel should be present. Energizing a run of busway for the first time is potentially dangerous. If faults caused by damage or poor installation practices have not been detected in the checkout procedure and corrected, serious damage can result when the power is turned on. There should be no load on the busway when it is energized. Since busway typically extends through several rooms and floor levels, care should be taken to see that all devices fed from the busway are switched to the off position. The equipment should be energized in sequence by starting at the line end of the system and working toward the load end. In other words, energize the main devices, then the feeder devices, and then the branch-circuit devices. Turn the devices on with a firm, positive motion. Protective devices which are not quick-acting should not be teased into the closed position. After all the devices have been closed, loads such as lighting circuits, contactors, heaters, and motors may be turned on. Busway, when operating properly, will have a moderate 60-Hz hum. However, excessive noise may be an indication of hardware that has not been tightened or of metal parts that have been improperly assembled. Occurrence of sparking at any joint along the busway is an abnormal condition. The busway should be deenergized until the sparking condition has been corrected.

275. Busway-system inspection and maintenance

Warning. Turn off power ahead of the busway before performing any of the following maintenance operations. Check incoming line terminals with a voltmeter prior to proceeding with work. *Do not attempt to work on energized busway.*

276. Busway should be inspected once each year or after any severe electrical faults. Look for any moisture or signs of previous wetness or dripping onto the busway or onto connection boxes from leaky roofs, pipes, sprinklers, or other sources of moisture. Look for any recent changes in sprinklers or other plumbing that might now be a source of trouble to the busway. Eliminate the source of any liquids dripping onto the busway and any other source of moisture (indoor busway). Replace or thoroughly dry and clean any insulating material which is damp or wet or shows accumulation of deposited material from previous wettings. If there is an appreciable accumulation of dust and dirt, clean it off by using a brush, vacuum cleaner, or clean, lint-free rags. To avoid blowing dust into busway joints, circuit breakers, or other equipment do not use a blower or compressed air. Carefully inspect all visible electrical joints and terminals, checking for tightness of bolts, nuts, etc., in accordance with the manufacturers' instructions (see Fig. 9.175). If joints or terminations appear to be badly discolored, corroded, or pitted or show evidence of having been subjected to high temperatures, the parts should be disassembled and replaced or cleaned. Do not remove plating on aluminum parts, joints, or terminations. Damaged

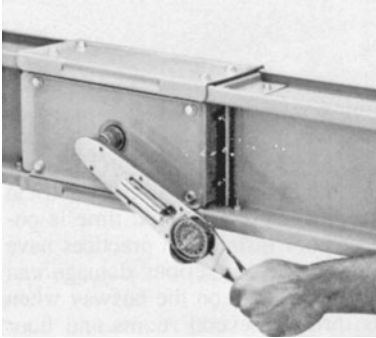


FIGURE 9.175 Tightening a joint bolt by using a torque wrench.

nism quickly and positively throws contacts fully on and fully off. Check the mechanisms of all electrical and mechanical interlocks and padlocking means. Check for missing or broken parts, proper spring tension, free movement, rusting or corrosion, dirt, and excessive wear. Examine all readily accessible arc chutes and insulating parts for cracks or breakage and for arc spatter, sooty deposits, oil, or tracking. Clean off arc spatter, oil, and sooty deposits. Replace the device if appreciable material has burned away or if parts are charred or cracked. Closely examine the fuse clips. If there is any sign of overheating or looseness, check the spring pressure, tightness of clamps, etc. Replace the fuse clips if the spring pressure compares unfavorably with that of identical fuse clips and other equipment. Look for any signs of deterioration in insulating material or melting of the sealing compound. Replace such insulating parts and assemblies where the sealing compound has melted. Be sure that the condition which caused the overheating has been corrected. Lubricate the operating parts of switch mechanisms, etc., according to the manufacturer's instructions.

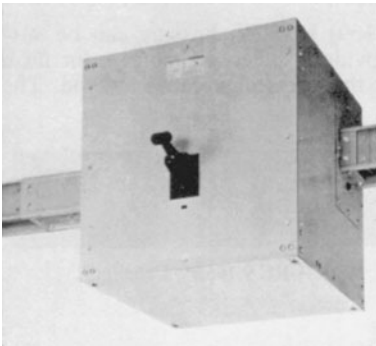


FIGURE 9.176 Power tap-off cubicle with a molded-case circuit breaker.

aluminum parts should normally be replaced. Check the insulation resistance prior to reenergizing the busway. A permanent record should be kept of resistance readings. If readings decrease appreciably with time, deterioration is taking place. If resistance readings are below recommended manufacturer's values, contact the busway manufacturer for the appropriate corrective action.

277. Busway plugs and protective devices.

Check the operation of all mechanical components. Check all switch-operator mechanisms and external operators of circuit breakers. Make sure that each operator mecha-

nism quickly and positively throws contacts fully on and fully off. Check the mechanisms of all electrical and mechanical interlocks and padlocking means. Check for missing or broken parts, proper spring tension, free movement, rusting or corrosion, dirt, and excessive wear. Examine all readily accessible arc chutes and insulating parts for cracks or breakage and for arc spatter, sooty deposits, oil, or tracking. Clean off arc spatter, oil, and sooty deposits. Replace the device if appreciable material has burned away or if parts are charred or cracked. Closely examine the fuse clips. If there is any sign of overheating or looseness, check the spring pressure, tightness of clamps, etc. Replace the fuse clips if the spring pressure compares unfavorably with that of identical fuse clips and other equipment. Look for any signs of deterioration in insulating material or melting of the sealing compound. Replace such insulating parts and assemblies where the sealing compound has melted. Be sure that the condition which caused the overheating has been corrected. Lubricate the operating parts of switch mechanisms, etc., according to the manufacturer's instructions.

Use a clean nonmetallic light grease or oil as instructed. Do not oil or grease parts of molded-case circuit breakers (see Fig. 9.176). If no instructions are given on the devices, sliding copper contacts, operating mechanisms, and air locks may be lubricated with clean, light grease. Operate the switch or circuit breakers several times to make sure that all mechanisms are free and in proper working order. Retighten all wire connections. Check fuses to make sure that they have the proper ampere rating and interrupting rating. Make sure that non-current-limiting fuses are not used as replacements for current-limiting fuses. If the bus plug has been removed from the busway, check the insulation resistance of the device prior to its reinstallation.

278. Specific-purpose busway. Lighting busway and trolley busway are considered to be special-purpose busway. *Lighting busway* provides a low-cost, flexible power-distribution system for supplying low-capacity loads. It provides maximum flexibility for these low-capacity loads, since a power tap-off can be located at any point along the busway. It is used effectively as a power supply system for lighting fixtures, small power

tools, and machines in industrial and assembly plants, office and commercial buildings, department stores, vocational schools, garages, warehouses, truck and rail terminals, shipping docks, museums, and galleries. *Trolley busway* provides a completely mobile and flexible power-distribution system for such applications as cranes, hoists, monorails, conveyors, assembly lines, observatories, rotating restaurants, industrial trolley cars, and portable tools.

Lighting busway (Fig. 9.177) provides the greatest flexibility in the location of outlets for low-current-capacity loads. Several ampere ratings (20, 30, 35, 50, and 60 A) are available in two-, three-, and four-wire systems, with a maximum voltage rating of 300 V, ac or dc, to ground. Lighting busway may be used as a branch-circuit or feeder circuit as defined in Article 100 of the National Electrical Code, subject to the ampere limitations in Sec. 210.23. It may be utilized in exposed areas except in unsuitable locations where subject to mechanical injury, corrosive vapors, hoistways, battery rooms, outdoors, or in wet or hazardous locations (see Sec. 368.12 of the NEC).

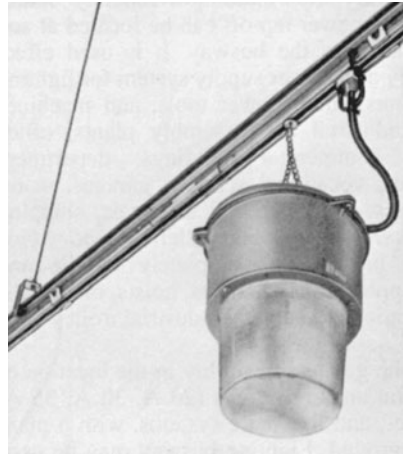


FIGURE 9.177 Example of a lighting busway.

Standard straight sections are typically available in 4- and 10-ft (1.2- and 3-m) lengths, while nonstandard sections are typically available in lengths of 1, 2, 3, 5, 6, 7, 8, and 9 ft (0.3, 0.6, 0.9, 1.5, 1.8, 2.1, 2.4, and 2.7 m). In this type of busway, the steel housing serves as the ground path. A continuous narrow opening or slot along the bottom of the housing provides power tap-off capability along the entire length of the busway run by allowing the insertion of plugs at any point. If required, a rubber slot closure which can be field-cut to length is available to close off openings between plugs to prevent the entrance of dust or other objects.

Standard components, along with straight sections, include coupling for joining section to section, feed-in devices for supplying power to individual runs, and caps to terminate a run, various types of hangers and heavy-gage-steel channels to suspend and support lighting runs with fixtures attached, and a variety of tap-off devices in both terminal and receptacle types with or without circuit protectors (fuses or circuit breakers).

Couplings (Fig. 9.178) serve three functions: first, to connect electrically the circuit conductors between sections; and, second, to join section housing rigidly and securely to section housing. A third function is available with a trolley-entrance coupling which allows the insertion of a trolley-type tap-off device for moveable-load applications.



FIGURE 9.178 Couplings.

Feed-in boxes serve to power lighting busway circuits and are designed to attach at the end (Fig. 9.179) or in the center of a run (Fig. 9.180).

End caps serve to terminate or seal off the end of a run (Fig. 9.181). Similar in design to couplings, they snap into place and can be easily removed and reused when extending a lighting busway run.

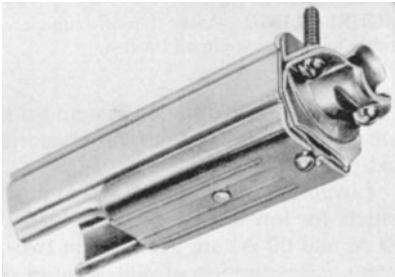


FIGURE 9.179 Feed-in boxes.

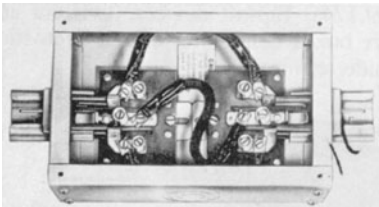


FIGURE 9.180 Typical center feed-in box.

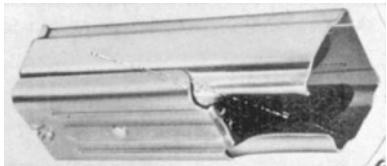


FIGURE 9.181 Typical end cap.

Methods of Suspension. (Figs. 9.182 and 9.183) Lighting busway can be suspended by various methods. Manufacturers provide a variety of hangers for flush or surface mounting, drop-rod suspension, or the messenger-cable method. The distance between points of suspension depends on the weight loads directly supported by the busway, building truss or beam locations, and manufacturers' allowable limits. Hangers can be positioned anywhere along the busway housing. When heavy loads (such as high-bay lighting fixtures) are to be supported or when building trusses are spaced beyond standard allowable limits, a supplementary steel support channel (hat section) can be provided by busway manufacturers. By using the support channel and roller-type rod hangers, lighting busway can be rolled into position, with lighting fixtures prepositioned (installed on the busway and electrically connected), from one of a building.

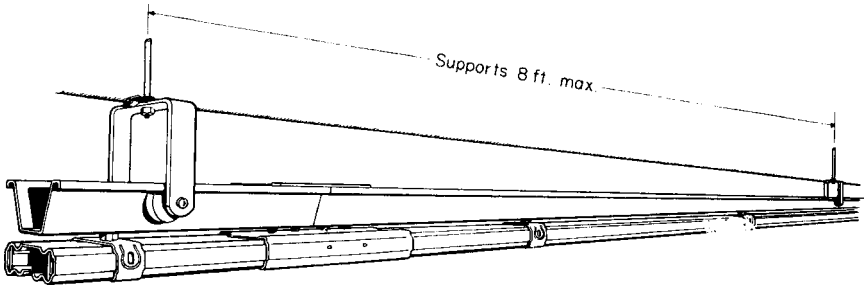


FIGURE 9.182 Hat section, suspension-roll-in.

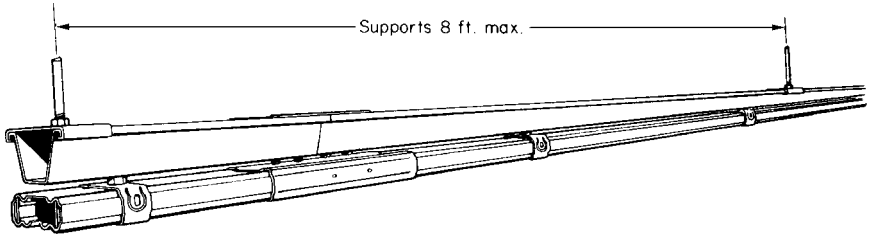


FIGURE 9.183 Hat section, suspension-fixed.

279. Power tap-off devices (twistouts and trolleys; Figs. 9.184, 9.185, and 9.186) are typically available as follows:

1. *Without circuit protection.* Polarized.
2. *Receptacle twistouts.* Rated 15 A at 125 V, ac or dc; for three-wire (line, neutral, and ground) convenience gaps.
3. *Terminal twistouts.* Rated 20 A at 125 V, ac or dc, and 15 A at 300 V ac; for three-wire (line, neutral, and ground) permanent connection to electrical devices.
4. *Terminal trolleys.* Rated 20 A at 300 V, ac, for three-wire (line, neutral, and ground) permanent connection to electrical devices.

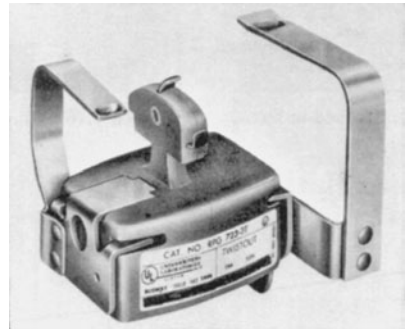


FIGURE 9.184 Twistout.

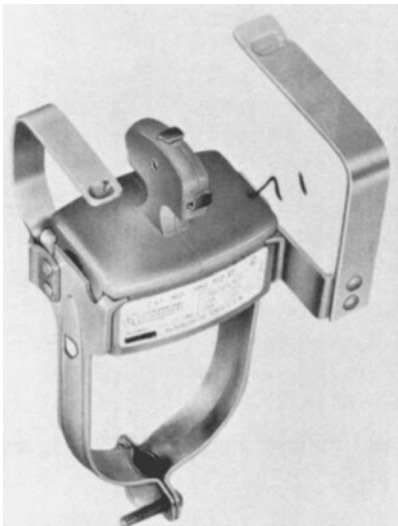


FIGURE 9.185 Twistout.

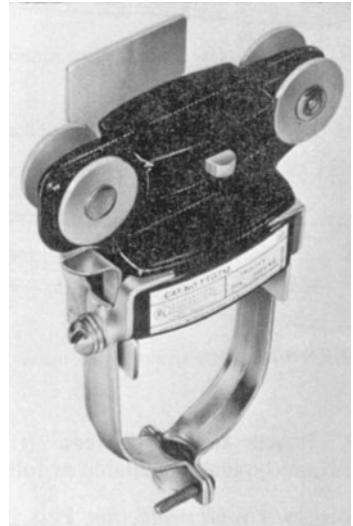


FIGURE 9.186 Trolley.

or washrooms, heaters, fans, portable tools, etc. If two-pole busway is used, other loads must be supplied by other independent circuits, which may be either lighting busway or wire and conduit. In many instances, a considerable saving can be effected by using three-wire lighting busway to supply two, three, or more of these circuits.

If service continuity is essential, as in emergency lighting systems, it is desirable to split the loads in a three-pole, two-circuit single housing. Then, if a temporary overload should occur on one circuit, the single-pole breaker protecting that circuit may trip but the other circuit will be left in operation. Thus, only a portion of the load will be shut down, and all production will not be lost.

280. Typical installation procedures for lighting busway. After the suspension method has been put into place and hangers located as required, the installer may select any desired location along the designated run to install the first section of lighting busway. A coupling can first be installed by snapping it onto the end of a section. A tab on the coupling engages a square slot on the top of the section housing which locks it into place. As no tools are required, couplings can be attached after a section has been installed on the hangers.

To install lighting busway, simply slide each section through the hanger(s), snap the sections together at the coupling, and repeat the process until the run has been completed. Lighting fixtures and tap-off devices, as well as end or center feed-ins and end caps, can be installed at the same time.

Lighting busway is designed for simplicity of installation and reusability. It can be removed and reinstalled, affording flexibility and cost savings for future changes.

Trolley Busway. (Fig. 9.189) This is a modern enclosed, mobile power-distribution system designed to provide moving-current tap-off for applications such as cranes, hoists, maintenance hanger doors, and rotating platforms. Automobile plants, for example, use trolley busway to provide mobile power for portable assembly tools and parts carrying monorail systems. Direct-current trolley busway is also used for testing the vehicle electrical system as it moves down the assembly line. Appliance manufacturers use trolley busway for assembly and testing of their products. When compared with a bare bar or cable used in the same application, trolley busway offers not only lower installed cost but greatly reduced maintenance in addition to safety, as the conductor bars are enclosed and protected in a single steel housing.

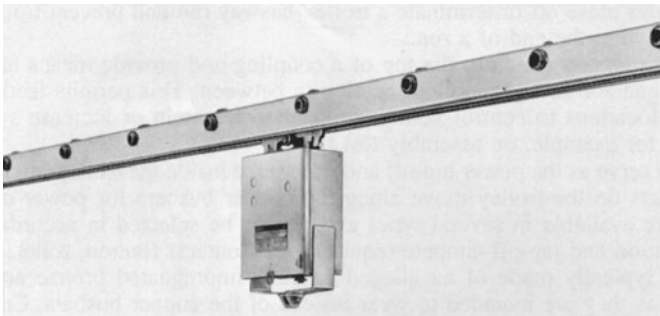


FIGURE 9.189 Typical example of a trolley busway.

Two- and three-pole trolley busway (Fig. 9.190) is available in continuous ampere ratings of 100, 225, 375, 400, 500, 600, and 800 A. All have 150 percent intermittent ratings based on 1-min-on, 1-min-off duty cycles and can be used on system voltages up to 600 V ac




FIGURE 9.190 Typical section of a trolley busway.

(50, 600, 400, or 800 Hz) or 250 V dc. Four-pole trolley busway is rated 100/150 A at 480 V ac or 250 V dc. All use copper conductor bars. In this type of busway the steel housing serves as the ground path. Trolley busway is usually furnished in standard 10-ft (3-m) straight sections. However, section lengths from 1 ft 2 in. to 10 ft (0.35 to 3 m), in any increments, are available as well as horizontal or vertical curved sections (Fig. 9.191). For exceptionally long straight runs or where rigidly supported on the building structure or at both ends of the run or where a run crosses a building expansion joint, a trolley busway expansion section should be included.

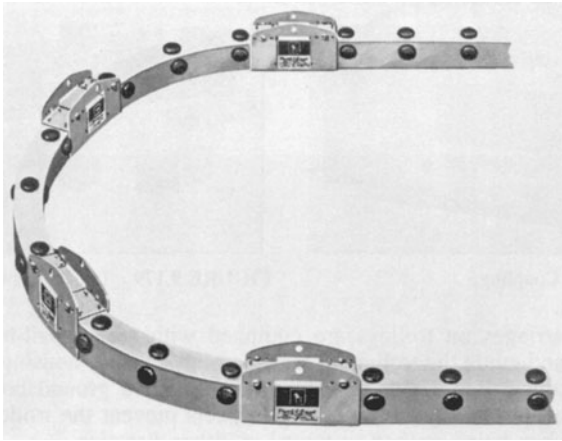


FIGURE 9.191 Horizontal and curved section.

Polarized dropout sections, which provide trolley access points, may be built into a standard section and may be installed at any convenient location along the run. Sections can also be sectionalized (for circuit isolation) or be provided busless for trolley return on closed-loop applications. When switching trolleys from one run to another run, insulated flared ends are installed on the end of each facing section. These serve to align trolleys when transferring from one run to the other.

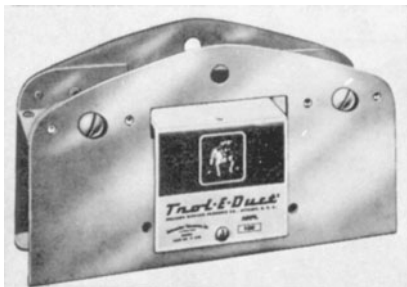


FIGURE 9.192 Coupling.

Accessories include couplings, hangers, and plates, feed-ins, and a variety of trolleys.

Couplings are used to join section to section together mechanically and electrically (Fig. 9.192) and also serve as the hanger. Intermediate hangers are used on long-radius curves or straight sections subject to heavy hanging loads between couplings. [Trolleys can support up to 25-lb (11.3-kg) loads.]

End plates close off or terminate a trolley-busway run and prevent trolleys from traveling beyond the end of a run.

Feed-in adapters attach to the top of a coupling and provide means to power a run at the ends or at any coupling location in between. This permits feeding a run in several locations to control voltage drop or to maintain or increase system capacity, as, for example, on assembly test lines.

Trolleys serve as the power tap-off and transverse inside the trolley-busway housing. Contacts on the trolley move along the copper busbars for power collection. Trolleys are available in several types and should be selected in accordance with the application and tap-off-ampere requirement. Contacts (button, roller, and shoe types) are typically made of an alleged graphite-impregnated bronze and are replaceable, as they are intended to wear instead of the copper busbars. Contact life varies depending on the severity of the duty and working atmospheric conditions. To prevent incorrect phasing, trolleys are polarized. The number and type of contacts determine trolley tap-off capacities. Ampere ratings range from 30 to 200 A, 600 V or less, ac or dc. Trolleys can be close-coupled and interconnected for higher-rating applications (Fig. 9.193).

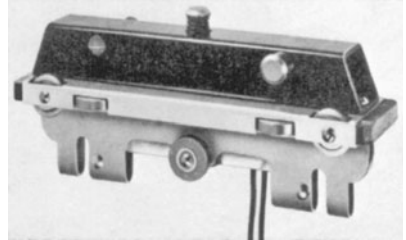


FIGURE 9.193 Typical busway trolley.

The steel carriages on trolleys are equipped with sealed ball-bearing wheels which support and guide the trolley inside the trolley-busway housing. Side wheels, which are of copper-impregnated steel, provide positive ground contact between trolley and busway housing. Undercarriage wheels prevent the trolley from riding up and down when being pushed or towed in either direction.

Accessory boxes, which attach directly to trolley carriages, can be equipped with fuses, circuit breakers, receptacles, contactors, starters, timers, pilot lights, and pushbuttons (Fig. 9.194). A tool hanger with wiring box is also available (Fig. 9.195).

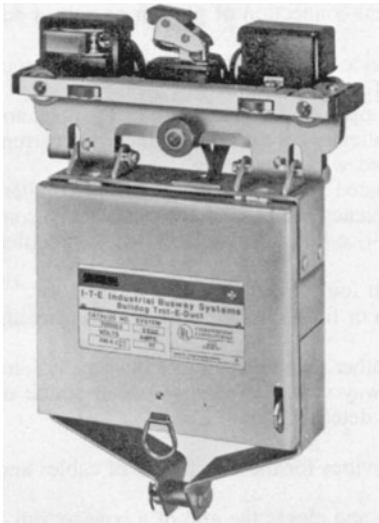


FIGURE 9.194 Busway trolley with accessory box.

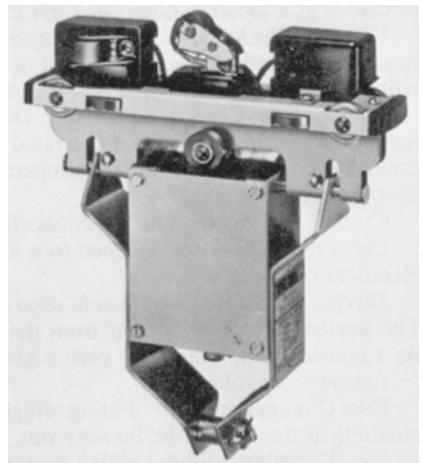


FIGURE 9.195 Busway trolley with wiring box.

Nylon-brush cleaning trolleys are used to clean the copper conductor bars when a trolley busway is subject to dusty conditions. An abrasive cleaning trolley can be used intermittently to resurface the copper conductor bars if they become rough or coated from severe operating conditions.

Trolley busway, being manufactured in bolt-together sections, can easily be disassembled and moved to a new location within a facility or a new operation.

281. Definitions from NEMA BU1

ACCESSORY Non-current-carrying component of a busway system used to mount or adapt the busway to the building structure.

ADAPTER Fitting which permits the joining together of lengths and fittings of different shapes or designs.

AMBIENT TEMPERATURE Temperature of the surrounding air that comes in contact with the outside of the busway enclosure, device, or fitting.

ASYMMETRICAL CURRENT Alternating current having a waveform which is offset with respect to the zero axis. The offset occurs at the initiation of a short circuit or other change in current. It usually decays quickly until steady-state conditions are reached and the current becomes symmetrical. Asymmetrical current is composed of the alternating symmetrical component. It is expressed in rms asymmetrical amperes at a specific time (normally one-half cycle) after initiation of a short circuit or other change in current. Peak current refers to the maximum instantaneous amperes within this first half cycle.

AVAILABLE SHORT-CIRCUIT CURRENT Maximum current which a circuit is capable of delivering at the system terminals ahead of the apparatus being supplied. Available short-circuit current may be expressed in either rms symmetrical amperes or rms asymmetrical amperes.

BOLT-ON DEVICE Power takeoff means which can be bolted to the busways at a joint between lengths and fittings, at the end of a run, or at any predetermined location, and which makes electrical connection to the busbars.

BUSBARS Conductors which carry current through busway lengths and fittings and which have one of the following arrangements: (1) single-bar arrangement, which refers to a busway having one conductor per pole; and (2) multibar arrangement, which refers to a busway having two or more conductors for one or more of its poles.

BUSWAY Prefabricated electric distribution system consisting of busbars in a protective enclosure, including straight lengths, fittings, devices, and accessories. Busways are of the following types: (1) feeder busway, a busway that has no plug-in openings and is intended primarily for conducting electric power from the source of supply to centers of distribution but can have provisions for bolt-on devices; and (2) plug-in busway, a busway having plug-in openings on one or both sides at spaced intervals, offering means for electrical connection of plug-in or bolt-in devices to the busbars.

CENTER CABLE TAP BOX Fitting or device which provides for the attachment of cables at a location other than the end of a busway run.

CIRCUIT BREAKER Device designed to open and close a circuit by nonautomatic means and to open the circuit automatically on a predetermined overcurrent without injury to itself when properly applied within its rating.

CONTINUOUS-CURRENT RATING Designated maximum direct current or alternating current in rms amperes at rated frequency which a busway can carry continuously without exceeding its temperature-rise limits when subjected to specified heating tests.

CROSS Fitting suitable for connection in four directions.

CUBICLE Enclosure attached to a length or fitting for the purpose of enclosing electrical components.

DEVICE Enclosed component used on rather than in a run of a busway system. The device may carry current from the busway system to supply a load circuit or be a nonload-supplying unit, such as a ground detector.

ELBOW Angular fitting.

END CABLE-TAP-BOX Fitting which provides for the attachment of cables and conduits at the end of the busway run.

END CLOSURE Fitting which terminates and closes the end of a busway run.

EQUIPMENT-GROUNDING CONDUCTOR Conductor which is used to connect noncurrent-carrying metal parts of the busway.

EXPANSION FITTING Fitting which accommodates expansion and contraction of the busway or building.

FITTING (BUSWAY) Component in a run of a busway system, other than a straight length. It may be either current-carrying, such as an elbow, tee, or cross, or noncurrent-carrying, such as an end closure.

FLANGED END (OR SWITCHBOARD STUB) Fitting which provides means for mechanically and electrically connecting a busway run to other apparatus.

FLOOR FLANGE Accessory on the outside of a busway enclosure that provides means for the installer to cover the floor opening penetrated by the busway.

INDOOR Suitable for installation within a building which protects the busway from exposure to the weather.

NEUTRAL CONDUCTOR Conductor which is connected to the midpoint of a three-wire single-phase system, center point of a Y-connected three-phase system, or midpoint of one side of a delta-connected three-phase system.

OFFSET Fitting providing two or more angles.

OUTDOOR So constructed that exposure to the weather will not interfere with successful operation. **NOTE** Outdoor busway is not suitable for outdoor use until completely and properly installed as recommended by the manufacturer.

PLUG-IN CIRCUIT BREAKER Plug-in device containing an externally operable circuit breaker.

PLUG-IN DEVICE (OR BUS PLUG) Power takeoff means which can be plugged into a plug-in busway and which makes electrical connection to the busbars.

PLUG-IN FUSIBLE SWITCH Plug-in device containing an externally operable fusible switch. A *handle-operated switch* is a switch which is externally operated without opening or closing the cover; a *cover-operated switch* is a switch which is operated by opening and closing the cover.

PLUG-IN GROUND DETECTOR Plug-in device which indicates a ground on any of the normally ungrounded busway conductors.

PLUG-IN POTENTIALIZER (OR NEUTRALIZER) Plug-in device having means for limiting the potential difference between a busway enclosure and the busbars.

RATING Designated limit(s) of the rated operating characteristic(s) of a busway length, fitting, or device. **NOTE** Such operating characteristics as current, voltage, frequency, etc., may be given in the rating.

REDUCER Fitting designed for connection between lengths and fittings of different ampere ratings.

ROOF FLANGE Accessory on the outside of a busway enclosure that provides means for the installer to weatherproof the roof opening penetrated by the busway.

STRAIGHT LENGTH Straight section of a busway system.

SWITCH Device for opening and closing or for changing the connection of a circuit.

SYMMETRICAL CURRENT Alternating current having no offset or transient component and therefore having a waveform essentially symmetrical about the zero axis. Symmetrical current is expressed in rms amperes.

TEE Fitting suitable for connection in three directions.

TOTALLY ENCLOSED So constructed as to prevent the free exchange of air between the inside and outside of a housing but not sufficiently enclosed to be termed *airtight*.

TRANSFORMER FITTING Fitting wherein busbar positions are interchanged to equalize the impedance of the different phases or to change the phase relationship.

TRANSFORMER TAP Fitting having busbars extended through its housing or end barrier for connections by open cable to terminals of the transformer(s).

TRANSFORMER THROAT Fitting which provides enclosed busbar connections to transformer terminals.

TRANSVERSE BARRIER Dividing barrier or other means of restricting the free flow of either air or moisture through the inside of a busway.

VAULT TERMINATION Fitting having open busbars extending from one end which provides for connections to vault equipment.

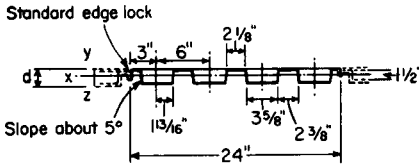
VENTILATED So constructed as to provide for the circulation of external air through an enclosure to remove heat.

VOLTAGE DROP Arithmetical difference between voltages at the load and supply ends.

WALL FLANGE Accessory on the outside of a busway enclosure that provides means for the installer to cover the wall opening penetrated by the busway.


CELLULAR-METAL-FLOOR-RACEWAY WIRING

282. Cellular-metal-floor raceways are formed by employing for the floor construction of the building structural members made of corrugated sheet steel. Seven types of cellular steel floor, as made by the H. H. Robertson Co. of Pittsburgh, are shown in Fig. 9.196. Cross-sectional views of completed floors and their adaptation for the installation of the electric wiring system are given in Figs. 9.197 and 9.198.




Type UK

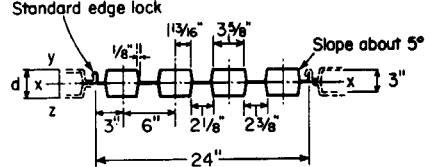
* Not recommended for use with concrete fill




Type RK

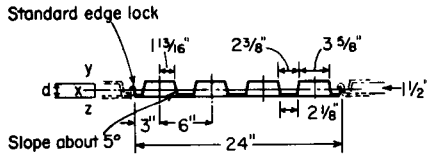

Type UKX

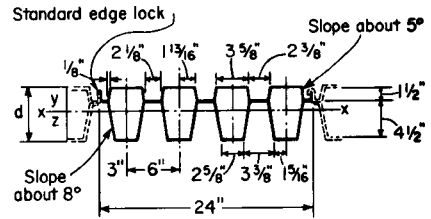


Type K

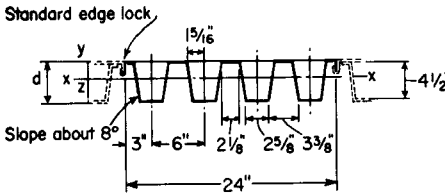


Type FK

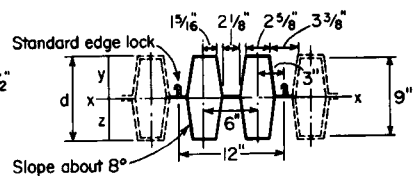* Not recommended for use with concrete fill



Type DK

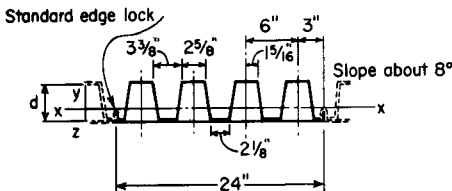

Type FKX

FIGURE 9.196 Types of cellular-steel floors. [H. H. Robertson Co.]

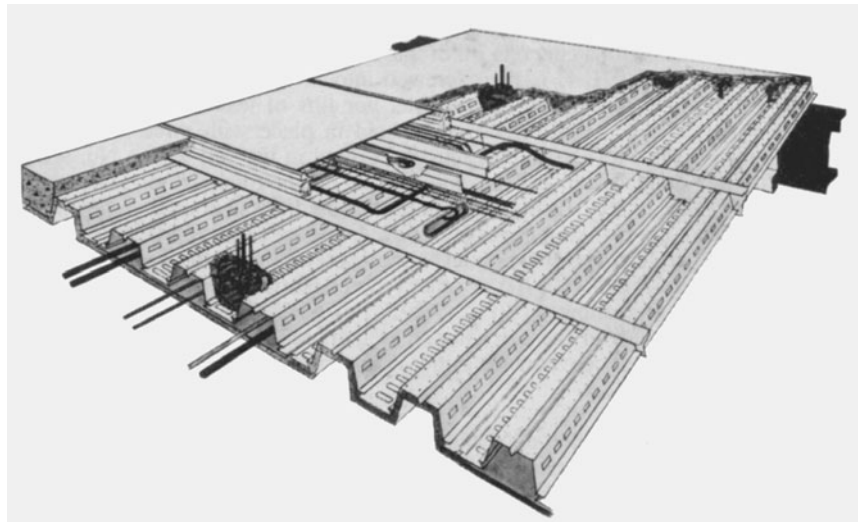


FIGURE 9.197 Model illustrating cellular-metal-floor-raceway wiring. [H. H. Robertson Co.]

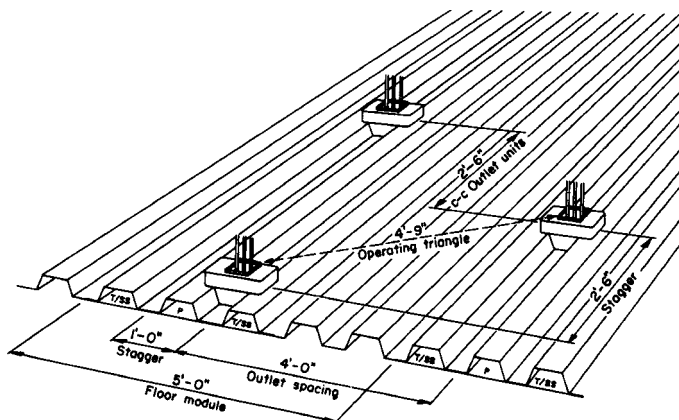


FIGURE 9.198 Model illustrating typical 5-ft (1.5-m) staggered module of cellular-metal-floor raceway. [H. H. Robertson Co.]

283. The cells which are not filled with concrete from the raceways for wiring and piping. In all types the cells are 6 in. (152.4 mm) apart on centers, and the members are manufactured four cells wide with varying lengths to suit the span between beams. The cells are cross-connected by headers formed over the beams in the space left between adjacent lengths of flooring. When headers connected to alternate cells are used, one raceway system can be formed for signal wires and another for power wires, with both systems kept entirely separate from each other. If any cells are used for piping, those cells must not be interconnected to the electrical raceway system.

284. In forming these floors, close cooperation is required between the structural and the electrical workers. The structural workers lay the floor members across the spans from beam to beam, fastening them to the beams and leaving about $4\frac{1}{2}$ in. (114.3 mm) of space on top of the beams between the abutting ends of the floor members for formation of the header.

The raceway headers are formed by the electrical workers in the space between members on top of the floor beams. A line of cells which is to form a raceway is interconnected at the ends of the sections by locating an access unit (Fig. 9.199) between the open ends of the aligning cells of adjacent sections.

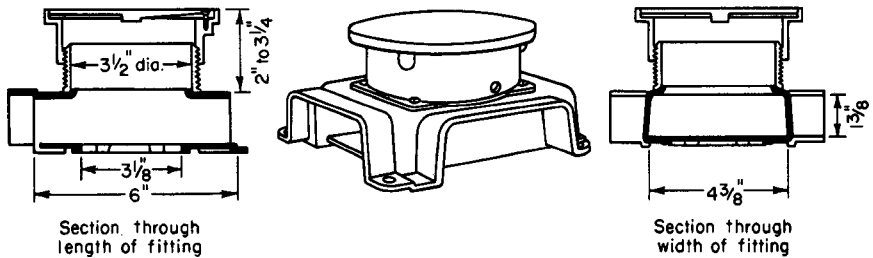


FIGURE 9.199 Access unit for cellular-metal floors which have concrete fill. [H. H. Robertson Co.]

The other cells are closed off with connecting units (Fig. 9.200) so as to form a continuous header across the beam to the raceway line of cells. When one raceway system is to be built for power wiring and another for telephone wiring, the header for one system is built on one junction of floor beams and the header for the other system on another junction (Fig. 9.201). The wires for one system will pass through the lower portion of its cells under the header for the other system. The joints at the edges of the header units are sealed with a cold-flowing asphaltic compound.

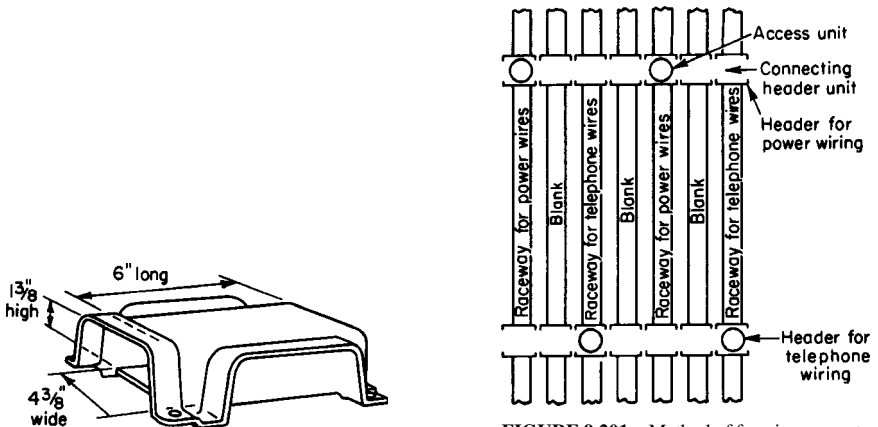


FIGURE 9.200 Connecting header unit.

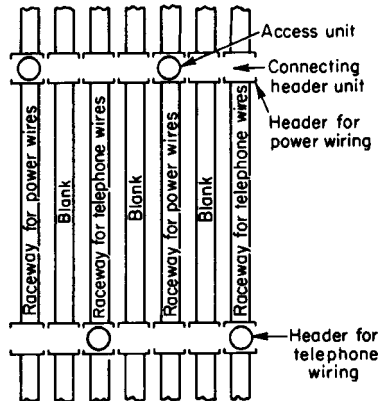


FIGURE 9.201 Method of forming separate headers for power and for telephone wiring.

285. The connection from a header to a panelboard is made from special fittings as shown in Fig. 9.202. Connection to the header is made with an adapter (Fig. 9.203, II) to which is connected the vertical elbow (Fig. 9.203, I). Straight sections of duct 1 ft (0.3 m) long (Fig. 9.203, IV) coupled together with couplings (Fig. 9.203, V) form the vertical run up the wall. The final section to the panelboard is cut to length with a hacksaw. The box connector (Fig. 9.203, III) holds the duct to the panelboard. It requires an opening $1\frac{7}{8}$ by $5\frac{3}{4}$ in. (47.625 by 146.05 mm) in the bottom of the panelboard box.

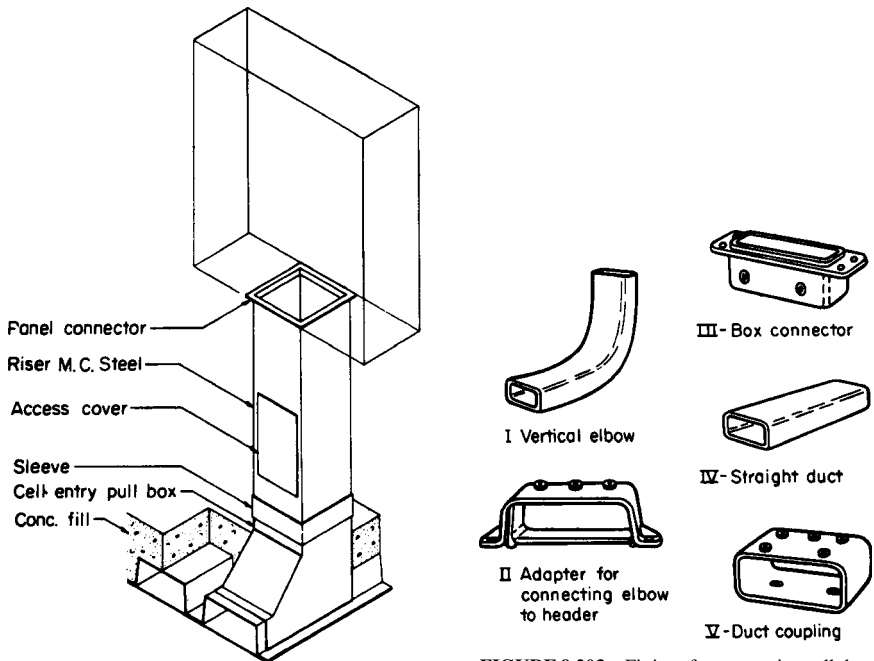


FIGURE 9.202 Connection of cellular-metal-floor raceways to panelboards. [H. H. Robertson Co.]

FIGURE 9.203 Fittings for connecting cellular-metal-floor header to wall panelboard. [H. H. Robertson Co.]

286. Method of installing floor outlets. A hole of $1\frac{5}{8}$ -in. (41.275-mm) diameter is cut in the center of a cell with a saw-type drill (Fig. 9.204, I). A forming tool (Fig. 9.204, II) is turned into the hole to prepare the hole for reception of the outlet tap. For floors with a concrete fill of 2 to $3\frac{1}{4}$ in. (50.8 to 82.55 mm) a standard adjustable tap (Fig. 9.205, I) is then screwed into the hole. For fills of 1 to 2 in. (25.4 to 50.8 mm) a special tap is available. For fills of less than 1 in. a shallow tap (Fig. 9.205, IV) is set in the hole and held in place with three No. 12 self-tapping screws. Holes for the screws must be drilled in the cell with a No. 9 drill. The top of the standard tap can be adjusted in height to the floor level, and a blanking cover (Fig. 9.205, II) installed until after the floor is poured. When a floor outlet is installed, the blanking cover is removed, and an extension (Fig. 9.205, III) is screwed into the tap. The floor outlet is then screwed onto the extension, using a Warnock wrench (Fig. 9.204, III) or other type of fabric wrench to avoid marring the fitting. With the shallow tap (Fig. 9.205, IV) the fitting screws onto the tap directly without the use of the extension. The complete outlet assembly is shown in Fig. 9.206. A duplex convenience outlet is shown in Fig. 9.207.

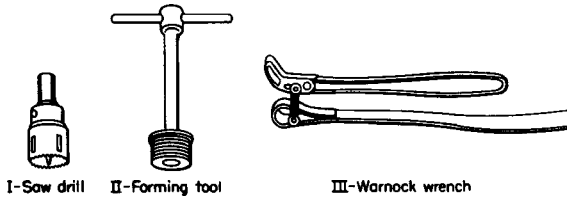


FIGURE 9.204 Tools for installing outlets in cellular-metal-floor raceways. [H. H. Robertson Co.]

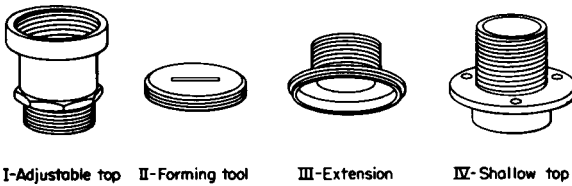


FIGURE 9.205 Fittings for cellular-metal-floor raceways. [H. H. Robertson Co.]

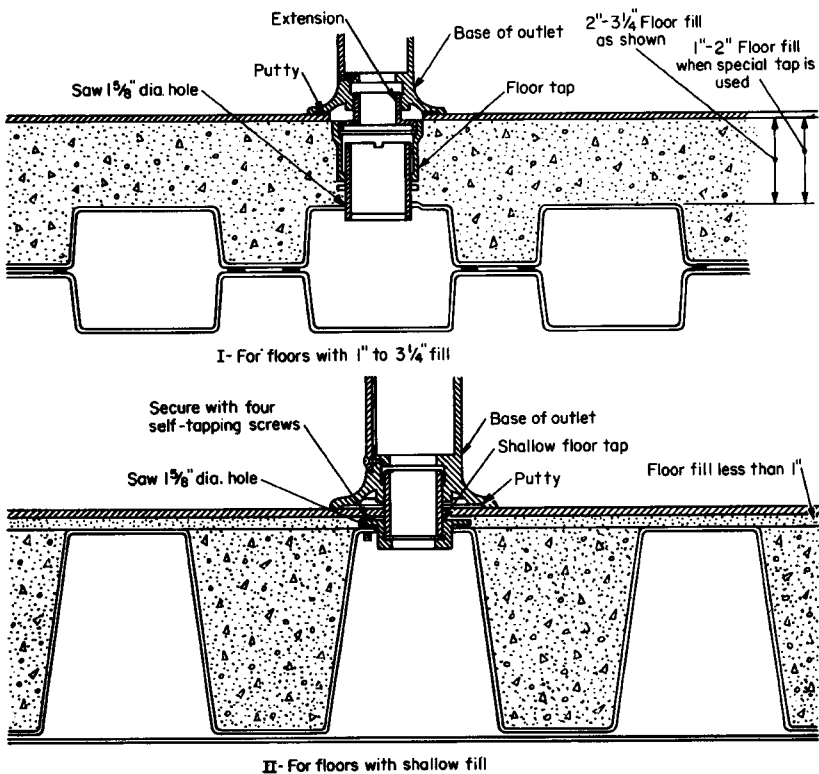


FIGURE 9.206 Assembly of floor outlets with cellular-metal-floor raceway. [H. H. Robertson Co.]

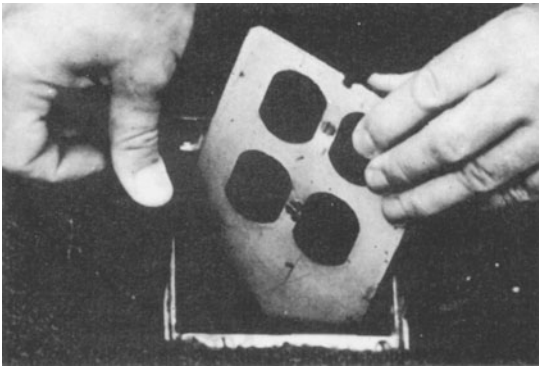


FIGURE 9.207 Outlets for use with cellular-metal-floor raceways. [H. H. Robertson Co.]

287. Cell markers should be located on the center of each cell near the opposite side of the room from the header to facilitate future location of cells when outlets are not installed initially. The access units in the header will identify the cell locations at the header. A straight line between the center of an access unit and a cell marker will then identify the cell so that an outlet can be located accurately at any time in the future. Several types of cell markers are shown in Fig. 9.208. The double-slot screw (Fig. 9.208, I) can be used to identify power-wire cells, and the single-slot one (Fig. 9.208, II) to identify telephone-wire cells. In installing these markers (Fig. 9.209) a hole is drilled and tapped in the top of the cell for a 12-24 screw before the floor fill is laid. The brass marker with a headless screw is then fastened in place and adjusted in height to the level of the finished floor. The marker should then be grouted in place. After the floor has been poured and the finished floor covering laid, the headless screw is replaced with one of the grommeted brass screws (Fig. 9.208, I or II).



FIGURE 9.208 Markers for cellular-metal-floor raceways. [H. H. Robertson Co.]

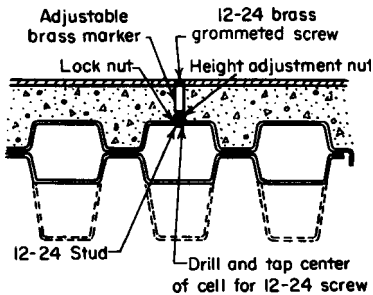


FIGURE 9.209 Detail showing cell marker. [H. H. Robertson Co.]

288. Underside (ceiling) headers (Fig. 9.210) are generally used with Types FK inverted, UK inverted, RK, and UK floors of Fig. 9.196 because there is not sufficient room for the other headers in the shallow floor fill. Two sizes are available:

1. 2½ in. (63.5 mm) deep and 5 in. (127 mm) wide
2. 4 in. (101.6 mm) deep and 6 in. (152.4 mm) wide

A ceiling header mounted in the corner formed by the ceiling and wall so as to be as inconspicuous as possible is shown in Fig. 9.211. It is held in place with No. 12 self-tapping screws which pass through holes drilled in the bottom of the raceways. Connection to a panelboard is made with a special cell (Fig. 9.212, II), as shown in Fig. 9.213. Connection between the cells and the header is made by drilling a 2-in (50.8-mm) hole in the cell to line up with the pilot opening in the header. A grommet (Fig. 9.212, I) with the locknut removed is then inserted in the hole diagonally, as shown in Fig. 9.214. After the grommet has been adjusted to its proper position, the locknut is screwed on and holds the grommet firmly in place. At least two markers, as explained in Sec. 287, should be located on top of the floor for each cell which does not have outlets installed initially.

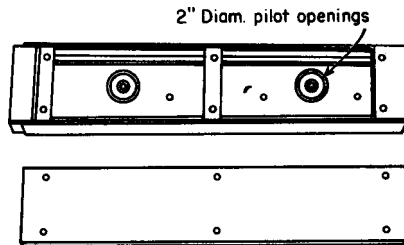


FIGURE 9.210 Underside header with cover removed. [H. H. Robertson Co.]

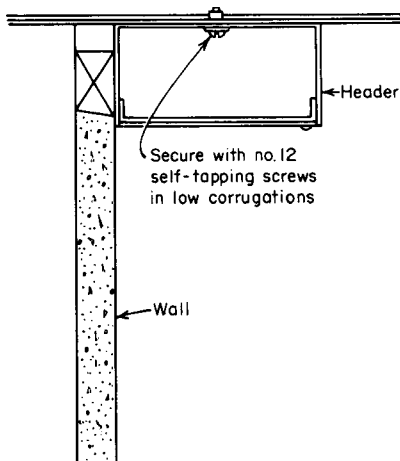


FIGURE 9.211 Location and mounting of underside header. [H. H. Robertson Co.]

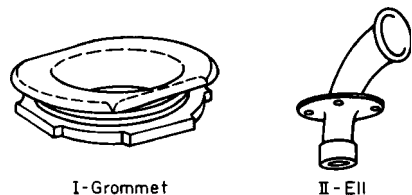


FIGURE 9.212 Fittings for underside header. [H. H. Robertson Co.]

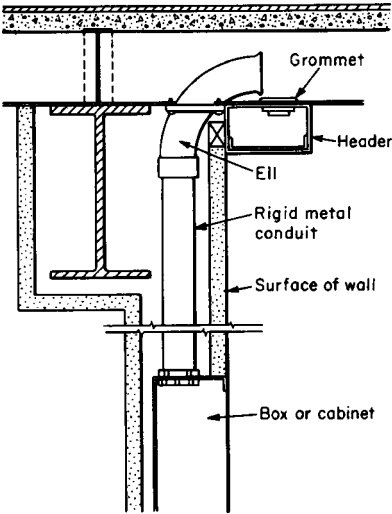


FIGURE 9.213 Method of connecting between underside header and panel. [H. H. Robertson Co.]

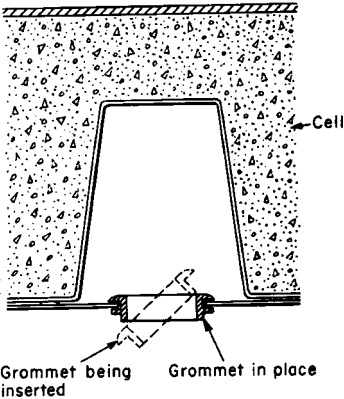


FIGURE 9.214 Method of inserting grommet into hole in cell. [H. H. Robertson Co.]

289. Ceiling lighting fixtures can be hung and wired from cellular-metal-floor raceways as shown in Fig. 9.215. At I is shown a fixture-stud mounting using the stud illustrated in Fig. 9.216, I. The fixture stud is inserted through a 2-in (50.8-mm) hole cut in the cell similar to the grommet assembly of Fig. 9.214. A mounting for fixtures which fasten on the cover of a 4-in (101.6-mm) box is shown in Fig. 9.215, II. The box (Fig. 9.216, II) is held in place with a grommet. The knockouts in the box can be used for surface conduit wiring if desired. A conduit-hung fixture is supported from the cell by means of a hanger as shown in Fig. 9.215, III. The hanger (Fig. 9.216, III) is held in place with a locknut in the same way as the grommet.

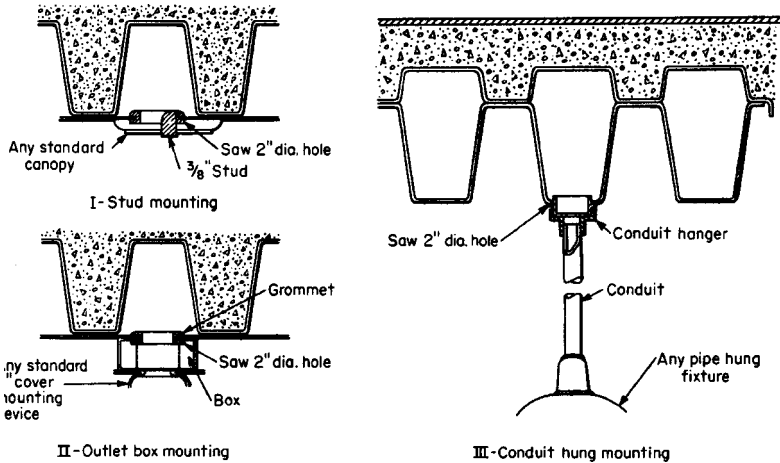


FIGURE 9.215 Methods of mounting ceiling fixtures from cellular-metal-floor raceways. [H. H. Robertson Co.]

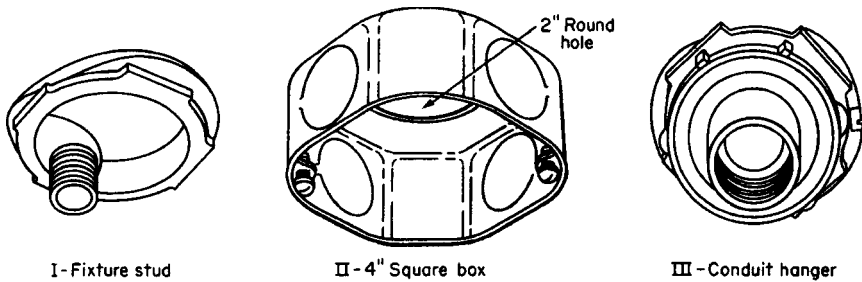


FIGURE 9.216 Fittings for ceiling fixtures. [H. H. Robertson Co.]

290. Trench header duct. A trench header duct can be used in lieu of the standard headers shown in Figs. 9.197 and 9.198. A typical trench-header-duct installation is shown in Fig. 9.217. It is run across the floor cells at right angles, and access to each cell is made through a grommet connection. The trench header duct shown in Fig. 9.217 contains barriers so that feeders, branch circuits, and telephone circuits are separated. The cover is flush with the floor, and flush screws secure the cover to the header duct. Each cover section is 3 to 6 ft (0.9 to 1.8 m) long.

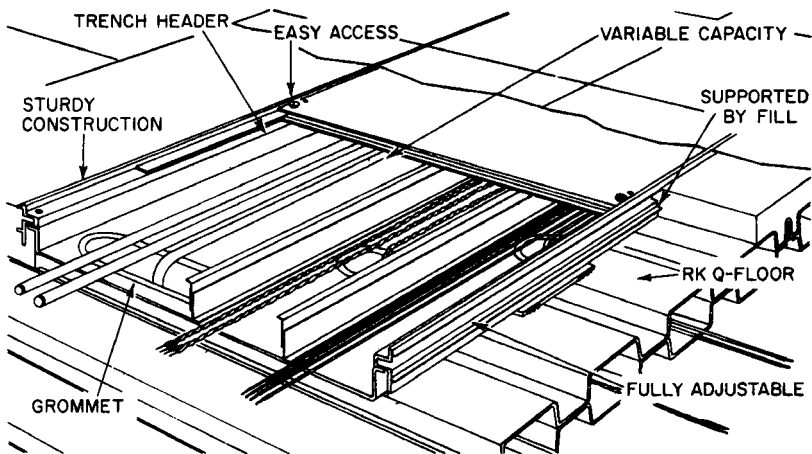


FIGURE 9.217 Trench header duct used for cellular-metal-floor raceways. [H. H. Robertson Co.]

Trench header duct is made in widths of 9 to 36 in. (228.6 to 914.4 mm) and arranged to accept standard floor tiles or similar floor coverings. This header system makes a neat installation, and access openings to the header duct are practically unnoticeable after the covers have been installed. One or more cover sections can be easily removed when access to the trench duct or floor cells is necessary.

291. The cellular raceways are wired by fishing the wires from the access units to the outlets. No conductor larger than No. 1/0 may be installed except by special permission.

The number of conductors in a cell is not limited as long as the total cross-sectional area of the conductors and cables does not exceed 40 percent of the internal area of the header or cell. All splices and taps must be made in the trench header duct or at junction boxes. So-called loop wiring (continuous, unbroken conductors) is not considered a splice or tap. The internal areas of the raceways are as follows:

	Entire area, sq in	40 percent
K cells	20.25	8.10
RK cells	11.25	4.50
FK, FK inverted cells	14.62	5.85
UK, UK inverted cells	5.62	2.24
DK cells	29.24	11.70

All junction boxes and inserts must be leveled to the floor grade and sealed against the entrance of concrete. They must be made of metal and so installed that they will be electrically continuous with the raceway. In cutting a cell and in setting inserts great care must be exercised so that chips or other dirt will not remain in the raceway. Only tools which are specially designed so that they will not enter the cell and injure the conductors should be used.

The NEC requires that when an outlet is discontinued, the conductors supplying it must be removed from the raceway, as discussed in depth in Sec. 253. Connections to cabinets and extensions from cells to outlets unless made by approved fittings must be made by means of flexible metal conduit where not installed in concrete rigid, intermediate, or electrical metallic tubing. Where there are provisions for the termination of an equipment grounding conductor, nonmetallic conduit, electrical nonmetallic tubing, or liquidtight flexible nonmetallic conduit where not installed in concrete may be used.

292. Cellular-metal-floor-raceway wiring is not allowed in any hazardous location except Class I, Div. 2 locations as permitted by express allowances in the appropriate articles of the NEC or where subject to corrosive vapors. It is not allowed in commercial garages except for supplying ceiling outlets or extensions to the area below the floor but not above. Any cell or header that is used for electrical conductors may not be used for any other service, such as steam, water, air, gas, and drainage.

293. Cellular-metal-floor raceways are used principally for office buildings in which the needs of the tenants for wiring outlets are not known definitely in advance and in which a high quality of adequacy and convenience of outlets and interior appearance without exposed wiring is desired. The position of the raceways may be varied in 6-in (152.44-mm) increments, and a very flexible system of outlets for telephones, business machines, and desk lamps provided, with all outlets located under the desks out of sight. The cost may be lower than would be incurred if a standard floor with a large number of underfloor raceways were installed. The wiring for ceiling-lighting outlets is also simplified by use of a type of floor in which the underside of the raceways serves as the ceiling.

CELLULAR-CONCRETE-FLOOR-RACEWAY WIRING

294. Cellular-concrete-floor raceways provide a complete underfloor electrical distribution system. For this system the floor is constructed of precast reinforced-concrete members (Fig. 9.218). These precast members are provided with hollow voids which form smooth, round cells. The cells form raceways for the electrical wires. Connections to the cells from a distribution center are made by means of metal header ducts which are run horizontally across the precast slabs and embedded in the concrete fill over the slabs. Connection from these headers to the cells is made through handhole metal junction boxes. An outlet can be located at any point along a cell. An opening into the cell at the desired point is formed by drilling a hole through the concrete floor slab. The hole is then fitted with the proper outlet fitting, and the wires fished from a handhole junction box to the outlet.

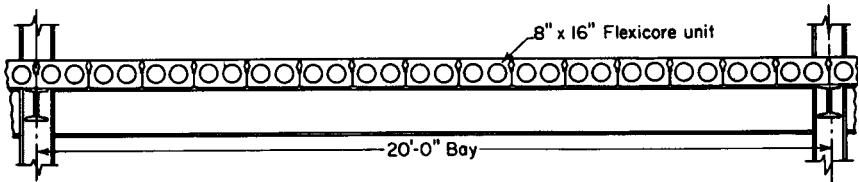


FIGURE 9.218 Typical cross section of a cellular-concrete floor. [The Flexicore Co., Inc.]

295. The National Electrical Code describes “cellular concrete floor raceways” in the scope of Article 372 as “the hollow spaces in floors constructed of precast cellular-concrete slabs, together with suitable metal fittings designed to provide access to the floor cells.” A *cell* is defined in NEC Sec. 372.2 as a single, enclosed tubular space in a floor made of precast cellular-concrete slabs, the direction of the cell being parallel to the direction of the floor member. A *header* is defined in the same section as transverse metal raceways for electrical conductors, providing access to predetermined cells of a precast cellular-concrete floor, thereby providing for the installation of electrical conductors from a distribution center to the floor cells.

296. Use of cellular-concrete-floor-raceway wiring (National Electrical Code). Conductors shall not be installed in precast-cellular-concrete-floor raceways (1) where subject to corrosive vapor; (2) in hazardous locations except as specifically permitted in the hazardous location articles in the NEC; or (3) in commercial garages except for supplying ceiling outlets or extensions to the area below the floor but not above. No electrical conductors shall be installed in any cell or header which contains a pipe for steam, water, air, gas, drainage, or any service other than electrical, as set forth in NEC Sec. 300.8.

297. Electrical distribution by means of cellular-concrete-floor raceways is illustrated in Figs. 9.219, 9.220, and 9.221.

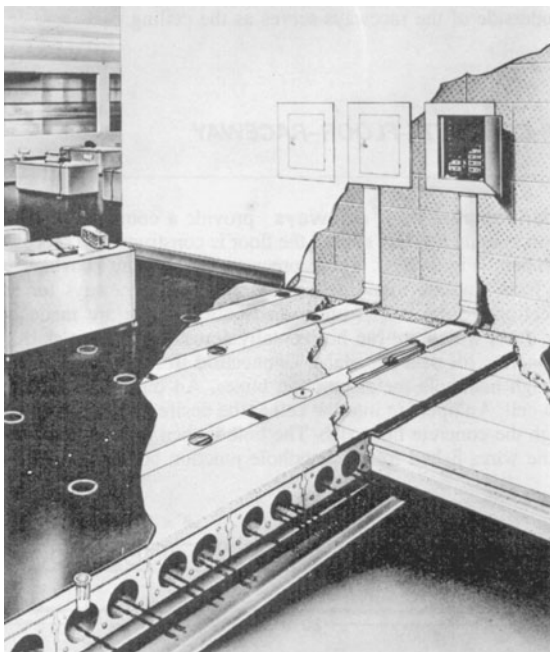


FIGURE 9.219 Electrical distribution with cellular-concrete-floor-raceway wiring. [The Flexicore Co., Inc.]

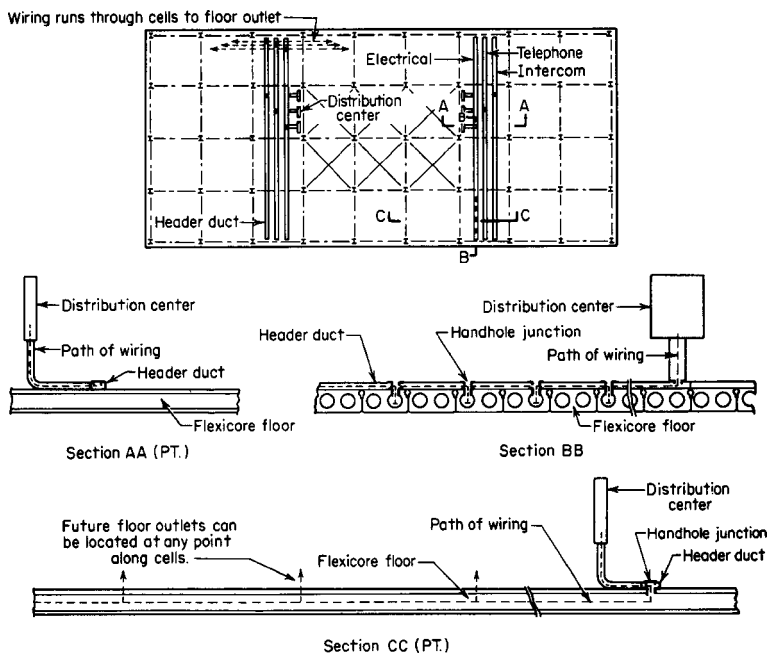


FIGURE 9.220 General principles of electrical distribution by means of cellular-concrete-floor raceways. [The Flexicore Co., Inc.]

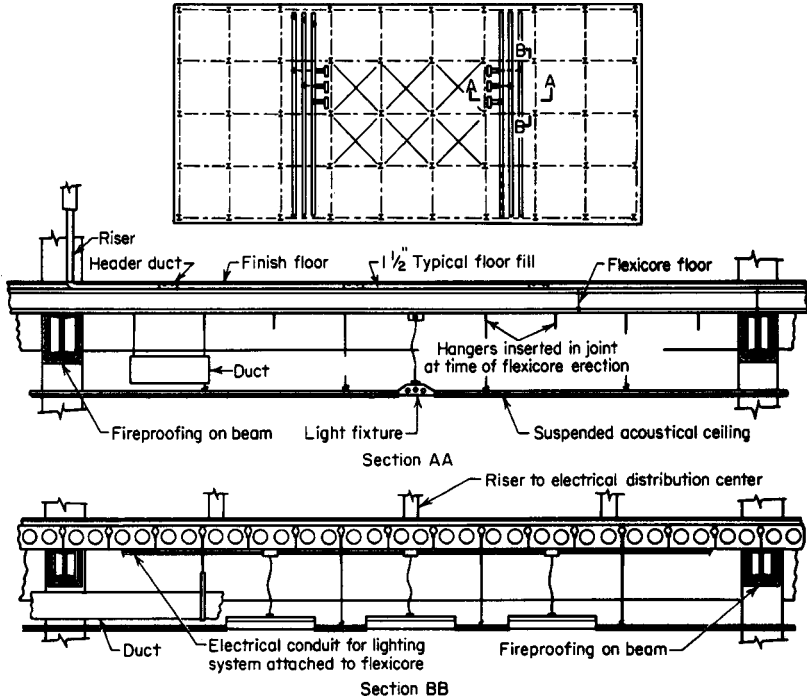


FIGURE 9.221 Details of installation of a cellular-concrete-floor-raceway wiring system. [The Flexicore Co., Inc.]

The precast slabs are available in two sizes as shown in Fig. 9.222. Flexicore Hi-Stress Deck is available in five sizes, as shown in Fig. 9.223.

Headers are available in different sizes.

The NEC makes the following specifications for headers: The headers shall be installed in a straight line, at right angles to the cells. It shall be mechanically secured to the top of the precast cellular-concrete floor. The end joints shall be closed by metallic closure fittings and

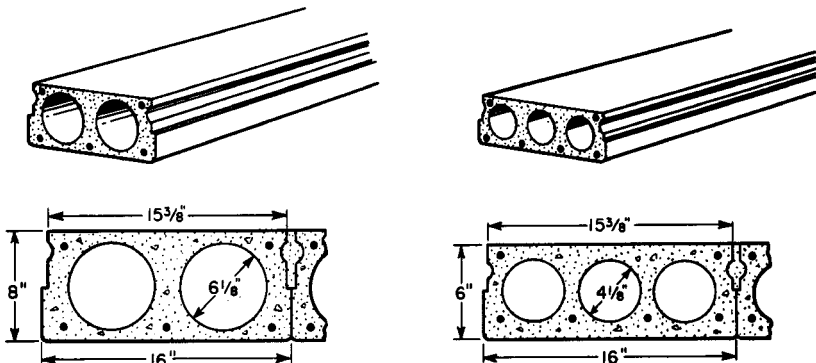


FIGURE 9.222 Cellular-concrete floor slabs. [The Flexicore Co., Inc.]

Deck size	Cell area (Sq. in.)
4"	13.9
6"	14.1
8"	27.1
10"	50.2
12"	67.0

FIGURE 9.223 Flexicore Hi-Stress Deck. [The Flexicore Co., Inc.]

When parallel to the header, telephone and intercom cabinets are usually connected to the header as shown by Type D. The wire drops from the header through a handhole junction into a cell, through the cell, up through a jack junction box, and then to the cabinet.

sealed against the penetration of concrete. The header shall be electrically continuous throughout its length and be electrically bonded to the enclosure of the distribution center.

The method of making connection to cabinets or other enclosures is shown in Figs. 9.219, 9.220, and 9.224.

When the panel box or cabinet is located at right angles to the header (Types A and B, Fig. 9.224), the connection is made by an elbow and riser duct to the panel box. This is simply a continuation of the header up to the panel box.

When the panel box is parallel to the header (Type C), the connection is made with a T junction box, a short piece of header duct, an elbow, and a riser.

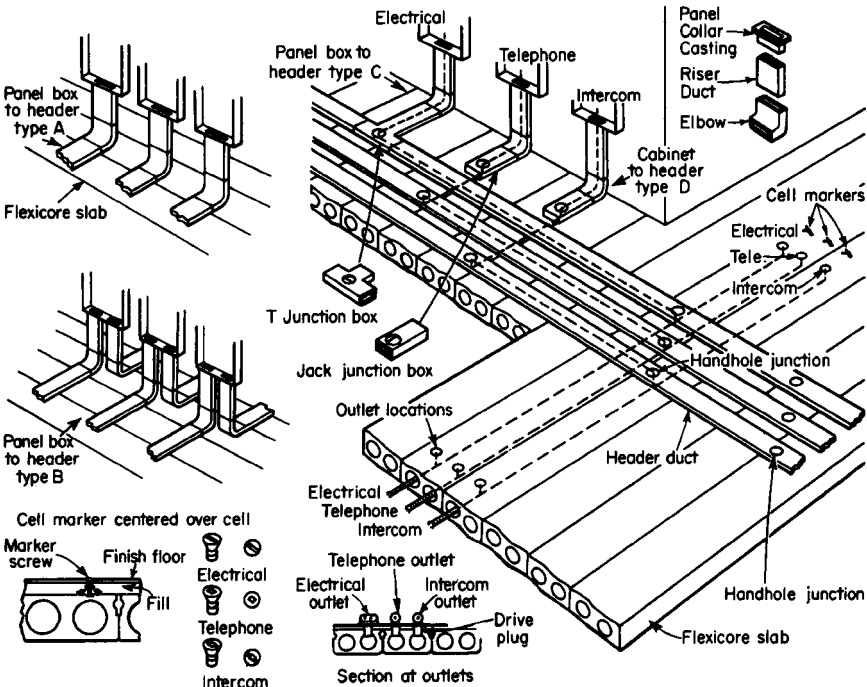


FIGURE 9.224 High-capacity system with trench header ducts. [The Flexicore Co., Inc.]

The NEC requires that these connections be made by means of listed metal raceways and listed fittings.

Handhole junction boxes and their relation to the header and concrete cells are shown in Fig. 9.224. The NEC requires that junction boxes be leveled to the floor grade and sealed against the free entrance of water or concrete. Junction boxes shall be of metal and be mechanically and electrically continuous with the header.

Markers (Figs. 9.224 and 9.225) are installed along each cell for the determination of its location and to mark the location of all hidden access points between a header and a cell which is intended for future use. These markers must extend through the floor covering, and a suitable number must be used to locate the cells and provide for system identification.

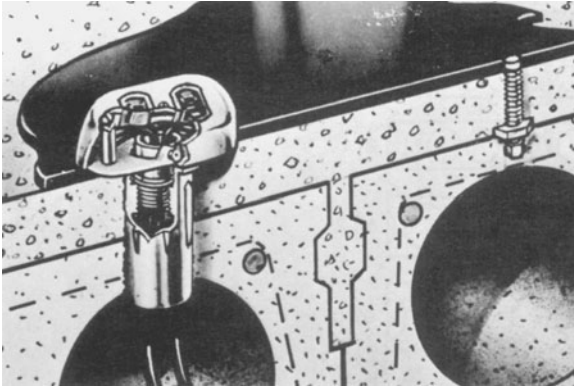


FIGURE 9.225 Details of installation of a cellular-concrete-floor raceway. [The Flexicore Co., Inc.]

298. High-capacity system. The system shown in Fig. 9.226 is designed to handle eighty-two 100-pair plus one hundred thirty-seven 25-pair telephone cables, or the equivalent in other sizes. The cables feed from the panel through the channel slab, transversely through the 24-in (609.6-mm) trench header duct, then down into the cells of the Flexicore deck. Wiring can run in either direction to telephone floor outlets located at any point along the cells. Every second cell is assigned to telephones, providing lines of availability only 16 in. (406.4 mm) apart.

Electrical distribution is handled through the high-capacity trench-header-duct system shown. Many variations of both systems are possible.

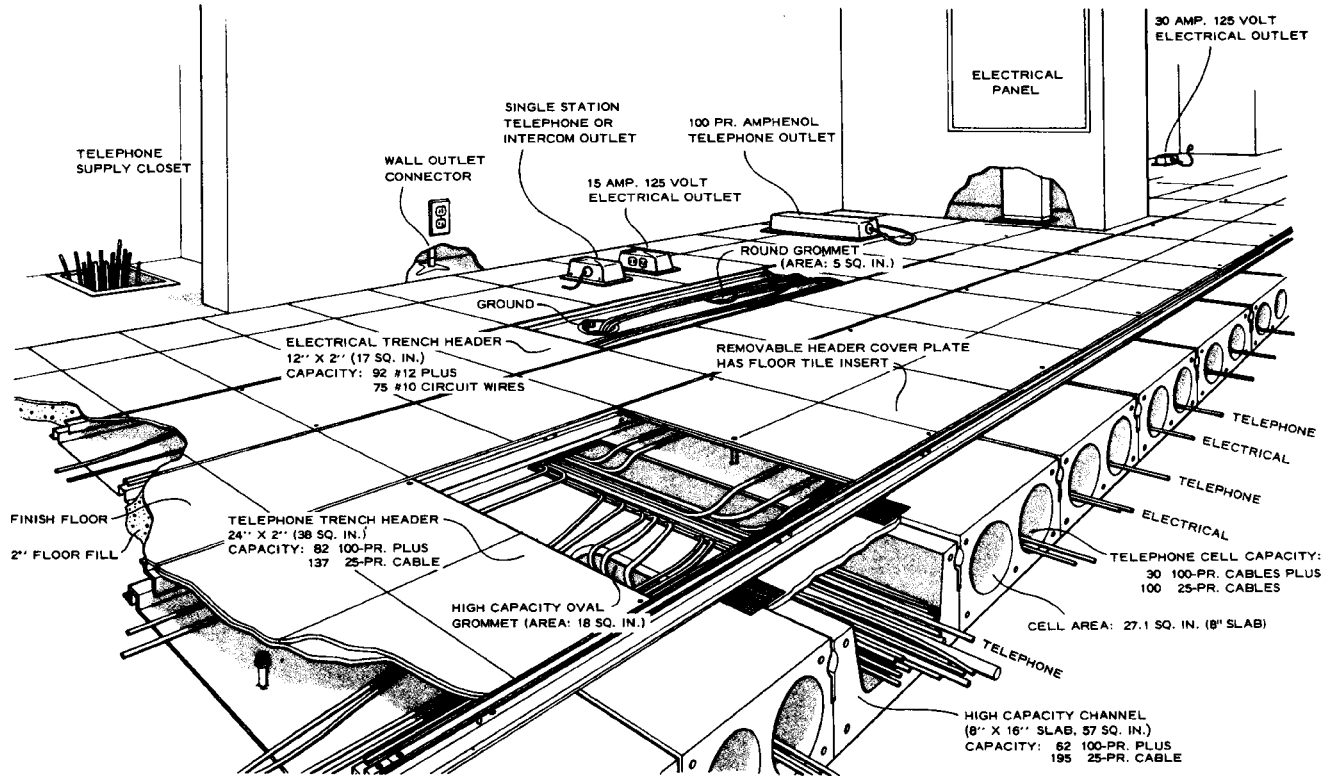


FIGURE 9.226 Installation of outlets and markers. [The Flexicore Co., Inc.]

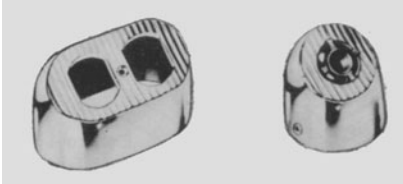



FIGURE 9.227 Outlet drive plug. [The Flexicore Co., Inc.]



FIGURE 9.228 Outlet fittings: *left*, electric-outlet fitting; *right*, telephone or intercom outlet. [The Flexicore Co., Inc.]

299. Inserts for the location of outlets can be located at any point along a cell. Typical outlets and their installation are shown in Figs. 9.224, 9.225, 9.227, and 9.228. The procedure in installing an outlet is as follows:

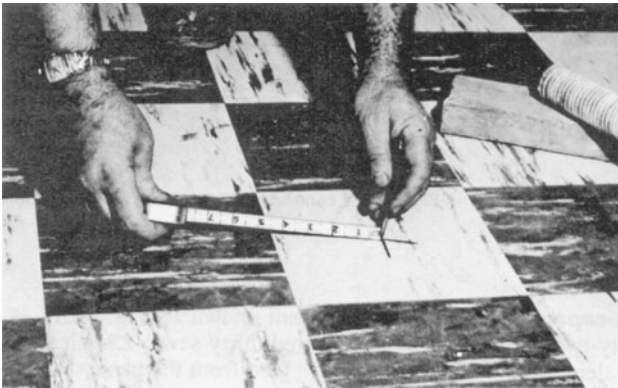
1. Mark location of outlet. Use cell markers to line up center of cell.




2. Drill hole for outlet using 17/8-in (47.625-mm) core bit.



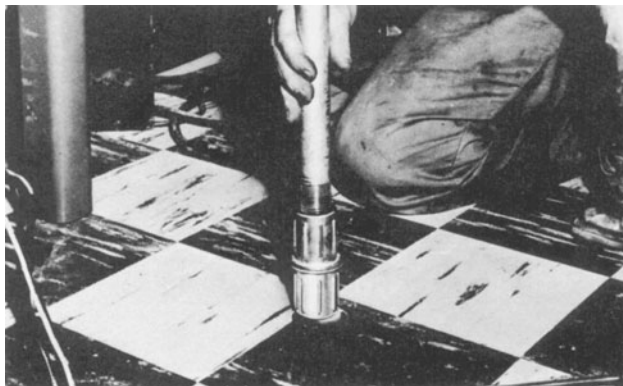
3. Drive in outlet drive plug.



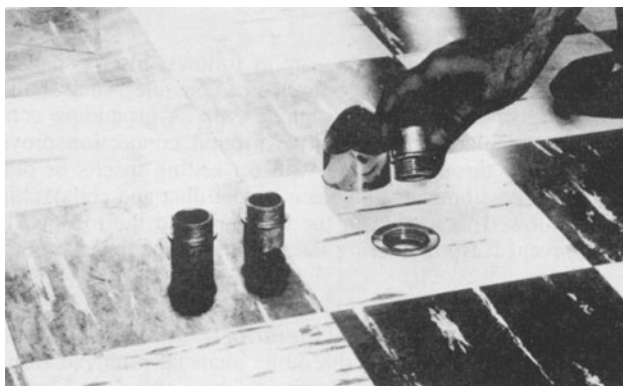
4. Screw in floor-outlet nipple.



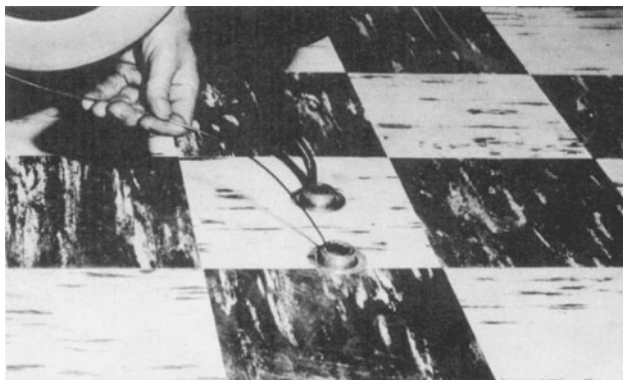5. Fish wire to outlet location.



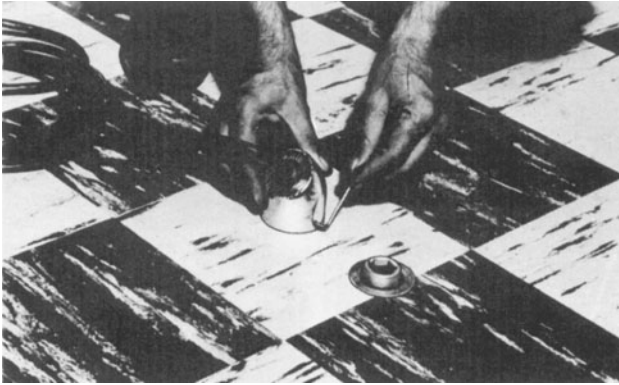6. Install outlet box. Floor outlets can be installed at any time during the life of the building.



300. NEC requirements for inserts are as follows: Inserts shall be leveled to the floor grade and sealed against the entrance of concrete. They shall be of metal and be fitted with receptacles of the grounded type. A grounding conductor shall connect the insert receptacles to a positive ground connection provided on the header. In cutting through the cell wall for setting inserts or other purposes (such as providing access openings between header duct and cells), chips and other dirt shall not be allowed to remain in the raceway, and the tool used shall be so designed as to prevent it from entering the cell and damaging the conductors.

301. Discontinued outlets (National Electrical Code). When an outlet is discontinued, the conductors supplying the outlet shall be removed from the header and cell. No splices or reinsulated conductors such as abandoned loop wiring shall be allowed in raceways. Refer to Sec. 253 for more information on this topic.

302. Conductors (National Electrical Code). No conductor larger than No. 1/0 shall be installed except by special permission. The total cross-sectional area of all conductors or cables in a header or in an individual cell shall not exceed 40 percent of the interior cross-sectional area of the header or cell.

Splices and taps shall be made only in header-duct access units or junction boxes.

WIRING WITH MULTIOUTLET ASSEMBLIES

303. Multioutlet assemblies consist of a metallic or nonmetallic assembly with convenience outlets built in every few inches. In one type made by the Wiremold Co. (Fig. 9.229) the outlets may be spaced as desired along the raceway and connected by wires laid in the raceway. In another type (Fig. 9.230) the outlets are built in at fixed intervals and connected by copper strips which terminate in terminal screws at each end of each length of raceway. This type is made in three styles according to the position in which it is to be used: (1) the chair-rail style for flat-surface mounting, (2) the baseboard-cap style for mounting on the top of baseboards or in the corners of mantels and cabinets, and (3) the baseboard-insert style for

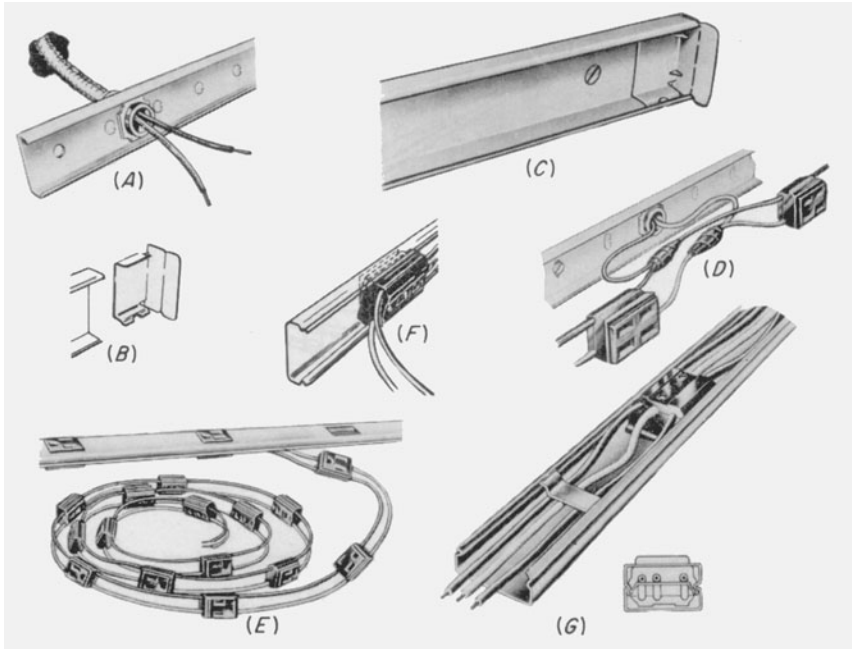


FIGURE 9.229 Installation of multioutlet assembly of the Plugmold-Snapicoil type: (1) Remove knock-out (from inside out) for feed connection and fasten $\frac{1}{2}$ -in connector into base with a locknut *A*. No special fittings are needed: there is plenty of room to spin the locknut. (2) At the end of the run, install a No. 2010B blank-end fitting in the base, *B* and *C*. (3) Mount base to surface through screw piercings or knockouts, using No. 6 flathead screws. (Some types of surfaces require other methods of fastening.) (4) Lay out Snapicoil, and cover sections to avoid having outlet directly in a corner or over a feed connection. (5) Splice feed wires into Snapicoil conductors *D*. NOTE In a three-wire harness, black wire with yellow lettering should be used for the switch leg. (6) Snap Snapicoil receptacles into 2000C Holecut cover, *E* and *F*: a wire clip can be used to cover *G* or base to keep wires inside raceways. (7) Snap cover, complete with receptacles, into base. [The Wiremold Co.]

recessing in the baseboard or in a plastered wall. Blank sections through which standard-type wires may be run to join plug-in sections are available for use behind radiators or for other inaccessible places where the expensive plug-in strip is not needed. Multioutlet assemblies are used to provide adequate plug receptacles for the utmost convenience in the use of appliances, in dwelling-type use, and for industrial and commercial applications. The multioutlet assembly classification also includes the vertical assemblies that are fed from above a suspended ceiling and anchored to the floor to provide power or communications or both to any desired location, particularly on commercial office environments (Fig. 9.231).

NEC specifications for the use of multioutlet assemblies are as follows: A multioutlet assembly may be used in dry locations. It shall not be used (1) when concealed; (2) where subject to severe physical damage; (3) where the voltage is 300 V or more between conductors unless the assembly is of metal having a thickness of not less than 1.02 mm (0.040 in.); (4) where subject to corrosive vapors; (5) in hoistways; or (6) in hazardous locations, except as specifically allowed by the hazardous location articles of the NEC. A metal multioutlet assembly may be extended through (not run within) dry partitions, provided arrangements are made for removing the cap or cover on all exposed portions and no outlet falls within the partitions.

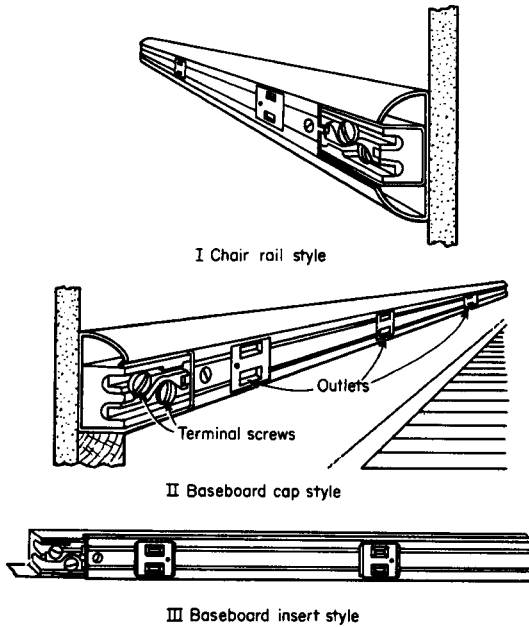


FIGURE 9.230 Plug-in strip.

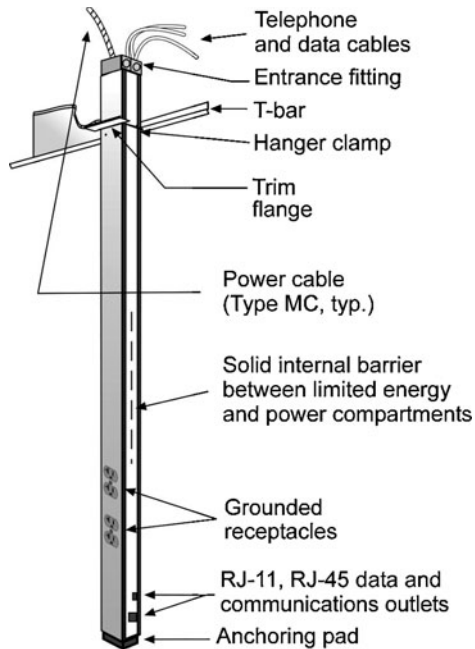


FIGURE 9.231 The relocatable pole assembly diagrammed here is also classified as a multioutlet assembly.

304. Various ways of mounting the chair-rail style on plastered walls are shown in Fig. 9.232. Toggle bolts are used unless a wood strip is available, as in III, when wood screws can be used. The chair-rail style is intended for mounting on flat surfaces at a considerable height above the baseboard. The curved surfaces on the top and bottom give the installation a neat appearance.

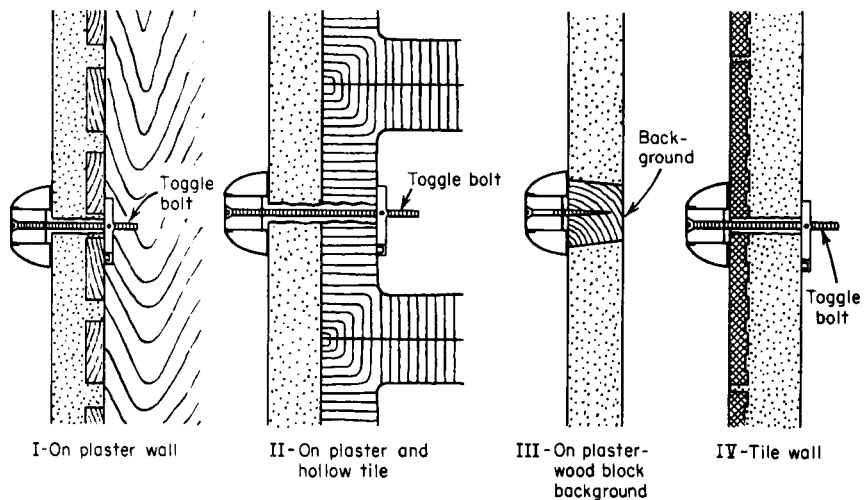


FIGURE 9.232 Methods of mounting chair-rail style of plug-in strip.

305. The baseboard-cap type has a flat surface on one edge and is curved on the other edge. It is used as illustrated in Fig. 9.233, when there is a corner against which the flat edge can be placed. The curved edge gives a finished appearance to the corner. In this type of mounting, there is usually a wood background so that wood screws can be used for fastening.

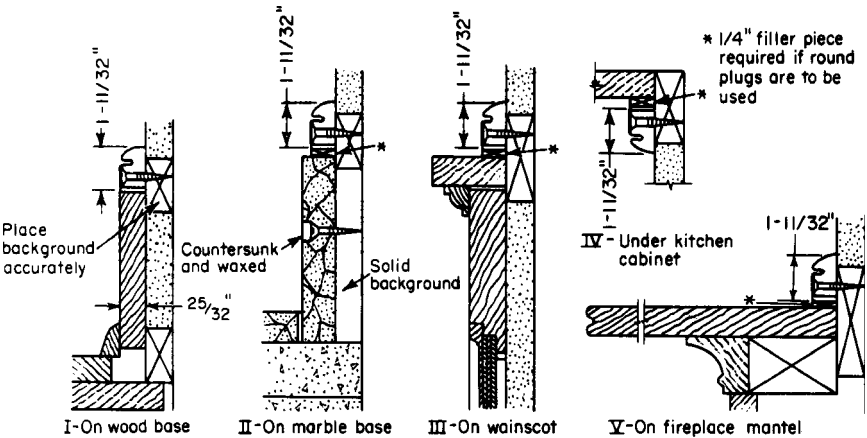


FIGURE 9.233 Methods of mounting baseboard-cap style of plug-in strip.

306. The baseboard type is set into the wall so that the surface of the strip is flush with the wall surface. When finished buildings are wired with this type, the molding on top of the baseboard is removed, the plug-in strip is placed on top of the baseboard, and the molding is placed against the plug-in strip (Fig. 9.234, III). For new installations a channel can be left in tile, glass, or marble surfaces as shown in Fig. 9.234, I and II, or the plaster can be channeled as shown in Fig. 9.234, IV.

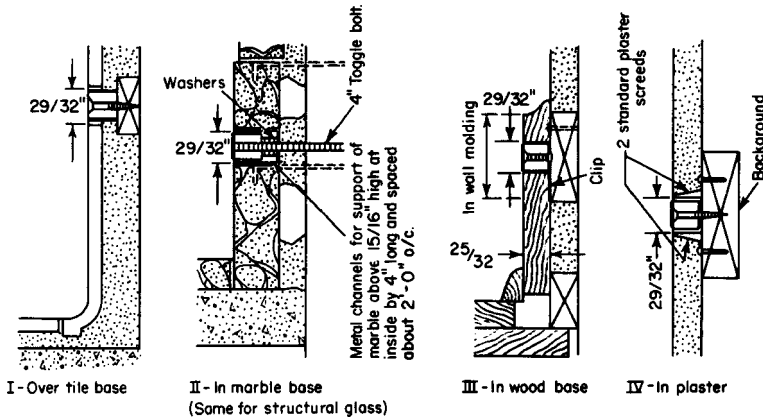


FIGURE 9.234 Methods of mounting baseboard-insert style of plug-in strip.

307. Plug-in strip is made in various lengths from 6 in. to 9 ft (from 152.4 mm to 2.7 m). The lengths are joined together as shown in Fig. 9.235. Copper links connect the terminal screws on two adjoining lengths of plug-in strip (Fig. 9.235, I). Then insulating plates are placed over the terminals (Fig. 9.235, II), and the joint is covered with a coupling (Fig. 9.235, III).

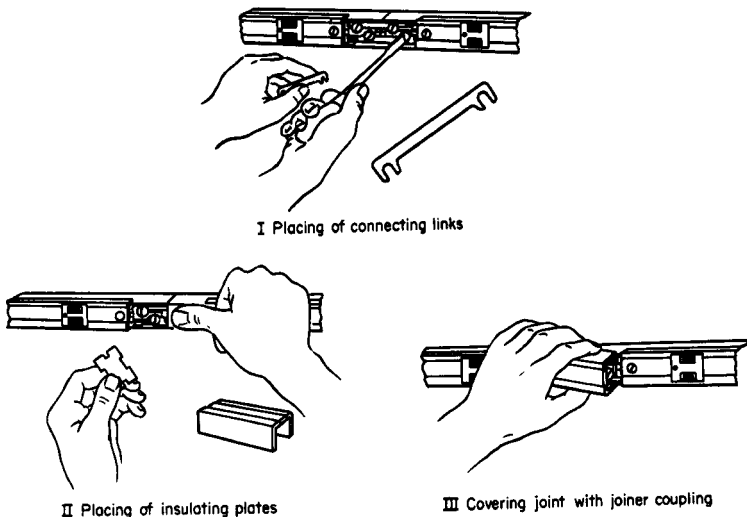


FIGURE 9.235 Method of coupling plug-in strips together.

308. The method of bringing in the supply circuit is shown in Fig. 9.236. Junction boxes are available for either metal-clad cable or rigid conduit. The junction box has a hub in the back with a setscrew for clamping metal-clad cable or threaded for $\frac{1}{2}$ -in conduit connection (Fig. 9.236, I). The circuit wires are stripped as shown, and two short lengths of building wire are spliced to them so that the circuit will feed both ways from the junction box. The junction box is then placed against the wall, and the wires are connected to the terminal screws in the adjoining plug-in strips (Fig. 9.236, II). The middle section of the junction box is closed by means of a cover, held in place by two screws. Over each pair of terminals an insulating plate is placed and then covered with a coupling plate.

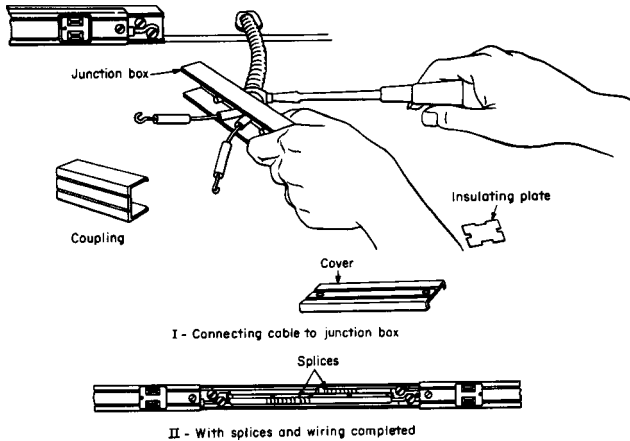


FIGURE 9.236 Method of bringing supply circuit into plug-in strip.

309. Heavier-duty multioutlet assemblies. The types of multioutlet assemblies discussed in the preceding sections are of the light-duty type. Heavier-duty multioutlet assemblies are available in the following types:

1. Two-wire grounding strip for grounding of equipment
2. 20-A receptacle type
3. 30-A receptacle type
4. 50-A receptacle type
5. Combination raceway and multioutlet assembly (Fig. 9.237)

Baseboard types of combination multioutlet assembly and surface raceway are available. Two types are shown in Figs. 9.238 and 9.239.

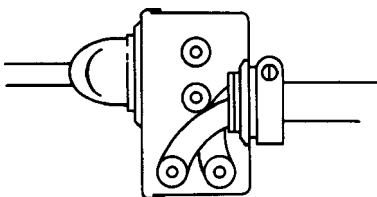


FIGURE 9.237 Combination raceway and multioutlet assembly. Up to three No. 12 Type TW electric conductors can be installed in the raceway space located beneath the standard plug-in-strip assembly. The additional conductors may be wired either three-phase or single-phase.

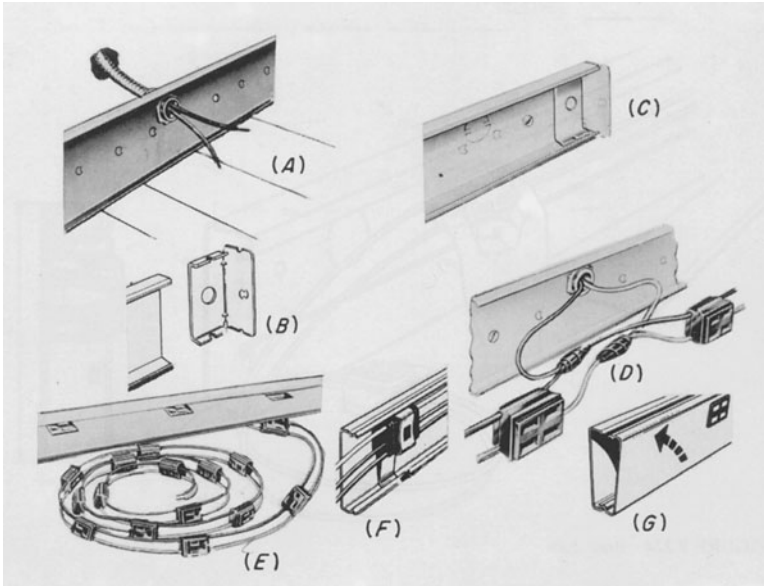


FIGURE 9.238 Installation of Plugmold baseboard: (1) Remove knockout (from inside out) for feed connection and fasten $\frac{1}{2}$ -in connector into base with a locknut A. No special fittings are needed. (2) At the end of the run, install No. 2410B blank-end fitting in the base, B and C. (3) Mount base to surface through screw piercings or knockouts, using No. 6 flathead screws. (Some types of surfaces require other methods of fastening.) (4) Lay out Snapicoil, and cover sections to avoid having outlet directly in a corner or over a feed connection. This method is also available with the receptacles already installed. (5) Splice feed wires onto Snapicoil conductors D. NOTE In a three-wire harness, black wire with yellow lettering should be used for the switch leg. (6) Insert Snapicoil receptacles into 2400C Holecut cover, and snap device clip in place, E and F. The clip can also be used in the base to keep wires inside raceways. (7) Snap cover, complete with receptacles, into 2400B base G. [The Wiremold Co.]

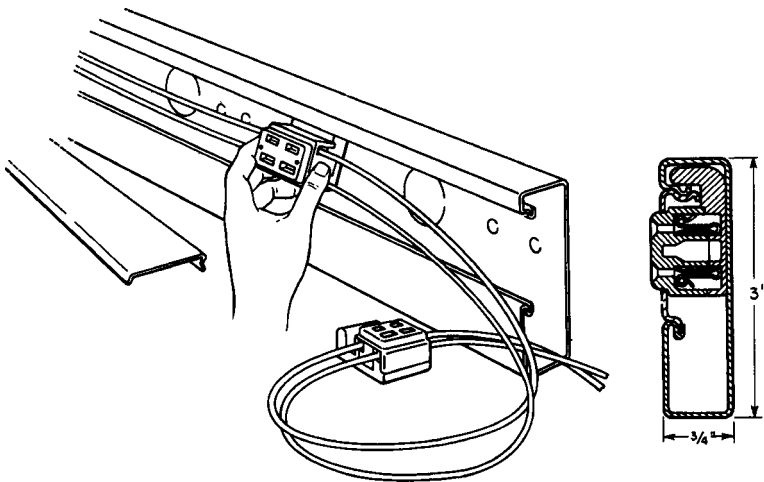


FIGURE 9.239 Base duct.

CABLEBUS WIRING

310. Cablebus is an approved assembly of insulated conductors mounted in a spaced relationship in a ventilated metal protective supporting structure including fittings and conductors. Typical components are shown in Fig. 9.240, which also includes some of the major NEC rules for cablebus.

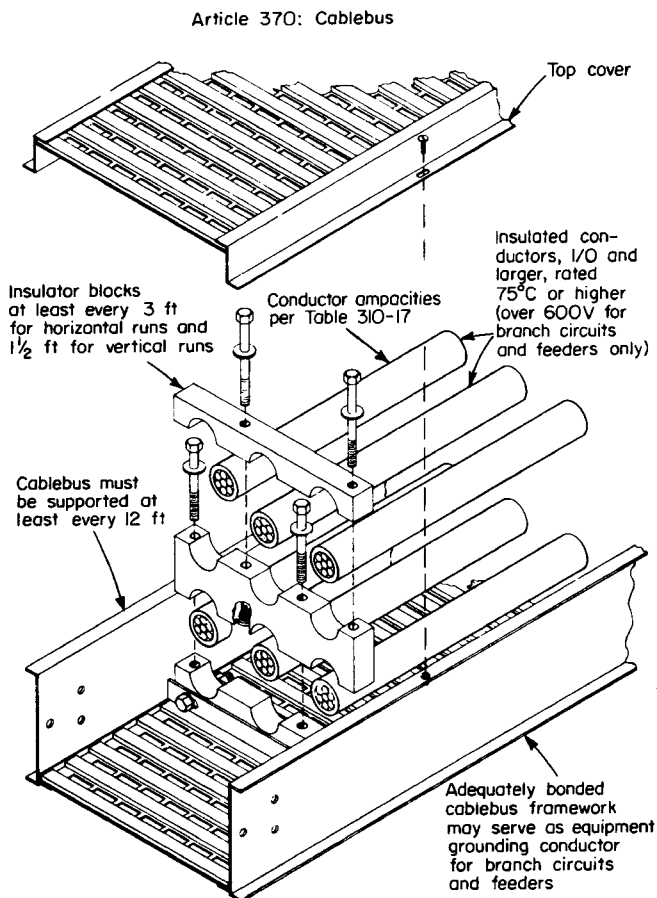


FIGURE 9.240 Elements of a typical cablebus system and major National Electrical Code requirements. [*Electrical Construction and Maintenance*]

The original manufacturer of the cablebus wiring system was Husky Products, Inc., subsidiary of Burndy Corp. The system is highly desirable in industrial applications for larger feeders or branch circuits at 600 V or less and in higher distribution voltages of 5 or 15 kV. It can also be used for primary feeders in high-rise buildings or commercial buildings in which load-center unit substations are to be used. Cablebus can be used indoors or outdoors in wet or dry locations. The entire system is factory-fabricated with bottom support blocks (Fig. 9.240) in place.

The sizes of cablebus structures will vary according to the number of conductors. Figure 9.241 shows the four sizes of some of the insulator blocks that are presently available: 3-conductor, 6-conductor, 12-conductor, and 18-conductor; 24- and 27-conductor blocks are also available. Phase arrangements for three-phase circuits are also shown in Fig. 9.241 to provide a closely balanced impedance. Because of carefully selected conductor spacing, transposition of conductors is not required. Controlled spacing also assures low impedance and low voltage drop. The cablebus framework is an all-welded construction for maximum strength, and 12-ft (3.7-m) spacing of supports is standard, but 20-ft spacing is also available. High-pressure splice joints between framework sections provide an excellent path or ground, and the installed framework serves as a grounding conductor.

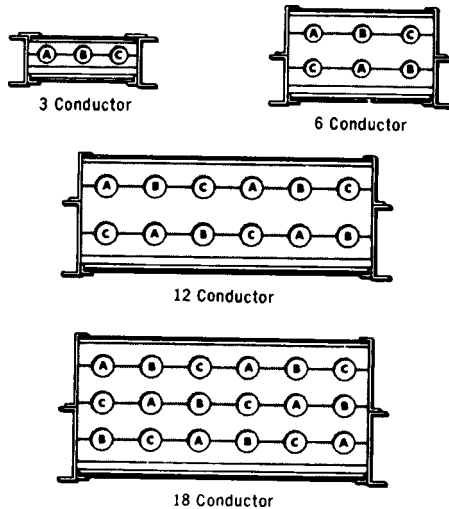


FIGURE 9.241 Sizes of insulating blocks and three-phase conductor arrangements. [Husky Products, Inc., subsidiary of Burndy Corp.]

311. Types of conductor. The manufacturer of cablebus recommends that only thermoplastic or thermosetting conductors be used in cablebus. At the present time, combining the insulation's electrical and physical qualities with the cost, the preferred insulation is cross-linked polyethylene. Since cablebus is a ventilated enclosure and conductors are separated by insulating blocks, conductor ampacities may be determined on the basis of single conductors in free air, as in Tables 19 and 22 of Div. 12. Generally, 90°C-rated conductors are recommended and 75°C is the minimum permitted.

312. Installation procedures. The basic installation of the cablebus framework is similar to that of a cable-tray system (Sec. 314). Typical arrangements are shown in Fig. 9.242, in which cablebus is used for primary and secondary feeders and circuits. The conductor-pulling tools are the same as those shown in Fig. 9.248 for cable tray. Conductors are pulled in after the basic framework has been completely installed. After conductors have been pulled in and arranged in proper phase sequence, they are secured to the insulating blocks. The final step is the installation of top covers.

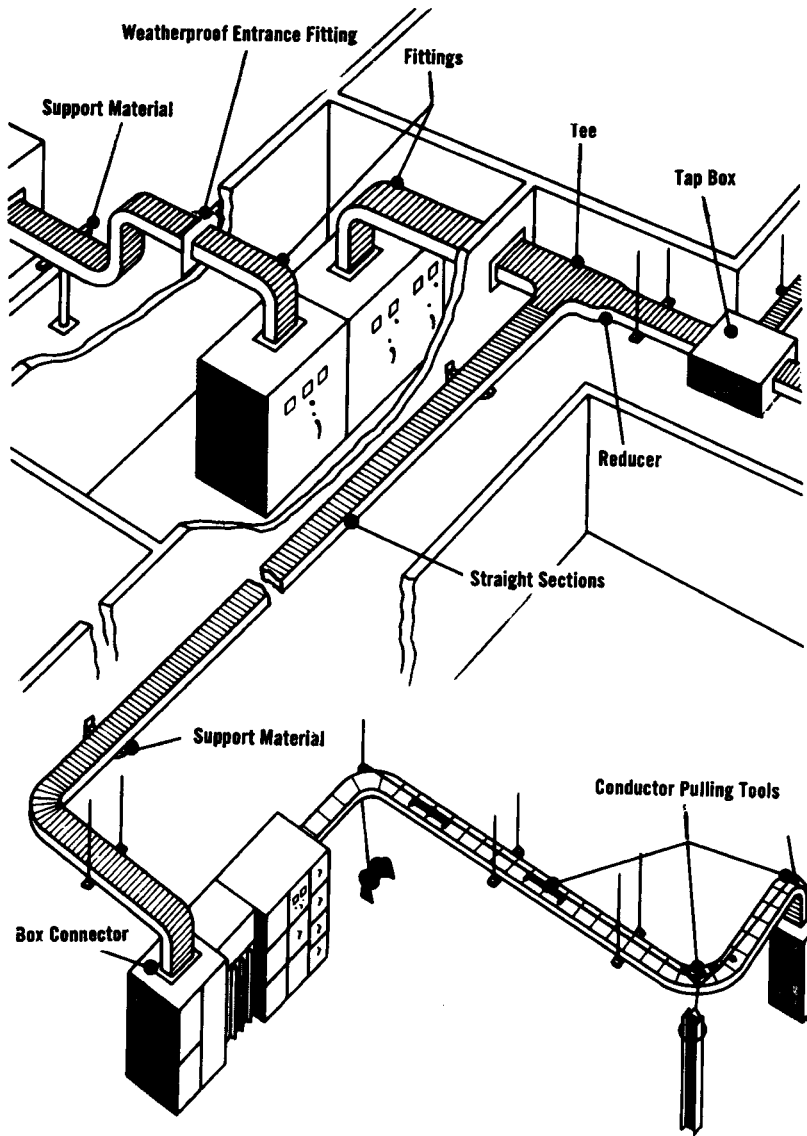


FIGURE 9.242 Typical cablebus runs for primary and secondary distribution. [Husky Products, Inc., subsidiary of Burndy Corp.]

313. National Electrical Code rules. The following Code rules apply to cablebus:

- 1. Cablebus shall be installed only for exposed work. It may be installed outdoors or in corrosive, wet, or damp locations if identified for such use.
- 2. Cablebus shall not be installed in hoistways or hazardous locations unless specifically approved for such use.

3. If adequately bonded, cablebus framework may be used as the equipment-grounding conductor for branch circuits and feeders.
4. Cablebus may be used for systems in excess of 600 V, nominal.
5. The current-carrying conductors in cablebus shall have an insulation rating of at least 75°C and be of an approved type.
6. The size and number of conductors shall be that for which the cablebus is designed, and in no case less than 1/0.
7. Insulated conductors shall be supported on blocks or other mounting means designed for the purpose.
8. The individual conductors in a cablebus shall be supported at intervals not greater than 900 mm (3 ft) for horizontal runs and 450 mm (1½ ft) for vertical runs. Vertical and horizontal spacing between conductors shall be not less than one conductor diameter at the points of support.
9. Where the ampacity of cablebus conductors does not correspond to a standard rating of the overcurrent device, the next-higher-rated overcurrent device may be used, only if the rating does not exceed 800 A.
10. Cablebus shall be securely supported at intervals not exceeding 3.7 m (12 ft). Where spans greater than 12 ft are required, the structure shall be specifically designed for the required span length.
11. Cablebus may extend transversely through partitions or walls, other than fire walls, provided the section within the wall is continuous, protected against physical damage, and unventilated.
12. Except when fire stops are required, cablebus may extend vertically through dry floors and platforms and in wet locations where (a) there are curbs or other suitable means to prevent water flow through the floor or platform opening and (b) the cablebus is totally enclosed at the point where it passes through the floor or platform and for a distance of 1.8 m (6 ft) above the floor or platform.
13. Except when fire stops are required, cablebus may extend vertically through dry floors and platforms, provided the cablebus is totally enclosed at the point where it passes through the floor or platform and for a distance of 1.8 m (6 ft) above the floor or platform.
14. Cablebus shall utilize approved fittings for changes in the horizontal or vertical direction of the run, dead ends, terminations in or on connected apparatus or equipment or the enclosures for such equipment, and additional physical protection where required, such as guards for severe mechanical protection.
15. Approved terminating means shall be used for connections to cablebus conductors.
16. Sections of cablebus shall be electrically grounded and bonded.
17. Each section of cablebus shall be marked with the manufacturer's name or trade designation and the maximum diameter, number, voltage rating, and ampacity of conductors to be installed. Markings shall be so located as to be visible after installation.

CABLE TRAYS

314. A cable-tray system is a unit or an assembly of units or sections, with associated fittings, forming a rigid structural system used to support cables and raceways. Cable trays include ladders, troughs, channels, solid-bottom trays, and similar structures.

The National Electrical Code allows cable tray to contain any approved conduit or raceway with its contained conductors; mineral-insulated metal-sheathed cable (Type MI); armored cable (Type AC); metal-clad cable (Type MC); power-limited tray cable (Type PLTC); nonmetallic-sheathed cable (Types NM, NMC, and NMS); multiconductor service-entrance cable (Types SE and USE); multiconductor underground-feeder and branch-circuit cable (Type UF); power and control tray cables (Type TC); instrument tray cable (Type ITC); and other factory-assembled multiconductor control, signal, or power cables which are specifically approved for installation in cable trays. In practice, the most common types used in cable trays are Type MC metal-clad cable (Fig. 9.87) and Type TC tray cables (Figs. 9.243, 9.244, and 9.245) listed by Underwriters Laboratories Inc. for cable-tray systems. The cable shown in Fig. 9.243 is a polyvinyl chloride- and nylon-insulated 600-V power cable with three 2/0 conductors and a grounding conductor. The cable shown in Fig. 9.244 has the same insulation and contains 19 No. 12 stranded conductors, suitable for 600-V power or control circuits. Figure 9.245 also has the same insulation, and contains three 4/0 power conductors and four No. 12 control conductors, all suitable for 600 V. Cables similar to these can be obtained with a wide variety of conductor sizes. These nonmetallic cables and Type MC metal-clad cables can be installed in cable trays much more easily than other types of cables. Refer to Sec. 13 for a discussion of required wiring configurations for Type TC cable where it exits a cable tray system.

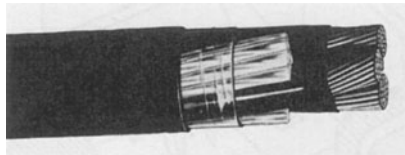


FIGURE 9.243 A 600-V power tray cable for use in cable trays. [Plastic Wire & Cable Corp., subsidiary of Triangle Industries, Inc.]

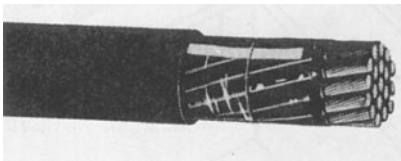


FIGURE 9.244 A 600-V 19-conductor tray cable suitable for power-control circuits and for use in cable trays. [Plastic Wire & Cable Corp., subsidiary of Triangle Industries, Inc.]

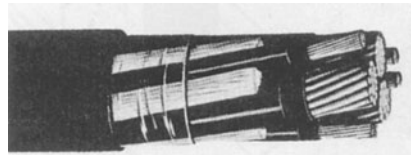


FIGURE 9.245 A 600-V power and control tray cable for use in cable trays. [Plastic Wire & Cable Corp., subsidiary of Triangle Industries, Inc.]

315. Types of cable tray. There are several manufacturers of cable tray, and the types shown in Figs. 9.246 and 9.247 are manufactured by the Globe Division of United States Gypsum. These drawings show various types of cable tray (channel type, solid-cover type, louvered-cover type, ladder type, and solid-bottom type). Also illustrated are a variety of fittings used with the support system, such as elbows or offsets, blind ends, tees, crosses, reducers, dividers, and box connectors. As can be seen in Figs. 9.246 and 9.247, cable trays provide a highly flexible system in any application in which a number of power and/or control cables are required. Cable trays are secured in a manner similar to that described in the sections on rigid metal conduit and busways.

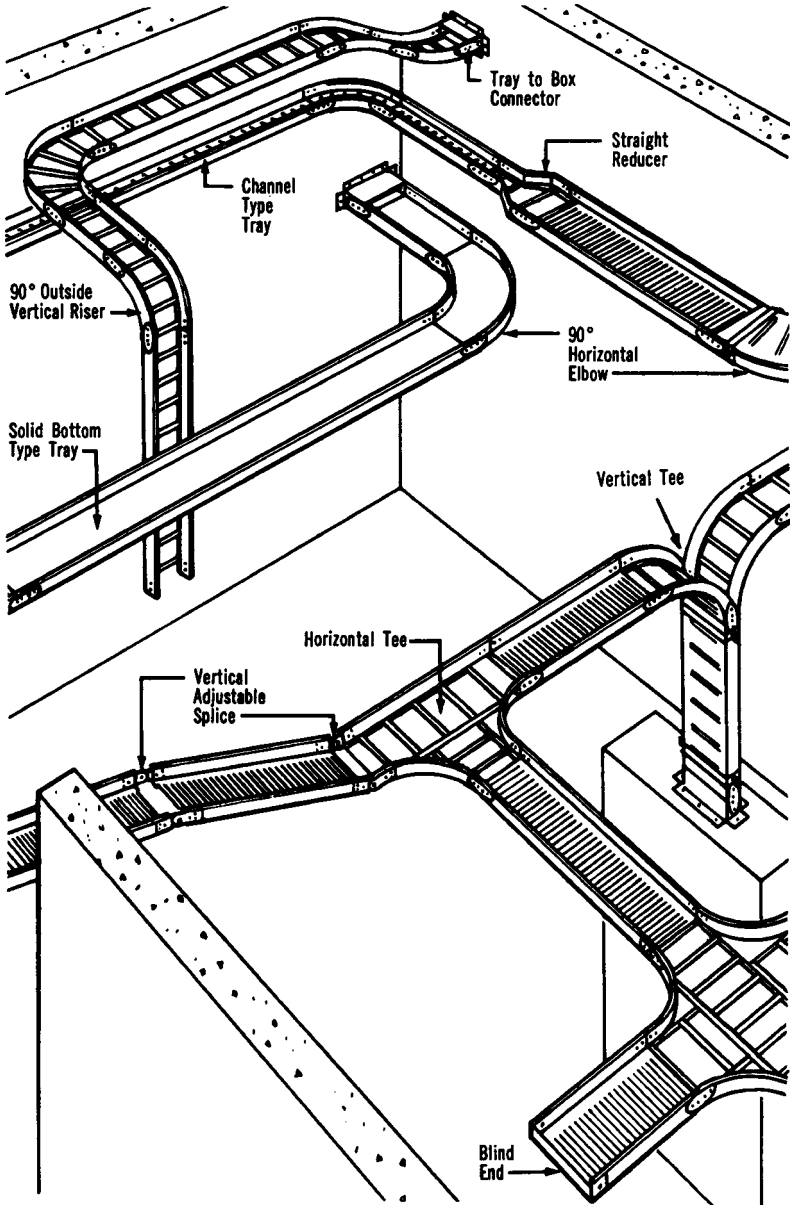


FIGURE 9.246 Typical components of a CABLE-STRUT system. [Globe Division, United States Gypsum Co.]


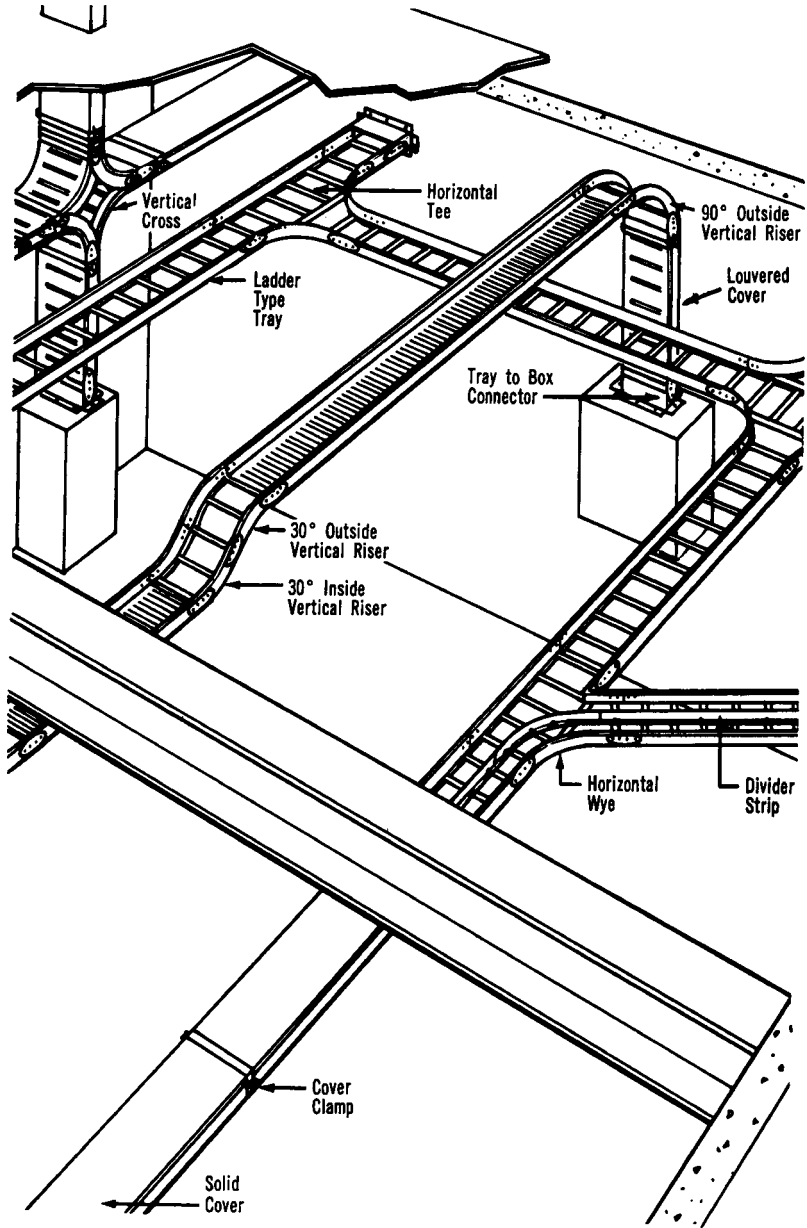


FIGURE 9.247 Typical components of a CABLE-STRUT system. [Globe Division, United States Gypsum Co.]

An excellent feature of the cable-tray system is that cables can be added, revamped, or removed with minimum effort. When laying out such systems, it is well to plan for future needs by obtaining trays larger than necessary for the initially installed cables. Manufacturers offer many different widths and lengths for each section of cable-tray system, and it is recommended that representatives of these firms be approached when such installations are contemplated.

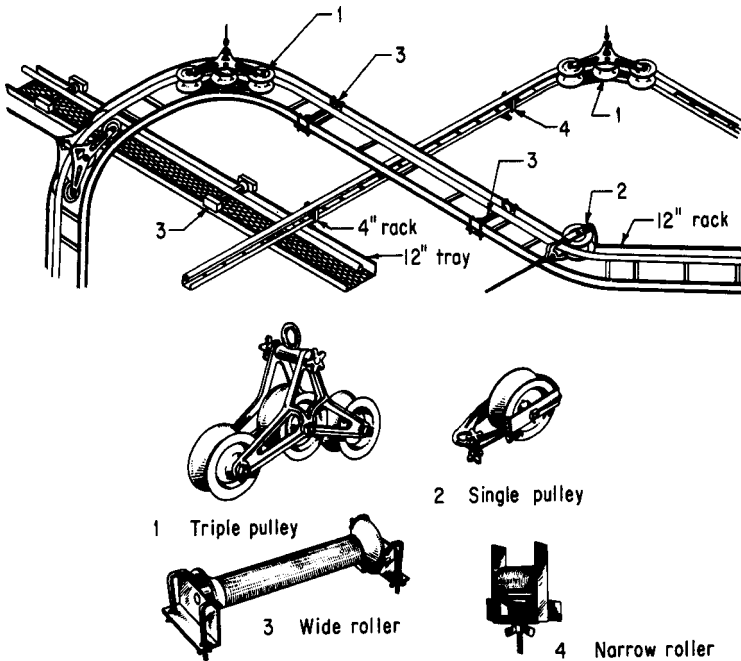316. Installation aids. The tools shown in Fig. 9.248 to simplify the pulling of cables into cable trays are typical of those offered by manufacturers of these systems. Locating rollers and pulleys at the proper locations in the system speeds up the installation of cables and prevents damage to them during installation. After cables have been installed, they should be spaced and supported as indicated in Sec. 317.



Installation aids available

FIGURE 9.248 Installation aids available to simplify the cable pulling in cable trays.
[*Electrical Construction and Maintenance*]

317. National Electrical Code rules for cable trays are as follows:

1. They shall have suitable strength and rigidity to provide adequate support for all contained wiring.
2. They shall not present sharp edges, burrs, or projections injurious to the insulation or jackets of the wiring.
3. If made of metal, they shall be adequately protected against corrosion or shall be made of corrosion-resistant material.
4. They shall have side rails or equivalent structural members.

5. They shall include fittings or other suitable means for changes in direction and elevation of runs.
6. Nonmetallic cable trays shall be made of fire-retardant material.
7. Cable trays shall be installed as a complete system. Field bends or modifications shall be so made that the electrical continuity of the cable-tray system and support for the cables shall be maintained. In instances where a tray segment is not mechanically continuous, either to the next tray segment or to the equipment where the conductors will terminate, the distance cannot exceed 1.8 m (6 ft), the conductors or cable assemblies must be secured to the cable tray at the transition points, and the open run must not be subject to physical damage. This must be assured through guarding or by location.
8. Each run of cable tray shall be completed before the installation of cables.
9. Supports shall be provided to prevent stress on cables where they enter another raceway or enclosure from cable-tray systems. Cable trays shall be supported at intervals in accordance with the installation instructions.
10. In portions of runs where additional protection is required, covers or enclosures providing the required protection shall be of a material compatible with the cable tray.
11. Multiconductor cables rated 600 V or less shall be permitted to be installed in the same cable tray.
12. Cables rated over 600 V shall not be installed in the same cable tray with cables rated 600 V or less except where separated by either solid fixed barriers of a material compatible with the cable tray or by the metallic cable armor in the case where the cables over 600 V are Type MC.
13. Cable trays shall be permitted to extend transversely through partitions and walls or vertically through platforms and floors in wet or dry locations where the installations, complete with installed cables, are made in accordance with the requirements of Sec. 300.21 of the Code.
14. Cable trays shall be exposed and accessible except as permitted by Par. 13.
15. Sufficient space shall be provided and maintained around cable trays to permit adequate access for installing and maintaining the cables.
16. Metallic cable trays which support electrical conductors shall be grounded as required for conductor enclosures in Article 250 of the Code.
17. When steel or aluminum cable-tray systems are used as equipment-grounding conductors, all the following provisions shall be complied with:
 - a. The cable-tray sections and fittings shall be identified as an equipment grounding conductor.
 - b. The minimum cross-sectional area of cable trays shall conform to the requirements in Table 392.7(B) of the NEC.
 - c. All cable-tray sections and fittings shall be legibly and durably marked to show the cross-sectional area of metal in channel-type cable trays or cable trays of one-piece construction and the total cross-sectional area of both side rails for ladder or trough-type cable trays.
 - d. Cable-tray sections, fittings, and connected raceways shall be bonded in accordance with Sec. 250.96 of the NEC, using bolted mechanical connectors or bonding jumpers sized and installed in accordance with Sec. 250.102 of the Code.
18. Cable splices made and insulated by approved methods shall be permitted to be located within a cable tray provided they are accessible. The splices are now permitted to project above the side rails, provided their location does result in exposure to physical damage.
19. In other than horizontal runs, the cables shall be fastened securely to transverse members of the cable trays.

20. A box shall not be required where cables or conductors are installed in bushed conduit or tubing used for support or for protection against physical damage.
21. Where single-conductor cables comprising each phase or neutral of a circuit are connected in parallel as permitted in Sec. 310.4 of the NEC, the conductors shall be installed in groups consisting of not more than one conductor per phase or neutral in order to prevent current unbalance in the paralleled conductors due to inductive reactance.

Single conductors shall be securely bound in circuit groups to prevent excessive movement due to fault-current magnetic forces, unless single conductors are twisted together, as in triplexed assemblies.
22. Single conductors installed in ladder or ventilated trough cable trays that are 1/0 through 4/0 AWG shall have all single conductors installed in a single layer. Conductors that are bound together to comprise each circuit group can be installed in other than a single layer. For ladder-type tray, the rung spacing under these conductors must not exceed 225 mm (9 in). Single-conductor equipment grounding conductors are permitted to be as small as 4 AWG.
23. A cable tray is not a wireway without a cover. Single conductors in cable trays are only permitted in very restricted circumstances. Specifically, single conductors are only permitted in industrial occupancies with qualified maintenance and supervision, in sizes 1/0 AWG and larger. Medium-voltage conductors run as Type MV cable are permitted to run as single conductors provided they follow the same rules.

GENERAL REQUIREMENTS FOR WIRING INSTALLATIONS

CONDUCTOR REQUIREMENTS

318. Size of conductors. No wire smaller than 14 AWG is allowed for general interior-wiring work. Wires of 18 or 16 AWG may be used for fixture wiring, flexible cords, and some other special applications as given in Sec. 32 of Div. 3. Although 14 AWG wire is allowed for branch circuits, it is a good practice not to use wire smaller than 12 AWG. The larger 12 AWG wire costs only about 20 percent more than 14 AWG, can usually be placed in the same-size conduit or raceway, will have greater mechanical strength, and will reduce the voltage drop and the I^2R heating loss in the wires by approximately 40 percent. Solid conductors of larger size than 10 AWG are not allowed to be used in conduit or raceways. For ease in handling, it is a good practice to use stranded conductors in the larger sizes for open wiring also. The size of wire required, according to the amount of current to be carried by the circuit, is discussed in Sec. 31 of Div. 3, and the ampere current-carrying capacities are given in Tables 18 to 23 of Div. 12.

319. All ungrounded conductors must be protected by fuses or circuit breakers rated in accordance with the allowable ampacity of the conductors as given in Sec. 320 and located at the point where the conductor receives its supply, with the following exceptions. What follows are what is known as the tap rules in the NEC, and one must never be applied to another. That is, it is never permitted to “tap a tap”:

1. For building-service conductors the overcurrent protection is located at the same point as the other service-entrance equipment, which may be at the load end of the service-entrance conductors or at the outer end.
2. The overcurrent protection may be omitted provided the overcurrent unit farther back on the circuit is rated not greater than the ampacity of the smaller conductor.

3. Taps to individual outlets and circuit conductors supplying what constitutes collectively a single household electric range, as in the case of a separate wall-mounted oven and a counter cooktop, shall be considered to be protected by the branch-circuit overcurrent devices when in accordance with the requirements of Sec. 210.19(A)(3) Exception No. 1 of the NEC.
4. If a feeder tap conductor or transformer secondary is not over 3 m (10 ft) long, does not extend beyond the switchboard, panelboard, disconnecting means or control devices which it supplies, is enclosed in a raceway, and has an ampacity not less than the sum of the computed loads of the circuits which it supplies, not less than the rating of the device supplied by the tap conductor, or not less than the rating of the overcurrent protective device at the termination of the tap conductors, it need not be separately protected. For field installations where the tap conductors leave the enclosure or vault in which the tap is made, the rating of the overcurrent device on the line side of the tap conductors shall not exceed 10 times the ampacity of the tap conductor.
5. If the feeder tap conductor is not over 7.5 m (25 ft) long, is protected from physical damage, has an ampacity not less than one-third the rating of the feeder overcurrent device, and terminates in a single circuit breaker or set of fuses that will limit the load to the ampacity of the tap conductors. This device may supply any number of additional overcurrent devices on its load side.
6. For individual motor branch circuits, refer to Sec. 385, Div. 7.
7. For feeders or main conductors supplying more than one motor, refer to Sec. 390, Div. 7.
8. *Protection of fixture wires and cords.* Where flexible cord used in listed extension cord sets is connected to a branch circuit of Article 210 of the NEC, a 16 AWG or larger conductor may be protected by a 20 A circuit.

Flexible cord or a tinsel cord approved for use with specific listed appliances or portable lamps shall be considered to be protected by the overcurrent device of the branch circuit of Article 210 of the NEC where applied within the listing requirements.

Fixture wire shall be considered to be protected by the overcurrent device of the branch circuit of Article 210 of the NEC when conforming to the following:

- 20-A circuits: 18 AWG up to 15 m (50 ft)
- 20-A circuits: 16 AWG up to 30 m (100 ft)
- 20-A circuits: 14 AWG and larger
- 30-A circuits: 14 AWG and larger
- 40-A circuits: 12 AWG and larger
- 50-A circuits: 12 AWG and larger

9. **Feeder Taps Supplying a Transformer (Primary Plus Secondary Not Over 7.5 m [25 ft] Long).** Conductors supplying a transformer shall be permitted to be tapped, without overcurrent protection at the tap, from a feeder where all the following conditions are met:

- a. The conductors supplying the primary of a transformer have an ampacity at least $\frac{1}{3}$ of the rating of the overcurrent device protecting the feeder conductors.
- b. The conductors supplied by the secondary of the transformer shall have an ampacity that, when multiplied by the ratio of the secondary-to-primary voltage, is at least $\frac{1}{3}$ of the rating of the overcurrent device protecting the feeder conductors.
- c. The total length of one primary plus one secondary conductor, excluding any portion of the primary conductor that is protected at its ampacity, is not over 7.5 m (25 ft).
- d. The primary and secondary conductors are suitably protected from physical damage.
- e. The secondary conductors terminate in a single circuit breaker or set of fuses that will limit the load current to not more than the conductor ampacity that is permitted by Sec. 310.15 of the NEC.

- 10. Busway Taps.** Busways and busway taps shall be permitted to be protected against overcurrent in accordance with Secs. 368.17 of the NEC.
- 11. Conductors from Generator Terminals.** Conductors from generator terminals that meet the size requirements of 445.13 are to be protected against overload by the generator overload protective device required by 445.12 of the NEC.
- 12. Feeder Taps Over 25 ft (7.62 m) Long.** Conductors over 7.5 m (25 ft) long shall be permitted to be tapped from feeders in high bay manufacturing buildings over 7 m (25 ft) 11 m (35 ft) high at walls, where conditions of maintenance and supervision ensure that only qualified persons will service the systems. Conductors tapped, without overcurrent protection at the tap, to a feeder shall be permitted to be not over 7.5 m (25 ft) long horizontally and not over 30 m (100 ft) total length where all the following conditions are met:
- a.* The ampacity of the tap conductors is not less than $\frac{1}{3}$ of the rating of the overcurrent device protecting the feeder conductors.
 - b.* The tap conductors terminate at a single circuit breaker or a single set of fuses that will limit the load to the ampacity of the tap conductors. This single overcurrent device shall be permitted to supply any number of additional overcurrent devices on its load side.
 - c.* The tap conductors are suitably protected from physical damage or are enclosed in a raceway.
 - d.* The tap conductors are continuous from end-to-end and contain no splices.
 - e.* The tap conductors are sized 6 AWG copper or 4 AWG aluminum or larger.
 - f.* The tap conductors do not penetrate walls, floors, or ceilings.
 - g.* The tap is made no less than 9 m (30 ft) from the floor.
- 13. Transformer Secondary Conductors for Industrial Installations.** Under conditions of qualified maintenance and supervision, conductors shall be permitted to be connected to a transformer secondary for industrial installations, without overcurrent protection at the connection, where all the following conditions are met:
- a.* The length of the secondary conductors does not exceed 7.5 m (25 ft).
 - b.* The ampacity of the secondary conductors is not less than the secondary current rating of the transformer, and the sum of the ratings of the overcurrent devices does not exceed the ampacity of the secondary conductors. Since taps cannot be tapped, as a practical matter this provision would be limited to tap conductors arriving at the main lugs of a switchboard. A motor control center would not qualify, because overcurrent protection in the form of a singular device is required in accordance with the rating of the common power bus.
 - c.* All overcurrent devices are grouped.
 - d.* The secondary conductors are suitably protected from physical damage.
- 14. Outside Feeder Taps of Unlimited Length.** Outside conductors shall be permitted to be tapped to a feeder or to be connected at the transformer secondary, without overcurrent protection at the tap or connection, where all the following conditions are met:
- a.* The conductors are suitably protected from physical damage.
 - b.* The conductors terminate at a single circuit breaker or a single set of fuses that will limit the load to the ampacity of the conductors. This single overcurrent device shall be permitted to supply any number of additional overcurrent devices on its load side.
 - c.* The tap conductors are installed outdoors, except at the point of termination.
 - d.* The overcurrent device for the conductors is an integral part of a disconnecting means or shall be located immediately adjacent thereto.
 - e.* The disconnecting means for the conductors are installed at a readily accessible location either outside of a building or structure, or inside nearest the point of entrance of the conductors. If it is necessary to extend power conductors into a

building beyond where their disconnecting means and overcurrent protection would normally be located, the NEC allows such conductors to continue to be considered, for enforcement purposes, outside the building under any of the following four conditions. The point of entry is artificially extended where the wiring is (1) below at least a 50-mm (2-in) concrete slab under a building, or (2) if installed encased in not less than 50 mm (2 in.) of concrete or brick, or (3) if run within a transformer vault that meets the fire protection requirements of Article 450 Part III, and as covered in Div. 5, Secs. 142 to 148, or (4) run in conduit and placed at least 450 mm (18 in.) of earth beneath a building or other structure.

320. Rating of the overcurrent protective devices. The rating of the overcurrent protective device must be as given below except for the exceptions referred to in Pars. 6 to 8 of Sec. 319. Fuses or circuit breakers shall have ratings not greater than the allowable ampacity of the conductor which they protect, except that when the standard ampere ratings and settings of overcurrent devices do not correspond with the allowable ampacity of conductors, the next-higher standard rating and setting may be used in ratings of 800 A or less.

The effect of the temperature on the operation of thermally controlled circuit breakers should be taken into consideration in the application of such circuit breakers when they are subjected to extremely low or extremely high temperatures.

The allowable ampacity of wires is given in Tables 18 to 23 of Div. 12, and the common sizes of fuses and circuit breakers in Table 38 of Div. 12 and Sec. 240.6 of the NEC.

321. Grounded conductors must not be fused and must not have a circuit breaker in them unless the circuit breaker opens all the wires of the circuit at the same time. The size of a grounded conductor may be changed whenever the sizes of the other conductors are changed, provided the other conductors are protected as outlined in Secs. 319 and 320 (see Div. 8, Sec. 137, for an explanation of the reason for grounding one conductor of a wiring system).

322. Overcurrent devices in parallel. Except for fuses or circuit breakers which are factory-assembled and listed as a single unit, overcurrent devices must not be arranged or installed in parallel.

323. Enclosures for protective devices (National Electrical Code). Overcurrent devices shall be enclosed in cutout boxes or cabinets unless they are a part of an assembly which affords equivalent protection or unless they are mounted on open-type switchboards, panelboards, or control boards, they shall be located in rooms or enclosures free from easily ignitable material and dampness and accessible only to qualified personnel. The operating handle of a circuit breaker may be accessible without opening a door or cover.

Damp or Wet Locations. Metallic enclosures for overcurrent devices in damp or wet locations shall be mounted so there is at least a 6 mm (1/4 in.) air space between the enclosure and the wall or other supporting surface. Enclosures installed in wet locations shall be weatherproof. Nonmetallic enclosures must also comply with the air space rule if the surface on which they are mounted is absorbent, such as wood. The space is not required for nonmetallic enclosures on tile, concrete, or similar surfaces.

Vertical Position. Enclosures for overcurrent devices shall be mounted in a vertical plane unless in individual instances this is shown to be impracticable and the handle position is clearly identified as to “on” and “off” in accordance with Sec. 240.81 of the NEC.

Disconnection of Fuses before Handling. Disconnecting means shall be provided on the supply side of all fuses in circuits of more than 150 V to ground and cartridge fuses in circuits of any voltage, if accessible to other than qualified persons, so that each individual circuit containing fuses can be independently disconnected from the source of electrical energy, except that a single disconnecting means may be used to control a group of circuits each protected by fuses under the conditions described in Secs. 430.112 and 424.22(C) of the NEC and current-limiting devices on the supply side of the service disconnecting means permitted by 230.82 of the NEC.

Arcing or Suddenly Moving Parts. Arcing or suddenly moving parts shall comply with the following:

1. *Location.* Fuses and circuit breakers shall be so located or shielded that persons will not be burned or otherwise injured by their operation.
2. *Suddenly moving parts.* Handles or levers of circuit breakers and similar parts which may move suddenly in such a way that persons in the vicinity are likely to be injured by being struck by them shall be guarded or isolated.

324. Flexible cords are used for wiring fixtures, for the connection of pendants, wiring of luminaires (fixtures) or portable lamps, portable and mobile signs, or appliances, for elevator cables, for the wiring of cranes and hoists, for the connection of stationary equipment to facilitate their frequent interchange, to prevent transmission of noise or vibration, or to facilitate the removal of fixed or stationary appliances for maintenance or repair and the appliance is intended or identified for flexible cord connection, for data processing cables, and connection of moving parts, or for temporary wiring as permitted in 590.4(B) and (C) of the NEC. If the load connected to them is not greater than their carrying capacity, they are considered to be sufficiently protected by the branch-circuit overcurrent device of the branch circuit from which they are tapped. For the ampacity of fixture wire see Table 25, Div. 12. Cords must be connected to devices so that tension in a cord will not be taken by the terminal screws. This can be accomplished by knotting the cord inside the device (Fig. 9.249), by winding it with tape, or by using a clamp fitting. When flexible cords pass through the cover of an outlet box, the hole must have a smooth, well-rounded surface; when they enter lampholders, they must be protected by insulating bushings. Flexible cords shall be installed in continuous lengths without splice or tap. For voltages between 300 and 600,

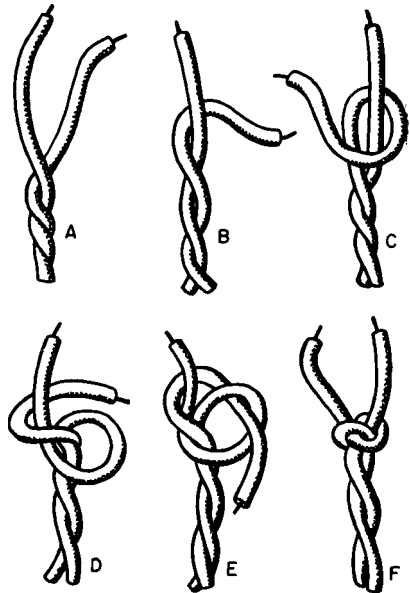


FIGURE 9.249 Method of tying a supporting knot in flexible cord (see Sec. 299 for description).

cords of No. 10 and smaller shall have at least 1.14 mm (45 mils) of thermoset or thermoplastic insulation on each conductor unless Type S, SO, SE, SEO, SEOO, SOO, STO, STOO, or ST cord is used.

In the wiring of fixtures, use conductors having insulation suitable for the current, voltage, and temperature to which they will be subjected. The splice between the fixture conductors and the circuit conductors must be easily accessible for inspection without requiring disconnection of the wiring. (See Fig. 9.250.) This is accomplished by making the canopy so that it will slide down the fixture stem (Fig. 9.251).

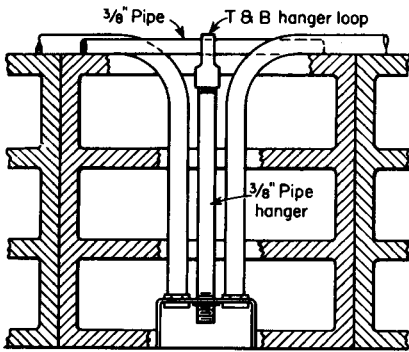


FIGURE 9.250 Support for an outlet box in a terracotta ceiling.

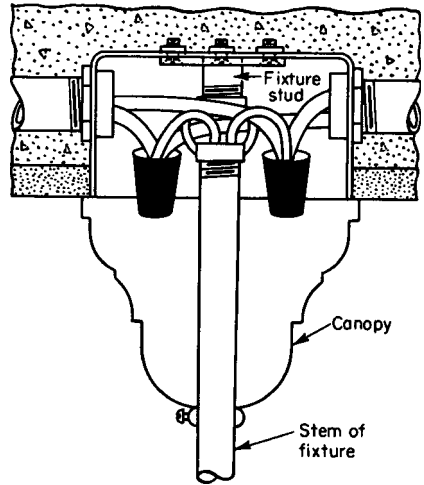


FIGURE 9.251 Method of supporting a fixture from a fixture stud.

325. Splicing of conductors. Conductors in conduit or raceway systems must be continuous from outlet to outlet and must not be spliced or tapped within the raceway or conduit itself, except in wireways or auxiliary gutters. Instructions for the proper splicing of conductors are given in Div. 2.

326. Conductors may be placed in parallel in sizes 1/0 and larger, provided they are of the same length and size and have the same type of insulation and conductor material. The conductors shall be arranged and terminated at each end in such a manner as to ensure equal division of the total current between all the parallel conductors. If the parallel circuits should be carried in different conduits or raceways, at least one wire of each phase must be carried in each conduit or raceway.

327. Induced currents in metal enclosures (National Electrical Code). In metal enclosures, the conductors of circuits operating on alternating current shall be so arranged as to avoid overheating of the metal by induction. When the capacity of a circuit is such that it is impracticable to run all conductors in one enclosure, the circuit may be divided and two or more enclosures may be used, provided each phase conductor of the circuit and the neutral conductor, when one is used, are installed in each enclosure. The conductors of such an installation must conform to the provisions of Sec. 326 for paralleled conductors.

Induced currents in an enclosure can be avoided by so grouping the conductors in one enclosure that the current in one direction will be substantially equal to the current in the opposite direction.

Where the conductors of a circuit pass through individual holes in the wall of a metal cabinet, the effect of induction may be minimized by passing all the conductors in the circuit through an aluminum wall or insulating block used to cover a hole in the metal cabinet sufficiently large for all the conductors of the circuit.

328. At outlets and switch locations at least 150 mm (6 in.) of free conductor must be left for the making of joints and the connection of wiring devices, except when conductors are intended to loop without joints through boxes and fittings. The distance is to be measured from the point the conductors emerge from the enclosing cable sheath in the box, or from the bushing or connector in the case of a raceway. In addition, in the case of deep boxes or boxes with several extension rings, there is an additional requirement that the free conductor be long enough to extend at least 75 mm (3 in.) into the open beyond the box or plaster ring opening. This assures that the conductors will be able to be spliced in a sound manner. This additional rule is waived in the event that all dimensions of the box opening equal or exceed 200 mm (8 in.), because such a large opening allows for a person to work the splice with both hands in the enclosure.

329. When ungrounded conductors of No. 4 and larger enter a cabinet, junction, or pull box, they shall be protected by a smoothly rounded insulating bushing unless they are separated from the raceway fitting by substantial insulating material securely fastened in place. If conduit bushings are constructed wholly of insulating material, a locknut to which the conduit is attached shall be provided both inside and outside the enclosure. If the conductors enter the cabinet vertically, a wiring space must be provided with a width as specified in Sec. 85, Div. 4.

330. Conductors of different systems

1. Conductors of light and power systems of 600 V or less may occupy the same enclosure, without regard to whether the individual circuits are alternating-current or direct-current, only if all conductors are insulated for the maximum voltage of any conductor within the enclosure.
2. Conductors of light and power systems of over 600 V shall not occupy the same enclosure with conductors of light and power systems of 600 V or less.
3. Secondary wiring to electric discharge lamps of 1000 V or less may occupy the same enclosure as the branch-circuit conductors.
4. Control, relay, and ammeter conductors used in connection with any individual motor or starter may occupy the same enclosure as the motor-circuit conductors.
5. Primary leads of electric discharge lamp ballasts, insulated for the primary voltage of the ballast, when contained within the individual wiring enclosure may occupy the same luminaire (fixture) sign, or outline lighting enclosure as the branch-circuit conductors.

331. When conductors or cables are run through bored holes in studs and joists, the holes should be bored at the approximate centers of wood members or at least 32 mm (1¼ in.) from the nearest edge when practical. If there is no objection because of

weakening the building structure, cables or raceways may be laid in notches in the studding or joists if the cable at those points is protected against the driving of nails into it by having the notch covered with a steel plate at least 1.6 mm ($1/16$ in.) thick before the building finish is applied. Plates made of harder steel alloys that have equivalent resistance to penetration may be used, provided they have been listed for this purpose.

332. Conductors in vertical raceways (any metallic enclosure for conductors) must be supported at intervals not greater than those given in Sec. 111.

333. Wiring in ducts, plenums, and other air-handling spaces (National Electrical Code). No wiring systems of any type shall be installed in ducts used to transport dust, loose stock, or flammable vapors; nor shall any wiring system of any type be installed in any duct, or shaft containing only such ducts, used for vapor removal or ventilation of commercial-type cooking equipment.

Only wiring methods consisting of mineral-insulated metal-sheathed cable, Type MC cable employing a smooth or corrugated impervious metal sheath without an overall non-metallic covering, electrical metallic tubing, flexible metallic tubing, intermediate metal conduit, or rigid metal conduit without an overall nonmetallic covering shall be installed in ducts or plenums specifically fabricated to transport environmental air. Flexible metal conduit shall be permitted, in lengths not to exceed 1.2 m (4 ft), to connect physically adjustable equipment and devices permitted to be in these ducts and plenum chambers. The connectors used with flexible metal conduit shall effectively close any openings in the connection. Equipment and devices shall be permitted within such ducts or plenum chambers only if necessary for their direct action upon, or sensing of, the contained air. Where equipment or devices are installed and illumination is necessary to facilitate maintenance and repair, enclosed gasketed-type luminaires shall be permitted.

Only totally enclosed, nonventilated insulated busways having no provisions for plug-in connections and wiring methods consisting of mineral-insulated metal-sheathed cable, Type MC cable without an overall nonmetallic covering, and Type AC cable and other factory-assembled multiconductor control or power cable which is specifically listed for the use or listed prefabricated cable assemblies of metallic manufactured wiring systems without a nonmetallic sheath shall be used for wiring in systems installed in other space used for environmental air. Other types of cables and conductors and raceways shall be permitted to be installed in electrical metallic tubing, flexible metallic tubing, intermediate metal conduit, rigid metal conduit without an overall nonmetallic covering, flexible metal conduit, or where accessible metal surface raceway or metal wireway with metal covers or solid bottom metal cable tray with solid metal covers.

Electric equipment with a metal enclosure or with a nonmetallic enclosure listed for the use and having adequate fire-resistant and low-smoke-producing characteristics, and associated wiring material suitable for the ambient temperature may be installed in such other space unless prohibited elsewhere in the NEC. Integral fan systems are permitted where specifically identified for such use.

Habitable rooms or areas of buildings the prime purpose of which is not air handling are not considered ducts or plenums. The space above a suspended ceiling that is used as a collection point for environmental air returning to an air handler is a good example of the space in which these provisions apply.

NFPA *Standard for the Installation of Air Conditioning and Ventilating Systems*, No. 90A, sets forth requirements of building used for ducts and plenums.

The wiring systems used for information technology equipment and located within air-handling areas created by raised floors are permitted in accordance with Article 645 of the NEC.

334. The approved types of insulation of conductors for different installations are given in Div. 2, Secs. 25 to 36.

335. Insulation resistance. To provide a reasonable factor of safety against short circuits and grounds, completed wiring systems should undergo an insulation-resistance test. The proper instrument for making this test is a megohmmeter. The NEC formerly contained recommended values of resistance for various circuit sizes. However, these values were deleted from the Code because they were misleading. Cable and conductor installations provide a wide variation of conditions with respect to the resistance of insulation. These variations are due to the many types of insulating materials used, insulation thickness, voltage rating, and the length of the circuit. Long circuits may be subject to wide variations in temperature, and this can influence the insulation-resistance values in a test.

While insulation-resistance readings are quantitative, they are also relative and comparable. Accordingly, such readings can be used to indicate the presence of moisture, dirt, and deterioration. Although the operation of a megohmmeter insulation tester is fairly simple, one must know how to interpret the results, and instructions provided for such instruments should be carefully followed.

Because a discussion of all the factors involved with these instruments and various test methods is beyond the scope of this book, anyone interested in this subject should review an instruction manual for insulation testers. Such manuals include instructions for connecting and operating Megger insulation-testing instruments, directions for making insulation-resistance tests on various types of electrical equipment, supplementary instructions and explanations to assist the person who makes the test, and valuable material on how to interpret insulation-resistance readings.

336. Grounded conductor. Every interior-wiring system must have a grounded conductor except as allowed by the Code for certain specific conditions. The grounded conductor must be continuously identified throughout the system.

If a neutral (grounded) conductor is run to a lampholder or any other screw-shell device, the neutral (grounded) conductor must be connected to the screw shell. This requirement does not apply to screw shells that serve as fuseholders.

GENERAL INSTALLATION REQUIREMENTS

337. Working space about electric equipment, 600 V or less (National Electrical Code). Sufficient access and working space shall be provided and maintained around all electric equipment to permit ready and safe operation and maintenance of such equipment. Enclosures housing electrical apparatus that are controlled by lock and key shall be considered accessible to qualified persons.

- 1. Working Clearances.** Except as elsewhere required or permitted in the NEC the dimension of the working space in the direction of access to live parts operating at 600 V or less and likely to require examination, adjustment, servicing, or maintenance while energized shall not be less than indicated in Table 337A. In addition to the dimensions shown in Table 337A, the work space shall not be less than 762 mm (30 in.) wide in front of the electric equipment. Distances shall be measured from the live parts if such are exposed or from the enclosure front or opening if such are enclosed.

TABLE 337A. Working Clearances*
(Table 110.26(A)(1), 2008 NEC)

Voltage to ground	Minimum clear distance, ft		
	Condition 1	Condition 2	Condition 3
0–150	914 mm (3)	914 mm (3)	914 mm (3)
151–600	914 mm (3)	1.07 m (3½)	1.22 m (4)

*Reprinted with permission from NFPA 70-2008, National Electrical Code®. Copyright © 2007, National Fire Protection Association, Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

The conditions are as follows:

Condition 1. Exposed live parts on one side and no live or grounded parts on the other side of the working space, or exposed live parts on both sides effectively guarded by suitable wood or other insulating materials. Insulated wire or insulated busbars operating at not over 300 V shall not be considered live parts.

Condition 2. Exposed live parts on one side and grounded parts on the other side. Concrete, brick, or tile walls shall be considered as grounded.

Condition 3. Exposed live parts on both sides of the work space (not guarded as provided in Condition 1) with the operator between.

Dead-Front Assemblies. Working space shall not be required in back of assemblies such as dead-front switchboards or motor-control centers where there are no renewable or adjustable parts such as fuses or switches on the back and where all connections are accessible from locations other than the back or sides. Where rear access is required to work on nonelectrical parts on the back of enclosed equipment, a minimum working space of 762 mm (30 in.) horizontally shall be provided.

Low Voltage. By special permission smaller spaces may be permitted where all uninsulated parts are at a voltage no greater than 30 V rms, 42 V peak, or 60 V dc.

Existing Buildings. In existing buildings where electrical equipment is being replaced, Condition 2 working clearance shall be permitted between dead-front switchboards, panelboards, or motor control centers located across the aisle from each other where conditions of maintenance and supervision ensure that written procedures have been adopted to prohibit equipment on both sides of the aisle from being open at the same time and qualified persons who are authorized will service the installation.

- 2. **Clear Spaces.** Working space required by this section shall not be used for storage. When normally enclosed live parts are exposed for inspection or servicing, the working space, if in a passageway or general open space, shall be suitably guarded.
- 3. **Access and Entrance to Working Space.** At least one entrance of sufficient area shall be provided to give access to the working space about electric equipment. For equipment rated 1200 A or more and over 1.8 m (6 ft) wide, containing overcurrent devices, switching devices, or control devices, there shall be one entrance to and egress from the required working space not less than 610 mm (24 in.) wide and 2.0 m (6½ ft) high at each end of the working space.

Unobstructed Exit. Where the equipment location permits a continuous and unobstructed way of exit travel one means of exit is permitted.

Extra Work Space. Where the work space required by Sec. 110.26(A)(1) of the NEC is doubled, only one entrance to the working space is required and it shall be so located that the edge of the entrance nearest the equipment is the minimum clear distance given in Table 337A away from such equipment.

4. **Illumination.** Illumination shall be provided for all working spaces about service equipment, switchboards, panelboards, or motor control centers installed indoors. Additional lighting fixtures shall not be required where the work space is illuminated by an adjacent light source or as permitted by 210.70(A)(1), Ex. 1 of the NEC for switched receptacles. In electrical equipment rooms, the illumination shall not be controlled by automatic means only.
5. **Headroom.** The minimum headroom of working spaces about service equipment, switchboards, panelboards, or motor control centers shall be 2.0 m (6½ ft). Where the electrical equipment exceeds 2.0 m (6½ ft) in height, the minimum headroom shall not be less than the height of the equipment.

Exception. Service equipment or panelboards in existing dwelling units that do not exceed 200 A.

338. All cables and raceways must be continuous from outlet to outlet and from fitting to fitting and must be securely fastened in place. Fittings must be mechanically secured to conduits, raceways, and boxes; and the entire metallic enclosure system must form an electrically continuous conductor. If different portions of a conduit or raceway system or sleeving for cables are exposed to widely different temperatures, as in refrigerating or cold-storage plants, or for passages from outdoors to indoor areas using conditioned air, provision must be made to prevent circulation of air through the raceway from a warmer to a colder section by sealing.

339. Protection against corrosion and deterioration. Raceways, cable trays, cablebus, auxiliary gutters, cable armor, boxes, cable sheathing, cabinets, elbows, couplings, fittings, supports, and support hardware shall be of materials suitable for the environment in which they are to be installed.

1. Ferrous raceways, cable trays, cablebus, auxiliary gutters, cable armor, boxes, cable sheathing, cabinets, metal elbows, couplings, fittings, supports, and support hardware shall be suitably protected against corrosion inside and outside (except threads at joints) by a coating of approved corrosion-resistant material, such as zinc, cadmium, or enamel. If protected from corrosion solely by enamel, they shall not be used outdoors or in wet locations as described in Par. 4. Where boxes or cabinets have an approved system of organic coatings and are marked "Raintight," "Rainproof," or "Outdoor type," they may be used outdoors. Where corrosion protection is necessary and conduit is threaded in the field, the threads shall be coated with an approved electrically conductive, corrosion-resistant compound. Stainless steel is not required to have protective coatings.

Unless made of materials judged suitable for the condition or unless corrosion protection approved for the condition is provided, ferrous or nonferrous metal raceways, cable armor, boxes, cable sheathing, cabinets, elbows, couplings, nipples, fittings, supports, and support hardware shall not be installed in concrete or in direct contact with the earth or in areas subject to severe corrosive influences.

2. Aluminum raceways, cable trays, cablebus, auxiliary gutters, cable armor, boxes, cable sheathing, cabinets, elbows, couplings, nipples, fittings, supports, and support hardware embedded or encased in concrete or in direct contact with the earth shall be provided with supplementary corrosion protection.
3. Nonmetallic raceways, cable trays, cablebus, auxiliary gutters, boxes, cables with a nonmetallic outer jacket and internal metal armor or jacket, cable sheathing, cabinets,

elbows, couplings, nipples, fittings, supports, and support hardware shall be made of material approved for the condition. Where exposed to sunlight, the materials shall be either listed or identified as sunlight resistant. Where subject to exposure to chemical solvents, vapors, splashing, or immersion, materials or coatings shall be either inherently resistant to chemicals based on their listing or be identified for the specific chemical reagent.

4. In portions of dairies, laundries, canneries, and other indoor wet locations, and in locations where walls are frequently washed or where there are surfaces of absorbent materials, such as damp paper or wood, the entire wiring system where installed exposed, including all boxes, fittings, conduits, and cable used therewith, shall be mounted so that there is at least a 6 mm ($\frac{1}{4}$ in.) air space between it and the wall or supporting surface except for nonmetallic boxes and raceway systems installed on nonabsorbent surfaces such as concrete, masonry, or tile.

340. Outlet boxes (see Div. 4) must be provided at each outlet, switch, or junction point for all wiring systems except open wiring. The boxes must be made of metallic material, except that for open wiring on insulators, concealed knob-and-tube wiring, nonmetallic-sheathed or similar cables with entirely nonmetallic sheaths, flexible cords, or nonmetallic raceways the boxes may be of nonmetallic construction. Nonmetallic boxes are permitted with metallic wiring methods if internal bonding is provided between all entries, such as the use of bonding bushings on metallic conduit or tubing entries. In addition, specialized nonmetallic boxes with integral bonding provisions, such as those with embedded metal framework in fiberglass enclosures developed for hazardous locations that are also corrosive, are permitted with metal wiring methods. These boxes must have a means provided within the enclosure to attach an equipment bonding jumper. Whenever a change is made from open or concealed knob-and-tube wiring to one of the other types of wiring, a box or terminal fitting which has a separately bushed hole for each conductor must be used. In terminating conduit wiring at switchboards and control-apparatus locations an insulating bushing instead of a box may be used. If conductors are lead-covered, the bushing need not be insulated.

Care must be exercised in installing boxes and fittings in damp or wet locations so that they are either placed or equipped to prevent moisture or water from entering and accumulating within the box or fitting. In wet locations the boxes or fittings must be listed for use in wet locations.

Round outlet boxes are not allowed when conduits or connectors requiring the use of locknuts or bushings are to be connected to the side of the box.

341. Supports. Boxes shall be securely and rigidly fastened to the surface upon which they are mounted or securely and rigidly embedded in concrete or masonry. Except as otherwise provided in this section, boxes shall be supported from a structural member of the building either directly or by using a metal, polymeric, or wooden brace. If of wood, the brace shall not be less than nominal 25 mm \times 50 mm (1 in. \times 2 in.) thickness. If of metal, it shall be corrosion-resistant and shall be not less than 0.51 mm (0.020 in.) uncoated.

When mounted in new walls in which no structural members are provided or in existing walls in previously occupied buildings, boxes shall be affixed with approved anchors or clamps so as to provide a rigid and secure installation.

Enclosures not exceeding 1650 cm (100 in³) in size which do not contain devices, receptacles, or switches and do not support luminaires (fixtures) may be considered adequately supported if two or more conduits are threaded into the box wrenchtight and are supported

within 900 mm (3 ft) of the box on two or more sides; or boxes or conduit bodies containing devices or supporting luminaires may be supported by the connecting conduit when at least two connecting conduits are threaded into the box and rigidly supported within 450 mm (18 in.) of the junction box. The conduit entries must be at hubs that are an integral part of the box or that are identified for the purpose if added in the field. Conduit bodies that are no larger than the largest entering raceway and contain no splices do not require independent support.

342. Ceiling outlet boxes may be supported with wood screws projecting through the holes in the bottom of the box, in frame construction when a wood background is available. If boxes must be supported between wooden beams, bar hangers as shown in Sec. 119 of Div. 4 are used. The hangers are fastened with nails or wood screws to the beams. The box is fastened to the hanger by means of the fixture stud or with two bolts. With concealed conduit wiring in reinforced-concrete ceilings the conduits and the edges of the backing plate of the concrete boxes, bearing against the concrete, support the box. With terra-cotta ceilings a tee made of $\frac{3}{8}$ -in pipe substantially bearing on the top of the terra-cotta should be used (Fig. 9.250). The pipe projects through the fixture-stud knockout in the back of the box and forms the fixture stud. For exposed wiring on concrete ceilings, screws and lead expansion sleeves should be used. For exposed wiring on steelwork the box should be bolted or clamped to the steel. For exposed wiring on plastered ceilings the box may be fastened on the surface with toggle bolts.

343. Wall outlet boxes in frame construction are fastened to the studs with side hangers which form part of the box (see Sec. 117, Div. 4). With concealed wiring in concrete or brick walls the masonry, being built tight around the box, supports it. The conduit prevents the box from coming loose from the wall. If a pocket has been cut in a brick wall to receive an outlet box and the wall has been channeled for the conduit, the box should be fastened to the wall by two expansion sleeves. With concealed wiring in concrete construction, for the support of a fixture which is too heavy to be safely hung on an ordinary $\frac{3}{8}$ -in fixture stud, the outlet box should be supported by a pipe support similar to that of Fig. 9.250, embedded in the concrete. For exposed wiring on concrete and brick walls the box may be fastened with wood screws in lead expansion sleeves.

344. Luminaires (lighting fixtures) are usually supported from the fixture stud in the outlet box (Fig. 9.251). A hickey is screwed onto the fixture stud, and the fixture stem is screwed into the hickey. The fixture wires are brought out of the fixture stem through the holes in the hickey and spliced to the circuit wires. The canopy is then slipped up against the ceiling and fastened to the fixture stem with a setscrew. In many cases it is preferable to use outlet boxes which have the fixture stud made integral with the back of the box. In case that type of box is not available, a separate fixture stud (Fig. 9.252) may be installed. The no-bolt type (Fig. 9.252, I) is used for supporting the box from a bar hanger. The body of the stud is on the back of the hanger with the threaded portion projecting through the hanger and through a hole in the center of the box. The nut is screwed on the stud inside the box and holds the box to the hanger. The bolted type (Fig. 9.252, II) either is bolted to the back of the box or, when the box is supported from a wooden member, is held in place with wood screws. The NEC requires that a fixture

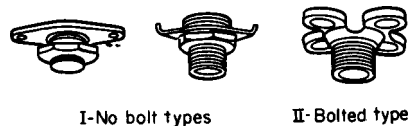


FIGURE 9.252 Fixture studs.

which weighs more than 3 kg (6 lb) or exceeds 400 mm (16 in.) in any dimension must not be supported by the screw shell of the lampholder. Small lighting fixtures consisting of a lampholder and a small shade may be supported from a pendant cord. In this case a box cover with a round hole in the center is used. A knot is tied in the cord inside the box (Fig. 9.249) so that the knot will bear against the cover and support the weight of the fixture. With exposed conduit wiring, elbow or tee conduit fittings are frequently used. The fixture is supported with a short length of conduit which threads into the fixture and into the hub which projects down from the fitting. Sometimes the upper part of the fixture is designed to be fastened as the cover on a 3 $\frac{1}{4}$ - or 4-in outlet box. A fixture which weighs more than 23 kg (50 lb) must be supported independently of the outlet box unless the outlet box is listed for the weight to be supported. Figure 9.253 shows a typical method of attaching a lightweight fixture to a nonmetallic box.

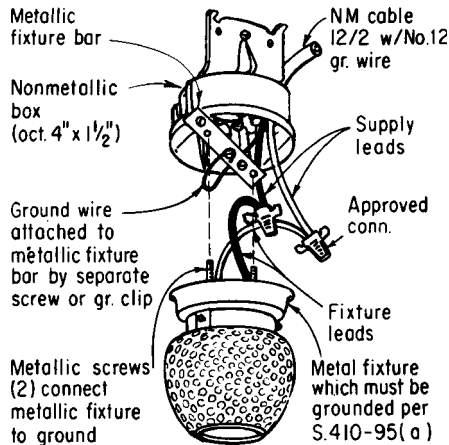


FIGURE 9.253 Method of securing and connecting a lightweight fixture to a nonmetallic box.

345. Number of conductors in outlet, device, and junction boxes, and conduit bodies. Boxes and conduit bodies shall be of sufficient size to provide free space for all enclosed conductors. In no case shall the volume of the box, as calculated in 1. below, be less than the fill calculation as calculated in 2. below. The minimum volume for conduit bodies shall be as calculated in 3. below.

The provisions of this section shall not apply to terminal housings supplied with motors. Boxes and conduit bodies enclosing conductors, size No. 4 or larger, shall also comply with the provisions of Sec. 314.28 of the NEC.

1. Box volume calculations. The volume of a wiring enclosure (box) shall be the total volume of the assembled sections, and, where used, the space provided by plaster rings, domed covers, extension rings, etc., that are marked with their volume or are made from boxes the dimensions of which are listed in Table 314.16(A) of the NEC.

a. Standard Boxes. The volumes of standard boxes that are not marked with a cubic inch capacity shall be as given in Table 314.16(A) of the NEC.

b. Other Boxes. Boxes 1650 cm³ (100 in³) or less, other than those described in Table 314.16(A) of the NEC, and nonmetallic boxes shall be durably and legibly marked by the manufacturer with their volume. Boxes described in Table 314.16(A) of the NEC

that have a larger volume than is designated in the table shall be permitted to have their volume marked as required by this section.

- 2. Box fill calculations.** The volumes in paragraphs a. through e. below, as applicable, shall be added together. No allowance shall be required for small fittings such as lock-nuts and bushings.

a. Conductor Fill. Each conductor that originates outside the box and terminates or is spliced within the box shall be counted once, and each conductor that passes through the box without splice or termination shall be counted once. The conductor fill, in cubic inches, shall be computed using Table 314.16(B) of the NEC. A conductor, no part of which leaves the box, shall not be counted.

Exception. Where an equipment grounding conductor or not over four fixture wires smaller than No. 14, or both, enter a box from a domed luminaire (fixture) or similar canopy and terminate within that box, it shall be permitted to omit these conductors from the calculations.

b. Clamp Fill. Where one or more internal cable clamps, whether factory or field supplied, are present in the box, a single volume allowance in accordance with Table 314.16(B) of the NEC shall be made based on the largest conductor present in the box. No allowance shall be required for a cable connector with its clamping mechanism outside the box.

c. Support Fittings Fill. Where one or more luminaire (fixture) studs or hickey are present in the box, a single volume allowance in accordance with Table 314.16(B) of the NEC shall be made for each type of fitting based on the largest conductor present in the box.

d. Device or Equipment Fill. For each yoke or strap containing one or more devices of equipment, a double volume allowance in accordance with Table 314.16(B) of the NEC shall be made for each yoke or strap based on the largest conductor connected to a device(s) or equipment supported by that yoke or strap. If the supported item is wide enough such that it cannot be installed in a single-gang box as listed in Table 314.16(A), such as 3-pole 4-wire grounding 125/250-V, 30- or 50-A receptacles commonly used for ranges and clothes dryers, then the allowances will be calculated based on the required number of gangs. In the example given a two-gang box would be required for mounting, and therefore there would be a double allowance for each of the two required gangs, for a total of four allowances.

e. Equipment Grounding Conductor Fill. Where one or more equipment grounding conductors enters a box, a single volume allowance in accordance with Table 314.16(B) of the NEC shall be made based on the largest equipment grounding conductor present in the box. Where an additional set of equipment grounding conductors, as permitted by Section 250.146(D) in the NEC is present in the box, an additional volume allowance shall be made based on the largest equipment grounding conductor in the additional set.

- 3. Conduit Bodies.** Conduit bodies enclosing No. 6 conductors or smaller other than short radius conduit bodies as described in Sec. 314.5 of the NEC shall have a cross-sectional area not less than twice the cross-sectional area of the largest conduit or tubing to which it is attached. The maximum number of conductors permitted shall be the maximum number permitted by Table 29 of Div. 12 for the conduit to which it is attached.

Conduit bodies shall not contain splices, taps, or devices unless they are durably and legibly marked by the manufacturer with their volume. The maximum number of conductors shall be computed using the same procedure for similar conductors in other than standard boxes. Conduit bodies shall be supported in a rigid and secure manner.

346. Conductors entering boxes or fittings (National Electrical Code). Conductors entering boxes, conduit bodies, or fittings shall be protected from abrasion and conform to the following:

1. *Openings to be closed.* Openings through which conductors enter shall be adequately closed.
2. *Metal boxes and conduit bodies.* If metal outlet boxes, or conduit bodies, are used with open wiring or concealed knob-and-tube work, conductors shall enter through insulating bushings or, in dry places, through flexible tubing extending from the last insulating support and firmly secured to the box or conduit body. Where raceway or cable is used with metal outlet boxes or conduit bodies, the raceway or cable shall be secured to such boxes and conduit bodies.

Nonmetallic Boxes. Nonmetallic boxes shall be suitable for the lowest-temperature-rated conductor entering the box. Where nonmetallic boxes are used with open wiring or concealed knob-and-tube wiring, the conductors shall enter the box through individual holes. Where flexible tubing is used to encase the conductors, the tubing shall extend from the last insulating support to no less than 6 mm ($\frac{1}{4}$ in.) beyond any cable clamps inside the box. Where nonmetallic-sheathed cable or multiconductor type UF is used, the cable assembly, including the sheath, shall extend into the box no less than $\frac{1}{4}$ in. through a nonmetallic-sheathed cable clamp. Where nonmetallic-sheathed cable is used with nominally sized 57 by 100 mm ($2\frac{1}{4}$ - by 4-in.) boxes mounted in walls or ceilings and the cable is fastened within 200 mm (8 in.) of the box measured along the sheath and where the sheath extends into the box no less than 6 mm ($\frac{1}{4}$ in.), securing the cable to the box shall not be required. In all instances all permitted wiring methods shall be secured to nonmetallic boxes. Conductors 4 AWG and larger are covered in Sec. 300.4(G) of the NEC.

347. Location. Conduit bodies and junction, pull, and outlet boxes shall be so installed that the wiring contained in them can be rendered accessible without removing any part of the building or, in underground circuits, without excavating sidewalks, paving earth, or other substance that is to be used to establish the finished grade.

Exception. Listed boxes shall be permitted where covered by gravel, light aggregate, or noncohesive granulated soil if their location is effectively identified and accessible for excavation.

In walls or ceilings of concrete, tile, gypsum, plaster or other noncombustible material (National Electrical Code), boxes shall be so installed that the front edge of the box will not set back of the finished surface more than 6 mm ($\frac{1}{4}$ in.). In walls and ceilings constructed of wood or other combustible material, outlet boxes shall be flush with the finished surface or project therefrom.

348. Covers and canopies (National Electrical Code). In completed installations each outlet box shall be provided with a cover, faceplate, lampholder, or luminaire fixture canopy, except where the installation complies with 410.24(B).

1. Nonmetallic or metal covers and plates may be used with nonmetallic outlet boxes. Where metal covers or plates are used, they are subject to the grounding requirements of Sec. 404.9(B) of the NEC.

2. If a luminaire (fixture) canopy or pan is used, any combustible wall or ceiling finish exposed between the edge of the canopy or pan and the outlet box shall be covered with noncombustible material.
3. Covers of outlet boxes and conduit bodies having holes through which flexible-cord pendants pass shall be provided with bushings designed for the purpose or shall have smooth, well-rounded surfaces on which the cords may bear. So-called hard-rubber or composition bushings shall not be used.

349. Pull and junction boxes (National Electrical Code). Boxes and conduit bodies used as junction boxes shall conform to the following:

1. **Minimum Size.** For raceways containing conductors of 4 AWG or larger (if required to be insulated), and for cables* containing conductors of 4 AWG or larger, the minimum dimensions of a pull or junction box installed in a raceway or cable run shall conform to the following:
 - a. *Straight pulls.* In straight pulls the length of the box shall be not less than 8 times the trade diameter of the largest raceway.
 - b. *Angle or U pulls, or Splices.* Where angle or U pulls, or splices are made, the distance between each raceway entry inside the box and the opposite wall of the box shall not be less than 6 times the trade diameter of the largest raceway in a row. This distance shall be increased for additional entries by the amount of the sum of the diameters of all other raceway entries in the same row on the same wall of the box. Each row shall be calculated individually, and the single row that provides the maximum distance shall be used.

Exception. Where a raceway or cable entry is in the wall of a box or conduit body opposite a removable cover and where the distance from that wall to the cover is in conformance with the column for one wire per terminal in Table 312.6(A) in the NEC.

The distance between raceway entries enclosing the same conductor shall not be less than 6 times the trade diameter of the larger raceway.

- c. Boxes or conduit bodies of lesser dimensions than those required in Subpars. *a* and *b* of this section may be used for installations of combinations of conductors that are less than the maximum conduit or tubing fill (of conduits or tubing being used) permitted by Table 1 of Chap. 9 of the NEC, provided that the box has been listed for and is permanently marked with the maximum number of conductors and the maximum AWG size permitted.

Exception. Terminal housings supplied with motors which shall comply with the provisions of Sec. 430.12 of the Code.

2. **Conductors in Pull or Junction Boxes.** In pull boxes or junction boxes having any dimension over 1.8 m (6 ft), all conductors shall be cabled or racked up in an approved manner.

*When transposing cable size into raceway size in Subpars. *a* and *b*, the minimum trade-size raceway required for the number and size of conductors in the cable shall be used.

3. **Covers.** All pull boxes, junction boxes, and conduit bodies, shall be provided with covers compatible with the box or conduit body construction and suitable for the conditions of use. Where metal covers are used, they shall comply with the grounding requirements of Sec. 250.110 of the NEC.
4. **Permanent Barriers.** Where permanent barriers are installed in a box, each section shall be considered as a separate box.

350. Cabinets, cutout boxes, and meter socket enclosures. The field-wiring requirements of the NEC with respect to cabinets, cutout boxes, and meter socket enclosures are as follows:

1. **Damp or Wet Locations.** In damp or wet locations, surface-type enclosures shall be so placed or equipped as to prevent moisture or water from entering and accumulating within the cabinet or cutout box and shall be mounted so there is at least a 6 mm ($1/4$ in.) air space between the enclosure and the wall or other supporting surface. Enclosures installed in wet locations shall be weatherproof. Nonmetallic cabinets and cutout boxes may be installed without the air space on a concrete, masonry, tile, or similar surface. Raceways or cables entering enclosures in wet locations must use entrance fittings listed for wet locations if the entry point is above the level of uninsulated live parts.
2. **Position in Wall.** In walls of concrete, tile, or other noncombustible material, cabinets shall be so installed that the front edge of the cabinet will not set back of the finished surface more than 6 mm ($1/4$ in.). In walls constructed of wood or other combustible material, cabinets shall be flushed with the finished surface or project therefrom.
3. **Repairing Noncombustible Surfaces.** Noncombustible surfaces that are broken or incomplete shall be repaired so there will be no gaps or open spaces greater than 3 mm ($1/8$ in.) at the edge of the cabinet or cutout box employing a flush-type cover.
4. **Conductors Entering Cabinets or Cutout Boxes.** Conductors entering cabinets or cutout boxes shall be protected from abrasion and shall conform to the following:
 - a. **Openings to be closed.** Openings through which conductors enter shall be adequately closed.
 - b. **Metal cabinets cutout boxes and meter socket enclosures.** If metal enclosures are used with open wiring or concealed knob-and-tube wiring, conductors shall enter through insulating bushings or, in dry locations, through flexible tubing extending from the last insulating support and firmly secured to the cabinet, cutout box or meter socket enclosure.
 - c. **Cables.** Where cable is used, each cable shall be secured to the enclosure. An elaborate exception to this rule covers the acceptable use of a raceway sleeve to entrain a group of nonmetallic cables into an enclosure. These rules are covered in detail in Sec. 85 of Div. 4.
5. **Deflection of Conductors.** Conductors at terminals or conductors entering or leaving cabinets or cutout boxes and the like shall conform to the following:
 - a. **Width of wiring gutters.** Conductors in parallel shall be judged on the basis of the number of conductors in parallel. Conductors shall not be deflected within a cabinet or cutout box unless a gutter having a width in accordance with Table 312.6(A) of the NEC is provided. Conductors in parallel in accordance with 310.4 shall be judged on the basis of the number of conductors in parallel.
 - b. **Wire Bending Space at Terminals.** Wire bending space at each terminal shall be provided in accordance with 1. or 2. below.
 1. **Conductors Not Entering or Leaving Opposite Wall.** Table 312.6(A) of the NEC (see Div.12, Table 33) shall apply where the conductor does not enter or leave the enclosure through the wall opposite its terminal.

2. *Conductors Entering or Leaving Opposite Wall.* Table 312.6(B) of the NEC (see Div. 12, Table 34) shall apply where the conductor enters or leaves the enclosure through the wall opposite its terminal. This table requires greater spacings, but there are two exceptions:

a. Where the distance between the wall and its terminal is in accordance with Table 312.6(A), a conductor shall be permitted to enter or leave an enclosure through the wall opposite its terminal provided the conductor enters or leaves the enclosure where the gutter joins an adjacent gutter that has a width that conforms to Table 312.6(B) of the NEC for that conductor.

b. A conductor not larger than 350 kcmil shall be permitted to enter or leave an enclosure containing only a meter socket(s) through the wall opposite its terminal, provided the terminal is a lay-in type where either:

1. The terminal is directed toward the opening in the enclosure and is within a 45° angle of directly facing the enclosure wall, or

2. The terminal is directly facing the enclosure wall and offset is not greater than 50 percent of the bending space specified in Table 312.6(A) of the NEC.

NOTE: Offset is the distance measured along the enclosure wall from the axis of the centerline of the terminal to a line passing through the center of the opening in the enclosure.

c. *Insulated fittings.* In accordance with NEC 300.4(G), where raceways contain 4 AWG insulated circuit conductors and these conductors enter a cabinet, box, enclosure, or raceway, the conductors shall be protected by a substantial bushing providing a smoothly rounded insulating surface unless the conductors are separated from the raceway fitting by substantial insulating material securely fastened in place. If conduit bushings are constructed wholly of insulating material, a locknut shall be provided both inside and outside the enclosure to which the conduit is attached. The insulating bushing or insulating material shall have a temperature rating not less than the insulation temperature rating of the installed conductors.

Exception. Where threaded hubs or bosses that are an integral part of a cabinet, box enclosure, or raceway provide a smoothly rounded or flared entry for conductors.

d. Wire bending space in enclosures for motor controllers with provisions for one or two wires per terminal is covered by Sec. 430.10(B) of the NEC.

6. *Space in Enclosures.* Cabinets and cutout boxes shall conform to the following:

a. Cabinets and cutout boxes shall have sufficient space to accommodate all conductors installed in them without crowding.

b. *Enclosures for Switches or Overcurrent Devices.* Enclosures for switches or overcurrent devices shall not be used as junction boxes, auxiliary gutters, or raceways for conductors feeding through or tapping off to other switches or overcurrent devices unless adequate space for this purpose is provided. The conductors shall not fill the wiring space at any cross section to more than 40 percent of the cross-sectional area of the space, and the conductors, splices, and taps shall not fill the wiring space at any cross section to more than 75 percent of the cross-sectional area of that space.

7. *Side- or Back-Wiring Spaces or Gutters.* Cabinets and cutout boxes shall be provided with back-wiring spaces, gutters, or wiring compartments as required by Sec. 312.11(C) and (D) of the Code.

351. Auxiliary gutters (National Electrical Code). Auxiliary gutters, used to supplement wiring spaces at meter centers, distribution centers, switchboards, and similar points of wiring systems, may enclose conductors or busbars but shall not be used to enclose

switches, overcurrent devices, appliances, or other similar equipment. Refer to Sec. 28 for general information, including distinctions between auxiliary gutters and wireways. They are available in both sheet metal and flame-retardant nonmetallic forms. The enclosures have hinged or removeable covers for housing and protecting electrical wires, cables, and busbars. The enclosures are designed for conductors to be laid in place after the enclosures have been installed as a complete system.

1. **Uses not Permitted.** An auxiliary gutter shall not extend a greater distance than 9 m (30 ft) beyond the equipment which it supplements, except in elevator work. Any further extension shall comply with the rules for wireways or busways. Auxiliary gutters must not be used to enclose switches, overcurrent devices, appliances, or other similar equipment.
2. **Supports.** Sheet metal gutters shall be supported throughout their length at intervals not exceeding 1.5 m (5 ft). Nonmetallic auxiliary gutters shall be supported at intervals not to exceed 900 mm (3 ft) and at each end or joint, unless listed for other support intervals. In no case shall the distance between supports exceed 3 m (10 ft).
3. **Covers.** Covers shall be securely fastened to the gutter.
4. **Number of Conductors.** The sum of the cross-sectional areas of all contained conductors at any cross section of sheet metal and nonmetallic auxiliary gutters shall not exceed 20 percent of the interior cross-sectional area of the gutter. Sheet metal auxiliary gutters shall not contain more than 30 conductors at any cross section unless the conductors are made subject to the derating factors in 310.15(B)(2)(a). Signaling circuit or controller conductors between a motor and its starter and used only for starting duty are not considered current-carrying conductors. Nonmetallic auxiliary gutters are subject to the same fill limitations.
5. **Ampacity of Conductors.** Where the number of current-carrying conductors contained in a sheet metal auxiliary gutter is 30 or fewer, the adjustment factors specified in 310.15(B)(2)(a) of the NEC, shall not apply. If the number of current-carrying conductors, including neutral conductors classified as current carrying under the provisions of 310.15(B)(4), exceeds 30, the derating factors specified in 310.15(B)(2)(a) of the NEC, shall be applicable to all current-carrying conductors in the sheet metal auxiliary gutter. The current carried continuously in bare copper bars in auxiliary gutters shall not exceed 1.5 A/mm^2 (1000 A/in^2) of cross section of the conductor. For bare aluminum bars, the current carried continuously is limited to 1.09 A/mm^2 (700 A/in^2). Nonmetallic auxiliary gutters do not have any exemption from the 310.15(B)(2)(a) derating factors, so for them, derating applies anytime the current-carrying conductors exceed three, just as for tubular raceways.
6. **Clearance of Bare Live Parts.** Bare conductors shall be securely and rigidly supported so that the minimum clearance between bare current-carrying metal parts of different potential mounted on the same surface shall be not less than 50 mm (2 in.) or less than 25 mm (1 in.) for parts that are held free in the air. A spacing not less than 1 in. shall be secured between bare current-carrying metal parts and any metal surface. Adequate provision shall be made for expansion and contraction of busbars.
7. **Splices and Taps.** Splices and taps shall conform to the following:
 - a. Splices or taps, made and insulated by approved methods, may be located within gutters if they are accessible by means of removeable covers or doors. The conductors, including splices and taps, shall not fill the gutter to more than 75 percent of its area.
 - b. Taps from bare conductors shall leave the gutter opposite their terminal connections and conductors shall not be brought in contact with uninsulated current-carrying parts of different potential.

- c.* All taps shall be suitably identified at the gutter as to the circuit or equipment which they supply.
 - d.* Tap connections from conductors in auxiliary gutters shall be provided with over-current protection in conformity with the provisions of Secs. 319 and 320.
- 8. Construction and Installation.** Auxiliary gutters shall comply with the following:
 - a.* Gutters shall be so constructed and installed that adequate electrical and mechanical continuity of the complete raceway system will be secured.
 - b.* Gutters shall be of substantial construction and shall provide a complete enclosure for the contained conductors. All surfaces, both interior and exterior, shall be suitably protected from corrosion. Corner joints shall be made tight, and if the assembly is held together by rivets, bolts or screws, these shall be spaced not more than 300 mm (12 in.) apart.
 - c.* Suitable bushings, shields, or fittings having smooth, rounded edges shall be provided where conductors pass between gutters, through partitions, around bends, between gutters and cabinets or junction boxes, and at other locations where necessary to prevent abrasion of the insulation of the conductors.
 - d.* Where insulated conductors are deflected within the auxiliary gutter, either at the ends or where conduits, fittings, or other raceways or cables enter or leave the gutter, or where the direction of the gutter is deflected more than 30°, dimensions correspond to those required for one wire per terminal in cabinets and cutout boxes as given in Sec. 312.6(A) of the Code (reproduced in Div. 12, Table 33). If a short section of the auxiliary gutter is used as a pull box, the spacing rules in Sec. 349 apply for both straight and angle pulls.
 - e.* Sheet metal auxiliary gutters installed indoors or outdoors in wet locations shall be suitable for such locations.
 - 1.** Nonmetallic auxiliary gutters installed outdoors shall:
 - a.* Be listed and marked as suitable for exposure to sunlight; and
 - b.* Be listed and marked as suitable for use in wet locations; and
 - c.* Be listed for the maximum ambient temperature of the installation, and marked for the installed conductor insulation temperature rating.
 - d.* Have expansion fittings installed where the expected length change due to expansion and contraction due to temperature change is more than 6 mm (0.25 in.).
 - 2.** Nonmetallic auxiliary gutters installed indoors shall:
 - a.* Be listed for the maximum ambient temperature of the installation and marked for the installed conductor insulation temperature rating.
 - b.* Have expansion fittings installed where expected length change due to expansion and contraction due to temperature change is more than 6 mm (0.25 in.).
- 9. Grounding.** Grounding shall be in accordance with Article 250.

352. There are two types of grounds in interior-wiring systems:

- 1.** System grounds (grounding electrode conductors)
- 2.** Equipment and conductor-enclosure grounds

A system ground refers to the condition of having one wire of a circuit connected to ground. The reason for doing this is explained in Secs. 132 and 133, Div. 8.

An equipment or conductor-enclosure ground refers to connecting the noncurrent-carrying metal parts of the wiring system or equipment to ground. This is done so that the metal parts with which a person might come in contact are always at or near ground potential. With this condition there is less danger that a person touching the equipment or conductor

enclosure will receive a shock. Also metal conduit, raceways, and boxes may be in contact with metal parts of the building at several points. If an accidental contact occurs between an ungrounded conductor and its metal enclosure, a current may flow to ground through a stray path made up of sections of metal lath, metal partitions, piping, or other similar conductors. If the equipment is grounded, the resistance of the path through the grounding conductor will usually be much less than the resistance through the stray path, and not much current will flow through the stray path. Sufficient current will usually flow through the grounded path to blow the circuit fuse or trip the circuit breaker and thus open the circuit until repairs can be made. On the other hand, if the equipment is not grounded, sufficient current may flow through the stray path to heat up some section to a sufficient temperature to ignite wood or other flammable material with which it is in contact. The current may not be sufficient to operate the fuse or circuit breaker, especially if the contact occurs on large-size feeders.

353. The following items of equipment and conductor enclosures must be connected to the equipment grounding conductor:

1. ***Metal Conductor Enclosures.*** Unless exempted by the provisions of 3i, in general all such enclosures shall be connected to the equipment grounding conductor. There are limited exceptions, including runs of less than 7.5 m (25 ft), that are extensions of existing installations comprising wiring methods that do not include an equipment grounding conductor, that are free from probable contact with ground, grounded metal, metal lath, or other conductive material, and that are guarded against contact by persons. Short sections of metal enclosures or raceways used to provide support or protection of cable assemblies from physical damage need not be grounded, and metal elbows installed in nonmetallic raceway runs need not be grounded if the metal elbow is isolated from contact by direct burial to a depth of not less than 450 mm (18 in.) measured from all points of the elbow, or by concrete encasement not less than 50 mm (2 in.) thick.
2. ***Fixed Equipment: General.*** Under any of the following conditions, exposed noncurrent-carrying metal parts of fixed equipment, which are likely to become energized, shall be connected to an equipment grounding conductor
 - a. Where equipment is supplied by means of a wiring method that provides an equipment grounding conductor except as noted in 1. above.
 - b. Where equipment is located in a wet or damp location and is not isolated.
 - c. Where equipment is located within 2.5 m (8 ft) vertically and 1.5 m (5 ft) horizontally of grounded objects or ground and within reach of persons.
 - d. Where equipment is in a hazardous location.
 - e. Where equipment operates with any terminal at more than 150 V to ground.
 - f. The following are exceptions to these rules requiring grounding connections:
 - (1) Metal frames of electrically heated appliances, exempted by special permission, in which case these metal frames shall be permanently and effectively insulated from ground
 - (2) Transformers and capacitor cases and other distribution apparatus mounted on wooden poles at a height of more than 2.5 m (8 ft) from the ground
 - (3) Listed equipment protected by a system of double insulation, or its equivalent, is not required to be grounded. Where such a system is used, the equipment shall be distinctively marked.
3. ***Fixed Equipment: Specific.*** Exposed noncurrent-carrying metal parts of the kinds of equipment listed in *a* through *k*, and enclosures listed in *l* and *m* even where not exposed, shall be connected to the equipment grounding conductor regardless of voltage:

- a.* Switchboard frames and structures supporting switching equipment, except that frames of 2-wire dc switchboards need not be grounded where effectively insulated from ground.
 - b.* Generator and motor frames in an electrically operated pipe organ unless effectively insulated from ground and the motor driving it.
 - c.* Frames of motors as specified in Sec. 430.242 of the Code.
 - d.* Enclosures for motor controllers unless attached to ungrounded portable equipment.
 - e.* Electric equipment of elevators and cranes.
 - f.* Electric equipment in commercial garages, theaters, and motion-picture studios, except pendant lampholders on circuits of not more than 150 V to ground.
 - g.* Electric signs, outline lighting, and associated equipment.
 - h.* Motion-picture projection equipment.
 - i.* Equipment supplied by Class 1 circuits shall be grounded unless operating at less than 50 V. Equipment supplied by Class 1 power-limited circuits, by Class 2, and Class 3 remote-control and signaling circuits and by fire alarm circuits shall be grounded when Part II or VIII of Article 250 of the Code requires system grounding of those circuits.
 - j.* Luminaires (lighting fixtures) as provided in Part V of Article 410 of the NEC.
 - k.* Permanently mounted electrical equipment and skids on skid-mounted equipment grounded with an equipment bonding jumper sized per 250.122.
 - l.* Motor-operated water pumps including the submersible type.
 - m.* Metal well casings where a submersible pump is used shall be bonded to the pump circuit equipment grounding conductor.
- 4. Nonelectrical Equipment.** The following metal parts shall be connected to the equipment grounding conductor:
- a.* Frames and tracks of electrically operated cranes and hoists
 - b.* The metal frame of a nonelectrically driven elevator car to which electric conductors are attached
 - c.* Hand-operated metal shifting ropes or cables of electric elevators
- NOTE If extensive metal in or on buildings may become energized and is subject to personal contact, adequate bonding and grounding will provide additional safety.
- 5. Equipment Connected by Cord and Plug.** Under any of the following conditions, exposed noncurrent-carrying metal parts of cord- and plug-connected equipment which are likely to become energized shall be connected to the equipment grounding conductor:
- a.* In hazardous locations (see Articles 500 to 517 of the Code).

Exception. Listed tools, listed appliances, and listed equipment covered in “b” through “d” and protected by a system of double insulation or its equivalent need not be grounded. Where such a system is employed, the equipment shall be distinctively marked.

- b.* Where operated at more than 150 V to ground, except:
 - (1) Motors, where guarded
 - (2) Metal frames of electrically heated appliances exempted by special permission, in which case the frames shall be insulated from ground.
 - c.* In residential occupancies, (1) refrigerators, freezers, and air conditioners; (2) clothes-washing, clothes-drying, and dish-washing machines, waste disposers, information technology equipment, sump pumps, and electrical aquarium equipment; and (3) hand-held, motor-operated tools and motor-operated appliances of the following types: hedge clippers, lawn mowers, snowblowers, and wet scrubbers; and (4) portable hand lamps.
- Portable tools or appliances are not intended to be used in damp, wet, or conductive locations unless they are grounded, double-insulated, or supplied by an isolation transformer.

- d.* In other than residential occupancies, (1) refrigerators, freezers, and air conditioners; (2) clothes-washing, clothes-drying, and dish-washing machines, information technology equipment, sump pumps, and electrical aquarium equipment; (3) hand-held, motor-operated tools, stationary and fixed motor-operated tools, and light-industrial motor-operated tools; (4) motor-operated appliances of the following types: hedge clippers, lawn mowers, snowblowers, and wet scrubbers; (5) portable hand lamps; (6) cord- and plug-connected appliances used in damp or wet locations or by persons standing on the ground or on metal floors or working inside metal tanks or boilers; (7) tools that are likely to be used in wet and conductive locations.

Exception. Tools and portable hand lamps that are likely to be used in wet and conductive locations need not be grounded when supplied through an isolating transformer with an ungrounded secondary of not over 50 V.

354. The types of wiring systems required to have a system ground are as follows:

1. Two-wire dc systems of not more than 300 V supplying premises wiring unless the system supplies industrial equipment in limited areas and is equipped with a ground detector as described in Div. 1. A system operating at 50 V or less between conductors need not be grounded.
Rectifier-derived dc systems supplied by an ac system complying with Sec. 250.20 of the Code and dc fire alarm circuits having a maximum current of 0.030 A need not be grounded.
2. Three-wire dc systems supplying premises wiring.
3. AC systems, provided the grounded conductor can be so arranged that the maximum voltage to ground is between 50 and 150 V. Systems that are three-phase wye-connected with the neutral conductor used as a current-carrying conductor must be grounded, and three-phase delta-connected systems where the midpoint of one phase winding is used as a circuit conductor, must be grounded. Any uninsulated service conductor must be grounded. AC systems of 1 kV and higher must be grounded when they are used to supply mobile or portable equipment. High-impedance grounded systems are permitted as in Sec. 356.
4. AC systems of less than 50 V if supplied by transformers from systems of more than 150 V to ground, or if the transformer supply system is ungrounded, or if run overhead outside buildings.
5. AC systems of 50 to 1000 V supplying premises wiring of the following types are not required to be grounded; in all instances such ungrounded systems must employ ground detectors:
 - a.* Electric systems used exclusively to supply industrial electric furnaces for melting, refining, tempering, and the like.
 - b.* Separately derived systems used exclusively for rectifiers supplying only adjustable-speed industrial drives.
 - c.* Separately derived systems supplied by transformers that have a primary voltage rating less than 1000 V, provided that all the following conditions are met:
 - (1) The system is used exclusively for control circuits.
 - (2) The conditions of maintenance and supervision assure that only qualified persons will service the installation.
 - (3) Continuity of control power is required.
 - d.* Other systems not required to be grounded in accordance with item (3) above.

355. Circuits which must not be grounded. Circuits for electric cranes operating over combustible fibers in Class III hazardous locations as provided in 503.13 of the NEC (refer to Sec. 383 for description of hazardous locations), isolated circuits in health care facilities, and circuits to electrolytic cells and secondary circuits of lighting systems as provided in 411.5(A) of the NEC.

356 High-impedance grounded-neutral systems (Adapted from Practical Electrical Wiring, 20th ed., © Park Publishing, 2008, all rights reserved) combine the best features of the ungrounded systems in terms of reliability, and the best features of the grounded systems in terms of their ability to dissipate energy surges due to their grounding connection. This procedure is covered in NEC 250.36.

These systems behave like ungrounded systems in that the first ground fault will not cause an overcurrent device to operate. Instead, alarms required by NEC 250.36(2) will alert qualified supervisory personnel. Remember, a capacitor is two conductive plates separated by a dielectric. A plant wiring system consists of miles and miles of wires, all of which are separated by their insulation. This means that a plant wiring system is a giant though very inefficient capacitor, and it will charge and discharge 120 times each second. The resistance is set such that the current under fault conditions is only slightly higher than the capacitive charging current of the system. Since a fault will often continue until an orderly shutdown can be arranged, the resistor must be continuously rated to handle this duty safely.

As shown in Fig. 9.254, the grounding impedance must be installed between the system neutral and the grounding electrode conductor. Where a system neutral is not available, the grounding impedance must be installed between the neutral derived from a grounding transformer and the grounding electrode conductor. The neutral conductor between the neutral point and the grounding impedance must be fully insulated. Size it at 8 AWG minimum. This size is for mechanical concerns; the actual current is on the order of 10 A or less.

Contrary to the normal procedure of terminating a neutral at a service disconnecting means enclosure, when the system is high-impedance grounded, the grounded conductor is prohibited from being connected to ground except through the grounding impedance. In addition, the neutral conductor connecting the transformer neutral point to the grounding impedance is not required to be installed with the phase conductors. It can be installed in a separate raceway to the grounding impedance. The normal procedure (usually performed by the utility) of adding a grounding electrode outside the building at the source of a grounded system (should one be used as the energy source for an impedance-grounded system) must *not* be observed, because any grounding currents returning through the earth to the outdoor electrode will bypass and therefore desensitize the monitor.

An equipment bonding jumper must be installed unspliced from the first system disconnecting means or overcurrent device to the grounded side of the grounding impedance. The grounding electrode conductor can be attached at any point from the grounded side of the grounding impedance to the equipment grounding connection at the service equipment of the first system disconnecting means.

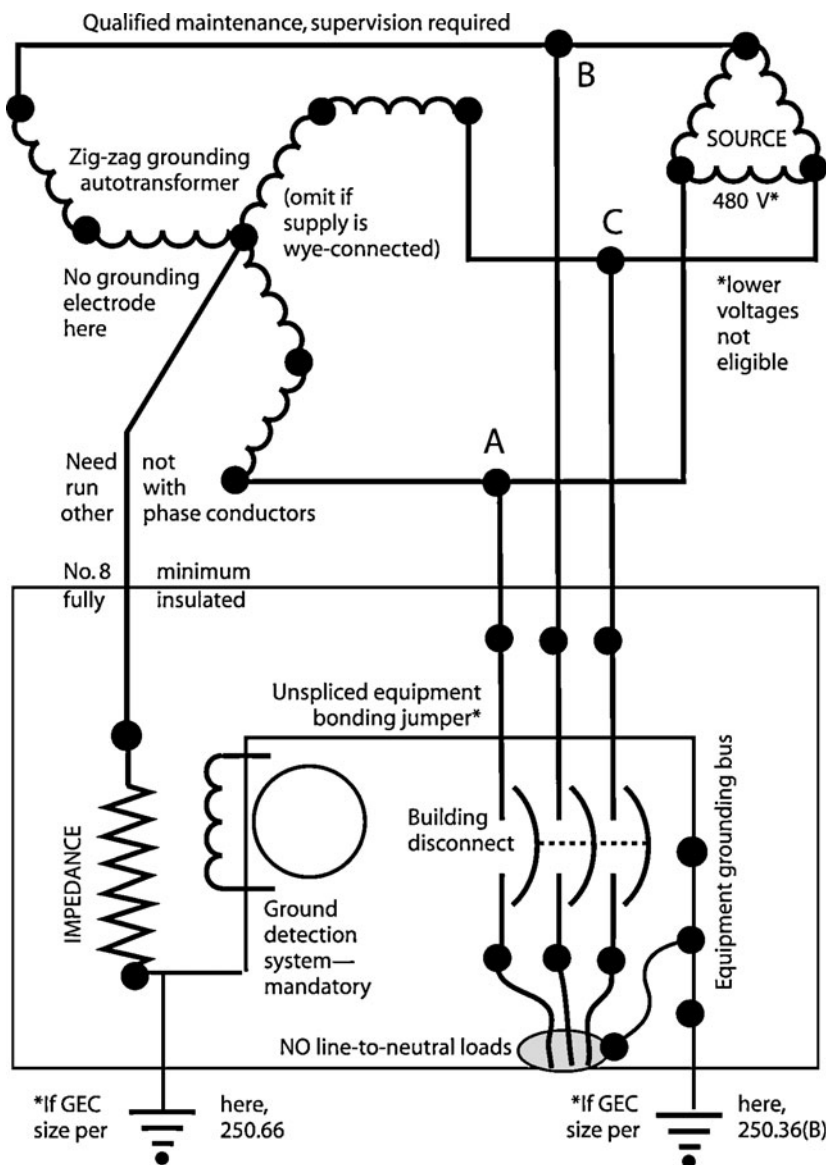


FIGURE 9.254 This drawing shows a likely retrofit on a formerly ungrounded installation, with its neutral conductor created through a zig-zag grounding autotransformer. Note that the size of the equipment bonding jumper depends on the end to which the grounding electrode conductor is connected. A connection at the line (left) end makes the bonding jumper a functional extension of the grounding electrode conductor, and it must be sized accordingly. A connection at the load (right) end makes the bonding jumper a functional extension of the neutral, normally sized at 8 AWG.

357. Location of the system ground (Fig. 9.255)

1. For off premise dc systems the ground must be at the supply station and nowhere else.
2. For ac systems there must be a ground at the secondary of the transformer supplying the system. There must be another ground at each building service to the grounded service conductor at an accessible point from the point of connection of the service drop or service lateral conductor to the service disconnecting means.

3. For multiple buildings served by a single service in one of them, and with other buildings supplied by feeders or branch circuits or both, the system ground must be located at the service. System grounding connections are generally prohibited at all electrically downstream locations from the service connection. Instead, an equipment grounding conductor run with the other supply circuit conductors provides the grounding protection for wiring and equipment in each building. For "existing premises wiring systems only," a special exception allows downstream system grounding connections, provided there are no parallel metallic return paths that would allow current that should flow over the grounded circuit conductor to instead return to the service through other paths. Examples include an equipment grounding conductor, including a wiring method to the second building that is itself an equipment grounding conductor, such as rigid metal conduit. In such a case a system grounding connection in the second building would send normal circuit current through the conduit in parallel with the enclosed grounded circuit conductor (usually a neutral). Another example would be a metallic water piping system common to both buildings; since such systems must be bonded to the grounding systems in each building the water pipes would become parallel conductors for the same reason.

4. For a separately derived system the common main grounding conductor shall be made at the transformer, generator, or other source of supply or at the switchboard, panelboard, or other disconnecting means location, on the supply side of the first switch controlling the system.

358. The conductor to be grounded. For alternating-current premises-wiring systems the conductor to be grounded shall be as follows:

1. Single-phase two-wire: the grounded-circuit conductor
2. Single-phase three-wire: the neutral conductor
3. Multiphase systems having one wire common to all phases: the common conductor
4. Multiphase systems where one phase is grounded; one phase conductor
5. Multiphase systems in which one phase is used as in Par. 2: the neutral conductor

Grounded conductors shall be identified by the means specified in Article 200 of the NEC.

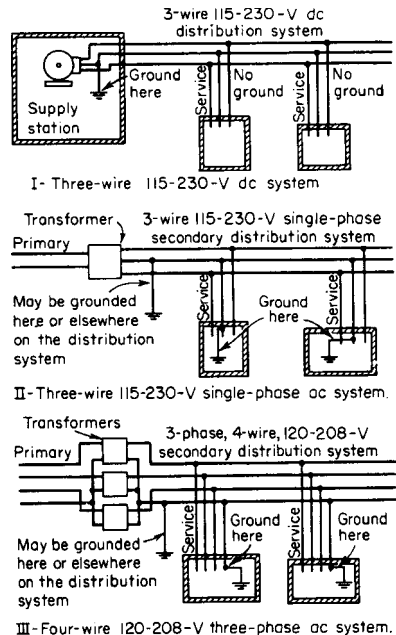


FIGURE 9.255 Location of system grounds.

359. The noncurrent-carrying metallic parts of fixed equipment are considered to be satisfactorily grounded under any one of the following conditions (fixed equipment includes boxes, cabinets, and fittings):

1. They are metallically connected to grounded cable armor or the grounded metal enclosure of conductors in accordance with the applicable provisions of Sec. 250.118 for the wiring method employed.
2. By a grounding conductor run with circuit conductors, this conductor may be uninsulated, but if an individual covering is provided for this conductor, it shall be finished to show a green color.
3. DC electrical equipment secured to and in contact with the grounded structural metal frame of a building may be considered to be grounded; this option is prohibited for ac equipment. On dc circuits, the equipment grounding conductor may run in a separate location than the circuit conductors. Equipment grounding conductors added as part of modern wiring extended from older circuits that have no equipment grounding conductor available may be connected to a remote grounding location as provided in NEC 250.130(C). In such cases the equipment grounding conductor may, of necessity, run apart from the circuit conductors.
4. Metal car frames supported by metal hoisting cables attached to or running over metal sheaves or drums of elevator machines shall be deemed to be grounded if the machine is grounded in accordance with 250.134 of the Code.

360. Portable and/or cord- and plug-connected equipment. The noncurrent-carrying metal parts of cord- and plug-connected equipment required to be grounded may be grounded in one of the following two ways:

1. By means of a grounding conductor run with the power supply conductors in a cable assembly or flexible cord that is properly terminated in a grounding-type attachment plug having a fixed grounding contact.

Exception. The grounding contacting pole of grounding-type ground-fault circuit interrupters may be of the moveable self-restoring type on circuits operating not over 150 V between any two conductors or over 150 V between any conductor and ground.

2. A separate flexible wire or strap, insulated or bare, connected to an equipment grounding conductor and protected as well as practicable against physical damage may be used where part of the equipment.

361. Bonding at service equipment. The electrical continuity of the grounding circuit for the following equipment and enclosures shall be assured by one of the means given in Sec. 362.

1. The service raceways, cable trays, or service cable armor or sheath, except as provided in Sec. 250.84 of the Code for underground service cable
2. All service equipment enclosures containing service-entrance conductors, including meter fittings, boxes, or the like, interposed in the service raceways or armor

362. Continuity at service equipment. Electrical continuity at service equipment shall be assured by one of the following means:

1. Bonding equipment to the grounded service conductor in a manner provided in Sec. 250.8 of the Code
2. Threaded couplings and threaded bosses on enclosures with joints made up wrenchtight
3. Threadless couplings and connector made up tight for rigid and intermediate metal conduit metal-clad cables, and electrical metallic tubing
4. Other listed devices such as bonding locknuts and bushings, or bushings with bonding jumpers

Bonding jumpers meeting the other requirements of NEC Article 250 shall be used around concentric or eccentric knockouts which are punched or otherwise formed so as to impair the electric connection to ground. Standard locknuts or bushings shall not be the sole means used for the bonding required by this section.

363. Intersystem bonding termination provisions must be made at service locations to connect bonding and grounding conductors from other systems, such as telephone and CATV systems. These provisions must also be made at the main disconnecting means for each other building on the premises. The bonding means must be external to service or building disconnect enclosures, accessible for inspections and for system connections, and it must allow for no fewer than three such system connections. It must be so installed that any enclosure on which it is installed, if any, can still be opened for inspection or maintenance. The intersystem bonding termination may be any of the following three items:

- a. A set of terminals listed as grounding and bonding equipment and securely mounted to the meter socket, and electrically connected thereto
- b. A bonding bar near the service equipment enclosure, meter enclosure, or raceway for service conductors, and connected to the equipment grounding bar for the service disconnect or building disconnect as applicable with a bonding conductor not smaller than 6 AWG copper
- c. A bonding bar near the grounding electrode conductor, and connected to the grounding electrode conductor with a bonding conductor not smaller than 6 AWG copper

Existing buildings and structures with comparable intersystem bonding means already installed may continue to use those earlier methods.

364. The equipment and conductor-enclosure ground should be located as close to the service entrance or source of supply as practicable. This ground must be so located that no system is grounded through a grounding electrode conductor smaller than required by Table 366. A common method is to run the grounding electrode conductor from the service-switch enclosure. As far as practicable, all other equipment is then connected to ground by electrically continuous conductor enclosures or by separate equipment grounding conductors from the service switch. Bonding jumpers or ground wires are used to connect isolated equipment to grounded equipment. Figure 9.256 shows a single common grounding conductor which grounds a grounded system and the metallic equipment of both an ungrounded system and the grounded system.

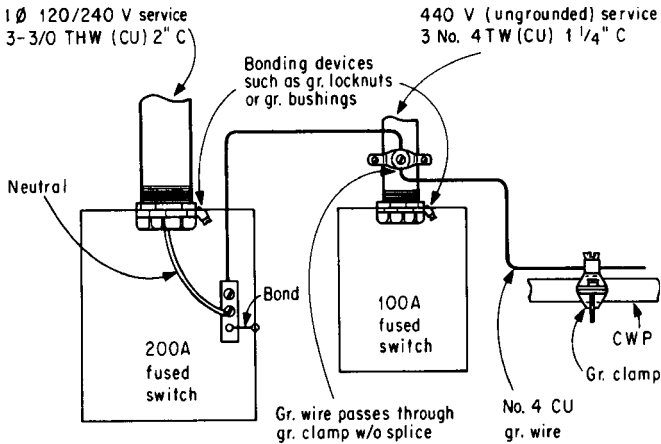


FIGURE 9.256 A single grounding conductor for grounded and ungrounded systems.

365. Rules for sizing system grounding conductors

1. For dc systems: not smaller than the largest conductor supplied by the system and in no case smaller than No. 8. An exception to this rule is a system supplied by a balancer set. In such installations, if the grounded circuit conductor is a neutral derived from a balancer winding or a balancer set with overcurrent protection in accordance with 445.12(D) of the NEC, the size of the grounding electrode conductor shall not be less than that of the neutral conductor but in no case smaller than No. 8.
2. For ac systems and service equipment as follows:
 - a. The size of the grounding electrode conductor for an ac system shall not be less than is given in Sec. 366.
 - b. If the wiring system is not grounded at the premises, the size of a grounding conductor for a service raceway, for the metal sheath or armor of a service cable, and for service equipment shall be not less than is given in Sec. 366.
 - c. Grounding electrode conductors run to the three categories of grounding electrodes below need not be larger than that given by the following specific provisions, whether the system is ac or dc:
 - (1) Where connected to rod, pipe, or plate electrodes that portion of the grounding electrode conductor connected solely to such an electrode need not be larger than 6 AWG.
 - (2) Where connected to a concrete-encased electrode, that portion of the grounding electrode conductor connected solely to such an electrode need not be larger than 4 AWG.
 - (3) Where connected to a ground ring, that portion of the grounding electrode conductor connected solely to such an electrode need not be larger than the conductor that comprises the ground ring.

366. Sizing Grounding Electrode Conductors for AC Systems*

(Table 250.66, 2008 NEC)

Size of largest service-entrance conductor or equivalent for parallel conductors, [†] AWG or 1000 cmil		Size of grounding electrode conductor, AWG or 1000 cmil	
Copper	Aluminum or copper-clad aluminum	Copper	Aluminum or copper-clad aluminum [‡]
2 or smaller	1/0 or smaller	8	6
1 or 1/0	2/0 or 3/0	6	4
2/0 or 3/0	4/0 or 250 kcmil	4	2
Over 3/0	Over 250 kcmil	2	1/0
through 350 kcmil	through 500 kcmil		
Over 350 kcmil	Over 500 kcmil	1/0	3/0
through 600 kcmil	through 900 kcmil		
Over 600 kcmil	Over 900 kcmil	2/0	4/0
through 1100 kcmil	through 1750 kcmil		
Over 1100 kcmil	Over 1750 kcmil	3/0	250 kcmil

*Reprinted with permission from NFPA 70-2008 National Electrical Code®, © 2007, National Fire Protection Association, Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

[†]This table also applies to the derived conductors of a separately derived ac system.

[‡]See installation restrictions in Sec. 250.64(A) of the NEC.

NOTE Where there are no service-entrance conductors, the size of the grounding electrode conductor shall be determined by the equivalent size of the largest service-entrance conductor required for the load to be served. Where multiple sets of service-entrance conductors are used as permitted in Sec. 230.40, Exception No. 2, of the NEC, the equivalent size of the largest service-entrance conductor shall be determined by the largest sum of the areas of the corresponding conductors of each set.

367. Size of Equipment Grounding Conductors for Grounding Raceway and Equipment*

(Table 250.122, 2008 NEC)

Rating or setting of automatic overcurrent device in circuit ahead of equipment, conduit, etc., A not exceeding:	Size of wire, AWG or 1000 cmil	
	Copper	Aluminum or copper-clad aluminum†
15	14	12
20	12	10
30	10	8
40	10	8
60	10	8
100	8	6
200	6	4
400	3	1
600	1	2/0
800	1/0	3/0
1000	2/0	4/0
1200	3/0	250 kcmil
1600	4/0	350 kcmil
2000	250 kcmil	400 kcmil
2500	350 kcmil	600 kcmil
3000	400 kcmil	600 kcmil
4000	500 kcmil	800 kcmil
5000	700 kcmil	1200 kcmil
6000	800 kcmil	1200 kcmil

*Reprinted with permission from NFPA 70-2008, National Electrical Code®, © 2007, National Fire Protection Association, Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

†See installation restrictions of Sec. 250.120 of the NEC.

NOTE Equipment grounding conductors may need to be sized larger than specified in this table in order to comply with Sec. 250.4(A)(5) or (B)(4) of the NEC.

368. NEC specifications for the material and installation of grounding conductors are as follows:

1. Material

- a. For grounding electrode conductor.* The grounding electrode conductor of a wiring system shall be of copper, aluminum, or copper-clad aluminum. The material selected shall be resistant to any corrosive condition existing at the installation, or shall be suitably protected from corrosion. Aluminum and copper-clad aluminum conductors must not be used in direct contact with the earth or masonry, and where used outside, these conductors must not be terminated within 450 mm (18 in.) of the earth. The conductor may be solid or stranded, insulated, covered or bare. The grounding electrode conductor must be without joint or splice throughout its length, unless it is spliced using exothermic welding or irreversible compression connectors. Busbar sections are permitted to be bolted together for obvious reasons.

If there are multiple service enclosures, the unbroken conductor rule applies to the conductor that runs to the general service location. If the service consists of two to

six disconnects supplied from separate service laterals joined only at their supply ends in accordance with NEC 230.2 and 230.40 Exception No. 2, or connected to separate sets of service entrance conductors extending from a single service drop or lateral in accordance with 230.40 Exception No. 2, the grounding electrode conductor will be arranged with taps extending into each service enclosure. In this case the tap connections shall be made using exothermic welds or with connectors listed as suitable for grounding and bonding, and those taps must leave the common grounding electrode conductor without a joint or splice. If multiple service enclosures are supplied from a common location, such as a wireway above the multiple enclosures, the grounding electrode conductor will run to this enclosure and taps will extend into each enclosure using connectors listed for grounding and bonding connections, or the exothermic welding process can be used. If desired, separate grounding electrode conductors may be run to the grounding electrode system from each disconnecting means.

b. For conductor enclosures and equipment only. The equipment grounding conductor for equipment and for conduit and other metal raceways or enclosures for conductors may be a conductor of copper, aluminum, or copper-clad aluminum, stranded or solid, insulated, covered or bare, in the form of a wire or busbar of any shape, or one of thirteen qualifying wiring methods, as follows:

- (1) Rigid metal conduit
- (2) Intermediate metal conduit
- (3) Electrical metallic tubing
- (4) Flexible metal conduit, provided it and its fittings are listed, and the overcurrent protection ahead of any circuit contained in the run does not exceed 20 A. The flexible metal conduit must not be installed where flexibility is required after the installation is complete, such as for vibration isolation or connections to moveable equipment. The total length of flexible raceways covered in items (4), (5), and (6) of this list cannot exceed 1.8 m (6 ft) in any equipment grounding return path. The wiring method can be used for larger or longer applications, but a wire in accordance with the first paragraph above must be added.
- (5) Liquidtight flexible metal conduit, provided it and its fittings are listed, and the overcurrent protection ahead of any circuit contained in the run does not exceed 20 A in the metric designator 12 through 16 (trade size $\frac{3}{8}$ through $\frac{1}{2}$) sizes, and 60 A in the metric designator 21 through 35 (trade sizes $\frac{3}{4}$ through $1\frac{1}{4}$) sizes. The liquidtight flexible metal conduit must not be installed where flexibility is required after the installation is complete, such as for vibration isolation or connections to moveable equipment. The total length of flexible raceways covered in items (4), (5), and (6) of this list cannot exceed 1.8 m (6 ft) in any equipment grounding return path. The wiring method can be used for larger or longer applications, but a wire in accordance with the first paragraph above must be added.
- (6) Flexible metal tubing, provided it and its fittings are listed, and the overcurrent protection ahead of any circuit contained in the run does not exceed 20 A. The total length of flexible raceways covered in items (4), (5), and (6) of this list cannot exceed 1.8 m (6 ft) in any equipment grounding return path. The wiring method can be used for larger or longer applications, but a wire in accordance with the first paragraph above must be added.
- (7) Armor of type AC cable, where manufactured so as to provide a suitable fault return path in accordance with NEC 320.108.
- (8) The copper sheath of mineral-insulated, metal-sheathed cable.
- (9) Type MC cable where listed and identified for grounding using one of the two possible approaches. For the interlocking-metal tape form, the armor

and grounding conductor in combination are evaluated. For the smooth and corrugated tube forms the metallic sheath is evaluated, together with any enclosed grounding conductors if any and as required to meet the required performance criteria.

- (10) Cable trays as permitted in NEC 392.3 and 392.7.
- (11) Cablebus framework as permitted in 370.3.
- (12) Other listed electrically continuous metal raceways and listed auxiliary gutters.
- (13) Surface metal raceways listed for grounding.

All bolted and threaded connections at joints and fittings shall be made tight by the use of suitable tools.

2. Installation

a. Grounding electrode conductor. A grounding electrode conductor, 4 AWG or larger, may be attached to the surface on which it is carried without the use of knobs, tubes, or insulators. It need not have protection unless exposed to severe physical damage. A 6 AWG grounding conductor, which is free from exposure to physical damage, may be run along the surface of the building construction without metal covering or protection when it is securely fastened to the construction; otherwise it shall be in rigid metal conduit, intermediate metal conduit, rigid nonmetallic conduit, electrical metallic tubing, or cable armor. Grounding conductors smaller than No. 6 shall be in rigid metal conduit, intermediate metal conduit, rigid nonmetallic conduit, electrical metallic tubing, or cable armor. Ferrous metal enclosures for grounding conductors shall be electrically continuous from the point of attachment to cabinets or equipment to the grounding electrode and shall be securely fastened to the ground clamp or fitting. Ferrous metal enclosures which are not physically continuous from cabinet or equipment to the grounding electrode shall be made electrically continuous by bonding each end to the grounding conductor. Where a raceway is used as protection for a grounding conductor, the installation shall comply with the appropriate raceway article of the Code.

The requirement to bond both ends of ferrous metal enclosures is critical for grounding electrode conductors in ac systems because the current only goes one way, so there is no opportunity for magnetic field cancellation. Any current will attempt to flow over the outer perimeter of the wiring method, which in this case would be the steel conduit. Actual testing shows, for example, that with a 100 ft run of 3/4-in rigid metal conduit enclosing 6 AWG copper wire, if 100 A is flowing through this system, 97 A will be flowing through the raceway, and only 3 A will flow over the copper wire. If this natural process is obstructed through a failure to bond both ends, the 100 A will flow through the wire, but at over double the impedance.

b. Conductor enclosures and equipment only. An equipment grounding conductor for conductor enclosures and equipment must run with or enclose the associated circuit conductors, with two exceptions. DC circuit equipment grounding conductors may be run in separate locations. Equipment grounding conductors installed to provide grounding connections for receptacles added to or replaced on, or branch-circuit extensions made from branch circuits that do not contain an equipment grounding conductor must connect to the grounding electrode system or to suitable grounding terminations in upstream panelboards, etc. These conductors are often fished through walls, and where so located away from sources of physical damage, they may run without a raceway enclosure regardless of the conductor size. If an equipment grounding conductor does run in the open for any reason, it is subject to the size and raceway protection rules that apply to grounding electrode conductors, as covered in **a** above.

369. Cord-connected equipment (National Electrical Code). The equipment grounding conductor in flexible cord must not be smaller than 18 AWG and not smaller than the circuit conductors for all cord assemblies up to and including 10 AWG conductors. Cord assemblies with larger conductors are permitted to have the size of the equipment grounding conductor reduced in size, but not smaller than the size shown in Table 367.

370. Grounding electrode system. If present on the premises at each building or structure served, each item Nos. 1. through 7. shall be bonded together to form the grounding electrode system. The bonding jumpers shall be sized in accordance with Sec. 365, installed in accordance with Sec. 368 (2a) and shall be connected in the manner specified in Sec. 372. However, for an existing building, a concrete-encased electrode does not have to be made part of the grounding electrode system where the reinforcing steel is not accessible without disturbing the concrete.

Metal underground gas-piping systems and aluminum electrodes of any form shall not be used in a grounding electrode system. Where practicable, rod, pipe, or plate electrodes shall be embedded below permanent-moisture level, and they shall be free from nonconductive coatings, such as paint or enamel. If more than one electrode system is used (including systems used for lightning rods), each electrode of one grounding system shall not be less than 1.83 m (6 ft) from any other electrode of another grounding system. Two or more electrodes that are effectively bonded together are to be treated as a single grounding electrode system in this sense. This rule pertains to the electrodes of different systems so they can function as designed. It does not prohibit bonding different systems together, and the NEC specifically requires that lightning protection system grounding terminals shall be bonded to the premises wiring grounding electrode system.

Rod, pipe, or plate electrodes shall, if practicable, have a resistance to ground not to exceed 25 Ω . If the resistance is not as low as 25 Ω , an additional electrode connected in parallel shall be used. Such additional electrodes must be spaced not less than 1.8 m (6 ft) apart. If two such electrodes in parallel result in a net resistance to ground in excess of 25 Ω , however, the NEC does not require any additional steps to decrease the resistance to ground. Continuous metallic underground water systems, particularly those using cast iron street mains, in general have a resistance to ground of less than 3 Ω . Metal frames of buildings and local metallic underground piping systems, metal well casings, and the like have, in general, a resistance substantially below 25 Ω .

1. A metal underground water pipe in direct contact with the earth for 3 m (10 ft) or more (including any metal well casing bonded to the pipe) and electrically continuous (or made electrically continuous by bonding around insulating joints or sections or insulating pipe) to the points of connection of the grounding electrode conductor and the bonding conductors. Continuity of the grounding path or the bonding connection to interior piping shall not rely on water meters or filtering devices and similar equipment. A metal underground water pipe shall be supplemented by an additional electrode of a type specified in Pars. 2 through 8. Interior metal water piping located more than 1.52 m (5 ft) from the point of entrance to the building shall not be used as a part of the grounding electrode system in some cases. In industrial, institutional, and commercial occupancies only, an exception allows remote connections to the water piping system, provided there is qualified maintenance and supervision, and provided the entire length of water pipe used in the connection to earth is exposed other than incidental short sections passing directly through walls, ceilings, etc. Note that the area above a suspended ceiling with removable panels is exposed within the NEC definition.

2. The metal frame of the building, where connected to earth in one or more of the following methods: (a) A 3.0 m (10 ft) length of structural steel is in direct contact with earth, or encased in concrete that is in direct contact with earth; or (b) connected to a concrete-encased electrode as in Par. 3 below or to a ground ring as in Par. 4 below; or (c) bonded to rod, pipe, or plate electrodes as covered in Par. 5 or Par. 7 below that meet the resistance provisions given at the end of this section; or (d) connected using some other means that has been approved by the authority having jurisdiction.
3. An electrode encased by at least 50 mm (2 in.) of concrete, located horizontally within and near the bottom of a concrete foundation or footing, or vertically within that portion of a concrete foundation or footing that is in direct contact with the earth, consisting of at least 6 m (20 ft) of one or more bare or zinc galvanized or other electrically conductive coated steel reinforcing bars or rods of not less than 13 mm ($1/2$ -in) diameter or consisting of at least 6.0 m (20 ft) of bare copper conductor not smaller than No. 4 AWG. If multiple such electrodes are present, it is sufficient to make connections to only one of them. If no reinforcing steel is present at the bottom of a foundation, there is no requirement to add this electrode. However, it is one of the very best electrodes, and even with no steel in the footing, if the timing can be worked out, the alternative of 6.0 m (20 ft) of bare copper laid into an open footing should be strongly considered. The result will be far better than rod, pipe, or plate electrodes with lower material cost and less time to install. Be sure to prop the wire up on stones or other supports so the concrete will be able to fully encase the bare copper.
4. A ground ring encircling the building or structure, in direct contact with the earth, consisting of at least 6 m (20 ft) of bare copper conductor not smaller than No. 2 AWG. It must be installed at least 750 mm (30 in.) below grade.
5. *Rod and pipe electrodes.* Rod and pipe electrodes shall not be less than 2.44 m (8 ft) in length, shall consist of the following materials, and shall be installed in the following manner:
 - a. Electrodes of pipe or conduit shall not be smaller than metric designator 21 ($3/4$ trade size) and, where of iron or steel, shall have the outer surface galvanized or otherwise metal-coated for corrosion protection.
 - b. Electrodes of stainless steel and copper or zinc coated steel rods of steel shall be at least 15.87 mm ($5/8$ in.) in diameter, unless listed and not less than 12.7 mm ($1/2$ in.) in diameter.
 - c. If rock bottom is not encountered, the electrode shall be driven to a depth of 2.5 m (8 ft). If rock bottom is encountered, the electrode may be driven at an oblique angle not exceeding 45° from the vertical. If the rock bottom does not permit the electrode to be driven as described, then the electrode shall be buried in a trench at least 750 mm ($2 1/2$ ft) deep. The upper end of the electrode shall be flush with or below ground level unless the aboveground end and the grounding electrode conductor attachment are protected against physical damage as specified in Sec. 250.10 of the NEC. Since the minimum driven distance is 2.5 m (8 ft), an above grade attachment is only possible if the electrode exceeds 8 ft in length.
6. *Other listed grounding electrodes* are permitted. These include specially fabricated and chemically enhanced electrodes featuring heavy-wall copper tubing packed with electrolytic salts that slowly percolate into the surrounding soil to reduce soil resistivity in difficult areas.
7. *Plate electrodes.* Each plate electrode shall expose not less than 0.186 m^2 (2 ft^2) of surface to exterior soil. Electrodes of iron or steel plates shall be at least 6.35 mm ($1/4$ in.) in thickness. Electrodes of nonferrous metal shall be at least 1.52 mm (0.06 in.) in thickness. They must be installed at least 750 mm (30 in.) below grade.
8. Other local metal underground systems or structures, such as piping systems, underground tanks, and underground metal well casings that are not bonded to a metal water pipe.

371. Location of connection to grounding electrode (National Electrical Code)

1. **To Water Pipes.** System or common grounding conductors shall be attached to a water-piping system on the street side of the water meter or on a cold-water pipe of adequate ampacity as near as practicable to the water service entrance to the building. If the source of the water supply is a driven well in the basement of the premises, the connection shall be made as near as practicable to the well. The point of attachment shall be accessible. If the point of attachment is not on the street side of the water meter, the water-piping system shall be made electrically continuous by bonding together all parts between the attachment and the street side of the water meter or the pipe entrance which are liable to become disconnected, as at meters, valves, and service unions.
2. **To Other Electrodes.** The grounding conductor shall be attached to other electrodes permitted in Sec. 370 at a point which will assure a permanent ground.

372. Attachment of grounding conductors (National Electrical Code)

Attachment to Wiring Components and Equipment. Connections that depend solely on solder shall not be permitted. Grounding connections must employ one of the following 8 methods:

1. Listed pressure connectors
2. Terminal bars
3. Pressure connectors listed for grounding and bonding equipment
4. The exothermic welding process
5. Machine screw-type fasteners that engage no fewer than two threads in the enclosure or are secured with a nut
6. Thread-forming machine screws that engage no fewer than two threads in the enclosure
7. Connections that are part of a listed assembly
8. Other listed means

Attachment to Electrodes. The grounding electrode conductor shall be attached to the grounding electrode by means of exothermic welding, listed lugs, listed pressure connectors, listed clamps, or other listed means, except that connections which depend upon solder shall not be used. Not more than one conductor shall be connected to the grounding electrode by a single clamp or fitting unless the clamp or fitting is of a type listed for multiple conductors. One of the following methods shall be used.

1. A listed bolted clamp of cast bronze or brass or of plain or malleable iron
2. A pipe fitting, plug, or other approved device, screwed into the pipe or into the fitting
3. For indoor telecommunications purposes only, a listed sheet-metal-strap-type ground clamp having a rigid metal base that seats on the electrode and having a strap of such material and dimensions that it is not likely to stretch during or after installation, or
4. Other equally substantial approved means

Ground Clamps. Ground clamps for use on copper water tubing and copper, brass, or lead pipe should preferably be of copper, and those for use on galvanized or iron pipe should preferably be of galvanized iron and so designed as to avoid physical damage to pipe. Ground clamps used with aluminum grounding conductors should be listed for the

purpose. Note that limitations in the listing process for clamps require that clamps that will be used on copper water tubing must be marked for this service. Clamps that will be used on reinforcing steel must be marked accordingly, including the size of the reinforcing bar(s) for which the clamp was listed. Any clamp used for direct burial in earth or where embedded in concrete must be marked "direct burial" or "DB" as the available space allows.

Protection of Attachment. Ground clamps or other fittings shall be approved for general use without protection and shall be protected from ordinary physical damage.

Figure 9.257 shows some types of grounding clamps. For the smaller ground wires, which must be enclosed in conduit, the type in Fig. 9.257, I, is used. For bare ground wire connected to a water pipe, use the type in Fig. 9.257, II. The type in Fig. 9.257, III, is for a bare wire to be attached to a ground rod.

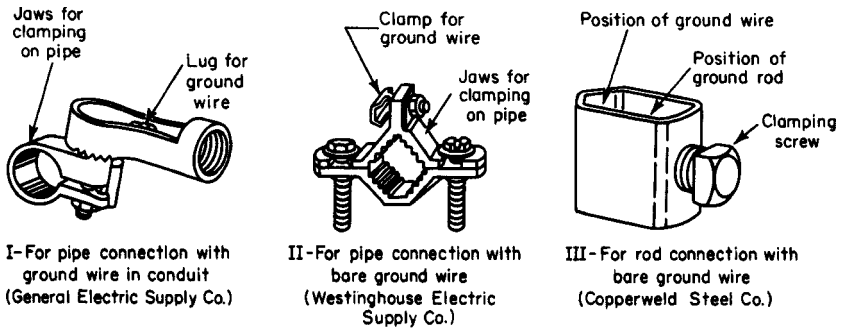


FIGURE 9.257 Ground-wire clamps.

373. On grounded wiring systems the circuit conductor which is connected to ground must be identified throughout the system. This grounded conductor is referred to as the identified conductor.

1. Insulated conductors of 6 AWG or smaller, except conductors of Type MI cable and multiconductor cables covered under Sec. 200.6(E) of the NEC, fixture wires and multiconductor varnished-cloth-insulated cables, shall have an outer identification of white or gray color along its entire length. The grounded conductors of Type MI cable shall be identified by distinctive marking at the terminals during the process of installation, as is the case for varnished cloth multiconductor cables. A single-conductor, sunlight-resistant, outdoor-rated cable used as a grounded conductor in photovoltaic power systems as permitted by Sec. 690.31 of the NEC shall be identified at the time of installation by a distinctive white marking at all terminations. Three continuous white stripes on other than green insulation is permitted. Aerial cables can be identified with the customary white or gray coloring on the grounded conductors, or they can use a ridge running along the conductor to be grounded. Multiconductor cables operating under conditions of qualified maintenance and supervision are permitted to have a colored conductor permanently identified at the time of installation by a distinctive white marking or equal.
2. Insulated conductors larger than No. 6 shall have an outer identification of white or gray color or shall be identified by distinctive white marking at terminals during the process of installation, which shall encircle the conductor. Multiconductor flat cable No. 4 or larger may employ an external ridge on the grounded conductor. Three continuous white stripes on other than green insulation is permitted.

3. Where grounded conductors of different systems are installed in a common cable, raceway, box, or other enclosure, each grounded conductor shall be identified by system. Since white and gray are both permitted color choices for a grounded conductor, this is one way to distinguish voltage systems. For example, many installations use white as the identified conductor of a 208Y/120-V system and gray as the identified conductor of a 480Y/277-V system. If additional systems are present in common enclosures, white or gray wire with a colored stripe (other than green) can be used. Whatever method is used, it must be permanently posted at each branch-circuit panelboard.

4. The continuity of a grounded circuit conductor must not depend on connections to enclosures, raceways, or cable armor. This problem frequently arises in service panelboards with multiple busbars. Figure 9.258 shows an example of the problem, and how to correct it. The NEC Committee has spent considerable effort in recent years trying to assure that normal circuit current is confined to recognized conductors, and does not pass over raceways and enclosures that were never designed to be current-carrying conductors.

5. In general, conductors colored white or gray, or colored with three continuous white stripes, or identified with white or gray markings at terminations, must be used as grounded circuit conductors and for no other purpose. There are a few limited exceptions to this principle, as follows:

- a. On circuits of less than 50 V, wires using white or gray markings may be used for other purposes, *unless system grounding is required by 250.20(A)*. Refer to Sec. 354 (4) for when this is the case. If it does apply, then the use of an identified conductor follows.
- b. On circuits of 50 V or more, a white or gray wire that is part of a cable assembly may be used as an ungrounded conductor provided it is reidentified as some color other than white or gray (or green) at all terminations and other locations where it is visible and accessible. The same procedure holds for a cable used in a switch loop, with the added proviso that the wire running to the load will not be reidentified, only the one supplying the switch, or running between 3- and 4-way switches where used. Flexible cord is also permitted to have its white or gray wires used as ungrounded conductors for appliance and equipment connections, without the necessity of reidentifying its white or gray wires.

6. For approximately 75 years (since 1923) the NEC described the customary identification rule in terms of “white or natural gray” coloring. This originally referred to the color of latex insulation and the unbleached muslin put over it. It wasn’t exactly either white or gray, but installers knew what it was. It was never intended to be the controlled color gray, and conductors manufactured in this way have not been produced for many decades. In fact, the controlled color gray could always have been used, and occasionally

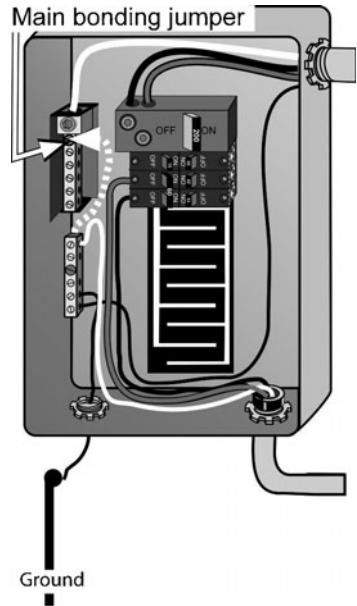


FIGURE 9.258 The feeder neutral has been terminated on the equipment grounding bus in this service panelboard. The neutral current must flow over the enclosure in order to reach the service neutral, thereby making the continuity of the grounded conductor depend on the enclosure. This is a violation of NEC 200.2(B), and the feeder neutral must be reterminated on the neutral busbar above.

was used as an ungrounded conductor. However, with the advent of 480Y/277-V systems, the controlled color gray was increasingly used as an identified conductor based on an improper interpretation of the old terminology “natural gray.” The 2002 NEC ratified what had become the convention, dropped the term “natural gray” completely, and recognized the controlled color gray as a permitted color for identified conductors for the first time. However, since gray wires were permitted, at least theoretically, for use as ungrounded conductors the NEC advises caution when working with gray wires on existing systems.

7. At the terminals of wiring devices the grounded conductor must be connected to the nickel- or zinc-colored terminal, which must have a whitish appearance in contrast to the copper or brass-colored terminals. Alternatively, the grounded terminal may be marked “W” or by the use of the word “white,” and this marking is mandatory in cases where the actual terminals are not visible and only the conductor entry hole can be seen. On screw-shell lampholders the grounded conductor must be connected to the screw shell itself. Appliances with a single-pole switching device shall have means to identify the appropriate terminal for the grounded circuit conductor (if any). No single-pole switch or circuit breaker and no fuse shall be used in a grounded conductor.

374. Identification of grounded conductors in flexible cord and fixture wire is different than for ordinary building wire. Identification for the grounded circuit conductor in flexible cord must comply with one of the following six methods:

1. A braid finished to show a white or gray color provided the braid on the other conductor(s) is finished to show readily distinguishable color(s).
2. A tracer in a braid of any color contrasting with that of the braid, and no tracer in the braid of any other conductor. No tracer shall be used in the braid of any conductor of a cord containing a conductor with a braid finished to show white or gray. Cord types C and PD, however, have the identified conductor as solid white or gray, and all other conductors with a colored tracer in the braid.
3. A white or gray insulation on one conductor and insulation of a readily distinguishable color(s) on the other conductor(s) for cords having no braids on the individual conductors. For jacketed cords furnished with appliances, one conductor having its insulation finished light blue, and with the other conductors having insulation of a readily distinguishable color other than white or gray. This limitation does not apply to cords with the insulation on the individual conductors integral with the jacket. The insulation is permitted to be covered with an outer finish to provide the desired color.
4. A white or gray separator on one conductor and a separator of a readily distinguishable solid color on the other conductor(s) of cords having insulation on the individual conductors integral with the jacket.
5. One conductor having the individual strands tinned and the other conductor(s) having the strands untinned for cords having insulation on the individual conductors integral with the jacket.
6. One or more ridges, grooves, or white stripes located on the exterior of the cord so as to identify one conductor for cords having insulation on the individual conductors integral with the jacket.

Fixture wires intended for use as grounded circuit conductors shall be identified by one or more continuous white stripes on other than green insulation, or by one of the means above for flexible cord.

375. Permitted colors for ungrounded conductors. All ungrounded conductors must be finished in black or red or any color contrasting to white, gray, or green. Where more than one nominal voltage system exists in a building, each ungrounded system conductor shall be identified by phase or line, and by system, at all termination, connection, and splice points. The specific code is left to the owner, but each panelboard must have the code in use for circuits originating in that panelboard. Alternatively, for facilities with sophisticated recordkeeping, the code can be “documented in a manner that is readily available.”

If, on a four-wire delta-connected secondary, the midpoint of one phase is grounded to supply lighting and similar loads, that phase conductor having the higher voltage to ground shall be indicated by the color orange or by tagging or other effective means at any point at which a connection is to be made if the grounded conductor is present. In addition, every switchboard and panelboard must be field marked with a warning label “Caution ___ Phase Has ___ Volts to Ground.”

SERVICE-ENTRANCE REQUIREMENTS AND INSTALLATION

376. Service entrances for the electrical system of a building may be supplied by means of overhead or underground service conductors. The source of energy for any service is an electrical utility. If the source is an on-premises source, then there is no service, only a separately derived system. A service consists of the service conductors and the service equipment. The service conductors are the conductors which supply a building with electrical energy from an electric power system outside the building. They consist of that portion of the supply conductors which extend from the street distribution main or distribution transformer to the service equipment of the building. The service conductors may be located overhead or underground. For overhead conductors the service conductors include the conductors from the last line pole to the service equipment. The service conductors of an overhead service are further classified into two parts: the service-drop conductors and the service-entrance conductors. The *service-drop conductors* are the overhead service conductors from the last line pole or other aerial support to and including the splices, if any, connecting to the service-entrance conductors at the building or other structure. The *service-entrance conductors* of an overhead service are that portion of the service conductors between the terminals of service equipment and a point usually outside the building, clear of the building walls, where they are joined by tap or splice to the service drop.

377. The service equipment must consist of an externally operated disconnecting device and overcurrent protective device. The disconnecting device must provide a readily accessible means for disconnecting all the service conductors from the source of supply. It may consist of a single switch or manually operated circuit breaker or not more than six switches or six manually operated circuit breakers. In Fig. 9.259, if there had been only six occupants in the building, the main service switch would not have been required. In multiple-occupancy buildings each occupant must have access to his or her disconnecting means except where maintenance is under continuous building management supervision. Circuit breakers may be equipped with electrical remote control, provided that the breaker has in addition a manually operable handle. The disconnecting means must be of a type which will plainly indicate whether it is in the open or the closed position. The service switch or breaker must be located as close as is feasible to the point of entrance of the service conductors to the building. It may be located either outside or inside the building. If the switch or breaker does not open the grounded conductor, other means must be provided

at the service entrance for disconnecting the grounded conductor of the supply from the interior wiring. The connection to a neutral terminal bar in the service switch will constitute a satisfactory disconnecting means.

A service switch must have a rating which is not less than the fuseholder in series with it, and the rating must be at least as great as the minimum allowable load (refer to Sec. 52 of Div. 3). Except in special cases of very small occupancies, it is not a good practice to install a service switch or circuit breaker that has a rating less than 60 A. A 30-A switch should not be used for a two-wire service supplying more than two branch circuits. A one-family dwelling shall have a service disconnecting means rated not less than 100 A, 3-wire.

Each ungrounded service conductor must be provided with overcurrent protection. The protection may consist of a single set of fuses or circuit breakers or not more than six sets of fuses or six circuit breakers. For the rating of fuses or the setting of circuit breakers, refer to Secs. 319 and 320. No overcurrent device shall be inserted in a grounded conductor, except a circuit breaker which simultaneously opens all conductors of the service. The protective devices must be be located at the same point as the disconnecting means or be located immediately adjacent thereto.

In addition to the disconnecting means and the protective devices, when the building is supplied directly from public-utility mains, the service equipment will include the kilowatt-hour meter for the measurement of power consumption. For small or multiple-occupancy buildings, the branch-circuit distribution equipment frequently is grouped along with the service equipment (see Fig. 9.259). If the service overcurrent protective devices are locked or sealed or otherwise not readily accessible, the branch-circuit overcurrent devices must be installed as close as is practicable to the load side of the service equipment. They must be in a readily accessible location and be of a lower rating than the service overcurrent device.

The construction and types of service equipment are discussed in Div. 4.

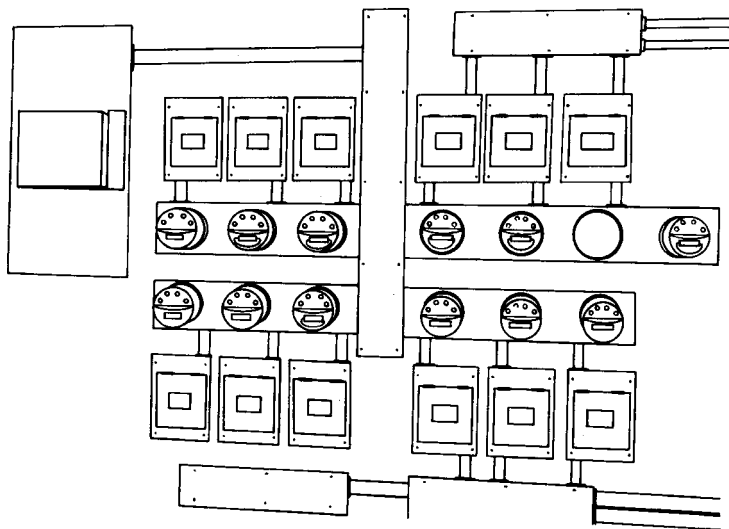


FIGURE 9.259 Arrangement of meters and service for a multitenant building.

378. There are six possible different arrangements or sequences for service equipment consisting of switch, fuses, and meter, as follows:

1. Switch-fuse-meter
2. Switch-meter-fuses
3. Fuses-switch-meter
4. Fuses-meter-switch
5. Meter-switch-fuses
6. Meter-fuses-switch

When circuit breakers are employed, there are, of course, only two possible sequences: meter–circuit breaker or circuit breaker–meter.

The proper order for placing the switch, fuses, and meter in the circuit has been the subject for much dispute and not enough standardization, each power company reserving for itself the decision on the proper method. Each method has its advantages, and it has been a matter for local decision as to which advantage seems most important to the individual power company.

379. A main service is a service which supplies more than one building under single management. If the buildings are supplied from a private distribution system, the services should be installed in accordance with the general requirements for services from a public utility. In installations which include properties with their own generating plant, the conductors running from one building to another are not considered service conductors.

The supply to each building must be separately controlled and properly protected by overcurrent devices. The control should consist of an externally operable enclosed safety switch or a circuit breaker. Refer to Div. 8, Sec. 71, topic 24 for an analysis of NEC rules covering this topic, particularly where they differ from the rules presented here on actual services. Garages and outbuildings of residences and farms come under this class of installation. Methods of meeting these requirements are illustrated in Figs. 9.260 and 9.261. The protection for each building should have a lower rating or setting than the protection at *F* in the figures, so that in case of trouble the protection of any one building will function without operating the device at *F*.

No service should supply one building from another unless they are under the same management.

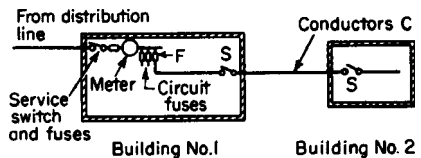


FIGURE 9.260 Two buildings under single management. No service fuses are required in building 2 if fuses *F* are of proper rating to protect conductors *C*. A switch *S* must be installed to control conductor *C*.

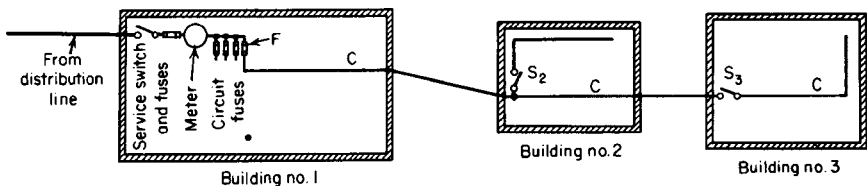


FIGURE 9.261 Three buildings under single management. If properly protected by fuses *F*, conductors *C* require no other fuse protection. A switch *S*₂ must be provided to control the wiring in building 2, and a switch *S*₃ to control the wiring in building 3. Because wire *C* is not controlled by *S*₂, it must not pass through Building no. 2.

380. No building should be supplied by more than one set of service conductors from the same secondary distribution system or from the same transformer except as follows:

1. **Fire Pumps.** If a separate service is required for fire pumps.
2. **Continuity of Power.** If a separate service is required for emergency, legally required standby, optional standby, or parallel power production systems, or systems designed for the connection of multiple sources of supply for the purposes of enhanced reliability.
3. **Capacity Requirements.** If capacity requirements make multiple services necessary, due to capacity exceeding 2000 A at a supply voltage of 600 V or less, or where the load requirements of a single-phase installation exceed what the serving agency normally supplies through one service, or in other cases by special permission from the authority having jurisdiction.
4. **Buildings of Large Area.** By special permission, if more than one service drop is necessary owing to the area over which a single building extends.

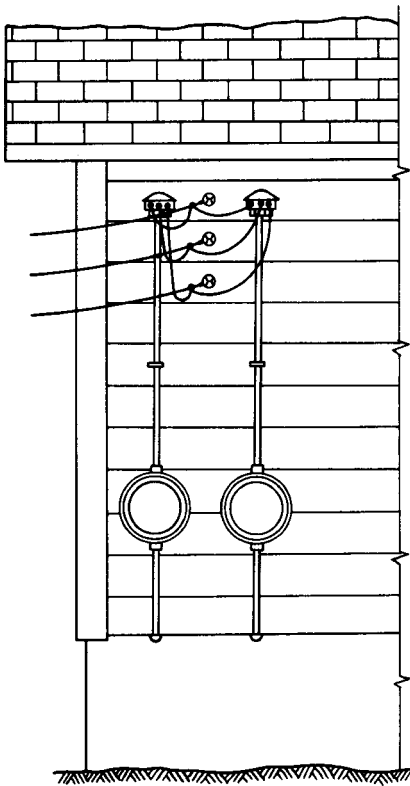


FIGURE 9.262 Two sets of service-entrance conductors tapped from one service drop.

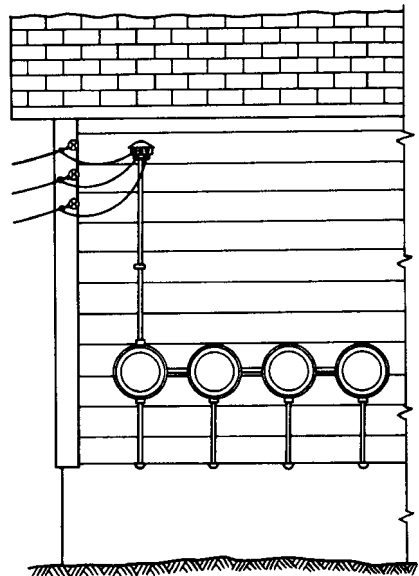


FIGURE 9.263 Four sets of service-entrance conductors tapped from one set of main service conductors.

5. **Multiple-Occupancy Buildings.** By special permission, in multiple-occupancy buildings where there is no available space for service equipment accessible to all the occupants. See Figs. 9.262 and 9.263 for multiple metering supplied by one service drop.
6. **When Additional Services Are Required for Different Classes of Use.** These include needs for different voltage, frequency, or phase or different rate schedules for different types of use of electric power.
7. Underground conductors 1/0 or larger, connected at their supply ends but not at their load ends, and serving two to six disconnecting means that are grouped in one location and that supply multiple loads are considered a single service and are therefore permitted.

Separate services may be brought into a single building for power and light, respectively, when the lighting is supplied from a separate secondary distribution main, as shown in Fig. 9.264. Separate services may be brought into a single building for power and light, respectively, if each service is supplied through a separate transformer (Fig. 9.265) or if the lighting service is supplied from one transformer of a polyphase bank of transformers supplying the power.

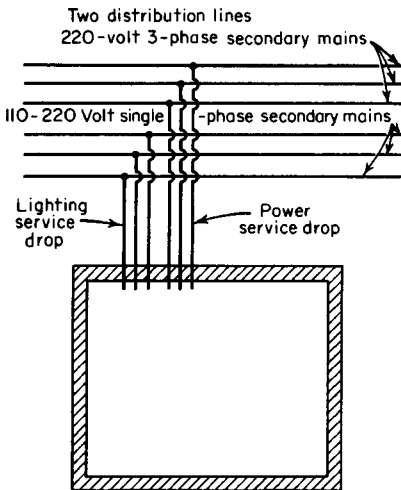


FIGURE 9.264 Separate services for power and light.

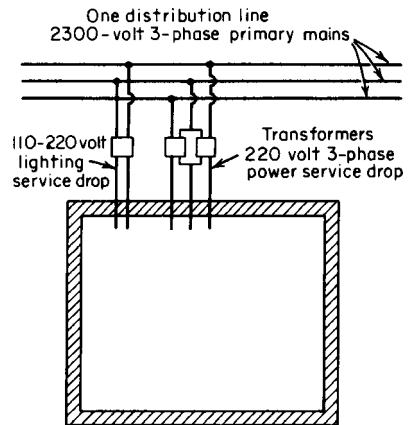


FIGURE 9.265 Separate services for power and light.

381. Size of service conductors. Service conductors must have an ampacity sufficient to supply the load of the building (refer to Div. 3) and regardless of the actual load must have an ampacity not less than that required by the minimum load requirements of Div. 3. They must have a minimum size in some cases for mechanical strength. They must also have a minimum size corresponding to the minimum rating of the service disconnecting means as required for certain specified loads. Therefore, no service conductor can be

smaller than the following (adjusted for aluminum if applicable), and may be larger if required by the actual load:

Conductors	Minimum allowable copper size
Service entrance for all installations, except ones specified below	6 AWG (to supply a 60 A minimum disconnect size using 75°C terminations)
Service entrance supplying a single branch circuit	14 AWG (to supply a 15 A minimum disconnect size)
Service entrance supplying a two-circuit installation	10 AWG (to supply a 30 A minimum disconnect size)
Service entrance supplying a single-family house	4 AWG [to supply a 100 A minimum disconnect size, using 310.15(B)(6)]
Service drop or lateral	12 AWG (overhead: hard-drawn) for a single circuit installation
Service drop or lateral	8 AWG, for other installations
Service of over 600 V	No. 6, except that in multiconductor cables No. 8 may be used

382. Splicing of service conductors. Service conductors in the form of underground service laterals and all service entrance conductors are permitted to be spliced as long as the splicing method complies with the usual rules in the NEC for general wiring of comparable size and location. The NEC does not expressly cover splices in overhead service drops, but given the other rules as long as the splice meets industry standards for strain tolerance and workmanship, it would normally be permitted subject to the judgment of the authority having jurisdiction.

383. Typical service installations of proper and improper construction are shown in Fig. 9.266. Overhead services to occupancies having relatively small loads, such as residences and small stores, are generally made with one of the installations shown in Fig. 9.266, II and III. The installation in Fig. 9.266, I, violates Code rules because the service head is not located above the point of attachment of the service-drop conductors to the building. The present trend is toward installations of the types shown in Figs. 9.266, II and III, and 9.267. A good service installation for a low-roof building is shown in Fig. 9.267. Occasionally the service switch is also mounted outside the building along with the meter.

In congested city residential districts an underground service using underground service-entrance cable is frequently run from overhead lines when a change to underground distribution is planned at a later date. This procedure facilitates the changeover, as the part of the cable which is aboveground may in the future be taken down and placed underground and run directly into the underground distribution box. In cities where the distribution is all underground, direct-burial cable or nonmetallic raceway is the most common method of running services. The advantage of the conduit system is that in case the service needs to be replaced for any reason, the cable may be pulled out of the conduit and another one installed without having to dig up the pavement or sidewalk. For apartment-house service a meter trough in which are mounted the meter sockets, one for each apartment, in one or more horizontal rows (Fig. 9.259), is installed. Directly under each meter is a branch-circuit distribution panel containing fuses or circuit breakers for the branch-circuit protection for the apartment. In some cases a service switch is provided for each apartment, and a feeder is run to the apartment with the branch-circuit distribution panel located in the apartment.

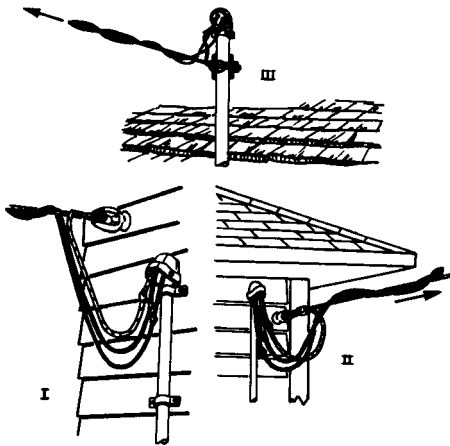


FIGURE 9.266 Various types of service installations. Drawing I violates the National Electrical Code. [Electrical Construction and Maintenance]

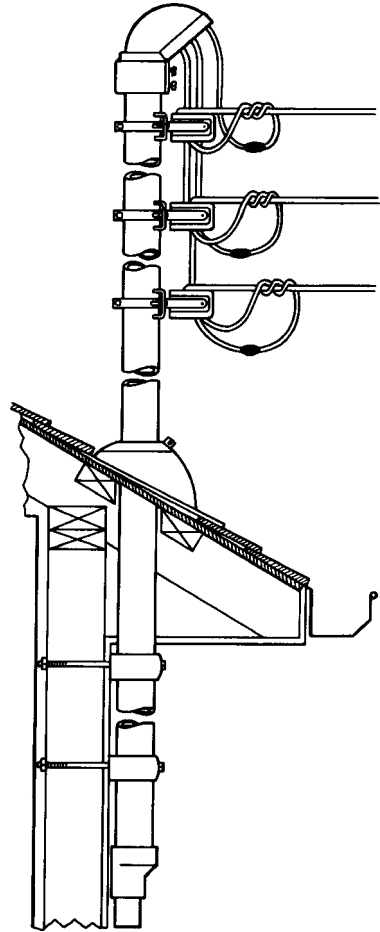


FIGURE 9.267 Low-roof service installation. [Hubbard & Co.]

384. For commercial or industrial services the maximum demand is usually metered as well as the kilowatthours. When the demand is of the order of a few kilowatts, this may be done with a single meter which has a demand-indicating pointer as well as the usual meter dials (Fig. 9.268). For larger installations a separate indicating-demand meter is installed (Fig. 9.269). A recording type of demand meter may also be employed for larger installations; Current transformers are usually required on larger installations to reduce the current which the meter has to handle; self-contained metering is currently available up to 400 A, although the cut-off point is a matter for the local utility to decide. For an underground service from an urban network system, the service equipment consists of a main fused switch or circuit breaker, a set of current transformers in a sheet-metal cabinet, and meters as outlined above. If the supply comes from a radial feeder system, a transformer bank with an oil circuit breaker and disconnect switches is installed at the building ahead of the above service equipment. For an overhead service a transformer bank is installed just

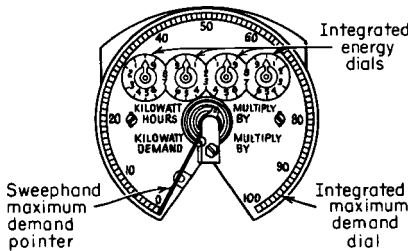


FIGURE 9.268 Dial for a watthour meter with demand-indicating pointer. [Westinghouse Electric Corp.]

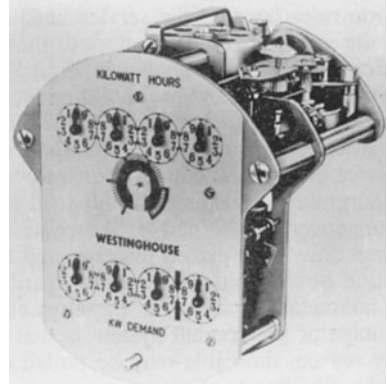


FIGURE 9.269 Indicating-demand meter. [Westinghouse Electric Corp.]

outside the building, on a concrete foundation on the ground or on an elevated platform between two poles. The bank will contain high-voltage fuses and lightning arresters in addition to the transformers. The service conductors are then brought into the building in conduit or as individual wires to the service equipment. Sometimes the metering is installed so as to measure the input to the transformers so that the customer pays directly for the transformer losses. When this is done, high-voltage current and potential transformers are installed in the leads to the primary of the transformers. The meters may then be located in a weatherproof cabinet outside the building or located inside the building wall, as before, with a conduit to carry the secondary leads from the instrument transformers.

385. Connections ahead of the service disconnect. The National Electrical Code, in Sec. 230.82, allows eight types of equipment to be connected ahead of the service disconnecting means, as follows:

1. Cable limiters or other current-limiting devices.
2. Meters or meter sockets nominally rated not in excess of 600 V, provided all metal housings and service enclosures are grounded in accordance with Part VII and bonded in accordance with Part V of Article 250.
3. Meter disconnect switches nominally not rated in excess of 600 V that have a short-circuit current rating equal to or greater than the available short-circuit current, provided all metal housings and service enclosures are grounded in accordance with Part VII of Article 250 and bonded in accordance with Part V of Article 250. A meter disconnect switch shall be capable of interrupting the load served.
4. Instrument transformers (current and voltage), high-impedance shunts, load management devices, surge arresters, and Type 1 surge-protective devices.
5. Taps used only to supply load management devices, circuits for standby power systems, fire pump equipment, and fire and sprinkler alarms, if provided with service equipment and installed in accordance with requirements for service-entrance conductors.
6. Solar photovoltaic systems, fuel cell systems, or interconnected electric power production sources.

7. Control circuits for power-operable service disconnecting means, if suitable overcurrent protection and disconnecting means are provided.
8. Ground-fault protection systems or Type 2 surge-protective devices, where installed as part of listed equipment, if suitable overcurrent protection and disconnecting means are provided.

CRANE WIRING

386. Wiring for cranes consists of the following elements:

1. Collector switch
2. Main collector contact conductors
3. Cab main-line switch
4. Bridge collector contact conductors
5. Motor-circuit wiring

387. A collector switch or circuit breaker must be installed in every circuit feeding crane wires. A fused switch is most frequently used to provide overload protection, although in important installations, where reliability is essential (where equipment must be placed back in service after an accident, in minimum time), circuit breakers are used. From an electrical standpoint the best location for the switch is at the center of the run.

The switch must be readily accessible and operable from the ground or floor, be within view of the runway contact conductors, and be of a type which can be locked in the open position. It shall open all ungrounded conductors simultaneously.

388. The main collector contact conductors are bare copper trolley wires or structural-steel conductors that are erected parallel to the crane runway. The location of the conductors is determined by conditions. Sometimes the crane builder specifies that the conductors must be located in a certain position, and in other cases the purchaser selects and specifies the position of the conductors, and the crane manufacturer arranges the current collectors on the crane accordingly.

389. Trolley wire for cranes is hard-drawn copper, the same as used in electric traction. Hard-drawn wire must be used to prevent excessive stretching. Round wire is erected when the method of support adopted does not involve the use of trolley ears for holding it at intermediate points between the ends of the run. When trolley ears are used, figure-eight or, preferably, grooved trolley wire should be used, because it can be readily held in screw-clamp trolley ears. Round wire can be used with trolley ears, but the ear flanges of these must be hammered down around the wire, a time-consuming operation requiring some skill; also, a round-wire ear introduces a hump on the wire and makes the trolley wheel jump and draw an arc when the wheel passes over the raised place. Either 1/0, 2/0, 3/0, or 4/0 AWG wire is usually required. The wire size required is ordinarily specified by the crane builder, but in any case it should be large enough so that the voltage drop in it will not much exceed 3 or 4 percent of the line voltage with all the crane motors operating at full load. In no case should the wires be smaller than the minimum allowable sizes given in Sec. 400 for bridge collector conductors.

390. Trolley rails of structural steel are being used to some extent instead of copper trolley wire to supply current to cranes and other moving electrical machinery. The steel rails are made sufficiently heavy so that they cannot break and fall, as copper wires occasionally do. Sometimes strap-steel bars are used, but more frequently a section such as an angle or a tee, which has considerable stiffness in all directions, is adopted. Steel conductors should be painted, except on the contact edge or face, to prevent corrosion. Either a shoe or a trolley wheel can be used to collect current from a steel conductor rail. A shoe or spoon, which makes a rubbing contact, is probably preferable for the average application. Trolley-wheel collectors that travel at high speeds are not successful for current collection from steel conductors, because the wheel tends to bounce and jump from the rigid rail at joints and uneven places.

391. The main collector contact conductors must be isolated by elevation or provided with suitable guards so that persons cannot inadvertently touch the live parts while in contact with the ground or with conducting material connected to the ground. If the crane travels over easily ignitable combustible fibers and materials, the collector conductors must be protected by barriers so arranged as to prevent the escape of sparks or hot particles. Probably the best location for the collector conductors on a bridge-crane runway is between the flanges of and parallel to one of the crane girders. Here the conductors are out of the way and well protected and can be readily supported. It is not often that they are erected in any other position. Occasionally the trolley wires can be supported from the roof trusses above the crane runway and are installed similarly to the trolley wires for trolley cars. A pole collector with a wheel at its upper end, exactly like a trolley-car pole but much shorter, is used. When the spacing between roof trusses is very great, this method may not give good results because of the wire swinging and the trolley coming off. The main contact conductors, when carried along runways, should normally be supported on insulating supports at intervals not exceeding 6 m (20 ft) and separated from each other at least 150 mm (6 in.), except that a spacing of not less than 75 mm (3 in.) may be used for monorail hoists. If wires are used, they should be secured at the ends with approved strain insulators and so mounted on intermediate insulators that the extreme displacement of the wires will not bring them closer than 38 mm ($\frac{1}{2}$ in.) from the surface wired over. If necessary, the intervals between supports may be increased up to 12 m (40 ft), provided that the separation between conductors is increased proportionately. All sections of the conductors must be so joined that a continuous electrical connection is provided. The collector conductors must not supply any equipment other than that of the crane or cranes which they are designed to serve.

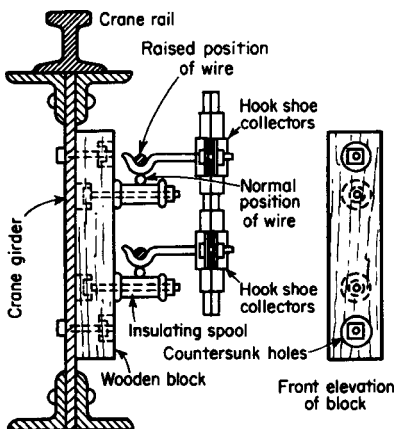


FIGURE 9.270 Intermediate bracket for trolley wire.

392. Methods of supporting crane trolley wires differ with conditions. If the crane is provided with hook-shoe collectors (Fig. 9.270), which slide along under and carry the weight of the trolley wire, the wire is rigidly held only at the terminations at the ends of the run and is kept from sagging by intermediate insulating brackets like those shown in Fig. 9.270. If trolley-wheel current collectors are used, the tension in the wire is taken by the terminations, and the wire is also rigidly held by trolley ears at intermediate points.

393. Terminations are made as shown in Fig. 9.271. Strain insulators separate the trolley wire electrically from the building members, and either a turnbuckle or an eyebolt with a long thread can be used for pulling the slack from the wire and adjusting its tension. The terminations should be depended upon to assume the entire tension of the wire. The intermediate supports are placed merely to prevent excessive sagging. The members which take the stresses of the eyebolts at the terminations should be very substantial or thoroughly braced, because on them depends the reliability of the entire installation. The eyebolts, turnbuckles, and strain insulators should be not smaller than the $\frac{5}{8}$ -in size.

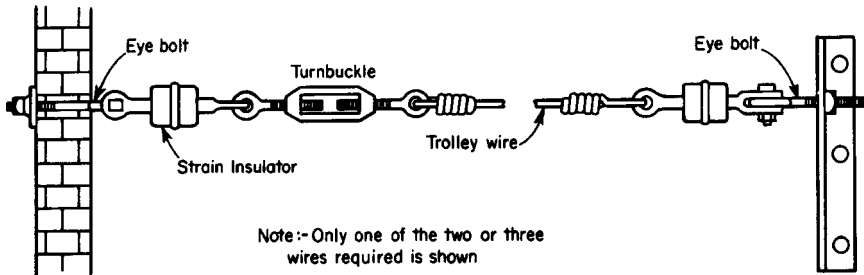


FIGURE 9.271 Trolley supports at ends of run.

394. Intermediate supports for crane trolley wires, the supports installed between the terminations to prevent sagging, can be arranged as shown in Figs. 9.270, 9.272, and 9.273. The bracket of Fig. 9.270 is, as above explained, applicable only if the crane has hook-shoe collectors. The block of wood that supports the insulating spools should be thoroughly dry and treated with an insulating paint. The bolt holes in it should be deeply countersunk to eliminate the possibility of grounds. The spools should be of porcelain. Porcelain tubes with porcelain knobs at the ends to form flanges will do. The length of the insulator between flanges should be at least 4 in. (101.6 mm). Spools turned from fiber are sometimes used. The spools should be so arranged that there will be at least a $\frac{1}{2}$ -in (12.7-mm) clearance between them and the hook shoe when it passes along.

In a fireproof building, when the crane has trolley-wheel collectors, the wires can be supported by trolley ears as in Fig. 9.273. The wooden supporting block must be thoroughly painted, and the bolt holes in it deeply countersunk to prevent the possibility of grounds. Tap bolts, screwing in from the rear, support the screw-clamp trolley ears which seat against washers. Figure-eight or,

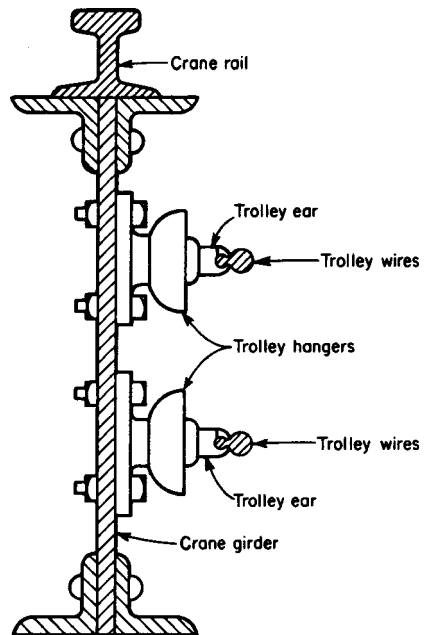


FIGURE 9.272 Trolley hanger support.

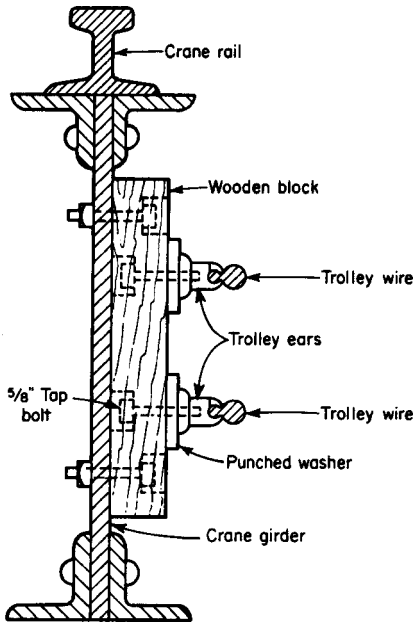


FIGURE 9.273 Trolley ear supports.

preferably, grooved trolley wire is used. The wire should be drawn tightly at the terminations, and the ears should be installed every 8 or 10 ft (2.4 or 3 m).

For an outdoor crane, as well as for indoor applications, the wires can be supported in some cases as shown in Fig. 9.272. Standard street-railway-type trolley hangers and ears, which provide excellent insulation, are used. The hangers can, provided a proper location of the trolley wires results, be bolted directly to the crane girder.

395. There are almost numberless ways in which steel conductor rails can be arranged and supported.

The arrangement of a structural-steel tee conductor or trolley rail is shown in Fig. 9.274. Although the arrangement illustrated was developed for serving monorail cranes, which travel on the lower flanges of I beams, only minor modifications in the supporting forging would be required to adapt it for serving bridge cranes or other similar

traveling electrical machines. Note that a feature of the method is that no drilling or close fitting is required in the field. The only piece that is different for different jobs is the supporting forging, but this can be formed and drilled in the shop. The only tools required to erect the rail are a hacksaw for cutting the tee, which is purchased in 30-ft (9.1-m) lengths, and a wrench for setting the bolts. No bolt smaller than $\frac{5}{8}$ -in diameter is used, because smaller ones than this can be twisted asunder too easily. A $1\frac{1}{2}$ - by $1\frac{1}{2}$ - by $\frac{3}{16}$ -in T bar was selected, because this is about the smallest size that is rigid enough to sustain itself effectively between supports. A T bar of this size has a conductivity equivalent to that of a 109,800-cmil copper conductor, that is, a copper conductor between Nos. 1/0 and 2/0 in size.

The insulating hanger (Fig. 9.274, II) is similar to a trolley hanger but smaller. A malleable-iron bell encloses the molded material that supports and insulates the hanger stud. The splicing plate (IV) and the clamp (V) are castings, preferably of malleable iron, and the only machine work on them is the drilling and tapping of the holes. The section insulator (VI) consists of two castings, a fiber dividing block, and two wrought-iron clamping plates. Directions for spacing the insulating supports when erecting the conductor are given on the illustration. The terminal lug (VIII) is forked instead of annular so that it can be readily disconnected for isolating circuits for testing without taking out a bolt.

Rigid collector conductors must have insulating supports spaced at intervals of not more than 80 times the vertical dimension of the conductor, but in no case greater than 4.5 m (15 ft), and spaced apart sufficiently to give a clear electrical separation of conductors or adjacent collectors of not less than 25 mm (1 in.).

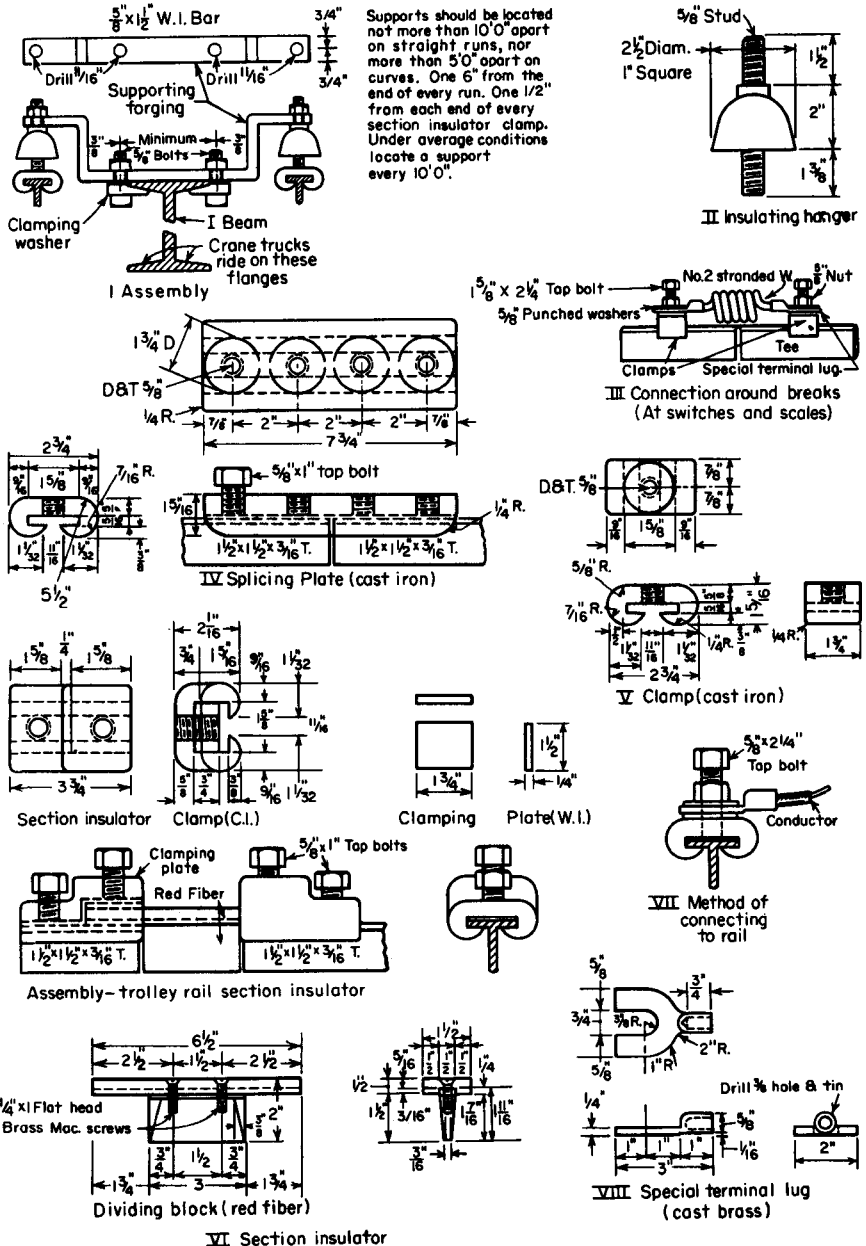


FIGURE 9.274 Steel trolley rail.

396. Track as circuit conductor (National Electrical Code). Monorail, tramrail, or crane-runway tracks may be used as a conductor of current for one phase of a three-phase ac system furnishing power to the carrier, crane, or trolley, provided the following conditions are fulfilled:

1. The conductors for supplying the other two phases of the power supply shall be insulated.
2. The power for all phases shall be obtained from an insulating transformer.
3. The voltage shall not exceed 300 V.
4. The rail serving as a conductor shall be bonded to the equipment grounding conductor at the transformer and may also be grounded by the fittings used for the suspension or attachment of the rail to a building or structure.

397. In computing the resistance of steel trolley rails the area in square inches of the section involved can be taken from one of the steel companies' handbooks, such as those issued by the Cambria and Carnegie steel companies; the area in circular mils can then be obtained by using the rule given below. By dividing this area by 6.14, which is the approximate ratio of the resistance of mild steel to that of copper, the equivalent copper area of the steel conductor results. Then by using the standard formula for the resistance of a copper conductor, the actual resistance of the steel is obtained.

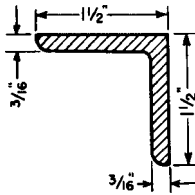


FIGURE 9.275 Section of 1 1/2- by 1 1/2- by 3/16-in steel angle.

EXAMPLE What is the resistance of 160 ft of 1 1/2- by 1 1/2- by 3/16-in steel angle? (See Fig. 9.275 for a picture of the section.)

SOLUTION By referring to a handbook, it will be noted that the area of 1 1/2- by 1 1/2- by 3/16-in steel angle is 0.53 in². Then, to find its area in circular mils,

$$\begin{aligned} \text{Cmil} &= \frac{\text{area in in}^2}{0.000,000,785,4} = \frac{0.53}{0.000,000,785,4} \\ &= 674,800 \text{ cmil} \end{aligned}$$

$$\begin{aligned} \text{Equivalent in copper} &= \frac{\text{cmil area of steel}}{6.14} \\ &= \frac{674,800}{6.14} = 109,800 \text{ cmil} \end{aligned}$$

Then the resistance of the 160-ft length will be

$$\text{Resistance (for copper)} = \frac{11 \times \text{ft}}{\text{cmil}} = \frac{11 \times 160}{109,800} = 0.016 \, \Omega$$

The resistance, therefore, of 160 ft of 1 1/2- by 1 1/2- by 3/16-in steel angle is 0.016 Ω . It is evident from the equivalent copper area of the steel (109,800 cmil) that the conductivity of the steel section will lie between the conductivities of No. 1/0 (105,500 cmil) and No. 2/0 (133,100 cmil) copper wire.

The equivalent copper area in circular mils can be used in any of the wiring formulas for computing drop in a steel conductor, just as the actual area of a copper conductor is used in the same formulas, and the result will be a correct one for the steel section. Obviously the above method is approximate because the constants are approximate, but it is quite accurate enough for wiring computations, which always involve necessarily inaccurate assumptions.

398. Disconnecting means for cranes and monorail hoists (National Electrical Code). A motor-circuit switch, molded-case switch, or circuit breaker shall be provided in the leads from the runway contact conductors or other power supply on all cranes and monorail hoists. The disconnecting means shall be capable of being locked in the open position. The provision for locking or adding a lock to the disconnecting means shall be installed on or at the switch or circuit breaker used as the disconnecting means and shall remain in place with or without the lock installed. Portable means for adding a lock to the switch or circuit breaker shall not be permitted.

Where a monorail hoist or hand-propelled crane bridge installation meets all of the following, the disconnecting means shall be permitted to be omitted:

1. The unit is controlled from the ground or floor level
2. The unit is within view of the power supply disconnecting means
3. No fixed work platform has been provided for servicing the unit

Where the disconnecting means is not readily accessible from the crane or monorail hoist operating station, means shall be provided at the operating station to open the power circuit to all motors of the crane or monorail hoist.

The continuous ampere rating of the switch or circuit breaker specified above shall be not less than 50 percent of the combined short-time ampere ratings of the motors nor less than 75 percent of the short-time ampere rating of the motors required for any single motion.

Note that the NEC crane article (Art. 610) uses the wording “in view” in several places instead of “in sight” consciously in order to avoid the 15 m (50 ft) limitation built into the NEC definition of “in sight”. Many large industrial cranes are too big to make the 15 (50 ft) limit workable.

399. Contact conductors are required across the crane bridge for carrying the circuit to the carriage and hoist motors. They are usually made of bare copper wires supported in the general way described in Secs. 391 to 394, except that bridge collector conductors shall be kept at least 65 mm (2½ in.) apart, and if the span exceeds 25 m (80 ft), insulating saddles shall be placed at intervals not exceeding 15 m (50 ft).

400. Contact conductors. The National Electrical Code requires that the size of contact wires shall be not less than the following:

Distance between end strain insulators or clamp-type intermediate supports, ft	Size of wire
Less than 9.0 m (30 ft)	6 AWG
9.0 m–18 m (30–60 ft)	4 AWG
Over 18 m (60 ft)	2 AWG

401. The motor-circuit wiring must be enclosed in raceways or Type AC cable with insulated grounding conductor, Type MC cable, or Type MI cable unless otherwise permitted for specific conditions. Contact conductors and short lengths of exposed conductors at resistors, collectors, and other equipment shall not be required to be in raceways. Conductors exposed to external heat or connected to resistors shall have a flame-resistant outer covering or be covered with a flame-resistant tape individually or as a group.

The conductors must be of a size as given in Table 610.14(A) of the NEC. When flexible connections to motors or controllers are necessary, flexible metal conduit, liquidtight flexible metal conduit, liquidtight flexible nonmetallic conduit, multiconductor cable, or an approved nonmetallic flexible raceway may be used. Short runs for control equipment in the cab or on the bridge may be enclosed in auxiliary gutters. A common-return conductor may be used for the several motors of a single crane or hoist. The ampacities of conductors used with crane motors are as given in Table 610.14(A).

402. Motor control and protective equipment. The hoist of cranes must be provided with a limit switch which will control the upper limit of travel. It is best practice to arrange the control levers of all traveling cranes, in any one installation, in the same relative position in all the cages of the different cranes. The NEC allows two motors with their leads, which operate a single hoist, carriage, truck, or bridge and are controlled as a unit by one controller, to be protected by a single overload device. The device should be located in the cab if there is one.

403. A crane-wiring diagram is given in Fig. 9.276, which is typical for a dc, three-motor, traveling bridge crane. Variations in crane wiring and control schemes are practically numberless. For dc cranes, series motors are almost invariably used, while for ac cranes, wound-rotor motors are used.

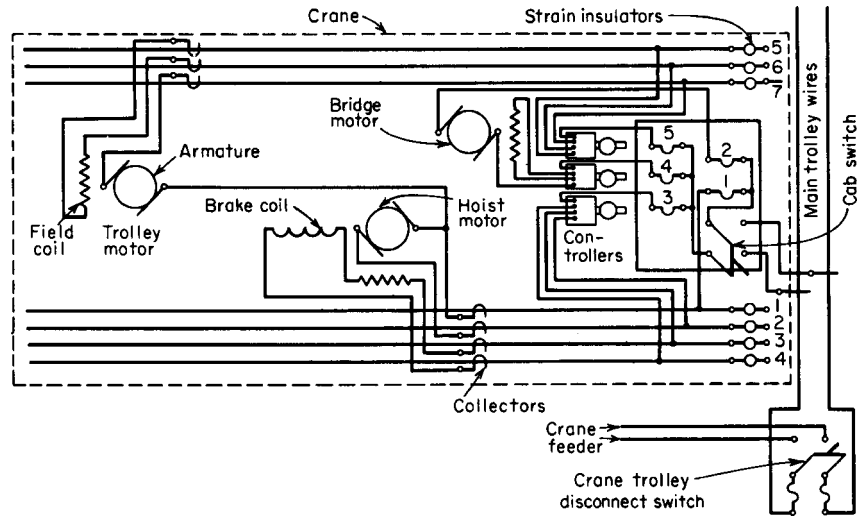


FIGURE 9.276 Direct-current crane-wiring diagram.

WIRING FOR CIRCUITS OF OVER 600 VOLTS

404. For wiring circuits operating at more than 600 V, the conductors must have an insulation sufficient for the particular voltage employed. The aboveground conductors must be installed in rigid or intermediate metal conduit, in rigid nonmetallic conduit, in electrical metallic tubing, as busways, in cable trays, as busways, as cablebus, in other identified raceways, or in open runs of metal-clad cable suitable for the use and purpose, except that in locations accessible to qualified persons only, open runs of Type MV cable, bare conductors, and bare busbars may also be used. Open runs of braid-covered insulated conductors must have flame-retardant braid, or the braid covering must be treated with a flame-retardant saturant after installation. The braid covering must be stripped back at conductor terminals to a safe distance according to the operating voltage, and is not less than 25 mm (1 in.) for each kilovolt of the conductor-to-ground voltage.

The metallic and semiconducting insulation shielding components of shielded cables shall be stripped back to a safe distance according to the circuit voltage at all terminations of the shielding, as in potheads and joints. At such points, suitable methods such as the use of potheads, terminators, stress cones, or similar devices shall be employed for stress reduction, and the metallic shielding tape and semiconducting components shall be connected to a grounding conductor, grounding busbar, or a grounding electrode.

405. Circuit interrupting devices for medium-voltage applications are covered in 490.21 of the NEC. Specific devices covered in this code section are as follows:

- (A) Circuit breakers
- (B) Power fuses and fuseholders
- (C) Distribution cutouts and fuse links
- (D) Oil-filled cutouts
- (E) Load interrupters

406. Isolating means (National Electrical Code). Means shall be provided to isolate an item of equipment completely. The use of isolating switches is not necessary if there are other ways of deenergizing the equipment for inspection and repairs, such as draw-out-type metal-enclosed switchgear units and removeable truck panels. Isolating switches not interlocked with an approved circuit-interrupting device shall be provided with a sign warning against opening them under load. A fuseholder and fuse designed for the purpose may be used as an isolating switch.

407. Space separation. The NEC requires that a minimum air separation in field fabricated installations between live conductors and between such conductors and adjacent grounded surfaces be not less than the values given in Table 490.24 of the NEC. These spacings do not apply to equipment designed, manufactured, and tested to accepted national standards.

408. Work space and guarding. The National Electrical Code requires the following protection:

1. **Working Space.** The minimum clear working space in front of electrical equipment likely to require examination, adjustment, servicing, or maintenance while energized shall not be less than set forth in Table 110.34(A) of the NEC unless otherwise specified in the Code. Distances shall be measured from the live parts if such are exposed, or from the enclosure front or opening if such are enclosed.

The conditions are as follows:

- a. Exposed live parts on one side and no live or grounded parts on the other side of the working space or exposed live parts on both sides effectively guarded by insulating materials.
- b. Exposed live parts on one side and grounded parts on the other side. Concrete, brick, or tile walls will be considered grounded surfaces.
- c. Exposed live parts on both sides of the work space.

Exception. Working space is not required in back of equipment such as dead-front switchboards or control assemblies where there are no renewable or adjustable parts (such as fuses or switches) on the back and where all connections are accessible from locations other than the back. Where rear access is required to work on deenergized parts on the back of enclosed equipment, a minimum working space of 762 mm (30 in.) horizontally shall be provided.

2. **Separation from Low-Voltage Equipment.** Where switches, cutouts, or other equipment operating at 600 V, nominal, or less are installed in a vault, room, or enclosure where there are exposed live parts or exposed wiring operating at over 600 V, the high-voltage equipment shall be effectively separated from the space occupied by the low-voltage equipment by a suitable partition, fence, or screen.

Exception. Switches or other equipment operating at 600 V, nominal, or less and serving only equipment within the high-voltage vault, room, or enclosure shall be permitted to be installed in the high-voltage enclosure, room, or vault if accessible to qualified persons only.

3. **Locked Rooms or Enclosures.** The entrances to all buildings, rooms, or enclosures containing exposed live parts or exposed conductors operating at over 600 V, nominal, shall be kept locked, except where such entrances are at all times under the observation of a qualified person at all times.

Where the voltage exceeds 600 V, permanent and conspicuous warning signs shall be provided, reading substantially as follows: "DANGER—HIGH VOLTAGE—KEEP OUT."

4. **Illumination.** Illumination shall be provided for all working spaces around electrical equipment. The lighting outlets shall be arranged so that persons changing lamps or making repairs on the lighting system are not endangered by live parts or other equipment. The points of control shall be located so that persons are not likely to come into contact with any live part or moving part of the equipment while turning on the lights.

409. Isolation by elevation. The National Electrical Code requires that the distances above working spaces to unguarded live parts be not less than those specified in Table 110.34(E).

WIRING FOR CIRCUITS OF LESS THAN 50 VOLTS

410. For wiring circuits of less than 50 V, conductors not smaller than 12 AWG must be used. If the conductors supply more than one appliance or appliance receptacle, they must not be smaller than 10 AEG. Receptacles must be rated at not less than 15 A; in kitchens, laundries, and other locations where portable appliances are likely to be used, the receptacles must be rated at not less than 20 A.

WIRING FOR HAZARDOUS (CLASSIFIED) LOCATIONS

411. Hazardous location classifications (Adapted from *Practical Electrical Wiring*, 20th ed., © Park Publishing, 2008, all rights reserved) arise because of the presence or handling of explosive gases, liquids, flammable dusts, or easily ignitable fibers. The basic rules for wiring in such locations are covered by NEC Articles 500 through 506, and more specific information is covered in Articles 510 through 517—altogether more than 88 pages. This handbook can discuss only the barest details of this intricate subject.

The NEC uses three basic classes to indicate the type of hazard involved, and those classes (I, II, and III) are further subdivided into divisions (1 and 2) to indicate the prevalence of hazard, and also into lettered groupings to specify the exact type of hazard. Area classifications are seldom performed by an electrical inspector; they are done by qualified engineers subject to review. The reviewer may be the chief of the fire department or some other official. The NEC now requires that hazardous (classified) locations be completely documented, and that those documents be made available to the inspector.

412. Class I locations are those “in which flammable gases, flammable liquid-produced vapors, or combustible liquid-produced vapors are or may be present in the air in quantities sufficient to produce explosive or ignitable mixtures.” Combustible liquids will burn, but have flash points (the temperature at which enough liquid vaporizes to create an ignitable fuel-air mixture at the surface of the liquid) at or above 38°C (100°F). Note that the flash point of a liquid is much different than the ignition temperature of its vapor.

Class I, Division 1 locations are those in which hazardous concentrations of gas (1) exist continuously or intermittently under normal operations, (2) exist frequently because of maintenance or leakage, or (3) might exist because of breakdowns or faulty operation that might also result in simultaneous failure of electric equipment in such a way as to cause the electrical equipment to become an ignition source. Examples are paint-spraying areas, systems that process or transfer hazardous gases or liquids, portions of some cleaning and dyeing plants, and hospital operating rooms in countries that still use ethers and related flammable anesthetic agents. These anesthetizing materials are no longer used in the United States, but they are still used in some countries.

Class I, Division 2 locations are locations (1) in which flammable gases or volatile flammable liquids are normally confined within containers or closed systems from which they can escape only in case of breakdown, rupture, or abnormal operation; (2) in which the hazardous concentrations are prevented by mechanical ventilation from entering but which might become hazardous upon failure of the ventilation; or (3) that are adjacent to a Class I, Division 1 location and might occasionally become hazardous unless prevented by positive-pressure ventilation from a source of clean air by a ventilation system that has effective safeguards against failure. Examples are storage in sealed containers and piping without valves.

413. Class II locations are those having combustible dust.

Class II, Division 1 locations are those in which combustible dust is or may be in suspension in the air in sufficient quantity to produce an explosive or ignitable mixture (1) continuously or intermittently during normal operation, (2) as a result of failure or abnormal operation that might also provide a source of ignition by simultaneous failure of electric equipment, or (3) in which combustible dust that is electrically conductive may be present. Examples are grain elevators, grain-processing plants, powdered-milk plants, coal-pulverizing plants, and magnesium-dust-producing areas.

Class II, Division 2 locations are those in which combustible dust is not normally in suspension in the air and is not likely to be under normal operations in sufficient quantity to produce an explosive or ignitable mixture but in which accumulations of dust (1) might prevent safe dissipations of heat from electric equipment or (2) might be ignited by arcs, sparks, or burning material escaping from electric equipment. Examples are closed bins and systems using closed conveyors and spouts.

414. Class III locations are those in which there are easily ignitable fibers or flyings, such as lint, but in which the fibers or flyings are not in suspension in the air in sufficient quantity to produce an ignitable mixture.

Class III, Division 1 locations are those in which easily ignitable fibers or materials that produce combustible flyings are manufactured, used, or otherwise handled, such as textile mills, cotton gins, and woodworking plants.

Class III, Division 2 locations are those in which such fibers are stored, such as a warehouse for baled cotton, yarn, and so forth.

415. Groups. Equipment for use in Class I locations is divided into Groups A, B, C, and D; for Class II into Groups E, F, and G. Each group is for a specific type of hazardous material, which you can determine by consulting your copy of the NEC. All equipment for hazardous locations must be marked to show the class and the group for which it is approved; some equipment is suitable for more than one group and is so marked. Note that for Group E, which encompasses the electrically conductive metallic dusts, there are no Division 2 locations. These dusts are so hazardous that if they are present in any quantities, no matter how infrequently, the location must be wired to Class II, Division 1 standards, using equipment evaluated for Group E exposure.

416. Basic principles apply to hazardous (classified) location equipment. Enclosures for equipment in Class I, Division 1 locations and enclosures for devices with ignition-capable arcing contacts in Class I, Division 2 locations must be explosionproof. This does not mean that explosive gases or vapors cannot enter into them. The eventual entrance of such gases or vapors is assumed to be inevitable, resulting in ignition, but the enclosure is made to withstand and contain the force of the explosion. Moreover, the hot exploded gas does escape, but not until it has passed through a tight joint that is either threaded or has a wide ground-finish flange. In either case, before it finally escapes to the outside of the enclosure, it has cooled to a temperature below the ignition temperature of the gas in the surrounding atmosphere. The cooling takes place while the gas passes through the long circuitous path of a threaded joint, or across the wide, tight-fitting, ground-finish flange.

For Class II locations, enclosures must be dust-ignition-proof. Dust can be prevented from entering enclosures by means of gaskets, and enclosures can be made with large exposed surfaces for more rapid heat dissipation.

If a Class II dust-ignition-proof enclosure is used in a Class I location, gas can get in, explode, and blow the enclosure to pieces, possibly setting off a larger explosion in the general area, leading to fire or injury. Likewise, if a Class I explosionproof enclosure is installed in a Class II location, it can overheat when blanketed with dust and start a fire.

For a Class III location, equipment only has to be totally enclosed to prevent the entry of fibers and flyings, and to prevent the escape of arcs, sparks, or hot particles.

417. Other protective approaches may work better. The best approach is to use ingenuity and keep electrical equipment out of the hazardous environment. Failing that, another approach is to keep the power circuits somewhere else, and just maintain sensors near the combustible material. If the energy level can be assured to be sufficiently low, any failure in the wiring system won't be ignition capable. These energy levels are very low. For example, an energy level of just $\frac{1}{4}$ milliwatt-second (mW-s) will ignite methane, and levels one-tenth of that will ignite unsaturated hydrocarbons like ethylene. Nevertheless, many sensors can and do function on what are called *intrinsically safe circuits* (covered in NEC Article 504). These circuits use zener diodes in their supplies, arranged so that even a direct short circuit with its associated potential arcing and heating would not be ignition capable. These circuits can be used with ordinary wiring methods in hazardous (classified) locations for which they are rated.

Nonincendive wiring is closely related to intrinsically safe wiring. Under all normal operating conditions it can't produce ignition-capable energy, but under very unusual (but foreseeable) operating conditions, might produce such an effect. These circuits are allowed in ordinary wiring in Division 2 locations, but not Division 1. The principle here is that given two low-likelihood probabilities, the probability of them occurring at the same moment is infinitesimal—the two low probabilities in this case being a Division 2 vapor release and a nonincendive circuit failing in a way that is ignition capable.

Another strategy is to exclude all gases and vapors through positive pressure, called “purged and pressurized” in the NEC. This equipment must be connected to a source of clean air under constant pressure. It must be arranged with automatic means to disconnect power if the air supply fails, and it must be equipped with a time-delay function so that its interior can purge prior to the restoration of power. There are three levels of purged and pressurized enclosures. Type X purging reduces a Division 1 environment to unclassified, Type Y purging reduces from Division 1 to Division 2, and Type Z purging goes from Division 2 to unclassified.

Other strategies involve hermetic seals to exclude the hazardous atmosphere, and oil-immersed contacts, which also exclude the hazardous gas or vapor. These two methods are allowable in Division 2 locations only.

418. Zone classification system (NEC Article 505) is a new approach. A number of international standards take the Class and Division system a step further, dividing Division 1 into areas where the specified environment exists routinely and areas where it would exist only for brief periods, probably not long enough to be taken up into the interior of a wiring system and exploding, conditions for which Division 1 equipment must be designed. The result is the Zone system, which is now in the NEC as a parallel classification system. Zone 0 is the worst case, and all power wiring is excluded from it. Zone 1 gets the balance of the traditional Division 1, and since the routine or continual exposure doesn't apply, most explosionproof requirements do not apply to Zone 1 either. Zone 2 is essentially the same as Division 2.

An occupancy can be designed to the Zone system, or to the Class and Division system, but there must be no overlap or intersection between them, except that Zone 2 and

Division 2 locations can adjoin but not overlap. It is permitted to reclassify an existing Class- and Division-classified area under the Zone system, provided the entire space classified on the basis of a single flammable gas or vapor is reclassified under Zone system requirements. The Zone system classifications and equipment selection must be under the control of a qualified person.

The 2005 NEC (Article 506) extended the zone concept to environments with combustible dust, comparable to Class II under the traditional system, with supervisory requirements comparable to Article 505 applications. The traditional Class and Division system has proven very durable, however, in large part because Zone 2 and Division 2 are functionally identical. The principal economic benefit of the Zone system derives from the more lenient treatment of Zone 1 wiring in comparison to Division 1. However, the overwhelming majority of hazardous (classified) locations today are Division 2, because environmental concerns have made the sort of chemical releases that create Division 1 environments largely nonexistent, or confined to extremely small areas from which it is quite practical to exclude most wiring other than instrumentation. Many facilities are finding no net benefit in changing classification systems.

419. Proper installation and maintenance is essential. In all cases, enclosures such as luminaires and panelboard enclosures must be kept reasonably cleaned of accumulations of residue, fibers, dust, or whatever is contained in the atmosphere. And they must be properly installed. For example, if one of four screws in the cover of an explosionproof switch enclosure is left untightened, or if the flanged joint of a cover or box is scratched, exploded gas will escape before it has sufficiently cooled, and an explosion or fire could result.

A threaded joint must have at least five full threads fully engaged (four and a half threads if factory threaded). Figure 9.277 shows an explosionproof box with threaded hubs for threaded metal rigid conduit, and a threaded cover. Figure 9.278 shows an explosionproof receptacle and plug. The box containing the receptacle has a ground-finish flange joint with four screws, and a threaded hub for conduit. The plug and receptacle are designed so the plug can be withdrawn only part of the way, which breaks down the circuit; an arc, if it forms, will explode the small amount of vapor in the interior. This takes place during the brief time it takes to twist the plug before it can be withdrawn.

Many plugs and receptacles are designed so the plug cannot be inserted or removed unless a switch is in the off position, and the switch cannot be turned on unless the plug is fully inserted.

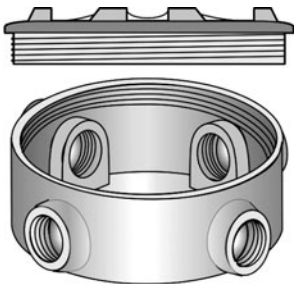


FIGURE 9.277 A typical explosionproof box.

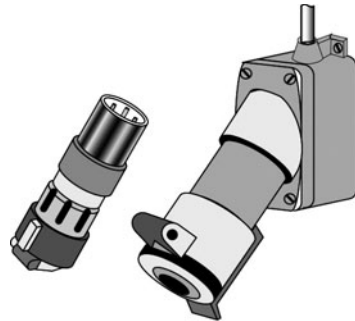


FIGURE 9.278 An explosionproof receptacle and plug to fit.

An explosionproof HID luminaire is shown in Fig. 9.279. Explosionproof fluorescent luminaires are also available, as are explosionproof panelboards, disconnecting means, circuit breakers, motors, and various other equipment—even telephones.

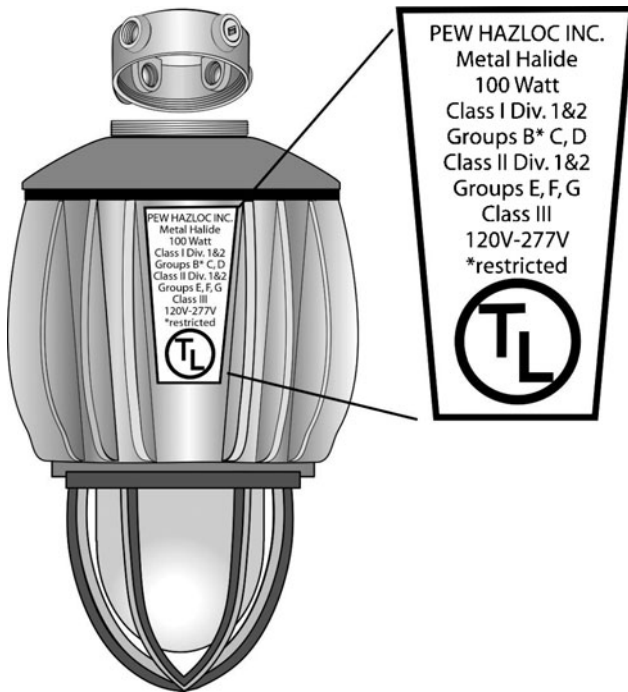


FIGURE 9.279 An explosionproof luminaire.

420. Sealing fittings compartmentalize the wiring system. Explosive gases or vapors can pass from one enclosure to another through conduit. The conduit itself can contain a substantial amount of such material, and without seals to compartmentalize the system the quantity of fuel available to an internal explosion will be enough to cause a rupture, a phenomenon known as *pressure piling*. To avoid these outcomes, sealing fittings of the general type shown in Fig. 9.280 must be installed. The sealing fitting is installed in the conduit adjacent to the enclosure, and thereby completes the enclosure. Then after the wires are pulled into place, the fitting is filled with a sealing compound that effectively prevents explosive or exploded gases from passing from one part of the electrical installation to another, or from passing from a hazardous location to a nonhazardous location where unexploded gases might reach a source of ignition. Note the qualification of the word “prevents.” The actual NEC text uses the term “minimizes” because seals will pass some gases over time, particularly if the gas is pressurized. The principal function of these seals is to isolate sections of conduit or enclosures in the event of an internal explosion; seepage over long periods must be addressed through other approaches. A worker was killed and a catastrophic fire resulted from a disconnect being opened in an enclosure that had accumulated a hazardous quantity of gas resulting from this type of seepage.

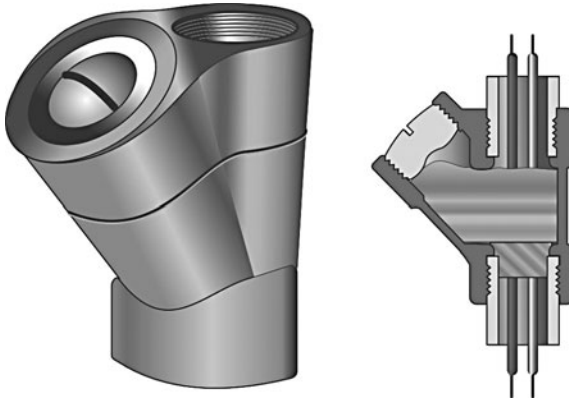


FIGURE 9.280 By pouring sealing compound into a fitting of this kind, one run of conduit is sealed off from another, minimizing the possible accumulation of large fuel-air mixtures in one conduit segment subject to ignition.

The fitting shown in Fig. 9.280 is for a vertical run of conduit. A different type consists of a T-shaped explosionproof fitting or box with a screw-on cover having a spout, with a plug to close the end of the spout. This kind (Fig. 9.281) can be used in either vertical or horizontal runs of conduit. Seals must always be accessible after installation. Seals are also required at hazardous (classified) location boundaries, but those at the boundary between a Division 2 and an unclassified location need not be explosionproof, but must be identified for the purpose of minimizing the passage of gasses under normal operating conditions.

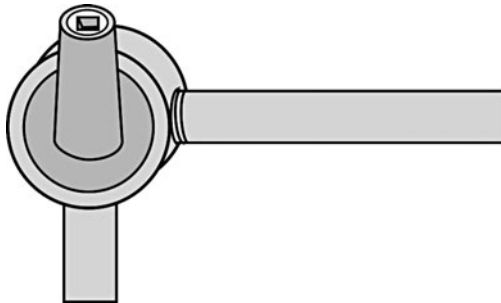


FIGURE 9.281 This seal can be used in any position.

The product standards for seal fittings were reorganized under the 1968 NEC, which at the time set a limit of 25 percent wire fill for new work, and 40 percent for old work. Since seals cannot be opened and reused, the standards presumed a 25 percent fill. When the NEC changed to allow 40 percent fill for even new installations, these standards were overlooked until comparatively recently. The NEC now requires seals to be figured on the basis of 25 percent fill unless listed otherwise. A number of manufacturers now have seals with larger bodies that will accommodate a 40 percent fill. In addition, the seal in Fig. 9.281 clearly allows for easy spreading of the conductors, solving the major problem of undersized seals.

A seal with two wires touching, and the seal compound incomplete at that point, is no seal at all. A major manufacturer has developed a new sealing compound, however, that can be squirted into its seal fitting with no damming or conductor separation, and it will harden into an acceptable seal. This should be very beneficial.

421. Wiring methods for hazardous locations are limited. Threaded rigid metal conduit, intermediate metal conduit, and Type MI cable are acceptable in all locations. Rigid nonmetallic conduit is permitted for underground use below 600 mm (24 in.) of cover, with steel conduit ends over the final 600 mm (24 in.) of the run in both directions, allowing a conventional threaded steel end to mate a seal to, because in many cases the hazardous environment is assumed to extend to the point of conduit emergence. In industrial locations with restricted public access, a special type of Type MC cable with a gas/vapor-tight corrugated aluminum armor under a nonmetallic jacket can be used in hazardous locations. Where flexibility is required, there are explosionproof flexible fittings. If additional flexibility is required, extra-hard-usage cord is permitted under conditions of qualified maintenance and supervision, guarding or equivalent protection, and suitable seals where terminated.

In Division 2 locations, most metal-clad or metallic wiring methods are permitted. Where flexibility is required, the usual metallic flexible wiring methods are allowable, along with extra-hard-usage flexible cord. Heavy-wall nonmetallic conduits (Type PVC, Schedule 80, and fiberglass Type RTRC, marked “-XW”) are allowed where very corrosive environments are anticipated in industrial occupancies, but only with qualified service and supervision and restricted public access.

422. Commercial repair garages are covered by NEC Article 511. A commercial garage is a location used for servicing and repairing self-propelled vehicles that use flammable liquid fuels, including cars, trucks, buses, or tractors. The 2005 NEC greatly revised many key portions of this material in order to correlate it with the NFPA 30A standard covering these facilities, and the 2008 NEC rewrote 511.3 to simplify the area classification process. Under NFPA 30A, repair garages fall into one of two principal types, described as “major” and “minor.” A *minor* facility does tune-ups, oil and other fluid changes, brake repairs, tire rotations, etc. This classification includes the popular “quick lube” type of facility. In contrast, a *major* facility does (in addition) engine overhauls, body and painting work, and (most critically in terms of area classification) repairs that require draining of a fuel tank. Area classification for these facilities focuses on three areas (floor, ceiling, and subfloor pits), and the requirements in each depend on whether specified ventilation is provided.

To summarize, make three assessments: (1) Are you in a major, or minor, repair garage? (2) Are you considering a ceiling, floor, or a pit? (3) Is the space you are considering ventilated per the applicable code specification? In 511.3, the NEC breaks the garage classifications out first (major vs. minor) in lettered subsections. Then it breaks out the locations in numbered paragraphs under each. Finally, under each of those headings come two lettered paragraphs (ventilation provided or not provided).

Major Repair Garages. The general floor areas in major repair garages are considered as Class I, Division 2 to a height of 450 mm (18 in.) above the floor unless the space is ventilated to provide at least four air changes per hour, or 0.028 m³/min (1 cfm) of fresh air per 0.093 m² (ft²) of floor area. The ventilation must be taken from no higher than 300 mm (1 ft) above the floor, and arranged to exchange air across the entire floor area. Ceiling areas are classified to the same extent (i.e., unclassified if there is 1 cfm/ft² ventilation provided,

otherwise, Div. 2), except the 450 mm (18 in.) measurement for Div. 2 extends down from the ceiling. The classification does not apply if the facility will not be working on vehicles using lighter-than-air fuels such as hydrogen or natural gas. If classification does apply, the exhaust port must be within 450 mm (18 in.) from the ceiling high point. For pit areas, their classification is reduced from Div. 1 to Div. 2 if, and only if, they are ventilated at the rate of at least six air changes per hour.

Minor Repair Garages. The general floor areas in minor repair garages are unclassified as long as there are no subfloor work areas or pits. If the work area includes these subfloor areas, the floor areas are classified exactly the same as in the case of major repair garages. Ceiling areas are unclassified unless lighter-than-air fuels are transferred. For pit areas, they are unclassified if they are separately exhausted in a similar manner as major repair garages. Pits not so ventilated in a minor repair garage become Class I, Division 2 locations.

Office areas, stock rooms, toilets, etc., are all classified as nonhazardous locations if they have at least four air changes an hour, or if they are effectively cut off from the repair area by partitions. Areas that are adjacent to the repair area but not cut off by partitions and do not have four air changes an hour may be classified as nonhazardous locations if they have either sufficient ventilation for ordinary needs, an air pressure differential, or spacing that presents no hazard in the judgment of the authority having jurisdiction. [A pressure differential means that the air pressure is slightly higher in the adjacent area than in the hazardous (repair) area so that no vapors will flow from the hazardous area to the adjacent area.]

Wiring Methods. The wiring in nonhazardous areas of commercial garages may be any type discussed in this division.

Exceptions: In an area above a hazardous location that is not cut off by a ceiling, the wiring must be in a metal raceway, rigid nonmetallic conduit, ENT, Type AC or MC or MI cable, or manufactured wiring systems, or Type TC cable, or for signaling purposes, Type PLTC. EMT is very commonly used in such areas.

Luminaires in the area above vehicle lanes must be not less than 3.7 m (12 ft) above the floor, or be constructed in a way that prevents sparks or hot particles from falling to the floor. Where fluorescent lighting is used and the luminaires are neither 3.7 m (12 ft) above the floor nor equipped with a glass or plastic bottom, there are plastic sleeves and similar devices available to hold a broken fluorescent tube (lamp) and prevent the hot cathode ends of the lamp from falling to the floor. Other equipment above the hazardous location, such as motors or switches, must be totally enclosed if less than 3.7 m (12 ft) above the floor. Drop lights, unless restrained against coming within 450 mm (18 in.) of the floor, must be suitable for Class I, Division 1 locations.

Wiring in the hazardous location must be of a type specifically described in this part of Div. 9 for Class I, Division 1 or Division 2 (whichever it is). A sealing fitting is required to be installed where the wiring enters or leaves the hazardous location so that there is no coupling or other fitting between the sealing fitting and the boundary between the hazardous and the nonhazardous locations. A sealing fitting is also required at an equipment enclosure, such as a receptacle or switch box, that is within the hazardous location, but it is common practice to keep all such wiring and equipment above the 450 mm (18-in) level where practical. Equipment can almost invariably be kept above the 450 mm (18-in) level, but sometimes the wiring is brought in from underground or installed in the floor slab. In all such cases, install threaded rigid metal conduit, use gasoline- and oil-resistant wire, and seal the conduit so there is no coupling or other fitting between the sealing fitting and the 450 mm (18-in) level. Install a sealing fitting at the panelboard end as the last fitting above grade.

Battery chargers and their control equipment must not be installed in the hazardous location. If batteries are charged in a separate compressor room, tire-storage room, or similar

area, the room must be well ventilated to allow dissipation of the hydrogen gas. (There is not enough hydrogen gas involved for a battery room to be classified as a hazardous location, but the small amount that is developed must be allowed to dissipate.)

423. Service stations are covered in the NEC as “Motor Fuel Dispensing Facilities” in Article 514. The service area (such as a “lubritorium”), office, storage room, toilets, etc., are treated the same as similar areas in a commercial garage. The gasoline-dispensing areas are classified as follows:

The area within the gasoline dispenser (pump) is no longer classified by language in the NEC; due to differences in modern dispenser designs, this area classification is now left to the product standards as part of the listing process. However, any pit or below-grade space that extends upward into a classified location within the dispenser is Class I, Division 1. In addition, the entire area within 450 mm (18 in.) horizontally of the dispenser enclosure, or of any liquid-handling components within the enclosure, is Class I, Division 2. Moving outward from the dispenser, the entire area extending 6.0 m (20 ft) horizontally in all directions from the dispenser enclosure and extending up to 18 in. above grade is a Class I, Division 2 location. This includes any indoor area not suitably cut off by partitions. The below-grade area is unclassified because there is not enough air to support combustion. However, conduits routed beneath these areas can accumulate fumes and must be sealed.

The requirement to seal applies to the point of conduit emergence from grade. This allows the seal, which must always be accessible and usually within a conduit length of the required location, to be at a convenient point. Otherwise installers would be installing hand-holes in areas of unbroken pavement to accommodate sealing requirements.

The area within 3.0 m (10 ft) horizontally of a storage-tank fill pipe (for a loose-fill connection) or 1.5 m (5 ft) horizontally of the tight-fill connections more common today because of environmental concerns, and extending to 450 mm (18 in.) above grade is a Class I, Division 2 location; the below-grade area beneath this is a Class I, Division 1 location. For storage tank vent pipes, the spherical volume within a 900-mm (3 ft) radius of the discharge point of a storage-tank vent pipe is a Class I, Division 1 location; the spherical volume between the 0.90-m and 1.5-m (3-ft and 5-ft) radius is a Class I, Division 2 location.

Any wiring to pole lights, signs, etc., must be kept out of the hazardous locations or be made to comply with the rules for the location, which include a sealing fitting at each end of a conduit that passes through a hazardous area. It also means that any below-grade wiring within any hazardous location must be in rigid metal conduit and be nylon-covered gasoline- and oil-resistant wire, since gasoline can and often does get into below-grade conduit in hazardous locations. (Under some conditions, as noted in the general discussion, rigid non-metallic conduit and Type MI cable may also be installed underground.) For wiring to a gasoline dispenser, a sealing fitting must be the first fitting in the conduit where the conduit emerges from below grade at the dispenser and also where the conduit emerges from below grade at the panelboard. An explosionproof flexible fitting is frequently required between the sealing fitting and the equipment inside the dispenser, since the conduit may not quite line up with the internal fittings, and there is not much room for bending rigid metal conduit underneath the dispenser.

Any branch circuit supplying a dispenser or passing through a dispenser (such as to supply a lighting standard near the dispenser) must have a circuit breaker or switch that disconnects all conductors of the circuit, including the grounded (white) conductor. There are special circuit breakers made for this specific purpose; they have a switching pole for the grounded conductor as well as for the ungrounded conductor, but there is no overcurrent device in the grounded conductor pole of the breaker. If such a circuit breaker is not used, a switch without a fuse in the grounded conductor, but that opens all conductors (including the grounded conductor) simultaneously, must be used.

424. Paint-spraying booths are covered in NEC Article 516, which include paint-spraying booths and areas. Some repair garages have a body shop with a paint-spraying booth. No electric equipment, and no wiring except threaded rigid metal (or intermediate metal) conduit, or Type MI cable, or metal boxes (or fittings), provided they contain no splices or terminal connections, are permitted in a paint-spraying booth unless the equipment and the splice and terminal enclosures are approved for both Class I, Division 1, Group D locations, *and* for accumulations of readily ignitable residues. Luminaires are the only equipment available (as of this writing) meeting both these requirements. To wire such a booth, proceed as follows:

Luminaires (in conjunction with transparent baffles, exhaust-air movement, and careful placement) can often be installed where they will not be covered with paint residue, but it is sometimes difficult to do and not always acceptable to some inspectors. So use luminaires that are approved for both Group D and for paint residue. Then wire them with threaded rigid (or intermediate) metal conduit (or Type MI cable) without splice boxes or switches inside the booth. Explosionproof boxes, as shown in Fig. 9.277, may be used as long as there are no splices in the box; and switches must be installed outside the booth.

If luminaires other than the type that are approved for residue are used, install them outside the booth so that light will enter the booth interior through extra-strength glass panels in the roof or sides of the booth (or both). Wire these luminaires as required for the garage location in which they are located.

The exhaust fan (which must have nonferrous blades, that is, not iron or steel but rather aluminum or brass) must have the fan motor installed outside the exhaust stack and connected to the fan by a metal shaft or by a staticproof belt. Wire the motor as required for the location. That is, if it is inside the garage repair area, wire it accordingly; if it is outdoors, wire it for an outdoor location. (In some cases one wall of a booth may be the exterior building wall; so in some cases, the motor could be outdoors.)

INSTALLATION OF APPLIANCES

425. Connection to circuit and protection. A portable appliance may be connected only to a receptacle having a rating at least as great as the appliance. The standard duplex convenience-outlet receptacle is rated at 15 A and may supply a single 15-A fixed appliance or a 12-A portable appliance if used on a 15-A branch circuit. Heavy-duty receptacles rated at 20, 30, and 50 A may be obtained for higher-current appliances. On new installations all 15- and 20-A receptacles must be of the grounding type. (Refer to Div. 4 for a description of receptacles.) Most household appliances, such as toasters, hot plates, percolators, flatirons, waffle irons, refrigerators, radiant heaters, roasters, portable ovens, etc., are rated at less than 12 A, so that they may be used in the standard outlet on a 15-A circuit.

Appliances other than motor-operated ones are not generally required to have individual overload protection.

426. In wiring appliances one of the approved types of cords listed in Div. 2 should be used. If the appliance is rated at more than 50 W and temperatures of more than 121°C (250°F) are produced on surfaces with which the cord is apt to be in contact, one of the types of heater cords must be used. Every heating appliance which is intended to be applied to combustible material as a smoothing iron must be equipped with a stand, which may be separate or a part of the appliance. Each heating appliance intended to be located in a fixed

position must have ample protection provided between the appliance and adjacent combustible material.

427. Disconnecting means (National Electrical Code). Each appliance shall be provided with a means for disconnection from all ungrounded conductors as follows:

1. **Portable Appliances.** For portable appliances (including household ranges and clothes dryers) a separable connector or an attachment plug and receptacle may serve as the disconnecting means. The rating of a receptacle or of a separable connector shall not be less than the rating of any appliance connected thereto, except that demand factors authorized elsewhere in the NEC may be applied. Attachment-plug caps and connectors shall conform to the following:
 - a. *Exposed parts.* They shall be so constructed that there are no exposed current-carrying parts, except the prongs, blades, or pins. The cover for the wire terminations shall be a part that is essential for the operation of an attachment plug or connector (dead-front construction).
 - b. *Rating.* The rating of a receptacle or of a separable connector shall not be less than the rating of any appliance connected thereto.
 - c. *Noninterchangeability.* They and their mating receptacles shall be constructed such receptacles or cord connectors do not accept an attachment plug with a different voltage or current rating from that for which the device was intended. However, a 20-A T-slot receptacle or cord-connector shall be permitted to accept a 15-A attachment plug of the same voltage rating. Nongrounding receptacles and connectors shall not accept grounding-type attachment plugs.

For cord- and plug-connected appliances, where the separable connector or plug and receptacle are not accessible, the appliance shall be provided with a disconnecting means in accordance with the provisions for permanently connected appliances. For household electric ranges, a plug-and-receptacle connection at the rear base of a range, if it is accessible from the front by removal of a drawer, is considered as meeting the intent of the accessibility rule.

2. **Permanently Connected Appliances.** For permanently connected appliances rated not over 300 VA or $\frac{1}{8}$ hp, the branch-circuit overcurrent device may serve as the disconnecting means. For permanently connected appliances of greater rating, the branch-circuit switch or circuit breaker within sight from the appliance, or is capable of being locked in the open position, may serve as the disconnecting means.
3. **Unit Switches with a Marked "Off" Position.** Switches that are a part of an appliance and that disconnect all ungrounded conductors shall not be considered as taking the place of the single disconnecting means required by this section unless there are other means for disconnection as follows:
 - a. *Multifamily dwellings.* In multifamily (more than two families) dwellings, the disconnecting means shall be within the apartment or on the same floor as the apartment in which the appliance is installed and may control lamps and other appliances.
 - b. *Two-family dwellings.* In two-family dwellings, the disconnecting means may be outside the dwelling in which the appliance is installed. This will permit an individual switch for the dwelling to be used and shall also be permitted to control lamps and other appliances.
 - c. *One-family dwellings.* In one-family dwellings, the service disconnecting means may be used.
 - d. *Other occupancies.* In other occupancies, the branch-circuit switch or circuit breaker, if readily accessible to the user of the appliance, may be used for this purpose.

- 4. Switch or Circuit Breaker to Be Indicating.** Switches or circuit breakers used as disconnecting means shall be of the indicating type.
- 5. Motor-Driven Appliances.** A switch or circuit breaker which serves as the disconnecting means for a permanently connected motor-driven appliance of more than $\frac{1}{8}$ hp shall be located within sight of the motor controller.

Exception. A switch or circuit breaker that serves as the other disconnecting means as required in Par. 3 shall be permitted to be out of sight from the motor controller of an appliance which is provided with a unit switch or switches with a marked-off position and which disconnects all ungrounded conductors.

428. Portable appliances need to be grounded as specified in Sec. 250.114 of the NEC.

429. Signals and temperature-limiting devices for heated appliances. In other than dwelling-type occupancies, each electrically heated appliance or group of electrically heated appliances intended to be applied to combustible material shall be provided with a signal unless the appliance is provided with an integral temperature-limiting device.

430. Overcurrent protection for nonmotor-operated appliances must not exceed the marking on the appliance (if any). If the appliance is not marked, the overcurrent protection must not exceed 20 A on appliances rated 13.3 A or less, and must not exceed 150 percent of the rating of larger appliances. Rounding up to the next higher standard sized overcurrent device is permitted.

Electric ranges, cooktops, and similar appliances with surface-type heating elements that present a load in excess of 60 A after the application of the demand factors in Table 2 in Div. 12 shall have that load subdivided into two or more circuits. The resulting circuits shall have overcurrent protection rated at not over 50 A.

ELECTRIC COMFORT CONDITIONING

431. Introduction. As a practical guide to electric comfort conditioning, these sections are designed to provide a general understanding of when to use electric heating and cooling systems, how to estimate heat loss, what type of equipment is available, and where comfort conditioning equipment should be located.

432. When to use electric heating and cooling. Electric heating and cooling systems are used in all types of buildings, and there are outdoor spot-heating systems in addition to snow-melting and deicing systems.

433. Residential buildings. Electric heating and cooling systems for single-family dwellings and many multifamily dwellings, widely accepted at one time throughout the United States, are now used far less frequently due to the cost of energy. Whether such a

system is most desirable economically, a personal preference, or a luxury depends upon its usage by the occupants, the construction of the building, and the local electric utility rates (cost per kilowatthour of electricity for heating).

1. **Advantages of Electric Heating** include individual room control, long life of the equipment, space-saving features, cleanliness, and safety. However, the user can abuse these advantages by leaving doors, windows, or fireplace chimney flues open; overheating; or improper building construction or insulation. Improper usage by the occupant is usually the reason for excessive utility bills.
2. **Insulation.** If electric heat is to be operated economically, it is important to consider the value of insulation. A well-insulated residence requires less equipment and incurs lower operating costs. Savings in equipment cost and annual operating costs generally pay for the increased cost of added insulation, storm windows, and storm doors.
3. **Selecting Insulation.** It is important to consider the effectiveness of insulation in terms of resistance to heat transfer and not just thickness. The effectiveness of insulation (for ceilings, walls, and floors) is judged in terms of its *R* (resistance) value. The insulation manufacturer will indicate the *R* value for a given thickness. For buildings with electric comfort conditioning, the National Mineral Wool Insulation Association at one time specified a minimum resistance as follows: ceilings = *R*19; walls = *R*11; floors = *R*13. Building codes today generally move these numbers far higher, and should be consulted prior to designing an installation.
4. **Construction of the Wall or Ceiling Roof.** The construction is not very significant if the minimum *R* value is provided. Storm windows (and doors) or double-glazed glass more than double the *R* value of the glass area.
5. **House with a Heated Basement.** Such a house need not have insulation under the floor, but there should be insulation under a floor which is over an exposed crawl space. The most effective insulation for concrete slabs is around the exposed outside edge. Perimeter-slab insulation can be extended down vertically about 24 in. (609.6 mm) or can be installed around the edge of the slab at about the same distance.
6. **Insulation Protection.** To protect insulation from the negative effect of moisture from within the house, a vapor barrier on the inside face of the insulation is recommended. The vapor barrier must be protected from damage, and any tears or holes must be repaired.
7. **Well-Insulated Buildings.** A well-insulated building may become an excessively humid building. To avoid excessive humidity buildup, a *humidistat* should be used to control one or more exhaust fans or a fresh-air ventilator. The humidistat closes the circuit to the fans when the relative humidity exceeds the preselected humidistat setting.
The operation of a humidistat is similar to that of a thermostat, except that the sensing element responds to humidity instead of heat. Also, the element in a humidistat most commonly consists of a series of human hairs, which respond to changes in the relative humidity. In a home the relative humidity rises because of the use of dishwashers, dryers, washing machines, showers, sinks, and similar sources when use of water or production of moisture occurs.
8. **Heat Loss.** A residential building, insulated to the previously indicated specification, will have a heat loss of about 10 W/ft² (0.93 W/m²) or 1 W/ft³ (0.028 W/m³).
9. **Heat-Loss Survey.** Before actual load requirements are determined, a heat-loss survey of all exposed rooms should be made. If, for example, in the New York City area, with an outside design temperature of 0°F (−18°C) and an inside design temperature of 70°F (18°C), the heat loss is to be determined for a frame residence, the loss for each exposed room can be calculated in the same manner as in the following example for a 12- by 10- by 8-ft (3.7- by 3- by 2.4-m) corner bedroom (bedroom A).

	Sq-ft		Factor		Heat loss, W
Gross outside wall windows (and doors)	176		—		—
	24	×	12	=	288
Net outside walls	152	×	1.6	=	243
Ceiling	120	×	1.0	=	120
Floor	120	×	2.0	=	240
Infiltration	960	×	0.4	=	384
Total heat loss					1,275

10. *Steps in Calculating Heat Loss*

- a. Determine heat-loss factor in watts per square foot by the R value. Refer to the *NEMA Electric Heating Guide*, *The Electric Heating and Cooling Handbook* (published by Edison Electric Institute), or the *ASHRAE Guide and Data Books*.
- b. Multiply the total square-foot area for all exposed areas by this factor. (Deduct exposed-glass and door area from the gross wall area to determine the net wall area.)
- c. Multiply the cubic-foot volume by the infiltration or air-change factor.
- d. Add all products for the total heat loss of the room.
- e. Add the heat loss of all the rooms to determine the total heat loss of the house. See the following example:

Rooms	Heat loss, each room, W
Living room	2,350
Bedroom A	1,275
Bedroom B	980
Bathroom	610
Kitchen-dining	1,420
Hall	735
Total heat loss	7,370

11. *Determining Annual Operating Cost.* Check with the local utility for the conversion factor for kilowatthours. If the heat loss is 7370 W and the conversion factor is 1.4, multiply the heat loss of 7370 W by 1.4, which equals 10,318, the total number of kilowatthours required to provide a 70°F (18°C) indoor temperature during the heating period. A similar heat-gain study can be made to determine the cooling load. Once the kilowatthour consumption is estimated, multiply 10,318 kilowatthours by 0.0458 (4.58 cents), the 1985 base rate for electric heating in Chicago. The product is \$472.56, which is the estimated annual operating cost for electric heating. On the basis of an 8-month heating season, the average operating cost per month is \$59.07. Today's unit energy costs are frequently double this number or even more, so make a proportional increase based on local energy costs. Heat-loss calculations of this type may also be made for apartment buildings, small commercial buildings, and other small buildings. For large commercial or institutional buildings, other factors, particularly that of fresh-air changes, must be considered.

434. Commercial or industrial buildings. Many factors are involved in considering the use of electric heating in a commercial, industrial, or institutional building. Usually, a consulting engineer or heating specialist will perform a feasibility study which compares electric heating with other types of heating systems. The study will compare not only the cost of fuel but also the annual capital costs and maintenance costs over a period of years. The selection of electric heating, however, will generally depend upon the cost of electricity.

435. Types of equipment. There are many types of electric heaters, varieties of housings, heating elements, and methods of distributing the heat into the heated area.

1. **Electric Heaters.** There are convector, fan-forced, or radiant types of heaters. Each heater contains a resistance element which heats air or water. All such heaters provide both radiant and convection heat. The ratio depends upon the type of heater. Radiant heaters provide the highest radiation-to-convection ratios.
2. **Residential Buildings.** A centralized system may be an electric furnace, boiler, or heat-pump system. A decentralized system could include the use, entirely or in combination, of baseboard heaters, wall heaters, floor-drop-in heaters, ceiling heaters, or ceiling panels or heating cables. The decentralized systems permit individual room control. Central systems have central control but often have the advantage of combining heating and cooling in the same duct system. The conversion of a fossil-fuel-fired hot-air or hot-water system can be readily accomplished by replacing the existing furnace or boiler with an *electric* furnace or hot-water boiler.
3. **Commercial Buildings.** Central systems are available with large banks of electric duct heaters in conjunction with air handlers. Electric hot-water or steam boilers are available in large kilowatt capacities. Central heating and cooling systems can be used in conjunction with perimeter-baseboard-type heaters.
Perimeter heaters will counteract external-wall heat loss and allow control of the heaters in modular sections.
4. **Unitary Systems.** In commercial buildings unitary systems permit combinations of heating and cooling with control of each room or area.
5. **Through-the-Wall Heating and Air-Conditioning Units.** Particularly in school buildings, such units help to reduce engineering and maintenance costs. Unitary-equipment breakdown affects only a single room or area instead of the entire building or large section that is affected when a central system becomes defective.
6. **Roof-top Equipment.** Such equipment saves building space in low-ceiling commercial buildings while providing large-capacity electric heat and cooling into a ceiling plenum or duct system.
7. **Electrically Heated Buildings.** Most such buildings will use electricity for domestic hot water. All-electric kitchens complete the application of electricity in the *total-electric* concept.
8. **Partial-Building Heat.** This is another common application for unitary heaters.
9. **Infrared Heaters.** These provide spot heating for indoor or outdoor heating applications. Electric-heating cables or mats for snow melting, deicing, or pipeline heating offer convenience and reduction of costs unavailable in other systems.

436. Equipment capacities. The following equipment is described for various applications in Secs. 437 to 443.

437. Electric furnaces (Figs. 9.282 and 9.283) are made in capacities of 4 to 35 kW at 240 V, single-phase or three-phase.

This heating assembly is a compact package heating system for new buildings or conversion applications in homes, apartments, or small commercial buildings. The furnace can be positioned in the ducts so that it can be used for upflow, downflow, or horizontal discharge in basements, attics, utility rooms, or utility closets.

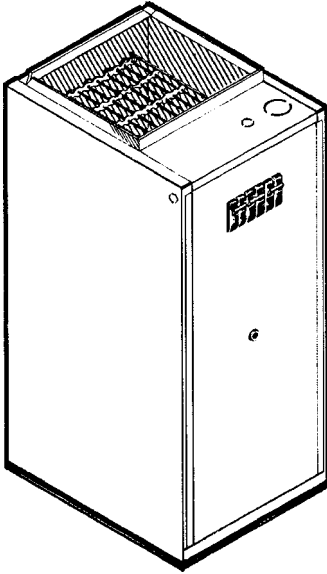


FIGURE 9.282 An electrical residential-type furnace. [King Electrical Mfg. Co.]

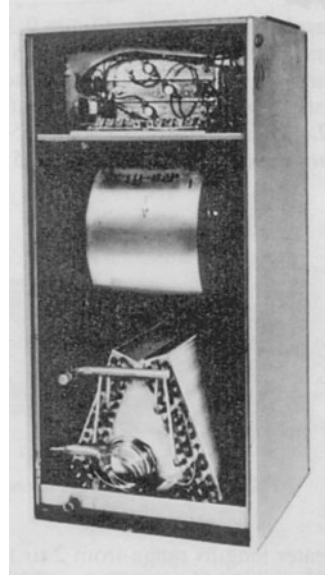


FIGURE 9.283 Central electric furnace for homes with heating elements, controls, blower motor, and ac cooling coil.

Heating elements can be internally wired to be energized in 5-kW stages, at 60-s intervals, to prevent power surges. As part of the electric-furnace system, summer air conditioning or an electronic air cleaner may be added at any time without changing the blower or duct system. Some units are designed to be used with a split-system air conditioner. Low-voltage wall-mounted controls are usually installed in a central part of the building.

438. Hydronic boilers have capacities from 6 to 30 kW at 240 V, single-phase. These wall-mounted hot-water boilers are compact in size (between 2 and 8 ft³, or between 0.057 and 0.227 m³) and weigh about 120 lb (54.4 kg). A typical boiler has incremental stages (5 kW or less), which sequence at 30- to 45-s intervals to eliminate a large power surge. Centrally located low-voltage wall-mounted controls operate the boiler.

439. Heat pump

Capacities range from 23,000 to 236,000 Btu for heating and 2 to 20 tons for cooling, single-phase or three-phase, at several voltage ratings.

The residential heat pump is a boxlike unit which is installed inside or outside the building, although it is usually outside with air-to-air heat transfer. The heat pump designed for outdoor installation is roof-mounted, through-the-wall, or remote-mounted. In cold climates (below 20°F, or -7°C, outdoor design) supplementary space-heating equipment is used in conjunction with the heat pump. An accessory kit is available for low-ambient operation.

The heat pump is regarded as a low-operating-cost heating and cooling system with a centrally mounted combination heating-cooling thermostat. Figure 9.284 shows a 3-ton residential central condensing unit for an air conditioning system; heat pumps run in the cooling mode will have comparable capacities. Large-capacity heat pumps are sometimes used for commercial or industrial buildings.

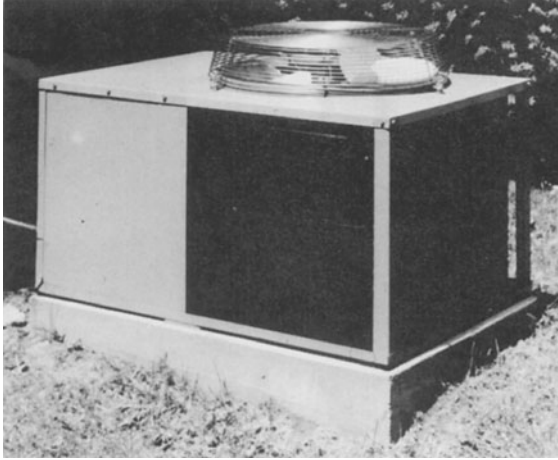


FIGURE 9.284 A 3-ton residential central air-conditioning condensing unit.

440. Residential unitary systems include several types of electric heaters or combination units:

1. **Baseboard Heaters.** Figure 9.285 shows a typical unit of these commonly used heaters. Capacities range from 375 to 3500 W at 120, 208, or 240 V.

These heaters are usually surface-mounted convector units with finned-tubular or cast-aluminum (Fig. 9.285) heating elements. Ratings are in terms of watt density. *Low watt density* is about 175 W/ft, *medium watt density* is about 225 W/ft, and *high watt density* is about 275 W/ft.

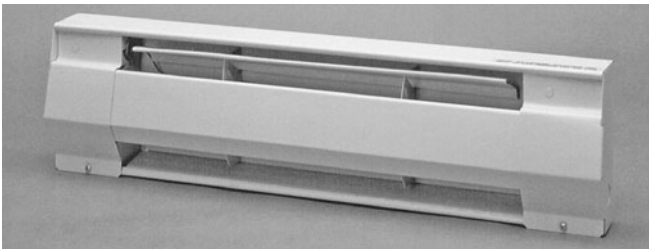


FIGURE 9.285 Baseboard heating section. [King Electrical Mfg. Co.]

Heater lengths range from 2 to 12 ft (from 0.6 to 3.7 m), and heights are usually from 6 to 9 in. (from 152.4 to 228.6 mm). The heaters are controlled by integral line-voltage thermostats, thermostat sections, line-voltage wall thermostats, or low-voltage wall thermostats.

These heaters are most commonly used to provide perimeter heating, particularly under the windows of outside walls. They can be easily installed in both new or existing buildings. Many baseboard heaters provide a full-length wireway. They have knockouts in the bottom, side, and back for electrical-supply connections. A plastic seal can be provided on the back of the heater to maintain a neat appearance when the heater is installed against an uneven wall. An air deflector directs heated air away from the wall. A free-floating element reduces expansion and contraction noises.

Heater accessories include blank sections which can be cut on the job for wall-to-wall installations. A thermostat section is available with or without duplex receptacles, although a receptacle section itself is available with some heaters. A control section, with or without a thermostat, may be used to switch the same source of power from an off position to a heat position or to a cool position. A room air conditioner is plugged into the top of this section. Also available is a section that contains a relay or transformer-relay for use with a low-voltage thermostat.

- 2. Radiant Wall Heaters.** These heaters are also widely used. Capacities range from 500 to 6000 W at 120, 208, or 240 V.

Residential units of this type are for surface or recessed mounting. Small-capacity (500- to 1500-W) heaters are used in bathrooms or other small rooms. Large-capacity (2- to 6-kW) heaters are designed for add-on rooms, new construction, or existing room areas. The radiant heater may have a resistance element or glass panel with embedded resistance material. A typical glass unit, rated at 750 W, is shown in Fig. 9.286.

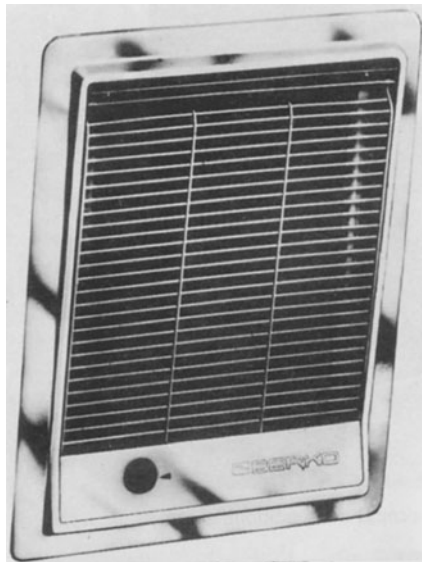


FIGURE 9.286 A 750-W recessed heater with a glass heating panel. [Berko Electric Mfg. Corp., division of Weil-McLain]

This heater features a built-in thermostat and shallow depth for recessed applications (2 in, or 50.8 mm, in some cases). For ease of installation, there are knockouts on the back, bottom, or side.

3. **Forced-Air Wall Heaters.** Such a heater is shown in Fig. 9.287. Capacities range from 660 to 4000 W at 120, 208, 240, or 277 V.

These residential units can be recessed, semirecessed, or surface-mounted. Most commonly, this type of heater has a built-in thermostat with a positive off position. The lower-capacity heaters (660 to 1500 W) are used in bathrooms and other small rooms. The higher-capacity heaters (2 to 4 kW) are commonly used in basements, recreation rooms, or add-on rooms. The larger heaters offer several options. Some units have a fan-delay switch, a built-in safety switch, a fuse-disconnect, or a low-voltage transformer. A self-lubricating motor is common in the larger heaters. Also, a permanent type of filter is available in large-capacity heaters.

Some of these heaters utilize the counterflow principle of heat and air distribution. They may be controlled by a separate line- or low-voltage thermostat in conjunction with an integral or remote relay. A fan switch permits summer operation.

4. **Convector Wall Heaters.** Such a heater is shown in Fig. 9.288. Capacities range from 500 to 5000 W at 120, 208, or 240 V.

These convector units can be surface- or recess-mounted with integral or remote controls. Low wattage heaters can be used in shops, corridors, breezeways, and basements. Larger-wattage convectors can be used to heat basements, attics, or any area where limited wall space prevents the use of baseboard heaters.

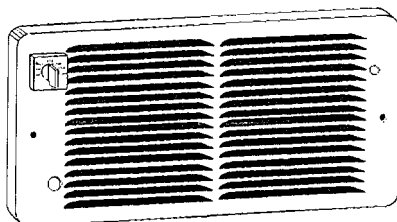


FIGURE 9.287 A recessed forced-air wall heater with built-in thermostat and fan switch. [King Electrical Mfg. Co.]

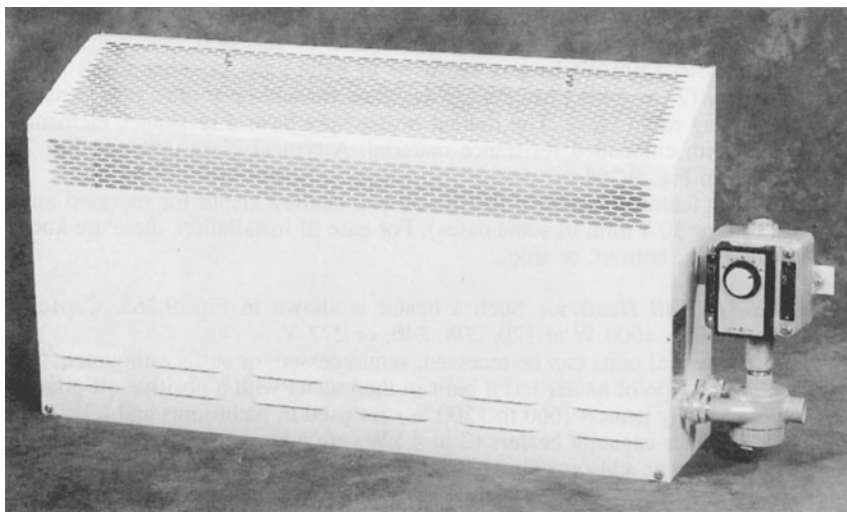


FIGURE 9.288 Convector wall heater listed for Class I, Group D, hazardous locations. [Chromalox, Wiegand Industrial Division of Emerson Electric Co.]

5. **Fan-Forced Kick-Space or Baseboard Heaters.** Such a heater is shown in Fig. 9.289. Capacities range from 750 to 2000 W at 208 or 240 V.

Such heaters can be surface- or recess-mounted. They are well suited to locations where baseboard radiation is desired but only limited space is available. The kick-space heater has a quiet tangential blower and is particularly suitable for kitchens or bathrooms where adequate wall space is not available. It is recessed into the kick-space area under a cabinet or counter. Control is by a separate wall-mounted line-voltage thermostat.

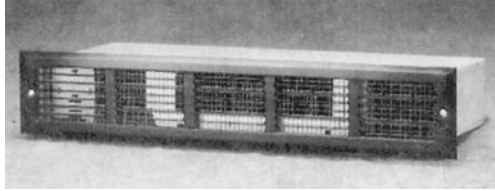


FIGURE 9.289 Fan-forced recessed kick-space heater.
[Chromalox, Wiegand Industrial Division of Emerson Electric Co.]

6. **Wall-Mounted Electric Fireplaces.** Such a fireplace is shown in Fig. 9.290. Capacities range from 2000 to 5000 W at 240 V.

This unit is a forced-air surface-mounted heater designed to look like a fireplace. It has a glowing grate with realistic logs in a steel cabinet which is finished in matte black or copper-tone enamel. It is ideal for dens, beach and mountain cabins, offices, motels, restaurants, and lounges. The electric fireplace can have a built-in thermostat and fan-delay control; it is also available with a remote wall-mounted low-voltage thermostat.

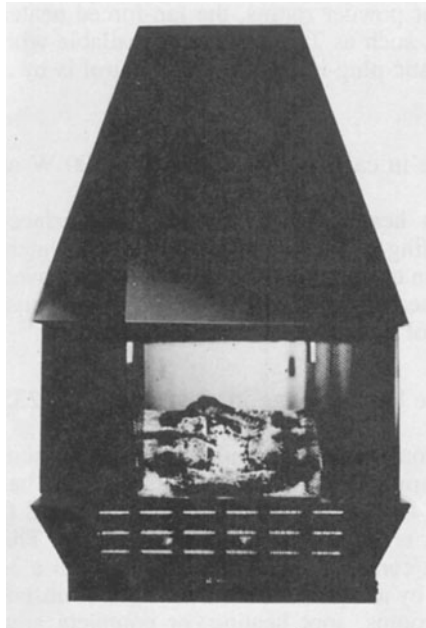


FIGURE 9.290 Wall-mounted electric fireplace.

7. **Radiant-Heat Ceiling Units.** Such a unit is shown in Fig. 9.291. The capacity of the heater is 1500 W at 120 V. Lighting consists of two 60-W incandescent lamps, and the small exhaust fan is rated at 60 ft³/min (0.028 m³/s).

This unit is recessed in the ceiling of bathrooms. A wall-mounted switch or time-control switch provides individual control of the heater and lamps.

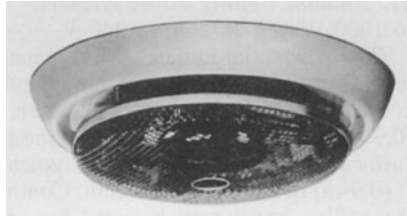


FIGURE 9.291 Radiant heater with fan circulation for ceiling mounting.

8. **Radiant and Forced-Air Ceiling Heaters.** These heaters are available in capacities of 600 to 1250 W at 120 V.

A typical unit is attached directly to a flush 3½- or 4-in ceiling outlet box. This heater is commonly used in small bathrooms, playrooms, and powder rooms. A small fan is used to force heat away from the ceiling; the primary heat is radiant. In some heaters, a center-mounted 100-W incandescent lamp is available for lighting.

9. **Forced-Air Ceiling Heaters.** Such heaters range in capacities from 1000 to 1525 W at 120, 208, or 240 V.

Forced-air units can be surface-mounted on a standard flush 3½- or 4-in ceiling outlet box. Commonly used in bathrooms or powder rooms, the fan-forced heater is approved for standard 60°C supply wires, such as Type TW. It is available with adjustable mounting brackets and an automatic plug-in connection. Control is by a wall-mounted thermostat.

10. **Radiant Ceiling Heaters.** These range in capacities from 600 to 1500 W at 120, 208, or 240 V.

The ceiling-mounted residential radiant heater can be recessed or surface-mounted on a standard flush 3½- or 4-in ceiling outlet box. Available with a center-located 100-W incandescent lamp and plug-in connections, the heaters are approved for 60°C supply wires. The radiant ceiling heater is commonly used in bathrooms, powder rooms, or other small rooms. Control is by a wall-mounted thermostat.

11. **Radiant Ceiling Panel Heaters.** These heaters range in capacities from 235 to 1000 W at 120, 208, or 240 V.

The residential radiant ceiling panel is constructed of laminated glass, gypsum dry-wall, or radiant metal. It can be surface-mounted, recessed, or used in a T-bar construction module, usually in panels 2 to 4 ft (0.6 to 1.2 m) wide and 3 to 12 ft (0.9 to 3.7 m) long. The depth of the heater is ¾ to 1 in. (19.05 to 25.4 mm). The surface finish can be painted. A typical unit contains a 4-in terminal box and a 3-ft (0.9-m) flexible metal conduit. Controlled by a separate wall-mounted thermostat, the ceiling panel may be used for small rooms, spot heating, or complete area heating.

12. **Ceiling Heating Cable.** A typical run of this cable is shown in Fig. 9.292. Capacities range from 200 to 5000 W at 120, 208, or 240 V, and lengths are from 75 to 1800 ft (from 22.9 to 548.6 m).

Ceiling cable is embedded in plaster or laminated ceiling construction for individual rooms or complete house heating. Color-coded cables are electrically insulated and

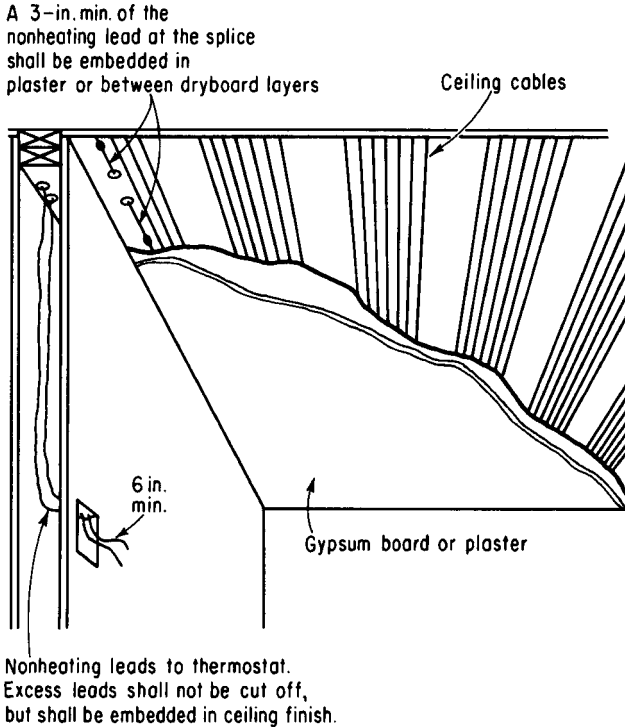


FIGURE 9.292 Installation of ceiling heating cable. Adjacent cable runs must be spaced not less than 38 mm (1½ in.) on centers. [*Electrical Construction and Maintenance*]

resistant to high temperature, water absorption, aging effects, and chemical action. The cables are usually rated at 9 W/m (2¾ W/ft). They must not be cut in the field, and identification labels must not be removed.

Nonheating lead wires, 2.1 m (7 ft) or longer, extend to the thermostat or a junction box. For installation (Fig. 9.293), the cable is stapled to a nonmetallic fire-resistant surface at least every 400 mm (16 in.). After the first plaster coat has been applied, cables should be tested for continuity and for insulation resistance (at least 100,000 Ω measured to ground).

Minimum spacing between cable runs is 38 mm (1½ in.) on centers with the closest spacing near the outside walls. Cables should clear lighting fixtures by at least 200 mm (8 in.). General electrical wiring (for lights, etc.) should be run over the thermal insulation and at least 50 mm (2 in.) over the heated ceiling surface.

- 13. Floor Heating Cable.** Such cable has unlimited heat capacities which vary with the conductor resistance, type of cable, and length of cable. Ratings are from 120 to 600 V. In residential occupancies ratings are 120, 208, or 240 V.

Heating cables are used in floors to form radiant panel systems. Cables most commonly used are polyvinyl chloride-sheathed cables or mineral-insulated (MI) copper-sheathed cables. In concrete, cables must be of a material that is resistant to any chemical action in the concrete. Cables may be interwoven as part of a properly

grounded prefabricated mat. They may be of predesigned lengths which are spaced to provide a desired radiant-heat output. Cables such as Type MI are available at several different resistances. Single- or two-conductor cables at specified lengths will have varied heat capacities, depending upon the applied voltage. Heating cables may be installed in one or two pours with adjacent runs not less than 25 mm (1 in.) on centers and with adequate spacing between cable runs and metallic bodies embedded in the floor. Nonheating leads must be protected when they leave the floor by rigid metal conduit, IMC, or EMT or, with MI cable, by approved current-carrying non-heating cable sections. Control of floor heating systems is by a thermostat with a capillary and sensing element attached. The sensing bulb is embedded in the slab so that it will respond to typical temperature changes.

- 14. Floor Drop-In Heaters.** Such a heater is shown in Fig. 9.294. Capacities range from 300 to 2000 W at 120, 208, 240, or 277 V.

Residential floor drop-in heaters are resistance convector units, fan-forced units, or units that have a chamber with antifreeze water sealed in and heated electrically. They are best applied to counteract downdrafts from floor-to-ceiling windows or sliding glass doors. They can be installed in wood or concrete floors. A fan-forced heater may have an integral thermostat, but the control for most units is by a line- or low-voltage wall thermostat.

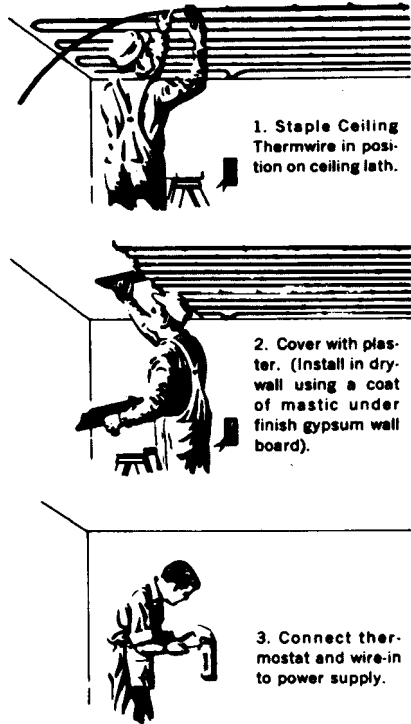


FIGURE 9.293 Three steps in installing ceiling heating cable.

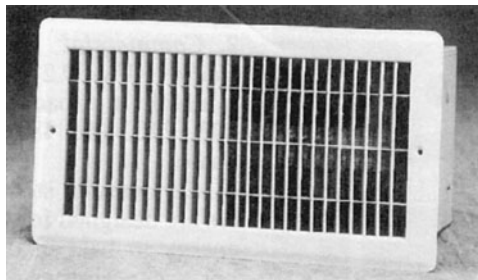


FIGURE 9.294 Fan-forced drop-in floor heater. [Chromalox, Wiegand Industrial Division of Emerson Electric Co.]

441. Central systems for commercial-type occupancies are of the types described in the following paragraphs.

1. **Outdoor Roof-Mount Heating and Cooling Units.** Such a unit is shown in Fig. 9.295. Electric-heating capacities are custom-designed for a particular installation. Cooling capacities range from 2 to 200 tons at 208 V, single- or three-phase; 277 V, single-phase; and 480 V, single- or three-phase.

All-electric heating and cooling machines are designed for roof-mount outdoor conditions. Custom fabrication provides machines with job-specified heating and cooling capacities. Multizone staging from a remote monitoring panel can establish the roof-mount machine as the heating and cooling plant for a one- or two-story building. Supermarkets, office buildings, laboratories, warehouses, machine shops, and aircraft plants are good applications for roof-mount equipment. Space-saving economy is a major feature of such equipment. Staged or step control for the heating section, with fresh-air damper control, provides a well-balanced automated system.

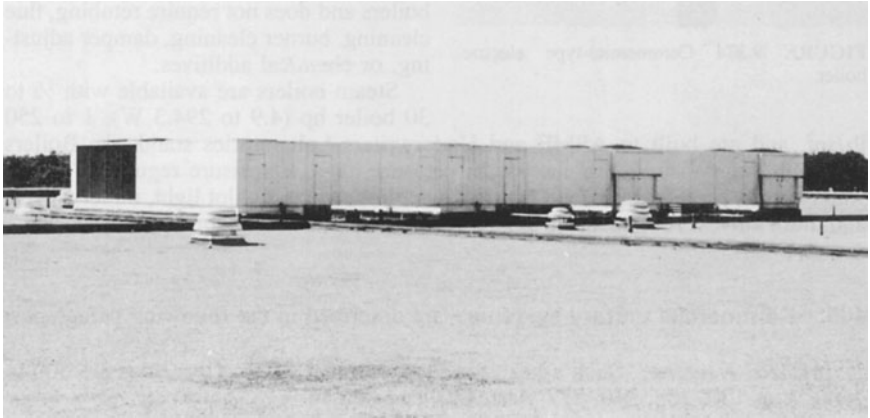


FIGURE 9.295 Large-capacity electric heating-cooling central-system unit mounted on roof.

2. **Commercial Steam or Hot-Water Boilers** (Fig. 9.296). These boilers are available in capacities up to 3000 kW at 208, 240, and 480 V, single- or three-phase.

Commercial steam or hot-water boilers are designed for conversion of electric energy to heat in the form of steam or hot water. Hot-water boilers are used as a replacement for fuel-fired boilers; as the heating component for a chilled water-cooling system; as a safe method of heating a hazardous area; or as a side-arm-faucet water heater. A typical boiler is provided with a low-water cutoff, a safety relief valve, temperature control, a water gage, a high-temperature limit switch, contactors, internal fusing, full insulation, and an enameled-steel jacket. The electric boiler occupies a much smaller floor area than other types of boilers and does not require retubing, flue cleaning, burner cleaning, damper adjusting, or chemical additives.

Steam boilers are available with $\frac{1}{2}$ to 30 boiler hp (4.9 to 294.3 kW), 1 to 250 lb/in², and are built to ASME and Underwriters Laboratories standards. Boilers include a safety valve, a boiler steam pressure gage, a pressure regulator, a low-water cutoff, an automatic-feed control, a control switch, a pilot light, outlet valves, and drain valves. A condensate tank is recommended to reuse the condensed steam.

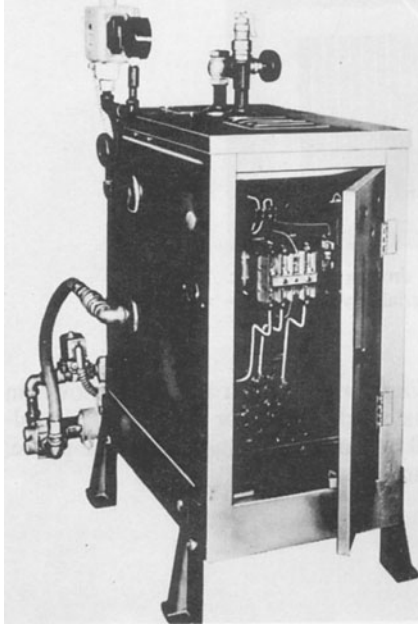


FIGURE 9.296 Commercial-type electric boiler.

442. Commercial unitary systems are described in the following paragraphs.

1. **Infrared Heaters.** Such a heater is shown in Fig. 9.297. Capacities are 500 to 7600 W at 120, 208, 240, 277, 440, 480, and 600 V.

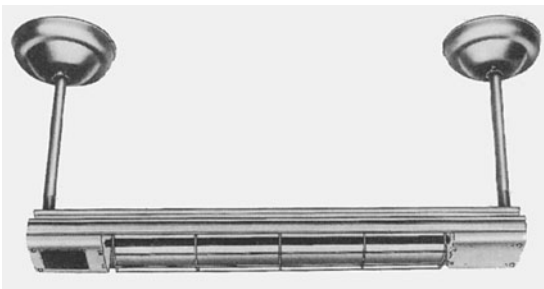


FIGURE 9.297 An infrared heater with quartz lamps. [Chromalox, Wiegand Industrial Division of Emerson Electric Co.]

The heating elements consist of metal-sheathed units, quartz tubes, or quartz lamps. The following table describes the characteristics of these three infrared sources:

Characteristics of Three Infrared Sources

Characteristic	Quartz lamp	Quartz tube	Metal sheath
Relative heat intensity	Very high	Low to medium high	Medium to high
Splash resistance	Very good	Very good	Very good
Color blindness	Fair	Very good	Very good
Life expectancy	5,000 h or more	5,000 h or more	Consult manufacturers
Visible light	High	Low	Low
Heat-up and cool-down time	A few seconds	2 min or more	About 2 min
Relative cost per kW	Medium high	Medium	Medium
Filament or source temperature	About 4,000°F	About 1,200 to 1,800°F	About 1,200 to 1,800°F
Vibration resistance	Medium	Medium	Very good

Infrared heaters are used for complete indoor heating, spot heating, outdoor heating, and outdoor snow melting. For outdoor heating and snow melting it is preferable to use the quartz lamp and to shield the element and fixture from strong winds as much as possible. Rapid cooling of the element diminishes radiation effectiveness. For spot heating, use two fixtures aimed at the center of the target area at about a 45° angle. Do not irradiate outside walls or surfaces over 6 ft (1.8 m) above the floor. For complete comfort heating, install 1/2 W for each degree of operational temperature desired above the minimum ambient ever reached in a specific area. For spot heating provide 1 W/ft²/degree of temperature difference. For outdoor heating provide 2 W/ft²/degree of temperature difference. If, for example, the area to be heated is a storefront sidewalk 100 ft (30.5 m) long by 10 ft (3 m) wide in New York City, proceed as follows (assuming an outside design of 0°F and a desired temperature of 50°F):

$$\begin{array}{r} 100 \times 10 = 1000 \text{ ft}^2 \\ \times 2 \text{ W/ft}^2 \\ \hline 2000 \\ \times 50 \\ \hline 100,000 \text{ W, or } 100 \text{ kW} \end{array}$$

Select fixtures in accordance with the manufacturers' recommendations. The radiation patterns are determined by the reflector design and the resulting beam pattern. Beam patterns range from a 30° to a 90° angle. They may be symmetrical or asymmetrical. Fixtures may have one, two, or three elements. Marquee-type heaters are recessed into an overhead masonry canopy. For snow-melting applications, twice the suggested outdoor capacity is recommended. Provide 150 to 200 W/ft² of area for most applications. Control of infrared heaters is by switch, input control, ambient-temperature thermostat, or any combination of these devices. A high-limit thermostat is recommended for most applications.

- 2. Horizontal Unit Heaters.** Such a heater is shown in Fig. 9.298. Capacities range from 1.5 to 50 kW at 120 or 208 V, single- and three-phase; 240 V, single- and three-phase; 277 V, single-phase; and 480 or 600 V, single- and three-phase.
- Horizontal unit heaters can be installed on the wall or hung from the ceiling with bracket or swivel adjustments. They are ideal for use in warehouses, factories, or entranceways. Unit heaters are normally located along the outside wall with the direction

of airflow in a circular fashion. Large-capacity heaters can be provided with duct collars or deflectors. Unit heaters are commonly controlled by a remote thermostat and may have remote or built-in contactors. A fan-delay switch can be provided to prevent the fan from operating until the heating elements have reached the desired temperature. An explosionproof model is available to conform with Class I, Group D, requirements.

3. **Vertical Unit Heaters.** Several types of these heaters are shown in Fig. 9.299. Capacities are 10 to 50 kW at 208 and 480 V, single- or three-phase. The ceiling-suspended vertical unit heater has integral relays and one- or two-stage remote control. It can be surface-mounted or recessed with air discharge through four optional louver arrangements which permit virtually any desired air pattern at the floor level. Diffusers are of the radial, cone, anemostat, or louver type. Internally mounted automatic-control relays and over-heat and motor-overload protection are usually provided. These heavy-duty units can be used in factories, garages, and warehouses, with high-bay mounting up to 33 ft (10.1 m) above the floor.



FIGURE 9.298 Horizontal unit heaters can be mounted on wall or ceiling. [Chromalox, Wiegand Industrial Division of Emerson Electric Co.]

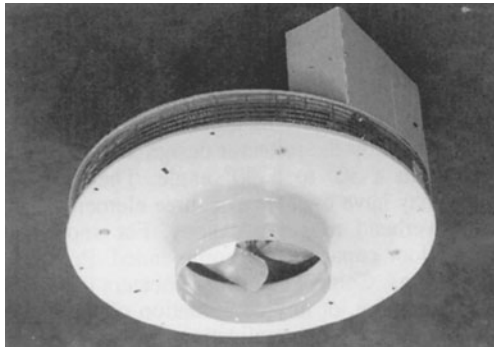


FIGURE 9.299 Vertical unit heaters. [Chromalox, Wiegand Industrial Division of Emerson Electric Co.]

4. **Auditorium Unit Ventilators.** Such a ventilator is shown in Fig. 9.300. Capacities are 12 to 400 kW; 1200 to 15,000 ft³/min (0.57 to 7.08 m³/s), and 208, 240, or 480 V, three-phase. This unit ventilator provides the proper heating, ventilating, and natural cooling required in school auditoriums, gymnasiums, libraries, and other areas where large-capacity systems and quiet operation are essential. It may be installed for horizontal, upright, or inverted operation on the ceiling, wall, or floor; directly in the area to be

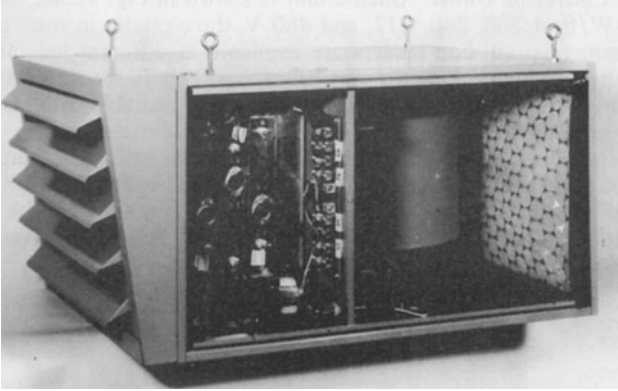


FIGURE 9.300 Auditorium unit ventilator, 15 kW.

served; or in an adjacent location and connected by ductwork. Such a unit features a special attenuator and an enclosed motor and drive designed for quiet operation. Step control is frequently used.

5. **Wall Convector Units.** A typical unit is shown in Fig. 9.301. Capacities are 750 to 4000 W at 208, 240, and 480 V, single- and three-phase. Commercial wall convectors can be surface-mounted or recessed with front or top discharge. These units are used in commercial, industrial, or institutional buildings in offices, corridors, and entrances. Cabinet convectors are available with integral or remote controls.



FIGURE 9.301 Wall convector unit for surface mounting. [King Electrical Mfg. Co.]

6. **Commercial Forced-Air Wall Heaters.** This type of heater is similar to the heater shown in Fig. 9.287. Capacities are 1.5 to 4 kW at 120, 208, 240, or 277 V, single-phase. The commercial forced-air heater can be surface-mounted or recessed. Tamperproof construction makes this unit ideal for entryways, lobbies, corridors, stairwells, and rest rooms in all types of commercial buildings. Fan and discharge louvers direct air downward, keeping the floor warm and dry.
7. **Sill-Line Convector Units.** Such a unit is shown in Fig. 9.302. Capacities are 120 to 750 W/ft at 208, 240, 277, and 480 V, three-phase, in one- or two-stage control. Commercial sill-line heaters are available at different heights and many different wattage outputs. Lengths vary from 2 to 8 ft (0.6 to 2.4 m) to provide modular or wall-to-wall design. Units of this type are available with blank sections, filler sections, matching sleeves, end caps, inside and outside corners, and conduit covers. Sill-line heaters are surface-mounted with front or top discharge when perimeter radiation is desired. They should be mounted at least 2 in. (50.8 mm) above the floor. Built-in controls may be integral to the unit, or they can be provided in a filler section. The filler section can contain a relay for a 120-V remote-control circuit, a disconnect switch, or a circuit breaker.

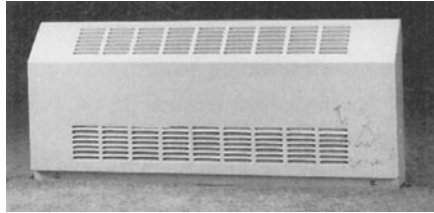


FIGURE 9.302 Sill-line convector heater. [Chromalox, Wiegand Industrial Division of Emerson Electric Co.]

8. **Pedestal Convector Heaters.** Such a heater is shown in Fig. 9.303. Capacities range from 500 to 3500 W at 208, 240, and 277 V, single-phase. This heater is a convector which is used to heat floor-to-ceiling glass areas. It can be mounted on a new concrete floor or be bolted to the surface of an existing floor. Pedestal-type heaters can be installed individually or end to end in continuous runs. They provide a basic perimeter system designed especially for corridors, lobbies, foyers, and entryways, particularly for hard-to-heat areas where floor-to-ceiling glass creates cold downdraft problems and prohibits the use of wall-mounted equipment. This special downdraft heater is controlled by a separate wall-mounted thermostat with an optional integral relay for remote control by a time clock.

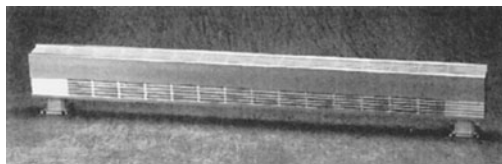


FIGURE 9.303 Pedestal convector heater. [Chromalox, Wiegand Industrial Division of Emerson Electric Co.]

- 9. Draft-Barrier Wall Heaters.** Such a heater is shown in Fig. 9.304. Capacities are 100 to 200 W/ft at 120, 208, 240, and 277 V, single-phase. The draft-barrier wall heaters are low-silhouette units (3 to 6 in., or 25.4 to 76.2 mm, high) designed to counteract down-draft at window areas. They are mounted under the sill, from wall to wall at floor level, or within modular confines in commercial office buildings. Electric connections can be made from either end on some units or through the back. Built-in thermal relays and thermostats are available.

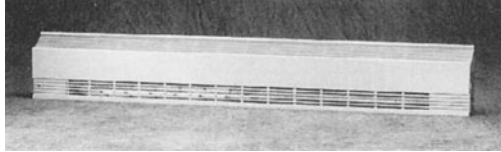


FIGURE 9.304 An architectural electric convection heater provides a draft barrier when installed along glass curtain walls. [Chromalox, Wiegand Industrial Division of Emerson Electric Co.]

- 10. Commercial Baseboard Heaters.** These heaters are similar to the unit shown in Fig. 9.304. Capacities are 300 to 1250 W at 120, 208, 240, and 277 V, single-phase. Commercial-grade baseboard heaters are available in lengths of 2, 5, and 8 ft (0.6, 1.5, and 2.4 m). They are surface-mounted 2 in. (50.8 mm) off the floor. These units can be controlled by an attached thermostat section or by a wall-mounted line- or low-voltage thermostat. End caps, blank sections, and inside and outside corners for wall-to-wall installation are available as required.
- 11. Cabinet Unit Heaters.** Such a heater is shown in Fig. 9.305. Capacities are 1.5 to 30 kW at 208, 240, 277, and 480 V, single-phase or three-phase.

The commercial cabinet unit heater can be used freestanding, wall-mounted, or ceiling-mounted. Surface or recessed installation is applicable to wall- or ceiling-type heaters. An inverted model is available for unusual installations. The cabinet unit heater can be provided with tamperproof integral or remote wall-mounted controls. A two- or three-speed fan motor, providing 200 to 1250 ft³/min (0.094 to 0.59 m³/s), may have a fan selector switch to provide quiet operation. A fan-delay thermostat is used to prevent circulation of unheated air. This type of heater is designed primarily for

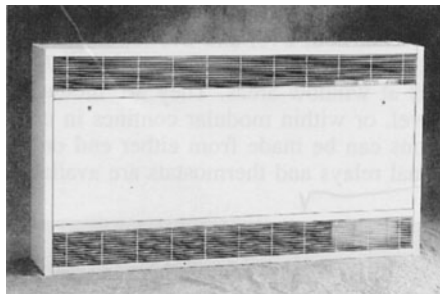


FIGURE 9.305 Cabinet unit heater with top discharge and front inlet. [Chromalox, Wiegand Industrial Division of Emerson Electric Co.]

entranceways, corridors, and lobbies in offices, airport terminals, schools, and retail stores. There are some units which can provide a choice of 25 or 100 percent outside air with dampers for ventilation cooling and air filters that can be cleaned.

- 12. Unit Ventilators and Air Conditioners.** Such a ventilator and air conditioner is shown in Fig. 9.306. Heating capacities are 1.3 to 36 kW at 208, 240, 277, and 480 V, single- or three-phase. Cooling capacities range from 8000 to 27,000 Btu.

The packaged electric unit ventilator and its companion unit, the unitary air conditioner, are through-the-wall machines. The electric unit ventilator is installed under windows, has a wall sleeve and louvered opening in the wall, and is designed for use in school classrooms, auditoriums, gymnasiums, offices, libraries, or other high-occupancy areas. It heats, cools, and ventilates with outdoor air (600 to 1500 ft³/min, or 0.28 to 7.08 m³/s). Usually, there is internal wiring for step-control switching. An optional built-in electric demand limiter is available. Controls may be integral or remote; electric, electronic, or pneumatic. The controls of one unit (the master) may be used in the same area to control other units (slaves). The unit ventilator is usually installed against an outside wall, though it may also be ceiling-mounted. The through-the-wall heating and cooling unit may have an integral cooling (compressor) section, or it may be remote-mounted.

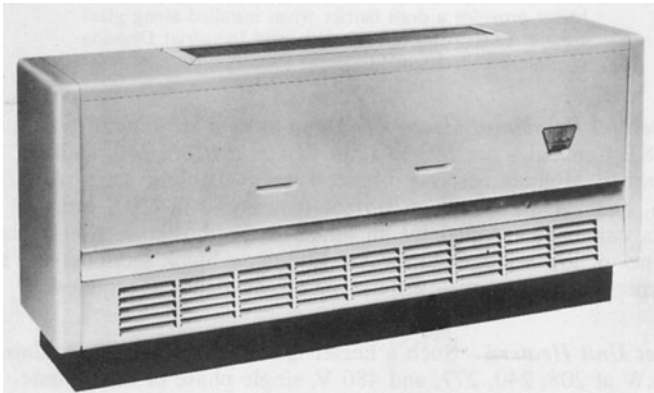


FIGURE 9.306 Combination heating-cooling ventilator.

- 13. Duct Heaters.** A typical heater is shown in Fig. 9.307. Wattage combinations are virtually unlimited with single- and three-phase connections and multistage control at 120 to 600 V. Electric duct heaters are used in ducts, plenums, or air handlers for primary heat, terminal booster heat, or air-conditioning reheat. Open-coil or metal-sheathed finned tubular heaters (Fig. 9.307) are available for insertion into an existing duct or, with a flange, as part of a new duct. To conform to duct sizes, heaters are manufactured in different horizontal and vertical dimensions for mounting on the side or bottom of the duct. Integral controls may include automatic reset of thermal cutouts, built-in relays, a transformer, fuses or circuit breakers, a fan interlock relay, pilot switches, and pilot lights. The NEC specifies a maximum 60-A branch circuit for overcurrent protection with a maximum connected load of 48 A, and zero clearance, automatic reset of thermal overload, and separate manual reset for a backup thermal overload system. Duct heaters are controlled by duct stats or remote wall controls. For large-capacity heaters a step controller is used.

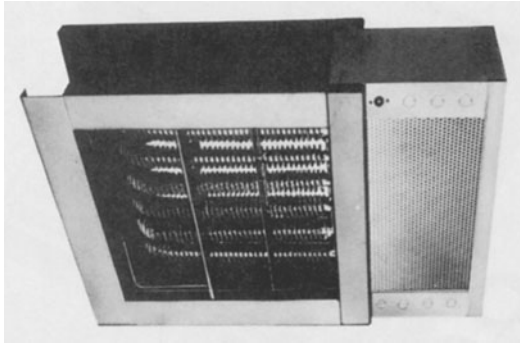


FIGURE 9.307 Duct heater section with six elements.

443. Electric snow-melting systems consist of resistance-type wire or cable embedded in concrete or asphalt. The design of snow-melting systems depends on the area, geographical conditions, wind conditions, and expectations of the user (see Table 30 of Div. 12). Generally, for melting snow at temperatures between 32 and 0°F (between 0 and -16°C), the system will be designed at 40 to 60 W/ft². Depending on wind factor, temperature, and the rate of snowfall, the area will be kept free and clear of any snow formation if the system is energized about 30 min prior to a snowfall.

The heat-transfer environment may be asphalt or concrete, and the heating element may be in the form of a mat or a heating cable. In asphalt, install the mats 12 in. (304.8 mm) from the edge with the largest mats on a straight run. Mats may be installed on an existing slab with a 2-in (50.8-mm) blacktop surface cover. The surface asphalt should be fine-grain with no stones larger than 3/8-in (9.525-mm) diameter.

In concrete, the mats or cable should be located within expansion joints generally no farther than 20 ft (6.1 m) apart. The concrete slab should contain crushed-rock aggregate (not river gravel) and should be at least 4 in. (101.6 mm) thick. There should be a well-prepared base with adequate drainage and suitable reinforcement.

Junction boxes for connection of feeders to cables or mat lead wires should be located out of the area or in a nearby wall. They should not be installed flush with the snow-melting-surface area. Mats or cables should be installed from 1½ to 2 in. (from 38.1 to 50.8 mm) below the surface. If they are installed in two pours of concrete, a binder or bonding agent should be used between pours. Cables should be tested before installation, during installation, and on completion of installation.

Snow-melting mats for walkways, driveways, or steps (Fig. 9.308) are made of resistance wires embedded in a polyvinyl chloride sheath, interwoven in chicken wire or plastic webbing. The wire may have a copper overbraid for positive grounding.

Single- or two-conductor Type MI (mineral-insulated) cable with varied resistances is factory-fabricated at specified lengths of heating leads and nonheating leads. Hot-to-cold wire connectors and end caps are factory-brazed. Type MI cable is semirigid and can be hand-bent at the construction site to conform to desired spacing (usually 3 to 9 in, or 76.2 to 228.6 mm). It has the advantage of being durable in different asphalt or concrete environments.

Heating cables may be controlled by switch or by automatic snow control (Fig. 9.309). It is recommended that a high-limit thermostat be installed in the slab to prevent the system from operating at higher temperatures (50°F, or 10°C, or more).

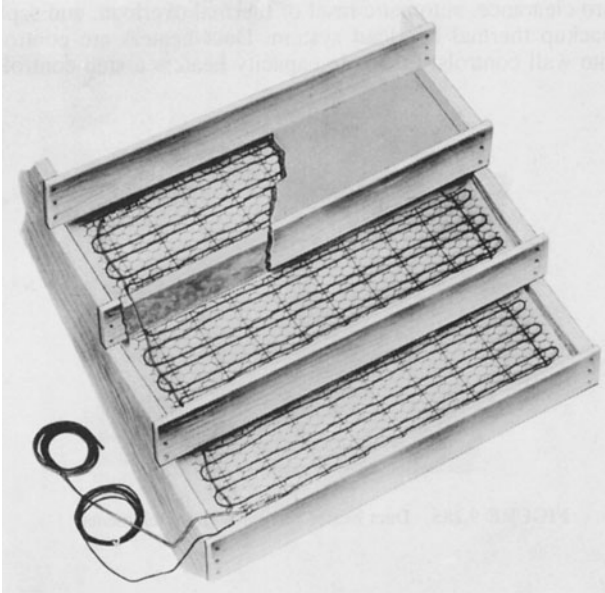


FIGURE 9.308 Snow-melting cable for steps.

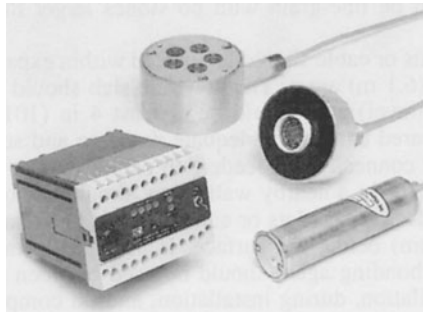


FIGURE 9.309 Automatic snow-control device that can be actuated by a pavement mounted sensor, snow sensor or gutter ice sensor. [Environmental Technology, Inc.]

444. Electric-heating controls. Electric space-heating equipment may be specified with a built-in thermostat and relay or with a wall thermostat. Commercial installations often require the use of a contactor. Step controllers or solid-state controls may be used with electric comfort heating equipment. For safety, most heaters are provided with spot or linear overheat protection.

445. Sizing room air conditioners. As a general rule, room air conditioners are sized on the basis of 30 Btu/h/ft² of space in a given room. Room air conditioners are rated in Btu (British thermal units) of cooling capacity. Units are available at 120-V ratings up to 12,000 Btu in most cases. Current ratings range from 7½ to 12 A for 120-V units. In planning outlets, however, it is important to know whether the room air conditioner (window or through-the-wall type) will be 120 or 240 V, because some manufacturers provide 240-V ratings for units of 9000 Btu or more.

446. Code rules for fixed space-heating equipment. Article 424 of the NEC covers installations of fixed electric space-heating equipment. The following paragraphs describe the major provisions of this article.

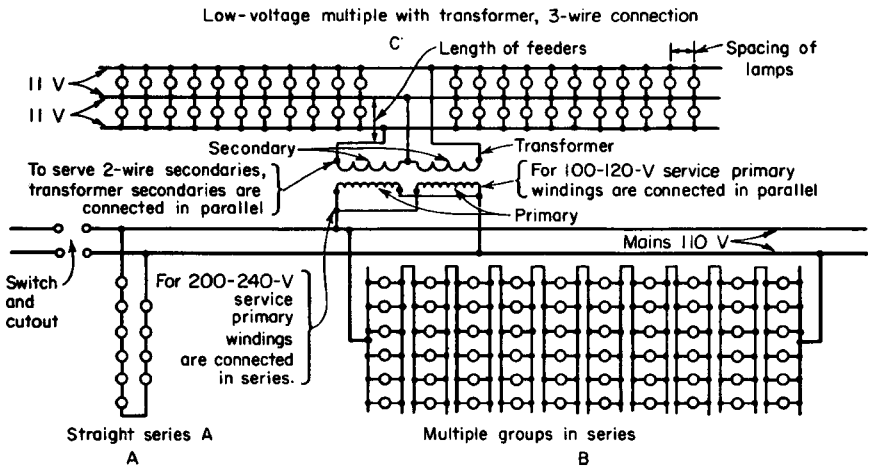
- 1. Branch Circuits.** All circuits for space-heating, snow-melting, and deicing equipment are considered continuous loads. As such, the load on any single or multioutlet branch circuit cannot exceed 80 percent of the branch-circuit rating (12 A on a 15-A circuit, 16 A on a 20-A circuit, etc.). Generally, space-heating equipment can be connected to 15-, 20-, or 30-A multioutlet branch circuits. Infrared systems can be connected to 15-, 20-, or 30-A multioutlet branch circuits. In other than residential occupancies, fixed infrared heating equipment can be supplied from branch circuits rated not over 50 A. Refer to Div. 3 for feeder or service calculations for a group of heaters.
- 2. Controllers and Disconnecting Means**
 - a.* Thermostats and thermostatically controlled switching devices which indicate an off position and which interrupt line current shall open all ungrounded conductors when the control device is manually placed in this off position.
 - b.* Thermostats and thermostatically controlled switching devices which do not have an off position are not required to open all ungrounded conductors.
 - c.* Remote-control thermostats need not meet the requirements of Pars. *a* and *b*. These devices shall not serve as the disconnecting means.
 - d.* Switching devices consisting of combined thermostats and manually controlled switches that serve both as controllers and disconnecting means shall open all ungrounded conductors when manually placed in the off position or be so designed that the circuit cannot be energized automatically after the device has been manually placed in the off position.
- 3. Duct Heaters**
 - a.* Means shall be provided to assure uniform and adequate airflow over the heater.
 - b.* Means shall be provided to ensure that the fan circuit is energized when the first heater circuit is energized. However, time- or temperature-controlled delay in energizing the fan motor shall be permitted.
 - c.* Each duct heater shall be provided with an integral approved automatic-reset temperature-limiting control or controllers to deenergize the circuit (or circuits). In addition, an integral, independent, supplemental control or controllers shall be provided in each duct heater which will disconnect enough conductors to interrupt current flow. This control shall be manually resettable or replaceable.
 - d.* Duct-heater controller equipment shall be either accessible with the disconnecting means installed at or within sight of the controller except as permitted by Sec. 424.19(A) of the Code.

447. Other reference material. With the continued development of the electric-heating market, reference should be made to the latest NEMA standards and publications of the Electric Heating Association (EHA).

WIRING FOR ELECTRIC SIGNS AND OUTLINE LIGHTING

448. Types of signs. Electric signs or outline lighting may consist of incandescent lamps or gaseous-discharge tubing (commonly called *neon signs*). Today light-emitting diodes (LEDs) are increasingly used given their long life and efficient use of energy. Installing a brand new sign using incandescent lamps with mechanical flashers would be almost unheard of. However, this equipment is still in use, and will be covered so users will have a reference source in case they are called upon to service it. Refer to Div. 10 for a discussion of lamps and tubing.

449. Methods of wiring incandescent electric signs (National Electric Light Association, *Data on Electric Signs*). Lamps burning in multiple may be connected either two-wire or three-wire, as shown in Fig. 9.310. In series wiring, lamps may be connected in either straight series or multiple series, as shown. If transformers (see Sec. 60 of Div. 5 for information on sign transformers) are used to obtain low voltage, lamps may be connected either two-wire or three-wire as in standard multiple wiring, the transformer reducing the voltage from the regular 120- or 240-V circuits to the voltage required by the lamp. The ordinary multiple wiring can be changed to straight series wiring by merely clipping the alternate connections between lamps (Fig. 9.311).



NOTE: Diagram C for alternating current only; others may be used on ac or dc.

FIGURE 9.310 Methods of connecting sign lamps.




FIGURE 9.311 Method of changing sign wiring from multiple to series.

In a large sign any combination of series or multiple series may be used. With straight series wiring, should one lamp in the series burn out, all the lamps in that series will be out. If the lamps are connected in multiple series, the failure of one lamp does not cause any of the other lamps to go out. However, there should not be less than 8 to 10 lamps in each multiple group, or the failure of one lamp will cause too much current to flow through the other lamps of the same group, thus shortening their lives.

450. Different effects of flashing or motion can be obtained with incandescent signs by the use of a sign flasher. Cams or a drum are mounted on a shaft that is rotated by a small electric motor (Fig. 9.312). The circumferences of the cams or drums are so cut that, in brush-type flashers, the brushes will make contact only during certain predetermined portions of a revolution and thereby complete the electric circuit through the sign lamps only during that period. In the carbon-type flashers the cams, instead of carrying current and making and breaking the contacts directly, operate to open and close carbon-break contact switches which control the sign lamps. The possible variations in arrangement of cams and drums for producing different effects are almost numberless. Flashers are available for high- or low-voltage circuits.

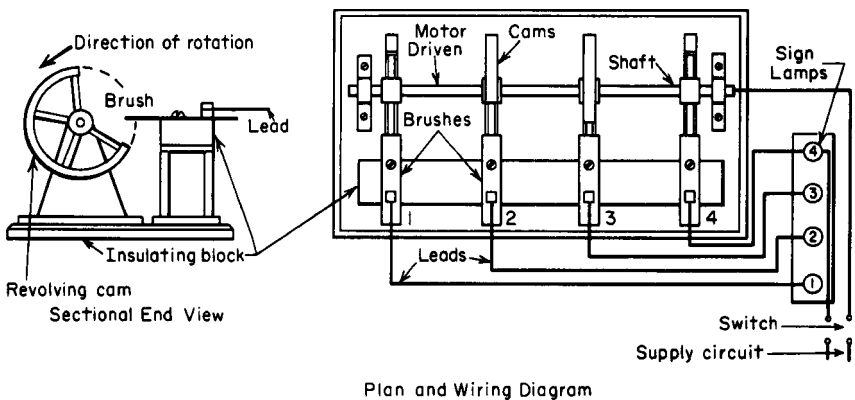


FIGURE 9.312 The elementary sign flasher.

451. Method of wiring neon-lamp signs. Neon lamps used for signs are of the high-voltage type (see Div. 10). The lamps are supplied from ordinary lighting circuits through small step-up transformers. The voltage required depends upon the length of neon-lamp tubing used in the sign. The maximum voltage employed on the lamps is 15,000. When the length of tubing is greater than can be illuminated with 15,000 V, two or more transformers are employed as required. Practically always, neon signs are completely wired and installed by the manufacturers, the purchaser simply providing the necessary outlets from the general-lighting system. Also, the servicing and maintenance of the signs generally are handled by specialists. Section 460 includes requirements for this type of equipment.

452. The installation of all signs or outline lighting, whether of the incandescent, LED, or the gaseous-discharge type, must meet the following requirements: All electric

signs, section signs, and outline lighting, whether fixed, mobile or portable, shall be listed unless exempted by special permission. However, field-installed skeleton tubing is not required to be listed if installed per NEC rules, and outline lighting need not be listed as a system if it consists of listed luminaires wired using Chap. 3 methods. All equipment and devices used with signs must be enclosed in metal boxes, unless the enclosures are listed. All devices, such as switches, flashers, and similar devices controlling transformers shall be either rated for controlling inductive loads or must have a current rating which is not less than twice the current rating of the transformer supplying the sign. The circuits should be so arranged that none will have a load of more than 16 A.

453. Marking of signs and outline lighting systems are identified by the manufacturer's name, trademark, or other means of identification, and maximum wattage per lamp for incandescent lamp illuminated signs, and input voltage and current rating for electric-discharge signs. Section signs must be marked to indicate that field wiring and installation instructions are required.

454. Branch circuits must comply with the following:

1. A 20-A outlet supplying no other loads, for each commercial building and each commercial occupancy accessible to pedestrians, located at each entrance to each tenant space.
2. The maximum rating is 20 A for circuits supplying incandescent, fluorescent forms of illumination. For neon tubing, the maximum rating is 30 A. HID light sources are not addressed in the NEC sign article; however if they have heavy-duty mogul lampholders (most do) per 210.21(A) they could be used for 30 A circuits as well.
3. Each required branch circuit shall be computed at a minimum of 1200 VA.
4. Any suitable wiring method in Chap. 3 of the NEC may be used and must terminate within a sign or outline lighting enclosure.

455. A disconnect must be provided for each sign or outline lighting installation, consisting of an externally operable switch or circuit breaker that opens all ungrounded conductors, except a disconnect is not required for exit directional signs located within buildings, or cord-connected signs. In addition, signs and outline lighting systems must comply with the following:

The disconnect must be located within the sight of the sign. If any of the sections of a sign are out of sight of the disconnecting means, then the disconnecting means must be capable of being locked in the open position. A similar rule applies when the sign is operated by a remote controller; the disconnect must be placed within sight of the controller, and the disconnect must be capable of being locked in the open position.

456. The location of signs or outline lighting systems is restricted as follows:

1. Areas accessible to vehicles, unless protected from physical damage, shall be located at least 4.3 m (14 ft) above the vehicle area.
2. Areas readily accessible to pedestrians shall have neon tubing protected from physical damage, except for portable signs in dry locations.

3. Adjacent combustible materials shall not be subjected to temperatures exceeding 90°C (194°F), and HID lamps or lampholders shall be located at least 50 mm (2 in.) from wood or other combustibles.
4. Signs and outline lighting system equipment for wet location use, other than listed watertight type, shall be weatherproof and have drain holes neither smaller than 6 mm (1/4 in.) nor larger than 13 mm (1/2 in.). Every low point or isolated section must have at least one drain hole. The drain holes must be positioned so that there will be no external obstructions.

457. Portable or mobile signs must be installed as follows:

1. Signs must be adequately supported and be readily moveable without the use of tools.
2. An attachment plug shall be provided.
3. In wet or damp locations, a GFCI located in the supply cord must be provided. The cord must include an equipment grounding conductor and must be rated for hard service or junior hard service.
4. In dry locations, the cord length is limited to 4.5 m (15 ft). The cord shall be type SP-2, SPE-2, SPT-2, or heavier.

458. Ballasts shall be listed and identified for the use and shall be thermally protected. Ballasts, transformers, and electronic power supplies are to be installed as follows:

1. They are to be located where accessible and securely fastened in place.
2. The ballasts, transformers, and electronic power supplies are to be located as near to the lamps or neon tubing as is practicable.
3. Ballasts, transformers, and electronic power supplies used in wet locations shall be weatherproof type or of the outdoor type where protected from the weather.
4. Ballasts, transformers, and electronic power supplies require a working space at least 900 mm (3 ft) high, 900 mm (3 ft) wide, by 900 mm (3 ft) deep where not installed in a sign.
5. Power supplies may be located in an attic or soffit, provided they meet the access requirements of Sec. 600.21(E) of the NEC. There must be an access door at least 900 mm by 562.5 mm (36 in. by 22 1/2 in.), a passageway at least 900 mm (3 ft) high by 600 mm (2 ft) wide, and a permanent walkway at least 300 mm (12 in.) wide extending from the point of entry to each component.
6. Power supplies may be located above suspended ceilings if securely fastened in place and not dependent on the suspended ceiling grid for support.

459. Transformers and electronic power supplies must be listed and identified for the use. They must meet the following criteria:

1. Transformers and electronic power supplies must have secondary-circuit ground-fault protection. Transformers with isolated ungrounded secondaries and with a maximum open circuit voltage of 7500 V, or transformers with integral porcelain or glass secondary housing for the neon tubing and requiring no field wiring on the secondary side are exempted from this rule.

2. The secondary voltage must not exceed 15,000 V, nominal, under any load condition. The maximum voltage to ground of any transformer secondary circuit output terminals must not exceed 7500 V under any load condition.
3. The secondary current rating must not exceed 300 mA.
4. Secondary circuit outputs must not be connected in parallel or series.
5. Transformers and power supplies must be marked to indicate that they have secondary-circuit ground-fault protection.
6. Class 2 power supplies and power sources must be listed for use with electric signs and outline lighting systems, and meet the requirements for Class 2 power sources in NEC 725.121. Metal parts of signs and outline lighting systems must meet the grounding and bonding requirements for signs generally. Secondary circuit wiring must either use one of the conventional wiring methods in Chap. 3 of the NEC, or meet the requirements for power-limited circuits in NEC 725.130(B).

460. Field installed skeleton tubing must meet the following specific requirements:

1. Neon secondary circuit conductors of 1000 V or less are to comply with the following:
 - a. Use any wiring methods in Chap. 3 of the NEC that is suitable for the conditions.
 - b. Conductors shall be insulated, listed for the purpose, and not smaller than No. 18.
 - c. Raceways are limited to the conductor fill permitted by Table 1 in Chap. 9 of the NEC.
 - d. Conductors are to be installed so they are not subject to physical damage.
 - e. Bushings are to be used to protect wires passing through an opening in metal.
2. Neon secondary circuit conductors over 1000 V are to comply with the following:
 - a. Conductors can be installed, in rigid metal conduit, intermediate metal conduit, PVC or RTRC nonmetallic conduit, liquidtight flexible nonmetallic conduit, electrical metallic tubing, flexible metal conduit, liquidtight flexible metal conduit, electrical nonmetallic tubing, metal enclosures, on insulators in metal raceways, or other equipment listed for the purpose. Only one conductor can be installed per length of conduit or tubing, which must not be smaller than metric designator 16 (trade size 1/2). Metal parts of a building cannot be used as a grounded or equipment grounding conductor.
 - b. Conductors shall be insulated, listed for the purpose, rated for the voltage, not smaller than No. 18, and have the minimum temperature rating of 105°C (221°F).
 - c. Conductors are not to be subjected to physical damage.
 - d. Sharp bends in insulated conductors are to be avoided.
 - e. Other than at insulators or neon tubing, or between a conductor and the inner wall of its enclosing raceway, conductors must have 38 mm (1 1/2 in.) spacing from each other and all other objects. Other than the points of connection to a metal enclosure or sign body, nonmetallic raceways containing a conductor operating at 100 Hz or less must be separated at least 38 mm (1 1/2 in.) from grounded or bonded parts, with the distance increasing to 45 mm (1 3/4 in.) at higher frequencies.
 - f. Insulators and bushings for conductors are to be listed.
 - g. The insulated portions of conductors in metal raceways must extend not less than 65 mm (2 1/2 in.) beyond the end of the raceways.
 - h. Conductors may run from the leads of neon tubing to the grounded midpoint of a transformer or electronic power supply listed for the purpose and provided with terminals at the midpoint. The conductors should be as short as possible.
 - i. Dwelling occupancy equipment is limited to an open circuit voltage of 1000 V.

- j.* High voltage cable run in a metal raceway or tubing from a transformer or electronic power supply to the first neon tube electrode is limited to 6 m (20 ft) lengths. Similar cables in nonmetallic raceways or tubing is limited to 15 m (50 ft).
 - k.* Splices in high-voltage secondary circuit conductors shall be made in listed enclosures rated over 1000 V. The enclosures shall be accessible after installation and shall be listed for the location where they are used.
3. Neon tubing is to comply with the following:
- a.* The length and design of the tubing should be such that transformers or electronic power supplies are not subjected to continuous overcurrent beyond their design loading.
 - b.* Listed tubing supports shall be used.
 - c.* Other than at its support, neon tubing shall have a spacing of 6 mm (1/4 in.) from the nearest surface. The tubing shall be supported within 150 mm (6 in.) from the electrode connection.
 - d.* Field-installed skeleton tubing is not to be subject to physical damage. If readily accessible to other than qualified persons, it shall be provided with suitable guards or protected by other approved means.
4. Electrode connections are to comply with the following:
- a.* Where high-voltage secondary conductors emerge from the wiring methods in **2a** above, they shall be enclosed in a listed assembly.
 - b.* Unqualified persons are not to have access to the terminals of an electrode.
 - c.* Connections to an electrode are to be made by a connection device, twisting the wires together, or by the use of an electrode receptacle. An enclosure listed for the purpose shall be used and the connections shall be electrically and mechanically secure.
 - d.* Neon secondary conductors are to be supported within 150 mm (6 in.) from the electrode connection to the tubing.
 - e.* Electrode receptacles are to be listed for use in signs.
 - f.* Bushings listed for signs are to be used where electrodes penetrate enclosures, unless receptacles are provided.
 - g.* If receptacles penetrate a building at a wet location, a listed cap shall be used to close the opening. If bushings or neon tubing penetrate a building, the opening between neon tubing and the bushing shall be sealed.
 - h.* Electrode enclosures shall be listed. For dry locations an enclosure listed for use in either dry or damp or wet locations may be used. For damp or wet locations the enclosure must be listed and identified accordingly.

461. Current-carrying capacities of flashers. Double-pole flashers are made in four sizes that will carry respectively 15, 30, 45, or 60 A per switch. Single-pole carbon flashers that will carry 5 A per switch are made. Brush-type flashers are rated at from 2 to 5 A on each brush and are not reliable for greater currents.

Switches, flashers, and similar devices controlling transformers and electronic power supplies shall be rated for controlling inductive loads or have a current rating at least twice the current rating of the transformer.

462. Grounding and bonding of signs and outline lighting systems must meet special requirements that, in some cases, supersede the provisions in Article 250. The grounding or bonding requirements that differ in some way, or that have a different focus from conventional NEC rules are as follows (refer to NEC 600.7 for the complete provisions):

1. Metal parts and equipment of signs and outline lighting systems shall be bonded together and to the associated transformer or power supply, together with the equipment grounding conductor of the supply circuit. Portable signs are permitted to be exempt from this rule if they are protected with a system of double insulation and are marked accordingly. Small metal parts not exceeding 50 mm (2 in.) in any dimension, not likely to be energized, and spaced at least 19 mm ($\frac{3}{4}$ in.) from neon tubing need not be bonded. Where listed, flexible metal conduit or listed liquidtight flexible metal conduit is used to enclose the secondary circuit conductor from a transformer or power supply for use with neon tubing; it may be used as a bonding method provided the total accumulative length does not exceed 30 m (100 ft).
2. Metal parts of a building are prohibited from use as either a secondary return conductor or an equipment grounding conductor, or for bonding together the metal parts and equipment of signs or outline lighting systems, or for bonding such parts to the transformer or to the equipment grounding conductor of the supply circuit.

REMOTE-CONTROL, SIGNALING, AND POWER-LIMITED CIRCUITS

463. A remote-control circuit is any electric circuit that controls any other circuit through a relay or an equivalent device.

464. Class 1 circuit power source. Remote control or signaling circuits in this classification are either power-limited, or not. The Class 1 power-limited circuits are supplied from sources limited to 30 V and 1000 VA. The nonpower-limited Class 1 circuits are limited to 600 V, but the source output power is unlimited.

465. A signal circuit is any electric circuit that energizes signaling equipment. Such circuits include circuits for doorbells, buzzers, code-calling systems, signal lights, and the like.

466. Safety-control devices. Remote-control circuits to safety-control devices, the failure of operation of which would introduce a direct fire or life hazard, shall be considered Class 1 circuits.

Room thermostats, service hot-water temperature-regulating devices, and similar controls used in conjunction with electrically controlled domestic heating and air conditioning equipment are not considered to be safety-control devices.

467. Remote-control, power-limited, and signal circuits in communication cables. Class 2 and 3 remote-control, power-limited, and signal circuits, which use conductors in the same cable with communication circuits, shall, for the purpose of this discussion, be classified as communication circuits and meet the requirements of such circuits (refer to Article 800 of the NEC).

468. Hazardous locations. Any remote-control or signal circuit or any circuit considered such by the Code which is installed in a hazardous location must meet the Code

requirements for hazardous-location installation in addition to the requirements for remote-control circuits. Cables installed in hazardous locations shall be Type PLTC.

469. Remote-control, power-limited, and signal circuits are divided by the NEC into two power-limited classes (in addition to the Class 1 classification described in Sec. 464) as follows:

1. **CLASS 2** Systems in which the voltage and power is limited in accordance with Sec. 725.121 of the NEC. A Class 2 circuit considers safety from a fire initiation standpoint and provides acceptable protection from electric shock.
2. **CLASS 3** Systems in which the voltage and power are limited, also in accordance with Sec. 725.121 of the NEC. A Class 3 circuit considers safety from a fire initiation standpoint, however, since higher levels of voltage and current than for Class 2 are permitted, additional safeguards are specified to provide protection from an electric shock hazard that could be encountered.

CLASS 1 SYSTEMS

470. The installation of Class 1 systems must be in accordance with general NEC requirements for the installation of electrical circuits except as stated in the special Code specifications given in Secs. 471 to 480 inclusive.

471. Conductor sizes. Numbers 18 and 16 AWG conductors may be used if installed in a raceway, an approved enclosure, or a listed cable. Flexible cords shall comply with the provisions of Article 400 of the Code.

472. Conductor insulation. Conductors larger than 16 AWG may be any of the conductors listed in Article 310 of the NEC for general wiring. Conductors of 18 and 16 AWG shall have an insulation of a type listed in Sec. 725.49(B) of the NEC.

473. Number of conductors in raceways. The number of conductors of remote-control or signal circuits in a raceway must be determined according to the conventional wire-fill rules in the NEC using the information in Chap. 9. Section 310.15(B)(2) of the NEC applies only to continuous loads (3 h or more) in excess of 10 percent of the ampacity of the conductor.

474. Conductors of different systems. Conductors of two or more Class 1 remote-control and/or signal circuits may occupy the same cable, enclosure or raceway without regard to whether the individual systems or circuits are ac or dc, provided all conductors are insulated for the maximum voltage of any conductor in the cable, enclosure or raceway. Class 1 circuits and power circuits may occupy a common raceway only where the equipment powered is functionally associated.

475. Physical protection of remote-control circuits. If damage to a remote-control circuit would introduce a hazard as covered in Sec. 466, all conductors of such

remote-control circuits shall be installed in rigid metal conduit, intermediate metal conduit, rigid nonmetallic conduit, electrical metallic tubing, Type MI cable, or Type MC cable or be otherwise suitably protected from physical damage.

476. Overcurrent protection. Conductors shall be protected against overcurrent in accordance with the general Code requirements except for 18 and 16 AWG conductors, which shall not exceed 7 A for No. 18 and 10 A for No. 16 except when other articles of the Code have other protection requirements.

477. Location of overcurrent protection. Overcurrent devices shall be located at the point where the conductor to be protected receives its supply unless the overcurrent device protecting the larger conductor also protects the smaller conductor in accordance with the current-carrying-capacity tables of Div. 12; or the overcurrent protection is provided in accordance with other specific NEC rules, such as 430.72 for motor control circuits and 610.53 for cranes and hoists. Where a control circuit is tapped from the light or power circuit that the control circuit is affecting, the overcurrent protection is permitted to be for short-circuit and ground-fault protection only, defined for these purposes as not exceeding 300 percent of the Class 1 circuit conductor ampacity. For two-winding transformers, with only one winding connection on the primary side and one on the secondary side, the overcurrent protection can be on the primary side with its effective value as adjusted by the transformer winding ratio. Electronic source output conductors supplied from listed equipment is generally permitted to rely on the overcurrent protection ahead of the electronic power source.

478. Circuits extending beyond one building. Class 1 circuits which extend aerially beyond one building shall also meet the requirements of Article 225 of the Code.

479. Grounding. Class 1 remote-control and signal circuits shall be grounded as required by Sec. 250.20 of the Code for ac circuits, and 250.162 for dc circuits. If system grounding does apply to one of these control circuits, refer to the discussion in Sec. 487 for direction on how to proceed.

480. Transformers. Transformers used to supply power-limited Class 1 circuits shall comply with Article 450 of the NEC and the power limitations of Sec. 725.41 of the NEC.

CLASS 2 AND CLASS 3 SYSTEMS

481. NEC requirements for the installation of Class 2 and Class 3 systems are given in the following Secs. 482 to 487, inclusive.

482. Overcurrent protection. If current is limited in Class 2 and Class 3 systems by means of overcurrent protection, such overcurrent protection devices shall not be interchangeable with protection of a higher rating. The overcurrent protection may be an integral part of the power supply.

483. Power limitations. Protection for power-limited circuits shall comply with Sec. 725.121 of the NEC.

484. On the supply side of overcurrent protection, transformer, or current-limiting devices. Conductors and equipment on the supply side of overcurrent protection, transformers, or current-limiting devices shall be installed in accordance with the appropriate requirements of Chaps. 1 through 4 of the Code. Transformers or other devices supplied from electric-light and power circuits shall be protected by an overcurrent device with a rating or setting not exceeding 20 A, except the input leads of a transformer or other power source supplying Class 2 and Class 3 circuits may be smaller than 14 AWG, but not smaller than 18 AWG if they are not over 300 mm (12 in.) long and if they have insulation that complies with Sec. 725.49(B) of the NEC.

485. On the load side of overcurrent protection, transformer, or current-limiting devices. Conductors on the load side of overcurrent protection, transformer, or current-limiting devices shall be insulated and shall comply with Sec. 725.179 and not less than the requirements of Secs. 725.133 and 725.154 of the Code. The cables must be listed with respect to fire resistance, and generally applied in accordance with a four-level hierarchy based on that criterion. The level is evidence by the cable marking, which for remote-control and signaling circuits is CL2 or CL3 as applicable. This determines the power level, and the marking has space for an additional letter that determines the permitted locations. A suffix of "X" (as in "CL2X" for doorbell wire) is the least rigorous, and it indicates suitability for low-intensity dwelling use, such as short lengths in nonconcealed spaces generally and in concealed spaces only in one- and two-family dwellings only. CL2 with no suffix is generally suitable for commercial work whether concealed or exposed. CL2R is the next better grade of cable, and it can be used in risers from floor to floor. The top of the hierarchy is the cables, marked CL2P, which can run in plenum cavities used for environmental air such as above a suspended ceiling that connects to the intake of a large air handler. Better cables can always substitute for poorer cables, as shown in NEC Table 725.154(G). For example, CL3R can substitute for CL2R, which can substitute for CL2, etc.

486. Circuits extending beyond one building. Class 2 and Class 3 circuits which extend beyond one building and are so run as to be subject to accidental contact with light or power conductors operating at a potential exceeding 300 V to ground shall also meet the requirements of Secs. 800.44, 800.50, 800.53, 800.93, 800.100, 800.170(A), and 800.170(B) for other than coaxial conductors for communication circuits in the Code and 820.44, 820.93, and 820.100 for coaxial conductors used in CATV systems.

487. Grounding. Class 2 and Class 3 circuits and equipment shall be grounded as required by Sec. 250.20(A) of the NEC for ac circuits, and 250.162 for dc circuits. Note that ac systems of less than 50 V must be connected as grounded systems complete with a grounded circuit conductor (usually colored white, etc.) if supplied by transformers whose primaries are connected to systems of more than 150 V to ground, or if the transformer supply system is ungrounded, or if the transformer primary circuit is run overhead outside buildings.

The overwhelming majority of power-limited control circuits are fed from transformers with 120-V primaries running on grounded systems, and are therefore unaffected by these

system grounding requirements. However, there are numerous applications, such as 277-V duct heaters supplied with Class 2 transformers for thermostat connections, and some power supplies for 277-V lighting applications, where these rules will be important.

Should such an application arise, there are additional considerations. Such a grounded system must be connected to a grounding electrode, although this is seldom a problem because the systems normally qualify as separately derived, and NEC 250.30(A)(3) Exception No. 3 generally allows the use of the equipment grounding conductor connection for the supply transformer (limited in the exception to 1 kVA) to function as a grounding electrode conductor in such cases. Another wrinkle is the requirement in 250.112(I) that these systems incorporate an equipment grounding conductor. Such a conductor must normally be colored green; however, 250.119 Exception [erroneously written as though 250.112(I) didn't exist] allows green wire for other than grounding purposes in power-limited cabling, so the color is at best unclear. What is clear is that some conductor in the cable must be an equipment ground, and green is obviously the best choice. Note also that the size of this wire can be the same as the others in the circuit because 250.122(A) never requires an equipment grounding conductor to be larger than the associated circuit conductors. The likely result is two wires in the power-limited cable assembly (white and green) will have code required functions and connections at odds with the traditional color code for HVAC wiring diagrams. Take care to plan accordingly.

488. Power-limited circuits must be neat and workmanlike. They must be supported so they will not be damaged by normal building use. They can use ordinary cable ties or similar fittings designed and installed so as to not damage the cable for securement, but they must not be tied to electrical raceways or cables except as noted in Sec. 489. Abandoned cables must be removed to the extent they are accessible. A *cable* is defined as abandoned if it is not terminated, and not identified for future use with a tag. The tag must have sufficient durability to withstand the environment involved.

489. System separation. Class 2 and Class 3 conductors must be divorced from Class 1 and power conductors. The general rule allowing conductors of differing voltages to run in a common raceway as long as all conductors are insulated for the maximum voltage present does not apply to power-limited circuits, because you must never rely on conductor insulation alone, no matter how robust, to provide the system separation required by the NEC for over 70 years. For this reason the general prohibition against tying cables to a raceway is relaxed to allow a power-limited cable tied to a raceway where the systems are functionally associated. A good example of this principle at work is running the thermostat cable for an oil burner down a conduit (or tubing) riser for a furnace.

However, there are times when power-limited conductors must land on equipment with power connections, and the NEC has evolved many complicated rules, now covered in Sec. 725.136, to cover the topic. For example, suppose a Class 2 circuit will run to the coil of a relay that controls the activity of a power circuit. Both power levels will necessarily enter a common enclosure, and 725.136(D)(1) allows this provided the two systems are routed to maintain a 6 mm (1/4 in.) of air separation between them. Another example, commonly used in industrial settings, is to reclassify the power-limited circuit as a Class 1, allowing it to enter the wiring channels in an industrial control panel. Take care, however, before applying this technique, because once the circuit is reclassified, all devices connected thereto must be fully rated for Class 1 standards. For industrial control components that may be feasible, but for commercial or residential use it may be unrealistic, such as for a conventional thermostat that must be connected to a Class 2 control circuit under the terms of its listing.

WIRING FOR SPECIAL OCCUPANCIES

490. The NEC should be consulted for special rules on installations in the following special occupancies or for the following special equipment or conditions:

Commercial garages
Aircraft hangars
Motor fuel dispensing facilities
Bulk-storage plants
Spray application, dipping, and coating processes
Health care facilities
Assembly occupancies
Theaters, audience areas of motion picture and television studios, performance areas, and similar locations
Control systems for permanent amusement attractions
Carnivals, circuses, fairs, and similar events
Motion-picture and television studios and similar locations
Motion-picture projection rooms
Manufactured buildings
Agricultural buildings
Mobile homes, manufactured homes, and mobile home parks
Recreational vehicles and recreational vehicle parks
Park trailers
Floating buildings
Marinas and boatyards
Temporary installations
Electric signs and outline lighting
Manufactured wiring systems
Office furnishings (consisting of lighting accessories and wired partitions)
Cranes and hoists
Elevators, dumbwaiters, escalators, moving walks, platform lifts, and stairway chairlifts
Electric vehicle charging systems
Electrified truck parking spaces
Electric welders
Audio signal processing, amplification, and reproduction equipment
Information technology equipment
Sensitive electronic equipment
Pipe organs
X-ray equipment
Induction and dielectric heating equipment
Electrolytic cells

Electroplating
Industrial machinery
Electrically driven or controlled irrigation machines
Swimming pools, fountains, and similar installations
Natural and artificially made bodies of water
Integrated electrical systems
Solar photovoltaic systems
Fuel cell systems
Fire pumps
Emergency systems
Legally required standby systems
Optional standby systems
Interconnected electric power production sources
Critical operations power systems (COPS)
Circuits and equipment operating at less than 50 V
Class 1, class 2, and class 3 remote-control, signaling, and power-limited circuits
Instrumentation tray cable, Type ITC
Fire alarm systems
Optical fiber cables and raceways
Communications circuits
Radio and television equipment
Community antenna television and radio distribution systems
Network-powered broadband communications systems

DESIGN OF INTERIOR-WIRING INSTALLATIONS

491. Factors affecting wiring layouts (*Standard Handbook for Electrical Engineers*). In conduit work the space available often dictates that feeders be split into two or more feeder lines so as to guard against complete shutdown should anything happen to one feeder.

In reinforced-concrete floors a cross section of the floor must be studied to see that there will be sufficient space for the reinforcing rods, conduit or raceways, and necessary thickness of concrete. This is especially true when conduits cross. The local building code should be consulted to see what restrictions are placed on floor installations. A minimum thickness of 1 in. (25.4 mm) of concrete over conduits and raceways should be used to prevent cracking.

EXAMPLE The building code may allow floors 4 in. (101.6) thick with $\frac{3}{4}$ -in reinforcing rods located with 1 in. (25.4 mm) of concrete covering the underside (Fig. 9.313). This would mean that there is a minimum space of $1\frac{1}{4}$ in. (31.75 mm) between the top of the reinforcing rods and the top of any conduit. For this installation, $\frac{3}{4}$ -in conduit, which has an outside diameter of 1.05 in. (Sec. 63), would be the largest size allowable. There could be no crosses of conduit because even two $\frac{1}{2}$ -in conduits would take up $2 \times 0.84 = 1.68$ of space, which is more than the $1\frac{1}{4}$ in. available.

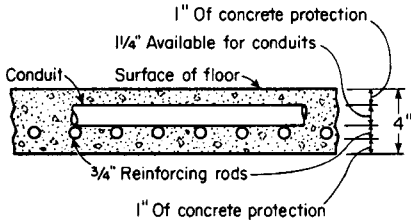


FIGURE 9.313 Study of space available for conduits in reinforced-concrete floors.

In brick walls there must be two thicknesses of brick to conceal conduits, and the distance between them must be studied to determine the maximum size for vertical runs of conduit. These are only a few of the possible examples in which space for wiring must be considered. Very often the mistake of installing feeders just large enough to carry the present load is made, and when additions are called for, the feeders are overloaded and additional feeders must be installed at great expense. Conduits for feeders and mains

should be of sufficient size to permit the installation of feeders or mains of a carrying capacity of 150 percent of the present connected load. Also, spare conduits can be installed.

492. Wiring methods to be used are determined by a consideration of national and local code requirements, reliability, appearance, and cost. Those planning a wiring installation should decide which methods of wiring are allowable for the particular occupancy and electric system being considered. Then the cost of each allowable method should be weighed against the appearance, the degree of protection afforded, reliability, and probable years of service that will be realized. Both cost of material and cost of labor must be considered.

- 1. Residences.** Type MC cable concealed in partitions is very practical, giving good reliability at moderate cost. If a less expensive installation is desired, nonmetallic-sheathed cable may be used. Sometimes this is used for a few large-size circuits such as a circuit to the electric range if the difference in cost is considerable, even if the rest of the wiring is metal-clad cable. The expense of metal raceways is usually not justified except in very large residences of the highest grade of construction. When the highest degree of adequacy for convenience outlets is desired, multioutlet assemblies should be employed for this part of the wiring.
- 2. Rewiring Old Buildings of Residential or Commercial Occupancy.** Surface raceways, Type AC cable, nonmetallic-sheathed cable, and electrical metallic tubing are the usual expedients in rewiring. Surface raceways give the best appearance if the wiring must be exposed. Type AC cable or nonmetallic-sheathed cable is the most practical for that part of the wiring which can be fished through the partitions.
- 3. Small Commercial Buildings and Apartment Buildings.** For buildings of frame or brick and frame construction, Type MC cable, nonmetallic-sheathed cable, or electrical metallic tubing concealed in the partitions is generally the most practical.
- 4. Office and Public Buildings.** For buildings of steel, concrete, terra-cotta, or similar construction, the cost of wiring is only a small percentage of the total cost of the building. To keep the offices rented to business firms, the electric system should provide the very best in appearance and adequacy of service. Therefore the wiring should be concealed, and rigid metal conduit, intermediate metal conduit, or electrical metallic tubing be employed for ceiling lights and feeders, and under-floor raceways or cellular-floor raceways for desk outlets for power and signaling circuits.
- 5. Industrial Buildings.** Metal raceways are generally used for branches, with busways, metal-clad cables, or conduits for feeders.
- 6. Large-Sized Main Feeders.** The method of wiring should be considered very carefully because the high unit costs may make a considerable difference in the total cost of the installation.

Very often, combinations of wiring methods are used in the same building, each method being used where its advantages make it desirable.

493. In rewiring buildings using existing conduits, the use of new insulations with thinner insulations permits more conduit fill, depending on the type and size of conductors (see Tables 4 and 5 of Chap. 9 of the NEC.).

494. The branch circuits used in interior wiring may be classified as follows:

TYPE 1 This is an individual branch circuit that supplies only one utilization equipment.

TYPE 2 This is a branch circuit that supplies two or more outlets. Such branch circuits are further classified by the NEC according to the rating of the fuse or circuit breaker that protects the circuit. The Code recognizes five types of these multioutlet branch circuits. They are 15-, 20-, 30-, 40-, and 50-A branch circuits, respectively. The Code provides certain restrictions on the rating of outlets, size of wire, and equipment to be supplied, as given in Sec. 497.

495. Maximum loads for branch circuits. Type 1 branch circuits may supply loads of any capacity. If the load consists of a motor-operated appliance, the load must not exceed 80 percent of the branch-circuit wires. Also the load must not exceed 80 percent of the rating of the branch circuit when any load will continue for 3 h or more. For details of the requirements for motor branch circuits refer to Div. 7.

Branch circuits are required by the Code to have maximum loads which conform to the following:

1. **APPLIANCES CONSISTING OF MOTORS AND OTHER LOADS** When a circuit supplies only motor-operated appliance loads, Article 430 of the Code shall apply (refer to Div. 7). For other than a portable appliance, the branch-circuit size shall be calculated on the basis of 125 percent of motor load if the motor is larger than $\frac{1}{8}$ hp plus the sum of the other loads.
2. **OTHER LOADS** The total load shall not exceed the branch-circuit rating and shall not exceed 80 percent of the rating when the load will continue for 3 h or more, as for store lighting and similar loads. In computing the load of lighting units that employ ballasts, transformers, or autotransformers, the load shall be based on the total of the ampere rating of such units and not on the wattage of the lamps.

Exception: range loads. See Note 4 of Table 2 in Div. 12.

496. Permissible loads for Type 2 branch circuits are specified by the NEC as follows:

1. **15- AND 20-A BRANCH CIRCUITS** Lighting units and/or appliances: the rating of any one portable appliance shall not exceed 80 percent of the branch-circuit rating; the total rating of fixed appliances shall not exceed 50 percent of the branch-circuit rating if lighting units or portable appliances are also supplied.
2. **30-A BRANCH CIRCUITS** Fixed lighting units with heavy-duty lampholders in other than dwelling occupancies or utilization equipment in any occupancy: the rating of any one portable appliance shall not exceed 24 A.

- 3. 40- AND 50-A BRANCH CIRCUITS Fixed lighting units with heavy-duty lampholders or infrared heating appliances or utilization equipment in other than dwelling occupancies or fixed cooking appliances in any occupancy.
- 4. Branch circuits larger than 50 A shall supply only nonlighting loads.

The term *fixed* as used in this section recognizes cord connections when otherwise permitted.

497. Lighting and Appliance Branch Circuits^a
(Table 210.24, 2008 NEC)

Circuit rating, A	15	20	30	40	50
Conductors (minimum size):					
Circuit wires ^b	14	12	10	8	6
Taps	14	14	14	12	12
Fixture wires and cords	Refer to Sec. 240.5 of Code				
Overcurrent protection, A	15	20	30	40	50
Outlet devices:					
Lampholders permitted	Any type	Any type	Heavy-duty	Heavy-duty	Heavy-duty
Receptacle rating, A ^c	15 maximum	15 or 20	30	40 or 50	50
Maximum load, A	15	20	30	40	50
Permissible load	... ^d	... ^d	... ^e	... ^f	... ^f

^aReprinted with permission from NFPA 70-2008. National Electrical Code® Copyright © 2007, National Fire Protection Association, Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

^bThese gages are for copper conductors.

^cRefer to Sec. 410.30(C) of the NEC for receptacle rating of cord-connected electric discharge fixtures.

^dRefer to Sec. 210.23(A).

^eRefer to Sec. 210.23(B).

^fRefer to Sec. 210.23(C).

498. The minimum required loads for which branch circuits and feeders must be supplied shall meet the Code requirements as determined from Table 5, Div. 12. If the maximum load of a branch circuit will continue for 3 h or more, as with store lighting and similar loads, the minimum unit loads specified in Table 5 of Div. 12 shall be increased by 25 percent so that the wiring system may have sufficient branch-circuit and feeder capacity to ensure safe operation. Refer to Secs. 89 to 107 in Div. 3 for a comprehensive analysis of this topic.

499. Branch circuits required. The NEC requires that branch circuits shall be installed as follows:

- 1. LIGHTING AND APPLIANCE CIRCUITS For lighting and for appliances, including motor-operated appliances, not specifically provided for in Par. 2, branch circuits shall be provided for a computed load not less than that determined by Part II of Article 220 of the Code.
- The number of circuits shall be not less than that determined from the total computed load and the capacity of circuits to be used, but in every case the number shall be sufficient

for the actual load to be served, and the branch-circuit loads shall not exceed the maximum loads specified in Secs. 495 to 497.

Where the load is calculated on a volt-amperes per unit area basis, the wiring system up to and including the branch-circuit panelboard(s) shall be provided to serve not less than the calculated load. This load shall be evenly proportioned among multioutlet branch circuits within the panelboard(s). Branch circuit overcurrent devices and circuits shall be required to be installed only to serve the connected load.

- 2. SMALL-APPLIANCE BRANCH CIRCUITS: DWELLING OCCUPANCIES** For the small-appliance load, including refrigeration equipment, in kitchen, pantry, dining room, or similar area of dwelling occupancies, two or more 20-A small-appliance branch circuits in addition to the branch circuits specified in Par. 1 of this section shall be provided for all wall and floor receptacle outlets covered by NEC 210.52(A) and counter receptacle outlets covered by 210.52(C) in these rooms, and such circuits shall have no other outlets except clock outlets or supplemental equipment and lighting on gas-fired ranges, ovens, or counter-mounted cooking units. In addition to the required receptacles, switched receptacles are permitted in lieu of lighting outlets in other than the kitchen and bathroom.

Receptacle outlets supplied by at least two appliance-receptacle branch circuits shall be installed in the kitchen to serve countertop surfaces.

At least one 20-A branch circuit shall be provided for a laundry receptacle (or receptacles) required in Sec. 210.52(F) of the Code.

Receptacle outlets installed solely for the support of and the power supply for electric clocks may be installed on lighting branch circuits or small appliance circuits.

A 120/240-V multiwire branch circuit is the equivalent of two 120-V receptacle branch circuits.

When a grounding receptacle is required as in Sec. 406.3(A) of the Code, the branch circuit shall include or provide an equipment grounding conductor to which the grounding contacts of the grounding receptacle shall be connected. Refer to Sec. 368, subheading 1b, for the list of acceptable equipment grounding conductors.

- 3. OTHER CIRCUITS** For specific loads not otherwise provided for in Pars. 1 or 2, branch circuits shall be as required by other sections of the Code.

500. Feeder loads should be determined in accordance with instructions given in Div. 3. Instructions for determining the minimum allowable loads required by the Code are given in Sec. 5, Div. 12.

501. The size of conductors required with respect to both carrying capacity and voltage drop is discussed in Div. 3. For Type 2 branch circuits also refer to Sec. 497 of this division.

502. Overcurrent protection of circuits. In general, the rating of the overcurrent protective devices of a circuit shall not be in excess of the carrying capacity of the circuit conductor. However, there are many examples where this general principle is not workable and the Code either allows for limited exceptions from, or imposes additional limitations on this general principle:

- a.** Overload protection, but not short-circuit protection, may be omitted where the operation of a circuit protective device due to overload would cause a greater hazard, as in the case of fire pump circuits.

- b.* For overcurrent devices rated 800 A or less, when the ampacity of a conductor does not coincide with a standard rating of an overcurrent device, the next higher standard size may be used. Note that this does not allow a conductor to be knowingly operated in the window between its ampacity and the next higher standard size device. For example, the ampacity of 4/0 aluminum Type SE cable for load connection purposes (refer to Div. 3 for a detailed analysis of termination ratings, etc.) is 180 A. The next higher standard size overcurrent device is 200 A. Although the cable can be protected with the 200 A device, if the actual load (as determined by NEC Article 220) is expected to run above 180 A, then a 250 kcmil aluminum Type SE cable would be required. In addition, the next-higher standard-size allowance does not apply to a multioutlet branch circuit supplying receptacles for cord-and-plug-connected portable loads.
- c.* There are special allowable ampacity values established for small conductors, unless specifically permitted for tap conductors or for specific applications as covered in item *f* below. The values are as follows:
1. 18 AWG copper is 7 A provided any continuous loads do not exceed 5.6 A, and there is special overcurrent protection provided by branch-circuit-rated circuit breakers or fuses listed and marked for use with 18 AWG copper wire, or Class CC, J, or T fuses are used for this purpose.
 2. 6 AWG copper is 10 A provided any continuous loads do not exceed 8 A, and there is special overcurrent protection provided by branch-circuit-rated circuit breakers or fuses listed and marked for use with 16 AWG copper wire, or Class CC, J, or T fuses are used for this purpose.
 3. 14 AWG copper is 15 A.
 4. 12 AWG aluminum and copper-clad aluminum is 15 A.
 5. 12 AWG copper is 20 A.
 6. 10 AWG aluminum and copper-clad aluminum is 25 A.
 7. 10 AWG copper is 30 A.
- d.* Tap conductors, and secondary conductors from transformers with no overcurrent protection at the point of supply, all as covered in Sec. 319.
- e.* Specific applications covered in specialized Code articles, as follows:
1. Air conditioning and refrigeration equipment conductors, as covered in Div. 7 in Secs. 400 to 402.
 2. Capacitor circuit conductors, as covered in Sec. 138 of Div. 4.
 3. Control and instrumentation circuit conductors using the special protocol allowed in NEC Article 727, as covered in NEC Sec. 727.9. This method is not covered in this handbook.
 4. Electric welder circuit conductors, as covered in NEC Sec. 630.12 and 630.32. These details are not covered in this handbook.
 5. Fire-alarm circuit conductors, as covered in NEC Sec. 760.43, 760.45, 760.121, and Chap. 9, Tables 12(A) and 12(B). For nonpower-limited circuits, the rules generally follow the provisions for comparable conductors of signaling circuits covered in Sec. 477, although the 300 percent allowance does not apply. For power-limited circuits, the overcurrent protection is generally governed by the activities of the listing agencies because the applicable tables in Chap. 9 effectively only apply to a listing evaluation.
 6. Motor conductors, both power and control, and motor-operated appliances are entirely governed by provisions in Article 430, as covered in Div. 7. Note that those provisions do not generally follow the small conductor limitations covered here. For example, the table allowable ampacity of a 14 AWG conductor under the usual termination conditions is 20 A. The rating of a 1 hp 115-V single phase motor per Div. 12, Table 8 is 16 A. The minimum ampacity for a motor conductor in this case (refer

to Sec. 387 of Div. 7) is 125 percent of full load, or 20 A for this motor. Assume that the motor will be protected by an inverse-time circuit breaker. As covered in Table 43 of Div. 12, the allowable protection ratio is 250 percent, allowing for a 50-A circuit breaker ahead of 14 AWG conductors to this motor. This assumes the motor has appropriate running overload protection, generally set at not over 125 percent of full-load current, or 20 A in this case.

7. Phase converter supply conductors, as covered in Sec. 371 of Div. 7.
8. Remote-control, signaling, and power-limited circuit conductors, as covered in NEC Sec. 725.43, 725.45, 725.121, and Chap. 9, Tables 11(A) and 11(B). For nonpower-limited circuits, the rules are covered in Sec. 477. For power-limited circuits, the overcurrent protection is generally governed by the activities of the listing agencies because the applicable tables in Chap. 9 effectively only apply to a listing evaluation.
9. Secondary tie conductors, as covered in Sec. 126 of Div. 5.

503. The voltage on branch circuits supplying lampholders within their voltage ratings, auxiliary equipment of electric discharge lamps, and cord-and-plug-connected or permanently connected utilization equipment shall not exceed 120 V between conductors; however, higher voltages are permitted in a number of cases, subject to the occupancy limitation in Sec. 504.

Branch circuit voltages exceeding 120 V between conductors but not exceeding 277 V to ground (which allows for 480 V supplies on 480Y/277-V systems) are permitted to supply listed electric discharge luminaires (fixtures) and a special form of listed incandescent luminaire with an integral stepdown autotransformer between the supply and the screw shell. This voltage bracket is also permitted to supply luminaires with mogul-base screw-shell lampholders or other lampholders applied within their voltage rating, auxiliary equipment of electric-discharge lamps, and cord-and-plug-connected or permanently connected utilization equipment.

Conductors running up to 600 V between conductors, and with no voltage to ground limitation, are permitted to supply the ballasts for electric discharge lamps mounted in permanently installed fixtures on poles for the illumination of areas, such as highways, roads, bridges, athletic fields, parking lots, at a height not less than 6.7 m (22 ft), or on other structures such as tunnels at a height not less than 5.5 m (18 ft) shall not exceed 600 V between conductors. They are also permitted to supply luminaires powered from dc systems that incorporate listed dc ballasts that provide isolation between the dc source and the lamp circuit and shock protection during relamping operations. This allowance is designed for dc photovoltaic output circuits (Sec. 551) that often approach this voltage, and this allows for directly-connected lighting without the inherent inefficiencies of a central inverter.

The above limitations do not apply to lampholders of industrial infrared heating appliances as covered in NEC Sec. 422.14, nor do they apply to railway properties where a limited permission is available to power equipment from a trolley wire system with a ground return. Medium voltages (over 600 V) are permitted to supply utilization equipment in occupancies with qualified maintenance and supervision of the electrical system. For example, many industrial occupancies use very powerful motors in ranges of thousands of horsepower and operating at 4.8 or even 13.8 kV.

504. In dwelling occupancies, and guest rooms or suites of hotels and motels, the voltage between conductors supplying luminaires (lighting fixtures), and cord- and plug-connected loads 1440 VA, or less, or less than $\frac{1}{4}$ hp shall not exceed 120 V between conductors. This limitation is by occupancy and therefore supersedes allowances for higher voltages generally, as covered in Sec. 503.

WIRING FOR RESIDENTIAL OUTDOOR LIGHTING

505. General considerations. The following recommendations for wiring for residential outdoor lighting have been taken from a booklet on the subject published by the Construction Materials Division of the General Electric Co.

Factors that must be considered before making any outdoor wiring installation are family habits and the facilities that the family wishes to enjoy, the style and construction of the house, the size and topography of the property, and, most important of all, whether spare circuits are available at the panelboard or new circuits must be added, and the length of the circuits required for the various outdoor lighting and outlet installations.

In general, it will probably be found that permanently installed outdoor wiring to be used beyond the house should be run underground from the point where it emerges from the house to the point where the equipment is to be used. There are, of course, exceptions. When the house is multistoried, overhead wiring may be used. In almost all other cases, from the viewpoint of both safety and aesthetics, underground circuits will be preferable. Sometimes a combination of overhead and underground wiring will be most satisfactory.

Any circuit installed in an existing dwelling for outdoor use should be a new circuit originating at the panelboard rather than an extension of an existing circuit. In all cases circuits for outdoor use should be restricted to this purpose only.

In laying out new outdoor wiring, it should be recognized that even though the homeowner considers that the primary purpose of the new circuits is to provide lighting only, this cannot be taken for granted. Once the circuits are installed and outdoor outlets are available, there will probably be a heavy demand from this source for power for appliances and tools. Not less, therefore, than two 20-A circuits or one three-wire 120/240-V circuit should be installed.

506. Running the circuits from panelboard to the outside. The style and construction of the house will determine how the circuits are run from the panelboard to the outside. Most installations will be either (1) from a basement when the walls are concrete or cement-block or (2) from above ground level when the panelboard is located either in the garage or in another interior location at first-floor level.

- 1. WHEN THE PANELBOARD IS IN THE BASEMENT** In this situation, wiring is generally brought to the outside either through the masonry wall of the basement or through the sill on top of the foundation. Factors to be considered are whether the installation is to be underground or overhead. If it is underground, going directly through the basement wall and coming out below ground level (Fig. 9.314) on the outside is the least conspicuous. If convenient shrubbery will hide the conduit, it may be easier to come out through the sill (Fig. 9.315).

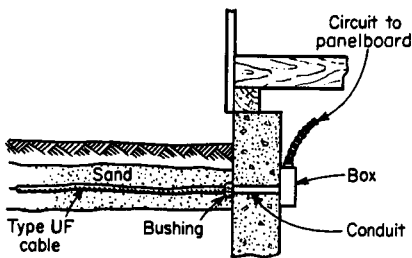


FIGURE 9.314 Running the circuit from the panelboard through masonry.

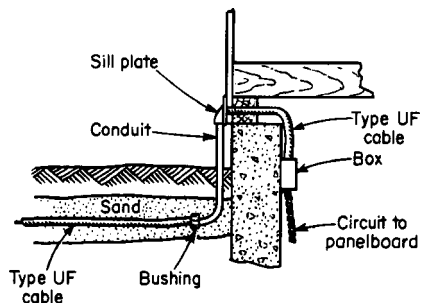


FIGURE 9.315 Running the circuit from the panelboard through the sill.

Either of these methods may be chosen when the wiring is to be overhead. In this case, since a length of conduit will have to run up the side of the house, it is well to come out of the basement at a point where shrubbery will partially conceal the installation. Occasionally, in frame construction, the circuit for overhead wiring can be fished up through the walls to a point of departure at the desired elevation of the house.

2. **WHEN THE PANELBOARD IS IN THE GARAGE OR THE HOUSE** In many newer houses, especially those without basements, the panelboard is installed in the attached garage or in some other handy but inconspicuous part of the house. In such cases, the circuit is run from the panelboard through the wall of the garage or house (Fig. 9.316) at the most convenient point. Thought should be given to the point selected so that the installation is as unobtrusive as possible.

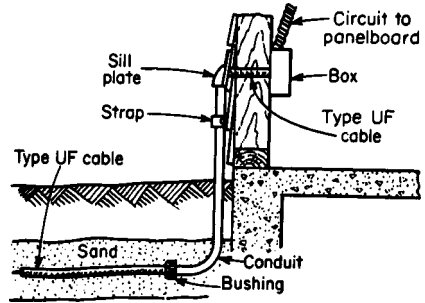


FIGURE 9.316 Running the circuit from the panelboard through the garage wall.

507. Underground circuits. Circuits run underground offer a number of advantages to the homeowner. They are not subject to damage from storms or exposed to mechanical damage. Most important, such circuits are invisible and do not, therefore, mar the appearance of the grounds and gardens.

The most economical underground installation for both feeders and branch circuits is Type UF (underground-feeder) cable. This cable is approved by the NEC for direct burial in the ground without additional protection.

Underground cable is laid in a trench at least 600 mm (24 in.) or (12 in.) 300 mm (12 in.) deep if 20 A or less and protected with a GFCI to prevent possible damage from normal spading. The bottom of the trench should be free from stones. This is easily accomplished by using a layer of sand or sifted dirt in the bottom of the trench (Fig. 9.317). Cable is laid directly on top of this layer. When cable enters the building or leaves the ground, slack should be provided in the form of an S curve to permit expansion with extreme changes in temperature. After the cable has been installed, fill all openings through the foundation with sealing compound so that water from rain or melting snow cannot follow the cable into the building.

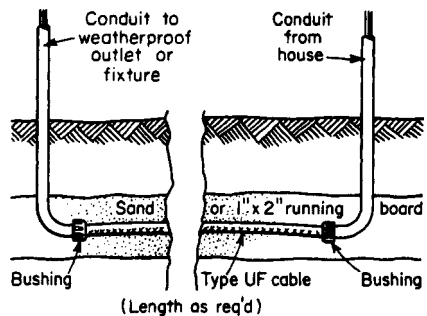


FIGURE 9.317 Type UF cable used for underground circuits.

It is desirable that underground-feeder cables be installed in continuous lengths from outlet to outlet and from fitting to fitting. Splices can be made only without a splice box in accordance with Sec. 110.14(B) of the NEC. Note that the individual conductors of Type UF cable are not listed for direct burial; only the complete cable assembly has that rating. Therefore, any cable splices for this wiring method must run complete from intact cable sheath to intact cable sheath. There are twist-on wire connectors with direct burial ratings, and that are suitable for single-conductor Type USE cables, but they cannot be used for the customary Type UF cable underground.

In some areas of a yard, when it is felt that digging might accidentally occur to the depth of the cable, a concrete pad or a 1- by 2-in (25.4- by 50.8-mm) running board can be laid

over the cable before the trench is filled (Fig. 9.317). Under driveways or roadways or where heavy loading might occur, it is also desirable to use a board, concrete pad, or conduit.

For outdoor wiring in sections of the United States that are known to be termite-infested or subject to attack by rodents, or whenever extra protection to the Type UF underground circuits is required, rigid galvanized-steel conduit may be used for mechanical protection. When rigid conduit for the complete circuit run is used, feeders and branch circuits may be of any approved type of moisture-resistant wire such as Types TW, RHW, or THWN.

508. Multiple-family buildings or apartments. The recommendations for residences can be applied to individual apartments for lighting and convenience outlets, and switch locations. If central heating is supplied, it is unlikely that an electric heater will be used in the bathroom or that many heavy-duty appliances will be used at one time. Therefore the two 20-A small-appliance branch circuits supplying convenience outlets in the dining room and kitchen generally will be sufficient. It is recommended that a three-wire, 120/240-V, No. 8 range circuit be installed for each apartment.

For nonrentable areas under the control of the building management the following rules from the *Handbook of Interior Wiring Design*, prepared by the Industry Committee on Interior Wiring Design, represent good practice:

1. Entrances

- a. Sufficient outlets shall be installed to provide electrical service consistent with the general architectural treatment, but in no case shall there be less than one outlet for an outside lantern or two for outside wall brackets.
- b. At least one ceiling outlet shall be installed for each 150 ft² (13.9 m²) of vestibule space.
- c. At least one wall outlet shall be installed over each group of letter boxes covering a lineal distance of 8 ft (2.4 m) or less.

2. Lobby or Main Hallway

- a. At least one ceiling outlet per 125 ft² (11.6 m²) of floor area shall be installed provided that:
 - (1) No area has outlets spaced more than 15 ft (4.6 m) apart.
 - (2) No elevator door or stairwell is more than 6 ft (1.8 m) from the nearest ceiling outlet.
- b. At least one convenience outlet shall be installed for every 12 ft (3.7 m) of wall space for portable lamps and general-utility purposes (vacuum cleaners, floor polishers, and so on). Hallways 10 ft or longer require a minimum of one convenience outlet.
- c. Provision shall be made for additional outlets to furnish such illumination as is demanded by the architectural treatment. This may be in the form of decorative wall brackets, urns, pedestals, built-in units, etc.

3. Upper Hallways

- a. At least one ceiling outlet shall be installed per 150 ft² (13.9 m²) of floor area, provided that:
 - (1) No area has ceiling outlets spaced more than 15 ft (4.6 m) apart if they are arranged on alternate circuits or 30 ft (9.1 m) if adjacent outlets are on the same circuit.
 - (2) No elevator door or staircase is located more than 6 ft (1.8 m) from the nearest ceiling outlet.
 - (3) No section of a hallway not in a straight line from another shall be without at least one ceiling outlet.
- b. At least one convenience outlet shall be installed per floor, with additional outlets spaced so that no point in a hallway is located more than 25 ft (7.6 m) from a convenience outlet, and a minimum of one for hallways 10 ft or longer.

4. *Hall Switches*

- a. All ceiling outlets plus the outlets for entrance lighting shall be controlled by switches.
- b. When all ceiling outlets on any one floor are controlled by a single switch, this switch shall be of a type or shall be located so as to be inaccessible to the general public.
- c. When more than one switch controls the ceiling outlets on a particular floor, at least one switch shall be inaccessible to the general public. This switch shall control outlets installed under the following provisions:
 - (1) It must control the outlet nearest the stairwell or the elevator door.
 - (2) It must control outlets so that the spacing between any two is not greater than 30 ft (9.1 m).
 - (3) It must control an outlet in every space not in a direct line from the outlet near the stairwell or the elevator door.

5. *Stairwells*

- a. When enclosed stairwells are installed (as in masonry construction), there shall be an outlet for lighting on each landing.
- b. If exit lights are required, they shall be installed in accordance with all rules and regulations covering their use.
- c. Interior stairways with six risers or more require a wall switch at each floor level.

6. *Basement Areas.* Lighting outlets shall be provided in basement areas on the basis of at least one ceiling outlet per 200 ft² (18.6 m²), plus additional outlets and necessary switch control if such basement areas are available to tenants for laundry, storage, or other purposes.

7. *Oil Burners, Air-Conditioning Equipment, etc.* Circuits shall be individually provided for each such piece of equipment in accordance with the size and rating of each motor or heater.

8. *Elevators.* Power and light feeders for elevator service shall be of the size required by the elevator manufacturer.

509. The arrangement of the service and feeders will depend on the system of metering employed. When each apartment is to be metered and billed for all its power, a meter service switch and meter should be provided for each apartment and one or two for the building management. These should be located in rows along the walls in the basement. Each apartment must be on an individual feeder from the meter service switch. The load on the feeder should be computed in accordance with the instructions given in Div. 3. If an electric range is supplied, three-wire feeders should be used. When the power company will bill the building management on a lower rate for power than it does for lighting, two meters with separate circuits for each should be provided. If there are more than six meter service switches, the service must be brought in through a single circuit breaker or fused service switch, the size to be determined in accordance with the instructions of Div. 3. When the power is to be billed to the building management and included in the rent, the circuit is brought in through a single circuit breaker or fused service switch as before.

Circuits for either one or two meters, depending on whether the power company bills the power on a separate rate from the lighting, should be provided. A distribution center with a safety enclosed fused knife switch or circuit breaker for each feeder should be installed. With steadily increasing energy costs at hand, the trend is toward including all tenant loads on a tenant meter. This also promotes energy conservation, since a tenant pays directly for any energy wasted. The method of wiring is with Type MC cable or nonmetallic-sheathed cable for small buildings permitted to be of frame construction. Conduit or tubing wiring is often employed, at least for feeders, for larger buildings of masonry construction.

510. With any of the above plans each apartment should have its own distribution panelboard containing circuit breakers for the branch circuits. Circuit breakers can be easily reset and are unlikely to provoke a service call by a tenant squeamish about changing a cartridge fuse. Note that every tenant must have ready access to his branch-circuit overcurrent devices, regardless of how a rental agreement may have been worded. He must also have ready access to his feeder and service devices unless there is continuous supervision by building management, and the management is responsible for electrical maintenance. This exemption only applies in multiple-occupancy buildings; a tenant in a single-family house must have this access regardless of how a rental agreement may describe the electrical maintenance responsibility.

WIRING FOR COMMERCIAL AND INDUSTRIAL OCCUPANCIES

511. Electrical distribution systems for commercial and industrial use (Joseph F. McPartland, *Electrical Systems Design*). In any electrical system, the distribution system involves the methods and equipment used to carry power from the service equipment to the overcurrent devices protecting the branch circuits. The distribution system carries power to lighting panelboards, power panelboards, and motor-control centers and to the branch-circuit protective devices for individual motor or power loads. Depending upon the type of building, the size and nature of the total load, various economic factors, and local conditions, a distribution system may operate at a single voltage level or may involve one or more transformations of voltage. A distribution system might also incorporate a change in frequency of ac power or rectification from ac to dc power.

Design of a distribution system, therefore, is a matter of selecting circuit layouts and equipment to accomplish electrical actions and operations necessary for the conditions of voltage, current, and frequency. This means relating such factors as service voltage, distribution voltage or voltages, conductors, transformers, converters, switches, protective devices, regulators, and power-factor corrective means to economy, load conditions, continuity of service, operating efficiency, and future power requirements. Of course, the factors of capacity, accessibility, flexibility, and safety must be carefully included in design considerations for distribution.

Basically, distribution systems are classified according to the voltage level used to carry the power either directly to the branch circuits or to load-center transformers or substations at which feeders to branch circuits originate. The most common types of distribution systems based on voltage are discussed in Div. 3.

512. Types of electrical distribution systems. The descriptions and discussions of the different types of electrical distribution systems given in this section and Secs. 513 to 524 inclusive are reproduced from *Westinghouse Architects' and Engineers' Electrical Data Book* through the courtesy of the Westinghouse Electric Corporation.

In the great majority of cases, power is supplied to a building at the utilization voltage. In practically all these cases, the distribution of power within the building is achieved through the use of a simple radial distribution system. This system is the first type described on the following pages from the low-voltage bus to the loads.

When service is available at the building at some voltage higher than the utilization voltage to be used, the system design engineer has a choice of a number of types of systems.

This discussion covers seven major types of distribution systems and practical modifications of several of them.

- Simple radial
- Loop-primary radial
- Banked-secondary radial
- Primary-selective radial
- Secondary-selective radial
- Simple network
- Primary-selective network

513. Simple radial system. The conventional simple radial system receives power at the utility supply voltage at a single substation and steps the voltage down to the utilization level. Low-voltage feeder circuits run from the substation bus to switchgear assemblies and panelboards that are located with respect to the loads as shown in Fig. 9.318. Each feeder is connected to the substation bus through a circuit breaker. Relatively small circuits are used to distribute power to the loads from the switchgear assemblies and panelboards.

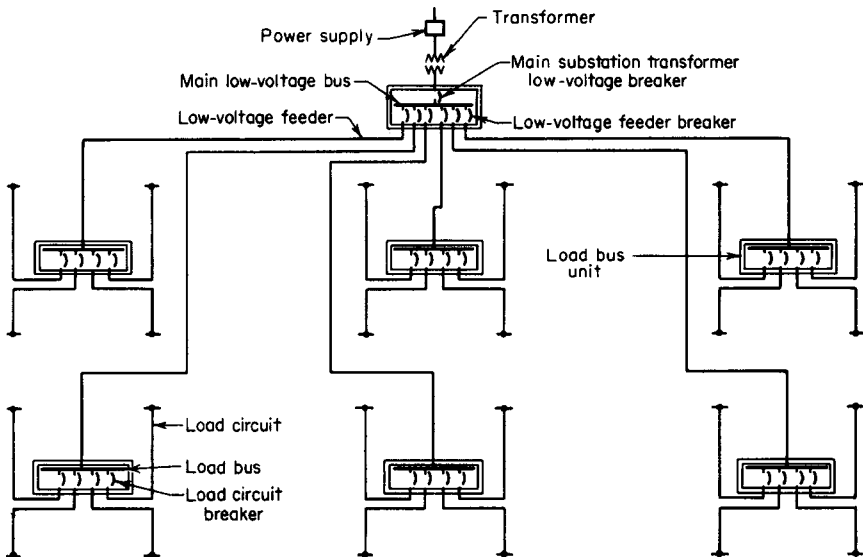


FIGURE 9.318 Conventional simple radial system.

Since the entire load is served from a single source, full advantage can be taken of the diversity among the loads. This makes it possible to minimize the installed transformer capacity. However, the voltage regulation and efficiency of this system are poor because of the low-voltage feeders and single source. The costs of the low-voltage feeder circuits and their associated circuit breakers are high when the feeders are long and the peak demand is above 1000 kVA.

A fault on the substation bus or in the substation transformer will interrupt service to all loads. Service cannot be restored until the necessary repairs have been made. A low-voltage feeder-circuit fault will interrupt service to all loads supplied over that feeder circuit.

A modern and improved form of the conventional simple radial system distributes power at a primary voltage. The voltage is stepped down to utilization level in the several load areas within the building through power-center transformers. The transformers are usually connected to their associated load bus through a circuit breaker, as shown in Fig. 9.319. Each power center is a factory-assembled unit substation consisting of a three-phase liquid-filled or air-cooled transformer, an integrally mounted primary switch, and low-voltage metal-enclosed circuit breakers. Circuits are run to the loads from these circuit breakers.

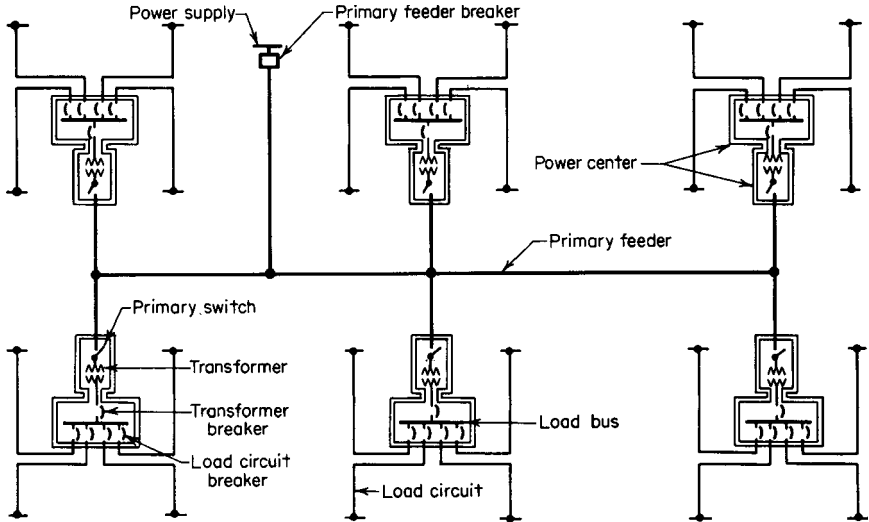


FIGURE 9.319 Modern simple radial system.

Since each transformer is located within a specific load area, it must have sufficient capacity to carry the peak load of that area. Consequently, if any diversity exists among the load areas, this modified system requires a greater transformer capacity than the basic form of the simple radial system. However, because power is distributed to the load areas at a primary voltage, losses are reduced, voltage regulation is improved, feeder-circuit costs are reduced substantially, and the large low-voltage feeder circuit breakers are eliminated. In many cases the interrupting duty imposed on the load circuit breakers is reduced.

This modern form of the simple radial system will usually be lower in initial investment than any other type of distribution system for buildings in which the peak load is above 1000 kVA. It is poor, however, from the standpoints of service continuity and flexibility. A fault on the primary feeder circuit or in one transformer will cause an outage to all loads. In the case of the feeder fault, service is interrupted to all loads until the trouble has been eliminated. When a transformer fault occurs, service can be restored to all loads except those served by the faulty transformer by opening the transformer primary switch and reclosing the primary feeder breaker.

Reducing the number of transformers per feeder by adding primary feeder circuits will improve the flexibility and service continuity of this system. This, of course, increases the investment in the system but minimizes the extent of an outage due to a transformer or feeder fault.

If one primary feeder is used per transformer, as in Fig. 9.320, the system is comparable in service continuity to the single substation form of the simple radial system. This

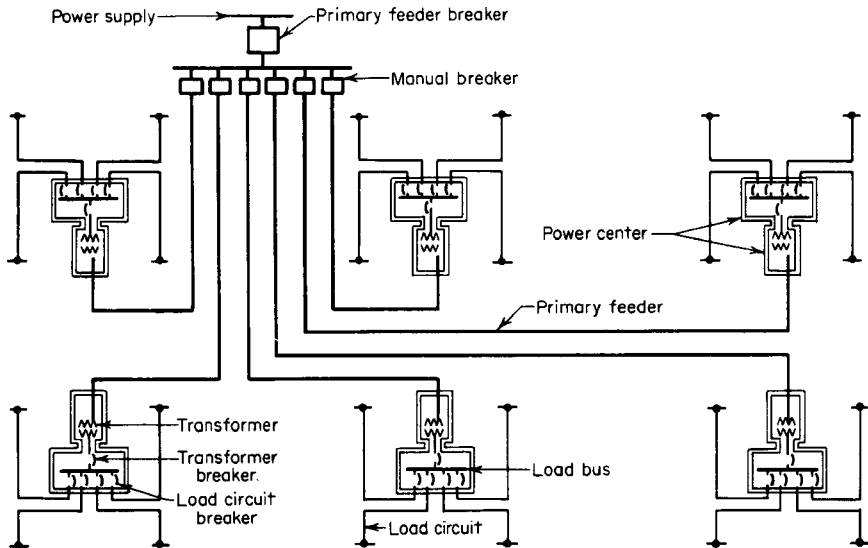


FIGURE 9.320 Modified modern simple radial system.

system arrangement will usually be very expensive. The cost can be materially reduced, however, by replacing the automatic feeder circuit breakers with manually operated breakers or load-break switches and by backing up a number of these switches with one automatic circuit breaker.

In this modified form of the simple radial system, a primary feeder fault interrupts service to all loads. Service can be restored to all loads except those associated with the faulted system element by opening the load-break switch on the faulted circuit and closing the circuit breaker. Service can be restored to the remaining loads when the necessary repairs are made.

514. Loop-primary radial system. This system is similar in principle to the modern form of simple radial system. It provides for quick restoration of service when a primary feeder or transformer fault occurs, as does the modified simple radial system of Fig. 9.320, and at a lower investment. A sectionalized primary loop controlled by a single primary feeder breaker as shown in Fig. 9.321 is used rather than a radial primary feeder.

Manually operated load-break switches are installed in the feeder for sectionalizing purposes. Two are located where the feeder branches to form the loop, and the others are located at the transformers. This makes it possible to disconnect any transformer and its associated section of loop from the rest of the system.

When a transformer or primary-feeder fault occurs, the main feeder breaker opens and interrupts service to all loads. Increasing the number of primary loop feeders will reduce the extent of the outage from a fault but will also increase the system investment. The faulty section of loop and its associated transformer can be disconnected from the system by the load-break switches. Service can then be restored to all but the disconnected portion of the system by closing the primary feeder breaker. Service cannot, however, be restored to the loads in the area where the transformer or primary loop section is in trouble until the necessary repairs have been made.

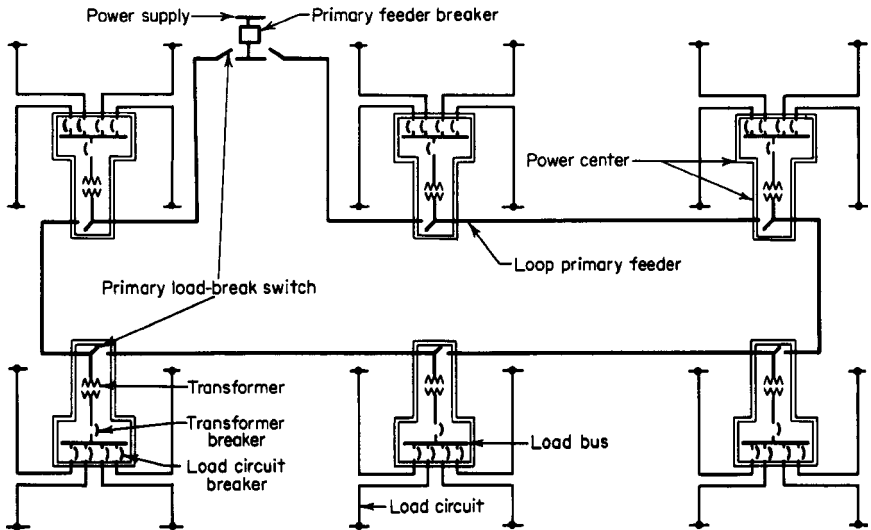


FIGURE 9.321 Loop-primary radial system.

The cost of this system as illustrated is only slightly more than that of the modern simple radial system of Fig. 9.319. The primary-cable cost is a little greater, and there are two additional load-break switches in the system. The load-break switches associated with the transformers will cost little more than the disconnecting switches in the primary leads of the transformers of the simple radial system.

515. Banked-secondary radial system. This system permits quick restoration of service to all loads following a primary-feeder or transformer fault. It uses a secondary loop, as shown in Fig. 9.322, to provide an emergency supply when a fault occurs in a transformer or a section of the primary loop. The primary-circuit arrangement is the same as that in the loop-primary radial system of Fig. 9.321.

The primary-feeder arrangement of the simple radial system of Fig. 9.320 can be used to give the same results, but it usually will be more costly.

A primary-feeder or transformer fault causes the main breaker to operate and drop all load. Service can be restored by opening the two load-break switches and the low-voltage breaker of the transformer adjacent to the fault and closing the primary feeder breaker. When the primary feeder breaker is reclosed, service is restored to all loads. Those loads connected to the load bus associated with the disconnected transformer are supplied over the secondary loop from adjacent load buses.

The secondary loop gives a number of important advantages other than providing an emergency supply to restore service. It helps equalize the loads on all transformers and thus makes it unnecessary to match the transformer capacity at each load center to the load connected to each load bus.

Balancing transformer capacity and load in each load area may be a real problem on all other types of radial systems, except the radial system of Fig. 9.318. The secondary loop permits 1 kVA rating of transformer to be used throughout the system, and load circuits can be run directly from the nearest bus to the loads.

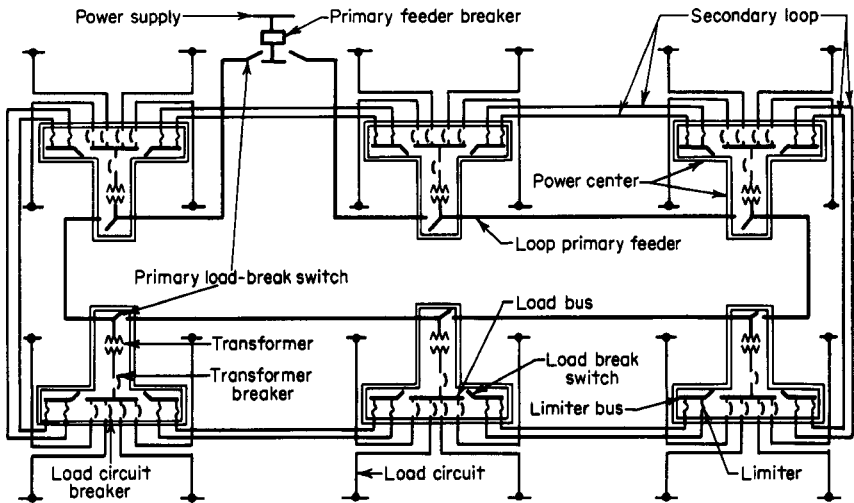


FIGURE 9.322 Banked-secondary radial system.

Advantage is taken of the diversity among the loads because all transformers are connected in parallel. As a result, there usually is a saving in transformer capacity over that required in any other form of radial system except the simple radial system of Fig. 9.318. Also, this system is better adapted for across-the-line starting of relatively large motors than is any other type of radial system because the starting current is supplied through several transformers in parallel rather than through a single transformer. Thus, if the starting of large motors is involved, the use of this system may result in a saving in the cost of motor-starting equipment. Likewise, it is the most satisfactory type of radial system for combined light and power secondary circuits.

In the banked-secondary radial system, fault current flows not only through the transformer associated with a faulted load bus or circuit but also through other transformers and over the secondary loop to the fault. The resulting increase in fault current may require the use of load circuit breakers having a higher interrupting rating than needed in other types of modern radial systems. This possible increase in cost may or may not be offset by savings in transformer capacity and secondary conductors.

It is difficult to make a general cost comparison between this system and the loop-primary radial system. In some buildings the additional cost of the secondary loop will be offset by the saving in transformer capacity and secondary conductors. In other buildings, because of lack of diversity and a relatively uniform distribution of load, these savings are very small, and the system will cost more than the loop-primary radial system by about the cost of the secondary loop. However, the advantages of quick restoration of service to all loads, greater flexibility, higher efficiency, and better voltage conditions may justify the extra cost.

516. Primary-selective radial system. The primary-selective radial system, as shown in Fig. 9.323, differs from the systems previously described in that it employs at least two primary-feeder circuits in each load area. It is designed so that when one primary circuit is out of service, the remaining feeder or feeders have sufficient capacity to carry the total load. While three or more primary feeders may be used, usually only two feeders are employed. Half of the transformers are normally connected to each of the two feeders.

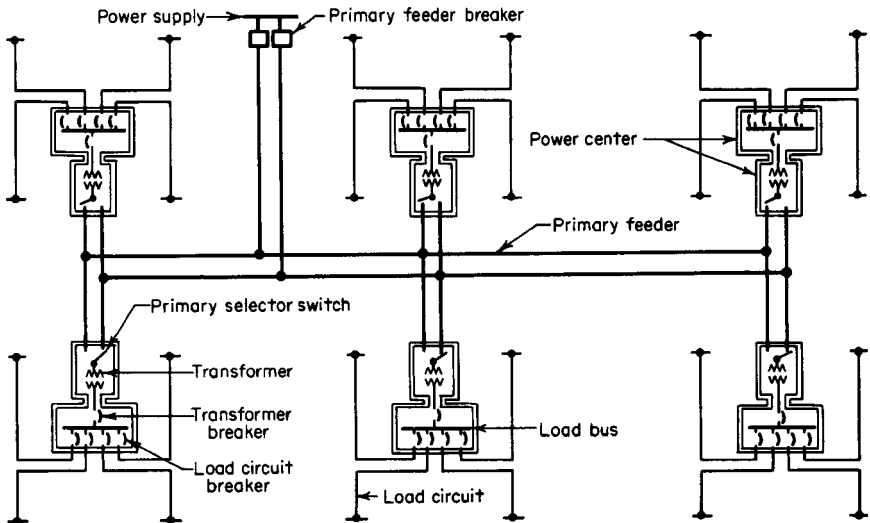


FIGURE 9.323 Primary-selective radial system.

When a fault occurs on one of the primary feeders, only half of the load in the building is dropped. In the systems discussed previously a primary-feeder fault causes an outage to all loads in the building.

Double-throw or primary selector switches are used with all transformers so that when a primary-feeder fault occurs, the transformers normally supplied from the faulted feeder can be switched to the good feeder and restore service to all loads.

The short-circuit duty on the load circuit breakers is less than in the banked-secondary radial system and is about the same as for all other types of radial systems using transformers within the load areas.

If a fault occurs in one transformer, the associated primary-feeder breaker opens and interrupts service to half of the load in the building, just as when a primary feeder fails. The faulted transformer is disconnected by moving its primary selector switch to the open position. Service is then restored to all loads except those normally supplied by the defective transformer by closing the primary-feeder breaker.

Service cannot be restored to the loads normally served by the faulted transformer until the transformer is repaired or replaced.

Cost of the primary-selective radial system is greater than that of the simple radial system of Fig. 9.319 because of the additional primary-feeder breaker, the use of primary selector switches, and the greater amount of primary-feeder cable required. The benefits derived from the reduction in the amount of load dropped when a primary-feeder or transformer fault occurs, plus the quick restoration of service to all or most of the loads, may more than offset the greater cost.

The primary-selective radial system, however, is not so good as the banked-secondary radial system from the standpoint of restoring service to the loads after a primary-feeder or transformer fault. It is only a little better than the loop-primary radial system in this respect. In some cases, particularly in fairly large buildings with medium- or light-load density, about the same quality of service can be rendered at less cost by using the loop-primary radial system employing two separate loops instead of one. In this case, half of the transformers are connected to each loop of the system. (See Fig. 9.323.)

517. Secondary-selective radial system. This system uses the same principle of duplicate feed from the power supply point as the primary-selective radial system. In this system, however, the duplication is carried all the way to each load bus on the secondary side of the transformers instead of just to the primary terminals of the transformers. This arrangement permits quick restoration of service to all loads when a primary-feeder or transformer fault occurs, as does the banked-secondary radial system.

The usual form of secondary-selective radial system is shown in Fig. 9.324. Each load area in the building is supplied over two primary feeders and through two transformers. The capacity of each of these transformers must be such that it can safely carry the entire load in the area served by both transformers. Each transformer is connected through a transformer breaker to a secondary bus section to which half of the radial load circuits are connected.

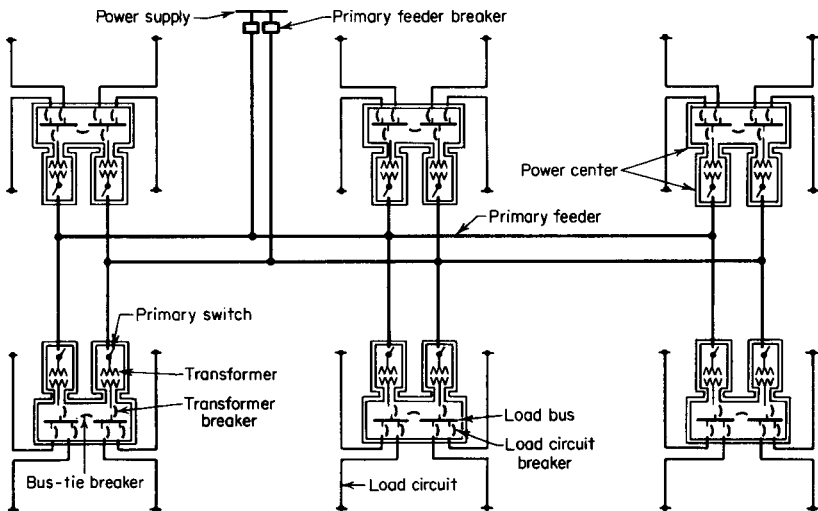


FIGURE 9.324 Secondary-selective radial system.

A bus-tie breaker is provided for connecting the two secondary or load-bus sections at each load center. Normally this bus-tie breaker is open, and the system operates as two parallel systems entirely independent of each other beyond the power supply points. The bus-tie breaker is interlocked with the two transformer breakers so that it cannot be closed unless one of the transformer breakers is open. This is done to keep the interrupting duty imposed on the load circuit breakers to a minimum.

A primary-feeder fault causes half of the load in the building to be dropped, as with the primary-selective radial system. Service can be restored by opening the transformer breakers associated with the faulted feeder and closing all bus-tie breakers. When this is done, the entire load is fed over one primary feeder and through half of the transformers. Therefore, both primary feeders must be capable of carrying the entire load, as with the primary-selective radial system, and a much greater transformer capacity is required.

A fault in a transformer causes the associated primary feeder breaker to trip and interrupts service to half of the building load. Service can be restored by opening the disconnecting switch on the primary and the circuit breaker on the secondary of the faulted transformer, closing the associated bus-tie breaker, and reclosing the primary-feeder breaker. This manual switching restores the system to normal operating conditions, except that the faulted transformer is deenergized and its load is being supplied through the adjacent transformer.

Cost of the secondary-selective radial system usually will be considerably more than that of the radial systems previously discussed with the exception of the system shown in Fig. 9.318, which uses one large substation and low-voltage feeders, and the banked-secondary radial system of Fig. 9.322. This is due chiefly to the large amount of transformer capacity required to provide complete duplicate power supply to the secondary load buses. Because of this spare transformer capacity, the regulation provided by the secondary-selective radial system under normal conditions is better than that of the systems previously discussed, with the possible exception of the banked-secondary radial system.

From the standpoint of voltage fluctuation when a load such as a relatively large motor is thrown on the system, this system is not as good as the banked-secondary radial system. The advantage that the secondary-selective radial system offers over the banked-secondary radial system is that a primary-feeder or transformer fault causes only one-half of the load to be dropped instead of all the load in the area. Both systems permit the quick restoration of service to all loads when a primary-feeder or transformer fault occurs.

The banked-secondary radial system has greater flexibility and can be more readily adapted to changing load conditions than can the secondary-selective radial system.

A modified form of secondary-selective radial system that will often be less costly than the common form previously described as shown in Fig. 9.325. In this system there is only one transformer at each load center instead of two. Pairs of adjacent load buses are connected by secondary cables or bus and thus permit picking up the load of any bus when a primary-feeder or transformer fault occurs.

Each tie circuit is connected to each of its two load buses through a secondary-tie circuit breaker. Each secondary-tie breaker is interlocked so that it cannot be closed unless one of the two transformer breakers is open.

There are two ways in which this single-transformer-substation form of secondary-selective radial system can be handled. One is to use the same number and rating of transformers as in the usual form of the system. Essentially, this results in twice as many load areas with half as much load in each area. This arrangement has the advantage of reducing the average length of the radial load circuits and thereby lowering the cost of the secondary

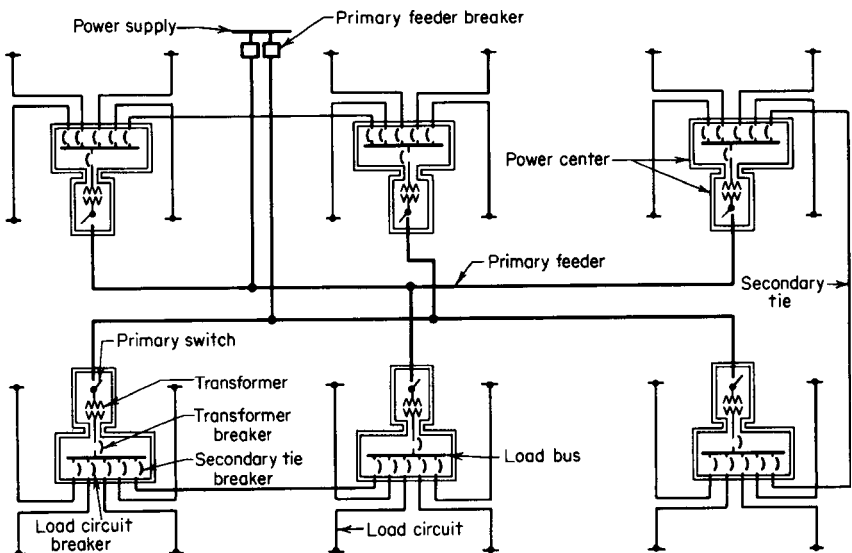


FIGURE 9.325 Modified secondary-selective radial system.

conductors. When compared with the other types of distribution systems, both this and the usual form of secondary-selective radial system introduce the problem of balancing the loads on twice the usual number of load buses.

The other way in which the system can be handled is to use the same number of load areas as in Fig. 9.324. With one transformer of twice the kVA rating at each load center, the result is half of the number of transformers but the same total transformer capacity. Because of the smaller number of transformers of larger rating, this will often be the lowest-cost form of secondary-selective radial system.

Basically, the single-transformer-substation form of secondary-selective radial system, regardless of the number and size of the transformers used, functions as described in connection with the more usual form of this system.

518. Simple network system. The ac secondary network system is the system that has been used for many years to distribute electric power in the high-density, downtown areas of cities. Modifications of this type of system make it applicable to serve loads within buildings.

The best-known advantage of the secondary network system is continuity of service. No single fault anywhere on the system will interrupt service to more than a small part of the system load. Most faults will be automatically cleared without interrupting service to any load. Another outstanding advantage that the network system offers is its flexibility to meet changing and growing load conditions at minimum cost and with minimum interruption of service to the other loads. In addition to flexibility and service reliability, the secondary network system provides exceptionally uniform and good voltage regulation, and its high efficiency materially reduces the cost of losses.

Three major differences between the network system and the simple radial system account for the outstanding advantages of the network. First, a network protector is connected in the secondary leads of each network transformer in place of the usual transformer secondary breaker, as shown in Fig. 9.326. Second, the secondaries of all transformers are connected together by a ring bus or secondary loop from which the loads are supplied over

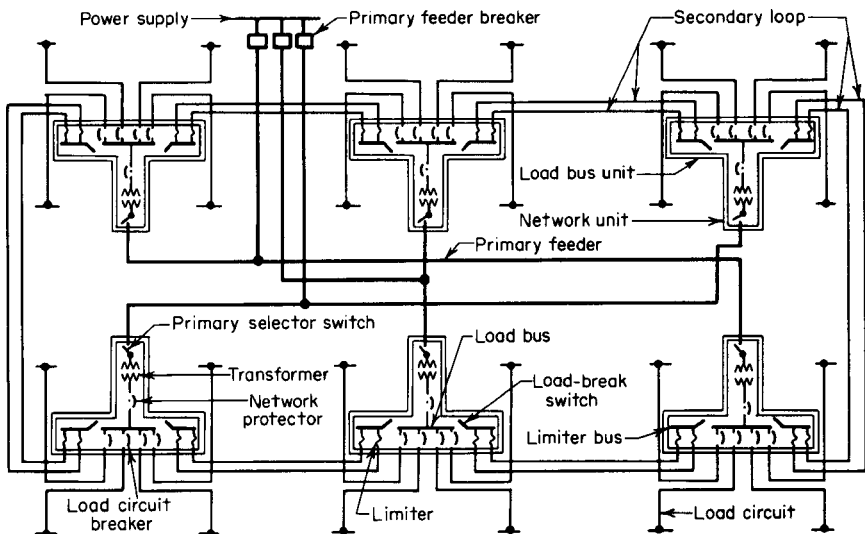


FIGURE 9.326 Simple network system.

short radial circuits. Third, the primary supply has sufficient capacity to carry the entire building load without overloading when any one primary feeder is out of service.

A network protector is a specially designed, motor-closed, and shunt-tripped air circuit breaker controlled by network relays. The network relays function to close the breaker automatically only when voltage conditions are such that the associated transformer will supply load to the secondary loop and to open the breaker automatically when power flows from the secondary loop to the network transformer. The purpose of the network protector is to protect the secondary loop and the loads served from it against transformer and primary-feeder faults by disconnecting the defective feeder-transformer unit from the loop when a back feed occurs.

The chief purpose of the secondary loop is to provide an alternative supply to any load bus when the primary feeder which normally supplies it is deenergized, so as to prevent any service interruption when a transformer or feeder fault occurs. The use of the loop, however, gives at least four other important advantages. First, it saves transformer capacity. It permits lightly loaded transformers to help those which are more heavily loaded and thus tends to equalize the load on all transformers. Second, it saves secondary load circuit conductors and conduit. The secondary loop makes it unnecessary to match the load supplied from any one load bus with the transformer capacity at that point. Loads can be served from the loop at load buses located between network transformers, and the load circuits can be run directly to the loads from the nearest load bus. This permits the use of very short radial circuits and results in a considerable saving in secondary cable and conduit when compared with the load circuits of a simple radial system. Third, the use of the loop gives lower system losses and greatly improved voltage conditions. The voltage regulation on a network system is such that both lights and power can be fed from the same load bus. Much larger motors can be started across the line than on a simple radial system. This factor often results in greatly simplified motor control and permits the use of relatively large low-voltage motors with their less expensive control.

The fourth important advantage resulting from the use of the secondary loop is the much greater system flexibility it provides. New or relocated loads can be supplied directly from the nearest load bus without the necessity of reconnecting other loads to keep within the transformer capacity of the secondary substation to which the load is to be added. Complete network power centers or load-bus units can be relocated in the loop, or new units can be added to the loop to meet changing load conditions. The loop capacity requires no change when additional network power centers are connected to it if each new transformer is of no larger rating than those originally used. The loop permits these system changes to be made without interrupting service to existing loads. This greater flexibility of the network system permits the system to be changed more easily, more quickly, and at less cost to meet changing load conditions that can be done with a radial system.

Since the length of the secondary loop (which is in essence an extended bus) is considerably longer than the buses used with the usual radial systems, the probability of faults on it is greater. It therefore becomes necessary to protect the system against faults on this bus or loop so that a fault on it will be automatically disconnected without interrupting service. To accomplish this, the secondary loop should consist of a minimum of two three-phase circuits. These separate circuits should be bused at each point where power is supplied to the loop through a transformer and at each point where a radial load circuit is supplied to the loop through a transformer and at each point where a radial load circuit is served from the loop. Each individual loop circuit should be connected to these bus points through limiters.

A limiter is a device for disconnecting a faulted cable from a distribution system and for protecting the unfaulted portions of that cable against serious thermal damage. Although fusible, they are rated by the size of the conductors they protect and not a specified current in amperes. They function by means of a circuit-opening member which is heated and

destroyed by the current passing through it. The fusible circuit-opening member is completely enclosed so that there is no visible flame or smoke when the limiter operates. Limiters for building networks are suitable for use on circuits of 600 V and below and have an interrupting rating of 200,000 A. Limiters are designed for use with various sizes of cable and are rated in cable size. The largest limiter is rated at 1000 kcmil. The minimum fusing current of a limiter is about 3 to $3\frac{1}{2}$ times the NEC continuous-current rating of the cable with which it is designed to be used. This value of fusing current is necessary to ensure positive selectivity among the limiters in the secondary loop. If limiters having appreciably lower values of fusing current were used, those on both the good conductors and the faulted conductor would function on the minimum definite time portion of other time-current curves for high fault currents. This means that not only the limiters in the faulted loop conductor but a number of those in the good conductors would blow almost instantly and in some cases cause unnecessary interruptions of service. In addition to preventing unnecessary limiter blowings, the high fusing-current value of limiters also has the advantage of keeping the normal temperature of the limiter terminals relatively low so that the associated cable can safely carry its rated current.

If loads are to be supplied from the secondary loop at points other than those at which the network transformers are connected to the loop, the current rating of the loop should be equal to the full-load current of one of the transformers supplying the loop. The current rating of the loop can be safely reduced to 67 percent of the above value if loads are supplied from the loop only at transformer locations. If more than 1 kVA rating of network transformer is used, the current rating of the loop should be based on the full-load current of the largest network transformer connected to the loop. When loads are served from the loop at points other than transformer locations, the maximum amount of load which should be supplied from the loop between any two adjacent transformers should not exceed the full-load rating of the larger of the two transformers.

To obtain satisfactory selectivity between limiters under all fault conditions, a minimum of two similar single-conductor cables per phase should be used in the secondary loop. The size and number of conductors used in any case should be selected to give the lowest installed loop cost. However, the conductors used should not be larger than about 600,000-cmil cable.

Loads are served from the secondary loop at conveniently located load buses over relatively short radial circuits. These load circuits are taken off the load buses through air circuit breakers. The breakers should provide adequate overload protection for their associated circuits and should be capable of interrupting the fault current available at that point on the system. The average interrupting duty on the load breakers in a network system will often be higher than the duty on the load breakers in a radial system having the same connected transformer capacity.

The optimum size and number of primary feeders can be used in the secondary network system because the loss of any primary feeder and its associated transformers does not result in the loss of any loads. In spite of the spare capacity required in primary feeders, this will often result in a saving in primary-feeder and switchgear cost when compared with a radial system. This saving is due to the fact that in many radial systems more and smaller feeders are often used to keep down the extent of the outage when a primary-feeder fault occurs.

When a fault occurs on a primary feeder or in a transformer, the fault is isolated from the system through the automatic tripping of the primary feeder circuit breaker and all the network protectors associated with that feeder circuit. This operation does not interrupt service to any loads. When the necessary repairs have been made, the system is restored to normal operating conditions by closing the feeder circuit breaker. All network protectors associated with that feeder will close automatically.

The simple network system sometimes takes a form commonly known as a *spot-network system*. With this system, emergency capacity to prevent a service interruption

when a primary-feeder or transformer fault occurs is provided by making a spare primary cable and transformer available at each load center instead of tying the load areas together by a secondary loop, as in the usual simple network.

The simple spot-network system resembles the secondary-selective radial system in that each load area is supplied over two or more primary feeders through two or more transformers. In this system, however, the transformers are connected through network protectors to a single load bus, as shown in Fig. 9.327. Since the transformers at each load bus operate in parallel, a primary-feeder or transformer fault does not cause any service interruption. The transformers supplying each load bus will normally carry equal loads, whereas equal loading of the two transformers supplying a load center in the secondary-selective radial system is difficult to obtain. The interrupting duty imposed on the load circuit breakers will be greater with the simple spot-network system than with the secondary-selective radial system.

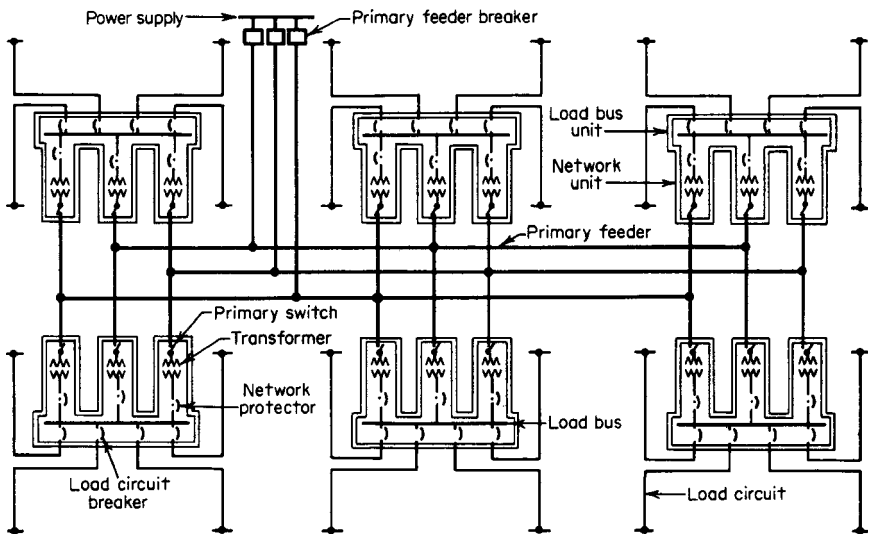


FIGURE 9.327 Simple spot-network system.

Simple spot-network systems are more economical than the other forms of network systems for buildings in which there are heavy concentrations of load covering small areas, with considerable distances between these concentrations and very little load in the areas between them. The chief disadvantage of spot-network systems is that they are not nearly so flexible for growing and shifting loads as are the other forms of network systems. Simple spot-network systems are used when a high degree of service continuity is required, flexibility is of minor importance, and their cost is less than that of the network systems using a secondary loop. The simple spot-network system is most economical when three or more primary feeders are required. This is true because supplying each load bus through three or more transformers greatly reduces the spare cable and transformer capacity that is required.

519. Primary-selective network. This is the most generally applicable and widely used form of industrial secondary network system. It is similar in principle to the simple network system, offers almost all its advantages, and is the lowest-cost network system for

buildings or load areas requiring only two or three primary feeders. Saving in first cost when compared with the simple network system is accomplished by using the principle of duplicate or alternate feed to each transformer, as with the primary-selective radial system. This procedure practically eliminates the necessity for spare transformer capacity and reduces the interrupting duty imposed on the load circuit breakers but not the spare primary-feeder capacity required.

Each transformer in the primary-selective network system is equipped with a primary selector switch. Two primary feeders are run to each transformer, as shown in Fig. 9.328. In a building requiring two primary feeders, each feeder must be capable of supplying the entire load in the building. Each transformer is connected to a load bus through a network protector. The radial circuits serving the loads are connected to the load bus through circuit breakers. A secondary loop, as is used in the banked-secondary radial and the simple network systems, connects each load bus to the two adjacent load buses. One-half of the network transformers are normally connected to each primary feeder.

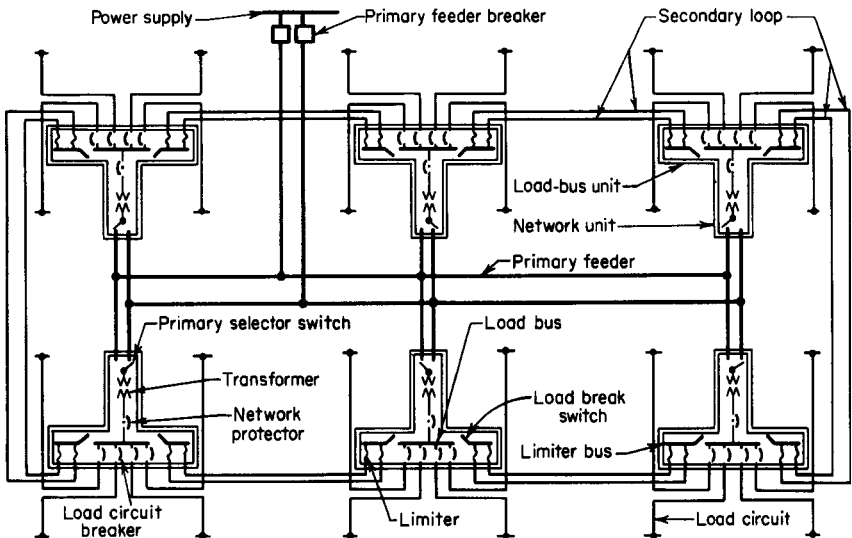


FIGURE 9.328 Primary-selective network system.

A primary-feeder fault causes the faulty feeder and its transformers to be disconnected from the system by the automatic operation of the primary-feeder breaker and associated network protectors. The entire building load is then carried over the remaining primary feeder and one-half of the network transformers. The transformers associated with the faulty feeder can be connected to the good feeder by manually operating their selector switches. This relieves the overload on the transformers normally associated with the good feeder.

A transformer fault is isolated from the system by the operation of the primary-feeder breaker and the network protectors associated with the primary feeder. The defective transformer can be disconnected from the primary feeder by opening its selector switch. The feeder and its good transformers can be immediately returned to service. A primary-feeder or transformer fault will not cause any interruption of service to the load.

Cost of the primary-selective network system compares very favorably with that of the secondary-selective radial system. In buildings in which the load is quite uniform and there is little diversity among load centers, the secondary-selective radial system usually will be lower in initial investment than the network system. However, in buildings in which the load is nonuniform and there is appreciable diversity among load centers, the primary-selective network system often will be lower in first cost than the secondary-selective radial system.

It is a common practice to supply the radial circuits only from the load buses to which the network transformers are connected. At times a reduction in system cost can be made by serving loads from the loop at points between transformers. When this is done, the loop cables should preferably be paralleled and the loads taken off through load-bus units. Each load-bus unit should be similar to those used when network transformers connect to the loop; it consists of a load bus, two limiter buses with load-break switches and limiters, and load circuit breakers. Connecting loads to the secondary loop in this manner reduces the average length of the secondary load circuits.

By tapping all loads from the secondary loop at the nearest point, the amount of secondary load circuit conductors can be reduced to a minimum. This cannot be done practically when using a cable secondary loop if limiters are installed in the loop conductors at each load takeoff point. Such a form of network system is practical, however, if two or more parallel runs of plug-in bus duct are used for the secondary loop.

In this system, the transformers connect to a bus through network protectors, as in Fig. 9.328, except that there usually will be no load circuit breakers in the bus units. All loads usually are supplied through the load-break switches to the limiter buses and then through the limiters into the bus ducts that tie the adjacent bus units together.

This form of network system requires larger conductors in the secondary loop than those using the cable loop previously described. It also sacrifices something in service continuity when compared with network systems in which the loads are fed from load-bus units connected in a cable loop. This is true because a fault in a section of the bus-duct loop will cause an outage to the loads served from that section.

As with the simple network system, the primary-selective network may also take the form of a spot-network system. Each transformer in the primary-selective spot-network system is equipped with a primary selector switch and arranged for connection to either of two primary feeders, as shown in Fig. 9.329. This largely eliminates the necessity for spare transformer capacity, and the system is ordinarily designed without providing for such capacity.

Primary-feeder and transformer faults on this system are cleared without any interruption of service to the loads as in the simple spot-network system. When a primary feeder is deenergized because of a feeder fault, the transformers associated with the good feeder will carry as high as 160 to 200 percent of their rated kVA until the transformers normally associated with the defective feeder are switched to the good feeder by operation of their primary selector switches. After this switching operation has been completed, all the overloads on the system are relieved.

When a spot-network system of this design is used, a transformer failure requires a reduction in the load served from its load bus to prevent serious overloading of the remaining transformer connected to that bus. A transformer failure will occur so infrequently, however, that the cost of providing spare transformer capacity throughout the system cannot be justified to eliminate the remote probability of having to reduce load on one bus. If the possibility of having to reduce load is objectionable, it will cost less to use the simple spot-network system than to provide the necessary spare capacity in the primary-selective spot-network system. The primary-selective spot-network system, when designed without spare transformer capacity, will cost less than the simple spot-network system if two primary feeders and two transformers per load bus are used. If three or more primary feeders

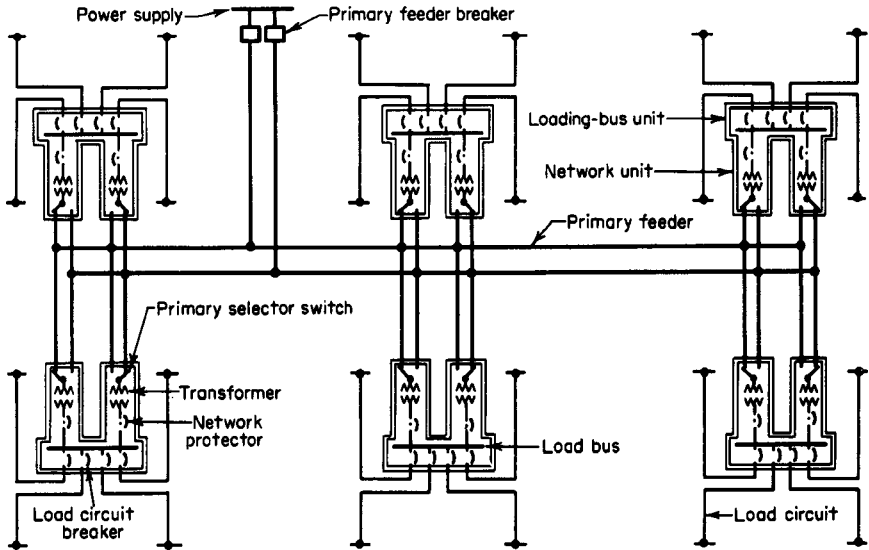


FIGURE 9.329 Primary-selective spot-network system.

are required, the simple spot-network system will be lower in cost than the primary-selective spot-network system.

520. Influence of buildings on design. Building distribution systems are too often selected on the basis of using the system having the lowest initial investment. This practice usually results in the installation of a system which is neither the best nor the most economical for the building when all the factors are considered and properly evaluated.

All the major characteristics of the different types of distribution systems should be evaluated in the light of the building load requirements, in order to select the best system. The six major characteristics are initial investment, flexibility, service continuity, voltage regulation, efficiency, and cost of operation and maintenance.

The best system is that which gives the greatest value per dollar of investment and provides adequate electric service. This is rarely the system with the lowest *initial investment*.

Flexibility is the system's ability to be adapted to changing load conditions with the minimum of service interruptions and minimum cost of necessary changes.

Service continuity is measured in terms of the amount of load dropped with faults at different locations in the system, taking into account the likelihood of faults in the various locations.

Under *voltage regulation*, the change in voltage with load variations, the uniformity of this change at the various load points throughout the system, and the change in voltage resulting from suddenly applied loads should be considered.

The overall *efficiency* of the system from the power supply point or points to the utilization devices should be taken into account for both light-load and heavy-load conditions of operation.

Operating and maintenance costs are influenced by the nature and amount of equipment in the system and the ability to inspect, test, and maintain the equipment with minimum interruption of service.

The general arrangement and choice of the type of system depend upon the type and purpose of the building. In this discussion buildings shall be considered as belonging to one of these five classifications:

1. Large vertical buildings less than about 12 stories high
2. Tall (high-rise) commercial buildings
3. Large horizontal buildings such as shopping centers and large one-floor offices
4. Groups of small buildings such as hospitals and educational institutions
5. Industrial plants

The quality of service required by the loads varies somewhat within each of these classifications, depending upon the purposes of the buildings and the activities carried on within them.

521. Large vertical buildings. Large vertical buildings, such as office buildings, stores, apartments, hospitals, and hotels, require a high quality of electric service because the operation of essential equipment in the buildings depends directly on a reliable supply of electric power. Network systems are recognized as the best means of assuring satisfactory electric service in large buildings. However, in some cases, such as warehouses, interruptions of service for inspection and maintenance or as a result of faults may not interfere with the function of the building or cause hazards. In these cases, simple radial, primary-selective radial, or secondary-selective radial systems are used, depending upon the extent and duration of interruptions that can be tolerated and the importance of small savings in initial cost.

The network system is generally accepted as the most desirable form of distribution system for large buildings because it is the most economical method of providing reliability and good voltage characteristics. It is essential to have these characteristics in the distribution system for most large buildings because the activities in the buildings usually depend on a continuous supply of electric power with good voltage characteristics. Reliability is important because a failure of power that may stop elevators, pumps, and ventilating systems not only halts the activities in the buildings but may endanger the occupants. Obviously, good voltage regulation is essential to obtain the most effective output from lamps and other utilization devices. Good voltage regulation becomes particularly important when the same system supplies both the lighting and the power loads.

The relatively high load demands in large buildings encourage the use of large undesirable concentrations of transformer capacity in secondary substations with the result that very high fault currents are available in many cases. This requires expensive switchgear equipment to give adequate protection to the system against all possible faults in low-voltage circuits within the system. The power supply in buildings should be carefully designed to limit the fault currents to reasonable values so that less expensive equipment can be used. Several small substations instead of a few big substations can be used to reduce interrupting duties.

The interrupting duty on the low-voltage breakers in the substations directly affects the cost of the distribution system. High-interrupting-capacity breakers are more expensive than low-interrupting-capacity breakers. In general, the cost of the distribution system will materially increase if the interrupting duty exceeds 50,000 A. Therefore, it is desirable to plan the distribution system so that the interrupting duty does not exceed this value. In buildings in which the total load is not more than a few hundred kVA, it is not difficult to keep the interrupting duty below this value, and frequently it is possible to limit the interrupting duty below this value, and frequently it is possible to limit the interrupting duty to 25,000 A. The difference in cost between a substation using 25,000-A breakers and one using 50,000-A breakers is a relatively small part of the total cost of the substation.

Therefore, it is not economical to make extensive special arrangements to reduce the interrupting duty when it is between 25,000 and 50,000 A. On the other hand, when it is necessary to install switchgear having an interrupting capacity higher than 50,000 A, the switchgear may become a large part of the total cost, and considerable expenditures to reduce the interrupting duty to 50,000 A may be justified. Relatively small substations distributed throughout the building generally mean that the low-voltage feeders will be short and that the voltage regulation will be better. Furthermore, the small substations can be installed in smaller spaces. Frequently, it will be easier to find several small spaces for substations than to find or provide one large space in the building for one substation. Another advantage of using a number of small substations is that it is easier to find space to carry the low-voltage feeder conduits away from the substation.

The form of the network system most frequently used in large buildings is the simple spot-network system. However, a simple network system having several interconnected secondary substations is used in some cases.

When the distribution system in a building is continuously supervised by capable operators, the total transformer capacity sometimes can be reduced by using high-voltage selector switches instead of disconnecting switches on the network transformers. When four or more primary feeders are available, it is generally as economical to use disconnect switches and provide the necessary reserve transformer capacity as to use the more expensive selector switches. Selector switches should not be used whenever it is likely that they may not be operated promptly in an emergency.

The distributed type of simple network system is primarily applicable to very large buildings in which the low-voltage feeders can be materially shorter with this type of network than if a spot network were used. In such applications, the extra cost of the secondary ties may be more than offset by savings in low-voltage feeder circuits because the substations are located closer to the load centers. This form of network system may also provide better voltage conditions at the load centers than could be provided by a spot network and relatively long low-voltage feeder circuits.

The spot network is particularly applicable to medium-size buildings having only a few floors. In these cases, the savings in low-voltage feeders that could be obtained by using two or more small substations in a distributed form of network usually do not justify the expense of the secondary ties and their protective equipment. The spot network, of course, gives the same degree of reliability as does the distributed form of network. Obviously, two or more spot networks can be used in larger buildings with the same resulting savings in low-voltage feeder circuits. However, this means that there would be a greater number of smaller transformers and a correspondingly greater number of network protectors. The smaller units generally have a higher cost per kVA than the larger units, so that a number of small spot networks may cost more than a distributed network in an extensive system.

522. Tall buildings. Tall buildings are generally built in the densely loaded areas of cities. Almost without exception, the loads in these areas are served by secondary network systems. This makes it practical and economical to use some form of network system in a tall building. The nature of such a building practically requires a network system. Access to the major part of the building is accomplished almost entirely by elevators. Hence, it is imperative that power be continuously available for the operation of the elevators to avoid the hazard of panic or serious inconvenience resulting from a power outage. Furthermore, fire protection, water supply, heating, and ventilating depend for their operation on the availability, at all times, of an electric power supply. These considerations practically limit the choice of a distribution system to some form of secondary network. Usually three or more primary feeders are available within the area to supply the building, so that either a simple spot-network system or a simple network system is feasible. Various arrangements

of these two systems are used, depending on the height of the building, the location of the major loads within the building, and the total load demand.

In most modern tall commercial buildings there is likely to be a large air-conditioning load. When this load and the other power loads such as elevators, ventilating and heating equipment, fire pumps, water pumps, and related auxiliaries are taken into account, the power demand is likely to be more than the lighting load and may be as much as 3 or 4 times the lighting load. This proportion of power and lighting loads should be considered in the choice of utilization voltage. The power load will usually be the principal factor in the choice of locations for the distribution equipment.

Generally speaking, the practical maximum height that 208Y/120-V circuits can be carried in a tall building is about 12 stories. This limitation depends to a considerable extent on the relative cost of space for the distribution equipment in various parts of the building. The limitation of about 12 stories is based on including in the cost of the distribution system a charge for all the space used above the basements equal to the value of the same amount of commercially usable space. On this basis there is a thumb rule that major distribution centers will occur about every 25 floors in a tall office building. This is a very general rule, and the locations of the elevator equipment and major air-conditioning loads and other power loads in the building may make other locations of the distribution equipment more economical. The locations of the secondary substations involved in the distribution system in the building should be very carefully considered. Some specific comparisons have indicated that a much closer spacing of the secondary substations than 25 stories is economical. A closer spacing of the units improves the voltage conditions within the building and reduces losses in the system.

The simplest form of network system for a tall building is the simple spot-network system. In this system, a spot-network substation comprising the necessary number of network transformers and the associated low-voltage switchgear equipment is located at or near the major loads in the building. Therefore, the spot-network substation in the basement is generally the biggest of the various secondary substations. The locations of the power loads in the basement area or a logical segregation of the load may make two or more spot-network substations feasible. In this form of the network system, several primary-feeder circuits are carried up through the building to the various spot-network substation locations where the corresponding network transformers are connected to the primary feeders.

In many locations where tall buildings are built, it is practical to operate the building distribution system as part of the low-voltage secondary network in the area around the building. This involves the use of a simple network system within the building with secondary-tie circuits between the various network substations and the secondary-main system in the area around the building. The ties between the secondary mains of the utility network system and the building distribution system permit interchange of power between the two systems. This augments the reliability of the network system within the building and to some extent may improve the voltage conditions within the building. Since the same primary feeders that supply the building may also supply network units in the area around the building, there is some advantage in interconnecting the two systems to make sure that all the network equipment functions in the same manner. The desirability of interconnecting the building network system with a surrounding local network system may offset some of the advantages of a 460-V system within the building. The network system in the area around the building will be a 208Y/120-V system in most cases.

The simple network system involves some variations of the secondary ties between the network substations within the building. In their simplest form, these ties are purely tie circuits and do not supply loads at any time except by interchange of power from one substation to another. When this form of secondary tie is used, it generally will have only about two-thirds as much carrying capacity as the rated current of the largest of the associated network transformers. This provides enough capacity to make up for the outage of one

transformer at one of the network substations. Generally, the carrying capacity of the tie circuits is practically independent of the number of network units at any load bus. The secondary ties between the building system and the surrounding network system usually have about the same capacity as the ties between network substations within the building.

The capacity of the secondary ties can be increased to provide for tapping loads directly from the secondary ties between network substations. Basically, such a tie can be treated in two general ways. One way is to form load buses at every point along the tie where loads are tapped, as indicated in Fig. 9.330. If this is done, the capacity of the tie circuit will depend on the amount of load tapped off the circuit and the size of the network units associated with the tie. The capacity should be enough to carry all the loads tapped from the circuit, from one end of the circuit, as well as a reasonable amount of

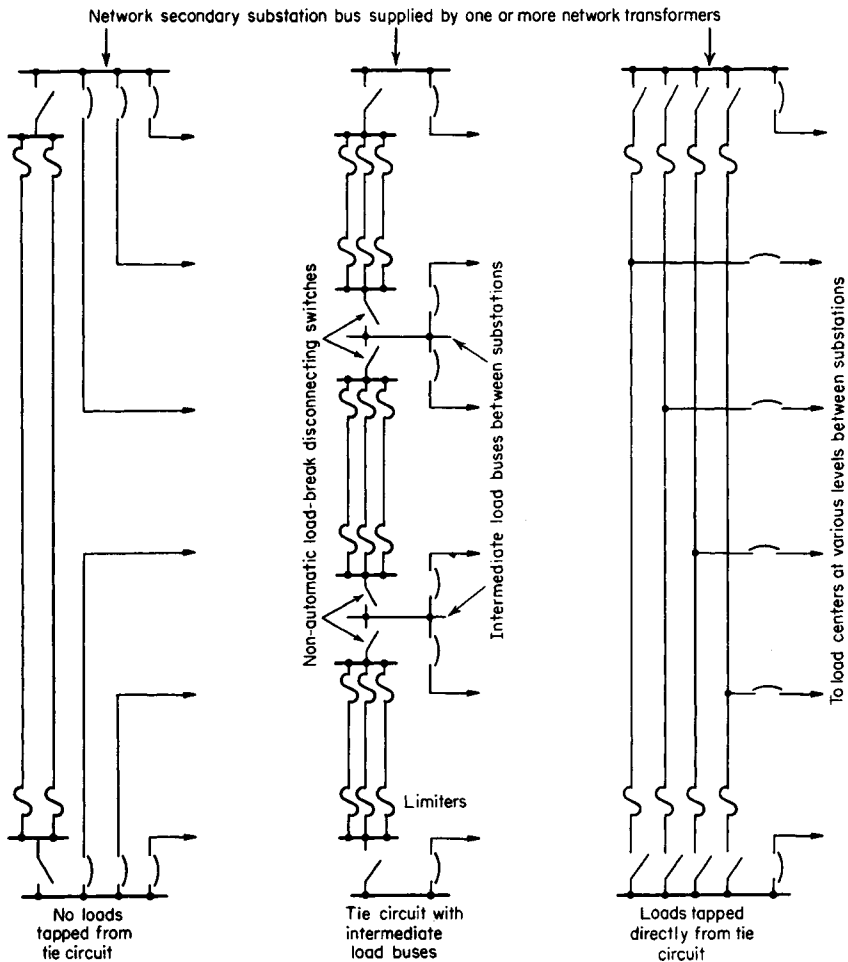


FIGURE 9.330 Three arrangements of secondary-tie circuits between network substations in tall commercial buildings.

power interchanged between the network substations. In a simple case in which single-transformer network substations are interconnected by a tie circuit of this type, the total capacity of the circuit should be about equal to the rated current of one of the associated network transformers.

If load buses are not established in the tie circuit and the loads are tapped from one or another of the parallel branches of the tie circuit, the total carrying capacity of the tie circuit should be correspondingly increased. The reason for this is that it is unlikely that the load can be equally divided among the parallel branches of the tie circuit. Even if an equal division of connected load were possible, the diversity among the loads would mean that the load on one branch would not always be the same as that on another. Therefore, in this type of circuit the total carrying capacity should be at least $1\frac{1}{3}$ times the rated current of one of the associated transformers when there is only one transformer in each of the interconnected network substations.

The forms of the secondary-tie circuit illustrated in Fig. 9.330 consider only the use of paralleled three-phase circuits to form the tie circuit. This is because practical and convenient sizes of conductors can be used and overcurrent protection for the circuits can be economically provided. It is possible, of course, to use a single conductor per phase, such as a heavy bus, to form the tie circuit. To get the necessary carrying capacity in this way is likely to be expensive, and providing overcurrent protection for such a circuit is expensive and requires heavy protective equipment.

Another form of tie circuit that has been used is a secondary bus running the full height of the building. This form of tie circuit in effect is an extended spot network with the spot-network bus extending from the basement of the building to the uppermost network unit. In this arrangement the load circuits at the various floors are connected directly to the riser bus through protective devices or through a switchboard connected to the riser bus through a suitable protective device. The major disadvantage of this arrangement is the length of the spot-network bus. It is necessary to install this bus in such a way that there is practically no possibility of a fault on it. This can be accomplished by segregating the phases by barriers between the buses. However, such an installation is expensive. The capacity of such a bus should be somewhat more than the total load connected to the bus between adjacent network transformers. Some excess above this total load value would be required for the interchange of power between network units when one of the primary-feeder circuits is out of service.

The distribution of power within a tall building necessarily involves the use of transformers within the building. It is very important to choose transformers that minimize the possibility of fire or other damage to the building or injury to people in the building resulting from a transformer failure. For this reason, ventilated or sealed dry-type transformers are used in buildings. These types of transformers eliminate the hazard of fire and explosion damage resulting from a transformer failure.

523. Large horizontal buildings. Under the classification of large horizontal buildings, probably the most important with respect to numbers, size, and magnitude of load are shopping centers.

Shopping centers may be classified into three types with regard to size. They are the neighborhood shopping center that is designed to serve 5000 to 20,000 people, the district shopping center that serves 20,000 to 100,000 people, and the regional shopping center that serves a market of over 100,000 people.

Shopping centers will usually take one of five general physical arrangements. The simplest type, usually associated with the neighborhood shopping center, is the strip layout. A common variation of this simple layout is the L-shape layout. The mall, the

court, and the ring are three layouts that are used mostly in the district shopping center. The fifth type, the group or cluster of buildings, is generally used for large regional shopping centers.

The physical layout of a shopping center will influence the design of the electric distribution system. For instance, a system utilizing a loop-secondary circuit can be used to advantage in the mall-, ring-, or group-type shopping centers but may not be economical for the strip or court arrangement. The large loads in a shopping center will usually dictate where the power-center transformers must be located. If power centers must be located at these large loads, the loads in between them may be served over radial circuits from the power centers. However, if the distance between the power centers becomes great, using a system that permits the tapping of services off a secondary circuit running between power centers would be advantageous.

The selection of the utilization voltage or voltages to be used in shopping centers should not be limited to the choice of 120/240 V single-phase, 480 V three-phase, or 208Y/120 V three-phase. The magnitude, locations, and characteristics of the loads in shopping centers make it appear that the use of a three-phase, four-wire, grounded-Y, 480Y/277-V system would prove to be more economical in many cases.

Table 524 compares the distribution systems discussed previously for several magnitudes of load in each of the five types of shopping centers. The comparisons are made on a column basis, and it is not intended that the ratings in different columns should be compared.

The ratings take into account initial investment, service continuity, flexibility to handle new or changing loads, operation and maintenance costs, voltage regulation, and efficiency. Each of these factors has been weighted in proportion to its relative importance for each load magnitude and type of shopping center. The A ratings indicate that analysis of the system has shown it to rate at the top of the 12 systems compared in each column. The other quality ratings are given in terms of percentage of value of the A system:

Rating	Percent
B	81–90
C	71–80
D	61–70
E	51–60
F	41–50

524. Comparison of Distribution Systems for Several Types of Shopping Centers

(Type of shopping center, loads in kVA)

	Strip or L			Mall			Court			Ring			Group or cluster		
	100– 1,000	1,000– 2,500	2,500 and up	100– 1,000	1,000– 2,500	2,500 and up	100– 1,000	1,000– 2,500	2,500 and up	100– 1,000	1,000– 2,500	2,500 and up	1,000– 2,500	2,500– 5,000	5,000 and up
Conv. simple-radial	D	D	E	E	E	F+	D	D	E	E	E	F+	E	F+	F
Modern simple-radial	A	A	B	A–	B–	C	A	A	B	A–	B–	C	B–	C	D
Modified modern simple-radial	C	C	C	C	D	D–	C	C	C	C	D	D–	D	D–	E
Loop-primary radial	A	A	B+	B+	B	C	A	A	B+	B+	B	C	B	C	D
Banked-secondary radial	C	C	B	B	B–	C	C	C	B	B	B–	C	B–	C	C
Primary-selective radial	B	B	B	B	C	D+	B	B	B	B	C	D+	C	D+	D
Secondary-selective radial	C–	C	C	D	D	D–	C–	C	C	D	D	D–	D	D–	E
Modified secondary-selective radial	C–	C	C	D	D	D–	C–	C	C	D	D	D–	D	D–	E
Simple network	D	D	A	B+	A–	A	D	D	A	B+	A–	A	A–	A	A
Simple spot-network	C	B	A–	B	B	B	C	B	A–	B	B	B	B	B	B
Primary-selective network	D	C–	A	A	A	A	D	C–	A	A	A	A	A	A	A
Primary-selective spot-network	C	B	B	B	B	B	C	B	B	B	B	B	B	B	B

525. Methods of supplying power to individual motor loads. The layout of the last stage of a motor distribution system will depend upon the type of building, construction characteristics of the building, motor size, types of motors to be served, and the flexibility desired in order to take care of changing location of loads. In one type of layout the branch circuit to each motor is run from a power panel. In another type the branch circuits to individual motors are tapped from a feeder. The features of the different types of motor distribution layouts are shown in Fig. 9.331.

The following discussion of the application of these methods is reproduced from *Electrical Systems Design*, by Joseph F. McPartland.

Miscellaneous motor loads in most commercial and institutional buildings and in many industrial buildings are usually circuited from power panels to which feeders deliver power. This type of distribution is a standard method of motor circuiting, generally limited to handling a number of motors of small integral-horsepower or fractional-horsepower sizes, located in a relatively small area such as a fan room or a pump room. The feeder to a power panel may be a riser in a multistory commercial or institutional building, run from a basement switchboard. In a one-level industrial area, the feeder to a power panel may be run from a main or load-center switchboard or from a load-center substation in a high-voltage distribution system. In commercial and industrial buildings, motor feeders may be run from a main switchboard or a load-center substation to a motor-control center serving a large group of motors in a machine room or in any compact area where the motors are relatively

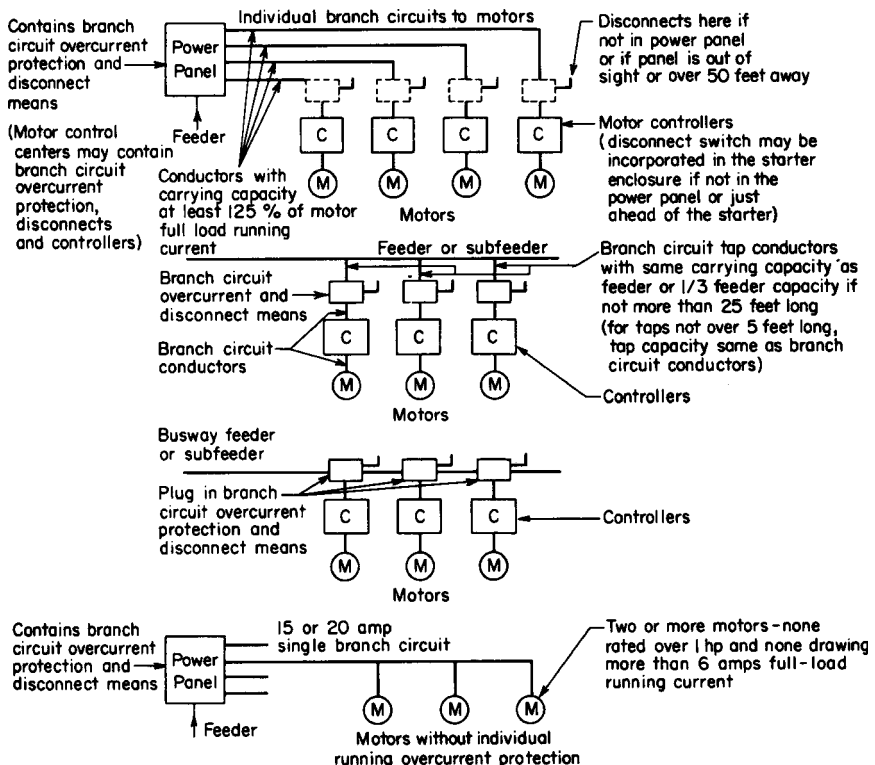


FIGURE 9.331 Methods of power distribution to individual motors. [*Electrical Systems Design*]

close together and close to the control-center assembly. The motor-control center contains all the control, protection, and disconnecting means for the motor circuits supplied.

In industrial buildings, in which a large number of motors are used over a large area, distribution of power to the individual motor loads generally follows the method of tapping motor branch circuits from the feeder. Such circuits may be tapped in several ways, with various combinations of branch-circuit overcurrent protection and motor control and disconnect means. The feeder in such an arrangement may originate from a main switchboard or from a load-center substation. In multistory buildings, such as office buildings or institutions, taps to motor branch circuits on a particular floor may be taken from a subfeeder originating in a load-center switchboard which is fed by a riser from the main switchboard in the basement. The feeder-tap method of supplying motor branch circuits is, of course, the basis for plug-in busway distribution to spread-out motor loads. In the system, the plug-in busway may be a feeder or a subfeeder, depending upon its origin. From a main switchboard, it would be a feeder; from a load-center switchboard, it would be a subfeeder. However, from a load-center substation, the plug-in busway would be a feeder—a secondary feeder derived from the transformation down from the primary feeder to the substation.

526. Adequate wiring for lighting and convenience outlets in commercial, public, and industrial structures. It is very important in designing the interior wiring for a building to make adequate provision not only for present demands but also for probable future demands. The levels of illumination demanded by industry and commerce are being constantly increased. In order that a building may keep pace with this advancement without excessive expense in the reconstruction of its wiring, the wiring must be more than adequate to provide merely for present needs. Double carrying capacity can be provided in the original wiring installation for less than 25 percent additional cost. To provide a guide for adequate wiring, the following recommendations from the *Handbook of Interior Wiring Design* are given:

1. OUTLET LOCATION: COMMERCIAL AND PUBLIC OCCUPANCIES

- a. *Ceiling outlets for general illumination.* Whenever possible, ceiling outlets should be uniformly spaced and located so that the spacing will be approximately the same in both directions. In *offices* and *schoolrooms*, the spacing between adjacent outlets shall not exceed the distance from floor to ceiling. In other interiors, the space may be extended to $1\frac{1}{4}$ times the ceiling height. The space between an outlet and a wall should not exceed one-half of the average distance between outlets. In *halls* and *corridors*, spacing should not exceed 20 ft (6.1 m).

In locating outlets on any floor plan, construction features should be considered, especially ceiling beams. These are not always shown on the floor plans, yet they may seriously affect a lighting layout. This is particularly true for indirect lighting.

- b. *Stores: convenience outlets.* There shall be installed at least one convenience outlet for each 400 ft² (37.2 m²) of floor area or major part thereof; these outlets need to be uniformly distributed over the entire area. Preference shall be given to the placing of these outlets in supporting columns and sidewalls, but no part of the floor area shall be more than 15 ft (4.6 m) from an outlet.
- c. *Stores: outlets for window illumination.* Provision for show-window illumination shall be made by (1) a junction box on a wall or column at a suitable height above the transom bar or possible false ceiling to which all circuits of show-window reflectors or spotlights can be connected or (2) individual outlets spaced as recommended below. The NEC now requires receptacle outlets for every 3.7 linear m (12 linear ft) or major fraction of show window, located not more than 450 mm (18 in.) below the top.

For medium-base lampholders, outlets for show-window reflectors should be located 12 to 18 in. (304.8 to 457.2 mm) apart. For mogul-base lampholders, outlets

for show-window reflectors should be located 15 to 24 in. (381 to 609.6 mm) apart; for fluorescent lamps, as required by the lighting layout. The specific layout is to be governed by the standard loads of Sec. 527. Whenever more than one circuit per window is necessary, adjacent outlets should be on different circuits.

For spot or floodlights, at least two outlets per window shall be symmetrically placed, with an additional outlet for every 8 ft (2.4 m) or major fraction in excess of 16 ft (4.9 m).

- d. *Stores: convenience outlets in show windows.* In or near the floor of each window, there shall be installed at least one convenience outlet for each 50 ft² (4.6 m²) of platform or floor area used for window display, but in no case shall there be fewer than two convenience outlets per window.
- e. *Stores: outlets for case lighting.* Outlets shall be provided in the floor or wall for termination of the circuits for showcase and wall-case lighting. Such outlets shall be suitably located for connection to the lighting equipment and shall be governed by the standard loads as listed in Table 527.
- f. *Offices and schools: convenience outlets.* In each separate office room with 400 ft² (37.2 m²) or less of floor area, there shall be installed at least one convenience outlet for each 20 ft (6.1 m) of wall space. In each separate office with more than 400 ft² of floor area, there shall be installed at least four convenience outlets for the first 400 ft² of floor area and at least two outlets for each additional 400 ft² or major fraction thereof. Outlets should be placed at suitable locations to serve all parts of the office space. Certain offices, for example, professional and display offices, require many more outlets than are specified above, and the wiring needs must be individually studied if such probable occupancy is known.

For typical schoolrooms at least one convenience outlet shall be placed along the front wall and at least one along the rear wall.

- g. *Offices and stores: fans.* Unless made unnecessary by provision for complete air conditioning, outlets for fans shall be installed on the basis of at least two for each 400 ft² (37.2 m²) or major portion thereof. Such outlets shall be placed approximately 7 ft (2.1 m) above the floor and shall be of a type from which the fan may be mechanically suspended.
- h. *Stores: signs.* If no other equivalent provision is made for sign lighting, a rigid metal conduit or electrical metallic tubing, not smaller than 1 in., shall be run to the front face of the building for each intended or probable individual store occupancy. Such a raceway shall terminate outside the building at a point suitable for connection to the sign and shall terminate inside the building at a cabinet. Feeder capacity to this cabinet and service capacity shall be based upon a sign load of not less than 50 W/ft of store frontage, only the frontage on the principal street being considered if the store faces more than one street. Space provision shall be allowed for the connection and placement of a time switch to the sign circuit.

2. OUTLET LOCATION: INDUSTRIAL OCCUPANCIES

- a. *Ceiling outlets for general illumination.* The many special considerations of industrial lighting make it necessary to develop the outlet locations around the lighting layout. Local lighting units frequently supplement general illumination; special directional overhead sources are often necessary. In planning outlet locations, these must be considered as part of the complete installation. In halls and corridors lighted from a single row of outlets, the spacing between outlets shall not exceed 20 ft (6.1 m).
- b. *Convenience outlets.* There should be at least one convenience outlet in each bay in both manufacturing and storage spaces.

3. STANDARD LOADS FOR GENERAL ILLUMINATION

The number of branch circuits and the capacities of the feeders and service shall be based upon the loads specified in Tables 527 and 528 as a minimum. If a known load that will exceed the loading here specified is to be supplied, the circuits, feeders, and service shall be based upon such known load.

The tabulated values represent the present acceptable standards of Illuminating Engineering Society foot-candle values. From these, the watts per square foot for each occupancy were determined by considering average conditions found in such occupancy, together with the accepted methods and equipment used in providing such illumination levels. In certain cases the standard loads include allowance for convenience outlets as well as for general illumination. The calculated wattage standards were based on the use of fluorescent and mercury-vapor equipment for large areas and incandescent equipment for local and supplementary lighting.

4. **BRANCH CIRCUITS*** The minimum number of branch circuits shall be based on the present connected load as follows:
- a. For two-wire 15-A circuits, the load per circuit shall not exceed 1000 W.
 - b. For multiwire 15-A circuits, the load shall not exceed 1000 W between each outside wire and the neutral.
 - c. For circuits designed for heavy-duty lampholders, the load per circuit shall not exceed 1500 W for No. 10 wire, 2500 W for No. 8, and 3000 W for No. 6.

The following considerations of wire size and circuit runs shall apply:

- d. No wire smaller than No. 12 shall be used for any circuit.
- e. When the run from a panelboard to the first outlet of a lighting branch circuit exceeds 50 ft (15.2 m), the size of wire used shall be at least one size larger than that determined by any of the above considerations. The calculated size may be used between outlets.
- f. When the run from a panelboard to the first outlet of a convenience-outlet circuit exceeds 100 ft (30.5 m), No. 10 wire or larger shall be used for such run.
- g. No runs longer than 100 ft (30.5 m) between the panelboard and the first outlet of a lighting branch circuit shall be made unless the intended load is so small that the voltage drop can be restricted to 2 percent between the panelboard and any outlet on that circuit. To avoid this condition, panelboards should be relocated or additional panelboards installed.

The following considerations in regard to combinations of outlets shall apply:

- h. No convenience outlet shall be supplied by the same branch circuit that supplies ceiling or show-window lighting outlets.
- i. Outlets for show-window spotlights shall be on separate circuits from general show-window outlets.
- j. The number of convenience outlets included on one circuit shall be based on the listing in the following table.

Outlets per Circuit	
Location	Maximum number
Barbershops, beauty parlors, etc.	2
Medical, dental, and similar offices	2
Store show windows (for spotlights)	3
Store show windows (at floor)	6
Display areas in retail stores	6
School classrooms	6
Manufacturing spaces	6
Office spaces	8
Storage spaces	10

*These standards are based upon 15-A protection of branch circuits. If local regulations limit the load on branch circuits to less than these requirements, the wattage and area limits herein specified must be proportionately reduced.

- 5. CIRCUIT CONTROL** Suitable provision shall be made for the control of all circuits except those supplying convenience outlets only, and control of the latter circuits is recommended. Circuits may be controlled individually, in groups, or by a combination of both methods.

In a retail store, individual control at the panelboards by means of circuit switches or circuit breakers is usually preferable. In most other occupancies, control should be provided by means of local switches or circuit breakers. Frequently it is necessary to provide two or more switches for the local control of outlets supplied by a single branch circuit.

Provision shall be made for control of all circuits supplying a single sign by means of an external manually operable switch or circuit breaker, and in each case a suitable time switch shall also be provided to effect the same control.

In a retail store, each circuit supplying outlets in one or more show windows shall be individually controlled, and provision shall be made for the installation of a time switch for group control of all such circuits.

Group control of circuits for general illumination or for special decorative effects, by means of remote-control switches, is desirable in certain large spaces such as large offices, large reading rooms, museums, art galleries, and ballrooms.

- 6. PANELBOARDS** The number and location of panelboards shall be based on the number of branch circuits and the distance or runs as specified in Par. 4 of these adequacy standards.

On each panelboard one spare circuit shall be provided for each five circuits utilized in the initial installation. When flush-type cabinets are used, provision shall be made for bringing a corresponding number of circuit conductors to the ceiling of the story served, the ceiling of the story immediately below, or both points. Such provision may consist of circuit conductors or of empty raceways terminating in boxes suitably located for future extensions.

Provision shall be made for control of show-window lighting by such grouping of circuits to a panelboard as to enable a time switch to be suitably installed.

7. FEEDERS

- a. Carrying capacity.* The carrying capacity of each feeder or subfeeder shall be based on the number of separate circuits which it supplies, computed as follows:

- (1) *Overhead lighting circuits.* These are assumed as having 1000 W for each 15-A circuit and 1500 W for each 20-A circuit.
- (2) *Convenience-outlet circuits.* The assumed load is 1000 W per circuit.
- (3) *Spare panelboard circuits.* The assumed load is 500 W.
- (4) *Nonitemized and heavy-duty additional circuits.* The capacity is based on the specific load for which they are designed.

To the total of these four, such demand factors as permitted by the NEC may be applied. Refer to Div. 3 for additional information.

- b. Provision for the future.* In all determinations of feeder size, consideration should be given to increasing the capacity of the initial system by 50 percent to provide for future growth at a minimum of unwarranted expense. If an ultimate feeder size does not exceed No. 4 wire, the excess capacity should be installed immediately. In other cases, one of the following methods should be made a part of the original layout:

- (1) The installation of oversize raceways, so that the conductors installed can be withdrawn at any time and replaced by conductors of a suitable larger size
- (2) The installation or arrangement of the installed equipment so that additional feeders can be installed later at minimum expense to furnish the ultimate capacity
- (3) The installation of feeders of excess size

c. *Voltage drop.* Feeders and subfeeders shall be of such size that the total voltage drop from any panelboard to the point where connection is made to the lines of the utility supplying services shall not exceed 1 percent (see Div. 3 for method of calculation). To compute such a drop, the ultimate demand as calculated above shall be used whenever the wire size based on such demand is installed immediately. If provision for the future is made in some other way (oversize raceways, etc.), the voltage drop shall be computed on the basis of the carrying capacity of the wire used.

8. FEEDER DISTRIBUTION CENTER A feeder distribution center in the form of a panelboard, switchboard, or group of enclosed switches or circuit breakers shall be provided for the control and protection of each feeder.

Except when oversize feeders are provided in the original installation as recommended in the preceding section, provision shall be made at the feeder distribution center for the connection and suitable protection of feeders of increased size or of supplemental feeders. This can be accomplished by providing additional protective devices as part of the original installation, or by so designing the original equipment that space, bus capacity, and facilities for making connections will be available.

9. SERVICE-ENTRANCE ADEQUACY STANDARDS (75°C RATED COPPER CONDUCTORS)

Initial load, A	Service switch, A	Conductor size, gage No. or cir mils	Initial load, A	Service switch, A	Conductor size, gage No. or cir mils
1-23	60	8	118-133	200	4/0
24-33	60	6	134-150	400	4/0
34-47	100	4			
48-60	100	2	151-167	400	250,000
61-67	100	1	168-183	400	300,000
			184-200	400	350,000
68-83	200	1/0	201-217	400	400,000
84-100	200	2/0	218-267	400	500,000
101-117	200	3/0			

10. SERVICE CONDUCTORS AND EQUIPMENT The minimum capacity of the service required for the initial load depends on the total number of feeders supplied by it, whose individual loads are determined as specified in Par. 7. When applicable, demand factors as permitted by the NEC may be used (see Sec. 44 of Div. 3). To determine the probable required ultimate capacity of the service conductors and equipment, 50 percent should be added to the calculated initial load.

When the calculated initial load does not exceed 267 A, service conductors and equipment having the capacity needed for the ultimate load should be included as part of the original installation. The recommended equipment for various initial loads is tabulated in Par. 9. When the initial load exceeds 267 A, a study should be made of each individual case to determine what provision should be made for a future increase in the load.

These values should be understood in terms of relative load densities and not absolute design criteria. Current building codes generally impose energy conservation standards that substantially reduce these numbers in absolute terms.

527. Standard Loads for Lighting in Commercial Buildings

Occupancy	VA/sq-ft	Occupancy	VA/sq-ft
Armories: drill sheds and exhibition halls. (This does not include lighting circuits for demonstration booths, special exhibit spaces, etc.)	5	Looker rooms	2
Art galleries:		Fencing, boxing, etc.	5
General	3	Handball, squash, etc.	5
On paintings—50 W per running foot of usable wall area		Halls and interior passageways—20 W per running foot	
Auditoriums	4	Hospitals:	
Automobile showrooms	6	Lobby, reception room	3
Banks:		Corridors—20 W per running foot	
Lobby	4	Wards, including allowance for convenience outlets for local illumination	3
Counters—50 W per running foot including service for signs and small motor applications, etc.		Private rooms, including allowance for convenience outlets for local illumination	5
Offices and cages	5	Operating room	5
Barber shop and beauty parlors. (This does not include circuits for special equipment.)	5	Operating tables or chairs:	
Billiards:		Major surgeries—3,000 W per area	
General	3	Minor surgeries—1,500 W per area	
Tables—450 W per table		This and the above figure include allowance for directional control.	
Bowling:		Special wiring for emergency systems must also be considered.	
Alley runway and seats	5	Laboratories	5
Pins—300 W per set of pins		Hotels:	
Churches:		Lobby, not including provision for conventions, exhibits	5
Auditoriums	2	Dining room	5
Sunday-school rooms	5	Kitchen	4
Pulpit or rostrum	5	Bedrooms, including allowance for convenience outlets	5
Club rooms:		Corridors—20 W per running foot	
Lounge	2	Writing room, including allowance for convenience outlets	3
Reading rooms	5	Library:	5
The above two uses are so often combined that the higher figure is advisable. It includes provision for convenience outlets.		Reading rooms. This includes allowance for convenience outlets.	
Courtrooms	5	Stack room—12 W per running foot of facing stacks	6
Dance halls (No allowance has been included for spectacular lighting, spots etc.)	2	Motion-picture houses and theaters:	
Drafting rooms	7	Auditoriums	2
Fire-engine houses	2	Foyer	3
Gymnasiums:		Lobby	
Main floor	5		
Shower rooms	2		

(Continued)

527. Standard Loads for Lighting in Commercial Buildings (Continued)

Occupancy	VA/sq-ft	Occupancy	VA/sq-ft
Museums:		Schools:	3
General		Auditoriums	
Special exhibits—supplementary lighting	2	If to be used as a study hall—5 W/sq-ft	
Office buildings:		Class and study rooms	3
Private offices, no close work	5	Drawing room	
Private offices, with close work		Laboratories	5
General offices, no close work	5	Manual training	7
General offices, with close work	7	Sewing room	5
File room, vault, etc.	5	Sight-saving classes	5
Reception room	7	Showcases—25 W per running foot	7
Post office:	3	Show windows:	7
Lobby	2	Large cities:*	
Sorting, mailing, etc.		Brightly lighted district—700 W per running foot of glass	
Sorting, file room etc.	3	Secondary business locations—500 W per running foot of glass	
Professional offices:	3	Neighborhood stores—250 W per running foot of glass	
Waiting rooms	3	Medium cities:*	
Consultation rooms		Brightly lighted district—500 W per running foot of glass	
Operation offices	3	Neighborhood stores—250 W per running foot of glass frontage	
Dental chains—600 W per chair	5	Small cities and towns—300 W per running foot of glass frontage*	
Railway:	7	Lighting to reduce daylight window reflections—1,000 W per running foot of glass	
Depot-waiting room		Stores, large department, and specialty:	
Ticket offices—general		Main floor	6
On counters 50 W per running foot	3	Other floors	6
Rest room, smoking room		Stores in outlying districts	5
Baggage, checking office	5	Wall oases—25 W per running foot	
Baggage storage	3		
Concourse	3		
Train platform	2		
Restaurants, lunchrooms, and cafeterias:	2		
Dining areas	2		
Food displays—50 W per running foot of counter (including service aide)			

NOTE Figures based on use of fluorescent equipment for large-area application, incandescent for local or supplementary lighting.

*Wattages shown are for white light with incandescent filament lamps. Where color is to be used, wattages should be doubled.

528. Standard Loads for General Lighting in Industrial Occupancies

(Refer to the note in Table 527, which also applies to these values.)

Occupancy	VA/sq-ft	Occupancy	VA/sq-ft
Aisles, stairways, passageways 10 W per running foot		Foundries:	
Assembly:		Charging floor, tumbling, cleaning, pouring, shaking out	2.0
Rough	3.0	Rough molding and core making	2.0
Medium	4.5	Fine molding and core making	4.0
Fine	*4.5	Garages:	
Extra fine	*4.5	Storage	2.0
Automobile manufacturing:		Repair and washing	*3.0
Assembly line	*4.5	Glassworks:	
Frame assembly	3.0	Mixing and furnace rooms, pressing and Lehr glass—blowing machines	3.0
Body assembly	4.5	Grinding, cutting glass to size, silvering	4.5
Body finishing and inspecting	*4.5	Fine grinding, polishing, beveling, etching, inspecting, etc.	*4.5
Bakeries	4.0	Glove manufacturing:	
Book binding:		Light goods:	
Folding, assembling, pasting	3.0	Cutting, pressing, knitting, sorting	4.5
Cutting, punching, stitching, embossing	4.0	Stitching, trimming, inspecting	4.5
Breweries:		Dark goods:	
Brewhouse	3.0	Cutting, pressing, etc.	*4.5
Boiling, keg washing, etc.	3.0	Stitching, trimming, etc.	*4.5
Bottling	4.0	Hangars—airplane:	
Candy making	4.0	Storage—live	2.0
Canning and preserving	4.0	Repair department	*3.0
Chemical works:		Hat manufacturing:	
Hand furnaces, stationary driers, and crystallizers	2.0	Dyeing, stiffening, braiding, cleaning, and refining:	
Mechanical driers and crystallizers, filtrations, evaporators, bleaching	2.0	Light	2.0
Tanks for cooking, extractors, percolators, nitrators, electrolytic cells	3.0	Dark	4.5
Clay products and cements:		Forming, sizing, pouncing, flanging, finishing, and ironing:	
Grinding, filter presses, kiln rooms	2.0	Light	3.0
Moldings, pressing, cleaning, trimming	2.0	Dark	6.0
Enameling	3.0	Sewing:	
Glazing	4.0	Light	4.5
Cloth products:		Dark	*4.5
Cutting, inspecting, sewing:		Ice making, engine, and compressor room	2.0
Light goods	4.5	Inspection:	
Dark goods	*4.5	Rough	3.0
Pressing, cloth treating (oil cloth, etc.):		Medium	4.5
Light goods	3.0	Fine	*4.5
Dark goods	6.0	Extra fine	*4.5
Coal breaking, washing, screening	2.0	Leather manufacturing:	
Dairy products	4.0	Vats	2.0
Engraving	*4.5	Cleaning, tanning, and stretching	2.0
Forge shops, welding	2.0	Cutting, fleshing, and stuffing	3.0
		Finishing and scarfing	4.5

(Continued)

528. Standard Loads for General Lighting in Industrial Occupancies (Continued)

Occupancy	VA/sq-ft	Occupancy	VA/sq-ft
Leatherworking:		Plating	2.0
Pressing, winding, and glazing:		Polishing and burnishing	3.0
Light	2.0	Power plants, engine rooms, boilers:	
Dark	4.5	Boilers, coal and ash handling,	
Grading, matching, cutting, scarfing,		storage-battery rooms	2.0
sewing:		Auxiliary equipment, oil switches,	
Light	4.5	and transformers	2.0
Dark	*4.5	Switchboard, engines, generators,	
Locker rooms	2.0	blowers, compressors	3.0
Machine shops:		Printing industries:	
Rough bench- and machine work	3.0	Matrixing and casting	2.0
Medium bench- and machine work,		Miscellaneous machines	3.0
ordinary automatic machines,		Presses and electrotyping	4.5
rough grinding, medium buffing		Lithographing	*4.5
and polishing	4.5	Linotype, monotype, typesetting,	
Fine bench- and machine work, fine		imposing stone, engraving	*4.5
automatic machines, medium		Proofreading	*4.5
grinding, fine buffing and polishing	*4.5	Receiving and shipping	2.0
Extra-fine bench- and machine work,		Rubber manufacturing and products:	
grinding, fine work	*4.5	Calendars, compounding mills,	
Meat packing:		fabric preparation, stock cutting,	
Slaughtering	2.0	tubing machines, solid tire	
Cleaning, cutting, cooking, grinding,		operations, mechanical goods,	
canning, packing	4.5	building, vulcanizing	3.0
Milling—grain foods:		Bead building, pneumatic-tire	
Cleaning, grinding, and rolling	2.0	building and finishing, inner-tube	
Baking or roasting	4.5	operation, mechanical-goods	
Flour grading	4.5	trimming, treading	4.5
Offices:		Sheet-metal works:	
Private and general:		Miscellaneous machines, ordinary	
No close work	5.0	bench work	4.5
Close work	7.0	Punches, presses, shears, stamps,	
Drafting rooms	7.0	welders, spinning, medium	
Packing and boxing	3.0	bench-work	4.5
Paint manufacturing	3.0	Tin-plate inspection	*4.5
Paint shops:		Hand turning, miscellaneous	
Dipping, spraying, firing, rubbing,		bench- and machine work	2.0
ordinary hand painting, and finishing	3.0	Inspecting and sorting raw material,	
Fine hand painting and finishing	*3.0	cutting, and stitching:	
Extra-fine hand painting and finishing		Light	4.5
(automobile bodies, piano cases, etc.)	*3.0	Dark	*4.5
Paper-box manufacturing:		Lasting and welting	4.5
Light	3.0	Soap manufacturing:	
Dark	4.0	Kettle houses, cutting, soap chip,	
Storage of stock	2.0	and powder	3.0
Paper manufacturing:		Stamping, wrapping and packing,	
Beaters, grinding, calendering	2.0	filling and packing soap powder	4.5
Finishing, cutting, trimming	4.5		

528. Standard Loads for General Lighting in Industrial Occupancies (Continued)

Occupancy	VA/sq-ft	Occupancy	VA/sq-ft
Steel and iron mills: bar, sheet, and wire products:		Silk:	
Soaking pits and reheating furnaces	2.0	Winding, throwing, dyeing	4.5
Charging and casting floors	2.0	Quilling, warping, weaving, finishing:	
Muck and heavy rolling, shearing (rough by gage), pickling, and cleaning	2.0	Light goods	4.5
Plate inspection, chipping	*4.5	Dark goods	6.0
Automatic machines, light and cold rolling, wire drawing, shearing (fine by line)	4.5	Woolen:	
Stone crushing and screening:		Carding, picking, washing, combing	3.0
Belt-conveyor tubes, main-line shafting spaces, chute rooms, inside of bins	2.0	Twisting, dyeing	3.0
Primary breaker room, auxiliary breakers under bins	2.0	Drawing-in, warping:	6.0
Screens	3.0	Light goods	4.5
Storage-battery manufacturing, molding of grids	3.0	Dark goods	6.0
Store- and stock rooms:		Weaving:	
Rough bulky material	2.0	Light goods	4.5
Medium or fine material requiring care	3.0	Dark goods	6.0
Structural-steel fabrication	3.0	Knitting machines	4.5
Sugar grading	5.0	Tobacco products:	
Testing:		Drying, stripping, general	3.0
Rough	3.0	Grading and sorting	*4.5
Fine	4.5	Toilet and washrooms	2.0
Extra-fine instruments, scales, etc.	*4.5	Upholstering, automobile, coach, furniture	4.5
Textile mills:		Warehouse	2.0
Cotton:		Woodworking:	
Opening and lapping, carding, drawing roving, dyeing	3.0	Rough sawing and bench work	2.0
Spooling, spinning, drawing, warping, weaving, quilling, inspecting, knitting, slashing (over beam end)	4.5	Sizing, planing, rough sanding, medium machine and bench-work, gluing, veneering, cooperage	4.5
		Fine bench- and machine work, fine sanding, and finishing	6.0

The figures given in this table are average design loads for general lighting. In those cases marked with an asterisk (*), the load values provide only for large-area lighting applications. Local lighting must then be provided as an additional load.

The figures given are based on the use of fluorescent and mercury-vapor equipment of standard design. Adjustments can be made for use of higher or lower efficiency equipment. For equal lighting intensities from incandescent units, the figures must be at least doubled.

Use of these figures in computing number and loading of circuits and feeders should always be checked against the conditions and requirements of the particular area. The figures are not substitutes for lighting design.

In any case, need for particular color quality of light, special intensities, or control of light must be determined as part of the lighting design, and wattages and circuit requirements must be provided accordingly.

529. Allowance for growth in feeders (*Electrical Systems Design*) should begin with the spare capacity designed into the branch circuits. For all circuits loaded to 50 percent of capacity, it can be assumed that there is an allowance for growth of each circuit load by an amount equal to 30 percent of the circuit capacity. This allowance is based on Code limitation of 80 percent load on circuits which are in operation for 3 h or longer or on circuits which supply motor-operated appliances in addition to other appliances and/or lighting. The 30 percent growth allowance in each circuit should be converted to a total watts figure and added to the total load on the feeder as calculated above. This grand total then represents the required feeder capacity to handle the full circuit load on the panelboard. The next step is to provide capacity in the feeder for anticipated load growth (plus some amount for possible unforeseen future requirements).

From experience, modern design practice dictates the sizing of feeders to allow an increase of at least 50 percent in load on a feeder when analysis reveals any load-growth possibilities. Such an analysis depends upon the type of building, the work performed, the plans or expectations of management with respect to expansion of facilities or growth of business, the type of distribution system used, locations of centers of loads, permanence of various load conditions, and particular economic conditions. Depending upon a thorough study of all these factors, the advisability of spare capacity can be determined for each feeder in a distribution system. But if study demands extra capacity in a feeder, substantial growth allowance (50 percent) is generally essential to realize the sought-after economy of future electrical expansion. Skimping upsizing of feeder conductors or raceways has proved a major shortcoming of past electrical design work. This is particularly true in tall office buildings, apartment houses, and other commercial buildings in which the elimination of riser bottlenecks represents a large part of the total modernization cost.

Spare capacity in feeders may be provided in one or more of several ways. If the anticipated increase in feeder load is to be made in the near future, the extra capacity should usually be included in the conductor size and installed as part of the initial electrical system. In many small office or commercial buildings and apartment houses, extra capacity should automatically be included in the initial size of the feeder conductors, provided the size is not greater than No. 2 after adding the 50 percent of extra capacity. Other methods of providing for growth in feeder load are as follows:

1. Selection of raceways larger than required by the initial size and number of feeder conductors. With this provision, the conductors can be replaced with larger sizes if required at a later date. The advisability of this step should be carefully determined in the case of risers or underground or concealed feeder raceway runs. In some cases, a compromise can be made between providing spare capacity in the feeder conductor size and upsizing the feeder raceway.
2. Including spare raceways in which conductors can be installed at a later date to obtain capacity for load growth. Such arrangements of multiple raceways must be carefully laid out and related to the existing overall system. The types of feeder-distribution centers or main switchboards and the layouts of local branch-circuit panelboards must be able to accommodate future expansion of distribution capacity based on the use of spare raceways, with modification and regrouping of feeder loads.

530. Control of groups of receivers (other than hall or night lights) from the main switchboard. If it is desirable to control a group of receivers from the main switchboard in the basement, a separate feeder must be carried from it to each group to be so controlled. Usually the feeder system can be laid out without regard to the control of the room lights, because, as a rule, they need not be controlled from the switchboard. It is usually advisable to have each of the lower floors, up to and including the ground floor, on a separate switch, as these floors often require light when the others do not. Special lighting

appliances such as sign, clock-dial, and outside dome lights require separate feeders from the switchboard, because they are turned on and off at set times from the switchboard. Certain motors may require similar control. In hotels the feeder switches are never opened except in case of accident, so from a control standpoint only it is not necessary to subdivide hotel feeders. When tenants of portions of buildings pay for the light they use, it is often desirable to carry a separate feeder from the switchboard to each tenant's suite so that all meters can be located together at the switchboard. Suites can be metered separately by cutting meters in the mains at the suites, but this may be undesirable.

531. The control of hall lights from the main switchboard is an important consideration. In private dwellings it does not usually pay to install a separate feeder for the hall lights, and it may not be necessary in a hotel, where attendants are constantly passing in the halls. In a majority of public buildings, however, separate control of the hall lights is very desirable, if not necessary. The usual problem, then, is whether there shall be one or two sets of hall-light feeders. With two sets of feeders for hall lights, local switches can be eliminated and control effected entirely from the main switchboard. Two sets of hall feeders increase the cost of installation, but the saving in energy usually justifies them. By arranging two sets of feeders, one set serving, say, one-third of the hall lights and the other the remaining two-thirds, the smaller group can be used for dark days and for an all-night circuit, and a saving in energy will result. When there are two sets of hall lights thus controlled, the wiring of outlets should be such that there will be a uniform distribution of light whichever set is lighted. When tenants pay for the energy used in their suites, a separate feeder for the hall lights is indispensable.

FARM WIRING

532. Wiring. The use of electric power on the farm is continually increasing. So that the farm electrical system may be adequate and give the best results in expenditure of money and satisfactory service, it is essential that the system be properly and wisely planned, that good materials and equipment be employed throughout, and that good workmanship be employed in its installation. In most cases the best installation will be achieved by the use of a power pole, as shown in Fig. 9.332. The power pole will be the central distribution point of the electrical system, which is why the NEC defines it as the "distribution point" and it will be so described in the remainder of this discussion. The power company will run its supply lines from its main pole line to the distribution point of the farm and down the pole to its meter. From the distribution point, the consumer will distribute the electric power by overhead or underground lines to the different buildings. In rare instances, it may not be possible to erect a distribution point. In such cases the power lines from the public utility will terminate at a building, probably the farmhouse. The meter will then be installed at this point. This method introduces some complications and is recommended only when the erection of the distribution point is very difficult or impossible.

The first step in planning the farm electric system is to determine the power demands for each building. The diversity of farm work makes it impossible to set down definite load requirements to fit all farms. Every kind of farming has its own needs insofar as power, machinery, and appliances are concerned. However, a number of wiring requirements are fundamental to the various farm buildings. No matter where the farm is located or how the buildings are constructed, certain minimum standards of wiring must be followed to obtain satisfactory electrical service. The following sections specify proper wiring for average conditions. They take into consideration the correct number of outlets, the proper switching, modern lighting, and adequate wire sizes for the machinery and appliances that are normally used in specific farm buildings. They are intended as a basic guide. If more equipment is to

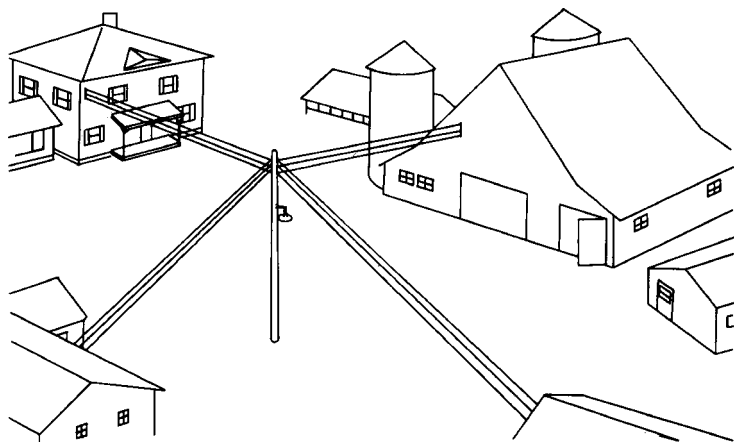


FIGURE 9.332 Power pole (defined as a “distribution point” in the current NEC) for farm-building distribution feeders. [General Electric Co.]

be installed than is included in these specifications or if the farming operations are of a special nature, the specifications must be varied to suit the special needs.

533. Typical Computed Loads and Probable Maximum Demands

Building	Computed load	Probable demand
Farm residence	19 kW	13 kW
Dairy barn, medium size, including milk house and one 5-hp motor	20 kW	12 kW
Dairy barn, large size, including milk house and one 7½-hp motor	27 kW	15 kW
Same, two 7½-hp motors	36 kW	24 kW
Milk house barn with milk house	7.5 kW	5.8 kW
Milk house only	6.0 kW	4.8 kW
Beef-cattle, horse, sheep, and hog barns, medium size, with 5-hp motor	14 kW	10 kW
Same, large size, with 7½-hp motor	20 kW	15 kW
Poultry laying house:		
1,000 sq-ft	1.8 kW	1.8 kW
4,000 sq-ft	8.7 kW	6.4 kW
8,000 sq-ft	15.2 kW	11.7 kW
Brooder house, per brooder:		
Infrared	2.25 kW	2 kW
Standard brooder	1.25 kW	1 kW
Farm shop, with welder	17 kW	10 kW
Sweet-potato curing and storage	1.5 W/cu-ft or 4 W/bu	1.5 W/cu-ft or 4 W/bu
Machinery sheds, stock shelters, and miscellaneous buildings	1 W/sq-ft floor area	1 W/sq-ft floor area

SOURCE: “Farmstead Wiring Handbook.”

534. Other loads (*Design Manual on Steel Electrical Raceways*, published by American Iron and Steel Institute). Over and beyond the electrical requirements of individual buildings are a number of other loads for which provision must be made. These include such diverse items as water pumps (water system and irrigation), immersion heaters, water warmers, hay dryers and hoists, forage handlers, silo unloaders, and other miscellaneous equipment. Some idea of typical loads encountered is given by the following selected examples:

Forage handling:

Blower type	20-hp motor
Inclined elevator	2- to 3-hp motor
Silo unloaders	30- to 5-hp motor
Bulk-milk coolers	Varies with size and type; 1 to 5 hp for one or more motors

Such additional loads should be kept in mind when surveying a farm operation for initial wiring or rewiring, and provisions made in the system design to handle such equipment.

535. Specifications for dairy barn

Lights. In back of cows there should be one lighting outlet every 12 ft (3.7 m), and in front of cows one approximately every 20 ft (6.1 m). There should be one or two lights on top of the silo, so installed that they will light the silo and chute. Only general illumination is needed in the haymow. Floodlights above the hay line on opposite walls of the barn will therefore give the required lighting.

Convenience Outlets. Outlets should be placed approximately 15 ft (4.6 m) apart in a row in back of the cows. If the cows face in, outlets should be on the wall, up high enough so that cattle cannot come in contact with them. If the cows face out, outlets should be suspended from the ceiling on heavy-duty cords. They must be hung so that they can be reached easily yet high enough not to obstruct traffic.

In open spaces a convenience outlet should be installed for each 600-ft² (55.7-m²) area.

Switches. It is best to install separate switches for each row of lights in the barn. In small barns, however, all lights in back of the cows may be on one switch. When two or more entrances are used frequently, at least one row of lights should be controlled by three-way switches. The switch for the lights in the haymow should be mounted at a convenient location on the barn floor and also be equipped with a pilot light. To have a visible indication when the light is burning in the silo, a switch with a pilot light mounted at the entrance of the silo chute is recommended.

Circuits. The service-entrance panel for the barn must be adequate to take care of the load. Since some of the equipment needs special circuits, it is important to have an entrance panel of the proper capacity. The following number of circuits is recommended as a minimum. However, additional equipment or a change in the barn layout may make it necessary to deviate from this recommendation.

Lights	2 circuits (depending on size of barn)
Milking machine	1 circuit (230 V)
Feed grinder	1 circuit (230 V)
Utility motor	1 circuit (230 V)

Convenience outlets	1 circuit (depending on size of barn)
Fans	1 or more (depending on size of barn)
Hay dryer	1 circuit (230 V)

536. Specifications for milk house

Lights. In most cases a center light will be sufficient unless the milk house is unusually large. Then additional lights will be necessary over the work areas, especially where the utensils are washed.

Convenience Outlets. At least one convenience outlet for general use should be installed at a convenient location in the milk house. It is advisable to put this outlet on a heavy-duty 20-A circuit.

Switches. All lights should be controlled by a switch at the entrance.

Circuits. When the milk house is connected to the barn, its circuits may be included in the barn entrance panel. When the milk house is separate, a special entrance panel must be installed.

The following circuits are recommended as a minimum:

Lights and outlets	1 circuit
Milk cooler	1 circuit
Water heater	1 circuit (230 V)
Sterilizer	1 circuit (230 V)
Ventilating fan	1 circuit (if fan is small, it may be connected to light and outlet circuit)

537. Specifications for workshop, garage, and machine shed. Frequently the workshop, garage, and machine shed are one building, subdivided to serve all three purposes. The wiring for this building must therefore be arranged to suit this special condition.

Lights

Workshop. A well-lighted workshop is absolutely necessary for doing good work. Two types of lighting are needed: general lighting for the entire workshop and localized lighting over the workbench and near permanently located equipment.

For this reason, a ceiling light must be installed for every 200 ft² (18.6 m²) of floor area, at least one and possibly two lights over the workbench, and conveniently located lights over the stationary tools such as the drill press, plane, forge, or saw.

Garage. One light over the front of the cars and another one at the rear will permit making minor repairs to the car and other equipment.

Machine shed. One or two ceiling lights, depending on the size of the shed, give sufficient general illumination. Lights must be properly placed for best results.

Convenience Outlets

Workshop. Convenience outlets in the workshop must serve many different purposes. There must be a sufficient number, properly located, to facilitate the work. Install at least two convenience outlets over the workbench and other outlets throughout the workshop for

the connection of the electric tools. A heavy-duty outlet must be installed for the portable welder.

Garage. A convenience outlet at the rear wall of the garage permits the use of portable tools, a battery charger, and extension lights.

Machine shed. Since the welder may frequently be used in the machine shed, a heavy-duty outlet should be provided. Other convenience outlets should be considered for the connection of portable tools such as drills and soldering irons.

Switches

Workshop. The ceiling lights in the workshop should be controlled by a single-pole switch near the entrance. The lights over the workbench and fixed equipment can be controlled by pull-chain switches inside the fixture.

Garage. A single-pole switch near the entrance of the garage is needed for the control of the ceiling lights.

Machine shed. The same type of switch control should be used here as in the garage.

Circuits. As in the barn and milk house, the service-entrance panel for the workshop must have the correct capacity for the load. Since all the equipment will never be used at the same time, a reasonable diversity factor may be taken into consideration.

The number of circuits depends, of course, on the equipment and machinery installed. However, the following minimum should be carefully considered:

Lights	1 circuit
Convenience outlet	1 circuit
Wood saw and planer	1 circuit (No. 12 wire)
Portable welder	1 circuit (230 V)

538. Specifications for poultry house

Lights. Lighting in the poultry house serves to increase egg production in addition to providing light for seeing. One light should be installed for each 200 ft² (18.6 m²) of floor area, but if pens are smaller than 200 ft², at least one light per pen must be provided for. The same general-lighting arrangement should also be kept in the poultry-house workroom with additional local lighting for egg cleaning, grading, poultry scalding, waxing, etc.

Since ultraviolet light promotes healthier, stronger birds, sunlamps should be installed over feeding troughs. Full spectrum fluorescent tubes that closely match outdoor light should be used. With a color rendering index of 96 (outdoor light 100) and color temperature of 5500 K matching natural outdoor light, poultry and other livestock confined to a building can benefit from the ultraviolet and visible spectrum of the lighting. It is also recommended that at least one germicidal fixture for each 100 ft² (9.3 m²) of floor area of laying pens be installed. These lamps should be on a separate switch so that they can be turned off when someone is working in the pen.

Convenience Outlets. To connect the water warmer in the laying pens, at least one convenience outlet should be installed for every 200 ft² (18.6 m²) of floor area. The outlets are best located at the ceiling and should be equipped with the locking type of receptacle.

In the brooder house, the same arrangement of receptacles is recommended to serve brooders and water warmers. In the workroom, convenience outlets must be installed for the egg cleaner, candler, grader, poultry scalding, and waxer.

The feed-grinder and feed-mixer motors must have special heavy-duty outlets on a 230-V circuit.

Switches. Lights for all the laying pens should be connected to a regular switch as well as to an automatic time switch. The time switch will make morning lights to control egg production possible.

The ceiling lights in the workroom should be on a separate switch from the lights in the laying pens. The local lighting over the work areas can be controlled by wall switches or by pull-chain switches in the fixtures. Germicidal lamps, being on at all times, do not need a switch.

Circuits. The following circuits are recommended for the poultry house as a minimum:

Lights	1 circuit (depending on size of poultry house)
Ultraviolet lamps	1 circuit (depending on size of poultry house)
Germicidal lamps	1 circuit (depending on size of poultry house)
Convenience outlets	1 circuit
Brooder outlets	1 circuit each brooder
Feed mixer	1 circuit (230 V)
Feed grinder	1 circuit (230 V)

539. Specifications for hog house or sheep shed. For general illumination, a lighting outlet every 20 ft (6.1 m) along the passageways should be sufficient. These lights should be controlled by a single-pole switch near the entrance. Convenience outlets are needed in the farrowing pen for the connection of the pig brooders. This outlet should be about 3 ft (0.9 m) above the floor and in a corner of the pen.

540. Specifications for granary and corncrib. Lights over the center of the drive spaced 20 ft (6.1 m) apart are needed in the granary and corncrib. These lights should be controlled with a switch at the entrance. Upstairs, a light is needed for approximately every 200 ft² (18.6 m²) of storage area with a switch and pilot light installed downstairs near the stairs. At least one power outlet is needed downstairs for the connection of the grain elevator.

541. Specifications for farmyard. In the farmyard, electricity serves many important functions. Lights properly switched help in performing the evening chores. Outlets are needed throughout the yard for connection of the portable utility motor. Therefore, a plan for the wiring of a farm should include proper lighting and outlets outdoors. In general, the following simple rules will be sufficient:

Lights. Install at least three lights in the yard: one at the house, one at the barn, and one at the workshop or garage. They should be at least 15 ft (4.6 m) above the ground to allow a wide spread of light.

Outlets. Heavy-duty weatherproof outlets are needed for the connection of the utility motor. One should be mounted at the barn near the silo, and others at all places where farm chores will employ the utility motor. If the pump house is located adjacent to the yard, a separate circuit to the pump motor should be provided.

Switches. To make it possible to turn the lights on or off from several different points, three- and four-way switches must be installed. A switch at the house, one at the barn, and a third one at another convenient place are recommended for maximum efficiency.

542. Planning the farm wiring system. After the required loads have been determined, the wiring system can be planned. The system will be considered in three parts: (1) the distribution point, (2) distribution feeders, and (3) interior wiring of each building.

543. Distribution point. (Secs. 543 to 545; adapted from *Practical Electrical Wiring*, 20th ed., © Park Publishing, 2008, all rights reserved) Locate the pole as near as practical to the buildings that use the greatest amount of power; on modern farms, the house rarely has the greatest load. By locating the pole so the largest wires will be the shortest wires, you will find it relatively simple to solve the problem of excessive voltage drop without using wires larger than would otherwise be necessary for the current to be carried. Total cost is kept down when the large expensive wires to the buildings with the big loads are the shorter wires, and the smaller less expensive wires to buildings with the smaller loads are the longer wires.

Figure 9.333 shows a modern farm distribution point. The disconnecting means may be provided by the utility or by the owner, depending on local practice. The switch has no overload protective devices within it, thereby varying from the normal rule for services in NEC 230.91. The NEC classifies this device as a “site isolating device” to distinguish it from a service disconnect. Even if supplied and maintained by the utility, and therefore beyond the scope of the NEC, the NEC avoids needless duplication by recognizing it as a disconnecting means, provided it meets the requirements in NEC 547.9(A). Since it is not an actual service disconnect, it follows that the wiring that leaves this device still has the status of service conductors and must meet the wiring method and clearance requirements in Article 230. Although nothing technically prevents a farm from establishing a conventional service at the distribution pole, and then routing conventional overcurrent-protected feeders to each building, the arrangement shown here is widely used for overall cost effectiveness. Note that although the switch is at the top of the pole, it can be operated from a readily accessible point through the permanently installed linkage shown in Fig. 9.333. In addition, a grounding electrode conductor must be installed at this point and run it from the neutral block of the switch to a suitable electrode at the pole base.

If there are two or more distribution points located closer together than 500 ft (measured in a straight line), each location must have reciprocal labeling setting out the location of the other point(s) and the buildings or structures served by each.

544. Equipotential planes. Due to the sensitivity of livestock to very small “tingle” voltages, the NEC now requires an equipotential plane in livestock (does not include poultry) confinement areas, both indoors and out, if they are concrete floored and contain metallic equipment accessible to animals and likely to become energized. These areas must include wire mesh or other conductive elements embedded in (or placed under) the concrete floor, and those elements must be bonded to metal structures and fixed electrical equipment that might become energized, as well as to the grounding electrode system in the building. In the case of dirt confinement areas, the equipotential plane may be omitted. For outdoor areas the plane must encompass the area in which the livestock will be standing while accessing equipment likely to become energized.

Remember that the grounding system to which equipotential planes should be connected is usually (refer to the distribution feeder discussion of this topic) electrically separated from neutral return currents. The idea is to minimize voltage gradients. Due to the well-grounded environment, the NEC also requires all general purpose 15- and 20-A, 125-V receptacles in the area of an equipotential plane to have GFCI protection. This GFCI protection requirement also applies to similar receptacles in all damp or wet locations, including outdoors, and for dirt confinement areas whether indoors or out. Receptacles for

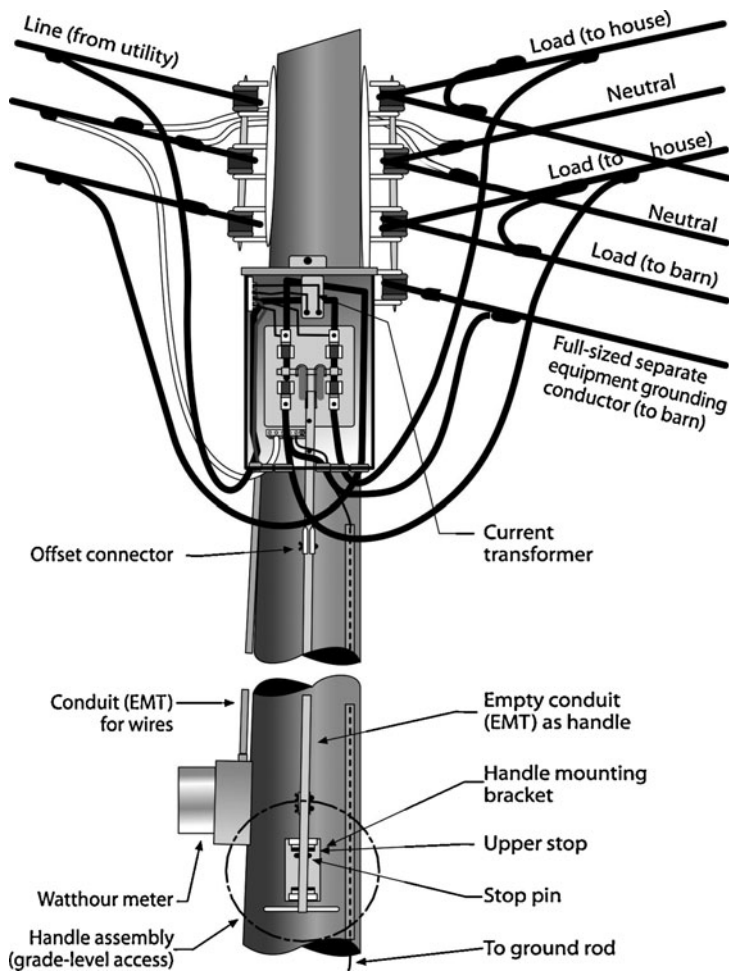


FIGURE 9.333 Site isolation switch as contemplated by the 2008 NEC for overhead farm distribution. The meter in this drawing happens to be connected to instrument transformers in the pole top enclosure.

specified (not general purpose) loads are not covered by this requirement, but where GFCI protection is omitted, a GFCI-protected receptacle must be installed within 3 ft of the unprotected receptacle.

545. Distribution feeders. From the pole top, go to the buildings that need to be supplied from this point. Review the discussion in Sec. 357 Par. 3 about regrounded neutrals. As a general rule the farmhouse can be supplied by a three-wire service, with its neutral regrounded at the house just as if the utility had made a direct termination. The farmhouse must not, however, share a common grounding return path with the barn. If it does, as in the case of a common metallic water piping system, the house (1) has to be supplied with

a four-wire service and (2) have all instances of electrical contact between the neutral and the local equipment grounding system removed.

Although the barn, arguably, could also be wired like the house (three-wire), a three-wire hookup would mean that the neutral and the equipment grounding system in the barn would be bonded together at the barn disconnect. That in turn would mean the neutral, in the process of carrying current across its own resistance, would constantly elevate the voltage to ground of all barn equipment by some finite amount relative to local ground, especially from the perspective of farm animals where they stand. The feet of livestock, being in close contact with moisture, urine, and other farm chemicals, are conductively rather well coupled to local earth. Most livestock are much more sensitive to voltage gradients than are people. A potential difference in the range of a fraction of a volt can take a cow out of milk production, which no farmer can afford.

The NEC addresses this in two ways. First, it establishes the unique rules on farm distributions being covered here. Second, it establishes an equipotential plane for these environments, discussed later in this chapter. The service to the barn is normally wired four-wire, and that is (1) customary because of the reasoning discussed in the previous paragraph, and (2) mandatory unless there are no parallel grounding return paths over water systems, etc., a necessary condition to comply with NEC 250.32(B) Exception. There is an additional condition attached to the four-wire scheme that is unique to agricultural buildings. The separate equipment grounding conductor must be fully sized. That is, if the run to the barn is 3/0 AWG copper for a 200-A disconnect, and the neutral is 1/0 AWG copper (both sized on the basis of load), the equipment grounding conductor is not 6 AWG as normally required by NEC Table 250.122; nor is it 4 AWG, the size for a grounding conductor on the supply side of a service using 3/0 AWG wires; nor is it 1/0 AWG, the size of the neutral. It must not be smaller than the largest ungrounded line conductor, or 3/0 AWG. When this wire arrives at the barn, it must arrive at a local distribution with the neutral completely divorced from any local electrodes or equipment surfaces requiring grounding.

546. Wiring of buildings. Normally the power-distribution feeder for the distribution point to a building is secured to the building with an insulator bracket (see Div. 8). Brackets should be mounted high enough so that the power feeders are never suspended lower than 5.5 m (18 ft) over driveways, for clearance of loaded wagons, and 3 m (10 ft) over footwalks.

From the insulator bracket service-entrance conductors are run down the side of the building to a point where they enter the building and connect to the service-entrance panel. Copper service-entrance cable is recommended for this purpose. This cable with its tough nonmetallic outer covering protects cattle from coming in contact with metallic parts of the wiring system. The table in Sec. 547 will give an idea of the size of service-entrance panels required (refer to Secs. 376 to 385 for information on service entrances).

It is recommended that Types UF, NMC, Copper SE, jacketed Type MC, rigid non-metallic conduit (either PVC or RTRC), liquidtight flexible nonmetallic conduit, or other cables or raceways suitable for the location be employed for the interior wiring of the buildings (refer to preceding sections of this division for information on wiring, and refer to Secs. 535 to 541 of this division for information on requirements for lights, convenience outlets, switches, and circuits).

At each building the wiring system must be grounded. This provision is in addition to the ground at the distribution point. Grounds must be established at each point of entrance to each building, and, if possible, all these grounds should be tied together on driven grounds. Also, for added safety, the farm water system should be tied at each building to the driven ground for that building. This is important. A well-grounded wiring system adds to the safety of the entire installation.

547. Service-Entrance Requirements

Type of building	Installation	Service-entrance conductors, A (All services are 9-wire, 115/230-V, unless otherwise specified)
Dairy barn (complete barn, including milk room) up to 2,500 sq-ft	Normal amount of lighting, ventilation, milker, milk cooler, water pump, dairy water heater, milk house heater, gutter cleaner (3 hp), hay drier, or utility motor (5 hp)	100
Same, above 2,500 sq-ft	Normal amount of lighting, ventilation, milker, milk cooler, water pump, dairy water heater, milk house heater, gutter cleaner (8 hp), hay drier, or utility motor (7 hp)	125
Same, above 2,500 sq-ft	Same as above, but two 7½-hp motors	195
Milking barn or "milking parlor"—includes milk room—(cows not housed)	Normal amount of lighting, milker, milk cooler, dairy water heater, milk house heater, ventilation	55
Milk house (when separate from barn)	Normal amount of lighting, milk cooler, dairy water heater, milk house heater	55
Horse, beef-cattle, sheep, and hog barn up to 2,500 sq-ft	Normal amount of lighting, ventilation, pig or lamb brooders, water pump, antifreezing protection on plumbing, utility motor (5 hp)	70
Same, above 2,500 sq-ft	Normal amount of lighting, ventilation, pig or lamb brooders, water pump, antifreezing protection on plumbing, utility motor (7½ hp)	100
Poultry laying house (including feed room) up to 4,000 sq-ft pen floor area	Normal amount of lighting, ventilation, water warmers, antifreezing protection on plumbing, automatic feeders, feed grinder (up to 1 hp)	55
Same, above 4,000 sq-ft pen floor area	Normal amount of lighting, ventilation, water warmers, antifreezing protection on plumbing, automatic feeders, feed grinder (up to 2 hp)	70
Poultry brooder house, portable type	Light and outlet for single brooder and water warmer	20 (2-wire, 115-V)
Poultry brooder house, permanent type, up to six pens	Normal amount of lighting, ventilation, brooders, water warmers, antifreezing protection on plumbing	55
Poultry brooder house, permanent type, above six pens	Normal amount of lighting, ventilation, brooders, water warmers, antifreezing protection on plumbing	70 minimum; estimate
Poultry-cleaning and -dressing house	Normal amount of lighting, poultry scalding, waxer, wax reclaiming, picker, and refrigeration	2,000 W per pen 55
Farm shop	Normal amount of lighting, bench tools (tool grinder, drill, soldering iron, etc.), farm welder, air compressor, saw, and battery charger	70

547. Service-Entrance Requirements (Continued)

Type of building	Installation	Service-entrance conductors, A (All services are 9-wire, 115/230-V, unless otherwise specified)
General farm buildings	Minimum capacity where lighting, motors, and miscellaneous 116- and 230-V equipment will be used	50
Storage sheds, stock shelters	Lighting and small portable equipment—not over two 2-wire bench circuits	40* (2-wire, 115-V)

*Ordinarily such buildings are supplied by a feeder or circuit from another building. In such cases, this is not a service as defined by the National Electrical Code. If a brooder house or similar structure is supplied directly from the power source, the minimum permissible size of service-entrance conductors would be No. 8 for two 2-wire branch circuits.

If the building is served by a feeder from another building the minimum size of service-entrance conductors would be No. 10 for two 2-wire branch circuits. For a single branch-circuit source, the minimum permissible size of service-entrance conductors would be No. 8 for two 2-wire branch circuits.

NOTE All the capacities listed assume service for the individual building only. If other buildings are supplied from any of these services, the capacity of the service would have to be increased accordingly.

SOLAR PHOTOVOLTAIC SYSTEMS

548. Solar photovoltaic systems (Secs. 548 to 554; adapted from *Practical Electrical Wiring*, 20th ed., © Park Publishing, 2008, all rights reserved) are becoming increasingly common, given favorable tax incentives and increasing energy costs. These systems are covered in NEC Article 690. They are very complex, and this handbook section will only cover the most common application in which a limited array provides power that offsets some of the power that would otherwise have come from the utility. It is important to keep in mind that the power produced by these systems is direct current (dc), frequently at voltages approaching 600 V. Special considerations must be made in order to harness this power safely. PV systems have another significant difference from conventional systems in that the amount of current is inherently limited by the capacity of the array.

549. The array captures the solar energy. Solar cells are grouped into modules that comprise the basic unit of solar generating hardware. The panels are then field connected to make a functioning array that provides dc power for the owner's use. A new change in the 2008 NEC requires that each array framework or supporting structure be connected to a grounding electrode located as near as practicable to the array. The power system electrode can be substituted if its location is within 6 ft of where the array electrode would normally be provided. If a separate electrode is used, whether or not it must be bonded to the power system electrodes depends on whether the inspector views them as "auxiliary" electrodes as covered in 250.54. The proposal for this change clearly intended that they be so classified; the panel removed the reference, but failed to substantiate its actions. Ask the inspector, but be prepared to make the bonding connection.

The NEC requires modules to be listed, and they will be marked by their manufacturer with the information specified in NEC 690.51. This information (short-circuit current, maximum power, operating current and voltage, open circuit voltage, and maximum system

voltage) forms the basis for calculations that are essential to system layout and conductor selection. These values will be in terms of standardized test conditions, and it is known that actual conditions can result in substantially exceeding the ratings. For example, extreme cold can result in voltage levels as much as 125 percent of rated output voltage [see NEC 690.7(A)]. In addition, some solar installations substantially exceed the standardized irradiance levels in the time period around solar noon, resulting in current production as much as 125 percent of the rated amount. In addition, the current produced by PV systems is, almost by definition, continuous. This generally adds another 25 percent to sizing overcurrent devices (refer to the extensive coverage of this topic in Div. 3, Sec. 94).

550. Special wiring rules apply at the modules. Effective with the 2008 NEC, unless conventional multiconductor wiring methods are used, module and panel interconnections must use either single-conductor Type USE-2 cable or the new Type PV (photovoltaic) single conductor wire; the previous allowance for Types UF, SE, and USE is discontinued. Do not use welding cable. Note that USE-2 wire must not be used inside a building unless it is dual rated as building wire, as shown by an additional marking of XHHW-2 or RHW-2 or comparable. These wires have 90°C temperature ratings and tolerate sunlight and wet-location exposure, and they can be connected to the positive and negative leads coming from the modules. However, if the array is readily accessible to passersby, the conductors must usually run within a raceway. Single-conductor entries into a pull box must have strain relief provided, such as through listed gland-type connectors that maintain the wet-location integrity of the box. Leave enough slack in the module leads so the module can be removed for servicing or replacement. When selecting wires, try to avoid wire stranded more finely than Class C concentric (19 strands up to 2 AWG, then 37 strands on larger wires). Wire more finely stranded than this must have both its stranding class and the numbers of strands marked on the connector, and such lugs are very difficult to find. Note also that the new Type PV conductors have a thicker than usual insulation, and as such require special raceway fill calculations if pulled into conduit or tubing.

Generally each string of modules connected in series should have a fuse in its ungrounded (usually the positive) lead based on 125 percent of 125 percent (net = 156 percent) of the rated short-circuit current of each of the series-connected modules. Remember that voltages add in series circuits, but current is everywhere the same. For example, the short-circuit current rating of four modules, each rated at 5.4 A short-circuit current and connected in series, is 5.4 A, but the voltage produced by this string will be four times the voltage of any single module. To size the fuse, multiply the current by 1.25 to get 6.75 A, and then multiply that by 1.25 for continuous loading for a result of 8.4 A, and choose the next higher standard size fuse. Choose a 9-A fuse, because the NEC specifies that PV source circuit overcurrent devices be in increments of a single ampere for all ratings below or equal to 15 A.

Figure 9.334 shows an array of six parallel strings of modules, four in each. The combiner box to the left provides terminals for the paralleled strings, and facilitates connections to the home run conductors. Wiring leaving the array can be multiconductor cable such as Type UF if it is identified as sunlight resistant and suitable for the temperature, or it can be a raceway-type wiring method suitable for the location. All wiring terminating on or running with a PV array should be assumed to be operating in a 70°C ambient or higher due to solar heating. This means that the wiring (and any nonmetallic raceway if used) must have a minimum temperature rating of 90°C as a practical matter, and that the effects of temperature on final conductor ampacity will be pronounced. For example, 12 AWG THWN-2, a 90°C conductor with a Table 310.16 ampacity of 30 A would end up with (using a 0.58 derating factor) a final ampacity of 17.4 A or even 12.3 A if a higher temperature were assumed.

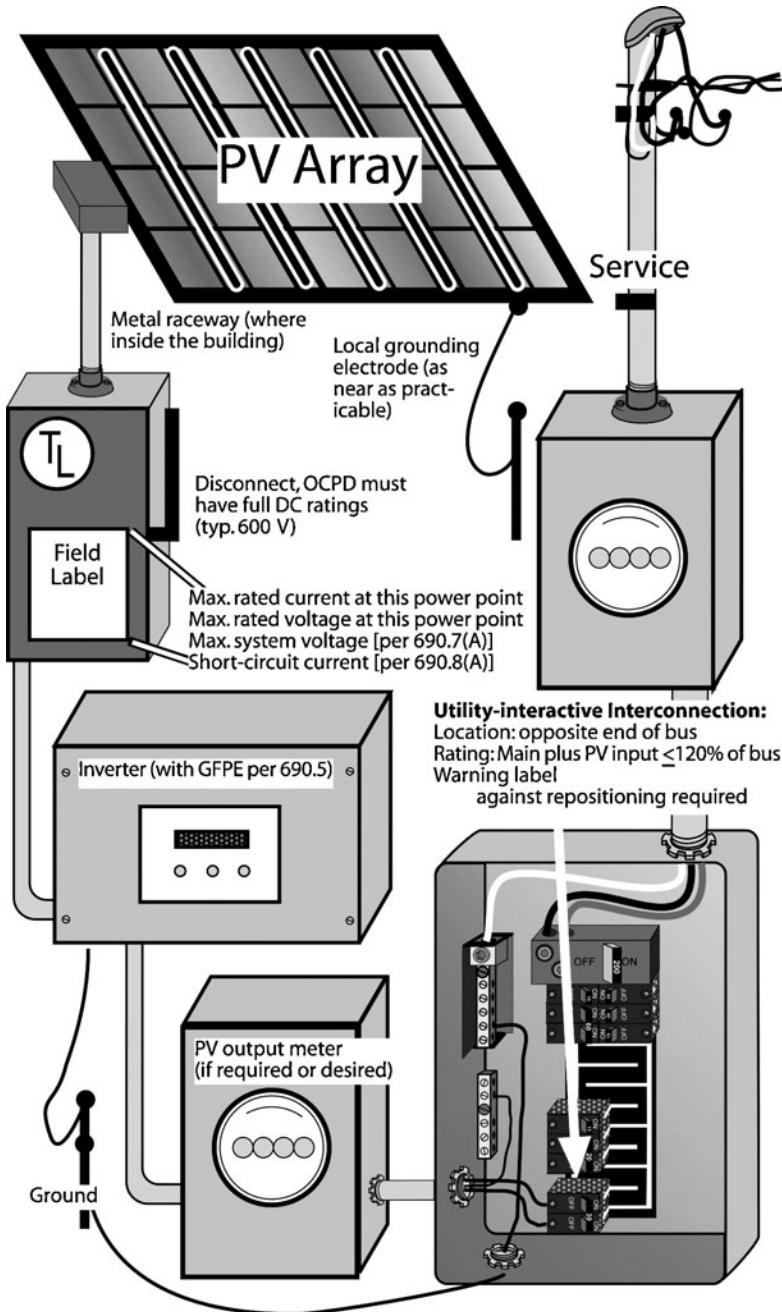


FIGURE 9.334 The major elements of a utility-interactive PV supply.

551. DC feeder wiring connects the array with the inverter. The wiring between the PV source and the inverter is a feeder for a separately derived system and follows normal rules for sizing, although, depending on how it is routed, temperature may have an important impact. As we have seen, each of the six strings generates 6.75 A, resulting in a total array load of 41 A. Since these wires will be connected to an overcurrent device and switch terminals, and transmit continuous loads, we need to add 25 percent of this number to determine conductor sizes. The minimum ampacity of the feeder conductors would be 125 percent of 41 or 51 A. This corresponds to 6 AWG copper conductors, evaluated under the 75°C column of Table 310.16. If these feeder conductors were routed along the array the evaluation would change, because ambient temperature would become a major factor. In such a case (assuming 70°C conditions) the derating factor to be applied to THWN-2 conductors is 0.58. $41 \text{ A} / 0.58 = 71 \text{ A}$. Since this is less than the ampacity (in the 90°C column) of these conductors, the 6 AWG conductors can still be used, but the result is far closer to the table limits. Refer to Div. 3, Secs. 89 to 111 for a comprehensive explanation of these considerations.

552. Equipment grounding must not be forgotten. Although equipment grounding conductors are normally sized per Table 250.122 based on the rating of the line-side overcurrent device, in cases like this the NEC requires that the short-circuit current be used to enter that table, or in this case, 51 A. A 10 AWG conductor would be the correct size. Take care in terminating these conductors at an array. Listed modules will provide for grounding connections and they must be used. Other modules, typically aluminum bodied, will require field terminations. Look for a copper-bodied lug that has a tin coating and is listed for direct burial. These lugs are compatible with an aluminum surface and their stainless steel hardware will survive outdoor conditions. To attach these to the module, drill a small pilot hole, then seat the lug with a 10-32 thread-forming sheet metal screw treated with an antioxidant compound rated for aluminum connections. This is not a “teck” screw with sheet-metal threads; it is an actual machine screw, and the compound will assure that no oxygen reaches the raw aluminum surface during the thread-making process. This prevents the formation of aluminum oxide and assures a low-impedance, long-lasting connection.

553. Disconnects must be located upon entry unless a metal raceway is used. When the wiring enters the building, there must be a disconnect provided unless the wiring runs in a metal raceway. The metal raceway may be difficult to install, but the owner may prefer it to the appearance of wiring running down the outside of the building. On new construction the metal raceway can be preinstalled easily and avoids a disconnect at an inconvenient location. Note that NEC 690.15 requires the inverter (and comparable equipment) that could be energized from two sources to have a disconnecting means from each source, and also requires those disconnects to be grouped and identified. It follows that the PV disconnect shown in Fig. 9.334 would be required whether or not a disconnect were provided in the attic.

554. Disconnects must be applied within their ratings. A typical open-circuit voltage for the array in Fig. 9.334 might be 64 V (open circuit); with four modules in series the voltage would be 256 V, and after applying the 125 percent multiplier as noted the required rating becomes 320 V. As a practical matter, look for 600 V dc rated equipment when you are considering these components. The NEC also requires a label to be placed as shown in Fig. 9.334 showing system parameters. If the system includes storage batteries (the one shown does not) the maximum output current of the charge controller must be shown on the same label,

because a short-circuited battery bank adds many thousands of amperes of available fault current to the dc side of the system and the components need to be rated accordingly.

555. Inverters provide the interface with the ac side. The next step is to convert the dc output to ac, which is the principal function of the inverter. Inverters are selected based on the generally expected power capability of the system. This is far from the worst-case voltage (expected on the coldest morning) times the worst case current (expected at solar noon during the warm season), or about 10 kW in this example. Consult the manufacturers' recommendations; in this case a 5-kW inverter would be a typical size. Note that the inverter output conductors are sized to the continuous output current rating of the inverter, even if the capacity of the modules on the roof is smaller than what the controller can deliver. Most inverters listed for this application include a mechanism to interrupt the ground-fault current path, as required by NEC 690.5 for all dwellings, and all other locations using a grounded PV system unless the equipment grounding conductor is double the size of the circuit conductors after upsizing for conduit fill and ambient temperature. Both the ac and the dc sides of the inverter have grounding electrode requirements, and therefore both sides require a grounding electrode conductor to be in place. The ac side is already taken care of by the normal grounding connections in the building, but the dc side has to be added, sized in accordance with NEC 250.166. This means equal in size to the ungrounded conductor unless the electrode is a ground rod, or ring or concrete-encased electrode. Just as for ac system conductors, those conductors need not exceed 6 AWG, or the size of the ring conductor, or 4 AWG, respectively. Since this electrode must be bonded to the normal power system electrode, and can actually be the same electrode, many inverters include a ground bus common to both sides that facilitates this connection.

It should also be noted that there must be one, and never more than one, connection between the grounded dc circuit conductors and the grounding electrode. Since the interruption of the ground-fault current path is a required feature of a NEC 690.5 device, having this connection in the inverter allows for the proper application of these requirements. In addition, the PV disconnect must not open the grounded conductor; the switch in Fig. 9.334 will only have one of its poles (if more than one are present) in use.

556. Connection point to the normal power system are restricted. Most panelboards have busbars with ratings equal to the rating of the main overcurrent protective device ahead of them in the panel. Figure 9.334 shows a common 200-A panelboard. The NEC now requires that the input breaker from the inverter be at the opposite end of the bus from the normal main. In this way, no configuration of branch circuit or feeder loads could draw more than the current the busbars were designed to carry. In addition, the panel must be marked with a warning label advising against repositioning this breaker. There is, however, still a 20 percent limitation on the size of the interconnecting breaker. This is because, although the busbars could not be overloaded, the panel would still be delivering more power than the conditions under which it was tested. The 20 percent is a reasonable limit until more testing is carried out.

Note that the interconnecting breaker must be suitable for backfeeding. Most breakers are tested in both directions. The ones that are not are marked "line" and "load" and if so marked they can only be used in the direction indicated. In this example, a 5-kW inverter operating on a continuous basis on a 240-V system would calculate as a $(5000 \text{ kW}/240 \text{ V}) \times 1.25 = 26\text{-A}$ load for termination purposes, and a 30-A circuit breaker would be used. Note that this would be OK for a 150-A or larger panel, but too large for a smaller panel.

This page intentionally left blank

DIVISION 10

ELECTRIC LIGHTING

Principles and Units	10.1
Electric-Light Sources	10.23
Incandescent (Filament) Lamps	10.24
Fluorescent Lamps	10.38
High-Intensity-Discharge Lamps	10.59
Light-Emitting Diodes (LEDs)	10.75
Neon Lamps	10.75
Ultraviolet-Light Sources	10.82
Infrared Heating Lamps	10.85
Luminaires	10.86
Principles of Lighting-Installation Design	10.106
Tables for Interior Illumination Design	10.124
Interior-Lighting Suggestions	10.144
Heat with Light for Building Spaces	10.148
Street Lighting	10.151
Floodlighting	10.155

PRINCIPLES AND UNITS

1. Explanation of light. For the principal purposes of illumination design, light (*Standard Handbook for Electrical Engineers*) is defined as visually evaluated radiant energy. The visible energy radiated by light source is found in a narrow band in the electromagnetic spectrum, approximately from 380 to 770 nanometers (nm). Figure 10.1 shows the complete radiant-energy spectrum of electromagnetic waves, which travel through space at the velocity of approximately 3.0×10^8 m/s (186,000 mi/s). The longer waves are the ones used in radio communications; the shortest ones are the x-rays and cosmic rays. An enlarged section of the visible light portion of the spectrum is shown in the figure.

The effect of light upon the eye gives us the sensation of sight. The impression of color depends upon the wavelength of the light falling upon the eye. There are three primary colors of light: red, green, and violet. Violet light has the shortest wavelength of the radiant energy to which the eye is sensitive, red the longest, and green an intermediate wavelength between those of violet and red. These three colors are called the primary colors, because light of any one of them cannot be produced by combining light of any other colors. Light of any other color than these three can be produced by combining in the proper proportions light of two or all three of the primary colors.

By extension, the art and science of illumination also include the applications of ultraviolet and infrared radiation. The principles of measurement, methods of control, and fundamentals of lighting system and equipment design in these fields are closely parallel to those long established in lighting practice.

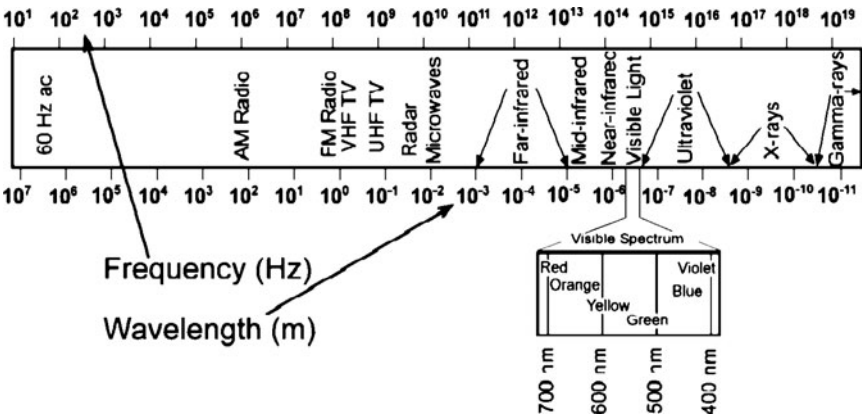


FIGURE 10.1 The electromagnetic spectrum.

2. Propagation of light. Rays of light travel in straight lines unless interfered by some medium that absorbs or deflects them. Whenever a light wave strikes a different medium from that through which it has been passing, there are three fundamental phenomena that may occur: absorption, reflection, or refraction. Whenever light waves strike any object, a portion of their energy is absorbed, the amount depending upon the nature of the substance. This absorbed energy is dissipated in the form of heat. The remaining portion of the light may be all transmitted through the substance, all reflected back from the surface, or part transmitted and part reflected, depending upon the nature of the substance and the angle at which the light impinges upon the surface of the object. If the light strikes the object perpendicularly to the surface, it is either transmitted in a straight line through the substance or reflected back from its surface in the same direction in which it impinged upon the surface. If light strikes an object at an angle other than 90° to its surface, then either the light is transmitted through the object but in an altered direction (refraction) or the light is reflected back from the object but in a different direction from that in which it impinged upon the object (reflection). With most objects all three of the phenomena occur, some of the light impinging upon them being absorbed, some transmitted through (refracted), and some reflected back from the surface.

3. Absorption. Although some of the energy of a ray of light is always absorbed whenever a light ray impinges upon an object, the amount absorbed varies over wide limits, depending upon the nature of the object, the molecular construction, the wavelength or color of the incident light, and the angle at which the light strikes the surface. All objects do not absorb light of different wavelengths in the same proportion. It is this phenomenon which accounts for the characteristic color of objects (see Sec. 13). Since objects do not absorb the same proportion of the incident light of different colors, the amount of light absorbed by an object depends upon the color or wavelength of the light impinging upon the object. Tables 4 and 12 give the percentage of incident white light that is absorbed by various types of surfaces.

4. Coefficients (Percent) of Absorption of Lighting Materials

Material	Absorption, percent
Clear glass globes	5–12
Light sandblasted globes	10–20
Alabaster globes	10–20
Canary-colored globes	15–20
Light-blue alabaster globes	15–25
Heavy blue alabaster globes	15–30
Ribbed glass globes	15–30
Clear plastic globes	20–40
Opaline glass globes	15–40
Ground-glass globes	20–30
Medium opalescent globes	25–40
Amber glass	40–60
Heavy opalescent globes	30–60
Flame-glass globes	30–60
Enameled glass	60–70
White diffuse plastic	65–90
Signal-green globes	80–90
Ruby-glass globes	85–90
Cobalt-blue globes	90–95

5. Absorptance. (*Standard Handbook for Electrical Engineers*) given the alpha symbol “ α ” in engineering work, is the ratio of the flux absorbed by a medium to the incident flux. Transmittance, given the tau symbol “ τ ” in engineering work, is the ratio of the transmitted flux to the incident flux. Measured values of transmittance depend upon the angle of incidence, the method of measurement of the transmitted flux, and the spectral character of the incident flux. Because of this dependence, complete information of the technique and conditions of measurement should be specified. The sum of reflectance (Sec. 8), transmittance, and absorptance is one.

6. Reflection of light. (Fig. 10.2) is the redirecting of light rays by a reflecting surface. Whenever light energy strikes an opaque object or surface, part is absorbed by the surface and part is reflected. Light-colored surfaces reflect (Table 9) a larger part of the light thrown on them than do dark-colored surfaces, whereas dark surfaces absorb a larger part of the light and black surfaces absorb nearly all the light which reaches them.

NOTE Consider first a smooth surface AB (Fig. 10.2, I), on which a ray of light L falls. This ray will be so reflected in the direction R that the angle i is exactly equal to the angle r .

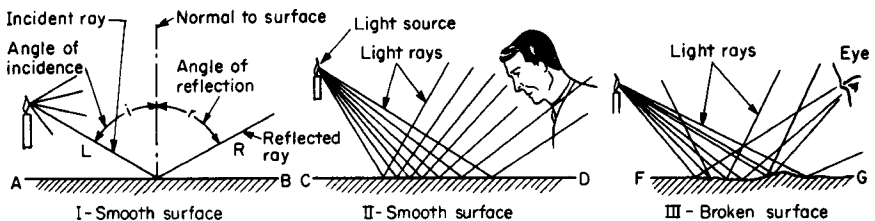


FIGURE 10.2 The reflection of light. Note that the angle of incidence i always equals the angle of reflection r .

Consider now the effect of a number of rays falling on a smooth surface CD (Fig. 10.2, II). Each ray will be reflected in such a way that it leaves the surface at the same angle at which it strikes. The eye if held as shown would perceive only the light reflected into it. Consider now a broken surface such as FG (Fig. 10.2, III). Each ray of light is reflected from that portion of the surface on which it falls, just as though that point were on a smooth surface. The result is that the light is scattered, and if the surface is irregular enough, the eye placed at any point will receive reflections from many points of the surface. All opaque surfaces except polished surfaces have innumerable minute irregularities like the surface in Fig. 10.2, III. This alone enables them to be seen.

7. The different kinds of reflection will now be considered. *Regular reflection* is that (Fig. 10.3A, I, and 10.3B, I) in which the angle of incidence i is equal to the angle of reflection r . This kind of reflection is obtained from mirrored glass, prismatic glass, and polished metal surfaces. *Spread reflection* (Fig. 10.3A, II, and 10.3B, II) is that in which the maximum intensity of the reflected light follows the law of regular reflection, except that a part of the light is scattered slightly out of this line. Spread reflection is obtained from etched prismatic glass and from rough metallic surfaces. *Diffuse reflection* (Fig. 10.3A, III) is that in which the maximum intensity of the reflected light is normal to the reflecting surface. This holds over a large range of the angle of incidence. This kind of reflection is usually caused by reflection from particles beneath the surface (see Fig. 10.3B, III). Diffuse reflection may be obtained from opal glass, porcelain enamel, paint enamel, and paint finishes commonly used for interior decoration of walls and ceilings.

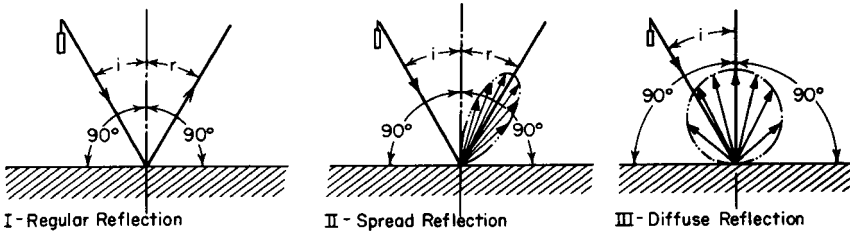


FIGURE 10.3A Classifications of reflection.

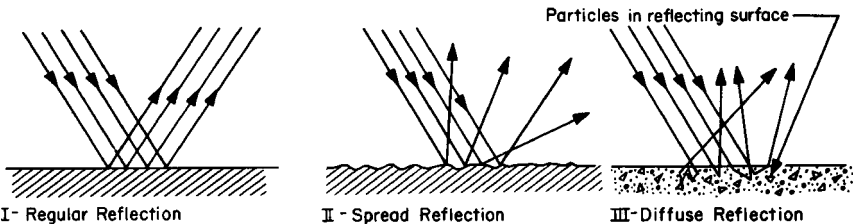


FIGURE 10.3B Magnified view of Fig. 10.3A.

8. Reflecting power of surfaces. (*Standard Handbook for Electrical Engineers*) Different surfaces reflect different percentages of the light falling upon them. Reflectance, given the rho symbol " ρ " in engineering work, is the ratio of reflected flux to incident flux. Measured values of reflectance depend upon the angles of incidence and view, and on the spectral character of the incident flux. Because of the dependence, the angles of incidence


and view and this spectral characteristics of the source should be specified. The illumination of a small room having poorly reflecting walls may sometimes be improved by changing the wall coverings. If the room is large or if reflectors are used to throw the light downward so that not much light reaches the walls, a change in the wall covering will have little effect on the general illumination.

9. The following table of reflection coefficients is useful in showing the relative value of wall coverings in rooms.

Material	Reflection, %
Highly polished silver	92
White plaster	90
White paint	75-90
Optical mirrors silvered on surface	75-85
Highly polished brass	70-75
Highly polished copper	60-70
Highly polished steel	60
Speculum metal	60-80
Limestone	35-65
Brushed aluminum	55
Polished gold	50-55
Burnished copper	40-50
White paper	80
Porcelain enamel	70-80
Polished aluminum	67
Chrome-yellow paper	62
Yellow paper	40
Light-pink paper	36
Blue paper	25
Dark-brown paper	13
Vermilion paper	12
Blue-green paper	12
Cobalt blue	12
Glossy black paper	5
Deep chocolate paper	4
Black cloth	1.2

10. Refraction. Whenever a light ray passes from one medium into another of greater or less density, the direction of the ray is altered. This is called refraction. Refraction may be one of three types: regular, irregular or spread, or diffuse, depending upon the nature of the construction of the substance and the character of its surfaces.

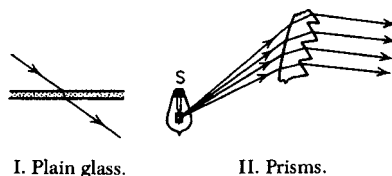Regular refraction occurs with plain glass or glass prisms, as shown in Fig. 10.4. Light in passing through a substance goes through two refractions, one upon entering the substance and one upon leaving the substance. If the surfaces of the object are parallel, as in a piece of glass (Fig. 10.4, I), the direction of the light leaving the object is parallel to the direction of the light impinging upon the object. If the



I. Plain glass.

II. Prisms.

FIGURE 10.4 Regular refraction.

surfaces of the object are not parallel, as in the prism of Fig. 10.4, II, the light leaving the object will not be in a direction parallel to the incident light. A prism can be constructed to refract the light from its different surfaces so that light is not transmitted through the prism but is reflected back as shown in Fig. 10.5.

Irregular, or spread, refraction occurs with light transmitted through glass with a rough surface such as etched or frosted glass, as shown in Fig. 10.6. Such a surface can be considered as consisting of a great number of very small smooth surfaces making slight angles with each other. The individual rays of light being emitted from such a surface are refracted at slightly different angles but all in the same general direction. Thus the light transmitted through a substance with such a surface is refracted in the same general direction but with the beam spread somewhat from what would be for regular refraction.

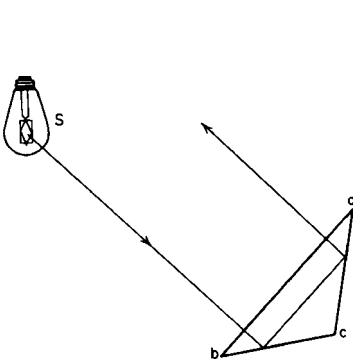


FIGURE 10.5 Total reflection with prism. [General Electric Co.]

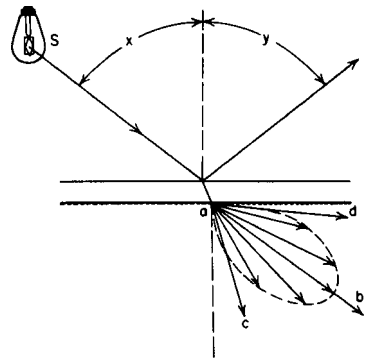


FIGURE 10.6 Spread refraction with etched glass. [General Electric Co.]

The composition of opal glass is such that it contains a number of minute opaque particles throughout its structure. Light striking such an object travels through the glass until it strikes one of these opaque particles, from which it is either reflected back or transmitted through the glass to the other surface. The total beam of light striking the object is thus split up by the innumerable small opaque particles, part being reflected back in all directions, and part being refracted through the glass in all directions. The portion that is transmitted (refracted) through the glass is *diffusely refracted*. An idea of how diffuse refraction takes place can be gained from Fig. 10.7. In Fig. 10.8 the diffuse reflection and refraction of a ray of light impinging upon a piece of opal glass are indicated.

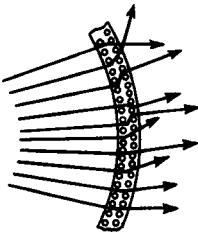


FIGURE 10.7 Diffuse refraction.

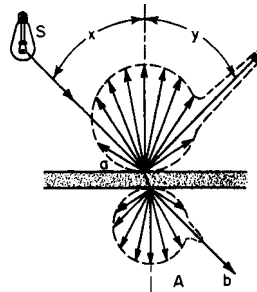


FIGURE 10.8 Diffuse reflection and refraction with opal glass. [General Electric Co.]

11. Most Frequently Used Lighting Units, Abbreviations, and Symbols and the Corresponding Hydraulic Analogies

Photometric quantity	Name of unit	Abbreviation	Symbol	Hydraulic analogy
Luminous flux	lumen	lm	<i>F</i>	gal/min
Luminous intensity	candela	cd	<i>I</i>	pressure, lbf/in ²
Illuminance	footcandle	fc	<i>E</i>	incident gal/(ft ² ·min)
Luminance	lambert	lambert	<i>L</i>	issuing gal/(ft ² ·min)

12. Refraction, Transmission, and Absorption Characteristics of Materials (General Electric Co.)

Material	Light reflected			Light transmitted			Light absorbed
	In concentrated beam	In spread beam	Diffused in all directions	In concentrated beam	In spread beam	Diffused in all directions	
Crystal glass:							
Clear	8–10 ^a	80–85	5–10
Frosted or pebbled ^b	4–5	5–10	70–85	5–15
Frosted or pebbled ^c	8–12	72–87	5–15
White glass:							
Very light density ^b	4–5 ^a	10–20	5–20	50–55	8–12
Very light density ^c	3–4	10–20	5–20	50–55	10–15
Heavy density	4–5 ^a	40–70	10–45	10–20
Mirrored glass	82–88	12–18
Polished metal:							
Silver	92	8
Chromium	65	35
Aluminum	62	38
Alsak aluminum	75–85	70–80	15–30
Nickel	55	45
Tin	63	37
Steel	60	40
Porcelain enamel steel	4–5 ^a	60–70	25–35
Mat-finished metal:							
Aluminum	62	38
White oxidised aluminum	70–75	25–30
Aluminum paint	60–65	35–40
Mat surfaces:							
White plaster	90–95	5–10
White blotting paper	80–85	15–20
White paper (calendered)	4–5 ^a	75–80	15–20
White paint (dull)	75–80	20–25
White paint (semimat)	2–4	70–75	20–25
White paint (gloss)	4–5 ^a	70–75	20–25
Black paint (gloss)	4–5 ^a	3–5	85–92
Black paint (dull)	3–5	95–97
Magnesium carbonate	98–99	1–2
Plastic:							
Clear	60–80	40–20
White diffuse	5–35	65–95

^aFor angles up to 45°; for angles greater than 45°, this value rises considerably; angle of incidence as X, Fig. 10.6.
^bSmooth side toward light source.
^cRoughed on side toward light source.

13. Color of objects. Our impression of the color of objects is due to the color of the light that the object reflects or transmits to our eyes. In Sec. 2 it was stated that all objects absorb a certain portion of the light that falls upon them but that all objects do not absorb the same proportion of light of the different wavelengths. It is through this different absorption that different objects have unlike colors. If all objects absorbed light in exactly the same manner, all objects would appear to have the same color. In order that things may appear in their true colors, they must be observed under white light, that is, light containing all three primary colors in the right proportion. An article which absorbs no light or which absorbs light of the three primary colors in the same proportion as they are combined to produce white light will transmit from its surface light in a condition unchanged from that in which the light fell upon the object. Such an object would appear white in color. An object which absorbs all or nearly all the light which falls upon it will have no color or, in other words, will be black. An object which absorbs all the green and violet rays will be red in color, since it will transmit to our eyes only red light. In order that an object may appear in its true color, the light falling upon it must contain light of the wavelength that the object reflects or transmits. Thus, light falling upon a red object must contain red light if the object is to appear in its true color. A red object viewed under a light which contains only green and violet rays will appear black, since the object is capable of reflecting only red rays.

14. Light-source color. The color of light sources has two basic characteristics: *chromaticity* and *color rendering*. Chromaticity, or color temperature, defines its “whiteness,” its blueness or yellowness, its warmth or coolness. It does not describe how colors will appear when lighted by the source. Chromaticity (color temperature) is a term sometimes used to describe the color of the light from a source by comparing it with the color of a *blackbody*, a theoretical *complete radiator* which absorbs all radiation that falls on it and in turn radiates a maximum amount of energy in all parts of the spectrum. A blackbody, like any other incandescent body, changes color as its temperature is raised. The light from a warm white fluorescent lamp is similar in color to the light from a blackbody at a temperature of approximately 3000 K,* and the lamp is accordingly said to have a color temperature of 3000 K. The light from a cool white fluorescent lamp is bluer, and the blackbody must be raised to 4200 K to match it. Hence the cool white lamp has a color temperature of 4200 K. A daylight fluorescent lamp has a color temperature of 6200 K.

Color temperature is not a measure of the *actual temperature* of an object. It defines *color only*. Some light sources, such as a sodium-vapor lamp or a green or pink fluorescent lamp, will not match the color of a blackbody at any temperature, and therefore no color temperatures can be assigned to them.

*Kelvin is a temperature scale which has its zero point at -273°C .

Color Temperatures, K

(Approximate values)

Blue sky	10,000–30,000
Overcast sky	7000
Noon sunlight	5250
Fluorescent lamps	
Daylight	6200
Cool white	4200
White	3500
Warm white	3000
Clear mercury lamps	5700
Deluxe mercury lamps	3900
Clear metal halide lamps	4100
High-pressure sodium lamps	2100
General-service incandescent lamps	2500–3050
Candle flame	1800

The other characteristic, the color-rendering index (CRI), attempts to describe how colors will appear when illuminated by a light source of specified chromaticity. The CRI rating system is an international system that mathematically compares how a light source causes eight selected colors to appear compared with a reference source. However, there are limitations to its use which should be recognized. Although the system provides for ratings up to 100, it can only be used to compare sources of approximately the same chromaticity. Comparison of the CRI of light sources with widely different color temperatures such as a cool light source and a warm light source can be misleading. Light sources with the same CRI may render some colors differently, and light sources with CRIs as much as 5 points different may cause colors to look the same. Owing to their spectral distribution, HID sources may actually look better than their CRIs would indicate.

The CRI system is the best presently available to describe the relative appearance of colors under different sources, and it can be useful when applied within the limits of the system.

15. Luminous flux (which, as is explained later, is measured in lumens) is a flow of light, that is, light energy or light waves. Luminous flux always originates from some source of light, such as the sun, a candle, or an incandescent lamp. But luminous flux can be redirected by reflecting surfaces. The luminous flux which emanates directly or is reflected from objects to the human eye is the medium whereby the objects are seen. Although there is no actual flow of anything material in a flux of light, there is a flow of light waves. The formal definition (*Standard Handbook for Electrical Engineers*) is that luminous flux φ is the integrated product of the energy per unit wavelength emitted by the source $P(\lambda)$, referred to as the source's spectral power distribution, and the spectral luminous efficacy $V(\lambda)$ as follows:

$$\varphi = 683 \int_{\lambda=360}^{800} P(\lambda)V(\lambda)d\lambda$$

From this it can be seen that the maximum possible output of a light source is 683 lm/W.

16. A true point source of light is a luminous mathematical point which emits luminous flux uniformly in all directions. It is a theoretical concept which cannot actually exist. It is, however, used (and is necessary) for the development of the quantities and units employed in lighting computations.

NOTE An actual light source may be considered a point source without prohibitive error if the distance between the source and the location at which the source is viewed or examined is at least 10 times the greatest dimension of the source.

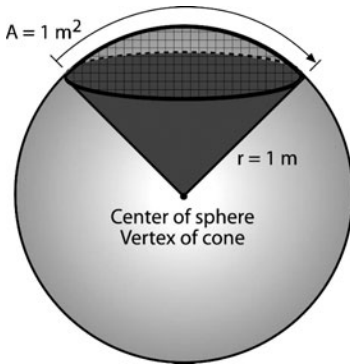


FIGURE 10.9 A steradian illustrated. It is, in effect, the flare angle of a cone that, when striking the surface of a sphere at any distance, cuts off an area (shown cross-hatched in the figure) equal to the square of the distance. In the case of a projected beam of light, the number of steradians equals the projected area divided by the distance squared. A steradian covers about one-twelfth of the area of the entire sphere.

17. The luminous intensity (candlepower) of a given source of light in a certain specified direction is a measure of the ability of the source to project light in that direction. Luminous intensity is measured in a unit which is called the candela, formerly the candle. Fig. 10.9 (*Practical Electrical Wiring*, 20th edition, © Park Publishing, 2008, all rights reserved) illustrates the term “steradian” which is necessary to the definition of this and other fundamental lighting terms. If a light source emits 1 lumen of light, and that light is directed within 1 steradian of solid angle, that light source has a luminous intensity of 1 candlepower.

NOTE The luminous intensity of actual light sources is generally greater in certain directions than in others. Thus, in Fig. 10.10, the luminous intensity of the lamp is greatest in the horizontal direction.

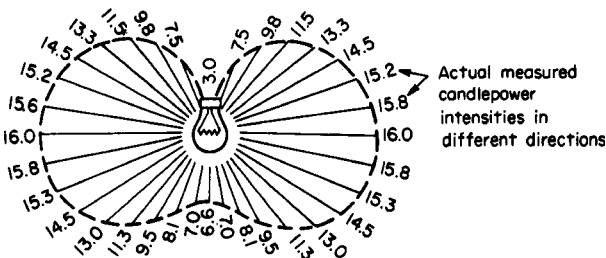


FIGURE 10.10 Luminous intensities in different directions around an incandescent lamp.

18. The candela (cd) was formerly defined as the luminous intensity or light-producing power in the horizontal direction of a standard lamp which is made and used in accordance with U.S. Bureau of Standards specifications.

NOTE The luminous intensity of an ordinary sperm candle (Fig. 10.11) in the horizontal direction is about 1 candle (cd). Thus was derived the name of the unit, candela.

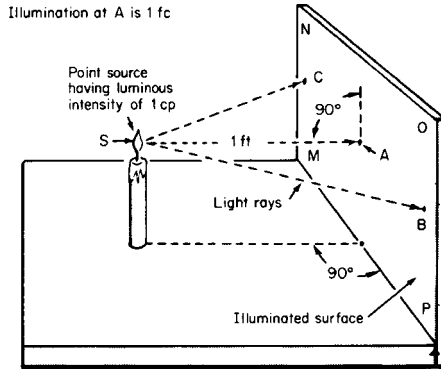


FIGURE 10.11 An intensity of illumination of 1 fc (10.76 lx).

19. The true luminous intensity or candlepower of a light source can be obtained only when the source is a true point source (Sec. 16). But a true point source does not exist. It is merely a mathematical concept. Now, the luminous intensity of an actual light source, in a certain direction (Fig. 10.12), is due to the combined effects of a number of point sources in the surface of the actual light source. Hence, the luminous intensity of an actual light source, in a given direction, as determined with a photometer (Sec. 27), is not the true candlepower (luminous intensity) but is the apparent luminous intensity (apparent candlepower) in that direction.

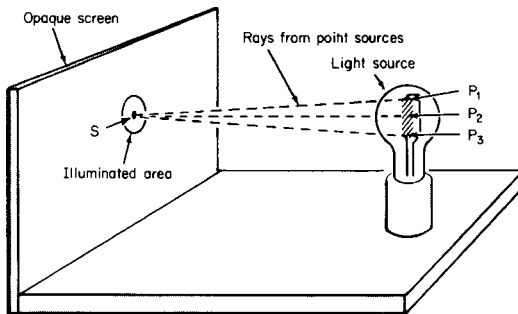


FIGURE 10.12 The illumination at point S is due to the combined effects of an infinite number of point sources P_1, P_2, P_3 , etc.

20. Illuminance is measured in footcandles (fc) or lux (lx). The footcandle is defined as that illumination which is produced (Fig. 10.11) by a 1-cd point source (or its equivalent) on a surface which is exactly 1 ft (0.3048 m) distant from the point source. The lux is the illumination produced by a 1 cd point source at a distance of 1.0 m from the source.

EXPLANATION If, in Fig. 10.11, the light source S is assumed to be a point source of luminous flux, then the illumination at point A , which is exactly 1 ft from S , is (by definition) 1 fc. Since the illuminated surface $MNOP$ is a plane, point A is the only point on the surface which has an illumination of 1 fc. The illumination at any other point on the surface, such as B or C , is less than 1 fc because it is farther away from S than is A . If, however, the

sphere of Fig. 10.9 has an internal radius of 1 ft and the true point source (Sec. 16) has a luminous intensity of 1 cd, then every point on the interior surface of the sphere will have an illumination of 1 fc (10.76 lx).

21. Illuminance is really the density of the luminous flux which impinges on the surface of an illuminated object. The average density of anything on a surface may be numerically represented by the number of things on the whole surface divided by the number of unit areas in the surface. Thus, as will be further explained in Sec. 25, if the luminous flux, in lumens, which impinges on a surface, is divided by the area of that surface in square feet, the average illumination over the surface will be the result.

22. Luminous flux is measured in lumens (lm). A lumen is defined as that quantity of incident luminous flux which will, when uniformly distributed over a surface having an area of 1 ft² (0.0929 m²), produce an illumination of 1 fc on every point of the surface. It will also illuminate a surface of 1 m² to a level of 1 lux.

NOTE When luminous flux impinges nonuniformly on a surface, then a lumen is the quantity of luminous flux which will, on a 1-ft² area of the surface, produce an average illumination of 1 fc.

23. A point source of light of 1-cd luminous intensity emits 12.57 lm. It has been shown (Sec. 20 and Fig. 10.9) that a 1-cd point source of light located at the center of a hollow sphere of 1-ft radius will produce an illumination of 1 fc on every point of the interior surface of the sphere. Now the superficial area of a sphere = $4\pi r^2 = 4 \times 3.1416 \times r^2$. Hence, this 1-ft-radius sphere will have an area of

$$4 \times 3.1416 \times 1 \times 1 = 12.57 \text{ ft}^2$$

Since every point on the surface of this sphere has an illumination of 1 fc, there must, to satisfy the definition of the lumen (Sec. 22), be as many lumens emitted by the 1-cd point source as there are square feet in the surface of the sphere. The sphere has an area of 12.57 ft². Therefore every 1-cd point source of light emits 12.57 lm.

24. To obtain the output of a light source in lumens when its mean spherical candlepower is known, substitute in the following formula. This formula is strictly accurate only for a true point source (Sec. 16) of light, but it gives results sufficiently accurate for all practical purposes if the mean spherical candlepower (Sec. 29) is substituted for I .

$$F = 12.57 \times I \text{ lm} \quad (2)$$

where F = total luminous flux emitted by the light source, in lumens, and I = luminous intensity or candlepower of a point source, in candelas, or, with sufficient accuracy for most practical purposes, the mean spherical candlepower of an actual light source.

EXAMPLE The mean spherical candlepower of a light source is 68.8. What quantity of luminous flux is emitted in lumens?

SOLUTION By For. (2), luminous flux $F = 12.57 \times I = 12.57 \times 68.8 = 865 \text{ lm}$.

25. Illuminance in footcandles is really lumens per square foot. From the definition of the lumen in Sec. 22, 1 lm of flux spread out over an area of 1 ft^2 produces 1 fc average illuminance over that surface; 2 lm would produce 2 fc, etc.

Similarly, 10 lm spread out over an area of 5 ft^2 would produce an average illuminance of $10 \div 5 = 2 \text{ fc}$. Likewise, 1 lm spread out over an area of 2 ft^2 would produce an illuminance of $1 \div 2 = 0.5 \text{ fc}$. Thus, it is evident that $\text{lumens} \div \text{ft}^2 \text{ area} = \text{average footcandles illuminance}$.

EXAMPLE A room which has an area of 600 ft^2 has 3300 lm of luminous flux impinging on the working plane. What is the average illuminance, in footcandles, on the working plane?

SOLUTION By the equation given above, average footcandles illumination = $\text{lumens} \div \text{ft}^2 \text{ area} = 3300 \div 600 = 5.5 \text{ fc}$.

26. The illuminance, in footcandles, which from a light source impinges on a surface, varies inversely as the square of the distance from the source. This is true absolutely for a true point source (Sec. 16). It is approximately true if the distance is at least 10 times the largest dimension of the light source.

EXPLANATION Assume (Fig. 10.13) that the 1-cd point source P is placed at the center of a hollow spherical shell which has an internal radius D of 1 ft. Then, a section A of the shell, having an area of 1 ft^2 , will have on its inner surface an illumination of 1 fc. This follows from the preceding discussions. Furthermore, from the definition of the lumen (Sec. 22), just 1 lm of flux is lighting this surface. Now, if the 1-ft-radius sphere is removed and the 1-cd source be placed at the center of a 2-ft-radius sphere, i.e., one of double the radius, then the same luminous flux will be spread out over an area B of 4 ft^2 . (This follows because of the geometric fact that similar areas vary directly as the square of similar dimensions.) The illumination on B will be $1 \text{ lm} \div 4 \text{ ft}^2 = 0.25 \text{ fc}$. Thus by doubling the distance from the source, the illumination has been quartered. Similarly, it can be shown for C that with the distance D increased 3 times the illumination provided by 1 lm of flux is one-ninth of what it was with the distance of 1 ft. Thus, illumination varies inversely as the square of the distance from the source.

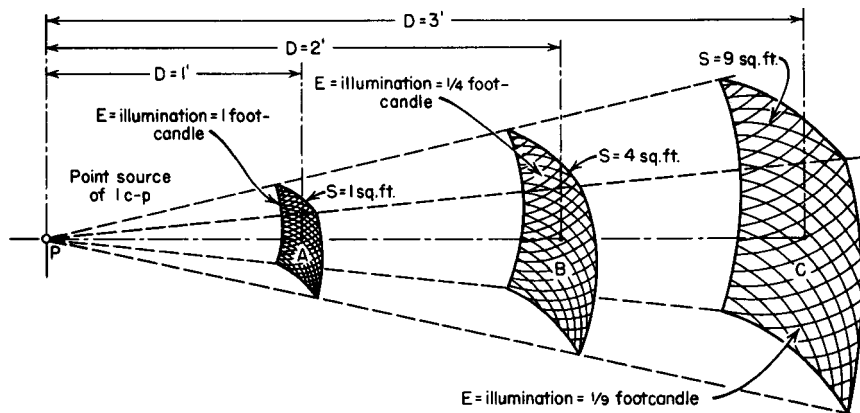


FIGURE 10.13 The inverse-square law.

27. The photometer is an instrument which is used for determining the luminous intensity of a light source. Any determination made with a photometer gives apparent candlepower. However (Sec. 26), if the location at which the intensity is measured is at a sufficient distance from the source, then the source may for all practical purposes be considered a point source, and the value obtained for the unknown candlepower will be accurate well within the limits of error of experimental observation.

Photometric measurements are obtained from visual comparison of an unknown light source compared with a known source or with direct-reading photoelectric instruments which have been calibrated from a known source. The latter method is the most widely used today in the measurement of lamps and lighting fixtures.

28. Mean horizontal candlepower is the average of the candlepowers of a lamp in all directions in a horizontal plane. This term is now applied only to special lamps for laboratory test work.

29. Mean spherical candlepower is the average of the candlepowers of a lamp in all directions. It is measured by putting the lamp in the center of a sphere photometer (Fig. 10.14). The sphere has a small window of milk glass which is shielded from the direct rays of the lamp by a small opaque screen. The inner surface of the sphere is painted flat white for good reflection of the light. The candlepower of the window is compared with the horizontal candlepower of a standard lamp. This candlepower must be multiplied by a constant for the particular sphere to take account of the loss of light absorbed on the inner surface of the sphere and in the glass window. The mean spherical candlepower is used principally with the equation of Sec. 24 to obtain the lumen output in which the lamp is rated.

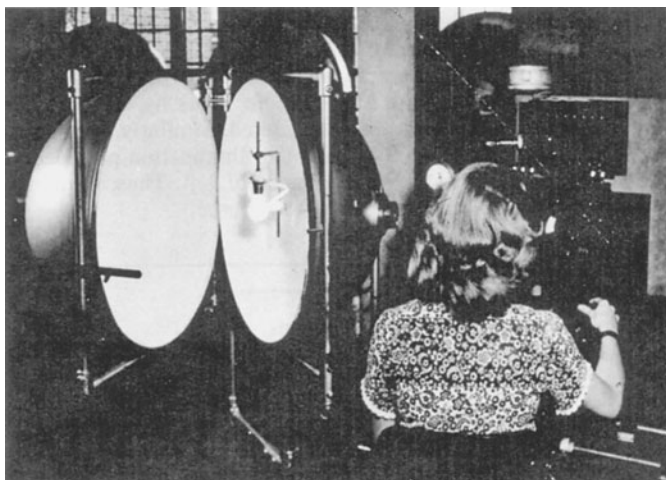


FIGURE 10.14 Sphere photometer. [General Electric Co.]

30. The luminous efficacy (also referred to as efficiency) of an electric-light source is stated in *lumens per watt*. This term is obtained by dividing the lumen output of the source by the watts input. It is (*Standard Handbook for Electrical Engineers*) the ratio

of the total luminous flux (lumens) to the total power input (watts). The maximum luminous efficacy of an ideal white source, defined as a radiator with constant output over the visible spectrum, is approximately 200 lm/W.

31. Candlepower distribution curves. Since the common light-giving sources either alone or in conjunction with the reflecting equipment used with them do not have the same light-giving power or candlepower in all directions, photometric graphs are employed to indicate the candlepower of the source in all directions. Curves giving this information for a light source are called candlepower distribution curves or simply distribution curves. These curves are obtained from a photometer which measures the luminous intensity of a light source in all directions (Fig. 10.15).



FIGURE 10.15 Mirror photometer used to measure the luminous intensity of a light source or luminaire in all directions. [General Electric Co.]

Many lamps or lamps with their reflectors have the same candlepower in all directions in any one horizontal plane. This fact enables the candlepower in any direction from such a source to be determined from a single distribution curve which gives the candlepowers in all directions in a vertical plane through the center of the light source.

32. How to read a photometric graph. In the photometric graph of Fig. 10.16, I, the candlepower directly downward is indicated by measuring it off on the vertical to a given scale. Thus, XA represents the candlepower directly below the light. Similarly, the distances XB , XC , XD , XE , XF , and XG represent to scale candle-powers around the light at angles above the vertical of 15, 30, 45, 60, 75, and 90°. Similarly, the candlepowers above 90° can be measured off to the given scale along lines at their respective angles. These points are then joined by a continuous line $GFED$, etc., and this line, completed for 360°, is called the *photometric distribution graph* of the light source. Figure 10.16, I, shows such a completed photometric curve, but in practice it is customary to use circular lines, as indicated on Fig. 10.16, II, to show the scale to which the candlepowers are

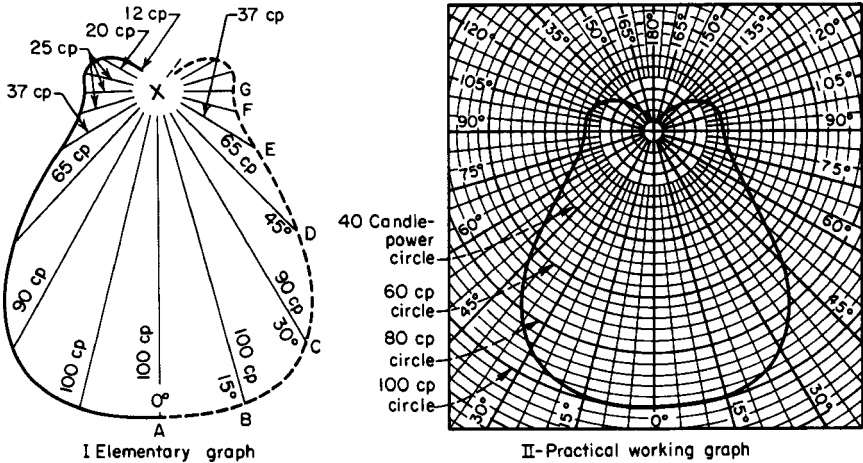


FIGURE 10.16 Photometric graphs.

plotted. The candlepower of the light unit can be measured at as few or as many angles as necessary, the accuracy of the resultant graph being largely determined by the number of angles taken.

33. The area of the distribution graph is not proportional to the amount of light given off. *B* (Fig. 10.78) represents a smaller total flux, by an amount equal to the absorption in the reflector, than does Graph *A*, though it has a larger area. Such a graph as *B* is useful for determining the intensity of light at any given angle and for determining the total luminous output, as explained in Sec. 34. These data may be required for any one of a number of practical operations.

34. The method of computing from its distribution graph the total flux, in lumens, emitted by a symmetrical light source is this: From the distribution graph of any light unit, as Fig. 10.16, take the candlepower at 5° and multiply it by the 0-10 factor as given in Table 36. This gives the lumens in the 0-10° zone. Similarly, to obtain the lumens in the 10-20° zone, take the candlepower at 15° and multiply it by the 10-20° factor as given in Table 36. The total lumen emitted in any large zone is obtained by adding the lumens of all the 10° zones contained in the large zone. If the sum total of the lumens is thus obtained for the 0-180° zone, the result is the total flux, in lumens, emitted by the source.

EXAMPLE What is the total flux emitted by a light source having a distribution graph as shown in Fig. 10.16?

SOLUTION

Degrees (1)	Candlepower (2)	Zone factor (3)	Lumens (4)
5	100	0.095	9.50
15	98	0.283	27.45
25	94	0.463	43.50
35	84	0.628	52.75
45	66	0.774	51.10
55	46	0.897	41.25
65	33	0.992	32.71
75	27	1.058	28.55
85	26	1.091	28.37
95	26	1.091	28.37
105	25	1.058	26.48
115	24	0.992	23.80
125	20	0.897	17.94
135	15	0.774	11.60
145	12	0.628	7.54
155	8	0.463	3.70
165	4	0.283	1.13
175	4	0.095	0.38
Total =			436.12

Total flux emitted = 436.12 lm.

Column 2 is obtained from the graph (Fig. 10.16). Column 3 is obtained from Table 36. Column 4 is obtained by multiplying the values in col. 2 by the corresponding values of col. 3.

NOTE The total flux in lumens emitted by a light source can be computed graphically as follows. On the candlepower distribution graph (Fig. 10.16) measure the horizontal distance between the vertical axis (0–180° line) and the point where the candlepower graph crosses the 5° line. Then lay off this distance on the candlepower scale to which the distribution graph is plotted. Multiply the value thus obtained by 1.1, and the result is the quantity of luminous flux, in lumens, emitted by the light source in the 0–10° zone. To determine the flux in any 10° zone, it is only necessary to measure the horizontal distance between the vertical axis and the point where the candlepower graph crosses the center of the 10° zone under consideration and then proceed as above. To obtain the total lumens emitted in any large zone lay off the horizontal distances between the vertical axis and the point where the candlepower graph cuts the center of each 10° zone contained within the large zone successively along the edge of a strip of paper. Then lay off the total length on the candlepower scale and multiply the result by 1.1.

For the determination of the lumen output of nonsymmetric or asymmetric luminaires, such as conventional fluorescent units, readings of candlepower must be taken in a number of planes. From these readings a weighted average candlepower is obtained for each zone.

For fluorescent lighting units, candlepower readings often are taken in five planes, at 0, 22½, 45, 67½, and 90° from a plane through the luminaire axis. Candlepower values are measured in each of these planes at 10° intervals (5, 15, 25°, etc.). If the candlepower readings in the five planes (0, 22½, 45, 67½, and 90°) for any one zone are designated, respectively, as *A*, *B*, *C*, *D*, and *E*, then their weighted average for that zone is obtained by the formula

$$cd = \frac{A + 2B + 2C + 2D + E}{8}$$

In some laboratories for similar tests, candlepower readings are taken in three planes only (0, 45, and 90°), as in Fig. 10.17. The candlepower values in *A* (crosswise) and *B* (lengthwise) plus twice the values in *C* (45°) are added. The sum divided by 4 equals the average candlepower.

Similarly, nonsymmetrical or asymmetric luminaires for filament lamps have such wide variations in candlepower at a given angle about the vertical that an average reading from which to compute zonal lumens cannot be obtained by rotating the unit. Candlepower distribution curves for such equipment are prepared from data obtained in specific planes, and in interpreting such curves one must be careful to observe the planes they represent (see Fig. 10.18).

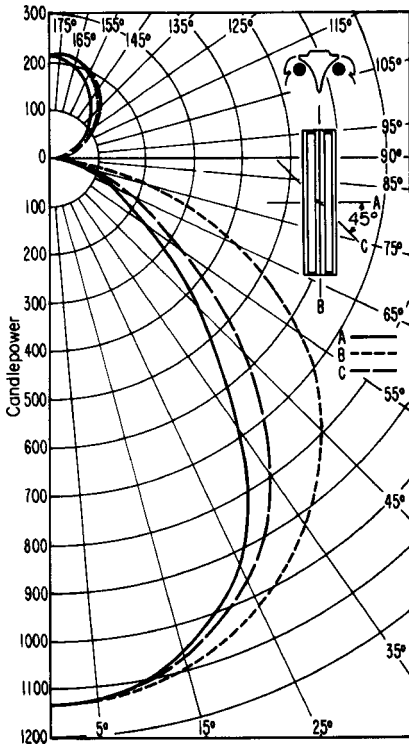


FIGURE 10.17 The average candlepower multiplied by the zone constant gives the zone lumens. Candlepower values at a given angle in curves *A* and *B* are added to twice the value in curve *C* at the same angle. This sum is divided by 4 to get the weighted average candlepower.

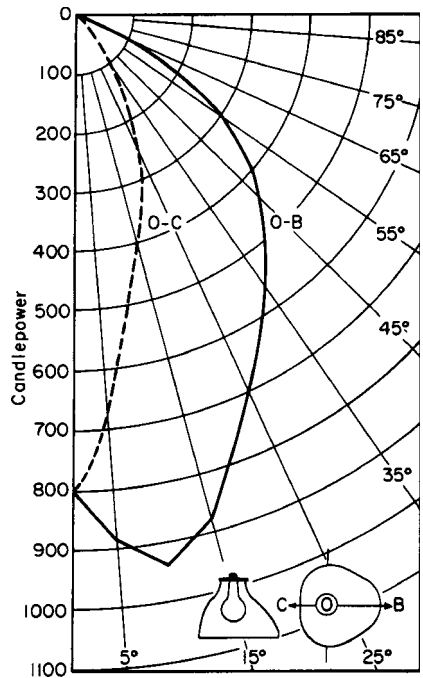


FIGURE 10.18 Candlepower distribution curves of nonsymmetrical sources such as show-window reflectors vary widely, and their interpretation depends on the specific planes in which they are taken.

35. The mean spherical candlepower (Sec. 29) of a light source can be determined (1) directly, by means of the sphere photometer (Sec. 29 and Fig. 10.14), and (2) indirectly, by computing the total lumens from the distribution graph, as explained in the preceding paragraph, and dividing the result by 12.57.

EXAMPLE What is the mean spherical candlepower of the light source of which the distribution graph is shown in Fig. 10.16?

SOLUTION By the example in Sec. 34, the total flux of the source = 436.12 lm. The mean spherical candlepower = $436.12 \div 12.57 = 34.6$.

36. Factors to obtain the lumens in the 10° zones around a light source. To obtain the lumens in any zone, multiply the candlepower at the center of the zone by the factor for that zone.

Degree zones		Factor
0–10	170–180	0.095
10–20	160–170	0.283
20–30	150–160	0.463
30–40	140–150	0.628
40–50	130–140	0.774
50–60	120–130	0.897
60–70	110–120	0.992
70–80	100–110	1.068
80–90	90–100	1.091

37. The footcandle meter (also called the light meter or luminance meter) is an instrument for measuring illumination directly in footcandles. It consists of one or two photovoltaic cells connected to a microammeter. When light falls on the photovoltaic cells, a voltage is generated as current flow through the meter approximately in proportion to the footcandle illumination on the cell. The small pocket type of footcandle meter is commonly referred to as a light meter (Fig. 10.19). It has a single photovoltaic cell and is calibrated in footcandles. The meter is placed with the window of the photovoltaic cell parallel to the plane in which it is desired to measure the illumination. Higher levels of illumination (such as those of daylight intensity) are measured via multiple scales on the same meter which are chosen through a selector switch.

Larger and more accurate meters (Fig. 10.20) have additional cells connected in parallel and utilize solid-state electronic circuits to amplify the output of the photovoltaic cells and maintain excellent accuracy through a wide range of footcandle levels.



FIGURE 10.19 The light meter. [General Electric Co.]



FIGURE 10.20 Light meter for more accurate readings. [Minolta Corporation]

Since the spectral response of photovoltaic cells is not the same as that of the human eye, it is necessary to incorporate filters into the light meter for the meter to read lighting levels properly under all different light sources. Another factor that requires correction within the meter is the proper measurement of light from various angles. If no correction is included, light at high incident angles will be reflected off the photovoltaic-cell surfaces with a resulting low reading of lighting level. Most footcandle meters today include a means of correcting the meter response to include light from all angles. This is referred to as *cosine correction*.

38. Glare (Fig. 10.21) is defined as any brightness within the field of vision of such a character as to cause discomfort, annoyance, interference with vision, or eye fatigue.

NOTE Glare may be subdivided into three different classes: (1) Direct glare (Fig. 10.21, II), which results when one looks directly at a brilliant light source. (2) Contrast glare, which is caused by brightness contrast. An example of this is the visual discomfort produced by a brilliant automobile headlight shining in the eyes on a dark night. The same headlight would cause no discomfort in the daytime. The annoyance experienced at night is due solely to the contrast between the bright headlight and the dark surroundings. (3) Reflected glare (Fig. 10.21, I), which is produced by light being reflected directly into the eyes from a polished, a white, or a light-colored surface. Glass desk plates, highly polished furniture, glazed paper, and mirrors may occasion reflected glare.

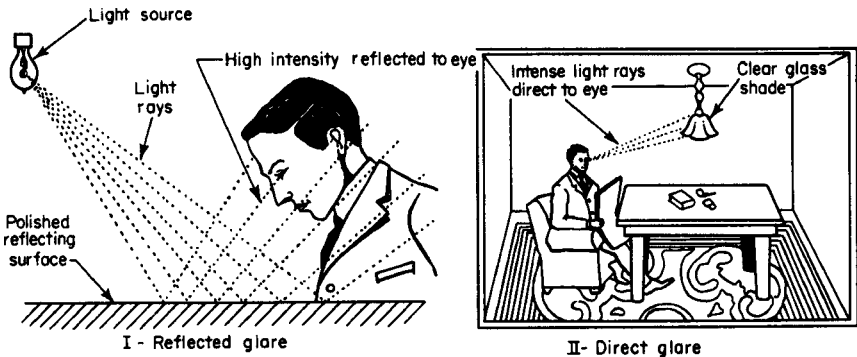


FIGURE 10.21 Methods of causing glare.

39. Brightness is the property of lighted objects which enables them to be seen by virtue of the light issuing from them. Technically, brightness is the density of luminous flux issuing or projected from a light source or from some illuminated surface.

NOTE The relation between brightness and illuminance: Illuminance is the density of the luminous flux impinging on an illuminated surface. Just as illuminance measures incident-luminous-flux density, so brightness measures issuing-luminous-flux density. It is due solely to the light issuing or reflected from things that we see. There might be great illumination (incident-luminous-flux density) on a dead-black object in a room with dead-black walls, and yet that object would be invisible, because the black would absorb (see Table 9) all the light which impinged on it and would reflect none to the eye.

40. The units of brightness are the *lambert*, the *millilambert*, the *footlambert*, and the *candela per unit of area*. The lambert (L) is by definition the brightness of a perfectly diffusing surface which radiates or reflects 1 lm/cm², while the millilambert (mL) is 0.001 of this value. The footlambert (fL) is the brightness of a surface which radiates or reflects 1 lm/ft². As its name implies, the candela per square inch is the brightness of a surface which radiates 1 cd/in². The lambert and the candela per square inch are commonly used for high brightness such as light sources, while the millilambert and the footlambert are used for designating ordinary illuminated surfaces.

41. The working equations for brightness computations are

$$b = 2.05 L \quad (3)$$

$$F = 6.45 SL \quad (4)$$

where b = brightness in candelas per square inch, L = brightness in lamberts, F = total luminous flux in lumens, and S = area of the surface in square inches.

EXAMPLE A light source has a brightness of 500 cd/in². What is its brightness expressed in lamberts?

SOLUTION By transposing terms in Formula (3) above:

$$L = \frac{b}{2.05} = \frac{500}{2.05} = 243.5 L$$

EXAMPLE An incandescent-lamp filament has a surface area of 0.4 in² and emits 1580 lm. What is its brightness in lamberts?

SOLUTION By transposing terms in Formula (4) above:

$$L = \frac{b}{6.45S} = \frac{1580}{6.45 \times 0.4} = 612 L$$

42. The relation between the illumination incident on and the brightness reflected from an illuminated surface can be understood from a consideration of the following facts. No surface, however smooth, is a perfect reflector, since some of the luminous flux impinging on the surface will be absorbed thereby. Therefore, when the surface brightness resulting from the reflection of the impinging light rays or illumination is computed, the coefficient of reflection (Table 9) of the material must be considered. The brightness equals the illumination times the coefficient of reflection.

$$mL = 1.076 \times E \times m = mL \quad (5)$$

where mL = average surface brightness over the surface under consideration in millilamberts; E = the incident illumination on the surface in footcandles; and m = the absolute coefficient of reflection (Table 9) of the surface material.

EXAMPLE A surface of white plaster has illumination of 5 fc. What is its brightness?

SOLUTION The coefficient of reflection of white plaster (Table 9) is 0.90. By Formula (5),

Brightness = $1.076 \times E \times m = 1.076 \times 5 \times 0.90 = 4.84 \text{ mL}$

43. Conversion Factors for Various Units of Brightness

Values in units in this column × conversion factor = values in units at top of column				
	Candelas/in ²	Lamberts	Millilamberts	Footlamberts
Candelas/in ²	1	0.487	487	452
Lamberts	2.054	1	1000	929
Millilambert	0.00205	0.001	1	0.929
Footlambert	0.00221	0.00108	1.076	1

44. The maximum brightness beyond which glare will result (see Sec. 38) from a lighting unit usually should not exceed from 1 to 1.56 (2 to 3 cd/in² of projected area) in the central portion of the visual field. Higher values of brightness will produce a sensation of glare. The value depends on the size of the source, the position in the line of vision, and the contrast between the source and its surrounding. If the eyes are not to be fatigued when the unit is viewed continually, the brightness should not exceed 0.25 L. It should be noted that the maximum permissible brightness is somewhat influenced by the darkness of the surroundings (see Sec. 38).

44A. Brightness of Light Sources

Source	Approximate lamberts
Incandescent lamp with opal globe	0.24–1.46
Incandescent lamp, inside-frosted globe	7–15
Fluorescent lamp, white and daylight	1.2–2.6
Fluorescent lamp, green	2.4–3.6
Fluorescent lamp, red	0.12–0.23
Fluorescent lamp, pink, blue, or gold	0.83–1.8
Candle flame	1.46–1.95
Acetylene-burner flame	29–50
Vacuum-incandescent-lamp filament	460–700
Gas-filled-incandescent-lamp filament	3,000–4,000
Neon tube, red	0.24
Neon-mercury tube, green or blue	0.05–0.1
Mercury arc (quartz tube)	290–490
Metal halide arc	1,100–1,700
High-pressure sodium arc	1,100–1,900
Sky	0.7–2.0
Sun, on horizon	1,000
Sun, 30° above horizon	243,000
Sun, at noon	450,000
Ceiling over indirect-lighting fixture	0.01–0.1
Walls when lighted by diffused daylight	0.001–0.05

45. Brightness (or luminance) is usually measured by portable meters which operate on the same basic principle as the footcandle meter. Brightness meters use a photoreceptor such as a photomultiplier tube or photovoltaic cell which creates an electrical signal in proportion to the brightness of an object or surface. Some form of optical system is designed into the meter to permit the operator to focus on the meter or the object or surface being measured. The electrical signal is sent through an amplification circuit to the meter, which may be either analog or digital. With proper calibration, a direct reading of brightness is obtained. A typical portable brightness meter is shown in Fig. 10.22.



FIGURE 10.22 Portable brightness meter. [Minolta Corporation]

46. Fiber optics is a relatively new optical technology that refers to optical systems consisting of thin cylindrical glass or plastic fibers with excellent optical properties. Light enters one end of a fiber and is transmitted along the fiber core to the other end by internal reflections off the clad or fiber wall (Fig. 10.23). Large quantities of fibers are placed together to form a bundle. Each fiber is insulated with a special glass coating to prevent light from transforming one fiber to another. The bundle has external tubing to protect the fibers, and the ends of the bundle are bonded and polished. Initial use of fiber optics was in medical applications to observe conditions inside the human body. The most significant application has been in optical communications where voice signals are encoded and transmitted at high speed over the fibers. Fiber-optic systems have two advantages over conventional cable transmission systems: they are free from cross talk, and they are unaffected by random electrical disturbances such as lightning. Refer to Div. 11 for detailed coverage of this topic.

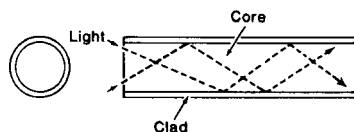


FIGURE 10.23 Light transmission through optical fibers.

In lighting applications, fiber optics are being used in some automobile models to monitor information on signal-light operation on the dashboard as well as in optical sensors in varying applications. They have also been used in signs and other advertising and decorative applications to create unique effects of colors and/or motion.

ELECTRIC-LIGHT SOURCES

47. Electric-light sources may be classified as follows:

A. Visible-light sources

1. Incandescent (filament)
2. Fluorescent
3. High-intensity-discharge (mercury, metal halide, and high-pressure sodium)
4. Other gaseous-discharge
 - a. Low-pressure sodium
 - b. Neon
 - c. Glow (argon and neon)

- B. Ultraviolet-light sources
 - 1. Sunlight lamps
 - 2. Black-light lamps
 - 3. Germ-killing lamps
 - 4. Photochemical lamps
- C. Infrared heating lamps

INCANDESCENT (FILAMENT) LAMPS

48. The incandescent lamp consists of a filament which is a highly refractory conductor mounted in a transparent or translucent glass bulb and provided with a suitable electrically connecting base. The filament is heated by the passage of an electric current through it to such a high temperature that it becomes incandescent and emits light. In incandescent lamps of the older types the air was, insofar as practicable, exhausted from the space within the bulb and surrounding the conductor (filament), forming a partial vacuum. But in many of the modern lamps this space is filled with an inert transparent gas such as nitrogen. The conductor must have a high melting point or a high vaporizing temperature and a high resistance; it must be hard and not become plastic when heated. In vacuum-type lamps the vacuum must be good, not only to prevent the oxidation of the filament but also to prevent the loss of heat, which would reduce the efficiency. In non-vacuum-type lamps (gas-filled lamps) the gas used must be inert so as not to combine chemically with the filament material. The bulb must be transparent or translucent to permit the passage of light, not porous, so that it will retain the vacuum or inert gas, and strong to withstand handling and use.

49. Classification of incandescent lamps. Incandescent lamps may be classified in six different ways, according to:

- 1. The class of lamp
- 2. The shape of the bulb
- 3. The finish of the bulb
- 4. The type of the base
- 5. The type of filament
- 6. The type of service

50. Class of lamp. Incandescent lamps are classified as Type B or Type C. The Type B lamp is one in which the filament operates in a vacuum. The type C lamp is one which is gas-filled. Gas-filled lamps are the most widely used types. The gas reduces the rate of sublimation of the heated filament. Inert gases such as nitrogen, argon, and krypton are in common use today, with krypton used where its increased cost is justified by increased efficacy or increased lamp life. For example, the 90-W krypton "energy-saving" lamp produces 4% less light, but one-third longer rated life compared with the standard 100-W lamp.

51. Classification according to shape of bulb (Fig. 10.24). The standard-line shape is employed for general-lighting-service lamps up to and including the 100-W size.

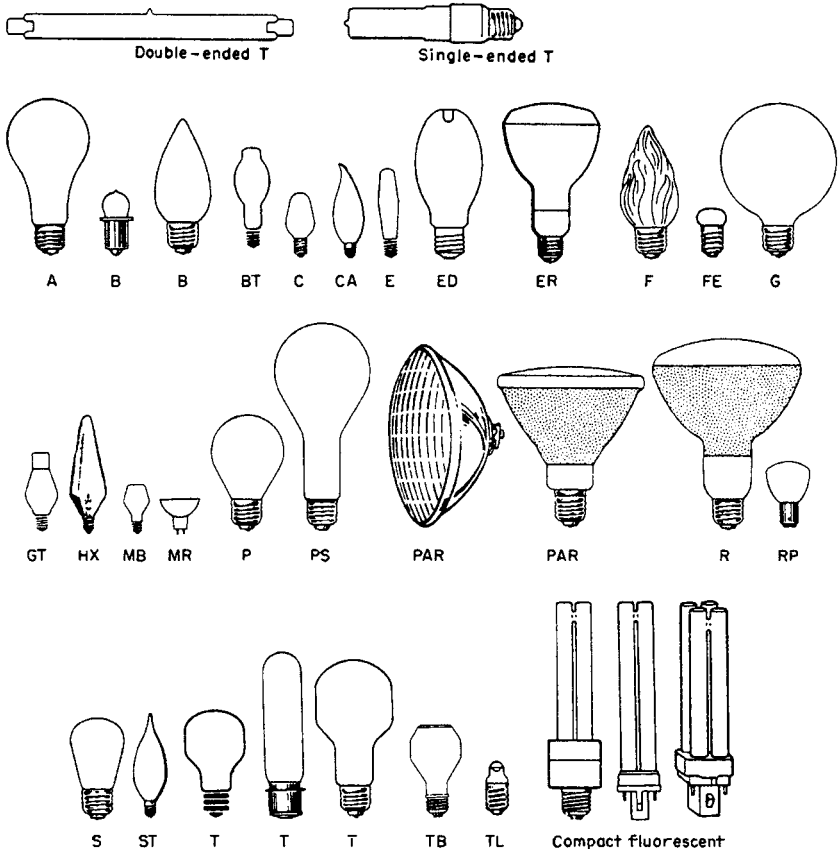


FIGURE 10.24 Typical bulb shapes and designations (not to scale). Most high-intensity discharge (HID) lamps are BT-, E-, ED-, PAR-, and R-shape bulbs.

Lamps of 150 W and larger for general lighting service are made in the pear shape. The other shapes are utilized for lamps designed for special classes of service. Lumiline lamps are included in the tubular classification.

Shape of bulb	Designating letter
Standard-line	A
Bulb-tubular	BT
Cone-shaped	C
Flame-shaped	F
Globular	G
Parabolic	PAR
Pear-shaped	P or PS
Reflector	R
Straight-side	S
Tubular	T

Lamps are designated by a letter and figure such as PS-30. The letter indicates the shape of bulb and the figure the greatest diameter of the bulb in eighths of an inch. Thus, a PS-30 lamp is a lamp with a pear-shaped bulb with a diameter of $30/8$, or $3\frac{3}{4}$ in.

52. Classification according to finish of bulb

1. Clear
2. Inside-frosted
3. Silvered-bowl
4. White
5. Daylight
6. Inside-colored
7. Outside-colored
8. Colored-glass
9. Outside-coating

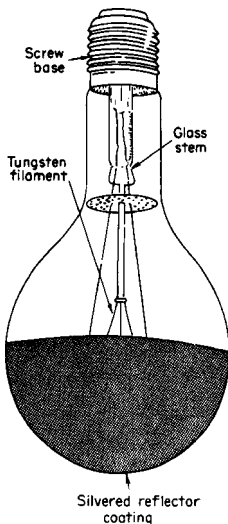


FIGURE 10.25 Silvered-bowl incandescent lamp.

53. Finish of bulbs. Incandescent lamps can be obtained with the bulbs finished in several different ways as listed in Sec. 52. With the clear lamps the bulb is made of clear glass which leaves the filament exposed to view. Clear-bulb lamps are used with reflecting equipment which completely conceals the lamp from view. They are employed with open-bottom types of reflecting equipment in some cases when the units are mounted so high that the lamps are not in the line of vision. Inside-frosted lamps have the entire inside surface of the bulb coated with a frosting which leaves the exterior surface perfectly smooth. This finish conceals the bright filament and diffuses the light emitted from the lamp. Inside-frosted lamps are used with open-bottom types of reflecting equipment and in places where no reflecting equipment is employed. Silvered-bowl lamps (Fig. 10.25) have a coating of mirror silver on the lower half of the bowl, which shields the brilliant filament and forms a highly efficient reflecting surface for indirect lighting. The upper part of the bulb is inside-frosted to eliminate streaks and shadows of fixture supports. Silvered-bowl lamps should be used only in fixtures designed for them, because the silvering directs the heat toward the socket assembly, which will therefore tend to operate at a higher temperature

than with clear lamps. White lamps have the entire interior surface of the lamp covered with a fine coating of silica. This coating gives a high degree of diffusion which softens shadows and reduces shiny reflections. Since bulb blackening is not apparent through the diffusing coating, the lamps appear clean and white throughout their life.

54. Daylight lamps have a blue bulb made of a special blue-green glass to approximate noon sunlight. The ordinary incandescent lamp produces light in which the red rays predominate. The blue-green glass of the bulb of daylight lamps absorbs part of the reddish

rays emitted by the filament of the lamp, giving a light which approaches the whiteness of noon sunlight. The glass absorbs about one-third of the total light emitted by the filament.

55. Colored bulbs. Colored light is obtained from filament lamps by the subtractive method, that is, by means of a separate filter or a bulb so processed that light of colors other than that desired is largely absorbed. Colored bulbs used in lamp manufacture are of natural-colored glass or of clear glass having a coating applied to either the inner or the outer surface of the bulb by one of several different processes. Natural-colored bulbs, wherein chemicals are added to the ingredients of the glass to produce the desired color, are regularly available in daylight blue, blue, amber, green, and ruby. Natural-colored bulbs produce light of purer colors than coated bulbs and are often used in preference to the latter for theatrical and photographic lighting.

Coated colored lamps are made by spraying either the inside or the outside of the bulb or by applying a fused enamel (ceramic) or acrylic coating to the outside of the bulb. The colors in most common use are red, blue, green, yellow, orange, and white.

When decorative or display lighting is involved, coated colored lamps are to be preferred to natural-colored lamps because of their lower cost. Enameled, acrylic-coated, and inside-sprayed bulbs are satisfactory for either indoor or outdoor use.

56. Tungsten-halogen lamps are incandescent (filament) lamps but are significantly different from conventional lamps in size and design. They represent the practical application of the halogen regenerative cycle in filament lamps. All tungsten-halogen lamps are filled with a gas of the halogen family. Iodine and bromine are the most commonly used. As the lamp burns, the halogen gas combines with the tungsten that is sublimated from the filament. As the gas circulates inside the bulb, the tungsten is deposited back on the filament rather than on the inside bulb wall. This keeps the bulb wall clean and allows the lamp to deliver essentially its initial light output throughout life. Owing to the lamp temperatures, quartz or a special high-silica "glass" are used for the lamp bulb or filament tube.

Four types of tungsten-halogen lamps are available (Fig. 10.26). The most widely used designs are the small tubular double-ended lamps. A coiled filament extends from one end of the lamp to the other. Lamp wattages range from 200 to 1500 W. A second type utilizes

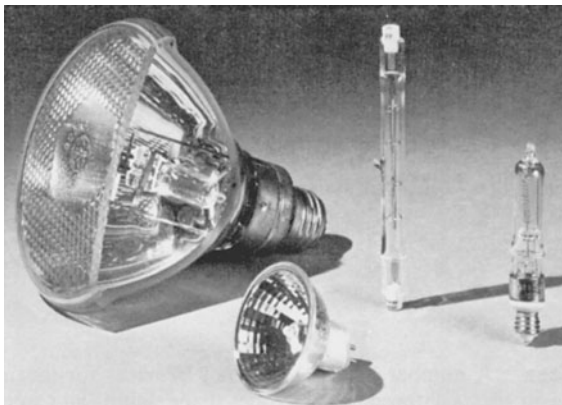


FIGURE 10.26 Tungsten-halogen lamps. The PAR design is cut away to show the internal filament tube.

a base at only one end of the quartz bulb. In the third type, the quartz filament tubes are sealed into outer bulbs such as PAR lamps for good optical control.

The last type of tungsten-halogen lamp for lighting is an adaptation of the small photographic halogen projection lamp. Small 12-V quartz filament tubes are mounted in small multifaceted glass ellipsoidal reflectors with infrared transmitting reflectors which reflect light but transmit much of the infrared heat out the back of the lamp. These lamps are extensively used in display-lighting applications.

The average life of most general-lighting tungsten-halogen lamps is about twice the life of regular general-service incandescent lamps, or 2000 h. Although for the same wattage the initial light output of these lamps is about the same, at the end of 1000 h the tungsten-halogen lamp produces about 13 percent more light than the standard general-service lamp.

These lamps offer high light output from compact lighting equipment. For example, the reflector for the 1500-W T-3 tungsten-halogen lamp is only 1 ft (0.3 m) long and 6 to 7 in (152 to 177 mm) wide.

Tungsten-halogen PAR lamps combine the excellent efficiency and long life of quartz lamps with the light control of a PAR bulb. The quartz tube is mounted at the focal point of the PAR bulb's reflector for accurate beam control. At the end of life (4000 h), 500-W tungsten-halogen PAR lamps provide 40 percent more light than standard 500-W PAR lamps rated at 2000 h. Special infrared reflecting films are utilized on the inner surface of the bulb or filament tube of some halogen lamp designs. This film transmits visible light but reflects infrared energy back to the filament, thus reducing the input power required to achieve the desired filament temperature and increasing lamp efficiency by as much as 50 percent.

Tungsten-halogen lamps are widely used in general lighting and floodlighting. Special tungsten-halogen designs are also used in specialty applications such as stage, film, and TV lighting, copying machines, and optical devices.

56A. Classification According to Type of Base (Fig. 10.27)

Bayonet	Medium prefocus	Extended mogul end-prong
Candelabra	Mogul prefocus	Medium two-pin
Intermediate	Medium bipost	Medium side-prong
Medium	Mogul bipost	Candelabra prefocus
Three-contact medium	Medium skirted	Screw terminal
Admedium	Minicandelabra	Lug sleeve
Mogul	Recessed single-contact	Two-pin
Three-contact mogul	Mogul end-prong	Double-contact medium
Disc		

57. Lamp bases. A number of different types of bases for incandescent lamps (Fig. 10.27) are in use. Of these, the bayonet, candelabra, and intermediate base are used on small-size (miniature) lamps. The medium base, used on general-service lamps of 300 W and less, is the most common type. The mogul base is used on sizes of 300 W and up. The admedium is slightly larger in diameter than the medium and is used on some mercury lamps. The three-contact base is used with a three-lite type of lamp. The disc base is used on Lumiline lamps.

The medium and mogul prefocused bases are used on certain types of concentrated-filament lamps, such as those for picture projection and aviation service, for which it is desirable to have the light source accurately located. The medium bipin base is for fluorescent lamps. The medium bipost base is made in 500-, 750-, and 1000-W lamp sizes for use principally with indirect fixtures, for which it allows a better design of fixture and better radiation of heat than are obtainable with the mogul-base type. For the very large-size lamps of 1500 W and up for floodlighting service the mogul bipost is the standard.

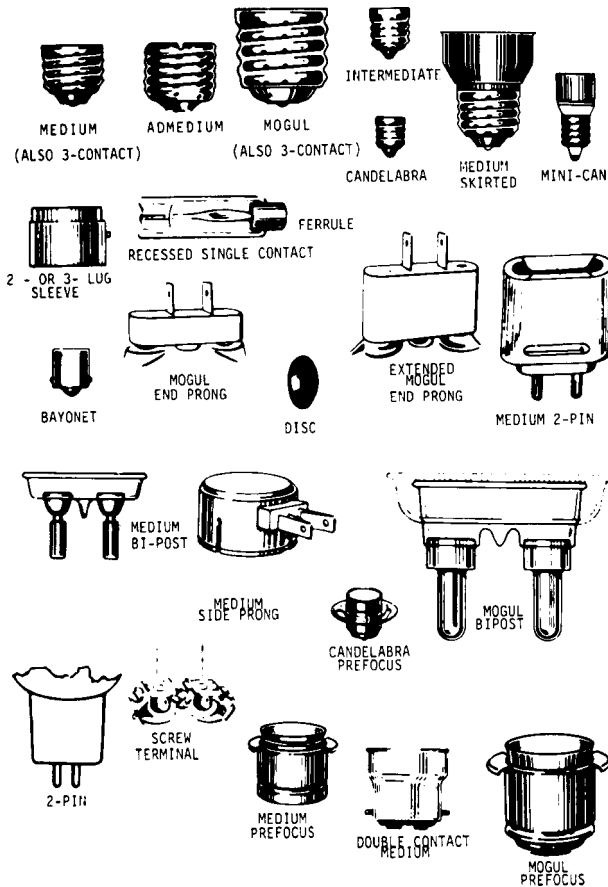


FIGURE 10.27 Bases for incandescent lamps. [General Electric Co.]

58. Classification according to type of filament. Several different types of filament structures are used. The filament structure is designated by a letter or letters to indicate whether the wire is straight or coiled and by an arbitrary number sometimes followed by a letter to indicate the arrangement of the filament on the supports. Prefix letters include S (straight; wire is straight or slightly corrugated), C (coil; wire is wound into a helical coil, or it may be deeply fluted), and CC (coiled coils; wire is wound into a helical coil, and this coiled wire is again wound into a helical coil).

59. Classification of incandescent lamps according to type of service:

1. General lighting service
 - a. Clear bulb
 - b. Inside-frosted bulb
 - c. Silvered-bowl bulb
 - d. White bulb

2. Special lighting service
 - a. Daylight lamps
 - b. Decorative lamps
 - c. Rough-service lamps
 - d. Three-lite lamps
 - e. Tubular lamps
 - f. Vibration lamps
3. Miscellaneous lighting service
 - a. Appliance- and indicator-service lamps
 - b. Aviation-service lamps
 - c. High-voltage lamps
 - d. Low-voltage lamps
 - e. Marine-service lamps
 - f. Mine-service lamps
 - g. Optical-service lamps
 - h. Photographic lamps
 - i. Photoservice lamps
 - j. Projection lamps
 - k. Projector and reflector lamps
 - l. Sign lamps
 - m. Spotlight- and floodlight-service lamps
 - n. Street-lighting-service lamps
 - o. Traffic-signal lamps
 - p. Train- and locomotive-service lamps

60. General-lighting-service lamps are those of 120- or 130-V rating for ordinary uses in homes, stores, offices, schools, factories, etc.

61. Special-lighting-service lamps are for use in similar locations, but they have a special design feature, such as shape or color of bulb, or other special features.

For an explanation of daylight lamps refer to Sec. 54.

Decorative lamps for general and special lighting are colored lamps that are available in a number of different types (see Sec. 55). They can be used to provide special effects in homes, theaters, shops, restaurants, and lobbies and foyers of public buildings.

Special yellow enameled lamps, which often are called "bug" lamps, are available. Although these lamps are excellent for decorative lighting, they are designed primarily for outdoor lighting during the season of night-flying insects. They have less attraction for insects than lamps of other colors. These lamps are used in open porches, outdoor recreation areas, filling stations, camps, roadside stands, and any other place where people enjoy outside activities under lights.

Rough-service lamps are specially constructed so that the filament can withstand sudden bumps and other forms of rough treatment. They are used principally in extension-cord service in garages, industrial plants, and similar applications in which they will be subjected to excessive shock in service.

For an explanation of three-light lamps refer to Sec. 62.

Tubular incandescent lamps for special general-lighting service are available in the Lumiline type and the showcase type.

The Lumiline lamps with their long bulb, 1 in (25.4 mm) in diameter, give a continuous line of light which is well suited to places where space is limited, as in displays, niches, small coves, signs, mirrors, paintings, and luminous panels. These lamps have contact caps of the disk-base type at each end of the bulb. Specially designed sockets or lampholders are

required. Lumiline lamps are available with clear, inside-frosted, white, or colored-glass tubes.

Showcase lamps (Fig. 10.28) are tubular lamps with conventional screw bases, which are designed primarily for the lighting of showcases but which also are used for the lighting of shallow-depth displays and other special applications requiring small trough-type reflectors. These lamps are available in clear, inside-frosted, and special showcase-reflector types. The showcase-reflector type is made with a tubular bulb with the upper half inside-aluminized so that it can be used in showcases, shelves, speakers' stands, and the like, in an ordinary socket without any reflector. A spring contact on the base allows the lamp to be adjusted in the socket to throw the light rays in any desired direction.


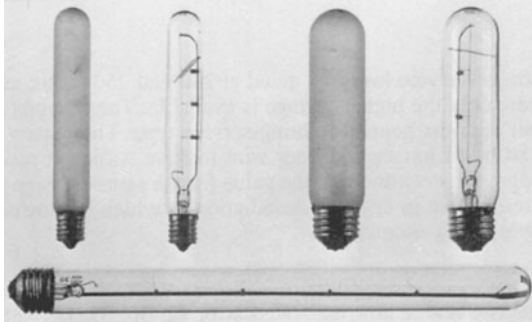



FIGURE 10.28 Showcase lamps. [General Electric Co.]

Vibration lamps are designed particularly for use on or near rotating machinery and other places where relatively high-frequency vibration exists. Certain of these lamps are equipped with a special type of filament wire designed to operate suitably under vibration conditions.

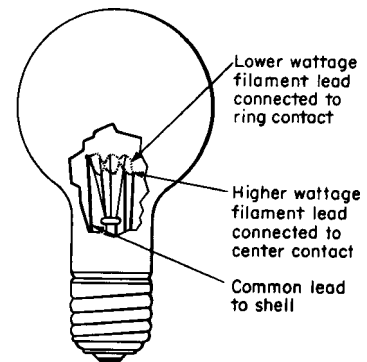62. The three-light lamp has two separate filaments in one bulb (Fig. 10.29). One filament consumes twice the wattage of the other, and the filaments can be lighted separately or together to produce three different levels of illumination, such as 50/100/150 W or 100/200/300 W. These lamps are particularly applicable to study lamps, reading lamps, and indirect floor lamps so that the user, with a single lamp, can adjust the illumination from that for decorative and casual use to full brilliancy for close seeing. They can also be used in stores so that daylight can be supplemented with an economical use of electric light and the illumination can be varied to suit different occasions.



End view of base

FIGURE 10.29 Three-lite lamp. [General Electric Co.]

63. Appliance- and indicator-service lamps are specially designed for use with appliances and equipment for home and commercial use. These lamps, when properly used, provide effective illumination of equipment exteriors and interiors and also give clear indications of operations in progress.

64. Aviation-service (airport) lamps are designed to suite the special conditions encountered in the vital lighting for safety at airport landing fields. Several types are required to provide satisfactory approach, beacon, running, taxiway, and the like, lighting.

65. High-voltage-service lamps, rated at 230 and 250 V, are available for use in locations where only the higher voltage is available. These lamps are less rugged and less efficient than the general-lighting-service type. The reason for this is that the filament must be of longer and finer wire to have sufficient resistance to limit the current to approximately one-half the value for the same-wattage general-service lamp. For this reason use in any new installation in which the lower voltage could be made available is not encouraged. There are also general-service incandescent lamps of 277-V circuits. One manufacturer cautions that such lamps be enclosed if used on high-capacity, low-impedance electrical distribution systems.

66. Low-voltage-service lamps, rated at 6, 12, 30, 32, 60, and 64 V, respectively, are available for use on electrical systems such as those of automobiles, boats, garden lighting, miniature interior fixtures or desk lamps, underwater swimming-pool fixtures, battery-generator sets, and trains. In contradistinction to the high-voltage lamps, the filaments are much thicker, providing inherent resistance to vibration and shock. The practical lower limit of lamp voltages is about 1.5 V, because below that point the current required to heat the filament begins to excessively heat the support wires.

67. Marine lamps are specially designed to take care of the special maritime illumination requirements. These lamps are used on shipboard to outline and identify vessels for seaway safety and to signal between ships. On land, they provide a source for lighthouse beacons. Underwater, they illuminate areas where divers must work.

68. Mine lamps are specially designed to meet the conditions encountered in the general illumination of mines and mine equipment.

69. Lamps for optical devices are available in a great variety of types to meet the special requirements of devices used in the optical field of science, industry, and education.

70. Photographic lamps are spotlight lamps designed with concentrated filaments for maximum light output in the controlled beams of spotlights used in theaters, television studios, and motion-picture and other photographic studies. For best lighting results, the filaments of these lamps must be accurately positioned, and the lamps should include mounting characteristics that will properly locate the filament in relation to the spotlight optical system. These lamps operate at a higher color temperature and have a shorter life than lamps for general service.

71. Photoservice lamps are made in two types:

1. Photoflash lamps
2. Photoflood lamps

The *photoflash lamp* is used to illuminate scenes for the taking of photographs. The photoflash lamp (Fig. 10.30) consists of a bulb containing flammable material such as zirconium in an atmosphere of oxygen. When the lamp is connected to a source of voltage, the foil burns with a single brilliant flash lasting about 1/50 s. Photoflash lamps are generally used with older cameras. Most cameras today utilize small electronically ignited xenon flash tubes which can be flashed repeatedly.

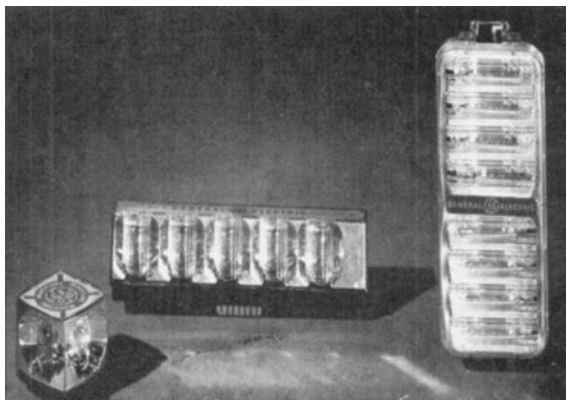


FIGURE 10.30 Photoflash lamps. [General Electric Co.]

The *photoflood lamp* is used for continuous illumination in the taking of moving pictures, by commercial photographers for studio portrait work and by amateur photographers for interior photographs. The photoflood lamp is similar to the regular inside-frosted incandescent lamp except that the filament is designed to operate at a higher temperature. This lamp emits much more light than the general-service lamp for the same wattage, but its life is much shorter, for example, 2 h for the smallest size to 10 h for the largest size.

72. Projection lamps (Fig. 10.31) are used in slide and motion-picture projections. The lamps utilize carefully positioned concentrated filaments and a base type permitting accurate positioning of the filaments in the projectors. The filaments operate at high temperatures, resulting in higher efficiency and thus shorter life, usually from 25 to 50 h.

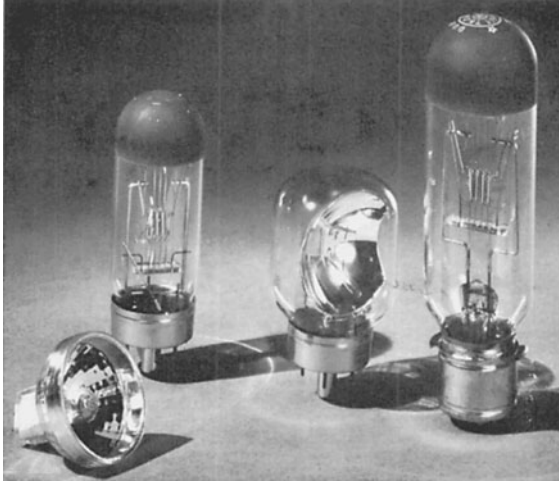


FIGURE 10.31 Projection lamps. [General Electric Co.]

73. Reflector and projector lamps (Fig. 10.32) are made with a parabolic-shaped bulb having a mirrored surface on the inside of the neck and a fixed-focus filament. They can be used with a plain socket to form a highly efficient spotlight. The projector type has a lens built into the face of the lamp for better control in the light. This lamp is made of heat-resisting glass so that it can be used either indoors or in locations exposed to the weather. The reflector type has an inside-frosted glass bulb which is not weatherproof and does not provide so accurate a control of the light but costs only about two-thirds as much as the projector type. Both types can be obtained in either a concentrating-spotlight or a wide-floodlight version. These bulbs are available with integral quartz-halogen lamps. The Energy Policy Act of 1992 established minimum efficacy standards for medium-base, 40–205-W, general service reflector and projector (R and PAR) lamps. As a result, many previously popular R and PAR lamps are no longer manufactured for sale in the United States. They have been replaced with more efficient halogen and halogen infrared PAR lamps and krypton filled R lamps.

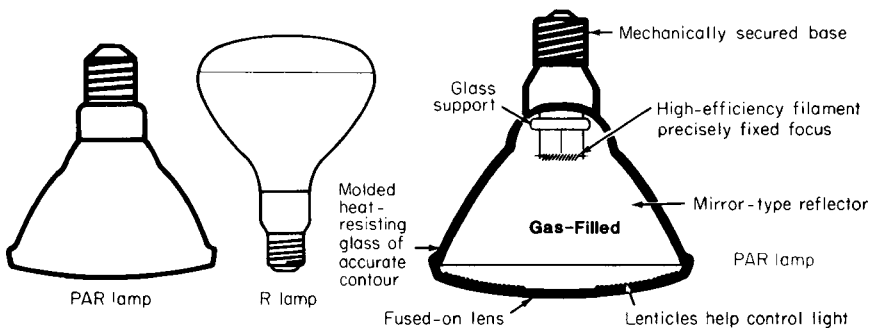


FIGURE 10.32 Reflector and projector lamps. [General Electric Co.]

(*Standard Handbook for Electrical Engineers*) A number of projector lamps are available with dichroic filters (interference films) to control the spectral quality of the radiation in such a manner as to separate the heat from the light in the beam or to produce colored light without the usual losses due to absorption by filters. From 75% to 80% of the heat can be removed from the beam at a sacrifice of only 15% to 20% of the light. These “cool beam” lamps must be used in luminaires that are capable of dissipating the additional heat that remains within the luminaire. Colored dichroic lamps produce more deeply saturated colors with higher efficacy than is obtainable with color filters.

74. Sign and decorative lamps are lamps designed especially for outdoor signs, Christmas and other decorations, carnivals, fairs, and festoon lighting. They are used also for many interior applications. While many standard gas-filled lamps are used in enclosed and other types of electric signs, those designated particularly as sign lamps are mostly of the vacuum type. Lamps of this type are best adapted for exposed sign and festoon service because the lower bulb temperature of vacuum lamps minimizes thermal cracks due to the contact of rain and snow. Some low-wattage sign lamps, however, are gas-filled for use in flashing signs. This causes more rapid cooling of the filament and reduces the trailing effect which slow-cooling vacuum lamps might produce. Bulb temperatures of these low-wattage gas-filled lamps are sufficiently low to permit exposed outdoor use.

75. Spotlight and floodlight lamps have concentrated filaments, accurately positioned with respect to the base. They are used in equipment which produces accurately controlled beams of light. There are several companion listings of spotlight and floodlight lamps having the same dimensions but differing in life design. Floodlight lamps are used when burning hours are long, as in building floodlighting and show-window lighting. Spotlight lamps are used for applications in which burning hours are short and higher light output is needed, particularly in the blue and green portions of the visible spectrum. The T-12 and T-14 lamps are for use in ellipsoidal projectors when employed for show windows and interior displays. The floodlight lamps are used also for underwater units. A typical lamp is shown in Fig. 10.33.

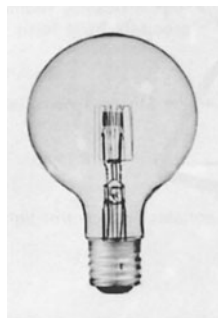


FIGURE 10.33 Floodlight lamp. [General Electric Co.]

76. Street-lighting-service lamps are lamps made specifically for use in street-lighting luminaires. They are made for series or multiple operation. A typical lamp is shown in Fig. 10.34. The series lamps are for operation on constant-current series circuits. They are made for 6.6- and 20-A circuits. Series-connected street lighting systems are rare today, but they are still used for airport runway lighting.

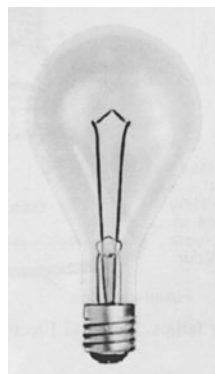


FIGURE 10.34 Street-lighting-service lamp. [General Electric Co.]

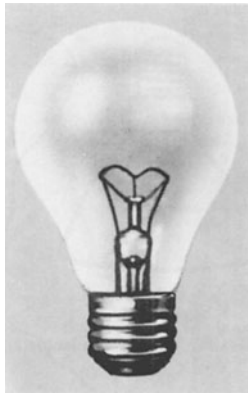


FIGURE 10.35 Traffic-signal lamp. [General Electric Co.]

77. Traffic-signal lamps (Fig. 10.35) are clear lamps which are designed with a short light-center length for focusing the rays to give a signal indication of required brightness for traffic-signal use.

78. Train and locomotive lamps are specially designed to withstand the intense vibrations and shocks encountered in this service. They are available in voltages from 30 to 75 V for regular train-lighting service and for locomotive-cab and headlighting service.

79. Burning position. With a few exceptions general-lighting-service lamps can be burned in any position. However, the lumen maintenance of Type C lamps is best when they are burned base up. This is because the tungsten blackening is conducted upward by the gas and is always

deposited above the filament. When the lamp is burned base up, the blackening collects in the area of the bulb adjacent to the base, where the light is already partially intercepted by the base, socket, and luminaire husk. If the lamp is burned base down, the blackening collects in the bowl of the bulb, where it causes a much greater reduction in light output. Lamps burned in a horizontal position are affected similarly.

Certain types of lamps, particularly projection, spotlight, floodlight, and some street series lamps, are not designed for universal burning and should always be used in the position designated by the manufacturer's published data. The reason for this may be the construction of the filament, which would be likely to sag or short-circuit if burned in a position other than that for which it is designed. Operation in an incorrect position sometimes places the filament directly under a glass part which might be softened by the heat. If a lamp containing a collector grid is burned in any other position than with the grid directly above the filament, the special construction will not be effective in controlling blackening.

80. Lamp temperatures. Operation of lamps under conditions which cause excessive bulb and base temperatures may result in melting of the bulb, softening of the base cement, and loosening of the base or, in extreme cases, damage to the socket and adjacent wiring. Most fixtures are properly designed to dissipate the heat generated by the lamps, but severe conditions such as might be induced by over-voltage operation or the use of lamps of higher wattage than the manufacturer's rating may give rise to difficulty. If metal parts of shades, reflectors, or fixtures are allowed to come in contact with the bulb of a gas-filled lamp, the local cooling effect may result in glass cracks which will cause lamp failure (sometimes violent). Maximum safe operating temperatures for best lamp performance are shown in the following table.

Maximum Safe Operating Temperatures (Approximate figures)	
Soft-glass bulb	370°C
Hard-glass bulb	450–510°C
Cemented base	
Regular	170°C
Special Hi-Temp	200°C
Mechanical base	210°C
Bipost base	285°C

Gas-filled lamps, because of the convection currents within the bulb, have higher bulb temperatures than vacuum lamps. Therefore vacuum lamps are preferable for use in exposed outdoor locations where snow or rain may strike the hot bulb. Gas-filled lamps exposed to the elements should have hard or heat-resisting glass bulbs.

81. Vibration and shock. Tungsten wire heated to incandescence becomes somewhat soft and pliable, and filament coils may be distorted or broken if the lamp is subjected to shock or vibration while burning. Vibration, especially of the low-amplitude high-frequency variety, is an insidious enemy of satisfactory lamp performance and should be guarded against whenever possible. There are available a number of commercial sockets and fixtures designed to protect the lamps by absorbing vibration.

If vibration cannot be eliminated by these means, special *vibration-service lamps*, provided with extra filament supports, should be used. The construction of vibration-service lamps is such that they will give most satisfactory performance if burned in a vertical position, either base up or base down. They should never be used where they are likely to receive extreme shocks.

For use on extension cords and in any service where excessive shocks may be encountered, there are available *rough-service lamps* with a special type of shock-resisting filament construction. Rough-service lamps are designed to operate in any burning position and can be used in place of vibration-service lamps when it is necessary to burn lamps horizontally. Both vibration- and rough-service lamps sacrifice some efficiency to strength of construction and are more expensive than standard lamps; they should, therefore, be used only where required by service conditions.

82. The life of incandescent lamps is defined as the average life of a large group of lamps burned under specified conditions. The range of typical mortality curves for incandescent lamps is shown in Fig. 10.36.

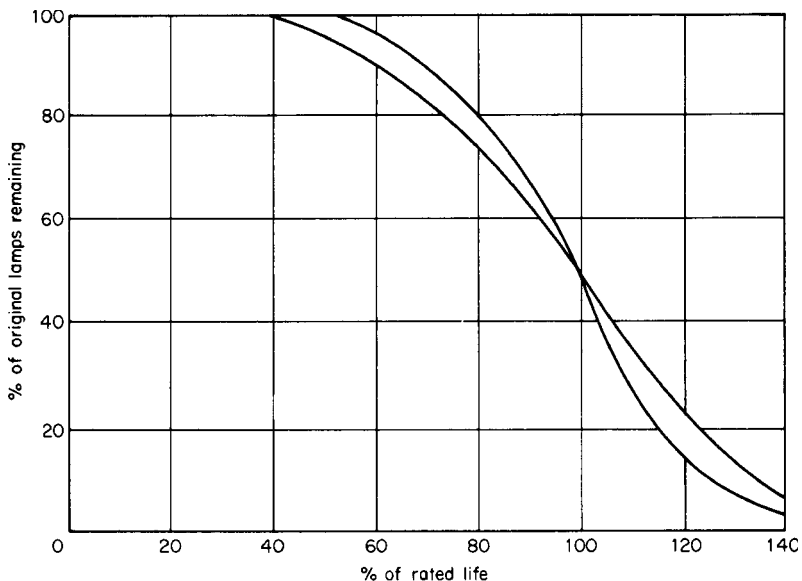


FIGURE 10.36 Incandescent-lamp mortality curves. [General Electric Co.]

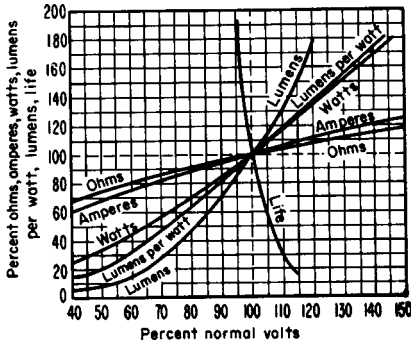


FIGURE 10.37 Variation in characteristics of incandescent lamps with voltage. [General Electric Co.]

much poorer. Figure 10.37 shows percentage variation in characteristics of lamps with variation from normal voltage. Consider a 120-V lamp operating at 114 V. The voltage impressed on the lamp is 95 percent of rated voltage. From Fig. 10.37 the lumens emitted by the lamp will be reduced to 84 percent of the rated value. Thus a 5 percent reduction in voltage results in a 16 percent reduction in light output.

Lamp Package Labeling. The Energy Policy Act of 1992 mandated package labeling requirements for most 120-V, medium-base, general service incandescent lamps under 200 W, 40–205-W, medium-base, general service incandescent reflector lamps, widely used 2'-U, 4' and 8' linear fluorescent lamps and integral-ballasted compact fluorescent lamps. The requirements became effective during 1995.

Packages for general service incandescent and incandescent reflector lamps and integral-ballasted compact fluorescent lamps must show light output, wattage, and life in equal size on the package together with a statement on using the lowest wattage lamp with the proper light output. In addition, general service incandescent reflector lamps must show with an explanation that the lamp meets minimum federal efficiency standards. Specialty incandescent and incandescent reflector lamps are exempt from the labeling requirements.

General service fluorescent lamps covered by the legislation must show a on the lamp or enclosing sleeve. Similar information must also be included in manufacturers' catalogues. On point-of-sale materials, the assumptions in any comparisons must be stated. Current legislative activities related to energy policy have raised the bar again on incandescent lamps in general, and over time this venerable light source may be relegated to specialty applications.

FLUORESCENT LAMPS

83. The fluorescent lamp (*Standard Handbook for Electrical Engineers*) is a low-pressure mercury electric-discharge lamp in which a phosphor coating transforms the ultra-violet energy generated by the discharge arc into light. The major parts of a fluorescent lamp (hot-cathode type) are the bulb (tube), electrodes, fill gas, phosphor coating, and bases, as shown in Fig. 10.38. When the proper voltage is applied across the ends of the lamp, an arc is produced by current flowing between the electrodes through the fill gas (mercury vapor mixed with argon or other inert gas). This discharge generates some visible radiation, but mostly ultraviolet at 253.7 nm, which in turn excites the phosphor coating to

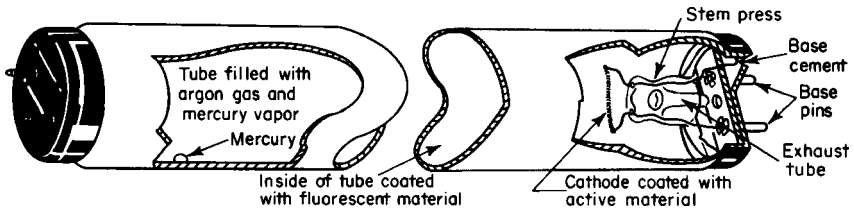


FIGURE 10.38 Fluorescent-lamp construction. [General Electric Co.]

emit light. Fluorescent lamps are available commercially principally in four distinct types, depending upon their operating circuits: (1) hot-cathode, preheat-starting; (2) hot-cathode, instant-starting; (3) hot-cathode rapid-start; and (4) cold-cathode.

84. Fluorescent lamp bulbs (*Standard Handbook for Electrical Engineers*) are basically tubular of small cross-sectional diameter. The bulb is available in straight, U-shaped, and circular configurations in bulb diameters from 1/4 to 2 1/8 in. In straight lengths, they range from 6 to 96 in (nominal). Shorter lamps, such as the 22-, 34-, and 46-in T-5 lamps, can simplify the design of luminaires for 600- and 1200-mm module ceiling systems. Circular (Circline) lamps have nominal overall diameters from 6 1/2 to 16 in. U-shaped lamps are 24 and 45 in. in nominal overall length. Fluorescent lamps are designated by a letter indicating the tube cross section shape and a number indicating the diameter in eighths of an inch. A T-8 lamp has a tubular bulb of 1 in. diameter. Smaller diameter lamps and lower height ballasts can result in "thinner" luminaires. Generally speaking, the thinner tubes offer increases in efficiency because the wall of the tube is closer to the internal arc path. They are also somewhat more temperamental because they want to run hotter for this reason, and are more sensitive to cold air or drafts.

85. Compact Fluorescent Lamps. The newest types of fluorescent lamps are compact lamps ranging in wattage from 5 to 50 W (Fig. 10.39). Utilizing T-4 or T-5 tubing, the basic lamp is formed in a biaxial or twin-tube shape with a single-end base. Other types have been added which employ double, triple, or quad twin-tube designs resulting in a more compact lamp design for a given lamp wattage.

The lower wattage twin-tube lamps are preheat designs with internal starters in the lamp base. The higher lumen twin-tube lamps are a rapid-start design with 4-pin bases. The double and triple twin-tube types have both preheat designs with internal starters and two-pin bases, and rapid start designs with 4-pin bases for external starters. Dimming systems are available for rapid-start designs.

Double, triple, and quad twin-tube lamps with integral ballasts in the lamp base in addition to twin-tube and double twin-tube lamps utilizing plug-in adapters with built-in ballasts are available for replacement in medium-base incandescent fixtures where general service incandescent lamps ranging in size from 25 to 100 W are installed. When replacing incandescent lamps with compact fluorescent lamps, care must be taken to ensure that the optical and thermal characteristics of the fixture will result in satisfactory compact fluorescent lamp performance.

The newer corkscrew configurations offer improvements in lamp life and stability and, like other fluorescent lamps, they save significant energy. An approximate rule of thumb is to take the incandescent wattage and divide by four to get the replacement CFL wattage. Fig. 10.40 shows a 14 W lamp, rated as equivalent to a 60 W lamp in output while increasing the relamping interval by a factor of eight. When a cold lamp is first turned on, the

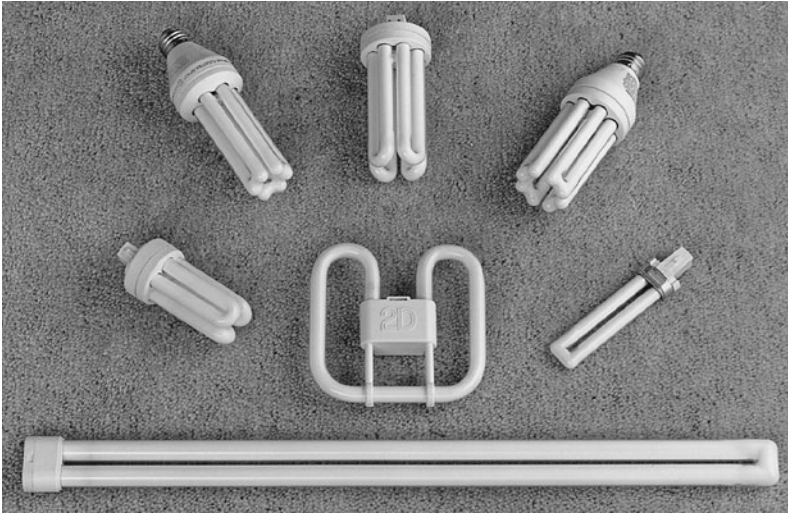


FIGURE 10.39 Compact fluorescent lamps. [General Electric Co.]

brightness is about 80% of full, and full brightness is reached in about a minute. Different color temperatures are available, allowing the owner to select a warmer or cooler white. There are even multistage CFLs available to replace multiwattage incandescent lamps (e.g., 50 W-100 W-150 W incandescent lamps in three-way sockets; see Fig. 10.62) widely used in floor and table lamps. Be careful to read and observe any limitations placed on these lamps by their manufacturer. Some are limited to dry locations; others need only be protected from direct exposure to water; and most (but not all) must not be used with a dimmer.

Higher wattage compact fluorescent lamps provide the opportunity for efficient and smaller fluorescent luminaires for general lighting applications. A new type of compact



FIGURE 10.40 A new, twisted-tube CFL. As can be seen to the left, this one has a double-contact base, so it can operate at three different wattages.

fluorescent lamp utilizes the glass tube formed in the shape of a square (similar to two D's back to back). Identified as a 2D lamp, they are available in several sizes from 10 to 38 W. They provide the opportunity for shallow luminaire designs for ceiling or wall mounting. The 10½- and 22½-in-long straight sizes are useful in 1- and 2-ft luminaires, and a three-lamp, 2 by 2 ft recessed luminaire with 40-W twin-tube lamps can achieve so-called "nondirectional" layouts without significant reduction in total luminaire output compared with 2 × 4 ft units. Designers should check with lamp manufacturers about suitability for dimming.

86. Electrodes. (*Standard Handbook for Electrical Engineers*) There are two electrodes in each fluorescent lamp, one at each end, designed to operate as either "hot" or "cold" electrodes (or cathodes). Figure 10.41 shows both types.

Hot-cathode lamps contain electrodes which are usually coiled-coil (or triple-coiled) tungsten filaments coated with one or more of the alkaline-earth oxides. By suitable circuit arrangements these cathodes can be heated to an electron-emitting temperature before the arc strikes, or they may be required to act momentarily as cold cathodes until they are heated by bombardment after the lamps have started. Lamps using these cathodes may be designed to carry currents of 1 to 2 A with low voltage drop (10 to 12 V) at the electrodes. Some energy-saving types of rapid-start ballasts have disconnect elements to discontinue cathode heating after the lamp starts. The power saved is approximately 3 W per lamp. Metal shields can be used to minimize end darkening, improving lamp lumen maintenance.

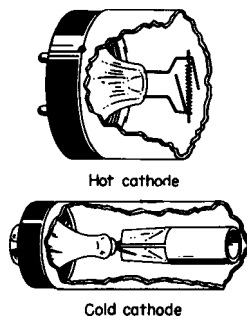


FIGURE 10.41 Cathodes for fluorescent lamps.

Cold-cathode lamps are those that use electrodes of tubular form of iron or nickel which may be coated on their inside surfaces with electron-emitting materials. These cathodes operate at temperatures which limit the lamps to low-current densities. The electrode drop in these lamps is relatively high (over 50 V), but they are not subject to short life as a result of frequent instant starting.

87. Fill Gas. (*Standard Handbook for Electrical Engineers*) Droplets of liquid mercury are present in the fluorescent lamp and vaporize to a very low pressure during lamp operation. Argon is added to assist ignition of the discharge in standard lamps, while energy-saving types have an argon-krypton mixture. Certain other types use a combination of argon and neon or argon, neon, and xenon.

88. Phosphors. (*Standard Handbook for Electrical Engineers*) The chemical composition of the phosphor coating on the bulb interior surface determines the color of the light produced and, in part, lamp efficacy. Those lamps with phosphors producing good overall color rendering are generally of higher efficacy.

The bulbs of some fluorescent lamps have a single, thick inner coat of conventional "halophosphor." Adding a thin coat of more expensive, rare-earth triphosphors can provide an improved color rendering index (CRI) and increase the efficacy. When a double coat of the triphosphors is used, CRIs are 80 to 90, while retaining the higher levels of lumens per watt. Triphosphor coatings are standard on certain families of fluorescent lamps—check manufacturers' technical literature for current information, and for designations employed with superior-color lamps. Special phosphors are also used in fluorescent lamps designed for plant growth and for black-light effects.

89. Data on Fluorescent Phosphors^a

(In addition to the phosphor, manganese is usually present as an activator.)

Phosphor	Lamp color	Wavelength, nm			
		Exciting range	Sensitivity peak	Emitted range	Emitted peak
Barium silicate	Black light	180–280	200–240	310–400	346
Barium-strontium-magnesium silicate	Black light	180–280	200–250	310–450	360
Cadmium borate	Pink	220–360	250	520–750	615
Calcium halophosphate	White	180–320	250	350–750	580
Calcium tungstate	Blue	220–300	272	310–700	440
Magnesium tungstate	Blue-white	220–320	285	360–720	480
Strontium halophosphate	Greenish blue	180–300	230	400–700	500
Strontium ortho phosphate	Orange	180–320	210	450–750	610
Yttrium oxide	Orange	180–300	220–280	550–650	611
Zinc silicate	Green	220–296	253.7	460–640	525

^aAll values are given in nanometers. The nanometer, used to measure wavelength of visible radiation, is 1/1,000,000,000 m (1.0×10^{-9} m) in length.

90. Fluorescent-lamp colors. Fluorescent lamps are available in a range of strong colors and in several different whites. The saturated colors—red, pink, gold, green, and blue—are used for decorative effects, while the whites serve for both decorative and general lighting purposes. All fluorescent lamps except gold and red are white when unlighted. Different phosphors produce the different colors when lamps are lighted.

White fluorescent lamps are designed to combine three elements important in lighting effects: (1) efficacy (efficiency)—most light per dollar, (2) color-rendering properties—the ability to bring out the beauty of colored materials and objects, and (3) whiteness—their appearance in relation to either natural outdoor daylight or the traditional artificial illumination such as filament lamps.

The choice among fluorescent whites frequently involves compromise among these three elements. Obtaining the best color-rendering properties can result in a reduction in efficiency. Choice of whiteness may affect both efficiency and color-rendering properties. The descriptions below outline the effects obtained from the most popular whites.

Cool white combines high efficiency with reasonably good color rendition. It is the most widely used fluorescent-lamp color in factories, offices, and schools. It blends well with natural daylight.

Warm white provides high efficiency with a warm tone. It emphasizes orange, yellow, and yellow green at the expense of other colors. It is generally used where a warm tone is more important than color rendition.

Deluxe cool white closely simulates the appearance and color-rendering properties of natural daylight. It has been widely used in stores such as florist shops, menswear shops, and other places where excellent color rendition of natural daylight is needed. It is also used in factory and office applications in which best appearance of colors is important. It has about 25 percent lower light output than cool white.

Deluxe warm white simulates the warm, effects of filament lighting in both whiteness and color rendering. It has been used in residences, restaurants, beauty parlors, department stores, bakeries, and other places where homelike lighting effects are wanted. For types used in the home, deluxe warm white is also called soft white. Deluxe warm lamps provide almost 30 percent less light than regular cool and warm white lamps. New rare earth phosphors have been developed which provide excellent color rendition in several warm and

cool tones with no loss in light output compared with cool and warm lamps. The industry designation for these colors is RE followed by a number which indicates color rendition and color temperature. For example: RE730 has a color rendition index between 70 and 79 and a color temperature of 3000 K; RE835 has a color rendition index between 80 and 89 and a color temperature of 3500 K.

Special fluorescent-lamp colors have been developed for applications such as outdoor plastic signs, color checking and matching in the textile and printing industries, the lighting of aquariums, and the growing of indoor plants.

Daylight, soft white, and white are still available for replacement purposes in existing installations and for new installations in which their appearance or color-rendering properties are particularly suitable.

The Energy Policy Act of 1992 established minimum efficiency and color rendering index standards for the widely used linear and U-shaped fluorescent types. As a result, cool white, warm white, white, daylight, and deluxe warm white are no longer manufactured in several of the previously available lamp types for sale in the United States. The rare earth colors with comparable color temperature provide increased light output and efficiency together with greatly improved color rendition. The older colors are still available as replacements in the nonregulated lamp types.

91. Color Temperature and Color Rendering Index of Some Common Light Sources* *(Standard Handbook for Electrical Engineers)*

Light source	Correlated color temperature, K	Color rendering index
"Cool" fluorescent		
Standard cool white ES [†]	4150	62
Cool white, ES, RE741 phosphor	4100	72
Lite white, ES	4200	49
RE841 phosphor	4100	80
"Warm" fluorescent		
Standard warm white, ES	3000	52
Warm white, ES, RE730 phosphor	3000	70
RE830 phosphor	3000	82
RE827 phosphor	2700	82
Deluxe daylight fluorescent, ES	6500	84
RE950 phosphor	5000	90
Incandescent		
General service	2600–3100	89–92
Tungsten-halogen	2900–3100	90
High-intensity discharge		
Mercury	5710	15
Mercury improved color	4430	32
Metal halide, clear	4000	65
Metal halide, ceramic	3000	80–88
Metal halide, ceramic	4200	90
High-pressure sodium	2100	21
Daylight		
Overcast sky	6000–7000	
Blue sky	11,000–25,000	
Sun, outside of earth's atmosphere	6500	

*Check manufacturer's technical literature for current data.

[†]"ES" = Energy-saving models

92. Bases. (*Standard Handbook for Electrical Engineers*) Lamps designed for instant-start operation generally have a base at each end with a single pin connection. (In some cases instant-start lamps may have two pins at each end electrically connected.) Lamps for preheat or rapid-start operation also have a base at each end, but with two pins (connections) in each. Some manufacturers use a green base finish or print to identify fluorescent lamps which have less mercury and/or pass the toxicity characteristic leaching procedure (TCLP), and therefore are classified as nonhazardous waste in many states. Rapid-start high-output lamps have recessed double-contact bases, and T-2 subminiature fluorescent lamps have axial bases. The Circline lamp has a single four-pin connector. Compact fluorescent lamps may have single two-pin or four-pin bases. Four-pin bases are required if the lamps are to be dimmed. See Fig. 10.42 for images of the available fluorescent lamp base types. Cold-cathode lamps are also instant-start lamps and have a single contact at each end, usually in the form of a cap base.

93. Operation and starting of fluorescent-lamps. Fluorescent lamps are best adapted to operate on ac circuits with reactance ballasts. The simplest operating circuit is shown in Fig 10.43. When the luminaire is energized, current passes through the ballast, creating magnetic flux, and also preheats the electrodes at each end which makes them capable of thermionic emission. In the case of a luminaire with a starter, the starter (Fig. 10.44) opens, which opens the flow of current through the ballast. Some luminaires are simpler yet, and simply wait for someone holding their finger on the start button to release it, causing the circuit to open in the same way. In either case the collapsing magnetic field in the ballast induces a relatively high voltage across the lamp, igniting it. Once the arc is struck, the impedance of the lamp decreases to the point where, if connected directly across the line, the resulting large current might destroy the lamp. However, the ballast remains in series with the current passing through the lamp, the ballast reactance opposes the flow of current, and the luminaire functions as intended.

Ballasts increase in complexity in instances where multiple lamps are being started and where power factor must be corrected, but all fluorescent luminaires share a key performance attribute, namely: a fluorescent lamp has much lower impedance when lit than when not lit. Therefore, all fluorescent luminaires have some method of striking the arc, and controlling the passage of current after the arc has been struck.

Electronic ballasts (Sec. 106) take this to an entirely new level, because they are classified as either *rapid-start*, or *instant-start*, or *programmed start*. The latter designation is used for ballasts that contain a microprocessor programmed to preheat the cathodes and increase the starting voltage at an optimum temperature, shut off the cathodes when the arc is established, and to sense end-of-lamp life and disconnect the ballast until the lamp is replaced.

Electronic instant-start ballasts may give shorter lamp life due to harder starting that puts more burden on the electrodes than do rapid-start and programmed-start ballasts, but are lower in input wattage because there is no standby electrode heating. The savings in kilowatt-hours often makes instant-start electronic ballasts the economic choice, unless occupancy sensors (or other causes of frequent lamp cycling) turn the lighting off and on 7 or more times each day. Users should also check with electronic ballast manufacturers about level of line inrush current on starting.

94. General-line lamps. The 4-, 6-, 8-, and 13-W T-5 fluorescent lamps are generally used when space for lamps is limited and where the inherent cool light and color quality of fluorescent lamps are desired. These are preheat lamps requiring a starter, and are rapidly disappearing from new installations, but a great many are still in operation.

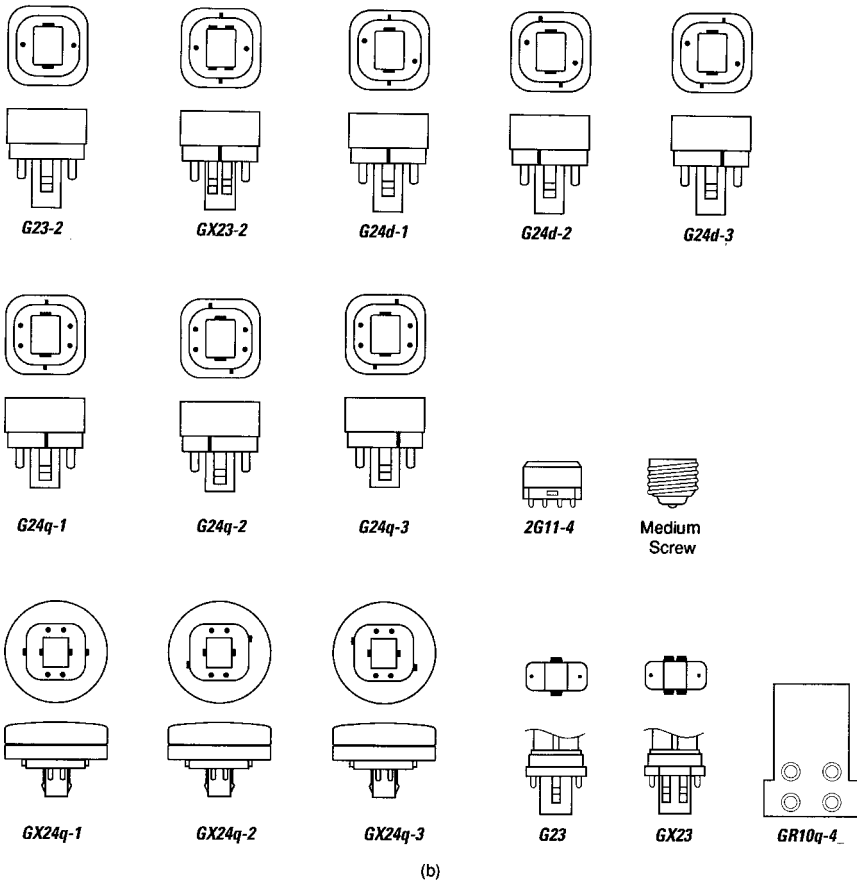
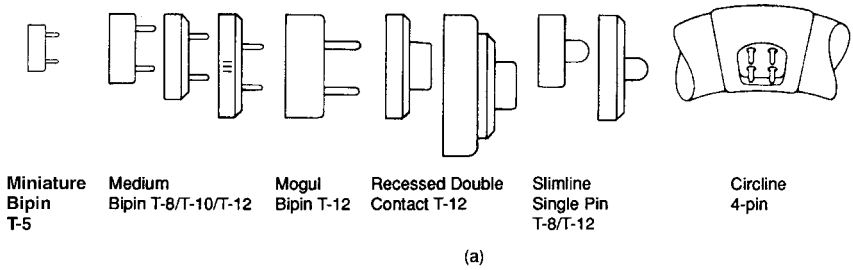


FIGURE 10.42 Bases used for common types of fluorescent lamps: (a) regular fluorescent lamps, and (b) compact fluorescent lamps.

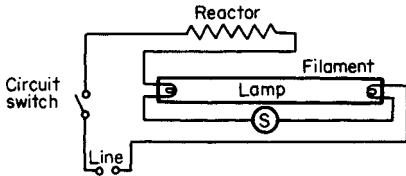


FIGURE 10.43 Circuit for fluorescent lamp and simple reactor.

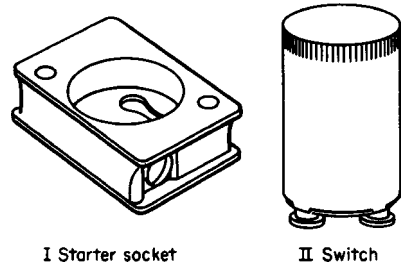


FIGURE 10.44 Fluorescent-lamp starter switch and socket. They are also available with an internal normally closed switch that opens in the event that the lamp will not restart after repeated tries. If this occurs, a little button pops out on the top of the starter, preventing a continuing annoyance and possible damage. The starter is easily reset when the luminaire is relamped.

The 14-W T-8, 14-W T-12, 15-W T-8 and 15-W T-12 lamps are used in homes for kitchens and mirror lighting. They are also used in stores for showcases, niches, and signs, in industrial plants for local lighting at work stations, and in portable lamps.

The 20-W T-12 lamp was one of the most widely used fluorescent lamps. It was employed in home fixtures for lighting in kitchens, bathrooms, basements, and recreation rooms. It is used in window valances and under shelving and cupboards for decorative and utilitarian lighting.

Several sizes of T-8 and T-12 lamps are available in lengths from 22 to 33 in (559 to 838 mm) for use in appliance and home applications. The 33-in 25-W T-12 is the longest lamp which can be generated from 120 V ac with a simple reactor ballast.

The 25-W T-8 [36 in (914 mm) long] is used in stores for showcase, wall-case, and perimeter lighting where its small diameter provides opportunity for good light control. Modern T-8 lamps, often with electronic ballasts, are available in sizes that make most of the preheat applications above obsolete.

The 32-W T-8 rapid-start lamp is used today in place of the former 40-W T-12 preheat lamp and its successor, the 34-W T-12. The 40-W T-12 and the 40-W T-17 instant-start lamp and 90-W T-17 preheat lamp are used only for replacement in older installations. Newer fluorescent systems provide lower lighting costs in applications for these lamps.

95. High-output rapid-start lamps. The high-output line of T-12 lamps (24- to 96-in, or 610- to 2438-mm) operates at 800 to 1000 mA. Since the lamps are of rapid-start design, two electrical contacts are required at each base. The recessed double-contact base was developed to meet this requirement and, at the same time, to eliminate any hazard from electrical shock.

A high-output rapid-start lamp gives about 40 percent more light than a conventional lamp of comparable size. Because of the higher current load and thus higher bulb-wall temperature, this lamp performs best in ventilated fixtures. Typical open-top fixtures that allow substantial amounts of upward light provide excellent ventilation. Efficient surface-mounted and recessed fixtures have also been developed.

Because of the higher bulb-wall temperature, high-output lamps perform better in low-temperature applications than 430-mA lamps. They are widely used in outdoor plastic-sign applications.

The highest-output fluorescent lamps operate at 1500 mA. These lamps are available in T-10, T-12, and a noncircular PG-17 bulb (Fig. 10.45). The PG-17 is one of the most efficient 1500-mA lamps for indoor applications. This lamp has a U- or crescent-shaped cross section. The exciting ultraviolet radiation produced within the bulb has a shorter distance to travel before striking the fluorescent material or phosphor than it would have from the center of a corresponding bulb of circular cross section. The full benefit of the greater amount of ultraviolet radiation generated is obtained with the U-shaped construction. Less opportunity is provided for reabsorption of this radiation by the mercury vapor before it strikes the phosphor. The rails along the grooves serve to keep the mercury pressure inside the bulb near the optimum value by providing cool spots, which condense out excessive mercury vapor. The bridges between the grooves assure adequate bulb strength.



FIGURE 10.45 1500-mA fluorescent lamps. [General Electric Co.]

The distribution of light from this lamp differs from that of conventional sources. The total light in the 0 to 90° zone is equal to the total in the 90 to 180° zone, but in the 0 to 30° and 150 to 180° zones for the relative light output is approximately 12 percent more than that from a tubular cross section of equal total light output. In most fixture designs this directional effect can be used to advantage.

Like the high-output lamp, 1500-mA lamps maintain their light output well at low temperatures. Again, enclosed fixtures will provide maximum output in most low-temperature applications.

For exposed lamp, outdoor applications, or indoor applications such as refrigerated rooms for meat storage, jacketed T-10 and T-12 1500-mA lamps are available.

96. Slimline lamps are a family of fluorescent lamps which are instant-starting, with single-pin bases. In general, they have advantages in wiring installation and maintenance over other fluorescent lamps. The rugged single-pin base combined with push-pull insertion in sockets was very popular for some time, but their single-pin base reduces the design options ballast manufacturers have to work with in terms of the latest energy saving possibilities. Slimline lamps are still available in a range of lengths and diameters to fit general and supplementary lighting needs in most fields of application. These lamps have different lengths than most of their bipin sisters, running almost 2 in. shorter. For example, a F48T12 slimline lamp is 46 in. long overall, instead of 47.78 in. for a comparable F32T8 or F34T12 bipin lamp. Do not make the assumption that you can rewire an existing slimline luminaire to a conventional rapid start luminaire by simply changing the ballast and lampholders; the luminaire will likely prove too short.

The 96T12 is the most prominent slimline lamp for general-lighting service. The maintenance advantages of the 8-ft (2.4-m) lamp result from fewer parts in the lighting systems than preheat types require for the same amount of light—lamps, sockets, ballasts, starters, and the like, being considered.

The 72T12 and 48T12 are 6- and 4-ft (1.8- and 1.2-m) companions, respectively, of the 96T12 which permit finishing out the ends of continuous rows in which the 8-ft lamp is used. These lamps are also used for general lighting when shorter fixture lengths are desired

for scale or to fit an architectural module. The 24-, 36-, 42-, 60-, 64-, and 84-in (585-, 914-, 1067-, 1524-, 1626-, and 2134-mm) T-12 lamps are used primarily in outdoor plastic-sign applications.

The 96T8 and 72T8 are available as replacements in existing installations. The smaller diameter of these lamps makes them suited for use in coves or other restricted areas. New 96T8 lamps have been introduced with high efficiency, good color rendering rare earth phosphors for use on electronic ballast systems.

The 42T6 and 64T6 are designed to fit standard 4- and 6-ft (1.2- and 1.8-m) store show-cases. Their $\frac{3}{4}$ -in diameter means minimum visual obstruction for all types of displays. The smaller diameter also permits accurate control with polished, concentrating reflectors for wall-case, show-window, cove, wall, or mural lighting and many other specialized applications.

97. Reduced-wattage fluorescent lamps in most of the widely used types and sizes have been introduced to minimize energy consumption. Depending on the lamp type, lamp wattage is reduced by 13 to 20 percent with minimal loss in light output. These lamps use krypton in place of argon as the fill gas, which reduces the voltage across the lamps. Reduced-wattage lamps are used on the same ballasts as standard lamps. They are available for use in lighting fixtures intended for 30-W and 40-W rapid-start, 90-W T-17 preheat, 96-in (2438-mm) T-8 slimline, 48-in (1219-mm) and 96-in T-12 slimline, 48-in and 96-in high-output, and 48-in and 96-in 1500-mA fluorescent lamps.

Reduced-wattage lamps are intended for use where lamp ambient temperatures are 60°F (16°C) or higher. Lamp flickering may occur where the lamp ambient temperature is below 60°F or where strong air drafts blow directly on bare bulbs.

The 40-W rapid-start lamps are available with an internal switch which removes the cathode-heating current during lamp operation after the lamp has started to reduce energy use further. Although these approaches are better than doing nothing, converting to modern T-8 or T-5 systems is preferable because of the inherent improvement in the lamp geometry relative to the internal arc.

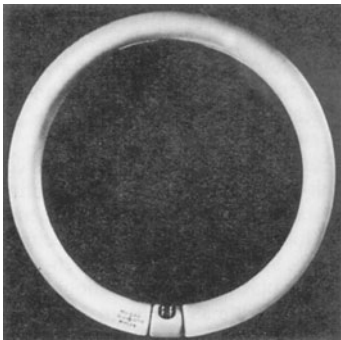


FIGURE 10.46 Circline fluorescent lamp. Cases for fluorescent-lamp ballasts. [General Electric Co.]

98. Circline lamps. Fluorescent lamps are also made in the form of a circle. These are known as Circline lamps. Circline fluorescent lamps (Fig. 10.46) are now available in four diameters, 6, 8, 12, and 16 in. They are used in home lighting fixtures and portable lamps. They are also used for decorative lighting in restaurants, theaters, lobbies, lounges, and other commercial areas. They are adapted for some inspection processes in industry. The 6-, 8-, and 12-in-diameter lamps have a preheat type of cathode and can be operated on trigger-start ballasts. The 16-in-diameter lamp is a rapid-start lamp.

Adapters or Circline lamps, including a ballast, which permit their installation in incandescent medium-base lampholders are available. They are used in portable lamps as well as ceiling sockets for incandescent lamps.

99. Ballast life and temperatures. The conventional ballast is enclosed in a container filled with a heavy impregnating compound which congeals around the choke coils

and condenser. This serves to radiate heat and, by its compactness, to eliminate or minimize noise or hum. Since the wattage loss in the ballast creates heat, suitable ventilation must be provided in fixture design or in places where ballasts are installed to keep the temperature within safe limits. If the temperature rises too high, the capacitor will fail and cause excessive heating and eventual failure of the internal windings.

Excessive ballast temperatures may be the result of one of the following:

1. Shorted starter in preheat circuits.
2. Burned-out lamp.
3. Rectifying lamp (near the end of lamp life).
4. Line-voltage fluctuation. Certain types of ballasts are sensitive to line-voltage fluctuation and therefore overheat at higher line voltages.
5. Improper design of fixture so that ballast heat cannot be dissipated efficiently.
6. Improper location of fixture which prevents proper heat dissipation.
7. Improper selection of ballast for the type of lamps used.

At a maximum temperature of 105°C (221°F) *within the winding* or 90°C (194°F) *measured on the case* and a maximum capacitor temperature of 70°C (158°F), the expected ballast life is about 12 to 15 years, depending on the operating hours each year. An increase of 10°C (18°F) beyond these limits will cut ballast life by as much as 50 percent.

The NEC requires that all fluorescent fixtures used indoors incorporate ballast protection other than that for simple reactor ballasts, as shown in Figs. 10.48 and 10.49. In response to this Code rule Underwriters Laboratories has a standard that requires the use of Class P (protected) ballasts for indoor fixtures. Class P ballasts contain inherent (thermal devices or thermal fuses, or both, which open automatically if the maximum temperature of the ballast is exceeded. Only Class P ballasts should be used as replacements in fixtures where ballasts other than reactor types are installed.

Although external fusing of a ballast (consisting of small quick-blow glass-tube fuses rated close to the normal ballast current rating) provides some degree of ballast protection, such fuses respond only to line current and not to temperatures inside the ballast. Since some internal ballast faults will cause excessive temperatures without an increase in line current, the fuse will not sense such faults. Accordingly, all present Class P ballasts contain internal thermal devices or fuses which respond to internal temperatures. External fusing will, however, provide a backup protection for Class P ballasts, and they will afford a high degree of protection for other types of ballasts if sized according to the recommendations of fuse and ballast manufacturers.

100. Radio interference. The performance of the mercury arc of a fluorescent lamp at the electrodes is associated with an electrical instability that sets up a continuous series of radio waves. There are three ways in which these waves may reach the radio and interfere with reception:

1. Direct radiation from the bulb to the radio aerial circuit
2. Direct radiation from the electric supply line to the aerial circuit
3. Line feedback from the lamp through the power line to the radio

The direct radiation from the bulb diminishes rapidly as the radio is separated from a lamp, and this effect can be controlled by proper positioning of the radio and its aerial. The

following table shows the recommended distance of popular fluorescent lamps from an AM radio antenna to minimize the effect of direct bulb radiation. This issue is much less of a factor with FM radio, and may not arise at all depending on the listening habits of the occupants. In addition, the new electronic ballasts, operating in the 40–50 kHz range, don’t impact media reception the way magnetic ballasts once did.

Recommended Distance from Lamp to AM Radio Antenna	
Lamp size	Distance, ft
14-, 15-, and 20-W	4
32-W Circline	5
30-W	6
40-W	8
90-W, 72- and 96-in slimline	10

If the radio must remain within the bulb-radiation range, it will be necessary to take the following precautions.

1. Connect the aerial to the radio by means of a shielded lead-in wire with the shield grounded, or install a doublet type of aerial with twisted pair leads.
2. Provide a good ground for the radio.
3. The aerial proper must be out of bulb- and line-radiation range. The use of a correct antenna system will usually help reduce radio interference by providing a better station-signal strength.

The use of fixture-shielding material such as electrically conductive glass or special lou-ver materials can aid in reducing radiated interference.

Interference from line radiation and line feedback can best be minimized by the proper application of line filters at each lamp or fixture. A simple form of filter is a three-section capacitor unit. One such unit per fixture, or for each 8 ft (2.4 m) of lamps in a cove, will reduce line noise by approximately 75 percent. If it is desirable to eliminate line noise completely, the inductive-capacitor type is recommended. This filter has a current-carrying capacity of 2 A, which is, for example, about the load of four 40-W lamps.

When only one or two radios are located near a fluorescent installation and the aerial circuit has been properly shielded from bulb and line radiation, a single line filter located at the radio power outlet will suffice.

When radios located in buildings adjoining the fluorescent installation are receiving line-feedback type of interference, it is practical to install a single filter such as the three-section capacitor unit at each panel box feeding fluorescent-lamp circuits.

When it is necessary to filter each lamp or fixture, the filter should be located as close to the lamps as possible. This precaution should be taken because of line radiation between lamp and filter.

The improper spacing of lampholders, resulting in poor contact with lamp base pins, can also generate interference, as can improperly grounded fluorescent fixtures. Failure to ground the neutral of branch circuits (as required in the National Electrical Code) is an additional cause. If the service lines are not properly grounded, filters will be much less effective.

Fluorescent equipment destined for homes or other places where radios are likely to be present should have the proper radio-interference filter in each fixture.

101. The temperature of the bulb has a decided effect on the efficiency of a fluorescent lamp (Fig. 10.47). The best efficiency occurs at 100 to 120°F (38 to 49°C), which is the operating temperature corresponding to an ambient room temperature of 70 to 80°F (21 to 27°C). Efficiency decreases slowly as the temperature is increased above normal but decreases very rapidly as the temperature is decreased below normal. For this reason the fluorescent lamp is not satisfactory for locations where it will be subject to wide variations in temperature. This reduction in efficiency with low surrounding air temperature can be minimized by enclosing the lamp within a clear-glass tube or by using higher-current special fluorescent lamps designed for exposed low-temperature application (Sec. 95) so that the lamp will operate at more nearly its desirable temperature (Fig. 10.48). Some CFLs apply a mercury amalgam that provides more stable lumen output over a wider range of temperatures and operating positions.

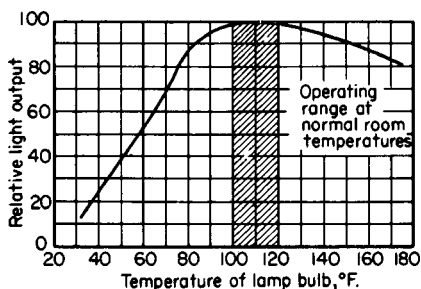


FIGURE 10.47 Effect of bulb-wall temperature on the efficiency of the fluorescent lamp.

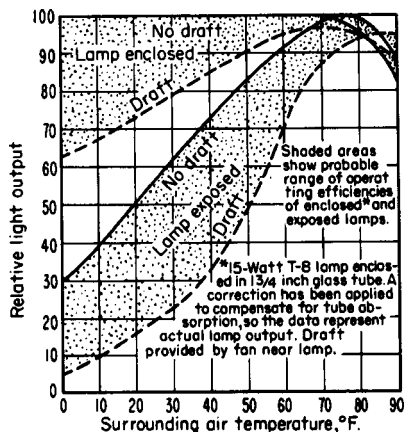


FIGURE 10.48 Effect of surrounding air temperature on the efficiency of the fluorescent lamp.

102. The life of a fluorescent lamp is affected not only by the voltage and current supplied to it but also by the number of times it is started. Electron emission material is sputtered off from the electrodes continuously during the operation of the lamp and in larger quantities each time the lamp starts. Since life normally ends when the emission material is completely consumed from one of the electrodes, the greater the number of burning hours per start, the longer the life of the lamp. Depreciation of light output is caused principally by tube blackening and is rapid (as much as 10%) during the first 100 h but very gradual from that point on. For this reason lamps are rated commercially on the basis of the lumen output after 100 h of operation. When the emission material is exhausted, lamps on a preheat type of circuit will blink on and off as the electrodes heat but the arc fails to strike. Lamps designed for instant or rapid start will simply fail to operate. Blinking lamps should be removed from the circuit promptly to protect both the starter and the ballast from overheating.

The rated average life of a fluorescent lamp in burning hours is based upon the average life of large representative groups of lamps measured in the laboratory under specified test conditions. Many fluorescent lamps have a rated average life of 12,000 to 20,000 h at 3 burning hours per start.

With the proper ballast operating voltage within the line-voltage limits shown on the ballast label, rated lamp life should be obtained.

103. Power factor. (*Standard Handbook for Electrical Engineers*) A fluorescent lamp, by itself, is inherently a high-power-factor circuit, but the reactive ballast normally used to stabilize the arc is inherently low power factor. Since in the usual circuit the voltage drop across the ballast is approximately equal to that across the lamp arc, the resulting power factor of a single-lamp reactive-ballast circuit is on the order of 50%. For many applications this low power factor is objectionable. In single-lamp ballasts, power factor correction may be obtained by means of a capacitor shunted across the line connections or, where the lamp requires a higher voltage, by a capacitor across the transformer secondary. The two-lamp ballast, through phase displacement of the lamp currents, or series capacitors, offers a ready means of power factor correction and is usually designed to give a circuit power factor greater than 90%. Fig. 10.44 shows a representative example of this principle at work.

104. Variations in line voltage produce less effect on fluorescent lamps than on incandescent lamps, the phase relationship among line voltage, lamp voltage, and auxiliary voltage being such that lamp voltage varies inversely as the square root of the line voltage. For this reason, most fluorescent lamp ballasts are rated for a nominal circuit voltage of 120 V with an acceptable range of 110 to 125 V. Line voltage less than 110 may make starting of the arc uncertain; a voltage over 125 may overheat the ballast. Line voltage less than 110 or greater than 125 can decrease the life of the lamp. Ballasts are also available for widely employed lamp types for use on 277-V systems with an acceptable range of 254 to 289 V. In addition, ballasts are available for some lamp types for 208-, 240-, and 480-V systems. Modern electronic ballasts are often available in configurations that automatically detect and operate successfully on a full range of line voltages (see Sec. 106) from 120 to 277 V.

Fluorescent lamps generally should be operated at voltages within $\pm 10\%$ of their designed operating points for best performance. Decreased life and uncertain starting may result from operation at lower voltages, and at higher voltages there is danger of overheating of the ballast as well as decreased lamp life. One exception to this is found in the series operation of cold-cathode lamps where an adjustable voltage supply makes possible operation over a wide range of illumination levels, that is, dimmer operation such as that used in stage lighting.

105. Noise ratings of ballasts. (*Standard Handbook for Electrical Engineers*) All inductive fluorescent ballasts emit a certain amount of noise; the noise increases with the lamp current. Ballasts are noise-rated according to laboratory standards. Such a rating is only a guide for installation practice and does not attempt to specify one ballast type over another for specific installations of fluorescent lamps.

Noise ratings are designated by letter, from A, the quietest, through F. The A rating is best, for example, for home applications, in which the surrounding and competitive noise level may be at a minimum. In an industrial plant with attendant operation noises, ballast hum may be of no importance. Not all ballasts, regardless of their general noise rating, produce annoying hum or noise. Chances are that the noise potential of different ballast designs is significant only in exceptionally quiet places. Individual ballasts of any noise rating may by some chance become offensive. Likewise, the ballast hum or noise vibration may be induced into the wiring channel or fixture and may be minimized or emphasized by the method used in mounting and clamping the ballast within the fixture. Electronic ballasts are generally much quieter than magnetic ballasts and provide an "A" rating.

106. Electronic ballasts. While 60 Hz is the standard frequency for ac distribution, higher frequencies have a number of advantages in the operation of fluorescent lamps. As the

frequency increases, lamp efficacy is increased. The increase in efficacy depends on the lamp type and the frequency of power delivered to the lamp. The gain in efficacy for 40-W T-12 rapid-start lamps is shown in Fig. 10.49. In addition, ballast losses are reduced, further improving system efficiency, and ballasts can be smaller and lighter-weight since they do not require the impregnating compound used in magnetic ballasts.

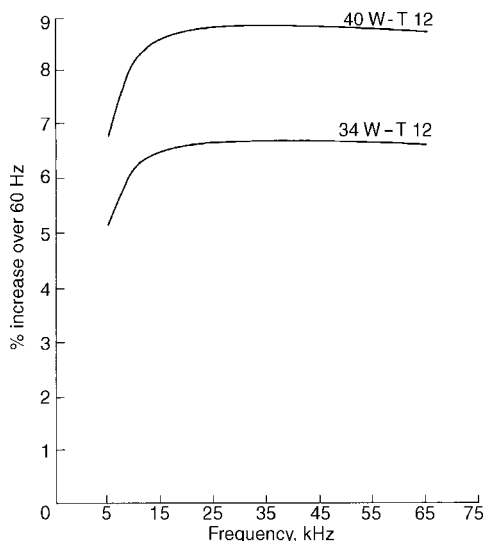


FIGURE 10.49 Effect of frequency on 40-W T-12 fluorescent-lamp efficacy. [General Electric Co.]

The use of solid-state electronic elements instead of magnetic components has made all this a practical reality. (*Standard Handbook for Electrical Engineers*) It has made electronic ballasts the standard for today's fluorescent lighting systems. Some use a control chip that results in constant light output and energy consumption over a significant range of line voltages. Electronic ballasts are lighter in weight, operate cooler, and can be designed for rapid- and instant-start lamps to meet federal efficacy and FCC EMI/RFI standards. Some models permit dimming of fluorescent lamps, and can be used with appropriate sensors to compensate for changes in daylight illuminance levels. Electronic ballasts cost more than electromagnetic types, but often provide swift payback for the lighting-hours usage and kilowatt-hour rates typical of commercial, institutional, and industrial applications. These ballasts operate on standard 60-Hz power systems but operate these lamps at approximately 25,000–50,000 Hz.

These systems have far surpassed their predecessors. Earlier high-frequency systems utilized central rotary or static inverters providing 360- to 400-Hz power with small capacitance- and inductance-type ballasts. These systems required separate electrical distribution systems for lighting. High-frequency systems have been used on aircraft to reduce weight with 400-Hz generators and small capacitive ballasts. In motor vehicles, lamps are operated at variable frequencies up to 500 Hz.

Many electronic components are employed in assembling electronic ballasts. Their specific designs are considered proprietary, but Fig. 10.50 gives the block diagram for basic electronic ballasts for fluorescent lamps.

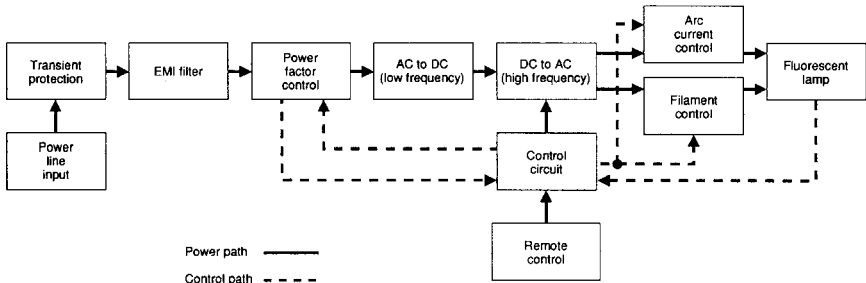


FIGURE 10.50 Basic block diagram for electronic fluorescent lamp ballast (Courtesy of Osram/Sylvania Inc.).

Most ballasts for T-2, T-4, and T-5 fluorescent lamps sense deactivated-cathode “end-of lamp life” conditions when one or more of the cathodes are depleted. This avoids a potentially hazardous situation when those small-diameter lamps are used with electronic ballasts, which could continue operating a bad-cathode lamp, perhaps causing the glass at that end to melt or crack. Some electronic ballasts for T-8 rapid-start lamps are expected to also incorporate end-of-life shutdown circuits.

107. Dimming. (*Standard Handbook for Electrical Engineers*) For dimming hot-cathode fluorescent lamps, a number of different arrangements are available. For smooth operation, the lamps on any circuit should be made by the same manufacturer, at the same time, in the same color, and of the same age in use. Group replacement is the most satisfactory procedure. Lamps should be operated free from drafts at 50 to 80°F and should be seasoned 100 h at full brightness prior to dimming. Certain energy-saving lamps are not recommended for dimming applications. Special dimming ballasts are typically required.

Dimming ballasts are available to reduce light output of T-8 and T-12 rapid-start lamps to 1%, 5%, or 10% of full lighting output. Most dimming ballasts are electronic ballasts. Standard T5 lamps can only be dimmed to 5% while T5HO can be dimmed to 1%. Compact fluorescent lamps can be dimmed to either 1% or 5%. Dimming ballasts offer slightly lower lumens per watt than non-dimming electronic ballasts. One manufacturer states that dimming from 100% to 1% and to 10% is perceived as 10% and 32% of full brightness, respectively. Various sliding and other types of wall box and wireless dimmer controls are available for dimming control, or in connection with occupant and daylight sensors for automatic energy-conservation systems. Ballasts can be controlled via analog or digital signals, and the controller must be configured to operate the type of ballasts being used. Compatibility with emergency-lighting ballasts should also be explored.

108. Harmonic loading issues. (*Standard Handbook for Electrical Engineers*) Due to the significant savings provided by electronic ballasts, most fluorescent ballasts used today in commercial luminaires are electronic. The escalation of electronic data-processing equipment and variable-speed motors increased attention given to the harmonic content of electric power systems. Fluorescent-lamp ballasts are known to contribute to total harmonic distortion (THD). Harmonics raise the current in the neutral conductor of 3-phase, 4-wire, wye-connected power distribution systems, even though the phase loads may be reasonably balanced. Some older circuits exist where reduced neutrals are used for fluorescent lighting loads. However, full 100% capacity neutral conductors have long been recommended for branch circuits consisting of more than one-half fluorescent

lighting. Indeed, some electrical engineers specify cables with single, oversized neutral conductors, cables providing a separate neutral for each phase, transformers designed to handle harmonic loading, etc.

Both electronic and magnetic ballasts generate harmonics in the line current. For electronic types, most modern fluorescent ballasts limit the total harmonic distortion to under 20% or in some cases under 10%, neither of which should create problematic current in the neutral conductor. Reported measurements of compact fluorescent lamps and diode devices for use in incandescent-lamp sockets showed power factors in the 47% to 67% range, and total harmonic distortion (THD) greater than 100%. Although electronic ballasts generally have lower THDs than do magnetic ballasts, check compliance with the requirement of most electric utilities that the THD of electronic ballasts be less than 20%.

109. Where direct current is available (*Standard Handbook for Electrical Engineers*) at circuit voltages comparable with the open-circuit voltages of the usual ac ballast circuits, fluorescent lamps may be operated from these sources. For such operation, resistance must be added to the usual series reactance ballast (transformer ballasts are not applicable) to limit the operating current to the designed value. This causes a marked reduction in the overall efficacy of the lamp and circuit combination over that obtained in ac operation. Under dc operation, lamps more than a few feet in length will promptly develop a concentration of the mercury vapor at the negative end of the lamps, with the result that only a fraction of the bulb will give off light. This condition can be overcome through a periodic (about once in 4 h) reversal of the polarity of the lines feeding the lamps. The life of lamps is likely to be shorter on dc.

110. Operating suggestions (General Electric Co.). To secure the best performance of fluorescent lamps, it is important that users understand how to maintain their fluorescent installations properly. Many factors that affect the performance of these lamps were never encountered with incandescent filament lamps, and users must realize that some of these elements of satisfactory service are within their control.

For example, if a filament lamp does not light when current is applied, the one single, positive conclusion is that the lamp is burned out or defective. No such conclusion should be made in the case of the fluorescent lamp. This lamp, though perfect in all respects, may not start or operate properly through no fault of the design or manufacture of the lamp.

Average Life. Since mortality laws apply to fluorescent as well as to filament lamps, it is not unusual for some fluorescent lamps to fail before rated life when life will last for a longer period than their rated average life to balance out the normal early failures.

Normal Failure. The electroemissive material on fluorescent-lamp electrodes is used up during the life of the lamp, the sputtering off being more rapid during starting. Therefore, a longer life will be obtained if lamps are allowed to operate continuously instead of being turned on and off frequently. Average rated life should be obtained if lamps are operated for normal periods of 3 or 4 h with each start.

When the active material on the electrodes is used up, the lamp will no longer operate. On preheat circuits, it may continue to blink on and off as the starter attempts to start the lamp. On instant-start circuits, the lamp may spiral at the end of normal life.

Swirling and spiraling. This phrase refers to all conditions in which the lighted lamp appears to fluctuate in brightness from end to end. The cause is principally particles of materials loosened from the cathode and floating in the arc stream. Such particles usually settle to the bulb when the current is turned off for a few minutes. This temporary swirling may occur in new lamps and is not serious. If swirling persists, some operating condition may be the cause of the particles being cast into the arc stream. High-impact

starting voltage may jar loose such material; this high-voltage starting may be due to (1) a ballast of inadequate design, (2) a lack of proper starting aids in trigger-start and rapid-start systems, (3) a starter in a preheat circuit that is not working properly to give adequate preheat, or (4) any other circuit condition such as low supply voltage in which neither starter nor ballast functions normally yet in which lamps may occasionally start by high-voltage impact alone without preheat.

Instant-start lamps have cathodes designed to withstand high-voltage starting. When new lamps of this type swirl persistently, the lamp may be at fault and should be replaced. At the end of normal lamp life, when no electron-emissive material remains on the cathode, the high starting voltage disintegrates even the metallic parts of the cathode, which then invade the arc stream. This is the cause of the excessive swirling that characterizes the end-of-life period of instant-start lamps.

Normal Depreciation. The lighted output at 100 h is used for rating purposes because the loss during this period may amount to as much as 10 percent. The average light output during life is approximately 90 percent of the 100-h rating value.

Blackening. A fluorescent lamp darkens rather uniformly throughout the length of the tube during life, though this is not noticed unless an old lamp is compared with a new one in front of a light source. At the end of life, the lamp usually shows a dense blackening either at one end or at both. Also, there may be dark rings, slightly brownish in color, at one end or both. On the average, there should be little indication of either blackening or rings during the first 500 h of operation. If the lamp has not given a proper length of service when this occurs, this may be due to improper starting, frequent starting with short operating periods, improper ballast equipment, unusually high or low voltage, improper wiring, or a defect in the lamp.

End blackening should not be confused with a mercury deposit which sometimes condenses around the bulb at the ends. This mercury condensation appears to be more common with the 1-in. (25.4-mm-) diameter lamps than with the 1½-in. (38.1-mm) sizes. It is occasionally visible on new lamps but should evaporate after the lamp has been in operation for some time. However, it may reappear later when the lamp cools. Frequently, dark streaks appear lengthwise of the tube as small globules of mercury cool on the lower (cooler) part of the lamp. Mercury condensation is quite common on lamps in louvered units owing to the cooling effects of air circulation around the louvers.

Mercury may condense at any place on the tube if a cold object is allowed to lie against it for a short period. Such spots near the center section may not again evaporate. When condensation occurs in this manner, rotating the lamp 180° in the lampholder may give a more favorable position for evaporation or may place the spot in a less conspicuous place from an appearance standpoint.

Near the end of life, some lamps may develop a very dense spot about ½ in. (12.7 mm) wide and extending almost halfway around the bulb, centering about 1 in. (25.4 mm) from the base. This is quite normal, but a spot developing early in life is an indication of excessive starting or operating current. This may be due to a ballast off-rating or to an unusually high circuit voltage.

Occasionally a lamp may develop a ring or gray band at one end or at both. Such rings are usually located about 2 in. (50.8 mm) from either base. These rings have no effect on the lamp performance and are no indication that a lamp is near failure and must soon be replaced.

Circuit Voltage. The circuit voltage should be within the ballast rating, although 110- to 125-V ballasts *may in some cases* give satisfactory lamp performance on circuits as low as 105 V or as high as 130 V. Ballasts designed for 265 to 277 V may sometimes give satisfactory results on line voltages as low as 260 V and as high as 285 V. Excessive undervoltage or over voltage is injurious to the lamp.

Ballast Hum. Characteristic transformer hum is inherent in lamp ballast equipment, although the noise may come and go, varying considerably with individual ballasts. If ballasts are mounted on soft rubber, neoprene, or similar nonrigid mountings, the vibrations due to the magnetic action in the chokes will not be transferred to supporting members, and disconcerting auxiliary hum will be reduced to a minimum. Such vibration insulation, however, will inhibit heat radiation and transfer to such a point that ballast ambient-temperature limits will be exceeded.

Low-Temperature Operation. In most cases, satisfactory starting and performance can be expected at temperatures considerably below 50°F (10°C) by (1) keeping the voltage in the upper half of the ballast rating, (2) conserving lamp heat by enclosure or by other suitable means, and (3) using thermal starting switches.

Starting Difficulty. Starting difficulties may be due to a number of causes other than the starter itself. In general, any difficulty in starting may result in premature end blackening and short lamp life.

A Lamp That Makes No Effort to Start. First the lamp should be checked to make sure that it is properly seated in the sockets. If this fails to correct the trouble, the lamp should be checked in another circuit, and, if necessary, the voltage can be checked at the sockets. If no indication of power is found at the sockets, the circuit connections are incorrect or the ballast is probably defective. In a preheat circuit, the starter should be checked. It may have reached the end of life and should be replaced.

A Lamp That Is Slow in Starting. Low line voltage, low ballast rating, or in preheat circuits a sluggish starter can also result in slow starting.

A Lamp the Ends of Which Remain Lighted. This condition indicates a short circuit in the starter, which should be replaced. Starters that have been in service for some time frequently fail in this manner. If the ends of a lamp in a new installation remain lighted, it is possible that the wiring is incorrect. Of course, if short-circuiting types of No-Blink or Watch-Dog (Fig. 10.44) starters are used, the lamp ends will remain lighted in a normally failed lamp; this condition automatically corrects itself when the failed lamp is replaced with a new lamp.

A Lamp That Blinks On and Off in Preheat Circuits. Blinking is the usual indication of a normal failure of a lamp. It will usually be found more convenient to put in a new starter first and then, if blinking continues, to renew the lamp. Low circuit voltage, low ballast rating, low temperature, and cold drafts may individually cause difficulties of this nature, or several of these may be contributing factors. It is also possible for improper circuit connections to cause such blinking. The annoyance of blinking lamps can be avoided by using No-Blink starters in installations employing lamps for which such special types of starters are available.

If the ends of a lamp remain lighted or the lamp blinks on and off, either the trouble should immediately be corrected or the lamp or starter should be removed from the circuit. A blinking lamp can shortly ruin both lamp and starter. Ordinary starters can be replaced with No-Blink starters (where these starters are available), which remove the starter element from the circuit if lamps fail to light after a reasonable number of attempts have been made.

Early End Blackening. Heavy end blackening early in life indicates that the active material on the electrodes is being sputtered off too rapidly. It may be due to

1. High or low voltage. For best results, the circuit voltage should be within ballast rating.
2. Loose contacts (most likely at the lampholder). Remedy: lampholders should be rigidly mounted and properly spaced. See that lamps are securely seated in lampholders.

3. Improperly designed ballasts or ballasts outside specification limits. Remedy: the use of ballasts approved by the Electrical Testing Laboratories will usually eliminate trouble of this nature.
4. In preheat circuits a defective or worn-out starter, causing the lamp to blink on and off, prolonged flashing of the lamp at each start, or the ends of the lamps remaining lighted over a period of time. Remedy: replace with a new starter.
5. Improper wiring of units.

111. Induction fluorescent luminaires. (Adapted from *Practical Electrical Wiring*, 20th edition, © Park Publishing, 2008, all rights reserved) A new form of fluorescent lighting offers a major breakthrough in terms of lower maintenance expense. The fluorescent lighting covered so far relies on electrodes within the lamp to initiate the arc discharge that creates the energy to produce what is ultimately useful light. With few exceptions, electrodes have an electron-emitting coating, and when that wears off, the lamp is burned out and must be replaced. What if there are no electrodes to burn out? Photographs of Nikola Tesla in his laboratory, taken more than a century ago, show him holding long, thin, sealed glass tubes coated internally with phosphors that produced light as he held them in the air near a high-frequency source of power, of his invention, known today as a tesla coil. Today the same process is being used to generate light, particularly in places for which the maintenance expenses associated with relamping are high, such as street lighting.

Figure 10.51 shows a streetlight that works on this principle. The base contains provisions to mount a photocell with the ballast out of sight behind it. The ballast is an induction



FIGURE 10.51 A decorative induction fluorescent streetlight. The lamp at the right, which has no electrodes, should last 25 years. The inside contour of the glass envelope of the lamp, not visible in this photo, is cylindrical in shape, extending vertically from its base almost to the top of the globe. It fits perfectly over the exciter coil wound around the outside of the vertical section of the luminaire. An attractive glass globe (not shown) completes the assembly.

generator operating at about 2.6 MHz. The generator is connected via coaxial cable to the axially located power coupler that serves as an antenna coil extending vertically out of the top of the base. A special fluorescent lamp is at the right. It is in the shape of an incandescent lamp, but it contains a small amount of mercury and internal phosphors similar to conventional fluorescent lamps, giving 3000 or 4000 K white light, and it has a comparable efficacy. The lamp has no electrodes to wear out. The light output from this 85-watt system is initially 6000 lumens, falling to a mean of 4800 lumens, with a CRI above 80. The lamp life is rated at 100,000 hours, which translates to about 25 years of evening streetlight duty. Since relamping streetlights typically involves work from a bucket truck, this reduction in maintenance overhead results in substantial savings.

This technology is available in other forms, with other lamp shapes and optics. For example, there are doughnut-shaped lamps that fit into high-bay-style downlighting suitable for industrial and warehouse applications. These directly compete with comparable HID luminaires. The principle of induction-coupled fluorescent light remains the same. For these applications, there is another benefit. In addition to the lower maintenance expense, there is no restrike time, so the lights can turn on and off at the flick of a snap switch, just like fluorescent lighting in an office.

HIGH-INTENSITY-DISCHARGE LAMPS

112. High-intensity discharge lighting covers (*Standard Handbook for Electrical Engineers*) a general group of lamps consisting of mercury, metal halide, and high-pressure sodium lamps. A mercury lamp is an electric discharge lamp in which the major portion of the radiation is produced by the excitation of mercury atoms. A metal halide lamp is an electric discharge lamp in which the light is produced by the radiation from an excited mixture of a metallic vapor (mercury) and the products of the dissociation of halides (e.g., halides of thallium, indium, sodium). A high-pressure sodium lamp is an electric discharge lamp in which the radiation is produced by the excitation of sodium vapor in which the partial pressure of the vapor during operation is of the order of 10^6 N/m², or about 10 atm.

A lamp designation system developed by the American National standards Institute (ANSI) is currently in use. It consists of five groups of letters or numbers: first a letter indicating the type of lamp (H, mercury; M, metal halide; S, high-pressure sodium), followed by an arbitrary number designating electrical characteristics (which relates to the type of ballast required), followed by two arbitrary letters which describe the physical characteristics, then the lamp nominal wattage, and finally letters indicating the phosphor color. An example for a 175-W metal halide lamp would be M57/C/175/U/MED.

113. High-intensity-discharge (HID) lamps (*Standard Handbook for Electrical Engineers*) consist of a cylindrical transparent or translucent arc tube which confines the electric discharge and the associated gases. That tube is further enclosed in a glass bulb or outer jacket to exclude air to prevent oxidation of the metal parts and to stabilize operating temperatures and significantly reduce ultraviolet radiation emitted by the excitation of the vapors. The mount structure of many HID lamps is anchored to the “dimple top” of the outer glass bulb, ensuring greater structural integrity and more accurate alignment of the arc tube. The construction of a typical mercury lamp is shown in Fig. 10.52. The basic elements are the arc tube, fabricated from fused silica and filled with a drop of mercury and a rare gas at low pressure; the electrodes; and the outer envelope, which may or may not have a phosphor coating on the interior for improved color rendering. Mercury lamps, due to their

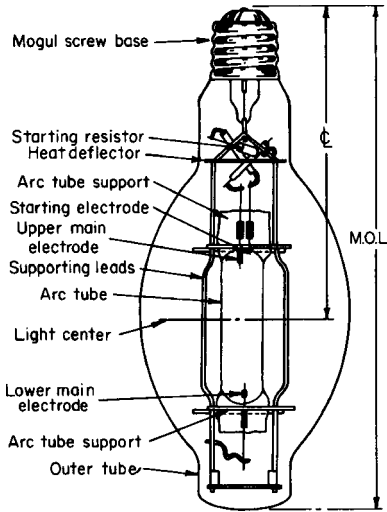


FIGURE 10.52 Mercury lamp.

relative inefficiency and generally poor color rendering, are rarely, if ever, applied in today's lighting designs. They will be covered here because many are still in service. Refer to Fig. 10.24 and the caption thereto for the usual shape designations that apply to HID lamps.

114. The high-pressure mercury lamp consists of a quartz arc tube sealed within an outer glass jacket or bulb. The inner arc tube is made of quartz to withstand the high temperatures resulting when the lamp builds up to normal wattage. Two main electron-emissive electrodes are located at opposite ends of the tube; these are made of coiled tungsten wire. Near the upper main electrode is a third, or starting, electrode in series with a ballasting resistor and connected to the lower main-electrode lead wire.

The arc tube in the mercury lamp contains a small amount of pure argon gas which is used as a conducting medium to facilitate the starting of the arc before the mercury is vaporized. When voltage is applied, an electric field is set up between the starting electrode and the adjacent main electrode. This ionizing potential causes current to flow, and as the main arc strikes, the heat generated gradually vaporizes the mercury. When the arc tube is filled with mercury vapor, it creates a low-resistance path for current to flow between the main electrodes. When this takes place, the starting electrode and its high-resistance path become automatically inactive.

Once the discharge begins, the enclosed arc becomes a light source with one electrode acting as a cathode and the other as an anode. The electrodes will exchange functions as the ac supply changes polarity.

The quantity of mercury in the arc tube is very carefully measured to maintain quite an exact vapor pressure under design conditions of operation. This pressure differs with wattage sizes, depending on arc-tube dimensions, voltage-current relationships, and various other design factors.

Efficient operation requires the maintenance of a high temperature of the arc tube. For this reason the arc tube is enclosed in an outer bulb made of heat-resistant glass, which makes the arc tube less subject to surrounding temperature or cooling by air circulation. About half an atmosphere of nitrogen is introduced in the space between the arc tube and the outer bulb. The operating pressure for most mercury lamps is in the range of 2 to 4 times atmospheric pressure. Lamps can operate in any position. However, light output is reduced when burned in position other than vertical. Mercury lamps for lighting applications range in wattage from 40 to 1000 W. The 175- and 400-W types are the most popular. Mercury lamps are used in street lighting, industrial lighting, and outdoor area lighting. In new installations today, mercury lamps are being replaced with more efficient metal halide or high-pressure sodium systems. A typical clear mercury lamp is shown in Fig. 10.52. Some special mercury lamps are available for use in ultraviolet applications.

115. Phosphor-coated mercury lamps are the most widely used mercury lamps. Within the visible region the mercury-lamp spectrum, or energy radiated, consists of principal wavelengths. The lack of radiation in the red end results in a greenish-blue light.

When one looks at a lighted mercury lamp, the source itself appears to emit a daylight white. The absence of red radiation causes most colored objects to appear distorted in color value. Blue, green, and yellow colors of objects are emphasized, while orange and red objects appear brownish or black.

Color improvement has been incorporated in the design of mercury lamps by the use of special phosphors on the inside of the outer bulb (Fig. 10.53). The function of the phosphor is to convert the invisible ultraviolet energy into visible light in the same manner as light is produced in fluorescent lamps. The phosphor produces light principally in the red region, where the light from the arc tube is deficient.

The original color-improved phosphors provided better color appearance with a small loss in lamp efficacy. Present phosphor-coated mercury lamps utilize a vanadate phosphor which not only significantly improves color appearance but increases lamp efficacy over clear mercury lamps by 7 to 11 percent. Most phosphor-coated mercury lamps provide a cool tone of light output somewhat similar to cool-white fluorescent lamps. Lamps are also available with a phosphor that creates a warmer tone of light output close to that of incandescent lamps.

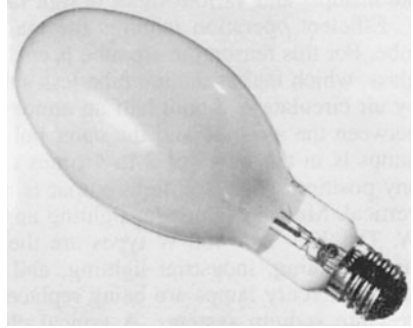


FIGURE 10.53 Phosphor-coated mercury lamp. [General Electric Co.]

116. Metal halide lamps are similar to mercury lamps in construction, in that the lamp consists basically of a quartz arc tube mounted within an outer glass bulb. However, in addition to mercury, the arc tubes contain halide salts, usually sodium and scandium iodide. During lamp operation, the heat from the arc discharge evaporates the iodides along with the mercury. The result is an increase in efficacy approximately 50 percent higher than that of a mercury lamp of the same wattage together with excellent color quality from the arc.

The amount of the iodides vaporized determines lamp efficacy and color and is temperature-dependent. Metal halide arc tubes have carefully controlled seal shapes to maintain temperature consistency between lamps. In addition, one or both ends of the arc tube are coated to maintain the desired arc-tube temperature. There is some color variation between individual metal halide lamps owing to differences in the characteristics of each lamp.

(*Standard Handbook for Electrical Engineers*) Metal halide lamps have historically been susceptible to color maintenance problems due to shifts in their color over time. Recent developments aimed to minimize the occurrence of this problem include special rounded-shape arc tubes, pulse start ignitor technology, and the use of ceramic arc tubes. Another relatively new technology is that of ceramic arc-tube metal-halide lamps. These lamps are generally available in the lower wattages, some in PAR shapes, and provide improved color consistency and very good color rendering. The clear arc tube is replaced with a short translucent ceramic arc tube of similar material to that used in a high-pressure sodium lamp.

Metal halide lamps utilize a starting electrode at one end of the arc tube which operates in the same manner as the starting electrode in a mercury lamp. A bimetal shorting switch is placed between the starting electrode and the adjacent main electrode. This switch closes during lamp operation and prevents a small voltage from developing between the two electrodes, which in the presence of the halides could cause arc-tube seal failure. A typical metal halide lamp is shown in Fig. 10.54, and Fig. 10.55 is a drawing with the parts identified.

Metal halide lamps are available in 32-, 50-, 70-, 100-, 175-, 250-, 400-, 1000-, and 1500-W sizes. There are also special halide lamps with limitations in burning positions which have higher lamp efficacy. While many metal halide lamps can be operated in any

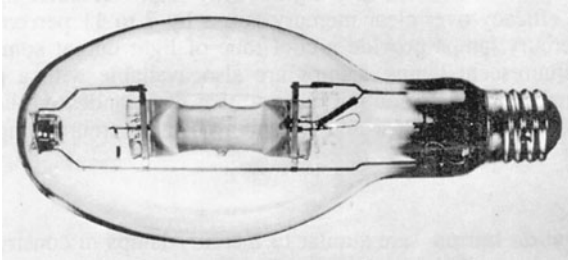


FIGURE 10.54 Metal halide lamp. [General Electric Co.]

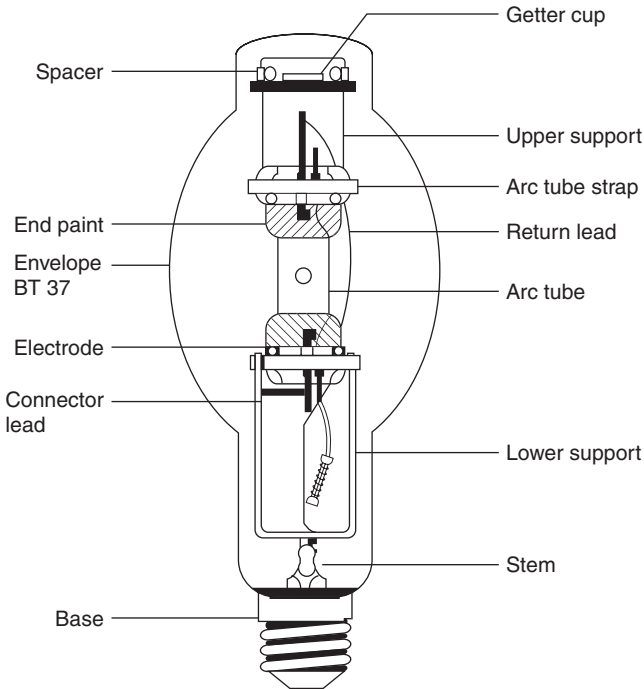


FIGURE 10.55 Construction of a standard metal halide lamp. (Courtesy of Osram Sylvania.)

burning position, initial light output, lumen maintenance, and life ratings change with burning position. There are also 175-W and 400-W metal halide lamps designed for special metal halide regulator type ballasts which provide higher lamp efficacy and longer life.

Although metal halide ballasts are designed to the specific starting and operating requirements for these lamps, there are several metal halide lamps which are designed to operate on certain 400- or 1000-W mercury-lamp ballasts. They provide substantially higher light output over life than the mercury lamps they have replaced. Special 250-W and 400-W metal halide lamps are available to operate on comparable wattage high pressure sodium ballasts. These lamps are intended for use in applications where the color of HPS lamps is not desired. Light output and life of the metal halide lamps is lower than with the HPS lamps.

Phosphor-coated metal halide lamps have the same external appearance as phosphor-coated mercury lamps. They are available in 175-, 250-, 400-, and 1000-W types. Although the light from the metal halide arc tube provides good color rendition, the phosphor, similarly to phosphors used in mercury lamps, adds further to the color rendition. It also provides a diffuse light source for lighting fixtures when optical characteristics are better suited to this type of lamp. Special metal halide lamps, with aluminized reflective coatings on the top of the bulb, can reduce glare and help minimize light trespass. There are PAR- and R-bulb mercury and metal halide lamps, xenon metal halide for fiber optic systems, and iodine metal halide to simulate natural daylight.

117. The ultraviolet energy produced by mercury and metal halide arc tubes is absorbed by the outer bulb in normal operations. However, in the event that the outer bulb is broken by being struck by an external object such as a basketball in a gymnasium, the arc tube, if not damaged, may continue to operate for many hours. With sufficient exposure, the ultraviolet energy from an arc tube operating without the protection of the outer bulb can cause temporary sunburn of the skin or eyes, similar to an excess exposure to the sun.

For lighting applications in open fixtures where lamps may be subject to accidental or intentional breakage, special self-extinguishing lamps are available. These lamps are designed with an internal fuse in series with the arc tube, which opens within 15 min when exposed to air, causing the arc to be extinguished.

The NEC requires that in such facilities the luminaires installed be equipped with a solid glass or plastic lens to provide containment. In addition, metal-halide lamps are known to occasionally undergo what the industry euphemistically describes as “nonpassive end-of-life failures.” For this reason the NEC requires, regardless of location, that metal halide luminaires using lamps other than thick-glass parabolic reflector (PAR) lamps must be either contained or provided with a rejection feature so they can only be relamped with a special type of lamp. These lamps, designated “Type O,” (for “open”), have been tested to contain an inner arc-tube rupture and have a longer-than usual screw-shell. They mate with a Type O lampholder, which is deep enough that any other metal-halide lamp will not be able to be screwed in far enough to meet with the center contact, preventing energization.

118. The high-pressure sodium (commonly referred to as HPS) lamp has the highest light-producing efficacy of any commercial source of white light (Fig. 10.56), with a drawing showing its internal parts in Fig. 10.57. Like most other high-intensity-discharge lamps, high-pressure sodium lamps consist of an arc tube enclosed within an outer glass bulb. The arc operates in a sodium vapor at a temperature and pressure which provide a warm color with light in all portions of the visible spectrum at a high efficacy. Owing to the chemical activity of hot sodium, quartz cannot be used as the arc-tube material. Instead, high-pressure sodium arc tubes are made of an alumina ceramic (polycrystalline alumina oxide) which can withstand the corrosive effects of hot sodium vapor.

There are coated-tungsten electrodes sealed at each end of the arc tube. The sodium is placed in the arc tube in the form of a sodium-mercury amalgam which is chemically inactive. The arc tube is filled with xenon gas to aid in starting.

High-pressure sodium lamps are available in sizes from 35 to 1000 W. They can be operated in any burning position and have the best lumen-maintenance characteristic of the three types of HID lamps. Except for the 35-W lamp, most high-pressure sodium lamps have rated lives of more than 24,000 h. The 35-W lamp has a rated life of 16,000 h. The 50-, 70-, 100-, and 150-W sizes are available in both a mogul-base and a medium-base design.

Diffuse-coated high-pressure sodium lamps are available in several wattages for use in lighting fixtures where a larger effective light-source size is desired, such as units for low

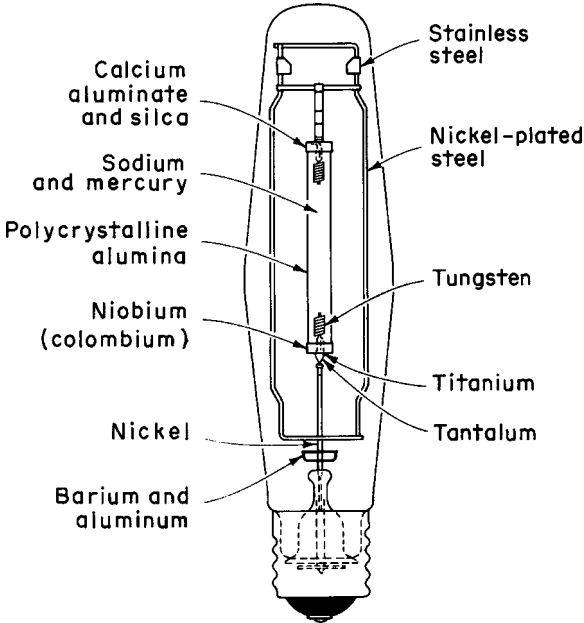


FIGURE 10.56 High-pressure sodium lamp. [General Electric Co.]

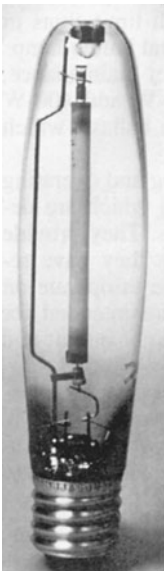



FIGURE 10.57 Construction of a typical high-pressure sodium lamp. (Courtesy of Osram/Sylvania.)

mounting height and decorative applications. The coating does not change the lamp color and reduces lamp efficacy by 5 to 7 percent.


Improved-color high-pressure sodium lamps are available in a few types with significantly better color appearance. This is achieved through a change in arc-tube pressure. The light output and life of improved-color HPS lamps are less than with the standard high-pressure sodium lamp.

Special high-pressure sodium lamps have been designed to operate on specified mercury ballasts. Lamp design is similar to that of standard high-pressure sodium lamps except that a neon-argon starting gas is used and an internal starting aid is located in the lamp to permit starting on approved mercury ballasts. These lamps can only be used on reactor or autotransformer lag-type mercury ballasts. Lamp life and efficacy are reduced for these special HPS lamps.

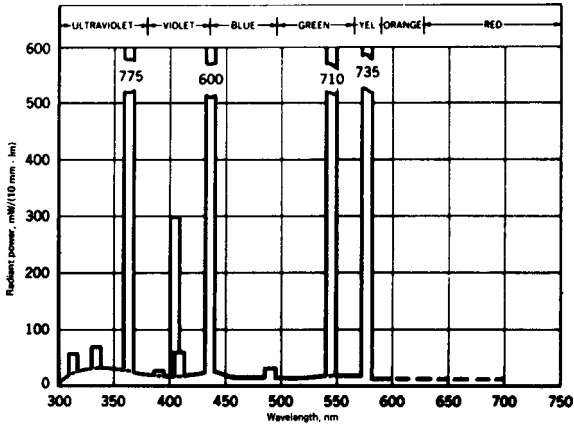
119. HID spectral-distribution mercury, metal halide, and high-pressure sodium lamps have significantly different color characteristics in the light produced by each type. All HID lamps produce light in definite lines or bands rather than the continuous spectrum of an incandescent lamp. The typical spectral-power-distribution curves for HID lamps are shown in Fig. 10.58.



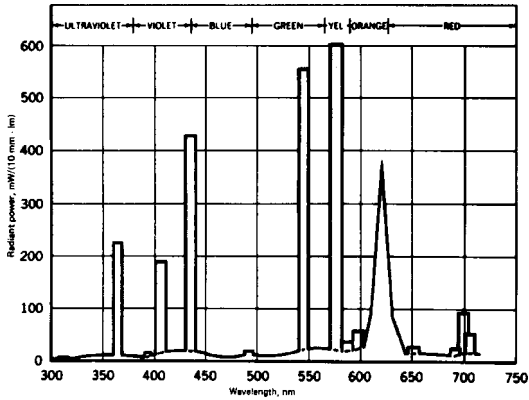I. Clear mercury.




II. Phosphor-coated mercury.

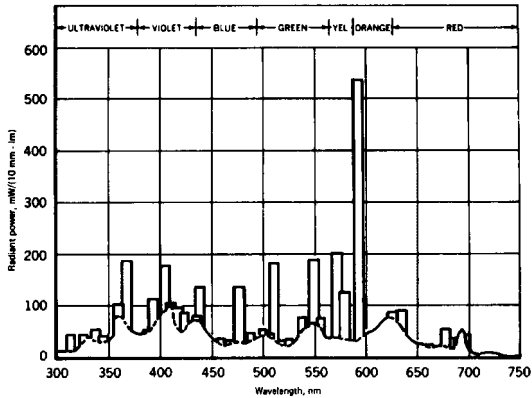


III. Clear metal halide.

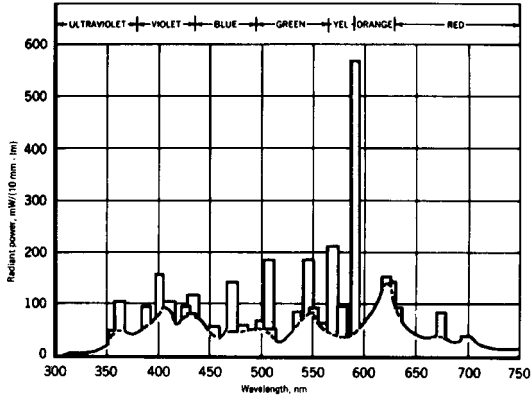FIGURE 10.58 Spectral characteristics of high-intensity-discharge lamps. [General Electric Co.]



IV. Phosphor-coated metal halide.

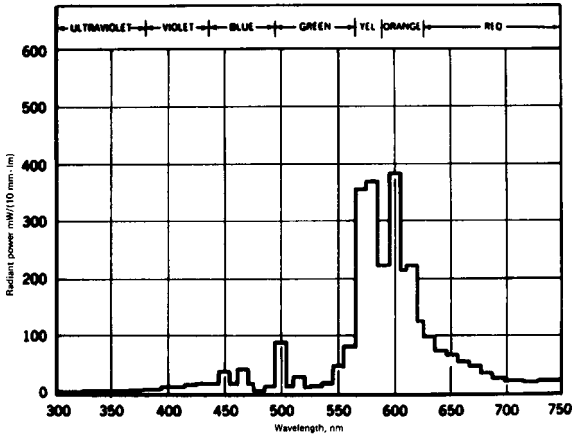

V. High-pressure sodium.

FIGURE 10.58 (Continued)

120. Application of HID lamps for general lighting. HID lamps are widely used in flood-lighting and roadway, industrial, and sports lighting and to an increasing extent in indoor commercial applications. Owing to their greater efficacy, metal halide and high-pressure sodium lamps have replaced mercury lamps in new HID installations. In addition, many mercury installations are being changed to metal halide or HPS systems. Mercury lamps are used today primarily for replacement purposes.

HPS lamps are used predominantly in applications where efficacy and lowest lighting-system operating costs are the primary factors affecting system choice. Metal halide systems are used primarily in installations where color appearance together with high efficiency are important, such as store applications or sports lighting for television.

121. Reflector-type mercury lamps are available in several wattages for use in applications where it is desirable to provide optical control of the light within the lamp. As in the case of incandescent reflector-type lamps, the sealed-in reflecting surface does not

deteriorate during the life of the lamp. Reflector-type lamps are available in 100-, 175-, 250-, 400-, and 1000-W sizes. They are used primarily in floodlighting applications. Typical types are shown in Fig. 10.59.

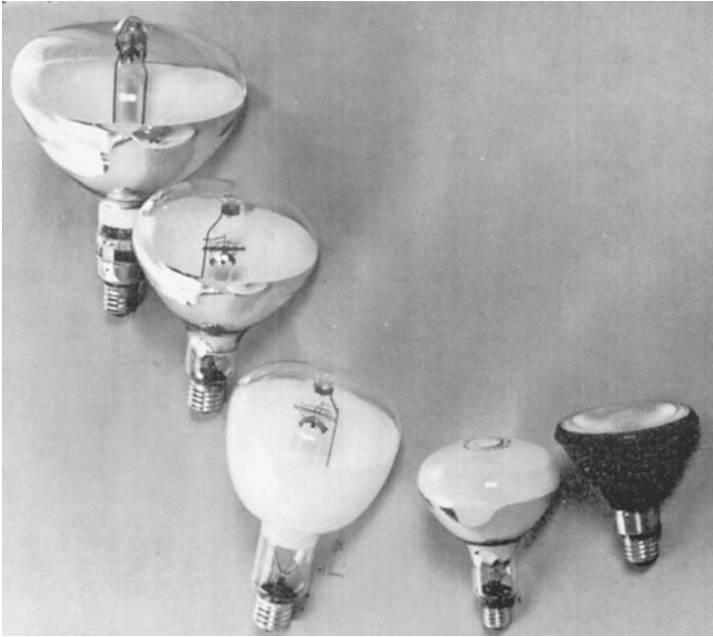


FIGURE 10.59 Reflector-type mercury lamps. [General Electric Co.]

122. Self-ballasted mercury lamps. All mercury lamps require a ballast to provide proper starting voltage and control the current in the lamp. Self-ballasted mercury lamps are lamps which will start with the available line voltage and contain an internal tungsten filament in series with the arc tube to limit the lamp current. The filament ballast increases the losses in the lamp. Thus, the lamp efficacy of self-ballasted mercury lamps is much lower than that of other mercury lamps. Since there is no ballast in the circuit, self-ballasted mercury lamps, like incandescent lamps, must be matched to the voltage at the socket.

123. High-intensity-discharge lamp ballasts. (*Standard Handbook for Electrical Engineers*) The practical limit of an HID lamp's current-carrying capacity is how high a temperature its enclosing tube can withstand without rupturing. By connecting an impedance in series with the lamp, the current is controlled. In most lamps about one-half the supply voltage is absorbed by a series ballasting device. As a result, unless a current-limiting device is used, the lamp current will increase until the lamp is destroyed. Ballasts for HID lamps provide three basic functions: to control lamp current to the proper value, to provide sufficient voltage to start the lamp, and to match the lamp voltage to the line voltage. Ballasts are designed to provide proper electrical characteristics to the lamp over the range of primary voltage stated for each ballast design. Most HID ballasts are designed into the luminaire. Typical ballasts are shown in Fig. 10.60.

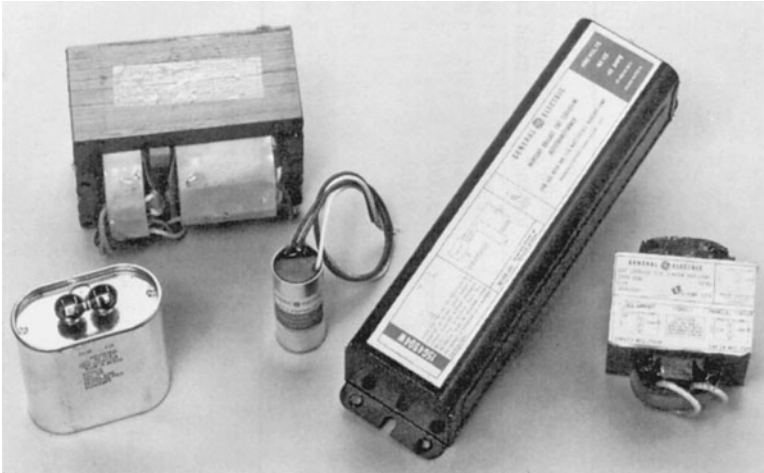


FIGURE 10.60 Ballasts for high-intensity-discharge lamps. [General Electric Co.]

Ballasts are classified into three major categories depending on the basic circuit involved: nonregulating, lead-type regulating, and lag-type regulating. Each type has different operating characteristics.

Circuits for mercury-lamp ballasts are shown in Fig. 10.61. Reactor ballasts can be used if sufficient line voltage is available to start and operate the mercury lamp, approximately twice the lamp voltage. These ballasts have a low power factor unless corrected by a capacitor. The lag ballasts consists of an autotransformer plus a reactor combined in a single structure. Performance is similar to that of a reactor, and the ballast is used where normal line voltage is lower than the required lamp-starting voltage. This ballast also has a low power factor unless corrected by a capacitor. Lag and reactor ballasts should only be used when line-voltage regulation is good, not over ± 5 percent since lamp wattage will vary ± 10 percent with a ± 5 percent change in line voltage.

The regulator ballast, also referred to as the constant-wattage (CW) or stabilized ballast, has primary and secondary windings electrically isolated from each other. A capacitor is used together with the magnetic portion of the ballast to control the lamp current. Owing to the capacitor, regulator ballasts have a high power factor. The basic advantage of regulator ballasts is their excellent regulation of lamp wattage with changes in line voltage. Lamp watts vary only ± 2 to 3 percent with line-voltage changes of ± 13 percent.

Autoregulator ballasts combine an autotransformer with the regulator circuit. As a result, these ballasts are smaller and less costly than the regulator design and have lower losses. They are also called constant-wattage-autotransformer (CWA) ballasts. The regulation of lamp wattage with line voltage is very good although somewhat less than with the regulator design: approximately a ± 5 percent change in lamp wattage with a ± 10 percent change in line voltage. Autoregulator ballasts have a high power factor. Multiple primary-voltage ratings are available by using a series of taps in the transformer. Ballasts designed for 120/208/240/277 V are available.

Two-lamp mercury-lamp ballasts are available. The circuit is basically the same as that of the single-lamp regulator ballasts except that two lamps are operated in series.

Metal halide ballasts use the same circuit as mercury autoregulator ballasts. The magnetic design is different to provide the required peaked open-circuit voltage for satisfactory

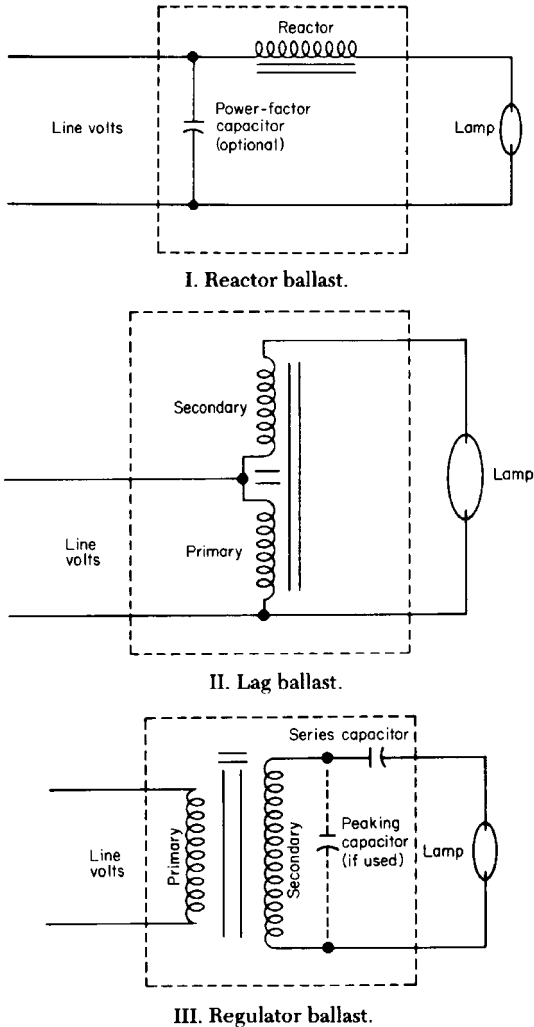


FIGURE 10.61 Mercury-lamp ballast circuits. [General Electric Co.]

lamp starting and operation. Metal halide ballasts provide a regulation of lamp wattage between those of an autoregulator and a reactor or lag ballast. With a 10 percent change in low voltage, lamp wattage will vary by about 10 percent. All-metal-halide ballasts have a high power factor.

Ballasts for high-pressure sodium lamps, in addition to providing the basic functions of all ballasts, have an additional requirement. In contrast to mercury and metal halide lamps, the voltage of high-pressure sodium lamps increases significantly during lamp life. The ballast must be able to handle this change and operate the lamp within specified limits. The voltage required to start HPS lamps is much greater than that required for mercury and

metal halide types. This necessitates an auxiliary starting circuit which supplies a low-energy, high-voltage pulse of several thousand volts. This starting aid is a separate device from the magnetic and capacitor portions of the ballast. As the result of the high-voltage starting pulse required by high-pressure sodium lamps, the lampholder for these lamps must be rated to handle this voltage.

The circuits of high-pressure sodium ballasts are shown in Fig. 10.62.

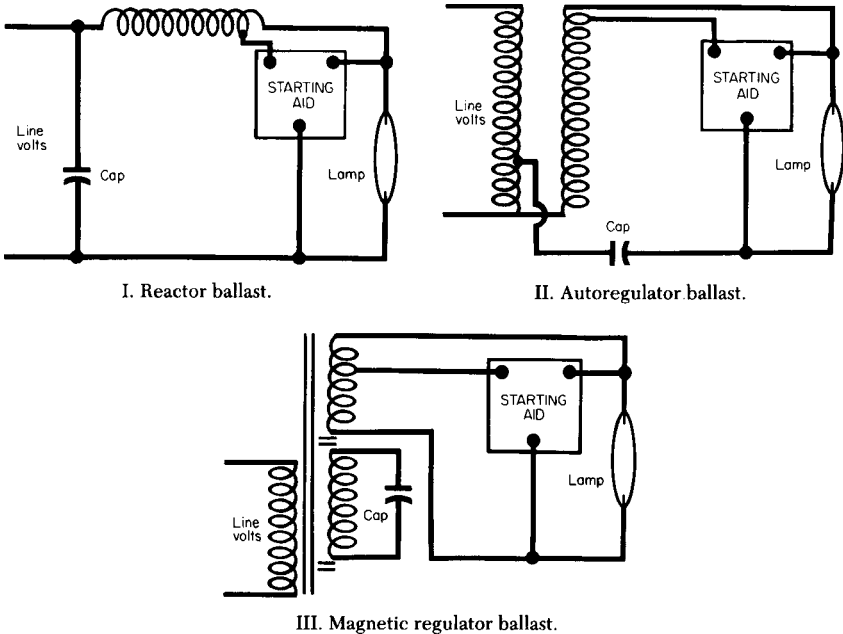


FIGURE 10.62 Circuits of high-pressure sodium lamp ballasts. [General Electric Co.]

As with mercury reactor ballasts, reactor ballasts for high-pressure sodium lamps can be used only when there is sufficient line voltage for proper lamp operation. They have a low power factor, unless corrected, and have poor regulation of lamp wattage with line-voltage variation. The required starting aid is part of the circuit.

Autoregulator and magnetic-regulator HPS ballasts are similar to mercury autoregulator and regulator ballasts, respectively, with the magnetic design changed to provide the proper lamp characteristics and the addition of the starting aid. They have regulation characteristics similar to those of mercury ballasts and have a high power factor.

As indicated with the various ballast designs, the ability of the ballast to control lamp wattage and thus light output as the line voltage changes is referred to as lamp-wattage regulation. The effect of line-voltage variation on lamp wattage for the various HID ballast designs is shown in Fig. 10.63.

Data on HID ballasts can be obtained from ballast manufacturers.

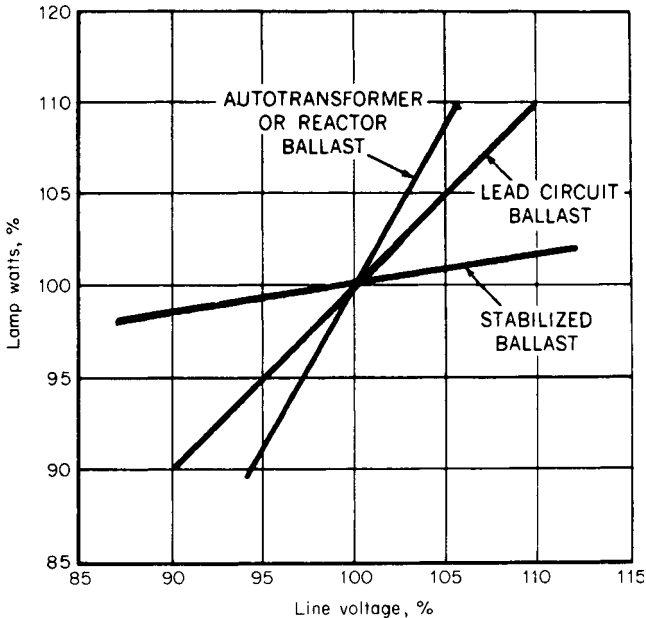


FIGURE 10.63 Effect of line-voltage variation on HID lamps. [General Electric Co.]

124. HID lamp warm-up and restrike. All high-intensity lamps require time for the arc to stabilize as its operating value and achieve full light output. This requires several minutes and is controlled by the ballast type. During the warm-up period, ballast line current and wattage will change continuously until they reach the stable operating point. Figure 10.64 shows the characteristics for a typical lag autotransformer or reactor ballast and a regulator ballast.

125. Low voltage-dip tolerance. The ability of an HID lamp to tolerate a dip in line voltage depends on ballast design. Ballasts are usually rated on their ability to tolerate dips of up to 4 s while keeping a lamp operating. Generally, nonregulating ballasts will tolerate dips of only 10 to 20 percent, while regulating ballasts will sustain lamp operation during dips in line voltage of as much as 30 to 50 percent for lag-type regulator ballasts and 20 to 40 percent for lead-type regulator ballasts. However, in HPS systems ballast dip tolerance changes over time owing to the increase in lamp voltage. After midlife of the lamp, regulating and lead types of regulator ballasts become susceptible to lamp dropout with more than 10 to 15 percent dips in line voltage. Dip tolerance of lag-type regulator HPS ballasts also changes but remains above the tolerance for lead-type regulator ballasts.

When HID lamps are extinguished owing to a voltage dip or turning the fixture off, there is a delay in restrike time until the arc tube can cool and internal pressure can drop to the level where the arc will restrike with the available voltage from the ballast. This time varies with different HID lamps. Mercury lamps will restrike in 3 to 7 min depending on the type. Metal halide lamps can take as long as 15 min to restrike, while high-pressure sodium lamps will restrike in the shortest time, usually within 1 min.

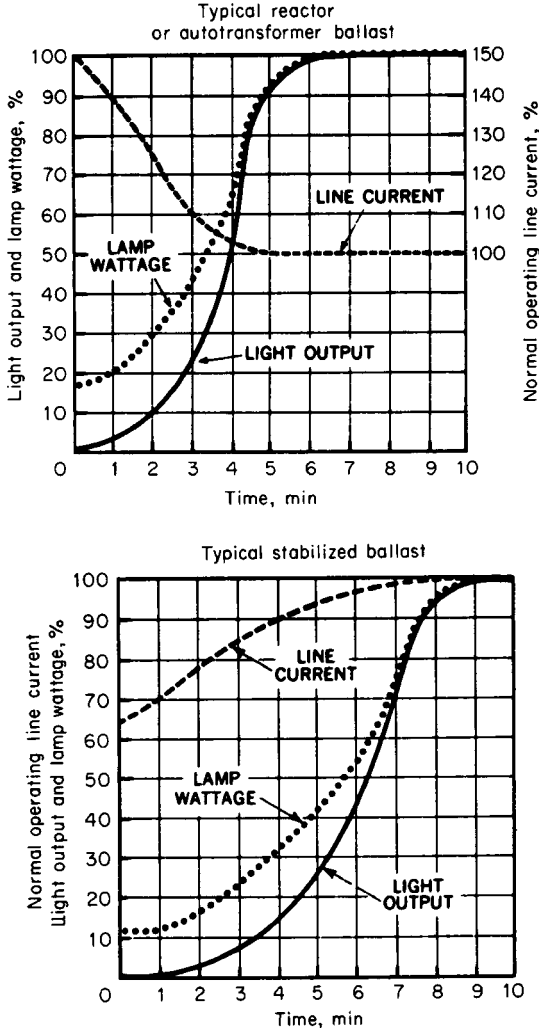


FIGURE 10.64 HID-lamp light output, lamp wattage, and line current during the lamp warm-up period.

(*Standard Handbook for Electrical Engineers*) Tungsten-halogen auxiliaries are available for HID industrial luminaires to provide standby illumination in the event of momentary power failure. For indoor and outdoor sports lighting, and other applications where instant restrike is preferable, special ignitors are available, as are special instant-restrike high-pressure sodium lamps. Metal halide lamps with a wire lead (at the end opposite the base) are used with auxiliary ignitors to achieve instant restrike. For aisle lighting in warehouses and other interior and exterior situations where illumination levels for accurate seeing are not needed all of the time, high/low electrical components, combined with occupancy detectors, transmitters, and luminaire-mounted receivers can provide major energy saving by reducing input wattage 50% to 70% during intervals when the spaces are unoccupied.

126. Line fusing of HID ballasts. There are times when line fusing of an HID ballast may be desirable, as in high-bay or other relatively inaccessible installations. The principal reason for fusing is to remove a faulty luminaire from a circuit before it causes a branch-circuit outage. A fused ballast aids in troubleshooting when a faulty ballast is encountered. Fuse ratings should meet ballast manufacturers' recommendations. Slow-blow types are desirable when available to minimize nonfault opening.

127. Remote installation of HID ballasts. Although most HID lighting fixtures have the ballast installed in the fixture, in occasional applications it is desirable to install the ballast remote from the fixture. With mercury and metal halide systems, correctly sized wire is required to maintain proper ballast voltage at the lamp socket as the primary design factor. In HPS systems, the maximum distance is limited by the characteristics of the starting aid which provides the low-energy starting pulse. The ballast manufacturer should be consulted for the remote-mounting distance limitation of HPS ballasts.

128. Effect of temperature. Excessive temperatures can result in lamp failure or unsatisfactory performance. Most HID lamps have a maximum bulb-temperature limit of 400°C (752°F) and a maximum base-temperature limit of 210°C (410°F) for mogul-base types and 190°C (374°F) for medium-base designs.

Most HID ballasts have sufficient voltage to start lamps at -29°C (-20°F). HID ballasts have maximum operating-temperature limits for reliable life performance. Ballasts designed for mounting within fixtures have a coil-temperature limit of 165°C (329°F). Enclosed ballasts are generally designed for ambient temperatures of 40°C (104°F) or less. Special high-temperature enclosed-ballast designs are available for some lamp types for ambient temperatures as high as 60°C (140°F).

129. High-intensity-discharge system troubleshooting. HID lighting systems include the power supply system (wiring, circuit breakers, and switches), lighting fixture (socket, reflector, refractor or lens, and housing), ballast, lamp, and, in outdoor fixtures, frequently a photoelectric cell to turn on the fixture at dusk. When an HID system does not operate as expected, the source of the problem can be in any part of the total system.

It is important to understand normal lamp-failure characteristics to determine whether or not operation is abnormal. All HID lamps have expected lamp-failure patterns over life; these are published by lamp manufacturers. Rated life represents the expected failure point for one-third to one-half of the lamps, depending on the lamp type and the lamp manufacturer's rating.

End-of-life characteristics vary for the different HID lamp types.

1. *Mercury.* Normal end of life is a nonstart condition or very low light output resulting from blackening of the arc tube owing to electrode deterioration during life.
2. *Metal halide.* Normal end of life is a nonstart condition resulting from a change in the electrical characteristic so that the ballast can no longer sustain the lamp. Lamp color at the end of life will usually be warmer (pinker) than that of a new lamp owing to arc-tube blackening during life that changes thermal balance in the arc tube. Metal halide lamps can have a nonpassive failure mode at the end of life. This varies with lamp type and burning position. The lamp manufacturer's recommendations regarding metal-halide lamp enclosure should be reviewed.
3. *High-pressure sodium.* Normal end of life is on-off cycling. This results when an aging lamp requires more voltage to stabilize and operate than the ballast is able to provide.

When the lamp’s normally rising voltage exceeds the ballast output voltage, the lamp is extinguished. Then, after a cool-down period of about 1 min, the arc will restrike and the cycle is repeated. This cycle starts slowly at first and increases in frequency, if the lamp is not replaced, until ultimately the lamp fails owing to overheating of the arc-tube seal.

There are four basic visual variations in the lamp of an HID lighting system which indicate that a problem may exist: (1) the lamp does not start, (2) the lamp cycle is on and off or is unstable, (3) the lamp is extra bright, or (4) the lamp is dim. The following table indicates the most likely possible causes for each of these system conditions.

HID-system conditions	Possible causes	
	Other than lamp	Lamp
Lamp does not start.	Ballast failure	Lamp loose in socket
	Incorrect or loose wiring	Incorrect lamp
	Low supply voltage	Normal end of life
	Low ambient temperature broken	Lamp internal structure broken
	Circuit breakers tripped	
	Inoperative photocell	
	Starting-aid failure (HPS)	
Lamp cycle is on and off or is unstable.	Low supply voltage	Normal end of life or or (HPS)
	Incorrect ballast	
	High supply voltage (HPS)	Lamp operating voltage too high (HPS)
	Ballast voltage low	
	System voltage dipping	Lamp arc tube unstable
Lamp is extra bright.	Fixture concentrating energy on lamp (HPS)	
	Shorted or partially shorted ballast or capacitor	Incorrect lamp
	Overwattage operation	High lamp voltage
Lamp is dim.	Low supply voltage	Incorrect lamp
	Incorrect ballast	Low lamp voltage
	Low ballast voltage to lamp	Lamp a hard starter
	Dirt accumulation	
	Ballast capacitor shorted	
	Corroded connection in fixture	

130. Low-pressure sodium lamps (Fig. 10.65) utilize sodium vapor to conduct the arc. They provide very high efficacy with light that is almost totally yellow in color. The lamps are constructed with two glass envelopes. The inner arc tube is usually U-shaped and is made of a special sodium-resistant glass. Glass can be used in low-pressure sodium lamps because the sodium vapor operates at temperatures and pressures substantially lower than those of a high-pressure sodium lamp. Electrodes are sealed into the ends of the arc tube. The arc tube is filled with a starting gas of neon with a small amount of argon. Sodium metal is placed in the arc tube. To reduce heat loss, the outer jacket is evacuated and the inside of the outer bulb is coated with an indium oxide coating that transmits light but reflects infrared energy. Low-pressure sodium lamps are available in wattages from 18 through 185 W. As with any other discharge lamp, low-pressure sodium lamps must be operated on a ballast designed to meet the lamp-starting and -operating requirements. Owing to the monochromatic yellow color of the light (consisting of a double line in the yellow region of the spectrum at 589 and 589.6 nm) from low-pressure sodium lamps, they are generally used in applications where the appearance

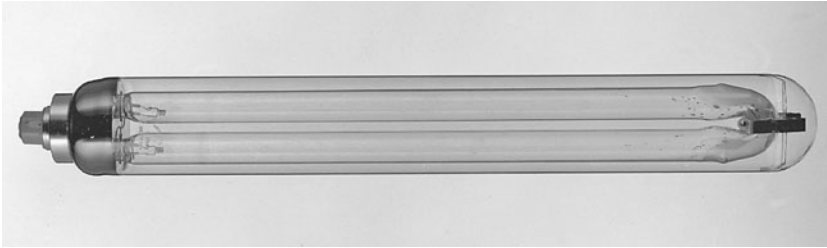


FIGURE 10.65 Low-pressure sodium lamp. [General Electric Co.]

of people and colors is not important. The major application of these lamps is for area lighting and streetlighting where monochromatic yellow light is acceptable and a high luminous efficacy is required. Low-pressure sodium lamps are often applied in the vicinity of astronomical observatories, since the monochromatic light can be filtered out of telescope images.

LIGHT-EMITTING DIODES (LEDs)

131. Light-emitting diodes (LEDs) represent a major new area of development in the evolution of artificial illumination. Formerly reserved for low-power signaling, they are steadily gaining power and whiteness to take their place as a source of conventional lighting. An LED is a semiconductor diode that gives off light when voltage is applied so as to electrically bias the p-n junction (refer to Div. 6, Sec. 6 and Sec. 11 for details of how this works) in the forward direction. Conventional diodes, such as those made from silicon or germanium, do not radiate in this process, but some materials such as gallium arsenide do emit visible light. LEDs inherently radiate incoherently but in a narrow spectrum, and as such are useful as indicators. Recently, however, methods have been found to produce white light from this process. One approach is to sandwich an indium gallium nitride (InGaN) semiconductor in a cladding layer of gallium nitride (GaN). The InGaN radiates at about 460 nm (dark blue) and the GaN emits in the green range. If this combination is covered with a phosphor in the yellow range (typically yttrium aluminum garnet crystals doped with trivalent cerium (Ce^{+++} :YAG) the blue light combines with the yellow from the phosphor. Since yellow is a combination of red and green, the eye perceives the resulting mix as red, green, and blue, which makes a very passable approximation of white. There are other approaches under active investigation, including the use of nanotechnology to apply special coatings to blue LEDs.

The efficacy of white LED light sources has been steadily moving forward as well. The highest efficacy commercially available is somewhat over 100 lm/W, which equals or exceeds a very good fluorescent source and approaches the best high-pressure sodium sources. This is a fast-moving target, and values even higher than this have been claimed in a number of research facilities. The absolute theoretical maximum for any source is 683 lm/W; this is the coefficient of the definite integral that defines luminous flux (see Sec. 15.)

NEON LAMPS

132. High-voltage neon lamps (Fig. 10.66) consist of two terminals or electrodes set into the opposite ends of a glass tube which contains neon, helium, or argon gas, with or without mercury, at low vapor pressure. Refer to Div. 9, Sec. 460 for NEC requirements that pertain to this work. Refer to Sec. 141 for information on low-voltage neon lamps, referred to as glow-lamps.

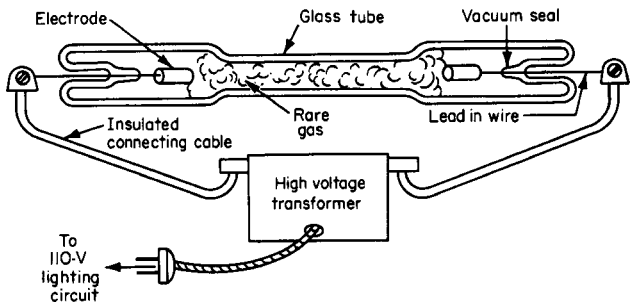


FIGURE 10.66 Schematic diagram of gas-filled tube and transformer. [S. C. Miller and D. G. Fink, *Neon Signs*.]

As in all gaseous-discharge lamps a higher voltage is required to start the arc than is required for continuous operation. These lamps are supplied from a high-reactance transformer in which the secondary voltage falls rapidly as the current drain is increased. This feature provides the higher voltage required to start the lamp and tends to make the arc circuit stable. Even if the secondary terminals should become short-circuited, no more than full-load current will flow, so that the transformer will not be damaged. A high voltage, 2000 to 15,000 V depending on the length and diameter of the tubing and the gas used, is applied to the electrodes at the ends of the tubing by means of this transformer. Refer to Div. 9, Sec. 459 and related sections for NEC requirements that apply to this transformer.

The tubing can be made to produce a number of different colors, depending on the gas used, the color of the glass tubing, and whether or not mercury is added. Table 133 gives the colors available.

133. Colors Obtainable from Neon Tubes
(From S. C. Miller and D. G. Fink, *Neon Signs*)

Color produced	Gas used	Mercury used	Color of glass tubing used	Gas pressure, mm of mercury
Standard colors				
Red	Neon	No	Clear	10 and over
Dark red	Neon	No	Soft red	10 and over
Gold	Helium	No	Soft yellow (noviol)	3
White	Helium	No	Clear	3
Light green	Argon	Yes	Soft canary (uranium oxide)	8
Medium green	Argon	Yes	Soft yellow (noviol)	8
Light blue	Argon	Yes	Clear	8
Dark blue	Argon	Yes	Soft blue	8
Colors available but not widely used				
Soft red	Neon	No	Soft opal	10 and over
Orange	Neon	No	Soft yellow (noviol)	10 and over
Soft white	Helium	No	Soft opal	3
Dark green	Argon	Yes	Soft medium amber	8
Red lavender	Neon	No	Soft dark purple	10 and over

134. The gas pressure as given in Table 135 must be determined quite accurately during manufacture. If the pressure is too low, the resistance of the tubing and the cathode voltage drop will be high and the tendency to sputter will be great. Sputtering means that the metal of the electrode evaporates and deposits on the tube, causing the ends of the tube to blacken. This process lowers the gas pressure still further until the tube flickers and finally fails to light. If the pressure is too high, the light will not be brilliant. The gas pressure can be tested by holding a special type of spark coil (Fig. 10.67) against either the glass or the electrode wire.

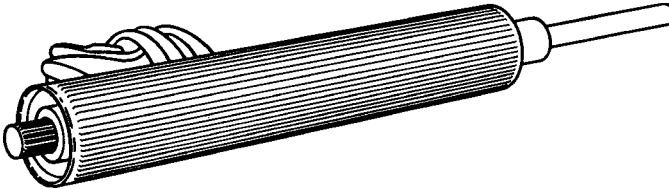


FIGURE 10.67 A high-tension spark coil for testing the vacuum system. The knob at the end is used to control the intensity of the spark which appears at the metal tip of the device. [S. G. Miller and D. G. Fink, *Neon Signs*]

135. Gas Pressure Determined by Color, Using Spark-Coil Tester

(S. C. Miller and D. G. Fink, *Neon Signs*)

Coil held against	Color observed	Gas pressure, mm of mercury	Remarks
Electrode wire	Purple	200	Color visible only at edge of electrode shell
Electrode wire	Purple	150	Faint glow in tube
Electrode wire	Purple	50	Fair glow in tube
Electrode wire	Blue purple	15	Dark glow
Electrode wire	Red purple	4	
Electrode wire	Lavender	2	
Electrode wire	Light lavender	1	
Glass	Dark blue	0.25	
Glass	Light blue	0.10	
Glass	Very light blue	0.01	
Glass	Blue disappears	0.005	No glow in tube, blue haze near glass wall

136. The principal application of neon lamps is for sign lighting. They are particularly adapted for this class of illumination owing to their bright colors and the fact that the tubes lend themselves readily to the forming of letters and figures. The brilliant single-color red, blue, or green light has an eye appeal in outdoor advertising which white light cannot offer. The orange-red light of the neon tube penetrates great distances, making neon signs stand out with brilliance and sparkle even on rainy nights. The flexibility of these thin glass tubes in the forming of trademarks, special figures, and animated designs also adds to their desirability to the advertiser. Finally, the relatively low wattage (about 4 to 6 W/ft of tubing) makes the operating cost relatively low.

137. The diameter of tubing used is from 7 to 15 mm (9/32 to 19/32 in). These sizes are convenient to work with and thoroughly practical for almost all applications. The voltage required per foot of tubing varies with the diameter of the tubing, as given in Fig. 10.68. The smaller-size tubes give more brilliant light but require the greatest voltage per foot of tube.

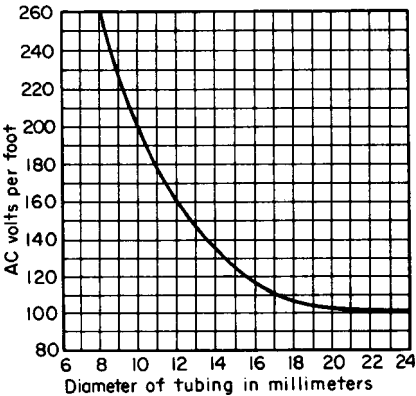


FIGURE 10.68 The voltage per foot required to operate tubing of various diameters filled with neon gas. [S. C. Miller and D. G. Fink, *Neon Signs*]

138. The transformers are rated according to secondary voltage and short-circuit current in milliamperes. Table 140 gives a list of standard transformers with the length of tubing in feet which can be supplied by each. This length varies with the diameter of the tubing and the gas used. When it is desired to combine two different sizes and colors of tubing in series on one transformer, the chart of Fig. 10.69 can be used. Any combination of lengths which are side by side in one column in the chart can be used on the transformer whose rating is given above the chart.

For example, a 9000-V, 30-mA transformer may supply (in the first column of the chart) 20 ft (6.1 m) of 15-mm blue tubing and 16 ft (4.9 m) of 15-mm red or (in the third column) 20 ft of 15-mm red and 11 ft (3.4 m) of 12-mm blue, making a total of 36 ft (11 m) in the first case of the larger tubing and 31 t (9.4 m) in the second case of the combination of the larger and the medium-size tubing. Note that as the diameter of the tubing is decreased, the number of feet which can be supplied decreases on account of the rise in the voltage per foot, as shown in Fig. 10.73.

139. In the makeup of signs one section of tubing usually forms two or three letters. The different sections of tubes are then connected in series with wire jumpers until as many feet of tubing have been assembled as can be handled by the transformer to be used, as determined from Table 140. In large signs several transformers, each connected to its own section of tubing, can be used. The crossovers of tubing between letters can be blocked out by winding the tubing with tape and covering it with a waterproof varnish, or the tubes can be painted with a nonmetallic opaque paint. The glass should be made perfectly clean before painting by rubbing it with a wet cloth and drying. Metallic paint (with a lead or copper base) should never be used on the tubing, as it will conduct electricity and may cause a corona discharge between the tube and the housing which will attack the glass.

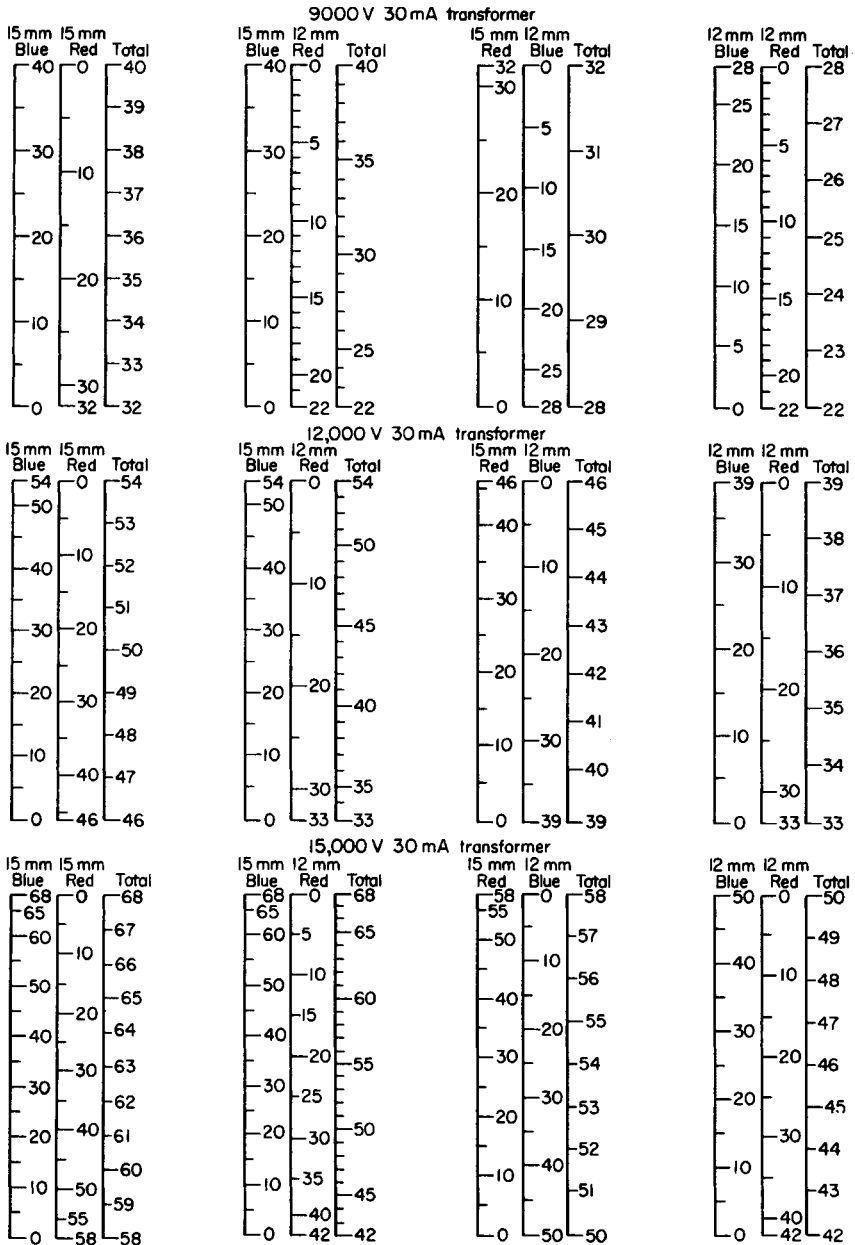


FIGURE 10.69 Chart for determining the footage of combinations of red and mercury tubing which may be run from a single transformer. [S. C. Miller and D. G. Fink, *Neon Signs*.]

140. Transformer Chart, Showing Maximum Number of Feet of Tubing a Given Transformer Will Carry^a

(S. C. Miller and D. G. Fink, *Neon Signs*)

Transformer specifications					Color of tubing															
Secondary volts	Second-ary milli-amperes short-circuited	Volt-am-peres	Oper-ating pri-mary watts	Pri-mary am-peres, open	Red				Blue				White or gold							
					Diameter of tubing, mm															
					7	9	10	11	12	15	7	9	10	11	12	15	9	10	11	12
15,000	60	875	400	8.0	...	28	32	36	43	60	...	34	38	44	54	70	...	13	18	23
15,000	30	450	210	4.0	...	27	31	34	42	58	...	32	36	42	50	68	9	12	16	22
12,000	30	350	175	3.2	...	21	24	28	33	46	...	26	29	34	39	54	7	9	12	17
12,000	25	280	145	2.5	...	18	23	25	30	40	...	22	27	31	36	49	...	7	10	15
9,000	30	280	130	2.5	...	14	17	19	22	32	...	18	20	23	28	40	...	6	9	12
9,000	18	200	80	1.8	9	12	15	17	20	28	11	15	18	20	24	34				
7,500	30	245	100	2.2	...	9	12	15	17	21	...	12	15	18	21	26				
7,500	20	150	72	1.3	7	9	12	15	17	...	8	12	15	18	21					
7,500	18	140	70	1.2	7	9	12	15	17	...	8	12	15	18	21					
6,000	30	170	88	1.5	9	11	13	17	11	13	15	22				
6,000	20	130	60	1.1	6	7	9	11	13	17	7	9	11	13	15	22				
5,000	30	160	70	1.4	8	9	11	15	9	11	13	18				
5,000	20	100	50	0.9	...	6	8	9	11	15	9	11	13	18				
5,000	18	95	48	0.8	5	6	8	9	11	15	6	8	9	11	13	17				
4,000	30	130	60	1.1	...	5	6	7	8	12	8	9	10	14				
4,000	20	75	38	0.6	...	5	6	7	8	6	8	9	10					
4,000	18	70	36	0.6	...	5	6	7	8	6	8	9	10					
3,500	18	70	35	0.6	2	3	4	5	6	...	3	4	5	6	7					
3,000	20	55	30	0.5	1.5	2	3	4	5	...	2	3	4	5	6					
2,000	20	45	22	0.4	1	1.5	2	3	4	...	1.5	2	3	4	5					

^aThis chart was compiled from an average taken from various charts listed by leading transformer companies in the United States. Values given are conservative, to allow for variations in glass diameters.

141. Low-voltage neon-glow lamps (Fig. 10.70) are operated on 105- to 125-V dc or ac systems. They contain two plates to form electrodes spaced with their abutting edges about $\frac{1}{16}$ to $\frac{1}{8}$ in (1.6 to 3.2 mm) apart. The bulb is filled with neon gas. A high-resistance coil in the base or external is connected in series with the electrodes and serves to limit the current, no auxiliary devices being necessary. When the circuit is closed, the 110 to 125 V causes the small air space between the plates to become ionized. A glow

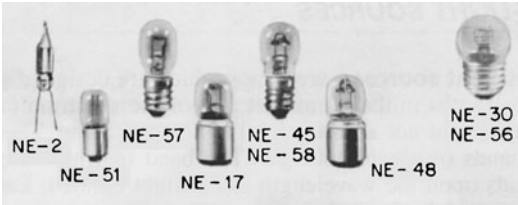


FIGURE 10.70 Low-voltage neon-glow lamps. [General Electric Co.]

discharge takes place between the plates and then spreads so as virtually to cover the surface of the plates. The plates are very rugged and long-lived, failure usually being due to the burning out of the series resistance. When these lamps are used on direct current, only one electrode glows, whereas on alternating current both electrodes glow. They can therefore be used as an ac, dc detector device. They may be used as pilot and indicator lamps in industry, for stroboscopic lamps in the laboratory, and as all-night lights in homes. Their low wattage, long life, and dependability make them ideal for such uses. Other glow-lamp applications in electronic circuitry include oscillators, pulse generators, voltage regulators, and coupling networks. The characteristics of neon-glow lamps are given in Table 142.

Their useful life varies approximately as the inverse of the cube of the current. A glow lamp has a negative volt ampere characteristic; hence a limiting resistance is used in series with it. In conventional screw-base types, the resistor is concealed in the base. Average lamp life ranges between 7500 and 25,000 h.

142. Glow Lamps, 105–125 V

(General Electric Co.)

Lamp-ordering code	Nominal current, mA	Bulb	Base	Maximum overall length, in	Starting voltage		Series resistance, Ω
					ac	dc	
B1A (NE-51)	0.3	T-3½	Miniature bayonet	1 3/16	65	90	220,000
A1A (NE-2)	0.7	T-2	Wire leads	1	65	90	100,000
C7A (NE-2D)	0.7	T-2	Single-contact midget flange	15/16	65	90	100,000
A1H	1.2	T-2	Single-contact midget flange	5/8	95	135	47,000
C9A (NE-2J)	1.9	T-2	Single-contact midget flange	15/16	95	135	30,000
B5A (NE-17)	2.0	T-4½	Double-contact bayonet candelabra	1½	65	90	30,000
B7A (NE-45)	2.0	T-4½	Candelabra screw	1 17/32	65	90	30,000
B8A (NE-47)	2.0	T-4½	Single-contact bayonet	1½	65	90	30,000 ^a
B9A (NE-48)	2.0	T-4½	Double-contact bayonet candelabra	1½	65	90	30,000
F3A (NE-57)	2.0	T-4½	Candelabra screw	1 17/32	65	90	30,000 ^a
F4A (NE-58) ^b	2.0	T-4½	Candelabra screw	1 17/32	65	90	100,000 ^a
J9A (NE-56)	5.0	S-11	Medium screw	2 3/16	65	90	33,000 ^a
J5A (NE-30)	12.0	S-11	Medium screw	2 3/16	65	90	7,500 ^a

^aInternal resistor.

^bFor 210- to 250-V applications.

143. Argon-glow lamps, which consist of a mixture of gases, radiate mainly blue and violet and in the near-ultraviolet region. The negative glow appears blue violet. The fact that there is strong radiation in the near-ultraviolet region can be demonstrated by the fluorescent effects produced on uranium glass and many phosphorescent and fluorescent substances. Commercially, therefore, argon-glow lamps are used to some extent as convenient ultraviolet sources.

ULTRAVIOLET-LIGHT SOURCES

144. Ultraviolet-light sources are lamps which are designed primarily to produce light of wavelengths in the ultraviolet part of the spectrum (see Fig. 10.1). It should be understood that not all ultraviolet light is the same. There are at present four recognized bands of ultraviolet light. The band in which the light from any source falls depends upon the wavelength of the light emitted. Each of the recognized bands differs widely from the others in its characteristics, usefulness, and field of application. The four bands are as follows: the near-ultraviolet or fluorescent region, the erythemic region, the abiotic or bactericidal region, and the Schumann region. They are listed in order of decreasing wavelength of the light, the wavelength of the near-ultraviolet being closest to that of visible light. The light from the ordinary fluorescent lamp originates as its source as light in the near-ultraviolet band. This nonvisible light is transformed into visible light by the fluorescence of the coating on the lamp tube under the influence of the near-ultraviolet light. The light output from the lamp therefore becomes visible light, so that the ordinary fluorescent lamp is not an ultraviolet-light source. However, by the use of special phosphors for the coating of fluorescent lamps, fluorescent lamps can be made to be sources of ultraviolet light.

The common methods of producing ultraviolet radiation are (1) by carbon and tungsten arcs, (2) by tungsten filaments operated at higher temperatures than in ordinary lamps, and (3) by gaseous-discharge lamps of proper design. Ultraviolet light can be used for healthful radiation as in the case of the sunlight lamps, for photographic printing, for illuminating fluorescent materials for analysis or for theatrical effects, or for the killing of germs as in the case of the germicidal lamps.

145. Black light (General Electric Co.) is the popular name for near-ultraviolet radiant energy in the 320- to 380-mμ range. The label is not a very precise one. Whether or not this energy *looks* black is debatable. Certainly it is *not* light, because the human eye is insensitive to it.

The interesting thing about black light is that when it falls on certain materials, it makes them fluoresce, that is, emit visible light. What actually occurs is a conversion of energy: the black light that falls upon the fluorescent surface is absorbed and then reradiated at longer wavelengths—wavelengths to which the eye is sensitive. So surfaces that contain or are treated with fluorescent chemicals glow, white or in color, when irradiated by black light. If the surroundings are kept dark, as they often are, the effect is that of self-luminous elements floating in space.

The weirdly beautiful and dramatic effects that black light makes possible account for its popularity in decoration, display, and advertising. In its many and rapidly expanding workaday uses, black light makes it possible to see things that otherwise could not be seen.

The most important artificial sources of black light are black-light fluorescent and mercury lamps. All mercury lamps used for black-light applications require external filters. Filament lamps are weak and inefficient sources of black light, and argon-glow lamps produce it in only very small quantities. Carbon arcs produce useful amounts of black light. Radiant energy from the sun and sky contains a strong black-light component.

Fluorescent black-light lamps are used in insect control. Many night-flying insects are particularly sensitive to near-ultraviolet and blue light. Black-light lamps are used in insect traps to attract the insects into the trap to be exterminated by an electric grid or trapped.

Tubular sources designated as BLB lamps, such as 4-, 6-, and 8-W T-5, 15-W T-8, and 20- and 40-W T-12 lamps, have integral filters and may be operated with the same ballasts as corresponding fluorescent lamps. The luminance of an irradiated fluorescent material is between 1 and 5 fL with printing inks and between 0.25 and 2.5 fL with interior paints, depending on the color. The apparent brightness increases considerably as the eyes become

dark-adapted. Conversely, the effectiveness of black light is greatly reduced or entirely negated by a small amount of visible light.

Data for black-light lamps are given in Table 146.

146. Black-Light Lamps

(General Electric Co.)

Lamp-designation	Nominal lamp watts	Bulb	Base	Length, in ^a	Related average life, h ^b	Approximate relative black-light energy ^c
Fluorescent lamps						
F4T5/BL	4	T-5	Miniature bipin	6	6,000	4
F4T5/BLB ^d	4	T-5	Miniature bipin	6	6,000	3
F6T5/BLB ^d	6	T-5	Miniature bipin	9	7,500	6
F8T5/BLB ^d	8	T-5	Miniature bipin	12	7,500	8
F15T8/BL	15	T-8	Medium bipin	18	7,500	25
F15T8/BLB ^d	15	T-8	Medium bipin	18	7,500	20
F20T12/BL	20	T-12	Medium bipin	24	9,000	42
F20T12/BLB ^d	20	T-12	Medium bipin	24	9,000	31
F25T8/BL	25	T-8	Medium bipin	18	7,500	40
F40BL/U/3	40	T-12	Medium bipin	24	12,000	90
F40BL	40	T-12	Medium bipin	48	20,000	100
F40BLB ^d	40	T-12	Medium bipin	48	20,000	81
F72T12/BL/HO	85	T-12	Recessed	72	12,000	190
double-contact						
Mercury lamps						
HR100A38	100	E-23½	Mogul	7½	24,000 +	68
HR100A38/A23	100	A-23	Medium	5⅞ ₁₆	18,000	68
HR100PFL44/MED	100	PAR-38	Medium	5⅞ ₁₆	12,000	18
HR100PSP44/MED	100	PAR-38	Medium	5⅞ ₁₆	12,000	18
HR175A39	175	E-28	Mogul	8¼	24,000 +	120
HR175RFL39	175	R-40	Medium	7	24,000 +	30
HR175RFL39/M	175	R-40	Mogul	7½	24,000 +	30
HR250A37	250	E-28	Mogul	8¼	24,000 +	165
HR400A33	400	E-37	Mogul	11⅞ ₁₆	24,000 +	270

^aLength of fluorescent lamps includes standard lampholders. Length of mercury lamps is the maximum overall length.

^bRated average life for fluorescent lamps is the life when operated at 3 h per start on ballasts meeting published specifications. Rated average life for mercury lamps is the life when operated at 10 or more h per start on ballasts meeting published specifications.

^cRelative value of 100 = 8100 fluorers.

^dIntegral-filter lamp.

147. Filters (General Electric Co.). Most sources of black light produce visible light along with the ultraviolet. In the great majority of applications this visible light is undesirable. If it is not screened out by filters, it illuminates not only the luminous areas but also their surroundings. This, of course, reduces brightness contrasts and robs the display (or whatever the application may be) of its effectiveness. So almost always some sort of light-absorbing filter

is placed between the black-light source and the irradiated surface. In the case of the BLB fluorescent lamps, the filter is an integral part of the lamp.

Filters having a wide range of characteristics are used for black-light applications. At one extreme are filters that pass virtually no visible light and not very much ultraviolet; at the other extreme are deep-blue sheet glasses that transmit appreciable visible light and a great deal of near-ultraviolet. Scientifically designed black-light filters are regularly supplied in molded squares or roundels or in sheet glass. They are used in all black-light applications that require a high degree of absorption of the visible light. Some of the deep-blue sheet glasses being used as black-light filters were not originally intended for this service. But since their near-ultraviolet transmission is high, their cost is low, and they are easily cut to any desired size, they are used in many applications in which some visible light can be tolerated.

148. Applications of black light

1. Decorative purposes in the lighting of murals and show-window displays
2. Insect control
3. Advertising: producing effects in outdoor signboards
4. Inspection of cast and machined parts
5. Detection of leaks in hydraulic systems
6. Diagnostic use in medicine and biology
7. Inspection of food
8. Inspection of textiles
9. Sorting of laundry via invisible markings
10. Checking cleanliness in restaurants, dairies, etc.
11. Photoproduative processes
12. Location of mineral deposits

149. Germ-killing or bactericidal lamps, called germicidal lamps (Fig. 10.71), have been developed for use in many places for sterilizing and prevention of mold. The germ-killing lamp is a gaseous-discharge lamp consisting of a long tube containing mercury vapor and inert gases. It gives out ultraviolet radiation in the bactericidal band which kills bacteria of many kinds. Germicidal lamps are discharge lamps similar in operation to fluorescent lamps and thus require the correct ballast for proper operation. Many germicidal lamps are designed to operate on standard fluorescent-lamp ballasts.

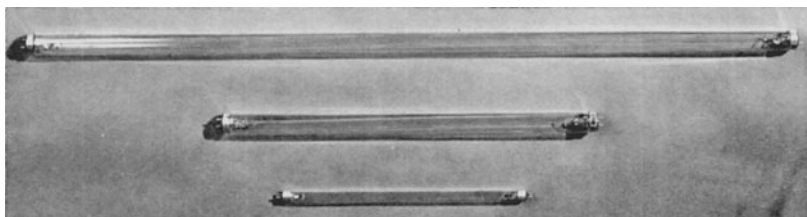


FIGURE 10.71 Germicidal lamps. [General Electric Co.]

150. The uses for germicidal lamps

1. Storage and aging of meat. The meat when exposed to ultraviolet radiation can be kept in a warm, high-humidity atmosphere where it will age and become tender much more rapidly with no formation of mold or slime and with no loss of weight due to drying out.
2. Water sterilization.
3. Irradiation of air to prevent the spread of disease.
4. Sterilizing drinking glasses, hospital instruments, toilet seats, etc., to prevent the spread of disease.

151. Photochemical lamps (General Electric Co.) are a family of mercury lamps designed for specialized applications of ultraviolet radiation. The lamps with tubular quartz bulbs transmit the full range of generated radiation. Since these emit shortwave germicidal radiation, they must be used with utmost caution. Bare tubes must not be exposed to the eyes or skin. When lamps are used exposed, shortwave-absorbing glass filters should surround the lamp.

Ultraviolet radiation from quartz lamps is extremely useful as a catalyst in many industrial chemical processes such as polymerization, halogenation, chlorination, and oxidation. Similarly, the lamps are highly effective for ultraviolet therapy.

Quartz lamps are used by manufacturers for weathering tests on paints, dyes, and other finishes. Since a high concentration of energy from lamps is possible, a few hours' exposure may be equivalent to many days' exposure to natural sunlight. These lamps have also found widespread use in the sterilization of water. This method is particularly desirable when the taste and odor from chemical sterilization are objectionable.

Photochemical lamps are used for black-and-white printing, blueprinting, copyboard lighting, diazo printing, and vacuum-frame printing. Some lamps use an ultraviolet-transmitting glass which does not transmit far ultraviolet. These are excellent photographic lamps, since many of their strongest emission lines lie close to the maximum sensitivity of most photosensitive materials.

INFRARED HEATING LAMPS

152. Heating or drying lamps are incandescent lamps with filaments which operate at a lower color temperature (2500 instead of about 3000 K) so that most of the radiation occurs in the infrared part of the spectrum with wavelengths longer than those of visible light.

Infrared lamps (Fig. 10.72) have many uses in commercial and industrial applications for heating and drying and on farms for brooding of poultry and other animals. Important features of these lamps include rapid heat transfer, efficient operation, simple oven construction, low oven first cost, adaptability to conveyor-line production, cleanliness, and low maintenance cost. The several wattages in each bulb size permit a wide range of temperatures.

The T-3 infrared quartz lamps are capable of delivering several times the energy concentration provided by the R-40 or G-30 types of lamps. They can be used in compact trough reflectors for concentrated radiation.

153. Lamp Disposal. Fluorescent and other discharge lamps contain a relatively small amount of mercury. For example, standard 4-ft fluorescent lamps contain about 20–30 mg of mercury. The amount in high intensity discharge (HID) lamps depends on the lamp wattage. Mercury release into the environment is a concern. Small quantities of these

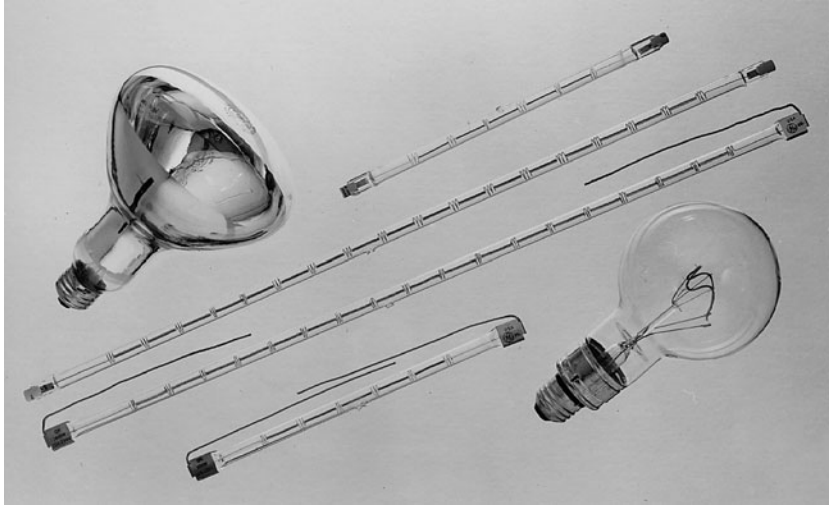


FIGURE 10.72 Infrared heating lamps. [General Electric Co.]

fluorescent or HID lamps placed in ordinary trash may not appreciably effect the nature or method of disposal of the trash. However, under most circumstances disposal of large quantities of lamps may be regulated.

There are varying requirements regarding lamp disposal in different areas of the country, and they may change.

Contractors and users disposing of quantities of fluorescent and HID lamps should be familiar with the regulations relating to lamp disposal in the geographic areas where they are working.

LUMINAIRES

154. Purpose of luminaires. A luminaire is a device which directs, diffuses, or modifies the light given out by the illuminating source in such a manner as to make its use more economical, effective, and safe to the eye. The luminaire includes the reflector, lamp sockets, enclosing materials, ballasts in fluorescent and HID units, and stems and canopies where used. Since the light from a bare lamp is given off approximately equally in all directions, to use the light economically some accessory is required to direct the light to the desired areas. As most lamps have a high brightness, it is desirable in producing satisfactory illumination that the eye be shielded from the source in order to reduce direct glare. In many cases the appearance of the illuminating system is of great importance, so that the luminaire must possess decorative features as well as those necessary for satisfactory illumination.

155. Distribution graphs of luminaires. The effect of a luminaire in changing the direction and distribution of the light given out by a light source is best expressed by a distribution graph. Figure 10.73 shows such a graph for a bare lamp and for the same lamp with a reflector. The graph represents the light in a single vertical plane through the center of the light unit, and it is assumed that the light in all similar vertical planes are similarly distributed. See Sec. 32, "How to Read a Photometric Graph."

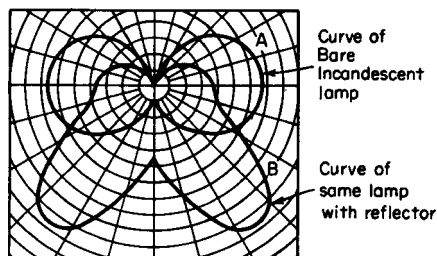


FIGURE 10.73 Comparison between the distribution curve of a bare incandescent lamp and that of the same lamp equipped with a suitable reflector.

Figure 10.74 shows a sample photometric test report for a 400-W HPS luminaire. A report of this type is used in comparing luminaire with one another as to relative distribution of light, type of illumination, lumen-output efficiency, and brightness.

156. Classification of luminaires. Luminaires can be classified by several methods:

1. According to system of illumination produced
 - a. Direct
 - b. Semidirect
 - c. General diffuse or direct-indirect
 - d. Semi-indirect
 - e. Indirect
2. According to the amount that the luminaire encloses the lamp
 - a. Open
 - b. Enclosed
3. According to class of service
 - a. Industrial
 - b. Commercial and institutional
 - c. Residential
 - d. Street lighting
 - e. Floodlighting
4. According to the material used for reflection or transmission of the light
 - a. Steel
 - b. Aluminum
 - c. Opal glass
 - d. Prismatic glass
 - e. Glass and metal
 - f. Plastic
 - g. Plastic and metal
5. According to method of mounting
 - a. Suspended
 - b. Surface-mounted
 - c. Recessed or built-in
6. According to light source
 - a. Incandescent lamp
 - b. High-intensity-discharge lamp
 - c. Fluorescent lamp

PHOTOMETRIC DATA

GENERAL  ELECTRIC

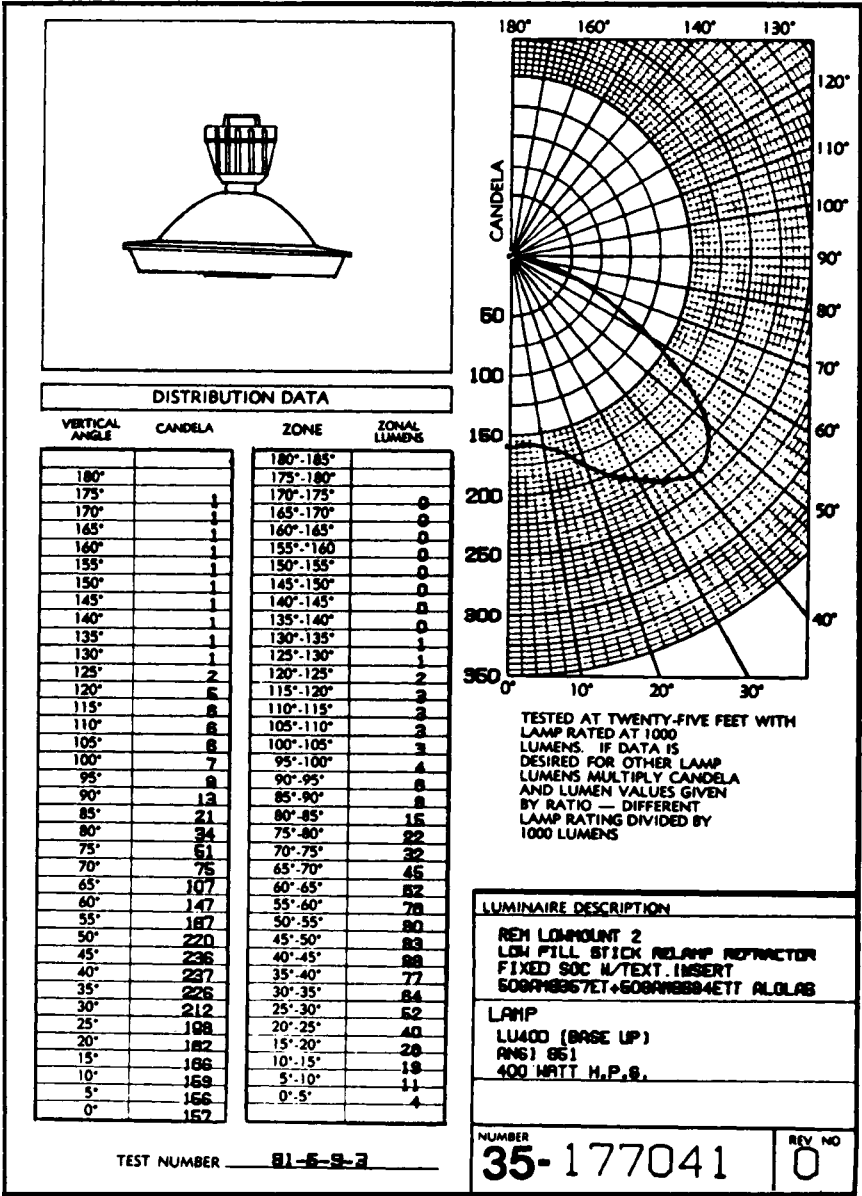


FIGURE 10.74 Photometric test report. [General Electric Co.]

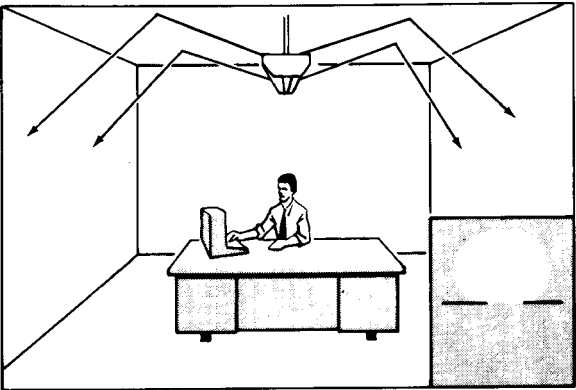
157. Direct lighting is defined as a lighting system in which practically all (90 to 100 percent) of the light of the luminaires is directed in angles below the horizontal directly toward the usual working areas (Fig. 10.75, VI). This type of lighting is produced by luminaires, which range from industrial-type steel or aluminum reflectors to fixtures mounted above large light-source areas such as glass or plastic panels and skylights. Although, in general, such a system provides illumination on working surfaces most efficiently, this achievement may be at the expense of other factors such as excessive contrasts of the light source with the surroundings, troublesome shadows, or direct and reflected glare.

(*Standard Handbook for Electrical Engineers*) The distribution may vary from wide-spread to highly concentrating, depending on the reflector material, finish, and contour, and on the shielding or control media employed. Troffers and downlights are two forms of direct luminaires. Direct lighting units can have the highest utilization of all types, but this utilization may be reduced in varying degrees by brightness-control media required to minimize direct glare. Veiling reflections and shadows may be excessive unless the distribution and location of luminaires are designed to reduce these effects. Large-area units are generally also advantageous since they soften shadows. Luminous ceilings, lowered ceilings, and large-area modular lighting elements are forms of direct lighting having characteristics similar to those of indirect lighting discussed in paragraphs below. Luminous ceilings may be difficult to apply at low power densities.


158. Indirect lighting. From 90 to 100 percent of the light output of the luminaire is directed toward the ceiling at angles above the horizontal (Fig. 10.75, I). Practically all the light effective at the working plane is redirected downward by the ceiling and to a lesser extent by the sidewalls. Since the ceiling is in effect of the light source, the illumination produced is quite diffuse in character. While indirect lighting is not as efficient as some of the other systems on a purely quantitative basis, the even distribution and absence of shadows and reflected glare frequently make it the most desirable type of installation for offices, schools, and similar applications. Because room finishes play such an important part in redirecting the light, it is particularly important that they be as light in color as possible and carefully maintained in good condition. The ceilings should always have a matte finish if reflected images of the light source are to be avoided.

Glass or plastic luminaires in this classification are known as *luminous indirect*, while metal luminaires which transmit no light are *totally indirect*. The translucent type is sometimes more desirable than the totally indirect because a luminous fixture is less sharply silhouetted against the relatively bright ceiling. Indirect illumination may also be provided by means of architectural coves. Luminaire suspension length, or cove proportions, must be carefully selected to provide uniform ceiling coverage, where desired, and to prevent excessive ceiling brightness.


159. Semi-indirect lighting. From 60 to 90 percent of the light output of the luminaire is directed toward the ceiling at angles above the horizontal (Fig. 10.75, II), while the balance is directed downward. Semi-indirect lighting has most of the advantages of the indirect system but is slightly more efficient and is sometimes preferred to achieve a desirable brightness ratio between ceiling and luminaire in high-level installations. The diffusing medium employed in these luminaires is glass or plastic of a lower density than that employed in indirect equipment.



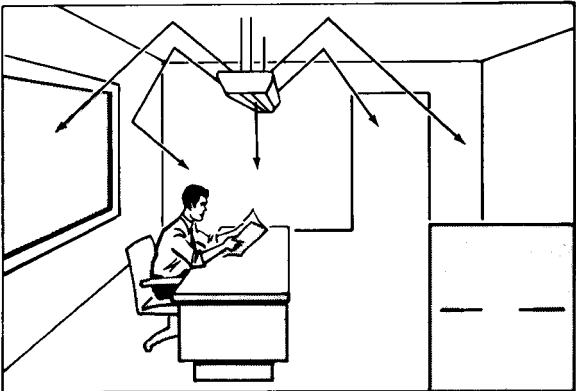I. Indirect.




II. Semi-indirect.

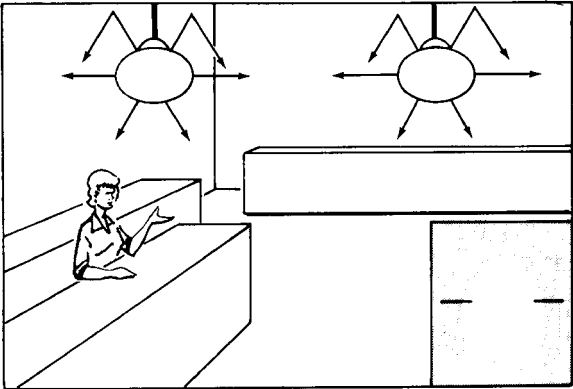


III. General diffuse.

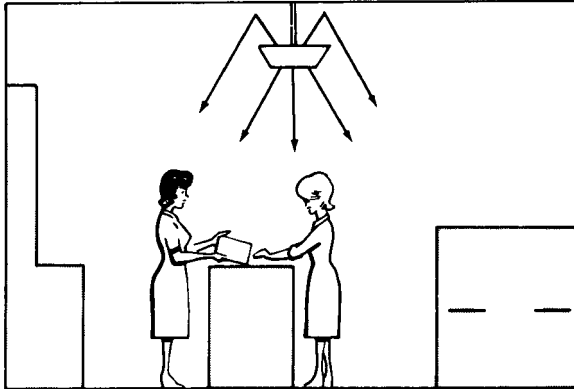
FIGURE 10.75 Systems of illumination.



IV. Direct-indirect.

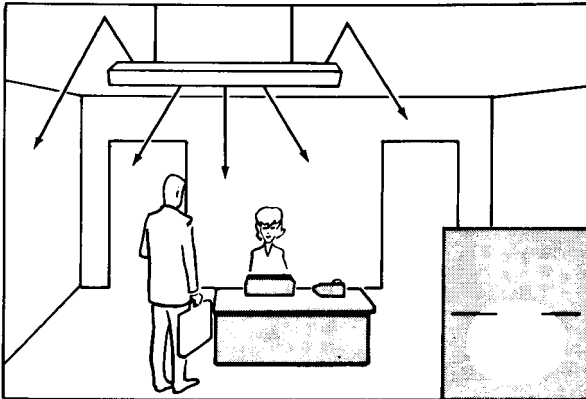

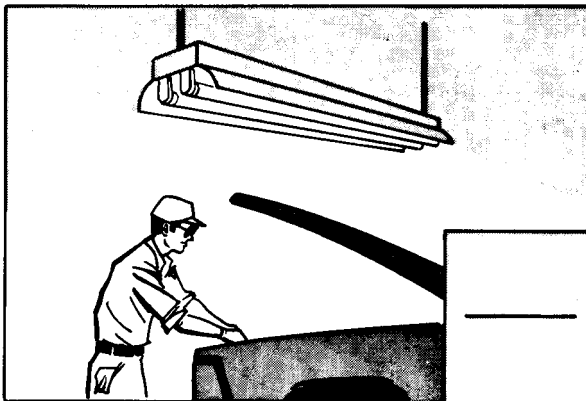V. Semidirect.



VI. Direct.

FIGURE 10.75 (Continued)

160. General diffuse or direct-indirect lighting. From 40 to 60 percent of the light is directed downward at angles below the horizontal. The major portion of the illumination produced on ordinary working planes is a result of the light coming directly from the luminaire. However, a substantial portion of the light is directed to the ceiling and side-walls. If these are light in color, the upward light provides a brighter background against which to view the luminaire, in addition to supplying a substantial indirect component which adds materially to the diffuse character of the illumination. The difference between the *general diffuse* (Fig. 10.75, III) and *direct-indirect* (Fig. 10.75, IV) classifications is in the amount of light produced in a horizontal direction. The general diffuse type is exemplified by the enclosing globe which distributes light nearly uniformly in all directions, while the direct-indirect luminaire produces very little light in a horizontal direction, owing to the density of its side panels. Glass, plastic, or louvered bottoms are commonly used with the latter type of luminaire to provide lamp shielding.

161. Semidirect lighting. From 60 to 90 percent of the light is directed downward at angles below the horizontal (Fig. 10.75, V). The footcandles effective under this system at normal working planes are primarily a result of the light coming directly from the luminaire. The portion of the light directed to the ceiling results in a relatively small indirect component, the greatest value of which is that it brightens the ceiling area around the luminaire, with a resultant lowering of brightness contrasts. Equipment of this type is exemplified by the suspended plastic-sided fluorescent luminaire or the open-bottom glass shade for incandescent lamps.

162. An open luminaire is one which only partially encloses the lamp. Open direct-lighting luminaires have the lamp exposed to view from at least one direction. The luminaires of Figs. 10.78, 10.79, 10.81, I, and 10.82 III are open-type direct-lighting units.

163. An enclosed luminaire completely encloses the lamp from view from any direction. The ones shown in Figs. 10.82, I, II, and IV, and 10.83 are enclosed direct-lighting luminaires.

164. Classification of luminaires according to class of service. Industrial service refers to use in factories and manufacturing establishments. *Commercial service* refers to use in offices, stores, and public buildings. *Residential use* means use in houses and apartments; *street lighting* means the illumination of streets, roads, and highways; and *floodlighting* means the illumination of outdoor areas such as painted signs, recreational grounds, automobile parking spaces, and building exteriors.

165. Steel reflectors have a sheet-steel base coated with porcelain enamel, paint enamel, or aluminum paint to form the reflecting surface. The best types of steel reflectors are those coated with porcelain enamel, since their reflecting surface is very efficient, durable, and easily cleaned. Paint-enamel reflectors when new are quite efficient, but the reflecting surface deteriorates very rapidly. Aluminum-painted reflectors are slightly better than paint-enamel ones but not so durable as porcelain-enamel ones.

Steel reflectors are used in the manufacture of many luminaires of the direct and indirect types.

166. Aluminum reflectors are used in many different types of luminaires. The reflecting surface is usually given an electrochemical treatment called Alzak which removes the impurities from the aluminum and endows it with a hard, durable surface which has a high reflection efficiency of approximately 90 percent. Like steel reflectors, aluminum reflectors are used in luminaires for both direct and indirect lighting.

167. Opal glass is a white diffusing glass (Sec. 10) which transmits light with a loss of only about 15 to 35 percent, the amount depending on the density of the glass. It breaks up the light rays so that the lamp is not visible and glare is kept at a minimum. Opal glass is used for enclosed diffusing luminaires for incandescent and HID lamps and for side-panel shields in some commercial fluorescent luminaires.

168. Prismatic glass consists of clear glass which is molded into scientifically designed prisms. Each prism is designed with reference to the position of the light source. By proper design, distribution curves of the extensive, intensive, or focusing types are obtained. The extensive reflector or globe refractor distributes the light over a wide angle below the horizontal (Fig. 10.76, I), the maximum intensity being at an angle of about 45° with the vertical.

Intensive reflectors, globes, and lenses (Fig. 10.76, II) throw the light directly downward, the maximum intensity occurring between 0 and 25° with the vertical.

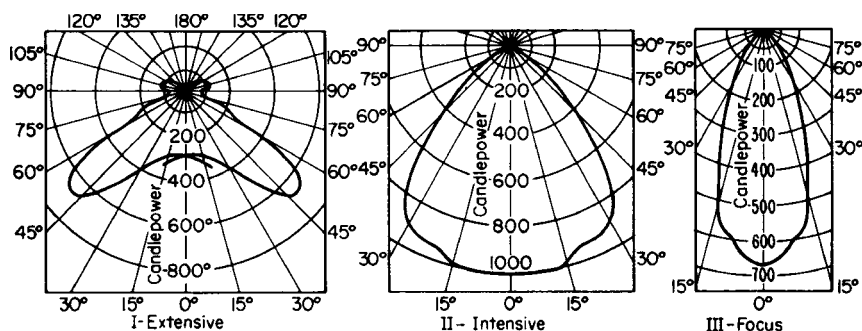


FIGURE 10.76 Distribution characteristic curves for direct prismatic-glass luminaires. [Manville Special Products Group, Holophane Division]

Focusing globes, lenses, and reflectors (Fig. 10.76, III) concentrate the light to a small area, producing the greatest intensity of illumination along the axis of the reflector. Focusing units give an end-on candlepower approximately $3\frac{1}{2}$ times as great as the rated horizontal candlepower of the lamp. The area intensely illuminated is a circle, the diameter of which should be one-half the height of the lamp above the plane of illumination; outside this limit the intensity falls rapidly but not so abruptly as to give the effect of a spot of light. Generally focusing units give their maximum candlepowers at about 10° from the vertical.

Prismatic-glass units are used in many direct, semidirect, and semi-indirect luminaires. The different types of prismatic units employed are reflectors, globes, and lenses. Some luminaires employ only a single type of unit, and others employ a combination of types of units. Luminaires employing prismatic-glass units are available for incandescent, fluorescent, and HID lamps.

169. Combination glass-and-metal luminaires are used principally for enclosed direct-lighting units. The metal part of the unit usually direct the light, while the glass is used for diffusing purposes or simply for the enclosure of the unit so that it will be dusttight or vaportight.

170. Plastics are used to some extent in luminaires for incandescent lamps and HID lamps and to quite a great extent for fluorescent lamps. The incandescent luminaires employing plastics are of the semi-indirect type (very close to indirect). With fluorescent units plastic is used in many direct and direct-indirect luminaires for side-panel shielding. It is also used quite extensively for bottom and side enclosures of direct and semidirect fluorescent units.

171. A combination of plastic and metal is used in some fluorescent luminaires. In some units the plastic is used for side-panel shielding. In others it is used to enclose the bottom of the unit for diffusing purposes or for making the unit dusttight and vaportight.

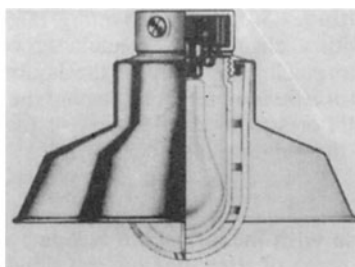
172. Method of mounting. *Suspended mounting* refers to hanging the luminaire from the ceiling with a chain, tube, conduit, or cord-pendant suspension. *Surface mounting* refers to placing the body of the luminaire directly against the ceiling. *Recessed or built-in mounting* refers to placing the luminaire in recesses in the ceiling or on the walls or structural members, so that it forms a part of the architectural treatment of the building interior.

173. Luminaires for use with incandescent lamps are available for all classes of service. For a discussion of street-lighting and floodlighting equipment refer to Secs. 233 and 241. Incandescent luminaires for residential use are available in a great variety of types, which are too numerous to be discussed here.


174. Industrial luminaires for incandescent lamps are of either the metal or the glass-metal type. The more common types are discussed in the following sections.

175. Enameled-steel-reflector luminaires for incandescent lamps are made in several different types of assemblies. One type has a reflector and hood pressed in one piece. When the nut is loosened at the top, the reflector will slide up on the stem, exposing the socket for wiring. This is a weatherproof type for use outdoors and for indoor installations where interchangeability of reflectors and ease of cleaning are not the important considerations. With the turn-lock type of reflector, the entire reflector and socket can be removed from the supporting cap by a quarter turn and taken down for cleaning. The prongs of the turnlocking device, in addition to supporting the reflector and socket, provide the electrical connection from the socket to the circuit terminated in the cap. This type is especially advantageous in locations where the cleaning of reflectors in position is going to be difficult. The threaded-reflector type has a reflector which can be removed from the socket and hood by unscrewing. Several shapes of reflectors will fit the same hoods. Hoods are available with a threaded connection for fixture-stem suspension or with a flange having holes for mounting as the cover of a 4-in (102-mm) outlet box. With the threaded type the


reflectors can be taken down for cleaning, and different reflectors inserted in the same hood, depending on the distribution curve of light desired. The snap-on type is designed so that it can be fastened on pendant sockets. The reflector holder snaps on the reflector, and then the whole assembly screws onto the threads on the outside of an ordinary brass socket. The vaportight type (Fig. 10.77) is for interior use in wet atmospheres. It requires a cast outlet box with a threaded opening. The reflector is bolted to a ring which threads on the outside of the box opening. A threaded glass globe screws into the inside of the box opening against a gasket, which seals the box against entrance of moisture. A metal guard is used for low mounting heights or other locations where it is necessary to protect the globe from mechanical injury. The guard screws on the outside of the box opening.



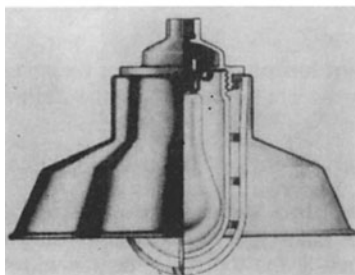I. With junction box



II. For pendant mounting.

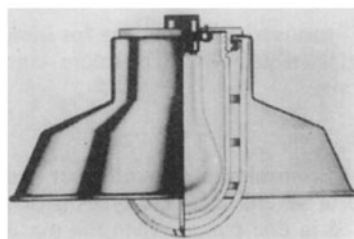

III. For outlet-box mounting

FIGURE 10.77 Vaportight units. [Miller Lighting, Hubbell Lighting Division]

These enameled-steel-reflector assemblies are all available in several shapes for specific purposes as shown in Figs. 10.78 and 10.79. The flat cone (Fig. 10.78, I) and the shallow bowl (Fig. 10.78, II) are used for yard and aisle lighting for wide distribution of light when the quality of the light is unimportant and glare from the partially exposed lamp is not objectionable. The RLM dome (Fig. 10.78, III) is a standard dome reflector which must comply with standard specifications of the Reflector and Lamp Manufacturers as regards contour and quality of the porcelain reflecting surface. This type of reflector is commonly used for general interior industrial lighting. The deep-bowl type (Fig. 10.78, IV) is used frequently when units must be hung very low, as over workbenches. Angle reflectors (Fig. 10.79) are used in industrial lighting to supplement overhead units in very high interiors and for special types of service which require very good illumination on vertical planes. They are used also for the lighting of billboards and painted signs.

Specifically designed deep-bowl units also are available for high-bay mounting.

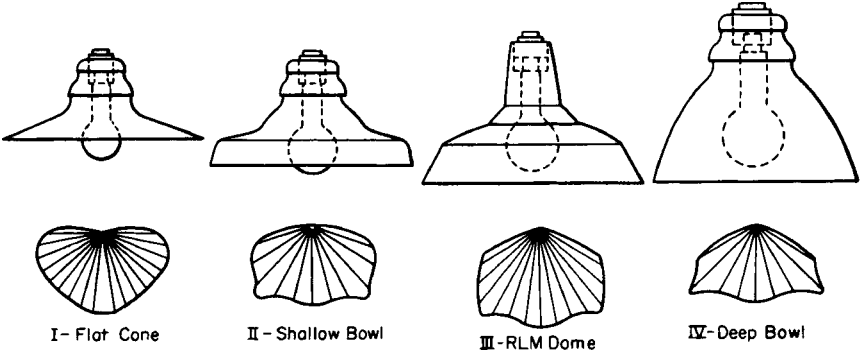


FIGURE 10.78 Contour outlines of typical enameled-steel reflectors with their characteristic distribution curves.

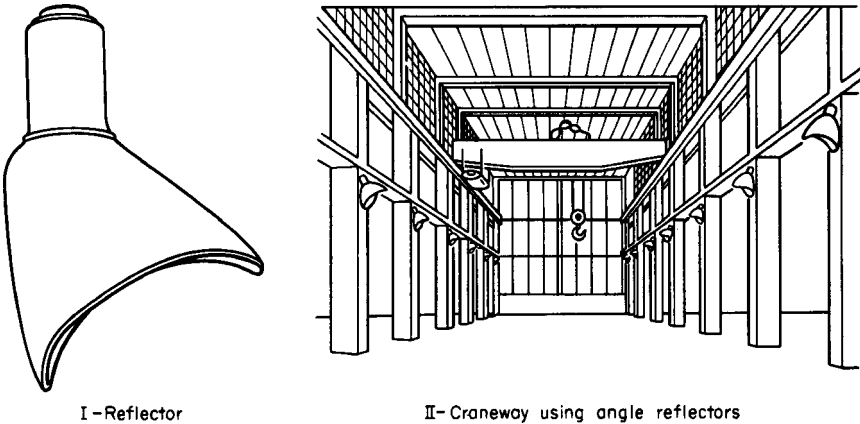


FIGURE 10.79 Elliptical-angle steel reflector. [Benjamin Division, Thomas Industries, Inc.]

The use of silvered-bowl lamps in steel reflectors will provide well-diffused illumination.

Glass covers are available for enclosing the bottom of steel reflectors to make them dusttight.

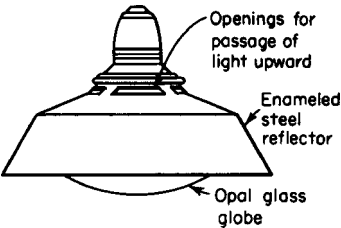


FIGURE 10.80 Glassteel diffuser.

176. The Glassteel diffuser luminaire for incandescent light is a combination glass-and-steel direct-lighting unit which is employed for high-quality industrial lighting. It consists of a completely enclosing opal-glass globe (Fig. 10.80) mounted inside a dome-shaped, porcelain-enamel reflector. The porcelain reflector has the same general construction as the standard RLM dome reflector. Small openings in the top of the dome allow a small portion of the light to be directed to the ceiling.

This illumination of the ceiling produces natural and cheerful working conditions, whereas with the RLM dome reflectors the ceiling is left in darkness. The enclosing globe of the Glassteel diffuser shields the lamp from view and diffuses the light, reducing the glare effect. The Glassteel diffuser is made in all the types of assemblies explained above under the discussion of enameled-steel luminaires.

177. Aluminum luminaires for incandescent lamps are chiefly of the high-bay type (Fig. 10.81). They provide more accurate control of light than is obtainable with the enameled-steel reflectors and are recommended when the mounting height is high compared with the width of the area to be lighted. A concentrating type is used when the units are sufficiently high so that it is best to locate them closer together than the mounting height and for high-mounted units in narrow interiors. A spread type gives better illumination on vertical surfaces and can be used when the spacing is up to $1\frac{1}{2}$ times the mounting height. These luminaires are made in the one-piece and turn-lock types as described in Sec. 175.

Steel-clad units, which consist of an Alzak aluminum reflector protected by a porcelain-enamel steel housing, are available for severe service conditions. These units may be provided with glass covers for protection against moisture and noncombustible dust.



I. Open type.




II. Vaportight type.

FIGURE 10.81 Aluminum high-bay luminaires. [Miller Lighting, Hubbell Lighting Division]

178. Prismatic-glass luminaires for industrial use with incandescent and HID lamps are available in low-bay (Fig. 10.82, I, II, and IV) and high-bay (Fig. 10.82, III) types. The basic unit is provided with an open-bottom prismatic-glass reflector which produces semidirect illumination. When upward light is not required but protection against moisture (condensate, leakage, etc.) from the ceiling is desirable, an aluminum cover can be used over the prismatic reflector without materially affecting the downward distribution of light. Guards of either wire- or louver-type construction are available for protection of the lamp. These units, in addition to their industrial applications, are widely used in certain commercial types of buildings, such as gymnasiums and supermarkets.

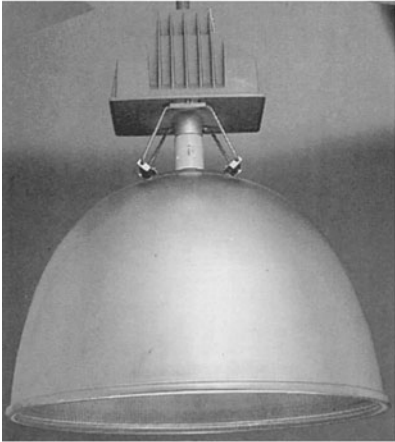
Another prismatic-glass luminaire for industrial use with incandescent lamps is an all-purpose vaportight and dusttight unit. This luminaire consists of a prismatic-glass reflector-refractor and a cast-metal filter with stainless-steel supporting bails assembled to normally closed-type cam latches. This unit is shown in Fig. 10.82, II. It is used in chemical, petroleum, ordinance, generating-station, textile, woodworking, food-processing, and similar industries.



I. Low-bay enclosed industrial luminaire suitable for damp locations.



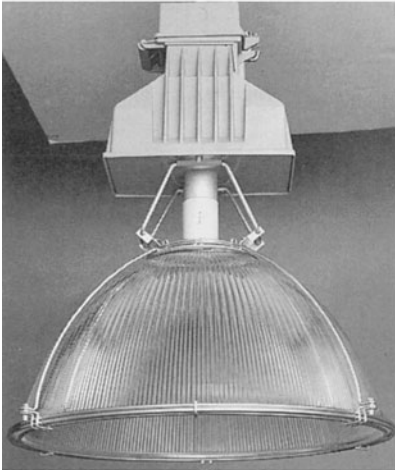II. Low-bay general-area lighting or hazardous-area lighting; high-pressure sodium, metal halide, or mercury lamp unit.



III. High-bay metal halide, mercury, or high-pressure sodium lamp unit.




IV. Low-bay high-pressure sodium, metal halide, or mercury lamp unit.

FIGURE 10.82 Industrial-type prismatic-glass HID luminaires. [Manville Special Products Group, Holophane Division]


179. Luminaires for high-intensity-discharge lamps are generally intended for high-bay mounting in industrial interiors. Luminaires are available in enameled steel, Alzak aluminum, and prismatic-glass types. The metal units are of the same general type of construction as similar luminaires used for lighting with incandescent lamps. Refer to Secs. 175 and 177.

Prismatic-glass units are available for both high-bay and low-bay mounting (refer to Fig. 10.82). Both the high-bay and the low-bay units consist of a prismatic-glass reflector with the outside of the reflector protected by a sealed and permanently spun-on metal cover.

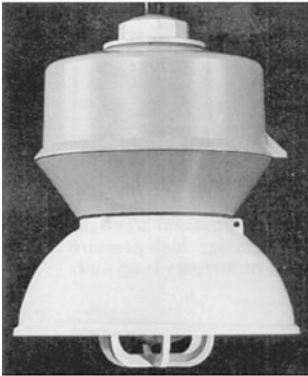
Other high-bay luminaires utilize reflectors with a coated-glass surface for high efficiency and easy maintenance. Enclosed high-bay fixtures are also available with internal filter systems which greatly reduce light-output depreciation due to dirt. Low-bay units are available with acrylic and polycarbonate plastic refractors. (See Fig. 10.83).



Hazardous location.

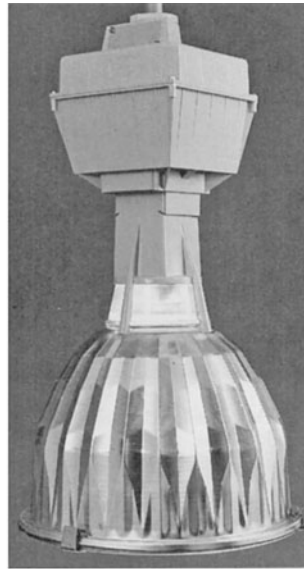

High bay.

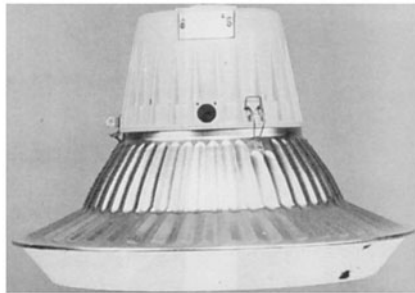

Low bay.

FIGURE 10.83 HID industrial luminaires. [GE Lighting Systems]

180. Industrial luminaries for fluorescent lamps generally employ porcelain-enamel steel reflectors. They provide direct illumination. Both open and enclosed units are available for two- to four-lamp assemblies. The open units may be of the open- or closed-end type of construction. The tops of the reflectors may be solid or be provided with apertures (refer to Figs. 10.84, 10.85, and 10.86.) These open units may have a plain reflector, or the reflector may be fitted with a longitudinal shield or with louvers (refer to Fig. 10.87). The shield is positioned between the lamps and provides a crosswise shielding angle of approximately 27° from the horizontal. Closed units are provided with glass or plastic covers across the bottom of the luminaire. Closed units with sealed covers are available for hazardous locations (see Fig. 10.88).

Different mounting methods are shown in Fig. 10.89.

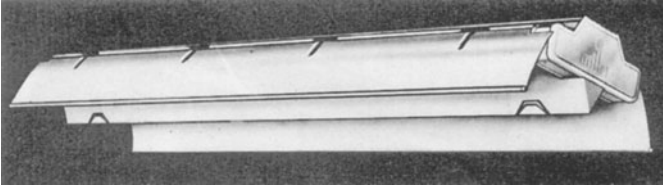


FIGURE 10.84 Partially open-end type of steel fluorescent luminaire. [Miller Lighting, Hubbell Lighting Division]

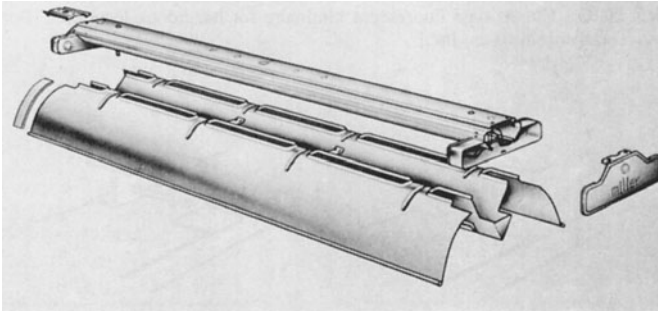


FIGURE 10.85 Construction of an open-type fluorescent luminaire, showing longitudinal shield. [Miller Lighting, Hubbell Lighting Division]

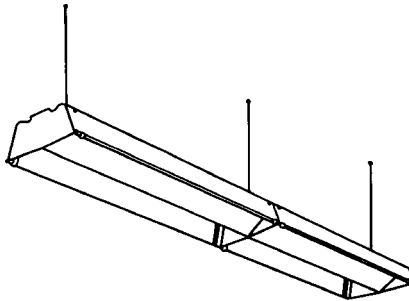


FIGURE 10.86 Closed-end type of steel fluorescent luminaire.

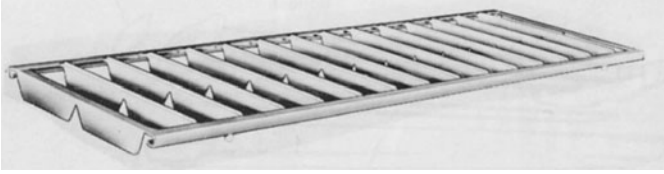


FIGURE 10.87 Louver for use with an open-type fluorescent luminaire. [Miller Lighting, Hubbell Lighting Division]

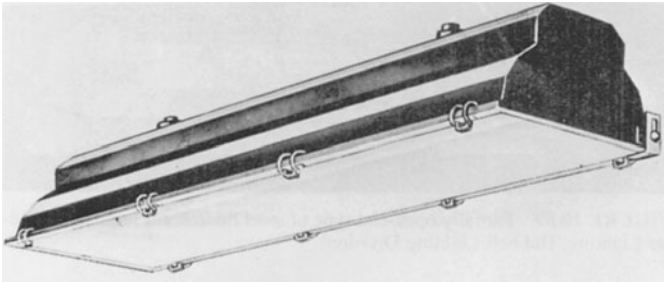


FIGURE 10.88 Closed-type fluorescent luminaire for hazardous locations. [Benjamin Division, Thomas Industries, Inc.]

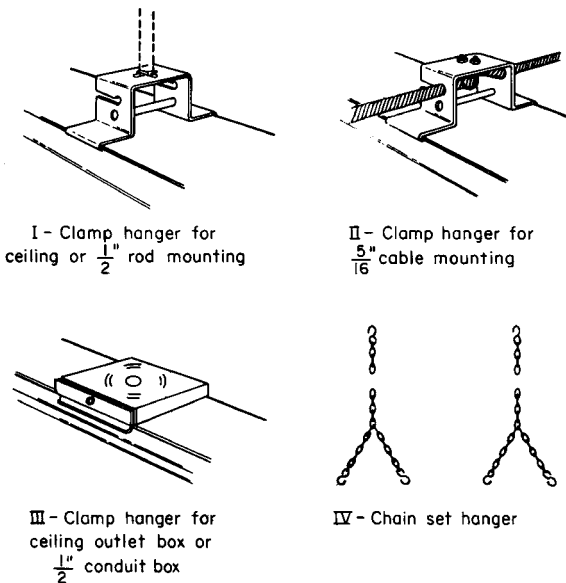


FIGURE 10.89 Methods of suspension for industrial fluorescent luminaires. [Miller Lighting, Hubbell Lighting Division]

181. The ballast for fluorescent lamps is mounted in the supporting channel or base of the luminaire. The construction to accommodate the ballast for one type of luminaire is shown in Fig. 10.90.

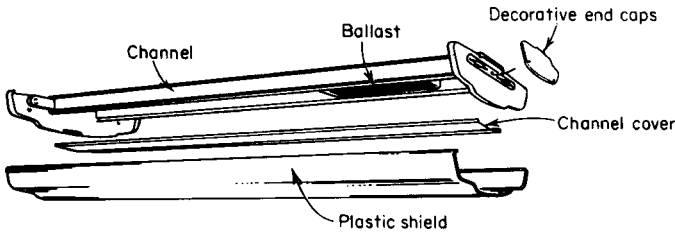


FIGURE 10.90 Construction of a fluorescent luminaire.

182. Fluorescent luminaires for commercial lighting are made in a great variety of types. They can be obtained to produce illumination of any one of the different systems of illumination listed in Sec. 156, item 1. All the materials listed in Sec. 156, item 4, are employed for the reflection and diffusion of the light in fluorescent luminaires of the different constructions available. Probably the best method of obtaining an appreciation of the various types available is through a study of the latest catalogs of fixture manufacturers.

Commercial fluorescent luminaires may be classified as follows:

1. Large-area ceiling units
2. Troffers
3. Conventional suspended or surface units

Large-area ceiling units (refer to Figs. 10.91, 10.92, and 10.93) are available in 2- by 2-, 2- by 4-, and 4- by 4-ft (0.6- by 0.6-, 0.6- by 1.2-, and 1.2- by 1.1-m) panels which can be mounted to achieve almost any geometrical design. The luminous surface of the panels may be made of glass or plastic. Units are available for surface or recess mounting.

Translucent wall-to-wall lighting (Fig. 10.94) is illumination by means of one large luminous area. It does not employ luminaires unless the whole luminous ceiling is considered one large luminaire. The diffusing panels for wall-to-wall lighting may be of plastic or louver construction.

Troffers are fluorescent luminaires which are mounted in recesses in the ceiling so that the surface of the unit is practically flush with the ceiling. A typical troffer luminaire is shown in Fig. 10.95, and the method of installing troffers in a suspended plaster ceiling in Fig. 10.96. Troffers are available for installation in almost any type of ceiling. Troffers (Fig. 10.97) may be of the open type, louvered, or covered with a glass, prismatic-glass, or plastic cover.

Conventional suspended or surface luminaires (Figs. 10.98 and 10.99) are available in units for producing illumination of any one of the systems.

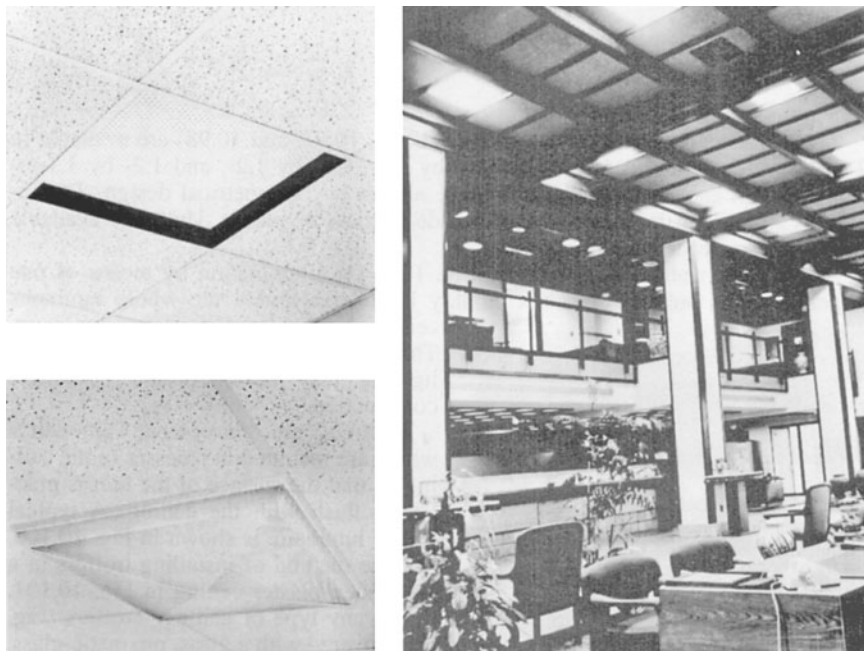


FIGURE 10.91 Luminaires utilizing mercury, metal halide, or high-pressure sodium lamps. [Manville Special Products Group, Holophane Division]



FIGURE 10.92 Illumination with large-area fluorescent ceiling units.

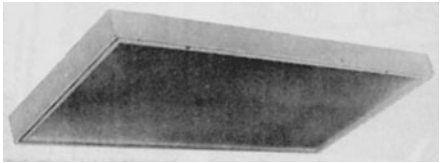


FIGURE 10.93 Large-area surface-mounted fluorescent luminaire. [Day-Brite Lighting Division, Emerson Electric Co.]

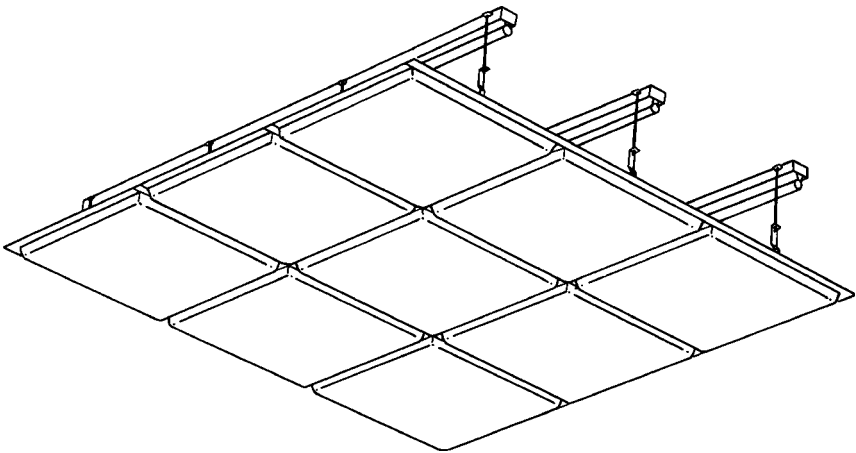


FIGURE 10.94 Wall-to-wall fluorescent lighting.

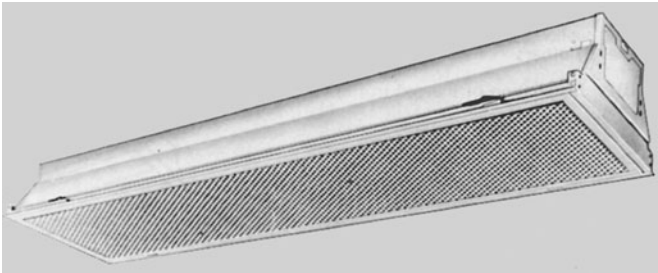


FIGURE 10.95 Troffer fluorescent luminaire. [Miller Lighting, Hubbell Lighting Division]

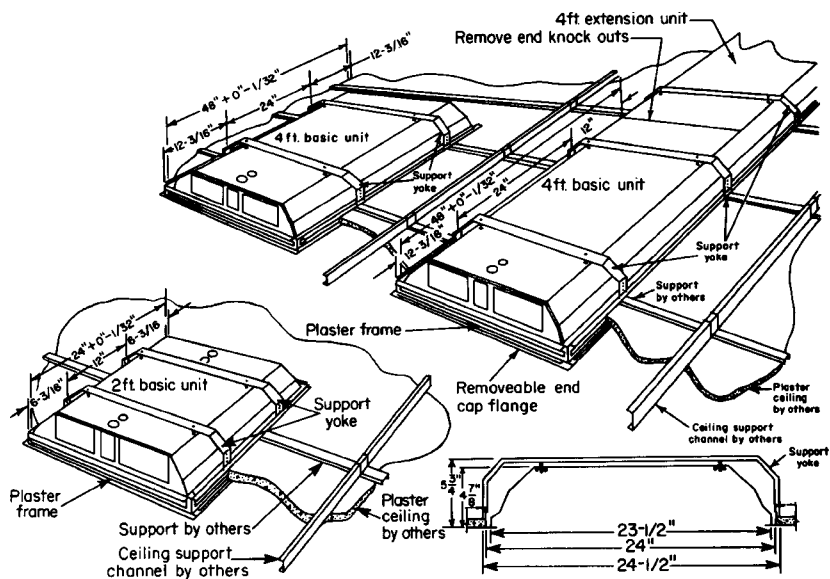


FIGURE 10.96 Installation of flanged troffers in a suspended plaster ceiling.

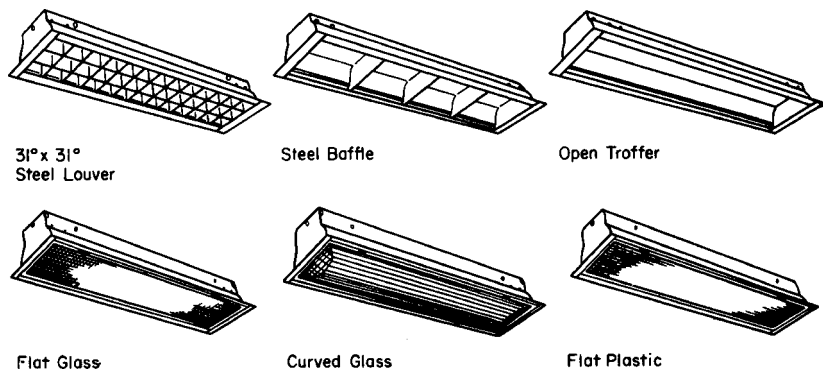


FIGURE 10.97 Covers for troffer luminaires. [Benjamin Division, Thomas Industries, Inc.]

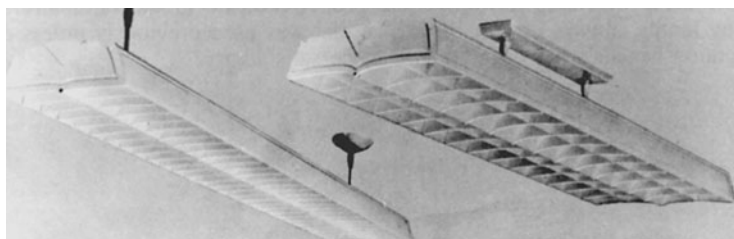


FIGURE 10.98 Direct-indirect fluorescent luminaire. [Day-Brite Lighting Division, Emerson Electric Co.]

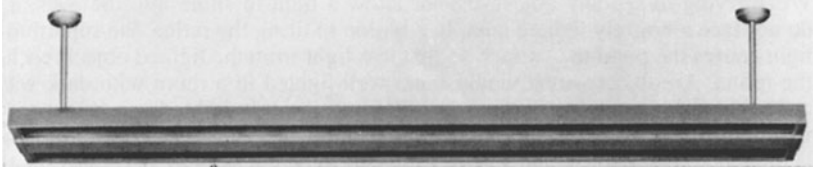


FIGURE 10.99 Semi-indirect fluorescent luminaire. [Miller Lighting, Hubbell Lighting Division]

183. The size of luminaire for an incandescent lamp should be such that its wattage rating will correspond to the wattage rating of the lamp to be used with it. This is necessary for the proper distribution of light, for adequate dissipation of the heat produced by the lamp, and for prevention of excessive brightness of the unit. An exception is the use of a smaller-size lamp if an adapter is employed in the socket to bring the lamp bowl into the proper position in the luminaire. When replacing lamps, always use the same size that was used previously unless careful investigation has shown a different size to be satisfactory.

PRINCIPLES OF LIGHTING-INSTALLATION DESIGN

184. The general purpose of artificial lighting is to enable things to be seen readily. Since things are seen by the light which is reflected from them (see "Brightness," Sec. 39) into the eye, in an effective lighting installation it is necessary that the number and arrangement of lighting units render most easily seen those things which it is desired to see. To accomplish this, recognition must be made of the effect of light on the human eye.

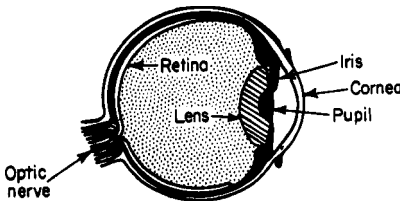


FIGURE 10.100 Essential parts of the eye shown in section.

185. Physiological features of artificial lighting. To appreciate properly the principles of scientific lighting, it is necessary to understand the mechanism of the eye. Figure 10.100 (from *Primer of Illumination*, copyright by the Illuminating Engineering Society) shows the parts of the eye as they would appear if it were cut through from back to front vertically. In the process of seeing, the light passes through the cornea, pupil, and lens of the eye to the retina, just as in a camera

light passes through the lens to the sensitized film. The picture is formed on the retina, which is a layer made up of the ends of nerve fibers that gather into the optic nerve and go directly to the brain.

186. The optic nerve sends the picture to the brain. The lens of the eye, unlike that of the camera, automatically changes in thickness to focus or make a clear image on the retina for seeing at different distances. This focusing action is called the accommodation of the eye, and when the light is dim or bad, the focusing muscle vainly hunts for some focus which may make objects look clear and gets tired in trying to do it. The muscles

which move the eye about also get tired in the same way, and the result is eyestrain, which stirs up pain and headache just as any other overtired muscles of the body may set up an ache.

187. The iris, which gives the eye its color, serves to regulate the amount of light that reaches the eye. In very dim light it opens out, making the pupil big, as shown in Fig. 10.101), and in very bright light it shuts up as shown and thus keeps out a flood of brilliant light which might hurt the retina. The protective action of the pupil is fairly good but by no means complete, for it seldom becomes smaller than shown in the illustration, however bright the light. From a study of Fig. 10.101 we may deduce:

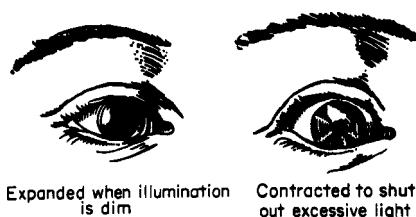


FIGURE 10.101 Expansion and contraction of the pupil of the eye.

1. When trying to see any object, do not allow a light to shine into the eyes, and do not face a brightly lighted area. In addition to tiring the retina, the superfluous light causes the pupil to contract, so that less light from the lighted object reaches the retina. An object which would seem well lighted in a room with dark walls and with no light shining in the eyes will appear poorly lighted in a bright room with light walls or when a light is shining in the eyes, simply because the pupil is smaller. This also explains why a higher light intensity is necessary in the daytime than at night. It is generally easier to read with the same light source in a room having dark walls than if the walls are light in color, though the total illumination on the page will probably be less. Reflected light from glossy paper produces the same effect as light surroundings. The effect produced by a light shining directly into the eyes is termed *glare* (see Sec. 38).
2. A fluctuating light causes the pupil to be constantly changing. This is very tiring to the muscles controlling the iris and if long continued may cause a permanent injury.
3. The lens of the eye is not corrected, as is a photographic lens, for color variations. It cannot focus sharply red and blue light from the same object simultaneously, although ordinarily this is not noticed. As white light is composed of all colors, it follows that we can see more clearly (i.e., objects appear sharper and more distinct) by a monochromatic light (light of only one color) than even by daylight. The light from mercury-vapor lamps closely approximates this condition.
4. Illumination should be uniform; otherwise the eye, in continually attempting to adapt itself to the unequal conditions, becomes tired as with a fluctuating light.

Correct lighting enables one to see clearly with minimum tiring of the eyes. To secure this, all the above conditions must be satisfied.

188. The requirements of a satisfactory lighting installation (Ward Harrison, *Electric Lighting*) are (1) sufficient light of unvarying intensity on all principal surfaces, whether horizontal, vertical, or oblique planes; (2) a comparable intensity of light on adjacent areas and on the walls; (3) light of a color and spectral character suited to the purpose for which it is employed; (4) freedom from glare and from glaring reflections; (5) light so directed and diffused as to prevent objectionable shadows or contrasts of intensity; (6) a lighting effect appropriate for the location and lighting units which are in harmony with

their surroundings, whether lighted or unlighted; and (7) a system which is simple, reliable, easy to maintain, and in initial and operating cost not out of proportion to the results attained. Neglect of any of these may result in an unsatisfactory installation.

189. Intensity of illumination. Although the eye is capable of adjusting itself to perceive objects over a wide range of intensities, the speed of this perception and the ability to distinguish fineness of detail are improved as the intensity increases, until the intensity becomes so great that a blinding effect is produced. An intensity of illumination that will be so high as to produce a blinding effect is, however, far above the range of intensities utilized in artificial illumination. The effect of the intensity of illumination upon the length of time required for the perception of objects is shown in Fig. 10.102A. The effect of the intensity of illumination upon the length of time required for the discrimination of detail is shown in Fig. 10.102B. From a study of the curve of Fig. 10.107A it is seen that the speed of perception increases approximately proportionally to the intensity of illumination, until an illuminatin of 5 fc (53.8 lx) is reached. Above this point the increase in speed of perception for a given increase in intensity gradually decreases. From these facts it was at one time erroneously considered that intensities of illumination above 5 fc were of little practical value in making things more clearly seen. That this is not true has been definitely proved not only by laboratory tests but also by practical tests in actual working areas. High levels of illumination have been found to result in an actual saving in dollars and cents owing to the increased production and decrease in spoilage produced by their use. Recommended values of intensities are given in Table 220.

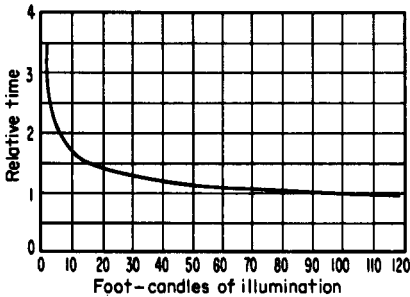


FIGURE 10.102A Effect of intensity of illumination upon time for perception. [General Electric Co.]

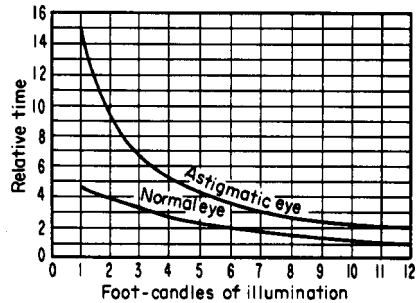


FIGURE 10.102B Effect of intensity of illumination upon time required for discrimination of detail. [General Electric Co.]

190. Blink test. To have some definite and scientific way of measuring eyestrain and fatigue, the General Electric Co. devised the *blink test*. In this test the number of blinks per minute which the eye makes involuntarily are counted. This is done when the eyes are in a rested condition and then again after an hour of work at the various usual tasks of the individual under different levels of illumination. The rate of increase in blinking is taken as a measure of eye and nerve fatigue. The rate of blinking always increases somewhat with working or reading, but the higher the illumination intensity, up to at least 75 or 100 fc (807.3 or 1076.4 lx), the lower the rate of blinking, especially when attention to detail is required.

191. Elimination of glare. In designing a lighting installation the greatest care should be exercised to avoid the presence of any one of the three types of glare described in Sec. 38. So that a lighting unit in the central portion of the visual field may not produce glare, its brightness should not exceed from 2 to 3 cd/in² of apparent area. The maximum permissible brightness is, of course, influenced by the darkness of the surroundings.

No less important than the elimination of direct glare is the avoidance of reflected glare of specular reflection. Its effects are often more harmful than those due to direct glare. The use of highly polished furniture, plate-glass desktops, and glossy finishes on walls should be avoided. A large expanse of too-light-finished wall surface will cause harmful glare in offices, schoolrooms, and other locations where the occupants of the room must sit facing the wall for long periods of time. Although it is always desirable to have walls finished in light colors such as cream or buff in order to utilize as effectively as possible the light emitted by the source, the reflection factor of the lower walls should not be so high as to cause eye fatigue. For rooms in which occupants must face the walls for long periods, the reflection factor of the wall below eye level should not exceed 50 percent.

192. Production of shadows. The character of the shadow cast by an object depends upon the uniformity of the illumination in the area and upon the direction of the light falling upon the object. If the light falling upon an object is coming from one direction only, a sharp, dense shadow will be cast. As the number of directions in which light is impinging upon an object is increased, the sharpness and denseness of the shadow cast will be reduced. A shadow will still be cast even if the object is illuminated from all directions unless the intensity of the illumination is the same in all directions. Therefore, to eliminate shadows completely the illumination must be uniform and completely diffused; that is, illumination of any point will be produced by light from all directions. The less uniform the illumination is or the fewer the directions of light falling upon an object, the more dense and sharp will be the shadows cast.

The desirability of shadows in an illuminated area depends upon the nature of the installation. In no installation is it desirable to have complete uniformity of illumination, that is, illumination with no shadows or contrast in the intensity of illumination. Such illumination would produce a cold and flat effect tiresome to the eye. Nor could the shape and contour of objects be discerned. On the other hand, it is equally bad to have illumination which results in very dark, dense shadows and excessive contrasts in the intensity of illumination of different areas. Such illumination would be very hard on the eyes, owing to the continual change in the size of the pupil as the field of vision varies. When shadows are too dark, an object cannot be distinguished from its shadow; the shape of object is discernible from its shadow and without great contrast in intensity of illumination.

Shadows of the proper quality are of great value in observing objects in their three dimensions, in determining the shape of an object, and in determining irregularities in surfaces. They are of no value in the observation of plane surfaces. Shadows should never be dark and dense. If shadows are essential, they should be soft and luminous so that the object is clearly discernible from its shadow and so that there is no great marked contrast in intensity of illumination.

193. Uniformity of illumination is usually expressed as a maximum deviation from the average or mean intensity of illumination. It is not necessary to have the illumination of an area exactly uniform in order that the contrasts in the illumination of different portions will be unobservable by the eye or that the shadows will be too dense or sharp. The degree of uniformity of illumination obtained depends on the ratio of the spacing distance of the lighting units to their mounting height that should not be exceeded if satisfactory uniformity of

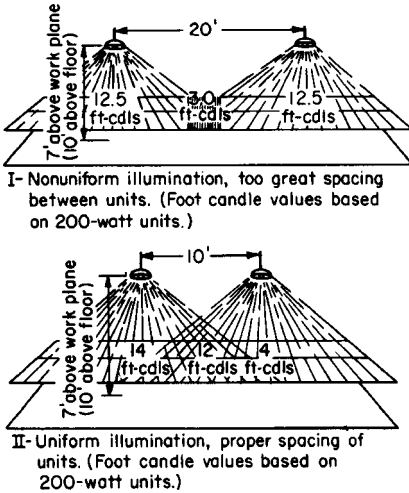


FIGURE 10.103 Effect of spacing of outlets on uniformity of illumination.

illumination is to be obtained. The effect of the spacing of the units upon the uniformity of illumination is illustrated in Fig. 10.103. Although this maximum spacing distance varies somewhat for reflectors distributing differently the light emitted by them, it is a good general rule to make the spacing distance equal to the mounting height. A greater spacing distance is likely to result in sharp and too dense shadows. One need not hesitate to use a closer spacing distance than that equal to the mounting height if desired, since the closer the spacing, the more uniform will be the illumination of the area. For the average installation it is best to keep the spacing distance of the units within the values recommended for specific luminaires. If the ceiling is unusually high, closer spacing distances may be advisable to reduce the density of the shadows. In the illumination of certain areas such as storage spaces, it is permissible to space the units slightly farther apart.

194. Methods of illumination. With respect to the arrangement of the light sources the methods of illumination may be divided into four classes as follows:

1. Localized
2. General
3. Group or localized general
4. Combination of general and localized

In the localized method an individual lighting unit of small wattage is supplied for each worker, machine, or workbench; the units are supported at a low level to bring the light close to the work. There is no attempt to produce uniform illumination over the total area.

With the general illumination method the lighting units are supported fairly close to the ceiling or at least at a considerable distance above the working plane. They are spaced uniformly throughout the area without special regard to the location of machinery, furniture, and the like, and at such a distance from one another as to give nearly uniform illumination.

The group method is somewhat of a compromise between the localized and general methods. The lighting units are mounted close to the ceiling or at a considerable distance above the working plane. The units are not spaced uniformly but are located with respect to the machinery, position of operators, etc., so as to give sufficient illumination for work at each machine. The illumination of the area is not uniform.

In the combination of general and localized methods uniform illumination is supplied over the complete area by means of units located according to the general method. This illumination is supplemented with local lights for certain operations that require a higher intensity than that required for the main area.

195. Comparison of methods of illumination. The localized arrangement of lighting units in industrial and most commercial applications should be a thing of the past

and should never be tolerated. It produces very dense shadows and such low intensities in the general area that it is likely to cause very serious accidents. Such a method will prove to be very harmful to the occupants of the room, owing to direct glare from the low-hung lamps, and may so blind the operators of machines that they can be severely injured.

For the great majority of installations the general method of arranging light sources is the most satisfactory. It is the method most commonly employed. For some classes of work which require a very high intensity of illumination at the working point, it would not be economical to light the whole area to this high intensity. These conditions can be satisfactorily met by means of the combination of the general and localized methods, provided the local lamps are well shielded to prevent the possibility of glare. With the combination method the ratio of local to general illumination intensity should not be greater than 10:1. In other words, if some operations require 75 fc (807.3 lx), the general illumination should be not less than $7\frac{1}{2}$ fc (80.7 lx).

In places where there are machines with large overhanging parts and in rooms with high obstructions, the group method will direct the light upon the working parts better than the general arrangement. The group method is frequently a good arrangement for rooms containing a number of similar machines arranged in rows.

196. Effect of proportions of a room. Of the light which strikes the walls of a room, only part is reflected back into the room to become useful upon the working plane. Consequently, the greater the proportion of the total light that is directed to the walls, the lower the intensity of illumination on the working plane, or, stated in another way, the greater the proportion of the total light that is directed to the walls, the larger must the lamps be to produce a given intensity on the working plane. The proportion of the light that strikes the walls depends upon the size of the room and the height at which the units are mounted. In a large room the ratio between the wall area and the floor area is less than for a small room. Thus, for the same mounting height a smaller proportion of the total light will strike the walls than in a small room. In large rooms, therefore, less light is absorbed by the walls than in small rooms.

In a room of given dimensions, if the mounting height of the units is increased, more light will fall upon the walls. One should be careful not to get the impression that it is best to mount the units as low as possible. Although less light is absorbed by the walls with low-hung units, there are other more important factors that are affected by the mounting height. As the mounting height of the units is reduced, the spacing between them must also be reduced so that uniform illumination is produced and the shadows are not too dense. The cost of installing a large number of small units is greater than that of installing a smaller number of larger units. Also, the larger-size lamps are much more efficient with respect to the number of lumens produced per watt. As a result, the saving from the use of large units mounted high more than offsets the increased absorption of light by the walls. For practically all installations it is best to mount the units as high as possible. There is less probability of glare with high-mounted units than with low-hung ones, since the units are not so likely to be in the field of view.

197. Room cavity ratios. A room cavity ratio is used as the measure of the effect of room proportions upon the useful utilization of the light given out by the luminaire. Values of room cavity ratios are given in Table 212. The room cavity ratio serves as a reference index for use with Tables 217, 218, and 219 in determining the coefficient of utilization.

198. Effect of character of finish of walls. Of the light that falls upon the walls or ceiling of a room, the percentage that is reflected back into the room depends upon the color of the wall and ceilings and the type of paint employed. The lighter the color, the greater the coefficient

of reflection. The reflection factor of two freshly painted walls of practically the same color may differ, however, by several percent, depending upon the grade of paint employed. The reflection factor of a surface decreases as time elapses after painting. The amount of this depreciation in reflecting power varies widely with different grades of paint. It is important to have the walls and ceiling light in color and to employ a good grade of paint which will have a high initial reflection factor that does not depreciate an excessive amount with age. The walls, however, should not be made so bright as to be a source of glare (see Sec. 191).

199. Location of lighting equipment. The lighting units for general illumination should be located symmetrically throughout the area to be illuminated. When the room is divided into bays by means of columns, roof trusses, or girders or when the ceiling is divided into panels, the units should be arranged symmetrically, for the sake of appearance, with respect to such architectural divisions, provided the arrangement will not interfere with the uniformity of illumination. Fluorescent luminaires generally are arranged in rows or in some other symmetrical pattern which will fit in with the architectural arrangement of the area and the utilization of the space. Incandescent and mercury-vapor units generally are arranged in the form of squares or rectangles. Typical layouts are shown in Fig. 10.104.

It is important that the units be placed at the centers of squares and not at the corners. Figure 10.105 shows a method of locating outlets which is undesirable because it gives a very low intensity of illumination near the walls compared with that at the center of the room. Figure 10.106 shows the correct method of locating outlets in the centers of the squares. In certain cases, notably in office lighting and in rooms with benches located along the walls, it may, to minimize shadows, be desirable to place the outer rows of outlets somewhat nearer the sidewalls of the room than they would be if symmetrically arranged as shown in Fig. 10.106.

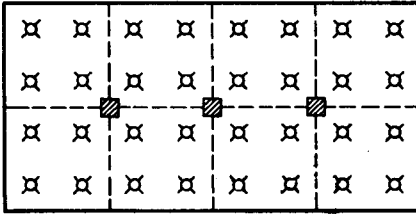
In laying out a lighting installation the maximum permissible spacing distance for the production of uniform illumination and satisfactory density of shadows should be determined first. The maximum permissible spacing for direct, semidirect, or general diffusing luminaires depends upon the candlepower-distribution characteristics of the luminaire.

After the maximum spacing has been determined, locate the units on a plan of the area so that they will be positioned symmetrically with respect to architectural conditions and at the same time will not exceed the maximum permissible spacing distance.

When the outlets are located above traveling cranes, the staggered system (Fig. 10.104e) is preferable so that as the crane moves along, it cuts off the light from only one unit at a time. If it is not desired to use the staggered system, additional lighting outlets, with special shock-absorbing sockets, should be located on the underside of the crane truss so that as the crane moves along, the light from those units replaces the light from the regular outlets which are cut off by the crane.


In buildings of mill-type construction the units are usually supported on the lower chord of the roof truss or suspended from the roof purlins. When the units are mounted on the lower chord of the roof truss, the illumination near the walls at each end of the building is low. When work must be carried on in these areas, it is better to support the units from the purlins or to locate a row of angle units along each end wall.

High mounting is desirable because then the lamps are out of the way of cranes and are less apt to be broken, glare is reduced to a minimum, and in the case of a light ceiling there is more reflection and better diffusion of light. The lamps should be lowered in locations where there is horizontal overhead belting, to the level of the bottom of the belting; otherwise, a portion of the light is ineffective. It may be necessary, for the same reason, to install two or three units in an area where conditions would otherwise warrant only one unit.




(a)

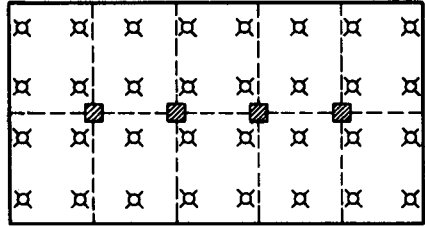Four units per bay — This is the most common system for the square bay of usual dimensions.




(b)

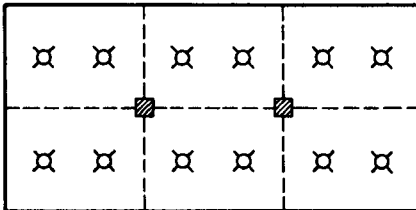Four-two system — This is equivalent to three units per bay and is an alternative to four per bay where spacing allows.




(c)

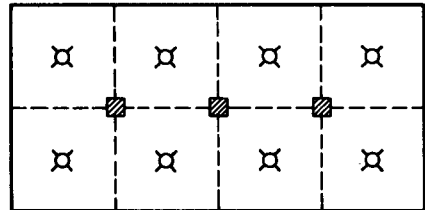Two units per bay — Usually applicable only in narrow bays where the width is less than two-thirds the length.




(d)

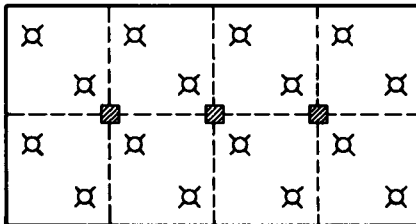One unit per bay — A very common practice, but satisfactory only where bay size is no greater than the maximum permissible spacing — an unusual condition.



(e)

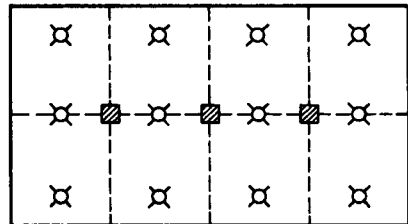Staggered system — A recourse where one unit per bay is unsatisfactory and where four per bay is unnecessary. Less favorable appearance, and certain areas near walls may be inadequately lighted. Often expensive to wire.



(f)

Interspaced system — Applicable in rectangular bays where one unit per bay would exceed the permissible spacing in one direction, and where center row will not interfere with future structural arrangements, such as added office partitions.

FIGURE 10.104 Layouts of lighting units for symmetrical spacing. [General Electric Co.]

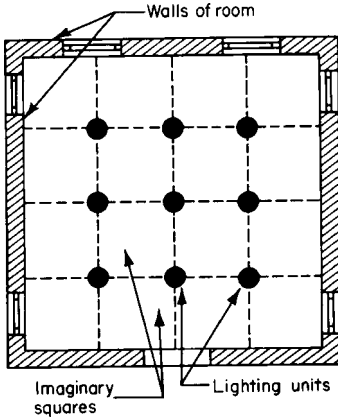


FIGURE 10.105 Incorrect arrangement of lighting units.

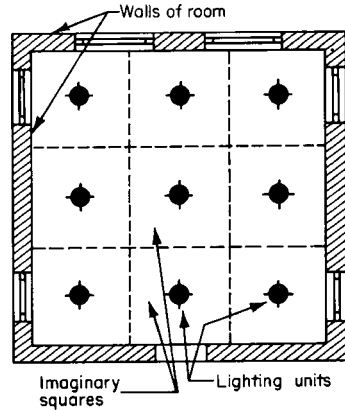


FIGURE 10.106 Correct arrangement of lighting units.

200. Reflection factor is the percentage of light reflected from a surface, such as a wall or ceiling, to the total light falling on the surface. The difference between the reflection factor and 100 percent represents the percentage of light which is absorbed by the surface and lost. Reflection factors for some of the common colors are given in Table 215. The reflection factor varies with the roughness of the surface as well as with the darkness of the color.

201. The coefficient of utilization is the overall efficiency of the lighting installation: the ratio of the useful lumens which get down to the working plane to the total lumens generated by the lamp. Tables 217, 218, and 219 give values for the coefficient of utilization for different types of luminaires, subdivided according to room cavity ratios and reflection factors for walls and for the ceiling. For more complete data refer to the *IES Lighting Handbook*.

202. Maintenance of lighting equipment. The intensity of illumination produced by a lighting installation will be somewhat less after the system has been in use for some time than it was when the system was first installed. This depreciation in the lighting system with time is due to the decrease in efficiency of the lamp in use and to the decrease in reflecting efficiency of the reflecting equipment, walls, and ceiling, which is the result of the natural deterioration of the surface with age and of the collection of dust and dirt.

In the design of lighting installations, a maintenance factor is used to take into account this depreciation. It has values less than unity, so that when the initial illumination is multiplied by the maintenance factor, the actual illumination after a period of several months' use will be obtained.

The amount of depreciation will vary from 25 to 45 percent, corresponding to a maintenance factor of 0.75 to 0.55, depending upon the type and material of the reflecting equipment, the system of illumination employed, the local conditions of dust and dirt, and the frequency of cleaning of equipment and repainting of walls. All lighting units should be adequately cleaned at regular intervals to prevent a waste of energy and low intensity of illumination. The frequency of the cleaning periods depends upon the degree of prevalence of dust and dirt and upon the type of luminaire.

203. Four principal methods are used in calculating illumination:

1. Point-by-point method
2. Lumen-per-foot method
3. Zonal-cavity method (general lighting)
4. Beam-lumens method (floodlighting)

204. The point-by-point method is based on the inverse-square law that the intensity of light flux varies inversely as the square of the distance from the light source to the point of measurement (see Sec. 26 and Fig. 10.107). The illumination on any plane perpendicular to the light rays is given by the following formula:

$$\text{Footcandles (on perpendicular plane)} = \frac{cd}{D^2} \quad (6)$$

where cd = the candlepower of the light source in the direction in which the distance D is taken and D = the perpendicular distance from the light source to the illuminated plane in feet.

Since the illumination of the horizontal plane is the value usually desired, the formula must be multiplied by the ratio H/D (see Fig. 10.107), or

$$\text{Footcandles (on horizontal plane)} = \frac{cd \times H}{D^3} \quad (7)$$

If the illumination on a vertical plane is desired, the basic formula (6) must be multiplied by the ratio X/D (see Fig. 10.112), or

$$\text{Footcandles (on vertical plane)} = \frac{cd \times X}{D^3} \quad (8)$$

The illumination at any point is obtained by adding the footcandles due to each light source which is sending rays of light to the point.

It is obvious that the point-by-point method is practical for use only with the direct type of lighting, for with any other system of illumination the number of light sources which would have to be considered would make the calculations prohibitively tedious. Even with the direct system it is usually necessary to calculate the footcandles from several different light sources. This method is especially applicable to calculating localized lighting when only a single light source needs to be considered.

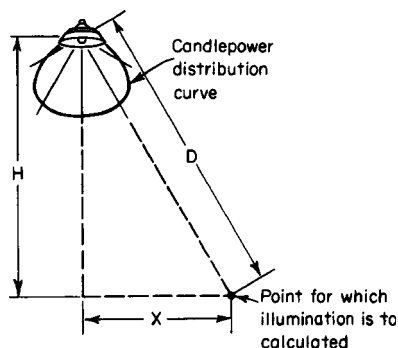


FIGURE 10.107 Point-by-point method of lighting calculations.

205. Lumen-per-foot method (General Electric Co.). The predetermining of lighting levels for supplementary lighting systems in which continuous linear sources are used can be accomplished from empirical data based on the lumens per foot of the source. These data are adaptable for relatively short distances between the light source and the work or

display to which the inverse-square law obviously does not apply. The lumen-per-foot method employs the following formulas:

Where the lamp and reflector have been selected,

$$\text{Footcandles} = K \times \text{lumens per foot of source}$$

(9)

Where a footcandle level is desired,

$$\text{Necessary lumens per foot} = \frac{\text{footcandles desired}}{K}$$

(10)

In formulas (9) and (10) the constant K refers, respectively, to either one of two constants K_H and K_V as given in Tables 206, 207, 208, and 209 for horizontal and vertical illumination.

Two types of luminaires are specified: broad distribution as from a unit with a mat-finish reflector and narrow distribution as from a polished metal reflector. The beam in both cases is presumed to be aimed at a plane 4 ft (1.2 m) from the source through point A.

The importance of the reflector is evident from a comparison of Tables 208 and 209. The average K value at 4 ft in 208 is 0.009; in 209, 0.021. This difference is 133 percent.

The actual values from which the tables were compiled are readings taken at the mid-point of luminaires 12 ft (3.7 m) in length. For conventional lighting systems, the footcandle levels would normally drop at the end of rows unless additional lamps or lamps of higher output were provided.

206. Horizontal Illumination

(Horizontal fc = $K_H \times$ lamp lumens per foot)

(Broad distribution—white-enamel reflector)



Distance between lamp center and plane of measurement, ft	K_H values (distance from centerline of unit), ft			
	0	1	2	3
1	0.438	0.127	0.008	0.001
2	0.223	0.150	0.061	0.017
3	0.145	0.120	0.077	0.041
4	0.106	0.095	0.072	0.048

207. Horizontal Illumination

(Horizontal fc = $K_H \times$ lamp lumens per foot)

(Narrow distribution—polished aluminum reflector)



Distance between lamp center and plane of measurement, ft	K_H values (distance from centerline of unit), ft			
	0	1	2	3
1	0.753	0.079		
2	0.330	0.165	0.035	0.006
3	0.212	0.161	0.066	0.022
4	0.153	0.131	0.086	0.038

208. Vertical Illumination(Vertical $fc = K_H \times$ lamp lumens per foot)

(Broad distribution—white-painted cornice; no reflector)



Distance between lamp center and plane of measurement, ft	K_v values (distance from centerline of unit), in				
	3	6	9	12	18
1	0.185	0.159	0.175	0.165	0.129
2	0.011	0.028	0.044	0.057	0.068
3	0.004	0.010	0.017	0.023	0.032
4	0.002	0.005	0.008	0.012	0.018

209. Vertical Illumination(Vertical $fc = K_v \times$ lamp lumens per foot)

(Narrow distribution—polished aluminum reflector)



Distance between lamp center and plane of measurement, ft	K_v values (distance from centerline of unit), in				
	3	6	9	12	18
1	0.121	0.125	0.135	0.096	0.080
2	0.028	0.056	0.077	0.086	0.090
3	0.010	0.028	0.036	0.044	0.059
4	0.006	0.013	0.020	0.031	0.037

210. Lumens per Foot (Initial Lumens per Nominal Length) for Fluorescent Lamps (Standard Cool White)^a
(General Electric Co.)

General-line lamps				
Lamp designation	Lumens per foot	Lumens (initial)	Nominal length, ft	
4WT-5	270	135	6	
6WT-5	393	295	9	
8WT-5	400	400	12	
13WT-5	486	850	21	
14WT-12	520	650	15	
15WT-8	550	825	18	
15WT-12	507	760	18	
20WT-12	600	1200	24	
30WT-8	725	2175	36	
30WT-12	742	2225	36	
40WT-12	762	3050	48	
Slimline lamps				
Lamp designation	Lumens per foot	Lumens (initial)	Nominal length, in	Watts (nominal)
42" T-6	500	1750	42	25.0
64" T-6	525	2800	64	40.0
72" T-8	500	3000	72	35.0
96" T-8	506	4050	96	50.0
48" T-12	600	2400	48	40.0
72" T-12	750	4500	72	55.0
96" T-12	769	6150	96	75.0
High-output rapid-start lamps				
48" T-12	1012	4050	48	60.0
72" T-12	1058	6350	72	85.0
96" T-17	1112	8900	96	110.0

^aFor lumens per foot of other colors use the following multiplying factors: deluxe cool white, 0.71; deluxe warm white, 0.71; daylight, 0.93; soft white, 0.68; green, 1.2; gold, 0.6; blue, 0.45; and pink, 0.45.

211. The zonal-cavity method. The lumen method of calculating illumination, which has been in use for many years, is based on the theory that average illumination is equal to lumens divided by the work area over which they are distributed. Newer methods of analysis of lighting distributions, taking into account the concept of interreflection of light, have led to more accurate coefficient-of-utilization data and have been adopted in the Illuminating Engineering Society (IES) approved method of lighting calculations called the *zonal-cavity method*. This method provides increased flexibility in lighting calculations, including greater accuracy, but still adheres to the basic concept that footcandles are equal to light flux over an area (the lumen method).

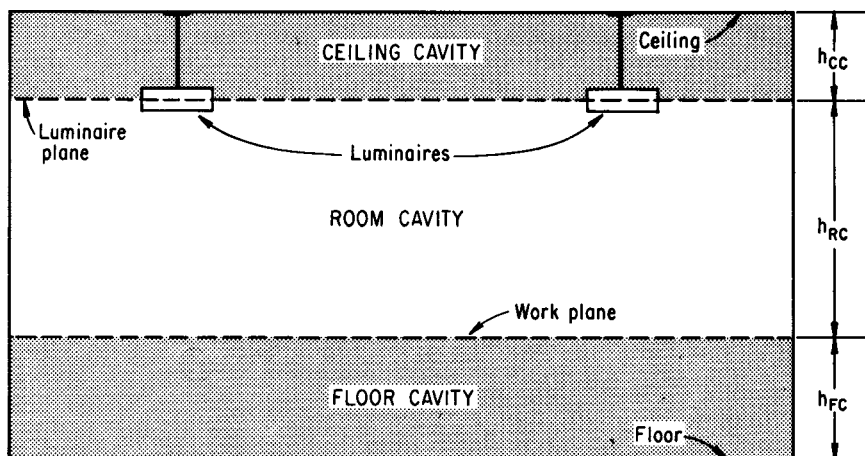


FIGURE 10.108 Basic cavity dimensions of space.

The zonal-cavity method assumes that an area to be lighted will be made up of a series of cavities which have effective reflectances with respect to one another and to the work plane. Basically, the area is divided into three spaces, or cavities, a *ceiling cavity*, a *room cavity*, and a *floor cavity*. These are shown graphically in Fig. 10.108.

In using the zonal-cavity method, there are four basic steps to be followed in making a calculation: (1) determine cavity ratios, (2) determine effective cavity reflectances, (3) select coefficient of utilization, and (4) compute average footcandle level.

Step 1. Determine Cavity Ratios. Cavity ratios may be determined by calculation, using formulas (15), (16), and (17) in Sec. 216, which is the basic and most accurate method; or the values may be found in Table 212 for typical-size cavities which cover a wide range of room dimensions. For a more complete table of cavity ratios, see the *IES Lighting Handbook*.

Step 2. Determine Effective Cavity Reflectances. Table 213 provides a means of converting the combination of actual wall and ceiling or actual wall and floor reflectances into a single effective ceiling cavity reflectance ρ_{cc} and a single effective floor cavity reflectance ρ_{fc} . Note that if the luminaire is recessed or surface-mounted or if the floor is the work plane, the ceiling cavity ratio or floor cavity ratio will be 0, and then the actual reflectance of the ceiling or floor will also be the effective reflectance. When using reflectance values of room surfaces, the expected maintained values should be used for calculation of maintained footcandles, or if initial footcandle values are desired, the initial reflectance values should be used.

Step 3. Select Coefficient of Utilization (CU). Using the ρ_{cc} , ρ_{fc} , and ρ_w (wall reflectance) determined in step 2 and knowing the room cavity ratio previously calculated in step 1, formula (16), in Sec. 216, refer to the coefficient of utilization in the CU table for the luminaire under consideration. Tables showing CU values for currently typical, popular types of luminaires are given in Tables 217, 218, and 219. For more complete data, see the *IES Lighting Handbook*. Manufacturers of lighting equipment will supply CU data for their own luminaires upon request. Note that since the CU tables are linear, linear interpolations can be made for exact cavity ratios or

reflectance combinations. Most CU tables are based on an effective floor cavity reflectance of 20 percent. Table 214 can be used to revise the CU for other effective floor cavity reflectances.

In determining the coefficient of utilization for a fluorescent luminaire, it is important that the specific lamp and ballast combination planned for an installation be identified and checked with the fixture manufacturer for any effect on the published CU. Fluorescent-lamp rated light output is established at 25°C (77°F). The light output from all fluorescent lamps varies with temperature (see Sec. 104). Different lamp designs, such as energy-saving types, do not operate at the same temperature in a specific luminaire, thus will differ in relative light output. Different ballast designs operate at different wattages and vary in losses, both of which affect the temperature in the luminaire and thus the light output.

Fluorescent-lamp ballasts usually do not operate lamps at rated wattage and light output. The ratio of lamp light output on a ballast compared with rated light output is called the *ballast factor*. Published coefficients of utilization assume rated lamp light output. Thus the CU for fluorescent luminaires must be multiplied by the ballast factor for the lamp-ballast combination being used in order to obtain accurate design calculations. The lamp type and ballast type must be identified to establish the specific ballast factor. Ballast factors can be obtained from ballast manufacturers.

Step 4. Compute Average Footcandle Level. Use the standard lumen method [formula (13) in Sec. 216] to compute the footcandle level that will be obtained. When maintained illumination levels are to be calculated, the maintenance factor (MF) should include lamp lumen depreciation (LLD) and luminaire dirt depreciation (LDD). Light source manufacturers can supply the LLD factor for any type of lamps; the factor should be based upon the luminaire's dirt attraction or dirt retention characteristics and the degree of dirtiness of the areas where it is to be used. Procedures for making these calculations are given in the *IES Lighting Handbook*.

212. Cavity Ratios(From *IES Lighting Handbook*, 4th ed.)

Room dimensions, feet		Cavity depth										
Width	Length	1.0	1.5	2.0	2.5	3.0	4.0	6	8	10	12	16
8	10	1.1	1.7	2.2	2.8	3.4	4.5	6.7	9.0	11.3		
	14	1.0	1.5	2.0	2.5	3.0	3.9	5.9	7.8	9.7	11.7	
	20	0.9	1.3	1.7	2.2	2.6	3.5	5.2	7.0	8.8	10.5	
10	10	1.0	1.5	2.0	2.5	3.0	4.0	6.0	8.0	10.0	12.0	
	14	0.9	1.3	1.7	2.1	2.6	3.4	5.1	6.9	8.6	10.4	
	20	0.7	1.1	1.5	1.9	2.3	3.0	4.5	6.0	7.5	9.0	12.0
	40	0.6	0.9	1.2	1.6	1.9	2.5	3.7	5.0	6.2	7.5	10.0
12	12	0.8	1.2	1.7	2.1	2.5	3.3	5.0	6.7	8.4	10.0	
	16	0.7	1.1	1.5	1.8	2.2	2.9	4.4	5.8	7.2	8.7	11.6
	36	0.6	0.8	1.1	1.4	1.7	2.2	3.3	4.4	5.5	6.6	8.8
	50	0.5	0.8	1.0	1.3	1.5	2.1	3.1	4.1	5.1	6.2	8.2
14	14	0.7	1.1	1.4	1.8	2.1	2.9	4.3	5.7	7.1	8.5	11.4
	20	0.6	0.9	1.2	1.5	1.8	2.4	3.6	4.9	6.1	7.3	9.8
	42	0.5	0.7	1.0	1.2	1.4	1.9	2.9	3.8	4.7	5.7	7.6
20	20	0.5	0.7	1.0	1.2	1.5	2.0	3.0	4.0	5.0	6.0	8.0
	45	0.4	0.5	0.7	0.9	1.1	1.4	2.2	2.9	3.6	4.3	5.8
	90	0.3	0.5	0.6	0.8	0.9	1.2	1.8	2.4	3.0	3.6	4.3
30	30	0.3	0.5	0.7	0.8	1.0	1.3	2.0	2.7	3.3	4.0	3.4
	60	0.3	0.4	0.5	0.6	0.7	1.0	1.5	2.0	2.5	3.0	4.0
	90	0.2	0.3	0.4	0.6	0.7	0.9	1.3	1.8	2.2	2.7	3.6
42	42	0.2	0.4	0.5	0.6	0.7	1.0	1.4	1.9	2.4	2.8	3.8
	90	0.2	0.3	0.3	0.4	0.5	0.7	1.0	1.4	1.7	2.1	2.8
	200	0.1	0.2	0.3	0.4	0.4	0.6	0.9	1.1	1.4	1.7	2.3
60	60	0.2	0.2	0.3	0.4	0.5	0.7	1.0	1.3	1.7	2.0	2.7
	100	0.1	0.2	0.3	0.3	0.4	0.5	0.8	1.1	1.3	1.6	2.1
	300	0.1	0.1	0.2	0.2	0.3	0.4	0.6	0.8	1.0	1.2	1.6
100	100	0.1	0.1	0.2	0.2	0.3	0.4	0.6	0.8	1.0	1.2	1.6
	300	0.1	0.1	0.1	0.2	0.2	0.3	0.4	0.5	0.7	0.8	1.1

In making lighting calculations for proposed projects, lighting designers should have all the facts required for use in their calculations. Included would be the end-use application of the space; the physical dimensions; the color and reflectance values of the ceiling, walls, and floor; the layout of furniture or machinery, including colors of the various furnishings, etc.; and a knowledge of the degree of cleanliness (or dirtiness) of the area which will affect maintenance of the lighting levels. The degree of accuracy of the lighting calculations is influenced directly by the degree of accuracy involved in these various factors. The zonal-cavity method of making lighting calculations offers a high degree of accuracy in the calculated results, but these results cannot be any more accurate than the data used to make the calculations, including estimates of maintenance factors.

213. Percent Effective Ceiling or Floor Cavity Reflectance for Various Reflectance Combinations

(From *IES Lighting Handbook*, 4th ed.)

Ceiling or floor cavity ratio	% ceiling or floor reflectance														
	80			70			50			30			10		
	% wall reflectance														
	70	50	30	70	50	30	70	50	30	50	30	10	50	30	10
0	80	80	80	70	70	70	50	50	50	30	30	30	10	10	10
0.1	79	78	78	69	69	68	49	49	48	30	29	29	10	10	10
0.3	77	75	74	68	66	64	49	47	46	29	28	27	10	10	9
0.5	75	73	70	66	64	61	48	46	44	28	27	25	11	10	9
0.6	75	71	68	65	62	59	47	45	43	28	26	25	11	10	9
0.8	73	69	65	64	60	56	47	43	41	27	25	23	11	10	8
1.0	71	66	61	63	58	53	46	42	39	27	24	22	11	9	8
1.2	70	64	58	61	56	50	45	41	37	26	23	20	12	9	7
1.4	68	62	55	60	54	48	45	40	35	26	22	19	12	9	7
1.6	67	60	53	59	52	45	44	39	33	25	21	18	12	9	7
1.8	65	58	50	57	50	43	43	37	32	25	21	17	12	9	6
2.0	64	56	48	56	48	41	43	37	30	24	20	16	12	9	6
2.2	63	54	45	55	46	39	42	36	29	24	19	15	13	9	6
2.4	61	52	43	54	45	37	42	35	27	24	19	14	13	9	6
2.6	60	50	41	53	43	35	41	34	26	23	18	13	13	9	5
2.8	59	48	39	52	42	33	41	33	25	23	18	13	13	9	5
3.0	58	47	38	51	40	32	40	32	24	22	17	12	13	8	5
3.3	56	44	35	49	39	30	39	31	23	22	16	11	13	8	5
3.6	54	42	33	48	37	28	39	30	21	21	15	10	13	8	5
3.9	53	40	30	47	36	26	38	29	20	21	15	10	13	8	4
4.2	51	39	29	46	34	25	37	28	19	20	14	9	13	8	4
4.5	50	37	27	45	33	24	37	27	19	20	14	8	14	8	4
4.8	49	36	25	44	32	23	36	26	18	19	13	8	14	8	4
5.0	48	35	25	43	32	22	36	26	17	19	13	7	14	8	4

214. Factors for Effective Floor Cavity Reflectance Other than 20 Percent^a

(From *IES Lighting Handbook*, 4th ed.)

Room cavity ratio	% effective ceiling cavity reflectance, ρ_{cc}							
	80		70		50		10	
	% wall reflectance, ρ_W							
	50	30	50	30	50	30	50	30
1	1.08	1.08	1.07	1.06	1.05	1.04	1.01	1.01
3	1.05	1.04	1.05	1.04	1.03	1.03	1.01	1.01
5	1.04	1.03	1.03	1.02	1.02	1.02	1.01	1.01
6	1.03	1.02	1.03	1.02	1.02	1.02	1.01	1.01
8	1.03	1.02	1.02	1.02	1.02	1.01	1.01	1.01
10	1.02	1.01	1.02	1.01	1.02	1.01	1.01	1.01

^aFor 30% effective floor cavity reflectance, multiply by appropriate factor above. For 10% effective floor cavity reflectance, divide by appropriate factor above.

215. Reflection Factors of Colored Surfaces

Color	Reflection factor, %
Flat white	75–85
Ivory	70–75
Buff	60–70
Yellow	55–65
Light tan	45–55
Light green	40–50
Gray	30–50
Blue	25–35
Red	15–20
Dark brown	10–15

216. Lighting design formulas**Lumen Method*

$$\text{Footcandles} = \frac{\text{lumens}}{\text{area, ft}^2} \quad (11)$$

$$\text{Initial fc} = \frac{\text{LL} \times \text{CU}}{\text{area, ft}^2} \quad (12)$$

$$\text{Maintained fc} = \frac{\text{LL} \times \text{CU} \times \text{MF}}{\text{area, ft}^2} \quad (13)$$

$$\text{MF} = \text{LLD} \times \text{LDD} \quad (14)$$

where fc = footcandles
 LL = lamp lumens
 CU = coefficient of utilization
 MF = maintenance factor
 LLD = lamp lumen depreciation factor
 LDD = luminaire dirt depreciation factor

IES Zonal-Cavity Method

Ceiling cavity ratio:

$$\text{CCR} = \frac{5h_{cc}(L + W)}{L \times W} \quad (15)$$

Room cavity ratio:

$$\text{RCR} = \frac{5h_{rc}(L + W)}{L \times W} \quad (16)$$

Floor cavity ratio:

$$\text{FCR} = \frac{5h_{fc}(L + W)}{L \times W} \quad (17)$$

where h_{cc} = distance in feet from luminaire to ceiling
 h_{rc} = distance in feet from luminaire to work plane
 h_{fc} = distance in feet from work plane to floor
 L = length of room in feet
 W = width of room in feet

*From *IES Lighting Handbook*, 4th ed.

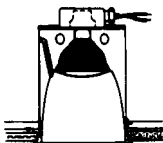
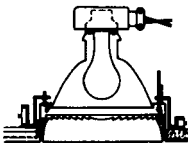
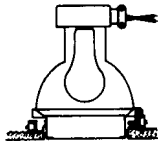


TABLES FOR INTERIOR ILLUMINATION DESIGN

217. Incandescent Lighting

(Lighting manufacturers' published reference material)

(Coefficients for utilization for typical luminaires; $\times 0.01$)

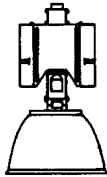

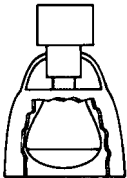
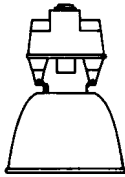
(Effective floor cavity reflectance 20 percent; pfc = 0.20)

Room cavity ratio, RCR	Effective ceiling cavity reflectance, ρ_{cc}						Typical luminaires, description
	80		70		50		
	Wall reflectance, ρ_w						
	50	30	50	30	50	30	
1	89	88	88	87	85	84	PAR-38 open unit 
2	83	81	82	80	81	79	
5	79	77	79	76	78	75	
6	78	75	77	75	77	75	
8	74	71	73	71	73	71	
10	71	69	71	69	71	69	
1	69	68	69	68	66	65	PS-25 Fresnelens 
3	60	57	59	56	57	55	
5	52	48	51	47	50	47	
6	49	44	48	44	47	44	
8	42	38	41	37	40	37	
10	36	32	36	32	35	32	
1	59	58	58	57	56	55	A-23 low brightness 
3	52	50	52	50	50	49	
5	47	44	46	44	46	43	
6	45	42	44	42	43	41	
8	39	37	39	36	39	36	
10	35	32	35	32	34	32	
1	72	72	70	70	68	68	PAR-38 microgroove 
3	67	65	66	64	65	63	
5	63	60	62	60	61	59	
6	61	59	61	59	60	58	
8	58	56	58	56	57	56	
10	56	54	56	54	55	53	
1	49	48	48	48	47	46	PAR-38 ellipsoidal unit 
3	45	44	45	43	44	42	
5	42	40	41	40	41	39	
6	40	38	40	38	39	38	
8	37	35	37	35	37	35	
10	35	33	35	33	34	33	

218. High-Intensity-Discharge Lighting

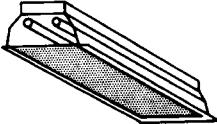
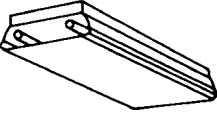

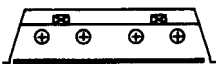
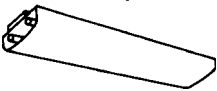
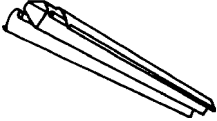
(IES Lighting Handbook, 4th ed., and lighting manufacturers' published reference material)

(Coefficients for utilization for typical luminaires; $\times 0.01$)(Effective floor cavity reflectance 20 percent; $\rho_{fc} = 0.20$)


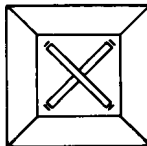
Room cavity ratio, RCR	Coefficients of utilization						Typical luminaires, description
Effective ceiling cavity reflectance, ρ_{cc} Wall reflectance, ρ_w	80		50		10		
	50	30	50	30	50	30	
1	89	87	81	79	72	71	400W aluminium 
3	77	72	71	68	65	63	
5	65	60	62	58	57	54	
6	61	56	57	53	54	50	
8	52	46	49	45	46	43	
10	42	36	39	35	37	37	
ρ_{cc} ρ_w	80		70		50		
	50	30	50	30	50	30	
1	88	86	86	84	82	81	400W H.P. sodium 
3	77	73	76	72	73	70	
5	67	63	66	62	65	61	
6	63	58	62	58	61	57	
8	56	51	54	51	54	50	
10	48	44	46	44	47	43	
ρ_{cc} ρ_w	70		50		30		
	50	30	50	30	50	30	
1	103	100	99	96	93	91	400W R-60 mercury 
3	82	75	79	73	72	68	
5	64	56	62	56	54	50	
6	54	49	53	48	47	43	
8	40	36	39	36	35	33	
10	27	25	27	25	24	23	
1	77	76	73	71	68	67	400W prismatic reflector 
3	66	63	63	60	59	57	
5	56	51	53	49	51	47	
6	52	47	49	45	47	43	
8	43	38	41	37	40	36	
10	35	30	33	29	32	28	

219. Fluorescent Lighting

(*IES Lighting Handbook* and manufacturers' catalogs)
(Coefficients of utilization for typical luminaires; $\times 0.01$)
(Effective floor cavity reflectance 20 percent; pfc = 0.20)

Room cavity ratio, RCR	Effective ceiling cavity reflectance, pcc						Typical luminaires, description
	80		70		50		
	Wall reflectance, ρW						
	50	30	50	30	50	30	
1	73	70	70	68	66	64	
3	59	54	57	53	54	50	
5	47	42	46	41	44	39	
6	43	38	42	37	40	35	
8	35	30	34	29	32	28	
10	29	23	28	23	27	22	
1	69	66	67	65	65	63	
3	53	49	52	48	50	47	
5	42	36	41	36	40	34	
6	38	31	37	31	36	30	
8	30	25	30	25	29	24	
10	25	19	24	19	24	18	
1	71	69	69	67	67	65	
3	57	53	56	52	54	51	
5	46	41	46	41	44	40	
6	42	36	41	36	40	36	
8	34	29	33	28	33	28	
10	28	23	27	22	27	22	
1	58	56	57	55	55	53	
3	47	43	46	43	45	42	
5	38	34	37	33	37	33	
6	34	30	34	30	33	29	
8	27	23	27	23	26	23	
10	23	19	23	19	22	19	
1	70	68	67	65	63	61	
3	56	51	54	50	51	47	
5	45	40	44	39	41	37	
6	41	35	39	34	37	33	
8	33	27	32	27	30	26	
10	26	21	26	21	24	20	
1	86	83	82	79	75	72	
3	68	62	65	60	60	56	
5	54	47	52	46	48	43	
6	49	42	47	40	43	38	
8	39	32	38	31	35	30	
10	32	26	31	25	29	23	

219. Fluorescent Lighting (Continued)

Room cavity ratio, RCR	Effective ceiling cavity reflectance, ρ_{cc}						Typical luminaires, description
	80		70		50		
	Wall reflectance, ρ_W						
	50	30	50	30	50	30	
1	83	80	-	-	74	72	
3	67	61	-	-	60	56	
5	53	47	-	-	48	44	
6	48	42	-	-	43	39	
8	37	32	-	-	34	30	
10	29	24	-	-	26	22	
1	66	64	-	-	62	60	
3	53	48	-	-	50	46	
5	42	37	-	-	40	36	
6	38	33	-	-	37	32	
8	31	26	-	-	30	25	
10	25	20	-	-	24	20	

220. Levels of illumination. The present *Recommended Levels of Illumination*, RP-15, utilizes a sophisticated approach to lighting. It provides flexibility in establishing lighting levels so that lighting systems can be set to meet specific needs. The procedure is fully described in the *IES Lighting Handbook: Application Volume*. Because this approach is the current state of the art, the prescriptive footcandle tables that appeared at this location for many editions up through the 11th edition (published in 1987) were subsequently deleted. However, this editor has been made very aware that a great many electricians still value the old tables, to the point of retaining the older editions of this *Handbook*.

Therefore, the old tables follow this commentary. The current IES protocol is still the best way to do these calculations, however, for those who want a prescriptive footcandle list as a starting point, they are now returned to this volume. *Inspection quickly shows that some of this information, which was last fully updated over twenty years ago, is plainly dated. Use the list with this caveat firmly in mind.*

While for convenience of use this table sometimes lists locations rather than tasks, the recommended footcandle values have been arrived at for specific visual tasks. The tasks selected for this purpose have been the more difficult ones which commonly occur in the various areas. To assure these values at all times, higher initial levels should be provided as required by maintenance conditions.

When tasks are located near the perimeter of a room, special consideration should be given to the arrangement of the luminaires to provide the recommended level of illumination on the tasks. The illumination levels shown in the table are intended to be the minimum on a task irrespective of the plane in which it is located. The commonly used lumen method of illumination calculation gives results for only a horizontal work plane. The ratio of vertical to horizontal illumination will generally vary from 1:3 for luminaires having a narrow

distribution to 1:2 for luminaires of wide distribution. When the levels thus achieved are inadequate, special luminaire arrangements must be used or supplemental lighting equipment employed.

Supplementary luminaires may be used in combination with general lighting to achieve these levels. The general lighting should not be less than 20 fc (21.5 dalx) and should contribute at least one-tenth of the total illumination level.

Area	Footcandles on tasks*	Area	Footcandles on tasks*
Interior lighting			
Airplane hangars (repair service only)	100	Medium	100
Airplane manufacturing		Fine	500
Stock parts		Extra fine	1000
Production	100	Auditoriums	
Inspection	200 ^a	Assembly only	15
Parts manufacturing		Exhibitions	30
Drilling, riveting, screw fastening	70	Social activities	5
Spray booths	100	Automobile manufacturing	
Sheet-aluminum layout and template		Frame assembly	50
work, shaping, smoothing of		Chassis-assembly line	100
small parts for fuselage,		Final assembly, inspection line	200 ^a
wing sections, cowlings, etc.	100	Body manufacturing	
Welding		Parts	70
General illumination	50	Assembly	100
Supplementary illumination	1000	Finishing, inspecting	200 ^a
Subassembly		Automobile showrooms (see Stores)	
Landing gear, fuselage, wing		Bakeries	
sections, cowlings, other large		Mixing room	50
units	100	Face of shelves	
Final assembly		(vertical illumination)	30
Placing of motors, propellers,		Inside of mixing bowl	
wing sections, landing gear	100	(vertical mixers)	50
Inspection of assembled plane		Fermentation room	30
and its equipment	100	Makeup room	
Machine-tool repairs	100	Bread	30
Armories		Sweet yeast-raised products	50
Drill	20	Proofing room	30
Exhibitions	30	Oven room	30
Art galleries		Fillings and other ingredients	50
General	30	Decorating and icing	
On paintings (supplementary)	30 ^b	Mechanical	50
On statuary and other displays	100 ^c	Hand	100
Assembly		Scales and thermometers	50
Rough, easy seeing	30	Wrapping room	30
Rough, difficult seeing	50		

*Minimum on the task at any time. For general notes see beginning of tabulation; for other notes see end of tabulation.

220. Levels of illumination (*Continued*)

Area	Footcandles on tasks*	Area	Footcandles on tasks*
Banks		Canning	
Lobby		Continuous-belt canning	100
General	50	Sink canning	100
Writing areas	70	Hand packing	50
Tellers' stations	150	Olives	100
Posting and key punch	150	Examination of canned samples	200 ^a
Barbershops and beauty parlors	100	Container handling	
Bookbinding		Inspection	200 ^a
Folding, assembling, pasting, etc.	70	Can unscramblers	70
Cutting, punching, stitching	70	Labeling, cartoning	30
Embossing, inspection	200 ^a	Central station	
Breweries		Air-conditioning equipment, air preheater and fan floor, ash sluicing	10
Brewhouse	30	Auxiliaries, battery rooms, boiler feed pumps, tanks, compressors, gage area	20
Boiling, keg washing	30	Boiler platforms	10
Filling (bottles, cans, kegs)	50	Burner platforms	20
Candymaking		Cable room, circulator or pump bay	10
Box department	50	Chemical laboratory	50
Chocolate department		Coal conveyor, crusher, feeder, scale areas, pulverizer, fan area, transfer tower	10
Husking, winnowing, fat extraction, crushing and refining, feeding	50	Condensers, deaerator floor, evaporator floor, heater floors	10
Bean cleaning, sorting, dipping, packing, wrapping	50	Control rooms	
Milling	00	Vertical face of switchboards	
Cream making (mixing, cooking, molding)	50	Simplex or section of duplex facing operator	
Gumdrops, jellied forms	50	Type A: large centralized control room 1.7 m (66 in.) above floor	50
Hand decorating	100	Type B: ordinary control room 1.7m (66 in.) above floor	30
Hard candy		Section of duplex facing away from operator	30
Mixing, cooking, molding	50	Benchboards (horizontal level)	50
Die cutting, sorting	100	Area inside duplex switchboards	10
Kiss making, wrapping	100	Rear of all switchboard panels (vertical)	10
Canning and preserving		Emergency lighting; all areas	3
Initial grading of raw-material samples	50	Dispatch boards	
Tomatoes	100	Horizontal plane (desk level)	50
Color grading (cutting rooms)	200 ^a	Vertical face of board [1.2 m (48 in.) above floor, facing operator]	
Preparation		System-load dispatch room	50
Preliminary sorting		Secondary dispatch room	30
Apricots and peaches	50		
Tomatoes	100		
Olives	150		
Cutting, pitting	100		
Final sorting	100		

*Minimum on the task at any time. For general notes see beginning of tabulation; for other notes see end of tabulation.

220. Levels of illumination (*Continued*)

Area	Footcandles on tasks*	Area	Footcandles on tasks*
Hydrogen and carbon dioxide manifold area	20	Cleaning and pressing industry	
Precipitators	10	Checking, sorting	50
Screenhouse	20	Dry and wet cleaning and steaming	50
Soot or slag blower platform	10	Inspection, spotting	500 ^a
Steam headers and throttles	10	Pressing	
Switch gear, power	20	Machine	150
Telephone-equipment room	20	Hand	150
Tunnels or galleries, piping	10	Repair and alteration	200 ^a
Turbine-bay subbasement	20	Cloth products	
Turbine room	30	Cloth inspection	2000 ^a
Visitors' gallery	20	Cutting	300 ^a
Water-treating area	20	Sewing	500 ^a
		Pressing	300 ^a
Chemical works		Club and lodge rooms	
Hand furnaces, boiling tanks, stationary dryers, stationary and gravity crystallizers	30	Lounge and reading rooms	30
Mechanical furnaces, generators and stills, mechanical dryers, evaporators, filtration, mechanical crystallizers, bleaching	30	Auditoriums (see Auditoriums)	
Tanks for cooking, extractors, percolators, nitrators, electrolytic cells	30	Coal tipples and cleaning plants	
		Breaking, screening, cleaning	10
		Picking	300 ^a
Churches and synagogues		Control rooms (see Central station)	
Altar, ark, reredos	100 ^e	Courtrooms	
Chair ^d and chancel	30 ^e	Seating area	30
Classrooms	30	Court-activity area	70
Pulpit, rostrum (supplementary illumination)	50 ^e	Dairy products	
Main worship area ^d		Fluid-milk industry	
Light and medium interior finishes	15 ^e	Boiler room	30
For churches with special zeal	30 ^d	Bottle storage	30
Art-glass windows (test recommended)		Bottle sorting	50
Light color	50	Bottle washers	^f
Medium color	100	Can washers	30
Dark color	500	Cooling equipment	30
Especially dense windows	1000	Filling: inspection	100
Clay products and cements		Gages (on face)	50
Grinding, filter presses, kiln rooms	30	Laboratories	100
Molding, pressing, cleaning, trimming	30	Meter panels (on face)	50
Enameling	100	Pasteurizers	30
Color and glazing: rough work	100	Separators	30
Color and glazing: fine work	300 ^a	Storage refrigerator	30
		Tanks, vats	
		Light interiors	20
		Dark interiors	100
		Thermometer (on face)	50
		Weighing room	30
		Scales	70

*Minimum on the task at any time. For general notes see beginning of tabulation; for other notes see end of tabulation.

220. Levels of illumination (*Continued*)

Area	Footcandles on tasks*	Area	Footcandles on tasks*
Dance halls	5	Forge shops	50
Depots, terminals, and stations		Foundries	
Waiting room	30	Annealing (furnaces)	30
Ticket offices		Cleaning	30
General	100	Core making	
Ticket rack and counters	100	Fine	100
Rest rooms, smoking room.	30	Medium	50
Baggage checking	50	Grinding, chipping	100 ^a
Concourse	10	Inspection	
Platforms	20	Fine	500 ^a
Toilets, washrooms	30	Medium	100
Dispatch boards (see Central station)		Molding	
Drafting rooms (see Offices)		Medium	100
Electrical-equipment manufacturing		Large	50
Impregnating	50	Pouring	50
Insulating::coil winding	100	Sorting	50
Testing	100	Cupola	20
Elevators, freight and passenger	20	Shake-out	30
Engraving, wax	200 ^a	Garages, automobile and truck	
Explosives		Service garages	
Hand furnaces, boiling tanks,		Repairs	100
stationary dryers, stationary and		Active-traffic areas	20
gravity cyrstallizers	30	Parking garages	
Mechanical furnace, generators,		Entrance	50
stills, mechanical dryers,		Traffic lanes	10
evaporators, filtration		Storage	5
mechanical crystallizers	30	Gasoline stations (see Service stations)	
Tanks for cooking, extractors,		Glassworks	
percolators, nitrators	30	Mix and furnace rooms, pressing and	
Farms: milkhouse	10	lehr, glassblowing machines	30
Fire hall (see Municipal buildings)		Grinding, cutting glass to size,	
Flour mills		silvering	50
Rolling, sifting, purifying	50	Fine grinding, beveling, polishing	100
Packing	30	Inspection, etching, decorating	200 ^a
Product control	100	Glove manufacturing	
Cleaning, screens, man lifts, aisleways		Pressing	300 ^a
and walkways, bin checking	30	Knitting	100
		Sorting	100
		Cutting	300 ^a
		Sewing, inspection	500 ^a
		Hangars (see Airplane hangars)	

*Minimum on the task at any time. For general notes see beginning of tabulation; for other notes see end of tabulation.

220. Levels of illumination (*Continued*)

Area	Footcandles on tasks*	Area	Footcandles on tasks*
Hat manufacturing		Eye, ear, nose, and throat suite	
Dyeing, stiffening, braiding, cleaning, refining	100	Darkroom	10
Forming, sizing, pouncing, flanging, finishing, ironing	200 ^a	Eye examination and treatment room	50
Sewing	500 ^a	Ear, nose, and throat room	50
		Flower room	10
		Formula room	30
		Fracture room	
Homes (see Residences)		General	50
		Fracture table	200
Hospitals		Laboratories	
Anesthetizing and preparation room	30	Assay rooms	30
Autopsy and morgue		Worktables	50
Autopsy room	100	Close work	100
Autopsy table	2500	Linen closet	10
Morgue, general	20	Lobby	30
Central sterile supply		Lounge rooms	30
General	30	Medical-records room	100
Needle sharpening	150	Nurseries	
Corridor		General	10
General	10	Examination table	70
Operating and delivery suites and laboratories	20	Playroom, pediatric	30
Cystoscopic room		Nurses' station	
General	100	General	20
Cystoscopic table	2500	Desk and charts	50
Dental suite		Medicine-room counter	100
Waiting room		Nurses' workroom	30
General	15	Obstetrical	
Reading	30	Cleanup room	30
Operatory, general	70	Scrub-up room	30
Instrument cabinet	150	Labor room	20
Dental chair	1000	Delivery room: general	100
Laboratory, bench	100	Delivery table	2500
Recovery room	5	Pharmacy	
EKG, BMR, and specimen room		General	30
General	20	Worktable	100
Specimen table (supplementary)	50	Active storage	30
Electroencephalographic suite		Alcohol vault	10
Office	100	Private rooms and wards	
Workroom	30	General	10
Patients' room	30	Reading	30
Emergency room		Psychiatric disturbed patients' areas	10
General	100	Radioisotope facilities	
Local	2000	Radiochemical laboratory	30
Examination and treatment room		Uptake measuring room	20
General	50	Examination table	50
Examining table	100	Retiring room	10
Exits, at floor	5	Sewing room	
		General	20
		Work area	100

*Minimum on the task at any time. For general notes see beginning of tabulation; for other notes see end of tabulation.

220. Levels of illumination (*Continued*)

Area	Footcandles on tasks*	Area	Footcandles on tasks*
Solariums	20	Inspection	
Stairways	20	Ordinary	
Surgery		Difficult	
Instrument and sterile supply room	30	Highly difficult	200 ^a
Cleanup room (instruments)	100	Very difficult	500 ^a
Scrub-up room	30	Most difficult	1000 ^a
Operating room, general	100		
Operating table	2500	Iron and steel manufacturing	
Recovery room	30	Open hearth	
Therapy		Stock yard	10
Physical	20	Charging floor	20
Occupational	30	Pouring slide	
Toilets	10	Slag pits	20
Utility room	20	Control platforms	30
Waiting room		Mold yard	5
General	15	Hot top	30
Reading	30	Hot-top storage	10
X-ray room and facilities		Checker cellar	10
Radiography and fluoroscopy	10	Buggy and door repair	30
Deep and superficial therapy	10	Stripping yard	20
Darkroom	10	Scrap stock yard	10
Waiting room, general	15	Mixer building	30
Waiting room, reading	30	Calcining building	10
Viewing room	30	Skull cracker	10
Filing room: developed films	30	Rolling mills	
Hotels		Blooming, slabbing, hot-strip.	
Bathrooms		hot-sheet	30
Mirror	30 ^g	Cold-strip, plate	30
General	10	Pipe, rod, tub. wire drawing	50
Bedrooms		Merchant and sheared plate	30
Reading (books, magazines, newspapers)	30	Tinplate mills	
Ink writing	30 ^h	Tinning, galvanizing	50
Makeup	30 ⁱ	Cold-strip rolling	50
General	10	Motor room, machine room	30
Corridors, elevators, stairs	20	Inspection	
Entrance foyer	30	Black, plate, bloom, and billet	
Front office	50	chipping	100
Linen room		Tinplate, other bright surfaces	100 ^j
Sewing	100	Jewelry and watch manufacturing	500 ^a
General	20	Kitchens (see Residences; Restaurants, lunchrooms, cafeterias)	
Lobby		Laundries	
General lighting	10	Washing	30
Reading and working areas	30	Flatwork ironing, weighing, listing, marking	50
Marquee		Machine and press finishing, sorting	70
Dark surroundings	30	Fine hand ironing	100
Bright surroundings	50		
Ice making: engine and compressor room	20		

*Minimum on the task at any time. For general notes see beginning of tabulation; for other notes see end of tabulation.

220. Levels of illumination (*Continued*)

Area	Footcandles on tasks*	Area	Footcandles on tasks*
Leather manufacturing		Fire hall	
Cleaning, tanning and stretching, vats	30	Dormitory	20
Cutting, fleshing, stuffing	50	Recreation room	30
Finishing, scarfing	100	Wagon room	30
Leatherworking		Museums (see Art galleries)	
Pressing, winding, glazing	200	Offices	
Grading, matching, cutting, scarfing, sewing	300	Cartography, designing, detailed drafting	200
Library		Accounting, auditing, tabulating, book-keeping, business-machine operation, reading poor reproductions, rough layout drafting	150
Reading room		Regular office work, reading good reproductions, reading or transcribing handwriting in hard pencil or on poor paper, active filing, index references, mail sorting	100
Study and notes	70	Reading or transcribing handwriting in ink or medium pencil on good-quality paper, intermittent filing	70
Ordinary reading	30	Reading high-contrast or well-printed material, tasks and areas not involving critical or prolonged seeing such as conferring, interviewing, inactive files, and washrooms	30
Stacks	30	Corridors, elevators, escalators, stairways	20 ^k
Book repair and binding	50		
Cataloguing	70	Packing and boxing (see Materials handling)	
Card files	70	Paint manufacturing	
Check-in and check-out desks	70	General	30
Locker rooms	20	Comparing mix with standard	200 ^j
Machine shops		Paint shops	
Rough bench work and machine work	50	Dipping, simple spraying, firing	50
Medium benchwork and machine work, ordinary automatic machines, rough grinding, medium buffing and polishing	100	Rubbing, ordinary hand painting and finishing art, stencil and special spraying	50
Fine benchwork and machine work, fine automatic machines, medium grinding, fine buffing and polishing	500 ^a	Fine hand painting and finishing	100
Extra-fine bench work and machine work, grinding, fine work	1000 ^a	Extra-fine hand painting and finishing (automobile bodies, piano cases, etc.)	300 ^a
Materials handling			
Wrapping, packing, labeling	50		
Picking stock, classifying	30		
Loading, trucking	20		
Inside truck bodies and freight cars	10		
Meat packing			
Slaughtering	30		
Cleaning, cutting, cooking, grinding, canning, packing	100		
Municipal buildings: fire and police			
Police			
Identification records	150		
Jail cells, interrogation rooms	30		

*Minimum on the task at any time. For general notes see beginning of tabulation; for other notes see end of tabulation.

220. Levels of illumination (*Continued*)

Area	Footcandles on tasks*	Area	Footcandles on tasks*
Paper-box manufacturing: general manufacturing area	50	Receiving and shipping (see Materials handling)	
Paper manufacturing		Residences	
Beaters, grinding, calendering	30	Specific visual tasks ¹	
Finishing, cutting, trimming, papermaking machines	50	Table games	30
Hand counting: wet end of paper machine	70	Kitchen activities	
Paper-machine reel, paper inspection, laboratories	100	Sink	70
Rewinder	150	Range and work surfaces	50
Plating	30	Laundry, trays, ironing board, ironer	50
Polishing and burnishing	100	Reading and writing including studying	
Power plants (see Central station)		Books, magazines, newspapers	30
Post offices		Handwriting, reproduction and poor copies	70
Lobby: on tables	30	Desks, study	70
Sorting, mailing, etc.	100	Reading music scores	
Printing industries		Simple scores	30
Type foundries		Advanced scores	70
Matrix making, dressing type	100	(When score is substandard size and notations are printed on the lines, 150 fc or more are needed.)	
Font assembly: sorting	50	Sewing	
Hand casting	50	Dark fabrics (fine detail, low contrast)	200
Machine casting	50	Prolonged periods (light to medium fabrics)	100
Printing plants		Occasional periods (light fabrics)	50
Color inspection and appraisal	200 ^a	Occasional periods (coarse thread, large stitches, high-contrast thread to fabric)	30
Machine composition	100	Shaving, makeup, grooming; on the face at mirror locations	50
Composing room	100	General lighting	
Presses	70	Entrances, hallways, stairways, stair landings	10 ^m
Imposing stones	150	Living room, dining room, bedroom, family room, sunroom, library, game or recreation room	10 ^m
Proofreading	150	Kitchen, laundry, bathroom	30
Electrotyping		Restaurants, lunchrooms, cafeterias	
Molding, routing, finishing, leveling molds, trimming	100	Dining areas	
Blocking, tinning	50	Cashier	50
Electroplating, washing, backing	50	Intimate type	
Photoengraving		Light environment	10
Etching, staging	50	Subdued environment	3
Blocking	50		
Routing, finishing, proofing	100		
Tint laying	100		
Masking	100		
Professional offices (see Hospitals)			

*Minimum on the task at any time. For general notes see beginning of tabulation; for other notes see end of tabulation.

220. Levels of illumination (*Continued*)

Area	Footcandles on tasks*	Area	Footcandles on tasks*
For cleaning	20	Service space	
Leisure type		Stairways	20
Light environment	30	Elevators, freight and passenger	20
Subdued environment	15	Corridors	20
Quick-service type		Storage (see Storage rooms)	
Bright surroundings ^a	100	Toilets and washrooms	30
Normal surroundings ^a	50		
Food displays: twice the general levels but not under	50	Service stations	
Kitchen, commercial		Service bays	30
Inspection, checking, pricing	70	Salesroom	50
Other areas	30	Shelving and displays	100
		Rest rooms	15
		Storage	5
Rubber goods, mechanical			
Stock preparation		Sheet-metal works	
Plasticating, milling, Banbury	30	Miscellaneous machines, ordinary benchwork	50
Calendering	50	Presses, shears, stamps, spinning, medium benchwork	50
Fabric preparation: stock cutting and hose looms	50	Punches	50
Extruded products	50	Tinplate inspection, galvanized	200 ^j
Molded products, curing	50	Scribing	200 ^j
Inspection	200 ^a		
Rubber tire and tube manufacturing		Shoe manufacturing, leather	
Stock preparation		Cutting, stitching	
Plasticating, milling, Banbury	30	Cutting tables	300 ^a
Calendering	50	Marking, buttonholing, skiving, sorting, vamping, counting	300 ^a
Fabric preparation: stock cutting and bead building	50	Stitching: dark materials	300 ^a
Tube and tread tubing machines	50	Making and finishing: nailers, sole layers welt beaters and scarfers, trimmers, welters, lasters, edge setters, sluggers, randers, wheelers, treers, cleaning, spraying, buffing, polishing, embossing	200
Tire building			
Solid tires	30		
Pneumatic tires	50		
Curing department: tube, casing	70		
Final inspection: tube, casing	200 ^a		
Wrapping	50		
Sawmills: grading redwood lumber	300	Shoe manufacturing, rubber	
		Washing, coating, mill-run compounding	30
Schools		Varnishing, vulcanizing, calendaring, upper and sole cutting	50
Reading printed material	30	Sole rolling, lining, making and finishing processes	100
Reading pencil writing	70		
Spirit-duplicated material			
Good	30		
Poor	100	Show windows ^o	
Drafting, benchwork	100 ^a	Daytime lighting	
Lip reading, chalkboards, sewing	150 ^a	General	200
		Feature	1000

*Minimum on the task at any time. For general notes see beginning of tabulation; for other notes see end of tabulation.

220. Levels of illumination (*Continued*)

Area	Footcandles on tasks*	Area	Footcandles on tasks*
Nighttime lighting		Structural-steel fabrication	50
Main business districts (highly competitive)		Sugar refining	
General	200	Grading	50
Feature	1000	Color inspection	200
Secondary business districts or small towns		Testing	
General	100	General	50
Feature	500	Extra-fine instruments, scales, etc.	200 ^a
Open-front stores (see Stores)		Textile mills: cotton	
Soap manufacturing		Opening, mixing, picking	30
Kettle houses. cutting, soap chips and powder	30	Carding, drawing	50
Stamping, wrapping and packing, filling, and packing soap powder	50	Slubbing, roving, spinning, spooling	50
Stairways (see Service space)		Beaming and splashing on comb	
Steel (see Iron and steel)		Gray goods	50
Stone crushing and screening		Denims	150
Bolt-conveyor tubes, main-line shafting spaces, chute rooms. inside of bins	10	Inspection:	
Primary breaker room, auxiliary breakers under bins	10	Gray goods {hand turning}	100
Screens	20	Denims {rapidly moving}	500 ^a
Storage-battery manufacturing: molding of grids	50	Automatic tying-in	150 ^a
Storage rooms or warehouses		Weaving	100
Inactive	5	Drawing-in by hand	200 ^a
Active		Textile mills: silk and synthetics	
Rough, bulky	10	Manufacturing: soaking, fugitive tinting, conditioning or setting of twist	30
Medium	20	Winding, twisting, rewinding and coning, quilling, slashing	
Fine	50	Light thread	50
Stores ^o		Dark thread	100
Circulation areas	30	Warping (silk or cotton system): on creel, on running ends, on reel, on beam, on warp at beaming	100
Merchandising areas		Drawing-in on heddles and reed	200 ^a
Service	100	Weaving	100
Self-service	200	Textile mills: woolen and worsted	
Showcases and wall cases		Opening, blending, picking	30
Service	200	Grading	100 ^a
Self-service	500	Carding, combing, recombining, gilling	50
Feature displays		Drawing	
Service	500	White	50
Self-service	1000	Colored	100
Stockrooms	30	Spinning {frame}	
		White	50
		Colored	100

*Minimum on the task at any time. For general notes see beginning of tabulation; for other notes see end of tabulation.

220. Levels of illumination (*Continued*)

Area	Footcandles on tasks*	Area	Footcandles on tasks*
Spinning (mule)		Theaters and motion-picture houses	
White	50	Auditoriums	
Colored	100	During intermission	5
Twisting: white	50	During picture	0.1
Winding		Foyer	5
White	30	Lobby	20
Colored	50		
Warping		Tobacco products	
White	50	Drying, stripping, general	30
White (at reed)	100	Grading, sorting	200 ^a
Colored	100	Toilets and washrooms	30
Colored (at reed)	300 ^a		
Weaving		Upholstering: automobile, coach, furniture	100
White	100		
Colored	200		
Gray-goods room		Warehouses (see Storage rooms or warehouses)	
Burling	150 ^a		
Sewing	300 ^a		
Folding	70	Welding	
Wet finishing		General illumination	50
Fulling	50	Precision-manual arc welding	1000 ^a
Scouring	50		
Crabbing	50	Woodworking	
Drying	50	Rough sawing and bench work	30
Dyeing	100 ^a	Sizing, planing, rough sanding, medium-quality machine work and benchwork, gluing, veneering, cooperage	50
Dry finishing		Fine benchwork and machine work, fine sanding and finishing	100
Napping	70		
Shearing	100		
Conditioning	70		
Pressing	70		
Inspecting (perching)	2000 ^a		
Folding	70		
Exterior lighting			
Building		Medium-dark surfaces	15
General construction	10	Dark surfaces	20
Excavation work	2	Bulletin and poster boards	
		Bright surroundings	
Building exteriors and monuments: floodlighted		Light surfaces	50
Bright surroundings		Dark surfaces	100
Light surfaces	15	Dark surroundings	
Medium-light surfaces	20	Light surfaces	20
Medium-dark surfaces	30	Dark surfaces	50
Dark surfaces	50		
Dark surroundings		Central station	
Light surfaces	5	Catwalks	2
Medium-light surfaces	10	Cinder dumps	0.1
		Coal-storage area	0.1

*Minimum on the task at any time. For general notes see beginning of tabulation; for other notes see end of tabulation.

220. Levels of illumination (*Continued*)

Area	Footcandles on tasks*	Area	Footcandles on tasks*	
Coal unloading		Loading and unloading platforms	20	
Dock (loading or unloading zone)	5	Freight-car interiors	10	
Barge-storage area	0.5	Lumberyards	1	
Car dumper	0.5 ^a	Parking lots	5	
Tipple	5	Piers		
Conveyors	2	Freight	20	
Entrances		Passenger	20	
Generating or service building		Prison yards	5	
Main	10	Protective lighting		
Secondary	2	Boundaries		
Gatehouse:		Glare-projection technique (isolated)	0.15	
Pedestrian entrance	10	General-lighting technique (nonisolated)	0.20	
Conveyor entrance	5	Entrances		
Fence	0.2	Active (pedestrian and/or conveyance)	5	
Fuel-oil delivery headers	5	Inactive (normally locked, infrequently used)	1	
Oil-storage tanks	1	Vital locations or structures	5	
Open yard 0.2		Building surrounds	1	
Platforms: boiler, turbine deck	5	Active shipping-area surrounds	5	
Roadway		Storage areas, active	20	
Between or along buildings	1	Storage areas, inactive	1	
Not bordered by buildings	0.5	Loading and unloading platforms	20	
Substation		General inactive areas	0.20	
General horizontal	2	Quarries	5	
Specific vertical (on disconnects)	2	Railroad yards		
Coal yards (protective)	0.2	Receiving	0.2	
Dredging	2	Classification	0.3	
Flags, floodlighted (see Bulletin and poster boards)		Roadways	^q	
Gardens		Service stations (at grade)		
General lighting	0.5		Surroundings:	
Path, steps, away from house	1		Dark	Light
Backgrounds: fences, walls, trees, shrubbery	2	Approach	1.5	3
Flower beds, rock gardens	5	Driveway	1.5	5
Trees, shrubbery, when emphasized	5	Pump-island area	20	30
Focal points, large	10	Building faces (exclusive of glass)	10 ^r	30 ^r
Focal points, small	20	Service areas	3	7
Gasoline stations (see Service stations)				
Highways	^q			

*Minimum on the task at any time. For general notes see beginning of tabulation; for other notes see end of tabulation.

220. Levels of illumination (*Continued*)

Area		Footcandles on tasks*		Area		Footcandles on tasks*			
Shipyards				Storage yards (active)				20	
General		5		Streets				9	
Ways		10		Water tanks with advertising messages (see Bulletin and poster boards)					
Fabrication areas		30							
Smokestacks with advertising messages (see Bulletin and poster boards)									
Sports lighting									
Archery				Billiards (on table)					
		Shooting		Tournament				50	
		Target		Recreational				30	
Tournament		10'		General area				10	
Recreational		5'				Lanes		Pins	
Badminton				Bowling					
Tournament		30		Tournament		20		50'	
Club		20		Recreational		10		30'	
Recreational		10		Bowling, lawn					
		Infield		Tournament				10	
		Outfield		Recreational				5	
Baseball				Boxing or wrestling (ring)					
Major league		150		Championship				500	
AA and AAA leagues		75		Professional				200	
A and B leagues		50		Amateur				100	
C and D leagues		30		Seats during bout				2	
Semiprofessional and municipal leagues		20		Seats before and after bout				5	
Junior leagues (Class I and Class II)		40				Pier or dock		Target	
On seats during game				Casting					
On seats before and after game				Bait		10		5'	
				Dry-fly		10		5'	
				Wet-fly		10		5'	
Basketball				Croquet					
College and professional		50		Tournament				10	
College intramural and high school with spectators		30		Recreational				5	
College intramural and high school without spectators		20		Curling: indoor					
Recreational (outdoor)		10							
		45 m (150 ft) from shore		Football					
		On land		(Index: Distance from nearest sideline to the farthest row of spectators.)					
Bathing beaches		1		3'					

*Minimum on the task at any time. For general notes see beginning of tabulation; for other notes see end of tabulation.

220. Levels of illumination (*Continued*)

Area	Footcandles on tasks*	Area	Footcandles on tasks*	
Class I: over 30 m (100 ft)	100	Racing		
Class II: 15 to 30 m (50 to 100 ft)	50	Bicycle		20
Class III: 9 to 15 m (30 to 50 ft)	30	Motor (midget automobile or motorcycle)		20
Class IV: under 9 m (30 ft)	20	Horse		20
Class V: no fixed seating facilities	10	Dog		30
It is generally conceded that the distance between the spectators and the play is the first consideration in determining the class and lighting requirements. However, the potential seating capacity of the stands should also be considered, and the following ratio is suggested: Class I, for more than 30,000 spectators; Class II, for 10,000 to 30,000; Class III, for 5000 to 10,000; Class IV for fewer than 5000 spectators		Rifle range		
		On target		50'
		Firing point		10
		Range		5
		Roque		
Golf driving		Tournament		20
		Recreational		10
		Shuffleboard		
		Tournament		10
		Recreational		5
General on the tees	10	Skating		
At 200 yd	5'	Roller rink		5
Practice and putting green	10	Ice rink (indoor or outdoor)		5
Gymnasiums (refer to individual sports listed separately)		Lagoon, pond, or flooded area		1
		Skeet shoot		
		Target: surface at 18 m (60 ft)		30'
		Firing point, general		10
		Ski-slope practice		0.5
Exhibitions, matches	30	Soccer		
General exercising, recreation	20	Professional and college		30
Assemblies	10	High school		20
Dances	5	Athletic field		10
Lockers, shower rooms	10	Softball		
Handball			Infield	Outfield
			50	30
		Professional and championship		
		Semiprofessional	30	20
		Industrial league	20	15
Horseshoes		Recreational	10	7.5
		Squash		
		Tournament		30
		Club		20
		Recreational		10
Ice hockey		Lacrosse		
College or professional	50			
Amateur league	20			
Recreational	10			
Lacrosse				
Quoits	5			

*Minimum on the task at any time. For general notes see beginning of tabulation; for other notes see end of tabulation.

220. Levels of illumination (*Continued*)

Area	Footcandles on tasks*	Area	Footcandles on tasks*
Swimming pools	10	Trapshoot	
General, overhead		Target [at 45 m (150 ft)]	30 ^r
Outdoors	<i>s</i>	Firing point, general	10
Indoors	<i>t</i>		
Tennis		Volleyball	
Lawn	Table	Tournament	20
Tournament	30	Recreational	10
Club	20		
Recreational	10		
Transportation lighting			
Airplanes: passenger compartment		Ships	
General	5	Living areas	
Reading at seat	20	Staterooms	
Airports		Crew	5 ^u
Hangar apron	1	Officers	5 ^u
Terminal-building apron		Passengers	5 ^u
Parking area	0.5	Berth, on reading plane	15
Loading area	2	Mirrors, at face	50
Automobiles: license plates	0.5	Baths	
Motor coaches		Crew	5
City driving	30	Public	5
Country driving,	15	Officers	5
Railway passenger cars		Passengers	5
Reading and writing		Mirrors, at face	50
General	20	Passageways	5
Detail	50	Stair foyers: passengers	10
Washroom section		Stairs	
General	15	Passengers	10
Mirror	30	Crew	5
Toilet section	5	Entrance: passengers	10 ^v
Dining car	15	Lounges: passengers and officers	10 ^x
Taverns	10	Recreation rooms: crew	20
Social areas	20	On tables	30
Steps and vestibules	10	Dining room: passengers	10 ^w
Railway mail cars		Mess room: officers and crew	10
Mailbag racks and letter cases	30	On tables	15
Mail storage	15	Libraries	10
Rapid-transit cars	30	For reading	30
		Smoking rooms	5 ^x
		Enclosed promenades: along in-	
		board bulkhead for reading	10
		Barbershop and beauty parlor	20
		On subject	50
		Cocktail lounges	5 ^w

*Minimum on the task at any time. For general notes see beginning of tabulation; for other notes see end of tabulation.

220. Levels of illumination (*Continued*)

Area	Footcandles on tasks*	Area	Footcandles on tasks*
Bars	5"	Food storage (nonrefrigeration)	5
Ballrooms	5"	Refrigerated spaces (ship's stores)	5
Swimming pools, indoor beaches	10"	Butcher shop	15"
Shopping areas	20"	Print shop	30"
Theaters		Tailor shop	50"
During show	0.1	Post offices	20"
Intermission	5	Lockers	3
Gymnasiums	20	Telephone exchange	10"
Hospital		Storerooms	5
Operating room	50"	Operating areas	
Dental room	30"	Engine rooms (working areas)	10"
Dispensary	30"	Boiler rooms (working areas)	10"
Wards	5"	Fan rooms	5
Doctor's office	20"	Motor-generator rooms	
Waiting room	10 ^c	(cargo handling)	5
Radio room: passenger foyer	10 ^c	Generator and switchboard rooms	10
Passenger counter, purser's office	20	Windlass rooms	5
Navigating areas		Switchboards: vertical illumination	
Wheelhouse (not used under way)	5	At top 3	0
Chartroom	10	3 ft above deck	10
On chart table	50	Steering-gear room	5
Radar room	5	Pump room	1
Gyro room	5	Gage and control boards (vertical	
Radio room	10"	illumination) on gages	30
Ship's offices	20	Shaft alley	3
On desks and worktables	50	Dry-cargo holds (permanent fixture)	1"
For bookkeeping and auditing	50	Refrigerated-cargo loading and	
Log room	10	unloading	3"
On desk	50	Workshops	20
Service areas		On work	50
Galley	20"	Cargo hatches	
Laundry	15"	Over hatch area	5
Pantry	15"	Adjacent deck area	3
Sculleries	15"		
Food preparation"	20	Trolley coaches and streetcars	30

*Minimum on the task at any time. For general notes see beginning of tabulation.

^aObtained with a combination of general lighting plus specialized supplementary lighting. Care should be taken to keep within the recommended brightness ratios. These seeing tasks generally involve the discrimination of fine detail for long periods of time and under conditions of poor contrast. To provide the required illumination, a combination of the general lighting indicated and specialized supplementary lighting is necessary. The design and installation of the combination system must provide not only a sufficient amount of light but also the proper direction of light, diffusion, and eye protection. As far as possible it should eliminate direct and reflected glare as well as objectionable shadows.

^bDark paintings with fine detail should have 2 to 3 times higher illumination.

^cIn some cases, much more than 100 fc (108 dalx) is necessary to bring out the beauty of the statuary.

^dReduced or dimmed during sermon, prelude, or meditation.

^eTwo-thirds of this value if interior finishes are dark (less than 10 percent reflectance) to avoid high brightness ratios, such as between hymn book pages and the surroundings. Careful brightness planning is essential for good design.

^fSpecial lighting such that (1) the luminous area is large enough to cover the surface which is being inspected and (2) the brightness is within the limits necessary to obtain comfortable contrast conditions. This involves the use of

sources of large area and relatively low brightness in which the source brightness is the principal factor rather than the footcandles produced at a given point.

⁸For close inspection, 50 fc (54 dalx).

⁹Pencil handwriting and reading of reproductions and poor copies require 70 fc (75 dalx).

¹⁰For close inspection, 50 fc (54 dalx). This may be done in the bathroom, but if a dressing table is furnished, local lighting should provide the level recommended.

¹¹The specular surface of the material may necessitate special consideration in selection and placement of lighting equipment or orientation of the work.

¹²Or not less than one-fifth of the level in adjacent areas.

¹³Brightness of visual task must be related to background brightness.

¹⁴General lighting for these areas need not be uniform in character.

¹⁵Including street and nearby establishments.

¹⁶(1) Values are illumination on the merchandise on display or being appraised. The plane in which lighting is important may vary from horizontal to vertical. (2) Specific appraisal areas involving difficult seeing may be lighted to substantially higher levels. (3) Color rendition of fluorescent lamps is important. Incandescent and fluorescent usually are combined for best appearance of merchandise. (4) Illumination may often be made nonuniform to fit merchandising layout.

¹⁷Values based on a 25 percent reflectance, which is average for vegetation and typical outdoor surfaces. These figures must be adjusted to specific reflectances of materials lighted for equivalent brightnesses. Levels give satisfactory brightness patterns when viewed from dimly lighted terraces or interiors. When viewed from dark areas, they may be reduced by at least one-half, or they may be doubled when a high key is desired.

¹⁸See Sec. 232.

¹⁹Vertical.

²⁰60 lamp lumens per square foot of surface.

²¹100 lamp lumens per square foot of surface.

²²Supplementary lighting should be provided in this space to produce the higher levels of lighting required for specific seeing tasks involved.

²³The installation should be such that the level of illumination can be increased to at least 40 fc (43 dalx) for day-time embarkation.

²⁴In public areas such as lounges, ballrooms, bars, smoking rooms, and dining rooms, the footcandle values may vary widely, depending upon the atmosphere desired, the decorative scheme, and the use made of the room.

²⁵See footnotes *u* and *w*.

²⁶Also underwater lights and sunlamps.

INTERIOR-LIGHTING SUGGESTIONS

221. Residence lighting. In the lighting of the home, the decorative element should predominate. The lighting must, however, comply with the general rules of lighting (Sec. 188) concerning color, shadows, glare, and illumination. A room in which yellow or red is the predominant color gives a warm, cheerful impression, whereas a room furnished in blue tends to produce the opposite sensation. Shade and softened shadows are preferable to sharp shadows or to no shadows. It is especially important that any glare be minimized. Luminous ceilings can be installed in such rooms as kitchens and bathrooms.

Detailed recommendations for residence lighting are given in a booklet prepared by the Committee on Residence Lighting of the Illuminating Engineering Society and titled *Design Criteria for Lighting Interior Spaces*.

Kitchen. The kitchen requires plenty of well-diffused light for timely preparation of food without accidents. In most kitchens, general lighting from two 40-W fluorescent lamps or two 150-W to four 100-W incandescent lamps will provide satisfactory general illumination. For very large kitchens, 80 to 120 W of fluorescent lighting or two 100-W incandescent lamps per 60 ft² will be needed. Unless the room is very small with light-colored walls and ceilings, the general illumination should be augmented by additional localized ceiling or bracket units. A single light in the center of the kitchen usually compels the cook to work entirely in his or her own shadow, whether at the range, the sink, or the kitchen cabinet or table. A single fluorescent ceiling unit over the center of the sink or a bracket at each side of the sink is nearly always necessary to eliminate

shadows and provide adequate illumination at the sink. Often it is advisable to locate similar units at the range and counter work areas.

Bedroom. The illumination requirements of the bedroom are somewhat similar to those of the kitchen. General illumination should be provided by means of a centrally located ceiling unit of low brightness so that it will not be uncomfortable to the eyes of one lying in bed. Additional illumination should be provided at the dresser or bureau by means of either brackets or a portable lamp on each side of the mirror. A bracket or wall-mounted fluorescent unit should be provided at the head of each bed unless localized table luminaires are used for providing illumination for reading at these locations. Better illumination for this purpose is generally obtained by a wall-mounted bracket or fluorescent units.

Living Room. Although ceiling fixtures have been eliminated in many living rooms, an attractive, properly shielded fixture is a very effective method of obtaining the general level of illumination needed for festive occasions. For a quiet evening at home a lower level of general illumination can be obtained by means of the indirect type of floor and table lamps. With their high efficiency and good color characteristics, compact fluorescent lamps with integral ballasts or ballast adapters should be considered for use in floor and table lamps. The chief function of bracket lamps is ornamentation, and they should not be relied upon to provide necessary light for useful purposes.

Dining Room. There are several satisfactory methods of illuminating the dining room, the selection depending upon personal taste. General illumination may be provided by means of a centrally located chandelier. It should be mounted 30 in (762 mm) above the table in an 8-ft- (2.4-m-) ceiling room. In rooms with higher ceilings, the chandelier should be raised 3 in (76 mm) for each foot. Recessed downlights can be used with chandeliers for dramatic lighting of table settings. Cove lighting by means of fluorescent lamps concealed in a trough a few inches down from the ceiling may be used. Wall brackets for decorative effects are also common.

Bathroom. In the bathroom illumination of the mirror requires the greatest consideration. For the best illumination of the mirror three luminaires, one at each side of the mirror and one mounted overhead, are needed. Fairly good results can be obtained with only two units located one at each side of the mirror. If only one unit is used, it should be mounted overhead and centered with respect to the mirror. For small bathrooms the mirror wall brackets will supply sufficient general illumination for the rest of the room. In rooms of any appreciable size a central enclosing unit should be used in addition to the bracket lamps. A ceiling-mounted heat lamp will provide added comfort for the winter months.

222. Store lighting. The object of lighting in a store is twofold. Primarily, sufficient illumination must be provided to enable articles for sale to be seen plainly, but of almost equal importance is the advertising value. The lighting units should be so selected as to give a pleasing and cheerful appearance to the store as a whole, without glare. Stores may be divided into three classes: (1) the small store, in which efficiency is of first importance; (2) the large store, such as a department store, in which efficiency is necessary on account of the large areas to be lighted but in which it must be balanced by artistic appearance, the result being a compromise between the two; and (3) shops, large or small, in which the articles for sale are of a special type and the profits large enough so that even the most inefficient system can be afforded if it is sufficiently attractive to appeal to customers. The general requirements which must be satisfied are outlined separately in the following sections.

General Features of Store Lighting. General lighting best meets the requirements for the lighting of stores. The lamps should be arranged symmetrically with respect to bays or pillars. Direct glare must be very carefully avoided. The position of the counters need

not be considered in spacing the lamps. Local accurate-color-matching units are advisable at certain points in the store, such as counters for the sale of ribbon and dress goods.

The intensity of illumination must be varied with the articles which are to be sold. Furniture requires well-diffused lighting of relatively low intensity. Colored dress goods, men's clothing, rugs and carpets, and so on, require a high intensity. In many installations, side light is necessary and should be given special attention in selecting types of units and reflectors. Crystal and jewelry should be so lighted as to sparkle and glitter. Bare lamps and mirrored reflectors may be used in ornamental-type luminaires for this purpose. In this case glare is to a certain extent unavoidable, but light units can usually be so located as to be out of the range of vision of customers when they are inspecting the wares on display.

Pictures require a high intensity, with the light units at such an angle that light will not be reflected from the surface of the painting or from the glass directly into the observer's eyes. Individual units or mirrored-trough reflectors, with fluorescent or tubular tungsten lamps, are ordinarily used.

High-color-rendition fluorescent lamps should be used to illuminate all items in which color is important, such as women's dresses, coats, and furs, men's suits and coats, draperies and curtains, tapestries, and neckties. Concealed fluorescent units may also be used in wall valances or coves for decorative effects.

Showcases. A showcase interior should have more illumination than the top of the case but not more than about twice as much. If the illumination on top is in the 30- to 75-fc (323- to 807-lx) range, T-6 or T-8 slimlines inside the case, operated at 200 mA, provide sufficient light; for higher footcandles on the top, an operating current of 300 mA is sometimes recommended. Too great a differential between the illumination inside the case and that on the top, where the merchandise is normally inspected more closely prior to purchase, is not advisable. Many products examined under an illumination level significantly lower than that under which they were displayed lose some of their attraction. This is not a consideration with feature displays, since they are seldom removed for inspection.

The plot in Fig. 10.109 indicates the approximate initial footcandles perpendicular to the source at various angles for each 100 rated lamp lm/ft of case length. The figures above the arcs represent footcandles obtained with a fluorescent lamp in a specular showcase

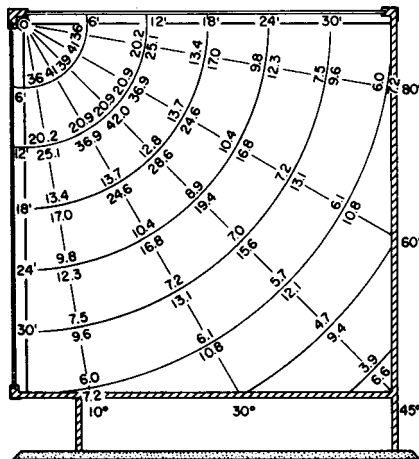
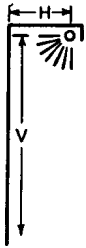


FIGURE 10.109 Initial footcandles for each 100 rated lamp lm/ft of showcase length.

reflector. The figures below the arcs represent footcandles obtained with standard filament reflector showcase lamps and differ from the fluorescent values because of beam control.

Wall Cases. Wall cases generally should be illuminated to approximately the same level as counter display areas. However, higher levels are desirable when the brightness of the wall case and the adjoining sales space is to be used partly to pull traffic into the area. One of the most important features of the lighting of wall cases for wearing apparel is that it be designed to light the entire case from top to bottom rather than just the shoulders of the garments. The illumination at the bottom should be at least one-tenth of that at the top.

The accompanying table lists the approximate illumination in footcandles produced by fluorescent lamps on a vertical surface for each 100 rated lamp lm/ft of case length. The specular symmetrical reflector was so adjusted that its maximum candlepower was directed at a point 42 in (1067 mm) below the lamp. When no reflector was used, the entire inner surface of the valance was painted white.

Horizontal distance— H , in								
 Vertical distance— V , in	Values with symmetrical reflector, fc				Values without reflector, fc			
	6	12	18	24	6	12	18	24
6	21.4	15.7	12.1	9.8	30.6	22.8	16.5	13.5
12	12.0	12.8	12.1	10.2	11.3	14.7	13.6	12.2
18	7.4	9.6	10.0	9.1	5.2	8.8	10.2	9.6
24	4.4	6.9	8.8	7.7	2.6	5.0	6.6	7.2
30	2.6	4.8	6.9	6.8	1.4	3.3	4.4	5.2
36	2.0	3.8	5.2	6.1	1.0	2.2	3.2	4.1
42	1.4	2.8	4.1	5.0	0.6	1.4	2.2	3.0
48	0.8	1.9	2.8	4.1	0.4	1.0	1.6	2.2
54	0.8	1.6	2.4	3.4	0.4	0.8	1.4	1.6
60	0.6	1.2	1.9	2.6	0.3	0.8	1.0	1.4

223. Show-window lighting. Since the primary object of a show window is to attract attention, it should be illuminated to a sufficient intensity so that it will stand out from its surroundings. Several factors need to be considered in designing show-window lighting systems such as type of merchandise, location of the store, time-of-day usage, enclosed or open back design, and the size and shape of the show window. Great care should be exercised in designing show-window lighting so that the lamps will be concealed from view. The lighting equipment should be concealed either by recessing it in the ceiling or by employing a valance between the reflector and the front glass of the window. A good way to blind prospective customers so that they cannot see the goods on display in your window is to put exposed lamps around the window borders, suspend them from chandeliers, or so install them in the top of the window that their eyes cannot escape them.

Shadows are necessary in window lighting to produce the desired effects, but they should not be too sharply defined. The light should come from in front of the goods. If the lamps are placed in the middle of the show-window ceiling, the front of the goods displayed in the front of the window will be in darkness because of shadows they cast.

If the back of the display window is not boxed in or if the window back is of glass, a valance or a curtain should be provided to screen the window lamps from the store and to prevent back reflection to an observer on the sidewalk.

Customers' attention should be attracted by illuminating selected articles with spot-lights. If decorative effects are desired, colored spotlights may be used, and motor-operated

dimmers can add motion and dramatic effects. Fluorescent units bring out the beauty of floral displays and emit very little heat. Daylight lamps bring out the beauty of polished aluminum and chromium-plated articles.

224. Show-window lighting equipment. Incandescent lamps are extensively used in show-window applications owing to the wide variety of wattages, sizes, reflectorized types, and colored lamps. Lighting units with special reflectors for show-window lighting are available in many shapes to meet the varied requirements of different types and sizes of windows. Reflectorized (reflector and projector) lamps are widely used owing to the built-in light control within the lamp. Low-voltage PAR and MR-16 reflector lamps provide excellent beam control for lighting special areas of a show window to a higher intensity. Colored reflector and PAR lamps or the use of colored gelatin screen or glass roundels can provide desired effects with color. No general rules for shadows and color of light to be used can be given. An infinite number of effects can be obtained. By experiment, the display manager should determine the best effect for each display to be lighted.

225. School and office lighting. As school and office work is usually performed during daylight hours, any artificial illumination is usually in conjunction with available daylight. Since practically all the work done in an office or school is on plane surfaces such as papers and books, shadows not only are unnecessary but are objectionable. Also, since the persons must use artificial illumination for long periods of time, the glare should be minimal. These requirements render indirect and semi-indirect units especially suitable for office and school illumination. The units should, as a general rule, be more closely spaced than for other classes of service. This spacing will produce a more gradual shading of any shadows and will also afford a greater flexibility in desk and partition arrangement. The extensive use of video-display units in offices and classrooms has established the need to design lighting systems to avoid reflected brightness in VDU screens.

226. Lighting Codes and Legislation. Codes and regulations relating to lighting generally fall within two categories: energy saving codes and safety and construction codes. Energy saving codes are concerned with methods to conserve energy through the efficient use of electric lighting. The codes establish maximum limits for power density values (watts per square foot) for lighting used in various applications. In addition there may also be codes which set minimum efficiency standards for lighting equipment.

The safety and construction codes involve the safety and construction requirements which must be complied with in the construction, installation, and maintenance of lighting systems.

Contractors involved with lighting should be familiar with the codes and regulations which are applicable in the geographic areas of their work.

HEAT WITH LIGHT FOR BUILDING SPACES

227. Luminaires for environmental control. Not too many years ago architects designed buildings primarily as space enclosures. The end use for which the space enclosures were intended usually dictated the type and design of the buildings and the division and arrangement of the space. Comfort conditioning of the space for people normally consisted of a heating system for use in cold weather and a ventilating or air-conditioning system for warm weather.

Progress in building design and construction and in technological developments in space conditioning has changed the architects' objective in the design of buildings. Present

emphasis is not only on space enclosure tailored to the needs of occupants but also on environment and environmental control of lighting, heating, cooling, acoustics, space flexibility, and appearance (pleasing colors, etc.).

Visual and thermal conditions have become two of the most important considerations in planned interior environment. Visual comfort is controlled primarily by quality and quantity of illumination. And adequate illumination of proper quality for high visual performance and high visual comfort increases electric-energy loads, which also means higher heat gain. Thus, lighting systems that provide adequate quality illumination may have a considerable effect on thermal conditions within buildings. Thermal comfort is controlled through a proper balance in temperature, relative humidity, and air motion. Accordingly, light- and heat-producing characteristics of the lighting system have become dominant factors in the thermal equation.

This expanded use of lighting heat heralds a new era in environmental design. It provides the opportunity to supply all or a substantial part of a building's heating requirements from lighting systems with accompanying benefits, and control of lighting heat is necessary for the most effective utilization of this energy.

228. Integrated lighting-heating-cooling systems. There has been a growing coordinated activity between electrical and mechanical engineers since 1958, when the Illuminating Engineering Society adopted new and higher recommended levels of illumination for most seeing tasks. This activity has resulted in many new techniques for handling lighting heat loads, which are based on the integration and correlation of lighting, heating, and cooling systems. Although many approaches to this problem are possible, the basic one is to divert all possible lighting heat gain from the occupied spaces in buildings to keep the capacity of the (cooling) system as low as possible. Another objective is to recapture some or all of this lighting heat gain to keep the capacity of the heating system as low as possible. This heat may be removed from interior areas of the building which need cooling, for example, and redirected to perimeter areas which need heating at the same time.

229. Air-handling troffers. In the typical integrated system, heat from the lighting system is removed by passing return air from the air-conditioned space through vents integral with the luminaires over the warm surfaces of lamps, ballasts, and luminaires, into the plenum or return air duct, and back through the return side of the air-conditioning system. After tempering, the supply air is redistributed, entering the conditioned spaces through a different set of vents, which are also integral with the luminaires. Luminaires designed for this purpose are called *air-handling troffers*. There is also available an *air-water luminaire*, in which circulating water through the luminaire removes the lighting heat.

By combining lighting, heating, and cooling services in a single outlet element (the luminaire), the conflict for space both above and on the ceiling is reduced. This integration forces coordinated design and produces as its visual result an architecturally clean, uncluttered ceiling.

Many lighting manufacturers now have available air-handling troffers in a range of sizes and for a variety of air-handling requirements: (1) static (non-air-handling), (2) air supply, (3) air return, and (4) a combination of air supply and air return. These luminaires may be integrated with either cooling systems or heating systems, or both. Installation methods conform generally to those for standard fluorescent troffers.

Also available are several complete ceiling systems combining both air-supply and air-return provisions, some of which use conventional fluorescent luminaires and some of which incorporate special air-handling luminaires that are an integral part of the ceiling system. Typical examples are shown in Figs. 10.110, 10.111, and 10.112. The air-handling troffer in Fig. 10.110 supplies cool air to the occupied space below the ceiling and returns

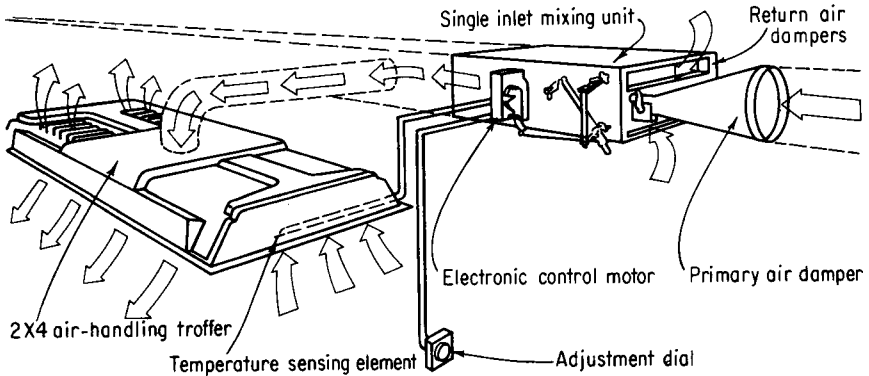


FIGURE 10.110 Air-handling troffer. [Day-Brite Lighting Division, Emerson Electric Co., *Electrical Construction and Maintenance*]

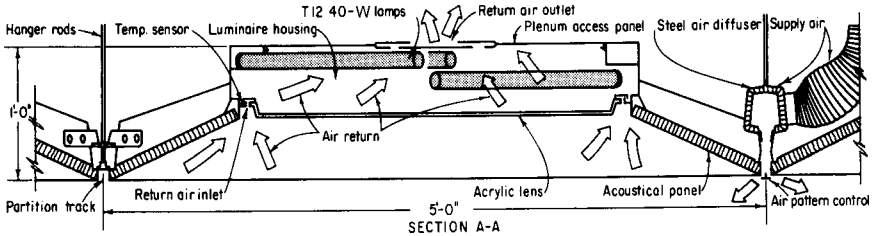


FIGURE 10.111 Unified ceiling system. [Day-Brite Lighting Division, Emerson Electric Co.]

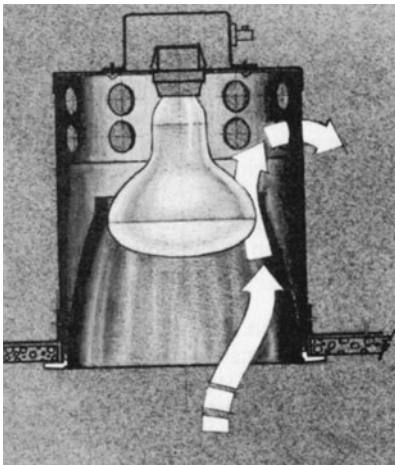


FIGURE 10.112 Recessed incandescent downlights integrated with heating and cooling systems.

warm air from the occupied space through the troffer to the open plenum above. Heat from lamps and ballasts is also removed. Warm plenum air may be discarded or mixed with fresh air and recirculated for heating specific occupied spaces.

The unified ceiling system in Fig. 10.111 provides complete environmental control through a modular-size integrated package. Each module combines lighting, heating, cooling, sound control, partition tracks for flexibility, shielding of the lighted portion of a luminaire in the line of vision, and good appearance.

The recessed incandescent downlight (Fig. 10.112) is integrated with heating and cooling systems to the extent that lighting heat may be exhausted to the plenum space and discharged as waste or reused.

STREET LIGHTING

230. General requirements for street lighting. Good roadway lighting, often termed *traffic safety lighting*, not only promotes safer conditions for drivers but provides greater safety for pedestrians as well. It enhances the community value of a street by its attractive appearance, which is usually reflected in higher property values. Well-lighted streets also act as a deterrent to criminal activity.

To achieve truly effective street lighting it is essential that the installation be well planned. Planned street lighting should follow the American Standard Practice for Roadway Lighting of the Illuminating Engineering Society and will involve the following considerations:

1. Traffic classification of the street.
2. Determination of the proper lighting intensity for the street classification.
3. Selection of luminaires according to the light distribution needed for the street.
4. Determination of the mounting height of the luminaire above the road surface and the proper linear spacing between luminaires.

Each step follows the preceding one in logical order, and the following information will assist in the planning of an installation. Manufacturers of roadway lighting equipment have computerized programs to assist in detailed planning of an installation.

231. Roadway classification. A traffic classification relating to use should be made of all streets so that the lighting-system design will be in keeping with the particular needs of each street or highway. It is also recommended that roadways be classified by the area of location to establish the volume of pedestrian traffic to be considered. Typical roadway and area classifications are defined here (General Electric Co.).

Roadway Class

1. *Freeway.* A divided major roadway with full control of access and with no crossings at grade. This definition applies to toll as well as to nontoll roads.
2. *Expressway.* A divided major roadway for through traffic with partial control of access and generally with interchanges at major crossroads. Expressways for noncommercial traffic within parks and parklike areas are generally known as parkways.
3. *Major roadways.* The part of the roadway system that serves as the principal network for through-traffic flow. The routes connect areas of principal traffic generation and important rural highways entering the city.
4. *Collector roadways.* The distributor and collector roadways serving traffic between major and local roadways. These are roadways used mainly for traffic movements within residential, commercial, and industrial areas.
5. *Local roadways.* Roadways used primarily for direct access to residential, commercial, industrial, or other abutting property. They do not include roadways carrying through traffic. Long local roadways will generally be divided into short sections by collector roadway systems.

Area Class

1. *Commercial.* That portion of a municipality in a business development where ordinarily there are large numbers of pedestrians and heavy demand for parking space during periods of peak traffic or sustained high pedestrian volume and continuously heavy demand for off-street parking during business hours. This definition applies

to densely developed business areas outside, as well as those that are within, the central part of a municipality.

- 2. *Intermediate.* That portion of a municipality which is outside a downtown area but generally within the zone of influence of a business or industrial development, characterized often by moderately heavy nighttime pedestrian traffic and somewhat lower parking turnover than is found in a commercial area. This definition includes densely developed apartment areas, hospitals, public libraries, and neighborhood recreational centers.
- 3. *Residential.* A residential development, or a mixture of residential and commercial establishments, characterized by few pedestrians and lower parking demand or turnover at night. This definition includes areas with single-family homes, townhouses, and/or small apartments. Regional parks, cemeteries, and vacant lands are also included.


232. Lighting intensity. The recommended illumination level is dependent both on the area and on the roadway classification. Recommended minimum average maintained levels and recommended average-to-minimum uniformity ratios for several classifications are shown in the following table.

ANSI-IES Recommendations

Roadway classification	Minimum average maintained footcandles	Uniformity, average footcandles/minimum footcandles
Residential areas		
Local	0.4	6:1
Collector	0.6	3:1
Major	1.0	3:1
Intermediate areas		
Local	0.6	3:1
Collector	0.9	3:1
Major	1.4	3:1
Commercial areas		
Collector	1.2	3:1
Major	2.0	3:1


233. Selection of luminaire. Luminaires should be selected according to their pattern of light distribution so as to conform not only to the light intensity required but to the physical characteristics of the street to be lighted. Typical lateral candlepower distribution curves for several types of luminaires are shown. Lateral beam width is measured to half maximum candlepower.

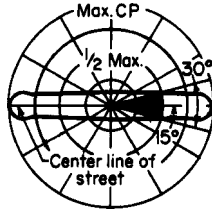Type I Luminaire. Type I is a two-way lateral distribution having a preferred lateral width of 15° on each side of the reference line (total, 30°), with an acceptable range of from 10 to less than 20°. It projects two beams in opposite directions along the roadway parallel to the curbline. The candlepower distribution is similar on both sides of the




vertical plane of maximum candlepower. Luminaires with this type of distribution are generally applicable to locations near the center of a roadway where the mounting height is approximately equal to the roadway width.

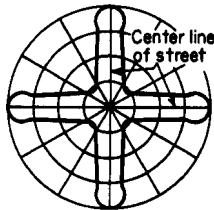
Four-Way Type I Luminaire. Four-way Type I is a distribution having four principal concentrations at lateral angles of approximately 90° to one another, each with a width of from 20° to less than 40° as in Type I. This distribution is generally applicable to luminaires located over or near the center of a right-angle intersection.



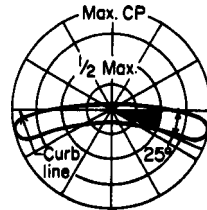
Type II Luminaire. Type II distributions have a preferred lateral width of 25° with an acceptable range of from 20° to less than 30° . This distribution is generally applicable to luminaires located at or near the side of relatively narrow roadways when the width of the roadway does not exceed 1.6 times the mounting height.



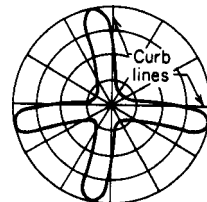
Four-Way Type II Luminaire. Four-way Type II distributions have four principal light concentrations, each with a width of from 20° to less than 30° as in Type II. This distribution is generally applicable to luminaire locations near one corner of a right-angle intersection.



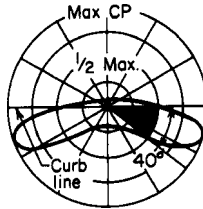
Type III Luminaire. Type III distributions have a preferred lateral width of 40° with an acceptable range of from 30° to less than 50° . This type of distribution is intended for luminaires mounted at or near the side of medium-width roadways when the width of the roadway does not exceed 2.7 times the mounting height.



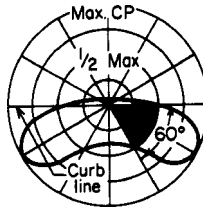
Type IV Luminaire. Type IV distributions have a preferred lateral width of 60° with an acceptable width of 50° or more. This type of distribution is intended for side-of-road mounting and is generally used on wide roadways (width up to 3.7 times the mounting height).



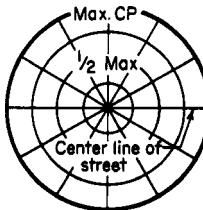Type V Luminaire. Type V distribution is essentially circular, with equal candlepower at all lateral angles. This type of distribution is intended for luminaire mounting at or near the center of a roadway, in the center islands of parkways, and at intersections.



234. Mounting height and spacing of luminaires. Two considerations are of paramount importance in determining optimum mounting height: the desirability of minimizing direct glare from the luminaire and the need for a reasonably uniform distribution of illumination on the street surface. The higher the luminaire is mounted, the farther it is above the normal line of vision and the less glare it creates. However, the attainment of uniform illumination requires a certain relationship between mounting height, luminaire spacing, and the vertical angle of maximum candlepower for the specific luminaire (usually between 70° and 80°).

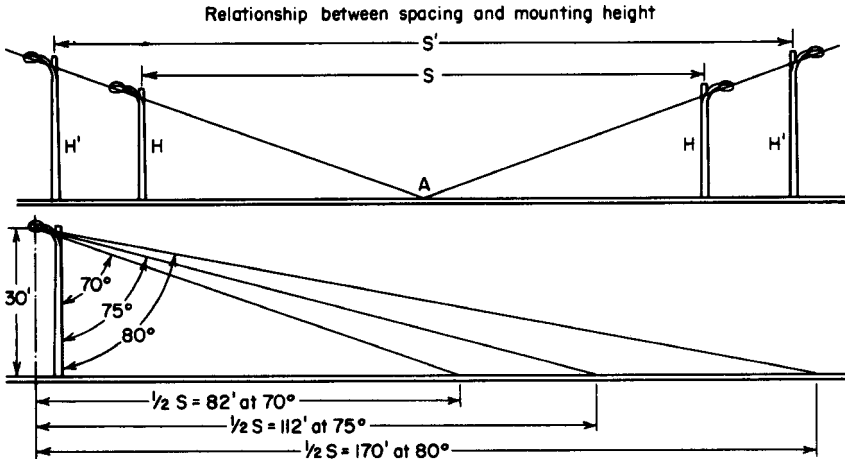

For a given luminaire the ratio of pole spacing to mounting height should be low enough so that the light at the angle of maximum vertical candlepower will strike the street at least halfway to the adjacent pole. To provide greater uniformity on busy streets the spacing is often reduced by as much as 50 percent, which provides a 100 percent overlap of vertical beams.

The mounting heights recommended by the Illuminating Engineering Society's Roadway Lighting Committee take into account both the objective of minimum glare and that of maximum uniformity. Greater mounting heights may often be preferable, but heights less than those recommended should be avoided.

FLOODLIGHTING

235. Modern floodlighting meets many utilitarian requirements as well as many applications concerned with decoration, aesthetics, or advertising values. Protecting property after nightfall, completing a construction job within the time allotted, illuminating a dangerous traffic intersection, and prolonging the hours of play in recreational areas are only a few of the almost infinite applications of utilitarian floodlighting.

As an advertising medium that compels attention without detracting from the beauty or dignity of a building, floodlighting offers its best proof by the many excellent examples to be found in almost every city. The natural beauty of churches, civic buildings, monuments, and gardens is often enhanced by skillfully applied floodlighting.

236. Floodlighting design. The type of area to be lighted, the possible location of equipment, and the variation in surrounding conditions impose problems in design which tend to make floodlighting-design standardization difficult. Manufacturers of floodlighting equipment can be consulted for detailed design information. There are, however, certain basic rules which may be followed in installation design.

237. Step 1: Determine the level of illumination. In Table 220 are listed the illumination levels for many floodlighting applications. These levels are designated as *foot-candles in service*, and allowance must be made for reasonable depreciation in the original design.

In lighting buildings, monuments, etc., the reflection factor of the object and the brightness of the surroundings must be considered to determine the amount of light necessary (Table 238).

238. Recommended Illumination Levels for Floodlighting
(*IES Lighting Handbook*)

Surface material	Reflectance, %	Surround	
		Bright	Dark
		Recommended level, fc	
Light marble, white or cream terracotta, white plaster	70–85	15	5
Concrete, tinted stucco, light gray and buff limestone, buff face brick	45–70	20	10
Medium gray limestone, common tan brick, sandstone	20–45	30	15
Common red brick, brownstone, stained wood shingles, dark gray brick	10–20 ^a	50	20

^aBuildings or areas of materials having a reflectance of less than 20% usually cannot be floodlighted economically unless they carry a large amount of high-reflectance trim.

239. Recommendations for Sports Lighting





Application	Foot-candles maintained in service		Application	Foot-candles maintained in service	
Sports lighting					
Badminton:			Club.....	20	
Tournament.....	30		Recreational.....	10	
Club.....	20				
Recreational.....	10		Horseshoe pitching:		
			Tournament.....	10	
Baseball:			Recreational.....	5	
Seats:			Playgrounds.....	5	
During game.....	2				
Before and after game.....	5		Race tracks:		
		In-field	Seats.....	2	
Major League.....	150	Out-field	Track.....	20	
AAA and AA League.....	75	50			
A and B League.....	50	30	Rifle range:		
C and D League.....	30	20		Out-door	In-door
Semipro and municipal.....	20	15	On target.....	30*	50*
			Firing point.....	10	10
Basketball:			Range.....	...	5
College and Professional.....	50		Shuffleboard:		
High school.....	30		Tournament.....	10	
Recreational.....	10		Recreational.....	5	
Bathing beaches (surf).....	3*				
Billiards:			Skating:		
	General	On Table	Rink (indoor or outdoor).....	5	
Tournament.....	10	50	Pond or flooded area.....	1	
Recreational.....	10	30			
Bowling:			Skeet shooting, target surface at 60 ft.....	30*	
	General	On Pins		30*	
Tournament.....	20	50*	Ski slope, practice.....	0.5	
Recreational.....	10	30*			
Boxing or wrestling:			Soccer:		
Seats:			College and professional.....	30	
During bout.....	2		High school.....	20	
Before and after bout.....	5		Recreational.....	10	
Ring:			Softball:		
Championship.....	500			In-field	Out-field
Professional.....	200		Pro and championship.....	50	30
Amateur.....	100		Semipro.....	30	20
			Industrial league.....	20	10
Croquet:			Recreational.....	10	5
Tournament.....	10		Squash:		
Recreational.....	5		Tournament.....	30	
Football:			Club.....	20	
Class I.....	100		Recreational.....	10	
Class II.....	50		Swimming pools	10	
Class III.....	30				
Class IV.....	20		Tennis:		
Class V.....	10			Table	Lawn
Gymnasium:			Tournament.....	50	30
Locker and shower rooms.....	10		Club.....	30	20
Exercise rooms, fencing, boxing, wrestling, basketball, volleyball, softball, and general exercise.....	20		Recreational.....	20	10
Exhibition games and matches.....	30		Trapshooting:		
Handball:			Target surface at 150 ft.....	30*	
Tournament.....	30		Firing point—general.....	10	
			Volleyball:		
			Tournament.....	20	
			Recreational.....	10	

* Vertical.

240. Step 2: Determine the type and location of floodlights. Floodlighting equipment may be of either the *general-purpose* or the *heavy-duty* class. The general-purpose floodlight is one in which the inner surface of the housing serves as the reflecting surface. The heavy-duty floodlight is more rugged, since its aluminum or glass reflector is protected by a metal housing.

The finish of the reflector has an important influence on the beam spread. Most enclosed units are available with either a narrow-beam (specular-finish) or a wide-beam (diffuse-finish) reflector. Essentially all floodlighting equipment is enclosed today for improved maintenance.

241. Data on Typical Floodlight Equipment

Description	Advantages	Lamp types	Beam-spread NEMA type ^a
Group A	Good light control for distance	1000- to 1500-W metal halide	1–5
Heavy-duty or general-purpose	Weathertight Useful in a variety of applications, mostly sports lighting	400- to 1000-W high pressure sodium	
			
Group B	Good light control	250-, 400-, and 1000-W metal halide	6 × 2
Heavy-duty	Weathertight		6 × 5
high-wattage HID	Easily serviced		6 × 6
	High fixture efficiency	250-, 400-, and 1000-W high-pressure sodium	6 × 7
			
Group C	Good light control	175-W metal halide	6 × 6
Heavy-duty	Weathertight	35- through 250-W	7 × 6
low-wattage HID	Easily serviced	high-pressure sodium	7 × 7
	High fixture efficiency		
	Use at lower mounting or where lower lighting levels are satisfactory		
			
Group D	Good light control	300-, 500-, 1000-W, and 1500-W, tungsten halogen	6 × 4
Heavy-duty	Weathertight		6 × 5
tungsten-halogen	Easily serviced		
	Low cost		
			

^aAsymmetrical beam spreads have a horizontal and a vertical designation. The horizontal is stated first; i.e., a 6 × 2 beam spread is a NEMA Type 6 in the horizontal dimension and a NEMA Type 2 in the vertical dimension.

242. To simplify the specification of equipment the National Electrical Manufacturers Association has introduced a series of type numbers specifying beam spread and group letters specifying floodlight construction. To meet NEMA standards a floodlight must conform to certain construction requirements as well as have a certain minimum efficiency for a given beam spread.


Although the choice of beam spread for a particular application depends upon individual circumstances, the following general principles apply;

1. The greater the distance from the floodlight to the area to be lighted, the narrower the beam spread desired.
2. Since by definition the candlepower at the edge of a floodlight beam is 10 percent of the candlepower near the center of the beam, the illumination level at the edge of the beam is one-tenth or less of that at the center. To obtain reasonable uniformity of illumination the beams of individual floodlights must overlap each other as well as the edge of the surface to be lighted.
3. The percentage of beam lumens falling outside the area to be lighted is usually lower with narrow-beam units than with wide-beam units. Thus narrow-beam floodlights are preferable when they will provide the necessary degree of uniformity of illumination and the proper footcandle level.

Outdoor Floodlighting Designations

Beam spread,°	NEMA type
10–18	1
18–29	2
29–46	3
46–70	4
70–100	5
100–130	6
130 and up	7

243. Typical Floodlighting Applications


Application	Location of equipment	Class of equipment
	At edge of area and mounted as high as possible. Spacing not to exceed 4 times mounting height.	General-purpose enclosed or heavy-duty Type 4, 5, or 6
	Immediately inside and below concealing parapet—maximum distance from face of building to be lighted.	Heavy-duty or general-purpose Type 3, 4, or 5
	In banks at suitable location. One bank normally should cover an area whose height and length are not greater than the distance from the units to the face of the building.	Heavy-duty or general purpose Type 1, 2, 3, or 4
	At edge of area where they will not hinder traffic. Minimum mounting height 20 ft.	Heavy-duty Type 5 or 6
	On ground 5 to 25 ft from vertical surface, concealed by hedge, low structure, or natural elevation.	Heavy-duty or general purpose Type 3, 4, 5, or 6

The location of floodlighting equipment is usually dictated by the type of application and the physical surroundings. If the area is large, individual towers or poles spaced at regular intervals may be required to light it evenly; smaller areas may require only one tower with all equipment concentrated on it, or adjacent buildings may be utilized as floodlight locations. The accompanying chart will aid in the selection of the right equipment and its proper location for a number of typical floodlighting applications.

In planning any floodlighting system it is important that the light be properly controlled. Strong light directed parallel to a highway or a railroad track can be a dangerous source of glare to oncoming traffic, and light thrown indiscriminately on adjacent property may be a serious nuisance.

244. Step 3: Determine the coefficient of beam utilization. To determine the number of floodlights that will be required to produce a specified level of illumination in a given situation, it is necessary to know the number of lumens in the beam of the floodlights and the percentage of the beam lumens striking the area to be lighted. The beam lumens can be obtained from the manufacturer's catalog. The ratio of the lumens striking the floodlighted surface to the beam lumens is called the *coefficient of beam utilization*. (CBU). If an area is uniformly lighted, the average CBU of the floodlights in the installation is always less than 1.0.

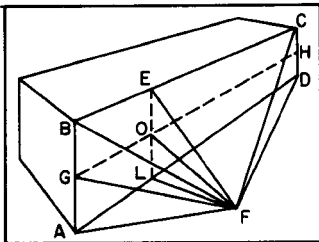
The coefficient of beam utilization for any individual floodlight will depend on its location, the point at which it is aimed, and the distribution of light within its beam. In general, it may be said that the average CBU of all the floodlights in an installation should fall within the range of 0.60 to 0.90. Utilization of less than 60 percent of the beam lumens is a definite indication that a more economical lighting plan should be possible by using different locations or narrower-beam floodlights. On the other hand, if the CBU is over 0.90, the beam spread selected probably is too narrow and the resultant illumination will be spotty. Accurate determination of the CBU is possible only after the aiming points have



If: EO = OL = 25
AL = FL = 40
LD = 80

Then: angle LFO = 32°
EFO = 19°
BFE = 32°
GFO = 41°
AFL = 45°
CFE = 51°
HFO = 60°
DFL = 64°

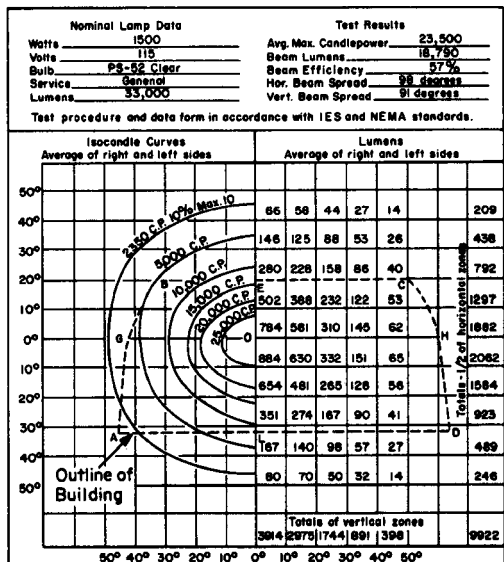The CBU of the floodlight at F is about .81



been selected. However, an estimated CBU can be determined by experience or by making calculations for several potential aiming points and using the average figure thus obtained.

To make such calculations the floodlighted area is superimposed on the photometric grid and the ratio of the lumens inside this area to the total beam lumens is determined. All horizontal lines on a building (or straight lines on a ground area which are parallel to a line perpendicular to the beam axis) appear as straight horizontal lines on the grid if the floodlight is so aimed that its beam axis is perpendicular to a horizontal line on the face of the building. All vertical lines except the one through the beam axis appear slightly curved.

245. Step 4: Estimate the maintenance factor. Lighting efficiency is seriously impaired by blackened lamps and by dirt on the reflecting and transmitting surfaces of the equipment. To compensate for the gradual depreciation of illumination on the floodlighted area, a maintenance factor must be applied in the calculations to make allowance for the following:

1. Loss of light output due to dirt on the lamp, reflector, and cover glass.
2. Loss in light output of the lamp with life. Because some of the light must pass through the bulb more than once before finally leaving the floodlight, bulb blackening also lowers floodlight efficiency, the reduction in beam lumens being about double the reduction in bare-lamp output.

A maintenance factor of 0.75 has been widely used for floodlights.

However, if the atmosphere is not clean, if the floodlights are cleaned infrequently, or if lamps are replaced only on burnout, a realistic appraisal of in-service conditions will require the use of considerably lower maintenance factors. Differences in lumen maintenance among lamp types and sizes should also be considered. With incandescent lamps the higher the wattage for a given bulb size or the smaller the bulb for a given wattage, the denser the bulb blackening and the greater the depreciation in light output.

Approximate Average Lamp Lumens throughout Life

Lamp type	% of Initial lumens
Standard incandescent	83
Tungsten-halogen incandescent	98
Mercury	60
Metal halide	80
High-pressure sodium	90

With narrow-beam floodlights, dirt on the reflector and cover glass tends to widen the beam spread, reducing the maximum candlepower more than the total light output. Thus for a small lighted area utilizing only the central part of a beam (e.g., a 4-ft, or 1.2-m) archery target at 100 yd, or 91.4 m), a smaller percentage of the beam lumens will strike the target after the floodlight has become dirty. Therefore the depreciation in footcandle intensity will be greater than the depreciation in total light output, and it will be necessary to consider this in selecting a maintenance factor.

246. Step 5: Determine the number of floodlights required.

$$\text{Number of floodlights} = \frac{\text{area} \times \text{footcandles}}{\text{beam lumens} \times \text{CBU} \times \text{MF}} \quad (18)$$

where area is the surface area to be lighted in square feet and footcandles are as selected from Table 238. For beam lumens, refer to the manufacturer's catalog for the equipment under consideration. If the lamps are to be burned at other than rated voltage, the beam lumens, and hence the number of floodlights required, is altered. The increase in lumen output for 5 and 10 percent overvoltage operation is indicated in Sec. 249. For the CBU (coefficient of beam utilization), refer to step 3; and for the MF (maintenance factor), to step 4.

247. Step 6: Check for coverage and uniformity. After a tentative layout has been made (steps 1 to 5), uniformity can be checked by calculating the intensity of illumination at a few points on the floodlighted surface. This may be done by the point-by-point method described in Sec. 204, using either a candlepower-distribution curve or an isocandle diagram. If uniformity is found to be unsatisfactory, a larger number of units may have to be used.

248. Application notes

Type of Light Source. Most floodlighting installations today utilize high-intensity-discharge lamps owing to their higher efficacy and long lamp life. Where incandescent lamps are used, they are generally the tungsten-halogen types.

Buildings and Monuments. The floodlighting of a building or a monument is primarily a problem in aesthetics, and each installation must be studied individually. Under some circumstances, particularly with small utilitarian buildings or larger buildings which lack special architectural features, uniform illumination is desirable. To create an appearance of uniform brightness over the entire facade of a building, it is usually necessary to increase the actual brightness appreciably toward the top. Higher brightness at the top of a building also increases its apparent height.

With buildings of classical design or special architectural character uniform illumination often defeats the purpose of the lighting, which should aim to preserve and emphasize the architectural form. Buildings are designed primarily for daytime appearance, when the light comes from above. This effect is almost impossible to duplicate with floodlights, which must be mounted in nearby locations and usually at a height no greater than the elevation of the building. However, it is often possible to achieve a result that is interesting and pleasing, although quite different from the daytime appearance. Shadows are essential to relief, and contrasts in brightness levels or sometimes in color can be used advantageously to bring out important details and to suppress others. Sculpture or architectural details require particularly careful treatment to avoid flatness or grotesque shadows that may entirely distort the appearance as it has been conceived by the artist or architect.

Excavation and Construction. Approximately one 1500-W tungsten-halogen, one 400-W metal halide or HPS, or two 250-W metal halide or HPS units will be required for each 5000 ft² (465 m²) of excavation area or for each 1000 to 2000 ft² (93 to 186 m²) of construction area. It is usually most satisfactory to mount floodlights in groups of two or more on wood poles or towers 40 to 70 ft (12.2 to 21.3 m) above ground. A minimum of two poles should be used, with enough poles on larger jobs to provide coverage at

any working point from two or three floodlight banks. Fixed-pole spacing may be from $1\frac{1}{2}$ to 3 times mounting height and as much as 5 times mounting height on large projects. Occasionally it is practical to provide one or two portable poles mounted on timber-sled bases. If a mechanical shovel or crane is used, it is advisable to mount an automatic leveling floodlight on the boom.

Directional Application Such as Railway Yards and Freight Terminals. There are two general types of railway-yard lighting, the unidirectional system and the parallel opposing system. The first is applicable only to tracks on which the traffic is all in one direction, the light being directed with the traffic flow. Glare is entirely eliminated, but seeing is entirely by direct light without the advantages of silhouette effect. The parallel opposing system is used when the traffic flows in both directions. Here seeing is accomplished by direct light from the tower behind the observer and by the silhouette of cars and glint from the rails produced by light from the tower ahead of the observer.

Tower locations are determined by track layouts and operating methods, but in general spacings should not exceed 1000 to 2000 ft (305 to 610 m) for the parallel opposing system or 800 to 1000 ft (245 to 305 m) for the unidirectional system. The first tower in the classification yard should be near the ladder tracks but on the approach side of the hump, so that spill light or a separate floodlight, if necessary, illuminates the hump area. Narrow yards can be lighted by single towers located in the center. Wide yards should have pairs of towers opposite each other, each about one-fourth of the yard width from the edge. Except for spacings well below the values noted above, 90 ft (36 m) should be considered a minimum mounting height.

The lighting of outdoor freight terminals without covered platforms is similar to that of railroad yards except that the intensities must be much higher. Poles must be placed at the ends of the platforms to prevent interference with vehicular traffic and in line with the platforms to avoid shadows thrown by cars standing on the tracks. Mounting heights of from 60 to 80 ft (18 to 24 m), depending on the average length of throw, are required. Heavy-duty floodlights are recommended for all railroad service.

Color. Color is provided in floodlight installations usually by colored cover glass, which is generally available for enclosed floodlights to replace regular lenses. When smaller amounts of colored light are needed, colored R or PAR incandescent lamps may be used. Any color of filter absorbs a large amount of light, and this loss must be considered in designing the installation. The following approximate transmission values are found in typical commercial color filters: amber, 40 to 60 percent; red, 10 to 20 percent; green, 5 to 20 percent; and blue, 3 to 10 percent. Although less colored light than white light is usually required for equal advertising or decorative effectiveness, it is desirable to determine by experiment the exact amount of colored light necessary for any particular application.

The color of light from high-intensity-discharge light sources is particularly desirable in specific decorative floodlighting applications. Metal halide and phosphor-coated mercury lamps are used where a cooler color of light is preferred, while high-pressure sodium lamps are applied in installations better suited to a warmer tone. Clear mercury lamps are very effective in floodlighting trees and landscaping owing to the greenish-blue character of the light from these lamps.

249. Sports Lighting. The level of illumination required depends upon several factors, among which are the speed of the game, the skill of the players, and the number of spectators and their distance from the field of play. If television coverage is involved, this also affects the lighting level. Economic considerations also are important. High intensities of illumination are desirable in almost all sports, but since lower levels are acceptable, a variety of layouts are suggested.

HID lighting systems with metal halide and high-pressure sodium lamps are extensively used in sports lighting owing to their high efficacy and longer lamp life. The warm-up and restrike characteristics of these light sources should be recognized in designing the lighting system. A standby incandescent system may be desired in spectator areas.

Incandescent lighting systems are still used in sports-lighting applications owing to the lower system cost when the annual hours of usage are limited. In sports installations in which the lighting is operated during fewer than about 500 h per year, it may be economical to use short-life incandescent lamps or to burn standard lamps at higher than rated voltages. This reduces the power cost and the required number of floodlights. For fewer than 200 h per season, general-service incandescent lamps at 10 percent overvoltage are generally used. If the system is used between 200 and 500 h per year, operation of general-service lamps at 5 percent overvoltage is preferable. The following table shows the effect of overvoltage operation on the life, wattage, and light output of 1000- and 1500-W incandescent lamps.

Approximate Performance of 1000- and 1500-W Incandescent Lamps


Voltage	Light, %	Watts, %	Lamp life, %
Rated	100	100	100
5% over rated	117	108	50
10% over rated	135	116	30

The layouts that follow are guidelines to obtain the recommended levels of illumination if high-quality floodlights are mounted and operated as indicated. Some latitude in beam-spread requirements is acceptable when several floodlights are mounted on a single pole, provided the resulting average beam spread is approximately the same as that specified.

NOTE For current recommended practice on sports lighting, consult Illuminating Engineering Society, *IES Sports Lighting*, RP-6.

250. Archery

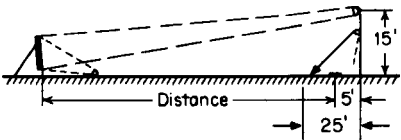
The floodlight provides visibility of the arrow throughout flight.



Floodlights	Per target One Type 2, Group A
Lamps	One Type 6 × 5, Group B For enclosed floodlight Distance up to 30 yd: 175-W metal halide 30 to 50 yd: 250-W metal halide 50 to 100 yd: 400-W metal halide
Mounting height	Enclosed floodlight 15 ft above ground Flood on same pole 12 ft above ground
Poles	One per target


251. Badminton

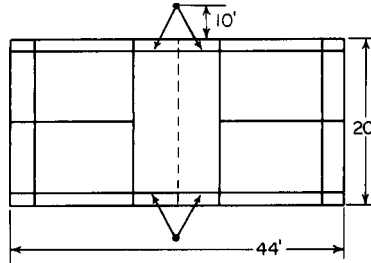Indoor courts may be lighted with industrial diffusing units along the sidelines.



Class	Floodlights				Total load, kW
	Type	Group	No. per pole	Total no.	
Recreational	6 × 5	D	2	4	500
	Lamps			500-W tungsten-halogen	
	Mounting height			20 to 25 ft above court	
	Poles			Two per court	

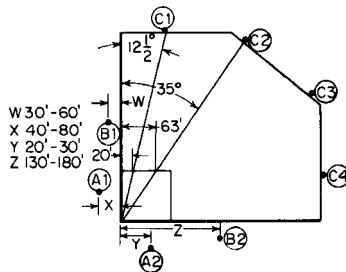252. Baseball




Class	Floodlights						Total load, kW	Minimum mounting height, ft
	Type	Group	Poles			Total no.		
			A's	B's	C's ^e			
Major league	2	A	... ^a	... ^a	... ^a	... ^a	... ^a	120
AAA and AA	2, 3	A	12	24	18	144	235	110
A and B	2, 3	A	10	16	8	84	137	90
C and D	3, 5	A	6	8	6	52	85	70
Semipro and municipal	5	A	4	6	4	36	59	60

^aLuminaire quantities based on field and stadium dimensions.

Lamps 1500-W metal halide

253. Basketball: Indoor

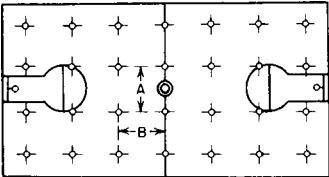
If ceiling is lower than 20 ft, more units on closer spacing should be used and recessed in the ceiling if possible. Luminaires should be rigidly mounted, and lamps should be protected from the ball.



Class	Fixture	Lamp watts	Spacing, ft	
			A	B
Metal halide				
College or pro	High-bay industrial	250	14.2	16.8
High school	High-bay industrial	175	15.9	21.0
Recreational	High-bay industrial	175	26.0	28.0
High-pressure sodium				
College or pro	High-bay industrial	250	17.0	16.0
High school	High-bay industrial	150	17.0	16.0
Recreational	High-bay industrial	70	17.5	19.2
Mounting height		On ceiling		

254. Basketball: Outdoor

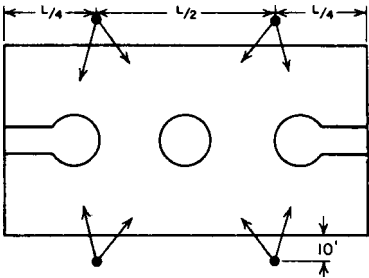Wide-beam floodlights are required to illuminate the ball when it is a considerable distance above the court.




Floodlights					Total load, kW	Lamp type
Class	Type	Group	No. per pole	Total no.		
Recreational	6 × 5	B	2	8	3.6	400-W metal halide
	6 × 5	B	2	8	2.5	250-W HPS
Mounting height				30 ft above court		
Poles				Four per court		

255. Billiards

In large commercial parlors where a number of tables are installed, general illumination of high intensity proves more satisfactory than individual luminaires over each table.





Equipment	Tournament: two two-lamp fluorescent fixtures with louvers
Lamps	Recreational: one two-lamp fluorescent fixture with louvers 40-WT-12 fluorescent
Load	200 or 100 W
Mounting height	7 ft above floor

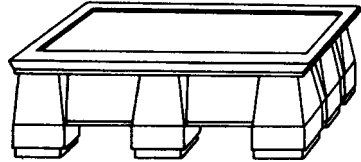

256. Bowling


Luminaires should be shielded by false ceiling beams or baffles unless they are of the asymmetric type. They should be positioned so as to provide even illumination along the alley with higher intensity on the pins. Behind the foul line any type of general area-lighting equipment may be employed.



Equipment	Four two-lamp 40-W direct fluorescent fixtures per pair of alleys One 20-W fluorescent unit per alley over the pins
Lamp	40-W T-12 fluorescent 20-W T-12 fluorescent
Mounting height	9 ft minimum


257. Boxing

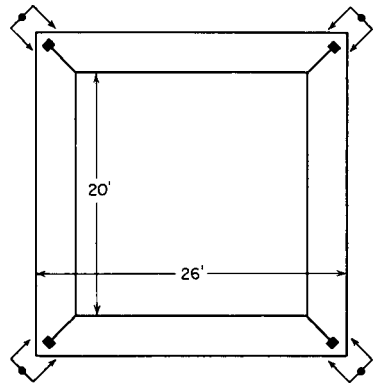The class of bout will determine the level of illumination.



Floodlights						
Class	Type	Group	No. per pole	Total no.	Lamp watts	Total load, kW
Championship	5	A	2	8	1000	8.7
Professional	5	A	1	4	1000	4.3
Amateur	6	A	2	8	400	3.6
			Lamps	Metal halide		
			Mounting height	20 to 25 ft above ring		

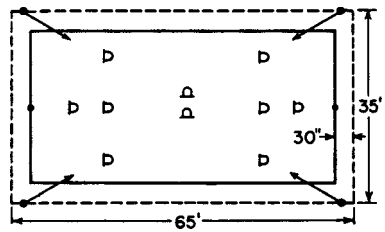
258. Croquet



Floodlights					Lamp watts	Total load, kW	Lamp type
Class	Type	Group	No. per pole	Total no.			
Tournament	6 × 5	D	1	4	250	1.2	Metal halide
	6 × 5	D	1	4	250	1.2	HPS
Recreational	6 × 5	D	1	4	175	0.8	Metal halide
	6 × 5	D	1	4	100	0.5	HPS
			Lamps	Metal halide or high-pressure sodium			
			Mounting height	20 to 25 ft above court			
			Poles	Four per court			

259. Football

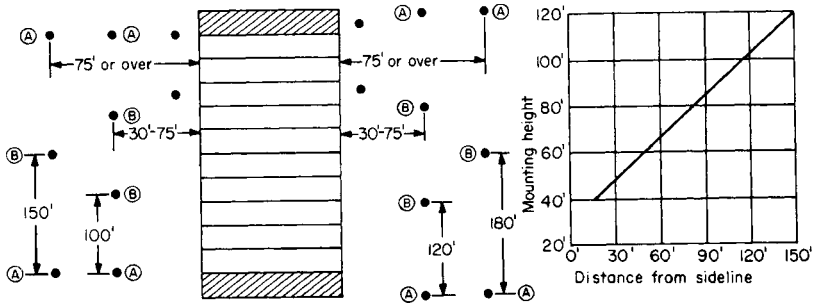The distance between the farthest row of spectators and the nearest sideline (see table) determines the lighting requirements, but the seating capacity should also be considered. Either of the pole plans shown or any intermediate longitudinal spacing is considered good practice. Local conditions determine the exact pole locations.




Class	Recommended footcandles	Distance— poles to sideline, ft	No. of poles	Floodlights				Total load, kW
				Type	Group	No. per pole	Total no.	
I	100	Over 140	6	2	A	24	144	234
		100–140	6	2	A	22	132	222
II	50	75–100	6	2	A	12	72	117
		50–75	6	3	A	10	60	98
III	30	30–50	6	3, 4, 5	A	6A, 8B	40	65
IV	20	15–30	8	4	A	3	24	39

Class	Distance farthest spectators to field, ft	Seating capacity	Lamps	1500-W metal halide
I	Over 100	Over 30,000		
II	50–100	10,000–30,000		
III	30–50	5,000–10,000		
IV	Under 30	5,000		

260. Golf Driving Range

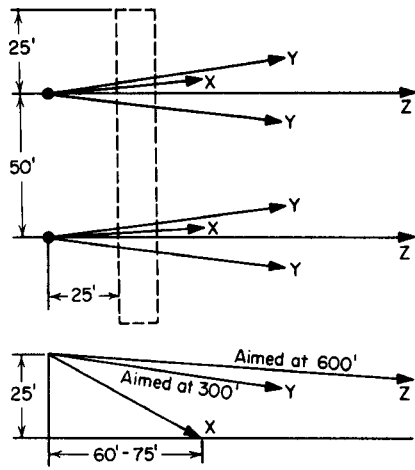
The floodlights should be directed so as to provide illumination on the ball throughout its flight.



Floodlights					
Aiming point	Type	Group	No. per pole	Lamp	Load per pole, kW
X	5	B	1	1000-W metal halide	1.1
Y	2	A	2	1000-W metal halide	2.2
Z	2	A	1	1000-W metal halide	1.1
Mounting height			25 to 30 ft above tees		
Poles			One for every 50 ft of range width; minimum: two poles		

261. Handball: Outdoor

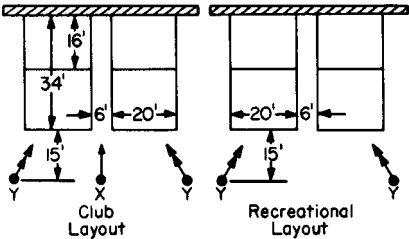
Glare is largely eliminated by locating the floodlights behind the players.



Floodlights							
Class	Type	Group	No. per pole		Total no.	Lamp watts	Total load, kW
			X	Y			
Club	6 × 5	D	1	1	3	1500	4.5
Recreational	6 × 5	D	...	1	2	1500	3.0
Lamps			1500-W tungsten-halogen				
Mounting height			At least 25 ft above court				
Poles			For club play, three per pair of courts				
			For recreational play, two per pair of courts				

262. Horseshoe Pitching

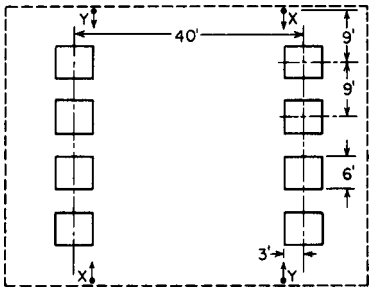
Floodlights should be directed across courts to prevent direct glare.



Floodlights									
Class	No. of courts	Type	Group	No. per pole		Total no.	Lamp watts	Total load, kW	Lamp type
				X	Y				
Tournament	4-6	6 × 5	B	1	1	4	400	1.84	Metal halide
	1-3	6 × 5	B	...	1	2	400	0.92	Metal halide
Recreational	4-6	6 × 5	B	1	1	4	250	1.24	HPS
	1-3	6 × 5	B	...	1	2	250	0.62	HPS
Lamps				Metal halide or high-pressure sodium					
Mounting height				At least 20 ft above court					
Poles				Four for 4-6 court layout, two for 1-3 court layout					

263. Ice Skating: Outdoor

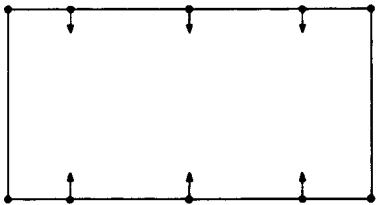The design suggested produces satisfactory illumination for recreational skating.




Floodlights				
Area	Type	Group	W/ft ²	Lamp type
Rink	6 × 5	B	0.10	HPS
	6 × 5	B	0.16	Metal halide
Pond	6 × 5	B	0.02	HPS
	6 × 5	B	0.03	Metal halide

The size of the area determines the number and wattage of the floodlights.
Lamps High-pressure sodium or metal halide
Mounting height At least 20 ft above ice
Pole spacing Not to exceed 4 times mounting height

264. Racetracks

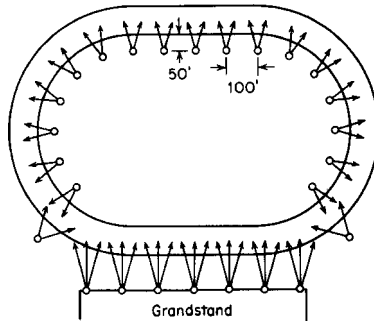The lighting equipment should be so positioned and directed as to keep glare and shadows at a minimum.




Floodlights

Types A and B

Lamps	Metal halide
Load	Varies with track size
Mounting data	50 to 80 ft high and 50 ft inside inner edge of track

265. Shuffleboard

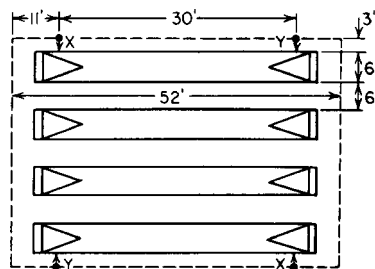Floodlights should be directed across the court to prevent glare.




Floodlights

Class	No. of courts	Type	Group	No. per pole		Total no.	Lamp watts	Total load, kW	Lamp type
				X	Y				
Tournament	4-6	6 × 5	D	1	1	4	400	1.84	Metal halide
	1-3	6 × 5	D	...	1	2	400	0.92	Metal halide
Recreational	4-6	6 × 5	D	1	1	4	250	1.24	HPS
	1-3	6 × 5	D	...	1	2	250	0.62	HPS

Lamps	Metal halide or high-pressure sodium
Mounting height	At least 20 ft above court
Poles	Four for 4-6 court layout, two for 1-3 court layout

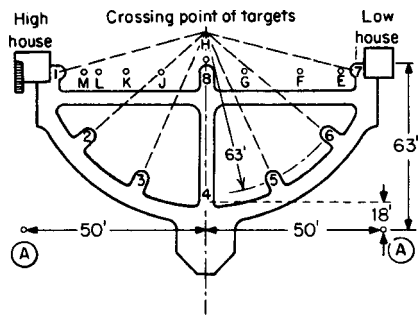
266. Skeet Shooting



Floodlights							
Location	Group	Type	No per pole	Total no.	Mounting height, ft	Lamp watts	Total load, kW
A	B	6 × 5	2	4	25	1000	4.3
Lamps			1000-W metal halide				

267. Soccer

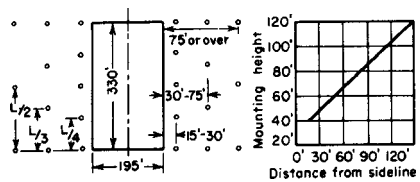For larger or smaller fields, the number of floodlights and the pole spacings should be altered in proportion to the area of the field.




Floodlights							
Class	Distance poles to sideline, ft	No. of poles	Type	Group	No. per pole	Total no.	Total load, kW
Professional and college	Over 140	6	2	A	24	144	232
	100–140	6	2	A	23	138	222
	75–100	6	2	A	20	120	193
High school	30–50	6	3	A	7	42	68.7
	15–30	6	5	A	3	18	29.4
Recreational	15–30	8	6 × 5	B	2	16	17.3 ^a

^a1000-W metal halide.

Lamps 1500-W metal halide

268. Softball: Professional and Industrial League

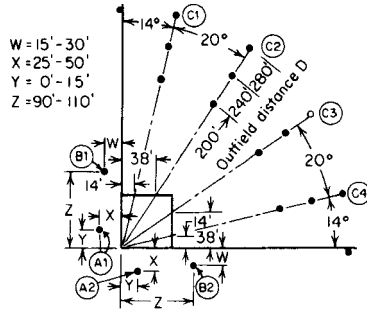
The distance to the poles in the outfield is determined by the size of the field.



Class	Outfield distance <i>D</i> , ft	Group A floodlights					Minimum mounting height, ft	
		No. per pole						
		Poles					Poles	
		A's	B's	C's	Total no.	Total load, kW		
Pro and championship	280	4	8	4	40	65.2	50	60
	240	4	6	3	32	52.2	50	55
Semipro	280	3	4	3	26	42.4	40	55
Industrial League	280	2	4	2	20	32.6	35	50
	240	2	3	2	18	29.3	35	45
Lamps		1500-W metal halide						

Lamps 1500-W metal halide

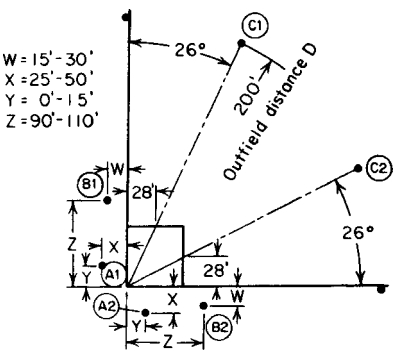269. Softball: Recreational




		Layout for Type 4 or 5 Group A floodlights				Layout for Type 6 × 5 Group B floodlights				Minimum mounting height, ft	
		No. per pole				No. per pole				Poles	
Class	Outfield distance D, ft	Poles			Total no.	Poles			Total no.	A's & B's	C's
		A's	B's	C's		A's	B's	C's			
Recreational	200	2	3	3	16	3	3	3	18	35	40
		Lamps				1000-W metal halide					

270. Swimming Pool: Underwater Floodlights

Especially designed equipment is mounted in niches in the walls of the pool.

Location of pool	W/ft ²	
	Good practice	Minimum
Outdoors	0.5	0.3
Indoors	2.0	1.6

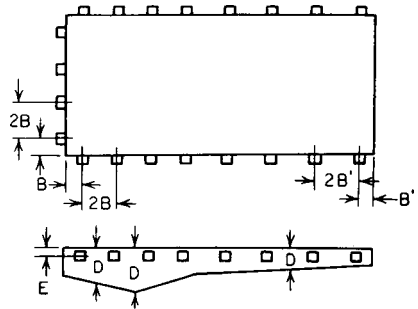

Lamp watts	<i>B</i> maximum ft, where <i>D</i> is over 5 ft	<i>B'</i> maximum ft, where <i>D</i> is less than 5 ft	<i>E</i> in below waterline
250–400	4	5	18–24

Lamps

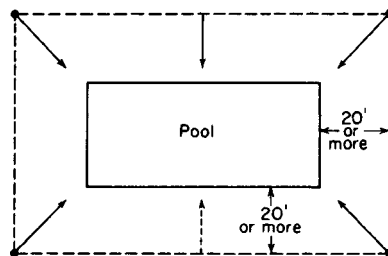
Metal halide

Consult fixture manufacturer if 12.

V units are to be used.

271. Swimming Pool: Overhead Floodlights


The number of floodlights and the lamp size are determined by the size of the area and the type of equipment.



Floodlights	Type 6 × 5, Group B
Lamps	Metal halide or high-pressure sodium
Load	0.32 W/ft ² for metal halide, 0.20 W/ft ² for HPS (Both pool and surrounding area to be lighted)
Mounting height	At least 20 ft above water
Pole spacing	Not to exceed 4 times mounting height

272. Tennis: Single Court

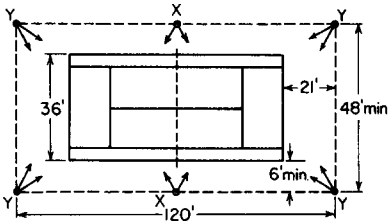Floodlights must be directed sufficiently high to provide even illumination on the ball during flight.




Floodlights								
Class	No. of poles	Type	Group	No. per pole		Total no.	Lamp watts	Total load, kW
				X	Y			
Tournament	6	5	A	2	2	12	1000	13.1
Club	6	5	A	2	1	8	1000	8.7
Recreational	4	5	A	...	1	4	1000	4.4

Lamps 1000-W metal halide
Mounting height 30 ft above court

273. Tennis: Two Courts

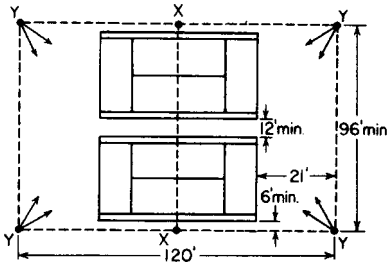Floodlights must be directed sufficiently high to provide even illumination on the ball during flight.




Floodlights							
Class	No. of poles	Type	Group	No. per Pole		Total no.	Total load, kW
				X	Y		
Club	6	5	A	2	2	12	13
Recreational	6	6 × 5	B	1	1	6	6.5

Lamps 1000-W metal halide
Mounting height 35 to 40 ft above the court

274. Table Tennis

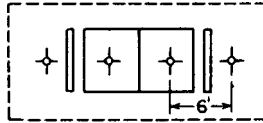When louvered fluorescent luminaires are used, they may be mounted either lengthwise or crosswise of the table.



Recreational

Class	Fixtures		Lamp watts	Total load, kW
	No.	Type		
Recreational	2	Fluorescent	40	0.16
	2 or 4 ^a	Deep-bowl ^b	150	0.3 or 0.6


^aFor skilled play four luminaires mounted 4½ to 6 ft above the table should be used.

^bLouvered fluorescent luminaires for two 40-W lamps may also be used.

Lamps	40-W T-12 fluorescent
	150-W incandescent

275. Trapshooting

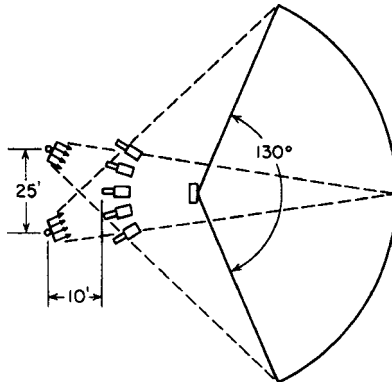
Uniform illumination will prevent apparent variation in bird speed.



Floodlights	Four 6 × 5, Group B
Lamps	1000-W metal halide
Load	4.3 kW
Mounting height	20 ft above ground
Poles	Two

276. Volleyball: Outdoor

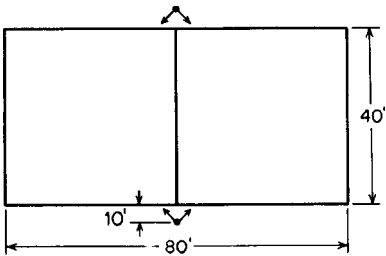Wide-beam floodlights are necessary to provide uniform illumination.



Floodlights						
Class	Type	Group	No. per pole	Total no.	Total load, kW	Lamp type
Tournament	6 × 5	B	3	6	2.7	400-W metal halide
	6 × 5	B	3	6	2.8	400-W HPS
Recreational	6 × 5	B	2	4	1.8	400-W metal halide
	6 × 5	B	2	4	1.2	250-WHPS
Mounting height			20 to 25 ft above court			
Poles			Two per court			

DIVISION 11

OPTICAL FIBER

The Advantages of Fiber Optics	11.1
Applications	11.2
The Nature of Light	11.3
Invisible Light	11.3
Transmitting Light Through Fibers	11.4

1. General. Optical fibers are hair-thin strands of ultra-pure glass (or slightly larger strands of plastic), and are used for the transmission of signals. Unlike most signaling methods, optical fiber transmits light, rather than electricity.

Pulses or waves of light can be used in the same ways as pulses or waves of electricity and magnetism to transfer data from one place to another. Because of the transmission characteristics of light through optical fiber, it is in many ways superior to using electricity through conductors, offering less loss, less signal distortion, and allowing higher bandwidth transmission over longer distances than other media.

The current importance of optical fiber data transmission is difficult to overestimate. Not only has optical fiber become essential to long-distance telephone transmissions, but it is becoming increasingly important for all other forms of data transmission, such as CATV distribution, connecting cell phone towers, municipal traffic networks, security systems in buildings, airports, and the backbones of local area networks (LANs).

Use of optical fiber for the transmission of cable television signals is gaining quickly, and is in fact the standard distribution means for almost everything except the coaxial cable drops into businesses and residences, and, of course, interior wiring.

Computer networks are quickly exceeding the capacity of copper conductors, and are beginning to change over from copper to fiber. The newest computer networks are specifying optical fiber transmission, simply because the standards groups are uncertain that there will be a workable copper transmission method. [Desktop (horizontal) connections may transition from copper to wireless for mobility.]

THE ADVANTAGES OF FIBER OPTICS

A well-designed system of fiber optics as a communications medium offers four primary advantages over traditional electrical systems:

2. Performance. Optical fiber cables have a much greater bandwidth capacity than wire. This allows for high-volume, high-speed data transfer. Data transmission of optical fiber can easily reach speeds of hundreds of gigabits per second, far higher than copper communications cables.

NOTE: The terms “bits per second” and “hertz” can be confusing. One bit per second and one Hertz are rough equivalents, and are sometimes used interchangeably.

The term *Hertz* comes from the electrical and electronics industry. *Bit* comes from the digital computer industry. Because of this, electrical and electronic manufacturers, such as cable makers, will more often use *Hertz*, while computer industry people will use *bits per second*. When applied to the transmission characteristics of copper cables, *Hertz* is a fine term; but when discussion signals are transmitted from place to place, *bits per second* is better.

Because of the intricacies of computer technology, there is a slight technical difference between bits per second and Hertz; but again, the terms are so close to equivalent that there is little reason to “nit-pick” over interchangeable use.

3. Electrical immunity. Optical fiber cable is nonmetallic. Because of this, it can neither emit nor pick up electromagnetic interference (EMI) or radio frequency interference (RFI); both being problematic with metal wires. Cross talk between cables does not exist. Additionally, fiber optics (the term *fiber optics* has long been applied to the use of optical fiber in general) have no grounding or shorting problems. This is also an important feature when installing communications wiring in hazardous environments. Optical fiber cabling causes no sparking or excessive heat, even when broken.

4. Small size and low weight. Optical fiber cable weighs approximately one ninth the weight of coaxial cable and is also physically smaller. In order to carry 24 telephone conversations, telephone companies must use two pairs of copper wire. By using optical fiber cable rather than copper, one pair of cables can carry hundreds of thousands of conversations.

5. Security. Electronic *bugging* generally depends on electromagnetic monitoring. Because optical fibers carry light rather than electricity, they are immune to bugging. In order for bugs to be used on optical fiber cables, the cables must be physically tapped; this is easily detectable as the signal is diminished and error rates increase.

APPLICATIONS

Because of the advantages mentioned above, optical fiber is slowly becoming the standard method of data transfer. It is commonly found in the following applications:

- All long distance telephone lines
- All trans-oceanic telephone lines
- All Internet backbones, long-haul and trans-oceanic
- Local telephone lines
- Connections to cell phone towers
- Local Internet lines
- Cable television distribution
- Computer network backbones
- Computer network horizontal runs
- Closed-circuit television
- Electronic newsgathering

- Military communications
- Industrial signals and controls
- Miscellaneous signaling and control applications

THE NATURE OF LIGHT

To understand the use of optical fibers, it is first necessary to understand the nature of light itself. Light is to optical fiber what electricity is to conductors.

Light is essentially a series of electromagnetic waves, with a few properties of particles added. When being described as a particle, light is often referred to as a stream of photons, moving from one place to another. A photon is considered to be very similar to an electron, and can be abstractly described as a primary particle of light, just as an electron may be described as a basic particle of electricity. As applied to optical fiber transmission, the particle characteristics of light are generally of lesser importance than the wave characteristics. Nonetheless, you should be aware of this dual nature (wave and particle) of light. A precise explanation of these characteristics would enter the realms of quantum physics, and is beyond the scope of this text.

The first characteristic of light that presents itself to us is color. Some light is red, some blue, some other colors. After years of research, it was discovered that each color of light has its own *wavelength*; or in other words, its own frequency (measured in cycles per second, or Hertz). For instance, waves of red light have a lower frequency than blue light, and green is in-between. Our eyes perceive different frequencies of light waves much like radios tune into different frequencies of radio waves. But rather than specifying light by its frequency, we signify the color by the wavelength of the light. So, a certain *wavelength* of light means a certain *color* of light. We measure wavelengths in nanometers (billionths of a meter). For example, a deep red light would have a wavelength of about 600 nm.

Wavelength and frequency really signify the same thing, and can be interchanged by using a mathematic formula. As wavelength decreases, the frequency increases. We specify wavelength for this work rather than frequency, since it is generally easier to use, and it is used in virtually all of scientific literature.

INVISIBLE LIGHT

Our eyes are perfectly tuned for the light of our sun. The sun puts out certain wavelengths of light, which our eyes pick up very well. There are, however, other wavelengths of light, and some of those are beyond our visual range. In other words, our eyes have limits, and beyond those limits we are blind. This is like a radio that can pick up the AM and FM bands, but not the shortwave bands. The shortwave signals are out there waiting, but your receiver cannot tune in to them.

You have no doubt heard of infrared light; it is the type of light that television remote control units use. These light waves are useful, but we cannot see them. It is this type of light that we use for optical signals.

It would be handy if we could use visible light in optical fibers, but it simply doesn't work well. The characteristics of the glass used in optical fibers are such that they transmit certain wavelengths (colors) of light better than others. In particular, the wavelengths of 850 nm, 1300 nm, and 1550 nm are transmitted with a minimum of loss. These wavelengths are just outside of our visual spectrum, in the infrared range.

TRANSMITTING LIGHT THROUGH FIBERS

Some of the more common terms used to describe optical fiber are a “light tube” or a “conduit for light.” These terms have led a lot of people to think that there is some type of hole in the middle of an optical fiber. This is not the case.

None the less, optical fiber does function as a “tube” or “conduit” for light. Light does flow down the center of a fiber (the core) like water flows through a pipe. As you can see in Fig. 11.1, there are three concentric layers to an optical fiber.

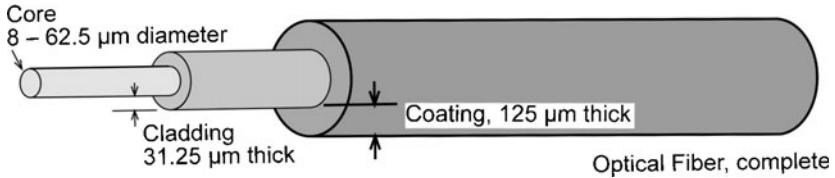


FIGURE 11.1 Layers of an optical fiber.

1. Light pulses only through the glass *core* of the fiber.
2. The *cladding* (which is a different type of glass) serves as a barrier to keep the light within the core, functioning much like a mirrored surface.
3. The *coating* has nothing to do with light transmission, and is used only for mechanical strength and protection.

Light is kept to the core of the fiber, and flows through the core as water would flow through a tube. We could even say that the fiber is a “virtual” tube. The light stays in the center of the fiber, not because there is a physical opening there, but because the cladding glass reflects any escaping light back to the core.

These “light tubes” are very thin strands of ultra-pure glass. The dimensions of typical fibers are as follow:

Core	8–62.5 μm (a micron is one millionth of a meter)
Cladding	125 μm (outer diameter, so the cladding thickness over a 62.5 μm core would be $(125 - 62.5) \div 2 = 31.25 \mu\text{m}$)
Coating	250 μm (also the outer diameter)

The dimensions shown above are diameters. The core is one density of glass, the cladding is a second grade of glass, and the coating is an acrylate plastic.

6. Cabling. In order to suitably protect our glass fibers, we package them in cabling. It is a misconception that fiber cables are fragile.

Actual fiber itself (not the *cable*, but only the thin *fiber*) is a concern; but this concern is more from twisting than from bending and pulling. Optical fiber is surprisingly flexible, and will not break easily like sheet glass. It actually has several times the sheering strength of steel; but, being so thin, it can be broken. Torsion is a concern. When optical fibers are both twisted and pulled, they tend to develop microcracks, which inhibit light transmission and distort the light signal.

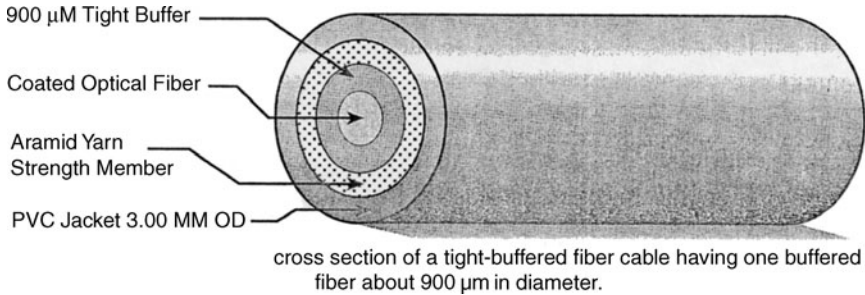


FIGURE 11.2 Fiber cable with several layers of protection for the glass fiber.

Fiber *cables*, however, are not at all fragile. In fact they are often more durable than copper communication cables. Optical cables encase the glass fibers in several layers of protection, as is shown in Fig. 11.2.

The first protective layer is the coating that we mentioned earlier. The next layer of protection is a *buffer* layer. The buffer is typically extruded over the coating to further increase the strength of the single fibers. This buffer can be of either a *loose tube* or *tight tube* design. Most datacom cables are made using either one of these two constructions. A third type, the ribbon cable, is frequently used in the telecommunications work, and may be used for datacom applications in the future; it uses a modified type of tight buffering.

A tight tube, or tight buffer, is a layer of plastic extruded directly on to the bare fiber. This is nearly identical to the way plastic insulation is extruded over copper conductors to make insulated building wire; but this is obviously much thinner.

A loose tube is simply a paper or plastic tube—like a thin drinking straw—into which are inserted several optical fibers. Each of these fibers will have a very thin layer of plastic extruded over them, primarily for color-coding and to add a little bit of strength. If you think of threads inside of a drinking straw, you will have a reasonable understanding of how the loose tube protection scheme works. The tubes isolate the fibers from the outside world. They are free to move around inside of the tubes, which bear the external stresses.

After the buffer layer, the cable contains a *strength member*. Most commonly, the strength member is Kevlar fabric, the material that bulletproof vests are made from. The strength member not only protects the fiber, but also is used to carry the tensions of pulling the cable. (You can never ever pull the fibers themselves.)

After the strength member finally comes the outer jacket of the cable, which is typically some type of polyethylene or PVC. The exact type of nonmetallic jacketing will determine which suffix will apply to the cable designation, as covered in Sec. 40. In many cases, however, there will be additional *stiffening members* which also increase the cable's strength and durability.

7. Fiber connectors. As the fiber optic field began to develop, one of the biggest mechanical problem that existed was permanently fixing the fibers at their ends. Since they have such a small diameter, they must be held rigidly in place and accurately aligned, in order to mate with other fibers, light sources, or light detectors. The first fiber connectors were difficult to install. They used a variety of glues, ovens, and long, difficult polishing methods.

Terminating fibers (termination involves installing a connector and polishing the face of the fiber) can now be done within half the previous time, and the process continues to improve.

8. Splices. While fiber connectors are used to make nonpermanent connections at the ends of fibers, splices are used to join ends of fiber to each other permanently. There are two primary ways this is done: by *fusion*, that is, by melting the pieces of glass together; and by *mechanical* means. The critical factors in splicing are the following:

1. That the fiber joint passes light without loss.
2. That the joint is mechanically secure; that is, that it will not be easily broken.

9. Testing. When installing a fiber system (the whole system of optical fibers is often called a *cable plant*, an old telephone industry term), it must be tested, to ensure that it will properly perform. The purpose of testing is to make sure that light will pass through the system properly. The main types of optical testing used in the field are the following:

Continuity testing. This is a simple visible light test. Its purpose is to make sure that the fibers in your cables are continuous; that is, that they are not broken. This is done with a modified type of flashlight device and the naked eye, and takes only a few minutes to perform.

Power testing. This is to accurately measure the quality of optical fiber links. A calibrated light source puts infrared light into one end of the fiber, and a calibrated meter measures the light arriving at the other end of the fiber. The loss of light in the fiber is measured in *decibels*.

OTDR testing. The OTDR is a piece of equipment properly called an *optical time domain reflectometer*. This device uses light backscattering to analyze fibers. In essence, the OTDR takes a snapshot of the fiber's optical characteristics. It sends a high powered pulses into the fiber and measures the light scattered back toward the instrument. The OTDR can be used to locate fiber breaks, splices and connectors, as well as to measure loss. However, the OTDR method of loss measurement may not give the same value for loss as a source and power meter, due to the different methods of measuring loss. In addition, the OTDR gives a graphic display of the status of the fiber being tested. Another advantage is that it requires access to only one end of the fiber.

As useful as the OTDR is, however, it is not necessary in the majority of situations. A power meter and source are used to test the loss of fiber optic cable, simulating the way the fibers are used, and measuring the light lost from one end of the cable to the other. In addition, OTDRs are quite expensive. Even when they are necessary, many installers prefer to rent them, rather than to purchase them.

10. Basic optical terminology

Attenuation. Attenuation is the weakening of an optical signal as it passes through a fiber. Attenuation is signal loss. Attenuation in an optical fiber is a result of two factors, *absorption* and *scattering*.

Absorption is caused by the absorption of the light and its conversion to heat by molecules in the glass. Primary absorbers are residual deposits of chemicals that are used in the manufacturing process to modify the characteristics of the glass. This absorption occurs at definite *wavelengths* (the wavelength of light signifies its color and its place in the electromagnetic spectrum). This absorption is determined by the elements in the glass, and is most pronounced at the wavelengths around 1000 nm (nanometers), 1400 nm, and above 1600 nm.

Scattering occurs when light collides with individual atoms in the glass, and is knocked off its original course. This is the primary cause of attenuation.

Fiber optic systems transmit in the “windows” created between the absorption bands at 850 nm, 1300 nm, and 1550 nm wavelengths, for which lasers and detectors can be easily made.

Networks. To communicate between several pieces of equipment (for example, between 20 different computers in an office), they must all be connected together. To do this, we must do two things:

1. Develop a logical method of connecting them. Should we tie them all to a central point? Should we connect them in a loop? Or just a direct link?
2. Provide a definite protocol for communicating. If the machines do not “talk to each other” in some type of order, the whole system will collapse in a jumble of signals that the machines can neither separate nor interpret.

There have been many types of networks developed, each with their own strengths and weaknesses. The many network names you have probably heard, such as Ethernet, 10base T, FDDI, ATM, and Token Ring are simply different methods of connecting computers together.

Bandwidth. Bandwidth is the range of signal frequencies or bit rate at which a fiber system can operate. In essence, it is a measure of the amount of signal that can be put through a fiber. Higher bandwidth means more data per second; lower bandwidth means less signal.

Dispersion. There are two especially confusing terms that you will come across in optical fiber literature. They are *chromatic dispersion* and *modal dispersion*. In both of these terms, *dispersion* refers to the spreading of light pulses until they overlap one another, and the data signal is distorted and lost. *Chromatic* refers to color, and *modal* primarily refers to the light’s path. Thus we can state in simple terms that:

Chromatic dispersion = Signal distortion due to color

Modal dispersion = Signal distortion due to path

Note that dispersion is not a *loss* of light; it is a *distortion* of the signal. Thus, dispersion and attenuation are two different and unrelated problems: Attenuation is a loss of light; dispersion is a distortion of the light signals.

11. Total internal reflection. Optical fibers function well for signal transmission because of the principle of *total internal reflection*.

When light goes from one material to another of a different density (in scientific terms, this difference in density is called *index of refraction*), the light’s path will bend. This is what causes the illusion of a stick bending when it is stuck into water. When the light bends at a certain angle (and this angle is different for different types and densities of materials), all of it is reflected, and none passes through the boundary between the two materials.

This phenomenon is used to bend the light at the core/cladding boundary of the fiber, and trap the light in the core. By choosing the material differences between the core and cladding, one can select the angle of light at which total internal reflection occurs.

This angle defines a primary fiber specification, the *numerical aperture* of a fiber, which is also abbreviated as NA.

12. Numerical aperture. The numerical aperture (NA) designates the angle called *the angle of acceptance*—the angle beyond which the light rays injected into an optical fiber are no longer guided, and will pass through the core/clad boundary and be lost.

Fibers with higher NAs will accept a wider range of light paths (the technical term for paths is *modes*). Because there are so many modes, the signal will be distorted. So, a fiber with a higher NA will cause increased signal distortion, and will be able to carry less signal. We may then say that high-NA fibers have less bandwidth, and that low-NA fibers have greater bandwidth.

13. Index of refraction. The index of refraction of a material is the ratio of the speed of light in vacuum to that in the material. In other words, the index of refraction is a measure of how much light slows down after it enters the material. Since light has its highest speed in a vacuum (approximately 300,000 kilometers per second), and since light slows down whenever it enters any medium, (water, plastic, glass, crystal, oil, etc.), the index of refraction of any material is greater than one.

For example, the index of refraction in a vacuum is 1, that of glass and plastic optical fibers is around 1.5, and water has an index of refraction of around 1.3. You can see from this that the light signals sent through an optical fiber travel at considerably less than the “speed of light” as most people think of it. The much-stated speed of light (again, 300,000 kilometers per second) is the speed of light in a vacuum—not the speed of light in all materials.

14. Pulse spreading (dispersion). We have previously discussed signal distortion, saying that it comes from two primary causes—the colors of light sent through the fiber (chromatic dispersion), and the paths that light takes as it moves through the fiber (modal dispersion). Both of these reasons for distortion have the same final effect—to distort the signal by *pulse spreading*.

Pulse spreading is illustrated in Fig. 11.3. Notice that the digital signal sent into the fiber is square. As the signal travels down the fiber, it is distorted, and begins to spread.

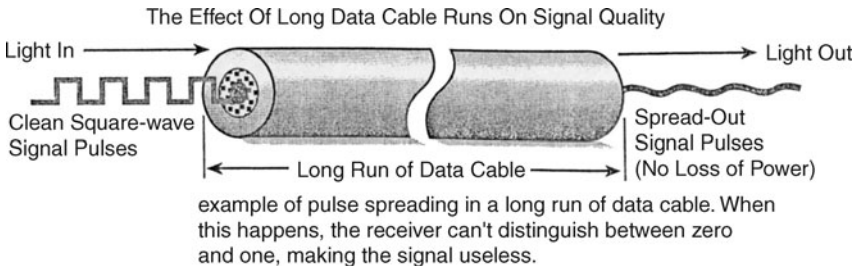


FIGURE 11.3 Chromatic pulse spreading of the digital signal.

Pulse spreading is not a loss of light—just as much light is leaving the fiber as entered it. The light signals, however, are distorted. If the pulses spread too much, they will be unintelligible to the receiver, and the communication will be ineffective.

One at a time, we will now explain why both color and path cause this pulse spreading.

15. Chromatic dispersion. Chromatic dispersion (pulse spreading due to the colors of light sent through the fiber), occurs because of one fact: Different colors of light (which we also call different wavelengths of light) travel at different speeds in an optical fiber.

For example, if two different wavelengths (colors) of light are sent into a long fiber at the same time, one of them will reach the far end before the other will—they will not reach the end at the same time.

You can see from this example that the time difference between the two different wavelengths arriving at the end of the long fiber would tend to spread a data pulse. This causes the pulse spreading that is shown in Fig. 11.3.

Because of chromatic dispersion, it is important to use light sources that put out a very narrow range of colors. Unfortunately, a technology of building affordable, single-color light sources has not yet been developed. Our current light sources put out a range of wavelengths (colors), not a single wavelength.

The newer lasers are the best of our light sources, and put out a reasonably small range of wavelengths. Even though these lasers are more expensive than light emitting diode (LED) light sources, they are often used because they cause far less chromatic dispersion. The LED sources are used only for shorter runs where higher chromatic dispersion is manageable.

Good laser sources are said to have a *narrow spectral bandwidth*, putting out light within a 1 nm range. So, the light output from a 1550 nm laser will be within a range of 1549.5 and 1550.5 nm.

LED sources, on the other hand, are said to have a *broad spectral bandwidth*. Many LEDs have a spectral bandwidth of 20 nm. So, the light output from an 850 nm LED would be between 840 and 860 nm.

16. Modal dispersion. (A factor in multimode fiber only.) Modal dispersion (pulse spreading due to the paths of light sent through the fiber), occurs because some paths through a fiber are more direct than others. Look at Fig. 11.4, and you will see this illustrated.

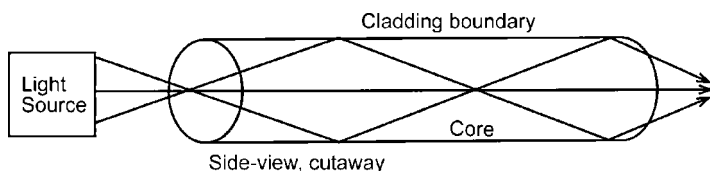


FIGURE 11.4 Modal dispersion of the paths of light through a fiber.

In Fig. 11.4, one of the light rays go right down the middle of the fiber, another enters the fiber at a rather severe angle, and must bounce from side to side, all the way through the fiber.

You can see how the light ray that goes down the middle of the fiber has a significantly shorter path, and will reach the far end considerably sooner than the other ray of light will. Notice how different paths of light traveling through a fiber will reach the end at different times, and will cause a data pulse to spread.

Modal dispersion has been a major factor in determining the design of optical networks, and even in the design of fibers themselves.

17. Types of optical fibers. The three main types of optical fibers that are commonly used today are the following:

Single-mode fibers. A single-mode fiber allows only one light wave ray to be transmitted down the core. The core is extremely small, usually between 8 and 9 μm . Because of quantum mechanical effects, the light traveling in the very narrow core stays together in packets, rather than bouncing around the core of the fiber.

This tendency of the light in a narrow core to travel in packets is not because the core is small enough to allow only one photon at a time to pass through. Photons are many orders of magnitude smaller than the core. Rather, this effect is due to a relationship between the wavelength of the light and the core size. As stated above, this is a quantum mechanical effect, and a detailed explanation is beyond our scope in this text.

Thus single-mode fiber has an advantage over all other types in that it can handle far more signal, and over far greater distances.

Multimode, graded-index fibers. Graded-index fibers contain many layers of glass, each with a lower index of refraction as it moves outward from the center. Since light travels faster in the glass with lower indexes of refraction, the light waves refracted to the outside of the fiber are speeded up to match those traveling in the center. The result is that this type of fiber allows for high speed data to be transmitted over a reasonably long distance. Multimode fibers are used with LED light sources, which are less expensive than the laser light sources which are used for single-mode. Graded index fibers come in core diameters of 50, 62.5, 85, and 100 μm . For a long time, 62.5 μm was the standard size, although 50 μm fiber is now being specified for Gigabit Ethernet networks.

Multimode, step-index fibers. Step-index fibers are used far less than the other types, having a far lower capacity. They have a relatively wide core, like multimode, graded-index fibers, but since they are not graded, the light put through them bounces wildly through the fiber, and exhibits high levels of modal dispersion (signal distortion due to path).

All three types of fiber are shown in Fig. 11.5.

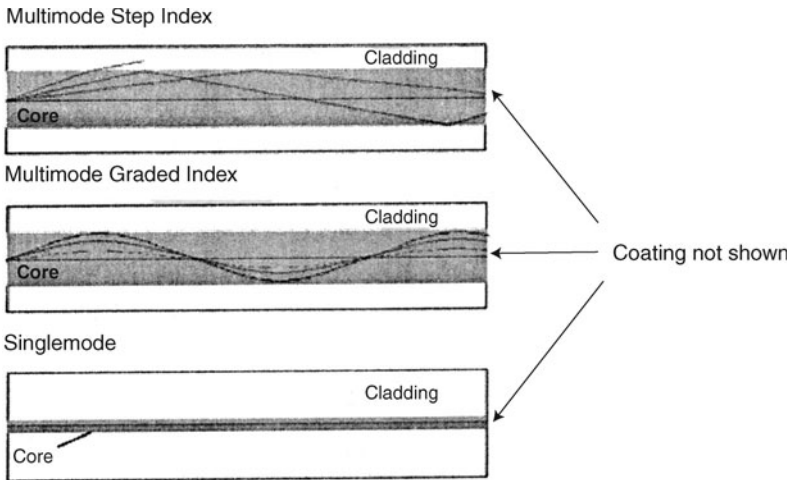


FIGURE 11.5 Multimode step-index fibers.

18. Fiber sizing. The size of an optical fiber is referred to by the outer diameter of its core and cladding. For example, a size given as 62.5/125 indicates a fiber which has a core of 62.5 μm and a cladding of 125 μm . The coating is not typically mentioned in the size, because it has no effect on the light-carrying characteristics of the fiber.

The *core* is the part of the fiber that actually carries the light pulses that are used for transferring data. This core may be made of either plastic or glass. The size of the core is important, as core sizes of joined fibers must match. Larger cores have greater total light-carrying capacity than smaller cores, but have less signal-carrying capacity than the smaller cores because they lead to far greater signal distortion. We may say that more photons can travel through a larger core, but they are not effective for transferring signals.

The *cladding* sets a boundary around the fiber so that light running into this boundary is reflected back into the cable. This keeps the light moving down the cable, keeping it from escaping. Claddings can be made of either glass or plastic, and always have a different density than that of the core. (If they did not have a different density [index of refraction], they could not reflect escaping light back into the core.)

As an example of this, imagine that you are standing next to a calm mountain lake. As you look across the lake, you can see a reflection of the mountains and trees on the far side. The lake works as a large mirror. As you move your eyes closer, eventually the reflection stops, and you can see through the surface of the water. Just in front of your feet, you can see fish swimming in the water. In this example, the water's surface acts like the cladding of an optical fiber, with the air acting as the core. When the light reaching your eyes is of a shallow enough angle, the surface of the lake reflects all of it. But when the angle between your eyes and the water's surface becomes too steep, the light passes through the surface, and is not reflected.

Coatings are typically multiple layers of ultraviolet curable acrylate plastic. This is necessary to add strength to the fiber, to protect it, and to absorb shock. These coatings are between 25 and 100 μm thick. (One micron is equal to one millionth of a meter. For comparison purposes, a sheet of paper has a thickness of approximately 25 μm .) Coatings can be stripped from the fiber (and must be for terminating) either mechanically or chemically, depending on what type of plastic is used.

19. Manufacturing fiber. Manufacturing optical fiber is a very difficult and complex process. In general, the process entails three parts:

- 1. The manufacture of a preform,** which is a cylinder of glass that the optical fiber will be made from. They are generally about three feet long and an inch wide. The preform has a physical make up identical to the final fiber, including both core and cladding, except that it is much wider and shorter.
- 2. Pulling the fiber.** The preform is heated very precisely, and a thin strand of glass is pulled off of one end. The diameter of this strand is controlled very carefully through variances in heating and pulling tension. This strand is the optical fiber, containing both the core and cladding.
- 3. Cooling, coating, winding.** Once the fiber is pulled off the preform, it must be carefully and slowly cooled, covered with the final coating, and wound on to reels.

There are three methods currently used to fabricate moderate to low loss waveguide fibers: modified chemical vapor deposition (MCVD), outside vapor deposition (OVD), and vapor axial deposition (VAD).

Modified chemical vapor deposition. MCVD begins with a hollow glass preform, approximately 3 ft long and 1 in. in diameter, and is placed in a horizontal or vertical lathe and spun rapidly. A computer-controlled mixture of gases is passed through the inside of the tube. On the outside of the tube, a heat source (oxygen/hydrogen torch) passes up and down.

Each pass of the heat source fuses a small amount of the precipitated gas mixture to the surface of the tube. Most of the gas is vaporized silicon dioxide (glass), but there are carefully controlled remounts of impurities (dopants) which cause changes in the index of refraction of the glass. As the torch moves and the preform spins, a layer of glass is formed inside the hollow preform. The dopant (mixture of gases) can be changed for each layer so that the index may be varied across the diameter.

After sufficient layers are built up, the tube is collapsed into a solid glass rod, which is the preform. It is now a scale model of the desired fiber, but much shorter and thicker.

The preform is then taken to the drawing tower, where it is pulled into a length of fiber up to 10 kilometers long.

Outside vapor deposition. This method utilizes a glass target rod which is placed in a chamber and spun rapidly on a lathe. A computer-controlled mixture of gases is then passed between the target rod and the heat source. On each pass of the heat source, a small amount of the gas reacts and fuses to the outer surface of the rod, resulting in what is referred to as “soot” on the preform, although it is certainly nothing like creosote and charcoal on the inside of a chimney. After enough layers are built up, the target rod is removed and the remaining soot preform is collapsed into a solid rod. The preform is then taken to the tower and pulled into fiber.

Vapor axial deposition. This process utilizes a very short glass target rod which is suspended by one end. A computer-controlled mixture of gases is applied between the end of the rod and the heat source. The heat source is slowly backed off as the preform lengthens due to the soot build-up caused by gases reacting to the heat and fusing to the end of the rod. After sufficient length is formed, the target rod is removed from the end, leaving the soot preform.

The preform is then taken to the drawing tower to be heated and pulled into the required fiber length.

20. Fiber coatings. After the fiber is pulled, a protective coating is applied very quickly after the formation of the hair-thin fiber. The coating is necessary to provide mechanical protection and prevent the ingress of water into any fiber surface cracks. The coating typically is made up of two parts: a soft inner coating, and a harder outer coating. The overall coating thickness varies between 62.5 and 187.5 μm , depending on fiber applications.

These coatings are typically strippable by mechanical means, and must be removed before fibers can be spliced or fitted with connectors.

TABLE 11.1 Fiber Types and Typical Specifications

Fiber type	Core/cladding diameter (m)	Attenuation (dB-km)			Bandwidth (MHz-km)
		850 nm	1300 nm	1550 nm	
Step index	200/240	6			50
Multimode	50/125	3	1		600
Graded index	62.5/125	3	1		500
	85/125	3	1		500
	100/140	3	1		300
Single-mode	8–9/125		0.5	0.3	Very high
Plastic 1 mm	(1 dB/m 665 nm)			Low	

21. A brief history of optical fiber. The idea of the optical fiber dates back to the nineteenth century in England, where a man named Tyndall developed a “light fountain” based on the phenomenon of internal reflection.

In 1881 William Wheeler, a Concord, Massachusetts engineer, applied for a patent that illustrates the transport of light by means of a light conductor. This patent describes an indoor lighting system intended to substitute for the incandescent bulbs which Edison had just invented. The system uses light emitted by a powerful electrical arc that is distributed to each of the rooms in a building by means of optical conductors.

In 1934, AT&T engineer Norman R. French devised the first optical transmission system, followed by RCA’s Kell and Sziklai. The RCA patent described today’s photonic transmission systems in some detail.

The principle of an optical fiber was described in 1957, first in England by Hopkins and Kapany, who described the first fibroscope in a paper published in the journal *Nature*, then in the United States by American Optical Corp.’s R&D Manager, Brian O’Brien, who patented a bundle of optical fibers used for image transport.

The invention of the laser revived the researchers interest in optical communications and Charles K. Kao and George Hockham, of STL (Standard Telecommunications Laboratories), were the first to demonstrate that long distance transmissions via optical fibers were possible.

In 1970, three Corning Glass Works researchers, R. Maurer, D. Keck, and P. Schultz, made practical long distance transmission possible by producing an optical fiber with 20 dB/km attenuation.

The key dates in the history of optical fiber signal transmission are the following:

- 1880 A. G. Bell’s Photophone
- 1881 W. Wheeler’s patent for a light conducting guide
- 1934 N. R. French’s patent for a partly optical transmission system
- 1950 R. D. Kell & G. C. Sziklai’s patent for an optical transmission system
- 1957 B. O’Brien’s patent for a fiber bundle
- 1957 Articles in the journal *Nature* on fiber bundles and a fibroscope
- 1961 Invention of the laser
- 1966 C. Kao & G. A. Hockham: long distance optical transmissions
- 1970 R. D. Maurer, D. B. Keck, & P. C. Schultz: first 20 dB/km fiber

22. Data transmission. Optical data transmission (the method of sending data through optical fiber cables) is illustrated in Fig. 11.6. This drawing shows a telephone conversation traveling over optical fiber cabling. The voice is first transformed by the telephone into an electrical signal. This signal is then scanned by a digital encoder, which reduces the signal into *binary code* (a series of offs and ons). The driver, which activates

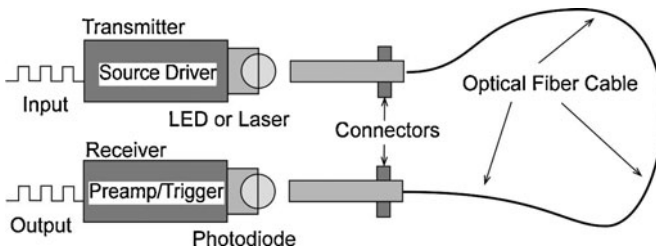


FIGURE 11.6 Optical data transmission.

the LED or laser light source, transmits the ons as bursts of light and the offs as the absence of a light pulse. The light travels through the optical fiber cable until it is received at its destination, amplified, and fed into a digital decoder. The decoder translates the digital signal back into the original electrical signal. And finally, the telephone changes the electrical signal back into sound.

Transmitters and *decoders* are the devices which change electricity into light pulses, and change light pulses back into electrical pulses.

23. Simplex and duplex transmission. Optical transmissions are called *simplex*, *half-duplex*, or *full-duplex* based on their method of transmission. Both simplex and half-duplex systems use only one fiber to communicate, and are less expensive to build.

The simplex method transmits in only one direction, while the half-duplex system can send signals in both directions, but not both directions at the same time. Half-duplex is similar to a two-way radio in its operation. The terminal electronics must act as both a receiver and transmitter and are, appropriately, called transceivers.

The full-duplex system, on the other hand, uses two fibers to communicate. This way one fiber is always available to transmit from point A to point B while the other fiber is transmitting from B to A. Therefore, both ends of a full-duplex system have both transmitters and receivers. Because of this, you must be careful not to mix them up during installation by reversing the transmit and receive fibers. Sometimes the fibers are color coded, or they may have some other identifying feature such as a ridge marking one fiber on duplex cables. In any case, be careful to not reverse the two fibers when installing connectors on the ends.

24. Units of measurements. The magnitudes involved in transmission through optical fibers lead to submultiples and multiples of units to be widely used: decibel, micrometer, megabit, and so on.

Generally, all dimensions of an optical fiber are expressed in micrometers (μm), which is one millionth of a meter. Of course, millimeter (mm) is used for large diameter fibers.

The wavelengths of light are also expressed in micrometers, or nanometers (nm), which are billionths of a meter.

Transmission parameters such as rates (bit/s) or bandwidth (Hz-km) are expressed in multiples such as kilo, mega, or giga. And the terabit (trillions of bits per second) may soon be the reference for transmission rates in telecommunication networks.

Energy losses and attenuations are only expressed in decibel.

25. Frequency and wavelength. Wavelength (an inverse function of frequency) is just one way of describing the speed of vibration of these photons emitted from a light source. The speed of any wave phenomenon is always the wavelength (λ) multiplied by the frequency (f). Light as a form of electromagnetic radiation has a speed (usually stated as “c”) of 3.0×10^8 m/sec in a vacuum, very nearly that speed in air and perhaps $1/3$ less in a glass fiber. Thus, for light $c = \lambda f$. For example, 10,000,000,000,000,000 Hz (1.0×10^{16} Hz) would correspond to a wavelength of about 3.0×10^{-8} m or 30 nanometers (nm) in air, which is in the ultraviolet range. Our eyes recognize wavelengths from about 390 nm to 770 nm as different colors running from violet to red. There are thousands of other wavelengths we do not see. Our eyes and brains are not tuned to receive them.

Different frequencies of light have different characteristics of loss (attenuation) through glass. Because of these loss characteristics, engineers have chosen 850, 1310, and 1550 nm as the first, second, and third windows of fiber transmission. Since we can’t see these three wavelengths, we can’t tell, with the naked eye, if their transmitters are operating.

26. Decibel-watt conversion. In optics, all energy and power levels, and all losses or attenuations, are expressed in decibels rather than in Watts. The reason is simple: all transmission calculations and measurements on a fiber are almost always made as comparisons against a reference: received power compared to emitted power, energy in versus energy out (energy lost in a connection), and so on.

Generally, energy levels (emission, reception, etc.) are expressed in *dBm*. This signifies that the reference level of 0 dBm corresponds to 1 milliwatt (mW) of power.

Generally, power losses or gains (attenuation in a fiber, loss in a connector, etc.) are expressed in dBm.

The unit $\text{dB}\mu$ is used for very low levels, in the microwatt level.

A decibel is simply one tenth of a Bel (the name given in honor of Alexander Graham Bell), which is a difference of an order of magnitude (10 times) in the intensity of any event. That number is inconveniently large, so we use decibels instead. It is important to bear in mind that this is a logarithmic relationship. One half of a Bel increase is not half again the original number ($1.5\times$); it is $10^{1/2}$ times the original number or about $3.2\times$. Using decibels, a half Bel increase is a 5 dB increase, thus a positive 5 dB change reflects a multiplier of 3.2. Because the logarithm of 2 (using base 10) is about 0.3, decibel measurement works as follows: a difference of 3 dB equals a doubling or halving of power.

A 3 dB gain in power means that the optical power has been doubled. A 6 dB ($3 + 3$) gain means that the power has been doubled, and then squared, equaling four times the original power. A 9 dB gain ($3 + 3 + 3$ dB) is an eightfold (the original doubling cubed) increase in power, and a 12 dB [$(3 + 3) + (3 + 3)$] gain is about 16 times the original power level. This is the original squared result squared again, or restated as the original doubling raised to the fourth power of the original power level. The resulting number makes sense when you consider that 10 dB = 1.0 Bel, defined in terms of a tenfold change. A 3 dB loss of power means that the power has been cut in half. A 6 dB loss means that the power has been cut in half, then cut in half again, equaling one-fourth of the original power. If you have a scientific calculator (or the one built into most computer operating systems) simply hit the inversion (usually "INV") key (or set the check box), type in the increase or decrease in Bels ($\text{dB} \times 0.1$) and hit the "log" button, and the result will be the multiplying factor from the original power level.

A loss of 3 dB in optical power is equivalent to a 50% loss. For example, 1 milliwatt of power in, and 0.5 milliwatt of power out.

A 6 dB loss would equally a 75% loss. (1 milliwatt in, 0.25 milliwatt out.)

27. Active and passive components. The two primary classifications of optical components are *active* components and *passive* components.

Active components are elements in an optical transmission line that somehow convert electrical energy into optical energy or optical energy to electrical energy. Typical active components include light sources (light emitting diodes, laser diodes) and detectors (photodiodes, phototransistors.). Optical components whose operation also requires electrical energy, such as active couplers or optical amplifiers, also belong to this category.

Passive components are elements whose function in an optical link is not to convert electricity into light and vice versa. Passive components would include all the components used in a link, except the active components (optical emitters, receivers, and amplifiers), such as connectors, splices, terminal blocks, couplers, and the like. Mechanical elements such as the protective casings of joints or cable heads are also classified as passive components.

28. Materials used for active components. Silicon, germanium, gallium arsenide, indium phosphide are semiconductor materials used in active optical components.

Silicon and germanium are used for photodiodes only. Gallium arsenide and gallium aluminum arsenide are reserved for emitters. InGaAs and InGaAsP (indium gallium arsenide and indium gallium arsenide phosphide) are general purpose materials with very good emission and reception characteristics.

The abbreviations we use for these materials are the following:

Silicon	Si
Germanium	Ge
Gallium	Ga
Aluminum	Al
Arsenide	As
Indium	In
Phosphide	P

29. LED light sources. LEDs are the most widespread emitters. Their operating principle is simple: a voltage is applied to a semiconductor made of two electrically opposed regions, generating a current flow through the diode. The P region (the positively biased semiconductor region) is doped so that it lacks electrons with respect to the basic material, thus creating what are called “holes”—places where electrons are missing. The N region (the negatively biased semiconductor region) is inversely doped, thus creating free electrons. When a voltage is applied to the diode, the electrons and the holes move toward the junction between the two regions where they combine by emitting photons, the essential particles of light.

30. Types of LEDs. There are three types of LEDs that are commonly used for optical fiber work. The first two are the *surface emission* diodes and *transverse emission* diodes. The fundamental difference between these two types of diodes lies in the emission surface, which is much smaller in transverse emission diodes. The photons generated by current flowing between the two P and N regions are confined in the junction, which has a very small thickness. Therefore, light is emitted on one side of the diode.

The third LED type is the Burrus diode (after the name of Charles A. Burrus, of AT&T Bell Laboratories), in which an optical fiber gathers the emitted light. Therefore, the characteristics of this diode are directivity and a high coupling rate.

Following are several commonly used LEDs:

- GaAs, GaAlAs LEDs: 820–850 nm transmission systems on multimode fibers
- GaAsP LED: plastic optical fibers, visible infrared (665 nm)
- InGaAsP LED: 1330 nm transmission systems on multimode fibers

31. Semiconductor lasers. Semiconductor lasers provide a higher power and a better directivity than LEDs. These characteristics are inherent to their different design although they use the same principle of photon emission by electron excitation. When an electron moves from one energy level to a lower level, it emits a photon. This is called “spontaneous emission,” and can be controlled and triggered by a photon hitting the electron, which then emits a photon with the same wavelength as the first one. This

is **Light Amplification by Stimulated Emission of Radiation**, which is the Laser effect. Vertical-cavity, surface-emitting lasers (VCSELs) are used a great deal in optical fiber systems.

The Laser effect (defined as an “emission of a strong light energy with a high directivity”) is obtained when several conditions are met:

1. The number of high energy level particles must be greater than that of lower level particles. If it is not so, lower level particles absorb the light energy emitted by the photons.
2. These photons must remain confined in a *resonator* so that amplification can be ensured. A resonant cavity is therefore made of two mirrors, one reflecting the light and the other one letting the beam thus created through.

Laser diodes are made of a semiconductor crystal, one side of which is coated by a reflective layer (to form the reflecting mirror) while the emission side is left bare.

Most of the semiconductor materials used for LEDs cannot be used for lasers, such as LEDs emitting in the visible range. In contrast, the materials used for lasers can also be used for LEDs. (A laser diode is capable of operating as an LED.)

The laser effect in a semiconductor is triggered above a given threshold, when the initial stimulation has produced enough photons for the process to be maintained and amplified. Below this threshold, the laser diode functions as a light emitting diode. Beyond this value, a small increase in the control current will generate a very high increase in the emitted power.

At the end of the manufacturing line, all the laser diodes that do not meet the qualification criteria for lasers are regarded as LEDs and used as such.

32. Typical laser diodes.

Here are some commonly used lasers:

- Multimode Lasers: Classical Laser Diodes (LDs), called *Perot-Fabry*, for 1300 nm transmission systems on conventional single-mode fibers, and 1550 nm transmission systems on dispersion-shifted single-mode fibers.
- Single-mode Lasers: Monochromatic LDs, called *DFB* for 1550 nm transmission systems on conventional single-mode fibers.

33. Emission spectrums. The first criterion of choice of an optical emitter (LED or laser) is its wavelength, which influences the attenuation in the link. The second criterion is its *spectral bandwidth*, which influences signal distortion (chromatic dispersion). The emitter is not monochromatic; it scatters a light energy centered around its nominal wavelength (the wavelength for which is specified). The spectrum of emission of laser diodes is much narrower than that of light emitting diodes. Chromatic dispersion is therefore much lower with a laser than with an LED.

The emission wavelength is dependent the materials used to manufacture the light source. The spectral bandwidth is dependent on the structure of the emitter.

34. Configurations of emissions. When an optical emitter, LED or laser, is driven by an analog signal, the light energy which it generates varies continuously depending on the variations of this signal. In the case of a digital signal, the energy is modulated according to the pulses.

In other words, whatever configuration of signal goes in will be the signal configuration that goes out.

TABLE 11.2 Optical Power Levels of Fiber Optic Communication Systems

Network type	Wavelength, nm	Power range, dBm	Power range, W
Telecom	1300, 1550	+3 to -45 dBm	50 nanowatts to 2 milliwatts
Datacom	665, 790, 850, 1300	-10 to -30 dBm	1 to 100 microwatts
CATV	1300, 1550	+10 to -6 dBm	250 microwatts to 10 milliwatts

35. Photodiodes. The light detectors used for optical transmission are semiconductor photodiodes. The operation of these photodetectors is the opposite of LEDs. When a voltage is applied across the diode, the electrons and the holes migrate out of the junction zone between the P and N regions. The empty zone thus created blocks the current flowing through the diode. When the diode is illuminated, electron-hole pairs are formed and current flows again in proportion to the light energy received.

The detector sensitivity at a determined wavelength is dependent on the selected materials.

36. Characteristics of optical receivers. Phototransistors are not used in optical communication systems because their pulse response time is too great for today's transmission rates. The detectors most frequently used are *PIN* devices and avalanche photodiodes (APD). "PIN" refers to *P-intrinsic-N*, the empty zone between the P and N regions of a semiconductor that is doped so that current flow is faster when it is illuminated.

Here are common optical receivers along with their common uses:

- PIN-FET diodes (combining a PIN photodiode and a field effect transistor): used in numerous applications due to their low cost (integrated electronics)
- PN photodiodes: used for low rate transmission systems
- PIN photodiodes: used for high rate transmission systems, low reception levels
- Phototransistors: used for low cost sensors, economical data transmission systems
- Photodarlingtons: used for low cost sensors, economical low rate applications
- Avalanche photodiodes (APD): used for very low reception levels
- Photoreceivers with built-in photodiode and preamplifier (Pin-FET): used for medium rate applications

37. Coupling the source to the fiber. The injection of the light energy into the fiber is one of the essential points in optical transmission.

The source power varies from about 10 μ W for LEDs to a few tens of milliwatts for semiconductor lasers. The emitted energy is not integrally injected into the fiber; rather, it is dependent on the emission angle of the source (10 to 20° for lasers, much wider for LEDs). The alignment of the source and of the fiber and of the emitting area is also important.

Therefore, the coupling of the emitter and of the fiber, also called *injection*, must be performed with the utmost care.

38. Passive components. Following are descriptions of the most common passive optical components:

Couplers. Today, couplers are widely used in optical transmission systems. Couplers are essentially T connections, which split a branch off of a continuous fiber.

Local area networks are one typical application, where each piece of equipment (computer, printer, etc.) is connected to the network via a coupler, which is an optical T branch, functioning the same as those used to send electronic signals used with coaxial cables.

Typical coupler topologies. The typical configurations of passive couplers are the *star* and the *tee*.

Tee couplers are made of two fibers, one main fiber which passes through it, and one branch fiber. The energy carried by the first fiber is divided at the branching point into two portions that are not necessarily equal: 50/50 couplers are available, but 25/75, 10/90 couplers, and other configurations are available as well.

The star coupler has more than 3 input/outputs (sometimes abbreviated as *I/Os*). The light entering through one or several fibers is mixed in the coupler and exits via the other fibers.

Tee or star couplers are available in numerous models and applications, including:

- Star couplers (2-way to 2-way, 4-way-to-4-way, etc.). These are used in local area networks, dispatching networks, sensors, instrumentation.
- T or X couplers, used in local area networks, dispatching networks, sensors, and for instrumentation.
- *Mux-Demux* (Multiplexer-Demultiplexer) couplers. These are used in telecommunications, videocommunications, instrumentation, and for sensors.

Splitters. The splitter, or directional coupler, is so called because it can separate the energy only in one transmission direction. In the other direction, it can become a multiplexer (putting light sources together).

The two-directional coupler is used to divide the energy in both directions.

39. Wavelength division multiplexing. Wavelength division multiplexing (WDM) is the process of sending several signals with different wavelengths in both directions through the same fiber. This can be done as long as there is a gap between each wavelength that is sufficient to prevent any mixing of the pulses. This gap need not be large; in fact, gaps in the range of tenths of a nanometer are common.

Wavelength division multiplexing systems use couplers to group the signals on the same fiber. On the other end of the line, when the signals are received, couplers are used to dispatch the signals to their respective devices.

The same coupler may be a *multiplexer* (which puts several light sources together) or a *demultiplexer* (which divides one light source into many) according to the fibers used at the input and at the output.

40. Types of optical cables, by cable composition; by NEC classification. The physical construction of optical cables for system functions is not governed by any agency. On the other hand, optical cables possess (assuming they are listed) NEC designations that are essential to understand in terms of fire resistance and in the context of a

building electrical system. This section covers both concepts, beginning with system functions and concluding with the NEC classifications. The final cable selection specification will combine both. It is up to the designer of the system to make sure that the cable selected will meet the application requirements. Five basic cable types have however emerged as de facto standards for a variety of applications:

Simplex and zipcord. One or two fibers, tight-buffered, Kevlar reinforced and jacketed. Used mostly for patch cord and backplane applications. See Fig. 11.7.

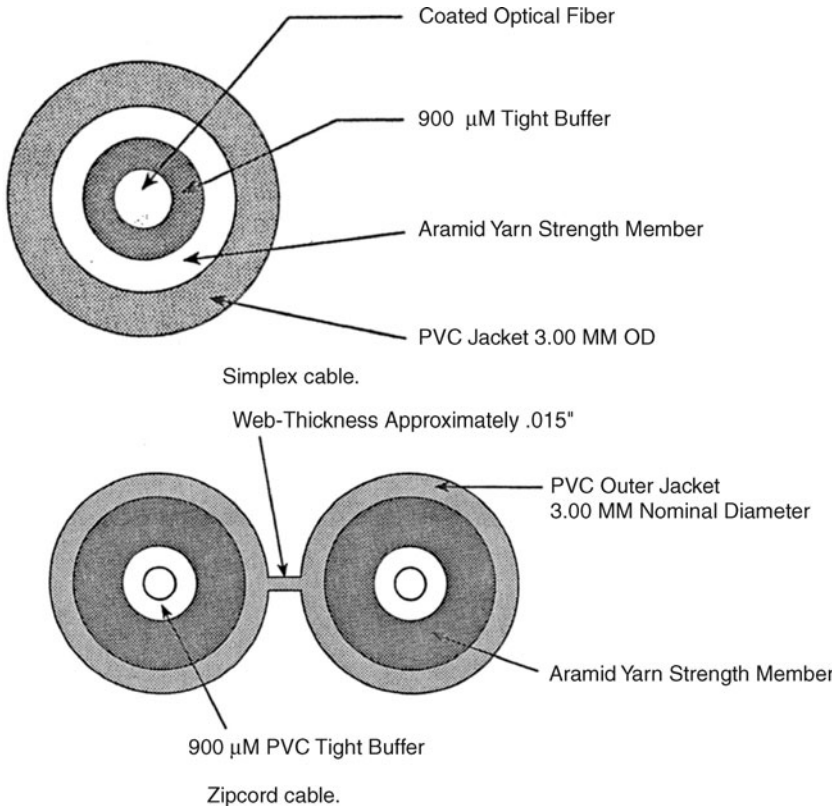


FIGURE 11.7 Simplex and zip-cord optical cable.

Tightpack cables. Also known as distribution style cables. Up to several tight-buffered fibers bundled under the same jacket with Kevlar reinforcement. Used for short, dry conduit runs, and riser and plenum applications. These cables are small in size, but because their fibers are not individually reinforced, these cables need to be terminated inside a patch panel or junction box. See Fig. 11.8.

Breakout cables. These cables are made of several simplex units, cabled together. This is a strong, rugged design, and is larger and more expensive than the tightpack cables. It is suitable for conduit runs, and riser and plenum applications. Because each fiber is

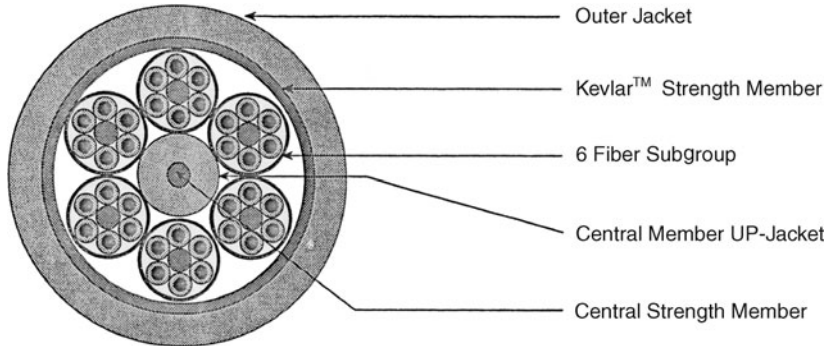


FIGURE 11.8 Tightpack optical cable.

individually reinforced, this design allows for a strong termination to connectors and can be brought directly to a computer backplane. See Fig. 11.9.

Loose-tube cables. These are composed of several fibers cabled together, providing a small, high fiber count cable. This type of cable is ideal for outside plant trunking applications. Depending on the actual construction, it can be used in conduits, strung overhead, or buried directly into the ground. See Fig. 11.10.

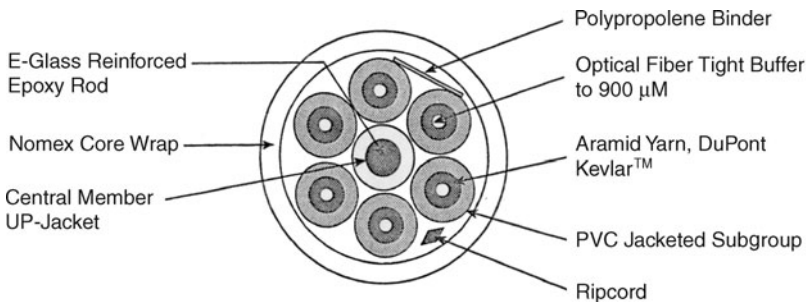


FIGURE 11.9 Breakout optical cable.

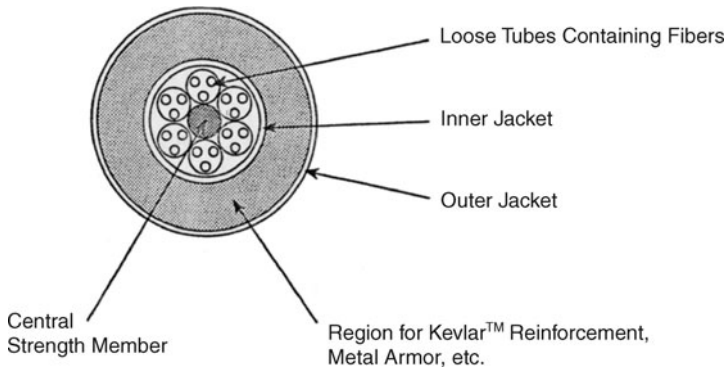


FIGURE 11.10 Loose-tube optical cable.

Hybrid or composite cables. There is a lot of confusion over these terms, especially since effective with the 1993 edition, the NEC switched its terminology from *hybrid* to *composite*.

Under the new terminology, a *composite* cable is one that contains a number of copper conductors properly jacketed and sheathed depending on the application, and in the same cable assembly as the optical fibers.

This situation is made all the more confusing since there is another type of cable that was formerly called composite. This type of cable contains only optical fibers, but which have two different types of fibers: multimode and single-mode.

Remember that there is confusion over these terms, with some people using them interchangeably. At this point the proper terminology is the following:

- A *composite* cable is a fiber/copper cable.
- A *hybrid* cable is a fiber/fiber cable.

Conductive and nonconductive cables. The NEC adds definitions for optical fiber cable types for its own purposes, which have nothing to do with cable performance in terms of signal transmission, and everything to do with how the cables interface with the electrical system. For example, a tightpack cable assembly, defined above, might be a conductive or nonconductive cable depending on internal construction, or theoretically even a composite cable if made up with copper in addition to the fiber. Since the NEC permits some optical fiber cables but not others to run in industrial cable trays next to medium-voltage (over 600V) power conductors, the importance of these distinctions to the installing electrician is clear. Specifically:

- A *conductive* cable is one with noncurrent-carrying conductive members such as metallic strength members, metallic vapor barriers, or metallic armor or sheath.
- A *nonconductive* cable is one with no metallic members and no electrically conductive materials.

Fire resistance of optical fiber cables. The NEC has an additional classification system for optical fiber cables, which also has nothing to do with signal transmission but has everything to do with how the cables will perform under fire conditions, particularly with respect to the likelihood that they will add a dangerous amount of fuel and transmit fire from one place to another. As in the case of other power-limited circuits (see Div. 9 Sec. 485) a hierarchy has been created as evidenced by a required cable marking, although in this case it only has three instead of four layers because residential occupancies have no special allowances. Specifically, optical fiber cables must be listed as compliant with one of the following designations:

- *General purpose cable* with no suffix, or a suffix “G” is generally suitable for all locations except as covered below whether concealed or exposed. The marking will begin with “OF” for optical fiber, then add a conductive element designation (either “C” for conductive or “N” for nonconductive) and conclude with no suffix or a “G” depending on which test protocol it was tested to. A “no suffix” cable may not have been tested to a certain Canadian standard and could be restricted in certain applications within the Canadian market.
- *Riser cable* is the next better grade of cable, and it can be used in risers from floor to floor. The marking also begins “OF,” followed by “C” or “N” and finish with an “R.”
- *Plenum cable* is the highest grade, and it can be used in plenum cavities used for environmental air such as above a suspended ceiling that connects to the intake of a large air handler. It will have the same markings as for riser cable except the final marking will be a “P.”

Better cables in this hierarchy can always substitute for poorer cables, and nonconductive cables can always substitute for conductive cables within the same location rating, as shown in NEC Table 770.154(E). For example, OFNP can substitute for OFNR, which can

substitute for OFCR or it could substitute for OFNG or OFN, and the like. Any listed cable is also permitted in a more restricted location than its nominal marking would indicate if it is pulled into another wiring method that would be permitted for the location. For example, the interior of a plenum-cavity suspended ceiling normally requires OFNP or OFCP grade fiber, but even OFN or OFC can be pulled into a steel raceway system in that location, such as EMT and steel boxes in accordance with NEC 300.22(C).

Unlisted cables cannot be used in buildings generally, but they can be used for outside plant. They are limited to the first 15 m (50 ft) from their “point of entrance,” and they cannot be used in a riser or plenum cavity. The point of entrance can, if necessary, be artificially extended into the building through the use of appropriately grounded rigid or intermediate metal conduit; if these wiring methods extend from the point where the outside plant enters the facility to an enclosure, then the point of entrance will be the downstream enclosure.

Optical fiber Raceways are commonly referred to as “innerduct” because they will often be pulled into large underground conduits to segment groups of fiber optic cables and provide them with a low-friction surface for insertion. They are also widely used as a raceway within buildings that is easily installed because it comes in coils that can be bent by hand. They are closely related to electrical nonmetallic tubing, a power wiring method covered in Div. 9, Sec. 27. They must be listed, and their allowable locations are the same as for optical fiber cables with comparable markings.

41. Connectors and splices. Connecting and splicing optical fibers is one of the more labor-intensive part of the installation process. Pulling the cables into place is relatively easy, and other parts of the installation are comparably simple. But connecting these glass fibers correctly requires time, special tools, and specific skills.

All fiber joints must meet two criteria. They must be:

1. *Mechanically strong:* Fiber connections must be capable of withstanding moderate to severe pulling and bending tests.
2. *Optically sound with low loss:* Since the purpose of fiber is to transmit light, the fiber joint must transmit as much light power as possible with as little loss and back reflection as can be designed into the joint.

Fiber connections fall generally into two categories: the permanent or fixed joint which uses a fiber *splice*, and the nonfixed joint which uses a fiber optic *connector*.

Splices are used as a permanent connection. Typical uses include reel ends, for pigtail vault splices and at distribution breakouts. The criteria for good fiber splices are low loss and high mechanical strength. Additional considerations are expense per splice and possible reusability of the splice itself.

Fiber optic connectors are used as a termination for inside cables, outside cables as they terminate in a central office, for interfaces between terminals on LANs, for patch panels, and for terminations into transmitters and receivers.

Whether one joins fibers using splices or connectors, one negative aspect is always common to both methods—signal loss. This loss of light power at fiber connections is called *attenuation*, and is measured in decibels.

42. Attenuation. Attenuation is the loss of signal or light intensity as it travels through an optical fiber transmission system. Some losses occur in the fiber itself and others at fiber joints. Measurement of attenuation (loss) is made in decibels (dB).

Attenuation in the optical fiber itself usually occurs as a result of absorption, reflection, diffusion, scattering, or dispersion of the photon packets within the fiber. However, losses also occur at splices and connections.

The factors which cause attenuation in an optical fiber system can be broken into two categories: those being *intrinsic* losses (losses coming from built-in characteristics) and *extrinsic* losses (losses from external factors).

Intrinsic losses occur from factors over which the installer has very little control and are generally caused by engineering design or manufacturing flaws. The following is a list of the more prominent intrinsic losses:

- 1. Core eccentricity (core off-center, as compared with the total fiber)
- 2. Core ellipticity (an oval-shaped core)
- 3. Numerical aperture (NA) mismatch
- 4. Core diameter mismatch

Core eccentricity (meaning that the center of the core center and the center of the cladding are not precisely the same center) causes an overlap or underlap of fiber cores at a splice point.

Ellipticity (or ovality) is a departure from circularity. A very small variation in the roundness of a fiber core can affect the total system loss.

Intrinsic loss, while no fault of the installer, can be minimized by butting the fibers as closely as possible.

When splicing fibers having cores of different diameters, testing will show a significant loss when testing from the large core into the small core, and will show a supposed “gain” when testing from the small core into the large core.

Extrinsic losses on the other hand are caused by the mechanics of the connection itself. Frequent causes of extrinsic loss attenuation at splicing points include:

- 1. Misalignment of fiber ends caused by improper insertion techniques into splices and connectors
- 2. Bad cleaves and poor polishing techniques resulting in poor end face quality
- 3. Inadvertent air spaces between fibers at a splice or connection which has not been corrected with index matching gel or liquid
- 4. Contamination caused by dirt, wiping tissue, cotton swabs, shirt sleeves, or airborne dust particles

TABLE 11.3 Mismatched Fiber Connection Losses (Excess Loss in dB)

Receiving fiber	62.5/125	Transmitting fiber 85/125	100/140
50/125	1.6–1.6	3.0–4.6	4.7–9
62.5/125	—	0.9	2.1–4.1
85/125	—	—	0.9–1.4

43. Back reflection. Another type of loss is back reflection (or reflectance) and is measured as return loss. As the light travels through the fiber, passing through splices and connections, finally arriving at the end point, some of that light is reflected back by fiber end faces at those points. This is shown in Fig. 11.11.

Typical allowable splice losses for single-mode fiber are 0.0 to 0.25 dB, and with a return loss or back reflectance of less than –50 dB. In multimode fiber splices, typical losses are 0.0 to 0.25 dB, with an average of 0.20 dB, and return loss of less than –50 dB. In the case of fiber connectors, single-mode allowable connector losses range from 0.05 to 0.5 dB per connector (0.1 to 1.0 dB per connection), and return loss typically is less than –30 dB. Multimode connectors have a nominal connector loss of 0.06 to 0.7 dB per connector (0.12 to 1.4 dB per connection) with a return loss less than –25 dB being typical.

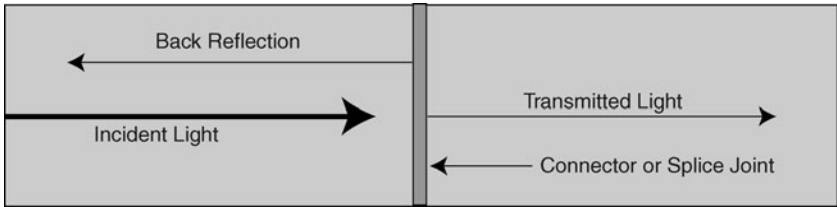


FIGURE 11.11 Signal loss due to back reflection.

44. Connectors. Remember that connectors are used as terminating fixtures for temporary nonfixed joints. As such, they are made to be “plugged-in” and disconnected several or many times. Since no one connector is ideal for every possible situation, a wide variety of connector styles and types have been developed over the short life of fiber communications. We can classify connectors by assigning them into five major categories:

1. Resilient ferrule
2. Rigid ferrule
3. Grooved plate hybrids
4. Expanded beam
5. Rotary

Examples of these types of connectors can be seen in Figs. 11.12 and 11.13. Connector compatibility exists between the same types from different manufacturers. Adapters are generally available in either sleeve connectors or patch cords to allow coupling of different types of connectors. Although no single connector is best for every application, listed below are the currently popular connectors found in many different types for various applications.

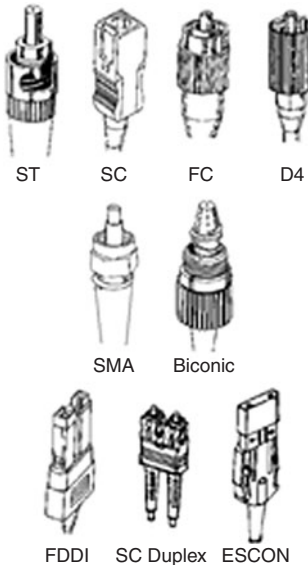


FIGURE 11.12 Optical fiber connectors.



FIGURE 11.13 LC Connector (top); SC Connector (upper middle), ST Connector (lower middle), Biconic (bottom).

TABLE 11.4 Connectors and Applications

Datacommunications (mostly multimode)	Telecommunications (mostly single-mode)
LC, SMA (now obsolete)	LC, FC/PC (now obsolete)
ST (most commonly used)	ST (occasionally used)
SC (specified for newer systems)	SC (growing)
FDDI (obsolete)	D4 (decreasing)
ESCON (obsolete)	Biconic (obsolete)

Although not compatible with all other connectors, most ferrule types that use a 2.5 mm ferrule allow a loose fit for temporary testing. For example, by lightly inserting the ferrule of an ST into an FC coupler, a fast (but not always recommended) test can be made for continuity.

45. Cable termination and connector installation. Before the installation of connectors onto a fiber cable, a breakout kit may have to be installed. This procedure will not be necessary on breakout cables having 2 mm buffered fibers, but will be required on 250, 500, or 900 μm tight buffer cables. The break out kit consists of 2 mm buffer tubing over 900 μm inner tubing. The bare fibers are inserted into these buffer tubes to provide handling protection and strength when mounted onto connectors.

Installing a fiber connector onto a pigtail or unbuffered fiber is a widely varied process. The four most common ways of accomplishing this task are:

1. Epoxy glue with oven cure then polish
2. Hot melt preglued then polish
3. Cleave and crimp, no polish
4. Prepolished splice

The epoxy glue method is the oldest, and is still widely used today. This process involves filling the connector with a mixed two-part epoxy. The prepared and cleaned fiber is then inserted into the connector. After curing the epoxy in an oven for the proper time (10 to 40 minutes) the fiber is scribed and cleaved nearly flush with the end of the connector, and polished with a succession of finer and finer lapping papers. Typical polish papers start at 3 μm and go as fine as 0.3 μm grit.

The Hot Melt (trademark of 3M Co.) uses a preloaded connector. The connector is placed into an oven to soften the glue and allow insertion of the prepared fiber. After cooling, the scribe and polish process is the same as the previously described polish process.

Cleave and crimp connectors, on the other hand, do not need a polish procedure. The connector already has a polished ferrule tip and requires only the insertion of a properly cleaved fiber to butt against the internal fiber “stub.” Once in place, the fiber connector is crimped to hold the fiber in place.

Each mounting method has its advantages and disadvantages, varying from ease of installation to cost per connector to performance qualities.

46. Choosing a fiber connector. With all of the myriad selections of connector types, styles, and physical characteristics available on the market, choosing the specific connector for your job is often a mystifying task. One important criteria is connector

performance. When selecting a connector, comparisons of performance are generally based on the following criteria:

- Insertion loss: Usually 0.10 to 1.0 dB per connection.
- Return loss (back reflection, reflectance): Varies from -20 (air gap like a SMA) to -60 dB (the best APC angle polished connectors)
- Repeatability of connection: Usually specified at thousands of times.

Also, your choice of fiber connector may also depend upon such things as single-mode or multimode fiber, and the type of mounting.

The accessibility of the fiber to casual users may cause you to anticipate rough handling. In this case, gripping strength of the connector becomes important to avoid pull-outs by users. Gripping points of the connector may include the fiber itself, the primary plastic buffer coating (tight buffer), the loose tube buffer, the cable strength members (Kevlar), and/or the cable jacket itself.

Another additional reason for choosing a particular type of connector is the type of equipment already purchased or currently in use. If, for instance, you are adding to an existing system already equipped with ST connectors, one should continue to use ST connectors to ensure compatibility system-wide. If you are using previously purchased electronics with Biconic connectors installed, then that will be your choice, unless you wish to change all of the connections in the equipment.

47. Terminating single-mode fibers. Terminating single-mode cables generally uses a combination of connector installation and splicing. Since the single-mode connector has very fine tolerances, they are generally terminated in a manufacturing lab. (The critical factors are loss and reflectance.) In a laboratory setting, fiber insertion and physical contact polishing can be controlled precisely. Complete cable assemblies with connectors on both ends are made and tested, since testing a cable with two ends is easier than with bare fiber on one end.

In the field, the assemblies are cut in half and spliced onto the installed backbone cables. Although the splice adds some additional loss and cost, the overall method provides a higher yield and better connection at lower cost than trying to control the termination process in the field.

48. Breakout kits. Breakout kits are a simple box (into which a cable enters), fitted with semirigid tubes, through which the individual fibers exit. The tubes provide mechanical protection for the unprotected fibers, which will usually run from the breakout point to individual connectors or splices.

This procedure is not necessary on “breakout cables” having 2 mm buffered fibers, but will be required on 250, 500, or 900 μm tight buffer cables. The breakout kit consists of 2 mm buffer tubing over 900 μm inner tubing. The bare fibers are inserted into these buffer tubes to provide handling protection and strength when mounted onto connectors. These tubes are frequently referred to as *furcation tubing*.

49. Splices. The two basic categories of splices are *fusion* and *mechanical*. Generally speaking, splices offer a lower return loss, lower attenuation, and are physically stronger than connectors. Also, splices are usually less expensive than connectors (two connectors being required to equal one splice), they require less labor, constitute a smaller joint for

inclusion into splice closures, offer a better hermetic seal than connectors, and allow either individual or mass splicing.

The type of splice chosen is usually determined by:

Type of fiber. Most single-mode fiber is fusion-spliced because of its lower loss and better return loss performance. Multimode fiber, with its complicated core structure, does not always fusion splice easily, so mechanical splices can give equal performance at a lower overall cost. (Some experienced installers, however, regularly fusion-splice graded index fibers with good results.)

Attenuation including return loss. New fusion splicers give incredibly low loss when used properly, while a properly terminated connector can approach the loss of a mechanical splice.

Physical durability. The “welding” process used in the fusion splice gives higher strength and greater durability.

Ease of installation. A fully automated fusion splicer is very expensive, but makes the splicing a one-button process. Partly automated fusion splicers are less expensive, but require more effort to use. Mechanical splicing types vary, but are usually easier to use than connector kits.

Cost per splice. In the case of fusion splicing, the most common type of splicing for single-mode fiber in new work, the initial capital investment is generally much greater than the cost for mechanical splicing. A fusion splicing machine is a several thousand dollar investment. However, very low loss can be achieved (sometimes 0 dB), and fusion splices show almost no back reflection at all. An additional benefit of fusion splicing is that the mechanical tensile strength of the fiber remains near that of the original fiber (50 to 75,000 psi).

50. Fusion splicing. Fusion splicing uses an electric arc to ionize the space between prepared fibers to eliminate air, and to heat the fibers to proper temperature (2000°F). The fibers are then fed in as semiliquids, and meld together. The previously removed plastic coating is replaced with a plastic sleeve or other protective device. The perfect fusion splice results in a single fiber rather than two fibers having been joined. One drawback to fusion splicing is that it generally must be performed in a controlled environment, such as a splicing van or trailer, and should not be done in open spaces because of dust and other contamination.

Fusion splicing in manholes is prohibited because of the explosive gases which are frequently found in such locations, and because of the electric arc generated during this process.

Due to the “welding” process, it is sometimes necessary to modify the fusion parameters to suit particular types of fibers, especially if it is necessary to fuse two different fibers (fibers from two different manufacturers, or fibers with different core/cladding structures).

A fusion splicer is shown in Fig. 11.14.

51. Mechanical splicing. Mechanical splicing is quick and easy for restoration, its major use, and is sometimes used for new construction. It does not require a controlled environment other than a reasonable level of dust control. The strength of a mechanical splice is better than most connectors, although fusion splices are stronger. Back reflection and loss vary dramatically from one type of splice to another.

Equipment investment for specific splicing kits are far less expensive than for fusion splicers. Splices are either glued, crimped, or faced. Mechanical splices all must use some type of index matching gel or liquid which is subject to contamination and aging. Those splices which require adhesive glue can become outdated as the glue ages.



FIGURE 11.14 Fusion splicer. [Aurora]

Mechanical splices use either a V groove or tube type design to obtain fiber alignment. The V groove is probably the oldest and still most popular method especially for multifiber splicing of ribbon cable. This type of splice is either crimped or snapped to hold the fibers in place.

Tubular splices on the other hand may rely on glue or crimping to hold the fibers together, while a small tube inside which the fibers are inserted causes alignment to occur.

Faced type of splices are very much like miniaturized connectors using ferrules and a polishing process.

Completed splices, whether fusion or mechanical, are placed into splicing trays that are designed to accommodate the particular type of splice in use. Splicing trays then fit into splice organizers, and in turn into a splice closure.

A mechanical splice is shown in Fig. 11.15.

52. Hand tools and supplies. No job can be completed without the correct tools, and fiber splicing and connectorizing are no exception. Hand tools can be purchased as a prepackaged tool kit or on an individual basis as needed. At a minimum, to complete most fiber optic operations, the following will be needed:

Cleaning fluid and rags (or an approved cable cleaner).

Buffer tube cutter.

Reagent grade, isopropyl alcohol in nonspill bottle or presoaked pads.

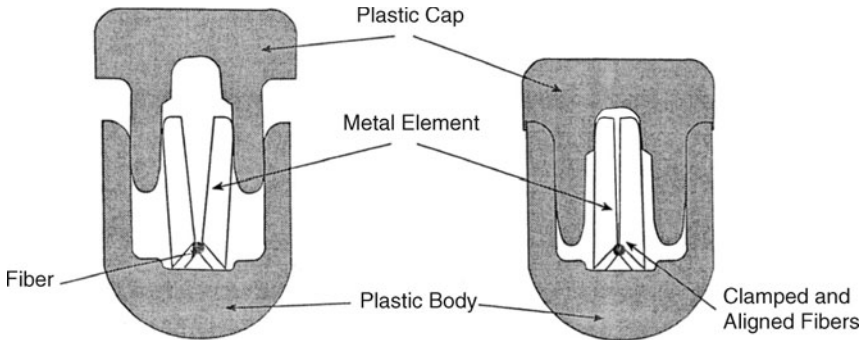


FIGURE 11.15 Mechanical splices. [3M Fiberlok]

Canned air.

Tape: masking and “Scotch” invisible.

Coating stripper

Cleaver or scribe.

Microscope or cleave checker.

Splicing method (fusion or mechanical) determines specific tooling needs.

Connectorization method determines specific tool kit (if required).

Fusion splicer (optional).

OTDR (optional, rentable).

Splicing van or trailer (nice to have an organized workplace, especially for outside plant work).

Power meter (for measuring optical power or loss).

LED or laser light source (to inject a test signal for loss).

Visible light source (for tracing cables).

Fiberoptic talkset to communicate over the fiber. Alternatives are walkie-talkies and cellular phones.

Termination kits (these may be made by purchasing tools individually rather than in a kit form). Sometimes the splicing or connectorization kits will contain too many small insignificant tools which you may already own. Once you determine the needed tools, you can purchase only those tools.

53. Fiber optic safety. Optical fibers are generally considered safe, due to the fact they they carry no electricity, and therefore cannot cause fires like electrical wiring. Nonetheless, fiber is not entirely safe, and does pose certain risks to installers.

The first, though less serious, type of fiber danger is due to the light the fiber transmits; in particular, light put out by the lasers that drive some of these systems (CATV, Dense Wavelength Division Multiplexing). The various types of light sources used by common fiber systems was shown in Sec. 31, along with the wavelength of light used and power level. This table shows that while the power levels of all these systems are relatively low, the highest go up to about 10 milliwatts. While this may not sound like a lot of wattage (especially compared to several-hundred watt lamps), bear in mind that all of this light may be pumped through a fiber that is only 9 millionths of a meter (μm) in diameter. Even at these low

levels, that can be a fairly high level of watts per square centimeter. Remember the trick of starting a fire with a magnifying glass, and bear in mind that light is able to do damage.

You will also notice from this that almost all of these wavelengths are at 800 nm (nanometers, or billionths of meters) or higher. These are all infrared light, which our eyes do not see. Hazardous situations can arise when untrained people pick up a live fiber, and look directly into it. They see no light, and therefore assume no danger. In these situations, damage can be done to an unsuspecting person's retina. This is especially hazardous when inspecting fiber ends with a microscope, since the microscope will focus nearly all of the light directly into the eye. Serious damage can result from this.

Do not, however, confuse looking into a live fiber with performing continuity checks. One of the better fiber testing tools is called a *visual tracer*. Essentially, a visual tracer is a visible light that you shine down the fiber. You then use your eye to trace the fiber through its course to its end.

The tracer itself can be a flashlight, a specially modified flashlight, or even a microscope that will hold the fiber in place steadily, and couple an adequate amount of power into the fiber. The better tracers are special test sources that use a bright red LED source. The power levels of all visual tracers are too low to cause eye damage, so you do not have to be concerned with them. Besides, they are visible, and you can tell that you are looking at a light source.

For single-mode cables, a more powerful tool is sometimes used, called a *visual fault locator* (VFL). These use red lasers with enough power to actually show breaks in the fiber through the jacket of the fiber. They are stronger than simple fiber tracers, but still not powerful enough to do bodily damage.

There is a special film card that can be used to identify live fibers by eye. This small card converts the infrared light to visual light. By using it, you can tell quickly and easily whether a fiber is live or not.

All this being said, the odds of going blind by looking into the broken end of an optical fiber are virtually nil. It is possible for someone to be injured by mishandling optical fibers, but only under certain circumstances. Those circumstances are usually the following:

1. The light source must be high-powered. Only the more powerful lasers are strong enough to cause injury.
2. The beam of light exiting the fiber must be narrow. Do you remember the old trick of starting a fire with sunlight and a magnifying glass? Just as in that case, the light from a fiber must be very tightly focused to cause harm. This is why broken fibers do not cause harm. Broken ends of glass fiber are erratic, and scatter the light that passes through them. This light is nowhere near focused enough to cause damage to the eye.

All of this is not to say that looking into the end of a properly polished fiber cannot be a problem. Since a polished fiber end will not diffuse the light that flows through it, the potential for injury with such fibers exists.

A far more serious safety concern is the fibers themselves. Fibers are pieces of glass. And like all glass, they can cut and injure us.

Because of this, handling fiber requires considerable care. First of all, you must be very careful when handling *open* fibers, that is, fibers that are not contained in a cable. (Modern optical fiber cables are very safe, and pose no danger to the installer. It is when the cables are opened up that hazards like these start.) If you were to accidentally jab yourself with one of these open fibers, you could easily end up with a painful sliver. But what is worse is that this sliver may not be visible! Remember that these slivers are made of transparent glass, and can be very difficult to see.

Jabbing yourself with a fiber is not, however, the biggest glass hazard. The really dangerous situation is when fibers are stripped, trimmed, and cut. These operations result in short, nearly microscopic pieces of glass lying around a work area. These are short, thin,

invisible needles. If they are left lying around in a busy work area, it is almost inevitable that someone will end up touching or handling them. As sharp and thin as these glass shards are, they will easily penetrate the skin. And unlike a wood sliver, these glass slivers will not degrade inside the skin.

These cut pieces of fiber are dangerous. In order to avoid this hazard, a technician working with fibers should make generous use of masking tape (or any other type of tape) to catch the fiber pieces. Some technicians wrap the tape around a few fingers, sticky side out. This catches the fibers as soon as they are cut. Plenty of sticky side out tape should be kept at the work area, and the entire area should be blotted frequently with tape to pick up stray pieces. Also, this tape must be handled carefully. When the pickup operation is complete, the tape should be folded upon itself and carefully disposed of. This tape should never be left lying open, or wadded up and thrown on the floor. Remember, fibers are insidious, since they are very difficult to see, especially when you are not expecting them to be present. If you sit on some of these cut pieces, you won't forget ever again.

Pieces of fiber should be placed in bottles with screw lids (or other type of secure container) as soon as they are trimmed from cables, typically during the terminating procedure.

As mentioned earlier, one of fiber's better-known characteristics is that it carries no electricity, and is therefore not a fire hazard. That does not, however, mean that optical fiber cables cannot be a fire hazard in a building.

Optical cables must be installed according to their fire safety characteristics, if they are to result in a safe installation, as covered in Sec. 40. In addition, proper fire stops must be used when they (like any cable) pass through any fire-rated partition, such that the required fire separation of the partition is maintained. In addition, any abandoned optical fiber cables (defined as not terminated at equipment other than a connector and not identified for future use with a tag) must be removed. The tag must have sufficient durability for the use at its location.

Regardless of the overall safety of optical fiber, optical cable installations carry many of the same risks as copper cables.

Installers need to pay special attention to long outdoor runs of cables with metal components. (Many outdoor cables have metal strength members or other metal components.) These long pieces of metal can have significant voltages induced into them from lightning strikes in the area. Contact with these pieces can be dangerous. While these metal cable components are required to be grounded in all buildings, this may not always be done out of doors. You should ground any metal cable components before handling them.

Working near power conductors is often required in fiber optic installations. This, as always, is a serious hazard. There are three types of optical cables (see Sec. 40 for NEC definitions of cable types), each with their own system separation rules, as follows:

- a. Composite optical fiber cables* containing nonpower-limited control or power circuits are only permitted to be used where the optical fiber and the nonpower-limited components are functionally associated. However, once a composite cable qualifies for use under this criterion, it may be used in the same raceway or cable tray as nonpower-limited wiring conductors, and these cables may enter other wiring enclosures for termination or other purposes. In industrial occupancies only, with qualified maintenance and supervision, composite cables are even permitted with the power conductor operating at medium voltage (over 600V).
- b. Conductive optical fiber cables* are not permitted in the same raceway or cable tray as nonpower-limited wiring of any kind.
- c. Nonconductive optical fiber cables* are permitted within a common raceway or the same cable tray as nonpower-limited wiring of any kind operating at 600V or less. If the nonconductive fiber cables are functionally associated with the nonpower-limited wiring, the cables are permitted in nonpower-limited wiring enclosures. Nonconductive optical fiber cables are also permitted in common wiring enclosures where installed in

a factory- or field-assembled control center. In industrial occupancies only, with qualified maintenance and supervision, nonconductive optical fiber cables are also permitted with the power conductors operating at medium voltage (over 600V).

- d. With power-limited circuits.** Optical fiber cables are permitted without limitation as to being either conductive or nonconductive, and are permitted to be part of a composite cable with, and to run in the same wiring raceways, cable trays, and other enclosures with copper wiring that is part of a power-limited system. Specifically, optical fiber cabling is permitted with a Class 2 or Class 3 system per NEC Article 725 (See Div. 9 Sec. 481 to 489.), or a power-limited fire alarm system per NEC Article 760, or a communications system as covered in NEC Article 800, or a CATV system covered in NEC Article 820, or a network-powered broadband communications system having a low-power source as defined by the applicable parameters in NEC Table 830.15.

Where these requirements specify a separation between optical fiber cabling of any type and electrical power or control circuits of any type, those separation requirements can be met by providing a permanent or listed barrier between the systems. This can be accomplished in cable tray or surface raceway systems by using barriers compatible with the tray or surface raceway, and in an enclosure by either arranging a fixed and grounded permanent barrier or by enclosing the optical fiber cables in a grounded raceway as required. For example, flexible metal conduit is often used within a nonpower-limited enclosure to extend either the nonpower-limited source wiring or the power-limited or optical fiber cabling from the entry point to a termination point where system separation no longer needed to be maintained.

54. Testing. Testing fiber optic components and systems requires making several basic measurements. The most common measurement parameters are shown in the following table. Optical power, required for measuring source power, receiver power and loss or attenuation, is the most important parameter, and is required for almost every optical link. Backscatter and wavelength measurements are the next most important, and bandwidth or dispersion are very rarely performed in the field. Measurement or inspection of geometrical parameters of fiber are essential for fiber manufacturers only.

TABLE 11.5 Fiber Optic Testing Requirements

Test parameter	Instrument
Optical Power (Source Output, Receiver Signal Level)	Fiber Optic Power Meter
Attenuation or Loss of Fibers, Cables, and Connectors	FO Power Meter and Source, Test Kit or OLTS (optical loss test set)
Source Wavelength	FO Spectrum Analyzer
Backscatter (Loss, Length, Fault Location)	Optical Time Domain Reflectometer (OTDR)
Fault Location	OTDR, Visual Cable Fault Locator
Bandwidth/Dispersion (Modal & Chromatic)	Bandwidth Tester or Simulation Software

55. Power meter testing. Fiber optic power meters measure the average optical power emanating from an optical fiber and are used for measuring power levels and, when used with a compatible source, for loss testing. They typically consist of a solid state detector, signal conditioning circuitry, and a digital display of power. To interface to the large variety of fiber optic connectors in use, some form of removable connector adapter is usually provided.

Power meters are calibrated to read in milliwatts, microwatts and/or *dBm* (this references the decibel to one milliwatt; thus a *dBm* reading refers to how many dBs the power level is from one milliwatt). Some meters offer a relative dB scale also, useful for laboratory loss measurements.

Although most fiber optic power and loss measurements are made in the range of 0 *dBm* to -50 *dBm*, some power meters offer much wider ranges. For testing analog CATV systems or fiber amplifiers, special meters with extended high power ranges are used. Optical power meters have a typical measurement uncertainty of $\pm 5\%$.

56. Visual cable tracers and fault locators. The most common fault with fiber optic systems is poor connections. Since the light used in systems is not visible, visual inspections will not tell you whether or not the transmitter is operating. This problem can be overcome by injecting the light from a visible source, such as a LED or incandescent light bulb. By doing so, you can visually trace the fiber from transmitter to receiver, and verify that the light is traveling the correct course. The test instruments that are used to inject visible light are called *visual fault locators*.

If a powerful enough visible light, such as a HeNe (Helium-Neon) or visible diode laser is injected into the fiber, high loss points can be made visible. This method will work on buffered fiber and even jacketed single fiber cable if the jacket is not opaque to the visible light. The yellow jacket of single-mode fiber and the orange of multimode fiber will usually pass the visible light. Most other cable colors, especially black and gray, will not work with this technique, nor will most multifiber cables. However, many cable breaks, macrobending losses caused by kinks in the fiber, bad splices, and the like can be detected visually.

Since the loss in the fiber is quite high at visible wavelengths, on the order of 9 to 15 *dB/km*, this instrument has a short range, typically 3 to 5 km, which is more than enough for virtually all indoor installations.

57. Microscopes. Generally the first test performed once the fibers are pulled into place is a visual inspection with a microscope. This is done when preparing fiber ends for termination.

The microscopes used for testing fibers have stages which are modified to hold the fiber or connector in the field of view. Fiber optic inspection microscopes vary in magnification from 30 to 800 power, with 30 to 100 power being the most widely used range. Cleaved fibers are usually viewed from the side, to see breakover and lip. Connectors are viewed end-on, or at a small angle, to find polishing defects such as scratches.

Photos showing fiber ends in various stages of polishing are shown in Fig. 11.16. A well-made connector will have a smooth, polished, scratch free finish, and the fiber will not show any signs of cracks or pistoning (where the fiber is either protruding from the end of the ferrule or pulling back into it).

The proper magnification for viewing connectors is generally accepted to be 30 to 100 power. Lower magnification, typical with a jeweler's loupe or pocket magnifier, will not provide adequate resolution for judging the finish on the connector. Too high a magnification tends to make small, ignorable faults look worse than they really are. A better solution is to use medium magnification, but inspect the connector three ways:

1. By viewing directly at the end of the polished surface with side lighting
2. By viewing directly with side lighting and light transmitted through the core
3. By viewing at an angle with lighting from the opposite angle

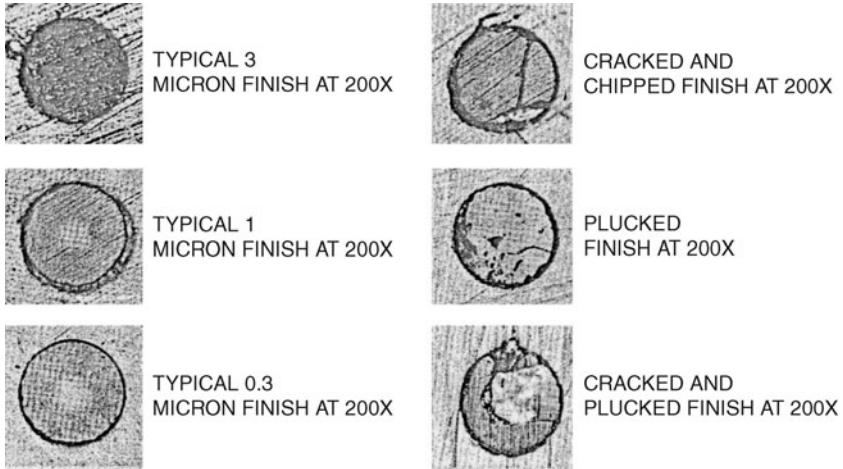


FIGURE 11.16 Fiber ends at various stages of polishing. (Courtesy of Buehler)

Viewing directly with side lighting allows determining if the ferrule hole is of the proper size, the fiber is centered in the hole, and a proper amount of adhesive has been applied. Only the largest scratches will be visible this way, however. Adding light transmitted through the core will make cracks in the end of the fiber, caused by pressure or heat during the polish process, visible.

Viewing the end of the connector at an angle, while lighting it from the opposite side at approximately the same angle, will allow the best inspection for the quality of polish and possible scratches. The shadowing effect of angular viewing enhances the contrast of scratches against the mirror smooth polished surface of the glass.

One needs to be careful in inspecting connectors, however. The tendency is to be overly critical, especially at high magnification. Only defects over the fiber core are a problem. Chipping of the glass around the outside of the cladding is not unusual and will have no effect on the ability of the connector to couple light in the core. Likewise, scratches only on the cladding will not cause any loss problems.

58. Continuity testing. Continuity testing is the most fundamental fiber optic test. It is usually performed when the cable is delivered to the job site (and certainly before installation) to ensure that no damage has been done to the cable during shipment to the work site.

This testing is commonly done with a visible light source, which can be an incandescent lamp, HeNe laser at 633 nm or a LED or diode laser at 650 nm, a wavelength (that is, color) which can be seen by the eye. HeNe laser instruments are usually tuned to an output power level of just less than 1 mW, making them Class II lasers which do not have enough power to harm the eye, but do have enough power to be easily seen over about 4 km of fiber, and to even find fiber microbends or breaks by viewing the light shining from the break through the yellow or orange jacket used on most single fiber cables. In most cases, a high quality flashlight, shined directly into a good fiber end, works quite well.

59. Insertion loss testing. The most basic (and most commonly performed) fiber optic test is called an *Insertion Loss* test. Insertion loss is the loss caused by the insertion of a component such as a splice or connector in an optical fiber. Figures 11.17 and 11.18 display the basic method of insertion loss testing. These drawings show a single cable being tested. But in the field each fiber, from one end of the system to the other, is commonly tested this way. Since the power meter test set consists of two parts (the light source and the meter), one piece can be used at one end of the system, and another at the far end. The process usually includes the following parts:

1. The test set is referenced. This is done by connecting the two parts with a known good jumper, and setting the zero level on the meter.
2. The source is taken to one end of the links, the meter to the other.
3. Some type of communication link is established between the two ends (walkie-talkies, cell phones, talk sets, etc.).

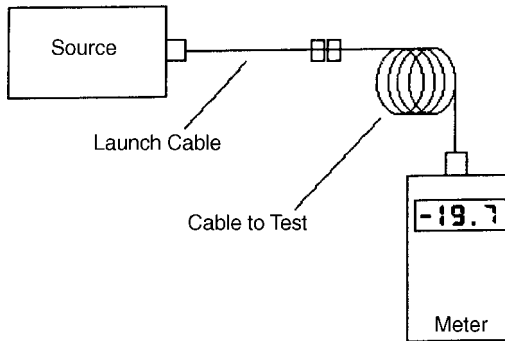


FIGURE 11.17 Single-end insertion loss test.

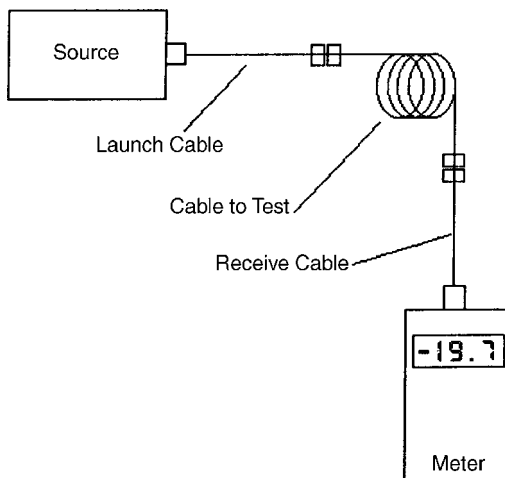


FIGURE 11.18 Double-end insertion loss test.

4. Each fiber is tested, one after another, and the results are carefully recorded.
5. When required, each fiber segment of fiber (for example, from one patch panel to another) is tested separately.
6. Some systems may be tested in either directions. (Source at A, meter at B or Source at B, meter at A.)

Virtually all optical fiber systems are tested for end-to-end insertion loss to confirm that the required signal will be permitted to pass.

Loss is typically measured at 850 and 1300 nm wavelengths for multimode links. Single-mode fiber is always tested at 1300 nm, and may also be tested at 1550 nm.

60. Testing the installed fiber system. To thoroughly test the cable system, one needs to test it three times: before installation, each installed segment, and complete end-to-end loss.

One should test the cable on the reel for continuity before installing it, to insure no damage was done in shipment from the manufacturer to the job site. Since the cost of installation usually is high, often higher than the cost of materials, it only makes sense to ensure that one does not install bad cable. It is generally sufficient to just test continuity, since most fiber is installed without connectors and then terminated in place, and connectors are the most likely problem to be uncovered by testing for loss. After installation and termination, each segment of the cable plant should be tested individually as it is installed, to ensure each connector and cable is good. Finally, each end-to-end run (from equipment placed on the cable plant to equipment) should be tested as a final check.

For multimode fibers, testing is now usually done at both 850 and 1300 nm wavelengths (colors) using LED sources. This will prove the performance of the cable for every datacom system, and will meet the requirements of all network vendors. For single-mode fiber cables, testing is usually done at 1300 nm, but 1550 is sometimes required also. The 1550 nm testing will show that the cable can support wavelength division multiplexing (WDM) at 1300 and 1550 nm for future service expansion.

If cable system end-to-end loss exceeds total allowable loss, the best solution is to retest each segment of the cable plant separately, checking suspect cables each way, since the most likely problem is a single bad connector or splice. Bad connectors must then be repolished or replaced to bring the loss within acceptable ranges.

61. Optical time domain reflectometers. The optical time domain reflectometer (OTDR) is one of the most powerful types of optical fiber testers. It uses the phenomena of backscattered light to analyze fibers, find faults, and optimize splices. Any time light is sent through a fiber, a small amount of light is scattered backward to the source. If there is some type of fault or obstruction in the fiber, an unusually high amount of light will be scattered back. The OTDR operates by sending into the fiber a high powered pulse and then measuring the light scattered back toward the instrument.

If one assumes that the average amount of backscatter (called the *backscatter coefficient*) is constant, the OTDR can be used to measure loss as well as locate fiber breaks, splices, and connectors. In addition, the OTDR gives a graphic display of the status of the fiber being tested. And it offers another major advantage over the source/power meter in that it requires access to only one end of the fiber.

OTDR measurement is heavily dependent on the backscatter coefficient, which is a function of fiber scattering characteristics, core diameter, and numerical aperture. OTDRs must also be matched to the fibers being tested in both wavelength and fiber core diameter

to provide accurate measurements. Thus many OTDRs have modular sources to allow substituting a proper source for the application.

While most OTDR applications involve finding faults in installed cables or checking splices, they are also very useful in inspecting fibers for manufacturing faults.

If a fiber has a splice or connector, an OTDR's signal will be diminished as the pulse passes it, so the OTDR sees a reduction in power, indicating the light loss of the joined fibers. If the splice or connector reflects light, the OTDR will show the reflection as a spike above the backscattered signal. The OTDR can be calibrated to use this spike to measure optical return loss.

The end of the fiber will show as a deterioration of the backscatter signal into noise, if it is within the dynamic range of the OTDR. If the end of the fiber is cleaved or polished, one will also see a spike above the backscatter trace. This allows one to measure the total length of the fiber being tested.

Figure 11.19 shows a typical OTDR trace.

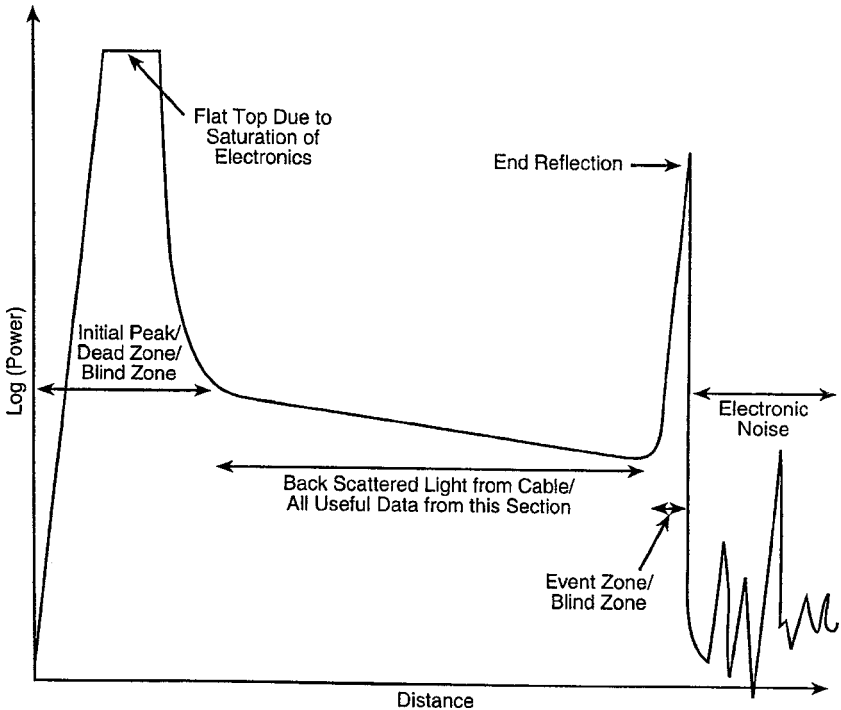


FIGURE 11.19 Optical time domain reflectometer optical fiber ODTR trace test.

62. The limitations of OTDR use. With the OTDR, one can measure loss and distance. To use them effectively, it is necessary to understand their measurement limitations. The OTDR's distance resolution is limited by the transmitted pulse width. As the OTDR sends out its pulse, crosstalk in the coupler inside the instrument and reflections from the first connector will saturate the receiver. The receiver will take some time to recover, causing a

nonlinearity in the baseline of the display. It may take the time equivalent to 100 meters before the receiver recovers. It is common to use a long fiber cable called a *pulse suppressor* between the OTDR and the cables being tested to allow the receiver to recover completely.

The OTDR also is limited by the pulse width in its ability to resolve two closely spaced features. Long distance OTDRs may have a minimum resolution of a few hundred meters, while short range OTDRs can resolve features several meters apart.

When measuring distance, the OTDR has two major sources of error not associated with the instrument itself: the velocity of the light pulse in the fiber, and the amount of fiber in the cable. The velocity of the pulse down the fiber is a function of the average index of refraction of the glass. While this is fairly constant for most fiber types, it can vary by a few percent. When making cable, it is necessary to have some excess fiber in the cable, to allow the cable to stretch when pulled without stressing the fiber. This excess fiber is usually 1 to 2%. Since the OTDR measures the length of the fiber, not the cable, it is necessary to subtract 1 to 2% from the measured length to get the likely cable length. This is very important if one is using the OTDR to find a fault in an installed cable, to keep from looking too far away from the OTDR to find the problem. This variable adds up to 10 to 20 meters per kilometer, therefore it is not ignorable.

Accurate OTDR attenuation measurements depend on having a constant backscatter coefficient. Unfortunately, this is often not the case. Fibers which have tapers in core size are common, or variations in diameter are a result of variations in pulling speed as the fiber is being made. A small change in diameter (1%) causes a larger change in cross sectional area which directly affects the scattering coefficient, and can cause a large change in attenuation (on the order of 0.1 dB). Thus fiber attenuation measured by OTDRs may not be uniform along the fiber, and can produce significantly different losses in opposite directions.

The first indication of OTDR problems for most users occurs when looking at a splice and a “gain” is seen at the splice. Since passive fibers and splices cannot create light, another phenomenon is obviously the cause. A “gainer” is an indication of the difference of backscatter coefficients in the two fibers being spliced.

If an OTDR is used to measure the loss of a splice and the two fibers are identical, the loss will be correct, since the scattering coefficient is the same for both fibers. This is exactly what you see when breaking and splicing the same fiber, the normal way OTDRs are demonstrated.

If the receiving fiber has a lower backscatter coefficient than the fiber before the splice, the amount of light sent back to the OTDR will decrease after the splice, causing the OTDR to indicate a larger splice loss than actual.

If one looks at this splice in the opposite direction, the effect will be reversed. The amount of backscattered light will be larger after the splice and the loss shown on the OTDR will be less than the actual splice loss. If this increase is larger than the loss in the splice, the OTDR will show a gain at the splice, an obvious error. As many as one-third of all splices will show a gain in one direction. The usual recommendation is to test with the OTDR in both directions and average the reading, which has been shown to give measurements accurate to about 0.01 dB.

63. Noncommunication applications of optical fiber. The optical fiber has first been devised as a simple means to carry light from one point to another. A patent registered by William Wheeler in 1881 describes a home lighting system using light conducting tubes. A more recent patent describes a bundle of optical fibers used to carry images. Today, light guide fibers are used in every technical and scientific sector, including surgery, industry, fundamental research, avionics, automotive, and consumer.

The most common of these noncommunication applications are the following:

Light guides

Medical lasers

Public lighting and displays

Home lamps and Christmas tree lighting

Transmission of images

Medical imaging (endoscopy, etc.)

Sensors

Passage detectors for objects or people

Gyroscopes

Pressure sensors

Audio detectors

Fibrosopes are increasingly used in medicine and surgery, both in the detection and the eradication of abnormal formations. Fiber gyroscopes are found in modern aircraft. Optical sensors are legion, and are used in all industries. Lighting uses for optical fibers are increasing steadily. Image guide (faceplate), sensor, and lighting/indication are three major applications of fibers as light guides.

DIVISION 12

WIRING AND DESIGN TABLES

TABLE No.	TABLE TITLE	
1	Standard Sizes of Lamps for General Illumination, in Watts	12.3
2 to 6	Demand Factors and Data for Determining Minimum Loads	12.4
7 to 10	Full-Load Currents of Motors	12.10
11	Capacitor Ratings for Use with Three-Phase 60-Hz Motors	12.13
12 to 23	Ampacities of Conductors	12.14
24	Ampacity of Flexible Cords and Cables	12.28
25	Ampacity of Fixture Wires	12.30
26	Ampacity of Aluminum Cable, Steel-Reinforced	12.31
27	Ampacity of Parkway Cables Buried Directly in Ground	12.31
28 to 32	Notes to NEC Tubular Raceway and Wire Dimension Tables	12.32
33	Wire Bending Space, Entries Adjacent to Terminals	12.33
34	Wire Bending Space, Entries Opposite to Terminals	12.34
35	Enclosed Switch Wiring Space	12.35
37	Elevation of Unguarded Parts above Working Space	12.36
38	Ordinary Ratings of Overload Protective Devices, in Amperes	12.37
39	Nonrenewable Cartridge Fuses	12.39
40 to 41	Ratings and Number of Overload Protective Devices	12.44
42	Motor Code Letters and Locked-Rotor Kilovolt-Amperes	12.46
43	Maximum Ratings for Motor Branch-Circuit Protection	12.47
44	Conversion Table of Single-Phase Locked Rotor Currents	12.47
45	Conversion Table of Polyphase Design B, C, D, and E Maximum Locked-Rotor Currents	12.48
46	Horsepower Ratings of Fused Switches	12.49

47	Minimum Branch-Circuit Sizes for Motors	12.50
48	Maximum Allowable Voltage Drop	12.51
49	Graph for Computing Copper-Conductor Sizes According to Voltage Drop	12.53
50 to 57	Data for Computing Voltage Drop	12.54
58 to 64	Metric Practice	12.58

12.3

[illegible]

2. Demand Loads for Household Electric Ranges, Wall-Mounted Ovens, Counter-Mounted Cooking Units, and Other Household Cooking Appliances over 1³/₄-kW Rating*

(Table 220.55, 2008 NEC)

Column C to be used in all cases except as otherwise permitted in Note 3.

Number of appliances	Demand factors (see Note 3), percent		Maximum demand, kW (see Notes)
	Col. A (less than 3 ¹ / ₂ kW rating)	Col. B (3 ¹ / ₂ - to 8 ³ / ₄ -kW rating)	Col. C (not over 12 kW rating)
1	80	80	8
2	75	65	12
3	70	55	14
4	66	50	17
5	62	45	20
6	59	43	21
7	56	40	22
8	53	36	23
9	51	35	24
10	49	34	25
11	47	32	26
12	45	32	27
13	43	32	28
14	41	32	29
15	40	32	30
16	39	28	31
17	38	28	32
18	37	28	33
19	36	28	34
20	35	28	35
21	34	26	36
22	33	26	37
23	32	26	38
24	31	26	39
25	30	26	40
26–30	30	24	{ 15 kW plus 1 kW for each range }
31–40	30	22	
41–50	30	20	{ 25 kW plus ³ / ₄ kW for each range }
51–60	30	18	
61 and over	30	16	

*Reprinted with permission from NFPA 70-2008 National Electrical Code®. Copyright © 2007, National Fire Protection Association, Quincy, Massachusetts, 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

NOTE 1 *Over-12- to 27-kW ranges all of the same rating.* For ranges individually rated more than 12 kW but not more than 27 kW, the maximum demand in col. C shall be increased by 5 percent for each additional kilowatt of rating or major fraction thereof by which the rating of individual ranges exceeds 12 kW.

NOTE 2 *Over-8³/₄- to 27-kW ranges of unequal ratings.* For ranges individually rated more than 8³/₄ kW and of different ratings but none exceeding 27 kW, an average value of rating shall be calculated by adding together the ratings of all ranges to obtain the total connected load (using 12 kW for any range rated less than 12 kW) and dividing by the total number of ranges. Then the maximum demand in col. C shall be increased by 5 percent for each kilowatt or major fraction thereof by which this average value exceeds 12 kW.

NOTE 3 *Over 1³/₄ kW through 8³/₄ kW.* In lieu of the method provided in col. C, it shall be permissible to add the nameplate ratings of all household cooking appliances rated more than 1³/₄ kW but not more than 8³/₄ kW and to multiply the sum by the demand factors specified in col. A or B for the given number of appliances. Where the rating of cooking appliances falls under both Column A and Column B, the demand factors for each column shall be applied to the appliances for that column, and the results added together.

NOTE 4 *Branch-circuit load.* It shall be permissible to compute the branch-circuit load for one range in accordance with Table 220.55. The branch-circuit load for one wall-mounted oven or one counter-mounted cooking unit shall be the nameplate rating of the appliance. The branch-circuit load for a counter-mounted cooking unit and not more than two wall-mounted ovens, all supplied from a single branch circuit and located in the same room, shall be computed by adding the nameplate rating of the individual appliances and treating this total as equivalent to one range.

NOTE 5 This table also applies to household cooking appliances rated over 1³/₄ kW and used in instructional programs.

3. Demand Factors for Household Electric Clothes Dryers^a

(Table 220.54, 2008 NEC)

Number of dryers	Demand factors, percent
1	100
2	100
3	100
4	100
5	80
6	70
7	65
8	60
9	55
10	50
11	47
12–23	47% minus 1% for each dryer exceeding 11
24–42	35% minus 0.5% for each dryer exceeding 23
43 and over	25%

^aReprinted with permission from NFPA 70-2008, National Electrical Code®, Copyright © 2007, National Fire Protection Association, Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

4. Demand Factors for General Lighting Loads^a

(Table 220.12, 2008 NEC)

Type of occupancy	Unit load volt-amperes per square meter	Unit load per Ft ² , volt-amperes
Armories and auditoriums	11	1
Banks	39 ^c	3 1/2 ^c
Barbershops and beauty parlors	33	3
Churches	11	1
Clubs	22	2
Courtrooms	22	2
Dwelling units ^b	33	3
Garages, Commercial (storage)	6	1/2
Hospitals	22	2
Hotels and motels, including apartment houses without provisions for cooking by tenants ^b	22	
Industrial commercial (loft) buildings	22	2
Lodge rooms	17	1 1/2
Office buildings	39	3 1/2 ^b
Restaurants	22	2
Schools	33	3
Stores	33	3
Warehouses (storage)	3	1/4
In any of the above occupancies except one-family dwellings and individual dwelling units of multifamily dwellings:		
Assembly halls and auditoriums	11	1
Halls, corridors, and closets	6	1/2
Storage spaces	3	1/4

^aReprinted with permission from NFPA 70-2008, National Electrical Code®, Copyright © 2007, National Fire Protection Association, Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

^bSee 220.14(J)

^cSee 220.14(K)

5. Data for determining National Electrical Code minimum allowable lighting and appliance loads: calculation of feeder loads. The computed load of a feeder shall be not less than the sum of all branch-circuit loads supplied by the feeder, subject to the following provisions:

- 1. **GENERAL LIGHTING** The demand factors listed in Table A shall apply to that portion of the total branch-circuit load computed for general illumination. They shall not be applied in determining the number of branch circuits for general illumination. See Pars. 7 and 8.

A. Lighting-Load Feeder Demand Factors

Type of occupancy	Portion of lighting load to which demand factor applies (volt-amperes)	Demand factor, percent
Dwelling units	First 3000 or less at	100
	From 3001 to 120,000 at	35
	Remainder over 120,000 at	25
Hospitals ^a	First 50,000 or less at	40
	Remainder over 50,000 at	20
Hotels and motels including apartment houses without provision for cooking by tenants ^a	First 20,000 or less at	50
	From 20,001 to 100,000 at	40
	Remainder over 100,000 at	30
Warehouses (storage)	First 12,500 or less at	100
	Remainder over 12,500 at	50
All others	Total volt-amperes	100

^aThe demand factors of this table shall not apply to the computed load of feeders or services to areas in hospitals, hotels, and motels where the entire lighting is likely to be used at one time, as in operating rooms, ballrooms, or dining rooms.

These demand factors are based on minimum load conditions and 100 percent power factor and in specific instances may not provide sufficient capacity for the installation contemplated. In view of the trend toward higher-intensity lighting systems and increased loads because of the more general use of fixed and portable appliances, each installation should be considered with regard to the load likely to be imposed and the capacity increased to ensure safe operation. When electric discharge lighting systems are to be installed, a high-power-factor type should be used; otherwise the conductor capacity may need to be increased.

- 2. **SHOW-WINDOW LIGHTING** For show-window lighting a load of not less than 600 volt-amperes/linear meter or 200 volt-amperes/linear foot shall be included for each linear foot of show window, measured horizontally along its base.
- 3. **TRACK LIGHTING** For track lighting in other than dwelling units or guest suites of hotels and motels, an additional load of 150 volt-amperes shall be included for every 600 mm (2 ft) of track or fraction thereof. Where multicircuit track is installed, the load shall be considered to be divided equally between track circuits.
- 4. **MOTORS** For motors, a load computed according to the provisions of Secs. 6 to 13 shall be included.
- 5. **NEUTRAL FEEDER LOAD** The neutral feeder or service load shall be the maximum imbalance of the load determined by NEC Article 220 and as summarized Sec. 4 and this section. The maximum unbalanced load shall be the maximum net calculated load

between the neutral and any one ungrounded conductor, except that the load thus obtained shall be multiplied by 140 percent for three-wire two-phase or five-wire two-phase systems. For a feeder or service supplying household electric ranges, wall-mounted ovens, and counter-mounted cooking units, and electric dryers, the maximum unbalanced load shall be considered to be 70 percent of the load on the ungrounded conductors, as determined in accordance with Table 220.55 for ranges and Table 220.54 for dryers. For three-wire dc or single-phase ac, four-wire three-phase, three-wire two-phase, or five-wire two-phase systems, a further demand factor of 70 percent may be applied to that portion of the unbalanced load in excess of 200 A. There shall be no reduction of the neutral capacity for that portion of the load which consists of nonlinear loads supplied from a 4-wire, wye-connected, 3-phase system nor the grounded conductor of a 3-wire circuit consisting of two phase wires and the neutral of a 4-wire, 3-phase, wye-connected system.

- 6. FIXED ELECTRICAL SPACE HEATING** The computed load of a feeder supplying fixed electrical space-heating equipment shall be 100 percent of the total connected load on all branch circuits.

Exception. Where reduced loading of the conductors results from units operating on duty cycle, intermittently, or from all units not operating at one time, the authority enforcing the Code may grant permission for feeder or service conductors to be of a capacity less than 100 percent, provided the conductors are of sufficient capacity for the load so determined.

- 7. NONCOINCIDENT LOAD** In adding the branch-circuit loads to determine the feeder or service load, the smaller of two noncoincident loads may be omitted from the total if it is unlikely that both loads will be served simultaneously.
- 8. SMALL APPLIANCES** The computed branch-circuit load for receptacle outlets in other than dwelling occupancies, for which the allowance is not more than 180 VA per single or multiple receptacle mounted on a single yoke, may be included with the general-lighting load and subject to the demand factors in Par. 1, or may be computed at 100% for the first 10 kVA and the remainder at 50% demand factor.
- 9. KITCHEN EQUIPMENT** It is permitted to calculate the load for commercial electric cooking equipment, dishwasher booster heaters, water heaters, and other kitchen equipment in accordance with the following table, with the proviso that in no case shall the calculated load be less than the sum of the largest two kitchen equipment loads: (Table 220.56, 2008 NEC)^a

Number of units of equipment	Demand factors, percent
1	100
2	100
3	90
4	80
5	70
6 and over	65

^aReprinted with permission from NFPA 70-2008, National Electrical Code®, Copyright © 2007, National Fire Protection Association, Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

DWELLING UNITS A dwelling unit is defined as one or more rooms for the use of one or more persons as a housekeeping unit with complete and independent living facilities, including permanent provisions for living, sleeping, cooking, and sanitation. The requirements in Pars. 10 to 13 apply to dwelling-type occupancies and are supplemental to Pars. 1 to 9. For example, where a dwelling unit has both, electrically powered heat and air conditioning, the smaller of the two loads may be omitted under the noncoincident load principle in Par. 7 above.

10. SMALL APPLIANCES

- a. Dwelling units.* In dwelling units a feeder load of not less than 1500 VA for each two-wire circuit shall be included for small appliances (portable appliances supplied from receptacles of 15- or 20-A rating) in pantry and breakfast room, dining room, and kitchen. Where the load is subdivided through two or more feeders, the computed load for each shall include not less than 1500 VA for each two-wire circuit for small appliances. These loads may be included with the general-lighting load and subject to the demand factors in Par. 1. The 15-A individual branch circuit for refrigeration equipment that is permitted, but not required under the provisions of NEC 210.52(B)(1) Exception No. 2, need not be included as an additional small-appliance branch circuit if it is installed.
- b. Laundry circuit.* A feeder load of not less than 1500 VA shall be included for each two-wire laundry circuit. This load may be included with the general-lighting load and subject to the demand factors in Par. 1.

11. ELECTRIC RANGES The feeder load for household electric ranges and other cooking appliances, individually rated more than $1\frac{3}{4}$ kW, may be calculated in accordance with Table 2. To provide for possible future installations of ranges or higher ratings, it is recommended that when ranges of less than $8\frac{3}{4}$ -kW ratings or wall-mounted ovens and counter-mounted cooking units are to be installed, the feeder capacity may be not less than the maximum demand value specified in col. A of Table 2.

Where a number of single-phase ranges are supplied by a three-phase four-wire feeder, the current shall be computed on the basis of the demand of twice the maximum number of ranges connected between any two-phase wires. See example in Sec. 50 of Div. 3. The same procedure applies to multiple clothes dryers connected to a wye distribution, as covered in Par. 12.

12. ELECTRIC CLOTHES DRYERS The load for household electric clothes dryers in dwelling units shall be either 5000 watts (volt-amperes) or the nameplate rating, whichever is larger, for each dryer served. The use of the demand factors in Table 3 is permitted.

13. FASTENED-IN-PLACE APPLIANCES (OTHER THAN RANGES, CLOTHES DRYERS, AIR-CONDITIONING EQUIPMENT, OR SPACE-HEATING EQUIPMENT) When four or more fastened-in-place appliances other than electric ranges, clothes dryers, space heating or air-conditioning equipment, or space-heating equipment are connected to the same feeder or service in a one-family, two-family, or multifamily dwelling unit, a demand factor of 75 percent may be applied to the appliance load.

14. FARM BUILDINGS Feeders supplying farm buildings (excluding dwellings) or loads consisting of two or more branch circuits shall have minimum capacity computed in accordance with Table B.

B. Method of Computing Farm Loads for Other Than Dwelling Units

Load in amperes at 240 V	Percent of connected load
Loads expected to operate without diversity, but not less than 125 percent full-load current of the largest motor and not less than first 60 A of load	100
Next 60 A of all other loads	50
Remainder of other load	25

NOTE 1 For services to farm dwellings, see Pars. 10 to 13.

NOTE 2 For service at the main point of delivery to the farmstead, see Par. 15.

15. FARM SERVICES

- a. Service-equipment and service-entrance conductors for individual farm buildings (excluding dwellings) shall have a minimum capacity computed in accordance with Par. 14.
- b. Minimum capacity of service conductors and service equipment, if any, at the main point of delivery to farms (including dwellings) shall be determined in accordance with the following formula:

- 100 percent of the largest demand computed in accordance with Par. 14
- 75 percent of the second largest demand computed in accordance with Par. 14
- 65 percent of the third largest demand computed in accordance with Par. 14
- 50 percent of the demands of remaining loads computed in accordance with Par. 14

NOTE 1 Consider as a single computed demand the total of the computed demands of all buildings or loads having the same function.

NOTE 2 The demand of the farm dwelling, if included in the demands of this formula, should be computed in accordance with Note 1 of Table B.

6. Average Demand Factors for Motor Loads^a

Number of motors	Character of load	Demand factor
1–5	Individual drives—tools, etc.	1.00
6–10	Individual drives—tools, etc.	0.75
10–15	Individual drives—tools, etc.	0.70
15–20	Individual drives—tools, etc.	0.65
20–30	Individual drives—tools, etc.	0.60
30–50	Individual drives—tools, etc.	0.50
50–75	Individual drives—tools, etc.	0.45
75–100	Individual drives—tools, etc.	0.40
Above 100	Individual drives—tools, etc.	0.40
6–10	Group drives	0.85
Above 10	Group drives	0.70–0.45
	Fans, compressors, pumps, etc.	1.00–0.85

^aPermission for the use of a demand factor should be obtained from the authority enforcing the National Electrical Code.

7. Full-Load Current in Amperes, Direct-Current Motors^a
(Table 430.247, 2008 NEC)

The following values of full-load currents^b are for motors running at base speed.

hp	Armature voltage rating ^b					
	90 V	120 V	180 V	240 V	500 V	550 V
1/4	4.0	3.1	2.0	1.6		
1/3	5.2	4.1	2.6	2.0		
1/2	6.8	5.4	3.4	2.7		
3/4	9.6	7.6	4.8	3.8		
1	12.2	9.5	6.1	4.7		
1 1/2	...	13.2	8.3	6.6		
2	...	17	10.8	8.5		
3	...	25	16	12.2		
5	...	40	27	20		
7 1/2	...	58	...	29	13.6	12.2
10	...	76	...	38	18	16
15	55	27	24
20	72	34	31
25	89	43	38
30	106	51	46
40	140	67	61
50	173	83	75
60	206	99	90
75	255	123	111
100	341	164	148
125	425	205	185
150	506	246	222
200	675	330	294

^aReprinted with permission from NFPA 70-2008, National Electrical Code®, Copyright © 2007, National Fire Protection Association, Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

^bThese are average direct-current quantities.

8. Full-Load Currents in Amperes, Single-Phase Alternating-Current Motors^a
(Table 430.248, 2008 NEC)

hp	115 V	200 V	208 V	230 V
1/6	4.4	2.5	2.4	2.2
1/4	5.8	3.3	3.2	2.9
1/3	7.2	4.1	4.0	3.6
1/2	9.8	5.6	5.4	4.9
3/4	13.8	7.9	7.6	6.9
1	16	9.2	8.8	8
1 1/2	20	11.5	11	10
2	24	13.8	13.2	12
3	34	19.6	18.7	17
5	56	32.2	30.8	28
7 1/2	80	46	44	40
10	100	57.5	55	50

^aReprinted with permission from NFPA 70-2008, National Electrical Code®, Copyright © 2007, National Fire Protection Association, Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

These values of full-load currents are for motors running at usual speeds and motors with normal torque characteristics.

The voltages listed are rated motor voltages. The currents listed shall be permitted for system voltage ranges of 110 to 120 and 220 to 240.

9. Average Full-Load Currents of Two-Phase Four-Wire Motors^a
(Table 430.249, 2008 NEC)

hp	Induction-type squirrel-cage and wound-rotor, A				
	115 V	230 V	460 V	575 V	2,300 V
1/2	4	2	1	0.8	
3/4	4.8	2.4	1.2	1.0	
1	6.4	3.2	1.6	1.3	
1 1/2	9	4.5	2.3	1.8	
2	11.8	5.9	3	2.4	
3	...	8.3	4.2	3.3	
5	...	13.2	6.6	5.3	
7 1/2	...	19	9	8	
10	...	24	12	10	
15	...	36	18	14	
20	...	47	23	19	
25	...	59	29	24	
30	...	69	35	28	
40	...	90	45	36	
50	...	113	56	45	
60	...	133	67	53	14
75	...	166	83	66	18
100	...	218	109	87	23
125	...	270	135	108	28
150	...	312	156	125	32
200	...	416	208	167	43

^aReprinted with permission from NFPA 70-2008, National Electrical Code®, Copyright © 2007, National Fire Protection Association, Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

These values of full-load current are for motors running at speeds usual for belted motors and motors with normal torque characteristics. Current in common conductor of two-phase three-wire system will be 1.41 times value given.

The voltages listed are rated motor voltages. Corresponding nominal system voltages are 110 to 120, 220 to 240, 440 to 480, and 550 to 600 V.

10. Full-Load-Current Three-Phase Alternating-Current Motors^a
(Table 430.250, 2008 NEC)

hp	Induction-type squirrel-cage and wound-rotor, A							Synchronous-type unity power factor, A ^b			
	115 V	200 V	208 V	230 V	460 V	575 V	2,300 V	230 V	460 V	575 V	2300 V
1/2	4.4	2.5	2.4	2.2	1.1	0.9					
3/4	6.4	3.7	3.5	3.2	1.6	1.3					
1	8.4	4.8	4.6	4.2	2.1	1.7					
1 1/2	12.0	6.9	6.6	6.0	3.0	2.4					
2	13.6	7.8	7.5	6.8	3.4	2.7					
3		11.0	10.6	9.6	4.8	3.9					
5		17.5	16.7	15.2	7.6	6.1					
7 1/2		25.3	24.2	22	11	9					
10		32.2	30.8	28	14	11					
15		48.3	46.2	42	21	17					
20		62.1	59.4	54	27	22					
25		78.2	74.8	68	34	27		53	26	21	
30		92	88	80	40	32		63	32	26	
40		120	114	104	52	41		83	41	33	
50		150	143.0	130	65	52		104	52	42	
60		177	169	154	77	62	16	123	61	49	12
75		221	211	192	96	77	20	155	78	62	15
100		285	273	248	124	99	26	202	101	81	20
125		359	343	312	156	125	31	253	126	101	25
150		414	396.0	360	180	144	37	302	151	121	30
200		552	528.0	480	240	192	49	400	201	161	40
250					302	242	60				
300					361	289	72				
350					414	336	83				
400					477	382	95				
450					515	412	103				
500					590	472	118				

^aReprinted with permission from NFPA 70-2008, National Electrical Code®, Copyright © 2007, National Fire Protection Association, Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

These values of full-load currents are typical for motors running at speeds usual for belted motors and motors with normal torque characteristics.

^bFor 90 and 80 percent power factor, the above figures shall be multiplied by 1.1 and 1.25, respectively.

The voltages listed are rated motor voltages. The currents listed shall be permitted for system-voltage ranges of 110 to 120, 220 to 240, 440 to 480, and 550 to 600 V.

11. Capacitor Ratings for Use with Three-Phase 60-Hz Motors^a

Induction motor horsepower rating	Nominal motor speed, rpm											
	3,600		1,800		1,200		900		720		600	
	Capacitor rating, kvar	Line current reduction, %	Capacitor rating, kvar	Line current reduction, %	Capacitor rating, kvar	Line current reduction, %	Capacitor rating, kvar	Line current reduction, %	Capacitor rating, kvar	Line current reduction, %	Capacitor rating, kvar	Line current reduction, %
3	1.5	14	1.5	15	1.5	20	2	27	2.5	35	3.5	41
5	2	12	2	13	2	17	3	25	4	32	4.5	37
7½	2.5	11	2.5	12	3	15	4	22	5.5	30	6	34
10	3	10	3	11	3.5	14	5	21	6.5	27	7.5	31
15	4	9	4	10	5	13	6.5	18	8	23	9.5	27
20	5	9	5	10	6.5	12	7.5	16	9	21	12	25
25	6	9	6	10	7.5	11	9	15	11	20	14	23
30	7	8	7	9	9	11	10	14	12	18	16	22
40	9	8	9	9	11	10	12	13	15	16	20	20
50	12	8	11	9	13	10	15	12	19	15	24	19
60	14	8	14	8	15	10	18	11	22	15	27	19
75	17	8	16	8	18	10	21	10	26	14	32.5	18
100	22	8	21	8	25	9	27	10	32.5	13	40	17
125	27	8	26	8	30	9	32.5	10	40	13	47.5	16
150	32.5	8	30	8	35	9	37.5	10	47.5	12	52.5	15
200	40	8	37.5	8	42.5	9	47.5	10	60	12	65	14
250	50	8	45	7	52.5	8	57.5	9	70	11	77.5	13
300	57.5	8	52.5	7	60	8	65	9	80	11	87.5	12
350	65	8	60	7	67.5	8	75	9	87.5	10	95	11
400	70	8	65	6	75	8	85	9	95	10	105	11
450	75	8	67.5	6	80	8	92.5	...	100	9	110	11
500	77.5	8	72.5	6	82.5	8	97.5	9	107.5	9	115	10

^aFor use with three-phase 60-Hz NEMA Classification B motors to raise full-load power factor to approximately 95 percent.

12. Minimum Ampacities for Conductors Supplying Motors Used for Short-Time, Intermittent, Periodic, or Varying Duty^a

(Table 430.22(E), 2008 NEC)

Classification of service	Percentages of nameplate current rating			
	5-min rating	15-min rating	30- and 60-min rating	Continuous rating
Short-time duty: operating valves, raising or lowering rolls, etc.	110	120	150	
Intermittent duty: freight and passenger elevators, tool heads, pumps, drawbridges, turntables, etc. (for arc welders, See 630.11 of the NEC)	85	85	90	140
Periodic duty: rolls, ore- and coal-handling machines, etc.	85	90	95	140
Varying duty	110	120	150	200

^aReprinted with permission from NFPA 70-2008, National Electrical Code®, Copyright © 2007, National Fire Protection Association, Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

NOTE Any motor application shall be considered continuous-duty unless the nature of the apparatus it drives is such that the motor will not operate continuously with load under any condition of use.

13. Ampacities of Wires between Secondary Controller of Wound-Rotor Induction Motors and Resistors

Resistor-duty classification	Ampacity of wire, percent of full-load secondary current
Light starting duty	35
Heavy starting duty	45
Extra-heavy starting duty	55
Light intermittent duty	65
Medium intermittent duty	75
Heavy intermittent duty	85
Continuous duty	110

14. Ampacities of Insulated Copper Conductors Used with Short-Time Rated Crane and Hoist Motors, Based on Ambient Temperature of 30°C(86°F), Up to Four Conductors in Raceway or Cable,^a Up to 3 ac^b or 4 dc^a Conductors in Raceway or Cable

(Table 610.14(A), 2008 NEC)

Maximum operating temperature	Up to four simultaneously energized conductors in raceway or cable ^a				Up to 3 ac ^b or 4 dc ^a simultaneously energized conductors in raceway or cable		Maximum operating temperature
	75°C (167°F)		90°C (194°F)		125°C (257°F)		
Size AWG, kcmil	Types MTW, RHW, THW, THWN, XHHW, USE, ZW		Types TA, TBS, SA, SIS, PFA, FEP, FEPB, RHH, THHN, XHHW, Z, ZW		Types FEP, FEPB, PFA, PFAH, SA, TFE, Z, ZW		Size AWG, kcmil
	60 min	30 min	60 min	30 min	60 min	30 min	
16	10	12	16
14	25	26	31	32	38	40	14
12	30	33	36	40	45	50	12
10	40	43	49	52	60	65	10
8	55	60	63	69	73	80	8
6	76	86	83	94	101	119	6
5	85	95	95	106	115	134	5
4	100	117	111	130	133	157	4
3	120	141	131	153	153	183	3
2	137	160	148	173	178	214	2
1	143	175	158	192	210	253	1
1/0	190	233	211	259	253	304	1/0
2/0	222	267	245	294	303	369	2/0
3/0	280	341	305	372	370	452	3/0
4/0	300	369	319	399	451	555	4/0
250	364	420	400	461	510	635	250
300	455	582	497	636	587	737	300
350	486	646	542	716	663	837	350
400	538	688	593	760	742	941	400
450	600	765	660	836	818	1042	450
500	660	847	726	914	896	1143	500

14. Ampacities of Insulated Copper Conductors Used with Short-Time Rated Crane and Hoist Motors, Based on Ambient Temperature of 30°C(86°F), Up to Four Conductors in Raceway or Cable,^a Up to 3 ac^b or 4 dc^a Conductors in Raceway or Cable (Continued)

Types MTW, RHW, THW, THWN, XHHW, USE, ZW		Types TA, TBS, SA, SIS, PFA, FEP, FEPB, RHH, THHN, XHHW, Z, ZW		Types FEP, FEBP, PFA, PFAH, SA, TFE, Z, ZW			
60 min	30 min	60 min	30 min	60 min	30 min		
Ampacity correction factors							
Ambient temp., °C	For ambient temperatures other than 30°C (86°F), multiply the ampacities shown above by the appropriate factor shown below					Ambient temp., °F	
21–25	1.05	1.05	1.04	1.04	1.02	1.02	70–77
26–30	1.00	1.00	1.00	1.00	1.00	1.00	79–86
31–35	.94	.94	.96	.96	.97	.97	88–95
36–40	.88	.88	.91	.91	.95	.95	97–104
41–45	.82	.82	.87	.87	.92	.92	106–113
46–50	.75	.75	.82	.82	.89	.89	115–122
51–55	.67	.67	.76	.76	.86	.86	124–131
56–60	.58	.58	.71	.71	.83	.83	133–140
61–70	.33	.33	.58	.58	.76	.76	142–158
71–80	—	—	.41	.41	.69	.69	160–176
81–90	—	—	—	—	.61	.61	177–194
91–100	—	—	—	—	.51	.51	195–212
101–120	—	—	—	—	.40	.40	213–248

^aFor 5 to 8 simultaneously energized power conductors in raceway or cable, the ampacity of each power conductor shall be reduced to a value of 80 percent of that shown in the table.

^bFor 4 to 6 simultaneously energized 125°C (257°F) ac power conductors in raceway or cable, the ampacity of each power conductor shall be reduced to a value of 80 percent of that shown in the table.


NOTE Other insulations shown in Table 310.13(A) and approved for the temperature and location shall be permitted to be substituted for those shown in Table 14. The allowable ampacities of conductors used with 15-min motors shall be the 30-min ratings increased by 12 percent. Reprinted with permission from NFPA 70-2008, National Electrical Code®, Copyright © 2007, National Fire Protection Association, Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

CONTACT CONDUCTORS The size of contact wires shall be not less than the following:


<i>Distance between End Strain Insulators or Clamp-Type</i>	<i>Size of Intermediate Supports Wire</i>
Less than 9.0 m (30 ft)	No. 6
9.10–18 m (30–60 ft)	No. 4
Over 18 m (60 ft)	No. 2

15. Curve for Determining Ampacities at 60 Hz of Bare Concentric-Stranded Copper Conductors for 30°C Rise over 40°C Ambient

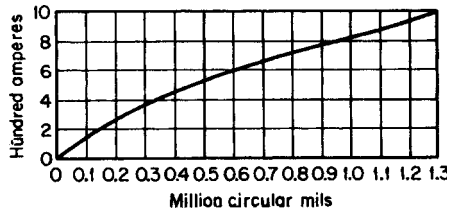For outdoor service, a 25 percent increase in ampacities is permissible.



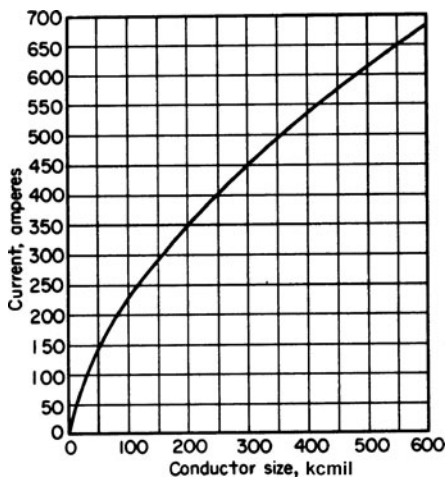16. Curve for Determining Ampacities for Weatherproof-Covered Concentric-Stranded Copper Conductors Installed outside Buildings



17. National Electrical Code allowable ampacities of conductors for all interior wiring (Tables 18 to 22, inclusive)

- EXPLANATION OF TABLES** For an explanation of type letters and for the recognized size of conductors for the various conductor insulations, see Sec. 310.13(A) in the NEC. For installation requirements, see Sec. 310.1 through 310.12 and the various articles of NEC.
- 120/240-VOLT, 3-WIRE, SINGLE-PHASE DWELLING SERVICES AND FEEDERS** For individual dwelling units of one-family, two-family, and multifamily dwellings, conductors, as listed below, shall be permitted to be utilized as 120/240-volt, 3-wire, single-phase service-entrance conductors, service lateral conductors, and feeder conductors that

serve as the main power feeder to each dwelling unit and are installed in raceway or cable with or without an equipment grounding conductor. For applications of this section, the main power feeder shall be the feeder between the main disconnect and the panelboard that supplies, either by branch circuits, feeders, or both, all loads that are part of or associated with the dwelling unit. The feeder conductors to a dwelling unit shall not be required to have an allowable ampacity rating greater than their service-entrance conductors. The grounded conductor shall be permitted to be smaller than the ungrounded conductors, provided the requirements of Secs. 215.2, 220.61, and 230.42 of the NEC are met.

Conductor Types and Sizes RHH, RHW, RHW-2, THHN, THHW, THW, THW-2, THWN, THWN-2, THHN, XHHW, XHHW-2, SE, USE, USE-2

Copper	Aluminum and copper-clad aluminum	Service or feeder rating, A
AWG	AWG	...
4	2	100
3	1	110
2	1/0	125
1	2/0	150
1/0	3/0	175
2/0	4/0	200
3/0	250 kcmil	225
4/0	300 kcmil	250
250 kcmil	350 kcmil	300
350 kcmil	500 kcmil	350
400 kcmil	600 kcmil	400

3. **BARE OR COVERED CONDUCTORS** Where bare or covered conductors are used with insulated conductors, their allowable ampacities shall be limited to that permitted for the lowest temperature rating of the adjacent insulated conductors.
4. **MINERAL-INSULATED METAL-SHEATHED CABLE** The conductor temperature at the end seal fitting shall not exceed the temperature rating of the listed end seal fitting, and the installation shall not exceed the temperature ratings of terminations or equipment.
5. **MORE THAN THREE CONDUCTORS IN A RACEWAY OR CABLE** When the number of current-carrying conductors in a raceway or cable exceeds three, the ampacities given in Tables 18 and 21 shall be reduced as shown in the following table:

Number of current-carrying conductors	Percent of values in tables as adjusted for ambient temperature if necessary
4 through 6	80
7 through 9	70
10 through 20	50
21 through 30	45
31 through 40	40
41 and above	35

Where single conductors or multiconductor cables are installed without maintaining spacing for a continuous length longer than 600 mm (24 in.) and are not installed in raceways, the ampacity of each conductor shall be reduced as shown in the above table. Each current-carrying conductor of a paralleled set of conductors shall be counted as a current-carrying conductor.

Exception No. 1. When conductors of different systems, as provided in Sec. 300.3 of the NEC, are installed in a common raceway or cable, the derating factors shown above shall apply to the number of power and lighting (Articles 210, 215, 220, and 230 of the NEC) conductors only.

Exception No. 2. For conductors installed in cable trays, the provisions of Sec. 392.11 of the NEC shall apply.

Exception No. 3. Derating factors shall not apply to conductors in nipples having a length not exceeding 600 mm (24 in).

Exception No. 4. Derating factors shall not apply to underground conductors entering or leaving an outdoor trench if those conductors have physical protection in the form of rigid metal conduit, intermediate metal conduit, or rigid nonmetallic conduit having a length not exceeding 3.05 m (10 ft) above grade and the number of conductors does not exceed four.

Exception No. 5. Adjustment factors shall not apply to Type AC or to Type MC cable without an overall outer jacket where having 3 current-carrying conductors, the conductors are 12 AWG copper, there are not more than 20 current-carrying conductors bundled, stacked or supported on "bridle rings." A 60 percent adjustment factor shall be applied where the current-carrying conductors in these cables that are stacked or bundled longer than 600 mm (24 in) without maintaining spacing exceeds 20.

6. NEUTRAL CONDUCTOR

- a. A neutral conductor which carries only the unbalanced current from other conductors of the same circuit need not be counted in determining ampacities as provided for in Par. 5.
- b. In a three-wire circuit consisting of two-phase wires and the neutral of a four-wire, three-phase Y-connected system, a common conductor carries approximately the same current as the line-to-neutral load currents of the other conductors and shall be counted in determining ampacities as provided in Par. 5.
- c. On a four wire, three-phase Y circuit where the major portion of the load consists of nonlinear loads, there are harmonic currents present in the neutral conductor, and the neutral conductor shall be considered a current-carrying conductor.

7. GROUNDING CONDUCTOR

A grounding conductor shall not be counted when applying the provisions of Par. 5.

18. Ampacities of Insulated Conductors Rated 0–2000 V, 60 to 90°C (140°F through 194°F)^a

(Table 310.16, 2008 NEC)

Not more than three current-carrying conductors in raceway or cable or earth (directly buried), based on ambient temperature of 30°C (86°F).

Temperature rating of conductor (see Table 310.13(A) of NEC)							
	60°C (140°F)	75°C (167°F)	90°C (194°F)	60°C (140°F)	75°C (167°F)	90°C (194°F)	
	Types TW UF	Types RHW, THHW, THW, THWN, XHHW, USE, ZW	Types TBS, SA, SIS, FEP, FEPB, MI, RHH, RHW-2, THHN, THHW, THW-2, THWN-2, USE-2, XHH, XHHW, XHHW-2, ZW-2	Types TW UF	Types RHW, THHW, THW, THWN, XHHW, USE	Types, TBS, SA, SIS, RHH, THHN, THHW, THW-2, THWN-2, RHW-2, USE-2, XHH, XHHW, XHHW-2, ZW-2	
Size, AWG or 1000 cmil	Copper			Aluminum or copper-clad aluminum			Size, AWG or 1000 cmil
18 AWG	14				
16	18				
14	20 ^b	20 ^b	25 ^b				
12	25 ^b	25 ^b	30 ^b	20 ^b	20 ^b	25 ^b	12 AWG
10	30	35 ^b	40 ^b	25	30 ^b	35 ^b	10
8	40	50	55	30	40	45	8
6	55	65	75	40	50	60	6
4	70	85	95	55	65	75	4
3	85	100	110	65	75	85	3
2	95	115	130	75	90	100	2
1	110	130	150	85	100	115	1
1/0	125	150	170	100	120	135	1/0
2/0	145	175	195	115	135	150	2/0
3/0	165	200	225	130	155	175	3/0
4/0	195	230	260	150	180	205	4/0

250 kcmil	215	255	290	170	205	230	250 kcmil
300	240	285	320	190	230	255	300
350	260	310	350	210	250	280	350
400	280	335	380	225	270	305	400
500	320	380	430	260	310	350	500
600	355	420	475	285	340	385	600
700	385	460	520	310	375	420	700
750	400	475	535	320	385	435	750
800	410	490	555	330	395	450	800
900	435	520	585	355	425	480	900
1000	455	545	615	375	445	500	1000
1250	495	590	665	405	485	545	1250
1500	520	625	705	435	520	585	1500
1750	545	650	735	455	545	615	1750
2000	560	665	750	470	560	630	2000

Correction factors

Ambient temp., °C	For ambient temperatures other than 30°C (86°F), multiply the allowable ampacities shown above by the appropriate factor shown below						Ambient temp., °F
21–25	1.08	1.05	1.04	1.08	1.05	1.04	70–77
26–30	1.00	1.00	1.00	1.00	1.00	1.00	78–86
31–35	.91	.94	.96	.91	.94	.96	87–95
36–40	.82	.88	.91	.82	.88	.91	96–104
41–45	.71	.82	.87	.71	.82	.87	105–113
46–50	.58	.75	.82	.58	.75	.82	114–122
51–55	.41	.67	.76	.41	.67	.76	123–131
56–60	—	.58	.71	—	.58	.71	132–140
61–70	—	.33	.58	—	.33	.58	141–158
71–80	—	—	.41	—	—	.41	159–176

*Reprinted with permission from NFPA 70-2008, National Electrical Code®, Copyright © 2007, National Fire Protection Association, Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

^bSee 240.4(D) of the NEC.

19. Ampacities of Single Insulated Conductors Rated 0–2000 V, 60 to 90°C, in Free Air^a

(Table 310.17, 2008 NEC)

Based on ambient temperature of 30°C (86°F).

Temperature rating of conductor (see Table 310.13(A) of NEC)							
	60°C (140°F)	75°C (167°F)	90°C (194°F)	60°C (140°F)	75°C (167°F)	90°C (194°F)	
	Types TW UF	Types RHW, THHW, THW, THWN, XHHW, USE, ZW	Types TBS, SA, SIS, FEP, FEPB, MI, RHH, RHW-2, THHN, THHW, THW-2, THWN-2, USE-2, XHH, XHHW, XHHW-2, ZW-2	Types TW UF	Types RHW, THHW, THW, THWN, XHHW	Types, TBS, SA, SIS, RHH, THHN, THHW, THW-2, THWN-2, RHW-2, USE-2, XHH, XHHW, XHHW-2, ZW-2	
Size, AWG or 1000 cmil	Copper			Aluminum or copper-clad aluminum			Size, AWG or 1000 cmil
18 AWG	18				
16	24				
14	25 ^b	30 ^b	35 ^b				
12	30 ^b	35 ^b	40 ^b	25 ^b	30 ^b	35 ^b	12 AWG
10	40 ^b	50 ^b	55 ^b	35 ^b	40 ^b	40 ^b	10
8	60	70	80	45	55	60	8
6	80	95	105	60	75	80	6
4	105	125	140	80	100	110	4
3	120	145	165	95	115	130	3
2	140	170	190	110	135	150	2
1	165	195	220	130	155	175	1
1/0	195	230	260	150	180	205	1/0
2/0	225	265	300	175	210	235	2/0
3/0	260	310	350	200	240	275	3/0
4/0	300	360	405	235	280	315	4/0

250	340	405	455	265	315	355	250 MCM
300	375	445	505	290	350	395	300
350	420	505	570	330	395	445	350
400	455	545	615	355	425	480	400
500	515	620	700	405	485	545	500
600	575	690	780	455	540	615	600
700	630	755	855	500	595	675	700
750	655	785	885	515	620	700	750
800	680	815	920	535	645	725	800
900	730	870	985	580	700	785	900
1000	780	935	1055	625	750	845	1000
1250	890	1065	1200	710	855	960	1250
1500	980	1175	1325	795	950	1075	1500
1750	1070	1280	1445	875	1050	1185	1750
2000	1155	1385	1560	960	1150	1335	2000

Correction factors

Ambient temp., °C	For ambient temperatures other than 30°C (86°F), multiply the allowable ampacities shown above by the appropriate factor shown below						Ambient temp., °F
21–25	1.08	1.05	1.04	1.08	1.05	1.04	70–77
26–30	1.00	1.00	1.00	1.00	1.00	1.00	78–86
31–35	.91	.94	.96	.91	.94	.96	87–95
36–40	.82	.88	.91	.82	.88	.91	96–104
41–45	.71	.82	.87	.71	.82	.87	105–113
46–50	.58	.75	.82	.58	.75	.82	114–122
51–55	.41	.67	.76	.41	.67	.76	123–131
56–60	—	.58	.71	—	.58	.71	132–140
61–70	—	.33	.58	—	.33	.58	141–158
71–80	—	—	.41	—	—	.41	159–176

*Reprinted with permission from NFPA 70-2008, National Electrical Code®, Copyright © 2007, National Fire Protection Association, Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

^bSee 240.4(D) of the NEC.

20. Ampacities of Insulated Copper Conductors of Various Deratings^a

In raceways or cables at room temperatures not over 30°C (86°F).

Size, AWG or 1000 cmil	Ampacity														
	100%			80%			70%			60%			50%		
	60°C	75°C	90°C	60°C	75°C	90°C	60°C	75°C	90°C	60°C	75°C	90°C	60°C	75°C	90°C
AWG															
14 ^a	20	20	25	16	16	20	14	14	18	12	12	15	10	10	13
12 ^a	25	25	30	20	20	24	18	18	21	15	15	18	13	13	15
10 ^a	30	35	40	24	28	32	21	25	28	18	21	24	15	18	20
8	40	50	55	32	40	44	28	35	39	24	30	33	20	25	28
6	55	65	75	44	52	60	38	45	53	33	39	51	27	32	38
4	70	85	95	56	68	76	49	59	67	42	51	57	35	42	48
3	85	100	110	68	80	88	60	70	77	51	60	66	43	50	55
2	95	115	130	76	92	104	66	80	91	57	69	78	47	57	65
1	110	130	150	88	104	120	77	91	105	66	78	90	55	65	75
1/0	125	150	170	100	120	136	87	105	119	75	90	102	62	75	85
2/0	145	175	195	116	140	156	101	122	137	87	105	117	72	87	98
3/0	165	200	225	132	160	180	115	140	158	99	120	135	82	100	113
4/0	195	230	260	156	184	200	136	161	175	117	138	150	97	115	125
250 kcmil	215	255	290	172	204	232	150	178	203	129	153	174	107	127	145
300	240	285	320	192	228	256	168	199	224	144	171	192	120	142	160
350	260	310	350	208	248	280	182	217	245	156	186	210	130	155	175
400	280	335	380	224	268	304	196	234	266	168	201	228	140	167	190
500	320	380	430	256	304	344	224	266	301	192	228	258	160	190	215

^aThe overcurrent protection shall not exceed 15 A for 14 AWG, 20 A for 12 AWG, and 30 A for 10 AWG after any correction factors for ambient temperatures and number of conductors have been applied.

NOTE 60°C conductors: TW, UF; 75°C conductors: RHW, THHW, THW, THWN, XHHW, USE, ZW; 90°C conductors: THHN, THHW, RHH, FEP, FEBP, RHW-2, THW-2, THWN-2, USE-2, XHH, XHHW, XHHW-2, ZW-2, TBS, SA, SIS.

21. Ampacities for Three Single Insulated Conductors Rated 0–2000 V, 150 to 250°C (302°F through 482°F), in Raceway or Cable^a
(Table 310.18, 2008 NEC)

Based on ambient temperature of 40°C (104°F).

Temperature rating of conductor					
150°C (302°F)		200°C (392°F)		250°C (482°F)	
Type Z		Types FEP, FEFP, PFA		Types PFAH, TFE	
Type Z		Type Z		Type Z	
Size, AWG, kcmil	Copper	Nickel or nickel- coated copper		Aluminum or copper- clad aluminum	Size, AWG, kcmil
14	34	36	39	14
12	43	45	54	30	12
10	55	60	73	44	10
8	76	83	93	57	8
6	96	110	117	75	6
4	120	125	148	94	4
3	143	152	166	109	3
2	160	171	191	124	2
1	186	197	215	145	1
1/0	215	229	244	169	1/0
2/0	251	260	273	198	2/0
3/0	288	297	308	227	3/0
4/0	332	346	361	260	4/0

Correction factors					
Ambient temp., °C	For ambient temperatures other than 40°C (104°F), multiply the ampacities shown above by the appropriate factor shown below				Ambient temp., °F
41–50	.95	.97	.98	.95	105–122
51–60	.90	.94	.95	.90	123–140
61–70	.85	.90	.93	.85	141–158
71–80	.80	.87	.90	.80	159–176
81–90	.74	.83	.87	.74	177–194
91–100	.67	.79	.85	.67	195–212
101–120	.52	.71	.79	.52	213–248
121–140	.30	.61	.72	.30	249–284
141–16050	.65	285–320
161–18035	.58	321–356
181–20049	357–392
201–22535	393–437

^aReprinted with permission from NFPA 70-2008, National Electrical Code®, Copyright © 2007, National Fire Protection Association, Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

22. Ampacities for Single Insulated Conductors Rated 0–2000 V, 150 to 250°C (302°F through 482°F), in Free Air Based on Ambient Temperature of 40°C (104°F)^a
(Table 310.19, 2008 NEC)

Temperature rating of conductor					
150°C (302°F)		200°C (392°F)		250°C (482°F)	
Type Z		Types FEP, FEBP, PFA		Types PFAH, TFE	
Type Z		Type Z		Type Z	
Size, AWG, kcmil	Copper		Nickel or nickel- coated copper	Aluminum or copper- clad aluminum	Size, AWG, kcmil
14	46	54	59	14
12	60	68	78	47	12
10	80	90	107	63	10
8	106	124	142	83	8
6	155	165	205	112	6
4	190	220	278	148	4
3	214	252	327	170	3
2	255	293	381	198	2
1	293	344	440	228	1
1/0	339	399	532	263	1/0
2/0	390	467	591	305	2/0
3/0	451	546	708	351	3/0
4/0	529	629	830	411	4/0

Correction factors							
Ambient temp., °C	For ambient temperatures other than 40°C (104°F), multiply the ampacities shown above by the appropriate factor shown below						Ambient temp., °F
41–50	.95	.9798	.95	105–122
51–60	.90	.9495	.90	123–140
61–70	.85	.9093	.85	141–158
71–80	.80	.8790	.80	159–176
81–90	.74	.8387	.74	177–194
91–100	.67	.7985	.67	195–212
101–120	.52	.7179	.52	213–248
121–140	.30	.6172	.30	249–284
141–1605065	285–320
161–1803558	321–356
181–20049	357–392
201–22535	393–437

^aReprinted with permission from NFPA 70-2008, National Electrical Code®, Copyright © 2007, National Fire Protection Association, Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

23. Ampacities of Insulated Aluminum or Copper-Clad Aluminum Conductors at Various Deratings

In raceways or cables at room temperatures not over 30°C (86°F).

Size, AWG or 1000 cmil	Ampacity														
	100%			80%			70%			60%			50%		
	60°C	75°C	90°C	60°C	75°C	90°C	60°C	75°C	90°C	60°C	75°C	90°C	60°C	75°C	90°C
AWG															
12 ^a	20	20	25	16	16	20	14	14	18	12	12	15	10	10	13
10 ^a	25	30	35	20	24	28	17	21	25	15	18	21	12	15	18
8	30	40	45	24	32	36	21	28	32	18	24	27	15	20	23
6	40	50	60	32	40	48	28	35	42	24	30	36	20	25	30
4	55	65	75	44	52	60	38	45	53	33	39	45	27	32	38
3	65	75	85	52	60	68	45	52	60	39	45	51	32	37	43
2	75	90	100	60	72	80	52	63	70	45	54	60	37	45	50
1	85	100	115	68	80	92	59	70	81	51	60	69	42	50	58
1/0	100	120	135	80	96	108	70	84	95	60	72	81	50	60	68
2/0	115	135	150	92	108	120	80	94	105	69	81	90	57	67	75
3/0	130	155	175	104	124	140	91	108	123	78	93	105	65	77	88
4/0	150	180	205	120	144	164	105	126	144	90	108	123	75	90	103
250 kcmil	170	205	230	136	164	184	119	143	161	102	123	138	85	102	115
300	190	230	255	152	184	204	133	161	179	114	138	153	95	115	128
350	210	250	280	168	200	224	147	175	196	126	150	168	105	125	140
400	225	270	305	180	216	244	157	189	214	135	162	183	112	135	153
500	260	310	350	208	248	280	182	217	245	156	186	210	130	155	175

^aThe overcurrent shall not exceed 15 A for 12 AWG and 25 A for 10 AWG after any correction factors for ambient temperatures and number of conductors have been applied.

NOTE 60°C conductors: TW, UF; 75°C conductors: RHW, THHW, THW, THWN, XHHW, USE; 90°C conductors: RHH, THHN, THHW, XHHW, THW-2, THWN-2, RHW-2, USE-2, XHH, XHHW-2, ZW-2.

24. Ampacities for Flexible Cords and Cables. Table 400.5(A) of the NEC provides the allowable ampacities for flexible cords and cables for general application, and Table 400.5(B) of the NEC provides the ampacities for flexible cords and cables of specialized construction, both tables being applicable to not more than three current-carrying conductors. These tables shall be used in conjunction with applicable end-use product standards to ensure selection of the proper size and type. If the number of current-carrying conductors exceeds three, the allowable ampacity or the ampacity of each conductor shall be reduced from the three-conductor rating as shown in the following table:

Number of conductors	Percent of value in Tables 400.5(A) and 400.5(B) of the NEC
4 through 6	80
7 through 9	70
10 through 20	50
21 through 30	45
31 through 40	40
41 and above	35

Ultimate Insulation Temperature. In no case shall conductors be associated together in such a way with respect to the kind of circuit, the wiring method used, or the number of conductors such that the limiting temperature of the conductors is exceeded.

A neutral conductor that carries only the unbalanced current from other conductors of the same circuit need not be considered as a current-carrying conductor.

In a 3-wire circuit consisting of two phase conductors and the neutral conductor of a 4-wire, 3-phase wye-connected system, a common conductor carries approximately the same current as the line-to-neutral currents of the other conductors and shall be considered to be a current-carrying conductor.

On a 4-wire, 3-phase wye circuit where more than 50 percent of the load consists of non-linear loads such as electric-discharge lighting, electronic computer/data processing, or similar equipment, there are harmonic currents present in the neutral conductor, and the neutral conductor shall be considered to be a current-carrying conductor.

An equipment grounding conductor shall not be considered a current-carrying conductor.

Where a single conductor is used for both equipment grounding and to carry unbalanced current from other conductors, as provided for in Sec. 250.140 of the NEC for electric ranges and electric clothes dryers, it shall not be considered as a current-carrying conductor.

Exception: For other loading conditions, adjustment factors shall be permitted to be calculated under Sec. 310.15(C) of the NEC.

Ampacity of Flexible Cords and Cables^a

(Table 400.5(A), 2008 NEC)

Based on ambient temperature of 30°C (86°F). See Sec. 400.13 and Table 400.4 in the NEC.

Size, AWG	Thermoplastic types TPT, TST	Thermoset types C, E, EO, PD, S, SJ, SJO, SJOO, SO, SOO, SP-1, SP-2, SP-3, SRD, SV, SVO, SVOO Thermoplastic types ET, ETT, ETP, ETLB, SE, SEO, SJE, SJEO, SJT, SJTO, SJTOO, SPE-1, SPE-2, SPE-3, SPT-1, SPT-2, SPT-3, ST, STO, STOO, SRDE, SRDT, SVE, SVEO, SVT, SVTO, SVTOO		Types HPN, HSJ, HSJO, HSJOO,
		A ^c	B ^c	
27 ^d	0.5			
20	...	5 ^e	<i>b</i>	
18	...	7	10	10
17	...	9	12	
16	...	10	13	15
15	...	12	16	17
14	...	15	18	20
12	...	20	25	30
10	...	25	30	35
8	...	35	40	
6	...	45	55	
4	...	60	70	
2	...	80	95	

^aReprinted with permission from NFPA 70-2008, National Electrical Code®, Copyright © 2007, National Fire Protection Association, Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

NOTE *Ultimate insulation temperature.* In no case shall conductors be associated together in such a way with respect to the kind of circuit, wiring method used, or number of conductors that the limiting temperature of the conductors will be exceeded.

^b7 amperes for elevator cables only; 2 amperes for other types.

^cThe allowable currents under subheading A apply to three-conductor cords and other multiconductor cords connected to utilization equipment so that only three conductors are current-carrying. The allowable currents under subheading B apply to two-conductor cords and other multiconductor cords connected to utilization equipment so that only two conductors are current-carrying.

^dTinsel cord.

^eElevator cables only.

Ampacity of Cables Types SC, SCE, SCT, PPE, W, and G-GC
(Table 400.5(B), 2008 NEC)

Based on ambient temperature of 30°C (86°F). See Table 400.4 in the NEC.

Size, AWG, kcmil	Temperature rating of cable								
	60°C(140°F)			75°C(167°F)			90°C(194°F)		
	D	E	F	D	E	F	D	E	F
8	60	55	48	70	65	57	80	74	65
6	80	72	63	95	88	77	105	99	87
4	105	96	84	125	115	101	140	130	114
3	120	113	99	145	135	118	165	152	133
2	140	128	112	170	152	133	190	174	152
1	165	150	131	195	178	156	220	202	177
1/0	195	173	151	230	207	181	260	234	205
2/0	225	199	174	265	238	208	300	271	237
3/0	260	230	201	310	275	241	350	313	274
4/0	300	265	232	360	317	277	405	361	316
250	340	296	259	405	354	310	455	402	352
300	375	330	289	445	395	346	505	449	393
350	420	363	318	505	435	381	570	495	433
400	455	392	343	545	469	410	615	535	468
500	515	448	392	620	537	470	700	613	536

The ampacities under subheading D shall be permitted for single-conductor Types SC, SCE, SCT, PPE, and W cable only where the individual conductors are not installed in raceways and are not in physical contact with each other except in lengths not to exceed 600 mm (24 in) where passing through the wall of an enclosure.

The ampacities under subheading E apply to two-conductor cables and other multiconductor cables connected to utilization equipment so that only two conductors are carrying current. The ampacities under subheading F apply to three-conductor cables and other multiconductor cables connected to utilization equipment so that only three conductors are carrying current.


25. Allowable ampacity of fixture wires (Table 402.5, 2008 NEC)^a. The ampacity of fixture wire shall not exceed the following:

Size, AWG	Ampacity
18	6
16	8
14	17
12	23
10	28

^aReprinted with permission from NFPA 70-2008, National Electrical Code®, Copyright © 2007, National Fire Protection Association, Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

NOTE No conductor shall be used under such conditions that its operating temperature will exceed the temperature specified in Table 402.3 of the NEC for the type of insulation involved.

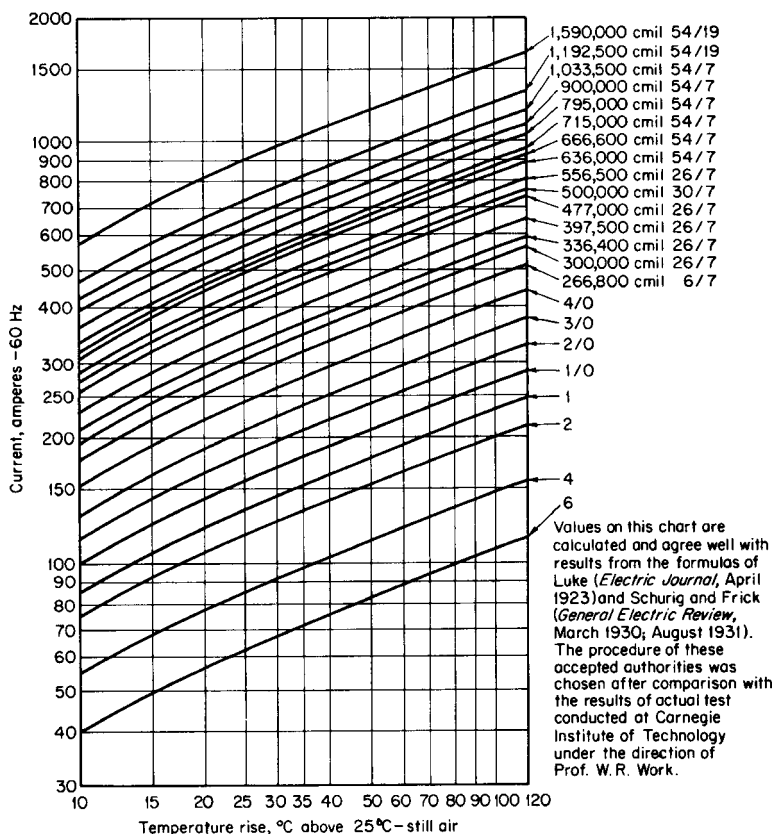26. Curves for Determining Ampacity of Aluminum Cable, Steel-Reinforced (Aluminum Co. of America)



27. Ampacity of Parkway Cables Buried Directly in Ground^a

Conductor size, AWG or 1000 cmil	Maximum allowable ampacity per conductor (copper)		Conductor size, AWG or 1000 cmil	Maximum allowable ampacity per conductor (copper)	
	Single-conductor cable, A	Three conductor cable, A		Single-conductor cable, A	Three conductor cable, A
8 AWG	85	60	3/0 AWG	335	225
6	115	80	4/0	385	255
4	150	100	250 MCM	445	285
2	195	130	300	470	315
1	220	150	350	515	345
1/0	255	170	400	555	375
2/0	295	195	500	635	425

^aTable based on earth temperature of 20°C (68°F). Rubber-insulated conductors in accordance with ICEA specification. Average soil condition: sandy loam, 10 percent moisture. Average depth of burial 18 in. Other cables sufficiently far away to prevent mutual heating. Rated voltages up to 5 kV, grounded neutral.

28. Notes to NEC Tubular Raceway and Wire Dimension Tables (Chap. 9, Tables) The notes apply to coverage of subjects addressed in Sec. 29 through 32 following.

- NOTE 1 See Annex C of the NEC for the maximum number of conductors and fixture wires, all of the same size (total cross-sectional area including insulation), permitted in trade sizes of the applicable conduit or tubing.
- NOTE 2 Table 1 applies only to complete conduit or tubing systems and is not intended to apply to sections of conduit or tubing used to protect exposed wiring from physical damage.
- NOTE 3 Equipment grounding or bonding conductors, where installed, shall be included when calculating conduit or tubing fill. The actual dimensions of the equipment grounding or bonding conductor (insulated or bare) shall be used in the calculation.
- NOTE 4 Where conduit or tubing nipples having a maximum length not to exceed 600 mm (24 in) are installed between boxes, cabinets, and similar enclosures, the nipples shall be permitted to be filled to 60 percent of their total cross-sectional area, and 310.15(B)(2)(a) adjustment factors need not apply to this condition.
- NOTE 5 For conductors not included in Chap. 9 of the NEC, such as multiconductor cables, the actual dimensions shall be used.
- NOTE 6 For combinations of conductors of different sizes, use Tables 5 and 5A in Chap. 9 of the NEC for dimensions of conductors and Table 4 in Chap. 9 of the NEC for the applicable conduit or tubing dimensions.
- NOTE 7 When calculating the maximum number of conductors permitted in a conduit or tubing, all of the same size (total cross-sectional area including insulation), the next higher whole number shall be used to determine the maximum number of conductors permitted when the calculation results in a decimal of 0.8 or larger.
- NOTE 8 Where bare conductors are permitted by other sections of the Code, the dimensions for bare conductors in Table 8 of Chap. 9 of the NEC shall be permitted.
- NOTE 9 A multiconductor cable or flexible cord of two or more conductors shall be treated as a single conductor for calculating percentage conduit fill area. For cables that have elliptical cross sections, the cross-sectional area calculation shall be based on using the major diameter of the ellipse as a circle diameter.

29. Percent of Cross Section of Conduit and Tubing for Conductors (Table 1, Chap. 9, 2008 NEC)

Number of conductors	1	2	Over 2
All conductor types	53	31	40

NOTE 1 Table 1 is based on common conditions of proper cabling and alignment of conductors where the length of the pull and the number of bends are within reasonable limits. It should be recognized that, for certain conditions, a larger size conduit or a lesser conduit fill should be considered.

NOTE 2 When pulling three conductors or cables into a raceway, if the ratio of the raceway (inside diameter) to the conductor or cable (outside diameter) is between 2.8 and 3.2, jamming can occur. While jamming can occur when pulling four or more conductors or cables into a raceway, the probability is very low.

30. Dimensions and Percent Area of Conduit and Tubing (Areas of Conduit or Tubing for the Combinations of Wires Permitted in Table 1, Chap. 9 of the NEC). Refer to Table 4, Chap. 9 in the NEC for these dimensions, which are different for each of the various tubular wiring methods recognized by the NEC.

31. Dimensions of Insulated Conductors and Fixture Wires. Refer to Table 5, Chap. 9 in the NEC for these dimensions.

32. Compact Aluminum Building Wire Nominal Dimensions and Areas. Refer to Table 5A, Chap. 9 in the NEC for these dimensions.

33. Minimum Wire-Bending Space at Terminals in Inches (mm) for conductors *not* entering or leaving through the wall opposite the terminal, from NEC Table 312.6(A).

Minimum bending space, in. (mm) at terminals ^a										
AWG or circular-mil size of wire	Wires per terminal									
	1		2		3		4		5	
	mm	in	mm	in	mm	in	mm	in	mm	in
14–10	Not specified									
8–6	38.1	1–1/2								
4–3	50.8	2								
2	63.5	2 1/2								
1	76.2	3								
1/0–2/0	88.9	3 1/2	127	5						
3/0–4/0	102	4	152	6	203	8				
250 kcmil	114	4 1/2	152	6	203	8	254	10		
300–350 kcmil	127	5	203	8	254	10	305	12		
400–500 kcmil	152	6	203	8	254	10	305	12	356	14
600–700 kcmil	203	8	254	10	305	12	356	14	406	16
750–900 kcmil	203	8	305	12	356	14	406	16	457	18
1,000–1,250 kcmil	254	10								
1,500–2,000 kcmil	305	12								

^aReprinted with permission from NFPA 70-2008, National Electrical Code®, Copyright © 2007, National Fire Protection Association, Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

NOTE Bending space at terminals shall be measured in a straight line from the end of the lug or wire connector (in the direction that the wire leaves the terminal) to the wall, barrier, or obstruction.

34. Minimum Width of Gutter and Wire-Bending Space in Inches (mm)
for conductors entering or leaving through the wall opposite the terminal, from NEC
Table 312.6(B).

Minimum wire bending space at terminals*									
Wire size (AWG or kcmil)		Wires per terminal							
All other conductors	Compact stranded AA-8000 aluminum alloy conductors (See Note 3)	1		2		3		4 or more	
		mm	in.	mm	in.	mm	in.	mm	in.
14–10	12–8	Not specified							
8	6	38.1	1½						
6	4	50.8	2						
4	2	76.2	3						
3	1	76.2	3						
2	1/0	88.9	3½						
1	2/0	114	4½						
1/0	3/0	140	5½	140	5½	178	7		
2/0	4/0	152	6	152	6	190	7½		
3/0	250	165 ^a	6½ ^a	165 ^a	6½ ^a	203	8		
4/0	300	178 ^b	7 ^b	190 ^c	7½ ^c	216 ^a	8½ ^a		
250	350	216 ^d	8½ ^d	229 ^d	8½ ^d	254 ^b	9 ^b	254	10
300	400	254 ^e	10 ^e	254 ^d	10 ^d	279 ^b	11 ^b	305	12
350	500	305 ^e	12 ^e	305 ^e	12 ^e	330 ^e	13 ^e	356 ^d	14 ^d
400	600	330 ^e	13 ^e	330 ^e	13 ^e	356 ^e	14 ^e	381 ^e	15 ^e
500	700–750	356 ^e	14 ^e	356 ^e	14 ^e	381 ^e	15 ^e	406 ^e	16 ^e
600	800–900	381 ^e	15 ^e	406 ^e	16 ^e	457 ^e	18 ^e	483 ^e	19 ^e
700	1000	406 ^e	16 ^e	457 ^e	18 ^e	508 ^e	20 ^e	559 ^e	22 ^e
750		432 ^e	17 ^e	483 ^e	19 ^e	559 ^e	22 ^e	610 ^e	24 ^e
800		457	18	508	20	559	22	610	24
900		483	19	559	22	610	24	610	24
1000		508	20						
1250		559	22						
1500		610	24						
1750		610	24						
2000		610	24						

*Reprinted with permission from NFPA 70-2008, National Electrical Code®, Copyright © 2007, National Fire Protection Association, Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject which is represented only by the standard in its entirety.

NOTES

1. Bending space at terminals shall be measured in a straight line from the end of the lug or wire connector in a direction perpendicular to the enclosure wall.

2. For removable and lay-in wire terminals intended for only one wire, bending space shall be permitted to be reduced by the following number of millimeters (inches).

^a12.7 mm (1/2 in.)

^b25.4 mm (1 in.)

^c38.1 mm (3/4 in.)

^d50.8 mm (2 in.)

^e76.2 mm (3 in.)

3. This column shall be permitted to determine the required wire bending space for compact stranded aluminum conductors in sizes up to 1000 kcmil and manufactured using AA-8000 series electrical grade aluminum alloy conductor material in accordance with 310.14.

35. Enclosed Switch Wiring Space^a (Enclosed and Dead-front Switches—UL98)

Maximum size of wire or cable involved	Minimum width and depth of wiring space		Minimum areas in square inches (mm ²) required for multiple wires based on factor of 2.5											
			Two wires		Three wires		Four wires		Five wires		Six wires		Seven wires	
	in	(mm)	in ²	(mm ²)	in ²	(mm ²)	in ²	(mm ²)	in ²	(mm ²)	in ²	(mm ²)	in ²	(mm ²)
10 AWG	3/8 ^b	9.5	0.23	148	0.34	219	0.46	297	0.57	368	0.68	439	0.80	516
8	1/2	12.7	0.43	277	0.64	413	0.85	548	1.07	690	1.28	826	1.50	968
6	5/8	15.9	0.62	400	0.93	600	1.24	800	1.55	1000	1.86	1200	2.17	1400
4	3/4	19.1	0.80	516	1.20	774	1.60	1032	2.00	1290	2.40	1548	2.80	1806
3	3/4	19.1	0.91	587	1.36	877	1.82	1174	2.27	1465	2.72	1755	3.18	2052
2	7/8	22.2	1.03	665	1.55	1000	2.06	1329	2.58	1665	3.10	2000	3.61	2329
1	1	25.4	1.36	877	2.04	1316	2.72	1755	3.40	2194	4.08	2632	4.76	3071
1/0	1	25.4	1.55	1000	2.33	1503	3.10	2000	3.88	2503	4.66	3006	5.43	3503
2/0	1	25.4	1.79	1155	2.68	1729	3.58	2310	4.47	2884	5.36	3458	6.26	4039
3/0	1-1/8	28.6	2.08	1342	3.11	2006	4.16	2684	5.19	3348	6.22	4013	7.27	4690
4/0	1-1/4	31.8	2.42	1561	3.63	2342	4.84	3123	6.05	3903	7.26	4684	8.47	5465
250 MCM	1-3/8	34.9	2.96	1910	4.44	2865	5.92	3819	7.40	4774	8.88	5729	10.36	6684
300	1-1/2	38.1	3.42	2206	5.13	3310	6.84	4413	8.55	5516	10.26	6619	11.96	7716
350	1-1/2	38.1	3.81	2458	5.72	3690	7.62	4916	9.53	6148	11.44	7381	13.34	8606
400	1-5/8	41.3	4.18	2697	6.27	4045	8.36	5394	10.45	6742	12.54	8090	14.63	9439
500	1-3/4	44.5	4.92	3174	7.38	4761	9.84	6348	12.30	7935	14.76	9523	17.22	11110
600	1-7/8	47.6	5.97	3852	8.96	5781	11.94	7703	14.93	9632	17.92	11561	20.90	13484
700	2	50.8	6.68	4310	10.02	6465	13.36	8619	16.70	10774	20.04	12929	23.38	15083
750	2	50.8	7.04	4542	10.56	6813	14.08	9084	17.60	11355	21.12	13626	24.64	15896
800	2-1/8	54.0	7.39	4768	11.09	7155	14.78	9535	18.48	11923	22.18	14310	25.87	16690
900	2-1/4	57.2	8.09	5219	12.13	7826	16.18	10439	20.22	13045	24.26	15652	28.31	18264
1000	2-1/4	57.2	8.77	5658	13.15	8484	17.54	11316	21.92	14142	26.30	16968	30.69	19800
1250	2-1/2	63.5	11.03	7116	16.55	10677	22.06	14232	27.58	17794	33.10	21355	38.61	24910
1500	2-3/4	69.9	12.74	8219	19.11	12329	25.48	16439	31.85	20548	38.22	24658	44.59	28768
1750	2-7/8	73.0	14.45	9323	21.67	13981	28.90	18645	36.12	23303	43.34	27961	50.57	32626
2000	3-1/8	79.4	16.04	10348	24.06	15523	32.08	20697	40.10	25871	48.12	31045	56.14	36219

^aThis material is reproduced with the permission of Underwriters Laboratories, Inc.[®], Copyright 1995[®].

^bThe minimum clear width and depth of a wiring space in an enclosed switch marked as acceptable for use as service equipment is to be not less than 1/2 inch (12.7 mm) in any case.

36. Expansion Characteristics of PVC Rigid Nonmetallic Conduit Coefficient of Thermal Expansion. The table for expansion characteristics is Table 347.44 of the NEC.

37. Elevation of Unguarded Energized Parts above Working Space^a
(Table 110.34(E), 2008 (NEC))

Nominal voltage between phases	Elevation
601–7500 V	2.8 m (9 ft)
7501–35,000 V	2.9 m (9½ ft)
Over 35,000 V	2.19 m + 9.5 mm/kV above 35 9½ ft + 0.37 in./kV above 35

^aReprinted with permission from NFPA 70-2008, National Electrical Code®, Copyright © 2007, National Fire Protection Association., Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

38. Ordinary Ratings of Overload Protective Devices, in Amperes

Plug fuses	Cartridge fuses ^a	Large-sized magnetic breakers		Small magnetic breakers	Thermal breakers ^b	Time-lag fuses		Overload releases relays and for use with manual or magnetic switches
		Rating	Range of setting			Screw-base type	Cartridge type	
	1	3	3–6	Any ampere or fractional-ampere rating from 50 mA to 35 A				
3	3	6	6–12		10	1.0	1	1/2
6	6	10	10–20		15	1.25	1.25	3/4
10	10	15	15–30		20	1.6	1.6	1
15	15	20	20–40		25	2.0	2.0	1 1/2
20	20	25	25–50		35	2.5	2.5	2
25	25	35	35–70		50	3.2	3.2	2 1/2
30	30	50	50–100		70	4.0	4.0	3
...	35	70	70–140		90	5.0	5.0	3 1/2
...	40	90	90–180		100	6.25	6.25	4
...	45	100	100–200		125	8.0	8	4 1/2
...	50	125	125–250		150	10.0	10	5
...	60	150	150–300		175	12.0	12	6
...	70	175	175–350		200	14.0	15	7
...	80	200	200–400		225	15.0	20	8
...	90	225	225–450		250	20.0	25	9
...	100	250	250–500		275	25.0	30	10
...	110	275	275–550		300	30.0	35	12
...	125	300	300–600		325	40	14
...	150	325	325–650		350	45	16
...	175	350	350–700		400	50	18
...	200	400	400–800		450	60	20
...	225	500	500–1,000		500	70	22
...	250	600	600–1,200		550	80	24

(Continued)

38. Ordinary Ratings of Overload Protective Devices, in Amperes (Continued)

Plug fuses	Cartridge fuses ^a	Large-sized magnetic breakers		Small magnetic breakers	Thermal breakers ^b	Time-lag fuses		Overload releases relays and for use with manual or magnetic switches
		Rating	Range of setting			Screw-base type	Cartridge type	
...	300	800	800–1,600		600	90	28
...	350	1,000	1,000–2,000		100	32
...	400	1,200	1,200–2,400		110	36
...	450	1,600	1,600–3,200		125	40
...	500	2,000	2,000–4,000		150	45
...	600	2,500	2,500–5,000		175	50
...	...	3,000	3,000–6,000		200	55
...	...	4,000	4,000–8,000		225	60
...	...	5,000	5,000–10,000		250	65
...	...	6,000	6,000–12,000		300	70
...	...	8,000	8,000–16,000		350	75
...	...	10,000	10,000–20,000		400	80
...	450	
...	500	
...	600	

^aClass H, J, or K fuses. Class G fuses are 15, 20, 25, 30, 40, 45, 50, and 60 A.

^bNonadjustable thermal-magnetic breakers.

39. Nonrenewable Cartridge Fuses (Underwriters Laboratories Inc.)

UL listing covers cartridge-enclosed fuses of the nonrenewable type, rated 0–600 amp, 250 V, 0–1200 amp, 300 V, 0–6000 amp, 600 V. These fuses are intended for use on ac circuits only unless also marked with a dc voltage rating. These fuses are suitable for branch circuit and service overcurrent protection in accordance with the requirements of the National Electrical Code.

Fuses designated as Class K1, K5, K9 (0–600 amp, 250 V, ac, or 600 V, ac) are classified as to interrupting capacity and in terms of maximum clearing ampere squared seconds and maximum peak let-through current. They incorporate dimensional features equivalent to, and are interchangeable with Class H Fuses. They are not marked “Current Limiting.”

Fuses designated as Class RK1 and RK5 (0–600 amps, 250 V, ac or 600 V, ac) are high interrupting capacity types and are marked “Current Limiting.” They are classified in terms of maximum clearing ampere squared seconds and maximum peak let-through current at 50, 100, and 200 thousand rms symmetrical amperes. They incorporate features which permit their insertion into Class H and K fuse-holders. Also, they are provided with a feature which allows their insertion into rejection type fuseholders designed to accept only Class RK1 or RK5 fuses.

Fuses designated as Class CC (0–30 amp, 600 V, ac) are high interrupting capacity types and are marked “Current Limiting.”

Fuses designated as Class G (0–60 amp, 480 V, ac) are high interrupting capacity types and are marked “Current Limiting.”

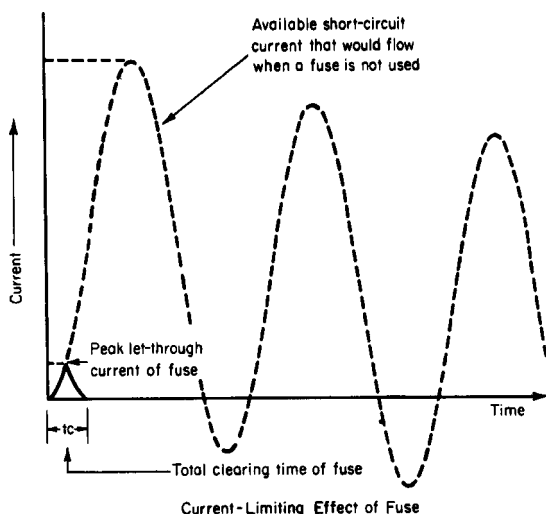
Fuses designated as Class J (0–600 amp, 600 V, ac) or Class L (601–6000 amp, 600 V, ac) are high interrupting capacity types and are marked “Current Limiting.”

Fuses designated as Class T (0–1200 amp, 300 V and 0–800 amp, 600 V, ac) are high interrupting capacity types and are marked “Current Limiting.”

The term “Current Limiting” indicates that a fuse, when tested on a circuit capable of delivering a specific short circuit current (rms amperes symmetrical) at rated voltage, will start to melt within 90 electrical degrees and will clear the circuit within 180 electrical degrees ($1/2$ cycle).

Because the time required for a fuse to melt is dependent on the available current of the circuit, a fuse which may be “Current Limiting” when subjected to a specific short circuit current (rms amperes symmetrical) may not be current limiting on a circuit of lower maximum available current.

The following tables indicate the maximum permissible let-through values which are obtained when the fuse is connected to a circuit having an available current tabulated in the following tables.



Maximum Peak Let-Through Current (I_p Amperes) and Clearing I^2t (ampere squared seconds)

Class CC fuses						
Rating amps	Between threshold and 50 KA		100 KA		200 KA	
	$I_p \times 10^3$	$I^2t \times 10^3$	$I_p \times 10^3$	$I^2t \times 10^3$	$I_p \times 10^3$	$I^2t \times 10^3$
0–15	3	2	3	2	4	3
16–20	3	2	4	3	5	3
21–30	6	7	7.5	7	12	7

Class G fuses			
Rating amps	Between threshold and 100 KA		
	$I_p \times 10^3$	$I^2t \times 10^3$	
0–1	1	0.8	
2–3	1.5	1.2	
4–6	2	1.8	
7–10	3	2.8	
11–15	4	3.8	
16–20	5	5	
21–25	6	6	
26–30	7	7	
31–35	8	14	
36–40	8.5	17	
41–45	9	18.5	
46–50	9.5	21	
51–60	10.5	25	

Class J and 600 Volt Class T fuses						
Rating amps	Between threshold and 50 KA		100 KA		200 KA	
	$I_p \times 10^3$	$I^2t \times 10^3$	$I_p \times 10^3$	$I^2t \times 10^3$	$I_p \times 10^3$	$I^2t \times 10^3$
0–30	6	7	7.5	7	12	7
31–60	8	30	10	30	16	30
61–100	12	60	14	80	20	80
101–200	16	200	20	300	30	300
201–400	25	1000	30	1100	45	1100
401–600	35	2500	45	2500	70	2500
601–800	50	4000	55	4000	75	4000

300 V Class T fuses						
Rating amps	Between threshold and 50 KA		100 KA		200 KA	
	$I_p \times 10^3$	$I^2t \times 10^3$	$I_p \times 10^3$	$I^2t \times 10^3$	$I_p \times 10^3$	$I^2t \times 10^3$
0–30	5	3.5	7	3.5	9	3.5
31–60	7	15	9	15	12	15
61–100	9	40	12	40	15	40
101–200	13	150	16	150	20	150
201–400	22	550	28	550	35	550
401–600	29	1000	37	1000	46	1000
601–800	37	1500	50	1500	65	1500
801–1200	50	3500	65	3500	80	4000

Class K fuses						
Rating, A	Maximum peak let-through current, $A \times 10^3$			Maximum clearing $I^2t (A^2 - s \times 10^3)$		
	K1	K5	K9	K1	K5	K9
30	10	11	14	10	50	50
60	12	21	28	40	200	250
100	16	25	35	100	500	650
200	22	40	60	400	1,600	3,500
400	35	60	80	1,200	5,000	15,000
600	50	80	130	3,000	10,000	40,000

Class L fuses						
Maximum peak let-through current (I_p) and clearing I^2t						
Rating, A	50 kA or threshold current whichever is greater		100 kA		200 kA	
	$I_p \times 10^3$	$I^2t \times 10^6$	$I_p \times 10^3$	$I^2t \times 10^6$	$I_p \times 10^3$	$I^2t \times 10^6$
601–800	10	80	10	80	10	80
801–1200	12	80	12	80	15	120
1201–1600	22	100	22	100	30	150
1601–2000	35	110	35	120	40	165
2001–2500	75	165	75	180
2501–3000	100	175	100	200
3001–4000	150	220	150	250
4001–5000	350	...	350	300
5001–6000	350	...	500	350

39. Nonrenewable Cartridge Fuses (*Continued*)

Class RK1 fuses						
Maximum peak let-through current (I_p) and clearing I^2t between threshold and						
Rating, A	50 kA		100 kA		200 kA	
	$I^2t \times 10^3$	$I_p \times 10^3$	$I^2t \times 10^3$	$I_p \times 10^3$	$I^2t \times 10^3$	$I_p \times 10^3$
0–30	10	6	10	10	11	12
31–60	40	10	40	12	50	16
61–100	100	14	100	16	100	20
101–200	400	18	400	22	400	30
201–400	1200	33	1200	35	1600	50
401–600	3000	43	3000	50	4000	70

Class RK5 fuses						
Maximum peak let-through current (I_p) and clearing I^2t between threshold and						
Rating, A	50 kA		100 kA		200 kA	
	$I^2t \times 10^3$	$I_p \times 10^3$	$I^2t \times 10^3$	$I_p \times 10^3$	$I^2t \times 10^3$	$I_p \times 10^3$
0–30	50	11	50	11	50	14
31–60	200	20	200	21	200	26
61–100	500	22	500	25	500	32
101–200	1600	32	1600	40	2000	50
201–400	5000	50	5000	60	6000	75
401–600	10000	65	10000	80	12000	100

Class K-1, K-5, K-9 fuses are marked, in addition to their regular voltage and current ratings, with an interrupting rating of 200,000, 100,000, or 50,000 amp (rms symmetrical).

Class CC, RK1, RK5, J, L, and T fuses are marked, in addition to their regular voltage and current ratings, with an interrupting rating of 200,000 amp (rms symmetrical).

Class G fuses are marked, in addition to their regular voltage and current ratings, with an interrupting rating of 100,000 amp (rms symmetrical).

Class H fuses have an interrupting rating of 10,000 amp (rms symmetrical).

When a fuse has a dc rating, it is marked with the dc voltage and interrupting rating.

A Class CC, G, J, K, or R fuse and a Class T fuse rated 600 A or less may have an interrupting rating of 10,000, 20,000, 50,000, or 100,000 amp dc. A Class T fuse rated 601–1200 A and a Class L fuse may have an interrupting rating of 20,000, 50,000, or 100,000 amp, dc. A Class H fuse may have an interrupting rating of 10,000 amp, dc.

Class K and R fuses which have been investigated for use in protecting trailing cables in dc circuits in mines are marked “Mine Duty” and have an interrupting rating of 20,000 amp, dc.

Equipment (a switch, motor starter, panelboard, etc.) which has been investigated and found suitable for use with these fuses is marked with the class of fuse intended to be used in the equipment and available current rating applicable to that piece of equipment. The equipment with these fuses installed, is suitable for use on circuits having a maximum available fault current up to the short circuit rating of the equipment, or the interrupting rating of the fuse, whichever is lower.

An interrupting rating on a fuse included in a piece of equipment does not automatically qualify the equipment in which the fuses are installed for use on circuits with higher available currents than the rating of the equipment itself.

Classes CC, G, H, J, K, L, R, and T fuses may be marked as having a time delay characteristic, such as “Time Delay,” “Dual Element,” or some equivalent designation.

The basic standards used to investigate products in this category are UL198B, “Class H Fuses,” UL198C, “High-Interrupting-Capacity Fuses, Current-Limiting Types,” UL198D, “Class K Fuses,” UL198L, “DC Fuses for Industrial Use,” UL198M, “Mine-Duty Fuses,” UL24801, “Low-Voltage Fuses—General Requirements,” UL248-4, “Class CC Fuses,” UL248-8, “Class J Fuses,” UL248-10, “Class L Fuses,” UL248-12, “Class R Fuses,” and UL248-15, “Class T Fuses.”

DEFINITIONS

Case size. Fuses of all ratings for which the size of the cartridge is the same; for example, 31–60 A, 61–100 A.

Clearing time. The total time measured from the beginning of the specified overcurrent condition until the interruption of the circuit, at rated voltage. It is equal to the sum of the melting time and the arcing time.

Current-limiting fuse. A fuse which safely interrupts all available currents within its interrupting rating and, within its current-limiting range, limits the clearing time at rated voltage to an interval equal to or less than the first major or symmetrical current-loop duration and limits peak let-through current to a value less than the peak current that would be possible if the fuse were replaced by a solid conductor of the same impedance.

Current-limiting range. The range of rms symmetrical available currents equal to or less than the interrupting rating in which the total clearing time at rated voltage and frequency is less than $1/2$ cycle.

Interrupting rating. The rating specifying the highest rms symmetrical, alternating current which the fuse is required to interrupt under the conditions of these requirements.

I^2t (amperes squared–seconds). An expression of the energy available as a result of current flow. The term is normally applied during the melting, arcing, or total clearing time of the fuse under which, in the latter instance, it is often designated as “clearing I^2t .”

Maximum energy. The test condition under which in a specified maximum time ($1/2$ cycle), the maximum amount of heat possible is generated in the fuse before clearing.

Melting time. The time required for the current to melt the current-responsive element.

Normal-frequency recovery voltage. The normal-frequency rms voltage impressed upon the fuse after the circuit has been interrupted and after high-frequency transients have subsided.

Peak let-through current (I_p). The maximum instantaneous current through the fuse during the total clearing time.

Rating tests. Carrying-capacity, temperature, and clearing-time–current tests.

Recovery voltage. The voltage impressed upon the fuse after a circuit has been interrupted.

Threshold current. The rms symmetrical available current at the threshold of the current-limiting range, when melting of the current-responsive element has occurred at approximately 90° on the symmetrical current wave and total clearing time is less than $1/2$ cycle at rated voltage and rated frequency and with a circuit power factor of 20 percent or less.

Threshold ratio. The ratio obtained by dividing the threshold current by the continuous-current rating of the fuse.


40. Number of Overcurrent Units, Such as Trip Coils or Relays, for Protection of Circuits^a

Systems	Number and location of overcurrent units ^b
Two-wire single-phase ac or dc, ungrounded	Two (one in each conductor). Diagram 1 of Fig. 12.1.
Two-wire single-phase ac or dc, one wire grounded	One (in ungrounded conductor). Diagram 2 of Fig. 12.1.
Two-wire single-phase ac or dc, midpoint grounded	Two (one in each conductor). Diagram 3 of Fig. 12.1.
Two-wire single-phase ac derived from three-phase, with ungrounded neutral	Two (one in each conductor). Diagram 4 of Fig. 12.1.
Two-wire single-phase derived from three-phase, grounded neutral system by using outside wires of three-phase circuit	Two (one in each conductor). Diagram 5 of Fig. 12.1.
Three-wire single-phase ac or dc, ungrounded neutral	Three (one in each conductor). Diagram 6 of Fig. 12.1.
Three-wire single-phase ac or dc, grounded neutral	Two (one in each conductor except neutral conductor). Diagram 7 of Fig. 12.1.
Three-wire two-phase, ac, common wire, ungrounded	Three (one in each conductor). Diagram 8 of Fig. 12.1.
Three-wire two-phase, ac, common wire, grounded	Two (one in each conductor except common conductor). Diagram 9 of Fig. 12.1.
Four-wire two-phase, ungrounded, phases separate	Four (one in each conductor). Diagram 10 of Fig. 12.1.
Four-wire two-phase, grounded neutral or five-wire two-phase, grounded neutral	Four (one in each conductor except neutral conductor). Diagrams 11 and 12 of Fig. 12.1.
Three-wire three-phase, ungrounded	Three (one in each conductor). Diagram 13 of Fig. 12.1. ^c
Three-wire three-phase, one wire grounded	Two (one in each ungrounded conductor). Diagram 14 of Fig. 12.1.
Three-wire three-phase, grounded neutral	Three (one in each conductor). Diagram 15 of Fig. 12.1. ^c
Three-wire three-phase, midpoint of one phase grounded	Three (one in each conductor). Diagram 17 of Fig. 12.1. ^c
Four-wire three-phase, grounded neutral	Three (one in each ungrounded conductor). Diagram 18 of Fig. 12.1. ^c
Four-wire three-phase, ungrounded neutral	Four (one in each conductor). Diagram 19 of Fig. 12.1.

^aRefer to Sec. 319 of Div. 9 and Fig. 12.1. When standard devices are not available with three or four overcurrent units as required in the table, it is permissible to substitute two overcurrent units and one fuse when three overcurrent units are called for and two overcurrent units and two fuses when four overcurrent units are called for. The fuse or fuses are to be placed in the conductors not containing an overcurrent unit. However, this practice of substituting fuses for overcurrent units is to be discouraged for obvious reasons.

^bAn overcurrent unit may consist of a series overcurrent tripping device or the combination of a current transformer and a secondary overcurrent tripping device. Either two or three secondary overcurrent tripping devices may be used with three current transformers on a three-phase system similar to those shown in Diagrams 15 and 18 in Fig. 12.1.

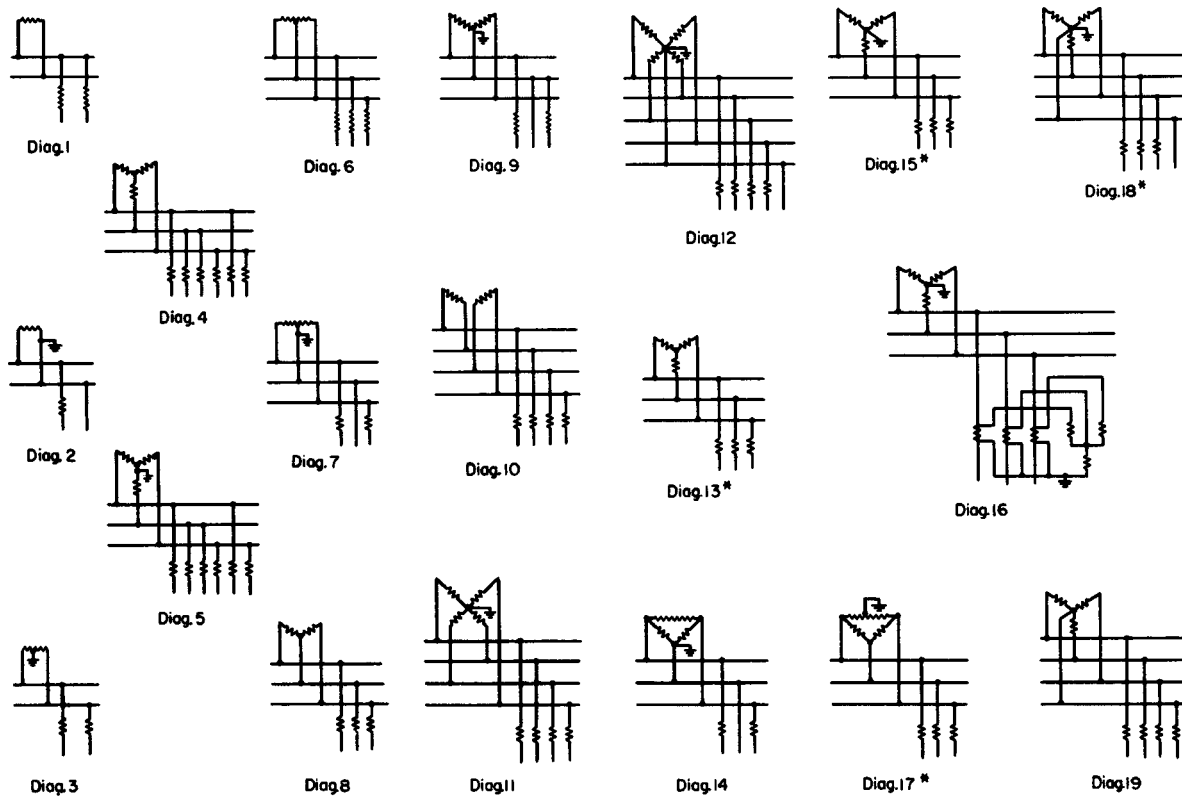^cWhen three current transformers are used instead of three series overcurrent tripping devices shown in Diagrams 13, 15, 17, and 18 in Fig. 12.1, the secondary tripping devices may consist of three secondary overcurrent tripping devices or two secondary overcurrent tripping devices with a residual current tripping device of a lower range. See Diagram 16 of Fig. 12.1.



*See Note c of Table 40.

FIGURE 12.1 Required number of overcurrent units.

41. Number and Location of Overload Units Other Than Fuses for Protection of Motors^a

(Table 430.37, 2008 NEC)

Kind of motor	Supply system	Number and location of overload units such as trip coils, relays, or thermal cutouts
One-phase, ac or dc	Two-wire, one-phase, ac or dc, ungrounded	One in either conductor
One-phase, ac or dc	Two-wire, one-phase, ac or dc, one conductor grounded	One in ungrounded conductor
One-phase, ac or dc	Three-wire, one-phase, ac or dc, grounded neutral conductor	One in either ungrounded conductor
One-phase ac	Any three-phase	One in ungrounded conductor
Two-phase ac	Three-wire, two-phase, ac, ungrounded	Two, one in each phase
Two-phase ac	Three-wire, two-phase, ac, one conductor grounded	Two in ungrounded conductors
Two-phase ac	Four-wire, two-phase ac, grounded or ungrounded	Two, one per phase in ungrounded conductors
Two-phase ac	Grounded neutral or five-wire, two-phase ac, ungrounded	Two, one per phase in any ungrounded phase wire
Three-phase ac	Any three-phase	Three, one in each phase ^b

^aReprinted with permission from NFPA 70-2008, National Electrical Code®, Copyright © 2007, National Fire Protection Association, Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

^bException. An overload unit in each phase shall not be required where overload protection is provided by other approved means.

42. Motor code letters and locked-rotor kilovolt-amperes. The National Electrical Manufacturers Association has adopted a standard of identifying code letters that may be marked by the manufacturer on motor nameplates to show the motor kilovolt-ampere input with a locked rotor. The meaning of the code letters is as follows:

Letter designation	kVA per hp with locked rotor	Letter designation	kVA per hp with locked rotor
A	0–3.14	K	8.0–8.99
B	3.15–3.54	L	9.0–9.99
C	3.55–3.99	M	10.0–11.19
D	4.0 –4.49	N	11.2–12.49
E	4.5 –4.99	P	12.5–13.99
F	5.0 –5.59	R	14.0–15.99
G	5.6 –6.29	S	16.0–17.99
H	6.3 –7.09	T	18.0–19.99
J	7.1 –7.99	U	20.0–22.39
		V	22.4 and up

43. Maximum Rating or Setting of Motor Branch-Circuit, Short-Circuit, and Ground-Fault Protective Devices^a

(Table 430.52, 2008 NEC)

Type of motor	Percent of full-load current			
	Nontime delay fuse ^c	Dual element (time-delay) fuse ^c	Instantaneous trip breaker	Inverse time breaker ^b
Single-phase motors	300	175	800	250
AC polyphase motors other than wound-rotor	300	175	800	250
Squirrel Cage:				
Other than Design B energy efficient	300	175	800	250
Design B energy-efficient	300	175	1100	250
Synchronous	300	175	800	250
Wound rotor	150	150	800	150
Direct-current (constant voltage)	150	150	250	150

NOTE For certain exceptions to the values specified, see 430.54 of the NEC.

Synchronous motors of the low-torque, low-speed type (usually 450 rpm or lower), such as are used to drive reciprocating compressors, pumps, etc., that start unloaded, do not require a fuse rating or circuit-breaker setting in excess of 200 percent of full-load current.

^aReprinted with permission from NFPA 70-2008, National Electrical Code®, Copyright © 2007, National Fire Protection Association, Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

^bThe values given in the last column also cover the ratings of nonadjustable inverse-time types of circuit breakers that may be modified as in Sec. 430.52(C)(1), Exception No. 1. and No. 2.

^cThe values in the Nontime Delay Fuse column apply to Time-Delay Class CC fuses.

44. Conversion Table of Single-Phase Locked Rotor Currents for Selection of Disconnecting Means and Controllers as Determined from Horsepower and Voltages Rating

(Table 430.251(A), 2008 NEC)

For use only with Secs. 430.110, 440.12, 440.41, and 455.8(C) of the NEC.

Rated HP	Maximum locked-rotor current amperes single phase		
	115 volts	208 volts	230 volts
1/2	58.8	32.5	29.4
3/4	82.8	45.8	41.4
1	96	53	48
1 1/2	120	66	60
2	144	80	72
3	204	113	102
5	336	186	168
7 1/2	480	265	240
10	600	332	300

Reprinted with permission from NFPA 70-2008, National Electrical Code®, Copyright © 2007, National Fire Protection Association, Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

45. Conversion Table of Polyphase Design B, C, and D Maximum Locked-Rotor Currents for Selection of Disconnecting Means and Controllers as Determined from Horsepower and Voltage Rating and Design Letter
(Table 430.251(B), 2008 NEC)

For use only with Secs. 430.110, 440.12, 440.41, and 455.8(C) of the NEC.

Rated HP	Maximum motor locked-rotor current amperes two- and three-phase design B, C, and D*					
	115 volts	200 volts	208 volts	230 volts	460 volts	575 volts
	B,C,D	B,C,D	B,C,D	B,C,D	B,C,D	B,C,D
1/2	40	23	22.1	20	10	8
3/4	50	28.8	27.6	25	12.5	10
1	60	34.5	33	30	15	12
1 1/2	80	46	44	40	20	16
2	100	57.5	55	50	25	20
3		73.6	71	64	32	25.6
5		105.8	102	92	46	36.8
7 1/2		146	140	127	63.5	50.8
10		186.3	179	162	81	64.8
15		267	257	232	116	93
20		334	321	290	145	116
25		420	404	365	183	146
30		500	481	435	218	174
40		667	641	580	290	232
50		834	802	725	363	290
60		1001	962	870	435	348
75		1248	1200	1085	543	434
100		1668	1603	1450	725	580
125		2087	2007	1815	908	726
150		2496	2400	2170	1085	868
200		3335	3207	2900	1450	1160
250					1825	1460
300					2200	1760
350					2550	2040
400					2900	2320
450					3250	2600
500					3625	2900

Reprinted with permission from NFPA 70-2008, National Electrical Code®, Copyright © 2007, National Fire Protection Association, Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

*Design A motors are not limited to a maximum starting current or locked rotor current.

46. Horsepower Ratings of Fused Switches

(Underwriters Laboratories, Inc.—Standard UL98)

Rating of fuseholders, A	Switch rating, V	“Standard” and “maximum” horsepower ratings							
		Two-pole, single-phase		Two-pole, dc		Three-pole, three-phase		Four-pole, two-phase	
30	120 ac	1/2	2*			1 1/2	3*	2	3*
60		1 1/2	3*			3	7 1/2*	3	10*
30	125 dc			2	3*				
60				5					
30	240 ac	1 1/2	3*			3	7 1/2*	3	10*
60		3	10*			7 1/2	15*	7 1/2	20*
100		7 1/2	15*			15	30*	15	30*
200		15				25	60*	30	50*
400						50	125*	50	
600						75	200*		
800						100	250*		
30	250 dc			5					
60				10					
100				20					
200				40					
400				50					
30	480 ac	3	7 1/2*			5	15*	7 1/2	20*
60		5	20*			15	30*	15	40*
100		10	30*			25	60*	25	50*
200		25	50*			50	125*	50	
400						100	250		
600						150	400*		
800						200	500*		
30	600 ac	3	10*			7 1/2	20*	10	25*
60		10	25*			15	50*	20	50*
100		15	40*			30	75*	30	50*
200		30	50*			60	150*	50	
400						125	350*		
600						200	500*		
800						250	500*		
30	600 dc			10	15*				
60				25	30*				
100				40	50*				
200				50					

*The starting current of motors of more than the standard horsepower rating may require the use of fuses with appropriate time delay characteristics.

47. Minimum Branch-Circuit Sizes for Motors

Based on conductor ampacities when not more than three conductors are installed in a raceway or cable.

Full-load current rating of motor, A	Wire size, AWG or 1000 cmil			
	60°C		75°C	
	Cu	Al	Cu	Al
12 or less	14 AWG	12 AWG	14 AWG	12 AWC
to 16	12	10	12	10
to 20	10	10	10	10
to 24	10	8	10	8
to 32	8	6	8	8
to 36	6	4	8	6
to 40	6	4	8	6
to 44	6	4	6	4
to 52	4	3	6	4
to 56	4	2	4	3
to 60	3	2	4	3
to 64	3	1	4	2
to 68	3	1	4	2
to 72	2	1/0	3	2
to 76	2	1/0	3	1
to 80	1	1/0	3	1
to 88	1	2/0	2	1/0
to 92	1/0	2/0	2	1/0
to 96	1/0	3/0	1	1/0
to 100	1/0	3/0	1	2/0
to 104	2/0	3/0	1	2/0
to 108	2/0	4/0	1/0	2/0
to 116	2/0	4/0	1/0	3/0
to 120	3/0	4/0	1/0	3/0
to 124	3/0	250 kcmil	2/0	3/0
to 132	3/0	250	2/0	4/0
to 136	4/0	250	2/0	4/0
to 140	4/0	300	2/0	4/0
to 144	4/0	300	3/0	4/0
to 152	4/0	300	3/0	250 kcmil
to 156	4/0	350	3/0	250
to 160	250 kcmil	350	3/0	250
to 164	250	350	4/0	250
to 168	250	350	4/0	300
to 172	250	400	4/0	300
to 180	300	400	4/0	300
to 184	300	500	4/0	300
to 200	350	500	260 kcmil	350
to 204	350	500	250	400

48. Maximum Allowable Voltage Drop

In accordance with good practice, refer to Sec. 35 of Div. 3.

Circuits	Voltage drop, percent	System voltages						Remarks
		110	115	220	230	440	550	
		Voltage drop						
For total drop of 5 percent								
Lighting Branches	3	3.3	3.4	6.6	6.9			In accordance with recommendations of the National Electrical Code
Mains and feeders combined	2	2.2	2.3	4.4	4.6			
Total	5	5.5	5.8	11.0	11.5			
For total drop of 4 percent								
Lighting Branches	2	2.2	2.3	4.4	4.6			In accordance with recommendations prepared by Industry Committee on Interior Wiring Design
Mains and feeders combined	2	2.2	2.3	4.4	4.6			
Total	4	4.4	4.6	8.8	9.2			
For total drop of 5 percent								
Power Branches	2	2.2	2.3					In accordance with recommendations prepared by Industry Committee on Interior Wiring Design
Mains and feeders combined	3	3.3	3.5					
Total	5	5.5	5.8					

(Continued)

48. Maximum Allowable Voltage Drop (Continued)

Circuits	Voltage drop, percent	System voltages						Remarks
		110	115	220	230	440	550	
		Voltage drop						
For total drop of 5 percent								
Power Branches	1	2.2	2.3	4.4	5.5	In accordance with recommendations prepared by Industry Committee on Interior Wiring Design
Mains and feeders combined	4	8.8	9.2	17.6	22.0	
Total	5	11.0	11.5	22.0	27.5	
For total drop of 5 percent								
Power Branches	3	6.6	6.9	13.2	16.5	In accordance with recommendations of the National Electrical Code
Mains and feeders combined	2	4.4	4.6	8.8	11.0	
Total	5	11.0	11.5	22.0	27.5	




See Sec. 59 of Div. 3.



50. The Effect of Inductance can be Neglected unless the Size of Wire Exceeds the Following Values:

Type of load	Size of wire with following spacings										
	In conduit	2½ in	4 in	5 in	6 in	8 in	12 in	18 in	24 in	36 in	48 in
Incandescent lamps: 60 Hz	4/0	2/0	1/0	1/0	1	1	2	2	2	3	3
Incandescent lamps: 25 Hz	600,000	400,000	300,000	4/0	4/0	4/0	3/0	3/0	3/0	3/0	2/0
Motors: 60 Hz	1	3	4	4	5	5	5				
Motors: 25 Hz	4/0	00	0	0	0	1	1	2	2	2	3

51. Effective Spacings of Wires to Use for Different Systems

System	Arrangement of wires	Effective spacing that should be used with Mershon diagram or table of ratio of reactance to resistance
Single-phase three-wire	Any	Use spacing between outside wires
Two-phase, any number of wires	Any	Use a spacing equal to average distance between centers of wires of the same phase
Three-phase		Effective spacing = $\sqrt[3]{ABC}$ when wires are transposed so that each wire occupies each position for approximately one-third of the length of the line
		Effective spacing = $\sqrt[3]{ABC}$ when wires are transposed so that each wire occupies each position for approximately one-third of the length of the line
		Effective spacing = 1.26A when wires are transposed so that each wire occupies each position for approximately one-third of the length of the line The position of the neutral in a four-wire system does not affect the spacing

52. Approximate Power Factors of Apparatus

Type of apparatus	Power factor
Incandescent lamps and heaters.....	1.0
Fluorescent lamps and mercury-vapor lamps ^a	0.5–0.95
Induction motors: ^b	
1 hp.....	0.67
2 hp.....	0.73
3 hp.....	0.80
5 hp.....	0.83
7½–25 hp.....	0.86
30–50 hp.....	0.89
60–125 hp.....	0.92
150–200 hp.....	0.93
Synchronous motors.....	0.8 to 1.0 leading

NOTE All power factors less than unity are lagging except for synchronous motors.

^aFor more accurate information refer to Div. 10.

^bThe values of power factor for induction motors are average values when the motors are operating at 75 percent of rated load.


53. 60-Hz Ratios: Reactance to Resistance

54. 25-Hz Ratios: Reactance to Resistance

55. Alternating-Current Drop Factors

Ratio of reactance to resistance	Power factor							
	1.00	0.95	0.90	0.85	0.80	0.70	0.60	0.40
	Drop factor							
0.1	1.00	1.00	1.00	0.94	0.88	0.80	0.70	0.60
0.2	1.00	1.01	1.01	0.98	0.92	0.86	0.82	0.67
0.3	1.00	1.05	1.05	1.02	0.99	0.93	0.89	0.74
0.4	1.00	1.08	1.10	1.08	1.04	1.00	0.93	0.82
0.5	1.00	1.11	1.14	1.13	1.10	1.07	1.01	0.92
0.6	1.01	1.15	1.18	1.19	1.15	1.14	1.09	1.01
0.7	1.02	1.18	1.23	1.24	1.21	1.20	1.17	1.11
0.8	1.02	1.21	1.28	1.29	1.28	1.27	1.24	1.20
0.9	1.03	1.25	1.33	1.34	1.34	1.35	1.32	1.29
1.0	1.04	1.28	1.37	1.39	1.40	1.41	1.39	1.38
1.1	1.05	1.32	1.41	1.44	1.45	1.48	1.47	1.46
1.2	1.06	1.35	1.46	1.30	1.51	1.55	1.54	1.55
1.3	1.07	1.39	1.51	1.55	1.57	1.62	1.63	1.64
1.4	1.08	1.43	1.55	1.61	1.64	1.70	1.71	1.72
1.5	1.10	1.47	1.60	1.67	1.70	1.77	1.80	1.81
1.6	1.10	1.51	1.65	1.74	1.77	1.85	1.87	1.90
1.7	1.13	1.55	1.70	1.79	1.84	1.92	1.95	1.99
1.8	1.15	1.59	1.76	1.85	1.91	1.99	2.04	2.08
1.9	1.17	1.63	1.82	1.91	1.98	2.06	2.11	2.16
2.0	1.13	1.68	1.87	1.96	2.04	2.14	2.19	2.25
2.1	1.20	1.72	1.92	2.03	2.10	2.21	2.28	2.35
2.2	1.22	1.77	1.98	2.09	2.17	2.29	2.37	2.45
2.3	1.23	1.82	2.03	2.15	2.23	2.37	2.45	2.53
2.4	1.25	1.87	2.09	2.22	2.30	2.44	2.53	2.62
2.5	1.27	1.91	2.14	2.28	2.37	2.52	2.60	2.71
2.6	1.30	1.95	2.20	2.34	2.44	2.60	2.67	2.80
2.7	1.32	1.99	2.26	2.41	2.51	2.68	2.74	2.98
2.8	1.35	2.05	2.32	2.47	2.57	2.76	2.82	3.07
2.9	1.37	2.10	2.39	2.54	2.64	2.83	2.91	3.15
3.0	1.40	2.15	2.45	2.60	2.72	2.90	3.00	3.23
3.1	1.42	2.20	2.51	2.66	2.80	2.97	3.10	3.31
3.2	1.45	2.26	2.57	2.73	2.87	3.05	3.20	3.39
3.3	1.48	2.31	2.63	2.80	2.93	3.12	3.30	3.47
3.4	1.51	2.36	2.69	2.87	3.00	3.20	3.39	3.56
3.5	1.53	2.42	2.74	2.94	3.08	3.27	3.48	3.65
3.6	1.57	2.47	2.80	3.00	3.15	3.35	3.56	3.75
3.7	1.60	2.52	2.86	3.07	3.23	3.43	3.65	3.85

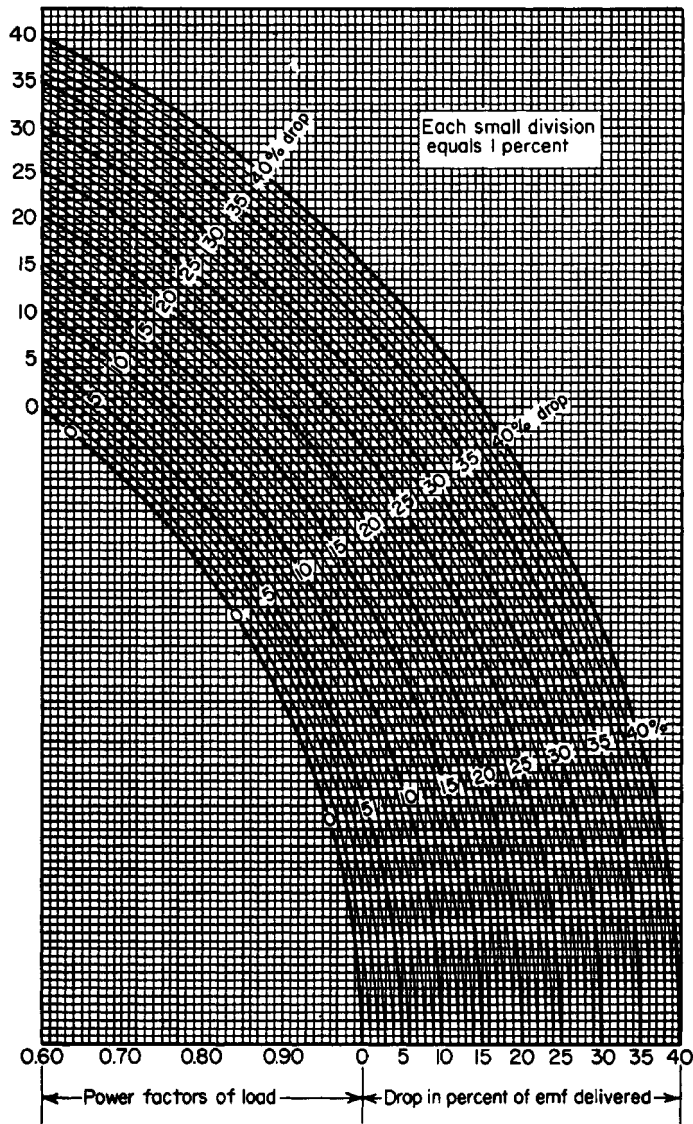56. Mershon diagram. See Sec. 72 of Div. 3 for directions as to the diagram's use and application. The side of each small square equals 1 percent: percentage of resistance is measured horizontally, and percentage of reactance vertically.



57. Conductor Properties^a

(Table 8, Chap. 9, 2008 NEC)

Size, AWG or 1000 cmil	Area, cmil	DC resistance at 75°C(167°F)						
		Standing		Overall		Copper		Aluminum Ω/1000 ft
		Quantity	Diameter, in	Diameter, in	Area, in ²	Uncoated, Ω/1000 ft	Coated, Ω/1000 ft	
18 AWG	1,620	1	0.040	0.001	7.77	8.08	12.8
18	1,620	7	0.015	0.046	0.002	7.95	8.45	13.1
16	2,580	1	0.051	0.002	4.89	5.08	8.05
16	2,580	7	0.019	0.058	0.003	4.99	5.29	8.21
14	4,110	1	0.064	0.003	3.07	3.19	5.06
14	4,110	7	0.024	0.073	0.004	3.14	3.26	5.17
12	6,530	1	0.081	0.005	1.93	2.01	3.18
12	6,530	7	0.030	0.092	0.006	1.98	2.05	3.25
10	10,380	1	0.102	0.008	1.21	1.26	2.00
10	10,380	7	0.038	0.116	0.011	1.24	1.29	2.04
8	16,510	1	0.128	0.013	0.764	0.786	1.26
8	16,510	7	0.049	0.146	0.017	0.778	0.809	1.28
6	26,240	7	0.061	0.184	0.027	0.491	0.510	0.808
4	41,740	7	0.077	0.232	0.042	0.308	0.321	0.508
3	52,620	7	0.087	0.260	0.053	0.245	0.254	0.403
2	66,360	7	0.097	0.292	0.067	0.194	0.201	0.319
1	83,690	19	0.066	0.332	0.087	0.154	0.160	0.253
1/0	105,600	19	0.074	0.373	0.109	0.122	0.127	0.201
2/0	133,100	19	0.084	0.419	0.138	0.0967	0.101	0.159
3/0	167,800	19	0.094	0.470	0.173	0.0766	0.0797	0.126
4/0	211,600	19	0.106	0.528	0.219	0.0608	0.0626	0.100
250 MCM	37	0.082	0.575	0.260	0.0515	0.0535	0.0847
300	37	0.090	0.630	0.312	0.0429	0.0446	0.0707
350	37	0.097	0.681	0.364	0.0367	0.0382	0.0605
400	37	0.104	0.728	0.416	0.0321	0.0331	0.0529
500	37	0.116	0.813	0.519	0.0258	0.0265	0.0424
600	61	0.99	0.893	0.626	0.0214	0.0223	0.0353
700	61	0.107	0.964	0.730	0.0184	0.0189	0.0303
750	61	0.111	0.998	0.782	0.0171	0.0176	0.0282
800	61	0.114	1.03	0.834	0.0161	0.0166	0.0265
900	61	0.122	1.09	0.940	0.0143	0.0147	0.0235
1000	61	0.128	1.15	1.04	0.0129	0.0132	0.0212
1250	91	0.117	1.29	1.30	0.0103	0.0106	0.0169
1500	91	0.128	1.41	1.57	0.00858	0.00883	0.0141
1750	127	0.117	1.52	1.83	0.00735	0.00756	0.0121
2000	127	0.126	1.63	2.09	0.00643	0.00662	0.0106

^aReprinted with permission from NFPA 70-2008, National Electrical Code®, Copyright © 2007, National Fire Protection Association, Quincy, Massachusetts 02269. This reprinted material is not the complete and official position of the NFPA on the referenced subject, which is represented only by the standard in its entirety.

These resistance values are valid *only* for the parameters as given. Using conductors having coated strands, different stranding type, and, especially, other temperatures, changes the resistance.

Formula for temperature change: $R_2 = R_1[1 + \alpha(T_2 - 75)]$ where $\alpha_{cu} = 0.00323$ and $\alpha_{AL} = 0.00330$ at 75°C.

Class B stranding is listed as well as solid for some sizes. Its overall diameter and area are those of its circumscribing circle.

Conductors with compact and compressed stranding have about 9% and 3%, respectively, smaller bare conductor diameters than those shown.

IACS conductivities used: bare copper = 100%; aluminum = 61%.

See Table 5A, NEC for actual compact cable dimensions.

58. Metric practice (ANSI/IEEE 268-1982). The International System of Units, developed and maintained by the General Conference on Weights and Measures (abbreviated CGPM from the official French name *Conférence Générale des Poids et Mesures*), is intended as a basis for worldwide standardization of measurement units. The name International System of Units and the international abbreviation SI were adopted by the Eleventh CGPM in 1960.

CLASSES OF SI UNITS SI units are divided into three classes: base units, supplementary units, and derived units

BASE UNITS SI is based on seven well-defined units which by convention are regarded as dimensionally independent:

Quantity	Unit	Symbol
Length	meter	m
Mass	kilogram	kg
Time	second	s
Electric current	ampere	A
Thermodynamic temperature	kelvin	K
Amount of substance	mole	mol
Luminous intensity	candela	Cd

SUPPLEMENTARY UNITS The units listed below are called *supplementary units* and may be regarded either as base units or as derived units:

Quantity	Unit	Symbol
Plane angle	radian	rad
Solid angle	steradian	Sr

DERIVED UNITS Derived units are formed by combining base units, supplementary units, and other derived units according to the algebraic relations linking the corresponding quantities. The symbols for derived units are obtained by means of the mathematical signs for multiplication, division, and use of exponents. For example, the SI unit for velocity is the meter per second (m/s or $\text{m}\cdot\text{s}^{-1}$), and that for angular velocity is the radian per second (rad/s or $\text{rad}\cdot\text{s}^{-1}$). Derived SI units which have special names and symbols approved by the CGPM are listed below:

Quantity	Unit	Symbol	Formula
Frequency (of a periodic phenomenon)	hertz	Hz	1/s
Force	newton	N	$(\text{kg}\cdot\text{m})/\text{s}^2$
Pressure, stress	pascal	Pa	N/m^2
Energy, work, quantity of heat	joule	J	$\text{N}\cdot\text{m}$
Power, radiant flux	watt	W	J/s
Quantity of electricity, electric charge	coulomb	C	$\text{A}\cdot\text{s}$
Electric potential, potential difference, electromotive force	volt	V	W/A
Capacitance	farad	F	C/V
Electric resistance	ohm	Ω	V/A
Conductance	Siemens	S	A/V
Magnetic flux	weber	Wb	$\text{V}\cdot\text{s}$
Magnetic flux density	tesla	T	Wb/m^2
Inductance	henry	H	Wb/A
Luminous flux	lumen	lm	$\text{cd}\cdot\text{sr}$
Illuminance	lux	lx	lm/m^2
Activity (of radionuclides)	becquerel ^a	Bq	1/s
Absorbed dose	gray ^a	Gy	J/kg

^aAdopted by the CGPM in 1975.

59. Some Common Derived Units of SI

Quantity	Unit	Symbol
Acceleration	meter per second squared	m/s^2
Angular acceleration	radian per second squared	rad/s^2
Angular velocity	radian per second	rad/s
Area	square meter	m^2
Concentration (of amount of substance)	mole per cubic meter	mol/m^3
Current density	ampere per square meter	A/m^2
Density, mass	kilogram per cubic meter	kg/m^3
Electric charge density	coulomb per cubic meter	C/m^3
Electric field strength	volt per meter	V/m
Electric flux density	coulomb per square meter	C/m^2
Energy density	joule per cubic meter	J/m^3
Entropy	joule per kelvin	J/K
Heat capacity	joule per kelvin	J/K
Heat Flux density	watt per square meter	W/m^2
Irradiance		
Luminance	candela per square meter	cd/m^2
Magnetic field strength	ampere per meter	A/m
Molar energy	joule per mole	J/mol
Molar entropy	joule per mole kelvin	$\text{J}/(\text{mol} \cdot \text{K})$
Molar heat capacity	joule per mole kelvin	$\text{J}/(\text{mol} \cdot \text{K})$
Moment of force	newton meter	$\text{N} \cdot \text{m}$
Permeability	henry per meter	H/m
Permittivity	farad per meter	F/m
Radiance	watt per square meter steradian	$\text{W}/(\text{m}^2 \cdot \text{sr})$
Radiant intensity	watt per steradian	W/sr
Specific heat capacity	joule per kilogram kelvin	$\text{J}/(\text{kg} \cdot \text{K})$
Specific energy	joule per kilogram	J/kg
Specific entropy	joule per kilogram kelvin	$\text{J}/(\text{kg} \cdot \text{K})$
Specific volume	cubic meter per kilogram	m^3/kg
Surface tension	newton per meter	N/m
Thermal conductivity	watt per meter kelvin	$\text{W}/(\text{m} \cdot \text{K})$
Velocity	meter per second	m/s
Viscosity, dynamic	pascal second	$\text{Pa} \cdot \text{s}$
Viscosity, kinematic	square meter per second	m^2/s
Volume	cubic meter	m^3
Wave number	1 per meter	$1/\text{m}$

60. Recommended Pronunciations

Prefix	Pronunciation (United States) ^a
Exa	ex' a (<i>a</i> as in <i>about</i>)
Peta	pet' a (<i>e</i> as in <i>pet</i> , <i>a</i> as in <i>about</i>)
Tera	as in <i>terrace</i>
Giga	jig' a (<i>i</i> as in <i>jig</i> , <i>a</i> as in <i>about</i>)
Mega	as in <i>megaphone</i>
Kilo	kill' oh
Hecto	heck' toe
Deka	deck' a (<i>a</i> as in <i>about</i>)
Deci	as in <i>decimal</i>
Centi	as in <i>centipede</i>
Milli	as in <i>military</i>
Micro	as in <i>microphone</i>
Nano	nan' oh (<i>an</i> as in <i>ant</i>)
Pico	peek' oh
Femto	fem' toe (<i>fem</i> as in <i>feminine</i>)
Atto	as in <i>anatomy</i>
Selected units	Pronunciation
Candela	can dell' a
Joule	rhyme with <i>tool</i>
Kilometer	kill' oh meter
Pascal	rhyme with <i>rascal</i>
Siemens	same as <i>seamen's</i>

61. Inch-Millimeter Equivalents

	0	1	2	3	4	5	6	7	8	9
In	mm									
0	0.0	25.4	50.8	76.2	101.6	127.0	152.4	177.8	203.2	228.6
10	254.0	279.4	304.8	330.2	355.6	381.0	406.4	431.8	457.2	482.6
20	508.0	533.4	558.8	584.2	609.6	635.0	660.4	685.8	711.2	736.6
30	762.0	787.4	812.8	838.2	863.6	889.0	914.4	939.8	965.2	990.6
40	1016.0	1041.4	1066.8	1092.2	1117.6	1143.0	1168.4	1193.8	1219.2	1244.6
50	1270.0	1295.4	1320.8	1346.2	1371.6	1397.0	1422.4	1447.8	1473.2	1498.6
60	1524.0	1549.4	1574.8	1600.2	1625.6	1651.0	1676.4	1701.8	1727.2	1752.6
70	1778.0	1803.4	1828.8	1854.2	1879.6	1905.0	1930.4	1955.8	1981.2	2006.6
80	2032.0	2057.4	2082.8	2108.2	2133.6	2159.0	2184.4	2209.8	2235.2	2260.6
90	2286.0	2311.4	2336.8	2362.2	2387.6	2413.0	2438.4	2463.8	2489.2	2514.6
100	2540.0	2565.4	2590.8	2616.2	2641.6	2667.0	2692.4	2717.8	2743.2	2768.6

NOTE All values in this table are exact, based on the relation 1 in = 25.4 mm. By manipulation of the decimal point any decimal Value or multiple of an inch may be converted to its exact equivalent in millimeters.

62. Inch-Millimeter Equivalents of Decimal and Common Fractions, from 1/64 to 1 in

Inch	1/2 s	1/4 s	8ths	16ths	32ds	64ths	Decimals of an inch ^a	Millimeters
						1	0.015 625	0.397
					1	2	0.031 25	0.794
						3	0.046 875	1.191
				1	2	4	0.062 5	1.588
						5	0.078 125	1.984
					3	6	0.093 75	2.381
						7	0.109 375	2.778
			1	2	4	8	0.125 0	3.175 ^a
						9	0.140 625	3.572
					5	10	0.156 25	3.969
						11	0.171 875	4.366
				3	6	12	0.187 5	4.762
						13	0.203 125	5.159
					7	14	0.218 75	5.556
						15	0.234 375	5.953
		1	2	4	8	16	0.250 0	6.350 ^a
						17	0.265 625	6.747
					9	18	0.281 25	7.144
						19	0.296 875	7.541
				5	10	20	0.312 5	7.938
						21	0.328 125	8.334
					11	22	0.343 75	8.731
						23	0.359 375	9.128
			3	6	12	24	0.375 0	9.525 ^a
						25	0.390 625	9.922
					13	26	0.406 25	10.319
						27	0.421 875	10.716
				7	14	28	0.437 5	11.112
						29	0.453 125	11.509
					15	30	0.468 75	11.906
						31	0.484 375	12.303
	1	2	4	8	16	32	0.500 0	12.700 ^a
						33	0.515 625	13.097
					17	34	0.531 25	13.494
						35	0.546 875	13.891
				9	18	36	0.562 5	14.288
						37	0.578 125	14.684
					19	38	0.593 75	15.081
						39	0.609 375	15.478
			5	10	20	40	0.625 0	15.875 ^a
						41	0.640 625	16.272
					21	42	0.656 25	16.669
						43	0.671 875	17.066
				11	22	44	0.687 5	17.462

(Continued)

62. Inch-Millimeter Equivalents of Decimal and Common Fractions, from 1/64 to 1 in (*Continued*)

Inch	1/2 s	1/4 s	8ths	16ths	32ds	64ths	Decimals of an inch ^a	Millimeters
						45	0.703 125	17.859
					23	46	0.718 75	18.256
						47	0.734 375	18.653
		3	6	12	24	48	0.750 0	19.050 ^a
						49	0.765 625	19.447
					25	50	0.781 25	19.844
						51	0.796 875	20.241
				13	26	52	0.812 5	20.638
						53	0.828 125	21.034
					27	54	0.843 75	21.431
						55	0.859 375	21.828
			7	14	28	56	0.875 0	22.225 ^a
						57	0.890 625	22.622
					29	58	0.906 25	23.019
						59	0.921 875	23.416
				15	30	60	0.937 5	23.812
						61	0.953 125	24.209
					31	62	0.968 75	24.606
						63	0.984 375	25.003
1	2	4	8	16	32	64	1.000 0	25.400 ^a

NOTE *Caution.* Convert only to the number of decimal places consistent with the stated or implied accuracy.
^aExact.

63. Definitions of Derived Units of the International System Having Special Names

Physical quantity	Unit and definition
Absorbed dose	The <i>gray</i> is the energy imparted by ionizing radiation to a mass of matter corresponding to one joule per kilogram.
Activity	The <i>becquerel</i> is the activity of a radionuclide having one spontaneous nuclear transition per second.
Electric capacitance	The <i>farad</i> is the capacitance of a capacitor between the plates of which there appears a difference of potential of one volt when it is charged by a quantity of electricity equal to one coulomb.
Electric conductance	The <i>Siemens</i> is the electric conductance of a conductor in which a current of one ampere is produced by an electric potential difference of one volt.
Electric inductance	The <i>henry</i> is the inductance of a closed circuit in which an electromotive force of one volt is produced when the electric current in the circuit varies uniformly at a rate of one ampere per second.
Electric potential difference, electromotive force	The <i>volt</i> (unit of electric potential difference and electromotive force) is the difference of electric potential between two points of a conductor carrying a constant current of one ampere when the power dissipated between these points is equal to one watt.

(Continued)

Electric resistance	The <i>ohm</i> is the electric resistance between two points of a conductor when a constant difference of potential of one volt, applied between these two points, produces in this conductor a current of one ampere, this conductor not being the source of any electromotive force.
Energy	The <i>joule</i> is the work done when the point of application of a force of one newton is displaced by a distance of one meter in the direction of the force.
Force	The <i>newton</i> is that force which, when applied to a body having a mass of one kilogram, gives it an acceleration of one meter per second squared.
Frequency	The <i>hertz</i> is the frequency of a periodic phenomenon of which the period is one second.
Illuminance	The <i>lux</i> is the illuminance produced by a luminous flux of one lumen uniformly distributed over a surface of one square meter.
Luminous flux	The <i>lumen</i> is the luminous flux emitted in a solid angle of one steradian by a point source having a uniform intensity of one candela.
Magnetic flux	The <i>weber</i> is the magnetic flux which, linking a circuit of one turn, produces in it an electromotive force of one volt as it is reduced to zero at a uniform rate in one second.
Magnetic flux density	The <i>tesla</i> is the magnetic flux density given by a magnetic flux of one weber per square meter.
Power	The <i>watt</i> is the power which gives rise to the production of energy at the rate of one joule per second.
Pressure or stress	The <i>pascal</i> is the pressure or stress of one newton per square meter.
Quantity of electricity	The <i>coulomb</i> is the quantity of electricity transported in one second by a current of one ampere.

64. Alphabetical List of Units

(Symbols of SI units in parentheses)

To convert from	To	Multiply by
abampere	ampere (A)	1.000 000*E+01
abcoulomb	coulomb (C)	1.000 000*E+01
abfarad	farad (F)	1.000 000*E+09
abhenry	henry (H)	1.000 000*E-09
abmho	siemens (S)	1.000 000*E+09
abohm	ohm (Ω)	1.000 000*E-09
abvolt	volt (V)	1.000 000*E-08
acre foot (US survey) ^a	meter ³ (m ³)	1.233 489 E+03
acre (US survey) ^a	meter ² (m ²)	4.046 873 E+03
ampere hour	coulomb (C)	3.600 000*E+03
are	meter ² (m ²)	1.000 000*E+02
angstrom	meter (m)	1.000 000*E-10
astronomical unit ^b	meter (m)	1.495 979 E+11
atmosphere (standard)	pascal (Pa)	1.013 250*E+05
atmosphere (technical = 1 kgf/cm ²)	pascal (Pa)	9.806 650*E+04
bar	pascal (Pa)	1.000 000*E+05
barn	meter ² (m ²)	1.000 000*E-28
barrel (for petroleum, 42 gal)	meter ³ (m ³)	1.589 873 E-01
board foot	meter ³ (m ³)	2.359 737 E-03

(Continued)

64. Alphabetical List of Units (Continued)

To convert from	To	Multiply by
British thermal unit (International Table) ^c	joule (J)	1.055 056 E+03
British thermal unit (mean)	joule (J)	1.055 87 E+03
British thermal unit (thermochemical)	joule (J)	1.054 350 E+03
British thermal unit (39°F)	joule (J)	1.059 67 E+03
British thermal unit (59°F)	joule (J)	1.054 80 E+03
British thermal unit (60°F)	joule (J)	1.054 68 E+03
Btu (International Table)·ft/h·ft ² ·°F (<i>k</i> , thermal conductivity)	watt per meter kelvin (W/m·K)	1.730 735 E+00
Btu (thermochemical)·ft/h·ft ² ·°F (<i>k</i> , thermal conductivity)	watt per meter kelvin (W/m·K)	1.729 577 E+00
Btu (International Table)·in/h·ft ² ·°F (<i>k</i> , thermal conductivity)	watt per meter kelvin (W/m·K)	1.442 279 E−01
Btu (thermochemical)·in/h·ft ² ·°F (<i>k</i> , thermal conductivity)	watt per meter kelvin (W/m·K)	1.441 314 E−01
Btu (International Table)·in/s·ft ² ·°F (<i>k</i> , thermal conductivity)	watt per meter kelvin (W/m·K)	5.192 204 E+02
Btu (thermochemical)·in/s·ft ² ·°F (<i>k</i> , thermal conductivity)	watt per meter kelvin (W/m·K)	5.188 732 E+02
Btu (International Table)/h	watt (W)	2.930 711 E−01
Btu (thermochemical)/h	watt (W)	2.928 751 E−01
Btu (thermochemical)/min	watt (W)	1.757 250 E+01
Btu (thermochemical)/s	watt (W)	1.054 350 E+03
Btu (International Table)/ft ²	joule per meter ² (J/m ²)	1.135 653 E+04
Btu (thermochemical)/ft ²	joule per meter ² (J/m ²)	1.134 893 E+04
Btu (thermochemical)/ft ² ·h	watt per meter ² (W/m ²)	3.152 481 E+00
Btu (thermochemical)/ft ² ·min	watt per meter ² (W/m ²)	1.891 489 E+02
Btu (thermochemical)/ft ² ·s	watt per meter ² (W/m ²)	1.134 893 E+04
Btu (thermochemical)/in ² ·s	watt per meter ² (W/m ²)	1.634 246 E+06
Btu (International Table)/h·ft ² ·°F (<i>C</i> , thermal conductance)	watt per meter ² kelvin (W/m ² ·K)	5.678 263 E+00
Btu (thermochemical)/h·ft ² ·°F (<i>C</i> , thermal conductance)	watt per meter ² kelvin (W/m ² ·K)	5.674 466 E+00
Btu (International Table)/s·ft ² ·°F	watt per meter ² kelvin (W/m ² ·K)	2.044 175 E+04
Btu (thermochemical)/s·ft ² ·°F	watt per meter ² kelvin (W/m ² ·K)	2.042 808 E+04
Btu (International Table)/lb	joule per kilogram (J/kg)	2.326 000*E+03
Btu (thermochemical)/lb	joule per kilogram (J/kg)	2.324 444 E+03
Btu (International Table)/lb·°F (<i>c</i> , heat capacity)	joule per kilogram kelvin (J/kg·K)	4.186 800*E+03
Btu (thermochemical)/lb·°F (<i>c</i> , heat capacity)	joule per kilogram kelvin (J/kg·K)	4.184 000 E+03
bushel (US)	meter ³ (m ³)	3.523 907 E−02
caliber (inch)	meter (m)	2.540 000*E−02
calorie (International Table)	joule (J)	4.186 800*E+00
calorie (mean)	joule (J)	4.190 02 E+00
calorie (thermochemical)	joule (J)	4.184 000*E+00
calorie (15°C)	joule (J)	4.185 80 E+00
calorie (20°C)	joule (J)	4.181 90 E+00

To convert from	To	Multiply by
calorie (kilogram, International Table)	joule (J)	4.186 800*E+03
calorie (kilogram, mean)	joule (J)	4.190 02 E+03
calorie (kilogram, thermochemical)	joule (J)	4.184 000*E+03
cal (thermochemical)/cm ²	joule per meter ² (J/m ²)	4.184 000*E+04
cal (International Table)/g	joule per kilogram (J/kg)	4.186 800*E+03
cal (thermochemical)/g	joule per kilogram (J/kg)	4.184 000*E+03
cal (International Table)/g·°C	joule per kilogram kelvin (J/kg·K)	4.186 800*E+03
cal (thermochemical)/g·°C	joule per kilogram kelvin (J/kg·K)	4.184 000*E+03
cal (thermochemical)/min	watt (W)	6.973 333 E-02
cal (thermochemical)/s	watt (W)	4.184 000*E+00
cal (thermochemical)/cm ² ·min	watt per meter ² (W/m ²)	6.973 333 E+02
cal (thermochemical)/cm ² ·s	watt per meter ² (W/m ²)	4.184 000*E+04
cal (thermochemical)/cm·s·°C	watt per meter kelvin (W/m·K)	4.184 000*E+02
carat (metric)	kilogram (kg)	2.000 000*E-04
centimeter of mercury (0°C)	pascal (Pa)	1.333 22 E+03
centimeter of water (4°C)	pascal (Pa)	9.806 38 E+01
centipoise	pascal second (Pa·s)	1.000 000*E-03
centistokes	meter ² per second (m ² /s)	1.000 000*E-06
circular mil	meter ² (m ²)	5.067 075 E-10
clo	kelvin meter ² per watt (K·m ² /W)	2.003 712 E-01
cup	meter ³ (m ³)	2.365 882 E-04
curie	becquerel (Bq)	3.700 000*E+10
day (mean solar)	second (s)	8.640 000 E+04
day (sidereal)	second (s)	8.616 409 E+04
degree (angle)	radian (rad)	1.745 329 E-02
degree Celsius	kelvin (K)	$t_K = t_c + 273.15$
degree centigrade	[see 3.4.2]	
degree Fahrenheit	degree Celsius	$t_c = (t_F - 32)/1.8$
degree Fahrenheit	kelvin (K)	$t_K = (t_F + 459.67)/1.8$
degree Rankine	kelvin (K)	$t_K = t_R/1.8$
°F·h·ft ² /Btu (International Table)	kelvin meter ² per watt (K·m ² /W)	1.761 102 E-01
(R, thermal resistance)		
°F·h·ft ² /Btu (thermochemical)	kelvin meter ² per watt (K·m ² /W)	1.762 280 E-01
(R, thermal resistance)		
denier	kilogram per meter (kg/m)	1.111 111 E-07
dyne	newton (N)	1.000 000*E-05
dyne·cm	newton meter (N·m)	1.000 000*E-07
dyne/cm ²	pascal (Pa)	1.000 000*E-01
electronvolt	joule (J)	1.602 19 E-19
EMU of capacitance	farad (F)	1.000 000*E+09
EMU of current	ampere (A)	1.000 000*E+01
EMU of electric potential	volt (V)	1.000 000*E-08
EMU of inductance	henry (H)	1.000 000*E-09
EMU of resistance	ohm (Ω)	1.000 000*E-09
ESU of capacitance	farad (F)	1.112 650 E-12
ESU of current	ampere (A)	3.335 6 E-10
ESU of electric potential	volt (V)	2.997 9 E+02
ESU of inductance	henry (H)	8.987 554 E+11
ESU of resistance	ohm (Ω)	8.987 554 E+11

(Continued)

64. Alphabetical List of Units (Continued)

To convert from	To	Multiply by
erg	joule (J)	1.000 000*E-07
erg/cm ² ·s	watt per meter ² (W/m ²)	1.000 000*E-03
erg/s	watt (W)	1.000 000*E-07
faraday (based on carbon-12)	coulomb (C)	9.648 70 E+04
faraday (chemical)	coulomb (C)	9.649 57 E+04
faraday (physical)	coulomb (C)	9.652 19 E+04
fathom	meter (m)	1.828 8 E+00
fermi (femtometer)	meter (m)	1.000 000*E-15
fluid ounce (US)	meter ³ (m ³)	2.957 353 E-05
foot	meter (m)	3.048 000*E-01
foot (US survey) ^a	meter (m)	3.048 006 E-01
foot of water (39.2°F)	pascal (Pa)	2.988 98 E+03
ft ²	meter ² (m ²)	9.290 304*E-02
ft ² /h (thermal diffusivity)	meter ² per second (m ² /s)	2.580 640*E-05
ft ² /s	meter ² per second (m ² /s)	9.290 304*E-02
ft ³ (volume; section modulus)	meter ³ (m ³)	2.831 685 E-02
ft ³ /min	meter ³ per second (m ³ /s)	4.719 474 E-04
ft ³ /s	meter ³ per second (m ³ /s)	2.831 685 E-02
ft ⁴ (moment of section) ^d	meter ⁴ (m ⁴)	8.630 975 E-03
ft/h	meter per second (m/s)	8.466 667 E-05
ft/min	meter per second (m/s)	5.080 000*E-03
ft/s	meter per second (m/s)	3.048 000*E-01
ft/s ²	meter per second ² (m/s ²)	3.048 000*E-01
footcandle	lux (lx)	1.076 391 E+01
footlambert	candela per meter ² (cd/m ²)	3.426 259 E+00
ft·lbf	joule (J)	1.355 818 E+00
ft·lbf/h	watt (W)	3.766 161 E-04
ft·lbf/min	watt (W)	2.259 697 E-02
ft·lbf/s	watt (W)	1.355 818 E+00
ft·poundal	joule (J)	4.214 011 E-02
free fall, standard (g)	meter per second ² (m/s ²)	9.806 650*E+00
gal	meter per second ² (m/s ²)	1.000 000*E-02
gallon (Canadian liquid)	meter ³ (m ³)	4.546 090 E-03
gallon (UK liquid)	meter ³ (m ³)	4.546 092 E-03
gallon (US dry)	meter ³ (m ³)	4.404 884 E-03
gallon (US liquid)	meter ³ (m ³)	3.785 412 E-03
gal (US liquid)/day	meter ³ per second (m ³ /s)	4.381 264 E-08
gal (US liquid)/min	meter ³ per second (m ³ /s)	6.309 020 E-05
gal (US liquid)/hp·h (SFC, specific fuel consumption)	meter ³ per joule (m ³ /J)	1.410 089 E-09
gamma	tesla (T)	1.000 000*E-09
gauss	tesla (T)	1.000 000*E-04
gilbert	ampere (A)	7.957 747 E-01
gill (UK)	meter ³ (m ³)	1.420 654 E-04
gill (US)	meter ³ (m ³)	1.182 941 E-04
grad	degree (angular)	9.000 000*E-01
grad	radian (rad)	1.570 796 E-02

To convert from	To	Multiply by
grain (1/7000 lb avoirdupois)	kilogram (kg)	6.479 891*E-05
grain (lb avoirdupois/7000)/gal (US liquid)	kilogram per meter ³ (kg/m ³)	1.711 806 E-02
gram	kilogram (kg)	1.000 000*E-03
g/cm ³	kilogram per meter ³ (kg/m ³)	1.000 000*E+03
gram-force/cm ²	pascal (Pa)	9.806 650*E+01
hectare	meter ² (m ²)	1.000 000*E+04
horsepower (550 ft·lbf/s)	watt (W)	7.456 999 E+02
horsepower (boiler)	watt (W)	9.809 50* E+03
horsepower (electric)	watt (W)	7.460 000 E+02
horsepower (metric)	watt (W)	7.354 99 E+02
horsepower (water)	watt (W)	7.460 43 E+02
horsepower (UK)	watt (W)	7.457 0 E+02
hour (mean solar)	second (s)	3.600 000 E+03
hour (sidereal)	second (s)	3.590 170 E+03
hundredweight (long)	kilogram (kg)	5.080 235 E+01
hundredweight (short)	kilogram (kg)	4.535 924 E+01
inch	meter (m)	2.540 000*E-02
inch of mercury (32°F)	pascal (Pa)	3.386 38 E+03
inch of mercury (60°F)	pascal (Pa)	3.376 85 E+03
inch of water (39.2°F)	pascal (Pa)	2.490 82 E+02
inch of water (60°F)	pascal (Pa)	2.488 4 E+02
in ²	meter ² (m ²)	6.451 600*E-04
in ³ (volume; section modulus) ^e	meter ³ (m ³)	1.638 706 E-05
in ³ /min	meter ³ per second (m ³ /s)	2.731 177 E-07
in ⁴ (moment of section) ^d	meter ⁴ (m ⁴)	4.162 314 E-07
in/s	meter per second (m/s)	2.540 000*E-02
in/s ²	meter per second ² (m/s ²)	2.540 000*E-02
kayser	1 per meter (1/m)	1.000 000*E+02
kelvin	degree Celsius	$t_c = t_k - 273.15$
kilocalorie (International Table)	joule (J)	4.186 800*E+03
kilocalorie (mean)	joule (J)	4.190 02 E+03
kilocalorie (thermochemical)	joule (J)	4.184 000*E+03
kilocalorie (thermochemical)/min	watt (W)	6.973 333 E+01
kilocalorie (thermochemical)/s	watt (W)	4.184 000*E+03
kilogram-force (kgf)	newton (N)	9.806 650*E+00
kgf·m	newton meter (N·m)	9.806 650*E+00
kgf·s ² /m (mass)	kilogram (kg)	9.806 650*E+00
kgf/cm ²	pascal (Pa)	9.806 650*E+04
kgf/m ²	pascal (Pa)	9.806 650*E+00
kgf/mm ²	pascal (Pa)	9.806 650*E+06
km/h	meter per second (m/s)	2.777 778 E-01
kilopond	newton (N)	9.806 650*E+00
kW·h	joule (J)	3.600 000*E+06
kip (1000 lbf)	newton (N)	4.448 222 E+03
kip/in ² (ksi)	pascal (Pa)	6.894 757 E+06
knot (international)	meter per second (m/s)	5.144 444 E-01

(Continued)

64. Alphabetical List of Units (*Continued*)

To convert from	To	Multiply by
lambert	candela per meter ² (cd/m ²)	I/π *E+04
lambert	candela per meter ² (cd/m ²)	3.183 099 E+03
langley	joule per meter ² (J/m ²)	4.184 000*E+04
league	meter (m)	... ^a
light year	meter (m)	9.460 55 E+15
liter ^f	meter ³ (m ³)	1.000 000*E-03
maxwell	weber (Wb)	1.000 000*E-08
mho	siemens (S)	1.000 000*E+00
microinch	meter (m)	2.540 000*E-08
micrometer	meter (m)	1.000 000*E-06
mil	meter (m)	2.540 000*E-05
mile (international)	meter (m)	1.609 344*E+03
mile (statute)	meter (m)	1.609 3 E+03
mile (US survey) ^a	meter (m)	1.609 347 E+03
mile (international nautical)	meter (m)	1.852 000*E+03
mile (UK nautical)	meter (m)	1.853 184*E+03
mile (US nautical)	meter (m)	1.852 000*E+03
mi ² (international)	meter ² (m ²)	2.589 988 E+06
mi ² (US survey) ^a	meter ² (m ²)	2.589 998 E+06
mi/h (international)	meter per second (m/s)	4.470 400*E-01
mi/h (international)	kilometer per hour (km/h)	1.609 344*E+00
mi/min (international)	meter per second (m/s)	2.682 240*E+01
mi/s (international)	meter per second (m/s)	1.609 344*E+03
millibar	pascal (Pa)	1.000 000*E+02
millimeter of mercury (0°C)	pascal (Pa)	1.333 22 E+02
minute (angle)	radian (rad)	2.908 882 E-04
minute (mean solar)	second (s)	6.000 000 E+01
minute (sidereal)	second (s)	5.983 617 E+01
month (mean calendar)	second (s)	2.628 000 E+06
oersted	ampere per meter (A/m)	7.957 747 E+01
ohm centimeter	ohm meter ($\Omega\cdot m$)	1.000 000*E-02
ohm circular-mil per ft	ohm millimeter ² per meter ($\Omega\cdot mm^2/m$)	1.662 426 E-03
ounce (avoirdupois)	kilogram (kg)	2.834 952 E-02
ounce (troy or apothecary)	kilogram (kg)	3.110 348 E-02
ounce (UK fluid)	meter ³ (m ³)	2.841 307 E-05
ounce (US fluid)	meter ³ (m ³)	2.957 353 E-05
ounce-force	newton (N)	2.780 139 E-01
ozf·in	newton meter (N·m)	7.061 552 E-03
oz (avoirdupois)/gal (UK liquid)	kilogram per meter ³ (kg/m ³)	6.236 021 E+00
oz (avoirdupois)/gal (US liquid)	kilogram per meter ³ (kg/m ³)	7.489 152 E+00
oz (avoirdupois)/in ³	kilogram per meter ³ (kg/m ³)	1.729 994 E+03
oz (avoirdupois)/ft ²	kilogram per meter ² (kg/m ²)	3.051 517 E-01
oz (avoirdupois)/yd ²	kilogram per meter ² (kg/m ²)	3.390 575 E-02
parsec ^b	meter (m)	3.085 678 E+16
peck (US)	meter ³ (m ³)	8.809 768 E-03

To convert from	To	Multiply by
pennyweight	kilogram (kg)	1.555 174 E-03
perm (0°C)	kilogram per pascal second meter ² (kg/Pa·s·m ²)	5.721 35 E-11
perm (23°C)	kilogram per pascal second meter ² (kg/Pa·s·m ²)	5.745 25 E-11
perm-in (0°C)	Kilogram per pascal second meter (kg/Pa·s·m)	1.453 22 E-12
perm-in (23°C)	kilogram per pascal second meter (kg/Pa·s·m)	1.459 29 E-12
phot	lumen per meter ² (lm/m ²)	1.000 000*E+04
pica (printer's)	meter (m)	4.217 518 E-03
pint (US dry)	meter ³ (m ³)	5.506 105 E-04
pint (US liquid)	meter ³ (m ³)	4.731 765 E-04
point (printer's)	meter (m)	3.514 598*E-04
poise (absolute viscosity)	pascal second (Pa·s)	1.000 000*E-01
pound (lb avoidupois) ^g	kilogram (kg)	4.535 924 E-01
pound (troy or apothecary)	kilogram (kg)	3.732 417 E-01
lb·ft ² (moment of inertia)	kilogram meter ² (kg·m ²)	4.214 011 E-02
lb·in ² (moment of inertia)	kilogram meter ² (kg·m ²)	2.926 397 E-04
lb/ft·h	pascal second (Pa·s)	4.133 789 E-04
lb/ft·s	pascal second (Pa·s)	1.488 164 E+00
lb/ft ²	kilogram per meter ² (kg/m ²)	4.882 428 E+00
lb/ft ³	kilogram per meter ³ (kg/m ³)	1.601 846 E+01
lb/gal (UK liquid)	kilogram per meter ³ (kg/m ³)	9.977 633 E+01
lb/gal (US liquid)	kilogram per meter ³ (kg/m ³)	1.198 264 E+02
lb/h	kilogram per second (kg/s)	1.259 979 E-04
lb/hp·h (SFC, specific fuel consumption)	kilogram per joule (kg/J)	1.689 659 E-07
lb/in ³	kilogram per meter ³ (kg/m ³)	2.767 990 E+04
lb/min	kilogram per second (kg/s)	7.559 873 E-03
lb/s	kilogram per second (kg/s)	4.535 924 E-01
lb/yd ³	kilogram per meter ³ (kg/m ³)	5.932 764 E-01
poundal	newton (N)	1.382 550 E-01
poundal/ft ²	pascal (Pa)	1.488 164 E+00
poundal·s/ft ²	pascal second (Pa·s)	1.488 164 E+00
pound-force (lbf) ^h	newton (N)	4.448 222 E+00
lbf·ft	newton meter (N·m)	1.355 818 E+00
lbf·ft/in	newton meter per meter (N·m/m)	5.337 866 E+01
lbf·in	newton meter (N·m)	1.129 848 E-01
lbf·in/in	newton meter per meter (N·m/m)	4.448 222 E+00
lbf·s/ft ²	pascal second (Pa·s)	4.788 026 E+01
lbf/ft	newton per meter (N/m)	1.459 390 E+01
lbf/ft ²	pascal (Pa)	4.788 026 E+01
lbf/in	newton per meter (N/m)	1.751 268 E+02
lbf/in ² (psi)	pascal (Pa)	6.894 757 E+03
lbf/lb (thrust/weight [mass] ratio)	newton per kilogram (N/kg)	9.806 650*E+00
quart (US dry)	meter ³ (m ³)	1.101 221 E-03
quart (US liquid)	meter ³ (m ³)	9.463 529 E-04

(Continued)

64. Alphabetical List of Units (Continued)

To convert from	To	Multiply by
rad (radiation dose absorbed)	gray (Gy)	1.000 000*E-02
rhe	1 per pascal second (1/Pa·s)	1.000 000*E+01
rod	meter (m)	... ^a
roentgen	coulomb per kilogram (C/kg)	2.58 E-04
second (angle)	radian (rad)	4.848 137 E-06
second (sidereal)	second (s)	9.972 696 E-01
section	meter ² (m ²)	... ^a
shake	second (s)	1.000 000 *E-08
slug	kilogram (kg)	1.459 390 E+01
slug/ft·s	pascal second (Pa·s)	4.788 026 E+01
slug/ft ³	kilogram per meter ³ (kg/m ³)	5.153 788 E+02
statampere	ampere (A)	3.335 640 E-10
statcoulomb	coulomb (C)	3.335 640 E-10
statfarad	farad (F)	1.112 650 E-12
stathenry	henry (H)	8.987 554 E+11
statmho	siemens (S)	1.112 650 E-12
statohm	ohm (Ω)	8.987 554 E+11
statvolt	volt (V)	2.997 925 E+02
stere	meter ³ (m ³)	1.000 000*E+00
stilb	candela per meter ² (cd/m ²)	1.000 000*E+04
stokes (kinematic viscosity)	meter ² per second (m ² /s)	1.000 000*E-04
tablespoon	meter ³ (m ³)	1.478 676 E-05
teaspoon	meter ³ (m ³)	4.928 922 E-06
tex	kilogram per meter (kg/m)	1.000 000*E-06
therm	joule (J)	1.055 056 E+08
ton (assay)	kilogram (kg)	2.916 667 E-02
ton (long, 2240 lb)	kilogram (kg)	1.016 047 E+03
ton (metric)	kilogram (kg)	1.000 000*E+03
ton (nuclear equivalent of TNT)	joule (J)	4.184 E+09 ⁱ
ton (refrigeration)	watt (W)	3.516 800 E+03
ton (register)	meter ³ (m ³)	2.831 685 E+00
ton (short, 2000 lb)	kilogram (kg)	9.071 847 E+02
ton (long)/yd ³	kilogram per meter ³ (kg/m ³)	1.328 939 E+03
ton (short)/h	kilogram per second (kg/s)	2.519 958 E-01
ton-force (2000 lbf)	newton (N)	8.896 444 E+03
tonne	kilogram (kg)	1.000 000*E+03
torr (mm Hg, 0°C)	pascal (Pa)	1.333 22 E+02
township	meter ² (m ²)	... ^a
unit pole	weber (Wb)	1.256 637 E-07
W·h	joule (J)	3.600 000*E+03
W·s	joule (J)	1.000 000*E+00
W/cm ²	watt per meter ² (W/m ²)	1.000 000*E+04
W/in ²	watt per meter ² (W/m ²)	1.550 003 E+03
yard	meter (m)	9.144 000*E-01
yd ²	meter ² (m ²)	8.361 274 E-01
yd ³	meter ³ (m ³)	7.645 549 E-01
yd ³ /min	meter ³ per second (m ³ /s)	1.274 258 E-02

To convert from	To	Multiply by
year (calendar)	second (s)	3.153 600 E+07
year (sidereal)	second (s)	3.155 815 E+07
year (tropical)	second (s)	3.155 693 E+07

^aSince 1893 the United States basis of length measurement has been derived from metric standards. In 1959 a small refinement was made in the definition of the yard to resolve discrepancies both in the United States and other countries; this changed its length from 3600/3937 m to 0.9144 m exactly. The change resulted in the new value being shorter by 2 parts in 1 million. At the same time it was decided that any data in feet derived from and published as a result of geodetic surveys within the United States would remain with the old standard (1 ft = 1200/3937 m) until further decision. This foot is named the United States survey foot. As a result all United States land measurements in United States customary units will relate to the meter by the old standard. All the conversion factors in these tables for units referenced to this footnote are based on the United States survey foot rather than on the international foot. Conversion factors for the land measure given below may be determined from the following relationships:

- 1 league = 3 mi (exactly)
- 1 rod = 16½ ft (exactly)
- 1 section = 1 mi² (exactly)
- 1 township = 36 mi² (exactly)

^bThis value conflicts with the value printed in NBS 330 (17). The value requires updating in NBS 330.

^cThis value was adopted in 1956. Some of the older international tables use the value 1.055 04 E+03. The exact conversion factor is 1.055 055 852 62*E+03.

^dThis is sometimes called the moment of inertia of a plane section about a specified axis.

^eThe exact conversion factor is 1.638 706 4*E-05.

^fIn 1964 the General Conference on Weights and Measures adopted the name *liter* as a special n for the cubic decimeter. Prior to this decision the liter differed slightly (previous value, 1.000 028 dm³), and in expression of precision volume measurement this fact must be kept in mind.

^gThe exact conversion factor is 4.535 923 7*E-01.

^hThe exact conversion factor is 4.448 221 615 260 5*E+00.

ⁱDefined (not measured) value.

This page intentionally left blank

INDEX

The numbers referenced in the Index represent the *division* and *section number*, not the page number. For example, an Index reference to 10-57 means Div. 10, Sec. 57. Since within each division all section numbers are placed in numerical order, there should be no difficulty in locating any section number.

At the beginning of each division is a table of contents which describes the various topics within the division. These are listed by page numbers.

- Absorption:
 - coefficients of, 10-3
 - definition of, 10-5
- Absorption characteristics of materials, 10-4
- Acceleration, motor, control of, 7-259 to 7-278
- Acid, sulfuric, 4-157
- Admedium lamp base, 10-57
- Admittance, definition of, 1-52
- Aerial cable, 2-61
- Air conditioning, sizing, 7-407, 9-445
- Aircraft cable and wire, 2-79
- Airport lamps, 10-64
- Alignment, motor, 7-369
- Alley arms, 8-62
- Alternating current:
 - average value of, 1-119
 - conversion to direct current, 7-206 to 7-213
 - definition of, 1-34
 - effective value of, 1-120
 - generation of (*see* Generators, alternating-current)
 - maximum value of, 1-118
 - standard voltages and applications of, 3-26
 - waveform of, 1-112
- Alternating-current circuits [*see* Circuit(s), alternating-current]
- Alternating-current drop factors, 12-55
- Alternating-current generators (*see* Generators, alternating-current)
- Alternating-current motors [*see* Motor(s), alternating-current]
- Alternators (*see* Generators, alternating-current)
- Altitude, effect on motors, 7-351
- Aluminum, conductivity and weight of, 2-19
- Aluminum cables, 2-21, 2-86
 - ampacity of, 12-19, 12-21
 - resistance of, 12-57
- Aluminum conductors, 2-19
 - ampacity of, 12-19, 12-21
 - steel-reinforced, 2-19
- Ambient temperature, ampacity derating for, 3-101
- American screw gage, 4-234
- American wire gage, 2-3, 2-85
- Ammeters:
 - for compound generators, 7-22
 - use of, rules for, 1-170
- Ampacity, 3-31, 3-89 to 3-106, 12-12 to 12-23
 - AC cable, type, special ampacity rules, 9-193
 - ambient temperature derating, 3-101
 - conductor selection for, 3-103
 - control wires, when counted for derating, 3-99
 - definition of, 3-90, 9-3
 - derating procedure, 3-100
 - effects of thermal insulation on, 9-242
 - middle of the wire concept, 3-96
 - mutual conductor heating effect, 3-97
 - NEC Annex B, Sec. B.310.11 calculations, 3-112 to 3-114
 - neutrals, special sizing for short-circuits, 3-107
 - neutrals, when counted for derating, 3-98
 - NM cable, type, special ampacity rules, 9-228

- Ampacity (*Cont.*):
 - partial runs, differences, 3-102
 - tables, explanation of function, 3-91
- Amperes:
 - definition of, 1-37
 - distinction from volts, 1-82
 - relation to coulombs, 1-36
- Amplidyne, 7-44, 7-143
- Anchor rods:
 - attachment of, 8-88
 - guy, 8-54
- Anchors:
 - expansion, 4-242 to 4-247
 - guy, 8-83 to 8-100
- Angle of lag, 1-127
- Angle of lead, 1-130
- Angular displacement in transformer
 - connections, 5-91
- Antenna, lightning protection of, 4-74
- Apartment houses, wiring for, 9-508 to 9-510
- Appliance loads, minimum allowable, 12-5
- Appliances:
 - circuits required for, 9-499
 - disconnecting means for, 9-427
 - grounding, 9-428
 - protection of, 9-425
 - ratings allowed on circuits for, 9-497
 - signals for, 9-429
 - wiring for, 9-425, 9-430
- Approved (standard of acceptance, per NEC), 9-3
- Arc-fault circuit-interrupter, 4-77
- Argon-glow lamps, 10-143
- Armature troubles, synchronous motors, 7-231
- Armature windings:
 - baking of, 7-244
 - of direct-current generators, 7-3
- Armatures, direct-current: causes of heating of,
 - 7-71
 - grounded, locating, 7-68
 - reversed, 7-70
 - short circuits in, 7-231
 - testing, 7-65, 7-66
- Armor:
 - cable, 2-38, 2-49, 2-50, 2-52
 - tape, 2-49
 - wire, 2-51
- Armor rods, 8-77
- Armored cable, 2-56
- Armored-cable wiring, 9-5, 9-182 to 9-192
- Arms:
 - alley, 8-62
 - buck, 8-63
 - double, 8-61
 - reverse, 8-63
- Arresters, lightning, 4-74 to 4-76
- Assemblies:
 - cable, 2-21
 - multioutlet, 9-303 to 9-309
- Atoms:
 - electrical structure of, 1-25, 6-4
 - kinds of (elements), 1-26
 - size of, 1-27
- Automatic drive control, 7-141
- Automatic transfer switch, 7-414
 - effect on system load capacity, 7-416
- Automotive cables and wires, 2-79
- Autostarters, 7-309 to 7-312
- Autotransformers, 5-9, 5-32, 7-309 to 7-312
 - connections of, 5-117 to 5-119
 - sizing of, 5-117
- Bactericidal lamps, 10-149
- Ballast, fluorescent-lamp, 10-93, 10-99, 10-106
- Banked-secondary radial system, 9-515
- Baseboard multioutlet assemblies, 9-306
- Bases, lamp, 10-57
 - fluorescent, 10-92
- Batteries, 4-140 to 4-229
 - classification of, 4-141
 - Daniell's, 4-143
 - definition of, 4-140
 - Edison carbon, 4-150
 - Edison storage, 4-180 to 4-196
 - care of, 4-190 to 4-196
 - charging of, 4-183 to 4-188
 - cleaning of, 4-191
 - description of, 4-180
 - maintenance of, 4-190 to 4-196
 - operation of, 4-195
 - rating of, 4-182
 - renewal of solution of, 4-194
 - specific gravity of, 4-193
 - storage of, 4-196
 - temperature of, 4-184
 - voltage characteristics of, 4-181
 - watering of, 4-192
- Fuller, 4-146, 4-147
- gravity-type, 4-144
- Lalande, 4-148
- lead-acid, 4-155 to 4-179
 - care of, 4-167 to 4-179
 - charge of, 4-155 to 4-156
 - charging of, 4-162 to 4-164
 - discharge of, 4-155 to 4-161
 - electrolyte for, 4-155, 4-156
 - explanation of, 4-155
 - gassing of, 4-162
 - maintenance of, 4-167 to 4-179
 - rating of, 4-159
 - specific gravity of, 4-155
 - storage of, 4-178
 - temperature of, 4-165
 - troubles of, 4-175
 - types of, 4-166
 - voltage characteristics of, 4-157
 - watering of, 4-169

Batteries (Cont.):

- nickel-cadmium, 4-197 to 4-219
 - care of, 4-201 to 4-219
 - characteristics of, 4-199
 - charging of, 4-204 to 4-207
 - data for, 4-198
 - electrolyte for, 4-212, 4-216
 - explanation of, 4-197
 - installation of, 4-201
 - specific gravity of, 4-214
 - storage of, 4-218
- nickel-iron-alkaline (*see* Edison storage)
- primary, 4-143 to 4-149
- resistance of, internal, 4-142
- secondary, 4-141
- storage, 4-141, 4-151 to 4-229
 - danger of gas from, 4-229
 - definition of, 4-151
 - explanation of, 4-151
 - installation of, 4-220 to 4-229
 - insulation of, 4-224
 - jars for, 4-224
 - lead-acid (*see* lead-acid)
 - nickel-cadmium (*see* nickel-cadmium)
 - racks for, 4-226
 - rooms for, 4-227
 - terminology of, 4-154
 - trays for, 4-226
 - types of, 4-153
 - voltage produced by, 1-77
 - wiring for, 4-220 to 4-229

Battery rooms, 4-227**Bearings:**

- lubrication of, 7-237 to 7-242
- motor, 7-127
 - trouble with, 7-215, 7-226, 7-234, 7-236, 7-345

Belt transformers, 5-63**Bending conduit, 9-92, 9-112 to 9-115****Bends, conduit, 9-92****Binder tapes for cable, 2-24****Binding post, connecting lead wire to, 2-147****Black-light lamps, 10-145****Blade, switch, 4-4****Blink test, 10-190****Blowers, motors for, 7-364****Blowtorch, 2-153****Bolts:**

- carriage, 8-32
- crossarm, 8-27
- double-arming, 8-28, 8-30
- expansion, 4-242
- eye, 8-29
- machine, 4-237, 4-238
- toggle, 4-240

Booster, cutout, 5-108**Booster transformers, 5-98 to 5-109****Borehole cable, 2-66****Boxes, 4-106 to 4-123**

- accessories for, 4-107
- brackets for, 4-111
- cabinet, 9-350
- clamps for, 4-112
- classification of, 4-106
- concrete, 4-113
- conductors entering, protection of, 9-329, 9-346, 9-350
- conduit junction, 9-98
- covers for, 4-108, 4-114, 9-348
- cutout, 9-350
- dimensions of, 4-113
- distribution, underground, 8-115
- door, 4-122
- extension rings for, 4-110B
- floor, 4-106, 4-121
- gang, 4-109, 4-113
- hangers for, 4-119, 4-120
- hickey for, 9-344
- installation of, 4-106, 9-97
- junction, 9-98, 9-249, 9-349
- location of, 9-347
- mounting of, 4-117 to 4-122
- number of conductors allowed in, 9-345
- outlet, 4-106, 4-109, 9-96, 9-340
 - dimensions required for, 4-118
 - nonmetallic, 4-115, 9-223
 - for nonmetallic-sheathed cable, 9-224
- panel (*see* Panelboards)
- pull, 9-99, 9-349
- sectional, 4-111
- sizes required, 9-345
- standard tables of, 4-113
- supports for, 4-117 to 4-122, 9-341 to 9-343
- switch, 4-106
- types of, 4-106
- utility, 4-106, 4-110

Braces:

- alley-arm, 8-40
- crib, 8-62
- crossarm, 8-40, 8-41
- pole, 8-100

Brackets, wiring box, 4-111**Brads, 4-231****Braids, cable, 2-38, 2-39****Braking motor, 7-202A to 7-205****Branch, definition of, 3-15****Branch circuits [*see* Circuit(s), branch]****Branch motor circuits [*see* Circuit(s), motor]****Breakers, circuit (*see* Circuit breakers)****Breaking strength of wire and cable, 3-32**

- copper-clad, 2-86, 2-95 to 2-98
- copper: solid, 2-88
- stranded, 2-89

Bridle guys, 8-96**Brightness, 10-39 to 10-46****Bronze cable, 2-13, 2-86**

Brown and Sharpe gage, 2-3

Brushes:

- adjustment of, 7-49, 7-74
- care of, 7-49, 7-74
- chattering of, 7-92
- for direct-current generators and motors, 7-49, 7-74
- glowing of, 7-74, 7-91
- inspection of, 7-248
- pitting of, 7-74, 7-91
- sparking of, 7-75, 7-90
- synchronous motor, 7-235
- troubles with, 7-89

Buck arms, 8-63

Building cables and wires, 2-55, 2-56

Buildings:

- disconnects for, 3-13
- floodlighting of, 10-220, 10-235
- rewiring of, 9-492, 9-493
- service equipment for, 3-18

Bulbs, lamp: colored, 10-55

- finish of, 10-52
- mercury, 10-115
- shape of, 10-51

Busbars, copper: data for, 2-94

- sections of, 2-86
- spacing for, 4-83

Bushings:

- antishort insulating, 9-186
- conduit, 9-83, 9-88
- insulating socket, 4-132

Busways:

- feeder, 9-268
- layout, 9-271
- lighting, 9-278, 9-280
- mounting of, 9-274
- plug-in, 9-273
- plugs for, 9-277
- trolley, 9-278, 9-279, 9-280

BX cable (*see* AC cable)

Cable(s):

- AC cable, 9-5
- aerial, 2-61
- aircraft, 2-79
- aluminum, 2-19, 2-86
 - current-carrying capacity of, 12-19, 12-21
- application of, 2-13 to 2-84
- armored, 2-56
 - bends in, radius of, 9-196
 - connectors for, 9-187
 - cutting of, 9-185
 - installation of, 9-183
 - protection at ends of, 9-186
 - support for, 9-190
 - types of, 9-182
 - wiring with, 9-5, 9-182 to 9-192
- arrangement of, in manholes, 8-128

Cable(s) (*Cont.*):

- automotive, 2-79
- bare, 2-10
- binder tapes for, 2-24
- borehole, 2-66
- breaking strength of (*see* Breaking strength of wire and cable)
- bronze, 2-13, 2-86
- building, 2-25 to 2-29
- buried in ground, 8-129
- BX (*see* AC cable)
- cellulose-acetate-insulated, 2-35
- classification of: by covering, 2-10, 2-38 to 2-52
 - by insulation, 2-25 to 2-36
 - by material, 2-13 to 2-19
- concentric-lay, 2-2
- conductors in, number of, 2-2, 2-20
- copper vs. aluminum
 - data for, 2-88
 - grades of, 2-14
 - makeup of, 2-13, 2-86
 - resistance of, 2-88
 - stranded, 2-90, 2-97
- copper-clad aluminum, 2-86, 2-95 to 2-98
- copper-steel, 2-17, 2-86
- cotton-yarn-insulated, 2-33
- covered, 2-11, 2-12
- coverings for, protective, 2-37 to 2-52
- current-carrying capacities for, 3-31, 12-14 to 12-27
- dead-ending of, 9-48
- definitions of, 2-2
- dimensions of, 12-28 to 12-29
- for direct burial in earth, 2-60
- drive-in-theater, 2-73
- duplex, 2-2
- for electric transportation equipment, 2-70
- elevator, 2-101
- enamel-insulated, 2-34
- fibrous-glass-insulated, 2-36
- fire-alarm, 2-69
- flat cable assemblies, Type FC, 9-6
- flat conductor, Type FCC, 9-7
- flexible-cord, 2-101
- gage table for, 2-85
- gas-filled, 2-30
- general-purpose power, 2-53
- glass-insulated, 2-36
- heat-resisting, 2-10, 2-99
- heating, 9-440, 9-446
 - clearance for, 9-440
 - installation of, 9-440, 9-446
 - marking of, 9-440
- installation of, in conduit, 9-122 to 9-148
- insulated: definition of, 2-10
 - dimensions of, 12-28 to 12-29
 - safe temperatures of, 3-31

Cable(s) (*Cont.*):

- insulation for, 2-25 to 2-36
 - approved types of, 2-99
 - thickness of, 2-99
- integrated gas spacer, Type IGS, 9-8
- iron, 2-16, 2-87
- jacket coverings for, 2-43
- lead-covered, 2-2
- lead sheath for, 2-38 to 2-46
- locating faults in, 1-192
- magnet [*see* Wire(s), magnet]
- makeup of, 2-13, 2-86
- materials for, 2-13, 2-86, 2-87
- MC cable, 1-57, 9-10, 9-190 to 9-192
 - connectors, 9-195
 - equipment grounding, 9-197
- mine-shaft, 2-66
- mineral-insulated, 2-54
 - data for, 2-100
 - description of, 2-54, 9-229
 - installation of, 9-231
 - termination of, 9-232 to 9-235
 - wiring with, 9-10, 9-229 to 9-235
- multiconductor, 2-2, 2-20
- MV cable, 9-236 to 9-239
- National Electrical Code for, 2-99
- network, 2-63
- nonmetallic-sheathed, 2-55
 - wiring with, 9-12, 9-215 to 9-228
- number allowed: in conduit, 12-28 to 12-32
 - in ducts, 8-127
- oil-burner ignition, 2-71
- oil-filled, 2-30
- paper-insulated, 2-30
- parkway, current-carrying capacity of, 12-27
- patching jackets of, 2-143
- plastic-insulated, 2-27
 - data for, 2-99
 - dimensions of, 12-31
- pole and bracket, 2-65
- portable, joints for, 2-133 to 2-137
- portable power, 2-74
- power and control tray, Type TC, 9-13
- pulling in, 8-124
- radio, 2-78
- range, 2-101
- resistance of (*see* Resistance)
- rope-lay, 2-2
- rubber-insulated: data for, 2-99
 - description of, 2-26
 - dimensions of, 12-31
- saturants for covering, 2-45
- sector, 2-2
- series lighting, 2-64
- service, 2-60
 - description of, 2-60, 3-18
- service-drop, 2-60, 3-18
- service-entrance, 2-60, 3-18

Cable(s) (*Cont.*):

- serving of, 2-2
- shielded-conductor, 2-2
- shielded-type, 2-2
- shielding of, 2-22
- shipboard, 2-81
- signal, 2-69
- for signs, gas-tube, 2-71
- silk-insulated, 2-35
- size for circuits: economical, 3-82 to 3-88
 - selecting, 3-30 to 3-36, 3-76
- soldering of, 2-148 to 2-154
- splicing of, 2-103 to 2-170
- steel, 2-16
- steel-copper (*see* copper-steel)
- steel guy, 8-59
- stranded: data for, 2-89 to 2-94
 - makeup of, 2-86
- street-lighting, series, 2-64
- submarine, 2-67
- support for, 9-45 to 9-58, 9-111
- telephone and telegraph, 2-16, 2-80
- terminology for, 2-2
- testing insulation resistance of, 1-181, 9-335
- thermoplastic-insulated (*see* plastic-insulated)
- traffic-control, 2-69
- triplex, 2-2
- trolley, sections of, 2-86
- twin, 2-2
- twisted pair, 2-2
- underground, 2-60, 2-62
- underground-feeder, wiring with, 9-15, 9-240
- varnished-cambric-insulated: data for, 2-99
 - description of, 2-31
- weatherproof, 2-11, 2-12
- x-ray, 2-72
- [*see also* Conductors; Wire(s)]
- Cable armor, 2-38, 2-49, 2-50
- Cable braids, 2-39
- Cable clamps, use of, 4-112
- Cable connectors, 9-173, 9-187, 9-221, 9-234, 9-236, 9-243
- Cable diameter, determining, 2-84
- Cable fillers, 2-2, 2-23
- Cable finishes, 2-38, 2-45
- Cable grips, 8-124, 9-127
- Cable grounds, testing for, 1-194, 1-207
- Cable jacket, 2-43
- Cable joints, 2-103 to 2-170
 - aluminum, 2-168 to 2-170
 - cleaning wire ends for, 2-111
- Copperweld, 2-167
- insulation of, 2-105, 2-114, 2-115
- portable-cable, 2-132 to 2-137
- protection of, 2-106
- removing covering for, 2-108
- removing insulation for, 2-109, 2-110
- shielded cable, 2-119, 2-121

- Cable joints (*Cont.*):
 - soldered, 2-104 to 2-113
 - solderless vs. soldered, 2-104
 - splice kits, 2-172 to 2-176
 - steel cable, 2-166
 - tapes for, 2-38, 2-40, 2-105, 2-106, 2-114
 - unshielded cable, 2-118, 2-120
 - vulcanizing of, 2-138 to 2-145
- Cable lugs, 2-146 to 2-164
- Cable pulling, 9-130 to 9-148
 - damage to nonmetallic sweeps, 9-130
 - examples, worked out, 9-144, 9-145
 - forces:
 - coefficient of dynamic friction, 9-133
 - friction, 9-133
 - sidewall bearing pressure, 9-131, 9-139
 - straight sections of raceway, 9-135
 - unwinding the reel, 9-132
 - weight correction factors, 9-134
 - internal clearances, 9-140
 - isolated steel sweeps, bonding requirements, 9-130
 - jam ratios on three-conductor pulls, 9-147
 - lead-sheathed cables, force calculations, 9-142
 - mathematics of force calculations, 9-137, 9-138
 - pulling ropes, 9-130
 - pulling resistance, strategies for reduction, 9-146
 - raceway proofing, advisability of, 9-131
 - tensile strength, baskets, 9-141
 - tensile strength, conductors, 9-143
 - training radius, difference from pulling radius, 9-148
- Cable sheaths, 2-2, 2-38 to 2-48
- Cable support in manholes, 8-127
- Cable tapes, 2-38, 2-40, 2-105, 2-106, 2-114
- Cable terminals, 2-146 to 2-164
- Cable terminations, 2-122 to 2-130
- Cable tray, 9-41, 9-314 to 9-317
 - conductor insertion aids, 9-316
 - NEC rules, 9-317
 - types, 9-315
- Cablebus, 9-30, 9-310 to 9-313
- Calculations:
 - for circuits, 3-30 to 3-88
 - for voltage drop in circuits, 3-56 to 3-62
- Candela, 10-18
- Candlepower, 10-11, 10-18
 - distribution curves for, 10-31
 - mean horizontal, 10-28
 - mean spherical, 10-29, 10-35
- Canopies, 9-348
- Capacitance, 1-48
 - effect of, in alternating-current circuits, 1-128
- Capacitive reactance, 1-50
 - in alternating-current circuits, 1-129
- Capacitor, 1-48
 - power, 4-135 to 4-139
- Capacitor ratings for alternating-current motors, 12-11
- Capacity, current-carrying (*see* Current-carrying capacity of conductors)
- Caps, receptacle, 4-98
- Carpenter's formula, 8-92
- Cartridge fuses, 4-51 to 4-56, 12-39
- Cellular-concrete-floor-raceway wiring, 9-31, 9-294 to 9-302
- Cellular-metal-floor-raceway wiring, 9-32, 9-282 to 9-293
- Celsius, conversion to Fahrenheit, 1-16
- Center, distribution, 3-17
- Chain drives (*see* Drives, chain)
- Chase nipples, conduit, 9-85, 9-89
- Chemical action, production of voltage by, 1-77
- Chemicals for fluorescent lamps, 10-89
- Choke, transformer, 5-103, 5-109
- Circline fluorescent lamps, 10-98
- Circuit(s), 3-1 to 3-88
 - allowance for growth in, 3-36, 9-526, 9-529
 - alternating-current, 3-19 to 3-23
 - advantages of, 3-24
 - characteristics of, 1-121
 - measuring power in, 1-182 to 1-185
 - single-phase, 1-144, 3-19
 - three-phase, 1-152 to 1-156, 3-19
 - two-phase, 1-148, 3-19
 - voltage drop in, 3-61
 - for apartment houses, 9-508 to 9-510
 - appliance, 9-425, 9-499
 - calculating load on: branch, 3-37, 3-38
 - main, 3-45 to 3-51
 - branch: air-conditioning, 9-445
 - appliance, 9-425, 9-499
 - busways for, 9-278
 - calculating load on: lighting and appliance, 3-37, 3-38
 - motor, 3-53
 - range, 3-39
 - for commercial, public, and industrial structures, 9-526
 - defined, 3-15
 - lighting, 9-526
 - rating of, 9-497
 - protection of, 9-502
 - voltage of, 9-503
 - calculation of, 3-30 to 3-88
 - capacitive, angle of lead in, 1-130
 - capacitor, 4-138
 - Class 2 and 3, 9-469
 - comparison of, 3-23
 - current-carrying capacity of, 3-31, 9-319 to 9-321, 9-495 to 9-497, 12-12 to 12-27

Circuit(s) (*Cont.*):

- design of, 3-30 to 3-88
- direct-current, 1-109, 3-19 to 3-25
 - measuring power in, 1-182
 - polarity of, test for, 1-209
 - power in, 1-110
 - three-wire, 3-20 to 3-23
 - two-wire, 3-19
 - voltage drop in, 3-58 to 3-60
- divided, 3-7
- for farm buildings, 9-532 to 9-547
- faults in, testing for, 1-192, 1-205
- feeder, 3-11
 - calculating load on, 3-40 to 3-54
 - for commercial, public, and industrial structures, 9-527
 - lighting and appliance, 3-40 to 3-52
 - motor, 3-53 to 3-55
- grounding of, 9-354
- grounds in, testing for, 1-194 to 1-199
- high-voltage, 9-404 to 9-409
- inductive, angle of lag in, 1-127
- insulation resistance of, 1-175 to 1-177, 9-335
- lighting: calculating load on: branch, 3-37, 3-38
 - main, 3-40 to 3-52
 - minimum allowable loads on, 3-52
 - rating of, 9-497
- load on, calculation of, 3-37 to 3-55, 3-80
- load center of, 3-57
- location of, on poles, 8-69
- low-energy power, 9-463 to 9-486
- low-voltage, 9-410
- low-voltage power, 9-463 to 9-486
- main, 3-13
 - calculating load on, 3-40 to 3-55
- motor, 7-370 to 7-395
 - branch: parts of, 7-377
 - protection of, 7-385, 12-43, 12-47
 - requirements for, 7-377
 - types of, 7-372 to 7-376
 - calculating load on, 3-53 to 3-55
 - demand factors for, 3-53 to 3-55
 - feeder, protection of, 7-260
 - remote control, 7-388, 7-393
 - switches for, 4-23, 7-383, 7-384, 7-386
 - wiring tables for, 7-391
- multiple, 3-2, 3-9, 9-326
- multiple-series, 3-5
- nomenclature of, 3-1 to 3-17
- outdoor residential wiring, 9-505 to 9-507
- overload protection of, 12-40
- parallel, 3-2, 9-326
 - resistance of, 3-8
- parallel-series, 3-5
- phasing out of, 7-108
- power loss in, 1-157, 3-81 to 3-87
- protection of, 4-46, 7-385, 9-318 to 9-320

Circuit(s) (*Cont.*):

- range, calculating load on, 3-39, 3-52
 - rectifier, 6-4
 - remote-control, 9-463 to 9-486
 - resistance of, to alternating currents, 1-122
 - series, 3-1
 - for street lighting, 5-71
 - series-multiple, 3-6
 - series-parallel, 3-6
 - shunt, 3-2
 - signal, 9-449 to 9-463
 - single-phase, 1-144, 3-19 to 3-23, 3-29
 - size of wire for, 3-30 to 3-36, 3-38 to 3-87, 7-387, 9-318
 - tap, 3-16
 - testing for faults in, 1-192 to 1-208
 - three-phase, 1-152 to 1-156, 3-19, 3-23
 - two-phase, 1-148, 3-19, 3-23
 - types of, 3-1 to 3-17
 - underground residential, 9-507
 - voltage drop in: allowable, 3-35, 12-48, 12-49
 - calculations for, 3-58 to 3-76
 - voltages for, 3-29
- Circuit breakers, 4-59 to 4-73
- arc-fault circuit-interrupters, 4-77
 - auxiliary, 4-59
 - Class CTL, 4-62
 - current-limiting, 4-61
 - delta breakers prohibited, 4-86
 - description of, 4-47, 4-59
 - enclosed, 7-308
 - fused, 4-60
 - high-voltage, 9-405
 - magnetic, 4-59
 - motor-starting, 7-308
 - in panelboards, 4-62, 4-85, 4-90
 - primary, 4-59
 - protection of motor circuits with, 7-385
 - ratings of, standard, 12-38, 12-39
 - secondary, 4-59
 - sizes of, for circuit protection, 9-320
 - solid-state, 4-59
 - thermal, 4-59
 - thermal-magnetic, 4-59
- Circuit diagrams, symbols for, 1-18 to 1-20
- Circuit directories, panelboards, and switchboards, 4-85
- Circular mil:
- definition of, 1-91
 - equivalents, 1-9, 1-92
- Circular mil-foot, 1-94
- Clamps:
- cable, 4-112
 - conduit, 9-104 to 9-111
 - elbow, 9-166
 - flexible-conduit, 9-166
 - ground, 9-372

- Clamps (*Cont.*):
 - guy, 8-57, 8-87
 - Newberry, 2-136
 - wiring box, 4-112
- Class CTL overcurrent devices, 4-62
- Cleaning motor, 7-250
- Clearance:
 - for equipment, 9-337, 12-37
 - in high-voltage wiring, 9-407 to 9-409, 12-37
 - for wires on pole lines, 8-69, 8-70
- Cleats:
 - dead-ending on, 9-48
 - wiring, 4-91, 4-92
- Clevises, 8-49, 8-53
- Code, National Electrical, wiring, 9-1
- Color:
 - in floodlighting, 10-248
 - of grounded conductors, 9-373 to 9-374
 - of light, 10-1
 - of lighted objects, 10-13
 - from neon tubes, 10-132
 - of ungrounded conductors, 9-375
- Color temperature of light, 10-14
- Commercial buildings:
 - lighting loads for, 9-527, 9-528
 - wiring for, 9-511 to 9-531
- Commercial repair garages, 9-422
 - major repair facilities, 9-422
 - minor repair facilities, 9-422
 - wiring methods in, 9-422
- Commutating-pole, direct-current generator, 7-26 to 7-31, 7-38
- Commutation, 7-74
- Commutators:
 - blackening of, 7-79
 - care of, 7-50, 7-73
 - correcting roughness on, 7-88
 - glowing of, 7-74
 - grinding of, 7-80
 - heating of, 7-76
 - high mica on, 7-87, 7-88
 - inspection of, 7-249
 - loose rings on, 7-81
 - loose segments on, 7-78
 - lubrication of, 7-92
 - pitting of, 7-74
 - rough, 7-75
 - slotting of, 7-82 to 7-86
 - troubles with, 7-74 to 7-82, 7-88 to 7-93
- Compass:
 - showing direction of current flow with, 1-89
 - testing polarity of poles with, 7-56
- Compensating windings, 7-32
- Compensators:
 - connections for, 5-117 to 5-119
 - description of, 7-311
- Complementary metal-oxide-semiconductor logic (CMOS), 6-22
- Composite conductor, 2-2
- Compression joints, 2-162, 2-170, 2-171
- Compression lugs, 2-162, 2-171
- Compressors, motors for, 7-365
- Computer language, 6-28
- Concealed knob-and-tube wiring, 9-42, 9-67 to 9-69
 - impracticality of contemporary extensions, 9-68
- Concentric-lay cable, 2-2
- Concentric-lay conductor, 2-2
- Concentric-strand, 2-2
- Concrete for underground conduit work, 8-109
- Concrete poles, 8-14, 8-15
- Condenser:
 - control of acceleration with, 7-271, 7-275
 - definition of, 1-48
 - synchronous, 7-180
- Conductance, defined, 1-53
- Conductivity, 1-55
 - of aluminum conductors, 2-19
 - of copper, 2-88
 - of copper conductors, 1-55
 - percentage, 1-55
- Conductors:
 - aluminum, 2-19
 - ampacity of, 3-89 to 3-107, 12-19, 12-21
 - applications and insulations, 2-99
 - arranging in multiple, 9-326
 - bare: definition of, 2-10
 - classification of: by covering, 2-38 to 2-52
 - by insulation, 2-25 to 2-29
 - by materials and makeup, 2-13
 - by service, 2-53 to 2-83
 - composite, 2-2
 - concentric-lay, 2-2
 - continuous loading of, 3-94
 - copper: ampacity of, 12-15, 12-16, 12-19, 12-21, 12-22
 - data for, 2-88 to 2-94
 - makeup of, 2-15
 - resistance of, 12-57
 - solid, data for, 2-88
 - stranded: ampacity of, 12-15, 12-16
 - data for, 2-89
 - copper-clad aluminum:
 - conduit characteristics, 2-95
 - makeup of, 2-86
 - percent cladding, 2-97, 2-98
 - wire guide, 2-96
 - copper-steel, 2-17
- Copperweld, 2-17
- crane, 9-388, 12-14
- current-carrying capacity of, 12-15 to 12-24
- dead-ending of, 9-49
- definitions of, 1-40, 2-2, 6-1
- of different systems, 9-330
- dimensions of, 12-30, 12-31 to 12-32

Conductors (Cont.):

- drawing of, into conduit, 9-122 to 9-148
(*see* Cable pulling)
- high-voltage, 9-404, 12-24
- identification of grounded, 9-373 to 9-374
- insulated, dimensions of, 12-30, 12-31
- insulation for, 2-25 to 2-36
 - approved types of, 2-99
 - thickness of, 2-99
- iron, 2-16
- makeup of, 2-13, 2-15, 2-86
- materials for, 2-13 to 2-19, 2-86
- number allowed: in boxes, 9-345
 - in cables, 2-20
 - in conduit, 12-28 to 12-32
- parallel makeups, 3-108 to 3-111
 - conductors to be equal, 3-109
 - grounding conductor sizing rules, 3-111
 - raceways (and cables) in, 3-110
- resistance tables for, 12-57
- resistive, 2-2
- round, 2-2
- service, 9-376
 - for commercial, public, and industrial structures, 9-527
 - size of, 9-381
 - splicing of, 9-382
- signal wiring, 9-469
- size of, for interior wiring, 9-318
- small, overcurrent device sizing limits, 3-105
- splicing of, 9-325
- steel, 2-16
- stranded: data for, 2-90 to 2-93
 - definition of, 2-2
- support for, 9-52 to 9-58
 - temperature rise in, determination of, 1-100, 1-101
 - terminal connections for, 2-146 to 2-155, 9-224
 - terminology of, 2-2
 - vertical, 9-111
 - [*see also* Cable(s); Wire(s)]
- terminations, effects of continuous loading, 3-94
- terminations, temperature limitations of, 3-92
- ungrounded, permitted colors of, 9-375

Conduit:

- aluminum, 9-72, 9-79
- area of, 12-30
- bending of, 9-92, 9-93, 9-112 to 9-115
- clearances for, 9-84, 9-91
- concrete, 8-106
- continuity of, 9-338
- couplings, 9-77, 9-78
- cross-section fill, 12-28 to 12-32
- cutting of, 9-121
- diameter of, 12-30

Conduit (Cont.):

- dimensions, 9-77
- drawing conductors in, 9-122 to 9-148
(*see* Cable pulling)
- Electrical nonmetallic tubing, 9-27
- fiberglass, 9-23
- fill, 12-28 to 12-32
- fishing conductors in, 9-122 to 9-148
- flexible-metallic, 9-166
 - connectors for, 9-173
 - cutting of, 9-174
 - installation of, 9-168
 - reaming of, 9-175
 - sizes of, 9-167, 9-170
 - support for, 9-168
 - wiring with, 9-18, 9-166 to 9-178
- flexible-metallic-liquidtight, 9-179 to 9-181
- flexible metallic tubing, 9-26
- Greenfield, 9-167
- high density polyethylene, Type HDPE, 9-21
- intermediate metal conduit, Type IMC, 9-74
- liquidtight, flexible-metal, 9-179 to 9-181
- liquidtight, flexible nonmetallic, Type LFNC, 9-24
- nonmetallic underground with conductors, Type NUCC, 9-22
- number of conductors in, 12-28 to 12-32
- plastic-coated, 9-75
- reaming of, 9-120, 9-175
- reinforced thermosetting resin conduit, Type RTRC, 9-23
- rigid metal, 9-70 to 9-121
- rigid nonmetallic, 8-102, 9-20, 9-149 to 9-164
- rodding, 8-123
- runs of, 9-103
- size of, required, 9-94
- spacings for, 9-84, 9-91
- support for, 9-104 to 9-111
 - in concrete buildings, 9-110
- threading of, 9-118
- Conduit benders, 9-112 to 9-115
- Conduit bends, 9-93
- Conduit bushings, 9-83, 9-88
- Conduit couplings, 9-77, 9-78
- Conduit elbows, 9-86
- Conduit fittings, 9-100
- Conduit hangers, 9-109
- Conduit hickies, 9-114
- Conduit locknuts, 9-84
- Conduit nipples, 9-87
- Conduit outlet boxes, 4-115, 9-96
- Conduit straps, 9-89 to 9-109
- Conduit supports, spacing of, 9-107
- Conduit threads, 9-82
- Conduit wrenches, 9-119
- Connections, cable (*see* Cable joints)

Connectors:

- armored-cable, 9-187
- box and cable, 9-173, 9-187, 9-221, 9-234, 9-236, 9-243
- marking, 2-195
- pressure, 2-158
- solderless, 2-147, 2-156 to 2-163

Conservator, 5-8

Constant currents, 1-35

Contact electromotive force, 1-79

Contact resistance, 1-102, 4-6

Contactors:

- counter-emf, 7-273
- inductive-time-limit, 7-266 to 7-269
- magnetic, 7-255
- series, 7-256, 7-272
- shunt, 7-255

Contacts, switch, 4-6

Continuity, test for, 1-206

Continuous load:

- definition of, 3-94
- effect on device terminations, 3-94

Control:

- across-the-line: alternating current, 7-259, 7-297, 7-302 to 7-306
- direct-current, 7-279
- heating, 9-444
- motor, 7-277 to 7-325
 - acceleration, 7-259 to 7-276
 - across-the-line, 7-259, 7-297, 7-302, 7-306
 - alternating-current, 7-297 to 7-325
 - autotransformer, 7-297 to 7-301
 - compensator, 7-297 to 7-300
 - condenser-charge, 7-271, 7-275
 - counter-emf, 7-259, 7-273
 - current-limit, 7-259, 7-271
 - direct-current, 7-277 to 7-296
 - electronic, 7-138 to 7-144
 - field-relay, 7-295
 - frequency, 7-259, 7-276
 - primary-resistor starting, 7-271
 - reactance-starting, 7-297 to 7-300
 - reduced-voltage starting:
 - autotransformer, 7-311
 - part-winding, 7-312
 - reactor, 7-310
 - star-delta, 7-313
 - resistance-starting, 7-297 to 7-301
 - solid-state, 7-275, 7-320
 - time-current acceleration, 7-271, 7-274
- multiple-switch, in residences, 4-31, 4-36, 4-40
- overload protection in, 7-257
- and plugging, 7-268
- position, 7-144
- reduced-voltage, 7-297 to 7-301
- synchro, 7-178
- terminology of, 7-251

Control (*Cont.*):

- time-current, 7-259, 7-274
- time-limit, 7-259 to 7-271

Control cables, 2-68

Control generators, direct-current, 7-44, 7-143

Controllers:

- autotransformers as, 7-311
- classification of: by method of operation, 7-254
- by service, 7-253
- combination, 7-306
- compensator, 7-311
- condenser-charge, 7-271, 7-275
- counter-emf, 7-273, 7-294
- current-limit, 7-294
- dial, 7-317
- direct-current, 7-277 to 7-296
- drum, 7-285, 7-287, 7-293, 7-318
- enclosures for, 7-252
- frequency, 7-276
- inductive-time-limit, 7-266 to 7-270
- magnetic: across-the-line, 7-305, 7-306
 - for alternating-current motors, 7-305 to 7-324
- autotransformer, 7-297 to 7-301
- compensator, 7-297 to 7-301
- counter-emf, 7-273, 7-294
- current-limit, 7-294
- for direct-current motors, 7-294
- frequency, 7-276
- time-current, 7-259, 7-274
- manual: for alternating-current motors, 7-303, 7-304, 7-325
 - for direct-current motors, 7-278, 7-279
- multiple-switch, 7-286
- multispeed, 7-314, 7-315
- overload-protection, 7-285, 7-311
- polyphase induction motor, 7-305 to 7-322
- reduced-voltage, 7-311 to 7-319
- resistance, 7-309
- rheostat, 7-280, 7-281, 7-291
- saturable-reactor, 7-323
- SCR, 7-320
- semimagnetic, 7-254
- single-phase, 7-325
- solid-state, 7-275
- speed, for direct-current motors, 7-288 to 7-295
- starting, for direct-current motors, 7-277 to 7-295
- static stepless crane control, 7-275
- synchronous-motor, 7-323
- terminology of, 7-251
- time-current, 7-259
- time-limit, 7-259 to 7-271

Convenience outlets:

- for cellular-metal-floor raceway, 9-286
- with underfloor raceway, 9-258

- Conversion of current, 7-206 to 7-213
- Conversion factors, 1-8 to 1-16
- Converters, synchronous, 7-208 to 7-212
- Copper:
 - economics of, 3-23
 - grades of, 2-14
- Copper busbar, data for, 2-94
- Copper-clad aluminum, 2-86, 2-95 to 2-98
- Copper conductors:
 - bare, 2-88
 - grades of, 2-14
 - makeup of, 2-15, 2-86
 - stranded, 2-89 to 2-93
- Copper wire:
 - grades of, 2-14
 - makeup of, 2-15, 2-86
 - properties of, 2-88
 - sizes of, 2-88
 - tinned, 2-14
- Copperweld cables, 2-17, 2-86
- Copperweld ties, 8-78
- Cords:
 - ampacity, 12-24
 - definition of, 2-2
 - drop, supporting of, 9-64
 - fastening of, in sockets, 9-324
 - flexible, 2-77
 - application of, 9-324
 - current-carrying capacity of, 12-24
 - types of, 2-101
- Cores, transformer, 5-4
- Cotton insulation, 2-33
- Coulomb:
 - explanation of, 1-36
 - metric (SI units), 12-58 to 12-64
 - relation of, to ampere, 1-37
- Coverings:
 - cable, 2-9 to 2-12, 2-38, 2-52, 2-99
 - removing from cables, 2-108 to 2-110
- Covers:
 - box, 4-108, 4-114, 9-348
 - manhole, 8-116
- Crane-collector switches, 9-387
- Crane-wiring diagrams, 9-403
- Cranes:
 - cab switch for, 9-398
 - circuit breakers for, 9-387
 - conductors for, 9-388 to 9-397
 - size of, 9-397, 12-14
 - supporting, 9-392 to 9-395
 - termination of, 9-393
 - tracks as, 9-396
 - current collectors for, 9-390
 - insulators for, 4-91
 - motors for, 9-402
 - trolley rails for, 9-390
 - resistance of, 9-397
 - supporting, 9-395
- Cranes (*Cont.*):
 - trolley wire for, 9-398
 - wiring for, 9-386 to 9-403
- Crossarm bolts, 8-27
- Crossarms:
 - alley, 8-62
 - assembly of, 8-60 to 8-64
 - braces for, 8-40 to 8-43
 - buck, 8-63
 - double, 8-61
 - gains for, 8-64, 8-65
 - guying of, 8-97
 - reverse, 8-63
 - single, 8-60
 - steel, 8-38
 - supporting, 8-60 to 8-64
 - wooden, 8-36 to 8-37
- Crystals, production of voltage with, 1-80
- Current(s):
 - alternating (*see* Alternating current)
 - classes of, 1-32
 - conversion of, 7-206 to 7-213
 - direct (*see* Direct current)
 - direction of, 1-83, 1-87
 - effects of, 1-85
 - explanation of, 1-30
 - fusion, for wires, 4-48
 - induced, in metal enclosures, 9-327
 - limiting effect, 12-39
 - locked-rotor, 7-131
 - for series motors, 7-200
 - for squirrel-cage induction motors, 7-163
 - mean annual, 3-88
 - measurements of, 1-169 to 1-174
 - motor, full-load, 12-7 to 12-10
 - motor-starting, 3-53 to 3-55, 7-131, 7-132, 7-136
 - symbols for direction of, 1-84
 - unit of, 1-37
- Current-carrying capacity of conductors (*see* Ampacity)
- Current density:
 - conversion factors for, 1-15
 - safe, 1-104
- Current-limiting overcurrent devices:
 - circuit breakers, 4-61
 - fuses, 4-51, 12-39
- Cutout booster, 5-108
- oil-fuse, 4-58
- Cutting:
 - armored cable, 9-185
 - conduit, 9-192
 - flexible conduit, 9-174
- Cycle, alternating-current, 1-113
- Daniell's cells, 4-143
- Darlington circuit, 6-24
- Dashpots, 7-261 to 7-265

- Daylight lamps, 10-54, 10-55
- Dead-ending wire, 8-79, 9-48
- Decibel (dB) calculations, 11-22
- Decimal equivalents for fractions, 1-2
- Decorative incandescent lamps, 10-61
- Degrees, electrical, 1-115
- Delta connections, 1-153 to 1-156
 - for transformers, 5-83 to 5-89
- Demand factors:
 - dryer, 12-3
 - electric-range, 12-2
 - explanation of, 3-44
 - lighting-load, 12-4, 12-5
 - maximum, 3-44, 3-54
 - motor, 12-6
- Demand meters, 9-384
- Derricks for pole setting, 8-21
- Design of interior wiring installations, 9-491 to 9-503
 - (*see also* Wiring, interior)
- Detectors, ground, 1-211 to 1-217
- Device boxes (*see* Boxes)
- Device function numbers (ANSI), 1-20
- Devices, continuous load limitations, 3-94
- Diagrams, symbols for (*see* Symbols)
- Diameter, cable, how to determine, 2-84
- Dielectric strength:
 - definition of, 1-159
 - tests of oil for, 5-167
- Differential amplifier, 6-24, 6-26
- Diffuse reflection, 10-7
- Diffuse refraction, 10-10
- Diodes:
 - rectifier, 6-7
 - reference, 6-7
 - varactor, 6-12
 - zener, 6-3, 6-4, 6-26
- Direct current:
 - classes of, 1-35
 - conversion to alternating current, 7-206 to 7-209
 - definition of, 1-33
 - fluorescent bulbs on, 10-109
 - generation of (*see* Generators)
 - standard voltages and application of, 3-25
- Direct-current circuits (*see* Circuits)
- Direct-lighting luminaires, 10-157
- Disconnecting means:
 - appliances, 9-427
 - building, 8-71 (topic 24)
 - connections permitted ahead of service, 9-385
 - cranes and hoists, 9-398
 - fuses, 9-323
 - motors, 7-383, 7-384, 7-386, 7-525
 - outside feeder taps, 9-319
 - service, 9-377
 - signs, 9-455
 - space heating equipment, 9-446
- Discrete solid-state components, 6-3
- Disposal-lamps, 10-153
- Distribution, underground (*see* Wiring, underground)
- Distribution boxes, underground, 8-115
- Distribution center, 3-17
- Distribution curves, candlepower, 10-31
- Distribution graphs for luminaires, 10-34, 10-155
- Distribution systems (*see* Systems, distribution)
- Diverter-pole generators, 7-42
- Drives:
 - belt, 7-330 to 7-337
 - characteristics of, 7-337
 - description of, 7-330
 - horsepower limits for, 7-331
 - speed limits for, 7-335
 - chain, 7-332 to 7-337
 - characteristics of, 7-337
 - horsepower limits for, 7-333
 - speed limits for, 7-335
 - direct-coupling, 7-328, 7-337
 - gear, 7-334 to 7-337
 - motor, 7-326 to 7-337
 - connection of, 7-329, 7-337
 - design of, 7-326
 - methods of, 7-327
 - mounting of, 7-345
 - selection of, 7-329, 7-338
- Drop cords, supporting, 9-64
- Drop-factor method of calculating voltage drop, 3-73
- Drop factors, alternating current, 12-55
- Dry cells, voltage produced by, 1-77
- Dryers, demand factors for, 12-3
- Drying lamps, 10-152
- Ducts:
 - arranging cables in, 8-127
 - concrete, 8-106
 - number of cables in, 8-127
 - plastic, 8-103
 - pulling cable through, 8-124
 - rodding, 8-123
 - trench header, 9-290
 - underground, 8-101 to 8-131
 - installation of, 8-107 to 8-109
 - type UF cable, 8-130
 - type USE cable, 8-130
- Duplex cable, 2-2
- Dwelling-unit definition, 9-3
- Dynamic braking, 7-202A, 7-204
- Edison Electric Institute, 8-1
- Edison storage battery (*see* Batteries, Edison storage)
- Effects of electric current, 1-85
- Efficiency:
 - definition of, 1-65

Efficiency (*Cont.*):

- of direct-current generator, 7-46
- of induction motors, 7-173
- of transformer, 5-19, 5-43 to 5-57

Elbows:

- conduit, 9-86
- electrical-metallic tubing, 9-209, 9-210

Electric charge:

- atomic structure and, 1-25, 1-27
- conservation of, 1-28
- quantity of, 1-36

Electric circuits [*see* Circuit(s)]

Electric comfort conditioning, 9-431 to 9-447

- commercial and industrial buildings, 9-434
 - central systems, 9-441
 - types of equipment, 9-435
 - unitary systems, 9-408
- equipment capacities, 9-436
- furnaces, 9-437
- heat pump, 9-439
- heating controls, 9-444
- hydronic boiler, 9-438
- residential buildings, 9-433
 - heat loss, 9-433
 - heat loss survey, 9-433
 - insulation, 9-433
 - unitary systems, 9-408
- sizing room air conditioners, 9-445
- snow-melting systems, 9-443

Electric current [*see* Current(s)]

Electric fields, production of voltage in, 1-78

Electric furnace, 9-437

Electric heating, 9-431 to 9-447

Electric motors [*see* Motor(s)]

Electric power, definition of, 1-58

Electric signs, wiring for, 9-448 to 9-462

Electric snow-melting systems, 9-443

Electrical-metallic tubing, 9-25, 9-206 to 9-214

Electrical nonmetallic tubing,
9-27Electrical systems (*see* Systems, electrical)

Electricity:

- nature of, 1-31
- unit of quantity of, 1-36

Electrodes, grounding, 9-370, 9-372

Electrodynamic drive control, 7-143

Electrolyte, 4-140, 4-151

Electromagnetic induction, classification of,
1-71

Electromagnets, rule for polarity of, 1-88

Electromotive force:

- counter, 7-136
- definition of, 1-29
- electric fields, creation, 1-31
- generation of, 1-144 to 1-155
- induced: direction of voltage for, 1-72
 - magnitude of, 1-75
 - production of, 1-73

Electromotive force (*Cont.*):

- methods of producing, 1-70 to 1-80
 - by chemical action, 1-77
 - by crystals, 1-80
 - by electric fields, 1-78
 - by electromagnetic induction, 1-71
 - by friction, 1-79
 - by thermal action, 1-76
- rule for determining direction of, 1-72

Electron(s):

- in matter, 1-25, 6-4
- size of, 1-27
- weight of, 1-27

Electron theory, 1-25, 6-4

Electronic circuits, 6-25

Electronic memories, Table 6-7

- memory capacity, 6-32
- random-access memory (RAM), 6-27, 6-33
- read-only memory (ROM), 6-27, 6-33

Electronic power supply circuit, 6-25

Electronic speed control of motors,
7-138 to 7-144

Electronic voltage regulator, 6-26

Electronics, fundamentals of, 6-4

Elevation of equipment, 9-337

EMF (*see* Electromotive force)

Emitter-coupled logic (ECL), 6-21

Enameled wire, 2-33, 2-82

Enameled-wire insulation, 2-33

Enclosures:

- classifications, nonhazardous applications, 7-253A
- motor, 7-128
- motor controller classifications, 7-253
- for protective devices, 9-323

Energy:

- definition of, 1-57
- electrical, 1-31
- transformation of, 1-61
- units of, 1-57

Energy conversion factors, 1-12

Energy loss in a circuit, 3-81 to 3-88

Entrances, service (*see* Service entrance)

Equalizer, direct-current motor, 7-19

Equipment:

- grounding of, 9-352, 9-353, 9-359 to 9-369
- service, 9-377
- space around, 9-337

Excitation:

- alternating-current generators, 7-105
- direct-current generators, 7-1

Explosionproof equipment, 9-416

Extension rings, outlet box, 4-110B

Exterior lighting, recommended levels of,
10-220

Eye, structure of, 10-185

- Eyebolts, 8-29
 - manhole, 8-126
- Eyes, lag-screw, 8-34
- Faceplates, 4-116
- Factors, conversion, 1-8 to 1-17
- Fahrenheit: conversion to Celsius, 1-16
 - metric practice, 12-58 to 12-64
- Fans, motors for, 7-364
- Farad: definition of, 1-49
 - metric practice, 12-58 to 12-64
- Farm wiring, 9-532 to 9-547
 - building wiring, 9-546
 - distribution feeders, 9-545
 - distribution point (power pole), 9-543
 - equipotential planes, 9-544
 - service loads, 9-547
- Faults:
 - direct-current motor and generator, 7-95
 - locating, 1-192 to 1-207
- Feeders, 3-11
 - commercial, public, and industrial buildings, 9-526
 - farm, 9-545
 - motor, 3-54, 7-389
- Fiber optic:
 - applications, 11-1
 - attenuation, 11-40, 11-41
 - basic terminology, 11-6
 - breakout kits, 11-46
 - cabling, 11-2
 - chromatic dispersion, 11-11
 - connectors, 11-42 to 11-45
 - couplers, 11-35
 - data transmission, 11-18, 11-19
 - decibel (dB) gain and loss calculations, 11-22
 - emission spectrum, 11-29
 - fiber connectors, 11-3, 11-40
 - fiber sizing, 11-14
 - general, 11-45, 11-1
 - hand tools and supplies, 11-50
 - index of refraction, 11-9
 - laser
 - diodes, 11-28
 - semiconductor type, 11-27
 - vertical cavity, surface emitting type (VCSEL), 11-27
 - LED light sources, 11-25, 11-26
 - manufacturing fiber, 11-15
 - modal dispersion, 11-12
 - multiplex systems, 11-36
 - NEC cable classifications
 - conductive, nonconductive, 11-37
 - general purpose, riser, plenum, 11-37
 - listed, unlisted, 11-37
 - NEC system separation requirements, 11-51
 - noncommunication applications, 11-61
 - Fiber optic (*Cont.*):
 - numerical aperture, 11-8
 - optical time domain reflectometers, 11-59, 11-60
 - pulse spreading, 11-10
 - raceways, 11-37
 - safety, 11-51
 - semiconductor lasers, 11-27
 - splices, 11-4, 11-47, 11-48, 11-49
 - testing, 11-5, 11-52 to 11-59
 - tools, 11-50
 - total internal reflection, 11-7
 - types of optical fibers, 11-13, 11-37
 - units of measurement, 11-20
 - Fibrous glass insulation, 2-36
 - Field-effect transistors (FET), 6-9
 - Fields, magnetic, 1-22
 - Filament lamps [*see* Lamp(s), incandescent]
 - Filaments, incandescent lamp, 10-58
 - Fillers, cable, 2-2, 2-23
 - Finishes, cable, 2-38, 2-45
 - Fire-alarm cable, 2-69
 - Fish plugs, 9-176
 - Fishing wire, 9-122
 - Fittings:
 - cellular-metal-floor raceway, 9-285
 - conductors entering, protection of, 9-329, 9-346
 - conduit, 9-100
 - electrical metallic tubing, 9-209
 - square duct, 9-264
 - threadless, 9-101
 - Fixture wire:
 - ampacity of, 12-25
 - properties of, 2-76
 - splicing of, to conductor, 2-157
 - types of, 2-76
 - Fixtures (*see* Luminaires):
 - Flashers, 9-461
 - Flat cable assemblies, Type FC, 9-6
 - Flat conductor cable, Type FCC, 9-7
 - Flexible cords, 2-77
 - ampacity of, 12-24
 - data for, 2-101
 - Flexible-metallic conduit (*see* Conduit, flexible-metallic)
 - Flexible metallic tubing, 9-26
 - Floodlight lamps, 10-75
 - Floodlighting, 10-220, 10-235 to 10-276
 - application of, 10-244
 - of buildings, 10-220, 10-235
 - colored, 10-248
 - design of, 10-235 to 10-247
 - equipment for, 10-243
 - industrial, 10-220, 10-248
 - levels of, 10-220, 10-239
 - maintenance factors for, 10-246
 - sports, 10-220, 10-239, 10-249 to 10-276

Floodlights:

- beam spread of, 10-240
- lumens of, average, 10-247

Floors:

- cellular-steel, 9-282
- precast concrete, 9-294

Fluorescent chemicals, 10-89

Fluorescent lamps [see Lamp(s)]

Flux:

- luminous, 10-11, 10-15, 10-22
- magnetic, 1-23
 - commutation pole, 7-28

Footcandle, 10-11, 10-20

Footcandle meter, 10-37

Foundations, generator, and motor, 7-366

Fractions, decimal equivalents of, 1-2

Frequency:

- definition of, 1-114
- selection of, 3-27
- standard, 3-27

Frequency changer, 7-213

Frequency control, 7-259, 7-276

Friction tape, 2-106

Frictional voltage, 1-79

Fuller cell, 4-147

Fuse accessories, 4-56

Fuse adapter, 4-57

Fuse clip-clamps, 4-56

Fuse puller, 1-168

Fuse reducers, 4-56

Fused circuit breakers, 4-60

Fuses, 4-46 to 4-58

- boric acid, 4-58
- cartridge, 4-51 to 4-56
 - description of, 4-52
 - dimensions of, 4-50, 4-51, 4-57
 - dual-element, 4-54
 - one-time, 4-52
 - renewable, 4-53
 - types (CC, G, H, J, K, L), 4-51
 - types (R, T), 4-52
- current-limiting, 4-51
- dual-element, 4-54
- high-voltage, 4-58, 9-405
- low-voltage, types of, 4-49
- multiple, 9-322
- oil cutout, 4-58
- in panelboards, 4-86, 4-89, 4-90
- plug, 4-57
 - dual-element, 4-57
 - tamper-resisting, 4-57
- for protection of motor circuits, 7-377, 7-378, 7-381, 7-385
- ratings of, 4-51, 4-57, 12-38, 12-39
- renewable, 4-49, 4-51, 4-53
- size of, 4-51, 4-57, 12-38, 12-39
 - determination of, 9-319, 12-38, 12-43
- small-dimension, 4-55

Fuses (*Cont.*):

- standards for, 4-50
- tamper-resisting, 4-57
- time-delay, 4-49, 4-54, 4-57, 7-381
- types of, 4-46

Fusing of circuits, 4-46, 7-377, 7-378, 7-381, 7-385, 9-319, 9-320, 12-43

Gages:

- diameters of, 2-85
- names and uses of, 2-4
- sizes of, 2-85
- thicknesses of, 2-85
- wire measuring, 2-6
- wire and sheet-metal, table of, 2-85

Gains, pole, 8-64, 8-65

Gang boxes, 4-110A, 4-113

Gas-filled cable, 2-30

Gas-filled tubes (*see* Electron tubes)

Gate arrays, 6-16

Gear drives, 7-334 to 7-337

Gear motors, 7-122

General-diffuse-lighting luminaires, 10-160

Generators:

- alternating-current, 7-96 to 7-120
 - adjusting field current of, 7-115
 - defects of, 7-216
 - efficiency of, 7-104
 - elementary, 1-73
 - engine-driven, 7-408
 - excitation for, 7-105
 - faults of, 7-216
 - frequency of, 7-99
 - gas-turbine-driven, 7-415
 - induction, 7-119
 - inductor, 7-119
 - load division between, 7-114
 - parallel operation of, 7-113, 7-117
 - phasing out, 7-108
 - ratings of, 7-104
 - shutting down of, 7-118
 - single-phase, 1-145, 7-101
 - speeds of, 7-100, 7-104
 - starting of, 7-116
 - synchronizing of, 7-106 to 7-112
 - synchronous, 7-97
 - three-phase, 1-152 to 1-155, 7-103
 - troubles with, 7-216
 - two-phase, 1-148, 7-102
 - types of, 7-96
 - voltage of, 7-98, 7-104
- bearing troubles of, 7-236
- direct-current, 7-1 to 7-50
 - amplidyne, 7-44, 7-143
 - armature of, 7-3
 - open circuit in, 7-65
 - short-circuit in, 7-66

- Generators, direct-current, armature of (*Cont.*):
- testing of, 7-61
 - windings of, 7-3
 - brushes, care of, 7-49, 7-74
 - commutators of, 7-74
 - care of, 7-49, 7-73
 - grinding of, 7-80
 - troubles with, 7-61 to 7-95
(*see also* Commutators)
 - compensating windings of, 7-32
 - compound, 7-2, 7-9
 - control, 7-43, 7-45, 7-143
 - diverter-pole, 7-42
 - division of load of, 7-19
 - efficiency of, 7-46, 7-47
 - elementary, 1-74
 - equalizers for, 7-19
 - excitation of, 7-2, 7-51
 - failure of, 7-51
 - separate, 7-5
 - field in, open, 7-57
 - field windings for, 7-2
 - flat-compound, 7-10
 - interpoles for, 7-26
 - long-shunt, 7-15
 - neutral point of, 7-29
 - operation of, 7-8, 7-18 to 7-25, 7-29, 7-37
 - overcompounded, 7-11
 - parallel operation of, 7-8, 7-18 to 7-25, 7-31, 7-39
 - pitting in, 7-74
 - polarity in, testing of, 7-40, 7-56
 - polarity of commutating poles in, 7-30
 - poles on, 7-16
 - rating of, 7-48
 - Rototrol, 7-45, 7-143
 - separately excited, 7-5
 - series-excited, 7-2, 7-5
 - shunt, 7-17
 - short-shunt, 7-14
 - shunt, 7-2, 7-7, 7-8
 - shutting down of, 7-24
 - sparking in, 7-62
 - starting of, 7-23
 - third-brush, 7-41
 - three-wire, 7-33 to 7-39
 - undercompounded, 7-12
 - voltage generated in, 7-4
- elementary, 1-74
- foundations for, 7-366, 7-367
- insulating materials for, 7-130
- measuring insulation resistance of, 1-179, 7-245
- Germicidal lamps, 10-149, 10-150
- GFCI (*see* Ground-fault circuit interrupters)
- GFPE (*see* Ground-fault protection of equipment)
- Gin-pole, 8-21
- Glare, 10-38 to 10-42
 - elimination of, 10-191
- Glass light transmission characteristics of, 10-119
- Glass-fiber cable insulation, 2-36
- Globes, coefficient absorption of, 10-4
- Graphical electrical symbols, 1-18, 1-19
- Gravity cells, 4-144
- Greek alphabet, 1-17
- Greenfield flexible conduit, 9-166
- Grips, cable, 8-124
- Ground(s):
- armature coil, 7-68
 - in direct-current machinery, 7-59
 - in field coil, locating, 7-59
 - installation of, 9-370
 - location of, 9-357, 9-364, 9-371
 - reduction of resistance of, 8-141 to 8-145
 - resistance of, 9-370
 - testing for, 1-196 to 1-199, 1-207 to 1-217
- Ground clamps, 9-372
- Ground connections, 8-135
- Ground detectors, 1-211 to 1-217
- Ground-fault circuit interrupters (GFCI), 4-73
 - open neutral protection for, 4-73
 - testing, 4-73
 - use without equipment ground, 4-73
- Ground-fault protection of equipment (GFPE), 4-73
- Ground resistance, 8-138
- Ground rods, 8-136
 - chemical treatment of soil around, 8-145
 - large diameter, effect of, 8-142
 - long length, 8-143
 - multiple, effect of, 8-144
- Ground wire, 8-137
- Grounding, 9-352 to 9-374
 - of appliances, 9-428
 - continuity of, 9-361
 - of distribution systems, 8-132 to 8-146
 - of equipment, 9-352, 9-353, 9-367, 9-368
 - high-impedance grounded-neutral systems, 9-356
 - of interior wiring systems, 9-336, 9-352 to 9-374
 - intersystem bonding termination provisions, 9-363
 - rods for, 8-136, 8-143, 9-370
 - of transformers, 8-135
 - of transmission systems, 8-134
 - value of, 8-133
- Grounding conductor, 9-360
 - attachment of, 9-372
 - materials for, 9-368
 - size of, 9-365, 9-367
- Grounding electrodes, 9-370

- Growth, allowance for, in circuits, 3-36, 9-526, 9-529
- Guarding live parts, 9-351
- Guardistors, 7-382
- Guards:
 - guy protector, 8-58
 - for live parts, 7-392
- Gum, splicing, 2-105
- Gutters:
 - auxiliary, 9-28, 9-351
 - panelboard, 4-85
- Guy thimbles, 8-55
- Guy wire, 8-59
- Guying practices (*see* Guys)
- Guys, 8-83 to 8-91
 - anchor rods for, 8-54
 - anchoring of, 8-88 to 8-95
 - assembly of, 8-84
 - bridle, 8-96
 - clamps for, 8-57, 8-87
 - connections to pole for, 8-55
 - crossarm, 8-96
 - hog, 8-98
 - installation of, 8-83 to 8-91
 - insulation of, 8-86
 - makeup of, 8-85
 - protector guards for, 8-58
 - stub, 8-94
 - tree, 8-95
 - vertical (or "sidewalk"), 8-99
- Handhole enclosures, 8-115, 8-122
- Hangers, conduit, 9-109
- Hardware, pole line, 8-27 to 8-58
- Harmonics, 1-220, 5-194, 5-195, 5-196, 7-170
- Hazardous location, classes of, 9-411 to 9-415
- Heads, manhole, 8-116
- Heat with light, for building spaces, 10-227
- Heat lamps, 9-408, 10-152
- Heap pump, 9-439
- Heat-resisting cable and wire, 2-25
- Heating:
 - causes of, in direct-current motors and generators, 7-60
 - electric, 9-431 to 9-447
- Heating effect of electric current, 1-85
- Henry, definition of, 1-46
 - metric practice, 12-58 to 12-64
- Hermetic-refrigerant motor compressors, 7-399 to 7-403
- Hertz, 1-113
 - metric practice, 12-58 to 12-64
- Hickey:
 - box, 9-344
 - conduit, 9-114
- High-capacity switches, 4-21
- High-intensity discharge, 10-112 to 10-130
- High interrupting capacity, 12-39
- High-pressure sodium lamps, 10-118
- High-voltage lamps, 10-65
- Hog guying, 8-98
- Holders:
 - lamp, 4-124 to 4-134
 - shade, 4-131
- Holes, wiring location in studs and joists, 9-331
- Hook, manhole, 8-119
- Horsepower:
 - definition of, 1-59
 - motor: determining, 1-218
 - formula for, 7-329
 - limits of, 7-342
 - required, 7-346
 - standard ratings of, 7-354
- Horsepower-hour, definition of, 1-63
- Hospitals, level of illumination for, 10-220
- House lighting (*see* Lighting)
- Hurdle rate, 1-6
- Hydraulic conduit benders, 9-115
- Hydraulic pipe pusher, 9-116
- Hydrometer, 4-156, 4-172, 4-193, 4-214
- Hysteresis losses, 5-21
- Identified (standard of acceptance, per NEC), 9-3
- Illumination:
 - calculation of, 10-203
 - coefficient of utilization for, 10-201
 - definition of, 10-21
 - design tables for, 10-218 to 10-220
 - effect: of room proportions on, 10-196
 - of wall finish on, 10-198
 - elimination of glare in, 10-191
 - floodlighting (*see* Floodlighting)
 - intensities of, 10-189
 - inverse square law of, 10-26
 - levels of, 10-220, 10-238
 - luminaires for, 10-154 to 10-183, 10-217
 - measure of, 10-20, 10-27
 - methods of, 10-194
 - principles of design of, 10-184 to 10-211
 - reflection factors for, 10-200
 - shadows in, 10-192
 - show-window, 10-220, 10-222 to 10-224
 - systems of, 10-157 to 10-161
 - uniformity of, 10-193
 - units of, 10-11, 10-17
 - (*see also* Light; Lighting)
- Illumination instruments, 10-27, 10-37, 10-46
- Illumination intensity tables, 10-220, 10-232
- Impedance:
 - calculation of, 1-131
 - definition of, 1-131
 - explanation of, 1-44
 - transformer, 5-43 to 5-57

- In phase, meaning of, 1-116
- "In sight from," NEC definition, 7-383
- Incandescent lamps [*see* Lamp(s), incandescent]
- Indirect-lighting luminaires, 10-158
- Induced currents in metal enclosures, 9-327
- Induced emf (*see* Electromotive force, induced)
- Inductance:
 - angle of lag in, 1-127
 - definition of, 1-46
 - effect of: in alternating-current circuits, 1-125
 - on voltage drop, 3-61 to 3-75, 12-50
- Induction motors (*see* Motor, alternating-current)
- Induction regulator, 5-72
- Inductive reactance:
 - in alternating-current circuits, 1-126
 - control of, 5-193
 - definition of, 1-47
- Industrial activities:
 - level of illumination for, 10-220
 - lighting loads for, 9-528
- Industrial buildings, wiring for, 9-492, 9-511 to 9-531
- Industrial control panels, 7-396
 - NEC definition, 7-396
 - Short-circuit current rating, 7-397 to 7-398
 - marking requirement, 7-397
 - flowchart for determining, 7-398
- Infrared lamps, 10-152
- Infrared sources, 9-408
- Input, definition of, 1-65
- Inspection of motors, 7-247 to 7-249
- Instrument switches, 4-35
- Instrument transformers, 5-64 to 5-66
- Instruments, 1-160 to 1-217
 - ammeter, 1-170, 1-171
 - connections of, 1-170 to 1-216
 - demand meter, 9-384
 - footcandle meter, 10-37
 - illumination, 10-27, 10-37, 10-46
 - magneto, 1-160
 - megger, 1-181
 - millivoltmeter, 1-173
 - ohmmeter, 1-180
 - sight meter, 10-37
 - symbols for, 1-20
 - test, 1-160 to 1-217
 - voltmeter, 1-170
 - watthour meter, 1-188
 - wattmeter, 1-183 to 1-185
 - Wheatstone bridge, 1-189
- Insulating cleats, 4-91, 4-92
- Insulating knobs, 4-91 to 4-95
- Insulating oil, 5-7, 5-8
- Insulating tubes, 4-494
- Insulation:
 - battery, 4-224
 - Insulation (*Cont.*):
 - cable, 2-25 to 2-36
 - asbestos, 2-32
 - varnished-cambric, 2-32
 - cellulose, acetate, 2-35
 - cotton-yarn, 2-33
 - enamel, 2-34
 - fibrous-glass, 2-36
 - glass, 2-36
 - heat-resistant rubber, 2-26
 - latex, 2-26
 - magnesium oxide, 2-29
 - moisture-resistant rubber, 2-26
 - neoprene, 2-26
 - paper, 2-30
 - plastic, 2-27
 - removing, 2-109
 - rubber, 2-26
 - silicone-asbestos, 2-26
 - silk, 2-35
 - thermoplastic, 2-27
 - thermosetting, 2-28
 - varnished-cambric, 2-31, 2-32
 - of cable joints, 2-105, 2-114, 2-115
 - conductor
 - rubber, 2-26
 - varnished-cambric, 2-31, 2-32
 - guy-wire, 8-86
 - measurement of resistance of, 1-175 to 1-181, 7-245
 - motor, care of, 7-243
 - for motors and generators, 7-130
 - selection of, 2-25
 - storage battery, 4-224
 - switch, 4-9
 - transformer, 5-7, 5-8
- Insulation resistance:
 - of conductors, 2-2
 - interior wiring, 9-335
 - of motors, 1-179, 7-245
 - of transformers, 5-153
- Insulator pins, 8-45 to 8-48
- Insulator ties, 8-72 to 8-78
- Insulators:
 - crane, 4-91
 - definition of, 1-41
 - interior wiring, 4-91 to 4-97
 - pin-type, 8-44
 - pole-line, 8-43
 - rack, 4-94
 - spool, 8-50
 - strain, 8-52
 - supports for, 4-95
 - universal, 9-54, 9-55
 - suspension, 8-49
 - wireholder, 8-50
- Integrated circuits, 6-2, 6-14
- Integrated gas spacer cable, Type IGS, 9-8

- Interior lighting:
 recommended levels of, 10-220
 (*see also* Lighting)
- Interior wiring (*see* Wiring, interior)
- Internal rate of return, 1-7
- Interpoles, 7-26
- Iris (eye), 10-187
- Iron cable and wire, 2-16, 2-86
- Iron conduit, 8-104
- Jackets, cable, 2-43, 2-143
- Jars, storage battery, 4-224
- Joint use of poles, 8-70
- Joints:
 aluminum installation techniques, 2-171
 cable (*see* Cable joints)
 compression, 2-162
- Joule, defined, 1-56
- Junction boxes:
 conduit, 9-98
 underfloor raceway, 9-249
- Kelvin's law, 3-84, 3-88
- Kilovolt-ampere:
 definition of, 1-141
 relation to kilowatt, 1-141
- Kilowatt:
 definition of, 1-141
 relation to horsepower, 1-64
 relation to kilovolt-ampere, 1-146
- Kilowatt equivalents, 1-12
- Kilowatthour:
 definition of, 1-62
 equivalents for, 1-12
- Knife-blade switch, 4-6
- Knob-and-tube wiring, 9-45 to 9-69
- Knobs:
 supporting conductors on, 9-46
 wiring, 4-91 to 4-97
- Lag, angle of, 1-127
- Lag-screw eyes, 8-34
- Lag screws, 8-33
- Lalande cell, 4-148
- Lambert, 10-40
- Lamp(s):
 argon-glow, 10-143
 color rendering index (CRI), 10-91
 color temperature table, 10-91
 control of, from more than one point, 4-31, 4-40
 disposal, 10-153
 filament (*see* incandescent)
 fluorescent, 10-83 to 10-110
 ballast for, 10-93, 10-99, 10-106
 electronic, 10-106
 noise of, 10-105
 operating temperatures of, 10-99
 Lamp(s), fluorescent (*Cont.*):
 bases for, 10-92
 black light, 10-145
 bulbs, 10-84
 chemicals for, 10-89
 Circline, 10-98
 circuits for, 10-93
 color rendering index (CRI), 10-91
 color temperature table, 10-91
 colors of, 10-90
 compact, 10-85
 description of, 10-83
 dimming of, 10-107
 direct-current operation of, 10-109
 disposal, 10-153
 electrodes, 10-86
 fill gas, 10-87
 general line, 10-94
 harmonic content of circuits, 10-108
 high-frequency operation of, 10-106
 induction, 10-111
 instant-start, 10-93
 life of, 10-99
 luminaires for, 10-180 to 10-182
 operating suggestions for, 10-110
 operation of, 10-93
 phosphors, 10-88, 10-89
 power factors of, 10-103, 12-52
 power-groove, 10-95
 radio interference from, 10-100
 rapid-start, 10-93, 10-95, 10-98
 reduced wattage, 10-97
 sizes of, standard, 12-1
 slimline, 10-96
 starting of, 10-93
 temperatures of, 10-101
 troubles with, 10-110
 voltage effect on, 10-104
 wiring arrangements for, 10-93
 fluorescent mercury, 10-47
 gaseous-discharge, 10-112 to 10-143
 germ-killing, 10-149, 10-150
 heating, 9-408, 10-152
 high-intensity discharge, 10-120, 10-158 to 10-165
 high-pressure sodium, 10-148, 10-123
 incandescent, 10-48 to 10-82
 appliance-service, 10-63
 aviation-service, 10-64
 bases for, 10-56
 bulbs for: finish of, 10-49 to 10-55
 shape of, 10-51
 burning position of, 10-79
 classification of, 10-49 to 10-78
 colored, 10-55
 daylight, 10-54

Lamp(s), incandescent (*Cont.*):

- decorative, 10-61
- designation of, 10-50
- filaments for, 10-58
- finish of bulbs for, 10-52, 10-53
- floodlight, 10-75
- floodlighting, 10-75
- general description of, 10-48
- general-lighting service, 10-60
- high-voltage, 10-65
- indicator-service, 10-63
- low-voltage, 10-66
- Lumiline, 10-61
- marine, 10-67
- optical-service, 10-69
- photographic, 10-70
- photo-service, 10-71
- picture projection, 10-72
- power factors of, 12-50
- projector, 10-73
- reflector, 10-73
- rough-service, 10-61, 10-81
- safe operating temperatures for, 10-80
- service classification of, 10-59
- shapes of bulbs for, 10-51
- showcase, 10-61
- sign, 10-74
- sizes of, standard, 12-1
- special-lighting-service, 10-61
- spotlight, 10-75
- street-lighting, 10-76
- three-lite, 10-62
- traffic-signal, 10-77
- train-lighting, 10-78
- vibration-service, 10-61, 10-81
- infrared, 9-408, 10-152, 10-154
- mercury-vapor, 10-113 to 10-129
 - applications of, 10-130
 - bulbs for, 10-114 to 10-122
 - efficiency of, 10-119
 - high-pressure, 10-114 to 10-130
 - lumen output of, 10-122
 - operation of, 10-114
 - power factors of, 12-52
 - sizes of, standard, 12-1
 - spectral data for, 10-123 to 10-130
- metal halide, 10-116
- neon, 10-132 to 10-143
 - application of, for signs, 10-136
 - colors of, 10-133
 - NEC requirements, 9-460
 - transformers for, 10-138
 - tubing for, 10-172, 10-140
- neon-glow, 10-141, 10-142
- photochemical, 10-151
- power factors for, 12-52
- sizes of, standard, 12-1
- three-lite, 10-62

Lamp(s) (*Cont.*):

- ultraviolet, 10-144 to 10-146
 - black-light, 10-145 to 10-148
 - filters for, 10-147
 - general description of, 10-144
 - germ-killing, 10-149, 10-150
 - photochemical, 10-151
 - voltages for, 3-29
- Lamp bases, incandescent, 10-57
- Lamp bulbs:
 - colored, 10-55
 - incandescent, 10-48 to 10-81
- Lamp filaments, incandescent, 10-58
- Lampholders, 4-97 to 4-104
- Lap-type armature windings, 7-3
- Laterals, underground, 8-110
- Layout of interior wiring installations, 9-491 to 9-504
- Layouts, circuit, 9-512
 - banked-secondary radial, 9-515
 - loop-primary radial, 9-514
 - primary-selective network, 9-519
 - primary-selective radial, 9-516
 - secondary-selective radial, 9-517
 - simple network, 9-518
 - simple radial, 9-513
- Lead-acid batteries (*see* Batteries, lead-acid)
- Lead-covered cable, 2-2
- Lead sheath for cable, 2-38, 2-47, 2-48
- Length conversion factors, 1-8
- Light:
 - absorption of, 10-3, 10-12
 - brightness of, 10-39 to 10-45
 - candlepower of, 10-18
 - color of, 10-1
 - color of objects in, 10-13
 - color temperature of, 10-14
 - definition of, 10-1
 - distribution curves for, 10-31 to 10-34
 - explanation of, 10-1
 - footcandles of, 10-11, 10-20
 - glare of, 10-38 to 10-44
 - lumens of, 10-11, 10-22
 - luminous intensity of, 10-11, 10-17
 - measurement of, 10-15 to 10-37
 - meters for measuring, 10-27, 10-37, 10-46
 - point source of, 10-16, 10-19
 - primary colors of, 10-1
 - propagation of, 10-2
 - reflection of, 10-6, 10-7
 - by various materials, 10-12
 - refraction of, 10-2, 10-10
 - coefficients of, 10-9
 - sources of, 10-47
 - brightness of, 10-45
 - efficiency of, 10-30
 - transmission of, by various materials, 10-12

(*see also* Illumination; Lighting)

Light emitting diodes (LEDs), 10-131

Lighting:

- circuits for [*see* Circuit(s), lighting]
- color rendering index (CRI), 10-91
- color temperature table, 10-91
- codes for, 10-226
- depreciation of equipment in, 10-202
- design of, 10-211
- design tables for, 10-211 to 10-220
- direct, 10-157
- exterior, recommended levels of, 10-220, 10-239
- flood (*see* Floodlighting)
- general diffuse, 10-160
- hospital, 10-220
- indirect, 10-158
- for industrial activities, 10-220
- interior, recommended levels of, 10-220
- laws governing, 10-226
- light-emitting diodes (LEDs), 10-131
- levels of, recommended, 10-220, 10-239
- location of equipment for, 10-199
- maintenance of equipment for, 10-202
- maintenance of factors for, 10-202, 10-216 to 10-219
- office, 10-220, 10-225
- outline, wiring for, 9-452
- physiological features of, 10-185
- principles of design for, 10-184 to 10-219
- reflectors for, 10-165 to 10-171
- requirements for, 10-188
- residential levels of, 10-220, 10-221
- room cavity ratios for, 10-197
- school, 10-220, 20-225
- semidirect, 10-161
- semi-direct, 10-159
- series, 5-71
- show-window, 10-220, 10-223 to 10-224
- showcase, 10-222
- sports: design of, 10-220, 10-249 to 10-276
 - recommended levels of, 10-220, 10-239
- store, 10-220, 10-222 to 10-224
- street, 10-230 to 10-234
 - classification of, 10-231
 - intensity of, 10-232
 - location of, 10-234
 - luminaires for, 10-233
 - transformers for, 5-70, 5-71
- systems of, 10-157 to 10-161
- transportation, recommended levels of, 10-220
- units of, 10-11
- voltages for, 3-29
- (*see also* Illumination; Light)

Lighting circuits [*see* Circuit(s), lighting]

Lighting loads for commercial buildings, 9-527

- demand factors for, 12-4
- for industrial occupancies, 9-528
- minimum allowable, 3-52, 12-5

Lightning protection, 4-74 to 4-76

Line drop, percentage, 3-34

Line poles, 8-4 to 8-26

(*see also* Poles)

Lines:

- pole (*see* Pole lines)
- underground (*see* Wiring, underground)

Liquidtight flexible-metal-conduit, wiring with, 9-19, 9-179 to 9-181

Listed (standard of acceptance, per NEC), 9-3

Live parts, protection of, 7-392, 9-337

Load diagrams, 3-78

Load factor effect on transformers, 5-26

Loading of transformers, 5-23 to 5-29

Loads:

- appliance, minimum allowable, 12-5
- calculation of, 3-37 to 3-55, 3-80
- division of: for alternating-current generators, 7-114
 - for direct-current generators, 7-18, 7-24
- for transformers, 5-112 to 5-116
- farm buildings, 9-533
- lighting: demand factors for, 12-4
 - minimum allowable, 3-52, 12-5
- minimum allowable, for circuits, 3-52
- motor, demand factors for, 12-6
- neutral, calculation example, 3-46

Locked-rotor current [*see* Current(s)]

Locknuts, conduit, 9-84, 9-90

Lodestone, 1-21

Logic gates, 6-18, 6-19

Loom, 2-40, 9-62

Loop-primary radial system, 9-514

Loops, drip, 9-66

Low-voltage lamps, 10-66

Low-voltage relay switching, 4-36

Low-voltage wiring, 9-410

Lubrication, motor, 7-238 to 7-242

Lugs, cable, 2-179 to 2-194

Lumens, 10-11, 10-15, 10-22

- determining from graph, 10-34

Lumiline incandescent lamps, 10-61

Luminaires, 10-154 to 10-183

- aluminum, 10-166, 10-177

- classification of, 10-156

- coefficients of utilization for, 10-216 to 10-219

- definition of, 10-154

- diffusing-glass, 10-167

- direct-lighting, 10-157

- distribution graph for, 10-155

- enameled-steel, 10-175, 10-180

- enclosed, 10-163

- filament lamp, 10-217

- fluorescent lamp, 10-180 to 10-182, 10-219

- general diffuse, 10-160

Luminaires (*Cont.*):

- glass: opal, 10-167
 - prismatic, 10-168, 10-179
 - and steel, 10-180
- incandescent lamp, 10-217
- indirect-lighting, 10-158
- industrial, 10-174
- maintenance factors for, 10-202, 10-216 to 10-219
- mercury lamp, 10-218
- mounting of, 10-172
- opal glass, 10-167
- open, 10-162
- plastic, 10-170
- prismatic glass, 10-168, 10-178
- semidirect lighting, 10-161
- semi-indirect lighting, 10-159
- size of, 10-183
- spacing for, 10-211
- steel, 10-165, 10-175
- studs for, 9-344
- support for, 9-289, 9-344
- troffer, 10-182
- vaportight, 10-175

Luminance, 10-11, 10-45

Luminous flux, 10-11, 10-15, 10-22

Luminous intensity, 10-11, 10-17

Machine tools, speeds of, 7-362

Macrocell arrays, 6-16

Magnesium oxide cable insulation, 2-29

Magnet wire [*see* Wire(s), magnet]

Magnetic contactor, 7-255

Magnetic controllers (*see* Controllers, magnetic)

Magnetic field:

- explanation of, 1-22
- rule for direction of, 1-87

Magnetic flux, 1-23

Magnetic poles, 1-21

Magnetic relays, 4-68

Magnetic switches, 4-10, 4-36, 4-37, 4-64, 7-311

Magnetic timing, 7-266

Magnetism:

- definition of, 1-21
- residual, 7-7

Magneto test set, 1-160

Magnets:

- definition of, 1-21
- polarity of, 1-21
- types of, 1-21

Main circuit, 3-13

Mains, panelboard, 4-87

Main service, 9-379

Manholes, 8-111 to 8-121

- arrangement of cables in, 8-128
- cable support in, 8-127
- construction of, 8-112 to 8-116
- covers for, 8-116

Manholes (*Cont.*):

- draining of, 8-117
- eyebolts for, 8-126
- heads for, 8-116
- hooks for, 8-119
- location of, 8-111
- NEC rules for sizing, 8-121
- size of, 8-112
- stirrup for, 8-126

Marine lamps, 10-67

Markup, how to figure, 1-5

Materials:

- for cables and conductors, 2-13 to 2-19, 2-86
- coating of 9-339
- general construction, 4-232 to 4-254

Matter

- conservation of, 1-28
- electrical structure of, 1-25

Measurement:

- of current, 1-170 to 1-174
- of harmonics, 5-196
- of power, 1-182 to 1-185
- of power factor, 1-186
- of resistance, 1-175 to 1-181, 1-189 to 1-191
- of voltage, 1-170

Medium-voltage (over 600 V) interior wiring, 9-404 to 9-409

isolating means, 9-406

medium-voltage cable, Type MV, 9-9

Megger, 1-181, 7-245, 9-335

Mercury-vapor lamps (*see* Lamp, mercury-vapor)

Mershon diagram, 3-72, 3-74, 12-56

Messenger-supported wiring, 9-43

Metal-clad cable, 1-57, 9-10

Metal raceway (*see* Raceway, metal)

Meter connections, 1-170 to 1-216

Meters:

- bypass switches in, 4-27
- disconnect switches for, 4-27
- symbols for, 1-20
- (*see also* Instruments)

Metric practice, 12-58 to 12-64

alphabetical list of units, 12-64

definitions, 12-63

inch-millimeter equivalents, 12-61, 12-62

pronunciations, 12-60

SI common derived units, 12-59

SI units and symbols, 12-58

Mho, definition of, 1-53

Micrometers, 2-7, 2-8

Mil, equivalents, 1-8

Mine-shaft cable, 2-66

Mineral cable insulation, 2-29

Mineral-insulated cable wiring, 9-11, 9-229 to 9-235

Mold-type welding of connections, 2-155

Molding, metal (*see* Raceways, metal)

Motor(s):

- acceleration of, control of, 7-259 to 7-325
- adjustable-speed, 7-122
- adjustable varying-speed, 7-122
- alignment of, 7-369
- alternating-current, 7-146 to 7-205
 - bearing trouble with, 7-217, 7-226, 7-234
 - brush-shifting, 7-189
 - capacitor, 7-193 to 7-196
 - control of, 7-297 to 7-325
 - controllers (*see* Controllers)
 - vs. direct-current, 7-339
- hermetic-refrigerant motor compressors, 7-399 to 7-403
- inductively split-phase, 7-192
- overload protection of, 7-309, 7-377 to 7-382
- performance characteristics of, 7-356 to 7-358
 - starting compensation for, 5-117
 - transformers for, 5-30
- polyphase induction, 7-146 to 7-177
 - automatic start, 7-171
 - breakdown torque for, 7-165, 7-176
 - capacitors for, 12-11
 - collector-ring troubles with, 7-225
 - commutator brush-shifting, 7-177
 - compensator troubles with, 7-224
 - construction of, 7-146
 - control of, 7-297 to 7-324
 - controllers for, 7-311 to 7-323
 - defects of, 7-214 to 7-227
 - derating for harmonics, 7-170
 - efficiencies of, 7-173, 7-175
 - end play in, improper, 7-226
 - faults of, 7-214 to 7-227
 - full-load currents of, 12-9, 12-10
 - locked-rotor current for, 7-163
 - locked-rotor torque for, 7-164
 - low maximum output for, 7-219
 - low torque in, causes of, 7-218
 - multispeed, 7-172
 - oil leakage in, 7-227
 - open circuits in, 7-221
 - operation of, 7-147, 7-171, 7-172
 - performance curves of, 7-151
 - power factors of, 7-173, 7-175
 - principle of, 7-147
 - reduced-voltage start, 7-312
 - reversing of, 7-202
 - rotor troubles in, 7-222
 - shutdown, causes for, 7-217
 - slip of, 7-147, 7-148A
 - speed control of, 7-154 to 7-162
 - squirrel-cage, 7-146, 7-162 to 7-173
 - starting of, 7-150
 - starting characteristics of, 7-150, 7-209
 - starting compensator troubles with, 7-224

Motor(s), alternating-current, polyphase induction (*Cont.*):

- synchronous speed of, 7-148
- torque of, 7-148B to 7-153
- troubles with, 7-214 to 7-227
- voltages on, effect of unbalanced, 7-223
- winding faults in, 7-220
- wound-rotor, 7-146, 7-153, 7-174, 7-175
- repulsion, 7-187
- repulsion-induction, 7-198
- repulsion-start, induction-run, 7-197
 - series, 7-199
 - locked-rotor current for, 7-201
 - locked-rotor torque for, 7-200
- shading-coil, 7-191
- single-phase, 7-187 to 7-202
 - controllers for, 7-325
 - full-load current of, 12-8
 - protection of, 7-377 to 7-382
- single-phase induction, 7-190 to 7-202
- speed of, 7-100
- starting methods for, 7-297 to 7-325
- synchro, 7-178
- synchronous, 7-179 to 7-186
 - armature troubles in, 7-231, 7-233
 - bearing troubles in, 7-234
 - brushes for, 7-235
 - classification of, 7-181
 - collector rings for, 7-235
 - controllers for, 7-323
 - full-load current of, 12-9, 12-10
 - hunting of, 7-232
 - open circuits in, 7-230
 - reversing of, 7-202
 - short circuits in, 7-231
 - special-purpose, 7-186
 - starting troubles of, 7-229
 - torque requirements of, 7-184
 - troubles with, 7-228 to 7-236
 - voltage protection of, 7-323
- trouble with, 7-214 to 7-236
 - altitude effect on, 7-351
- bearings for, 7-127
 - selection of, 7-345
 - troubles with, 7-217, 7-226, 7-234, 7-236
- blocked-rotor current of, 7-131
- blower, 7-364
- brake, 7-124
- braking of, 7-202A to 7-205
- brushes (*see* Brushes)
- care of, 7-237 to 7-250
- choice of, 7-338, 7-362 to 7-365
- cleaning of, 7-250
- code letters for, 7-385, 12-42
- commutators for (*see* Commutators)
- compressor, 7-365
- connection of, to circuits, 3-19 to 3-22
- constant-speed, 7-122

Motor(s) (*Cont.*):

- control of (*see* Control, motor)
- controllers for (*see* Controllers)
- crane, 9-403
- current-carrying capacity of conductors for, 12-12 to 12-14
- currents of: full-load, 12-7 to 12-10
 - starting, 3-53, 3-54, 7-131, 7-132, 7-136
- direct-current, 7-134 to 7-145
 - vs. alternating-current, 7-339
- armature of, 7-3
 - open circuit in, 7-63
 - short circuit in, 7-66
 - testing, 7-61
- automatic drive control of, 7-141
- brushes for, care of, 7-49, 7-74, 7-75 (*see also* Brushes)
- characteristics of, 7-134
- commutators for: care of, 7-49, 7-73
 - grinding of, 7-80
 - troubles with, 7-74 to 7-83
- compensating winding of, 7-32
- compound, 7-134
- controllers for (*see* Controllers)
- efficiencies of, 7-145
- electronic control of, 7-137 to 7-144
- excitation of, 7-134
- field in, open, 7-57
- full-load currents of, 12-7
- neutral point of, 7-29
- overload protection of, 7-284, 7-377 to 7-382
- polarity testing of, 7-56
- reversing of, 7-202
- rheostats for, 7-280, 7-281, 7-291
- series, 7-134
- shunt, 7-134
 - connections for, proper, 7-52
- speed of, low, 7-93
- speed control of, 7-136 to 7-144, 7-287 to 7-295
 - armature resistance, 7-138 to 7-140
 - automatic drive, 7-141
 - automatic electrodynamic drive, 7-143
 - electronic, 7-137 to 7-144
 - field-current, 7-139, 7-140
- starting of, 7-277 to 7-295
- starting controllers for, 7-277 to 7-294
- starting current of, 7-136
- starting methods for, 7-136
- torque characteristics of, 7-135
- troubles with, 7-51 to 7-95
- types of, 7-134
 - undervoltage protection of, 7-281
- disconnecting devices for, 7-383, 7-384, 7-386
- dripproof, 7-128
- drives for (*see* Drives)
- drying out, 7-244

Motor(s) (*Cont.*):

- dust-ignition-proof, 7-128
- duty-cycle service, 7-389
- enclosures for, 7-128
- explosionproof, 7-128
- externally, ventilated, 7-128
- fan, 7-364
- feeders, conductor sizing, 3-54, 7-389
- feeders, short-circuit and ground-fault protection, 7-390
- fields reversed in, 7-54
- foundations for, 7-366
- fractional-horsepower, 7-200
- gear, 7-125
- general, 7-121 to 7-133
- general-purpose, 7-123
- guarded, 7-128
- Guardistor, 7-382
- harmonics, 7-170
- horsepower of: determining, 1-218
 - formula for, 7-329
 - limits for, 7-341
 - ratings of, standard, 7-354
- individual, power supply for, 9-525
- industrial control panels, 7-396
- inspection of, 7-247 to 7-250
- insulating materials for, 7-130
- insulation for, care of, 7-243
- kilovolt-ampere input of, 7-385, 12-42
- lubrication of, 7-238 to 7-242
- machine-tool, 7-362
- mains and feeders for, 3-54
- maintenance of, 7-237 to 7-250
- measuring insulation resistance of, 1-179, 7-245
- mechanical arrangement of, 7-345
- mechanical connections for, 7-328, 7-336, 7-337
- mounting of, 7-126, 7-345
- multispeed, 7-122
- overload operating current for, maximum, 4-24
- overload protection of, 7-257, 7-284, 7-311, 7-377 to 7-382
- plugging of, 7-202A, 7-203
- power factors of, 12-52
- power supply as affected by, 7-340
- protective devices for, 7-257
- pump, 7-363
- rating of, 7-130
- remote-control circuits for, 7-388, 7-393 to 7-395
- reversing of, 7-202
- risks to, unusual, 7-349
- rotation reversed in, 7-55
- selection of, 7-338 to 7-355, 7-361 to 7-365
 - alternating-current or direct-current, 7-339
 - effect of power supply on, 7-340
 - factors affecting, 7-342

- Motor(s), selection of (*Cont.*):
 - and horsepower rating, 7-346 to 7-355
 - for machine tools, 7-362
 - and mounting, 7-345
 - power rates, effect on, 7-343
 - special considerations in, 7-349
 - speed requirements in, 7-344
 - and torque, 7-346
 - and unusual risks, 7-349
 - and voltage rating, 7-342
 - service classification of, 7-123
 - service factors for, 7-355
 - sparking in, 7-95
 - speed classification of, 7-122
 - speed regulation of, 7-133
 - speeds of, standard, 7-354
 - splashproof, 7-128
 - squirrel-cage (*see* Alternating-current)
 - standards for, 7-353
 - starting currents for, 3-53 to 3-55, 7-131, 7-132, 7-136
 - switches for, 4-23, 7-383, 7-386, 12-46
 - synchronous speed of, 7-100
 - temperature rise of, 7-130
 - thermoguard, 7-382
 - torque of, 7-129
 - totally enclosed, 7-128
 - troubles with, 7-51 to 7-95, 7-214 to 7-236
 - types of, 7-121
 - varying-speed, 7-122
 - voltages for, 3-29
 - selection of, 7-340
 - weather-protected, 7-128
 - wiring tables for, 7-391, 12-6 to 12-10, 12-42 to 12-47
- Motor-circuit switches, 4-23, 7-383, 7-386, 12-46
- Motor circuits (*see* Circuit(s), motor)
- Motor control (*see* Control, motor)
- Motor drives (*see* Drives)
- Motor generators, 7-206, 7-207
- Motor loads, demand factors for, 3-54, 12-6
- Motor-starting switches, 4-24
- Motor fuel dispensing facilities, 9-423
- Mounting of transformers, 5-183 to 5-192
- Multioutlet assembly wiring, 9-35, 9-303 to 9-309
- Multiple-conductor cable, 2-2, 2-20
- Nails, 4-230 to 4-232
- National Electric Light Association, 8-1
- National Electrical Code, 9-1
- National Electrical Manufacturers Association (NEMA) class and type ratings:
 - motors, 7-128, 7-130
 - receptacles, 4-98
 - switch enclosures, 4-12, 7-253, 7-254
 - switchboards, 4-80
 - transformers, 5-10
- National Electrical Safety Code, 8-2
- Neon-glow lamp testers, 1-167, 1-168
- Neon-glow lamps, 10-141
- Neon lamps (*see* Lamp(s), neon)
- Neon signs, wiring for, 9-451
- Neoprene cable insulation, 2-26
- Neoprene-type covered wire, 2-12
- Net present value, 1-6
- Networks, 9-512
- Neutral, identifying, 1-208
- Neutron, as a constituent of atoms, 1-25
- Neutral point, determination of, for direct-current motors and generators, 7-29
- Newberry clamps, 2-137
- Nickel-cadmium batteries (*see* Batteries, nickel-cadmium)
- Nickel-iron-alkaline batteries (*see* Batteries, Edison storage)
- Nipples, conduit, 9-85, 9-87
- Noncontinuous loads, effect on device selection, 3-106
- Nonmetallic boxes, 4-115, 9-223
- Nonmetallic conduit, 8-101, 9-20, 9-149 to 9-164
- Nonmetallic-sheathed cable, 2-55
- Nonmetallic-sheathed-cable wiring, 9-12, 9-215 to 9-228
- Nuts:
 - eye, 8-31
 - machine bolt, 4-237, 4-238
 - optical fiber (*see* Fiber optic)
- Offices:
 - level of illumination for, 10-220, 10-225
 - wiring for, 9-492, 9-526, 9-527
- Ohm, definition of, 1-43, 1-51
- Ohmmeter, 1-180
- Ohm's law, 1-103 to 1-109
- Oil:
 - drying of, 5-168
 - oxidation of, 5-9
 - sampling of, 5-167, 5-170
 - testing of, 5-156
 - transformer, 5-156
- Oil-filled cable, 2-30
- Oil leaks in transformers, 5-173
- Opal glass, 10-10, 10-167
- Open-delta connections for transformers, 5-87 to 5-89
- Open wiring, 9-44, 9-45 to 9-69
- Optical fiber cable, (*see* Fiber optic)
- Optical service lamps, 10-69
- Optoelectronic devices, 6-11
- Out of phase, meaning of, 1-116
- Outdoor wiring, residential, 9-505 to 9-507
- Outlet boxes (*see* Boxes)
- Outlet requirements for commercial, public, and industrial structures, 9-526

- Outlets:
 - conduit, 9-95
 - for farm buildings, 9-535 to 9-541
 - porcelain, 9-224
 - wiring of, 9-328
- Outline-lighting wiring, 9-452
- Output, definition of, 1-66
- Outside wiring (*see* Wiring, outside)
- Overhead lines, types of, 8-3
- Overload protection:
 - of circuits, 12-39, 12-40
 - of motors, 7-257, 7-284, 7-309, 7-377 to 7-382, 12-43 to 12-47
 - for panelboards, 4-86 to 4-90
 - of transformers, 5-124, 5-125
- Overload protective devices, 4-46
- Paint-spraying booths, 9-424
- Pancake metal raceway, 9-200, 9-202
- Panelboards, 4-85 to 4-90
 - back-fed, 4-86
 - cable sleeves to accessible ceilings, 4-85
 - calculating load on, 3-40 to 3-45
 - circuit directories, 4-85
 - commercial, public, and industrial structures, 9-526
 - conductors in, 9-329
 - definition of, 4-85
 - delta breakers prohibited, 4-86
 - feeder, 4-88
 - gutters for, 4-85
 - individual protection for, 4-86
 - installation, 4-90
 - lighting and appliance (obsolete terminology), 4-86
 - locations, 4-90
 - power (obsolete terminology), 4-86, 4-89
 - protection of, 4-84 to 4-89
 - snap switches in, 4-86
 - transformers, supplied by, 4-86
 - wire bending space, 12-33, 12-34
- Paper cable insulation, 2-30
- Parallel, transformers in, 5-112 to 5-116
- Payback time, 1-7
- Peak let-through, 12-39
- Peltier effect, 1-76
- Percentage conductivity, definitions of, 1-55
- Phase, explanation of, 1-116
- Phase angle, 1-116, 1-133
 - relation of, to power factor, 1-137
- Phase connections, 1-148 to 1-156
- Phase converters, 7-371
- Phasing out, 7-108
- Photochemical lamps, 10-146
- Photodetector, 6-11
- Photodiode, 6-11
- Photoflash lamps, 10-71
- Photoflood lamps, 10-71
- Photographic lamps, 10-70
- Photometer, 10-27
- Photometric charts, 10-155
- Photometric graphs, 10-32, 10-34
- Phototransistor, 6-11
- Phototubes, position control with, 7-144
- Photronic cells, in light meters, 10-37
- Physiological features of lighting, 10-185
- Pins, crossarm, 8-44 to 8-48
- Pipe electrodes, 9-370
- Pipe pushers, hydraulic, 9-116
- Pipe straps, 9-105
- Pitting in direct-current motors and generators, 7-74
- Plastic cable insulation, 2-27
- Plastic conduit, 8-102, 9-20, 9-149 to 9-164
- Plastic tape, 2-105
- Plate electrodes, 9-370
- Plates:
 - battery, 4-152
 - flush switch, 4-116
- Plug-and-receptacle, instrument, 4-35
- Plugging of motors, 7-202A, 7-203, 7-268
- Plugmold metal raceway, 9-200, 9-203
- Plugs:
 - fish, 9-176
 - receptacle, 4-98
- p-n* junctions, 6-6
- Polarity:
 - commutating pole, 7-30
 - of electromagnets, 1-88
 - field, testing of, 7-56
 - of magnets, 1-21
 - of solenoids, 1-88
 - testing direct-current generator for, 7-40, 7-56
 - tests for, 1-167, 1-209
 - transformer, 5-74, 5-75
- Pole braces, 8-100
- Pole gains, 8-64, 8-65
- Pole guys (*see* Guys)
- Pole lines, 8-3
 - accessories for, 8-27 to 8-58
 - clearance of wires on, 8-69 to 8-71
 - construction of, 8-60 to 8-71
 - dead-ending of, 8-79
 - guying practices on (*see* Guys)
 - materials for, 8-27 to 8-58
 - size of wire for, 8-81
 - spacing of wires on, 8-69 to 8-71
 - tree wiring for, 8-80
 - wire on, tying in, 8-72 to 8-79
- Poles, 8-4 to 8-26
 - buck-armed, 8-63
 - commutating, 7-26 to 7-31, 7-38
 - concrete, 8-14, 8-15
 - crossarm mounting on, 8-60 to 8-64

Poles (*Cont.*):

- depth to set, 8-16
- gaining of, 8-64, 8-65
- gin, 8-21
- guy connections to, 8-55
- holes for, 8-19
- joint use of, 8-70
- location of wires on, 8-69
- magnetic, 1-21
- self-supporting, 8-98
- setting of, 8-20 to 8-23
- size of, to use, 8-17
- spacing of, 8-18
- span between, 8-18
- steel, 8-12, 8-26
- step sockets for, 8-66
- steps for, 8-66
- switch, 4-4
- types of, 8-4
- wooden, 8-5 to 8-11
 - classification of, 8-4 to 8-6
 - dimensions of, 8-6
 - preservation of, 8-9
 - reinforcing, 8-24
 - seasoning of, 8-11
 - specifications for, 8-8
 - weight of, 8-7

(*see also* Towers)

Polyethylene-type covered wire, 2-12**Portable cables, 2-73**

- joints for, 2-132 to 2-137

Portable equipment, grounding of, 9-353, 9-360, 9-369**Position control, 7-144****Post, binding, connections to, 2-146****Power:**

- in alternating-current circuit, 1-134
- apparent, 1-135
- conversion factors, 1-13
- definition of, 1-60
- formulas for, 1-110
- measurement of, 1-182 to 1-185

Power and control tray cable, Type TC, 9-13**Power cable, 2-53**

- portable, 2-74

Power capacitors, 4-135 to 4-139**Power conduit benders, 9-115****Power distribution blocks, 2-161****Power factor(s), 1-136 to 1-147**

- of apparatus, 12-52
- circuit, determination of, 3-64
- correction of, 7-180
- definition of, 1-136
- improvement of, 4-135
- for induction motors, 7-173, 7-175
- low: correction of, 1-143
 - effect of, 1-142
- measurement of, 1-186

Power factor(s) (*Cont.*):

- relation to phase angle, 1-137
- typical, 1-140

Power loss in circuits, 1-157, 3-81 to 3-86**Power panelboards, 4-89****Power rates, selection of motors affected by, 7-343****Power supplies:**

- effect on motor selection, 7-339
- for individual motors, 9-525

Prices, selling, how to figure, 1-3 to 1-5**Primary-selective network system, 9-519****Primary-selective radial system, 9-516****Prismatic glass, 10-168****Profit, percentage, how to figure, 1-3 to 1-5****Projector lamps, 10-72, 10-73****Protection:**

- branch circuit, 9-319, 9-502
- circuit, 9-319
- on conductors, 9-319
- of exposed surface wiring, 9-51
- general, 4-72
- of high-voltage circuits, 9-405
- lightning, 4-74
- of live parts, 7-392
- motor, 7-251
 - branch circuit, 7-385
 - feeders and mains, 7-390
 - overload, 7-284, 7-311, 7-377 to 7-382
- overload, 4-46
 - incorporated with switches, 4-13
- transformer, 5-35
- voltage, 7-258

Protective devices, 4-43 to 4-75

- comparison of, 4-71
- enclosures for, 9-323
- motor, 7-251, 7-257
- sizes of, 12-38, 12-39
- time characteristics of, 4-45, 4-71
- types of, 4-43

Protector, guy, 8-58**Proton, as a constituent of atoms, 1-25****Pull boxes, 9-99****Pulleys:**

- alignment of, 7-369

Pulsating current, definition of, 1-35**Pumping formulas, 7-363****Pumps, motors for, 7-363****Raceways:**

- cellular-concrete-floor, wiring with, 9-31, 9-294 to 9-302
- cellular-metal-floor, wiring with, 9-32, 9-282 to 9-293
- continuity of, 9-338
- strut-type channel, 9-37
- surface metal, 9-38, 9-198, 9-200 to 9-205
- surface nonmetallic, 9-39, 9-199

Raceways (*Cont.*):

- underfloor, 9-245 to 9-263
 - description of, 9-246
 - fiber, 9-246, 9-260, 9-261
 - installation of, 9-245 to 9-252, 9-255 to 9-260
 - junction boxes for, 9-249
 - layout of, 9-262, 9-263
 - wiring with, 9-40, 9-245 to 9-263

Rack insulators, 4-91

Racks:

- insulated, 4-94
- secondary, 8-67
- storage battery, 4-226
- wire, 9-57

Radial distribution systems, 9-512

Radio:

- lightning protection of, 4-74
- wires for, 2-78

Radio interference from fluorescent lamps, 10-100

Rails, trolley, 9-390

Ranges:

- demand factors for, 12-2
- electric wiring for, 9-430

Ratios, transformer, 5-17

Rawl-Drives, 4-249, 4-250

Rawlplugs, 4-248

Reactance:

- capacitive defined, 1-50
- capacitive, in alternating-current circuits, 1-129
- effect of, on voltage drop, 3-61
- inductive: in alternating-current circuits, 1-125
 - control of, 5-193
 - definition of, 1-46
- ratios of, 12-53, 12-54
- result of, 1-51

Reactor, saturable, 5-193

Read-only memories (ROM), 6-27, 6-33

Reaming of conduit, 9-120, 9-175

Receptacles and caps, 4-98 to 4-105

- configurations, 4-98
- disconnects, multiple devices on strap, 4-100
- interchangeable configurations, 4-102
- isolated ground, 4-99
- pin and sleeve, 4-103
- push-in wiring limitations, 4-99
- stranded wire, use with, 4-99
- split on one strap, 4-100
- tamper-resistant, 4-99
- weather-resistant, 4-99

Rectifiers, 6-4

Reflection, 10-6 to 10-9

Reflection characteristics of materials, 10-12

Reflection coefficients, 10-9

Reflection factors of colored surfaces, 10-215

Reflector lamps, 10-73

Reflectors:

- floodlighting, 10-243
- lighting (*see* Luminaires)
- spacing of, 10-224

Refraction, 10-2, 10-10

Regenerative braking, 7-202, 7-205

Regular reflection, 10-7, 10-10

Regulator:

- induction, 5-72
- step-by-step, 5-73

Relays:

- definition of, 7-251
- description of, 4-44, 4-66 to 4-70
- induction, 4-70
- low-voltage switching, 4-36
- magnetic, 4-68
- temperature, 7-251
- thermal, 4-66
- time, 7-260 to 7-271
- time-current, 7-274, 7-275

Releases:

- description of, 4-44, 4-67, 4-68, 7-258
- magnetic, 4-68
- thermal, 4-67

Remote-control circuits, 9-463 to 9-486

- for motors, 7-388, 7-393 to 7-395

Residences, level of illumination for, 10-220

Residential wiring, 9-492, 9-505 to 9-507

- outdoor, 9-505 to 9-507

Residual current devices, 4-73

Resistance:

- alternating-current circuit, 1-122, 3-61
- battery, internal, 4-142
- of cables and wires, 12-57
 - copper: solid, 2-88
- contact, 1-102, 4-6
- crane trolley rail, 9-396
- definition of, 1-39
- determination of, 1-100
- direct-current values of, 12-57
- effect of temperature on, 1-99
- explanation of, 1-39
- ground, 8-138, 9-370
 - measuring, 8-139
 - reducing resistance to, 8-141 to 8-145
 - testing, 8-140
- insulation: defined, 2-2
 - interior wiring, 9-335
 - motor, 7-245
 - testing of, 1-181, 9-335
- measurement of, 1-175 to 1-181, 1-189, 1-191
 - of parallel conductors, 3-8
- results of, 1-51
- specific: defined, 1-95
 - tables of values of, 1-95
- tables of, 12-57

- Resistance (*Cont.*):
 - transformer insulation, 5-153
 - unit of, 1-43
 - value of, factors affecting, 1-90
- Resistance ratios, 12-53, 12-54
- Resistance wire, 2-102
- Resistive conductor, definition of, 2-2
- Resistivity:
 - conversion factors for, 1-14
 - of copper, 2-88
 - definition of, 1-95
- Resistors:
 - definition of, 1-42
 - motor-control, 7-251
- Reversing of motors, 7-202
- Rewiring buildings, 9-492, 9-493
- Rheostats:
 - definition of, 1-42
 - speed control, 7-291, 7-317
 - starting, 7-280, 7-282, 7-317
- Rod electrodes, 9-370
- Rodding, duct, 8-123
- Rods:
 - anchor, attachment of, 8-88
 - armor, 8-77
 - ground, 8-136, 8-142
 - guy anchor, 8-54
- Room cavity ratios for lighting, 10-197
- Rope-lay cable, definition of, 2-2
- Rosettes, 4-133, 9-64
- Rotometer, 3-77
- Rototrols, 7-45, 7-143
- Rubber cable insulation, 2-26
- Rubber tape, 2-105
- Safety switches, 4-17
- Saturable-core reactor, 5-193
- Saturated-logic gates, 6-18
- Schools:
 - level of illumination for, 10-220 to 10-225
 - lighting loads for, 9-527
 - wiring for, 9-526, 9-527
- Schottky TTL, 6-20
- Scott connection for transformers,
 - 5-92 to 5-94
- Screws:
 - lag, 8-33
 - machine, 4-235
 - wood, 4-233
- Secondary-selective radial system, 9-517
- Sector cable, 2-2
- Seebeck effect, 1-76
- Self-inductance, definition of, 1-45
- Selling prices, how to figure, 1-3 to 1-5
- Semiconductor:
 - packages, 6-38
 - reliability, 6-37
- Semidirect-lighting luminaires, 10-161
- Semi-indirect-lighting luminaires, 10-159,
 - 10-181
- Series coils of three-wire generator, 7-34
- Service, main, 9-379
- Service boxes, underground, 8-115
- Service cables, 2-60, 9-241, 9-243
- Service centers, 4-26 to 4-29
- Service conductors, 9-376
 - overhead, 9-381
 - size of, 9-381
 - splicing of, 9-382
- Service drop, 3-18
- Service entrance, 9-376 to 9-385
 - for commercial, public, and industrial structures, 9-526
 - farm, 9-547
 - number permitted from same system, 9-380
- Service-entrance cable, 2-60
 - ampacity rule: effects of thermal insulation, 9-242
 - in interior wiring, 9-14, 9-241 to 9-243
- Service equipment, 3-18
 - arrangement of, 9-377 to 9-379
- Service factors for motors, 7-355
- Service installations:
 - sequence for, 9-378
 - typical, 9-383
- Service lateral, 3-18
- Service stations (including gasoline dispensing), 9-423
- Service switch, 9-377
- Serving, 2-2
- Servo systems, 7-141, 7-143
- Shade holders, 4-131
- Shades, coefficient of absorption of, 10-4
- Shading coil, 7-191
- Shadows in lighting, 10-192
- Sheath:
 - cable, 2-2
 - lead, 2-38, 2-46 to 2-48
- Sheet-metal gages, 2-4, 2-85
- Shielding of cables, 2-22
- Shields:
 - expansion, 4-242, 4-247, 4-251
 - lag-screw, 4-246
- Shipboard cable, 2-81
- Short-circuit calculations, 4-48
- Show windows:
 - level of illumination for, 10-220, 10-222 to 10-224
 - wiring for, 9-455
- Showcase incandescent lamps, 10-61
- Sidacs, 6-10
- Sight meter, 10-37
- Sign flashers, 9-450, 9-461
- Sign wiring, 9-448 to 9-462
- Signal cable, 2-69

- Signal, power-limited circuits, 9-463 to 9-489
 - abandoned cables, duty to remove, 9-488
 - grounding, 9-487
 - mechanical execution of work, 9-488
 - separation from nonpower-limited circuits, 9-489
 - transformers for, 5-63
- Signs:
 - disconnects, 9-455
 - flashing, 9-461
 - gaseous-discharge: transformers for, 9-458
 - wiring for, 9-454
 - grounding and bonding, 9-462
 - incandescent lamps for, 10-74
 - neon lamps for, 10-136
 - transformers for, 9-459, 10-138
 - wiring for, 9-451
 - types of, 9-440
- Silicon, 6-5
- Silicon-controlled rectifiers, 6-10, 7-320
- Silicon rectifiers, 6-10
- Silicone-asbestos cable insulation, 2-26
- Silk cable insulation, 2-35
- Simple network system, 9-518
- Simple radial system, 9-513
- Single-phase circuits [*see* Circuit(s), alternating-current, single-phase]
- Single-phase current, 1-144
- Size of wire, gages of, 2-3, 2-85
- Skin effect:
 - general considerations of, 1-123
 - in voltage-drop calculations, 3-61
- Sleeves:
 - connecting, split-copper, 2-104, 2-112
 - expansion, 4-242
 - splicing, 2-104, 2-112, 2-170
- Slimline fluorescent lamps, 10-96
- Slip, induction motor, 7-147
- Snap switches, ac, ac-dc, mercury, 4-30
- Snow-melting systems, 9-443
- Sockets:
 - fastening cords in, 9-324
 - lamp, 4-124 to 4-133
 - pole-step, 8-66
- Soil, chemical treatment of, for grounding, 8-145
- Solar photovoltaic wiring, 9-548 to 9-554
 - array, modules, 9-549 to 9-550
 - current and voltage calculations, 9-549
 - fine-stranded wiring provisions, 9-550
 - high ambient temperature considerations, 9-550
 - ratings and listing provisions, 9-549
 - Type PV single-conductor cable, 9-550
- DC system feeder calculations, 9-551
- disconnects, 9-553 to 9-554
 - location, 9-553
 - ratings, 9-554
- Solar photovoltaic wiring (*Cont.*):
 - equipment grounding, 9-552
 - interconnections to ac supply, 9-556
 - inverters, 9-555
 - system grounding connections, 9-555
 - utility-interactive system, 9-548
- Soldering cable joints, 2-112, 2-148 to 2-153
- Soldering connections, 2-148, 2-153
- Soldering flux, 2-113
- Solderless connectors, 2-147, 2-155 to 2-164
- Solenoid, rule for polarity of, 1-88
- Solid-state technology:
 - complementary metal-oxide-semiconductor logic (CMOS), 6-22
 - computer language, 6-28
 - binary, 6-28
 - byte, 6-28
 - Darlington circuit, 6-24
 - differential amplifier, 6-24, 6-26
 - discrete solid-state components, 6-3
 - rectifiers, 6-4
 - thyristors, 6-4
 - transistors, 6-4
 - zener diodes, 6-4
 - electronic memories, Table 6-7
 - memory capacity, 6-32
 - random-access memory (RAM), 6-27, 6-33
 - read-only memory (ROM), 6-27, 6-33
 - electronic power supply circuit, 6-25
 - electronic voltage regulators, 6-26
 - emitter-coupled logic (ECL), 6-21
 - field-effect transistors (FET), 6-9
 - junction field-effect transistor (JFET), 6-9
 - metal-oxide-semiconductor field-effect transistor (MOSFET), 6-9
 - fundamentals of solid-state devices, 6-4
 - crystal structure, 6-4
 - electrons and holes, 6-4
 - silicon atom, 6-4
 - gate arrays, 6-16
 - integrated circuits, 6-2, 6-14
 - classification, Table 6-1
 - digital, 6-14
 - hybrid IC, 6-2, 6-14
 - linear, 6-14
 - monolithic IC, 6-3, 6-14
 - logic gates, 6-18, 6-19
 - saturated, 6-18
 - unsaturated, 6-19
 - macrocell arrays, 6-16
 - microcomputer hierarchy, 6-29
 - microcomputers:
 - arithmetic-logic unit (ALU), 6-27
 - central processing unit (CPU), 6-27
 - input/output (I/O section), 6-27
 - microprocessor units (MPUs), 6-27
 - random-access memory (RAM), 6-27
 - read-only memory (ROM), 6-27

Solid-state technology (*Cont.*):

nonsaturated-logic gates, 6-20, 6-21, 6-22
operational amplifiers, 6-24

optoelectronic devices, 6-11

injection laser diodes (ILD), 6-11

light-emitting diodes (LED), 6-11

optocouplers, 6-11

photodetector, 6-11

photodiode, 6-11

phototransistor, 6-11

p-n junctions, 6-6

capacitance effect, 6-6

forward-biased, 6-6

rectifier diodes, 6-7

reference diodes, 6-7

reverse-biased, 6-6

Schottky rectifier, 6-7

zener diodes, 6-7

read-only memories, 6-27, 6-33

erasable programmable read-only memory (EPROM), 6-33

programmable read-only memory (PROM), 6-33

read-only memory (ROM), 6-33

saturated-logic gates, 6-18

diode-transistor logic (DTL), 6-18

transistor-transistor logic (TTL), 6-18

Schottky TTL, 6-20

advanced low-power Schottky TTL family (ALSTTL), 6-20

fast Schottky TTL family (FAST), 6-20

low-power Schottky (LSTTL), 6-20

silicon, 6-5

n-type materials, 6-4

p-type materials, 6-4

thyristors, 6-10

gate-turnoff thyristors, 6-10

silicon-controlled rectifiers (SCR), 6-10

triacs, 6-10

trigger-circuit, 6-10

transducers, 6-13

transistor, 6-7, 6-8

bipolar, 6-7, 6-8

field-effect, 6-9

switching characteristics of, 6-17

unijunction, 6-10

unipolar (FETs), 6-7

trigger devices, 6-10

bilateral triggers (DIAC), 6-10

programmable unijunction transistors (PUTs), 6-10

silicon bidirectional switches, 6-10

sidacs, 6-10

unijunction transistor (UJT), 6-10

varactor diodes, 6-12

zener diodes, 6-3, 6-4, 6-26

Space, working, 9-337

Space heating, electrical, fixed, 9-431 to 9-447

Sparking:

in direct-current machinery, 7-62

Sparking distances for air gaps, 1-158

Special occupancies, wiring for, 9-490

Specific gravity, measuring, 4-156 to 4-172,
4-175, 4-193, 4-214

Specific resistance:

definition of, 1-94

table of values of, 1-97

Spectral data for mercury-vapor lamps,
10-129, 10-130

Speed:

direct-current motor, control of, 7-137 to
7-143

motor, standard, 7-354

Speed regulation, motor, 7-133

Splices, termination rules for, 3-93

Splicing:

aluminum basic installation techniques, 2-86,
2-95 to 2-98

of conductors, 9-325

gum for, 2-105

of service conductor, 9-382

sleeves for, 2-165 to 2-170

(*see also* Cable joints)

Spool insulators, 8-50

Sports lighting:

design of, 10-239, 10-249 to 10-276

recommended levels of, 10-220, 10-239

Spot-network system, 9-518

Spotlight lamps, 10-75

Spray booths, 9-424

Spread reflection, 10-7

Spread refraction, 10-10

Square mil:

definition of, 1-92

equivalents, 1-9, 1-93

Squirrel-cage motors [*see* Motor(s), alternating-
current]

Star connections, 1-152 to 1-156

for transformers, 5-84 to 5-91

Starters:

fluorescent lamp, 10-93

motor (*see* Control, motor)

Starting for direct-current motors, 7-277, 7-295

Steel cable, 2-16, 2-86

Steel crossarms, 8-38

Steel poles, 8-12, 8-26

(*see also* Poles)

Steel-wire gage, 2-4, 2-85

Steps, pole, 8-66

Stirrups, manhole, 8-126

Storage batteries (*see* Batteries)

Stores:

level of illumination for, 10-220, 10-222 to
10-225

wiring for, 9-526, 9-527

Strain insulators, 8-51

- Strand, concentric, 2-2
- Stranded conductors:
 - data for, 2-89 to 2-93
 - definition of, 2-2
 - makeup of, 2-86
- Stranded wire, 2-2
- Straps, conduit, 9-104
- Street lighting (*see* Lighting, street)
- Street-lighting lamps, 10-76
- Stub guys, 8-94
- Stud, fixture, 9-344
- Subfeeder, definition of, 3-12
- Submain, definition of, 3-14
- Submarine cables, 2-67
- Substation:
 - primary unit, 4-80
 - rectifier unit, 4-80
 - secondary unit, 4-80
- Support, universal insulator, 9-54, 9-55
- Support, wiring-box, 4-117, 4-120
- Surface conversion factors, 1-9
- Surface metal raceway wiring, 9-38, 9-198 to 9-205
- Surface nonmetallic raceway wiring, 9-39
- Surge arresters, 4-75
- Surge protection, 4-76
- Susceptance, definition of, 1-54
- Suspension insulators, 8-49
- Switch blades, 4-6
- Switch contacts, adjustment of, 4-18
- Switch enclosures, NEMA, types of, 4-12
- Switchboards, 4-78 to 4-84
 - classification of, 4-79, 4-80
 - clearances for, 4-82, 4-84
 - definition of, 4-78
 - location of, 4-82
 - low-voltage distribution, 4-80
 - materials for, 4-81
 - motor-control center, 4-80
 - safety enclosed, 4-80
 - spacing for, 4-82 to 4-84
 - types of, 4-79
- Switches, 4-2 to 4-42
 - adjustment of contacts, 4-18
 - appliance, 4-30
 - bolted pressure contact, 4-21
 - branch-circuit, 7-259
 - butt-contact, 4-6, 4-8
 - canopy, 4-30
 - classification of, 4-3
 - closet-door, 4-30
 - collector, crane, 9-387
 - connecting of, 4-32, 4-40
 - contact resistance of, 4-6
 - contacts for, 4-6
 - control, 4-34
 - cord, 4-30
 - crane-service, 9-387, 9-398
 - Switches (*Cont.*):
 - definition of, 4-2
 - dial, 4-10
 - disconnect, 4-22, 7-383
 - direct-current, 7-296
 - door, 4-30
 - double-break, 4-8
 - double-pole, 4-31
 - double-throw, 4-5
 - drum, 4-10
 - electronic, 6-58
 - enclosed, types of, 4-12
 - entrance, 4-26 to 4-29
 - in farm buildings, 9-535 to 9-541
 - field, 4-25
 - flush, 4-30
 - four-way, 4-31, 4-40
 - fused, 4-13
 - general-purpose, 4-12, 4-14
 - for hazardous locations, 4-12
 - heater, 4-31
 - high-capacity, 4-21
 - high-voltage, 9-405
 - installation of, 4-33, 4-39
 - instrument, 4-35
 - insulation of, 4-9
 - interchangeable, 4-30
 - interior-wiring, 4-30 to 4-37
 - isolating, 4-22, 7-383
 - knife-blade, 4-6, 4-8, 4-15
 - lighted handle, 4-31
 - low-voltage relay, 4-36
 - magnetic, 4-10, 4-36, 4-37, 4-64, 7-311
 - manual, 4-10, 4-65
 - master, 7-251, 7-254
 - mercury, 4-7, 4-30
 - meter bypass, 4-27
 - meter disconnect, 4-27
 - meter-service, 4-26 to 4-29
 - momentary-contact, 4-31
 - motor-circuit, 4-23, 7-383, 7-386, 12-46
 - motor-starting, 4-24, 7-303 to 7-311
 - mounting of, 4-41
 - multiple-throw, 4-3
 - open, 4-15
 - operating mechanism for, 4-10
 - pendant, 4-30
 - pilot handle, 4-31
 - plug-and-receptacle, 4-35
 - poles of, 4-4
 - protection of, overcurrent, 4-13
 - pull-chain, 4-30
 - pushbutton, 4-10
 - quick-break, 4-11
 - quick-make, 4-11
 - rating of, 4-16, 4-33
 - rotary, 4-10, 4-30, 4-35
 - safety enclosed, 4-17

Switches (*Cont.*):

- service, 4-26 to 4-29, 9-377
- single-break, 4-8
- single-pole, 4-31
- single-throw, 4-5
- sizes of, 4-20
- snap, 4-10
 - rating of, 4-33
 - types, 4-30
- solid neutral, 4-4, 4-13
- speed of operation of, 4-11
- standard wiring of, 4-30
- surface, 4-30
- switching-neutral, 4-13
- temperature rise of, 4-16
- testing of blade contacts of, 4-19
- three-way, 1-202, 4-31, 4-40
 - connecting, 4-32
- through-cord, 4-30
- toggle, 4-10
- tumbler, 4-10, 4-30
- two-pole, 4-31
- types of, 4-3
- voltage drop in, 4-16
- watertight, 4-12
- wiring, 4-30 to 4-42

Switchgear, 4-78 to 4-84

- for direction of current flow, 1-84
- graphical electrical, 1-18, 1-19
- high-voltage, 4-80
- lighting, 10-1
- low-voltage, 4-80
- safety enclosed, 4-80

Synchronizing alternating-current generators, 7-106 to 7-112

Synchronous motors [*see* Motor(s), alternating-current, synchronous]

Synchros, description of, 7-178

Synchroscope, 7-112

Systems, 3-19 to 3-29

- application of, 3-24
- comparison of, 3-23, 3-24
- complete, 3-10
- direct-current: vs. alternating-current, 3-23, 3-24
 - three-wire, 3-19 to 3-22
 - two-wire, 3-19
- distribution, 9-512
 - banked-secondary radial, 9-515
 - grounding of, 8-132 to 8-146
 - loop-primary radial, 9-514
 - overhead, types of, 8-3
 - primary-selective network, 9-519
 - primary-selective radial, 9-516
 - secondary-selective radial, 9-517
 - simple radial, 9-513
 - simple network, 9-518
- grounding, 9-336, 9-352

Systems (*Cont.*):

- insulation resistance of, 9-335
- interior wiring, design of, 9-491 to 9-503
- power supply, effect of motors on, 7-342
- single-phase, 3-19 to 3-22, 3-29
- synchro, 7-178
- three-phase, 3-19, 3-29
- transmission, grounding of, 8-134
- two-phase, 3-19
- underground, 8-101
- voltages of, 3-25, 3-26
- [*see also* Circuit(s)]

T connections for transformer, 5-95 to 5-97

Tap, definition of, 3-16

Tape:

- armor, 2-47
- binder, 2-24
- cable, 2-38, 2-40
- splicing, 2-105, 2-106, 2-115

Taping of cable joints, 2-117

Telegraph sounder for testing circuits, 1-163

Telephone cable and wire, 2-16, 2-80

Telephone receiver for testing circuits, 1-161

Temperature:

- ambient, 7-130
- for cable and wire, safe, 3-31
- effect of, on resistance, 1-99
- insulation, safe, 7-130
- for insulation, 7-130
- safe: for cable and wire, 3-31
- storage-battery, 4-165, 4-184
- transformer, 5-24, 5-25, 5-175

Temperature coefficients of resistance, 1-97, 1-99

Temperature conversion factors, 1-16

Temperature relay, 7-251

Temperature rise:

- in conductor, how to determine, 1-101
- of motors, 7-130

Terminal blocks, 2-161

Terminal connections (*see* Cable joints)

Terminals, cable, 2-146 to 2-164

Terminations:

- grounded conductor terminations, 3-95
- temperature limitations, 3-92

Terminations for power cables,

7-155 to 7-164

Test equipment, 1-160 to 1-218

Test lamp, 1-165

Tests:

- armature, 7-61
- cable-ground, 1-194 to 1-198
- for circuit polarity, 1-209
- of circuits for faults, 1-203 to 1-207
- excitation, direct-current motor, 7-52
- ground, direct-current machinery, 7-59
- ground-resistance, 8-139

Tests (*Cont.*):

- insulation-resistance, 1-193
 - of interior wiring, 9-335
 - of motors, 1-179, 7-245
- for motor horsepower, 1-218
- for polarity of direct-current generators, 7-40, 7-56
- of three-way switch connections, 1-202
- transformer, 5-75
- of transformer oil, 5-156

Thermal relays, 4-66

Thermal releases, 4-67

Thermocouples, 1-76

Thermoguard motors, 7-382

Thermoplastic insulation (*see* Insulation, plastic)

Thimble, guy, 8-55

Third-brush generators, 7-41

Thomson effect, 1-76

Threading for conduit, 9-118

Threads, conduit and pipe, 9-82

Three-lite lamps, 10-62

Three-phase circuits [*see* Circuit(s), three phase]

Three-phase current, 1-117, 1-152

Three-wire generators, 7-33 to 7-40

Threshold current, 12-39

Thyristors, 6-4, 6-10

Ties:

- insulator, 8-72 to 8-79
- wire, 8-72 to 8-79

Time value of money, 1-6

Timers, pneumatic, 7-264

Torch, blow, 2-153, 2-154

Torque:

- breakdown, for induction motors, 7-165, 7-176
- definition of, 1-67
- locked-rotor: for single-phase motors, 7-200, 7-201
 - for squirrel-cage induction motors, 7-164
- motor, 7-129
 - polyphase induction, 7-148 to 7-153, 7-164
 - required, 7-346
 - starting, direct-current, 7-135
 - relation to horsepower, 1-68
 - relations in mechanisms, 1-69

Towers, steel, 8-13

(*see also* Poles)

Traffic-control cable, 2-69

Traffic-signal lamps, 10-77

Train-lighting lamps, 10-78

Transducers, 6-13

Transfer switches, (*see* Automatic transfer switch)

Transformers:

- accessibility, NEC rules, 5-133
- accessories for, 5-40, 5-41
- air-blast-cooled, 5-6

Transformers (*Cont.*):

- air-cooled, 5-6
 - data for, 5-57
- askarel-insulated, NEC rules, 5-138
- autotransformer, 5-9, 5-32
 - applications of, 5-117 to 5-119
 - connections for, 5-117 to 5-119
 - NEC requirements, 5-124
- booster, 5-98 to 5-109
- bucking, 5-103, 5-109
- capacity of, 5-30, 5-31, 5-94
- care of, 5-120 to 5-177
- characteristics of, 5-43 to 5-57
- choke, 5-103
- classification of, 5-5
- connections for, 5-74 to 5-119
 - delta, 5-83 to 5-91
 - open-delta, 5-87 to 5-90
 - single-phase, 5-76, 5-77
 - for standard distribution, 5-76
 - star, 5-84 to 5-91
 - T, 5-95 to 5-97
 - for three-phase, 5-81 to 5-91
 - to two-phase, 5-92 to 5-95
 - for three-wire secondary, 5-77
 - for two-phase, 5-78
- conservator, 5-6
- constant-current, 5-14, 5-68 to 5-70
- constant-voltage, 5-2, 5-15 to 5-17, 5-33, 5-58 to 5-63
- control, 5-61
- cooling of, 5-6
- copper losses in, 5-20
- core losses in, 5-21
- cores of, 5-4
- current, 5-14, 5-65 to 5-67, 5-194, 5-195
- data for, 5-43 to 5-57
- definitions of, 5-1 to 5-3; NEC definition, 5-123
- delta-connected, 5-83 to 5-91
- distribution
 - characteristics of, 5-43 to 5-57
 - connections for, 5-76
 - description of, 5-35
 - mounting of, 5-183 to 5-192, 8-68
 - wiring for, 8-68
- drying of, 5-158 to 5-168
- dry-type, 5-6, 5-57 to 5-63, 5-134 to 5-135
- eddy-current losses in, 5-21, 5-194
- efficiencies of, 5-19, 5-43 to 5-57
- expansion tank, 5-6
- gaseous-discharge lamp, 5-62, 9-456, 10-138
- grounding autotransformers, NEC rules, 4-125
- grounding of, 5-130, 8-136
- guide for loading of, 5-23 to 5-29
- guarding, NEC rules, 5-128
- handling of, 5-153
- high-fire-point-liquid-insulated, 5-134

Transformers (*Cont.*):

- hysteresis losses in, 5-21
- impedance of, 5-43 to 5-57
- induction motors, for, 5-30, 5-31
- Inertiaire, 5-8
- inspection of, 5-154
- installation of, 5-120 to 5-192
- instrument, 5-64 to 5-66
- insulation of, 5-7 to 5-10
- insulation resistance of, 5-163
- iron losses in, 5-21
- K-factor ratings, 5-195
- less-flammable liquid-insulated, NEC rules, 5-136
- liquid-immersed, 5-6
- load division between, 5-112 to 5-116
- loading guide for, 5-23 to 5-29
- localized lighting, 5-59
- losses in, 5-19 to 5-22, 5-43 to 5-57, 5-194
- maintenance of, 5-167 to 5-177
- marking, NEC rules, 5-131
- mercury-vapor lamp, 10-122
- modification of insulating fluid, NEC rules, 5-141
- motors, for, 5-30, 5-31
- mounting of: methods of, 5-13, 5-183 to 5-192
 - pole, 5-184 to 5-192, 8-68
- mounting accessories for, 5-40, 5-41
- neon-sign, 5-62, 10-138
- network, 5-34
- noise, 5-178 to 5-183
- nonflammable fluid-insulated, NEC rules, 5-137
- nonsinusoidal currents, 5-194, 5-195
- oil for, 5-7, 5-8, 5-167
- oil-burner ignition, 5-59
- oil drying of, 5-168
- oil filling of, 5-168
- oil-immersed, 5-6 to 5-8, 5-23 to 5-29
 - data for, 5-43 to 5-57
- oil-insulated, indoors, NEC rules, 5-139
- oil-insulated, outdoors, NEC rules, 5-140
- oil leaks in, 5-173
- oil testing, 5-167
- open-delta-connected, 5-87 to 5-90
- operation of, 5-16, 5-23 to 5-29, 5-174 to 5-183
- overcurrent protection of, 5-123, 5-124
- overloads on, 5-27
- parallel operation of, 5-112 to 5-116, 5-127
- performance characteristics of, 5-43 to 5-57
- platform type, 5-13
- polarity of, 5-74, 5-75
- pole-mounting, 5-13
- polyphase, 5-11, 5-12
- power, 5-38
 - small, 5-58, 5-59

Transformers (*Cont.*):

- primary winding of, 5-3
 - purpose of, 5-14
 - ratings of, 5-22, 5-37 to 5-39, 5-94
 - ratio of, 5-17
 - regulation of, 5-18, 5-43 to 5-57
 - regulator, 5-72, 5-73
 - scale in, 5-171
 - Scott connection of, 5-92 to 5-97
 - secondary winding of, 5-3
 - secondary ties, NEC rules, 5-126
 - self-air-cooled, 5-6, 5-57 to 5-63, 5-130
 - self-protected, 5-35
 - series, 5-71
 - sign-lighting, 5-60
 - signal, 5-61
 - single-phase: accessories for, 5-40
 - connections for, 5-76, 5-77
 - data for, 5-43 to 5-48
 - ratings of, 5-38
 - Spirakore, 5-4
 - star-connected, 5-84 to 5-91
 - step-by-step regulator, 5-73
 - step-down, 5-3
 - step-up, 5-3
 - storage of, 5-152
 - subway, 5-13
 - supports for, 5-184 to 5-192
 - surge-protected, 5-35
 - T-connected, 5-95 to 5-97
 - taps on, 5-36
 - temperature of, 5-24, 5-25, 5-175
 - terminal wiring space, 5-132
 - terminology for, 5-3
 - tests of, 5-75
 - theory of operation of, 5-16
 - three-phase, 5-10, 5-92 to 5-97, 5-110 to 5-119
 - accessories for, 5-41
 - connections for, 5-81 to 5-97, 5-110, 5-111
 - data for, 5-49 to 5-56
 - ratings of, 5-39
 - types of, 5-5
 - variable voltage, 5-14
 - vault, 5-13
 - voltage taps for, 5-36
 - water-cooled, 5-6
 - windings for, 5-2
 - vaults for, 5-142 to 5-148
 - ventilation, NEC rules, 5-129
 - zigzag grounding autotransformers, 5-125
- Transient suppression, 6-39
- Transient voltage surge suppressors (TVSS), 4-76
- Transistors, 6-4, 6-7, 6-8
- Transmission characteristics of materials, 10-12
- Transmission systems (*see* Systems)

- Transportation lighting, recommended levels of, 10-220
- Trays, storage-battery, 4-224
- Tree guying, 8-95
- Tree wire, 2-61
- Trees, wiring through, 8-80
- Trench header duct, 9-259, 9-290, 9-298
- Trickle charge, 4-154
- Trigger devices, 6-10
- Trigonometric functions, table of, 1-1
- Triplex cable, 2-2
- Troffers, 10-182
- Trolley cables, 2-86
- Trolley rails, 9-390
- Trolley wire, crane, 9-389
- Troubles with direct current motors and generators, 7-51 to 7-95
- Tubes:
 - porcelain, 4-96
 - wiring, 9-59, 9-60
- Tubing:
 - area of, 12-30
 - diameter of, 12-30
 - electrical metallic, 9-25, 9-206 to 9-214
 - flexible, 9-61, 9-62
 - number of cables allowed in, 12-28, 12-29
- Tungsten-halogen lamps, 10-56
- Turnbuckles, use of, 9-49
- Twisted pair, 2-2
- Two-phase circuits [*see* Circuit(s), two-phase]
- Two-phase current, 1-117, 1-148
- Ultraviolet-light sources [*see* Lamp(s), ultraviolet]
- Underfloor-raceway wiring, 9-40, 9-245 to 9-262
 - reinsulation of conductors prohibited, 9-253
- Underground cable, 2-60, 8-129, 9-15, 9-240
- Underground circuits, residential, 9-507
- Underground feeder cables in interior wiring, 9-15, 9-240
- Underground laterals, 8-110
- Underground wiring, emergence from grade, 9-165
- Undervoltage, motor, protective devices, 7-258, 7-281
- Unijunction transistor (UJT), 6-10
- Universal insulator support, 9-54, 9-55
- Varactor diodes, 6-12
- Varnished-cambric cable insulation, 2-31, 2-32
- Vaults, transformer, 5-142 to 5-148
- Voltage:
 - alternating-current: average value of, 1-119
 - effective value of, 1-120
 - instantaneous values of, 1-112
 - maximum value of, 1-118
 - waveform of, 1-112
- Voltage (*Cont.*):
 - branch circuit, 9-503
 - of generators, direct-current, 7-4
 - measurements of, 1-169 to 1-173
 - production of (*see* Electromotive force)
 - regulator, 6-26
 - selection of system, 3-29
 - standard, 3-25, 3-26
 - test for presence of (*see* Electromotive force)
 - unbalanced, effect of, on induction motors, 7-223
- Voltage breakdown in air, 1-158
- Voltage changes, effect of, 3-28
- Voltage drop:
 - allowable, in circuits, 3-35, 12-48, 12-49
 - calculation of, 3-58 to 3-75
 - effect of inductance on, 12-50
 - effective spacings for calculation of, 12-51
- Voltage loss, percentage, 3-34
- Voltage protection of alternating-current motors, 7-310
- Voltage-protective devices, 7-258
- Voltage regulators, 5-72, 5-73
- Voltage taps, transformer, 5-36
- Voltaic cell, 4-140, 10-37
- Voltmeter:
 - ground-detector, 1-214
 - measuring current with, 1-172
 - measuring resistance with, 1-175
 - rules for use of, 1-170
 - triplex, 1-217
- Volts:
 - definition of, 1-38
 - distinction of, from amperes, 1-82
- Volume conversion factors, 1-10
- Vulcanizers, 2-170
- Vulcanizing cable and cable joints, 2-138 to 2-145
- Washers, 8-35
- Watt:
 - equivalents for, 1-13
 - relation of, to horsepower, 1-64
- Watt-hour, equivalents for, 1-12
- Watt-hour meter, how to read, 1-188
- Wattmeter, 1-183 to 1-187
- Wave-type armature windings, 7-3
- Waveform of alternating-current voltages and current, 1-112
- Weatherproof cable and wire, 2-11, 2-12
- Weight, conversion factors for, 1-11
- Weighted average cost of capital, 1-6
- Wheatstone bridge, 1-189
- Windings:
 - armature, for direct-current generator, 7-3
 - compensating field, 7-32
 - field, for direct-current generator, 7-2
 - transformer, 5-2

Wire(s):

- aircraft, 2-79
- aluminum, 2-19
 - resistance of, 12-57
- annunciator, 2-59
- automotive, 2-79
- bare, 2-10
- building, 2-99
- cablebus, 9-30, 9-310 to 9-313
- classification of, 2-9
 - by covering, 2-10 to 2-12
 - by insulation, 2-25 to 2-36
 - by material, 2-13
 - by service, 2-53 to 2-83
- cleaning ends of, 2-111
- clearance of, pole-line, 8-69 to 8-71
 - grades of, 2-14
 - makeup of, 2-13, 2-86
 - properties of, 2-88
 - resistance of, 12-57
 - tinned, 2-14
- copper-clad aluminum:
 - data for, 2-96
 - conductor characteristics of, 2-95
 - makeup of, 2-86
 - percent cladding of, 2-97, 2-98
 - wire guide for, 2-96
- Copperweld, 2-17
- cotton-covered, 2-33, 2-82
- covered, description of, 2-10 to 2-12
- crane trolley, 9-389
- current-carrying capacity of, 3-311, 2-12 to 12-27
- dead-ending of, 8-79
- definition of, 2-2
- drawing of, into conduit, 9-122 to 9-148
 - (*see* Cable pulling)
- enameled, 2-34, 2-82
- fine-stranded, limitations on use, 2-13
- fixture: ampacity of, 12-25
 - properties of, 2-76
 - splicing of, 2-155, 9-344
 - types of, 2-75, 2-76
- flexible-cord, 2-77, 2-101, 12-24
- fusion currents for, 4-48A
- ground, 8-137
- guy, 8-59
- insulated: definition of, 2-10
 - safe temperature of, 3-31
- insulation for, 2-25 to 2-36
 - approved types of, 2-99
- magnet: coverings for, 2-82
 - description of, 2-82
 - selection of, 2-82
 - types of, 2-82
- measuring gages for, 2-6
- Nichrome, 2-102
- number allowed in conduit, 12-28 to 12-32

Wire(s) (Cont.):

- office, dampproof, 2-59
- radio, 2-78
- resistance, 2-102
- size of: for circuits, 3-76 to 3-80
 - economical, 3-81 to 3-88
 - for interior wiring, 9-318
 - for pole lines, 8-81
 - selecting, 3-30 to 3-36
- skinning of, 2-109, 2-110, 2-149
- soldering of, 2-148 to 2-153
- spacing of effective, 12-51
 - pole-line, 8-69 to 8-71
- stranded, definition of, 2-2
- stranded, termination rules, 2-163
- stranding data, 2-89 to 2-93
- stranding, limitations on use, 2-13
- stringing of, 8-82
- telephone and telegraph, 2-80
- tree, 2-61
- twin, 2-2
- weatherproof, 2-11, 2-12
 - [*see also* Cable(s); Conductors]
- Wire armor, 2-51
- Wire connectors, 2-155
 - designation and marking of, 2-163
- Wire gages:
 - names and uses of, 2-3
 - table of, 2-85
- Wire holders, 8-50
- Wire nails, 4-230
- Wire racks, 9-57
- Wire sizes, gages of, 2-3, 2-85
- Wiremold metal raceway, 9-200 to 9-205
- Wireway wiring, 9-33, 9-264 to 9-266
- Wireways, nonmetallic, 9-34, 9-267
- Wiring:
 - AC cable, 9-5
 - apartment-house, 9-508 to 9-510
 - armored cable, 9-5, 9-182 to 9-192
 - branch circuits for, 9-493 to 9-504
 - busway, 9-29, 9-256 to 9-268
 - cable trays, 9-41, 9-314, 9-317
 - cellular-concrete-floor raceway, 9-31, 9-294 to 9-302
 - cellular-metal-floor raceway, 9-32, 9-282 to 9-293
 - clearances for, 9-337
 - of commercial buildings, 9-511 to 9-531
 - concealed knob-and-tube, 9-42, 9-67 to 9-69
 - impracticability of contemporary extensions, 9-68
 - conductors of different systems in, 9-330
 - crane, 9-386 to 9-403
 - definition of terms for, 9-3
 - design of, 9-491 to 9-504
 - for electric heating, 9-446
 - electric-range, 9-430

Wiring (Cont.):

- electrical metallic tubing, 9-25, 9-206 to 9-214
- enclosures for protective devices for, 9-323
- farm, 9-532 to 9-547
- flat cable assemblies, Type FC, 9-6
- flat conductor cable, Type FCC, 9-7
- flexible cord for, 9-324
- flexible metallic conduit, 9-9, 9-166 to 9-181
- flexible metallic tubing, 9-26
- general requirements for, 9-318 to 9-385
- grounding of, 9-336, 9-352 to 9-374
- gutters for, 9-326
- hazardous locations in, 9-411 to 9-424
 - classification and grouping, 9-411 to 9-415
 - Class I, flammable gases and vapors, 9-412
 - Class II, combustible dusts, 9-413
 - Class III, ignitable fibers and flyings, 9-414
 - dust-ignition-proof equipment, 9-416
 - explosionproof equipment, 9-416
 - groups, Class I and Class II, 9-415
 - intrinsically-safe wiring, 9-417
 - maintenance, 9-419
 - nonincendive wiring, 9-417
 - protective approaches to wiring, 9-417
 - purged and pressurized enclosures, 9-417
 - seals, 9-420
 - specific occupancy requirements, 4-422 to 4-424
 - threads, conduits, and enclosures, 9-419
 - wiring methods, 9-421
 - zone classification system, 9-418
- high-voltage interior, 9-404 to 9-409
- of industrial buildings, 9-511 to 9-531
- insulation: approved for, 2-99
 - resistance of, 9-335
- interior: for air conditioning, 9-445
 - appliance circuits for, 9-499
- intermediate metal conduit, 9-74
- lighting circuits for, 9-499
- liquidtight flexible metal conduit, 9-179 to 9-181
- loop system of, 9-189
- low-voltage, 9-410
- metal-clad cable, 1-57, 9-10
- methods of, 9-4
- mineral-insulated cable, 9-11, 9-229 to 9-235
- multioutlet-assembly, 9-35, 9-303 to 9-309
- National Electrical Code for, 9-1
- nonmetallic extension, 9-36
- nonmetallic sheathed cable, 9-12, 9-215 to 9-228
- open (on insulator), 9-44, 9-45 to 9-66
- outlet boxes in, 4-109, 4-124, 9-340 to 9-349

Wiring (Cont.):

- outside, 8-3, 8-71
- protection of circuits in, 9-319, 9-320
- receptacle circuits for, 9-499
- regulations for, local, 9-2
- rigid metal conduit, 9-17, 9-70 to 9-121
- rigid nonmetallic conduit, 9-20, 9-149 to 9-164
- for schools, 9-526, 9-527
- selecting methods for, 9-492
- service-entrance cable in, 9-14, 9-241
- signs, 9-448 to 9-462
 - (*see also* Signs)
- space for working around, 9-337
- for special occupancies, 9-490
- splicing conductors in, 9-325
- surface raceway, 9-38, 9-198 to 9-205
- underground, 8-101 to 8-107
 - buried cable for, 8-129 to 8-131
 - cable-in-duct, 8-108
 - concrete ducts for, 8-106
 - ducts for, 8-101 to 8-107
 - installing ducts for, 8-107 to 8-109
 - laterals for, 8-110
 - layout of runs for, 8-127
 - manholes for, 8-111 to 8-121
 - plastic conduit, 8-103
 - polyethylene conduit, 8-103
 - pulling cable in, 8-124
 - reinforced thermosetting resin conduit, Type RTRC, 8-103
 - rodding ducts for, 8-123
 - supporting cable in manholes in, 8-125
 - systems for, 8-101
- underfloor raceway, 9-40, 9-245 to 9-263
- underground feeder cable for, 9-15, 9-240
- wire approved for, 2-99
- wireway, 9-33, 9-264
- Wiring boxes (*see* Boxes)
- Wiring materials, 4-91 to 4-136
 - coating of, corrosion resistance for, 9-339
- Wooden crossarms, 8-36, 8-37
- Wooden poles, 8-6 to 8-11
 - (*see also* Poles)
- Work defined, 1-56
- Wrenches, conduit, 9-119
- Wrought-iron conduit, dimensions, 9-77
- Y connections, three-phase, 1-153, 1-154
- Zener diode, 6-3, 6-4, 6-26
- Zonal cavity method for lighting calculations, 10-211